



SECTION 7 - SUSPENSION

TABLE OF CONTENTS

Front and Rear Suspension Assembly

- Schematics..... 7-2
- Shock Absorbers 7-4
- Swing Arms (ACT - Rear Suspension)..... 7-5
- Front A-Arms 7-6
- Rear A-Arms (FIS - Rear Suspension)..... 7-9
- Wheels and Tires 7-11


Front and Rear Suspension Assembly Schematics

■ NOTE: Some components may vary from model to model. The technician should use discretion and sound judgment.

250/300 - FRONT

KEY

- 1. Shock Absorber
- 2. Bushing
- 3. Sleeve
- 4. Retainer
- 5. Spring
- 6. Retainer
- 7. Cap Screw
- 8. Lock Nut
- 9. A-Arm Assy
- 10. Ball Joint
- 11. Ball Joint Clip
- 12. Knuckle Assy
- 13. Knuckle
- 14. Bearing
- 15. Retaining Ring
- 16. Cap Screw
- 17. A-Arm
- 18. Cap Screw
- 19. Drive Axle (4x4)
- 20. Clip (4x4)
- 21. Boot Repair Kit (4x4)
- 22. Boot Guard (4x4)
- 23. Body Screw
- 24. Stub Axle (2x4)

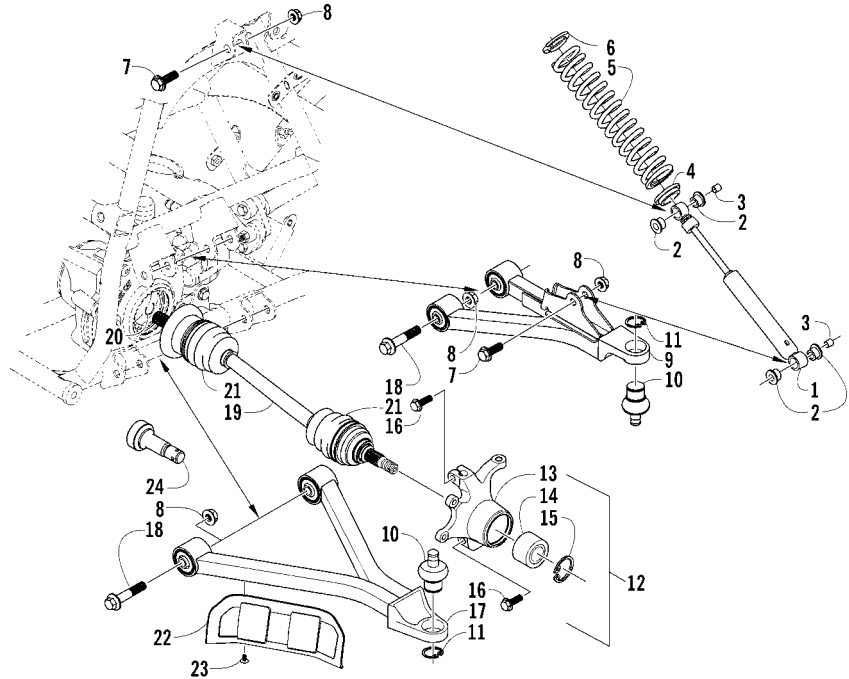


0739-478

250/300 - REAR

KEY

- 1. Knuckle Assy
- 2. Knuckle
- 3. Wheel Hub Bearing
- 4. Retaining Ring
- 5. Collar
- 6. Bushing
- 7. Rear Arm
- 8. A-Arm
- 9. Cap Screw
- 10. Lock Nut
- 11. Cap Screw
- 12. Shock Absorber
- 13. Sleeve
- 14. Bushing
- 15. Spring Retainer
- 16. Spring
- 17. Retainer
- 18. Cap Screw
- 19. Cap Screw
- 20. Washer
- 21. Drive Axle
- 22. Boot Repair Kit

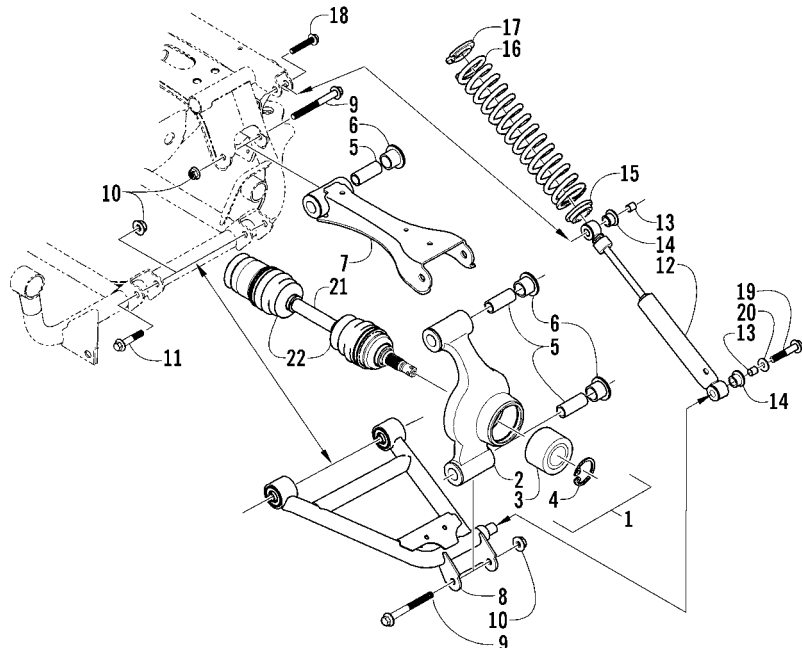


0739-463

FIS - FRONT

KEY

- 1. Retainer
- 2. Shock Absorber
- 3. Bushing
- 4. Sleeve
- 5. Adjuster Cam
- 6. Spring
- 7. Cap Screw
- 8. Lock Nut
- 9. A-Arm
- 10. Bushing
- 11. Collar
- 12. Ball Joint Clip
- 13. Ball Joint
- 14. A-Arm
- 15. Bushing
- 16. Collar
- 17. Knuckle Assy
- 18. Knuckle
- 19. Wheel Hub Bearing
- 20. Retaining Ring
- 21. Cap Screw
- 22. Cap Screw
- 23. Cap Screw
- 24. Drive Axle
- 25. Clip
- 26. Boot Repair Kit

- 27. Boot Guard
- 28. Body Screw
- 29. Spanner Wrench

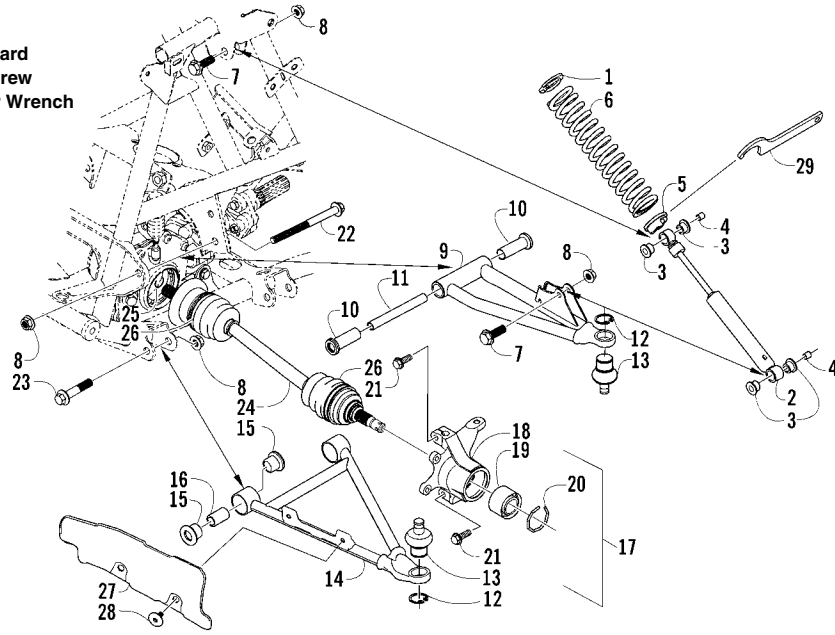


0739-603

ACT - REAR

KEY

- 1. Cap Screw
- 2. Cap Screw
- 3. Swing Arm
- 4. Lock Nut
- 5. Swing Arm
- 6. Cap Screw
- 7. Shock Absorber
- 8. Bushing
- 9. Sleeve
- 10. Adjuster Cam
- 11. Retainer
- 12. Spring

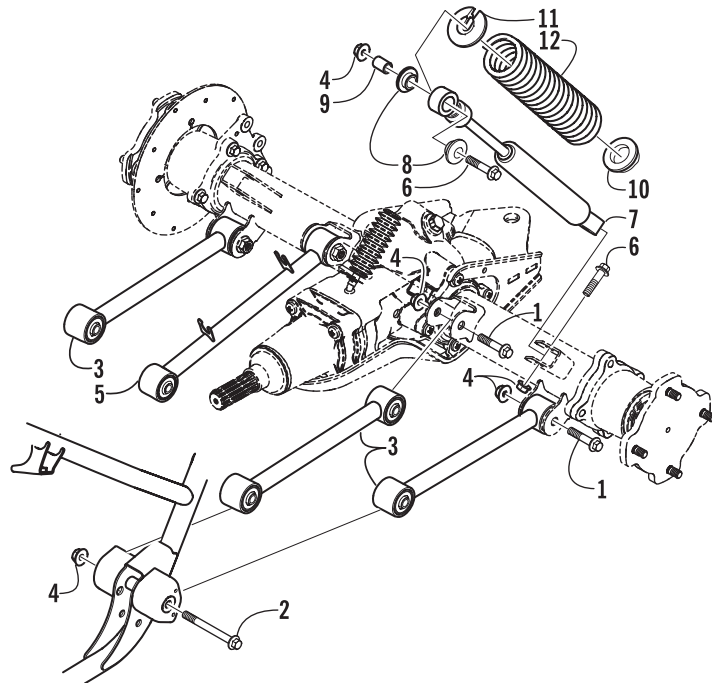


0737-585

FIS - REAR

KEY

- 1. Knuckle Assy
- 2. Knuckle
- 3. Bearing
- 4. Retaining Ring
- 5. Collar
- 6. Bushing
- 7. A-Arm
- 8. Bushing
- 9. Collar
- 10. Lock Nut
- 11. Cap Screw
- 12. A-Arm
- 13. Boot Guard
- 14. Body Screw
- 15. Boot Guard
- 16. Drive Axle
- 17. Clip
- 18. Boot Repair Kit
- 19. Cap Screw
- 20. Retainer
- 21. Spring
- 22. Shock Absorber
- 23. Bushing
- 24. Sleeve
- 25. Adjuster Cam
- 26. Cap Screw
- 27. Washer
- 28. Cap Screw
- 29. Spanner Wrench

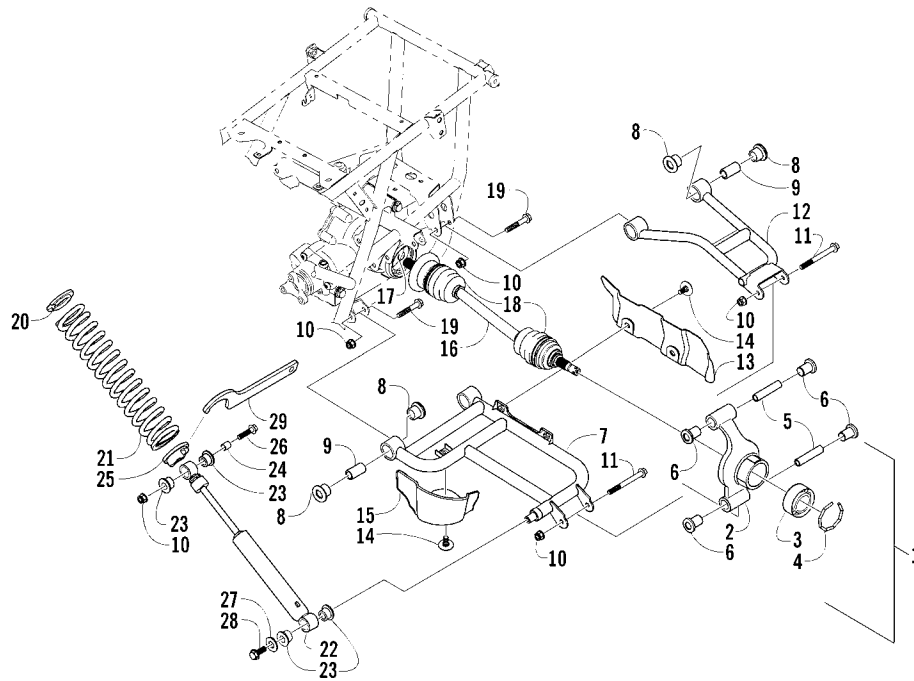

0739-532

Shock Absorbers

REMOVING

1. Secure the ATV on a support stand to elevate the wheels and to release load on the suspension.

⚠ WARNING

Make sure the ATV is solidly supported on the support stand to avoid injury.

2. Remove the two cap screws and nuts securing each front shock absorber to the frame. Account for bushings and sleeves from each.



AF605D

⚠ CAUTION

On the FIS style rear suspension, additional support stands are necessary to support the rear axle when the shock absorbers are removed or damage may occur.

3. Remove the two cap screws and nut securing each rear shock absorber to the frame and rear suspension. Account for bushings and sleeves from each.



AF626D

4. Compress the shock absorber spring, remove the retainer, and remove the spring.



AF730D

CLEANING AND INSPECTING

■ **NOTE:** Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

1. Clean all shock absorber components in parts-cleaning solvent.
2. Inspect each shock rod for nicks, pits, rust, bends, and oily residue.
3. Inspect all springs, spring retainers, shock rods, dampers, bushings, shock bodies, and eyelets for cracks, leaks, and bends.

INSTALLING

1. Place the shock absorber spring over the shock absorber, compress the spring, and install the retainer.
2. Place bushings and sleeves (where appropriate) into shock eyelet; then install shock with two cap screws and nuts. Tighten all nuts to specifications.

CAUTION

Do not tighten the nuts beyond the 4.8 kg-m (35 ft-lb) specification or the shock eyelet or mount **WILL** be damaged.

■ **NOTE:** On the fully independent rear suspension models, the rear shock absorber-to-lower A-arm torque factor is 2.8 kg-m (20 ft-lb).

3. Remove the ATV from the support stand.

Swing Arms

(ACT - Rear Suspension)

REMOVING

1. Remove the cap screws and lock nuts securing the front of the swing arms to the frame brackets.
2. On the left side, remove the cap screws and lock nuts securing the rear of the swing arms to the axle housing; then remove the swing arms.



AF697D

3. On the right side, remove the cap screw and lock nut securing the outer swing arm to the axle housing; then remove the cap screw and lock nut securing the inner swing arm to the axle housing. Remove the hose grommets from the hose guides.
4. Remove the swing arms and note the location of the hose guides on the inner swing arm (for installing purposes).

CLEANING AND INSPECTING

■ **NOTE:** Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

1. Clean all swing arm components in parts-cleaning solvent.
2. Inspect all swing arm weldments for cracks or unusual bends.
3. Inspect all tubing for cracks or unusual bends.

INSTALLING

1. On the right side, place the inner swing arm into position and secure it to the axle housing with a cap screw and lock nut. Do not tighten at this time.
2. On the right side, place the outer swing arm into position and secure to the axle housing with a cap screw and lock nut. Do not tighten at this time.

3. Secure the two right side swing arms to the frame brackets with cap screws and hex nuts. Do not tighten at this time.
4. On the left side, secure the swing arms to the axle housing and frame brackets with cap screws and hex nuts; then tighten all fasteners to specifications.

Front A-Arms

REMOVING

1. Secure the ATV on a support stand to elevate the front wheels; then remove the wheels.

⚠ WARNING


Make sure the ATV is solidly supported on the support stand to avoid injury.

2. Remove the cotter pin from the nut. Discard the cotter pin.



CD008


3. Remove the nut securing the hub.
4. Remove the brake caliper. Account for two cap screws and two 0.76 mm (0.030 in.) spacer washers.

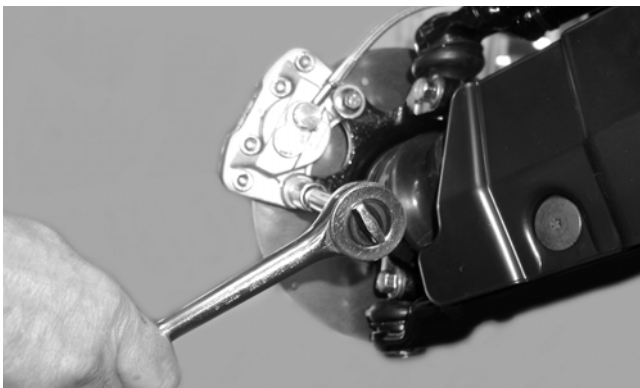

CD007

5. Remove the hub assembly.

6. Remove the cotter pin and slotted nut securing the tie rod end to the knuckle; then remove the tie rod end from the knuckle.

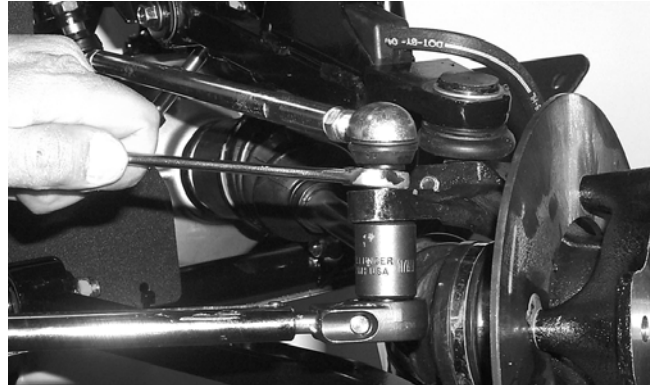

AF618D

7. Remove the cap screws securing the ball joints to the knuckle.

⚠ CAUTION

Support the knuckle when removing the cap screws or damage to the threads will occur.




AF628D

8. Tap the ball joints out of the knuckle; then remove the knuckle.
9. Remove the lower shock absorber eyelet from the upper A-arm.




AF626D

10. Remove the cap screws securing the A-arms to the frame.

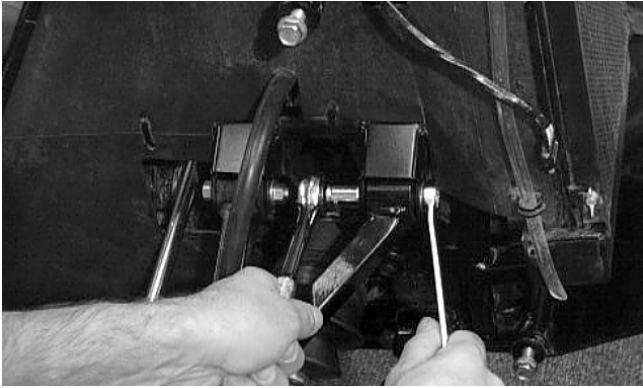

AF610D

11. Remove the circlip from the ball joint; then remove the ball joint from the A-arm.

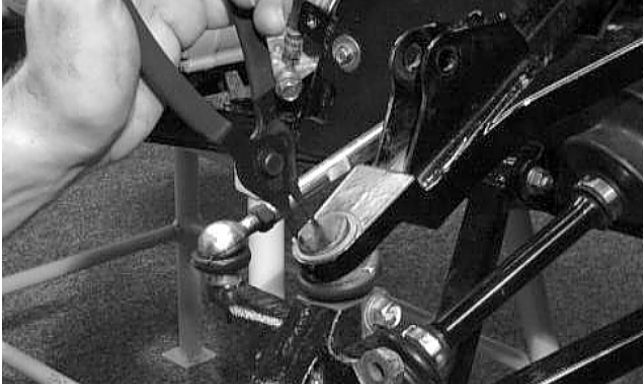

AF616D


CLEANING AND INSPECTING

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

1. Clean all A-arm components in parts-cleaning solvent.
2. Clean the ball joint mounting hole of all residual Loctite, grease, oil, or dirt for installing purposes.
3. Inspect the A-arm for bends, cracks, and worn bushings.
4. Inspect the ball joint mounting holes for cracks or damage.
5. Inspect the frame mounts for signs of damage, wear, or weldment damage.


INSTALLING

1. Apply green Loctite #609 to the entire outside diameter of the ball joint; then install the ball joint into the A-arm and secure with the circlip.

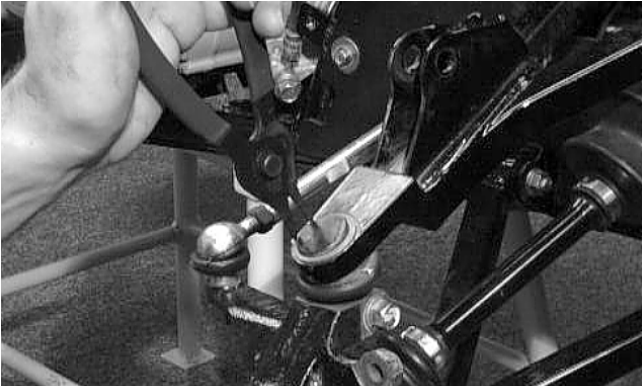

AF616D

2. Install the A-arm assemblies into the frame mounts and secure with the cap screws. Only finger-tighten at this time.

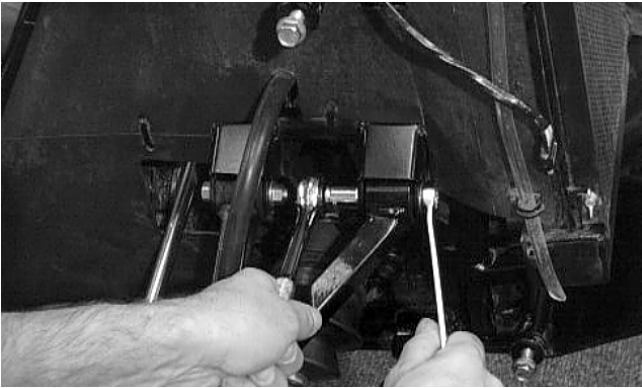

AF610D

3. Route the brake hose through the upper A-arm shock absorber mount.




AF627D

4. Secure the lower eyelet of the shock absorber to the upper A-arm. Tighten nut to specifications.
5. Secure the A-arm assemblies to the frame mounts (from step 2). Tighten the cap screws to specifications.

<p>CAUTION</p>
<p>Do not tighten the nut beyond the 4.8 kg-m (35 ft-lb) specification or the shock eyelet or mount WILL be damaged.</p>

6. Install the knuckle assembly onto the ball joints and secure with cap screws. Tighten to specifications.

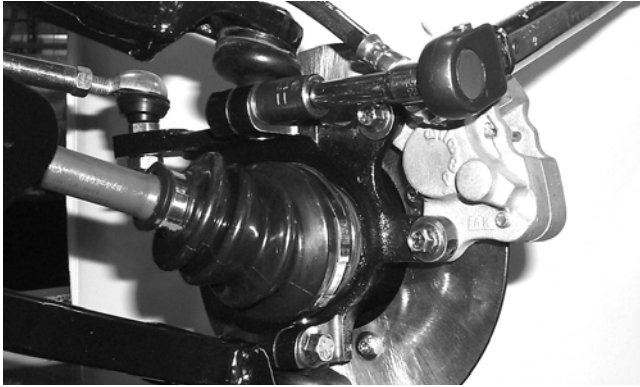

AF628D


7. Install the tie rod end and secure with the nut. Tighten to specifications; then install a new cotter pin and spread the pin to secure the nut.

■ **NOTE:** During assembly, new cotter pins should be installed.



AF618D


8. Apply grease to the hub and drive axle splines; then install the hub assembly onto the drive axle.

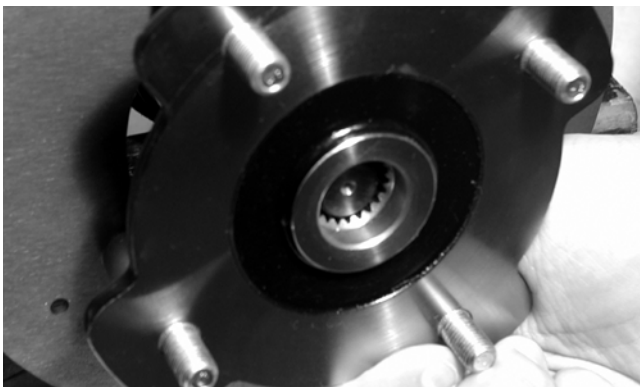

CD009

9. Secure the hub assembly with the nut. Tighten only until snug.

10. Secure the brake caliper to the knuckle with the two cap screws making sure the two 0.76 mm (0.030 in.) spacer washers are positioned between the caliper and the knuckle. Tighten to specifications.

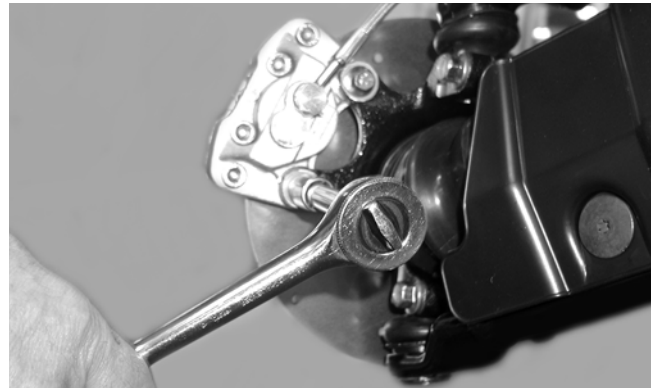

CD007

11. Secure the hub nut (from step 9) to the shaft/axle. Tighten to specifications.

12. Install a new cotter pin and spread the pin to secure the nut.



CD008

13. Install the wheel and tighten to specifications.



CD006

14. Remove the ATV from the support stand.

Rear A-Arms (FIS - Rear Suspension)

REMOVING

1. Secure the ATV on a support stand to elevate the wheels.

WARNING

Make sure the ATV is solidly supported on the support stand to avoid injury.

2. Pump up the hand brake; then engage the brake lever lock.
3. Remove the wheel.
4. Remove the cotter pin securing the hex nut; then remove the hex nut. Release the brake lever lock.
5. Remove the two brake calipers (right side only).


■ **NOTE:** Do not allow the brake calipers to hang from their cable/hose.

6. Remove the cap screws and lock nut securing the shock absorber to the frame and lower A-arm; then remove the shock absorber.
7. Remove the cap screws securing the boot guard to the lower A-arm.



AF934

8. Slide the hub out of the knuckle and set aside.
9. Remove the cap screws and lock nuts securing the knuckle to the A-arms. Discard the lock nuts.

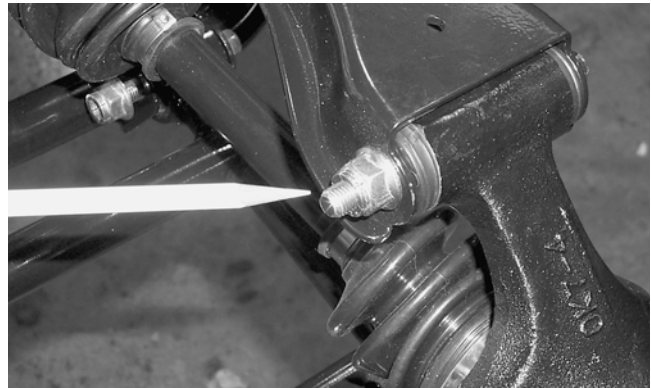

AF936

■ **NOTE:** Never reuse a lock nut. Once a lock nut has been removed, it must be replaced with a new lock nut.

10. Remove the cap screws and lock nuts securing the A-arms to the frame; then remove the A-arms.

■ **NOTE:** If removing the upper right A-arm, it will be necessary to disconnect the brake hose and brake cable from the A-arm.


CLEANING AND INSPECTING

■ **NOTE:** Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

1. Clean all A-arm components in parts-cleaning solvent.
2. Inspect the A-arm for bends, cracks, and worn bushings.
3. Inspect the frame mounts for signs of damage, wear, or weldment damage.

INSTALLING


1. Install the A-arm assemblies into the frame mounts and secure with the cap screws and new lock nuts. Only finger-tighten at this time.
2. Slide the knuckle onto the drive axle and into position on the A-arms; then secure the knuckle to the A-arms with cap screws and new lock nuts. Tighten to specifications.
3. Tighten the hardware securing the A-arms to the frame mounts (from step 1) to specifications.
4. Apply grease on the drive axle splines; then install the hub assembly onto the drive axle.

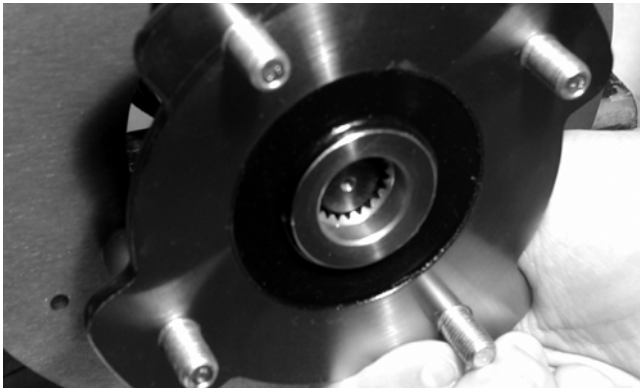

CD009

5. Secure the hub assembly with the nut. Tighten only until snug.
6. Secure the brake caliper to the knuckle with the two cap screws (right side only). Tighten the auxiliary caliper to specifications. Tighten the hydraulic caliper to specifications.

■ **NOTE:** Ensure that the brake hose and brake cable are properly routed and secured to the upper A-arm.

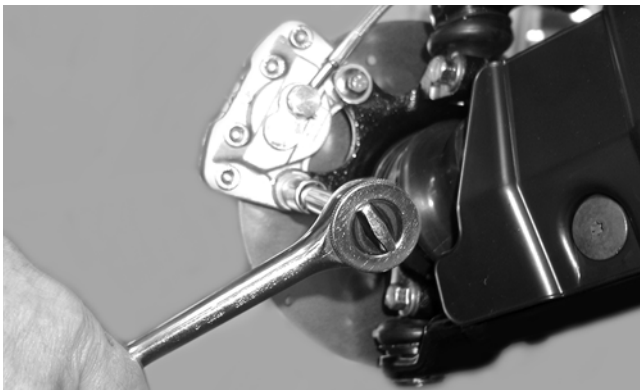

CD007


7. Compress the hand brake lever and engage the brake lever lock; then secure the hub nut (from step 6) to the drive axle. Tighten to specifications.
8. Install a new cotter pin and spread the pin to secure the nut.



CD008

9. Secure the shock absorber to the frame with a cap screw and new lock nut. Tighten to specifications.
10. Secure the shock absorber to the lower A-arm with a cap screw and new lock nut. Tighten to specifications.
11. Secure the boot guard to the lower A-arm with the two cap screws. Tighten securely.
12. Install the wheel cap.
13. Install the wheel and tighten to specifications.
14. Remove the ATV from the support stand.

Wheels and Tires

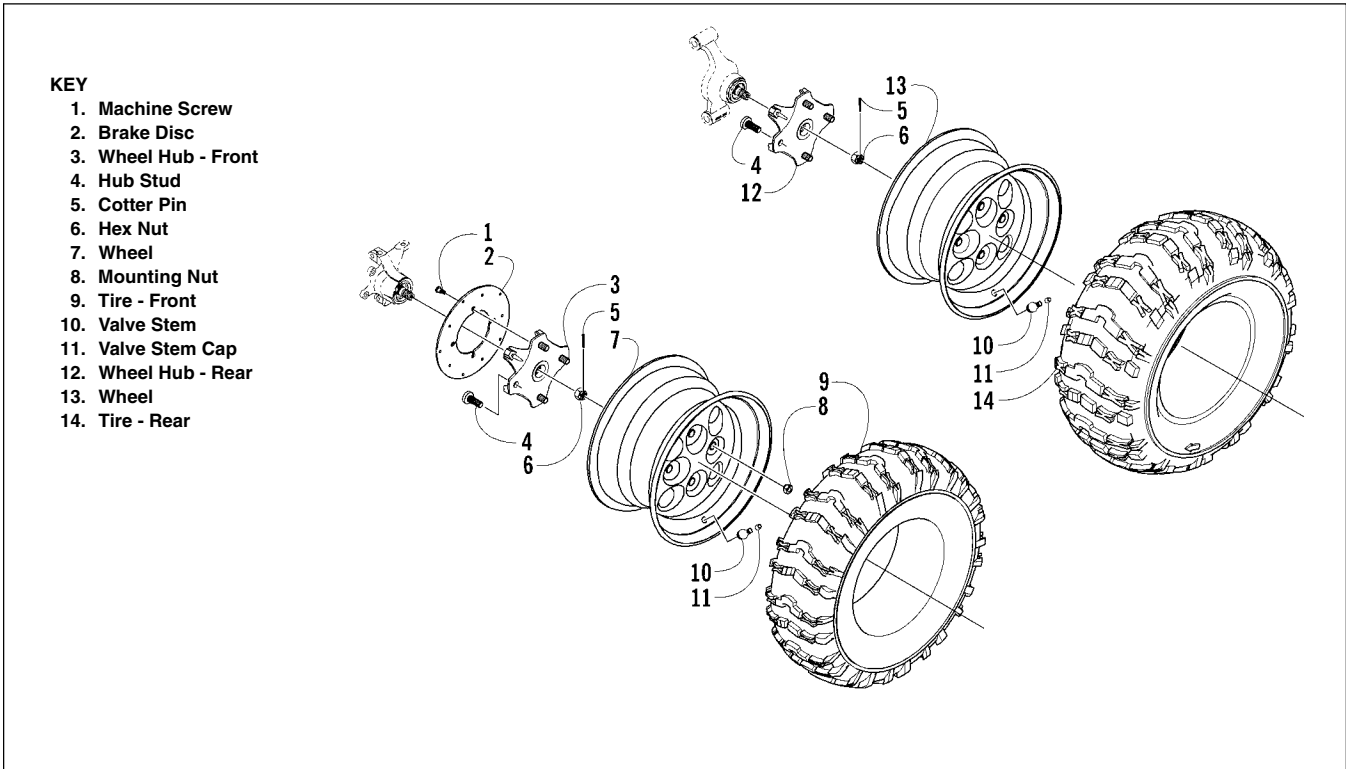

0739-534

TIRE SIZE

⚠ WARNING
 Use only Arctic Cat approved tires when replacing tires. Failure to do so could result in unstable ATV operation.

The ATV is equipped with low-pressure tubeless tires of the size and type listed below. Do not under any circumstances substitute tires of a different type or size.

⚠ WARNING
 Do not mix tire tread patterns. Use the same pattern type on front and rear. Failure to heed warning could cause poor handling qualities of the ATV and could cause excessive drive train damage not covered by warranty.

TIRE INFLATION PRESSURE

Front and rear tire inflation pressure should be 0.35 kg/cm² (5.0 psi).

REMOVING

1. Secure the ATV on a support stand to elevate the wheels.

⚠ WARNING
 Make sure the ATV is solidly supported on the support stand to avoid injury.

2. Remove the wheels.

■ **NOTE:** Keep left-side and right-side wheels separated for installing them on their proper sides.



CD006



CLEANING AND INSPECTING

■ **NOTE:** Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

1. Clean the wheels and hubs with parts-cleaning solvent.
2. Clean the tires with soap and water.
3. Inspect each wheel for cracks, dents, or bends.
4. Inspect each tire for cuts, wear, missing lugs, and leaks.

INSTALLING

1. Install each wheel on its hub.



CD006

■ **NOTE:** Make sure each wheel is installed on its proper hub as noted in removing (the “rotation arrow” must indicate forward direction of rotation).



AF612D

2. Tighten to specifications.

CHECKING/INFLATING

1. Using an air pressure gauge, measure the air pressure in each tire. Adjust the air pressure as necessary to meet the recommended inflation pressure.



CD005

2. Inspect the tires for damage, wear, or punctures.

WARNING

Do not operate the ATV if tire damage exists.

■ **NOTE:** If repair is needed, follow the instructions found on the tire repair kit or remove the wheel and have it repaired professionally.

■ **NOTE:** Be sure all tires are the specified size and have identical tread pattern.

3. Check the front wheel toe-in and toe-out and adjust as necessary (see Section 8).
4. Test drive the ATV on a dry, level surface and note any pulling to the left or right during acceleration, deceleration, and braking.

■ **NOTE:** If pulling is noted, measure the circumference of the front and rear tires on the pulling side. Compare the measurements with the tires on the opposite side. If pulling is noted during braking only, check and adjust the brakes as necessary and recheck operation (see Section 2).

5. Increase the air pressure in the tires with the smallest circumference measurement until all tires are equal in circumference.
6. Repeat steps 4-5 as necessary to ensure proper handling.