



# Service Advisory

**Date:** October 17, 2002

**Product Line:** ATV

**Advisory No:** SAA306

**Subject:** Air Cleaner Removal Instructions

**Affected Model:**  
2003 Y-12 Youth (All)

---

Arctic Cat has received a few comments concerning the removal of the air cleaner on the affected ATV listed above. More specifically, comments were made concerning the difficulty (number of steps) involved to remove the air cleaner.

Although there are various steps needed to remove the air cleaner, the procedure is not difficult if the instructions listed below are followed.

Thank you for your understanding and cooperation in this matter.

Sincerely,

Product Service Department  
Arctic Cat Inc.



Printed in the U.S.A.







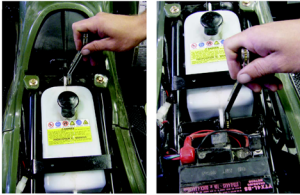




®™ Trademarks of Arctic Cat Inc., Thief River Falls, MN 56701



1002

# Y-12 Youth Air Cleaner Removal Instructions

- Be sure that the engine stop switch is in the off position.
- Be sure that the engine is cool.

<p><b>1</b> Remove seat.</p> 	<p><b>4</b> Leaving the oil line attached to the tank, lift the oil tank up and set it down behind the seat support cross brace on the frame.</p> <p>Oil Tank</p> 	<p><b>6</b> Remove side screw holding front and rear plastic fenders together.</p> 	<p><b>10</b></p>  <p>Remove the seven screws fastening the two halves of the air cleaner housing together. Clean or replace the filter element as required.</p>
<p><b>2</b> Remove the two 10 mm bolts that mount the oil tank in place, one at the front and one rear of the tank.</p> 	<p><b>7</b> Remove the two 10 mm bolts (on the right side of the air cleaner, inside of the body panel) that mount the air cleaner housing to the frame.</p> 		
<p><b>3</b> Release the oil line from the retaining clip located above the left footrest, on top of the drive belt housing.</p> 	<p><b>5</b> Remove 10 mm bolt holding plastic fender tab to chassis.</p> 	<p><b>8</b> Grasp the air cleaner housing and pull back toward the rear of the ATV. This will release the air cleaner housing from the air intake tube.</p> 	<p><b>11</b> Reassemble and reinstall all components.</p>
<p><b>9</b> Rotate the air cleaner housing and remove it from the ATV.</p> 