 


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007TBS4BUSQ) 07  
AIR INTAKE ASSEMBLY

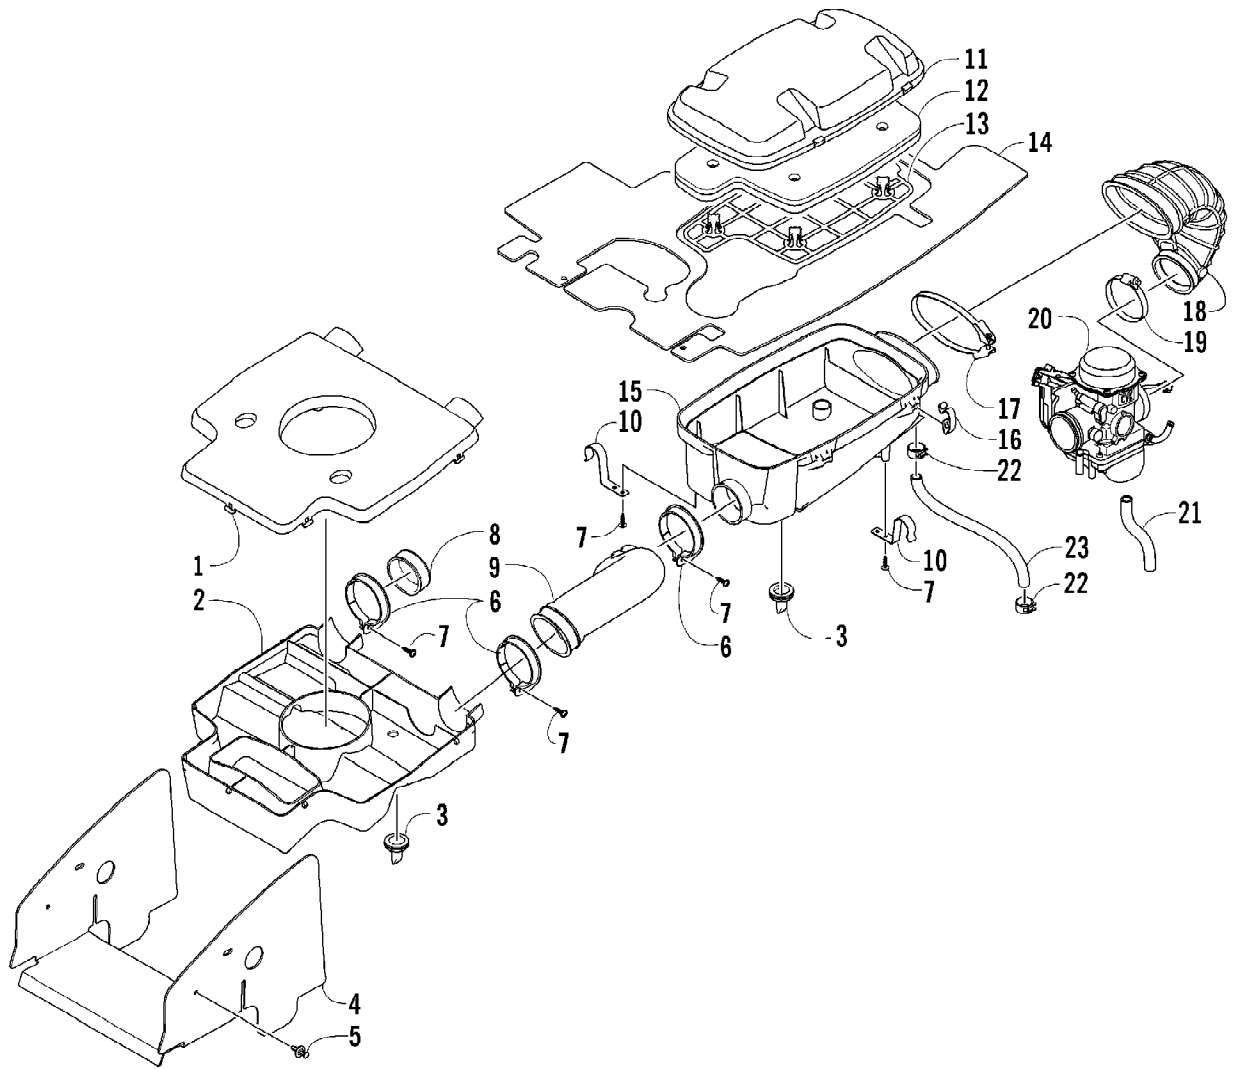


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007TBS4B2USQ)07  
 AIR INTAKE ASSEMBLY

Page 12 of 12

Ref #	Part Number	Qty	S/P/F	Description
1	0413-091	1		Diverter, Air - Top
2	0413-093	1		Diverter, Air - Bottom
3	0470-442	2	/P	Valve, Drain
4	1406-973	1		Shroud, Splash
5	0623-362	2		Rivet, Reinstallable
6	0423-551	3		Clamp
7	0423-342	7	/P	Screw, Self-Tapping
8	0413-096	1		Cap, Air Intake - Diverter
9	0470-529	1		Boot, Air Intake
10	0423-454	2		Clip, Mounting - Air Intake
11	0470-554	1	S	Cover, Air Intake
12	0470-663	1	/P	Filter, Air
13	0470-516	1		Screen, Air Filter
14	2406-009	1		Panel, Shield
15	0470-515	1	S	Housing, Air Intake
16	0423-455	4		Clip, Spring
17	0423-554	1		Clamp, Boot
18	0470-525	1		Boot, Carburetor
19	0423-019	1		Clamp, Boot
20	0470-571	1		Carburetor, CVK36-AE
21	0510-592	1		Hose, Carburetor Drain
22	0423-045	2		Clamp, Hose
23	0410-079	1	S	Hose, Vent - Crankcase

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007TBS4B160) 07  
AUXILIARY BRAKE ASSEMBLY

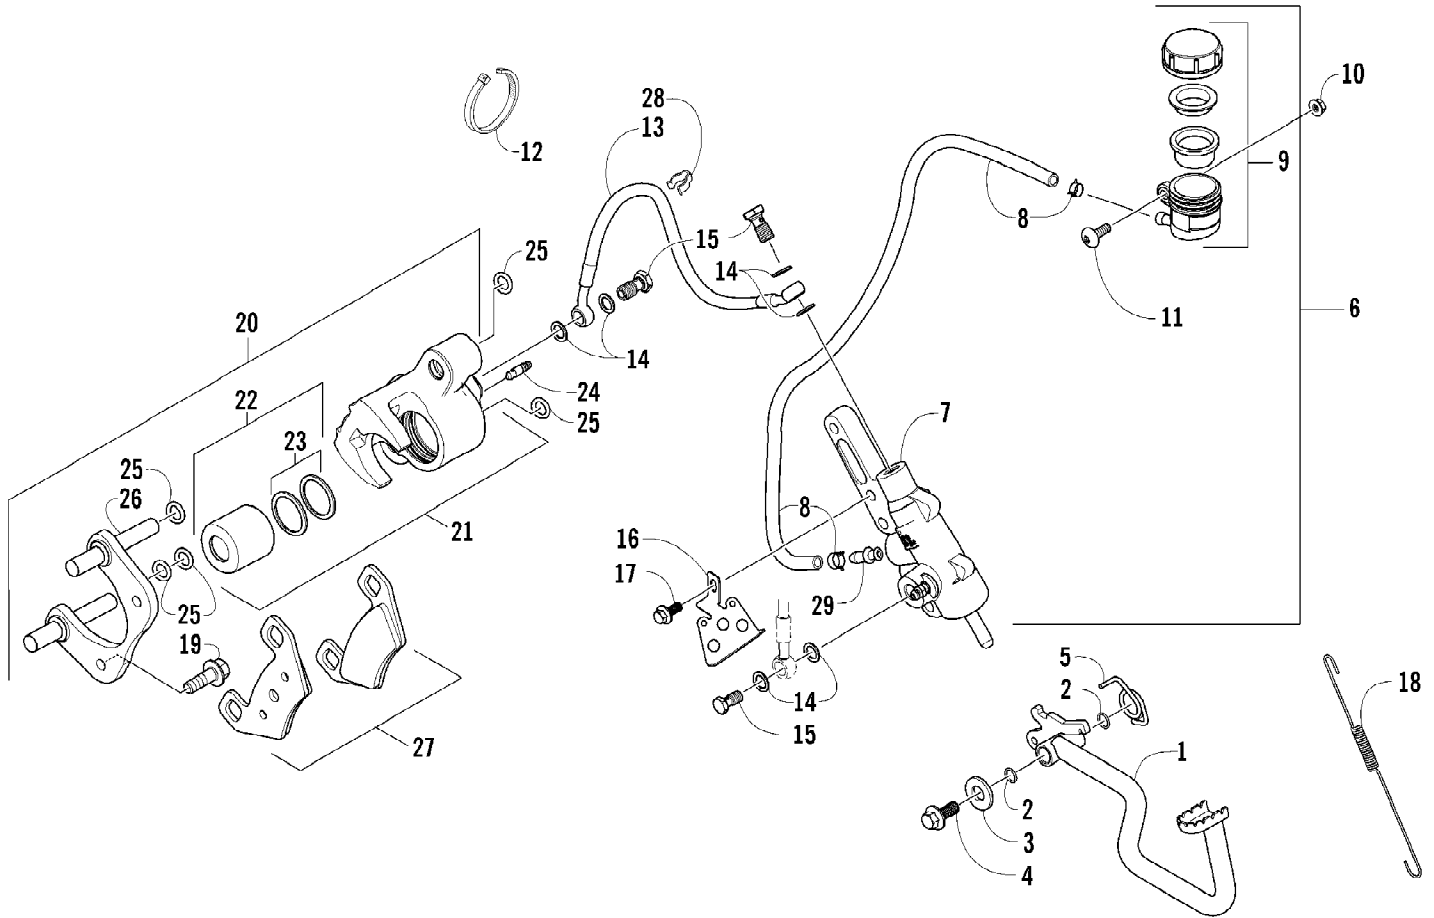


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007TBS4BUSQ)07  
 AUXILIARY BRAKE ASSEMBLY

Page 4 of 10

Ref #	Part Number	Qty	S/P/F	Description
	1502-136	1		Fully Bled Master Cylinder Replacement Kit
1	1502-063	1		Lever, Brake
2	1602-213	2	/P	O-Ring
3	8050-252	1		Washer
4	8408-816	1		Screw, Cap
5	0502-807	1		Spring, Brake Lever
6	1502-137	1	S	Brake Assembly (inc. 7-9)
7	0	1	F	Master Cylinder
8	1502-142	1		Hose, Brake Reservoir w/Clamps
9	1502-141	1		Reservoir, Brake
10	0623-038	1		Nut, Flanged
11	8476-616	1		Screw, Machine
12	0123-788	1	/P	Cable Tie - 7.5 in.
13	1502-140	1		Hose, Brake
14	0423-178	6		Washer, Crush
15	0423-413	3		Bolt, Banjo-Fitting
16	1502-179	1		Bracket, Switch
17	8408-625	2		Screw, Cap
18	0502-785	1		Spring, Brake Switch
19	1623-589	2	S	Screw, Cap
20	0502-878	1	S	Caliper, Brake (inc. 21-27)
21	0502-603	1	S	Housing, Caliper - Assembly - Right Rear (inc. 22-24)
22	0502-606	1		Piston/Seal Set (inc. 23)
23	0502-607	1		Seal Set
24	0502-609	1	/P	Valve, Bleed
25	0502-608	1		O-Ring, Guide - Set
26	0502-605	1		Bracket Assembly
27	0502-875	1	S	Pad, Brake - Set
28	1502-115	2		Clip, Brake Hose
29	1502-138	1	S	Adapter, Hose



 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007TBS4B56Q) 07  
BATTERY ASSEMBLY

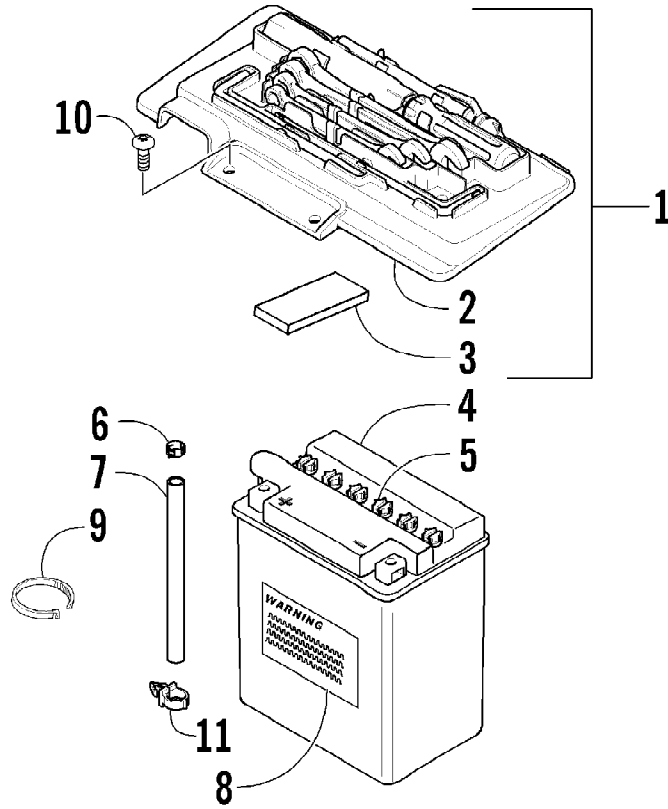


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007TBS4B6SQ)07  
 BATTERY ASSEMBLY

Page 6 of 6

Ref #	Part Number	Qty	S/P/F	Description
1	5991-395	1	S	Battery Cover/Tool Tray Assembly (inc. 2-3)
2	2406-815	1	/P	Cover, Battery
3	0406-288	2		Pad, Battery
3	0444-122	1	S/P	Kit, Tool Not Illustrated
4	0745-045	1	/P	Battery Assembly (inc. 5-8)
5	0645-045	6		Cap, Battery
6	0645-152	1		Clamp, Hose
7	0645-263	1	/P	Hose, Vent
8	0645-151	1		Label, Warning - Battery
9	0123-903	4		Cable Tie - 11.5 in.
10	8476-616	2		Screw, Machine
11	0623-101	AR		Clip, Retaining

 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007TBS417USQ) 07  
CAM CHAIN ASSEMBLY

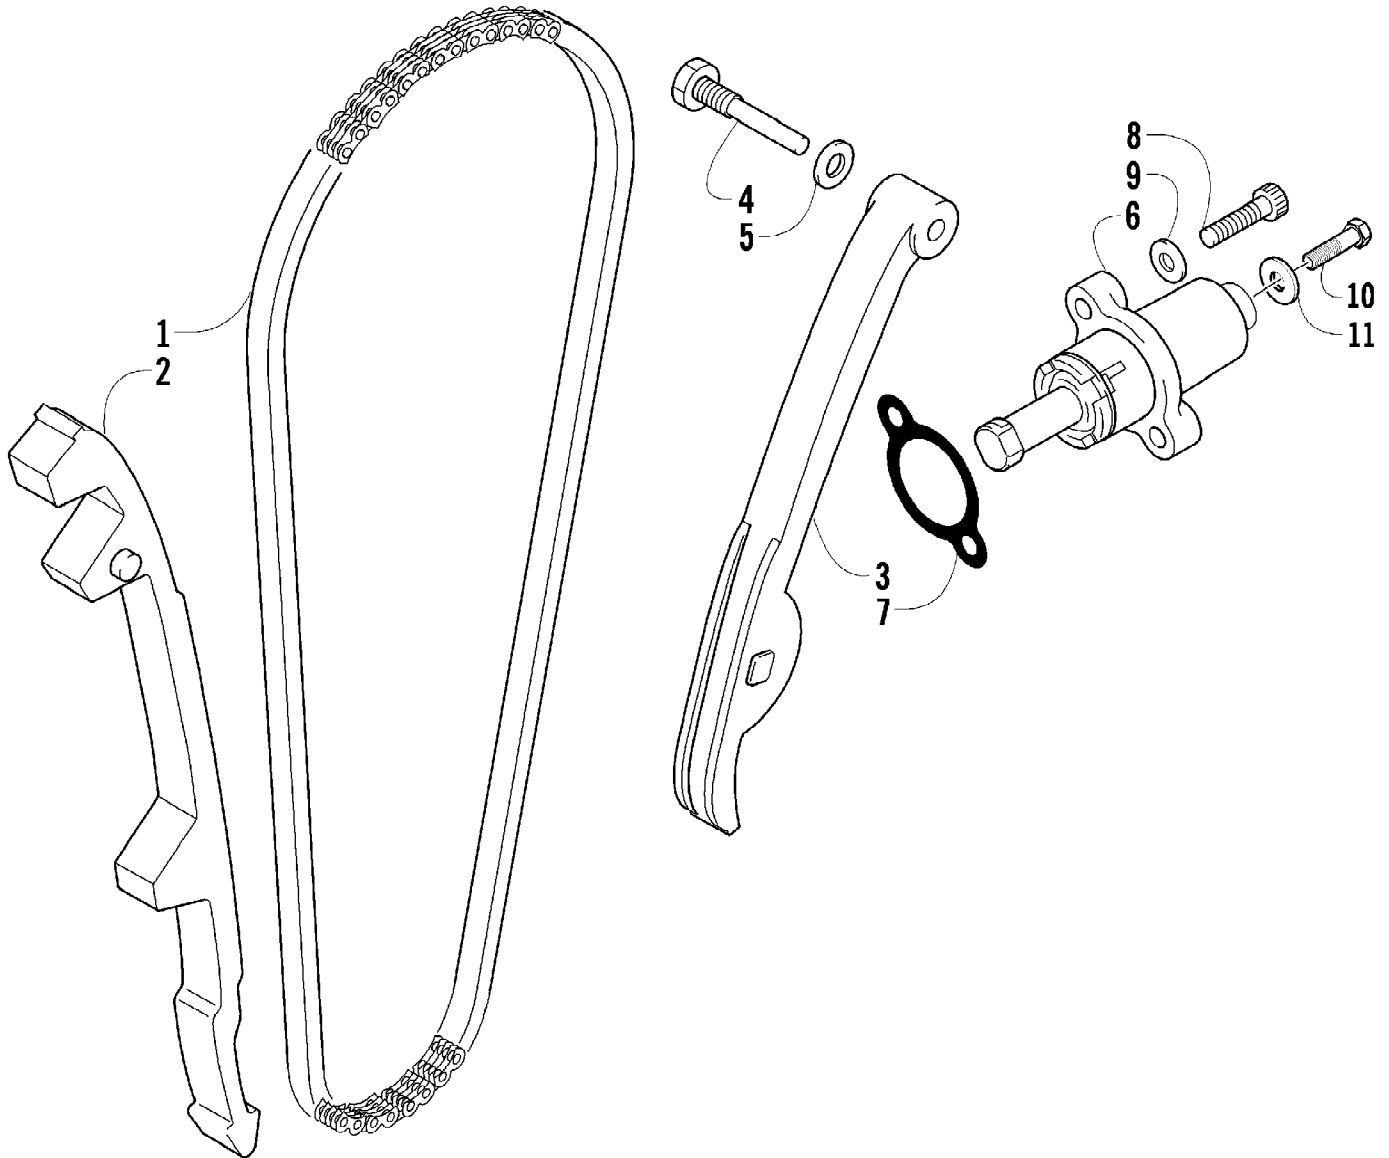

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007TBS4B16C)07  
CAM CHAIN ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0810-001	1		Chain, Cam
2	0810-002	1		Guide, Chain
3	0810-003	1		Tensioner, Chain
4	0826-036	1		Bolt
5	0830-025	1		Washer
6	0810-004	1		Adjuster, Tensioner - Assembly
7	0830-018	1		Gasket
8	8468-625	2		Screw, Machine
9	0830-107	2		Gasket
10	8400-610	1		Screw, Cap
11	0828-110	1		Washer

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007TBS4B060) 07  
CAMSHAFT/VALVE ASSEMBLY

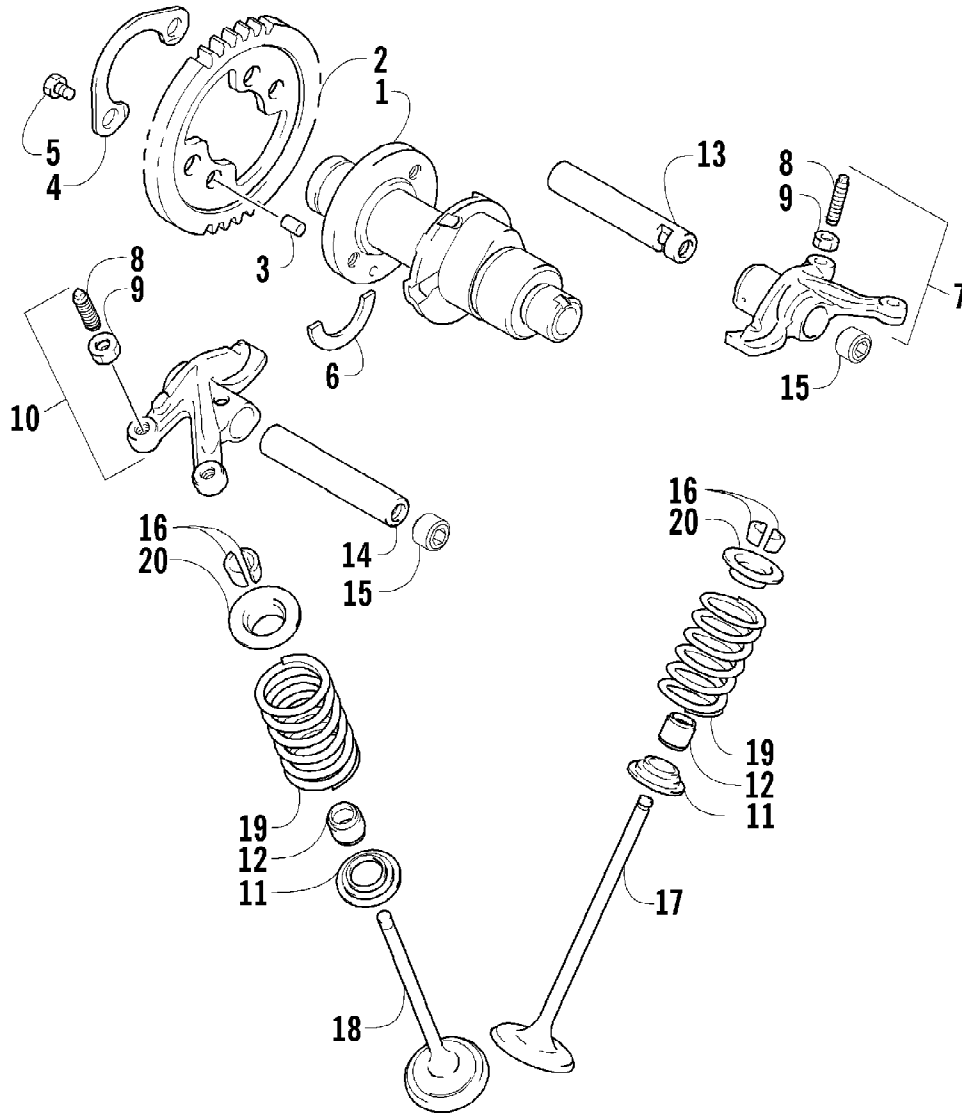


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894BUSQ)07  
CAMSHAFT/VALVE ASSEMBLY

Page 4 of 6

Ref #	Part Number	Qty	S/P/F	Description
1	0809-116	1	S	Camshaft
2	0809-002	1		Sprocket
3	0829-008	1		Pin
4	0828-004	1		Washer
5	0826-034	2		Bolt
6	0809-003	1		C-Ring
7	0809-134	1	S/F	Arm, Valve Rocker - Intake (inc. two No. 8-9)
8	0809-033	4	S/F	Screw
9	0827-007	4	F	Nut
10	0809-136	1	S/F	Arm, Valve Rocker - Exhaust (inc. two No. 8-9)
11	0809-006	4	F	Seat, Spring - Valve
12	0830-016	4	S/F	Seal, Oil
13	0809-007	1	F	Shaft, Rocker Arm - Intake
14	0809-008	1	F	Shaft, Rocker Arm - Exhaust
15	0831-041	2	F	Plug, Shaft
16	0809-014	8	F	Keeper, Valve
17	0809-039	2	S/F	Valve, Intake
18	0809-040	2	S/F	Valve, Exhaust
19	0809-138	4	S/F	Spring, Valve
20	0809-013	4	F	Retainer, Spring

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894BUSQ)07  
CARBURETOR

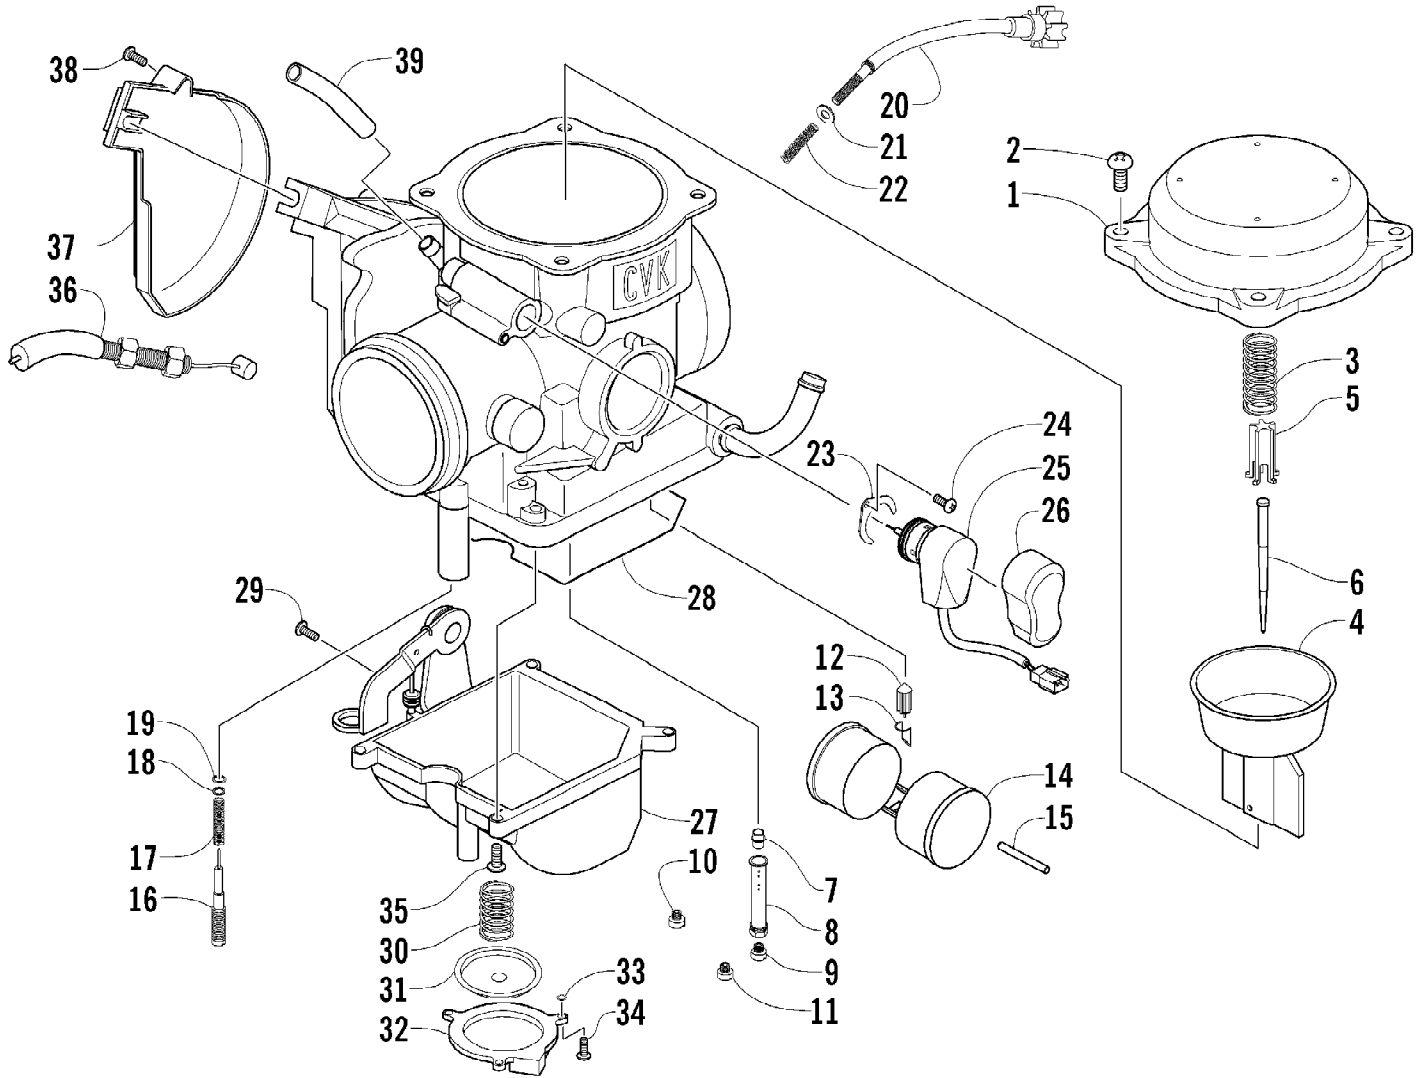


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B26C) 07  
CARBURETOR

Ref #	Part Number	Qty	S/P/F	Description
	0470-571	1		Complete Carburetor Assembly CVK36-AE
1	5507-001	1		Cover, Top
2	5507-002	4	/P	Screw, Top Cover
3	5507-173	1	S	Spring
4	5507-099	1		Piston, Vacuum
5	5507-005	1		Seat, Spring
6	5507-184	1		Jet Needle
7	5507-007	1		Needle Jet
8	5507-047	1	/P	Holder, Needle Jet
9	5507-075	1		Main Jet - 132
9	5507-072	1		Main Jet - 125 Optional
9	5507-073	1		Main Jet - 128 Optional
9	5507-074	1		Main Jet - 130 Optional
9	5507-057	1	/P	Main Jet - 135 Optional
9	5507-076	1	/P	Main Jet - 138 Optional
9	5507-043	1		Main Jet - 142 Optional
9	5507-042	1	/P	Main Jet - 145 Optional
9	5507-041	1		Main Jet - 148 Optional
9	5507-009	1	/P	Main Jet - 150 Optional
9	5507-077	1		Main Jet - 152 Optional
9	5507-078	1		Main Jet - 155 Optional
10	5507-101	1	S	Slow Jet
11	5507-112	1		Starter Jet - 85
12	5507-183	1		Valve, Float - Set (inc. 13)
13	0	1	F	Clip
14	5507-039	1		Float Set (inc. 15)
15	0	1	F	Pin, Float
16	5507-111	1		Screw, Pilot - Set (inc. 17-19)
17	0	1	F	Spring
18	0	1	F	Washer
19	0	1	F	O-Ring
20	5507-027	1		Screw, Idle Adjust
21	5507-028	1		Washer
22	5507-029	1		Spring
23	5507-115	1		Plate
24	5507-117	1	/P	Screw
25	5507-204	1		Choke, Electric
26	5507-114	1		Cover, Electric Choke
27	5507-203	1		Chamber, Float - Assembly (inc. 28-34)
28	5507-067	1	/P	O-Ring, Float Chamber
29	5507-050	1	/P	Screw, Drain
30	5507-032	1		Spring
31	5507-202	1		Diaphragm Assembly
32	5507-033	1		Housing, Pump
33	5507-034	1		U-Ring
34	5507-035	3		Screw
35	5507-017	4	/P	Screw
36	0487-021	1	S	Cable, Throttle
37	5507-036	1		Cover
38	5507-037	1	/P	Screw
39	0410-048	AR	S	Hose, Vent - 25 ft



 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B16C)07  
CASE/BELT COOLING ASSEMBLY

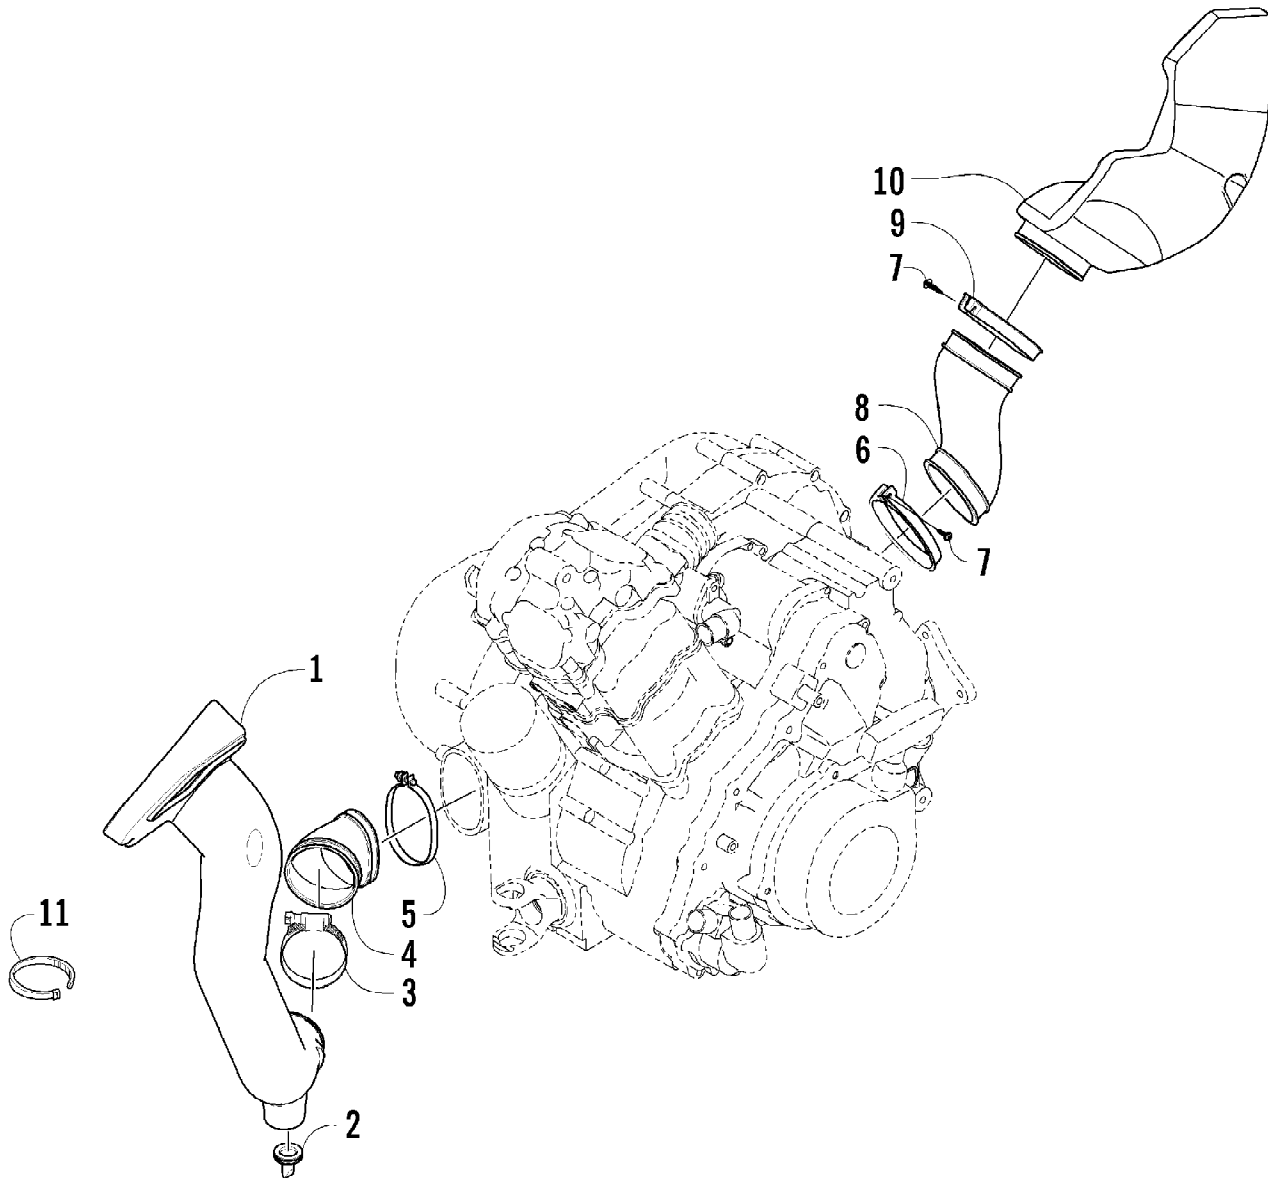

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894BUSQ)07  
CASE/BELT COOLING ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0413-115	1		Duct, Belt Cooling - Front
2	0470-442	1	/P	Valve, Drain
3	0423-578	1		Clamp, Boot
4	0413-114	1	S	Boot, Duct - Front
5	0423-539	1	S	Clamp, Boot
6	0423-550	1		Clamp, Plastic
7	0423-342	2	/P	Screw, Self-Tapping
8	0413-097	1		Boot, Duct - Rear
9	0423-554	1		Clamp, Boot
10	0413-153	1	/P	Duct, Belt Cooling - Rear
11	0123-903	1		Cable Tie - 11.5 in.

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B56Q) 07  
CLUTCH/V-BELT/MAGNETO COVER ASSEMBLY

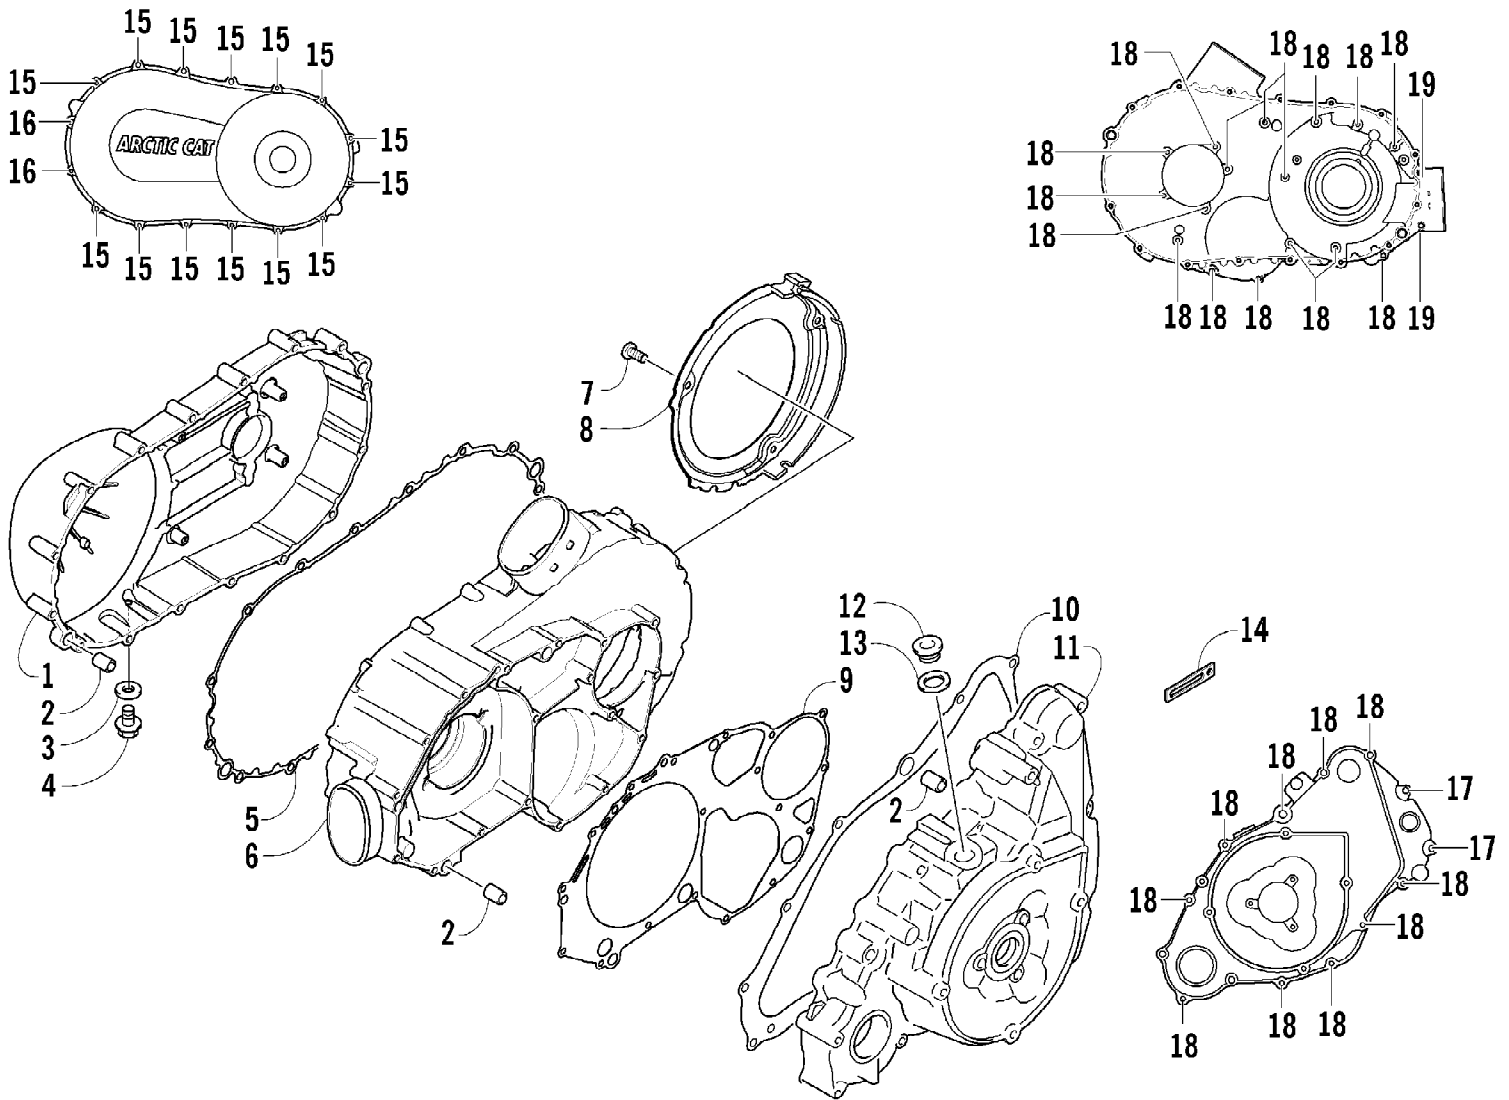


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B6SQ)07  
CLUTCH/V-BELT/MAGNETO COVER ASSEMBLY

Page 4 of 6

Ref #	Part Number	Qty	S/P/F	Description
1	0806-014	1	S	Cover, V-Belt
2	0829-002	4		Pin, Dowel
3	0830-013	1		Washer, Crush
4	8408-812	1		Screw, Cap
5	0830-012	1	S	Gasket, V-Belt Cover
6	0806-013	1	S	Cover, Clutch
7	0826-029	3		Screw
8	0806-048	1		Plate, Air Intake
9	0830-116	1	/P	Gasket, Clutch Cover
10	0830-128	1		Gasket, Magneto Cover
11	0806-077	1	S	Cover, Magneto - Assembly
12	0806-022	1		Plug
13	0830-015	1		Washer, Crush
14	3002-964	1	/P	Clamp, Wire
15	8468-645	14		Screw, Machine
16	8468-655	2		Screw, Machine
17	8468-625	2		Screw, Machine
18	8468-640	26		Screw, Machine
19	8468-675	2		Screw, Machine

 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894BU6Q) 07  
CONTROL SWITCH HOUSING ASSEMBLY

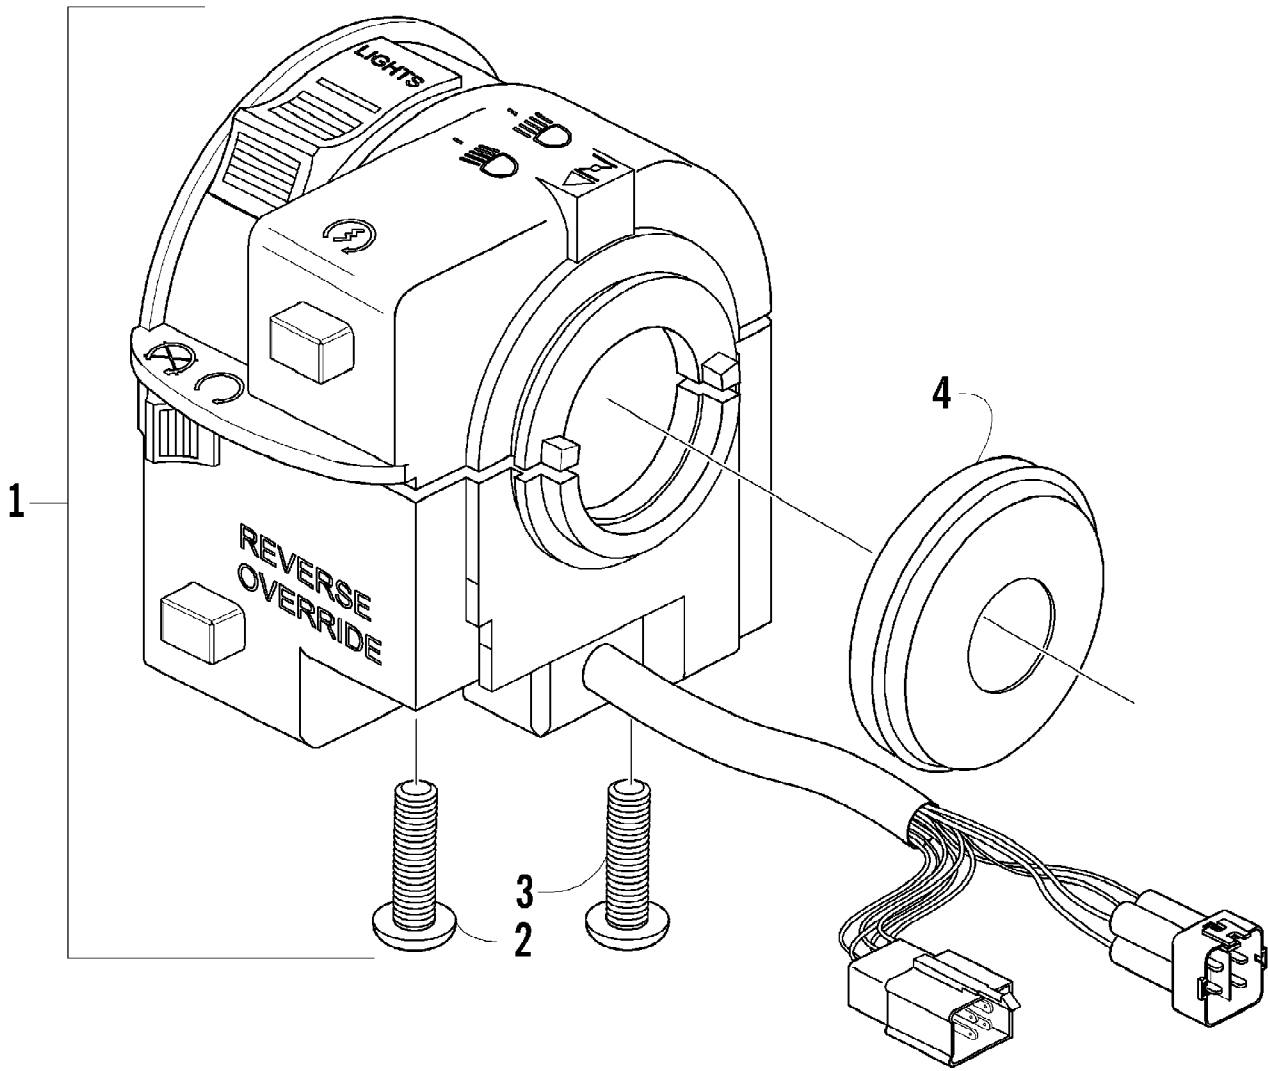

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P884B86C)07  
CONTROL SWITCH HOUSING ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0509-014	1		Switch, Control - Assembly (inc. 2-4)
2	0409-027	1		Screw, Machine
3	0409-028	1		Screw, Machine
4	3409-019	1		Cover, Switch Housing

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834B060)  
COOLING ASSEMBLY (Up to VIN: 4UF07ATV17T236134)

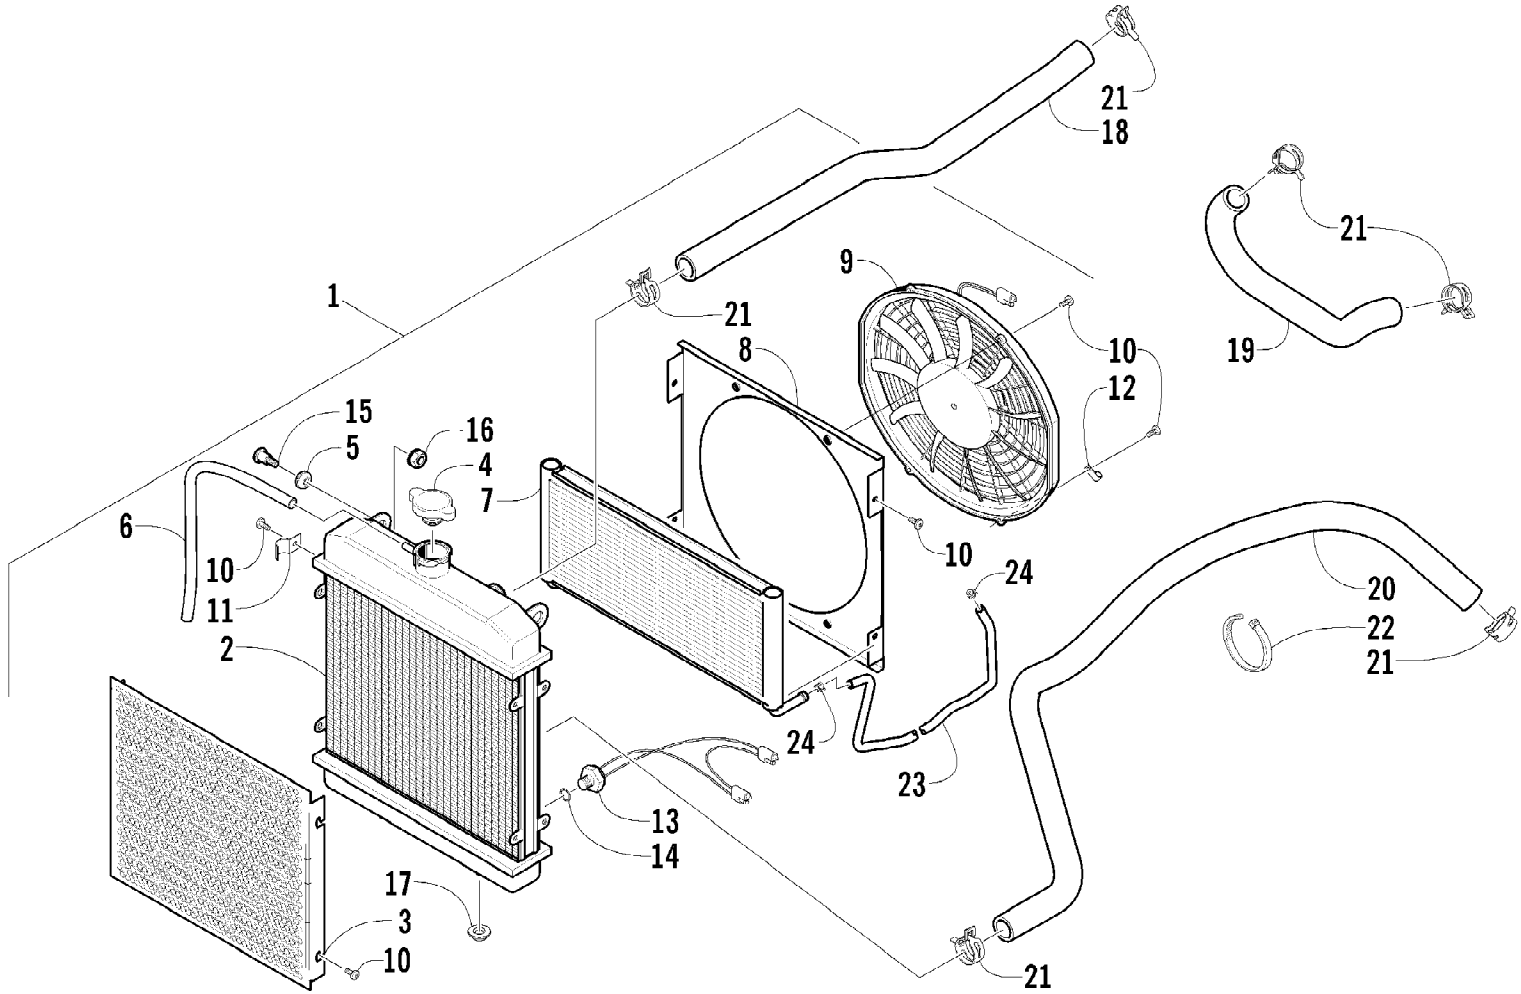


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P8942060)07  
 COOLING ASSEMBLY (Up to VIN: 4UF07ATV17T236134)

Page 20 of 20

Ref #	Part Number	Qty	S/P/F	Description
1	0413-116	1		Radiator Assembly (inc. 2-14)
2	0413-043	1	S	Radiator
3	0413-007	1		Screen, Radiator
4	0413-002	1	S	Cap, Radiator
5	0423-030	2		Grommet
6	0610-016	AR	/P	Hose - 25 ft
7	0413-122	1		Cooler, Oil
8	0413-124	1		Shroud, Fan
9	0413-123	1	/P	Fan, Cooling
10	8475-512	12		Screw, Machine
11	0423-351	1		Clamp, Wire
12	0123-397	1		Clamp, Cable
13	0413-045	1		Sensor, Temperature - Coolant
14	0423-390	1	S	O-Ring
15	0423-484	2		Screw, Shoulder
16	0623-038	2		Nut w/Washer
17	0423-028	2		Bushing, Stem
18	0410-002	1		Hose, Coolant - Upper
19	0410-022	1		Hose, Coolant - Crossover
20	0410-041	1		Hose, Coolant - Lower
21	0423-496	6		Clamp, Hose
22	0123-788	2	/P	Cable Tie
23	0410-100	AR	S	Hose, Oil Cooler
24	0423-632	4		Clamp, Hose



 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894BUSQ) 07  
COOLING ASSEMBLY (VIN: 4UF07ATV17T236134 and above)

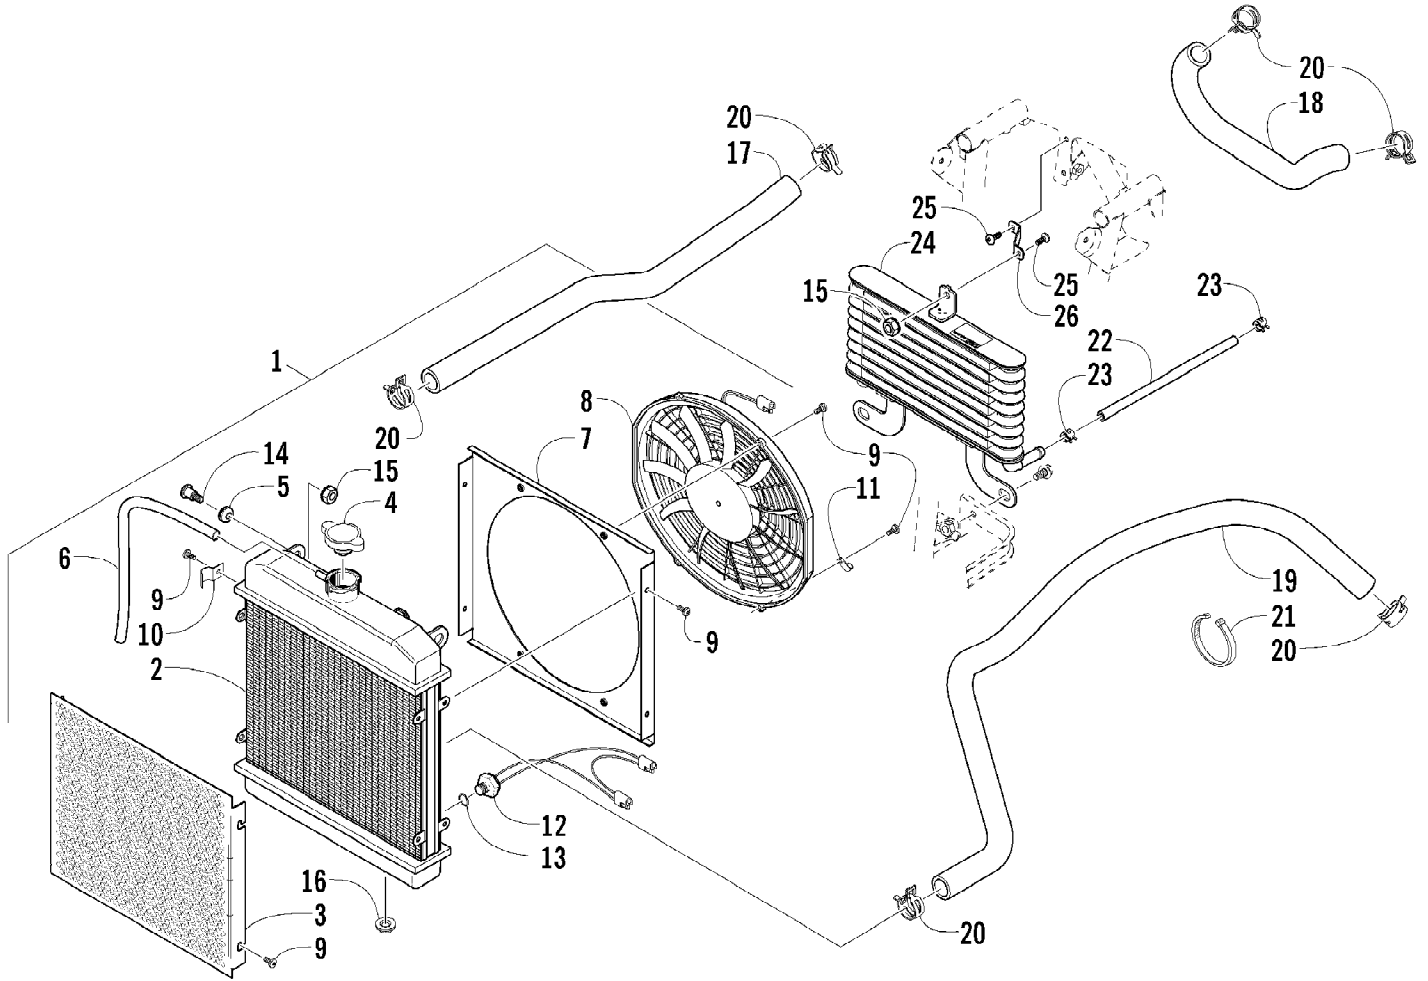

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894260)07  
 COOLING ASSEMBLY (VIN: 4UF07ATV17T236134 and above) Page 2 of 6

Ref #	Part Number	Qty	S/P/F	Description
1	0413-172	1	S	Radiator Assembly (inc. 2-13)
2	0413-184	1	/P	Radiator
3	0413-007	1		Screen, Radiator
4	0413-002	1	S	Cap, Radiator
5	0423-030	2		Grommet
6	0610-016	AR	/P	Hose - 25 ft
7	0413-046	1		Shroud, Fan
8	0413-123	1	/P	Fan, Cooling
9	8475-512	12		Screw, Machine
10	0423-351	1		Clamp, Wire
11	0123-397	1		Clamp, Cable
12	0413-168	1		Sensor, Temperature - Coolant
13	0423-390	1	S	O-Ring
14	0423-484	2		Screw, Shoulder
15	0623-038	4		Nut w/Washer
16	0423-028	2		Bushing, Stem
17	0410-002	1		Hose, Coolant - Upper
18	0410-022	1		Hose, Coolant - Crossover
19	0410-041	1		Hose, Coolant - Lower
20	0423-496	6		Clamp, Hose
21	0123-788	2	/P	Cable Tie
22	0410-127	2		Hose, Oil Cooler
23	0423-632	4		Clamp, Hose
24	0413-163	1	S	Cooler, Oil
25	8476-612	2		Screw, Machine
26	0513-022	1		Bracket, Mtg Upper-Oil Cooler

 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834B16C) 07  
CRANK BALANCER ASSEMBLY

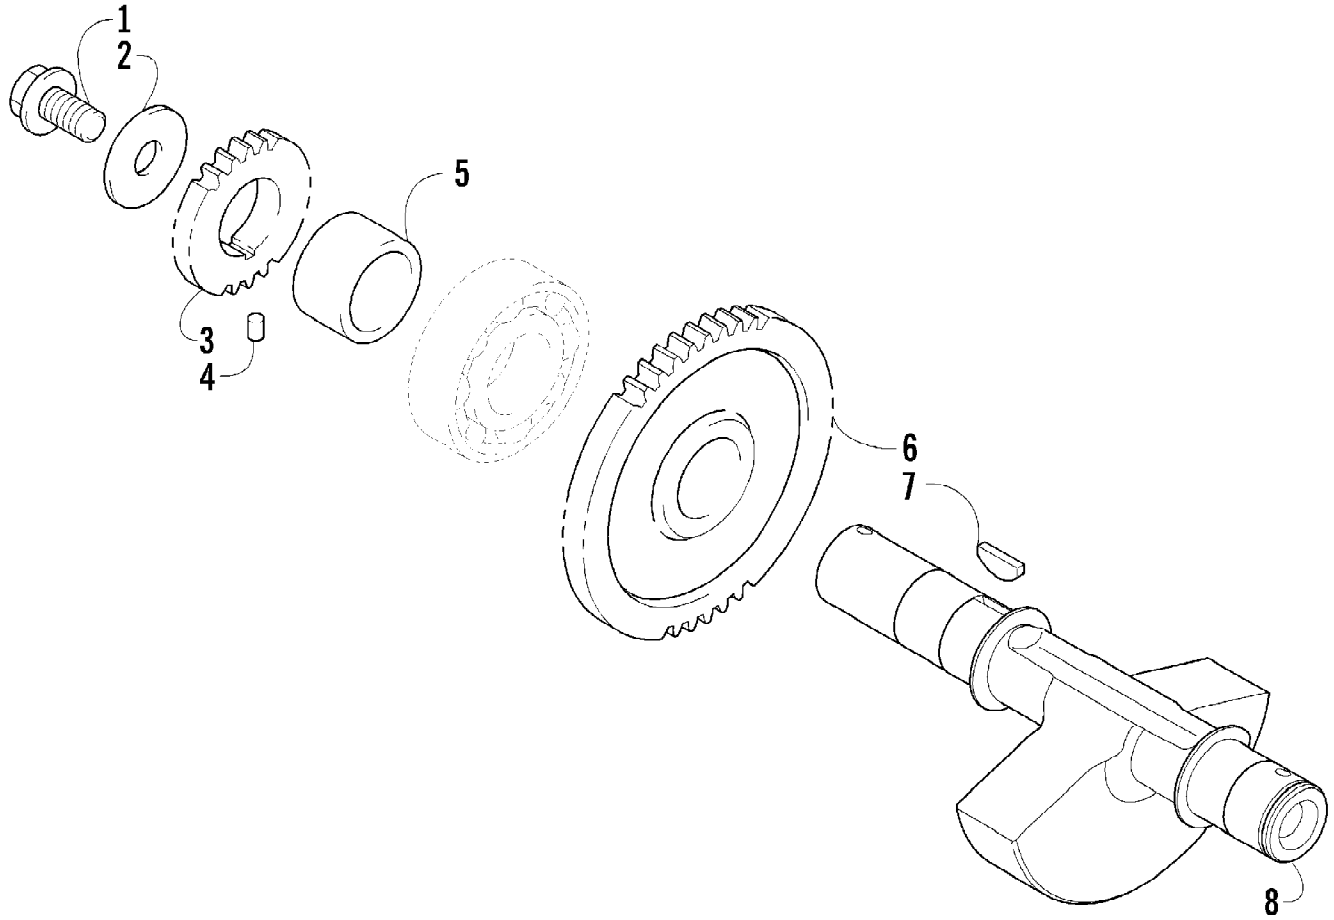

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894BUSQ)07  
CRANK BALANCER ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0826-033	1		Screw, Cap
2	0828-003	1		Washer
3	0811-003	1		Gear, Oil Pump Drive
4	0829-007	1		Dowel, Solid
5	0811-004	1		Spacer
6	0811-002	1		Gear, Driven
7	0829-006	1		Key - Crank Balancer Shaft
8	0811-017	1		Balancer, Crank

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P8342560) 07  
CRANKCASE ASSEMBLY (Up to VIN: 4UF07ATV47T237701)

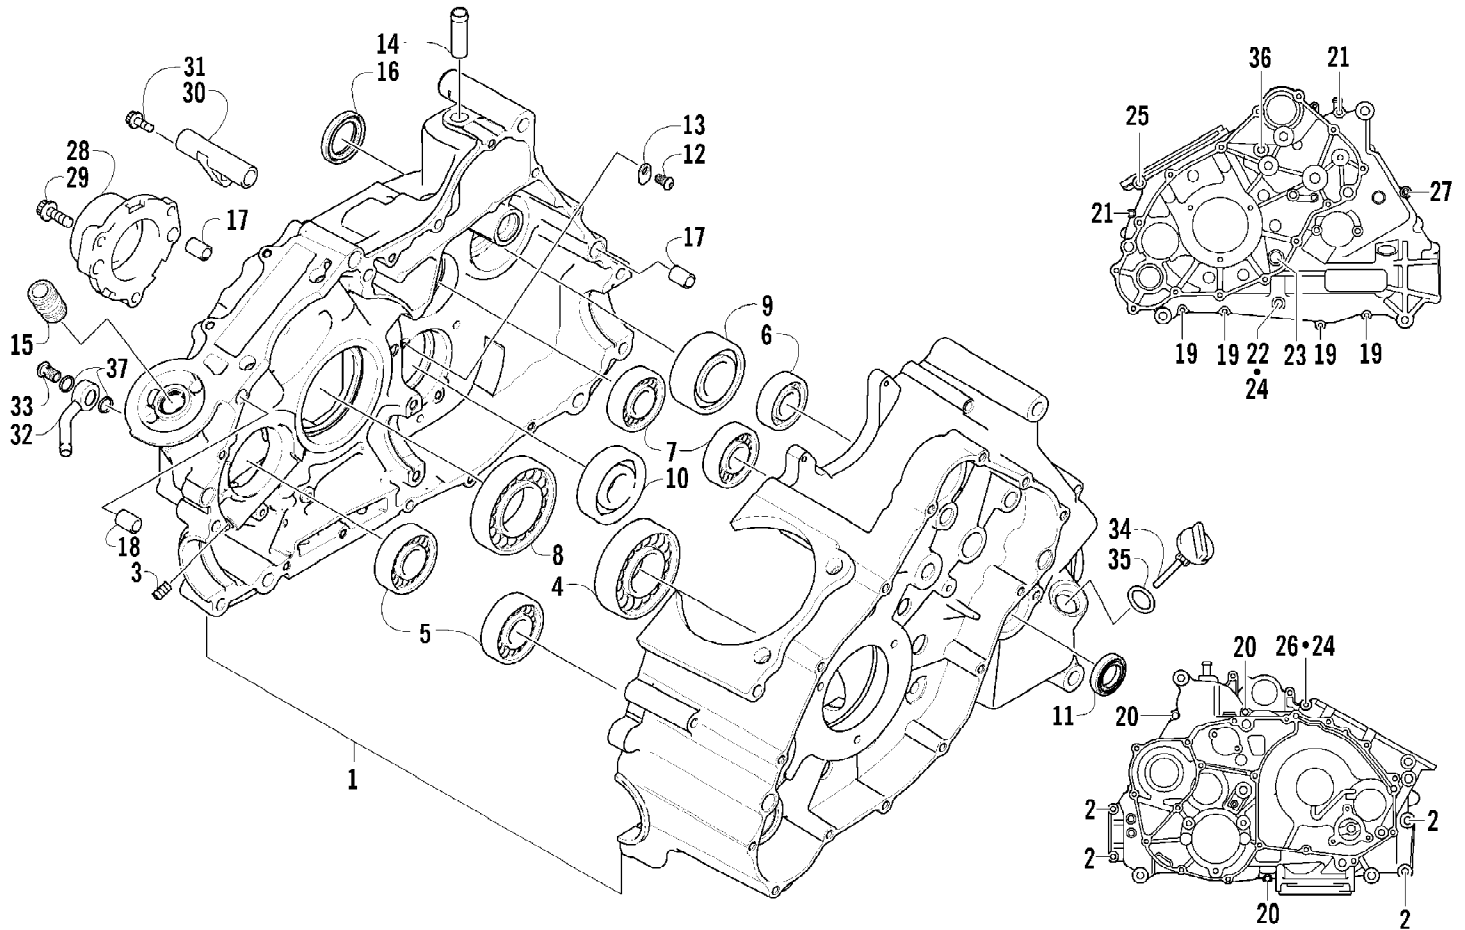


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P83426SQ)07  
 CRANKCASE ASSEMBLY (Up to VIN: 4UF07ATV47T237701)

Page 26 of 30

Ref #	Part Number	Qty	S/P/F	Description
1	0801-056	1	S	Crankcase Assembly (inc. 2-16)
2	8412-850	4		Screw, Cap
3	0801-002	2		Plug
4	0832-003	1	S	Bearing
5	0832-005	2	S	Bearing
6	0832-013	1	S	Bearing
7	0832-014	2	S	Bearing
8	0832-002	1	S	Bearing
9	0832-012	1	S	Bearing
10	0832-015	1	S/P	Bearing
11	0822-052	1		Seal, Countershaft
12	0826-100	2		Screw, Cap
13	0822-010	2	/P	Retainer, Bearing
14	0801-028	1		Pipe, Breather
15	0812-008	1		Union, Oil Filter
16	0830-035	1		Seal, Driveshaft
17	0829-002	5		Pin, Dowel
18	0829-003	1		Pin, Dowel
19	8468-645	4		Screw, Machine
20	8468-655	3		Screw, Machine
21	8468-675	2		Screw, Machine
22	8412-860	1		Screw, Cap
23	0826-017	1		Screw, Cap
24	0830-008	2		Gasket
25	0826-019	1		Screw, Cap
26	0826-018	1		Screw, Cap
27	8468-695	1		Screw, Machine
28	0801-006	1		Housing, Secondary Shaft Bearing
29	0826-105	3		Bolt
30	0801-069	1		Pipe, Breather
31	0826-038	1		Bolt, Breather Pipe
32	0812-028	2		Fitting, Oil Cooler
33	0812-025	2		Bolt, Oil Cooler Fitting
34	0801-005	1		Stick, Oil Level
35	0830-010	1		O-Ring, Oil Level Stick
36	8468-680	1		Screw, Machine
37	0812-026	4		Gasket

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P8947USQ) 07  
CRANKCASE ASSEMBLY (VIN: 4UF07ATV47T237701 up to 4UF07ATV97T270001 and up)

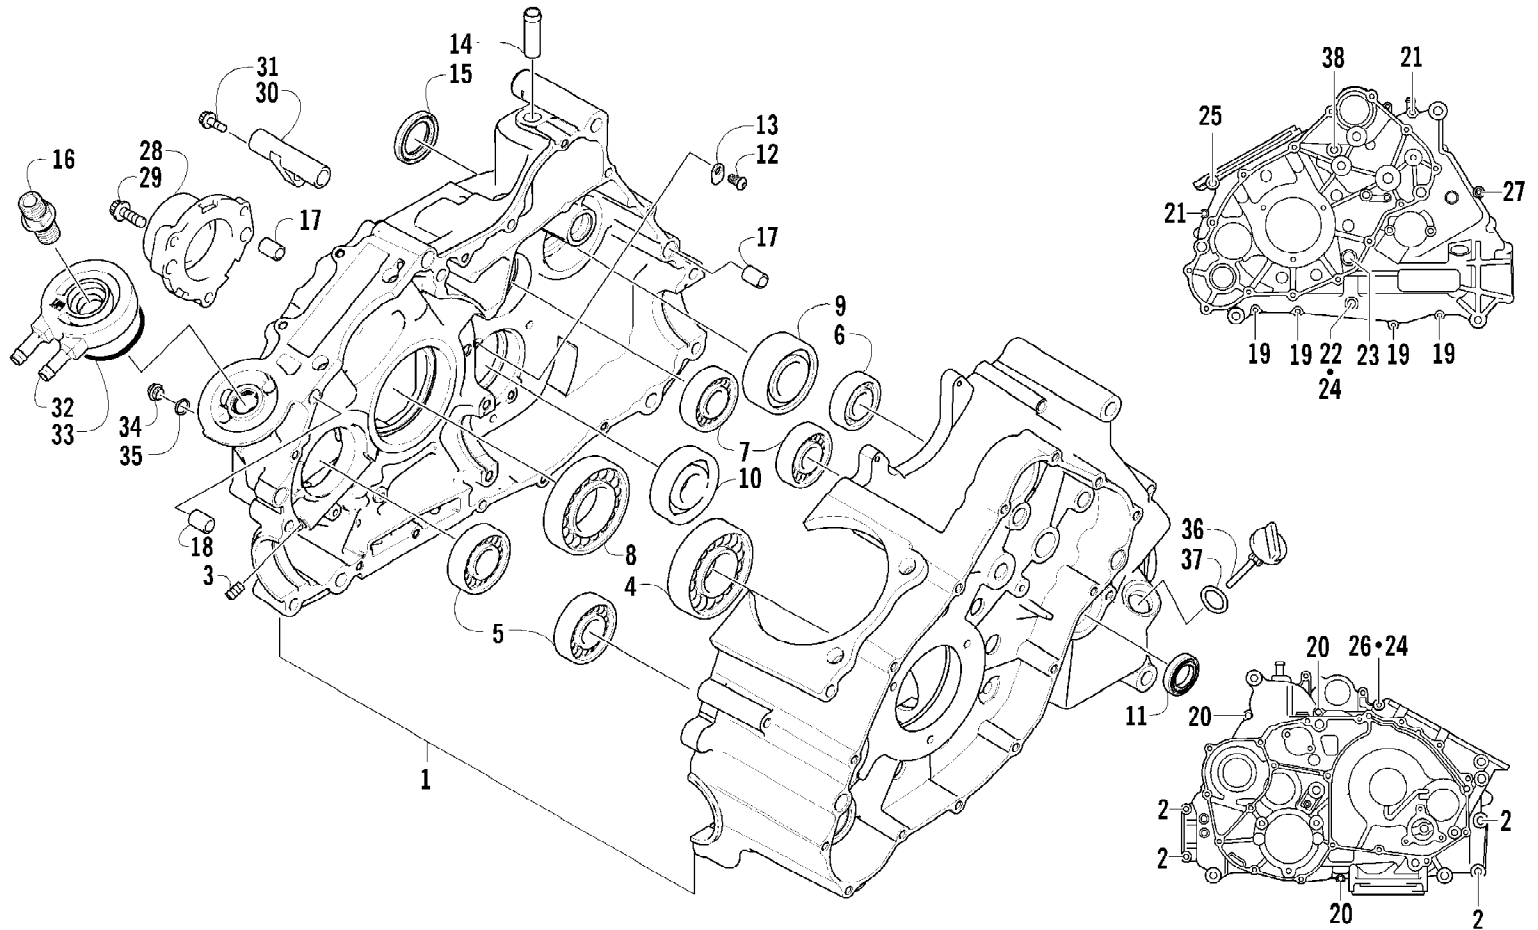


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P8948USQ) 07  
 CRANKCASE ASSEMBLY (VIN: 4UF07ATV47T237701 up to 4UF07ATV97T270001 and up)

Ref #	Part Number	Qty	S/P/F	Description
1	0801-096	1	S	Crankcase Assembly (inc. 2-15)
2	8412-850	4		Screw, Cap
3	0801-002	2		Plug
4	0832-003	1	S	Bearing
5	0832-005	2	S	Bearing
6	0832-013	1	S	Bearing
7	0832-014	2	S	Bearing
8	0832-002	1	S	Bearing
9	0832-012	1	S	Bearing
10	0832-015	1	S/P	Bearing
11	0822-052	1		Seal, Countershaft
12	0826-100	2		Screw, Machine
13	0822-010	2	/P	Retainer, Bearing
14	0801-028	1		Pipe, Breather
15	0830-035	1		Seal, Driveshaft
16	0812-056	1		Union, Oil Filter
17	0829-002	5		Pin, Dowel
18	0829-003	1		Pin, Dowel
19	8468-645	4		Screw, Machine
20	8468-655	3		Screw, Machine
21	8468-675	2		Screw, Machine
22	8412-860	1		Screw, Cap
23	0826-017	1		Screw, Cap
24	0830-008	2		Gasket
25	0826-019	1		Screw, Cap
26	0826-018	1		Screw, Cap
27	8468-695	1		Screw, Machine
28	0801-006	1		Housing, Secondary Shaft Bearing
29	0826-105	3		Screw, Cap
30	0801-069	1		Pipe, Breather
31	0826-038	1		Screw, Machine
32	0812-055	1		Tower, Oil Filter
33	0830-166	1		O-Ring
34	0812-058	2		Plug
35	0812-026	2		Gasket
36	0801-005	1		Stick, Oil Level
37	0830-010	1		O-Ring, Oil Level Stick
38	8468-680	1		Screw, Machine



 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P8342060)  
CRANKCASE ASSEMBLY (VIN: 4UF07ATV97T270001 and above)

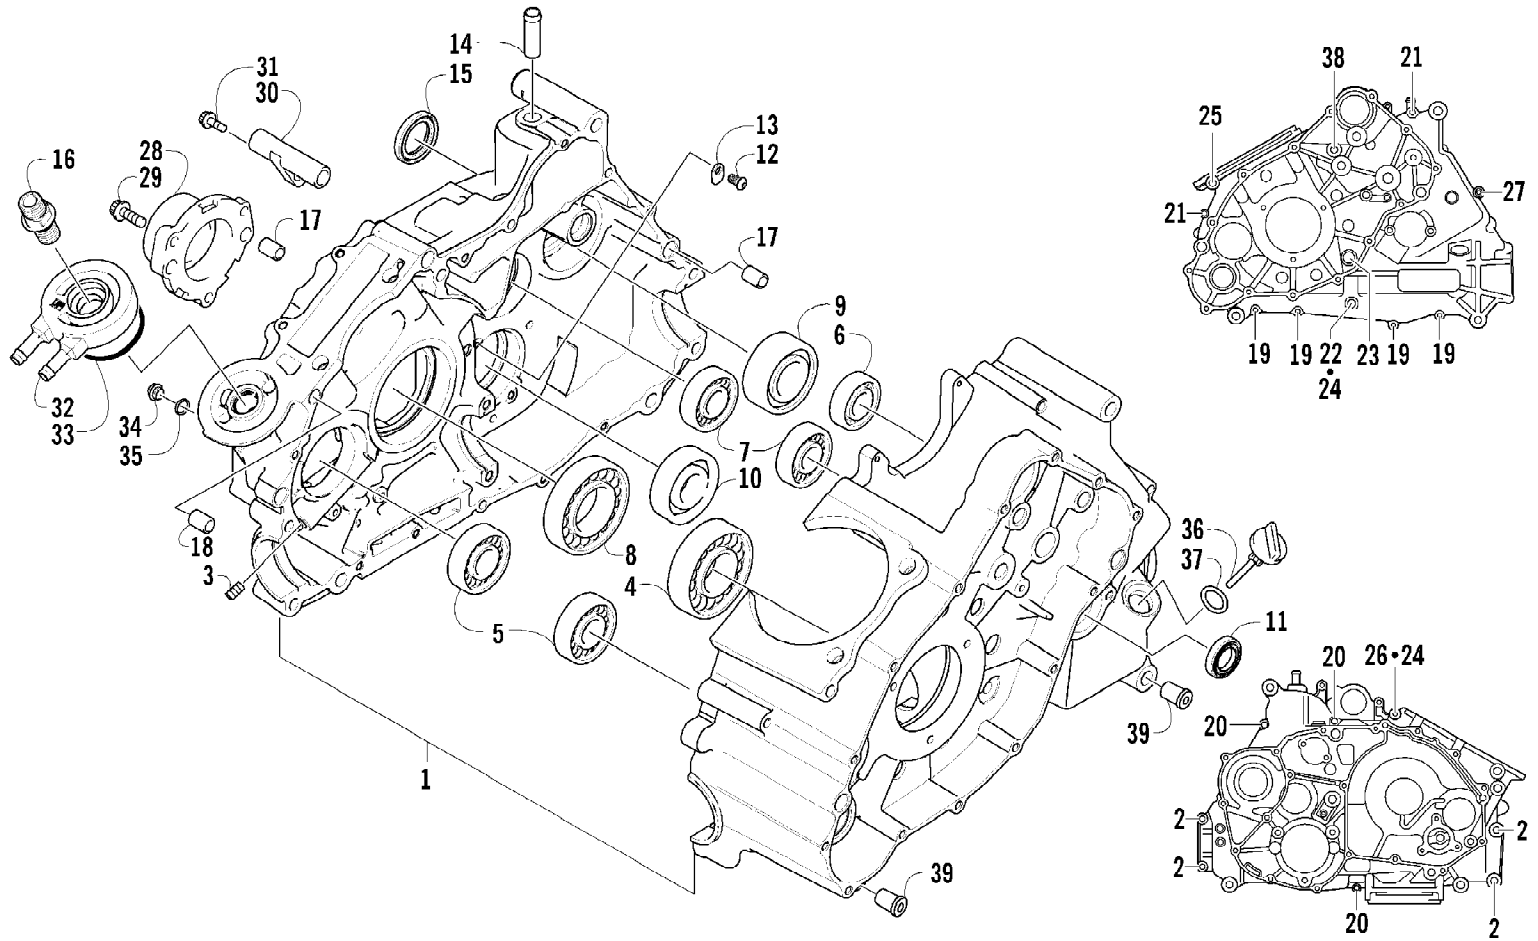


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894BUSQ)07  
 CRANKCASE ASSEMBLY (VIN: 4UF07ATV97T270001 and above)

Page 30 of 30

Ref #	Part Number	Qty	S/P/F	Description
1	0801-093	1	S	Crankcase Assembly (inc. 2-15)
2	8412-850	4		Screw, Cap
3	0801-002	2		Plug
4	0832-003	1	S	Bearing
5	0832-005	2	S	Bearing
6	0832-013	1	S	Bearing
7	0832-014	2	S	Bearing
8	0832-002	1	S	Bearing
9	0832-012	1	S	Bearing
10	0832-015	1	S/P	Bearing
11	0822-052	1		Seal, Countershaft
12	0826-100	2		Screw, Machine
13	0822-010	2	/P	Retainer, Bearing
14	0801-028	1		Pipe, Breather
15	0830-035	1		Seal, Driveshaft
16	0812-056	1		Union, Oil Filter
17	0829-002	5		Pin, Dowel
18	0829-003	1		Pin, Dowel
19	8468-645	4		Screw, Machine
20	8468-655	3		Screw, Machine
21	8468-675	2		Screw, Machine
22	8412-860	1		Screw, Cap
23	0826-017	1		Screw, Cap
24	0830-008	2		Gasket
25	0826-019	1		Screw, Cap
26	0826-018	1		Screw, Cap
27	8468-695	1		Screw, Machine
28	0801-006	1		Housing, Secondary Shaft Bearing
29	0826-105	3		Screw, Cap
30	0801-069	1		Pipe, Breather
31	0826-038	1		Screw, Machine
32	0812-055	1		Tower, Oil Filter
33	0830-166	1		O-Ring
34	0812-058	2		Plug
35	0812-026	2		Gasket
36	0801-005	1		Stick, Oil Level
37	0830-010	1		O-Ring, Oil Level Stick
38	8468-680	1		Screw, Machine
39	0801-108	4	S	Bushing, Engine Mounting

 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894BUSQ) 07  
CRANKSHAFT ASSEMBLY

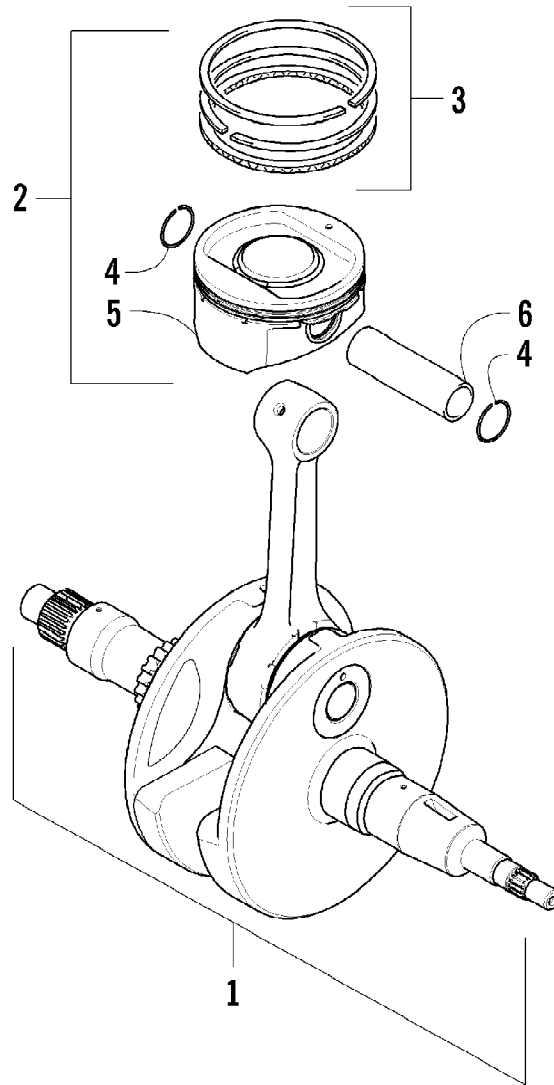

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B26C)07  
CRANKSHAFT ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0805-032	1	S	Crankshaft Assembly
2	0805-035	1	/P	Piston Set (inc. 3-6)
3	0805-011	1		Ring, Piston - Set
4	0831-001	2		Circlip, Piston Pin
5	0805-010	1	S	Piston
6	0805-012	1		Pin, Piston

 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834B16C) 07  
CYLINDER ASSEMBLY

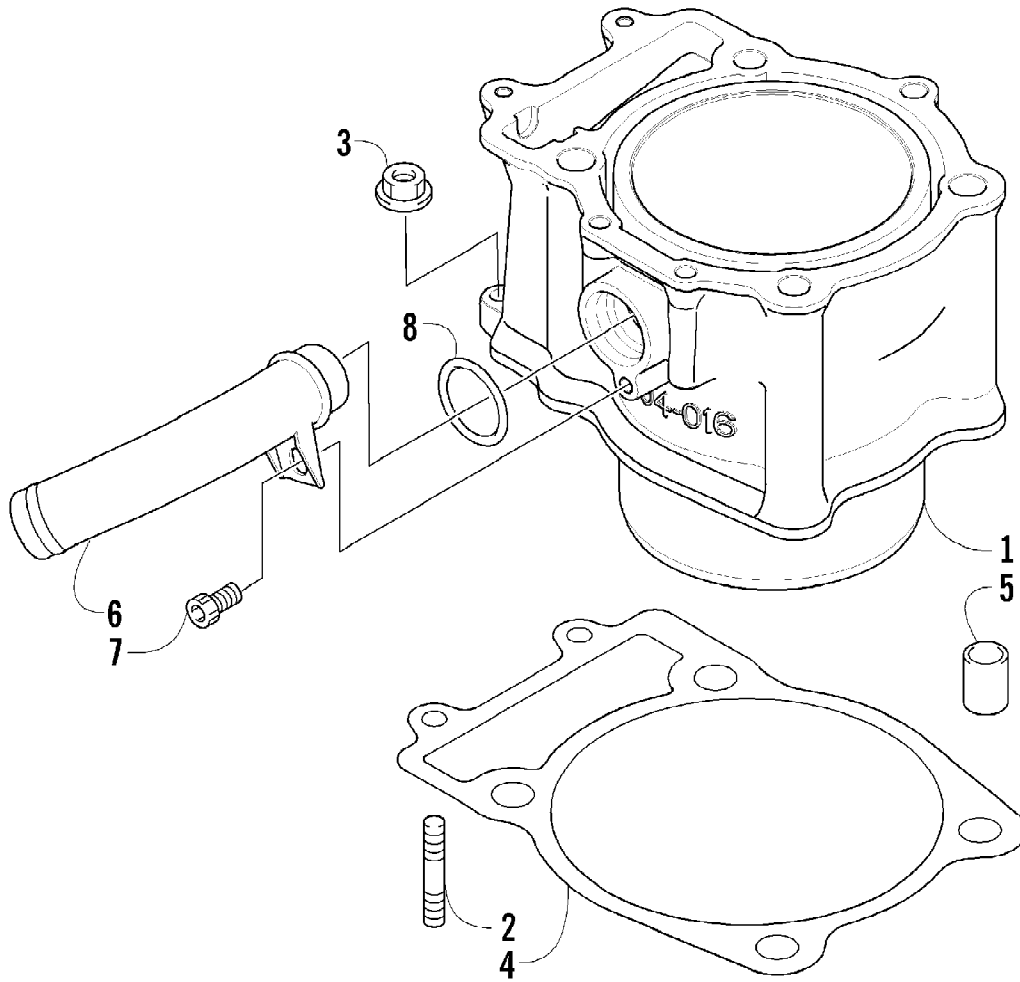

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894BUSQ)07  
CYLINDER ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0804-016	1		Cylinder
2	0827-002	2		Bolt, Stud
3	8424-604	2		Nut
4	0830-084	1		Gasket, Base
5	0829-002	2		Pin, Dowel
6	0804-002	1	S	Union, Water Hose
7	8468-612	1		Screw, Machine
8	0830-007	1		O-Ring

 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B56Q) 07  
CYLINDER HEAD ASSEMBLY

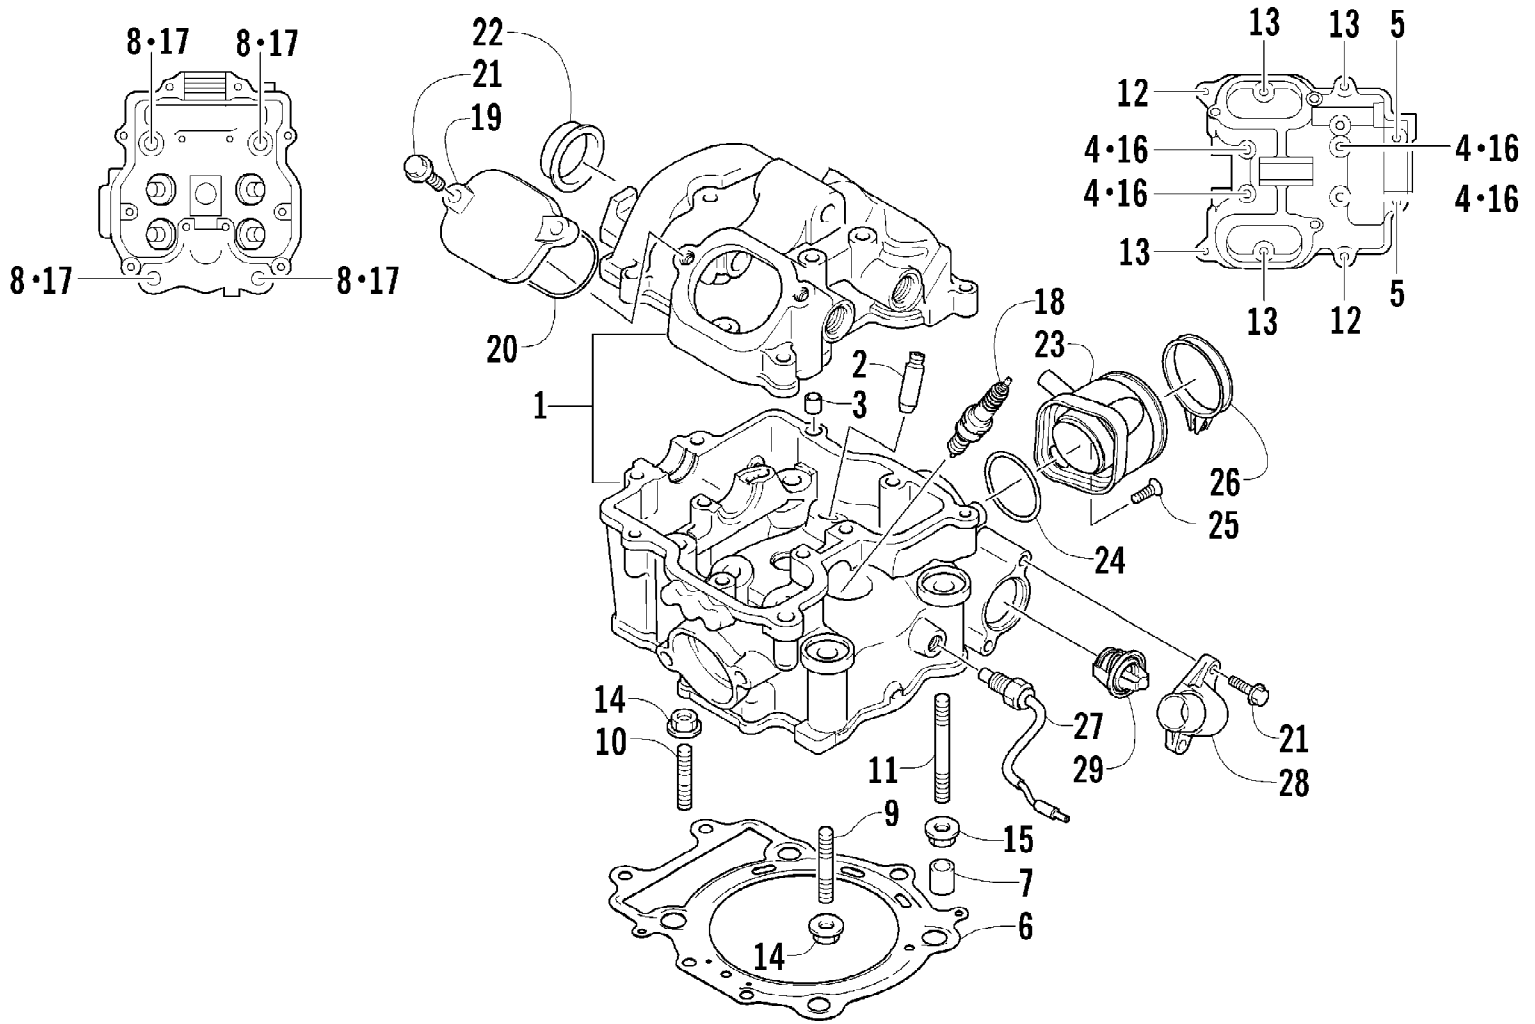

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B6SQ)07  
CYLINDER HEAD ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0808-047	1	F	Head, Cylinder - Assembly (inc. 2-4)
2	0	4	F	Guide, Valve
3	0829-001	2	S	Dowel, Sleeve
4	0826-001	4		Screw, Cap
5	0826-002	2		Screw, Cap
6	0830-124	1	S	Gasket, Cylinder Head
7	0829-002	2		Pin, Dowel
8	0808-037	4	/P	Screw, Cap
9	0827-030	2		Bolt, Stud
10	0827-002	2		Bolt, Stud
11	0827-031	1		Bolt, Stud
12	0826-005	2		Screw, Cap
13	0826-006	4		Screw, Cap
14	8424-604	5		Nut
15	8424-804	1		Nut
16	0830-107	4		Gasket - Seal, Fastener
17	0830-147	4	/P	Washer, Crush
18	0217-727	1	S	Spark Plug (RG6YC)
19	0808-003	2		Cap, Inspection
20	0830-004	2	S	O-Ring
21	0826-007	5		Screw, Cap
22	0808-077	1		Plug, Cylinder Head
23	0570-115	1		Pipe, Intake - Assembly
24	0830-090	1		O-Ring
25	0826-008	2		Screw, Machine
26	0423-066	1		Clamp, Intercooler
27	0808-007	1		Switch, Water Temperature - Assembly
28	0808-008	1		Cover, Thermostat
29	0808-078	1		Thermostat




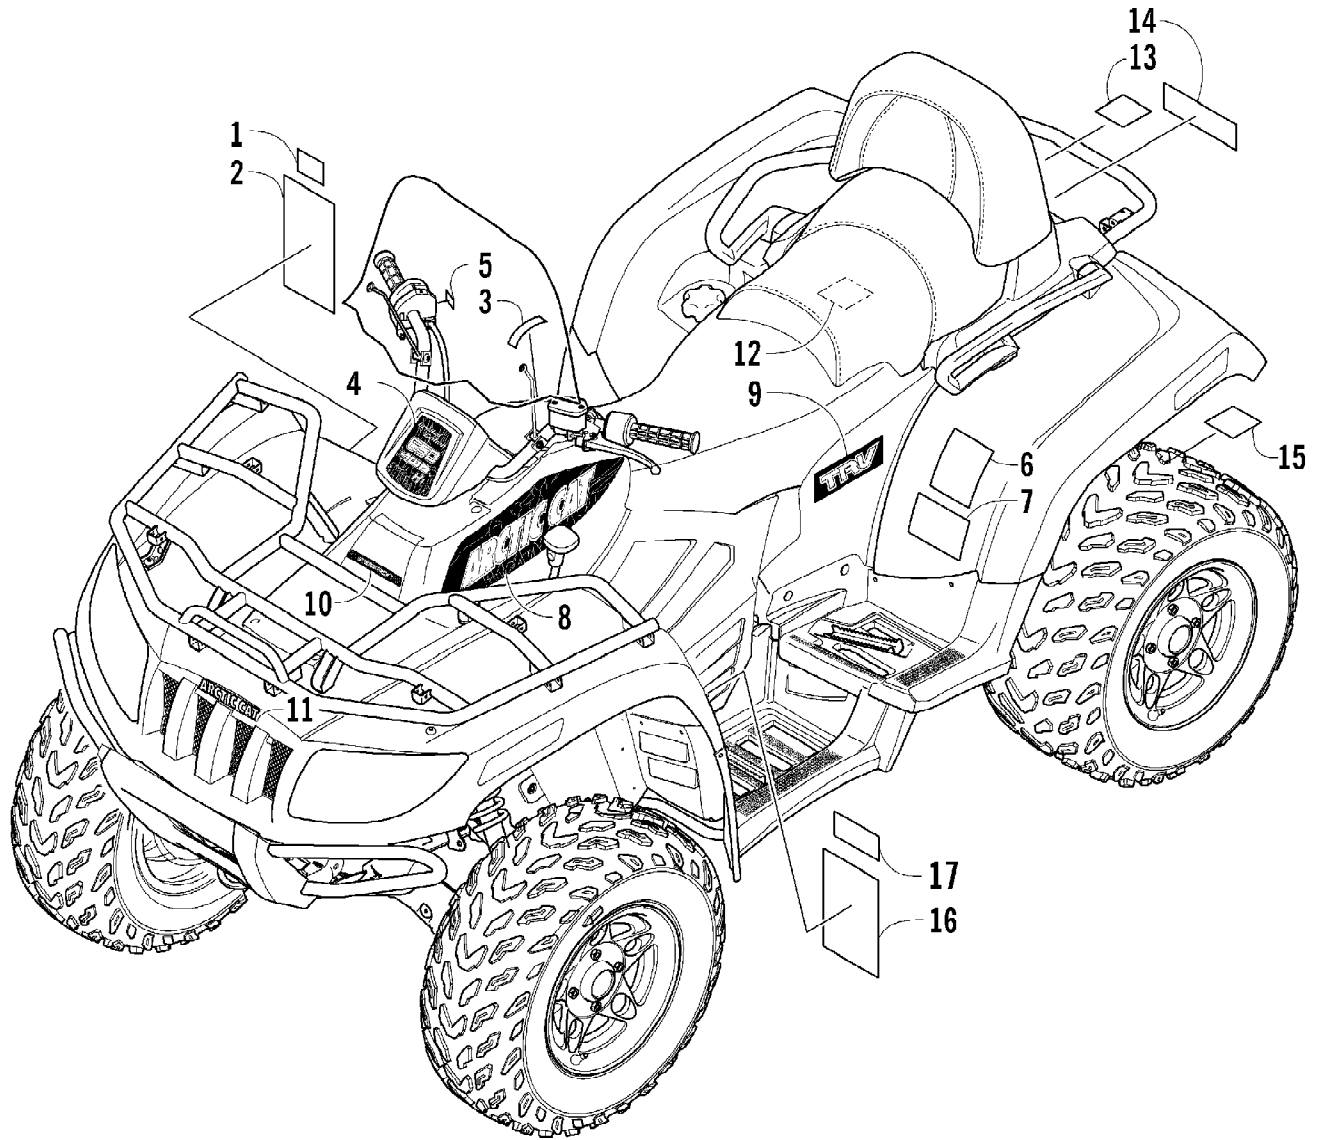 

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B86Q)07  
 DECALS

Ref #	Part Number	Qty	S/P/F	Description
1	0411-666	1	F	Decal, Warning - Reverse/Pre-Ride
2	0411-894	1		Decal, Warning - Hill
3	0411-426	1		Decal, Warning - Clutch Cover
4	1411-268	1		Decal, Instrument Pod
5	0411-966	1		Decal, Warning - Differential Lock
6	0411-833	1		Decal, Passenger
7	0411-832	1		Decal, Warning - Tire Pressure
8	1411-366	1		Decal, Side - Upper Right
8	1411-367	1		Decal, Side - Upper Left
9	1411-267	2		Decal, Graphic - TRV
10	1411-050	1	/P	Decal, "Speedrack"
11	1411-525	1		Decal, Front
12	1411-269	1		Decal, Warning - Passenger
13	1411-251	1		Decal, Warning - Seat/Passenger
14	0411-814	1	/P	Decal, "Arctic Cat" - White
15	1411-077	1		Decal, Warning - Towing
16	0411-753	1	F	Decal, Warning - Age/General
17	1411-574	1		Decal, Warning - Off-Road Only

 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B06Q) 07  
DRIVE TRAIN ASSEMBLY

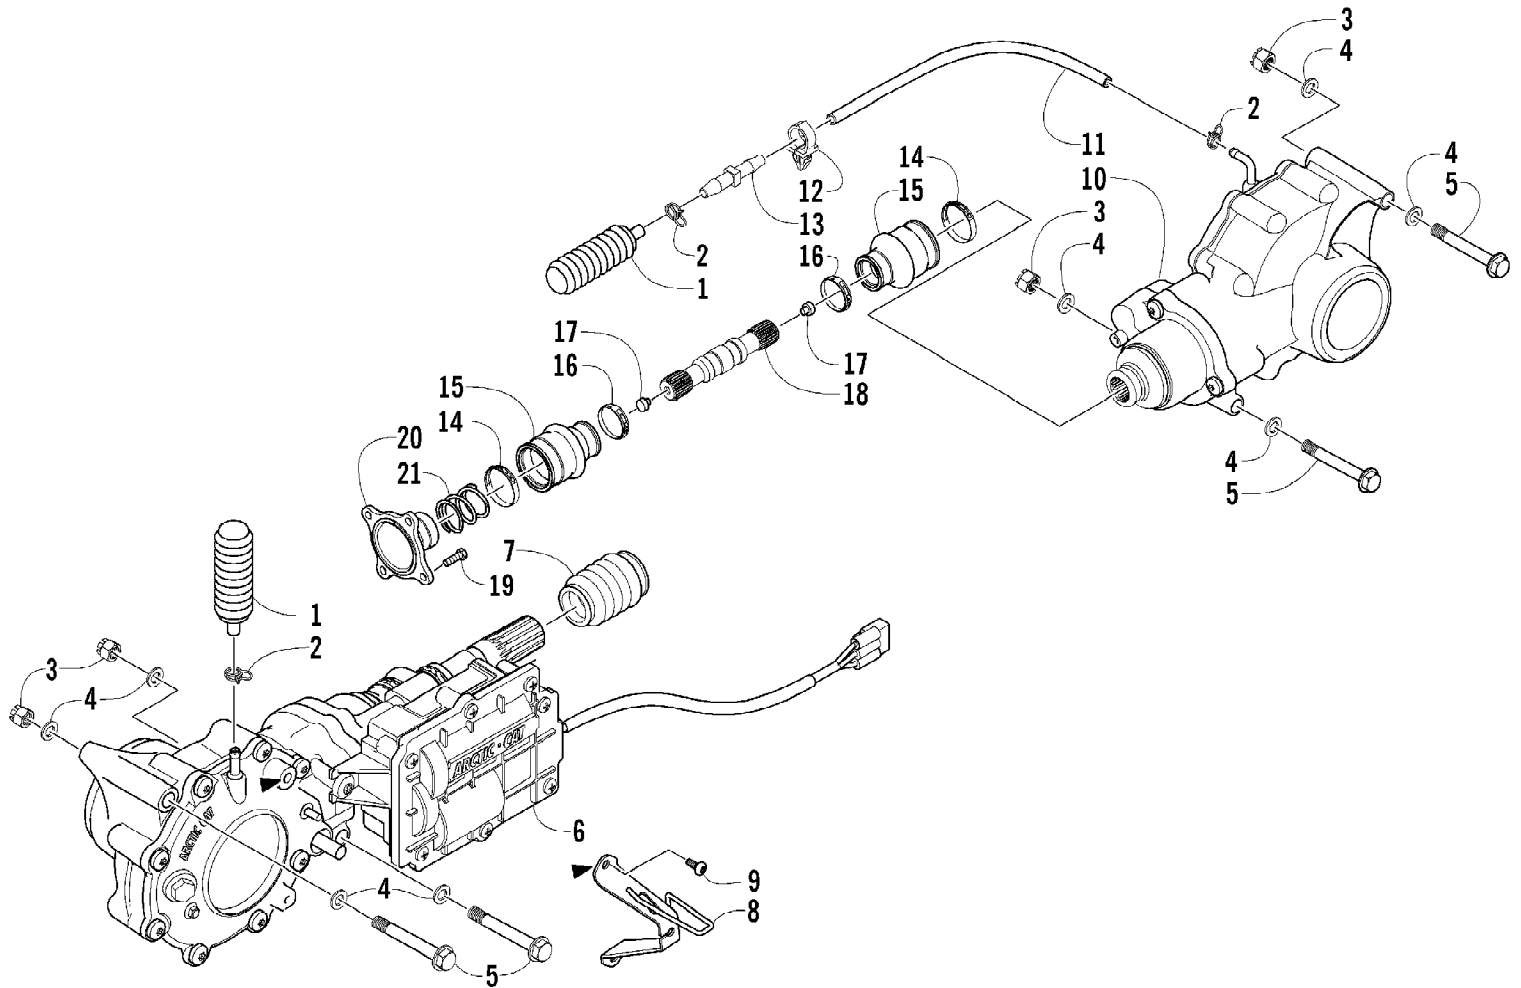

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894206Q)07  
 DRIVE TRAIN ASSEMBLY Page 4 of 6

Ref #	Part Number	Qty	S/P/F	Description
1	0402-147	2	S	Bladder, Gearcase
2	0423-315	4		Clamp, Fitting
3	8428-002	4		Nut, Lock
4	0423-426	10		Washer
5	0423-404	4		Screw, Cap
6	1502-089	1		Gearcase, Front
7	0402-966	1		Boot, Shaft
8	0502-500	1		Plate, Cable
9	0423-396	2		Screw, Self-Tapping
10	1502-079	1	S	Gearcase, Rear
11	0410-048	AR	S	Hose, Vent
12	0623-101	1		Clip, Routing - Snap-In
13	0470-462	1		Fitting, Vent
14	0423-393	2		Clamp, Boot
15	0402-985	2	/P	Boot
16	0423-411	2		Clamp, Boot
17	0673-618	2	/P	Bumper, Propeller Shaft
18	1402-233	1		Shaft, Propeller
19	8408-820	4	/P	Screw, Cap
20	0402-950	1		Flange, Output
21	1402-026	1		Spring

 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834BUSQ)07  
ENGINE AND EXHAUST

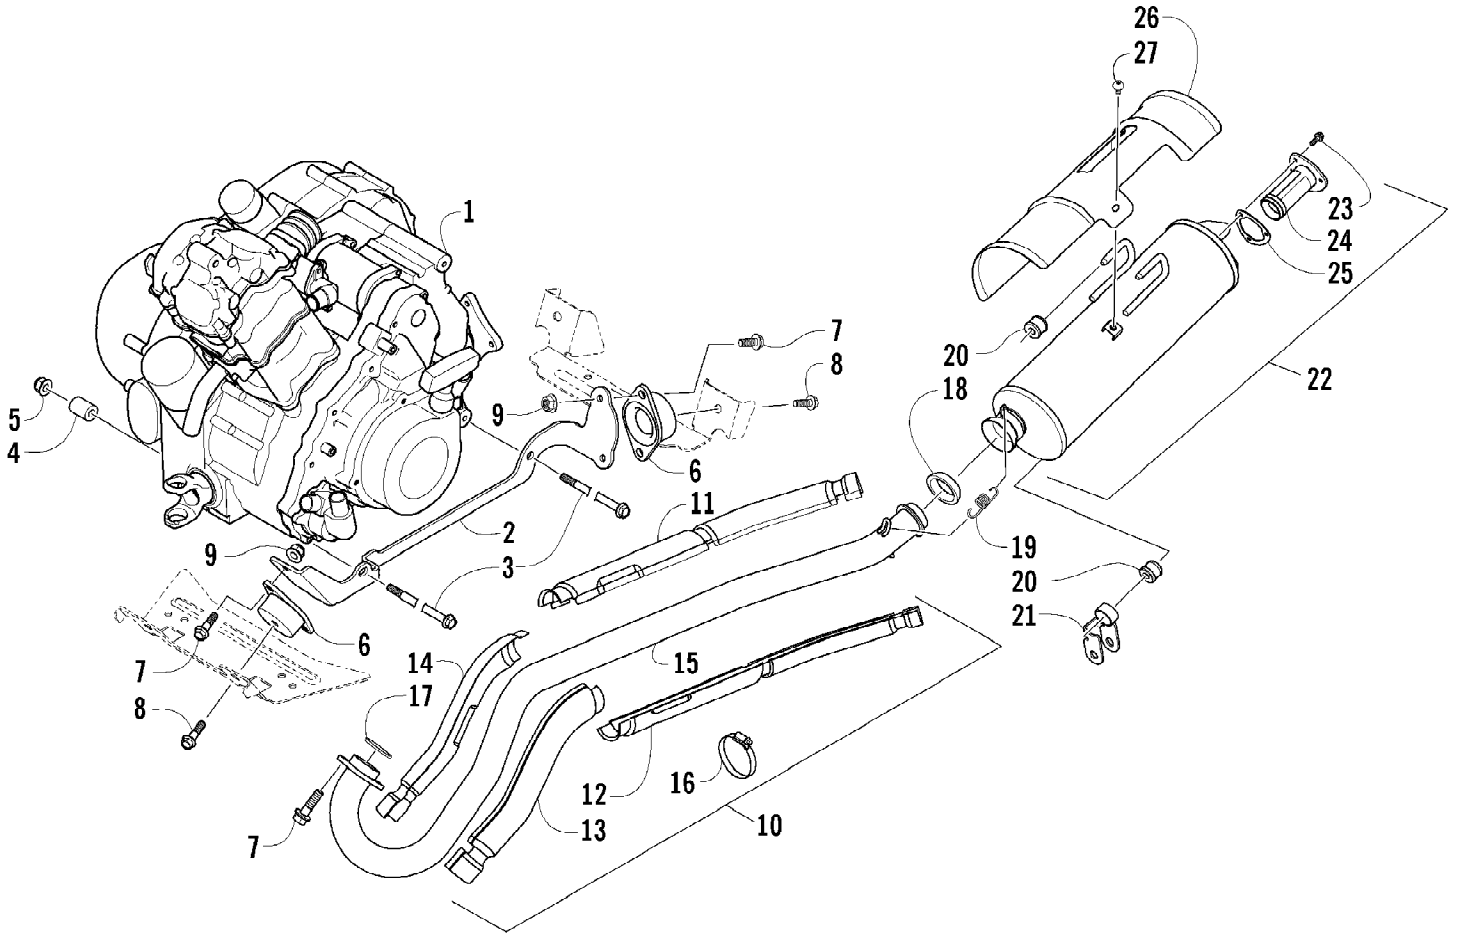

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P8942USQ)07  
ENGINE AND EXHAUST

Ref #	Part Number	Qty	S/P/F	Description
1	0800-025	1	S	Engine
1	0800-051	1	S/F	Engine w/o Recoil
2	1506-740	1		Bracket, Engine - Right
2	1506-741	1		Bracket, Engine - Left
3	0423-405	2		Screw, Cap
4	0423-042	1	S	Spacer, Engine
5	8428-002	2		Nut, Lock
6	2406-065	4		Mount, Rubber - Engine
7	8408-820	10	/P	Screw, Cap
8	8408-012	4		Screw, Cap
9	8432-802	8		Nut
10	0512-363	1		Pipe, Exhaust - Assembly (inc. 11-16)
11	0412-355	1		Shield, Exhaust Pipe - Lower - Rear
12	0412-354	1		Shield, Exhaust Pipe - Upper - Rear
13	0412-349	1		Shield, Exhaust Pipe - Inner - Front
14	0412-348	1		Shield, Exhaust Pipe - Outer - Front
15	0512-362	1		Pipe, Exhaust
16	0423-317	4	/P	Hose Clamp
17	0412-338	1	/P	Gasket, Exhaust Pipe
18	0412-375	1	/P	Seal, Exhaust
19	0612-668	2	/P	Spring, Extension
20	0412-215	3	S	Bushing, Exhaust Pipe
21	1506-732	1		Channel, Muffler Support
22	0512-355	1	/P	Muffler - Assembly (inc. 23-25)
23	8408-616	3		Screw, Cap
24	0512-219	1	/P	Arrester, Spark - Assembly
25	0412-313	1		Gasket, Spark Arrester
26	0412-373	1	/P	Cover, Muffler
27	8477-610	3		Screw, Machine

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P8342160) 07  
FRAME AND RELATED PARTS

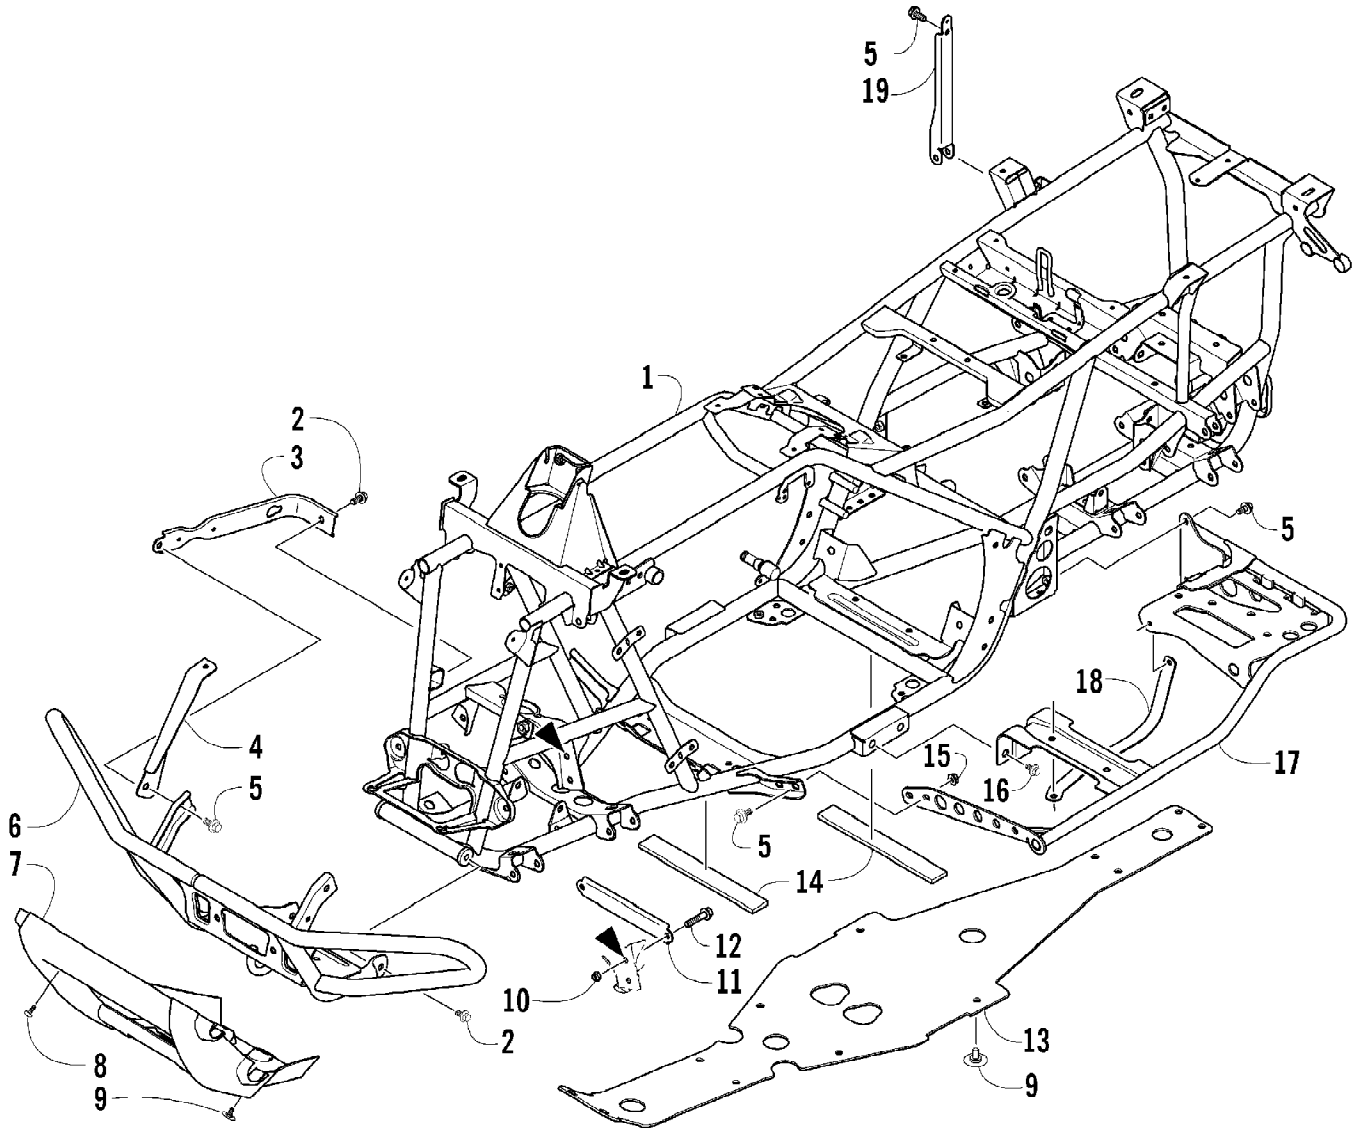


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894BUSQ)07  
FRAME AND RELATED PARTS

Page 4 of 6

Ref #	Part Number	Qty	S/P/F	Description
1	2506-047	1		Frame, Main
2	8409-020	4	/P	Screw, Cap
3	1506-596	1	/P	Channel, Bumper Mounting - Right
4	1506-562	1		Bracket, Mounting - Bumper - Right
4	1506-563	1		Bracket, Mounting - Bumper - Left
5	8408-816	11		Screw, Cap
6	1506-855	1	/P	Bumper
7	1406-360	1		Grille, Bumper
8	0423-419	2		Screw, Machine
9	0423-101	16		Screw, Body
10	8428-002	2		Nut, Lock
11	1506-429	1	S	Brace, A-Arm
12	8409-025	2		Screw, Cap
13	2406-091	1		Panel, Belly
14	0406-289	2		Pad, Frame
15	8424-802	4		Nut, Flange
16	8409-016	4		Screw, Cap
17	1506-848	1		Footrest - Right
17	1506-849	1		Footrest - Left
18	2406-216	1		Strap, Footrest - Right
18	2406-217	1		Strap, Footrest - Left
19	1506-548	1		Channel, Shock Support



 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P8942560) 07  
FRONT BODY PANEL ASSEMBLY

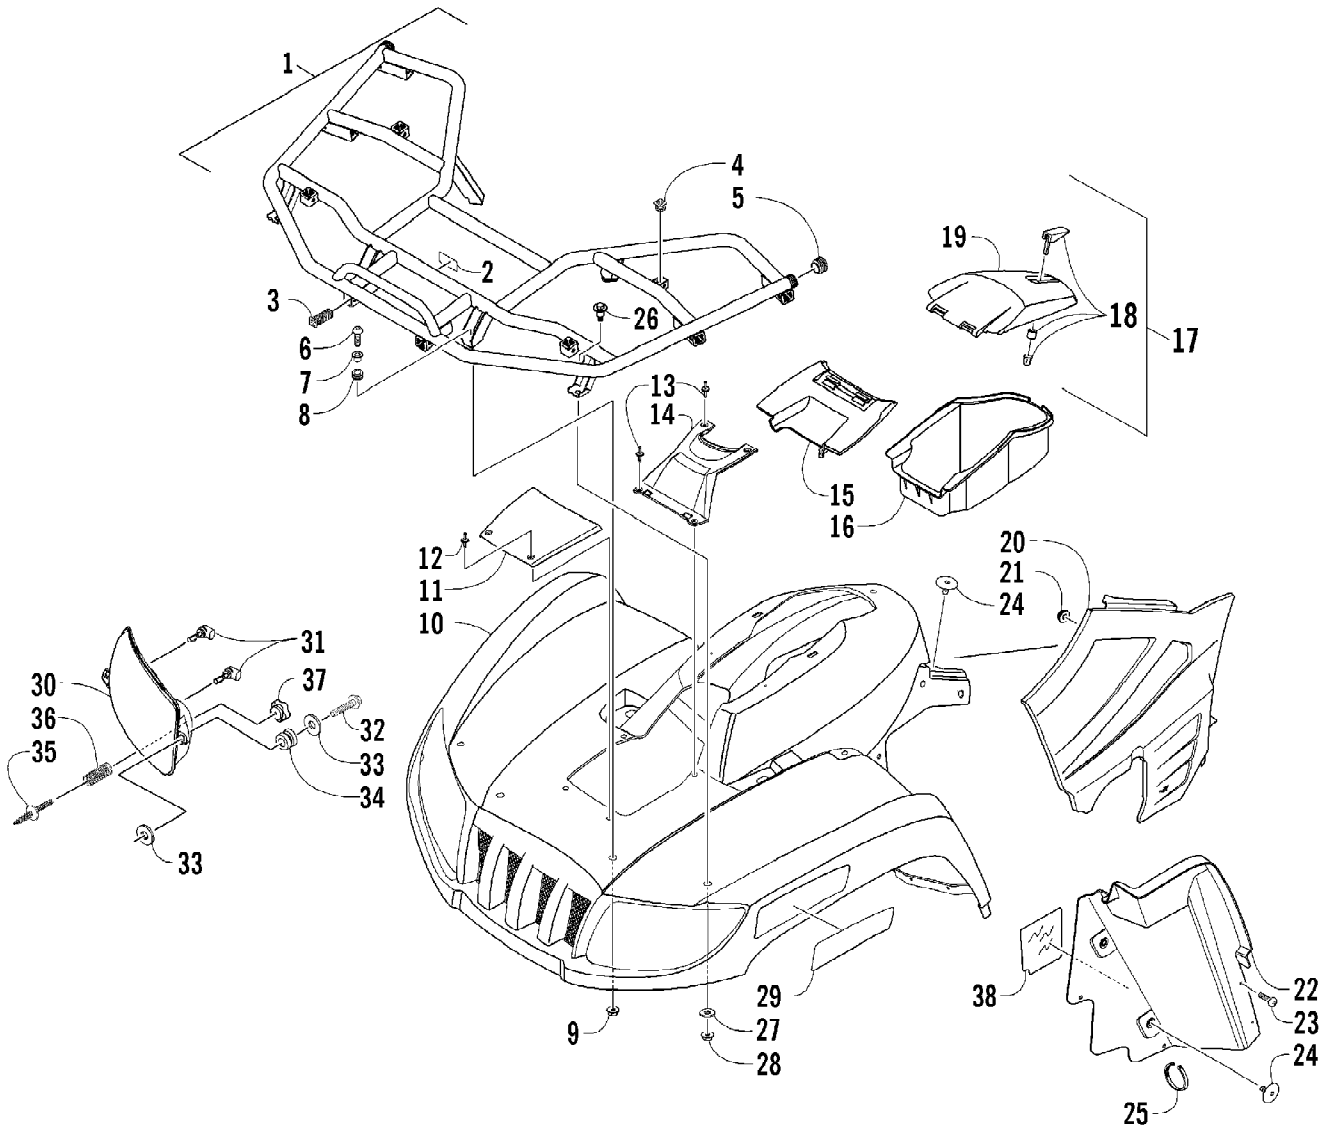


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P89426SQ)07  
FRONT BODY PANEL ASSEMBLY

Page 46 of 50

Ref #	Part Number	Qty	S/P/F	Description
1	0541-272	1		Rack, Front - Assembly (inc. 2-5)
2	0411-576	1		Decal, Warning - Front Rack Load
3	2406-014	6		Bushing, Rack
4	0441-592	4	/P	Bushing, Rack
5	1441-049	2		Plug, Rack
6	8410-830	4		Screw, Machine
7	0423-669	4		Spacer
8	0423-465	4		Grommet
9	8432-802	4		Nut, Lock
10	0518-009	1		Panel, Fender - Front (inc. 29)
11	1406-358	1		Cover, Access
12	0423-535	2		Rivet, Reinstallable
13	0623-362	4		Rivet, Reinstallable
14	1406-484	1		Cover, Steering Post
15	0470-513	1		Cover, Storage Box
16	1406-573	1		Box, Storage
17	2506-234	1		Lid, Storage Box w/Latch (inc. 18-19)
18	1406-599	1		Latch, Storage Box
19	0470-514	1		Lid, Storage Box
20	2406-324	1		Panel, Side - Lower - Right
20	2406-325	1		Panel, Side - Lower - Left
20	2406-421	1	F	Panel, Side - Lower - Left
21	0423-678	8		Grommet
22	1406-354	1		Panel, Splash - Right
22	2506-383	1	/P	Panel, Splash - Left (inc.38)
23	0423-719	4		Screw, Self-Tapping
24	0423-101	5		Screw, Body
25	0123-788	AR	/P	Cable Tie - 7.5 in.
26	0423-654	2		Screw, Shoulder
27	8050-222	2	/P	Washer
28	0423-540	2		Nut, Lock
29	0411-818	1		Decal, Reflector - Front - Right
29	0411-819	1		Decal, Reflector - Front - Left
30	0509-034	1	S	Headlight Assembly - Right (inc. 31)
30	0509-035	1		Headlight Assembly - Left (inc. 31)
31	0409-055	4		Bulb, Headlight
32	0623-785	4		Screw, Self-Tapping
33	8050-217	8	/P	Washer
34	0423-447	4		Grommet
35	0423-514	2		Stud, Adjuster - Headlight
36	0423-522	2		Spring, Adjuster
37	0423-513	2		Knob, Adjuster
38	0412-404	1		Shield, Heat

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P8341760) 07  
FRONT DRIVE GEARCASE ASSEMBLY

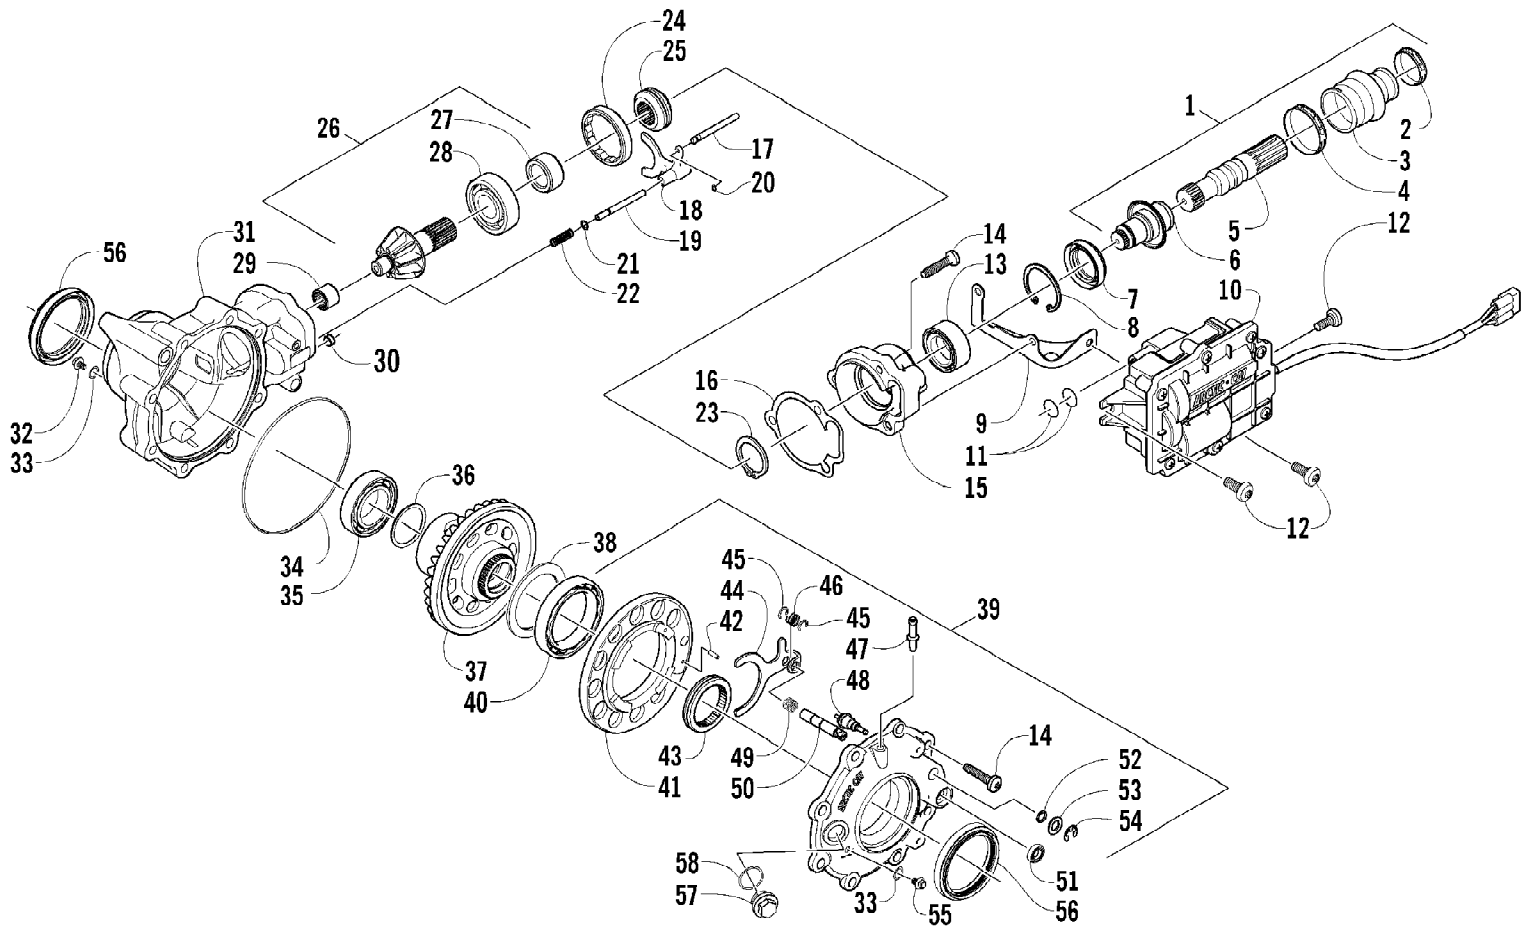


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894860) 07  
FRONT DRIVE GEARCASE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
	1502-089	1		Complete Front Gearcase Assembly
1	1502-083	1		Shaft, Propeller - Assembly (inc. 2-6)
2	0423-411	1		Clamp, Boot
3	0402-985	1	/P	Boot, Propeller Shaft
4	0423-393	1		Clamp, Boot
5	1402-045	1		Shaft, Output
6	1502-085	1	/P	Shaft, Input
7	1402-011	1		Seal
8	0423-423	1		Ring, Retaining
9	0502-347	1		Bracket, Actuator
10	0502-579	1		Actuator (inc. one No. 11)
11	0423-498	2	S	O-Ring
12	0423-396	3		Screw, Self-Tapping
13	1402-043	1		Bearing
14	0423-118	11		Screw, Self-Tapping
15	0502-528	1	/P	Housing, Pinion
16	0402-947	1		Gasket, Flange
17	0402-997	1		Shaft, Selector
18	0402-998	1		Fork, Selector
19	0402-417	1		Shaft, Shuttle
20	0423-402	1		Ring, Retaining
21	0423-147	1		O-Ring
22	0402-999	1		Spring, Return
23	0423-417	1		Ring, Retaining
24	0402-357	1		Collar, Lock
25	0402-413	1		Coupler, Drive
26	0502-783	1		Gear, Pinion - Assembly - 10T (inc. 27-28)
27	0402-336	1		Collar, Retaining
28	0402-327	1		Bearing
29	0402-328	1		Bearing
30	0402-411	1		Pin, Dowel
31	0502-514	1		Housing, Gearcase
32	1402-210	1	/P	Plug, Magnetic (inc. one No. 33)
33	0423-153	2		O-Ring
34	0423-149	1		O-Ring
35	0402-393	1		Bearing
36	0402-405	AR		Shim
36	0402-406	AR		Shim
36	0402-407	AR		Shim
36	0402-408	AR		Shim
36	0402-409	AR		Shim
37	0502-851	1		Gear, Ring - 36T
38	1402-074	AR		Shim
38	1402-075	AR		Shim
38	1402-076	AR		Shim
38	1402-077	AR		Shim
38	1402-078	AR		Shim
39	1502-097	1		Cover, Gearcase (inc. one No. 33, 40-55, and one No. 56)
40	1402-053	1		Bearing
41	0502-413	1		Flange, Bearing
42	1402-079	1		Pin, Parallel

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834206Q)07  
 FRONT DRIVE GEARCASE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
43	1402-042	1		Collar, Sliding
44	1402-054	1		Fork
45	1402-058	2		Ring, Retaining
46	1402-057	1		Spring
47	1402-104	1		Fitting
48	0402-419	1		Switch, Indicator
49	1402-063	1		Spring
50	1402-055	1		Shaft, Lock
51	1402-056	1		Seal
52	0423-133	1		O-Ring
53	0423-132	1		Washer
54	0423-424	1		Ring, Retaining
55	1402-211	1		Plug, Oil Level (inc. one No. 33)
56	1402-441	2	S	Seal
57	0402-333	1	/P	Plug, Fill (inc. 58)
58	0423-154	1		O-Ring

 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834B06C) 07  
FRONT SUSPENSION ASSEMBLY

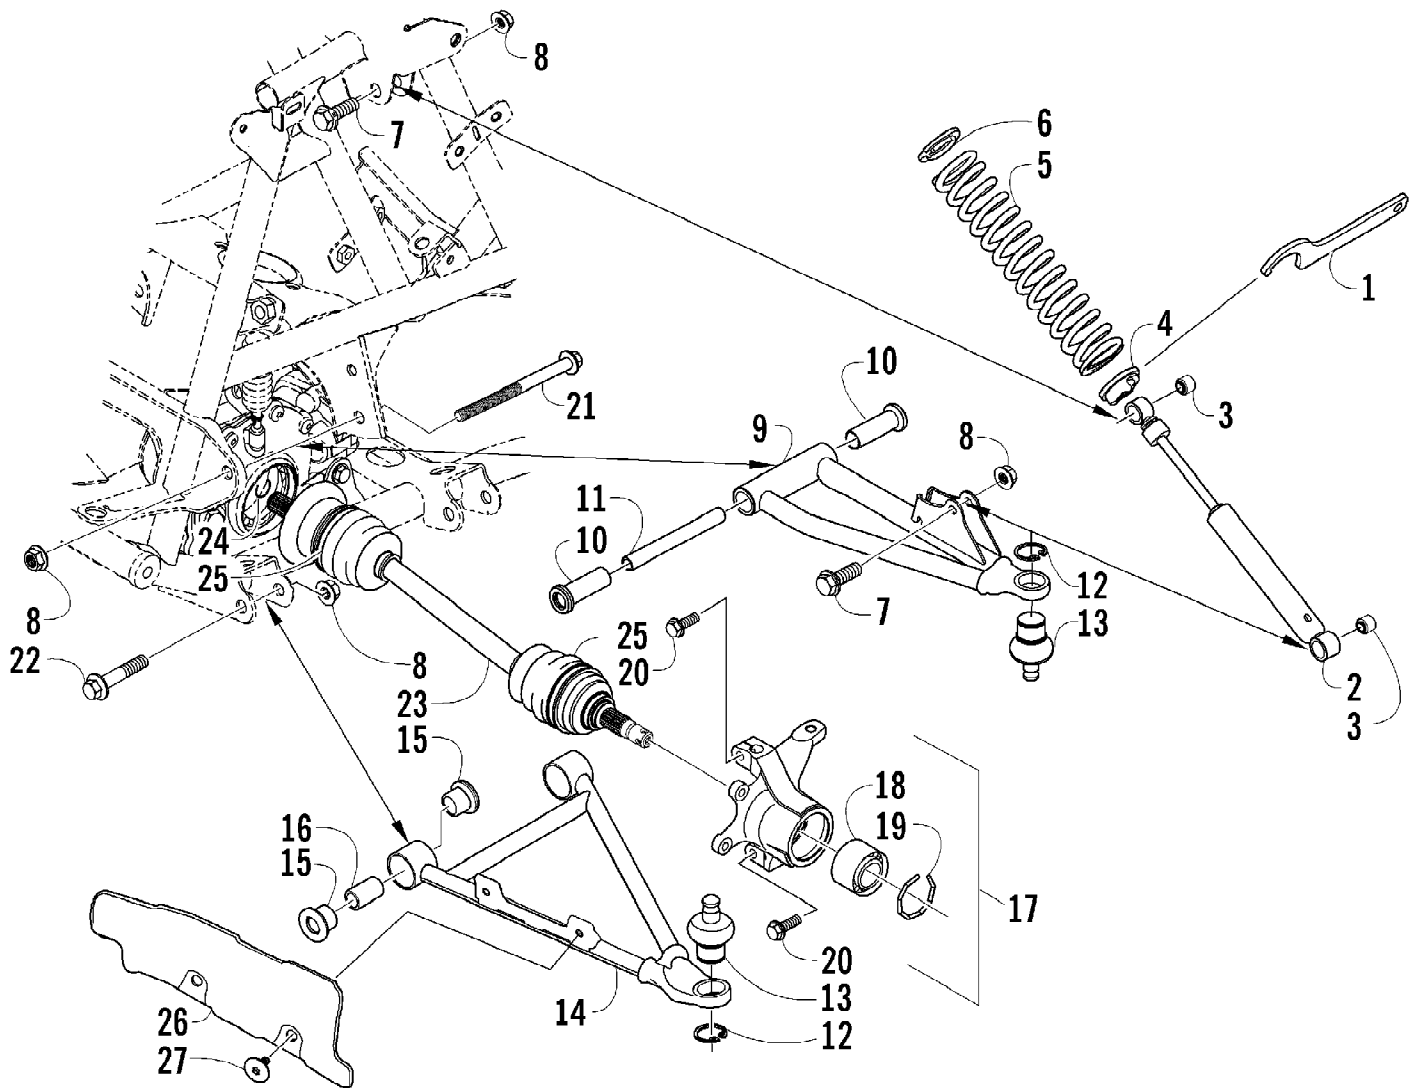

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894BUSQ)07  
FRONT SUSPENSION ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0441-587	1		Wrench, Spanner
2	0403-176	2		Shock Absorber - Front (inc. 3)
3	0403-182	4		Bushing, Double-Bonded
4	0403-102	2		Cam, Spring Adjuster
5	0503-318	2		Spring, Shock Absorber
6	1603-889	2	/P	Retainer, Spring
7	8409-040	4		Screw, Cap
8	8428-002	10		Nut, Lock
9	0503-272	1	S	A-Arm, Upper Right (inc. 10-13)
9	0503-273	1	S	A-Arm, Upper Left (inc. 10-13)
10	0403-081	4	S	Bushing
11	0403-080	2		Collar
12	0423-009	4	/P	Clip, Ball Joint
13	0405-115	4	/P	Ball Joint - Front
14	0503-342	1	S	A-Arm, Lower Right (inc. 12-13 and 15-16)
14	0503-343	1	S	A-Arm, Lower Left (inc. 12-13 and 15-16)
15	0403-115	8	S	Bushing
16	0403-114	4	S	Collar
17	0505-460	1		Knuckle - Assembly - Right (inc. 18-19)
17	0505-461	1	S	Knuckle - Assembly - Left (inc. 18-19)
18	1402-027	2	S/P	Bearing, Wheel Hub
19	0423-423	2		Ring, Retaining
20	8409-030	4		Screw, Cap
21	0423-334	2		Screw, Cap
22	8409-075	4		Screw, Cap
23	0502-812	1	S	Axle, Drive - Front - Right (inc. 24-25)
23	0502-813	1	S	Axle, Drive - Front - Left (inc. 24-25)
24	1441-109	2	S	Clip, Retaining
25	0436-276	2	S	Repair Kit, Boot
26	1406-034	1		Guard, Boot - Right
26	1406-035	1		Guard, Boot - Left
27	0423-545	4	/P	Screw, Body

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B26Q) 07  
GAS TANK ASSEMBLY

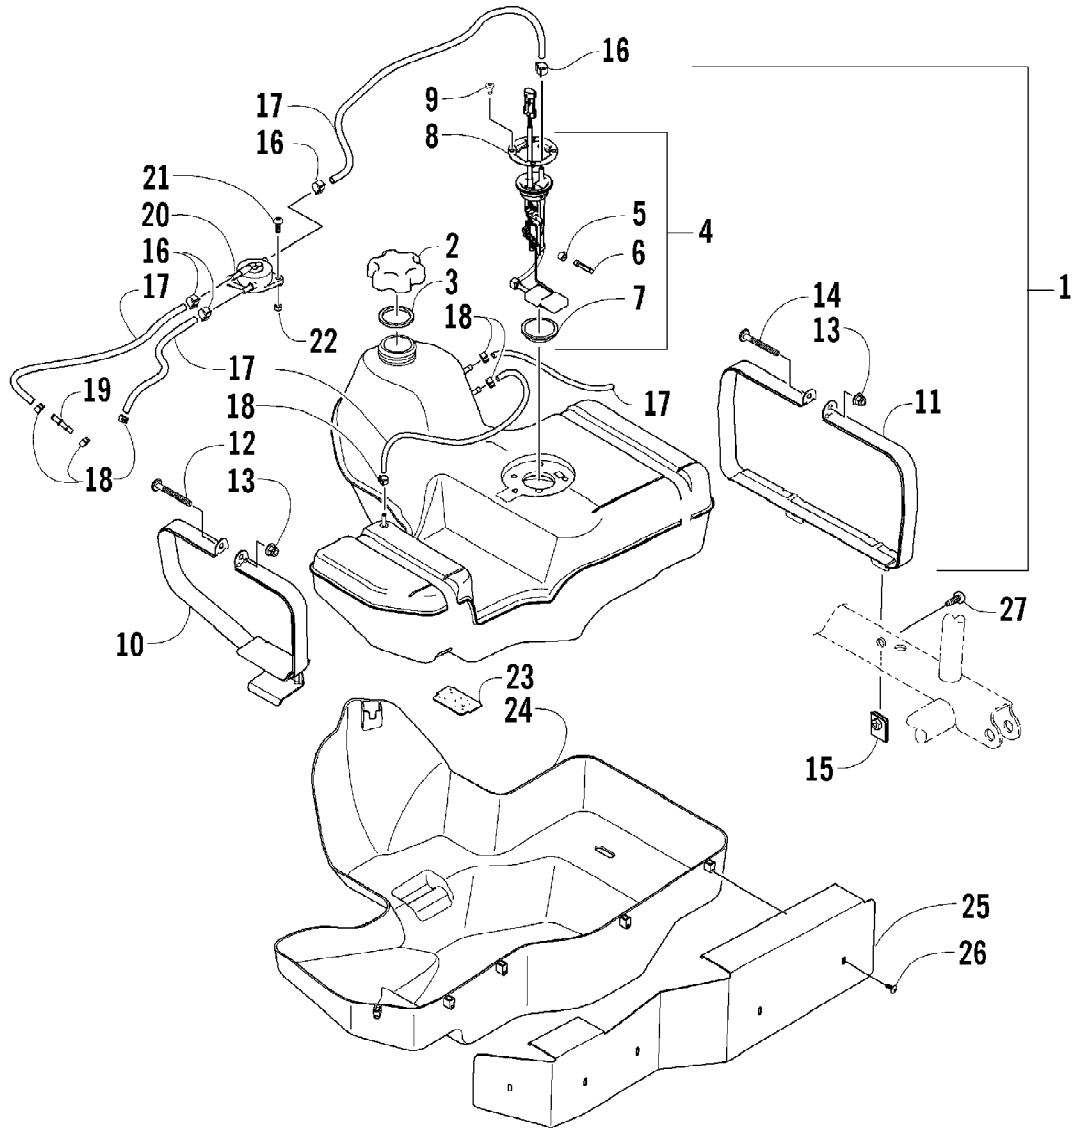



2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B16Q)07  
GAS TANK ASSEMBLY

Page 13 of 13

Ref #	Part Number	Qty	S/P/F	Description
1	0570-148	1	S	Tank, Gas - Assembly w/Straps (inc. 2-14)
2	0470-438	1	/P	Cap, Gas Tank (inc. 3)
3	0109-733	1	/P	Gasket, Gas Tank Cap
4	0570-114	1	S/P	Sensor, Fuel Level (inc. 5-7)
5	0423-603	1		Clamp, Hose
6	0470-475	1		Filter, Fuel
7	0470-521	1		Seal, Fuel Level Sensor
8	0470-639	1	/P	Plate, Mounting - Fuel Level Sensor
9	1623-158	4		Screw, Plastite
10	0570-168	1		Strap, Mounting - Gas Tank - Front
11	0570-169	1		Strap, Mounting - Gas Tank - Rear
12	8476-650	1		Screw, Machine
13	8427-602	2		Nut, Lock
14	8476-640	1		Screw, Machine
15	0470-536	2		Clip, Mounting - Gas Tank
16	0423-688	4		Clamp, Hose
17	0410-070	AR	/P	Hose, Gasline - 25 ft
18	0423-670	6		Clamp, Hose
19	0470-527	1	S	Fitting, Straight
20	0470-519	1	S	Pump, Fuel
21	8476-620	2		Screw, Machine
22	0623-038	2		Nut, Lock
23	0470-476	1		Pad, Gas Tank
24	0470-479	1		Shield, Gas Tank
25	0470-474	1		Shield, Heat
26	0623-797	5		Screw, Self-Tapping
27	0423-609	2		Screw, Shoulder




2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B56Q)07  
GEAR SHIFTING ASSEMBLY

Page 5 of 6

Ref #	Part Number	Qty	S/P/F	Description
1	8470-520	2		Screw, Machine
2	0818-049	1	S	Base, Gear Shift Position
3	0818-013	2		Contact
4	0818-017	2		Spring
5	0828-040	1		Washer, Shift Shaft
6	0818-046	1		Shaft, Gear Shift - Assembly
7	0828-067	2		Washer, Shift Shaft
8	0832-034	1	S	Bearing
9	0828-037	1		Washer, Gear Shift Cam Plate
10	0818-005	1	S	Plate, Gear Shift Cam
11	0826-006	1		Bolt, Gear Shift Cam Plate
12	0828-036	2		Washer, Sub-Gear Shift Shaft
13	0831-010	2		Circlip, Sub-Gear Shift Shaft
14	0818-007	1	/P	Shaft, Sub-Gear Shift
15	0830-044	1		Seal, Sub-Gear Shift Shaft
16	0818-014	1		Arm, Shift
17	8468-620	1	/P	Screw, Machine
18	0828-038	1		Washer, Cam Stopper
19	0818-002	1		Stopper, Cam
20	0818-004	1		Support, Cam Stopper
21	0818-028	1		Spring, Cam Stopper
22	0828-035	1		Washer, Cam Stopper Spring
23	8424-602	1	/P	Nut, Cam Stopper Spring
24	0818-072	2	/P	Fork, Shift
25	0818-006	1		Shaft, Shift Fork

 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834B6SQ) 07  
HANDLEBAR AND WINDSHIELD ASSEMBLY

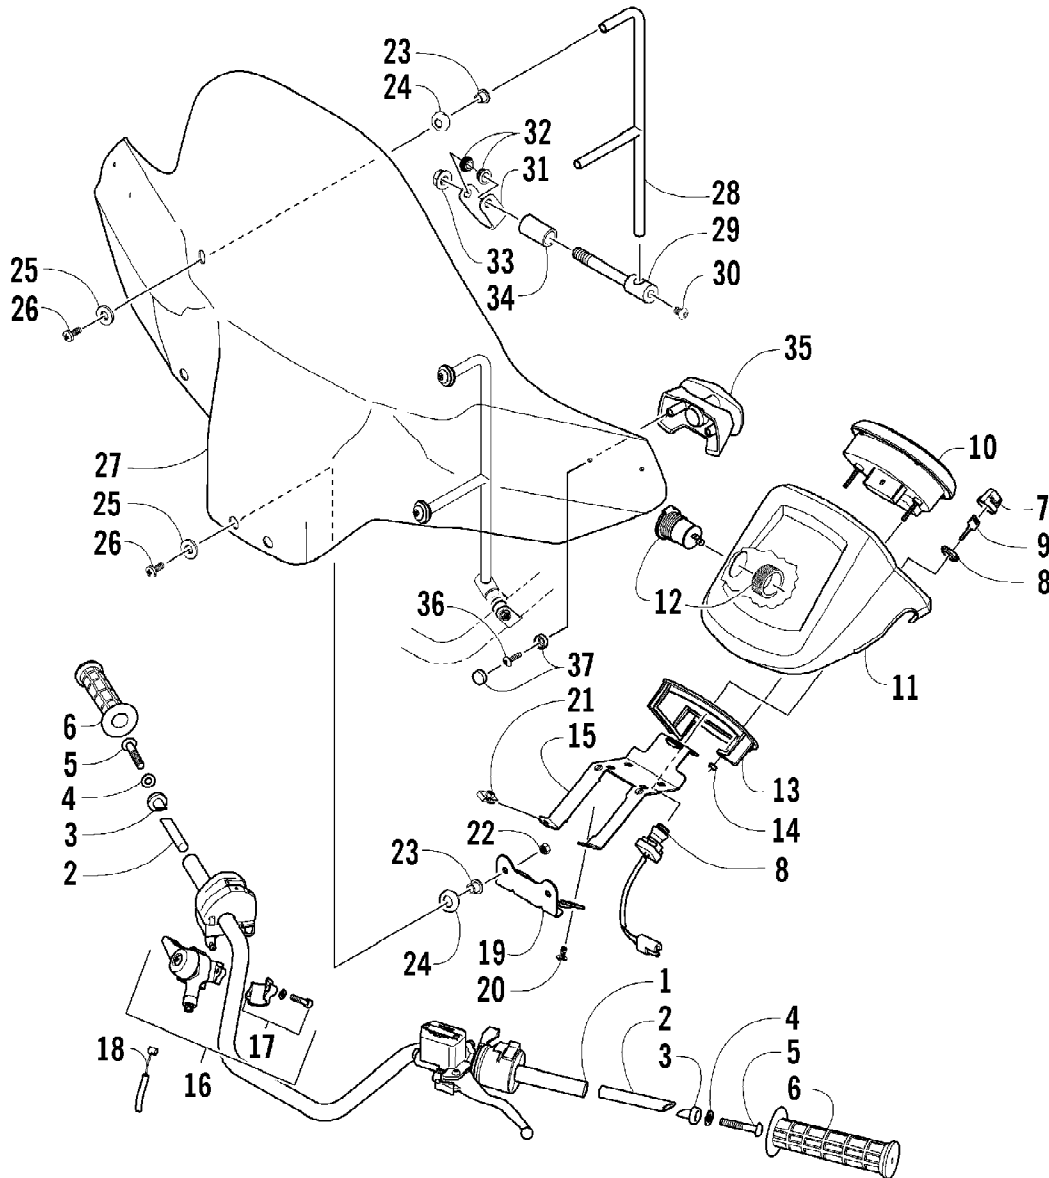

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P8947USQ)07  
HANDLEBAR AND WINDSHIELD ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
	0436-948	1		Complete Windshield Kit
	0453-412	1	F	Instructions
	1441-063	1	F	Wrench, Allen
1	0505-476	1		Tube, Handlebar
2	0405-218	2		Plug, Handlebar
3	0405-149	2		End Cap, Handlebar
4	8050-247	2	/P	Washer
5	8477-845	2		Screw, Machine
6	0405-147	2		Grip, Handlebar
7	0409-013	1		Cover, Key
8	0430-036	1		Switch, Ignition - Assembly (inc. 9)
9	3409-007	1	/P	Key, Ignition - Blank (C Series)
9	3409-011	1		Key, Ignition - Blank (D Series)
9	3409-012	1		Key, Ignition - Blank (E Series)
9	3409-013	1		Key, Ignition - Blank (F Series)
10	0520-025	1		Gauge, LCD
11	0405-191	1		Instrument Pod
12	0641-897	1	/P	Outlet, Accessory - 12V
13	0420-065	1	/P	Clamp, Plastic
14	0423-493	2		Nut w/Washer
15	1506-578	1		Bracket, Mounting - Instrument Pod
16	0502-527	1		Control, Differential Lock (inc. 17)
17	0502-613	1		Clamp, Differential Lock Control - Kit
18	0487-030	1	S	Cable, Differential Lock
19	0541-300	1		Bracket, Mounting - Windshield
20	8471-616	2		Screw, Machine
21	0423-549	2		Clip
22	0423-531	2		Nut, Lock
23	1441-054	6		Grommet, Cap
24	1441-062	7		Grommet, Rubber
25	0423-528	6		Washer
26	0423-527	6		Screw, Machine
27	1441-563	1		Windshield
28	1441-535	2		Rod, Support
29	1441-051	2		Bolt, Windshield
30	0423-529	2		Screw, Machine
31	1441-053	2		Bracket, Clamp
34	1441-052	2		Spacer
32	1441-055	4		Spacer, Clamp
35	4639-463	2		Mirror - Kit
33	0423-530	2		Nut, Lock
36	0623-784	4		Screw, Self-Tapping
37	0124-054	4	/P	Snap Cap w/Washer

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894860) 07  
HYDRAULIC BRAKE ASSEMBLY

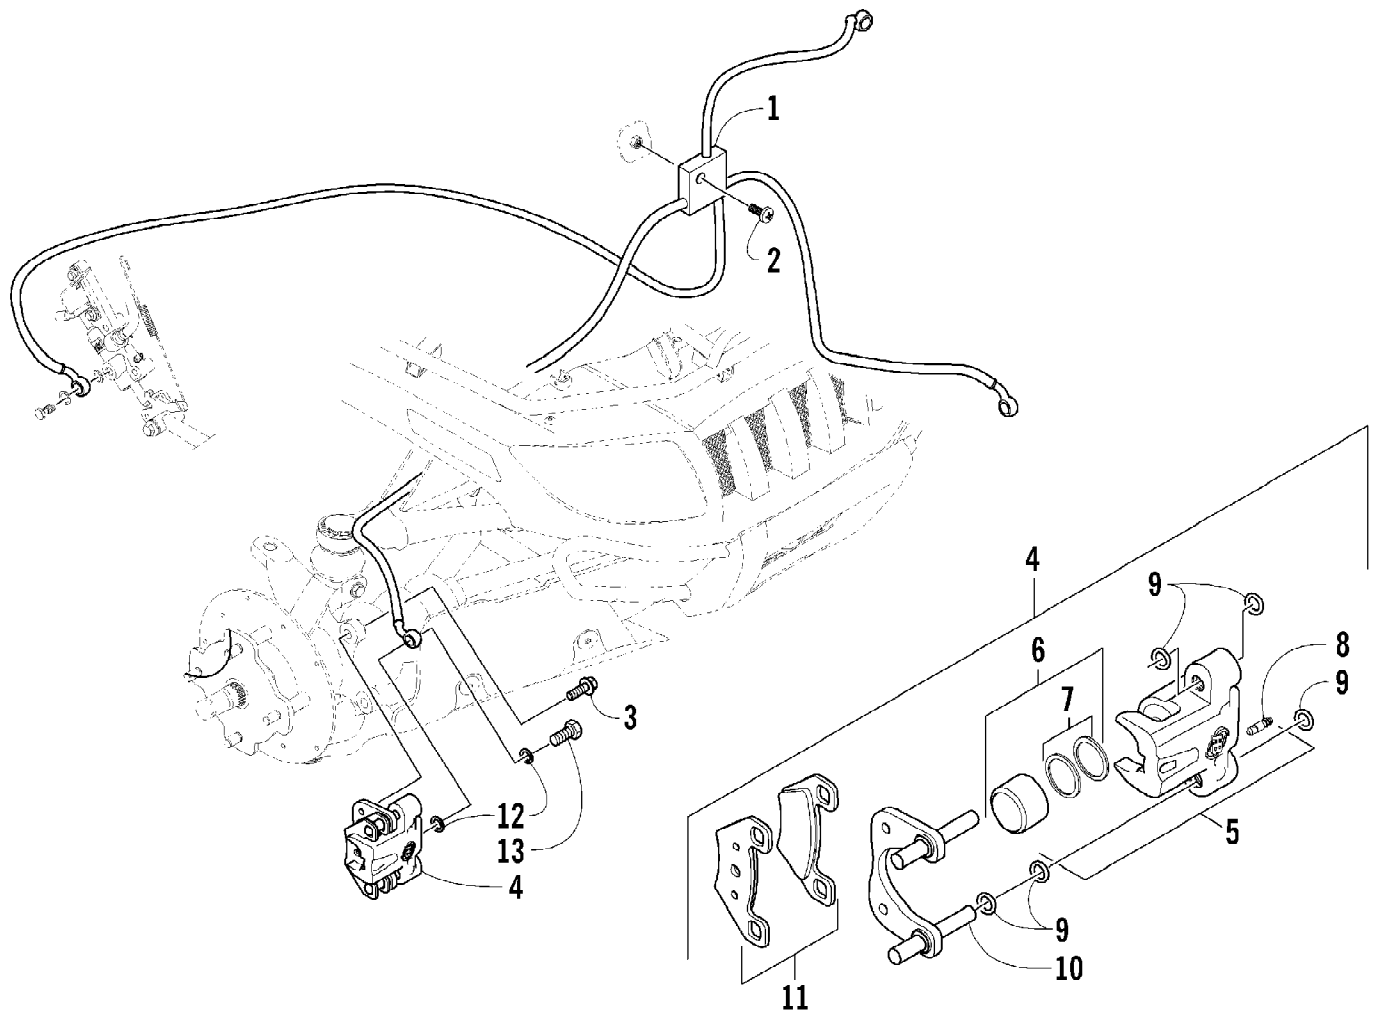


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834B06C)07  
 HYDRAULIC BRAKE ASSEMBLY

Page 4 of 6

Ref #	Part Number	Qty	S/P/F	Description
1	1502-015	1		Hose, Brake - Assembly
2	8476-625	1		Screw, Cap
3	1623-589	4	S	Screw, Cap
4	0502-878	1	S	Caliper, Brake - Right Front (inc. 5-11)
4	0502-879	1	S	Caliper, Brake - Left Front (inc. 5-11)
5	0502-603	1	S	Housing, Caliper - Assembly - Right Front (inc. 6-8)
5	0502-611	1	S	Housing, Caliper - Assembly - Left Front (inc. 6-8)
6	0502-606	2		Piston/Seal Set (inc. 7)
7	0502-607	2		Seal Set
8	0502-609	2	/P	Valve, Bleed
9	0502-608	2		O-Ring, Guide - Set
10	0502-605	2		Bracket Assembly
11	0502-875	2	S	Pad, Brake - Set
12	0423-178	4		Washer, Crush
13	0423-413	2		Bolt, Banjo-Fitting

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B06C) 07  
HYDRAULIC HAND BRAKE ASSEMBLY

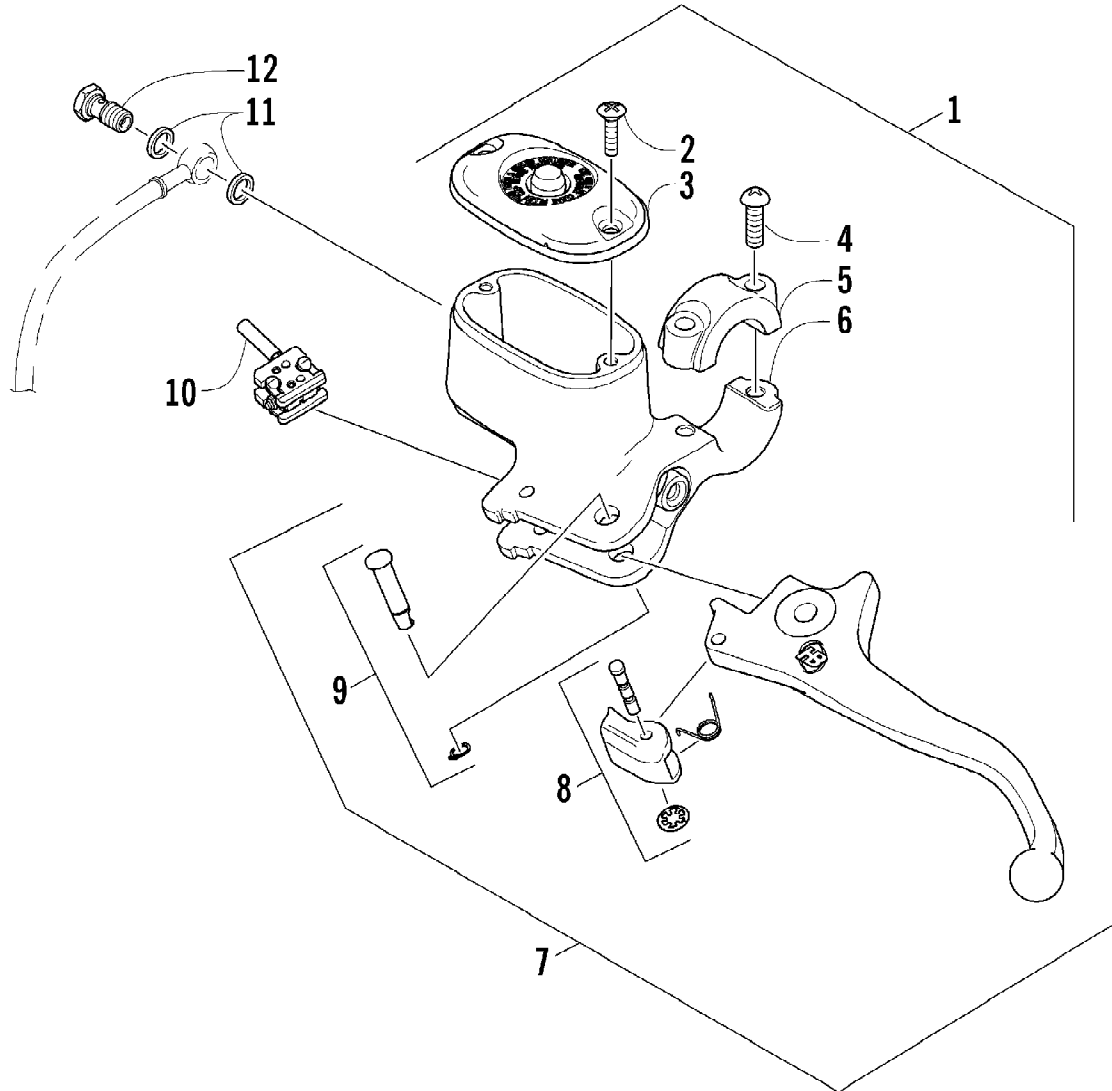




2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894BUSQ)07  
HYDRAULIC HAND BRAKE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0502-914	1	S	Brake Assembly (inc. 2-10)
2	0502-566	1		Screw, Reservoir Cover
3	0502-868	1	/P	Cover, Reservoir
4	0502-568	1		Screw, Master Cylinder Clamp
5	0502-869	1		Clamp, Master Cylinder
6	0502-704	1		Master Cylinder Assembly
7	0502-866	1		Lever Assembly (inc. 8-9)
8	0502-867	1	/P	Lock, Brake Lever - Kit
9	0502-580	1		Lever Pin - Kit
10	0502-564	1	/P	Switch, Brake - Kit
11	0423-178	2		Washer, Crush
12	0423-413	1		Bolt, Banjo-Fitting

 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834B26Q)07  
MAGNETO ASSEMBLY

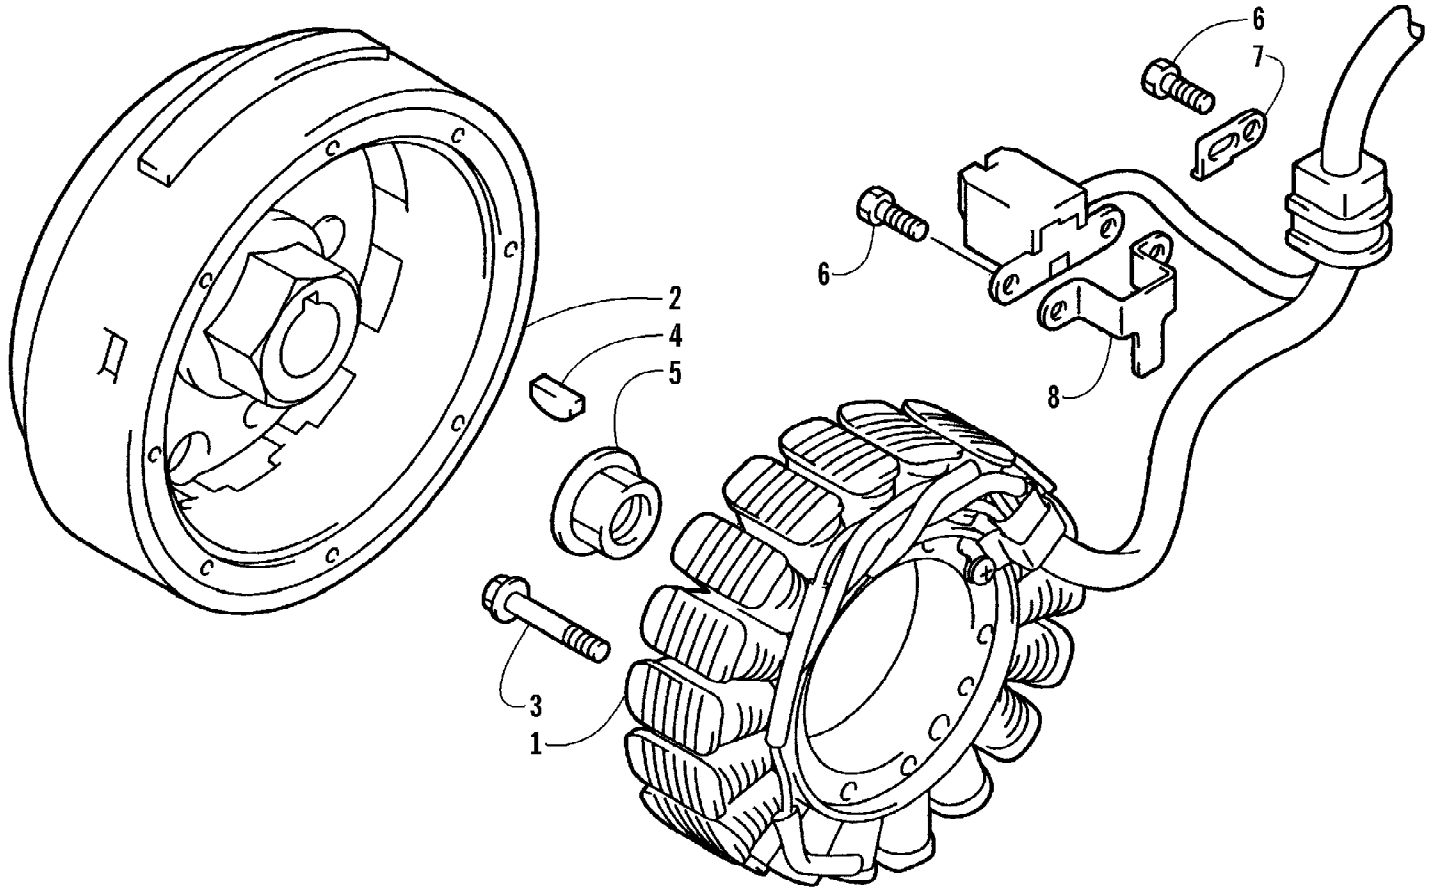

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834B16C)07  
MAGNETO ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0802-037	1		Stator - Assembly
2	0802-036	1		Rotor/Flywheel
3	0826-102	3		Screw, Machine
4	0829-012	1		Key
5	0827-014	1		Nut
6	8470-510	3		Screw, Machine
7	0802-015	1		Clamp - No. 1
8	0802-016	1		Clamp - No. 2

 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894BUSQ) 07  
MAGNETO ASSEMBLY (VIN: 4UF07ATV07T244421 and above)

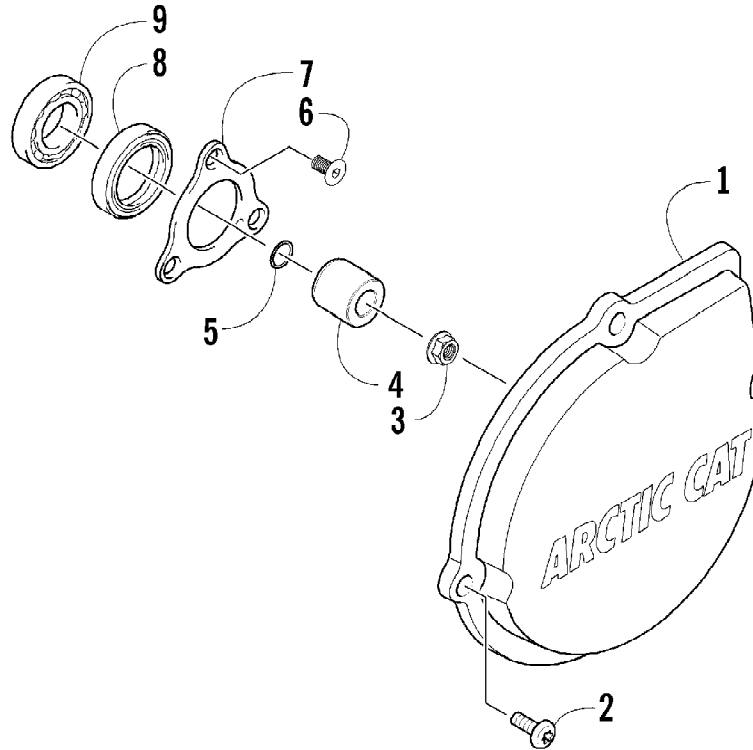

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B56Q)07  
 MAGNETO ASSEMBLY (VIN: 4UF07ATV07T244421 and above)

Ref #	Part Number	Qty	S/P/F	Description
1	0802-062	1		Cover, Magneto
2	0826-008	4		Screw, Machine
3	0827-008	1		Nut
4	0820-061	1		Spacer
5	0830-108	1		O-Ring
6	0826-031	3		Screw
7	0805-008	1		Retainer, Oil Seal
8	0830-158	1		Seal, Oil
9	0832-045	1	S	Bearing

 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B6SQ) 07  
OIL FILTER/PUMP ASSEMBLY

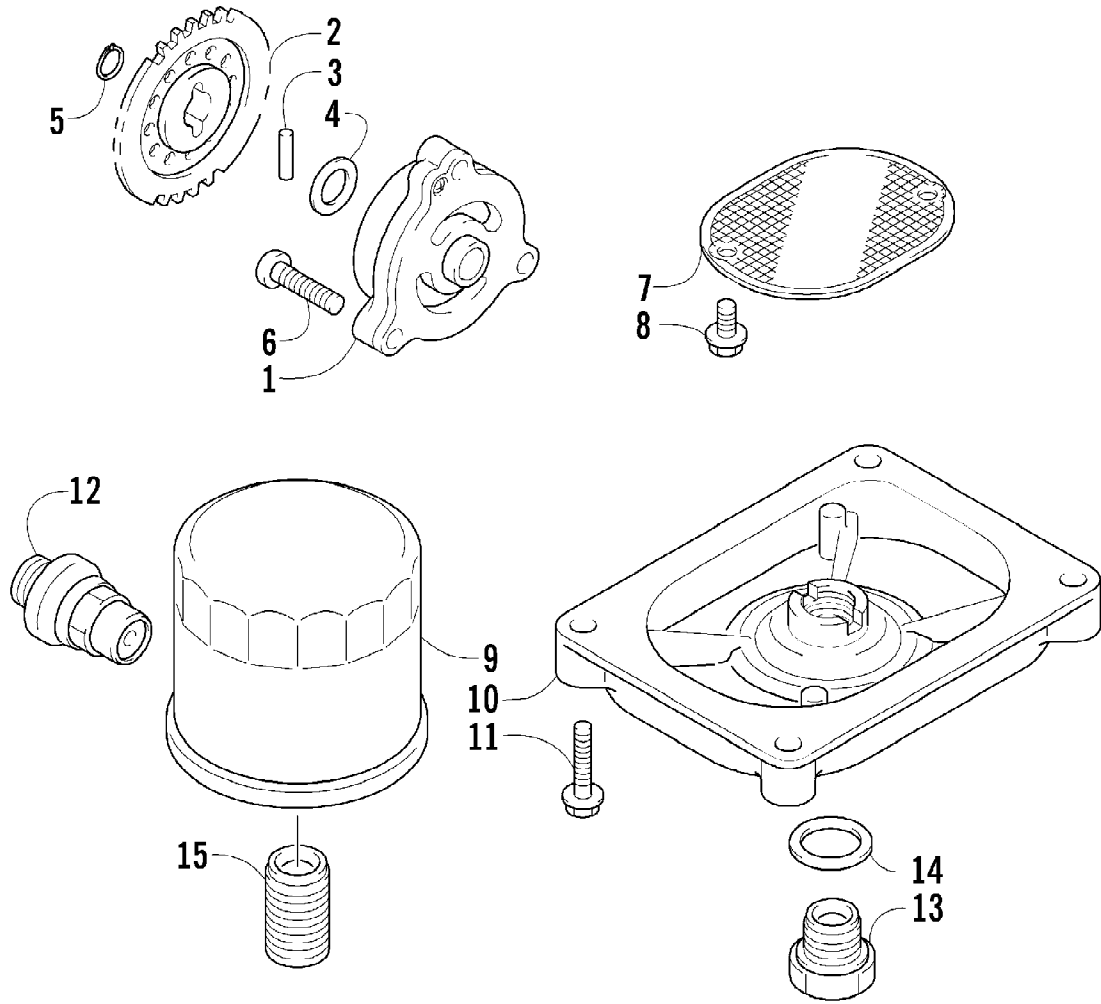

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894BUSQ)07  
 OIL FILTER/PUMP ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0812-023	1		Pump, Oil
2	0812-002	1	S	Gear, Driven
3	0829-009	1		Pin
4	0828-007	1	/P	Shim
5	0831-002	1		Circlip
6	0826-039	3		Screw, Cap
7	0812-057	1	/P	Strainer, Oil
8	0826-040	2		Screw, Machine
9	0812-029	1	S	Filter, Oil
10	0812-053	1		Cap, Oil Strainer
11	8468-625	4		Screw, Machine
12	0812-007	1		Valve, Oil-Relief - Assembly
13	0812-006	1		Plug, Drain
14	0830-017	1		Gasket, Drain Plug
15	0812-008	1		Union, Oil Filter

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834B86C) 07  
REAR BODY PANEL ASSEMBLY

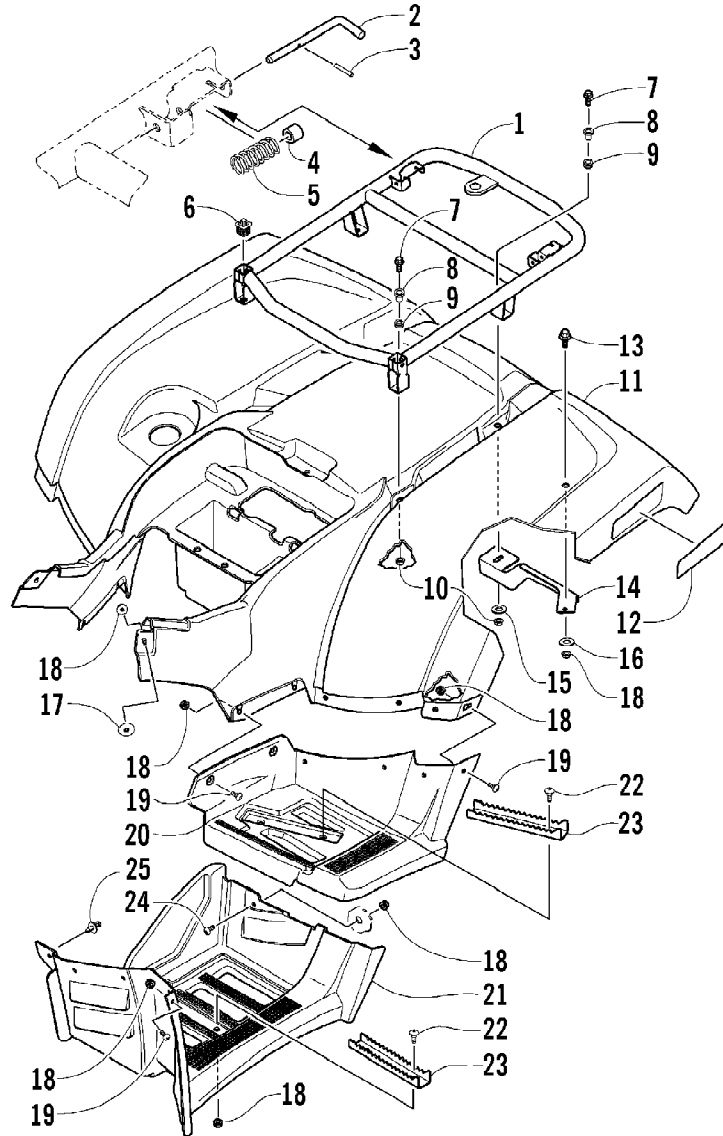




2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B06C)07  
REAR BODY PANEL ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	2506-221	1	/P	Rack, Rear - Assembly (inc. 2-6)
2	0541-504	2		Pin - Assembly (inc. 3)
3	0423-635	2		Pin, Roll
4	0423-677	2		Collar
5	0423-636	2		Spring
6	0441-592	4	/P	Bushing, Rack
7	8410-835	4		Screw, Machine
8	0423-669	4		Spacer
9	0423-465	4		Grommet
10	8432-802	4		Nut, Lock
11	2506-351	1	S	Panel, Fender (inc. 12)
12	0411-820	1	S	Decal, Reflector - Right
12	0411-821	1	S	Decal, Reflector - Left
13	0423-654	2		Screw, Shoulder
14	2506-092	1		Bracket, Rear Fender - Right
14	2506-093	1		Bracket, Rear Fender - Left
15	0423-087	2		Washer
16	8050-222	2	/P	Washer
17	0423-101	2		Screw, Body
18	0423-540	36		Nut, Lock
19	0423-419	22		Screw, Machine
20	2406-042	1		Footwell, Rear - Right
20	2406-043	1		Footwell, Rear - Left
21	1506-813	1		Footwell - Right
21	2406-471	1	/P	Footwell - Left
22	0423-355	8		Screw, Shoulder
23	1506-125	4	/P	Footpeg
24	8477-620	2		Screw, Machine
25	0623-362	2		Rivet, Reinstallable

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P8347060)  
REAR DRIVE GEARCASE ASSEMBLY

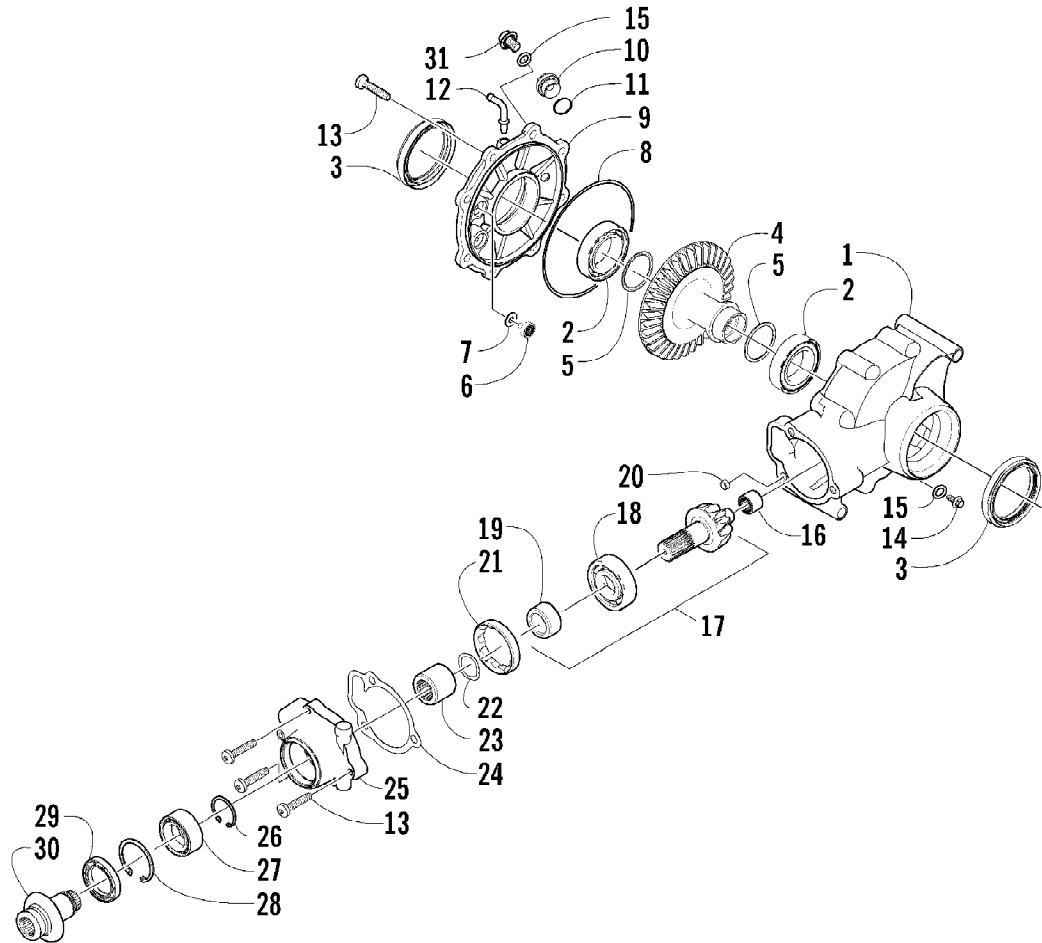


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894BUSQ)07  
REAR DRIVE GEARCASE ASSEMBLY

Page 4 of 6

Ref #	Part Number	Qty	S/P/F	Description
	1502-079	1	S	Complete Rear Gearcase Assembly
1	0502-622	1		Housing, Gearcase
2	0402-393	2		Bearing
3	1402-441	2	S	Seal
4	1402-032	1		Gear, Ring - 36T
5	0402-405	AR		Shim
5	0402-406	AR		Shim
5	0402-407	AR		Shim
5	0402-408	AR		Shim
5	0402-409	AR		Shim
6	0402-326	1		Button, Thrust
7	0402-429	AR		Shim
7	0402-430	AR		Shim
7	0402-431	AR		Shim
7	0402-432	AR		Shim
7	0402-433	AR		Shim
8	0423-149	1		O-Ring
9	1502-082	1		Cover, Gearcase
10	0402-333	1	/P	Plug, Fill (inc. 11)
11	0423-154	1		O-Ring
12	1402-102	1		Fitting
13	0423-118	11		Screw, Self-Tapping
14	0402-450	1	S	Plug, Magnetic (inc. one No. 15)
15	0423-153	2		O-Ring
16	0402-328	1		Bearing
17	0502-783	1		Gear, Pinion - Assembly - 10T (inc. 18-19)
18	0402-327	1		Bearing
19	0402-336	1		Collar, Retaining
20	0402-411	1		Pin, Dowel
21	0402-331	1		Collar, Lock
22	0402-982	1		Washer, Spring
23	0402-981	1		Collar, Shaft
24	0402-947	1		Gasket, Flange
25	0502-529	1		Housing, Pinion
26	0423-417	1		Ring, Retaining
27	1402-043	1		Bearing
28	0423-423	1		Ring, Retaining
29	1402-011	1		Seal
30	1502-085	1	/P	Shaft, Input
31	1402-211	1		Plug, Oil Level (inc. one No. 15)

 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P8942USQ) 07  
REAR SUSPENSION ASSEMBLY

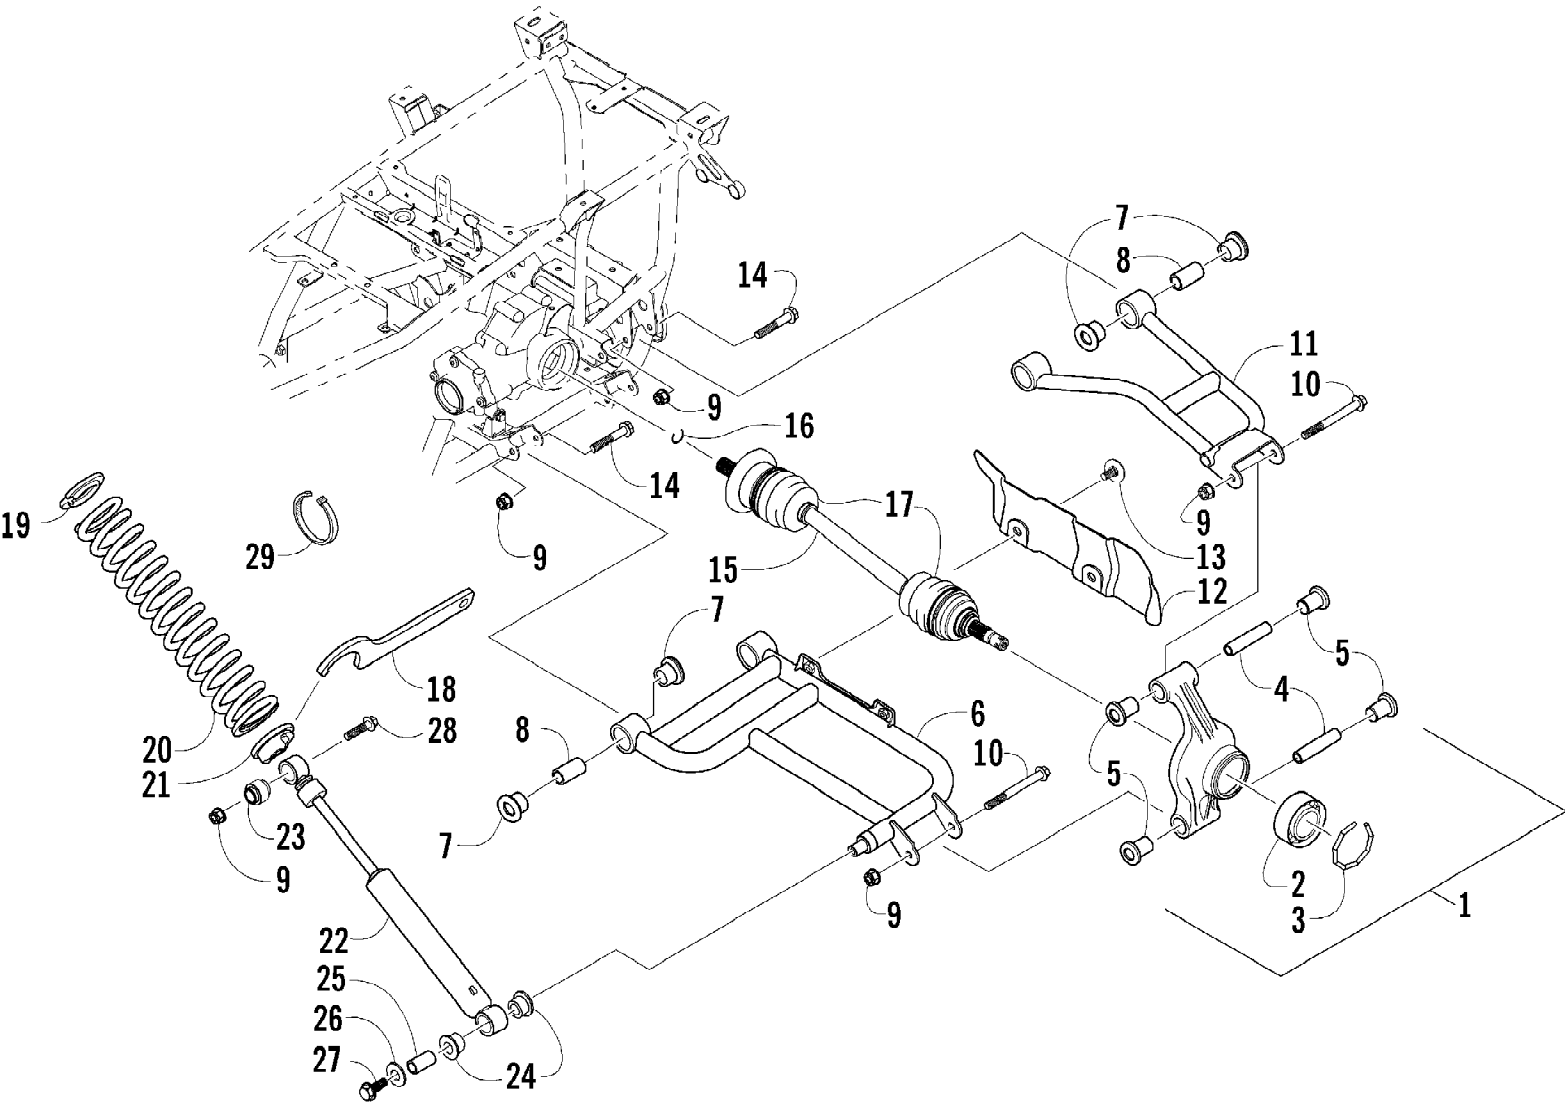

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B16C)07  
REAR SUSPENSION ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0504-372	1	S	Knuckle, Right Rear - Assembly (inc. 2-5)
1	0504-373	1	S/P	Knuckle, Left Rear - Assembly (inc. 2-5)
2	1402-027	2	S/P	Bearing, Wheel Hub
3	0423-423	2		Ring, Retaining
4	0403-038	4	S/P	Collar, Suspension Bushing
5	0403-032	8	S	Bushing, Suspension
6	0504-440	1	S	A-Arm, Rear - Lower Right (inc. 7-8)
6	0504-441	1	S	A-Arm, Rear - Lower Left (inc. 7-8)
7	0403-115	16	S	Bushing
8	0403-114	8	S	Collar
9	0423-744	14		Nut, Lock
10	8409-000	4		Screw, Cap
11	0504-476	1		A-Arm, Rear - Upper Right (inc. 7-8)
11	0504-477	1		A-Arm, Rear - Upper Left (inc. 7-8)
12	1406-068	1		Guard, Boot - Right
12	1406-069	1		Guard, Boot - Left
13	0423-545	4	/P	Screw, Body
14	8409-075	8		Screw, Cap
15	0502-811	2	S	Axle, Drive - Rear (inc. 16-17)
16	0441-893	2	S	Clip, Retaining
17	0436-276	2	S	Repair Kit, Boot
18	0441-587	1		Wrench, Spanner
19	1603-889	2	/P	Retainer, Spring
20	0404-145	2		Spring, Suspension
21	0404-057	2		Cam, Spring Adjuster
22	0404-147	2		Shock Absorber - Rear (inc. 23-25)
23	0403-182	2		Bushing, Double-Bonded
24	0603-955	4		Bushing, Shock Absorber
25	1603-219	2	S	Sleeve, Shock Absorber
26	0423-087	2		Washer
27	8408-820	2	/P	Screw, Cap
28	8409-050	2		Screw, Cap
29	0123-788	2	/P	Cable Tie

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894BUSQ) 07  
RECOIL STARTER ASSEMBLY (Up to VIN: 4UF07ATV07T244421) Page 4 of 5

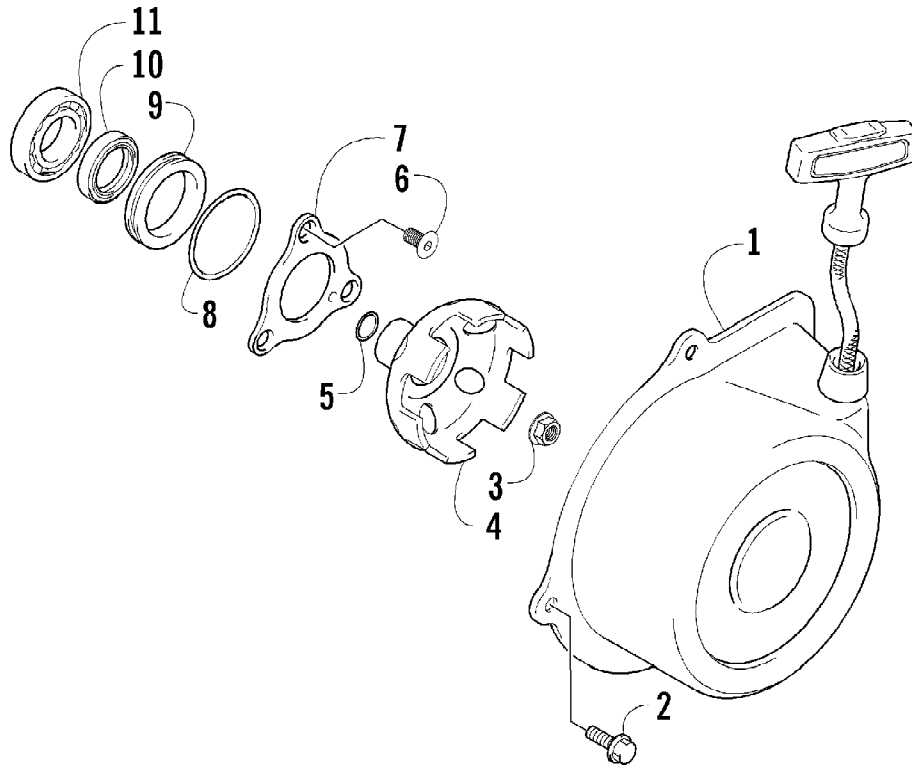

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834B56Q)07  
 RECOIL STARTER ASSEMBLY (Up to VIN: 4UF07ATV07T244421)

Ref #	Part Number	Qty	S/P/F	Description
1	0820-001	1		Starter, Recoil - Assembly
2	0826-038	4		Screw, Machine
3	0827-008	1		Nut
4	0820-036	1	S	Cup, Starter
5	0830-108	1		O-Ring
6	0826-031	3		Screw
7	0805-008	1		Retainer, Oil Seal
8	0830-021	1	/P	O-Ring
9	0820-007	1		Spacer
10	0830-022	1		Seal, Oil
11	0832-006	1	S	Bearing


No  
Diagram  
Available  
  
Parts List  
Only



2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P8947USQ)07  
RELATED ITEMS

Ref #	Part Number	Qty	S/P/F	Description
	0436-925	1	S	Bag, Rack, Front, Black
	0436-480	1		Bar, Utility
	0436-619	1		Brush Guard/Bumper - Deluxe
	0436-757	1	/P	Bumper - Rear
	0436-827	1		Cargo Box
	0436-460	1		Carryall (11 x 17)
	0436-462	1		Carryall (10 D)
	0436-477	1		Cord Reel
	0436-726	1	S	Cover, Trailerable
	0436-087	1	/P	Electrical Plug
	0436-035	1	S	Engine Block Heater
	0436-466	1		Fender Box
	0436-538	1		Gear Cradle
	0436-501	1	S	Grease, High-Performance
	0436-464	1		Grill Cradle
	0436-828	1		Gun Holder
	0436-352	1		Hand/Thumb Warmers
	0436-463	1		Light Bar
	0436-516	1		Light Mount, Portable - Cargo Box
	0436-040	1	/P	Light, Portable - Spotlight
	0436-039	1	/P	Light, Portable - Work
	0436-774	1	S	Lunch Pack, Black
	2257-689	1		Manual, Illustrated Parts
	2257-613	1		Manual, Operator's (E)
	2257-614	1		Manuel d'utilisation (F)
	0652-024	1		Paint, Metal - Black
	0436-635	1		Plow Attachment Kit
	0436-228	1		Plow Blade, 50 in. - Straight
	0436-287	1		Plow Blade, 50 in. - One-Way
	0436-296	1		Plow Blade, 60 in. - Straight
	0436-360	1		Plow Blade, 60 in. - One-Way
	0436-636	1	/P	Plow, Push Frame
	0436-626	1	S	Rack Basket
	0436-798	1	/P	Rack - Rear
	0436-965	1	S	Saddlebags
	0436-026	1		Tire Chains, Size B (24 in. and 25 in. Tires)
	0436-027	1		Tire Chains, Size C (25 in. and 26 in. Tires)
	1402-028	1		Tire, Titan AT589 (25x8-12, Mud & Snow)
	0402-563	1		Tire, Titan AT589 (25x10-12, Mud & Snow)
	0436-656	1		Winch Accessories Kit
	0436-655	1		Winch Kit, 2500 lb
	0436-703	1		Windshield, Clear
	0436-623	1		Windshield, Clear w/Accent
	0436-470	1		Workbase (8 in.)

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834B86Q) 07  
REVERSE SHIFT LEVER ASSEMBLY

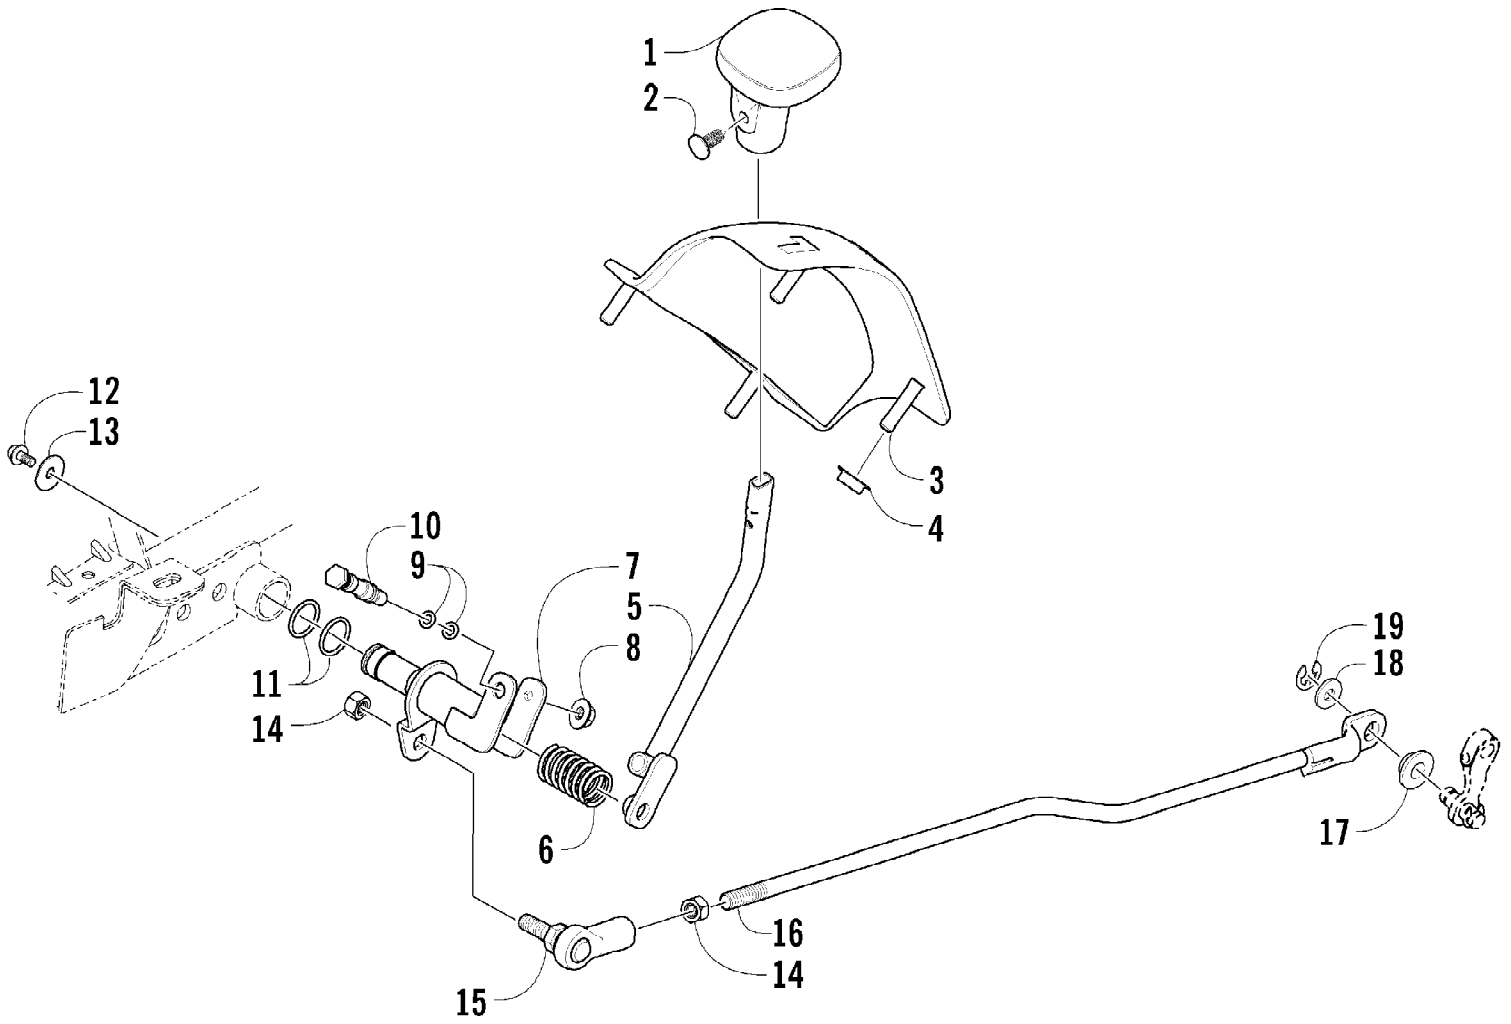


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894706Q)07  
REVERSE SHIFT LEVER ASSEMBLY

Page 4 of 6

Ref #	Part Number	Qty	S/P/F	Description
1	0402-843	1	/P	Knob, Reverse Shift Lever
2	0423-345	1		Clip, Push
3	1402-576	1		Plate, Shift
4	0423-357	4		Nut, Stamped
5	0502-659	1		Lever, Reverse Shift
6	0502-410	1	S	Spring, Reverse Shift Lever
7	0502-742	1		Axle, Reverse Shift Lever
8	8424-602	1	/P	Nut
9	0423-182	2	/P	O-Ring
10	0402-675	1		Axle, Pivot
11	0423-299	2	/P	O-Ring
12	8408-812	1		Screw, Cap
13	0423-087	1		Washer
14	0623-294	2		Nut
15	1402-270	1		End, Rod
16	0502-989	1	/P	Linkage, Shift
17	0423-091	1		Bushing, Shift Linkage
18	8050-242	1		Washer
19	0423-169	1	/P	E-Ring

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834B06C) 07  
SEAT AND BACKREST ASSEMBLY

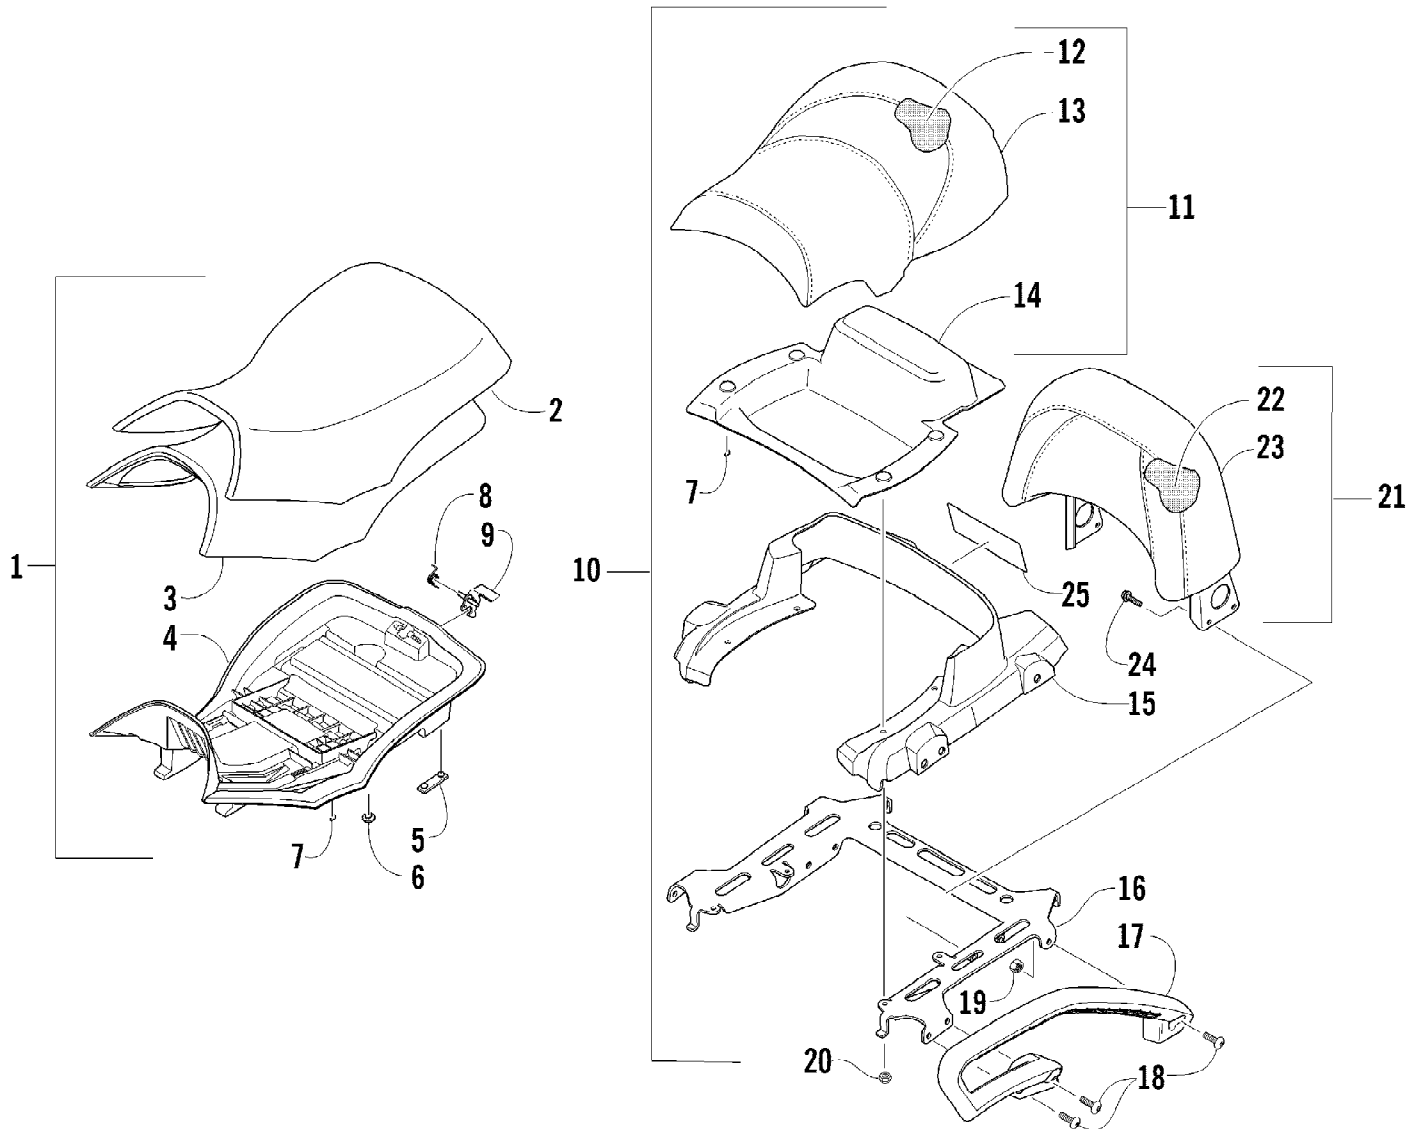


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894BUSQ)07  
SEAT AND BACKREST ASSEMBLY

Page 4 of 10

Ref #	Part Number	Qty	S/P/F	Description
1	1506-937	1	S/P	Seat Assembly (inc. 2-9)
2	1506-209	1		Cover, Seat
3	1506-208	1		Foam, Seat
4	2406-144	1	S/P	Base, Seat - Assembly (inc. 5-6)
5	0406-879	2		Bumper, Seat - Rear
6	0406-877	4	/P	Bumper, Seat - Front
7	0624-100	AR		Staple
8	1406-592	1	/P	Spring, Seat Latch
9	1506-156	1		Latch, Seat
10	1506-938	1		Seat, Passenger - Assembly (inc. 7, 11-20, and 25)
11	2506-064	1		Seat, Passenger - Sub-Assembly (inc. 7 and 12-14)
12	1506-816	1		Foam, Seat - Passenger
13	1506-815	1		Cover, Seat - Passenger
14	2406-110	1		Base, Seat - Inner
15	2406-044	1		Base, Seat - Passenger
16	1506-932	1		Bracket, Seat Support - Assembly
17	2406-112	1		Handhold, Passenger - Right
17	2406-113	1		Handhold, Passenger - Left
18	0423-362	6		Screw, Machine
19	8432-802	6		Nut, Lock
20	8427-602	4		Nut, Lock
21	1506-939	1		Backrest Assembly (inc. 22-23)
22	1506-818	1		Foam, Backrest
23	1506-817	1		Cover, Backrest
24	8408-816	4		Screw, Cap
25	0411-814	1	/P	Decal, "Arctic Cat"

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B26C) 07  
SECONDARY DRIVE ASSEMBLY

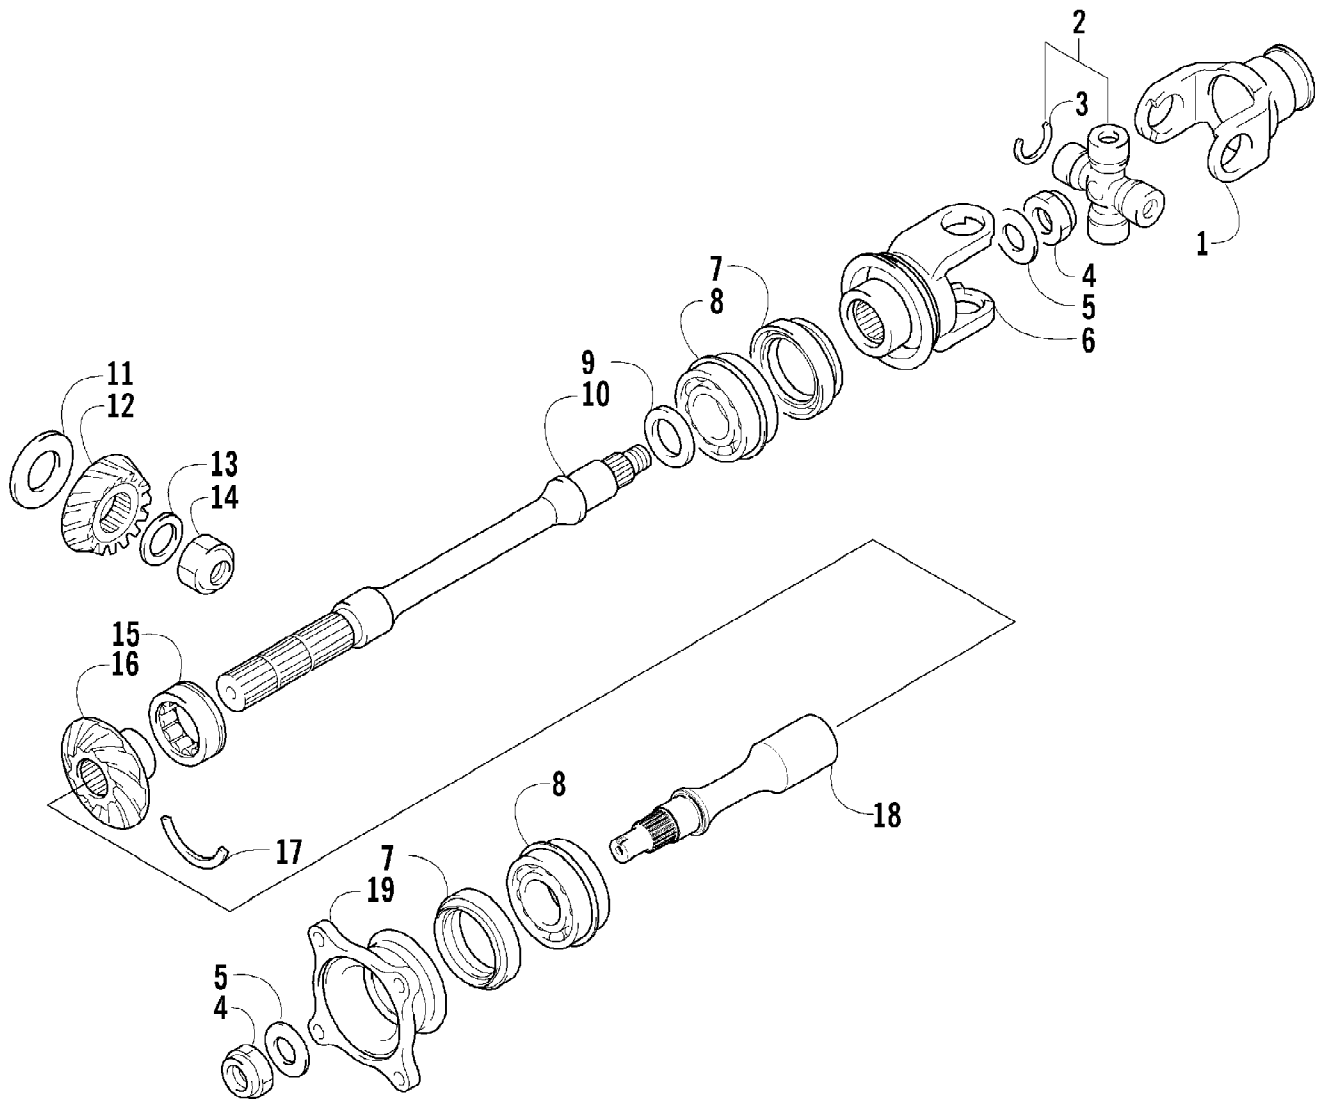


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B16Q)07  
SECONDARY DRIVE ASSEMBLY

Page 11 of 11

Ref #	Part Number	Qty	S/P/F	Description
1	0819-063	1		Yoke, Propeller Shaft Joint
2	1402-463	1	S	Joint, Universal - Set (inc. 3)
3	0423-450	4		Circlip
4	0827-013	2		Nut, Rear Output Joint
5	0828-020	2		Washer, Rear Output Flange
6	0819-061	1		Yoke, Drive Output - Front
7	0830-043	2		Seal, Oil - Driven Shaft
8	0832-017	2		Bearing, Driven Shaft
9	0828-021	AR		Shim, 25 x 34 x 0.25 mm
9	0828-022	AR		Shim, 25 x 34 x 0.30 mm
9	0828-023	AR		Shim, 25 x 34 x 0.70 mm
9	0828-024	AR		Shim, 25 x 34 x 0.90 mm
9	0828-025	AR		Shim, 25 x 34 x 0.95 mm
9	0828-026	AR		Shim, 25 x 34 x 1.00 mm
9	0828-027	AR		Shim, 25 x 34 x 1.05 mm
9	0828-028	AR		Shim, 25 x 34 x 1.10 mm
9	0828-029	AR		Shim, 25 x 34 x 1.15 mm
10	0819-003	1	S	Shaft, Secondary Driven - Front
11	0828-030	AR		Shim, 24 x 48 x 0.25 mm
11	0828-031	AR		Shim, 24 x 48 x 0.30 mm
11	0828-032	AR		Shim, 24 x 48 x 0.35 mm
11	0828-033	AR		Shim, 24 x 48 x 0.90 mm
11	0828-018	AR		Shim, 24 x 48 x 0.95 mm
11	0828-062	AR		Shim, 24 x 48 x 1.00 mm
11	0828-063	AR		Shim, 24 x 48 x 1.05 mm
11	0828-064	AR		Shim, 24 x 48 x 1.10 mm
11	0828-065	AR		Shim, 24 x 48 x 1.15 mm
12	0819-001	1		Gear, Secondary Drive
13	0828-019	1		Washer
14	0827-012	1		Nut
15	0832-016	1		Bearing, Driven Gear
16	0819-002	1		Gear, Secondary Driven
17	0819-011	1		Ring, Driven Bearing
18	0819-053	1		Shaft, Secondary Driven - Rear
19	0819-005	1		Flange, Output Joint - Rear

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834BUSQ) 07  
SECONDARY TRANSMISSION ASSEMBLY

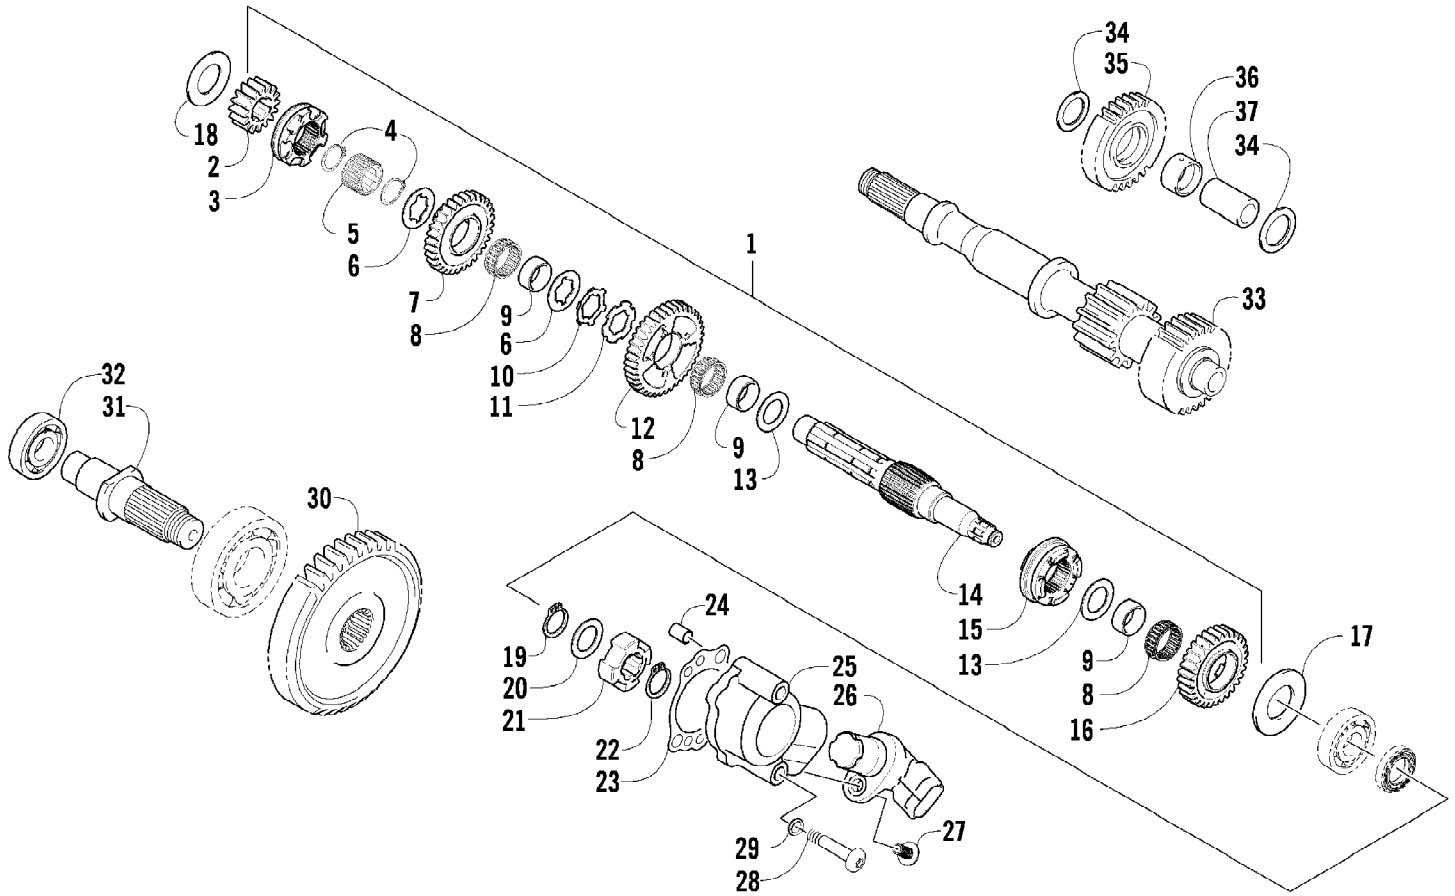




2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B56C)07  
SECONDARY TRANSMISSION ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0822-048	1		Countershaft Assembly (inc. 2-16)
2	0822-008	1		Gear, Drive - No. 2
3	0822-014	1		Dog, Reverse Driven Gear
4	0831-011	2		Circlip
5	0822-045	1		Spacer, Reverse Driven Gear
6	0828-008	2		Washer
7	0822-013	1		Gear, Reverse Driven
8	0832-011	3		Bearing
9	0822-005	3		Bushing
10	0828-014	1		Washer, Lock
11	0828-015	1		Washer, Lock
12	0822-004	1		Gear, Driven - Low
13	0822-046	2		Washer, Driven Gear
14	0822-003	1		Countershaft
15	0822-007	1		Dog, Sliding
16	0822-006	1		Gear, Driven - High
17	0828-011	1		Washer, Drive Gear
18	0828-010	1		Washer, Drive Gear
19	0831-040	1		Ring, Retaining
20	0828-069	1		Washer, Thrust
21	0822-050	1		Trigger, Speedometer Sensor
22	0831-039	1		Ring, Retaining
23	0830-129	1		Gasket
24	0829-023	2		Pin, Dowel
25	0822-049	1		Housing, Speedometer Sensor
26	0824-015	1	S	Sensor, Speedometer
27	8468-620	1	/P	Screw, Machine
28	8468-645	2		Screw, Machine
29	0830-107	2		Seal, Fastener
30	0822-009	1		Gear, Driven - No. 2
31	0822-037	1	S	Shaft, Output
32	0832-014	1	S	Bearing
33	0822-001	1		Driveshaft
34	0828-016	2		Washer, Reverse Idle Gear
35	0822-011	1		Gear, Reverse Idle
36	0822-012	1		Bushing, Reverse Idle Gear
37	0822-015	1		Shaft, Reverse Idle

 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834B6SQ) 07  
STARTER CLUTCH ASSEMBLY

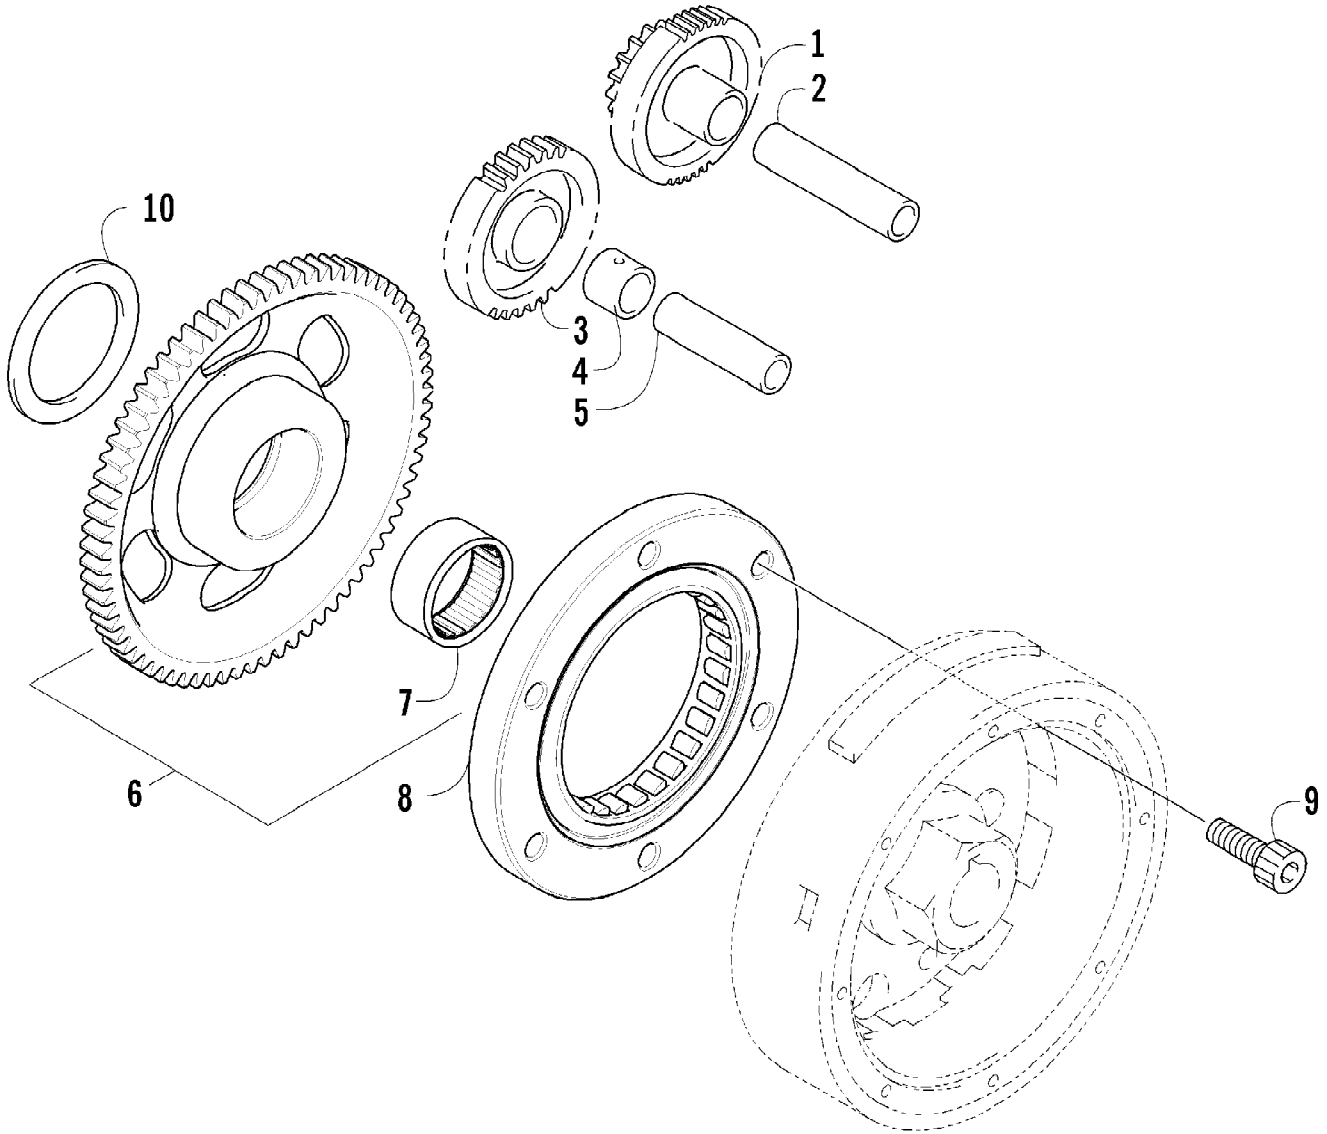

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894BUSQ)07  
STARTER CLUTCH ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0815-001	1		Gear, Starter Idler - No. 1
2	0829-031	1	/P	Shaft, Starter Gear
3	0815-002	1		Gear, Starter Idler - No. 2
4	0815-003	1		Spacer, Starter Idler Gear No. 2
5	0829-032	1	/P	Shaft, Starter Gear
6	0815-004	1		Gear Starter Clutch (inc. 7)
7	0832-004	1	S	Bearing
8	0802-035	1		Clutch, Starter
9	0826-069	6		Screw, Machine
10	0828-094	1		Washer

 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834860)  
STARTER MOTOR ASSEMBLY (Up to VIN: 4UF07ATV97T270001)

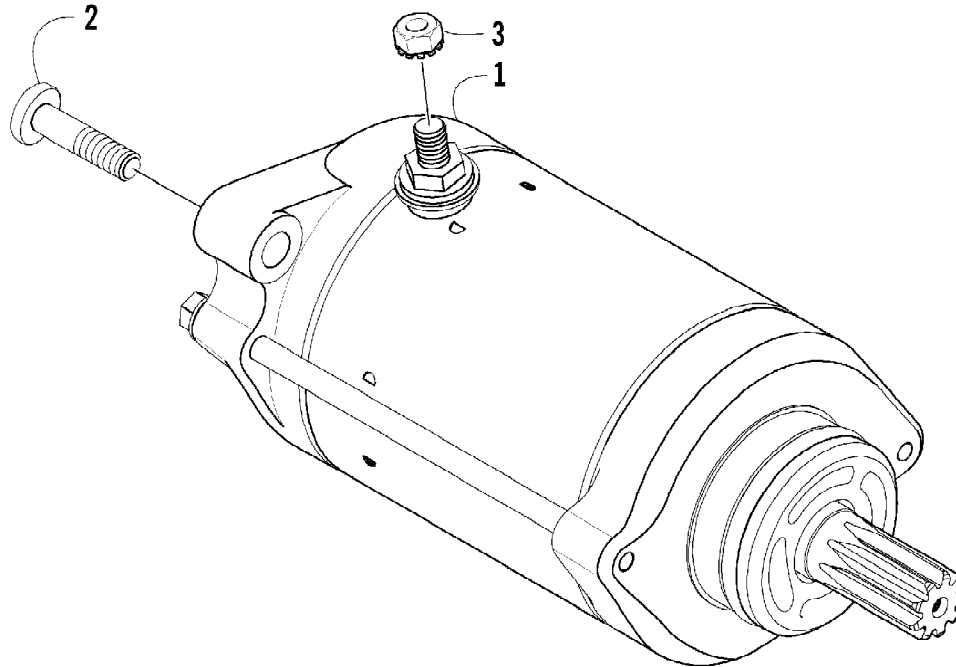

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834B06C)07  
STARTER MOTOR ASSEMBLY (Up to VIN: 4UF07ATV97T270001)

Ref #	Part Number	Qty	S/P/F	Description
1	0825-012	1	S	Motor, Starter - Assembly
2	8468-630	2		Screw, Machine
3	0623-038	1		Nut w/Washer

 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P8349060)  
STARTER MOTOR ASSEMBLY (VIN: 4UF07ATV97T270001 and above) Page 10 of 10

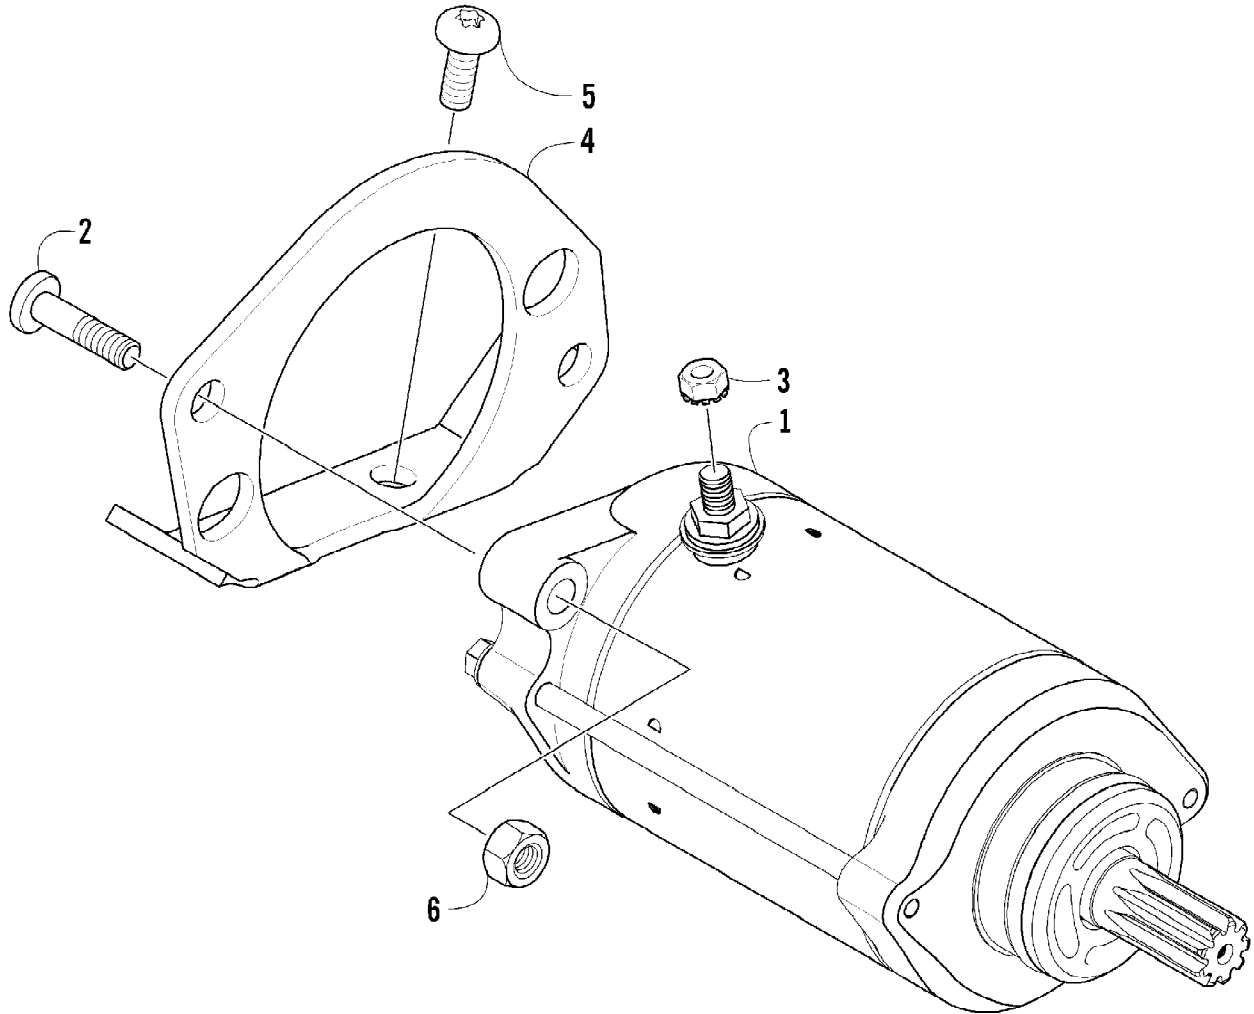

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894BUSQ)07  
STARTER MOTOR ASSEMBLY (VIN: 4UF07ATV97T270001 and above)

Ref #	Part Number	Qty	S/P/F	Description
1	0825-012	1	S	Motor, Starter - Assembly
2	8468-630	2		Screw, Machine
3	0623-038	1		Nut w/Washer
4	0815-018	1		Bracket, Mounting
5	8468-612	2		Screw, Machine
6	8427-602	2		Nut, Lock

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B26Q) 07  
STEERING POST ASSEMBLY

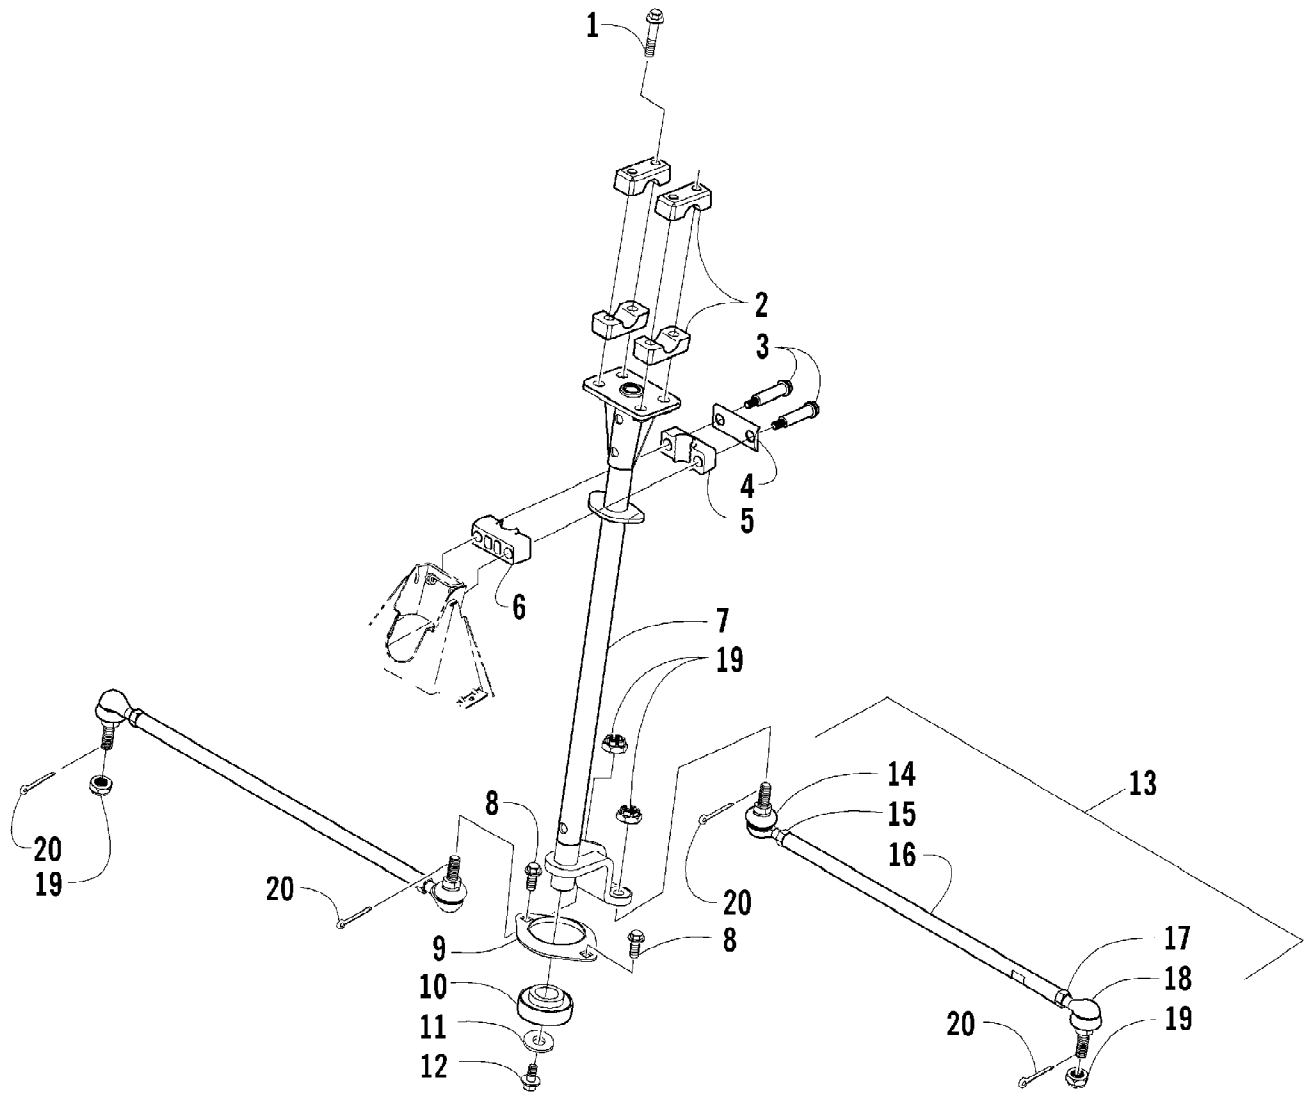




2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B16C)07  
 STEERING POST ASSEMBLY

Page 18 of 20

Ref #	Part Number	Qty	S/P/F	Description
1	8408-860	4		Screw, Cap
2	0405-035	4		Cap, Steering Adjuster
3	0423-505	2		Screw, Shoulder
4	0405-166	1		Cap, Housing
5	0405-138	1		Housing, Lower
6	0405-139	1		Housing, Upper
7	0505-451	1	S	Post, Steering
8	8408-816	2		Screw, Cap
9	0602-233	1		Flange, Bearing
10	0405-052	1		Bearing w/Inverted Oil Seal
11	0423-073	1		Washer
12	8409-020	1	/P	Screw, Cap
13	0505-408	2	S	Tie Rod - Assembly (inc. 14-18)
14	0405-083	2	S	Ball Joint, Tie Rod - Left
15	0423-013	2		Nut - Left
16	0405-107	2	S	Tie Rod
17	8420-002	2	/P	Nut - Right
18	0405-082	2	S	Ball Joint, Tie Rod - Right
19	0423-157	4		Nut, Lock
20	0623-175	4		Pin, Cotter

 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834BUSQ)07  
TAILLIGHT ASSEMBLY

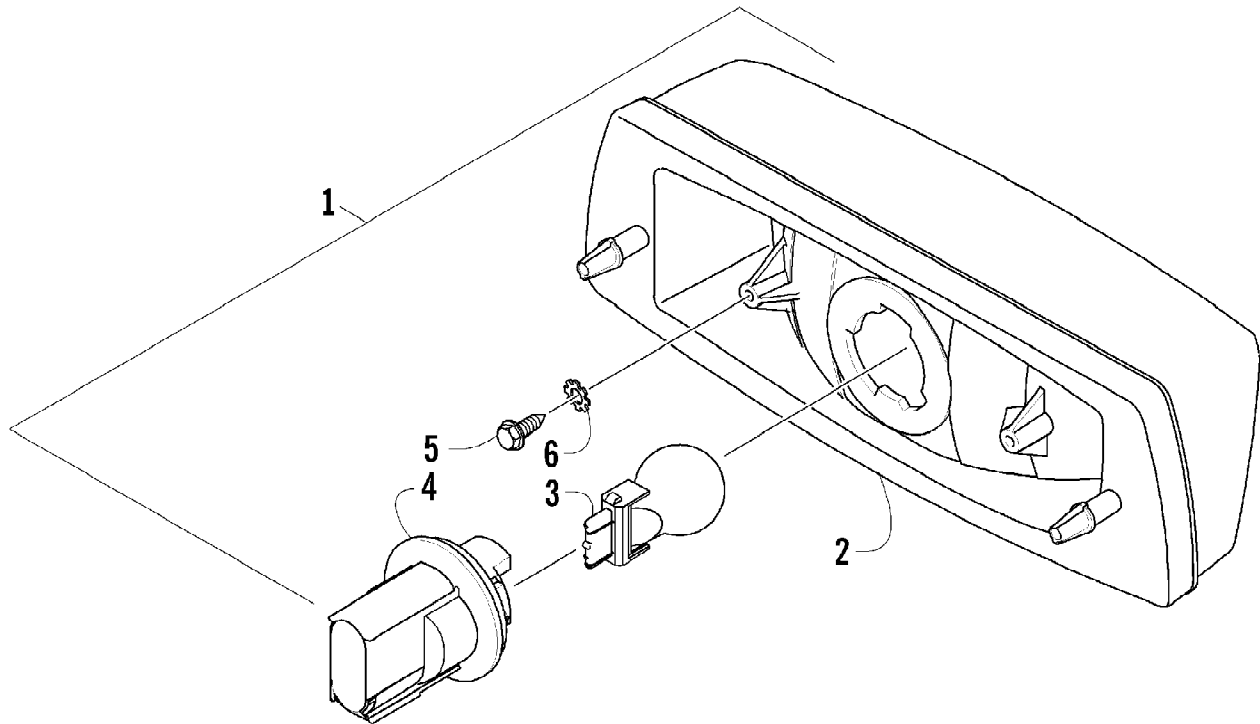

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P894B56Q)07  
TAILLIGHT ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0509-022	1		Taillight Assembly (inc. 2-4)
2	0509-025	1		Housing, Taillight
3	0409-056	1		Bulb, Taillight
4	0409-057	1		Socket, Taillight
5	0623-301	2	/P	Screw, Self-Tapping
6	8053-212	2	/P	Washer, Lock - External Tooth

 
2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P8349650)07  
THROTTLE CASE ASSEMBLY

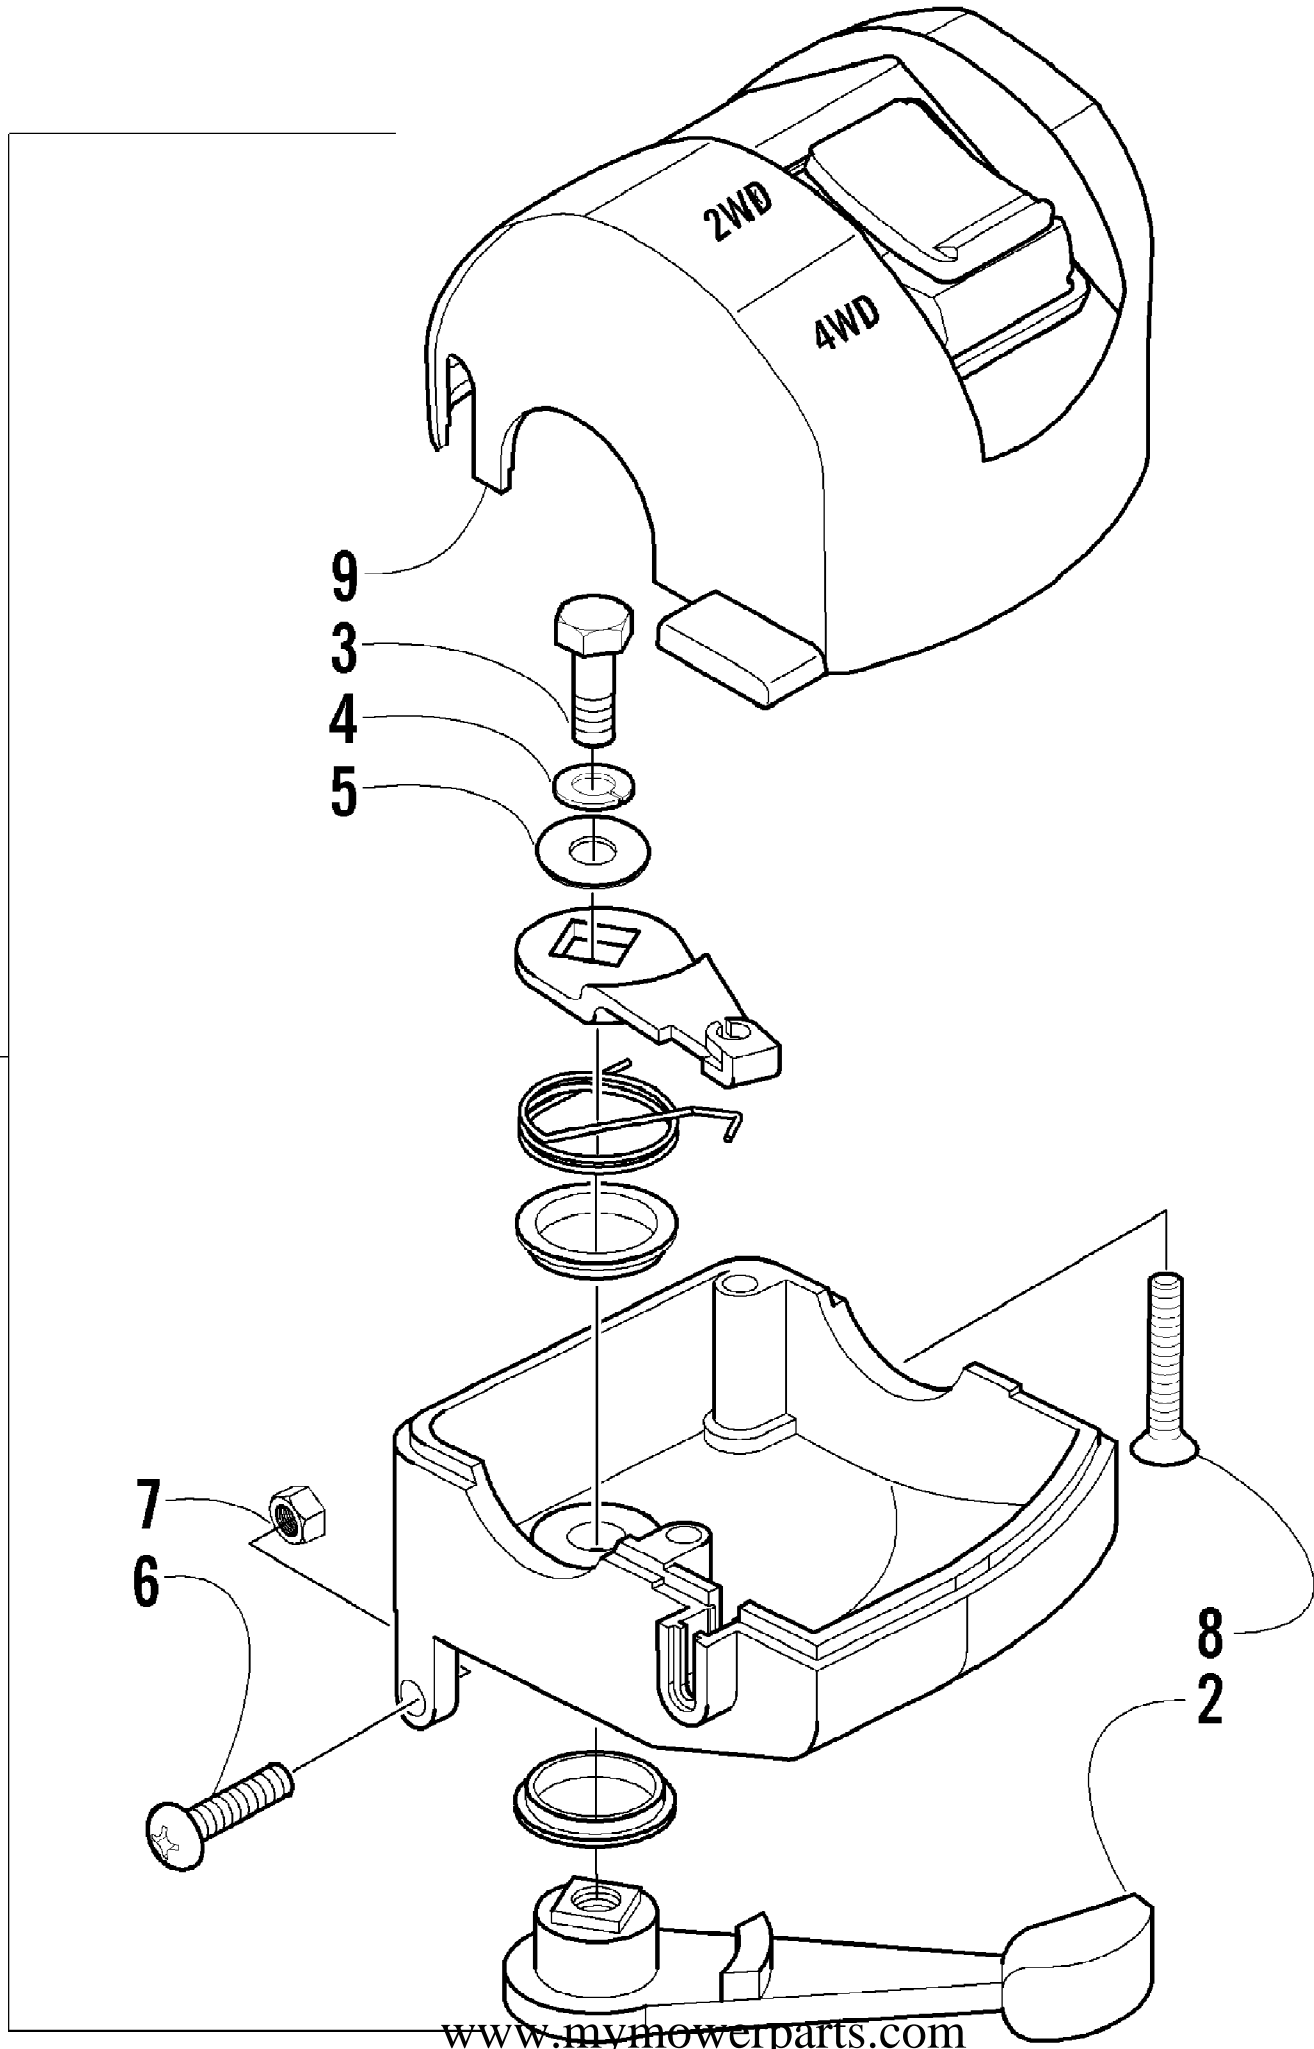

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P8947USQ)07  
THROTTLE CASE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0509-012	1		Case, Throttle - Assembly (inc. 2-9)
2	3409-001	1		Lever
3	3004-533	1	S/P	Screw, Cap
4	3004-447	1	/P	Washer, Lock
5	3003-030	1	/P	Washer
6	3423-014	1		Screw
7	3423-327	1		Nut
8	3423-199	2		Screw
9	0409-048	1		Cover, Throttle w/Switch

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P834860) 07  
TRANSMISSION ASSEMBLY

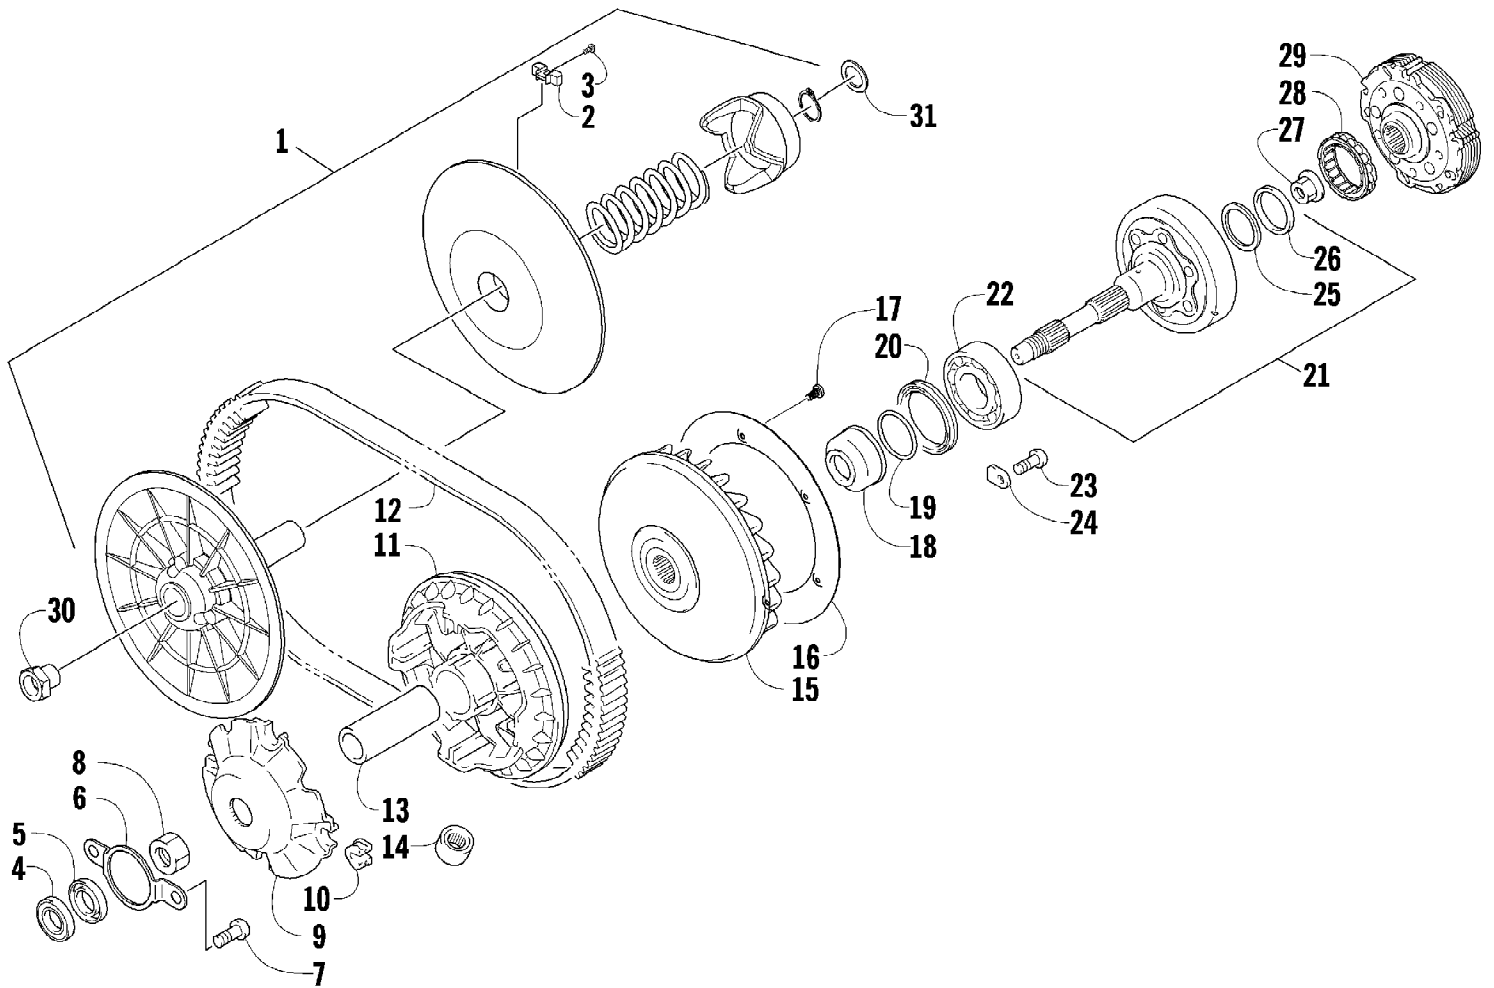


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007P8949USQ) 07  
TRANSMISSION ASSEMBLY

Page 10 of 10

Ref #	Part Number	Qty	S/P/F	Description
1	0823-157	1	S/P	Pulley, Driven - Assembly (inc. 2-3 and 30)
2	0823-176	3	/P	Shoe, Cam
3	0823-177	3		Screw, Machine
4	0832-010	1		Bearing
5	0823-016	1	S	Seal, Clutch Housing - Right
6	0823-020	1		Retainer, Bearing
7	0826-031	2		Screw
8	0827-010	1		Nut
9	0823-008	1		Plate, Movable Drive Face
10	0823-010	4		Damper, Movable Drive Face
11	0823-159	1		Face, Movable Drive
12	0823-013	1		Belt, Drive
13	0823-149	1		Spacer, Movable Drive Face
14	0823-012	8	S	Roller, Movable Drive Face
15	0823-001	1	S	Face, Fixed Drive
16	0823-131	1		Shroud, Drive Face
17	0623-914	6		Screw, Self-Tapping
18	0823-015	1		Spacer, Fixed Drive Face
19	0470-531	1		O-Ring
20	0830-034	1	S	Seal, Clutch Housing - Right
21	0823-270	1	S	Housing, Clutch - Assembly (inc. 25-26)
22	0832-009	1	/P	Bearing
23	0826-029	2		Screw, Bearing Retainer
24	0822-010	2	/P	Retainer, Bearing
25	0828-075	1		Shim
26	0823-017	1	S	Seal, Clutch Housing - Left
27	0827-011	1		Nut
28	0823-018	1		Clutch, One-Way
29	0823-098	1	S	Clutch, Centrifugal - 6 Plate
30	0823-178	1		Nut, Driven Pulley
31	0828-076	1		Shim

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007ATV650H1) 07  
WATER PUMP ASSEMBLY

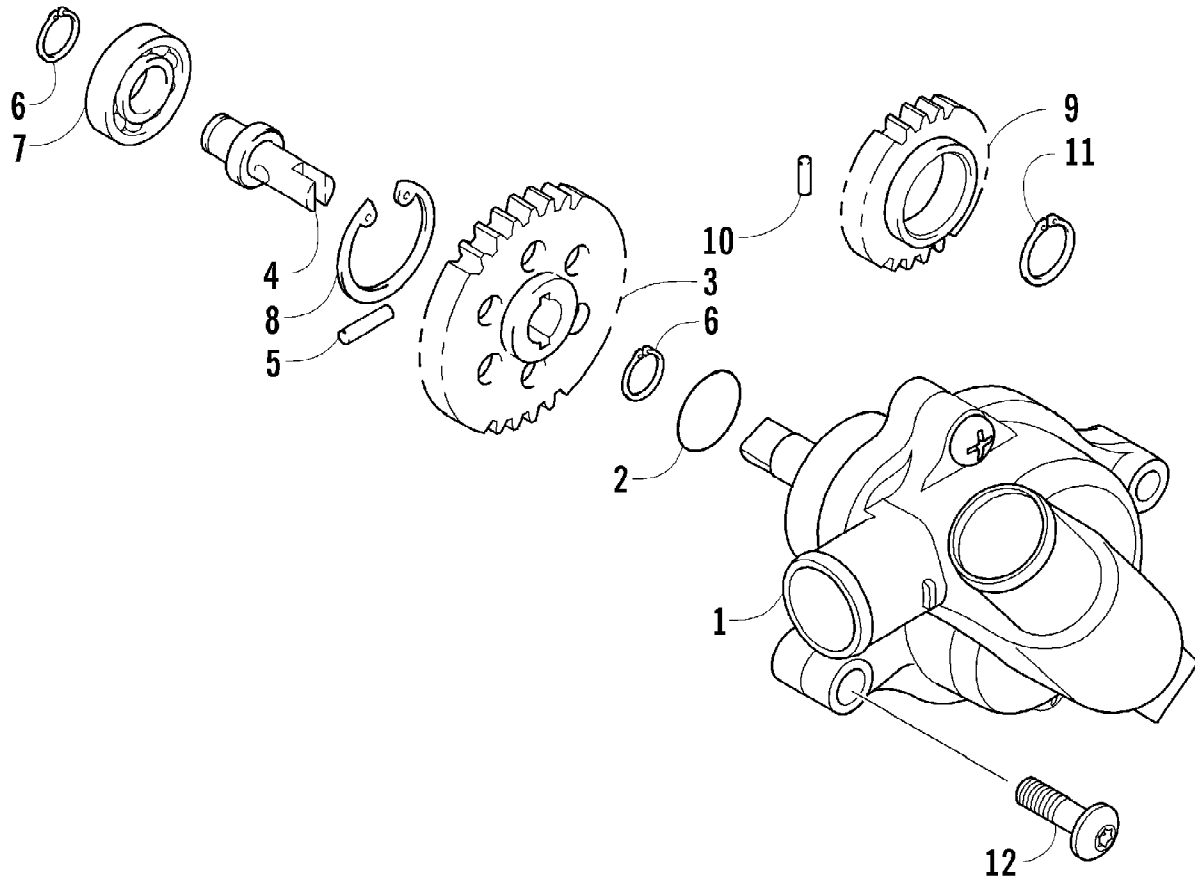




2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007ATV650H1) 07  
 WATER PUMP ASSEMBLY

Page 4 of 10  
 P16S4BUSQ

Ref #	Part Number	Qty	S/P/F	Description
1	0813-001	1		Pump, Water - Assembly (inc. 2)
2	0830-029	1		O-Ring
3	0813-004	1		Gear, Driven
4	0813-005	1		Shaft, Driven Gear
5	0829-009	1		Pin, Driven Gear
6	0831-002	2		Circlip, Driven Gear
7	0832-008	1	S	Bearing, Shaft
8	0831-004	1		Circlip, Shaft Bearing
9	0811-003	1		Gear, Water Pump Drive
10	0829-007	1		Pin, Drive Gear
11	0831-005	1		Circlip, Drive Gear
12	8468-665	2		Screw, Machine

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007ATV650H1) 07  
WHEEL AND TIRE ASSEMBLY

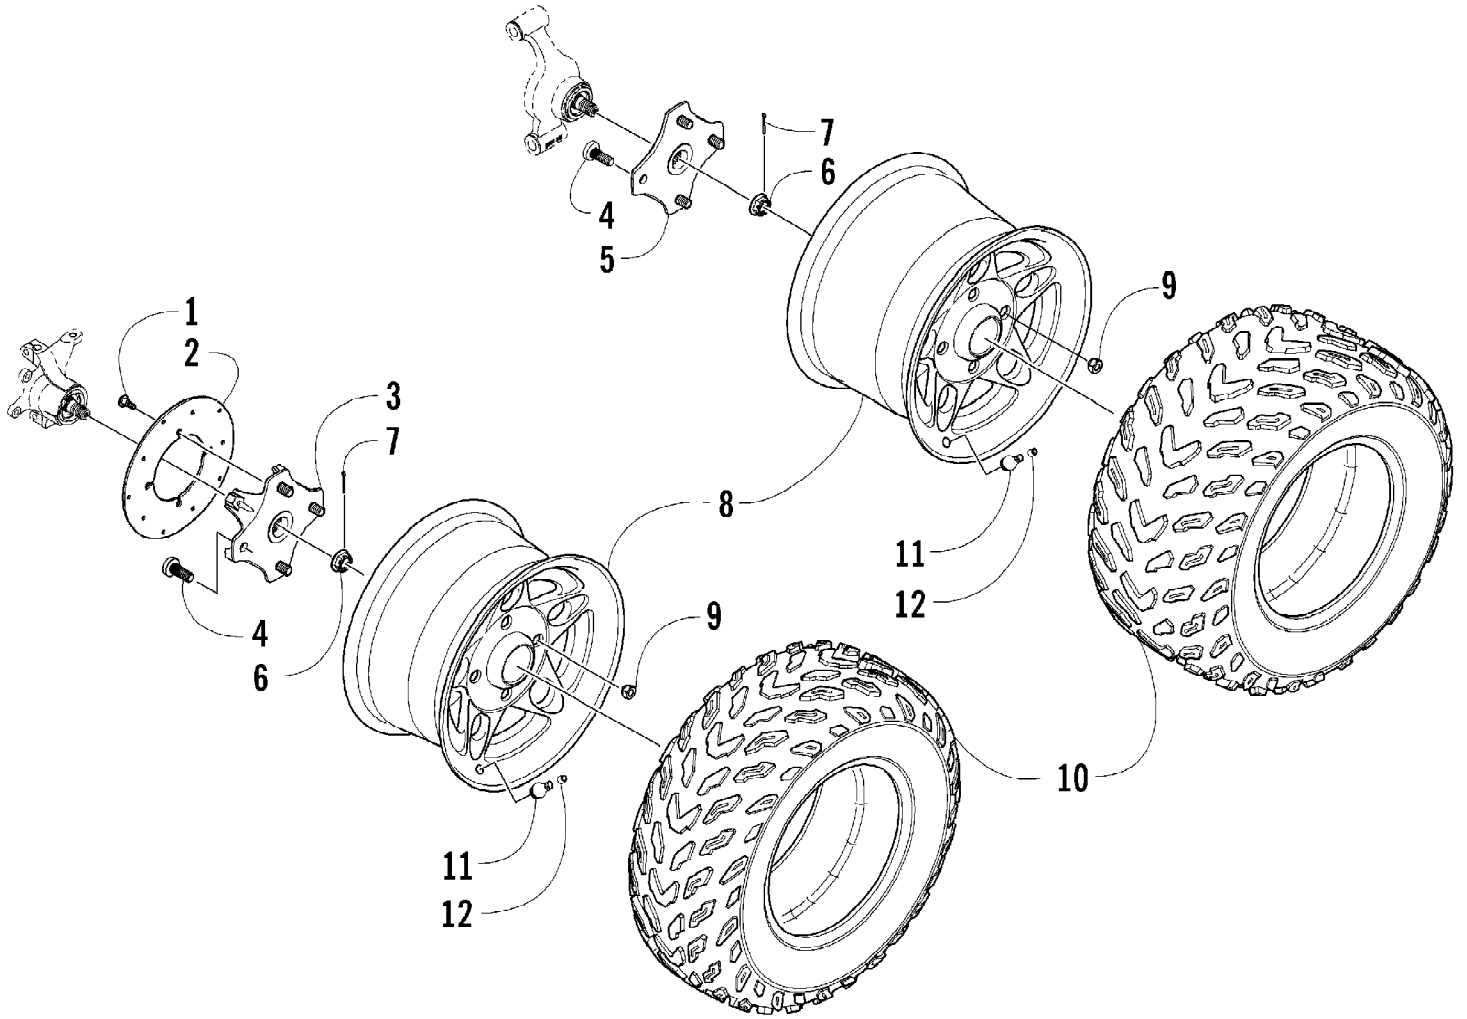


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007ATV650H1) 07  
WHEEL AND TIRE ASSEMBLY

Page 4 of 6

Ref #	Part Number	Qty	S/P/F	Description
1	0423-557	12		Screw, Shoulder w/Loctite
2	1436-164	3	/P	Disc, Brake
3	0502-599	2	S	Hub, Wheel - Front (inc. 4)
4	0402-974	16	/P	Stud, Wheel Hub
5	0502-601	1	S	Hub, Wheel - Rear - Left (inc. 4)
5	0502-599	1	S	Hub, Wheel - Rear - Right (inc. 4)
6	0423-607	4		Nut, Castle Flange
7	0423-407	4		Pin, Cotter
8	1402-424	2		Wheel - Front
8	1402-425	2		Wheel - Rear
9	0423-618	16		Nut, Mounting - Wheel
10	1402-548	2		Tire - Front
10	1402-549	2		Tire - Rear
11	0402-064	4		Stem, Valve (inc. 12)
12	0402-140	4		Cap, Valve Stem

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007ATV650H1) WINCH ASSEMBLY

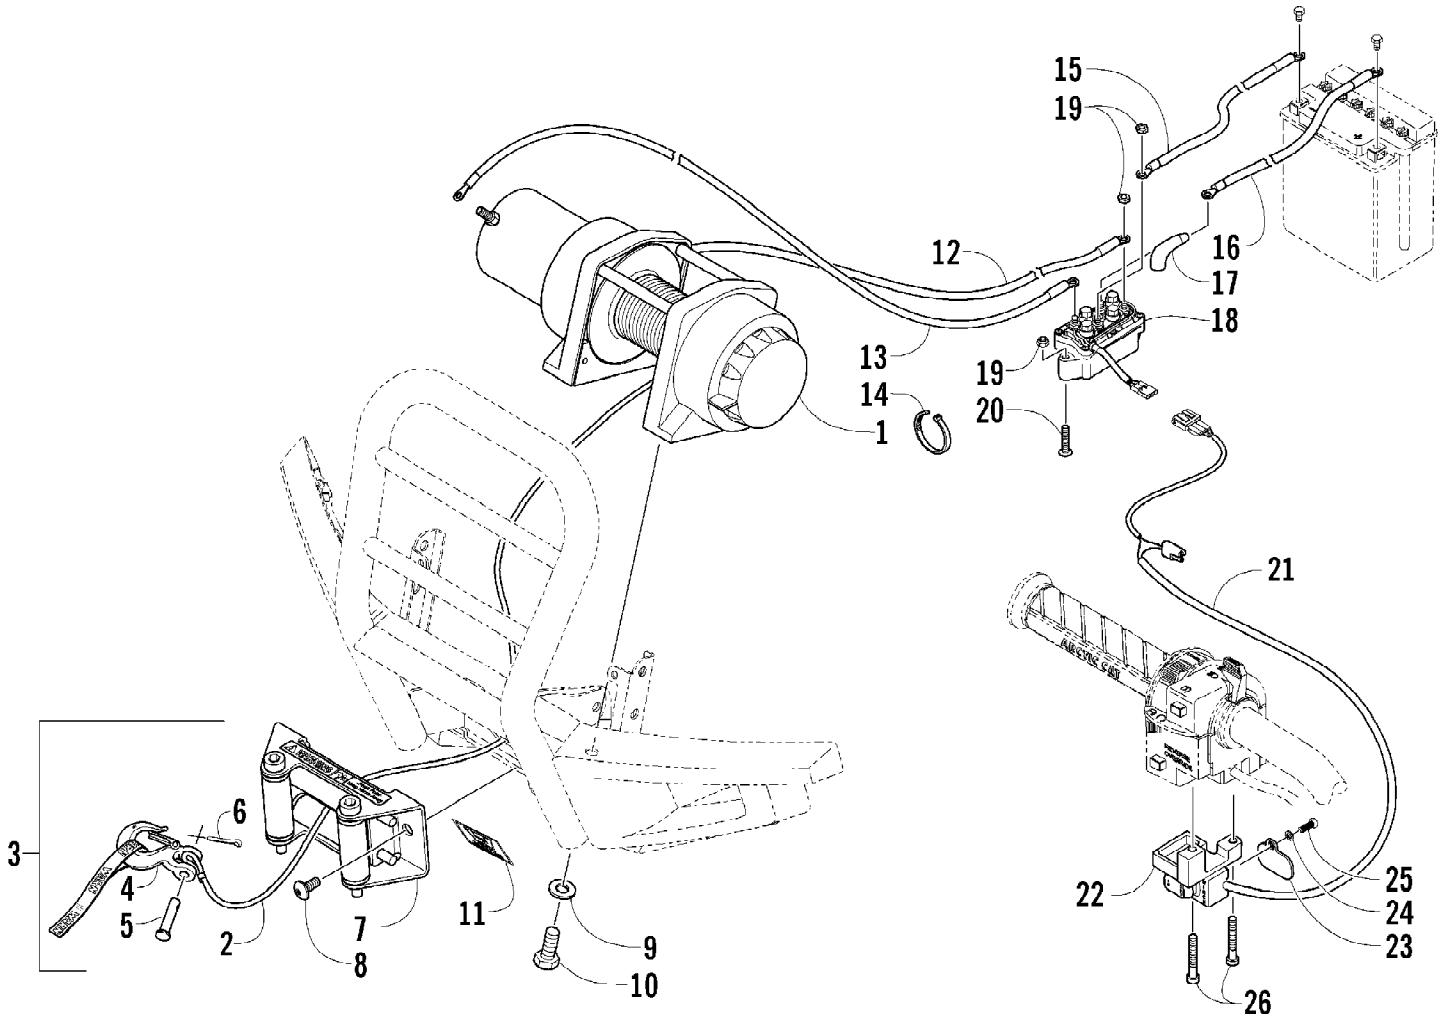


2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007ATV650H1) 07  
 WINCH ASSEMBLY

Page 4 of 6  
 Part 4560

Ref #	Part Number	Qty	S/P/F	Description
1	0441-490	1		Winch (inc. 2)
2	0441-061	1		Cable, Winch
3	0441-426	1	/P	Hook, Winch w/Strap - Assembly (inc. 4-6)
4	1441-131	1	/P	Hook, Winch w/Strap
5	1441-130	1		Pin
6	1441-129	1		Cotter Pin
7	0441-403	1	/P	Roller, Winch
8	8468-820	2		Screw, Machine
9	8051-246	4		Washer, Lock
10	1623-131	4		Screw, Cap
11	0411-433	1		Decal, Winch
12	1441-111	1		Cable, Winch/Solenoid - Yellow
13	1441-110	1		Cable, Winch/Solenoid - Blue
14	0123-788	AR	/P	Cable Tie - 7.5 in.
15	1441-112	1		Cable, Solenoid/Battery - Black
16	1441-113	1		Cable, Solenoid/Battery - Red
17	0441-060	3		Boot, Terminal
18	0409-066	1	/P	Solenoid
19	0623-038	6		Nut w/Washer
20	8476-625	2		Screw, Machine
21	0409-065	1	S	Switch, Control
22	0409-034	1		Holder, Control Switch
23	0409-075	1	/P	Cover, Switch
24	8051-212	1	/P	Washer
25	0423-382	1		Screw, Self-Tapping
26	8464-560	2		Screw, Machine

 2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007ATV650H1) 07  
WIRING HARNESS ASSEMBLY

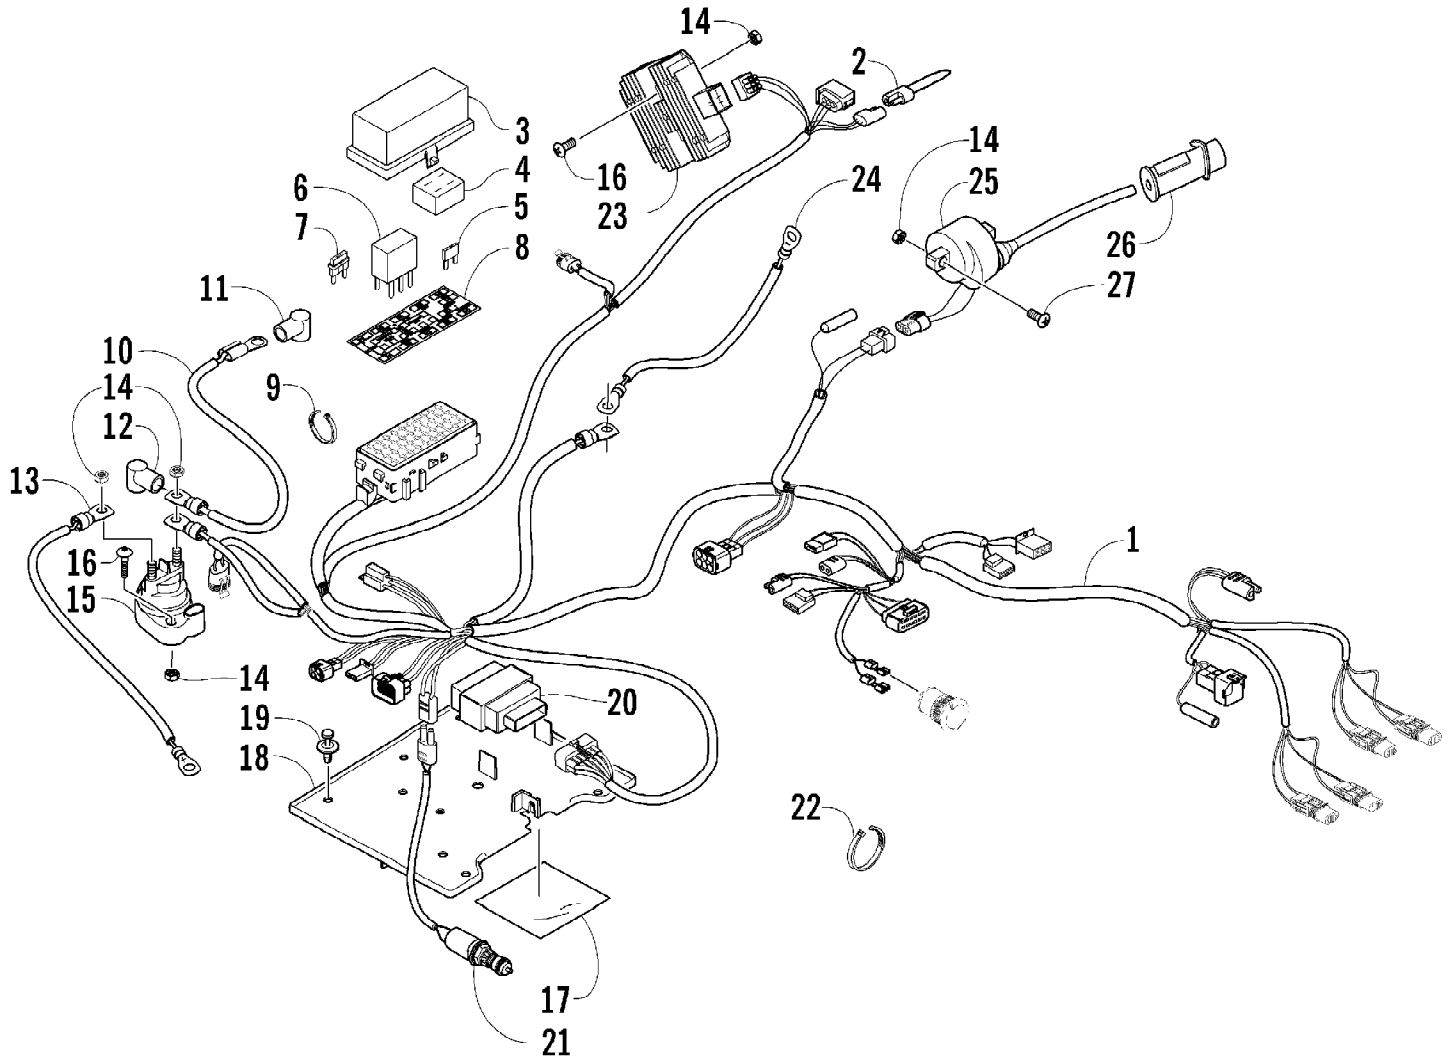

2007 ATV 650 H1 AUTOMATIC TRANSMISSION 4X4 TRV BLACK LE (A2007ATS4BUSEQ)07  
WIRING HARNESS ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0486-216	1		Harness, Main (inc. 2-8)
2	0486-164	1		Tether, Accessory Connector
3	0530-008	1		Cover, Fuse Block
4	0430-037	1		Holder, Fuse
5	0430-034	1		Diode
6	0430-033	2		Relay - 20 Amp/5P
6	0430-045	3	/P	Relay - 20 Amp/4P
7	0430-032	4		Fuse - 10 Amp
7	0430-031	3		Fuse - 15 Amp
7	0430-030	2		Fuse - 30 Amp
8	1411-502	1		Decal, Fuse Block
9	0123-788	AR	/P	Cable Tie - 7.5 in.
10	0445-064	1		Cable, Solenoid/Starter (inc. 11)
11	0645-019	1		Boot, Terminal
12	0645-327	1		Boot, Terminal
13	0445-062	1		Cable, Battery/Solenoid
14	0623-038	8		Nut w/Washer
15	0445-058	1	/P	Solenoid
16	8476-625	4		Screw, Machine
17	0412-291	1		Shield, Heat
18	1406-787	1		Tray, Electrical
19	0623-362	4		Rivet, Reinstallable
20	0824-038	1	/P	CDI Unit
21	0409-072	1		Switch, Brake - Assembly
22	0123-903	AR		Cable Tie - 11.5 in.
23	0824-037	1	/P	Regulator, Voltage
24	0445-063	1		Cable, Battery/Ground
25	0824-036	1		Coil, Ignition - Assembly
26	0824-021	1	S	Cap, Spark Plug
27	8476-620	2		Screw, Machine