 


1995 DAYTONA (95DTA-W-1995)  
BILGE PUMP ASSEMBLY

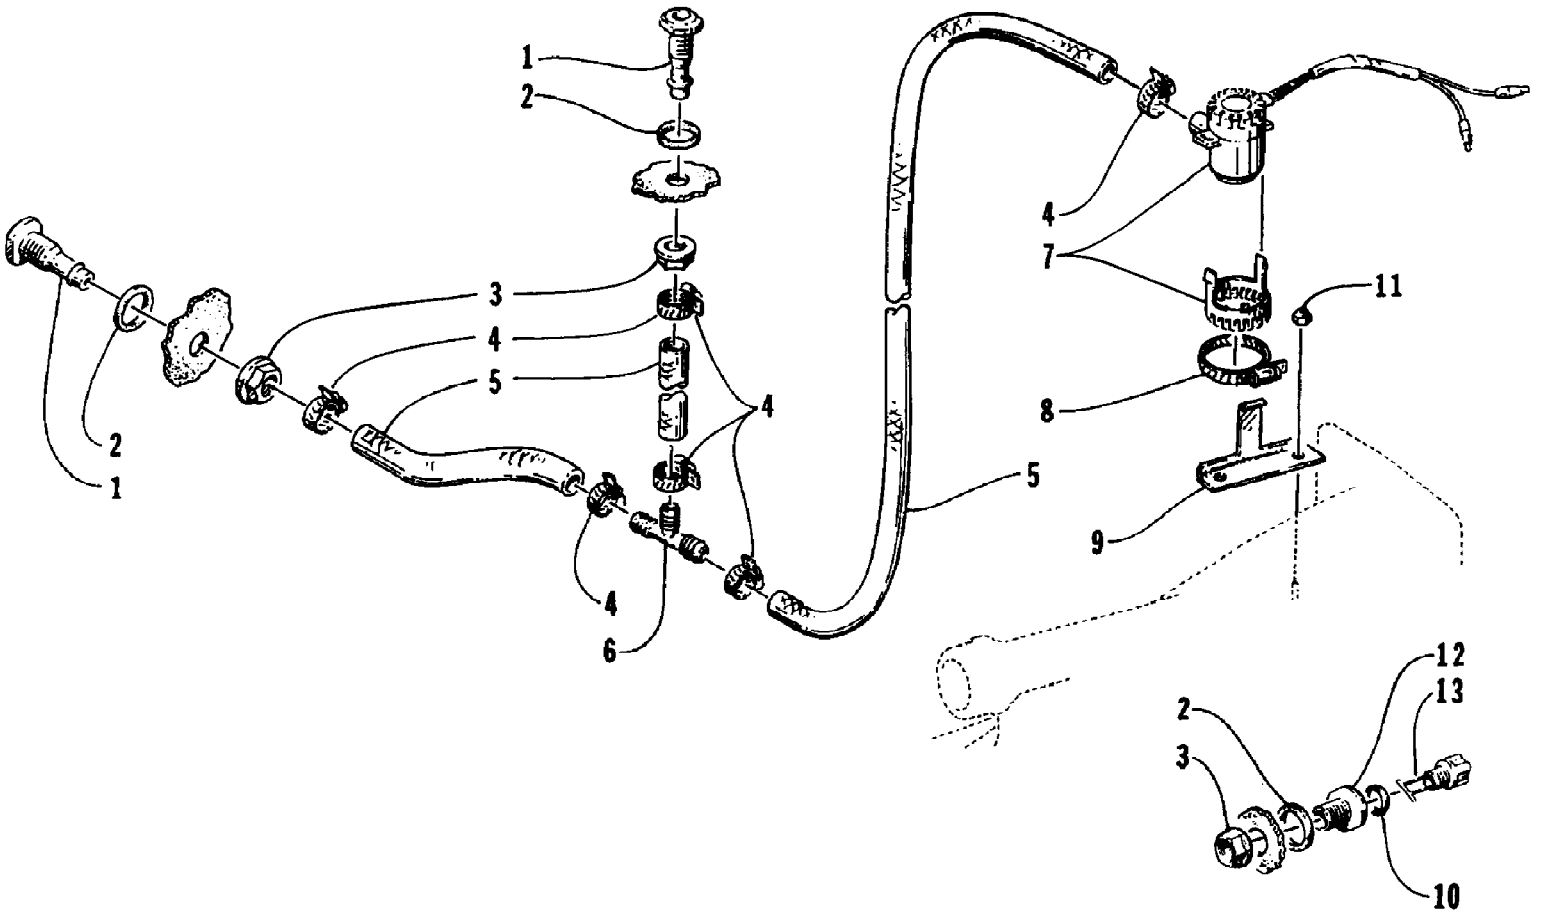


1995 DAYTONA (95DTA-W-1995)  
BILGE PUMP ASSEMBLY

Page 2 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0673-377	2		Fitting, Outlet - Bilge
2	0612-456	3		Seal, Fitting
3	0673-378	3	S	Nut, Fitting
4	0624-018	6		Clamp, Hose
5	0610-202	0	/P	Hose, Bilge
6	0673-483	1		T-Connection
7	0673-012	1		Pump, Bilge
8	0624-037	1		Clamp
9	0673-435	1		Plate, Mounting - Bilge Pump
10	0673-459	1		Seal, Drain Plug
11	0624-021	2		Nut, Lock
12	0673-278	1		Retainer, Drain Plug
13	0673-404	1		Plug, Drain

 1995 DAYTONA (95DTA-W-1995)  
CRANKCASE

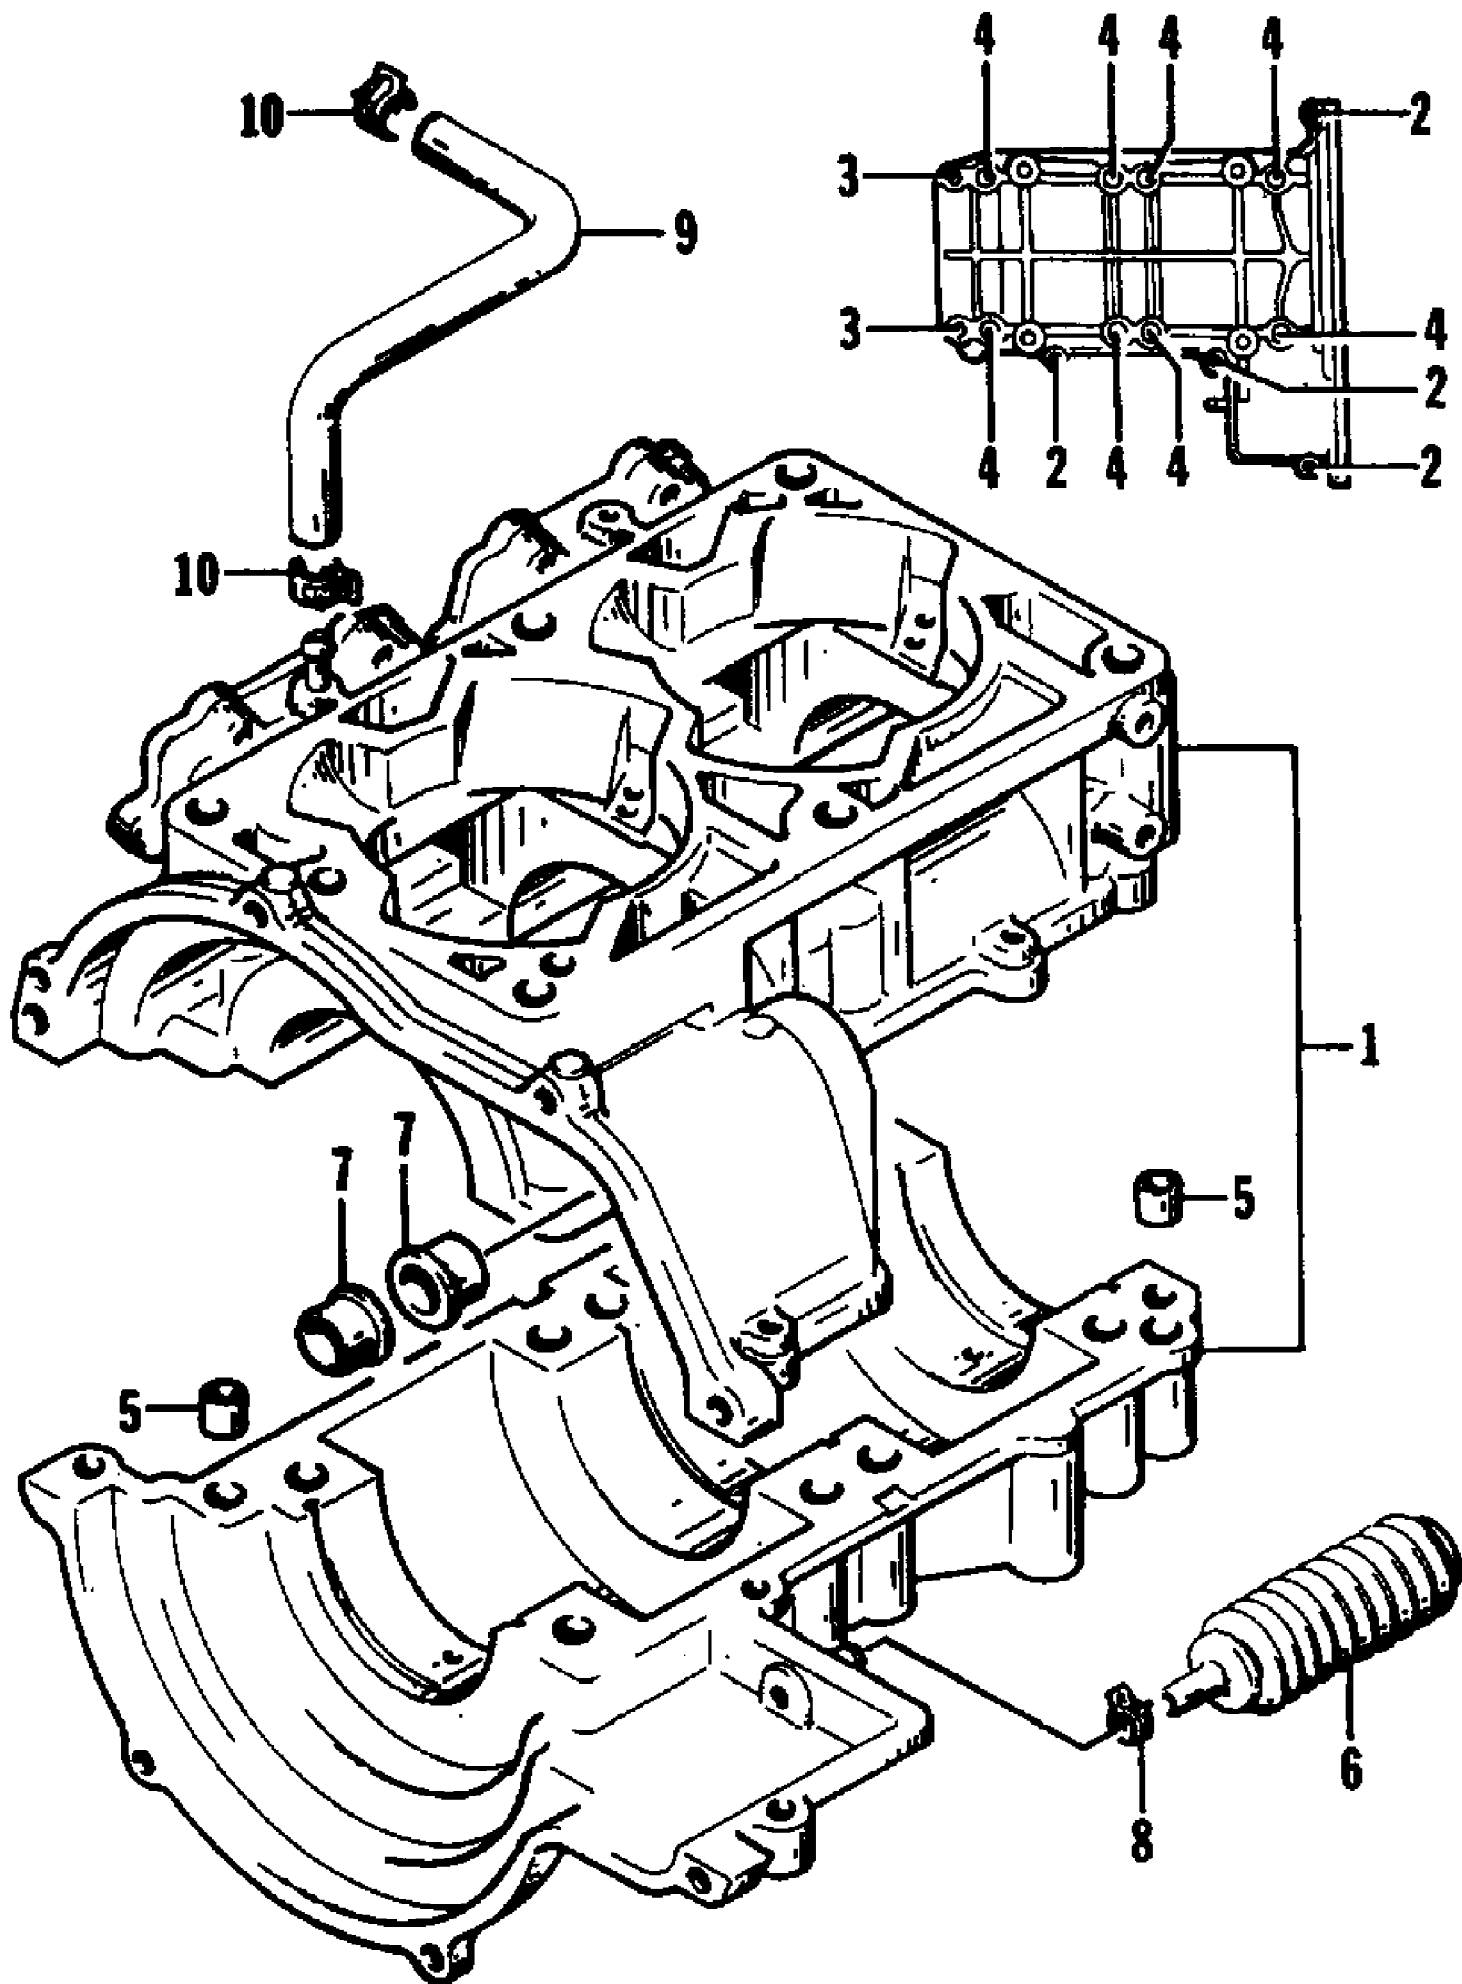


1995 DAYTONA (95DTA-W-1995)  
CRANKCASE

Page 4 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-176	1		Crankcase Assembly (inc. 2-5)
2	3008-210	4	/P	. Screw, Cap
3	3008-211	2	S	. Screw, Cap
4	3008-212	8	/P	. Screw, Cap
5	0691-729	2		. Pin
6	3008-100	1		Bladder, Magneto Case
7	3008-105	2		Bushing, Pinion Shaft
8	3008-038	1		Clamp
9	3008-200	1	/P	Hose, Vacuum
10	3008-039	2		Clamp, Hose

 
1995 DAYTONA (95DTA-W-1995)  
CRANKSHAFT

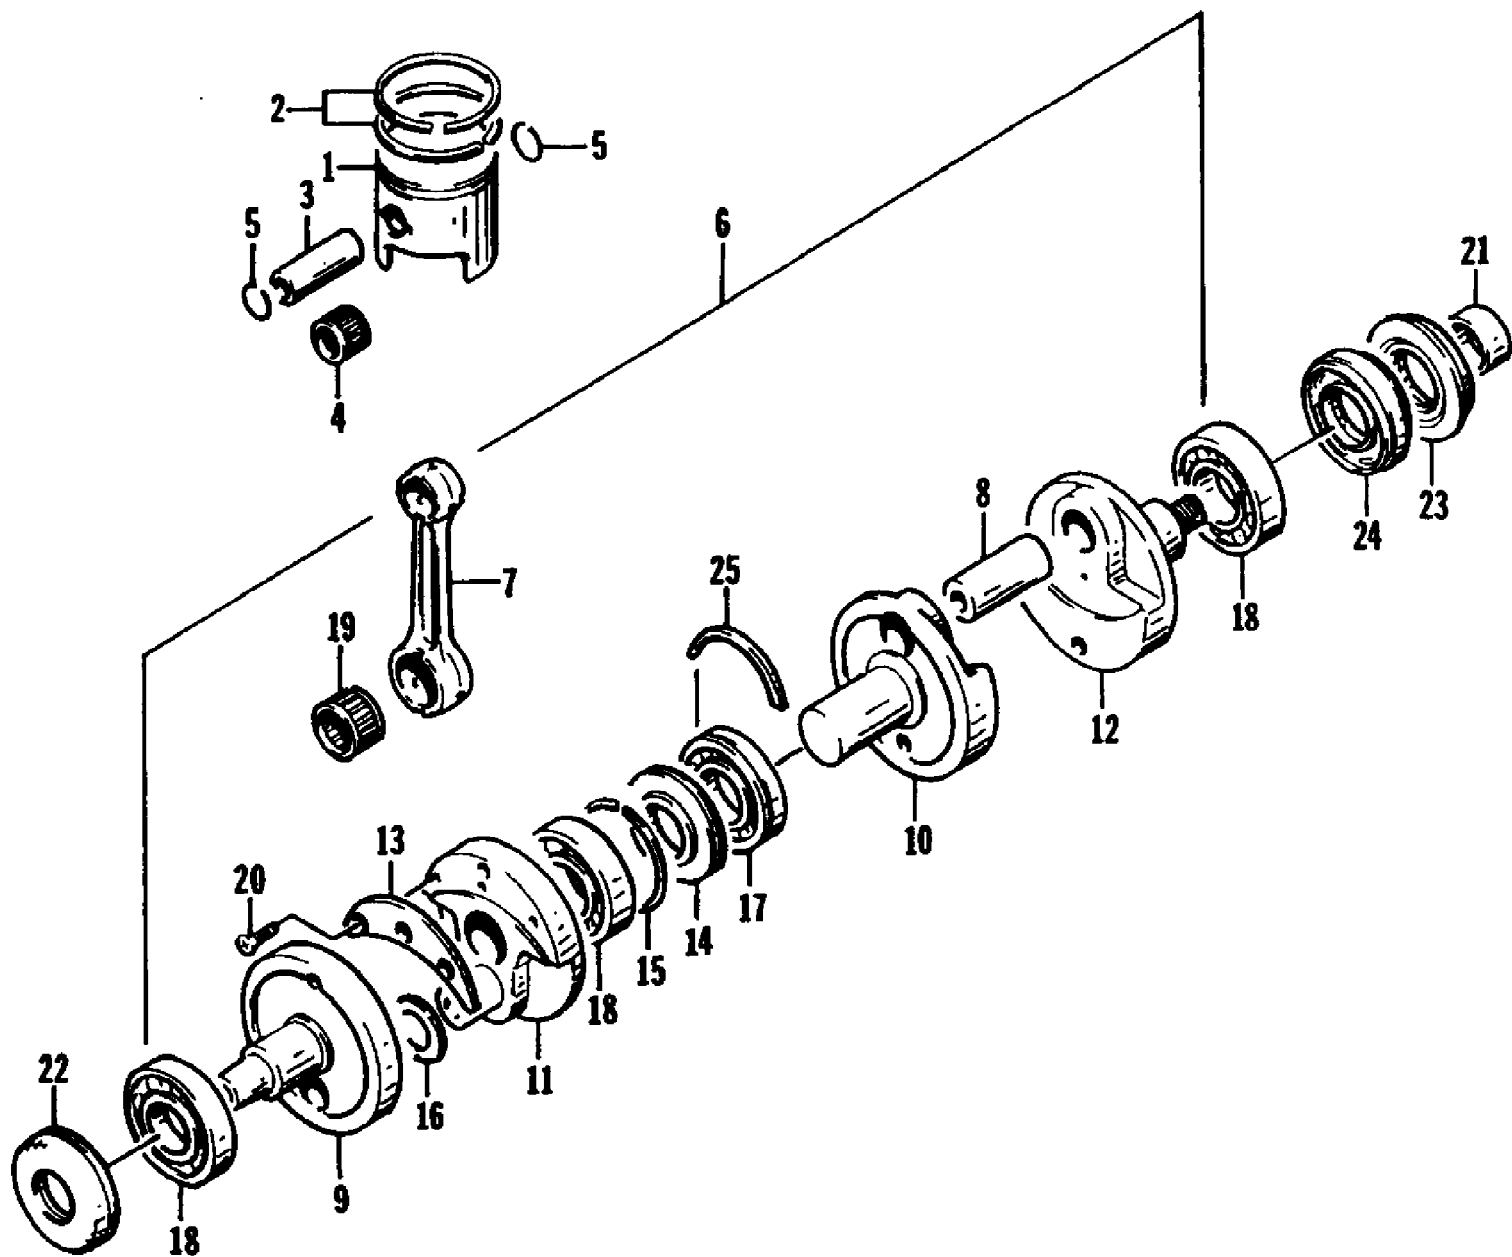

1995 DAYTONA (95DTA-W-1995)  
CRANKSHAFT

Page 6 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-223	2	S	Piston, Standard
1	3008-060	2		Piston, Optional (+ 0.012 in.)
1	3008-181	2		Piston, Optional (+ 0.022 in.)
2	3008-224	2	S	Ring Set, Standard
2	3008-143	2	/P	Ring Set, Optional (+ 0.012 in.)
2	3008-183	2		Ring Set, Optional (+ 0.022 in.)
3	3003-338	2	S	Pin
4	3003-433	2	/P	Bearing
5	3003-439	4	/P	Ring, Snap
6	3008-063	1	S	Crankshaft Assembly (inc. 7-20)
7	3008-062	2		. Connecting Rod
8	3008-064	1	S	. Crank Pin
9	3008-065	1		. Crankshaft, Right
10	3008-066	1		. Crankshaft, Center
11	3008-067	1		. Wheel
12	3008-068	1		. Crankshaft, Left
13	3008-069	1		. Balancer
14	3008-070	1		. Race, Center
15	3003-817	1	/P	. Ring, Center
16	3008-019	1		. Washer
17	3008-027	1		. Bearing
18	3008-028	3	S	. Bearing
19	3008-029	2		. Bearing
20	3004-372	3	S	. Screw, Machine
21	3008-072	1		Spacer, Crankshaft
22	3008-031	1		Seal, Oil - Right
23	3008-032	1		Seal, Oil - Left
24	3008-033	1		Seal, Oil - Center
25	3003-216	1		C-Ring

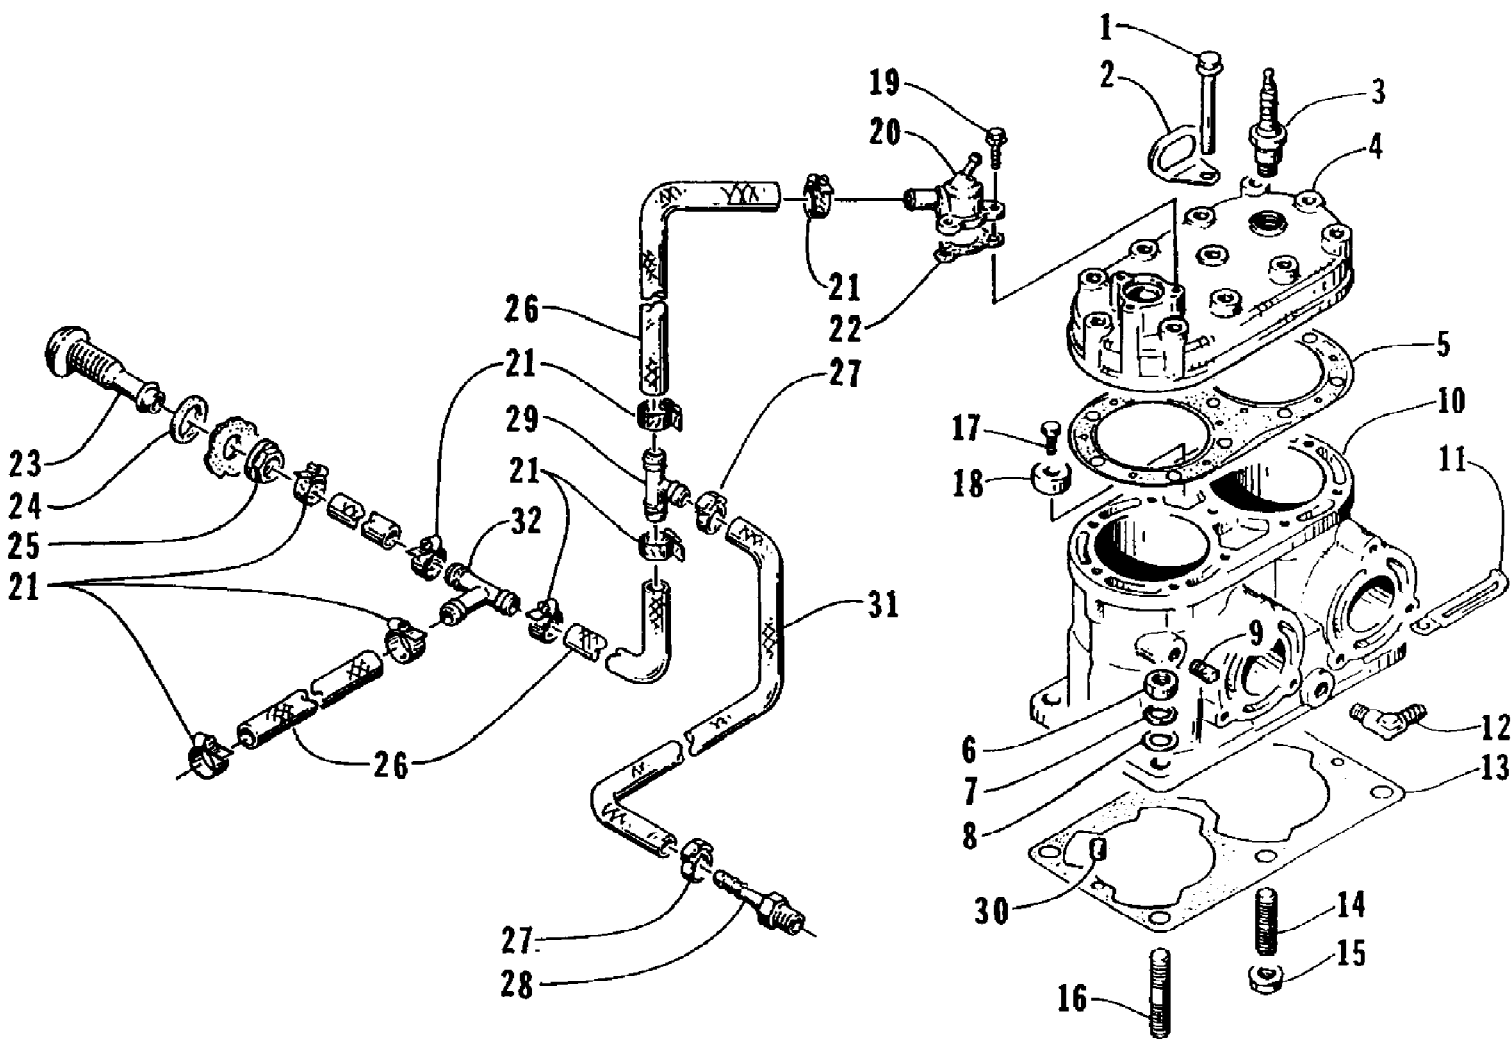 


1995 DAYTONA (95DTA-W-1995)  
CYLINDER ASSEMBLY

Page 8 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-206	11	/P	Screw, Cap
2	3008-059	1		Hook
3	0217-700	2		Spark Plug (BR9ES)
4	3008-194	1	S	Head, Cylinder
5	3008-174	1	S	Gasket, Cylinder Head
6	3008-209	5	/P	Nut
7	3008-207	5	/P	Washer, Lock
8	3008-237	5	S	Washer
9	3008-024	1	S	Plug
10	3008-225	1	S	Cylinder
11	3008-043	2	S	Clamp
12	3008-092	1		Union
13	3008-050	1		Gasket, Cylinder
14	3008-145	1	S	Stud
15	3008-208	1		Nut
16	3008-236	5		Stud
17	3008-013	1		Screw, Cap
18	3008-047	1		Zinc, Anode (inc. 17)
19	3008-216	3		Screw, Cap
20	3008-089	1		Cap, Thermostat
21	0624-016	8		Clamp, Hose
22	3008-230	1		Gasket, Thermostat
23	0673-374	1		Outlet, Water
24	0612-360	1		Seal, Outlet
25	0673-378	1	S	Nut, Outlet
26	0610-106	0	/P	Hose, Water
27	0623-365	2		Clamp
28	0673-524	1		Fitting, Exhaust Pipe
29	0673-137	1		T-Connection
30	3008-146	2		Pin
31	0610-183	0		Hose, Water
32	0673-136	1		T-Connection



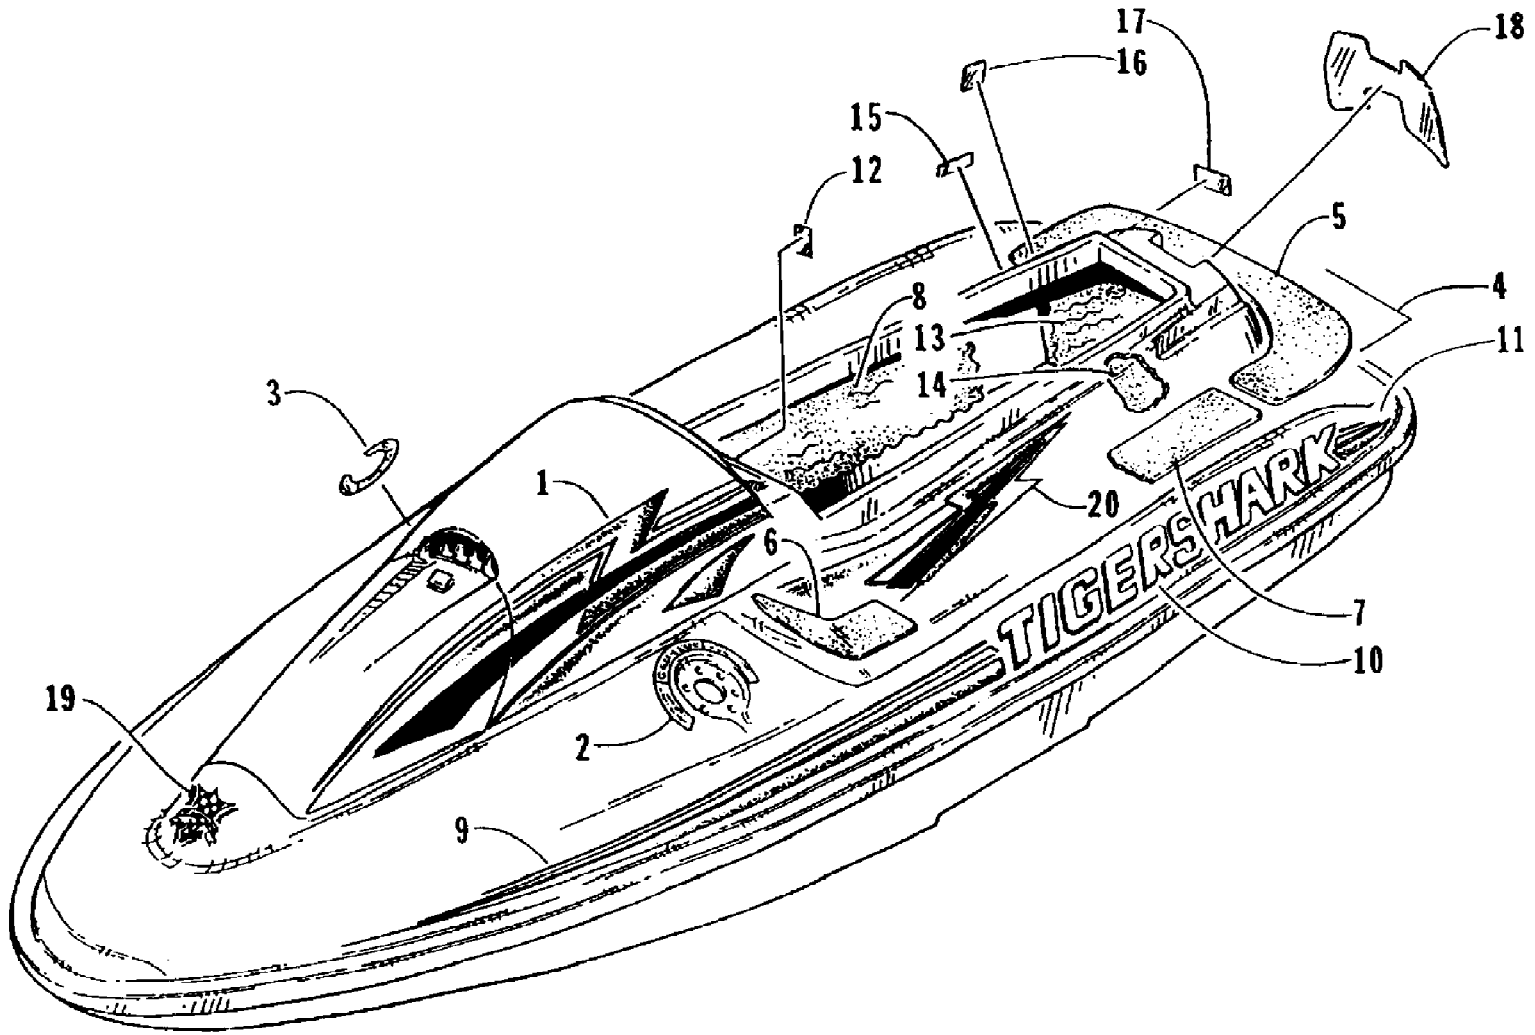 


1995 DAYTONA (95DTA-W-1995)  
DECAL AND FOOTPAD ASSEMBLY

Page 10 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0614-098	1		Decal, Hood - Right
1	0614-099	1		Decal, Hood - Left
2	1611-604	1		Decal, Warning Fuel
3	1611-605	1		Decal, Oil Filler
4	0773-366	1		Pad, Foot - Deck Assembly (inc. 5-7)
5	0673-571	1		. Pad, Foot - Rear
6	0673-572	1		. Pad, Foot - Front Right
6	0673-573	1		. Pad, Foot - Front Left
7	0673-574	2		. Pad, Foot - Right
7	0673-575	2		. Pad, Foot - Left
8	0617-182	1		Foam, Deck - Right
9	0614-102	1		Decal, Deck Front - Right
9	0614-103	1		Decal, Deck Front - Left
10	0614-140	2		Decal, Deck - "Tigershark"
11	0614-104	1		Decal, Deck Rear - Right
11	0614-105	1		Decal, Deck Rear - Left
12	1611-866	1		Decal, Warning - Gas Vapors
13	0617-181	1		Foam, Deck - Rear
14	0617-229	1		Foam, Deck - Left
15	0614-059	1		Decal, Common Sense
16	0614-066	1		Decal, USCG Exemption
17	0614-154	1		Decal, Caution - Uprighting
18	0614-155	1		Decal, Regulation
19	0614-097	1		Decal, Crest
20	0614-100	1		Decal, Side - Right
20	0614-101	1		Decal, Side - Left

 
1995 DAYTONA (95DTA-W-1995)  
ELECTRICAL MODULE AND BATTERY

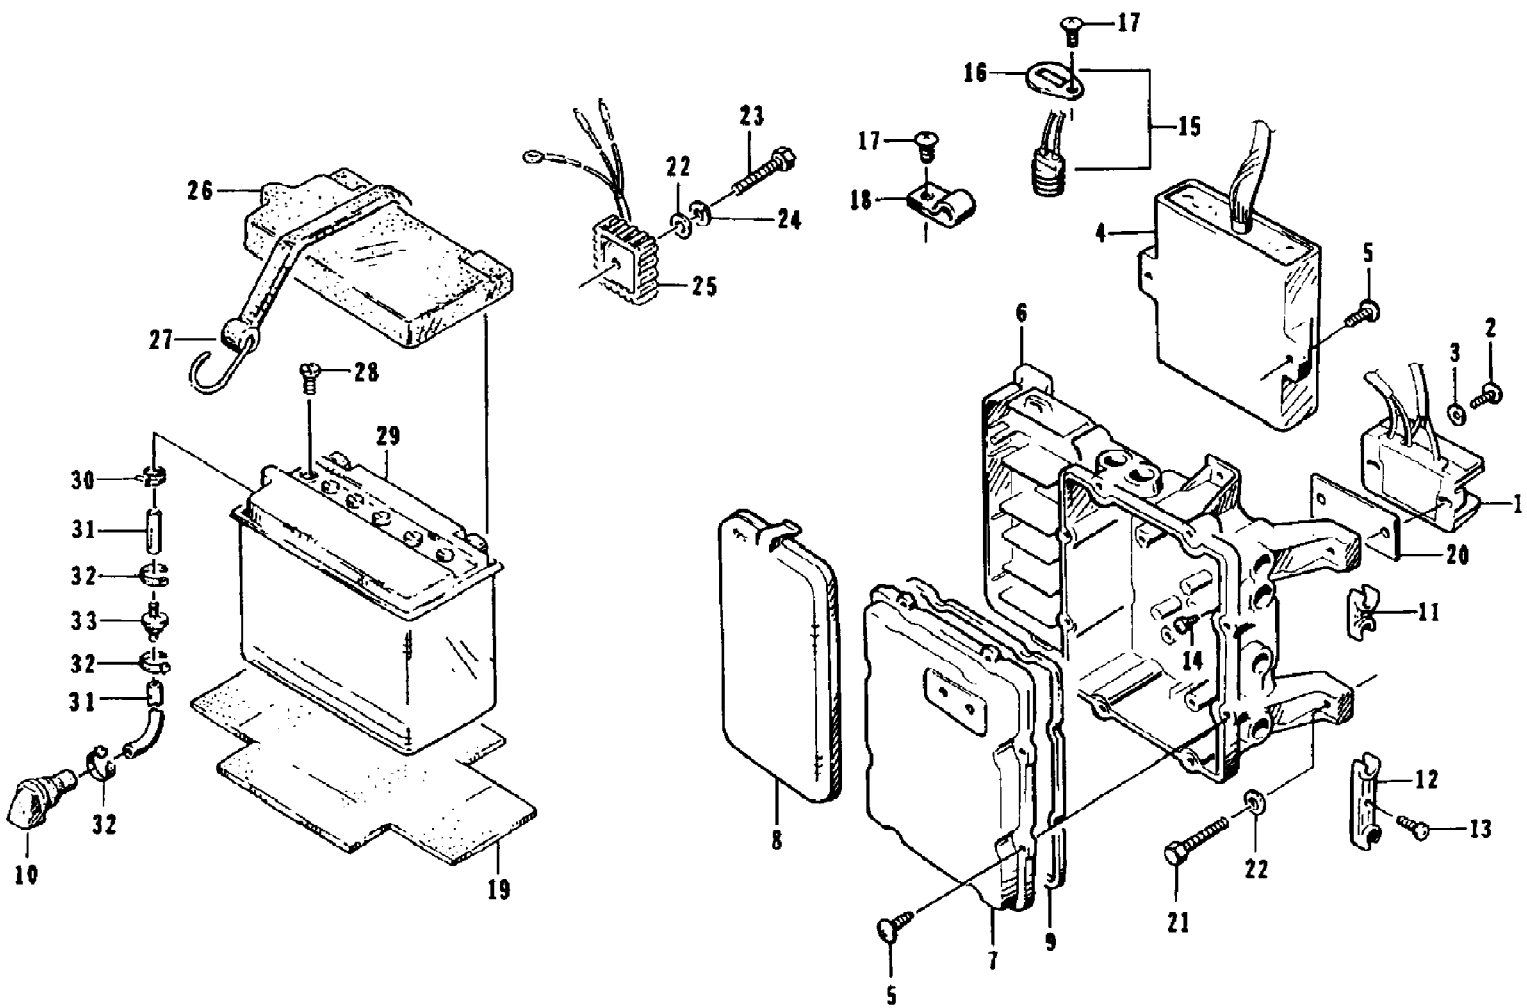

1995 DAYTONA (95DTA-W-1995)  
ELECTRICAL MODULE AND BATTERY

Page 12 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-335	1	S	Regulator Assembly (inc. 2)
2	3008-318	2	S	. Screw, Regulator
3	3008-337	2		Washer, Regulator
4	3008-338	1	S	Unit, CDI
5	3008-319	3		Screw, Cap
6	3008-341	1	S	Case
7	3008-340	1	S	Cover
8	3008-284	1	/P	Cover
9	3008-285	1	/P	Packing
10	0673-755	1		Vent, Fuel
11	3008-124	3		Holder
12	3008-125	1		Holder
13	3008-379	4		Screw, Cap
14	3008-217	1		Screw, Cap
15	3008-330	1	S/P	Sensor - Assembly (inc. 16)
16	3008-134	1		. Supporter
17	3008-219	3		Screw, Machine
18	3008-040	1		Clamp
19	0673-308	1		Pad, Battery
20	3008-320	1	S	Base, Regulator
21	0624-052	4		Screw, Cap
22	0624-022	5		Washer
23	0624-056	1		Screw, Cap
24	0624-115	1		Washer, Lock
25	0630-022	1		Module, Bilge Pump
26	0673-454	1		Cover, Battery
27	0773-382	2	/P	Tiedown
28	0645-045	6		Cap, Battery
29	0645-157	1		Battery (inc. 28, 30-31)
30	0645-152	1		. Clamp, Hose - Battery
31	0645-179	1	S	. Hose, Battery Vent
32	0123-811	3		Tie, Cable
33	0670-295	1		Valve, Check

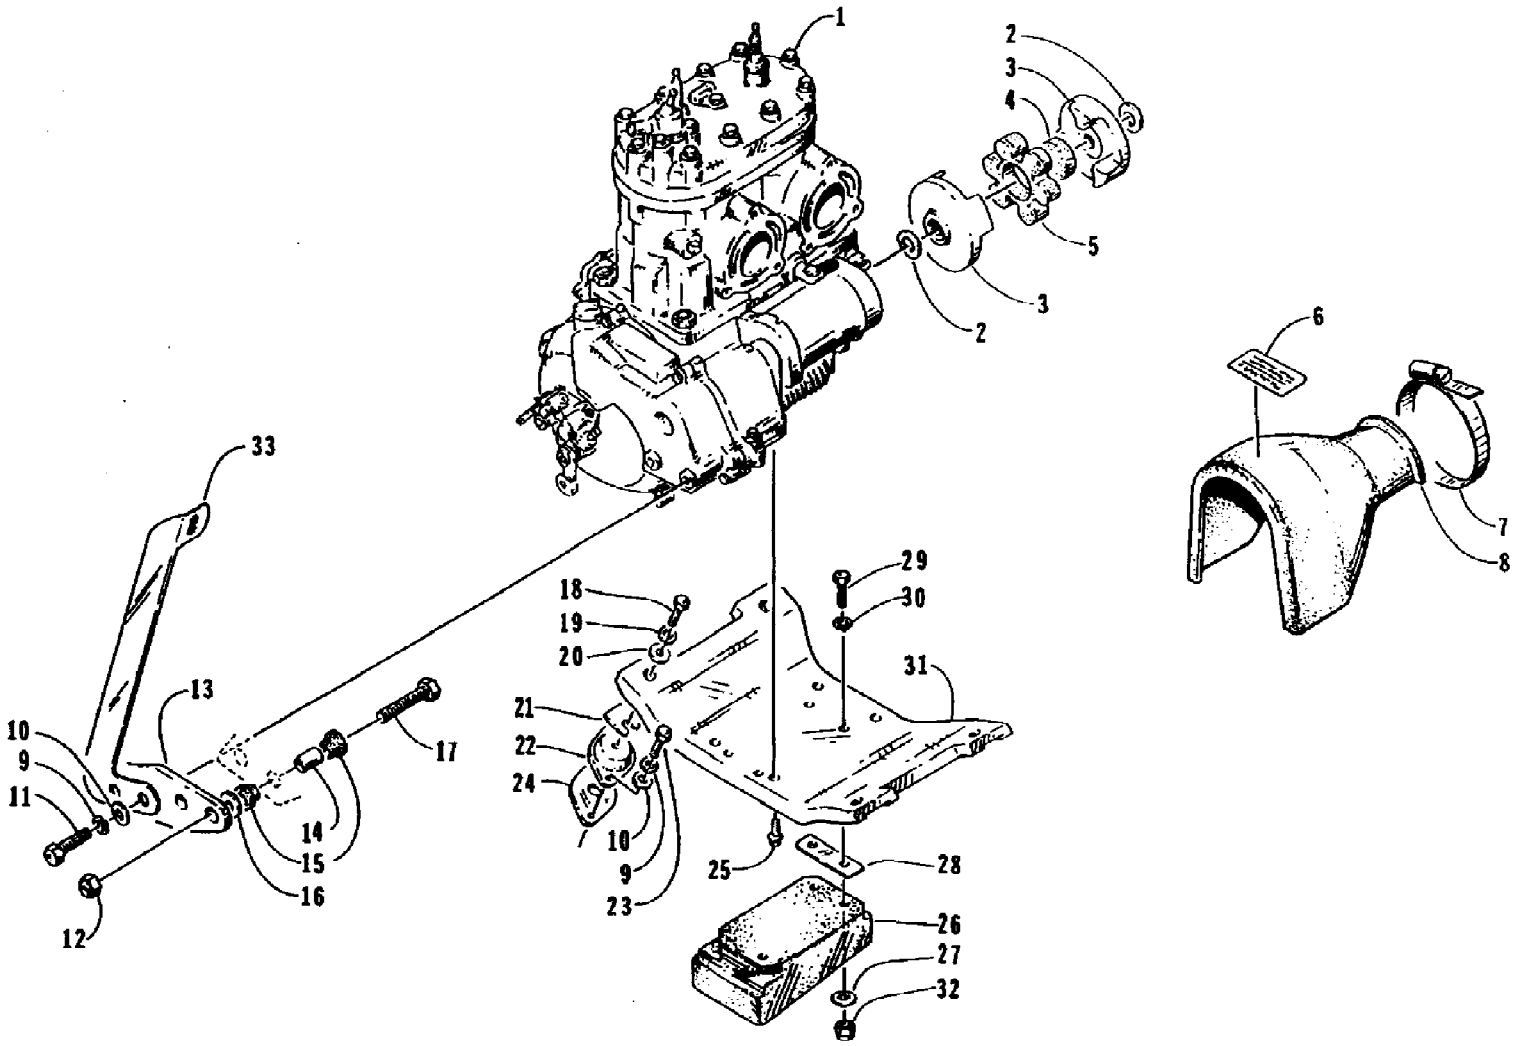 


1995 DAYTONA (95DTA-W-1995)  
ENGINE AND RELATED PARTS

Page 14 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0662-160	1	S	Engine
2	0624-017	2		Washer
3	3008-090	2	/P	Coupler, Engine
4	0673-146	1		Insert, Damper - Coupler
5	3008-091	1	S	Dampener, Coupler
6	1611-608	1		Decal, Warning
7	0624-037	1		Clamp, Hose
8	0673-469	1	S	Guard, Coupler
9	0624-027	10		Washer, Lock
10	0624-028	12		Washer
11	0624-026	2		Screw, Cap
12	0624-009	2		Nut, Lock
13	0673-826	1		Support, Exhaust Pipe
14	0612-536	2		Sleeve, Mounting
15	0612-535	4	S	Bushing, Isolator
16	0624-253	0		Washer
17	0624-206	2		Screw, Cap
18	3008-240	4		Screw, Cap
19	3008-021	4		Washer, Lock
20	3008-016	4		Washer
21	0624-015	0	/P	Shim - 1.5 mm
21	0624-014	0	/P	Shim - 0.5 mm
22	3008-054	4		Damper, Engine
23	0624-026	10		Screw, Cap
24	0673-508	0	/P	Shim, Engine Mount - 0.125 in.
24	0673-509	0		Shim, Engine Mount - 0.063 in.
25	3008-203	4	/P	Screw, Cap
26	0673-726	1		Mount, Snubber
27	0624-182	4		Washer
28	0673-520	0		Shim, Engine Snubber - 18 Gauge
28	0673-521	0		Shim, Engine Snubber - 12 Gauge
29	0624-052	4		Screw, Cap
30	0624-036	4		Washer, Lock
31	0608-148	1	S	Plate, Engine Mount
32	0624-021	4		Nut, Lock
33	0673-832	1		Bracket, Support - Exhaust

 1995 DAYTONA (95DTA-W-1995)  
EXHAUST ASSEMBLY

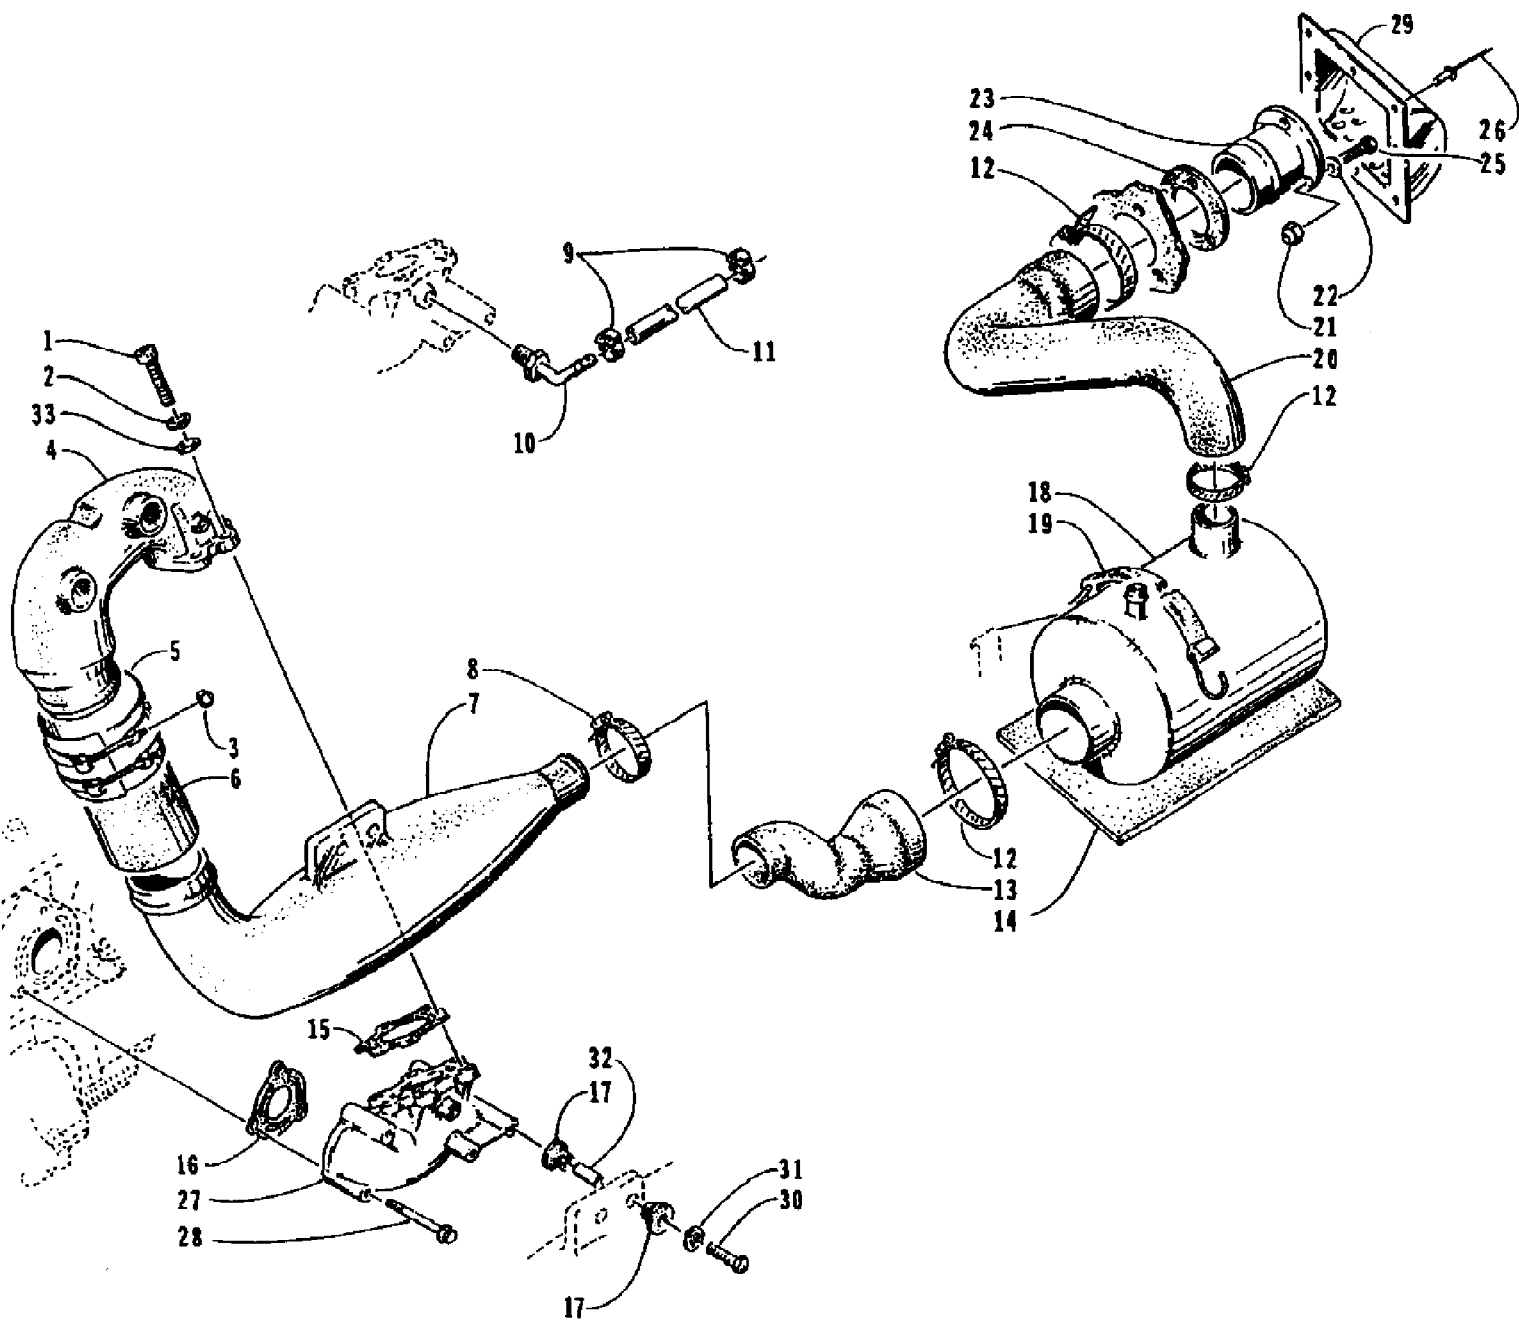

1995 DAYTONA (95DTA-W-1995)  
EXHAUST ASSEMBLY

Page 16 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0624-157	5		Screw, Cap
2	0624-027	5		Washer, Lock
3	0624-114	2		Nut, Lock
4	0612-541	1		Pipe, Exhaust
5	0612-567	1	S	Clamp, Hose
6	0610-180	1		Hose, Exhaust - Coupler
7	0612-524	1		Chamber, Expansion
8	0624-038	1		Clamp, Hose
9	0623-502	2		Clamp
10	0115-607	1	S	Fitting, Elbow
11	0610-008	0	/P	Hose, By-Pass
12	0624-169	3		Clamp, Hose
13	0710-146	1	S	Hose, Exhaust - In
14	0673-309	1		Pad, Muffler
15	3008-081	1	S	Gasket, Exhaust
16	3008-080	2	S	Gasket, Exhaust
17	0612-535	2	S	Bushing, Isolator
18	0712-173	1		Muffler
19	0773-382	2	/P	Tiedown, Rubber
20	0610-151	1		Hose, Exhaust - Out
21	0624-005	5	/P	Nut, Lock
22	0624-004	5		Washer
23	0673-705	1		Fitting, Outlet - Exhaust
24	0612-391	1		Seal, Outlet Fitting
25	0624-102	5		Screw, Cap
26	0623-590	8		Rivet
27	3008-195	1		Manifold, Exhaust
28	3008-151	6	S	Screw, Cap
29	0673-776	1		Deflector, Exhaust
30	0624-238	2		Screw, Cap
31	3008-021	2		Washer, Lock
32	0612-536	2		Sleeve, Mounting
33	0624-028	5		Washer





1995 DAYTONA (95DTA-W-1995)  
GAS TANK ASSEMBLY

Page 18 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0770-154	1		Tank, Gas - Assembly (inc. 2-5)
2	0670-416	1		. Fitting, Elbow
3	0673-448	1		. Ring, Compression
4	0710-108	0		. Hose, Gas Line
5	0510-358	1	/P	. Strainer, Gas Tank
6	0670-270	1		Neck, Filler
7	0670-271	1		Seal, Filler Neck
8	0624-120	15		Clamp, Hose
9	0610-107	0		Hose
10	0673-314	1		Pad, Gas Tank - Middle
11	0670-448	1		Cap, Gas Gauge
12	0670-304	1		Ring, Mounting - Filler Neck
13	0624-220	6		Screw, Machine
14	0624-005	6	/P	Nut, Lock
15	0624-004	6		Washer
16	0624-037	2		Clamp, Hose
17	0710-109	1	/P	Hose, Filler
18	0510-335	2	/P	Filter, Fuel
19	0773-383	2		Tiedown
20	0115-607	1	S	Fitting, Elbow
21	0109-332	1		T-Connection
22	0123-788	2	/P	Tie, Cable
23	0610-059	2		Valve, Check
24	0673-755	1		Vent, Fuel
25	0673-312	2		Pad, Gas Tank - Side
26	0673-313	4		Pad, Gas Tank - End
27	0670-042	1	/P	Outlet, Tank
28	0620-168	1		Sensor, Fuel Level
29	0670-474	1		Gasket, Fuel Sensor
30	0624-312	5		Screw, Machine




1995 DAYTONA (95DTA-W-1995)  
HANDLEBAR ASSEMBLY

Page 20 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0673-418	1	S	Grip, Handlebar - Right
2	0773-018	1		Throttle, Assembly (inc. 3-8)
3	0605-234	1		. Lever, Throttle
4	0605-236	1		. Pin, Throttle Lever
5	0605-235	1		. Housing, Throttle
6	0624-099	1		. Washer
7	0624-113	1		. C-Clip
8	0624-091	1		. Screw, Machine
9	0624-056	4		Screw, Cap
10	0673-282	4		Cap, Steering Adjuster
11	0673-317	1	S	Handlebar
12	0673-477	2		Cap, End - Grip
13	0624-250	4		Nut, Lock
14	0123-788	1	/P	Tie, Cable
15	0609-201	1		Tether, Switch Assembly (inc. 16-17)
16	0624-148	3		. Screw, Machine
17	0609-176	1	S	. Cord, Tether
18	0673-419	1	S	Grip, Handlebar - Left
19	0687-067	1		Cable, Throttle
20	0673-587	2		Plug, Compression - Grip
21	0624-233	2		Nut, Flange
22	0624-104	1		C-Clip
23	0624-254	2		Screw, Machine
24	0678-123	1	/P	Handlebar Pad - Assembly (inc. 26-28)
25	0605-253	1		. Pad, Handlebar - Rear
26	0605-244	1		. Pad, Handlebar - Front
27	0773-241	1	S	. Cover, Handlebar Pad

 1995 DAYTONA (95DTA-W-1995)  
HATCH COVER AND STORAGE TRAY

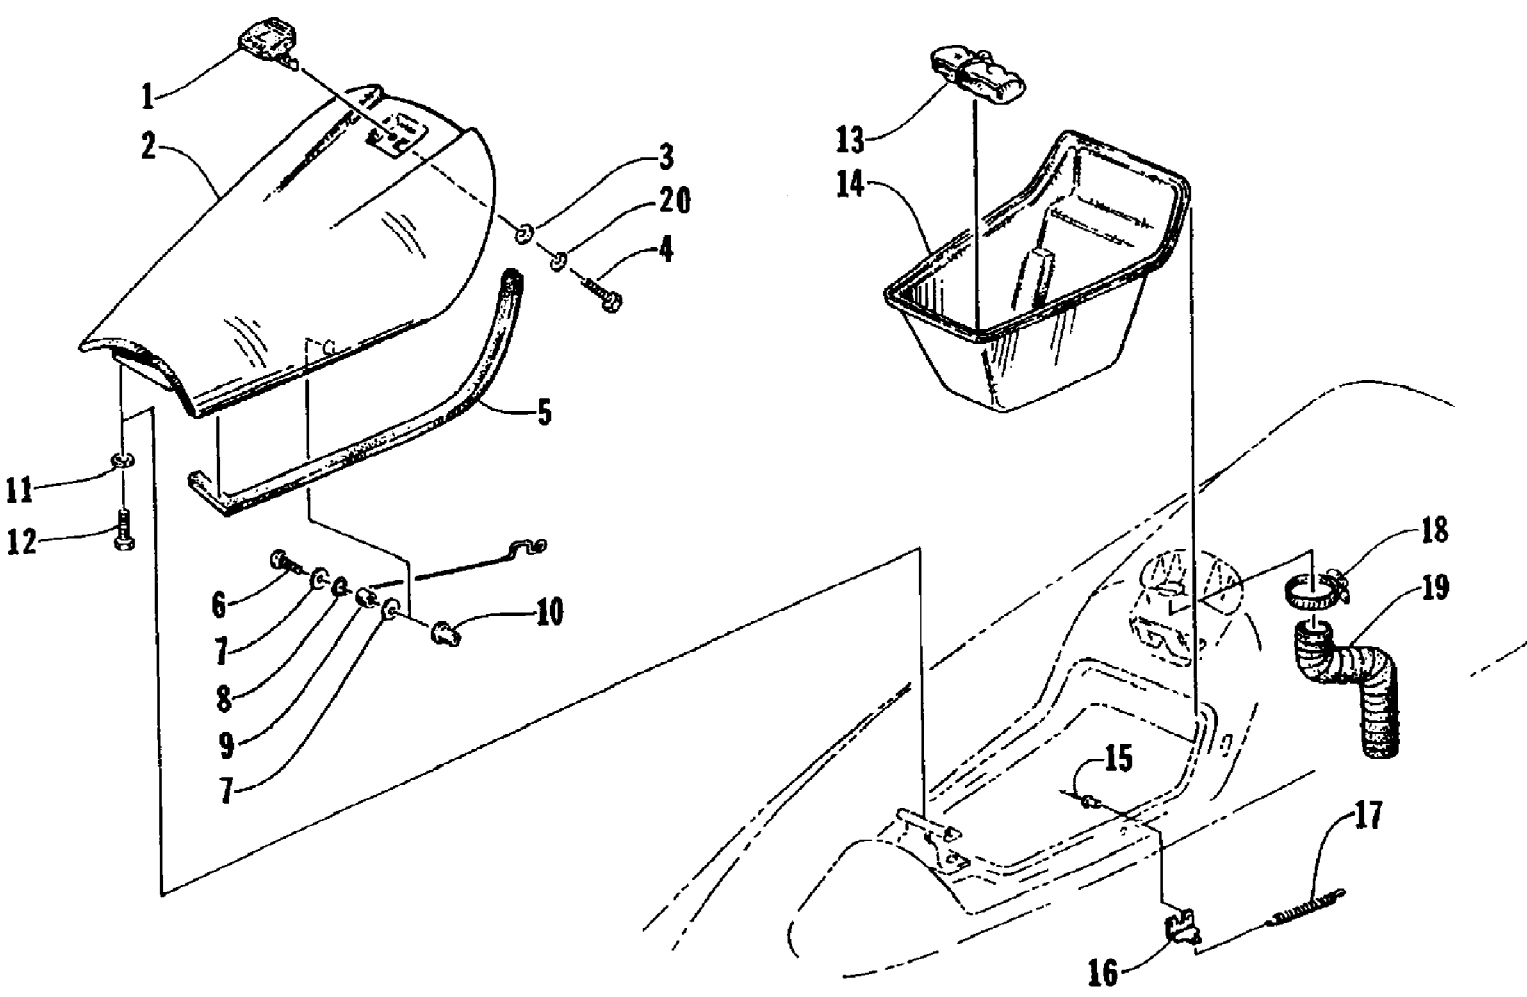


1995 DAYTONA (95DTA-W-1995)  
HATCH COVER AND STORAGE TRAY

Page 22 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0673-177	1		Latch, Hatch Cover
2	0673-452	1		Cover, Hatch
3	0624-004	2		Washer, Flat
4	0624-092	2		Screw, Cap
5	0673-736	1	S	Seal, Storage Tray
6	0624-112	1	/P	Screw, Cap
7	0624-182	2		Washer, Lock
8	0673-396	1	S	Rod, Hood Prop
9	0673-399	1		Spacer, Spring Rod
10	0624-083	1		Nut, Well
11	0624-036	2		Washer, Lock
12	0624-046	2		Screw, Cap
13	0678-105	1		Kit, Tool
14	0673-774	1		Tray, Storage
15	0624-069	2		Rivet
16	0673-397	1		Bracket, Spring Rod
17	0673-400	1		Spring, Hood Prop
18	0624-207	1		Clamp
19	0610-211	1		Hose, Air Intake
20	0624-200	2		Washer, Lock

 1995 DAYTONA (95DTA-W-1995)  
HULL AND RELATED PARTS ASSEMBLY

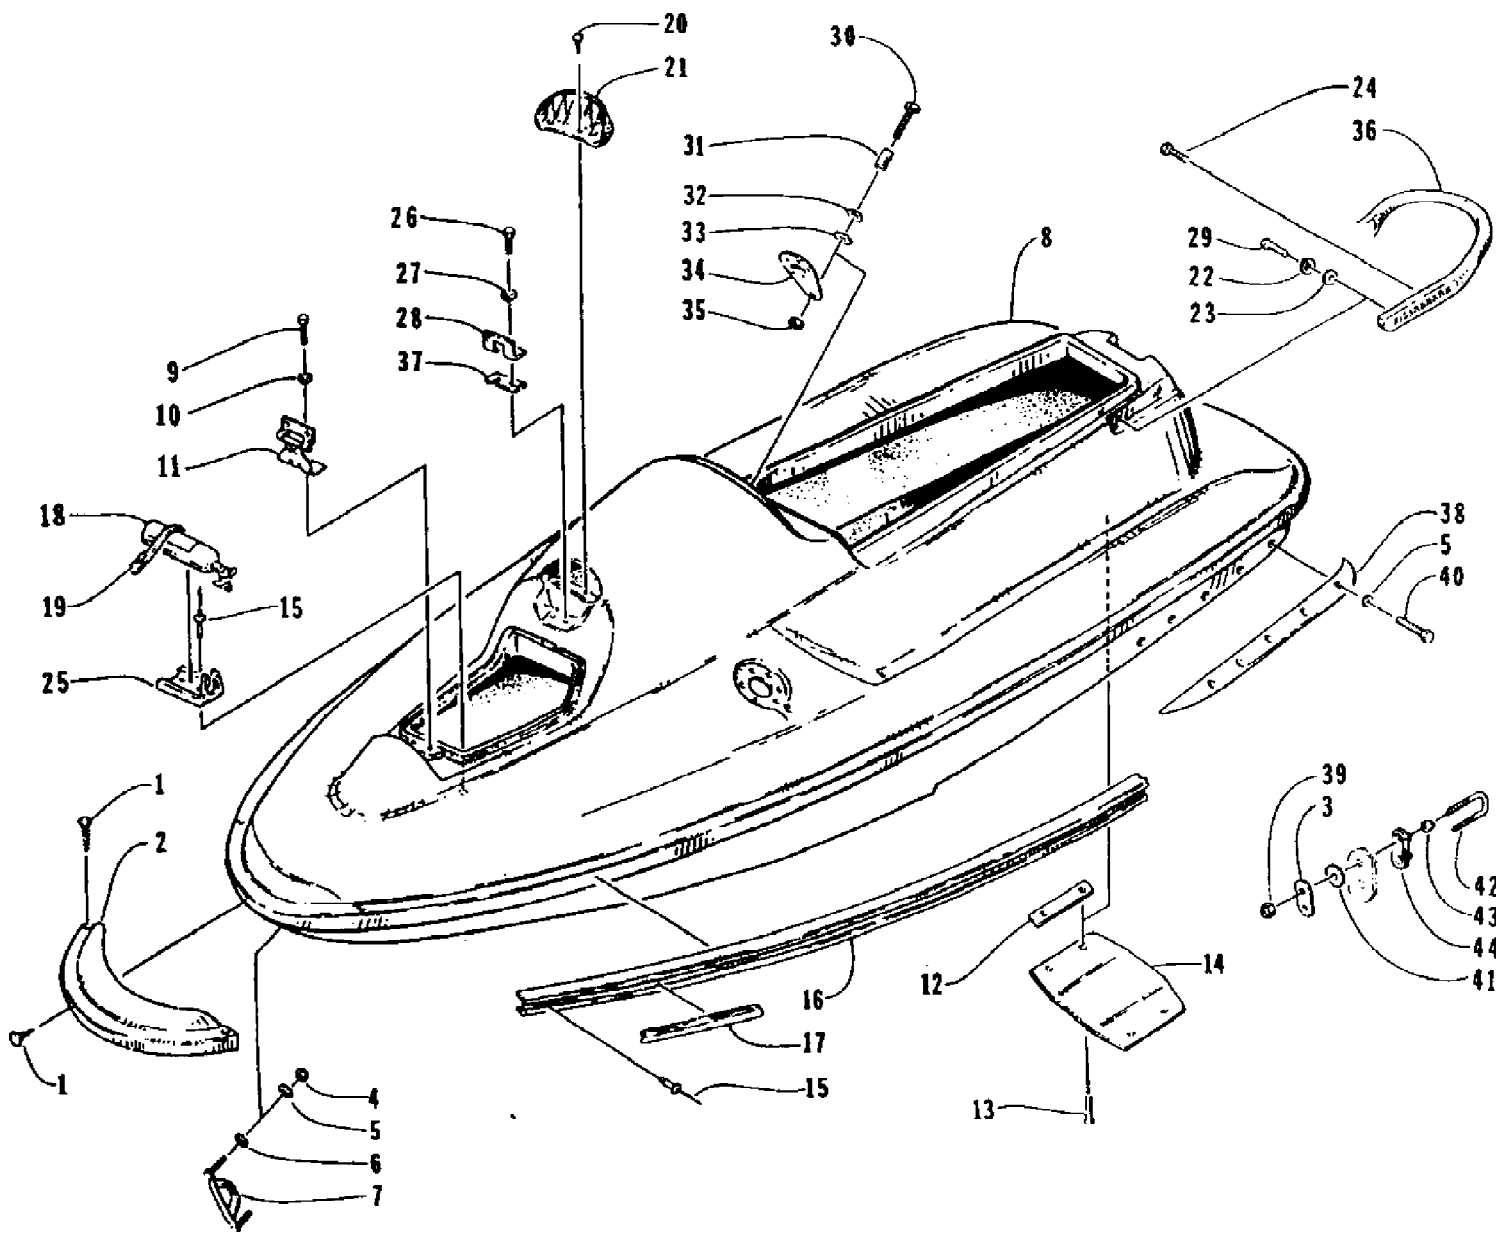


1995 DAYTONA (95DTA-W-1995)  
HULL AND RELATED PARTS ASSEMBLY

Page 24 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0623-585	4		Clip, Retaining
2	0673-251	1	S	Nose, Cone
3	0673-657	1		Plate, Backing
4	0624-089	2		Nut, Lock
5	0624-247	12		Washer, Flat
6	0624-299	2		Washer, Sealing
7	0773-412	1		Boweye
8	0773-200	1		Hull/Deck - Assembly
9	0624-112	2	/P	Screw, Cap
10	0624-036	2		Washer, Lock
11	0673-407	1	S	Hinge, Hatch Assembly
12	0673-688	2		Plate, Nut
13	0624-184	4		Screw, Machine
14	0673-691	1	S	Plate, Ride
15	0624-030	50		Rivet
16	0673-147	1		Trim, Edge - Side
17	0673-168	1		Insert, Edge Trim
18	0	1	F	Extinguisher, Fire
19	0773-381	1	S	Tiedown, Rubber
20	0623-269	2		Clip, Retaining
21	0680-049	1		Grate, Air Intake
22	0624-115	2		Washer, Lock
23	0624-228	4		Washer, Flat
24	0624-230	2		Screw, Cap
25	0673-299	1	S	Bracket, Extinguisher
26	0624-092	2		Screw, Cap
27	0624-200	2		Washer, Lock
28	0673-297	1		Catch, Latch
29	0624-289	2		Screw, Cap
30	0624-223	1		Screw, Cap
31	0673-485	1		Stop, Steering
32	0624-008	1		Washer
33	0623-391	1		Washer, Rubber
34	0673-417	1		Plate, Backing
35	0624-009	1		Nut, Lock
36	0673-384	1		Handle, Grab
37	0673-429	1	/P	Shim, Catch
38	0673-764	1		Sponson - Right
38	0673-765	1		Sponson - Left
39	0624-258	2		Nut, Lock
40	0624-271	10		Screw, Cap
41	0623-159	2		Washer
42	0624-260	1		U-Bolt
43	0624-259	2		Nut, Cone
44	0673-656	1		Plate, Backing



 1995 DAYTONA (95DTA-W-1995)  
IGNITION COIL

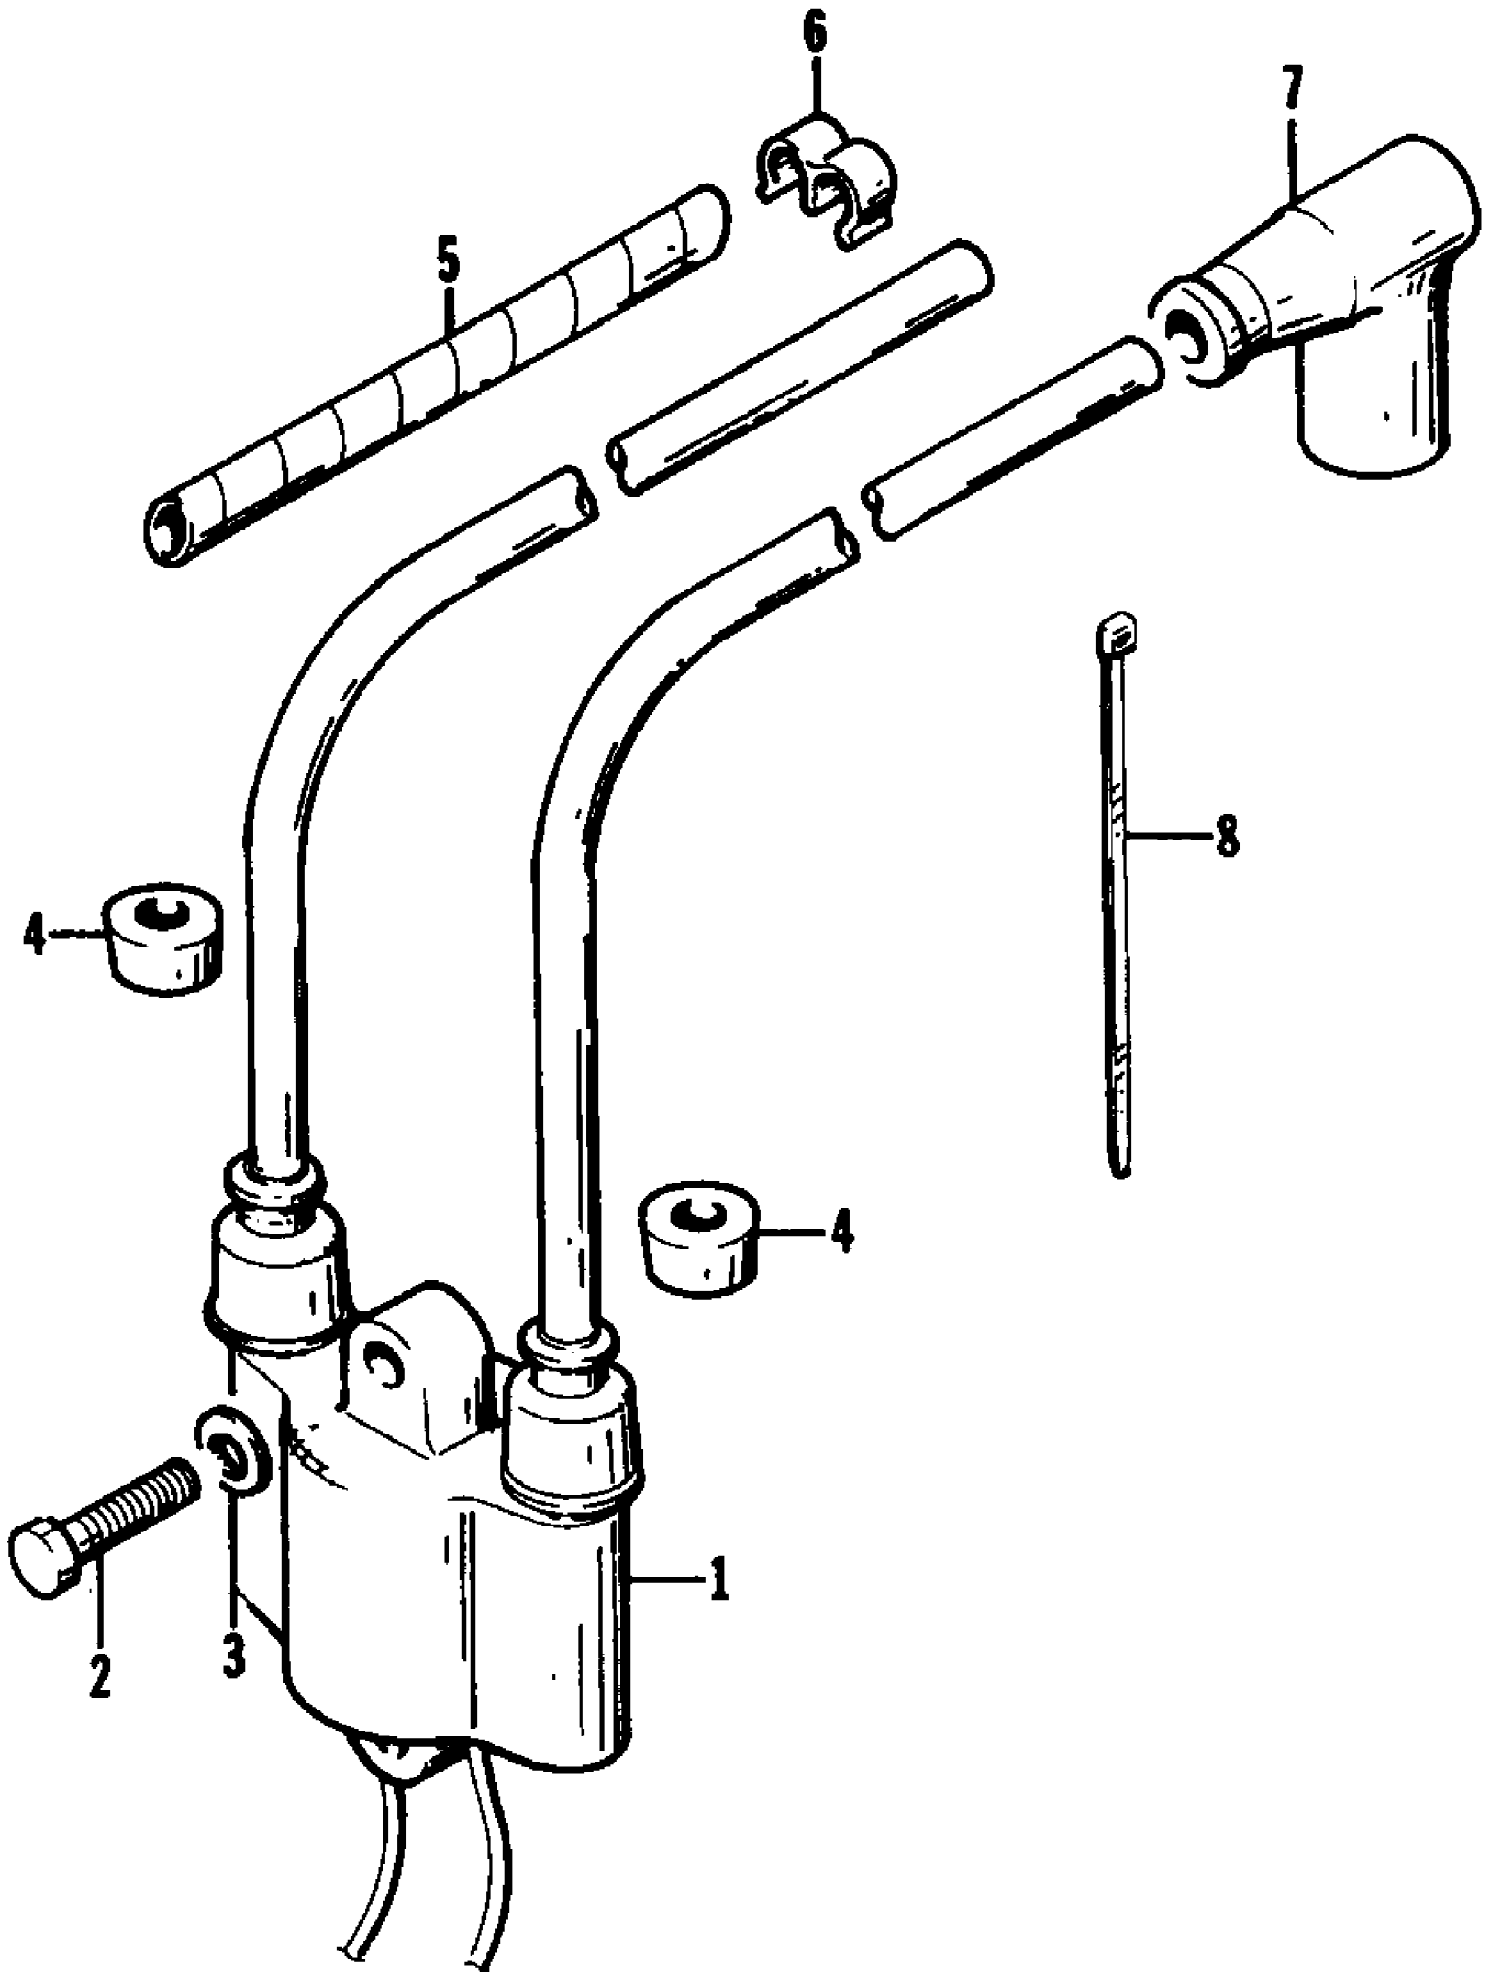


1995 DAYTONA (95DTA-W-1995)  
IGNITION COIL

Page 26 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-343	1	S	Coil Assembly, Ignition
2	3008-220	2		Screw, Machine
3	3003-023	2	/P	Washer
4	3008-333	2	S	Grommet
5	3008-344	2	S	Protector, Lead Wire
6	3008-045	1		Clip
7	3003-737	2	S	Cap Assembly, Spark Plug
8	3003-787	2		Tie, Cable

 
1995 DAYTONA (95DTA-W-1995)  
IMPELLER DRIVE ASSEMBLY

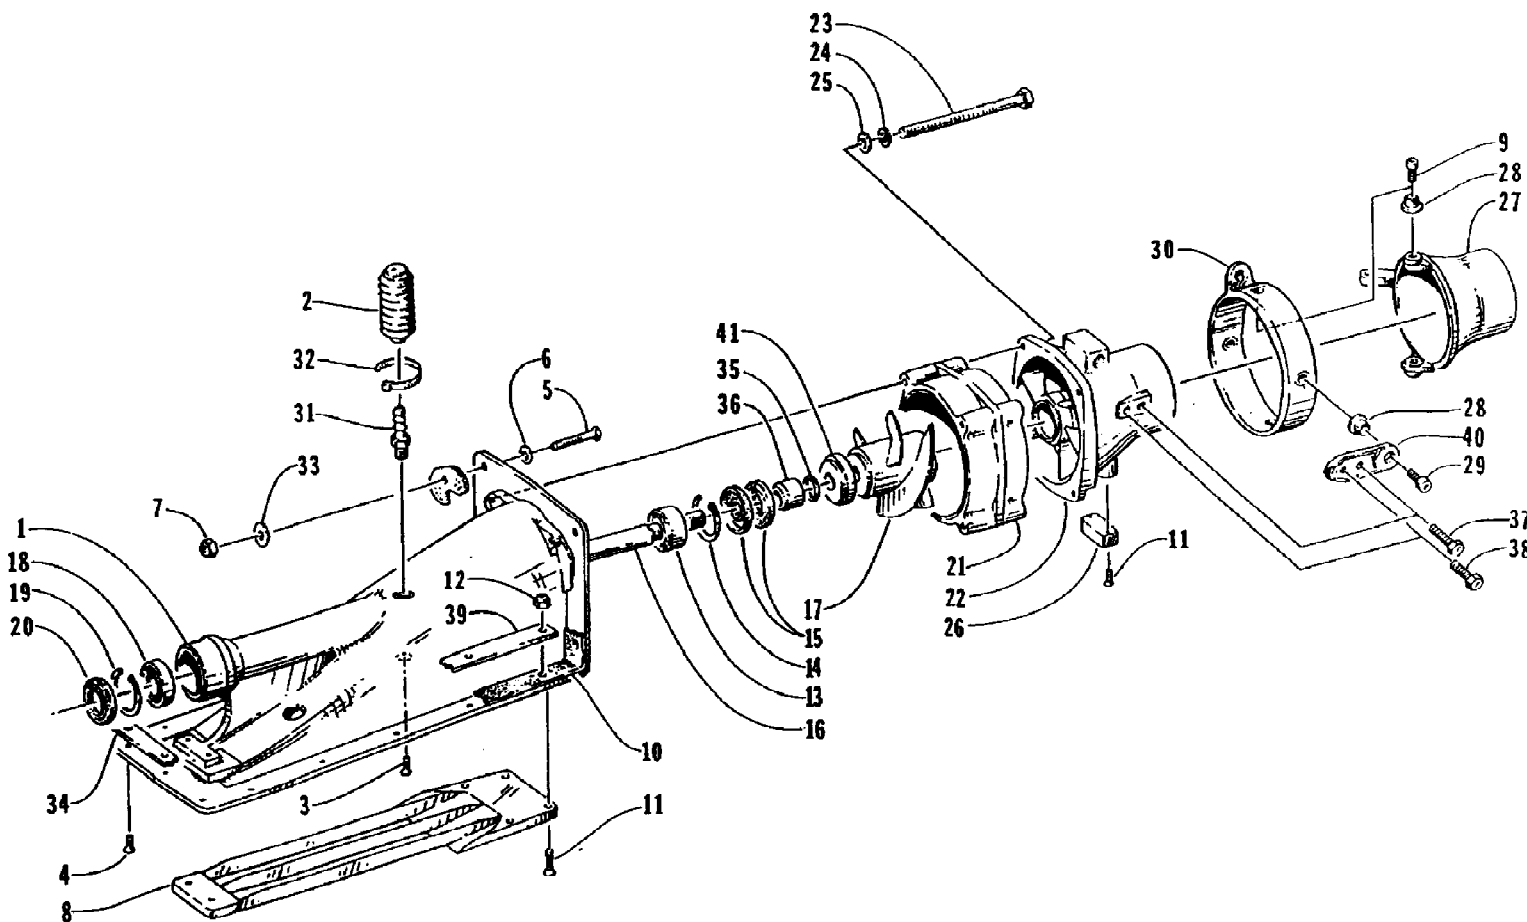

1995 DAYTONA (95DTA-W-1995)  
IMPELLER DRIVE ASSEMBLY

Page 28 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0673-370	1		Inlet, Pump
2	3008-100	1		Bladder, Case
3	0624-091	1		Screw, Machine
4	0624-186	13		Screw, Machine
5	0624-007	4		Screw, Cap
6	0624-008	4		Washer
7	0624-009	4		Nut, Lock
8	0673-034	1	S	Grate, Inlet
9	0624-175	2		Screw, Cap
10	0612-435	1		Seal, Pump Inlet
11	0624-183	8		Screw, Machine
12	0624-021	13		Nut, Lock
13	0673-505	1	S	Bearing
14	0624-044	1		Ring, Snap
15	0673-033	2		Seal, Rear
16	0673-552	1	S	Driveshaft
17	0773-103	1	/P	Impeller
18	0673-030	1		Bearing
19	0624-043	1		Ring, Snap
20	0673-031	1		Seal
21	0673-126	1	/P	Ring, Wear
22	0673-699	1		Venturi, Stator
23	0624-045	4		Screw, Cap
24	0624-027	4		Washer, Lock
25	0624-028	4		Washer
26	0624-084	1		Anode, Zinc
27	0673-190	1	S	Nozzle, Steering
28	0673-291	4		Bushing, Trim Ring
29	0624-174	4		Screw, Cap
30	0673-189	1		Ring, Trim
31	0610-172	1		Fitting
32	0123-811	1		Tie, Cable
33	0624-159	4		Washer
34	0673-009	1		Plate, Nut
35	0673-493	1		O-Ring, Impeller
36	0673-256	1		Spacer, Impeller
37	0624-273	2		Screw, Machine
38	0624-272	2		Screw, Machine
39	0673-008	2		Plate, Nut
40	0673-637	2		Bracket, Trim Ring
41	0673-364	1		Spacer, Impeller - Driveshaft

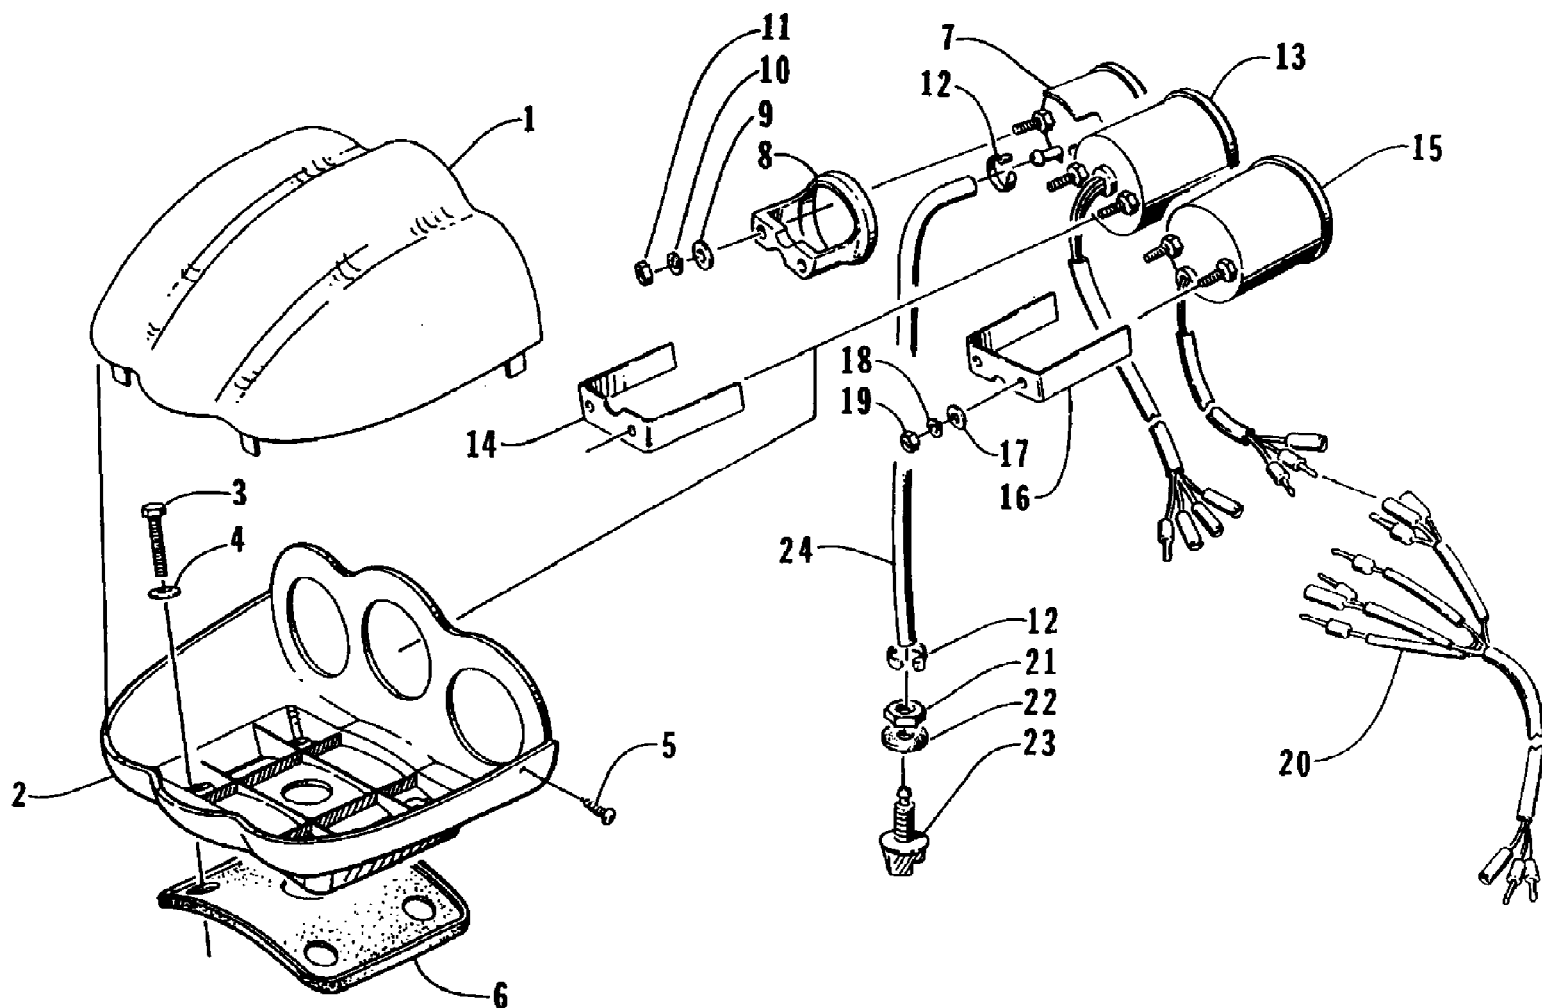 


1995 DAYTONA (95DTA-W-1995)  
INSTRUMENT CONSOLE ASSEMBLY

Page 30 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0673-625	1	S	Console, Instrument - Upper
2	0673-626	1		Console, Instrument - Lower
3	0624-289	4		Screw, Cap
4	0624-247	4		Washer, Flat
5	0624-287	4		Screw, Self-Tapping
6	0673-667	1		Gasket, Console
7	0620-124	1		Speedometer
8	0620-126	1		Backclamp, Speedometer
9	0624-331	2		Washer
10	0624-330	2		Washer, Lock
11	0624-329	2		Nut, Jam
12	0123-811	2		Tie, Cable
13	0620-159	1	S	Gauge, Fuel
14	0620-165	1		Backclamp, Fuel Gauge
15	0620-125	1	S	Tachometer
16	0620-127	1		Backclamp, Fuel Gauge
17	0624-328	4		Washer
18	0624-327	4		Washer, Lock
19	0624-326	4		Nut, Jam
20	0686-289	1		Harness, Gauge
21	0673-348	1		Nut, Pitot
22	0673-349	1		Seal, Pitot Tube
23	0673-362	1	S	Tube, Pitot
24	0673-793	0		Hose

 1995 DAYTONA (95DTA-W-1995)  
INTAKE ASSEMBLY

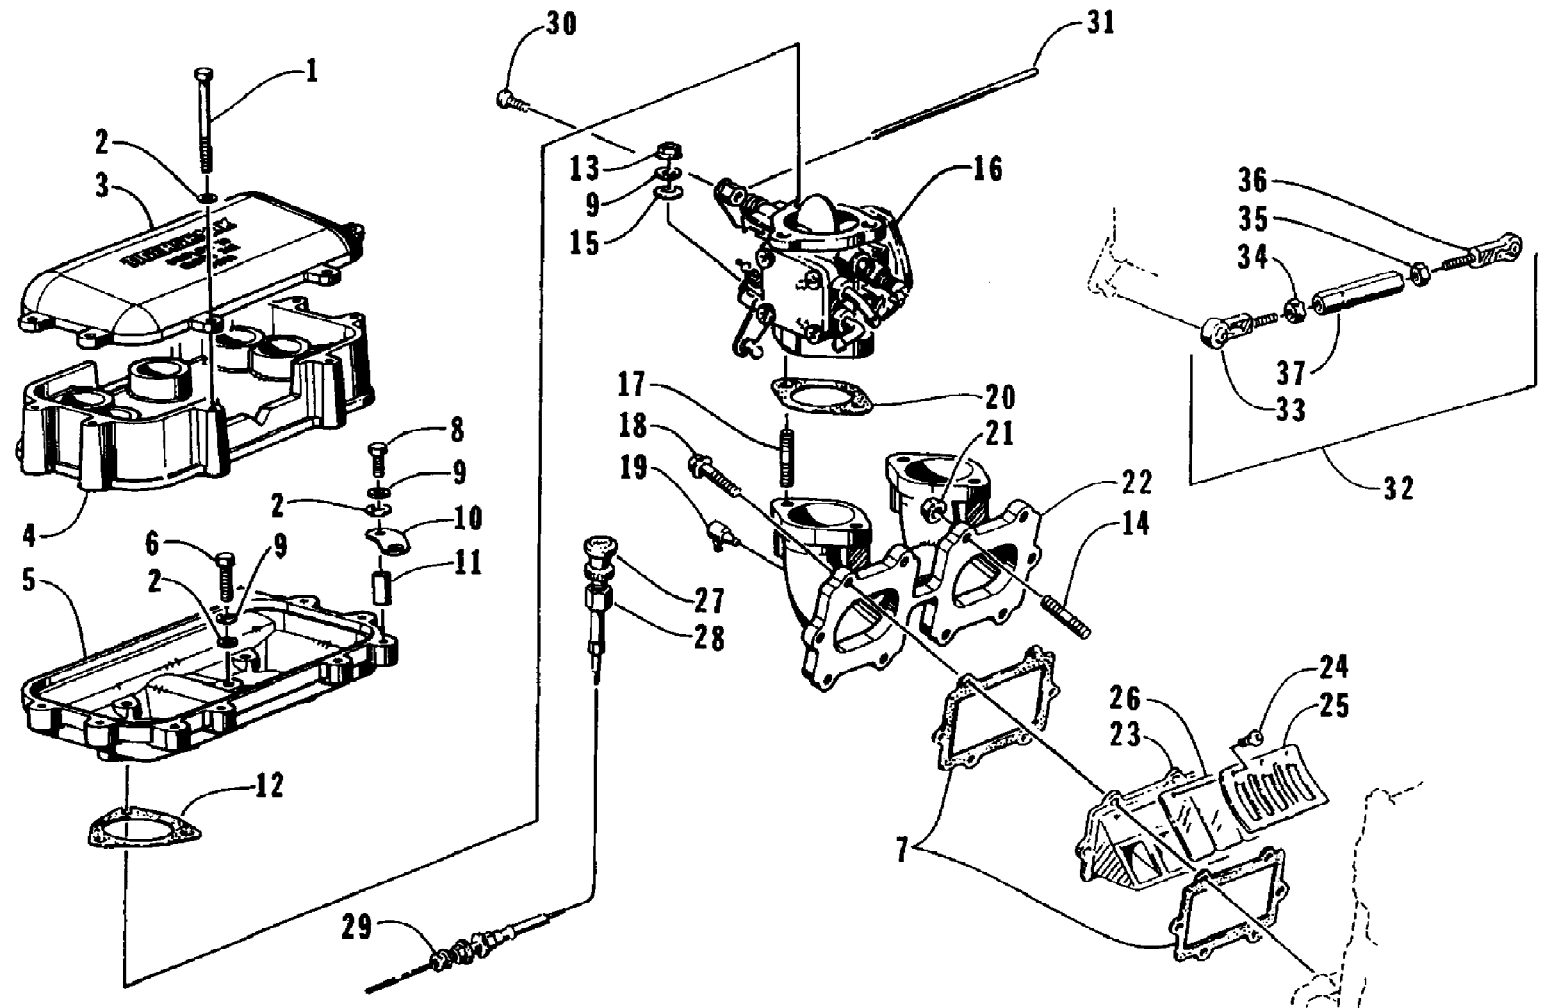


1995 DAYTONA (95DTA-W-1995)  
INTAKE ASSEMBLY

Page 32 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0624-213	6		Screw, Cap
2	0624-022	14		Washer
3	0673-704	1		Top, Spark Arrestor
4	0673-758	1		Center, Spark Arrestor
5	0673-706	1		Base, Spark Arrestor
6	0624-112	6	/P	Screw, Cap
7	3008-076	4	S	Gasket, Reed Valve
8	0624-052	2		Screw, Cap
9	0624-036	12		Washer, Lock
10	0673-794	2		Bracket, Support
11	0673-784	2		Spacer
12	0673-710	2		Gasket, Spark Arrestor
13	0624-061	4		Nut, Jam
14	3008-187	4	S	Bolt, Stud
15	0624-028	4		Washer
16	0670-477	1		Carburetor - Mag Side
16	0670-478	1		Carburetor - PTO Side
17	0624-051	4		Bolt, Stud
18	3008-213	6	/P	Screw, Cap
19	3008-087	2	S	Valve, Check
20	0673-708	2		Gasket, Intake
21	3008-214	4		Nut
22	0673-703	1		Manifold, Intake
23	3008-073	2	S	Reed Valve - Assembly (inc. 24-26)
24	3004-506	12	/P	. Screw, Cap
25	3008-074	4		. Stopper, Reed Valve
26	3008-075	4		. Valve, Reed
27	0687-064	1	S	Cable, Choke
28	0687-051	1	/P	Nut
29	0687-052	2	/P	Cover, Boot
30	6505-855	2		Screw, Machine
31	6505-856	1		Linkage, Choke
32	0670-479	1		Throttle Linkage
33	6505-858	1		End, Adjuster - Left
34	6505-859	1		Nut, Jam - Left
35	6505-860	1		Nut, Jam
36	6505-861	1		End, Adjuster
37	6505-857	1	S	Adjuster, Throttle Linkage



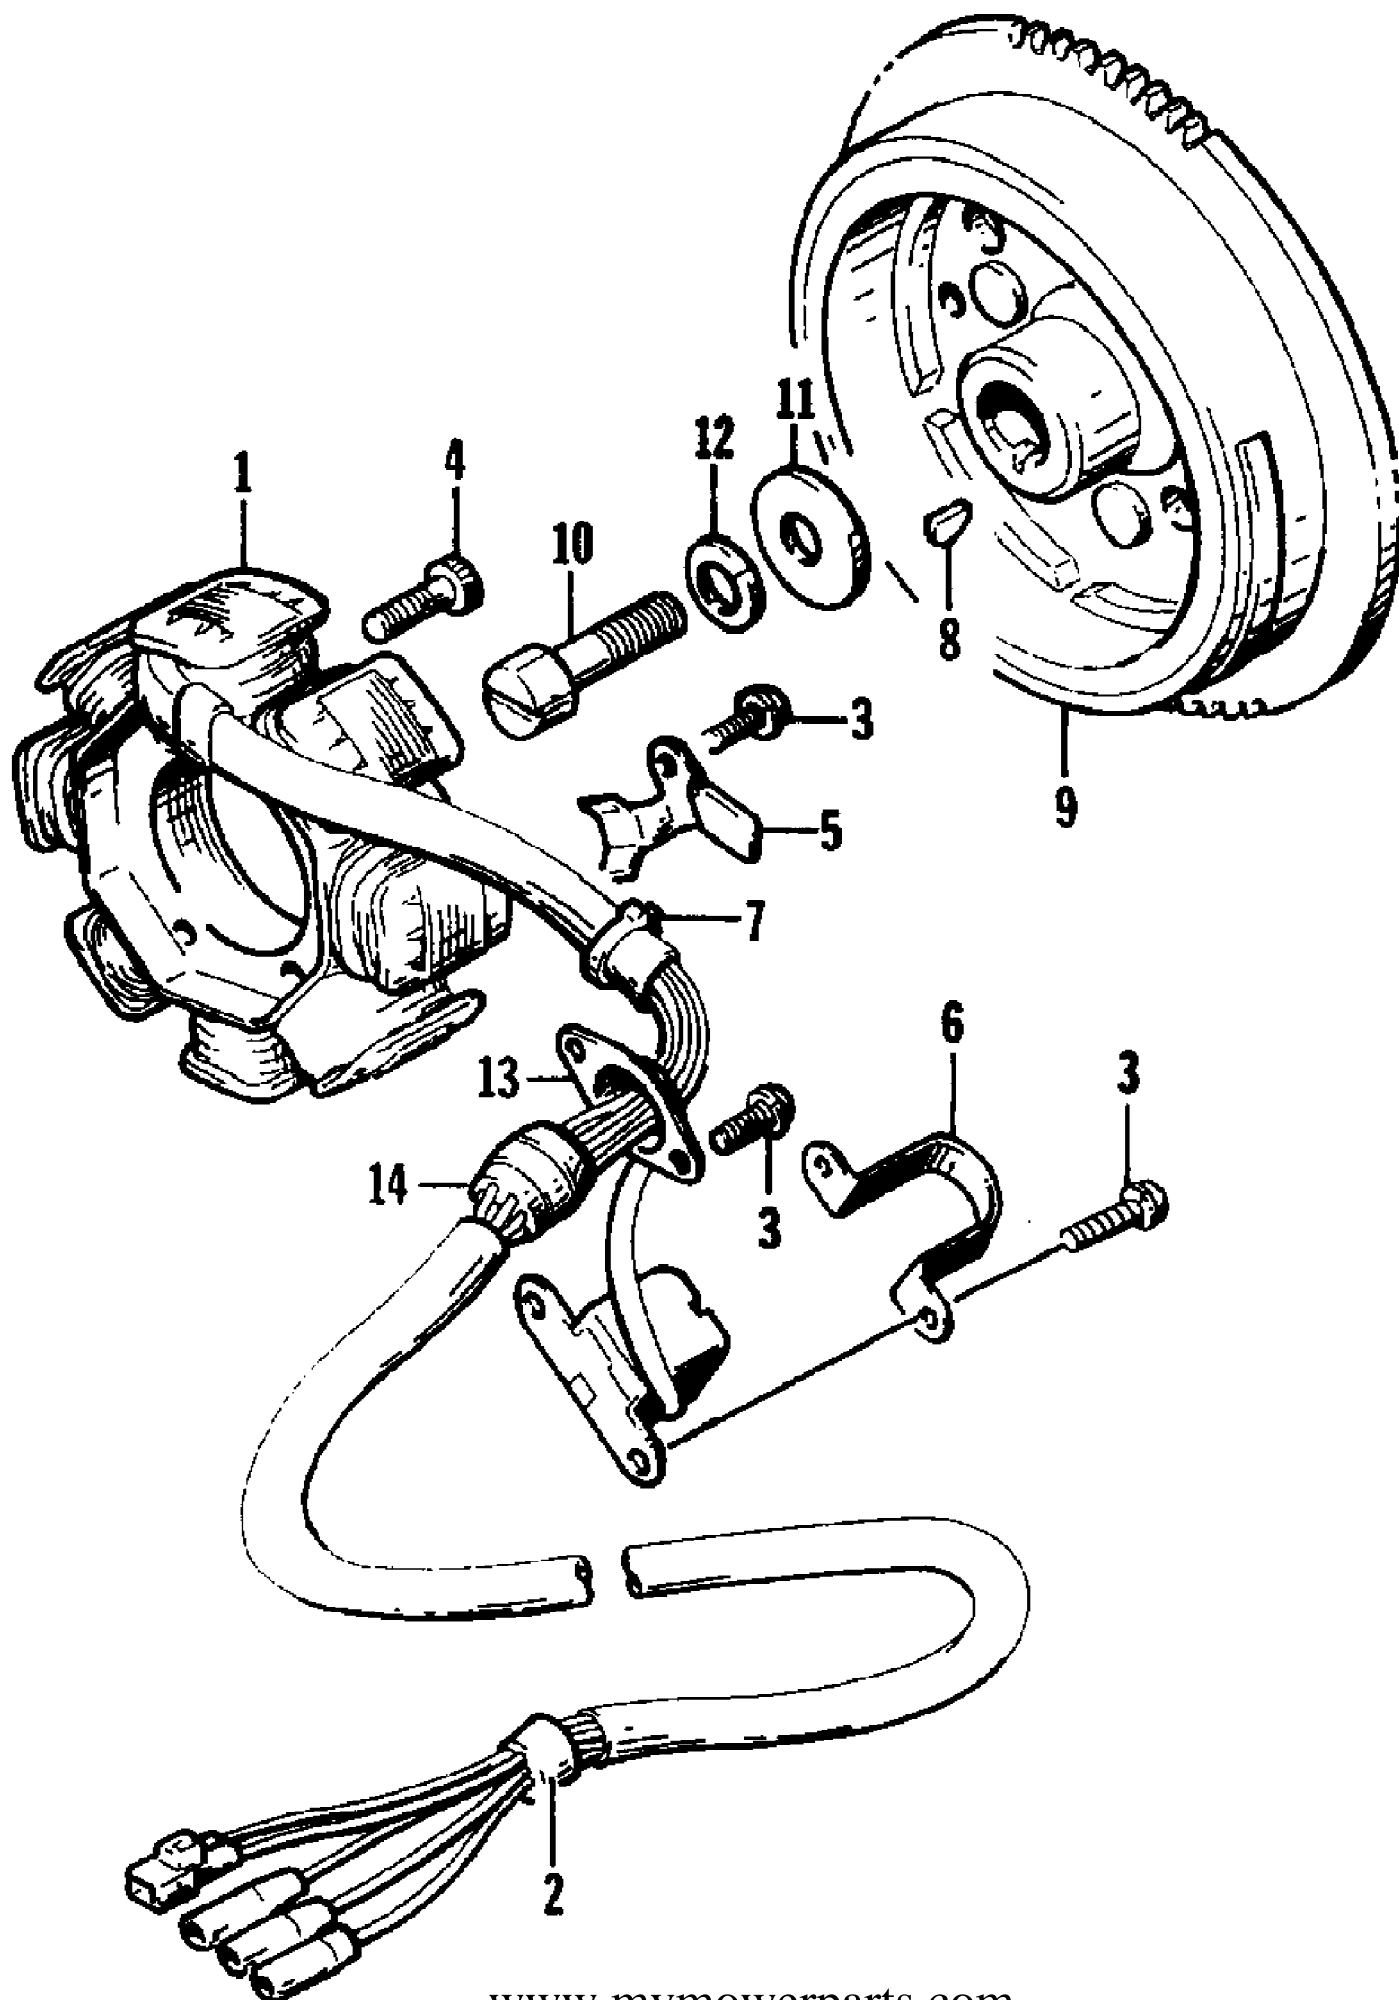 


1995 DAYTONA (95DTA-W-1995)  
MAGNETO

Page 34 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-329	1	S	Stator
2	3008-111	1		Grommet
3	3004-706	5	S/P	Screw, Cap
4	3004-484	3	S	Screw, Cap
5	3008-109	1		Holder
6	3008-331	1	/P	Clamp
7	3003-787	1		Clamp
8	3004-540	1	/P	Key
9	3008-108	1	S	Flywheel
10	3008-119	1	S	Screw, Cap
11	3008-017	1		Washer
12	3004-362	1	S/P	Washer, Lock
13	3008-110	1		Holder, Grommet
14	3008-118	1		Grommet

 1995 DAYTONA (95DTA-W-1995)  
MAGNETO CASE

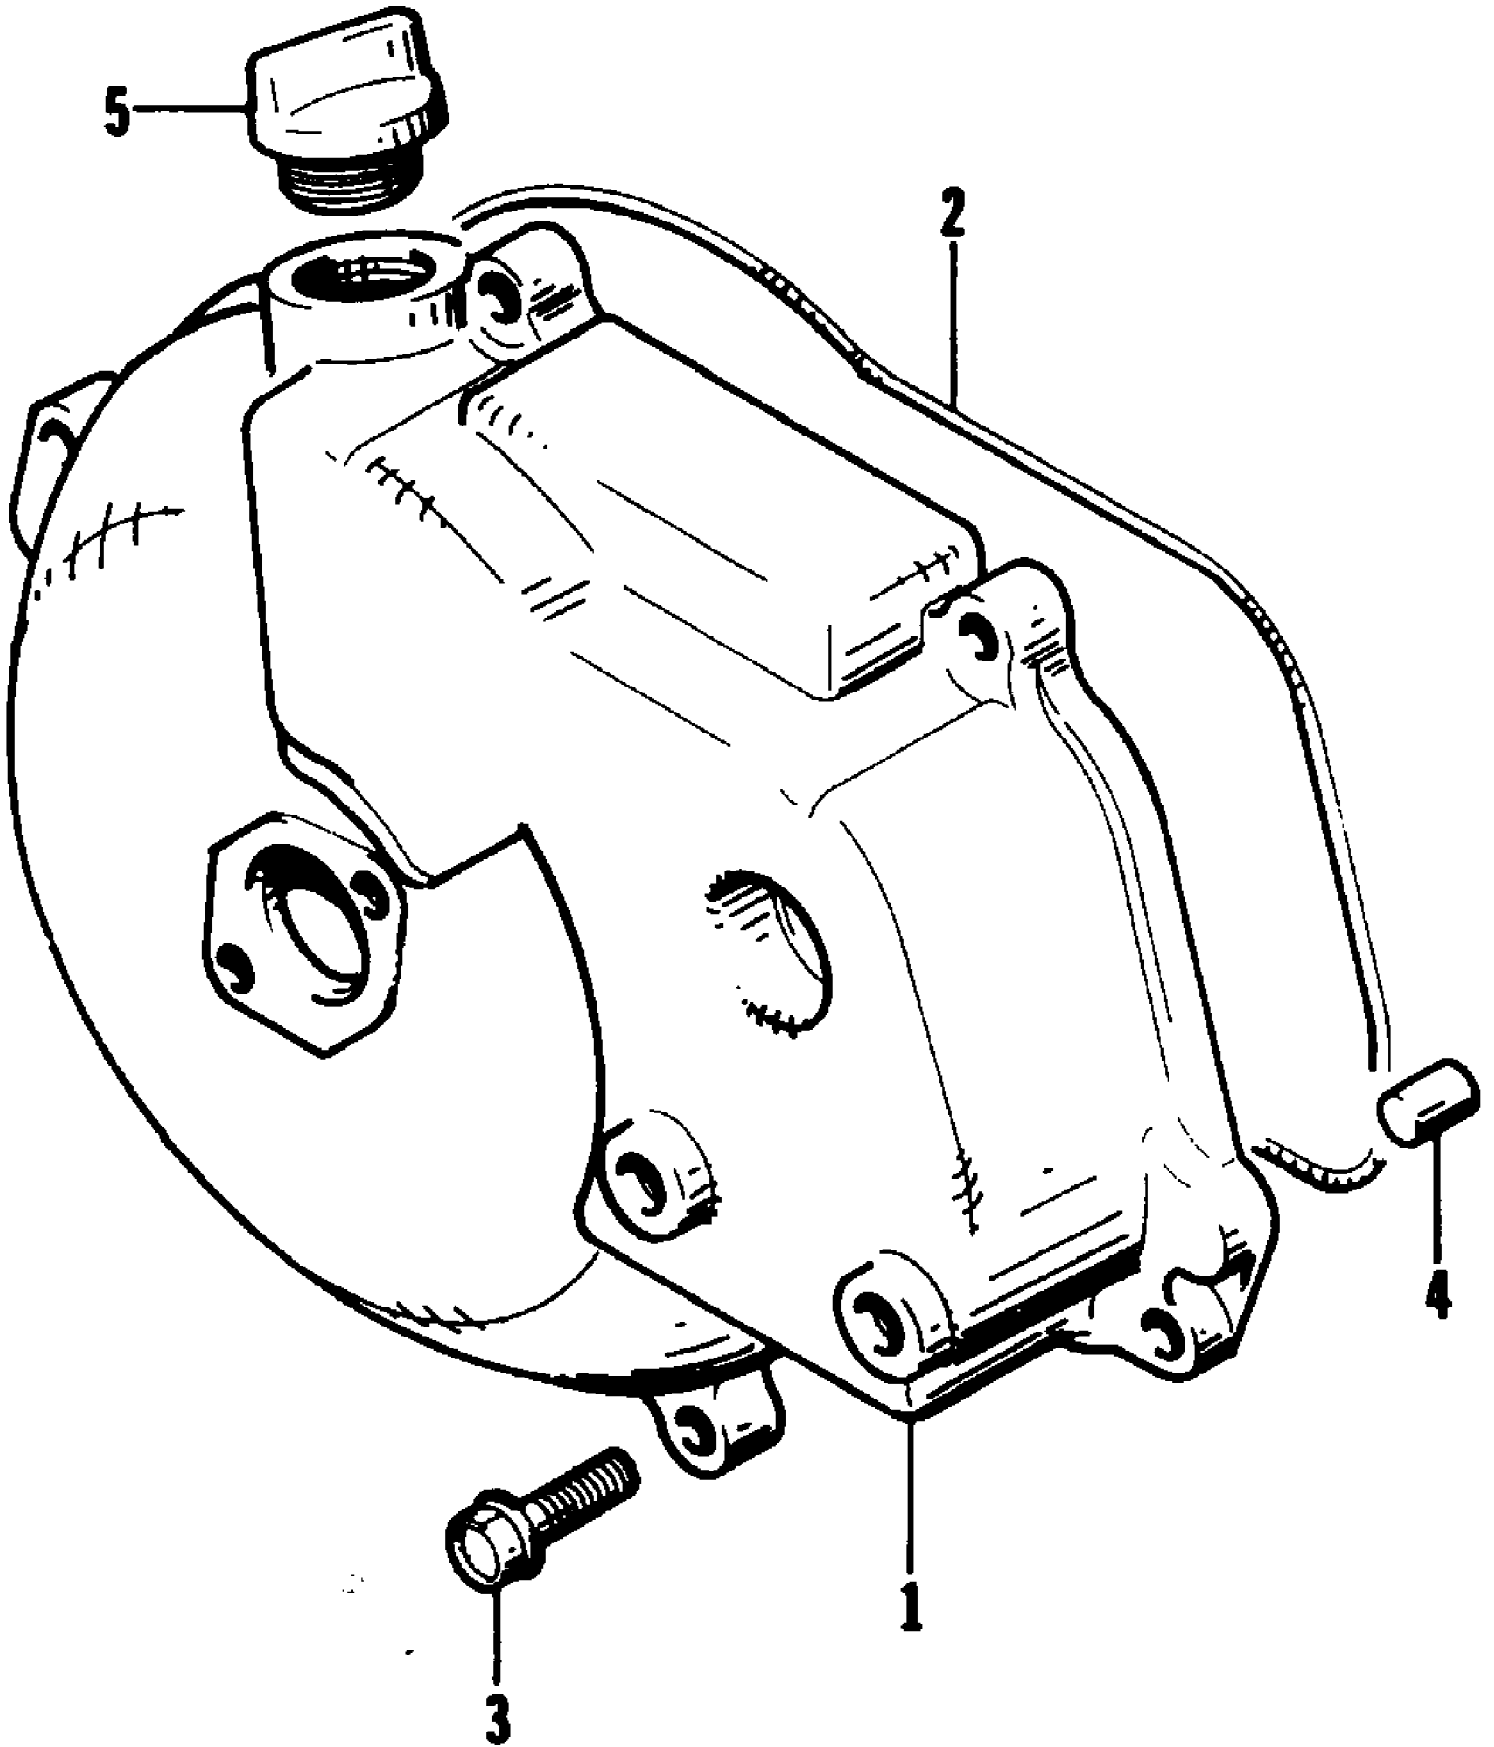


1995 DAYTONA (95DTA-W-1995)  
MAGNETO CASE

---

Ref #	Part Number	Qty	S/P/F	Description
1	3008-238	1	/P	Case, Magneto
2	3008-053	1		O-Ring
3	3008-213	6	/P	Screw, Cap
4	3008-146	2		Pin
5	3008-023	1		Plug

 1995 DAYTONA (95DTA-W-1995)  
MAGNETO-SIDE CARBURETOR

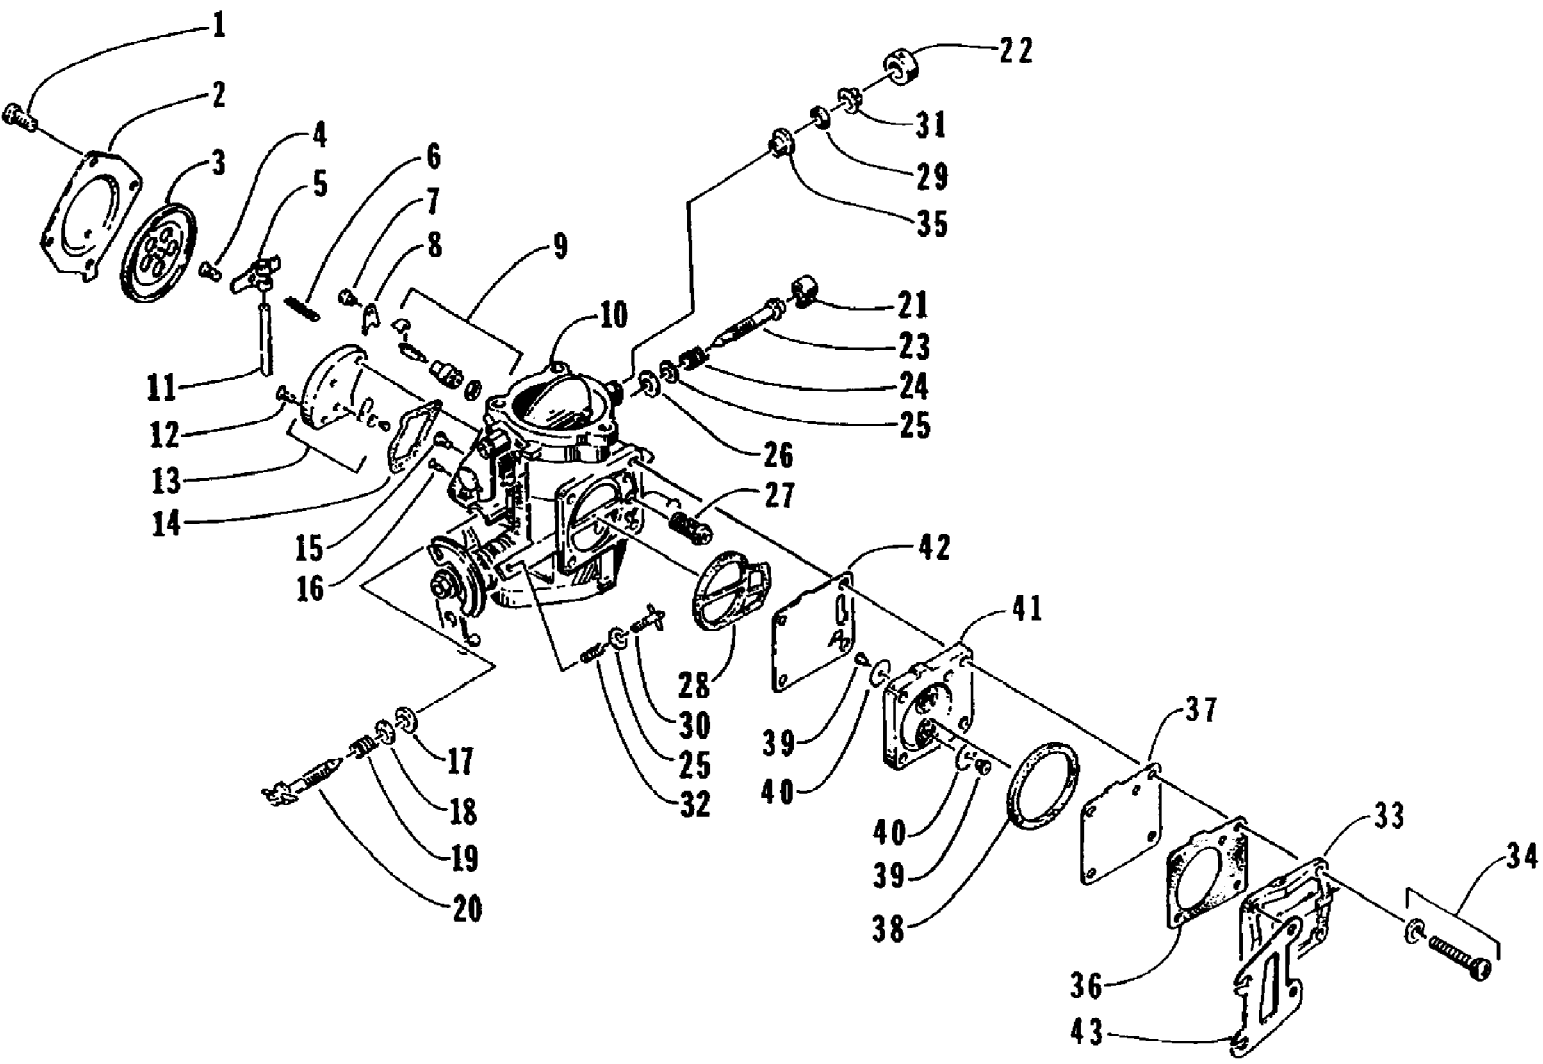


1995 DAYTONA (95DTA-W-1995)  
MAGNETO-SIDE CARBURETOR

Page 38 of 58

Ref #	Part Number	Qty	S/P/F	Description
	0670-477	1		Magneto-Side Carburetor Assembly
1	6505-850	4		Screw, Cap
2	6505-662	1		Cover
3	6505-663	1		Diaphragm Assembly
4	6505-692	1		Screw, Machine
5	6505-664	1		Arm
6	6505-669	1		Spring
7	6505-695	1		Screw, Machine
8	6505-682	1		Plate
9	6505-851	1	/P	Needle Valve Assembly
10	0	1	F	Mixing Body
11	6505-681	1		Pin
12	6505-679	2		Screw, Machine
13	6505-680	1		Block, Metering
14	6505-677	1		Gasket
15	6505-730	1		Main Jet - 100
16	6505-776	1	/P	Pilot Jet - 75
17	6505-668	1		Seal
18	6505-661	1		Washer
19	6505-660	1		Spring
20	6505-852	1		Adjuster
21	6505-659	1		Cap
22	6505-822	1		Collar, Choke Shaft
23	6505-699	1		Adjuster
24	6505-678	1		Spring
25	6505-703	2		Washer
26	6505-700	1	S	O-Ring
27	6505-676	1		Filter
28	6505-665	1		S-Gasket
29	6505-701	1		Seal, Choke Shaft
30	6505-702	1		Screw Assembly
31	6505-703	1		Washer
32	6505-651	1		Spring
33	6505-652	1		Cover, Pump
34	6505-704	4		Screw w/Washer
35	6505-817	1		Bushing, Choke Shaft
36	6505-653	1		Gasket
37	6505-654	1		Diaphragm, Pump
38	6505-683	1		O-Ring
39	0	2	F	Grommet
40	0	2	F	Valve
41	6505-655	1		Body Assembly, Diaphragm
42	6505-656	1	/P	Diaphragm, Damper
43	6505-874	1		Bracket, Cable

 1995 DAYTONA (95DTA-W-1995)  
OIL PUMP

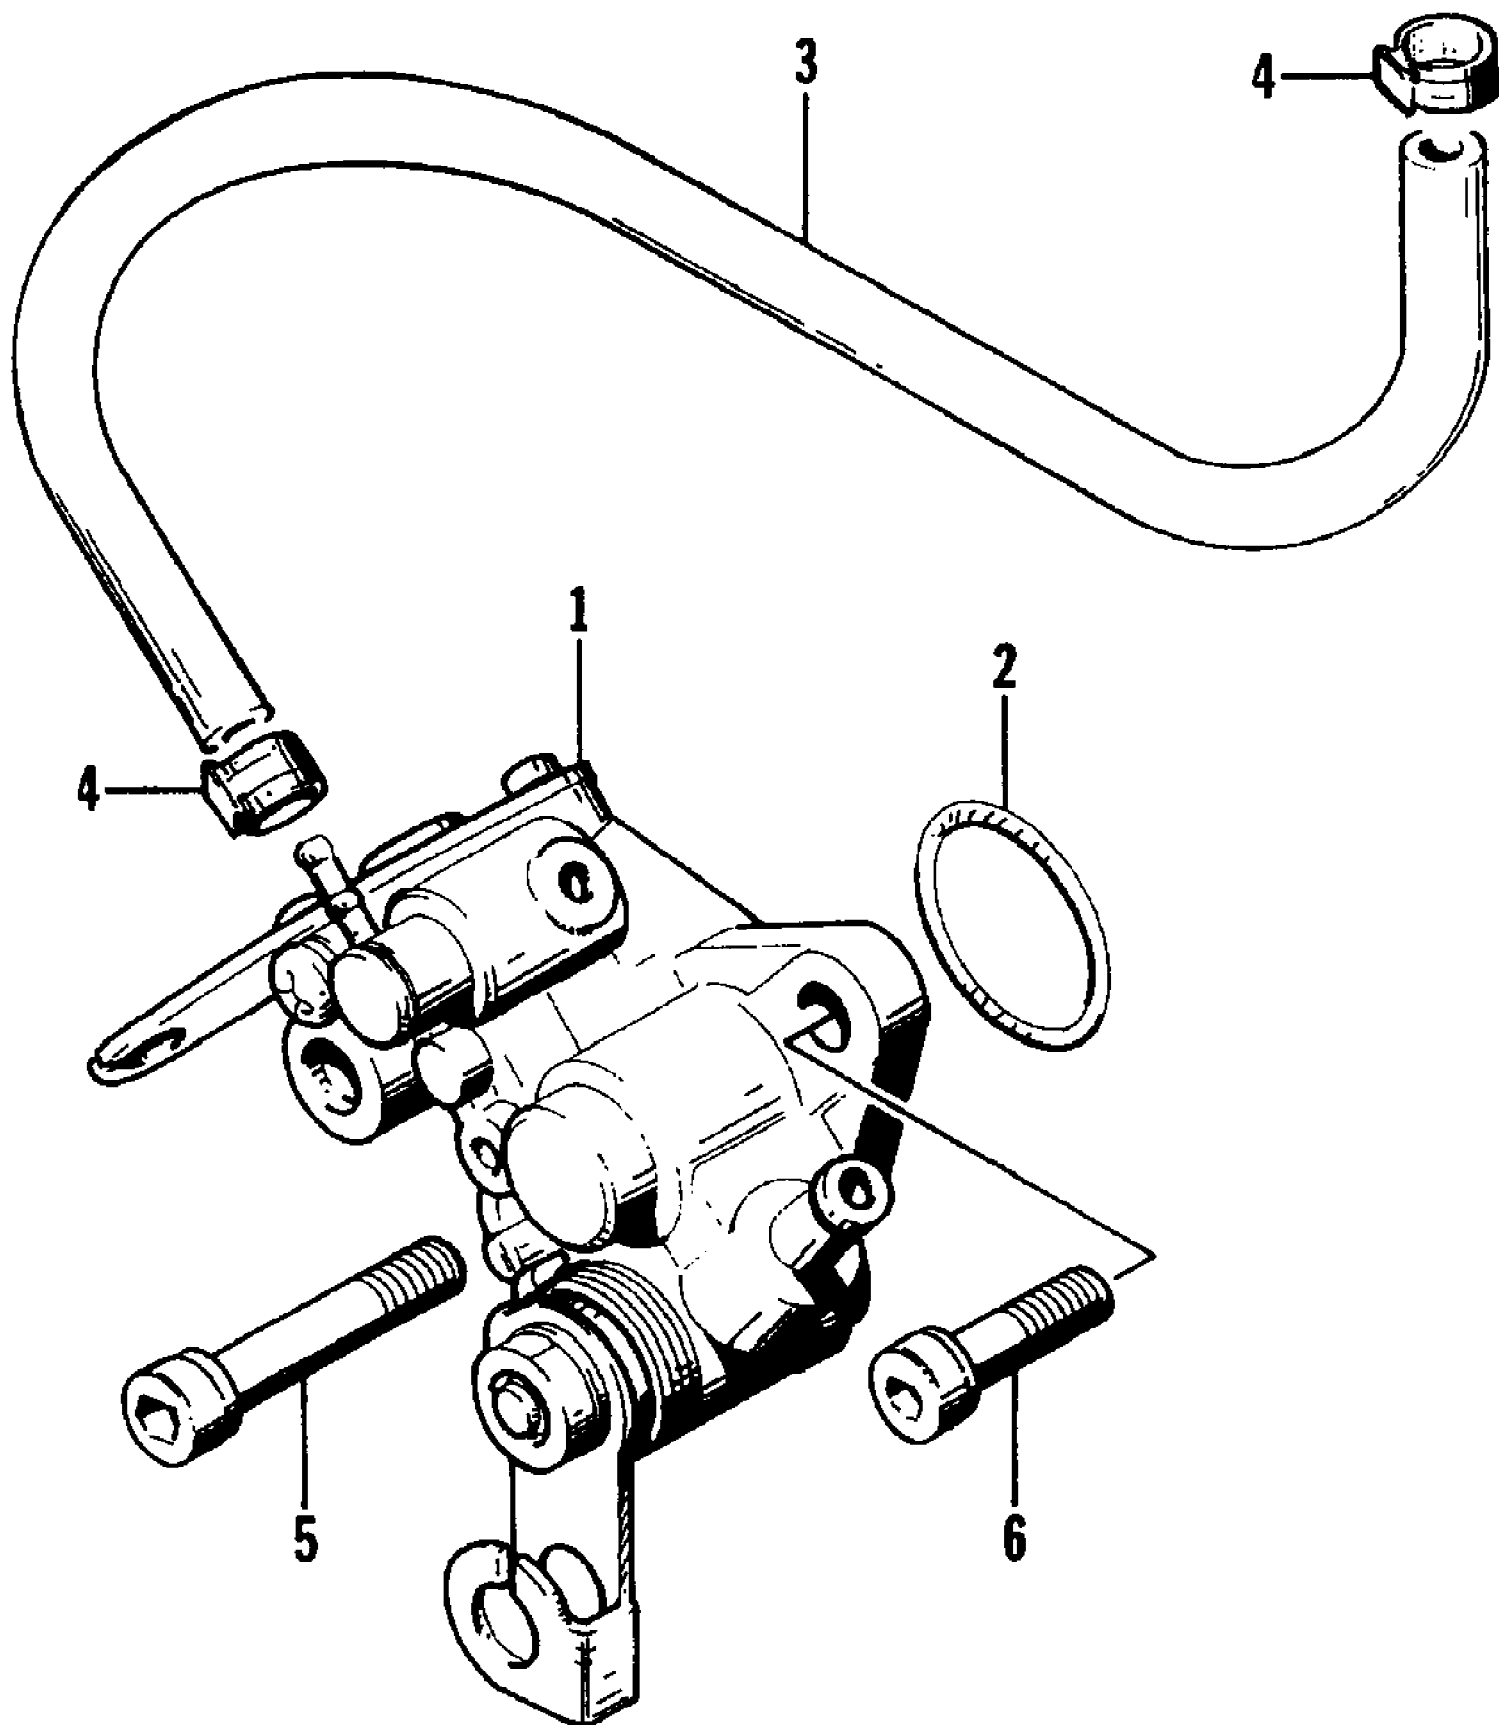


1995 DAYTONA (95DTA-W-1995)  
OIL PUMP

Page 40 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-241	1	S	Oil Pump Assembly
2	3008-030	1		O-Ring
3	3008-035	1	/P	Hose
4	3008-037	2	/P	Clamp
5	3008-242	1		Screw, Cap
6	3008-243	1		Screw, Cap



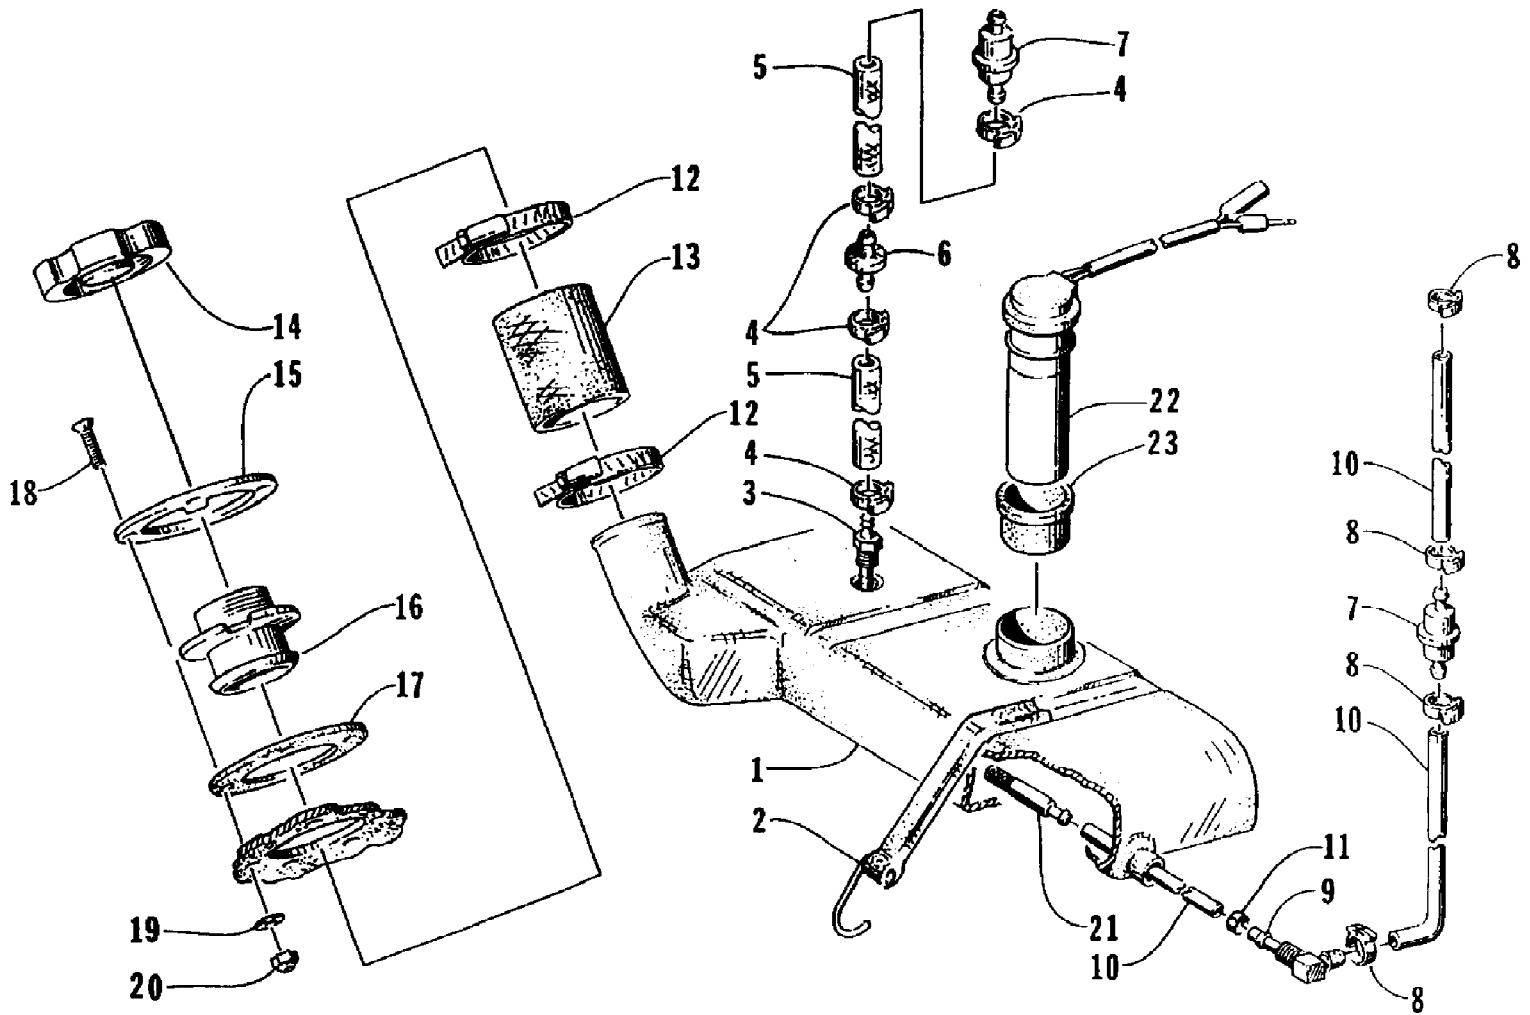 


1995 DAYTONA (95DTA-W-1995)  
OIL TANK ASSEMBLY

Page 42 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0670-476	1		Tank, Oil
2	0773-383	2		Tiedown
3	0670-042	1	/P	Outlet, Tank
4	0624-120	4		Clamp, Hose
5	0610-107	0		Hose
6	0610-059	1		Valve, Check
7	0510-335	2	/P	Filter, Fuel
8	0623-502	4		Clamp
9	0670-416	1		Fitting, Elbow
10	0710-022	0	S	Hose, Oil Line
11	0673-448	1		Ring, Compression
12	0624-037	2		Clamp, Hose
13	0710-093	1	/P	Hose, Filler
14	0670-449	1		Cap, Oil Gauge
15	0670-304	1		Ring, Mounting Filler Neck
16	0670-270	1		Filler Neck
17	0670-271	1		Seal, Filler Neck
18	0624-031	6		Screw, Machine
19	0624-004	6		Washer
20	0624-005	6	/P	Nut, Lock
21	0510-358	1	/P	Strainer, Gas Tank
22	0620-162	1	S	Sensor, Low Oil
23	0609-237	1		Seal, Sensor

 
1995 DAYTONA (95DTA-W-1995)  
PTO-SIDE CARBURETOR

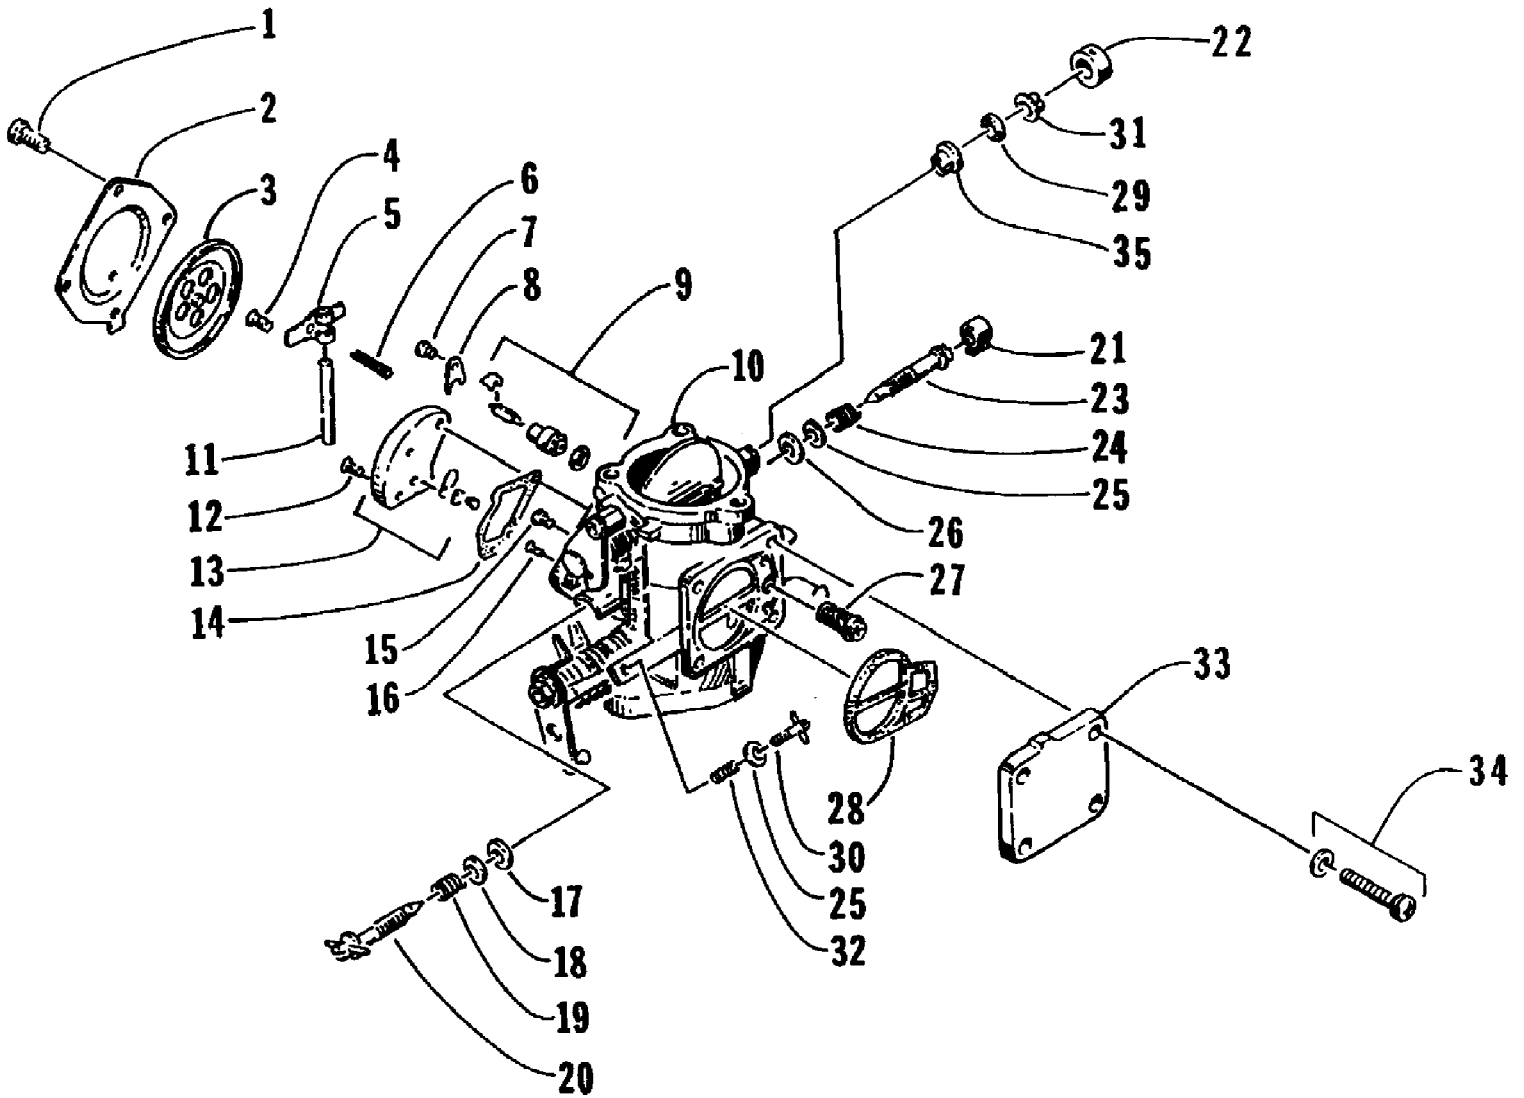

1995 DAYTONA (95DTA-W-1995)  
PTO-SIDE CARBURETOR

Page 44 of 58


Ref #	Part Number	Qty	S/P/F	Description
	0670-478	1		PTO-Side Carburetor Assembly
1	6505-850	4		Screw, Cap
2	6505-662	1		Cover
3	6505-663	1		Diaphragm Assembly
4	6505-692	1		Screw, Machine
5	6505-664	1		Arm
6	6505-669	1		Spring
7	6505-695	1		Screw, Machine
8	6505-682	1		Plate
9	6505-851	1	/P	Needle Valve Assembly
10	0	1	F	Mixing Body
11	6505-681	1		Pin
12	6505-679	2		Screw, Machine
13	6505-680	1		Block, Metering
14	6505-677	1		Gasket
15	6505-730	1		Main Jet - 100
16	6505-776	1	/P	Pilot Jet - 75
17	6505-668	1		Seal
18	6505-661	1		Washer
19	6505-660	1		Spring
20	6505-852	1		Adjuster
21	6505-659	1		Cap
22	6505-822	1		Collar, Choke Shaft
23	6505-699	1		Adjuster
24	6505-678	1		Spring
25	6505-703	1		Washer
26	6505-700	1	S	O-Ring
27	6505-676	1		Filter
28	6505-665	1		S-Gasket
29	6505-701	1		Seal, Choke Shaft
30	6505-702	1		Screw Assembly
31	6505-703	1		Washer
32	6505-651	1		Spring
33	6505-848	1		Cover
34	6505-853	4		Screw w/Washer
35	6505-817	1		Bushing, Choke Shaft

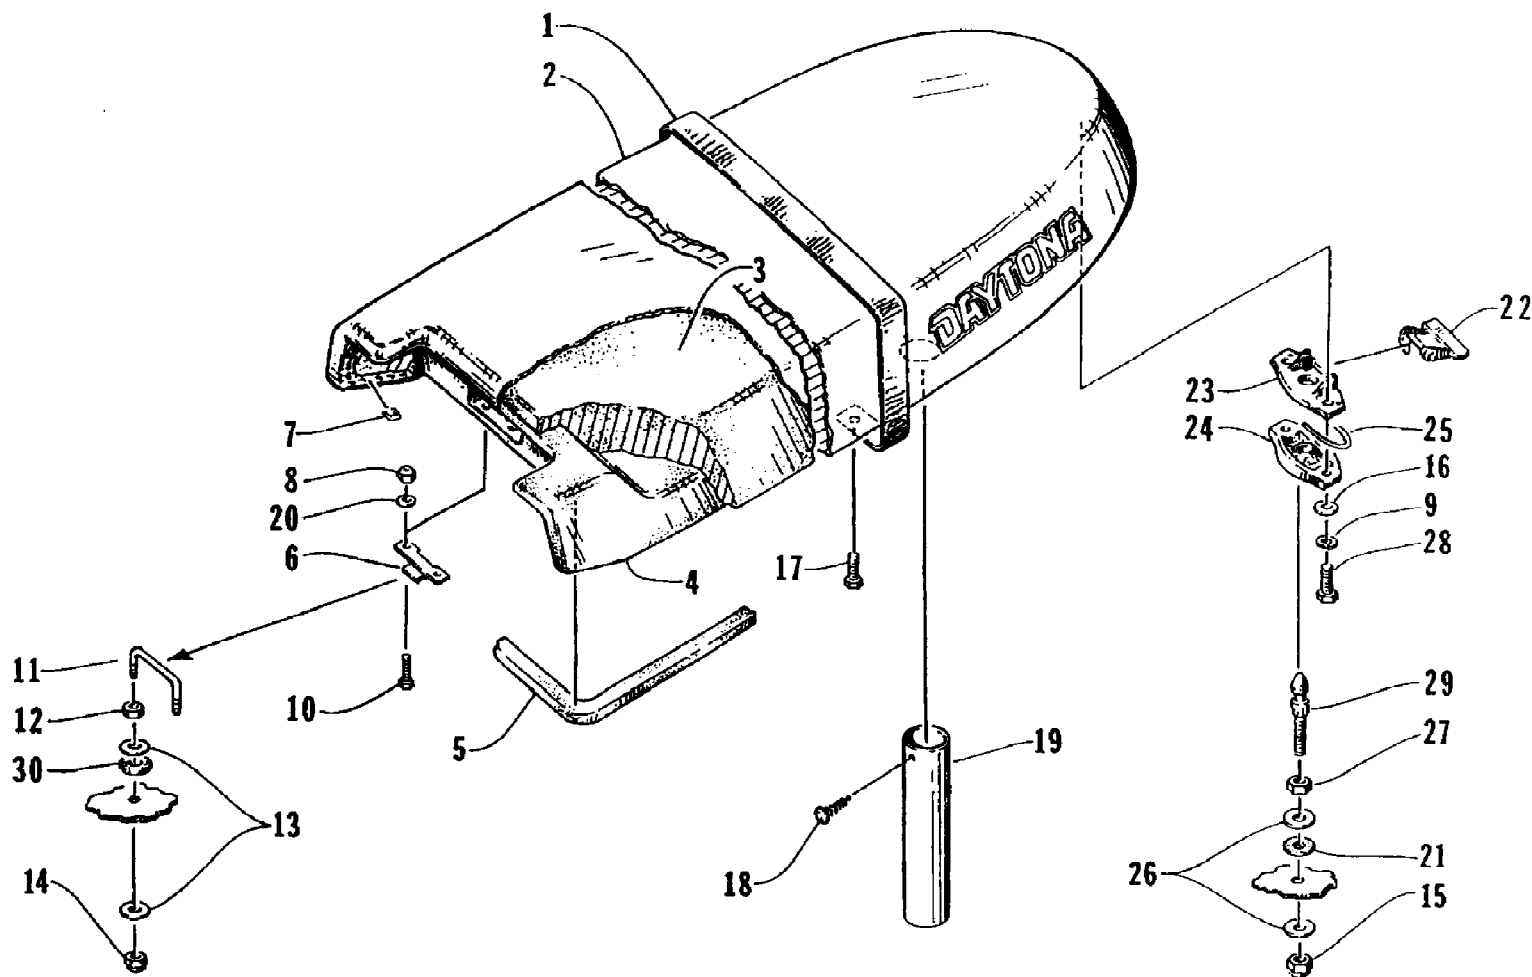 

1995 DAYTONA (95DTA-W-1995)  
SEAT ASSEMBLY

Page 46 of 58

Ref #	Part Number	Qty	S/P/F	Description
	0773-473	1		Seat Assembly
1	0773-352	1		Strap, Seat
2	0773-370	1		Cover, Seat w/Silkscreen
3	0773-099	1		Foam, Seat
4	0773-389	1		Base, Seat
5	0773-478	0	/P	Seal, Seat Base
6	0673-668	1		Catch, Seat
7	0624-263	0		Staple
8	0624-021	2		Nut, Lock
9	0624-036	2		Washer, Lock
10	0624-112	2	/P	Screw, Cap
11	0624-262	1		U-Bolt
12	0624-061	2		Nut, Jam
13	0624-125	4	/P	Washer
14	0624-090	2		Nut, Lock
15	0624-009	1		Nut, Lock
16	0624-022	2		Washer
17	0624-226	2		Screw, Cap
18	0623-585	3		Clip, Retainer
19	0610-171	1	/P/F	Air Tube, Exhaust
20	0624-182	2		Washer
21	0623-391	1		Washer, Rubber
22	0673-026	1	F	Lever, Release - Seat Latch
23	0673-024	1	S	Cover, Latch - Seat
24	0673-025	1		Back, Latch - Seat
25	0673-023	1		Clip, Retaining
26	0624-013	2		Washer
27	0624-047	1		Nut, Jam
28	0624-289	2		Screw, Cap
29	0673-788	1	S	Stud, Latch - Seat
30	0624-126	1		Washer, Rubber

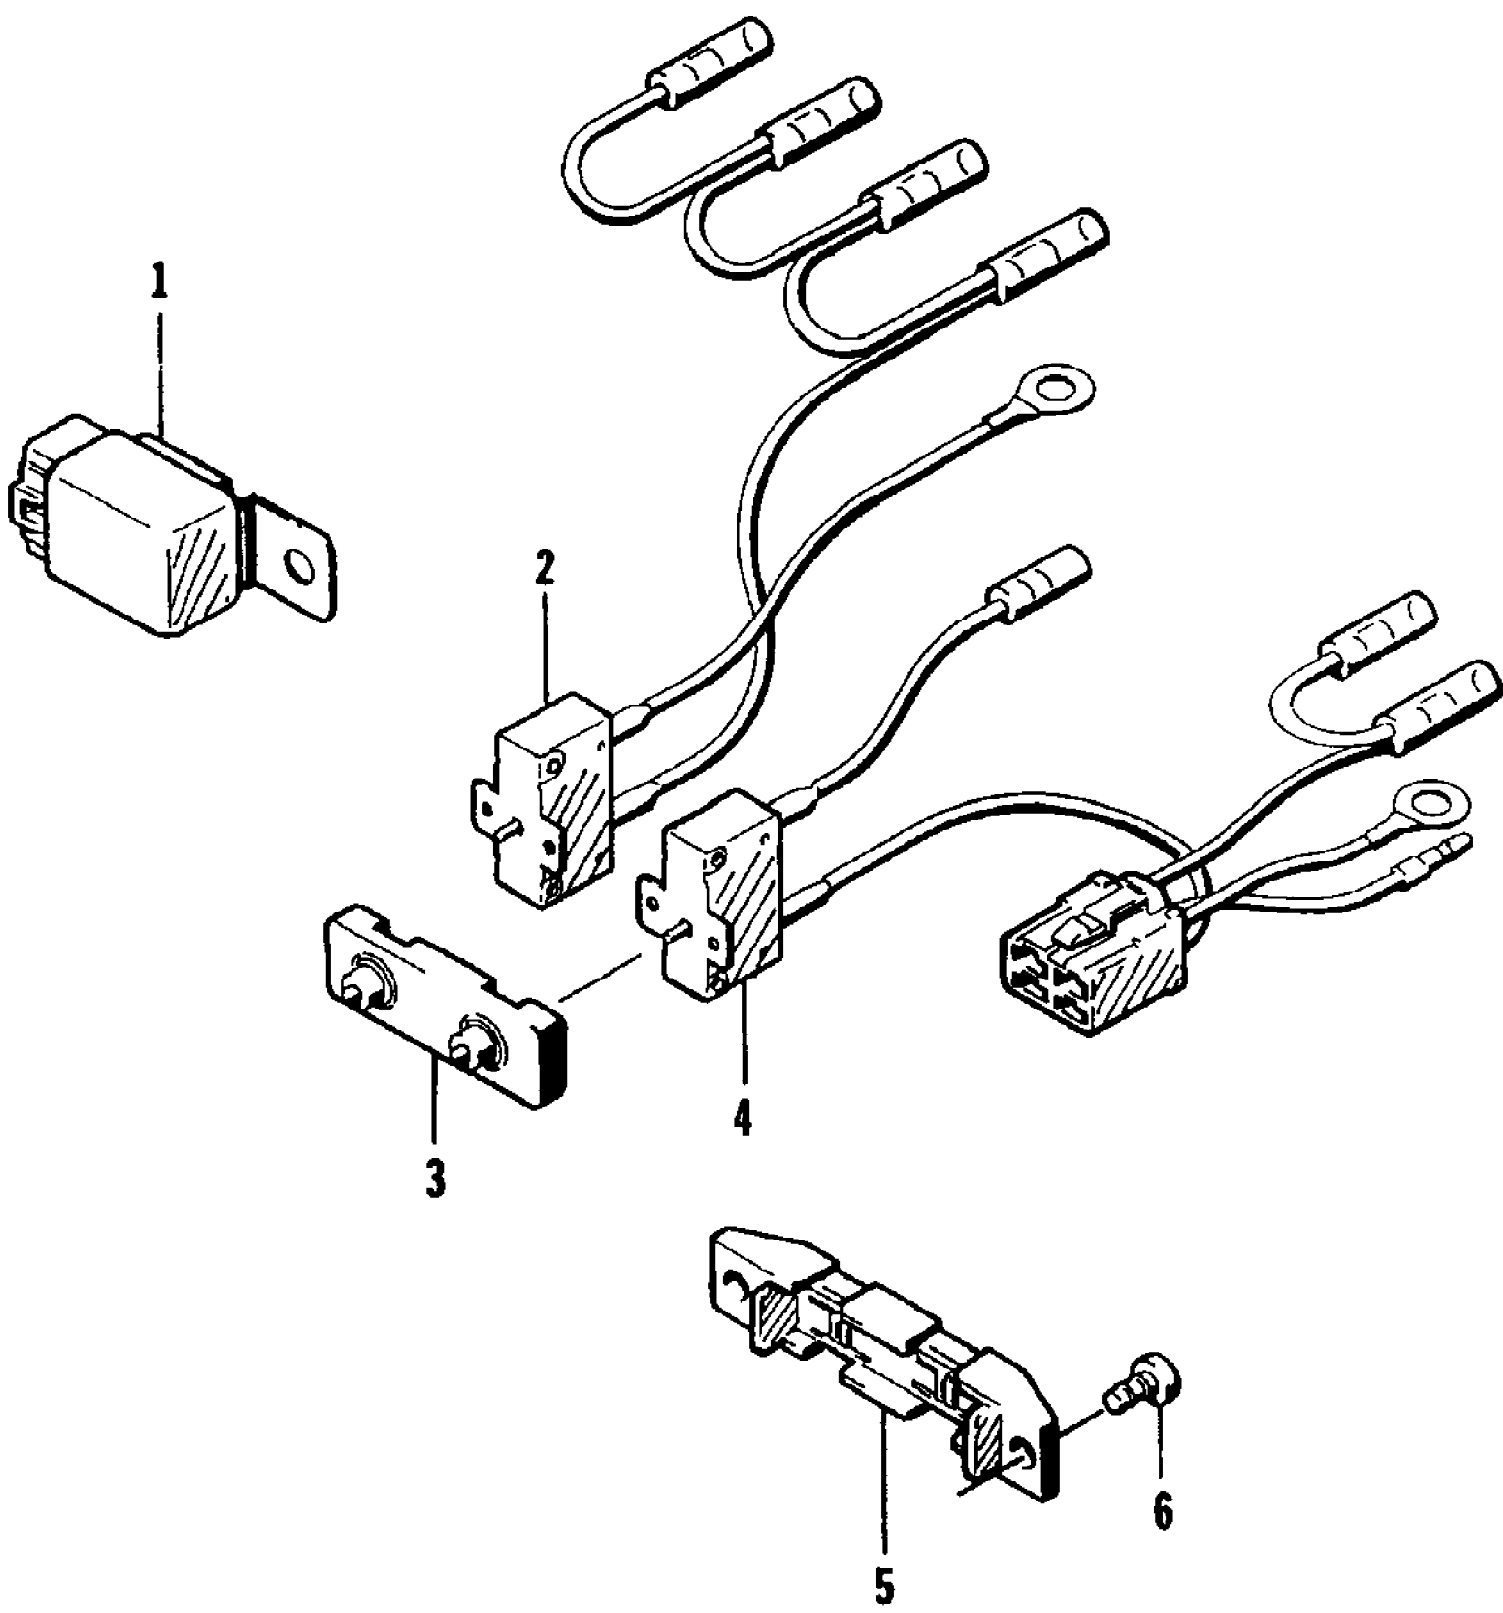 


1995 DAYTONA (95DTA-W-1995)  
SENSOR ASSEMBLY

Page 48 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-297	1	/P	Relay - Assembly
2	3008-348	1	S	Protector, Circuit Charge
3	3008-351	1		Cap, Circuit Protector
4	3008-350	1	/P	Protector, Circuit Load
5	3008-294	1	/P	Holder, Circuit Protector
6	3008-325	2		Screw, Cap



 1995 DAYTONA (95DTA-W-1995)  
STARTER MOTOR

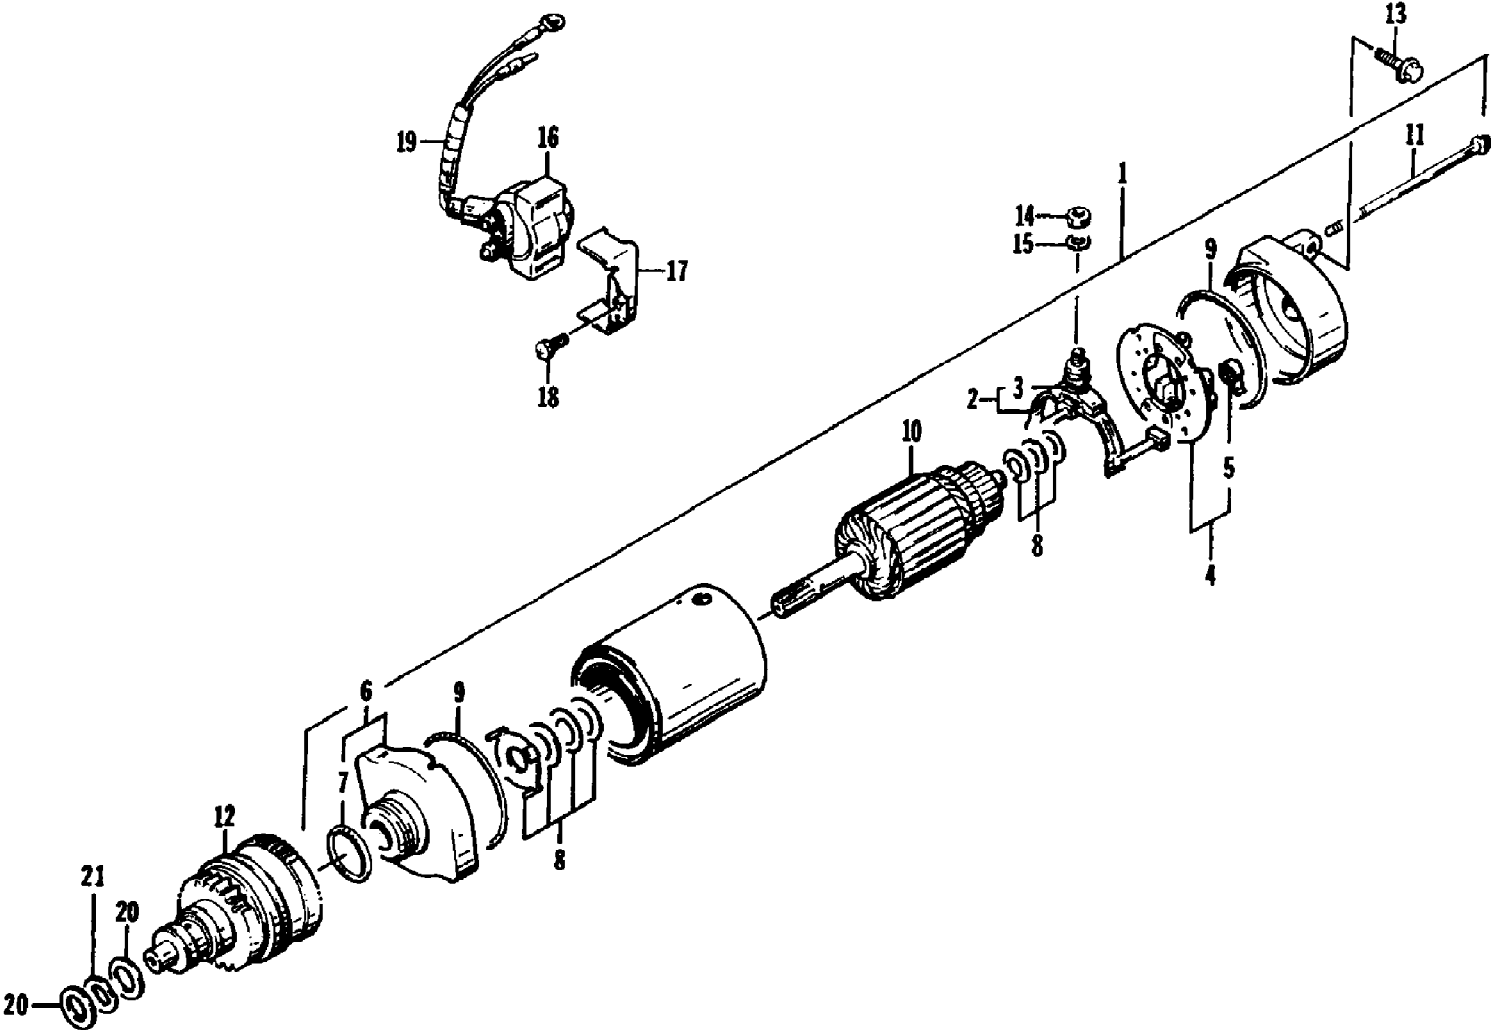


1995 DAYTONA (95DTA-W-1995)  
STARTER MOTOR

Page 50 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-327	1	S	Starter Motor Assembly (inc. 2-11)
2	3008-094	1	/P	. Terminal Set, Brush (inc. 3)
3	3008-164	1		.. O-Ring
4	3008-095	1	/P	. Holder Set, Brush (inc. 5)
5	3008-096	4		.. Spring, Brush
6	3008-328	1	/P	. Front Bracket Assembly (inc. 7)
7	3008-098	1	S	.. O-Ring
8	3008-099	2		. Washer Set
9	3008-101	2	S	. O-Ring
10	3008-103	1		. Armature
11	3008-102	2		. Cap, Screw
12	3008-104	1	S	Pinion Assembly
13	3008-009	2		Screw, Cap
14	3008-014	1		Nut
15	3008-020	1		Washer
16	3008-165	1	/P	Relay
17	3008-140	1		Bracket
18	3008-217	1		Screw, Cap
19	3008-135	1	S	Tube
20	3008-193	2	S	Washer
21	3008-221	1		Washer

 
1995 DAYTONA (95DTA-W-1995)  
STEERING POST ASSEMBLY

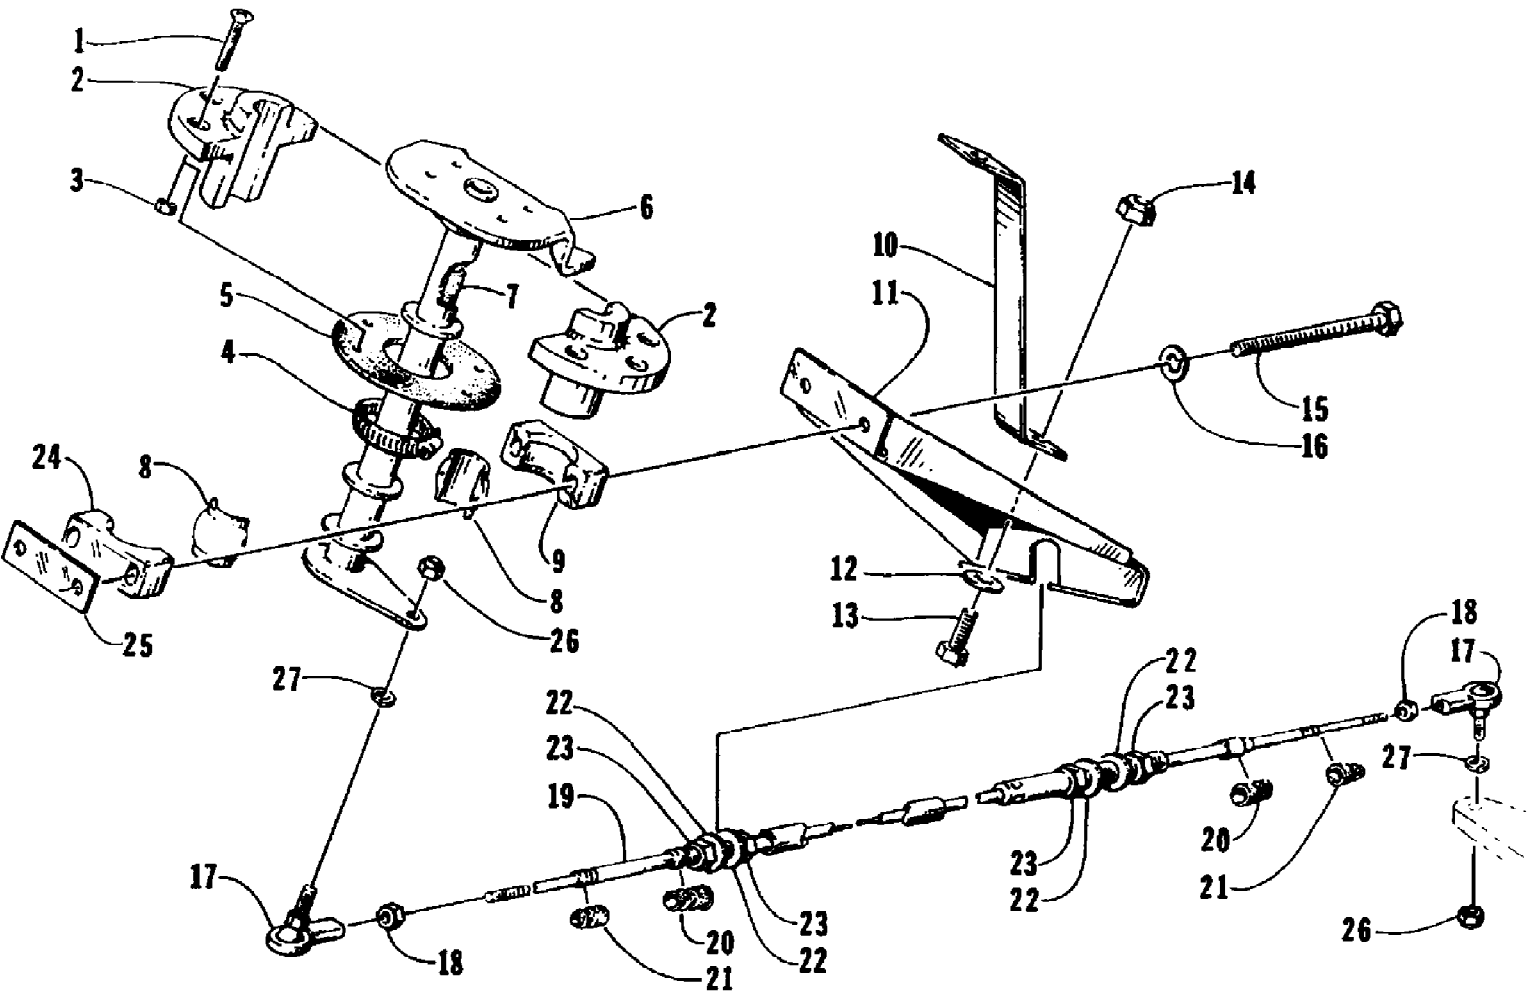

1995 DAYTONA (95DTA-W-1995)  
STEERING POST ASSEMBLY

Page 52 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0624-186	6		Screw, Machine
2	0673-122	2		Bearing, Half - Steering Post
3	0624-021	6		Nut, Lock
4	0624-037	1		Clamp
5	0673-056	1		Seal, Bearing
6	0773-096	1	/P	Post, Steering
7	0717-052	0	/P	Foam, Neoprene Tape
8	0605-149	2		Bearing, Steering Post
9	0605-171	2		Housing, Bearing
10	0673-457	1		Bracket, Support
11	0773-095	1	/P	Bracket, Steering Cable
12	0624-125	1	/P	Washer
13	0624-229	1		Screw, Cap
14	0624-090	1		Nut, Lock
15	0624-192	2		Screw, Cap
16	0624-028	2		Washer
17	0673-028	2		End, Steering Cable
18	0624-107	2		Nut, Jam
19	0673-232	1	/P	Cable, Steering
20	0612-363	2		Seal, Rod
21	0612-364	2		Seal, Steering Cable
22	0624-106	4		Washer
23	0624-105	4		Nut, Jam
24	0705-064	1	/P	Housing, Bearing
25	0673-366	1		Spacer, Bearing Housing
26	0624-114	2		Nut, Lock
27	0624-115	2		Washer, Lock

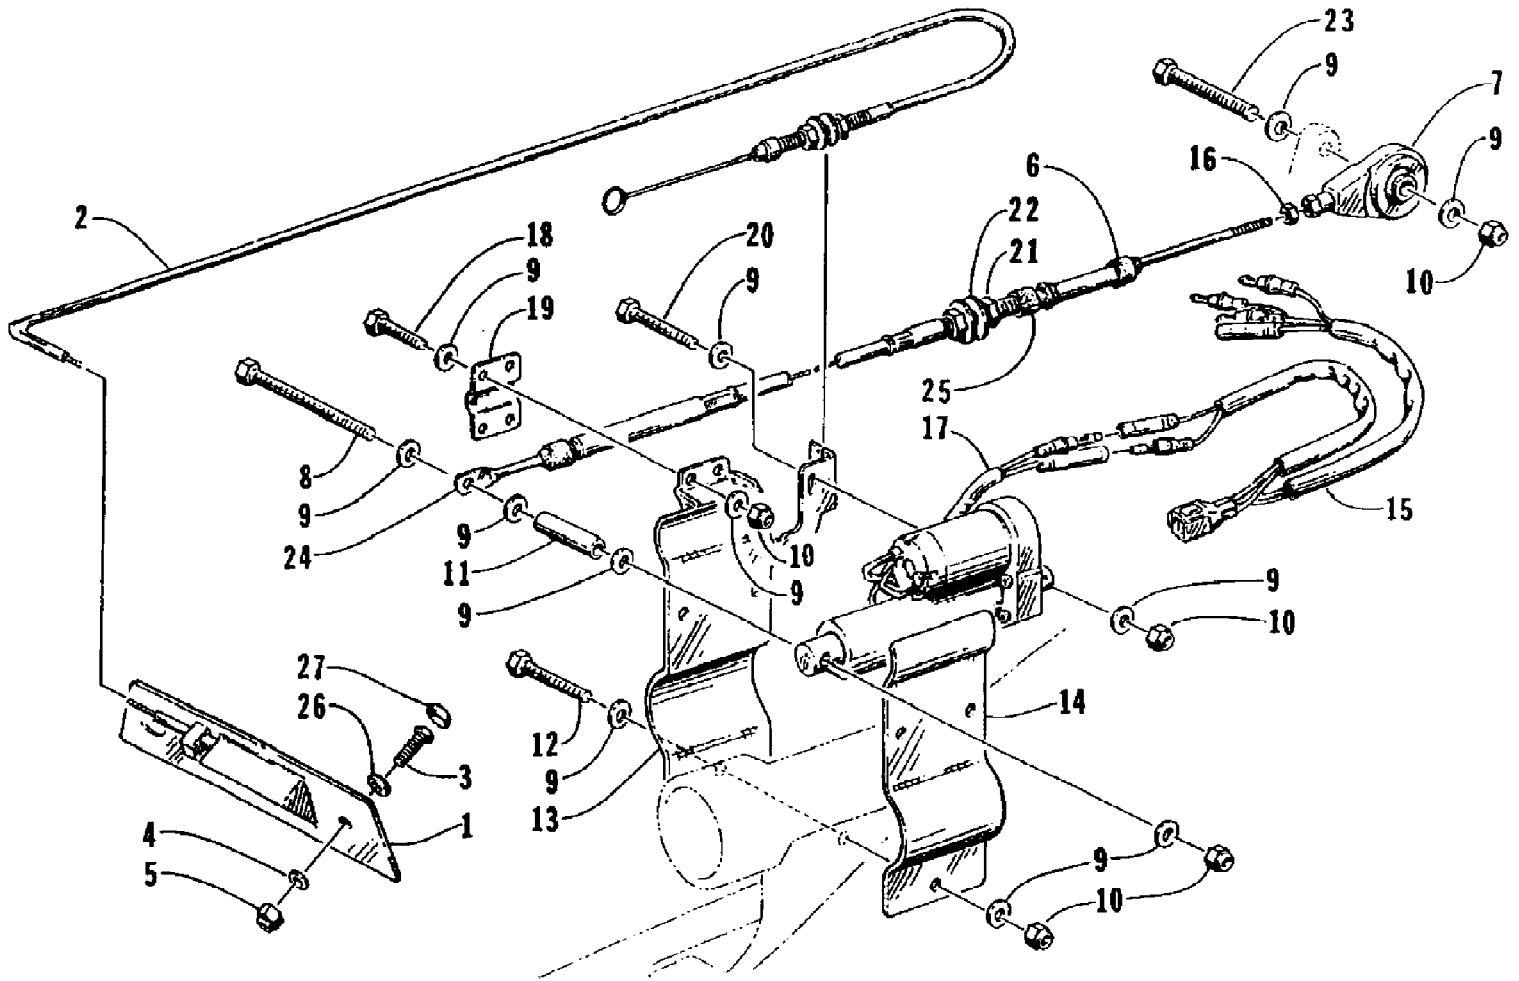 


1995 DAYTONA (95DTA-W-1995)  
TRIM ASSEMBLY

Page 54 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0673-772	1		Plate, Console - Trim
2	0673-518	1		Cable, Trim Indicator
3	0624-095	1		Screw, Machine
4	0624-004	1		Washer
5	0624-005	1	/P	Nut, Lock
6	0612-363	1		Seal, Rod
7	0673-512	1		End, Trim Cable
8	0624-213	1		Screw, Cap
9	0624-022	20		Washer
10	0624-250	9		Nut, Lock
11	0673-487	1		Spacer
12	0624-052	3		Screw, Cap
13	0773-214	1		Bracket, Trim Cable - Right
14	0673-463	1		Bracket, Trim Cable - Left
15	0686-290	1		Harness, Trim
16	0624-107	1		Nut, Jam
17	0673-711	1	/P	Motor, Trim
18	0624-046	4		Screw, Cap
19	0673-476	1		Retainer, Trim Cable
20	0624-053	1	/P	Screw, Cap
21	0624-105	2		Nut, Jam
22	0624-106	2		Washer
23	0624-052	1		Screw, Cap
24	0673-187	1		Cable, Trim
25	0612-364	1		Thread, Cap Cover
26	0124-065	1		Washer, Snap Cap
27	0124-066	1	S	Cover, Snap Cap

 1995 DAYTONA (95DTA-W-1995)  
WATER FILTER ASSEMBLY

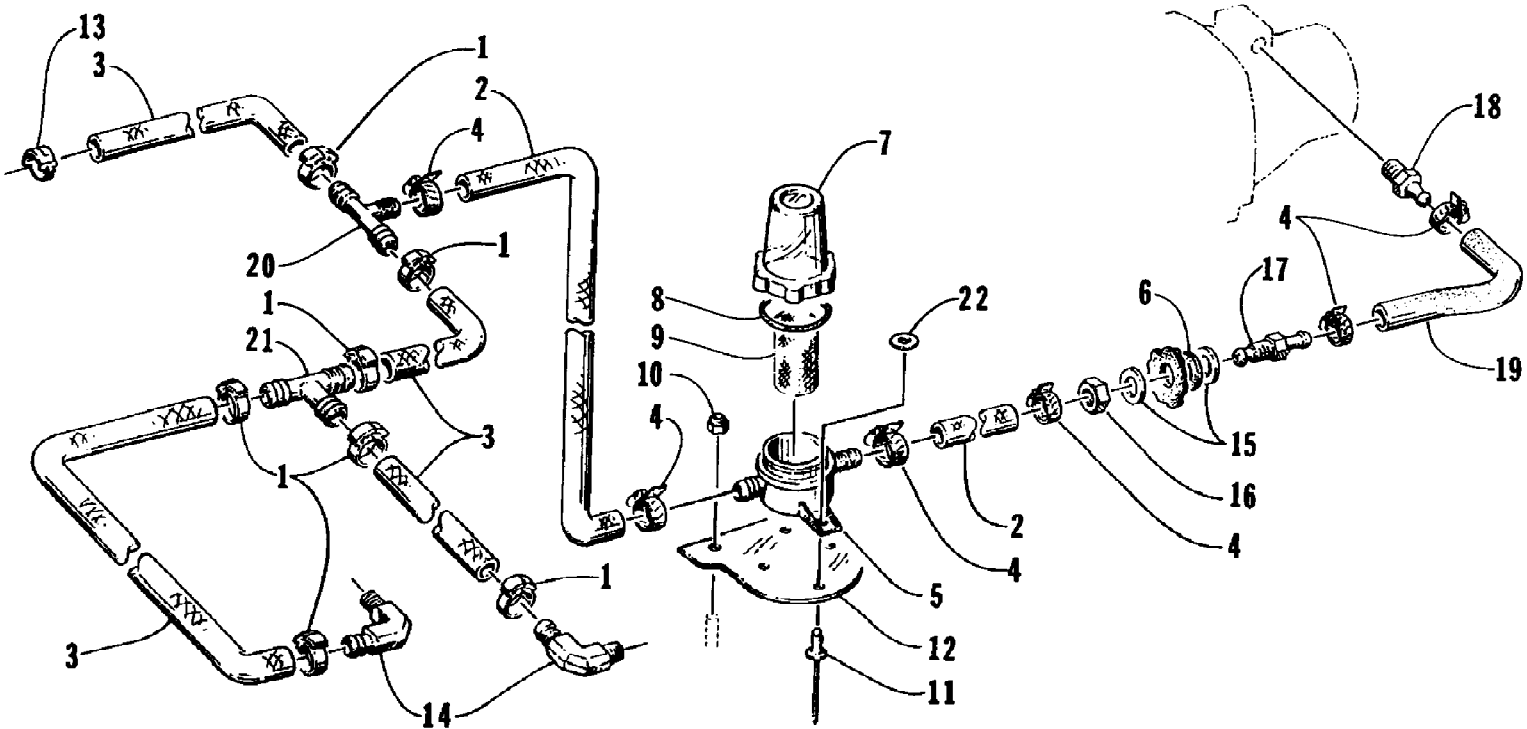




1995 DAYTONA (95DTA-W-1995)  
WATER FILTER ASSEMBLY

Page 56 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0623-365	7		Clamp
2	0610-083	0	S	Hose
3	0610-183	0		Hose, Water
4	0624-016	6		Clamp
5	0773-342	1		Filter, Water Assembly (inc. 6-9)
6	0673-516	1		. O-Ring
7	0673-669	1		. Cover
8	0673-670	1		. O-Ring
9	0673-671	1		. Screen
10	0624-021	2		Nut, Lock
11	0624-069	2		Rivet
12	0673-790	1		Bracket, Mounting
13	3008-235	1		Clamp
14	0610-182	2	S	Fitting, Elbow
15	0624-222	2		Washer
16	0624-117	1		Nut
17	0673-700	1		Fitting, Hull
18	0670-118	1		Outlet, Oil Tank
19	0610-162	1		Hose, Formed
20	0673-484	1		T-Connection
21	0673-523	1		T-Connection
22	0624-004	2		Washer



   1995 DAYTONA (95DTA-W-1995)  
WIRING HARNESS

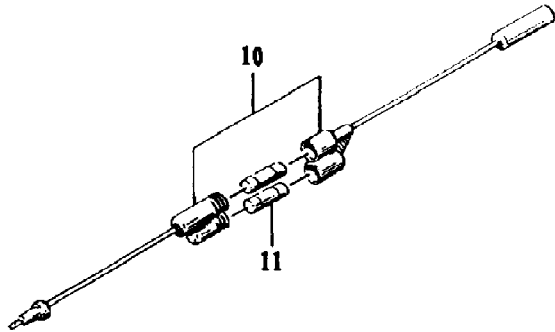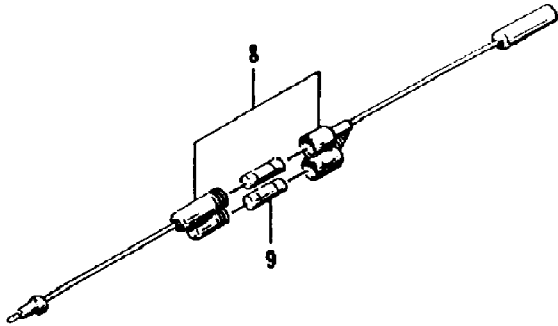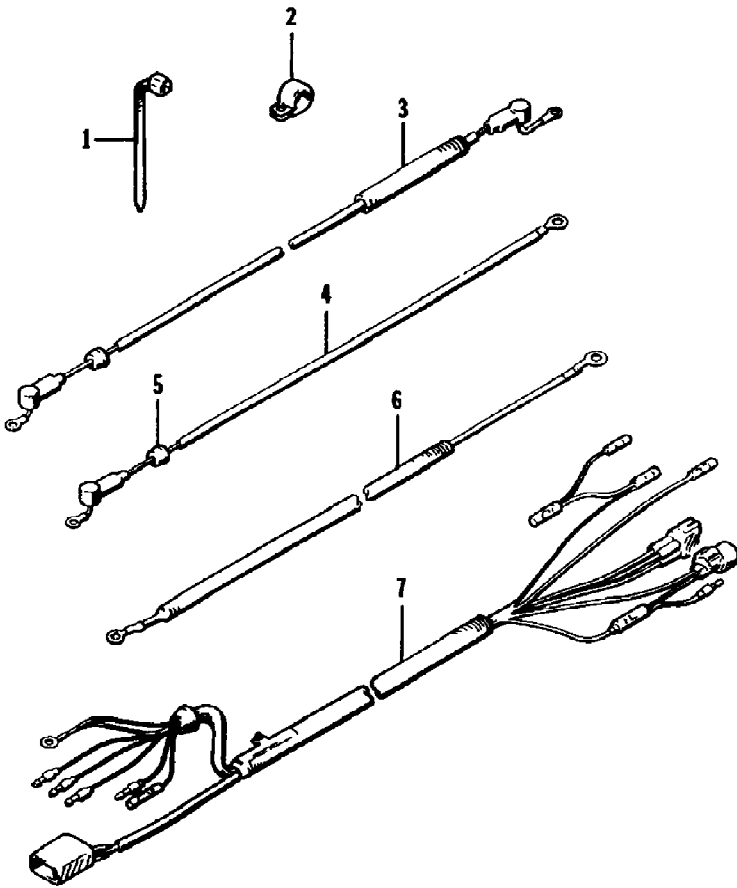

1995 DAYTONA (95DTA-W-1995)  
WIRING HARNESS

Page 58 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-044	1		Clamp
2	3008-332	2		Clamp
3	3008-346	1		Cable
4	3008-290	1	S	Cable
5	3008-334	1	/P	Grommet
6	3008-154	1		Cable, Ground
7	3008-347	1		Harness, Wiring
8	0630-081	1		Fuse Holder, Waterproof
9	0630-028	1		Fuse, 1 AMP
10	0630-082	1		Fuse Holder, Waterproof
11	0630-084	1		Fuse, 3 AMP