



1996 DAYTONA 770 (96DTB-W-1996)
BILGE PUMP ASSEMBLY

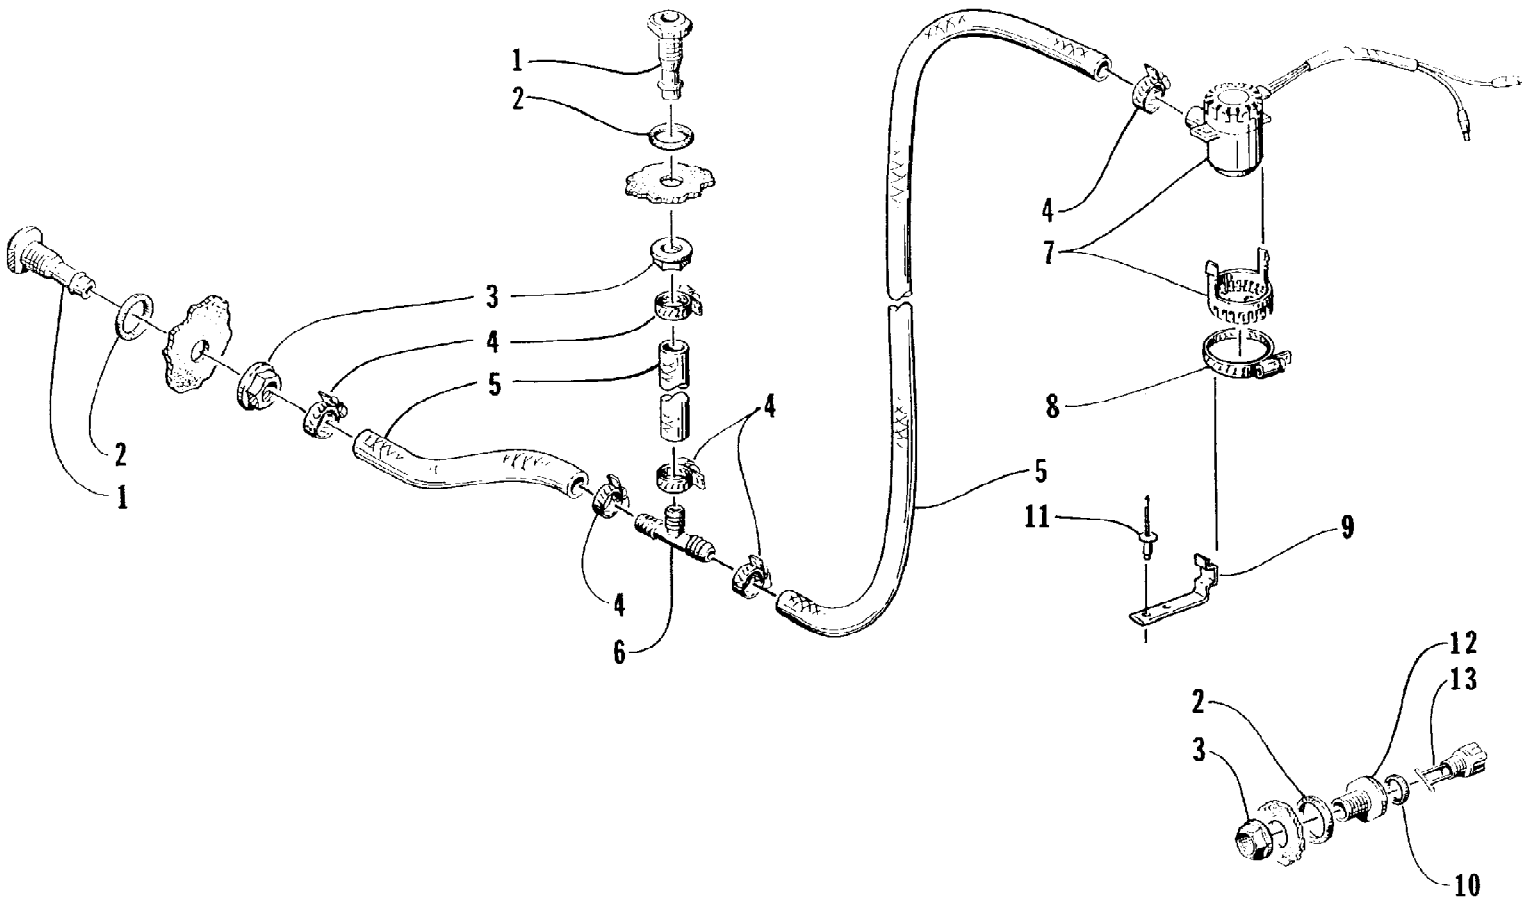

1996 DAYTONA 770 (96DTB-W-1996)
BILGE PUMP ASSEMBLY

Page 2 of 58


Ref #	Part Number	Qty	S/P/F	Description
1	0673-377	2		Fitting, outlet - Bilge
2	0612-456	3		Seal, Fitting
3	0673-378	3	S	Nut, Fitting
4	0624-018	6		Clamp, Hose
5	0610-264	0		Hose, Bilge
6	0673-483	1		T-Connection
7	1673-199	1		Pump, Bilge
8	0624-037	1		Clamp
9	1673-194	1		Mount, Bilge Pump
10	0673-459	1		O-Ring
11	0624-072	2		Rivet
12	0673-278	1		Retainer, Drain Plug
13	0673-404	1		Plug, Drain

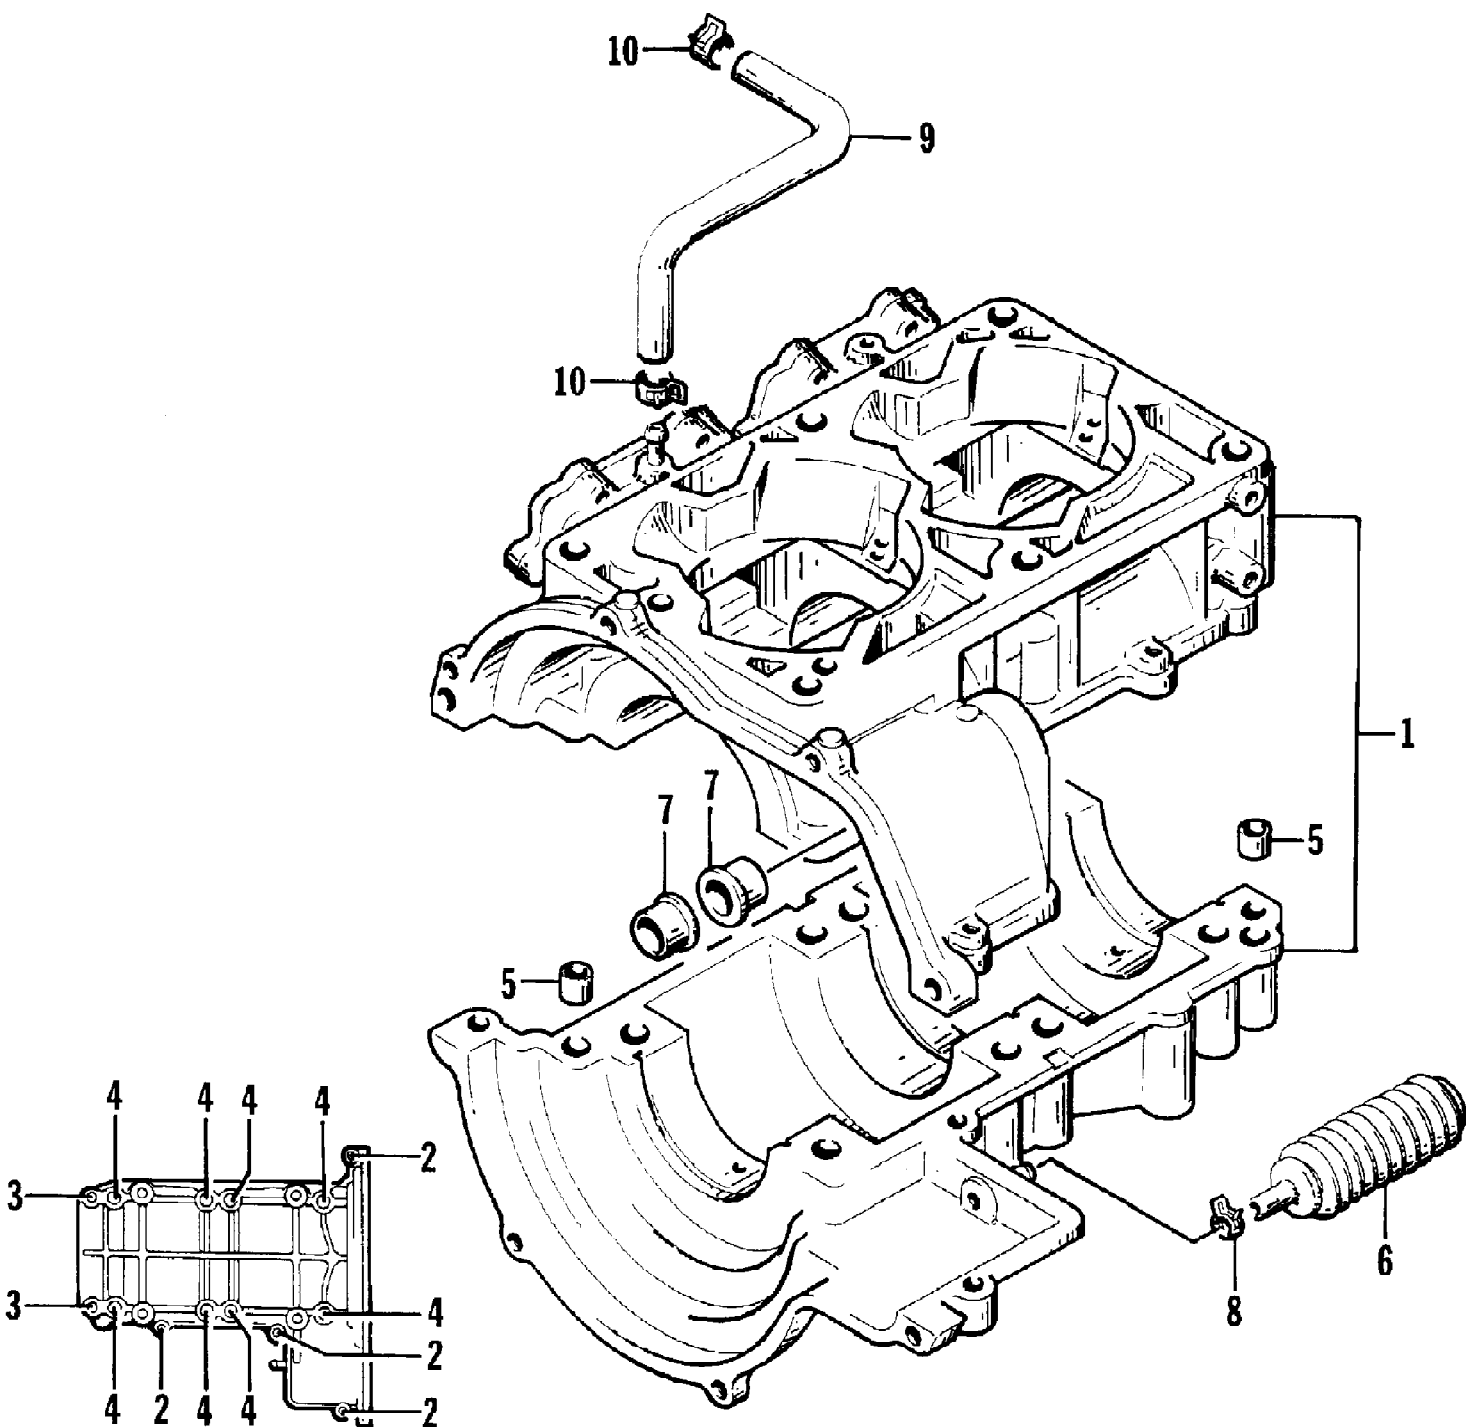

1996 DAYTONA 770 (96DTB-W-1996)
CRANKCASE

Page 4 of 58


Ref #	Part Number	Qty	S/P/F	Description
1	3008-428	1		Crankcase Assembly (inc. 2-5)
2	3008-210	4	/P	Screw, Cap
3	3008-211	2	S	Screw, Cap
4	3008-212	8	/P	Screw, Cap
5	3008-199	2	/P	Pin
6	3008-100	1		Bladder, Magnet Case
7	3008-105	2		Bushing, Pinion Shaft
8	3008-038	1		Clamp
9	3008-200	1	/P	Hose, Vacuum
10	3008-039	2		Clamp, Hose

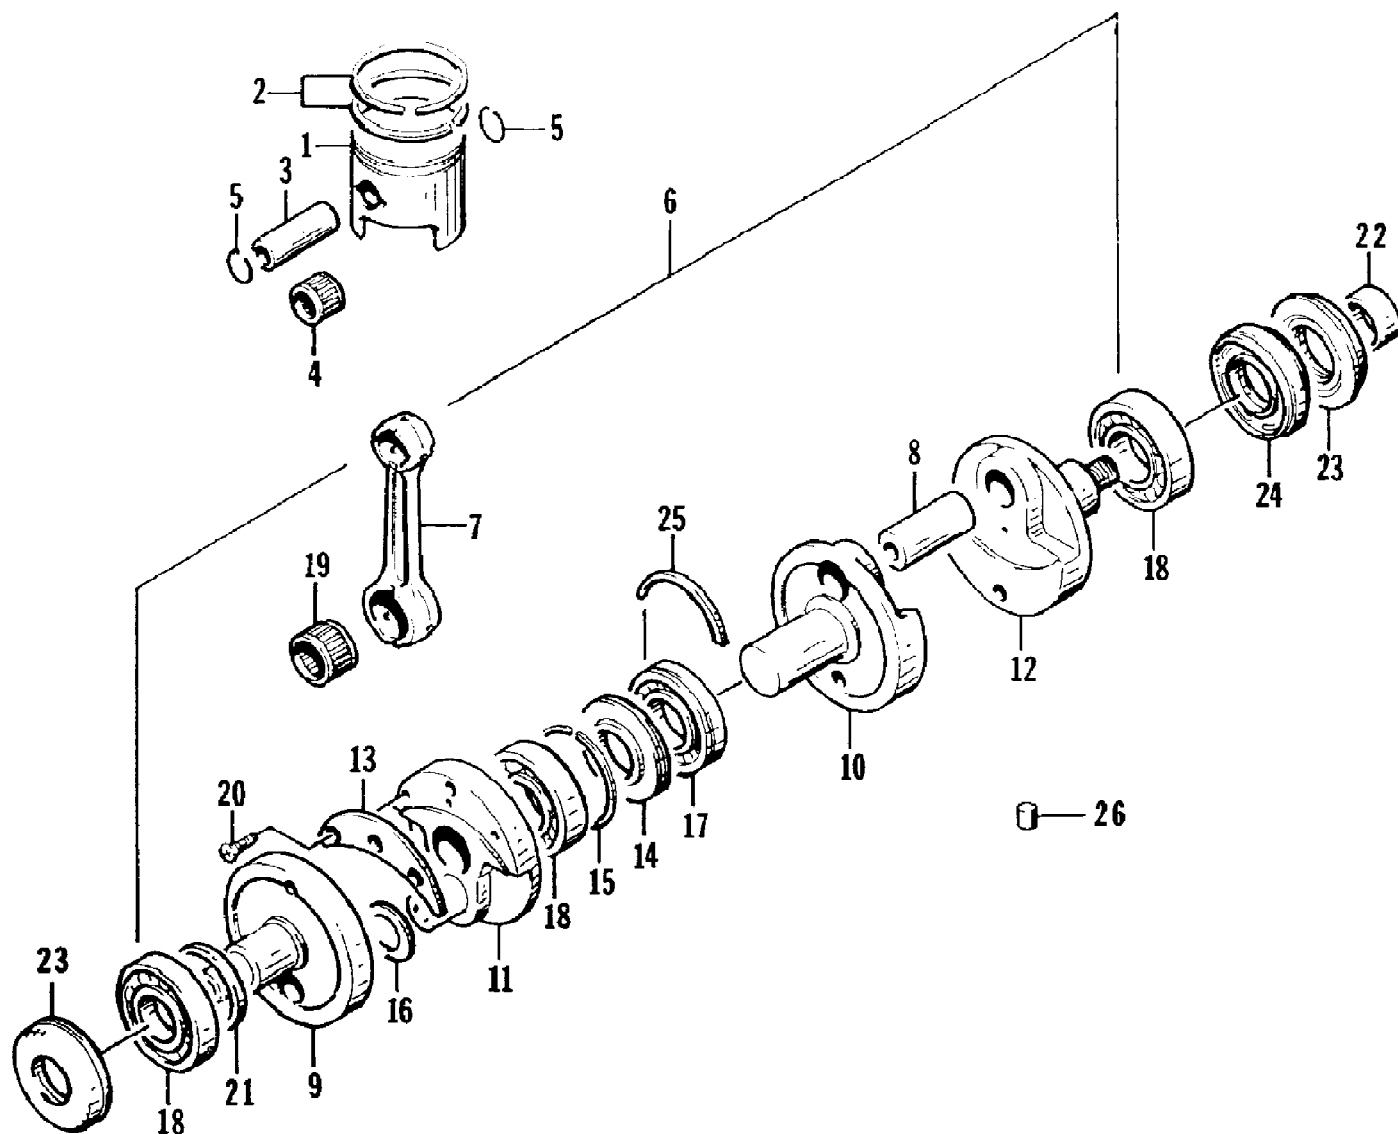

1996 DAYTONA 770 (96DTB-W-1996)
CRANKSHAFT

Page 6 of 58


Ref #	Part Number	Qty	S/P/F	Description
1	3008-412	2	S	Piston, Standard
1	3008-414	2		Piston, Optional (+ 0.010 in.)
1	3008-416	2		Piston, Optional (+ 0.020 in.)
2	3008-413	2		Ring Set, Standard
2	3008-415	2		Ring Set, Optional (+ 0.010 in.)
2	3008-417	2		Ring Set, Optional (+ 0.020 in.)
3	3003-338	2	S	Pin
4	3003-433	2	/P	Bearing
5	3003-439	4	/P	Ring, Snap
6	3008-428	1		Crankshaft Assembly (inc. 7-21)
7	3008-427	2		Connecting Rod
8	3008-429	1	/P	Crank Pin
9	3008-430	1		Crankshaft, Right
10	3008-431	1		Wheel
12	3008-433	1		Crankshaft, Left
13	3008-069	1		Balancer
14	3003-606	1		Race, Center
15	3003-453	1		Ring, Center
16	3008-019	1		Washer
17	3008-421	1	/P	Bearing
18	3008-422	3	S	Bearing
19	3008-423	2		Bearing
20	3004-372	3	S	Screw, Machine
21	3003-354	1	S	Washer
22	3008-072	1		Spacer, Crankshaft
23	3003-367	2		Seal, Oil
24	3002-355	1		Seal, Oil - Center
25	3003-359	1		O-Ring
26	3003-658	4	/P	Pin

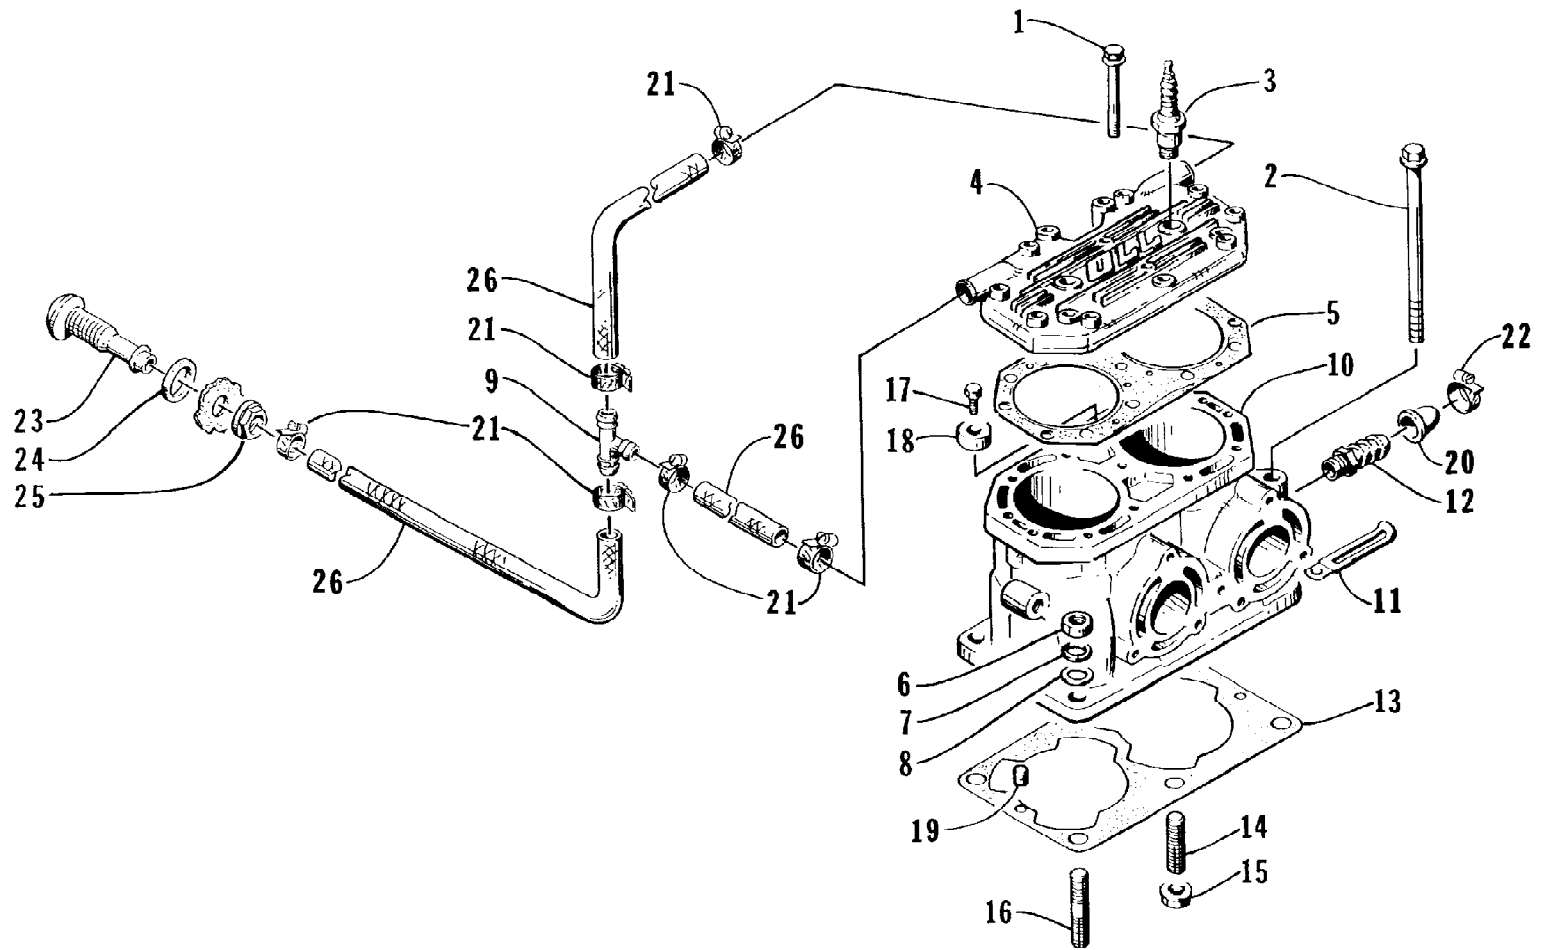

1996 DAYTONA 770 (96DTB-W-1996)
CYLINDER ASSEMBLY

Page 8 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-381	10		Screw, Cap
2	3008-459	1	/P	Screw, Cap
3	0217-700	2		Spark Plug (BR9ES)
4	3008-424	1	S	Head, Cylinder
5	3008-410	1	S	Gasket, Cylinder Head
6	3008-209	5	/P	Nut
7	3008-207	5	/P	Washer, Lock
8	3008-237	5	S	Washer
9	0673-483	1		T-Connecting
10	3008-425	1	/P	Cylinder
11	3008-358	2	/P	Clamp
12	3008-361	1		Union
13	3008-411	1		Gasket, Cylinder
14	3008-394	1	/P	Stud
15	3008-208	1		Nut
16	3008-300	5		Stud
17	3008-013	1		Screw, Cap
18	3008-047	1		Zinc, Anode (inc. 17)
19	3008-146	2		Pin
20	1673-272	1	/P	Cap, Fitting - Rubber
21	0624-018	6		Clamp, Hose
22	0624-291	1		Clamp
23	0673-377	1		Outlet, Water
24	0612-360	1		Seal, outlet
25	0673-378	1	S	Nut, outlet
26	0710-191	0		Hose, Water

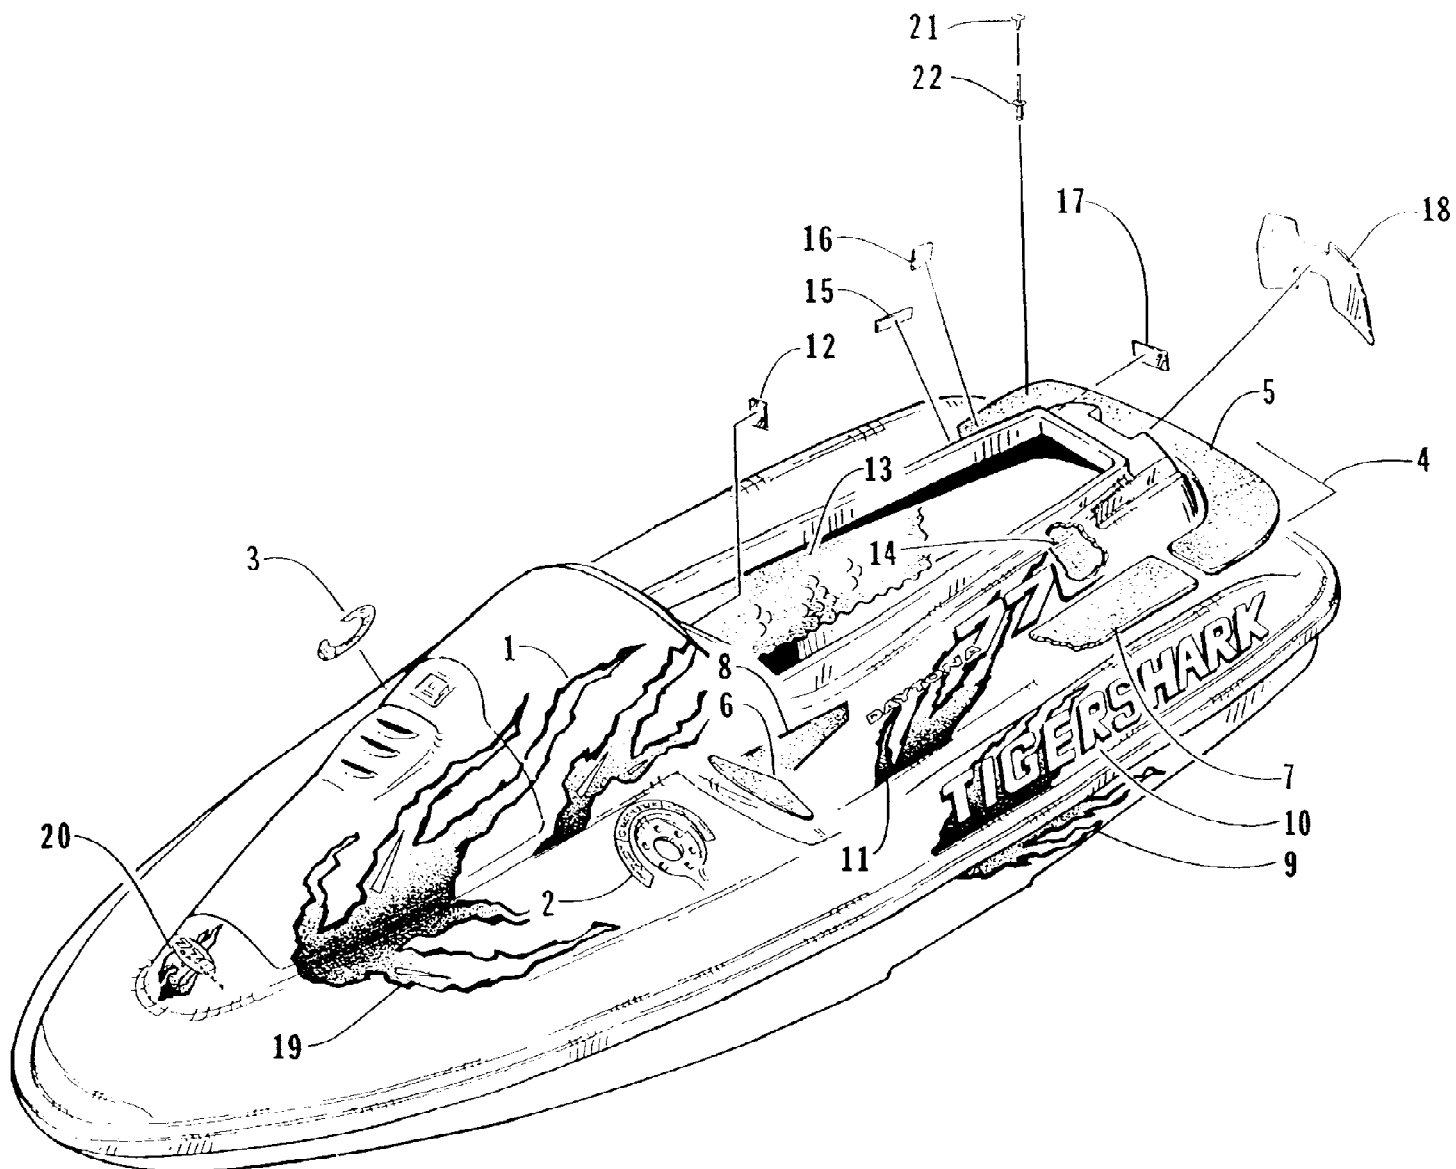


1996 DAYTONA 770 (96DTB-W-1996)
DECAL AND FOOTPAD ASSEMBLY

Page 10 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0614-208	1		Decal, Hood - Upper Right
1	0614-209	1		Decal, Hood - Upper Left
2	1611-604	1		Decal, Warning Fuel
3	1611-605	1		Decal, Oil Filler
4	0773-617	1		Pad, Foot -Deck Assembly (inc. 5-8)
5	0673-961	1		Pad, Foot - Rear
6	0673-964	1		Pad, Foot - Front Right
6	0673-965	1		Pad, Foot - Front Left
7	0673-962	1		Pad, Foot - Right
7	0673-963	1		Pad, Foot - Left
8	0673-966	1		Pad, Foot - Side Right
8	0673-967	1		Pad, Foot - Side Left
9	0614-214	1		Decal, Hull - Right
9	0614-215	1		Decal, Hull - Left
10	0614-216	1		Decal, Deck - Tigershark - Right
10	0614-217	1		Decal, Deck - Tigershark - Left
11	0614-218	1		Decal, Side - Right
11	0614-219	1		Decal, Side - Left
12	1611-866	1		Decal, Warning - Gas Vaprs
13	0617-250	2		Fam, Deck - Right
14	0617-183	1		Fam, Deck - Left
15	0614-059	1		Decal, Cmmn Sense
16	0614-066	1		Decal, USCG Exemption
17	0614-154	1		Decal, Caution - Uprighting
18	0614-240	1		Decal, Regulation
19	0614-210	1		Decal, Hd - Lwer Right
19	0614-211	1		Decal, Hd - Lwer Left
20	0614-220	1		Decal, Crest
21	1673-111	54		Plug, Mushrm
22	8060-230	54		Rivet


1996 DAYTONA 770 (96DTB-W-1996)
ELECTRICAL MODULE AND BATTERY

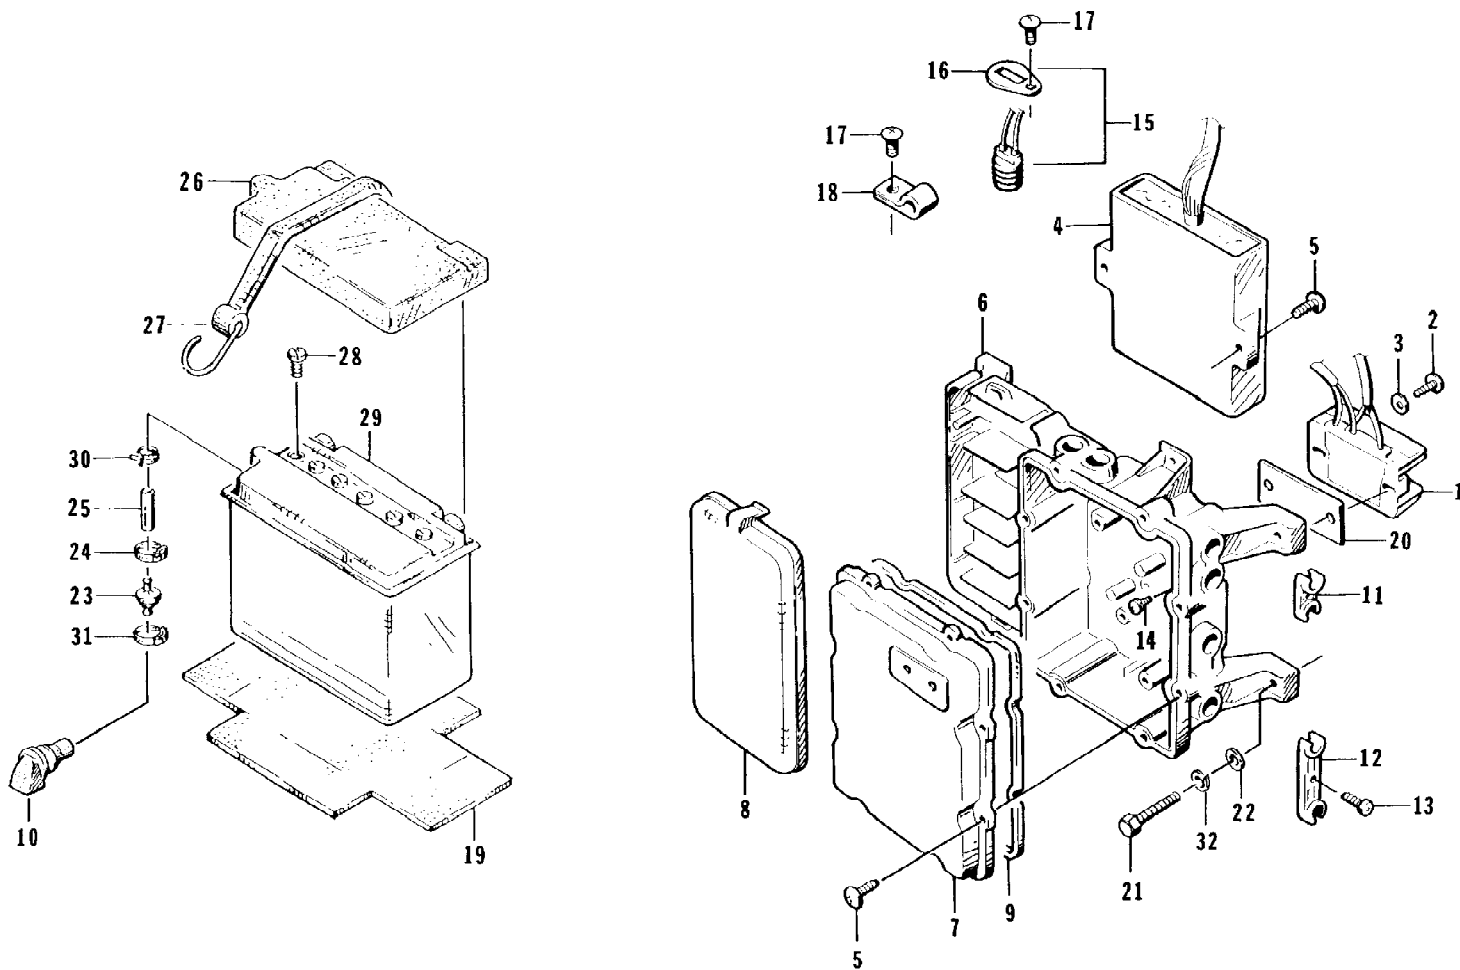

1996 DAYTONA 770 (96DTB-W-1996)
ELECTRICAL MODULE AND BATTERY

Page 12 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-279	1	/P	Regulator Assembly (inc. 2)
2	3008-318	2	S	Screw, Regulator
3	3008-337	2		Washer, Regulator
4	3008-468	1		Unit, CDI
5	3008-319	3		Screw, Cap
6	3008-465	1		Case
7	3008-283	1	/P	Cover
8	3008-282	1		Cover
9	3008-285	1	/P	Packing
10	0673-755	1		Vent, Thru Hull
11	3008-124	3		Holder
12	3008-125	1		Holder
13	3008-379	4		Screw, Cap
14	3008-217	1		Screw, Cap
15	3008-330	1	S/P	Sensr - Assembly (inc. 16)
16	3008-134	1		Supporter
17	3008-219	3		Screw, Machine
18	3008-040	1		Clamp
19	0673-308	1		Pad, Battery
20	3008-336	1	/P	Base, Regulator
21	0624-290	4		Screw, Cap
22	0624-228	4		Washer
23	0670-295	1		Valve, Check
24	0623-502	1		Clamp
25	0610-008	0	/P	Hose
26	0673-454	1		Cover, Battery
27	0773-382	2	/P	Tiedown
28	0645-045	6		Cap, Battery
29	0645-157	1		Battery (inc. 28)
30	0624-323	1		Clamp, Hose - Battery
31	0623-063	1		Clamp
32	0624-115	4		Washer, Lock

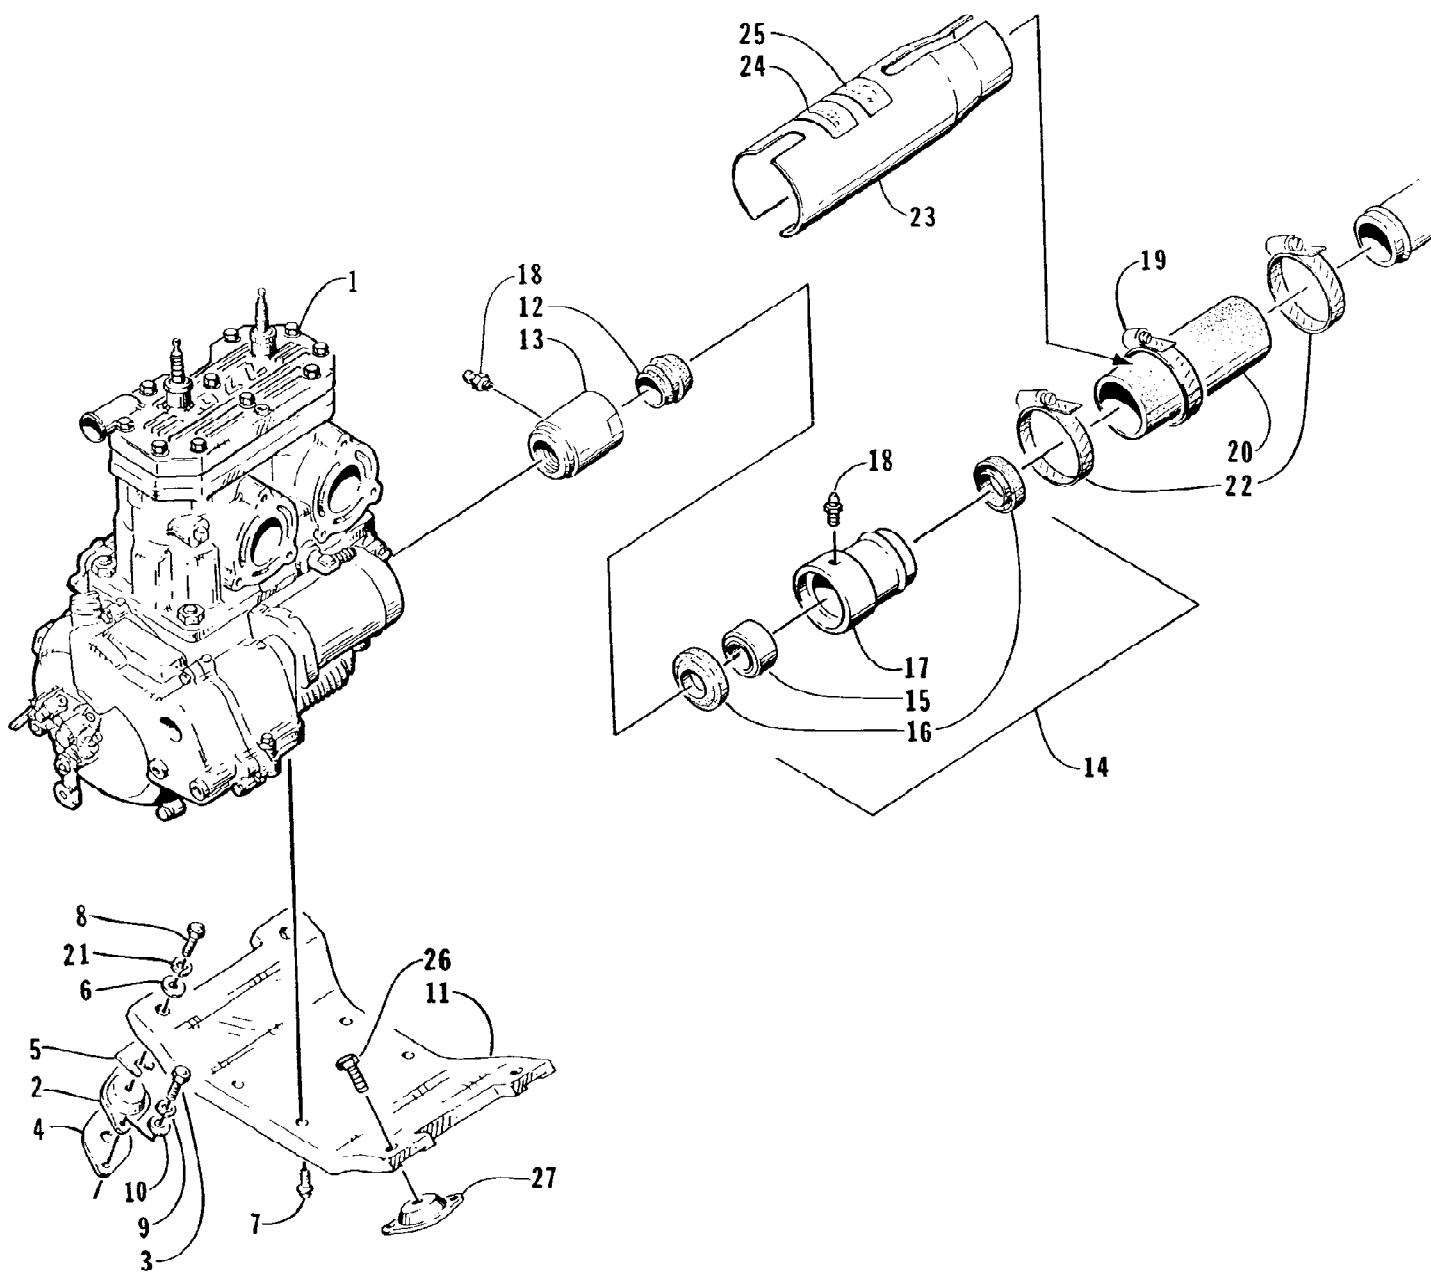

1996 DAYTONA 770 (96DTB-W-1996)
ENGINE AND RELATED ASSEMBLY

Page 14 of 58


Ref #	Part Number	Qty	S/P/F	Description
1	0662-176	1		Engine
2	3008-456	2		Damper, Engine
3	0624-087	8		Screw, Cap
4	0673-508	0	/P	Shim, Engine Munt - 0.125 in.
4	0673-509	0		Shim, Engine Munt - 0.063 in.
5	0624-014	0	/P	Shim - 0.5 mm
5	0624-015	0	/P	Shim - 1.5 mm
6	3008-016	4		Washer
7	3008-203	4	/P	Screw, Cap
8	3008-240	4		Screw, Cap
9	0624-012	8		Washer, Lock
10	0624-028	8		Washer
11	0608-167	1		Plate, Engine Mount
12	0673-787	1	S	Grommet, Seal
13	0675-059	1		Coupler, Engine
14	0775-048	1		Housing, Seal - Assembly (inc. 15-17 and one 18)
15	0675-113	1	S	Bearing
16	0675-114	2	S	Seal
17	0675-099	1		Housing/Bearing - Floating
18	0623-658	2		Fitting, Grease
19	0624-037	1		Clamp
20	0675-017	1	S	Hose, Coupler
21	0624-027	4		Washer, Lock
22	0624-390	3		Clamp
23	0773-627	1		Guard, Coupler (inc. 24-25)
24	1611-608	1		Decal, Warning
25	0614-244	1		Decal, Coupler - Servicing
26	0624-238	1		Screw, Cap
27	3008-054	2		Damper, Engine

1996 DAYTONA 770 (96DTB-W-1996)
EXHAUST ASSEMBLY

Page 16 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0612-605	1	S	Chamber, Expansion
2	0612-612	1		Manifld, Exhaust
3	0612-696	1		Gasket, Expansion Chamber
4	1673-254	1		Gasket, Exhaust Manifold
5	0612-634	1		Bracket, Expansion Chamber
6	0624-038	1		Clamp, Hose
7	0624-344	1		Screw, Cap
8	0624-192	3		Screw, Cap
9	0624-055	4		Screw, Cap
10	0624-402	2		Screw, Cap
11	0624-403	1		Screw, Cap
12	0624-383	5		Stud
13	0610-272	1		Hose, Exhaust - In
14	0624-401	5		Nut, Jam
15	0624-028	12		Washer
16	0624-008	2		Washer
17	0624-027	12		Washer, Lock
18	0624-012	1		Washer, Lock
19	0673-792	4	/P	Bumper, Grommet
20	0612-676	1		Gasket
21	0612-575	1	S	Outlet, Exhaust
22	0610-273	1	/P	Hose, Exhaust - out
23	0712-205	1		Muffler
24	0773-382	2	/P	Tiedown, Rubber
25	0612-576	1		Nut, Exhaust Outlet
26	0624-169	3		Clamp, Hose
27	0624-317	5		Washer, Lock
28	0624-318	5		Washer
29	0624-385	2		Screw, Cap
30	3008-059	1		Hk, Engine
31	1673-102	3		Fitting, Elbow
32	1673-101	1	/P	Fitting, Elbow


1996 DAYTONA 770 (96DTB-W-1996)
GAS TANK ASSEMBLY

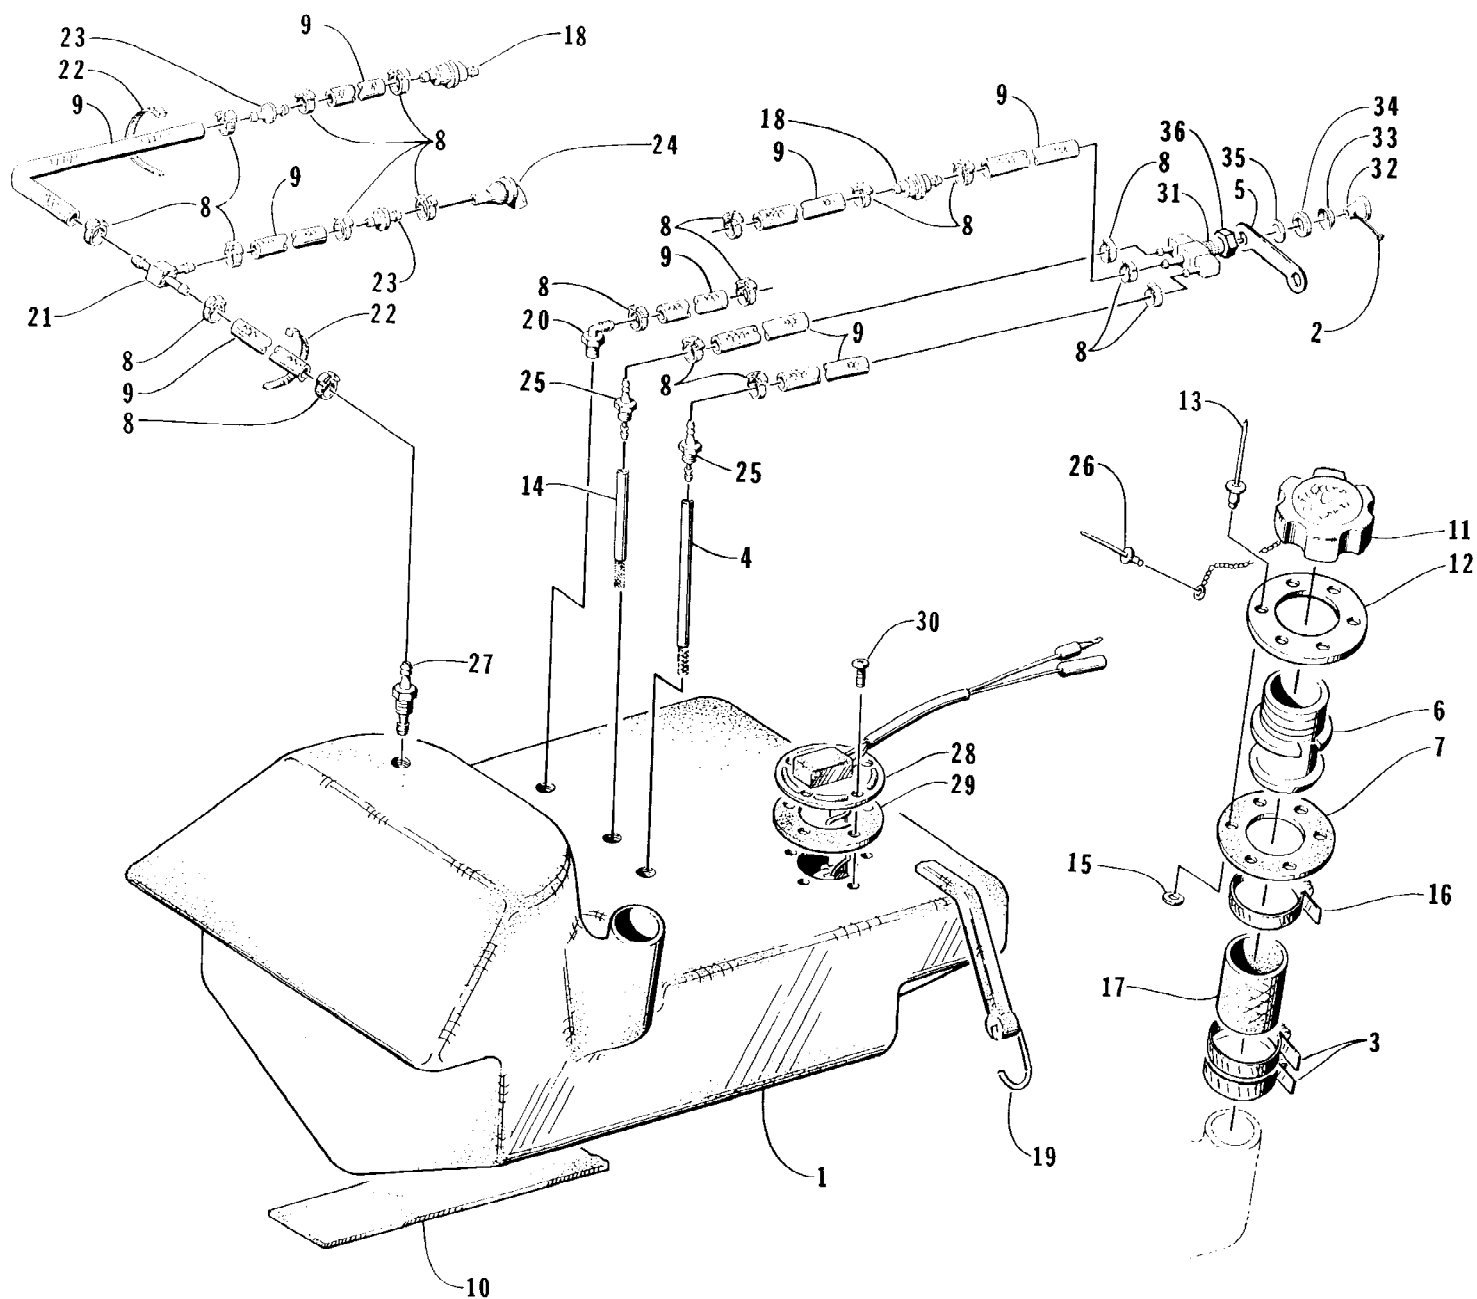

1996 DAYTONA 770 (96DTB-W-1996)
GAS TANK ASSEMBLY

Page 18 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0770-184	1		Tank, Gas - Assembly
2	0624-343	1		Screw, Machine
3	0624-037	2		Clamp, Hse
4	0670-607	1		Tube, Drp - Reverse
5	0510-358	1	/P	Strainer, Gas Tank
6	0670-270	1		Neck, Filler
7	0670-271	1		Seal, Filler Neck
8	0624-120	19		Clamp, Hse
9	0610-107	0		Hse
10	0673-307	2	/P	Pad, Gas Tank
11	0670-551	1	/P	Cap, Gas Gauge
12	0670-304	1		Ring, Munting - Filler Neck
13	0623-602	6	S	Rivet
14	0670-606	1		Tube, Drp - Main
15	0623-603	6		Washer
16	0624-390	1		Clamp, Hse
17	0710-189	1		Hse, Filler
18	0510-335	2	/P	Filter, Fuel
19	0773-383	2		Tiedwn
20	0115-607	1	S	Fitting, Elbw
21	0109-332	1		T-Cnnectin
22	0123-788	2	/P	Tie, Cable
23	0610-059	2		Valve, Check
24	0673-755	1		Vent, Fuel
25	0670-665	2		Fitting, outlet - Brass
26	0624-074	1		Rivet
27	0670-564	1		Fitting, Straight
28	0620-178	1		Sensr, Fuel Level
29	0670-474	1		Gasket, Fuel Sensr
30	0624-312	5		Screw, Machine
31	0673-854	1		Reserve, Valve
32	0673-855	1		Knb, Fuel
33	1673-066	1		Cver, Bt
34	0624-335	1		Nut
35	0624-351	1		Washer
36	0624-352	1		Nut, Jam

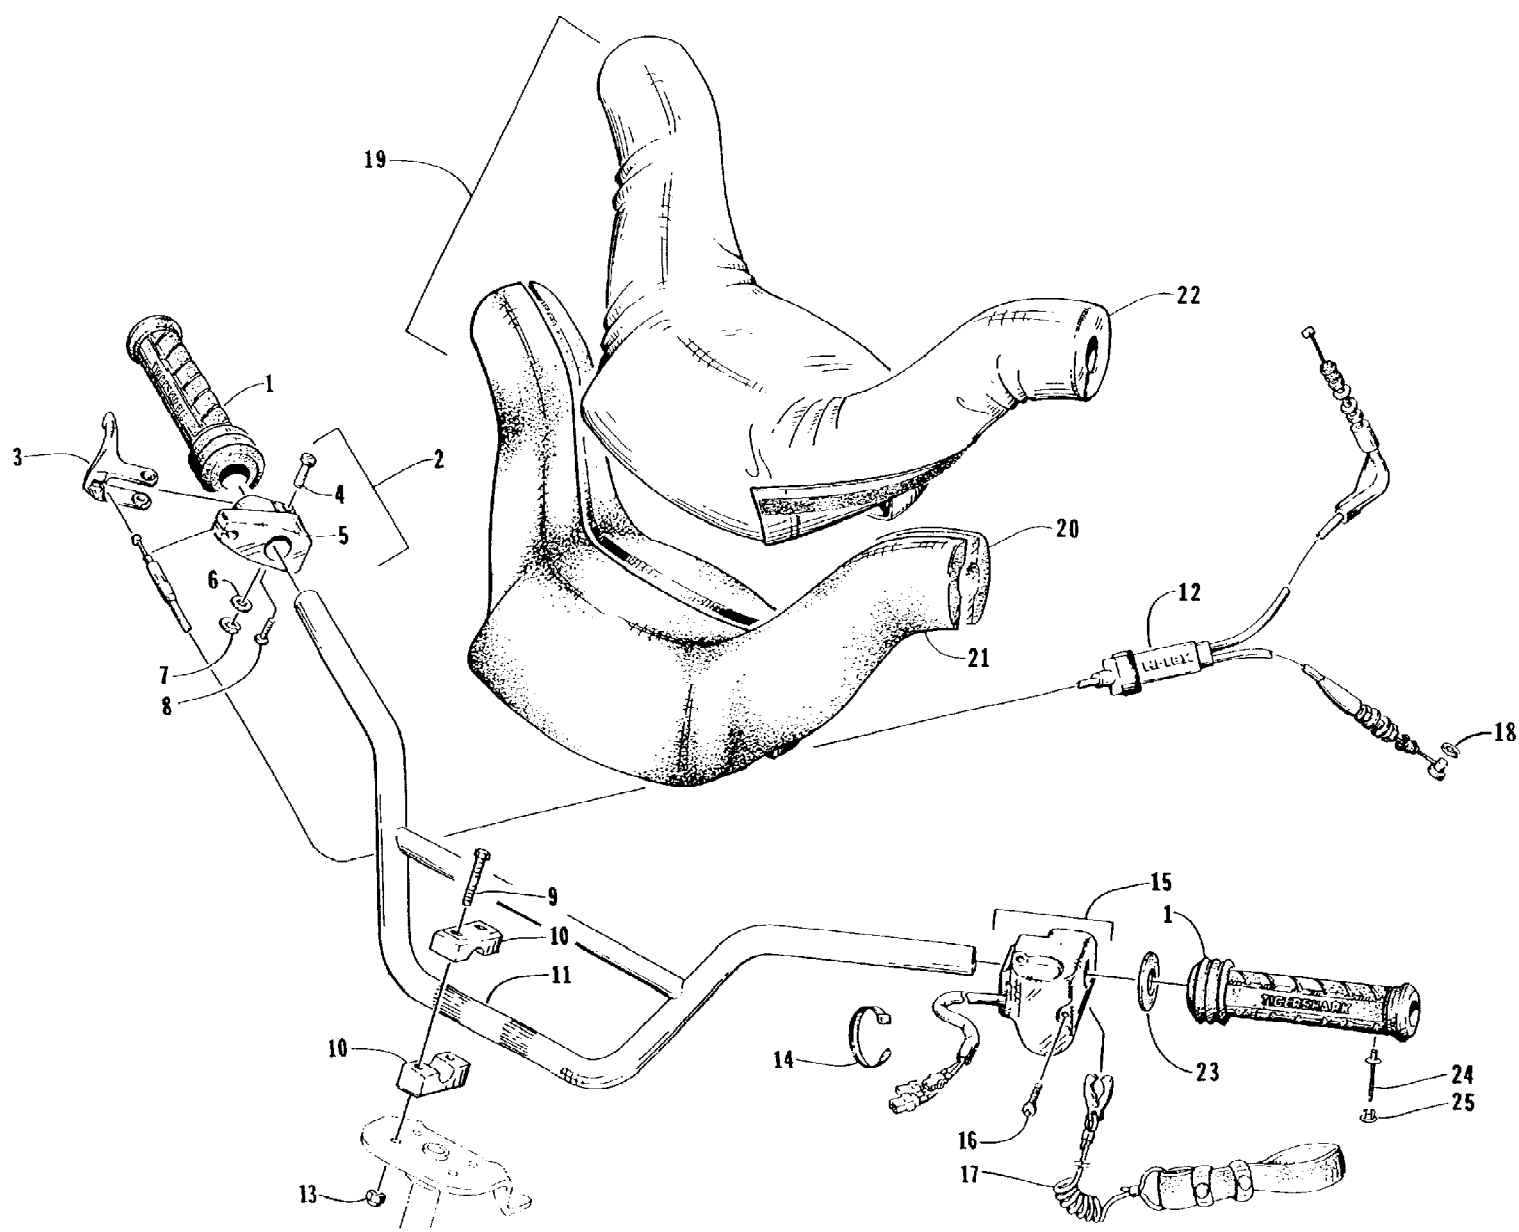


1996 DAYTONA 770 (96DTB-W-1996)
HANDLEBAR ASSEMBLY

Page 20 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0673-990	2	S	Grip, Handlebar
2	0773-018	1		Throttle, Assembly (inc. 3-8)
3	0605-234	1		Lever, Throttle
4	0605-236	1		Pin, Throttle Lever
5	0605-235	1		Housing, Throttle
6	0624-099	1		Washer
7	0624-113	1		C-Clip
8	0624-091	1		Screw, Machine
9	0624-056	4		Screw, Cap
10	0673-282	4		Cap, Steering Adjuster
11	0773-572	1		Handlebar
12	0687-076	1		Cable, Throttle
13	0624-250	4		Nut, Lock
14	0123-788	1	/P	Tie, Cable
15	0609-201	1		Tether, Switch Assembly (inc. 16-17)
16	0624-148	3		Screw, Machine
17	0609-243	1	S	Cord, Tether
18	0624-104	1		C-Clip
19	0773-552	1		Handlebar Pad - Assembly (inc. 20-22)
20	0605-253	1		Pad, Handlebar - Rear
21	0605-244	1		Pad, Handlebar - Front
22	0	1	F	Cover, Handlebar Pad
23	1673-095	1		Washer, Rubber - Handlebar
24	8060-230	2		Rivet
25	1673-111	2		Plug, Mushroom


1996 DAYTONA 770 (96DTB-W-1996)
HATCH COVER AND STRAGE TRAY

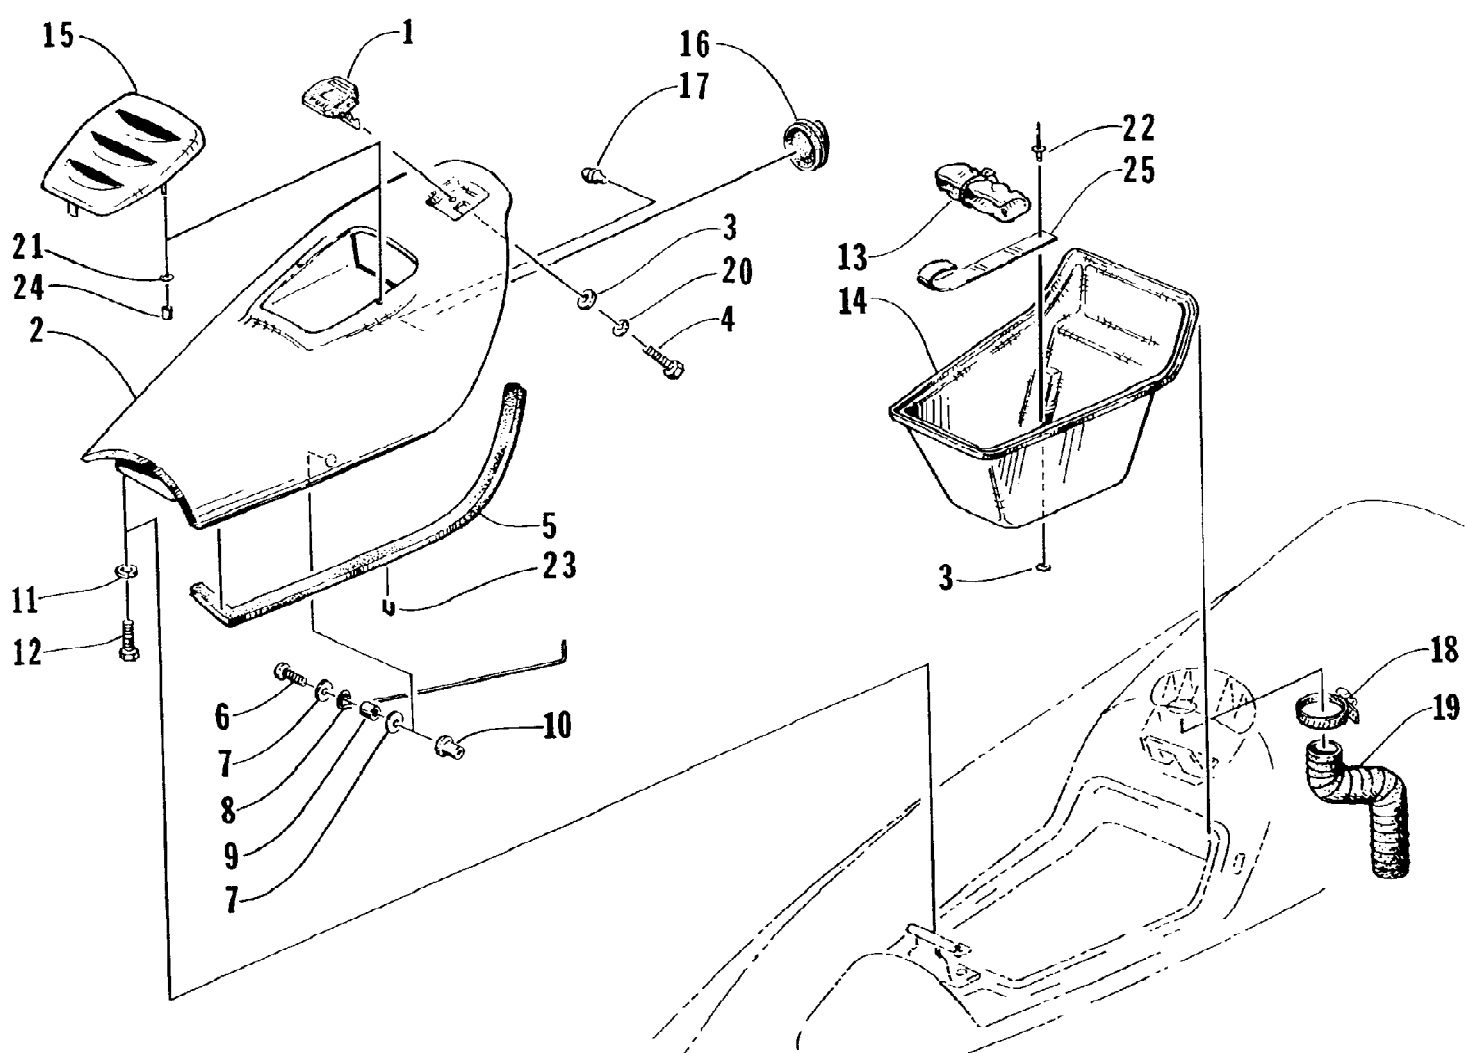

1996 DAYTONA 770 (96DTB-W-1996)
HATCH CVER AND STRAGE TRAY

Page 22 of 58

Ref #	Part Number	Qty	S/P/F	Description
	0773-548	1		Hatch Assembly
1	0673-882	1		Latch, Hatch Cver
2	0773-658	1	/P	Cver, Hatch
3	0624-004	3		Washer
4	0624-092	2		Screw, Cap
5	0773-638	1		Seal, Hatch
6	0624-214	1		Screw, Machine
7	0624-182	2		Washer
8	0673-899	1		Rd, Hd Prp
9	0673-399	1		Spacer, Spring Rd
10	0624-083	1		Nut, Well
11	0624-036	2		Washer, Lck
12	0624-053	2	/P	Screw, Cap
13	0678-105	1		Kit, TI
14	0673-774	1		Tray, Strage
15	0673-937	1	S	Grille, Hatch - Black
16	0673-883	1		Plug, Fire Extinguisher
17	1673-060	2		Bumper, Grmmet
18	0624-207	1		Clamp
19	0610-211	1		Hse, Air Intake
20	0624-200	2		Washer, Lck
21	0624-361	2		Retainer, Push on
22	8061-708	1		Rivet
23	0624-100	0		Staple
24	0773-662	2		Hose
25	0773-217	1		Tiedown

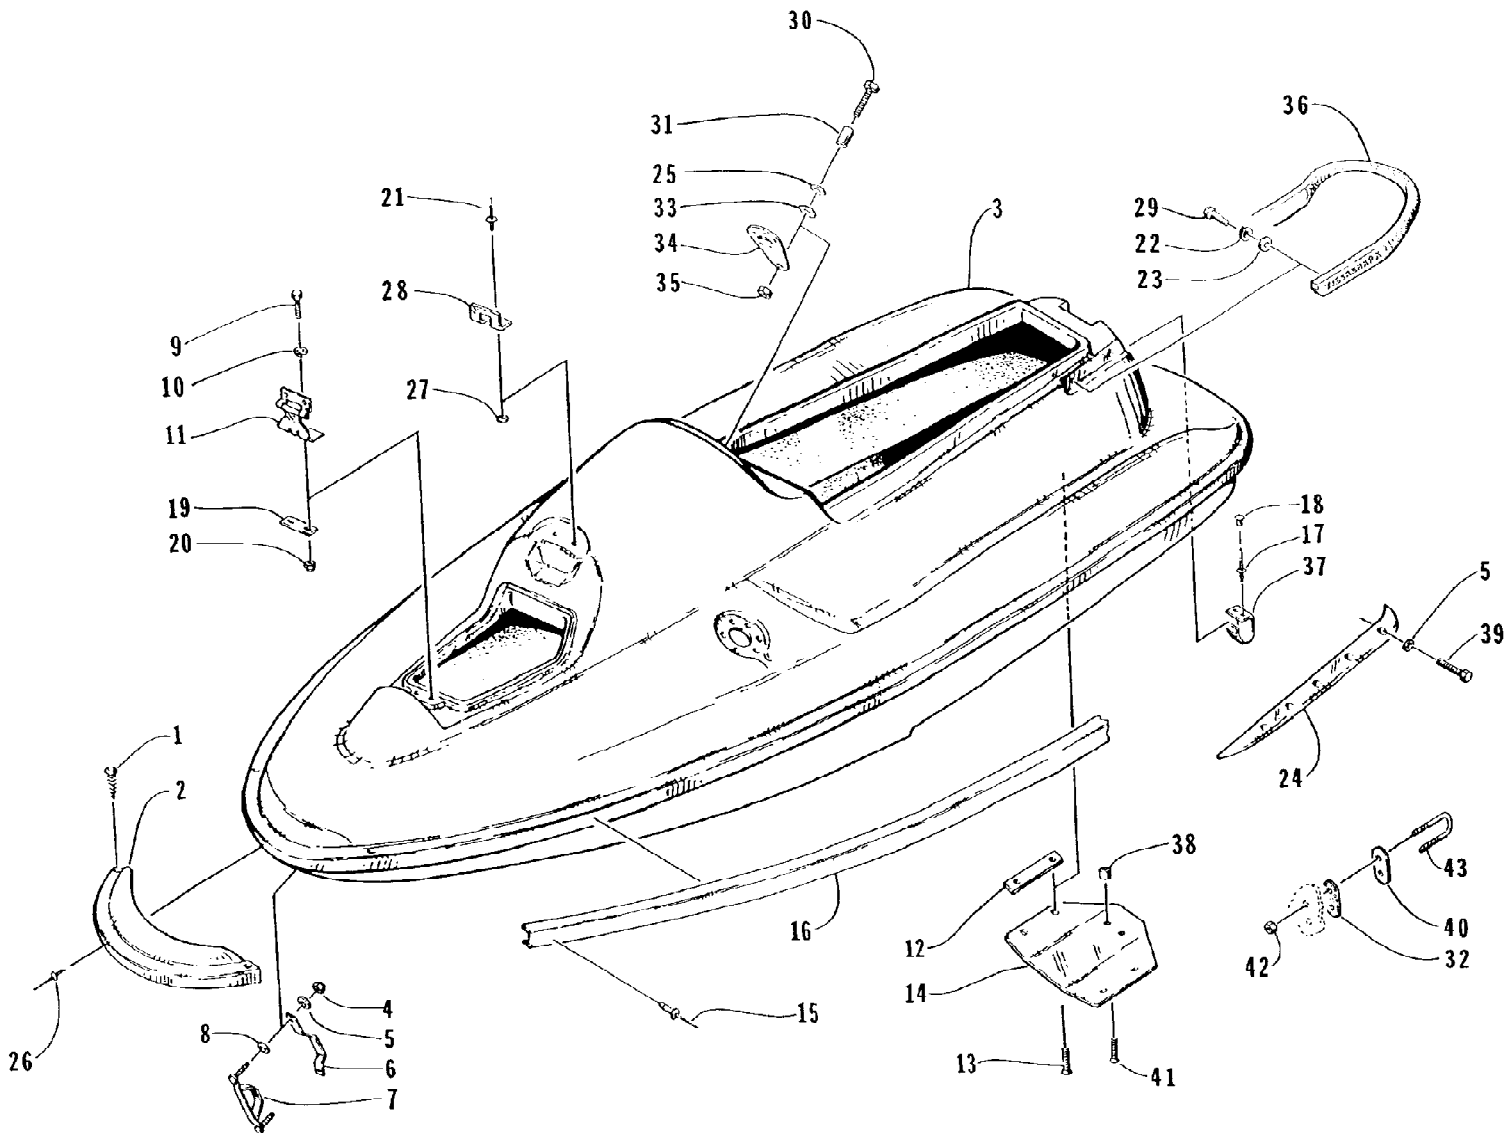


1996 DAYTONA 770 (96DTB-W-1996)
HULL AND RELATED PARTS ASSEMBLY

Page 24 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0623-585	2		Clip, Retaining
2	0673-935	1	/P	Nose, Cone
3	0773-657	1		Hull/Deck - Assembly
4	0624-089	2		Nut, Hex
5	0624-247	12		Washer
6	0673-897	1		Strap, Reinforcement
7	0773-516	1	/P	Boweye
8	0624-299	2		Washer, Sealing
9	0624-112	2	/P	Screw, Cap
10	0624-022	2		Washer
11	0673-871	1		Hinge, Hatch Assembly
12	0673-688	2		Plate, Nut
13	0624-186	4		Screw, Machine
14	0673-951	1		Plate, Ride
15	0624-030	48		Rivet
16	0673-954	1		Trim - Left
16	0673-994	1	S	Trim - Right
17	8060-230	2		Rivet
18	1673-111	2		Plug, Mushroom
19	0673-870	1		Plate, Hinge
20	0624-250	2		Nut, Lock
21	0624-072	2		Rivet
22	0624-115	4		Washer, Lock
23	0624-228	4		Washer
24	0673-996	1		Sponson - Right
24	0673-997	1		Sponson - Left
25	0624-159	1		Washer
26	0623-636	2		Rivet
27	0624-004	2		Washer
28	0673-866	1	/P	Strike
29	0624-289	4		Screw, Cap
30	0624-223	1		Screw, Cap
31	0673-485	1		Stop, Steering
32	1673-083	1		Gasket, Eyehook
33	0623-391	1		Washer, Rubber
34	0673-417	1		Plate, Backing
35	0624-009	1		Nut, Lock
36	0773-384	1		Handle, Grab
37	0673-975	1	/P	Cover, Rub Rail
38	0624-381	2		Spacer, Ride Plate
39	0624-271	10		Screw, Cap
40	0673-657	1		Plate, Backing - Eyehook
41	0624-184	2		Screw, Machine
42	0624-258	2		Nut, Hex
43	0624-394	1	/P	U-Bolt

1996 DAYTONA 770 (96DTB-W-1996)
IGNITION COIL

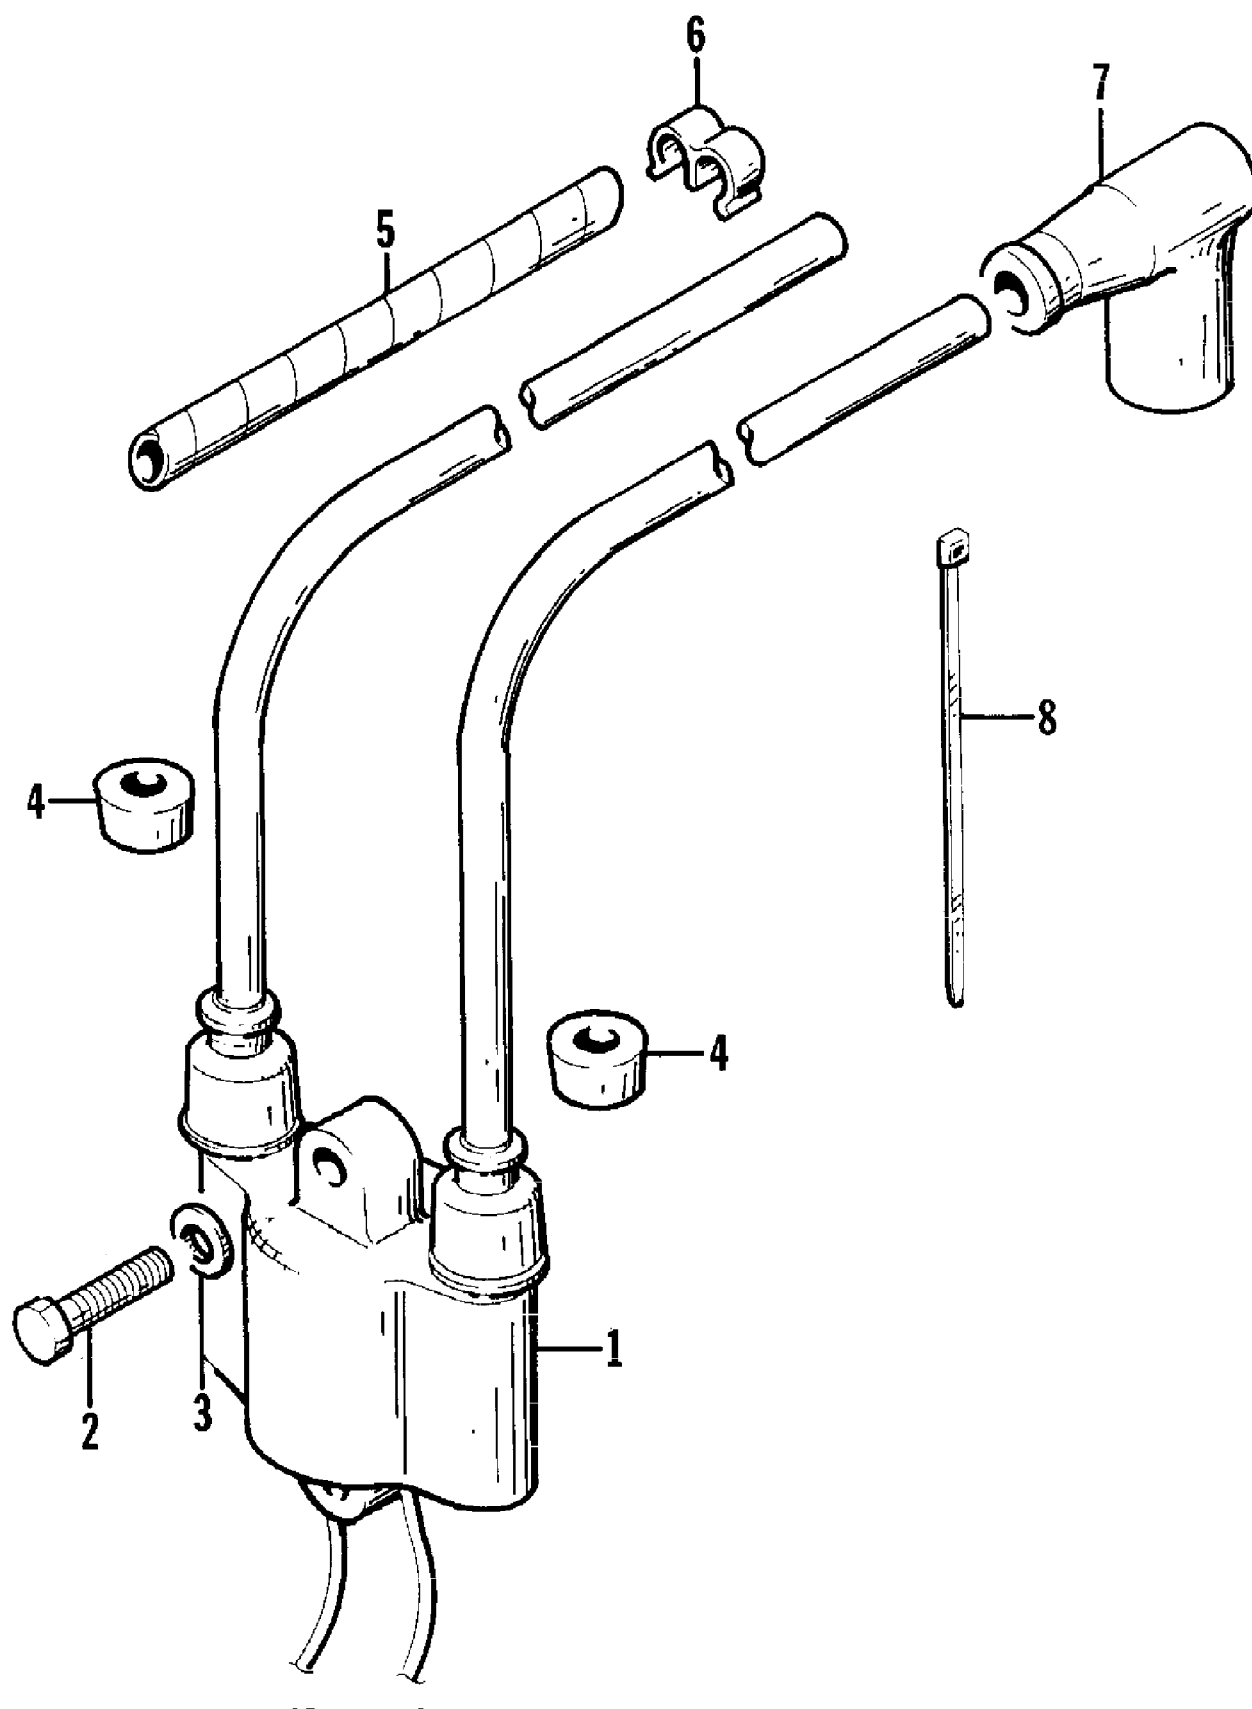


1996 DAYTONA 770 (96DTB-W-1996)
IGNITION COIL

Page 26 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-343	1	S	Coil Assembly, Ignition
2	3008-402	2		Screw, Machine
3	3003-023	2	/P	Washer
4	3008-334	2	/P	Grommet
5	3008-129	2	/P	Protector, Lead Wire
6	3008-045	1		Clip
7	3003-737	2	S	Cap Assembly, Spark Plug
8	3003-787	2		Tie, Cable


1996 DAYTONA 770 (96DTB-W-1996)
IMPELLER DRIVE ASSEMBLY

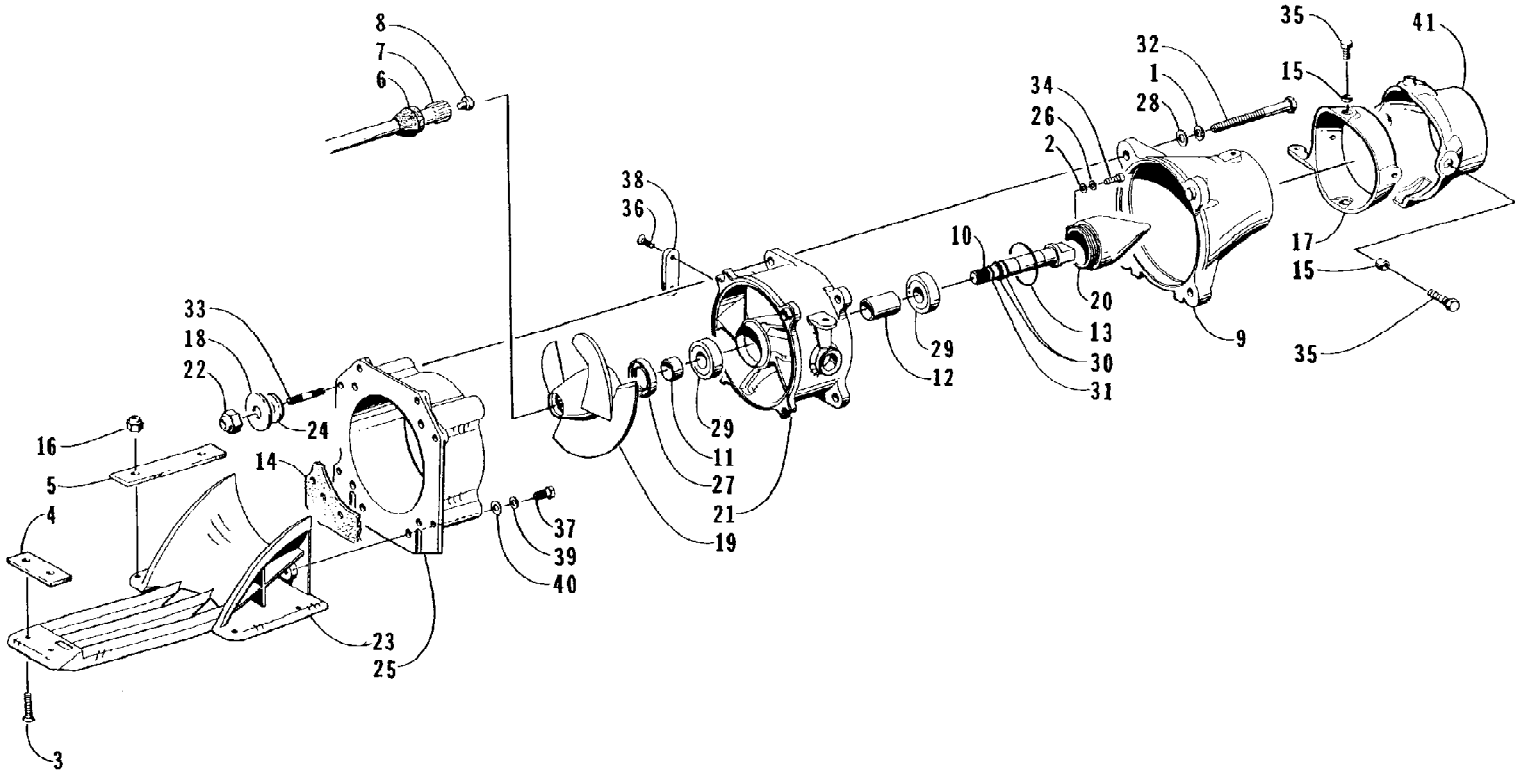

1996 DAYTONA 770 (96DTB-W-1996)
 IMPELLER DRIVE ASSEMBLY

Page 28 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0624-012	4		Washer, Lock
2	0624-022	1		Washer
3	0624-186	6		Screw, Machine
4	1673-104	1		Plate, Backing
5	1673-105	2		Plate, Backing
6	0673-787	1	S	Grommet, Seal
7	0675-060	1	S	Driveshaft
8	0673-618	2	/P	Bumper, Driveshaft
9	0675-027	1		Venturi
10	0675-098	1	/P	Shaft, Rear - Impeller
11	0675-085	1		Spacer, Impeller
12	0675-084	1		Spacer, Bearing
13	0675-127	1		O-Ring
14	0675-135	1		Gasket, Pump
15	1673-121	4	/P	Bushing
16	0674-250	6		Nut, Lock
17	0675-090	1		Ring, Steering
18	0624-125	6	/P	Washer
19	0675-064	1		Impeller
20	0675-023	1		Endcap, Stator
21	0675-021	1		Stator
22	0624-090	6		Nut, Lock
23	0675-069	1		Grate, Inlet
24	0624-387	6		Washer, Sealing
25	0675-067	1		Wear Ring
26	0624-036	1		Washer, Lock
27	0675-119	1	S	Seal
28	0624-008	4		Washer
29	0673-609	2		Bearing, Stator
30	0673-608	2		O-Ring
31	0673-607	1		O-Ring
32	0624-371	4		Screw, Cap
33	0624-319	6		Stud
34	0624-314	1		Screw, Cap
35	0624-174	4		Screw, Cap
36	0624-183	2		Screw, Machine
37	0624-026	2		Screw, Cap
38	0624-084	1		Anode, Zinc
39	0624-027	2		Washer, Lock
40	0624-028	2		Washer
41	0675-092	1		Nozzle, Trim

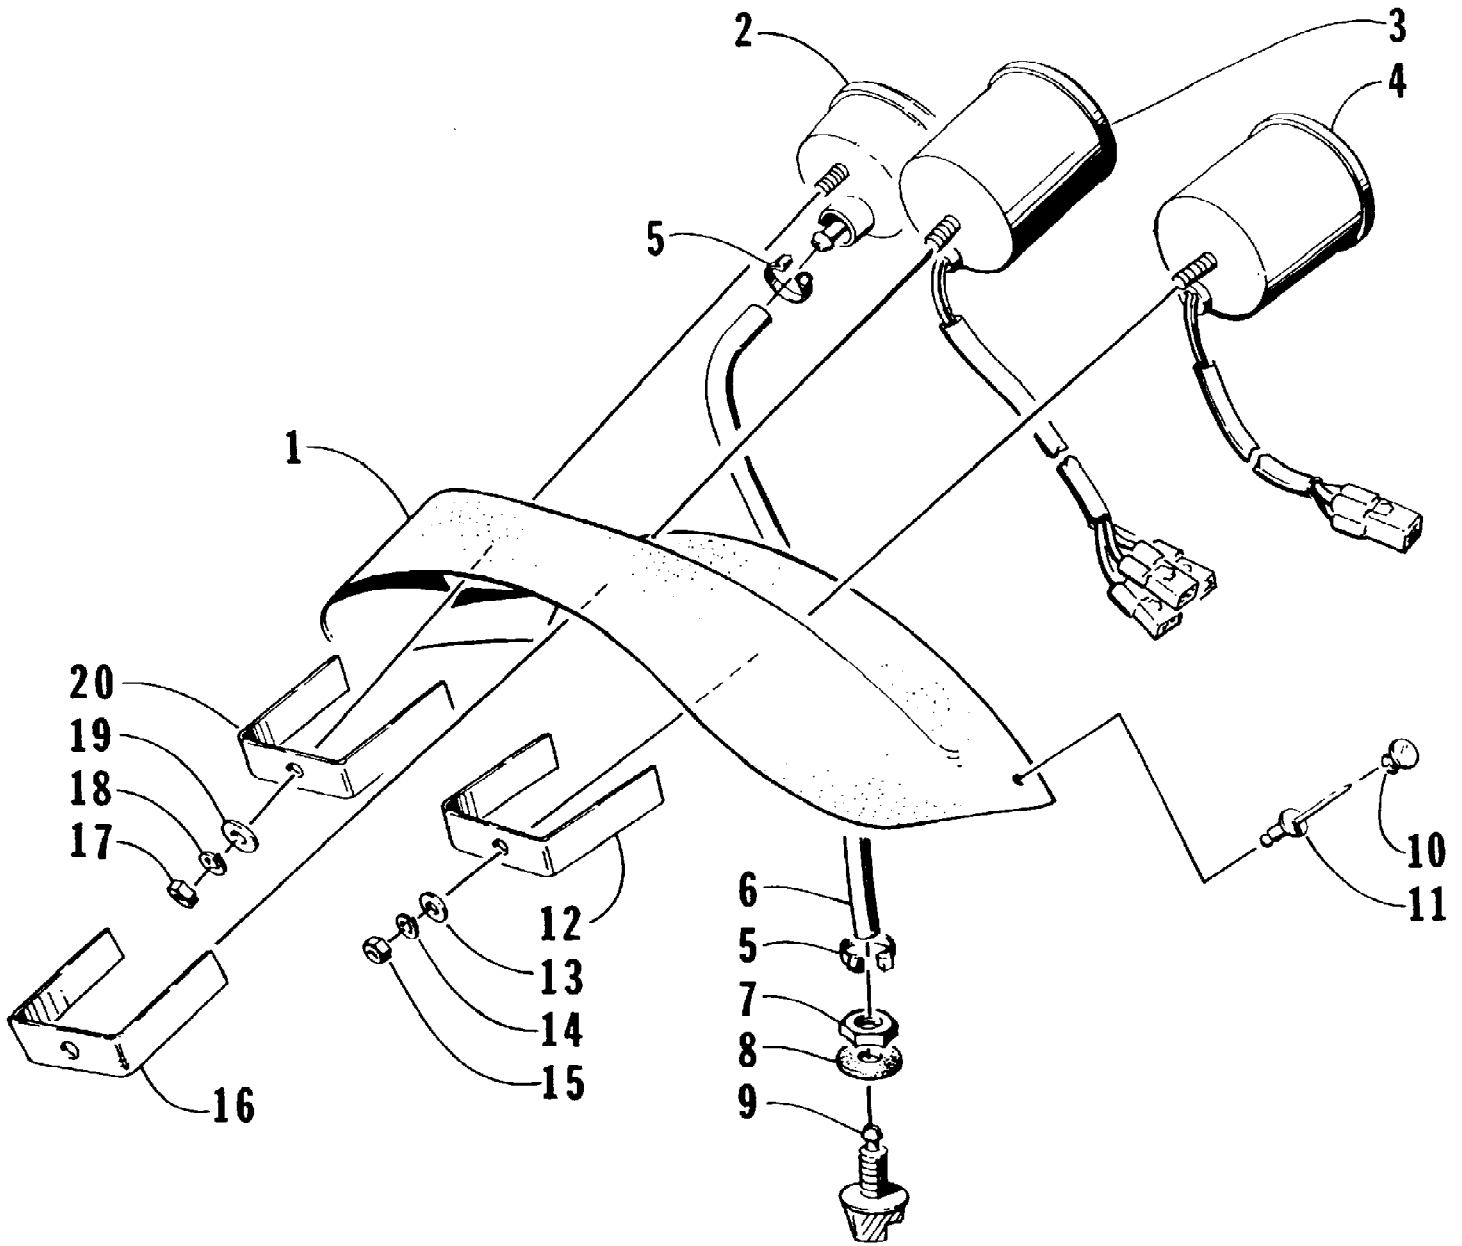

1996 DAYTONA 770 (96DTB-W-1996)
INSTRUMENT CONSOLE ASSEMBLY


Page 30 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0673-987	1		Panel, Instrument
2	0620-176	1	/P	Speedmeter
3	0620-172	1		Gauge, Fuel
4	0620-179	1		Tachometer
5	0123-811	2		Clamp
6	0673-809	0	/P	Hse
7	0673-348	1		Nut, Pitt
8	0673-349	1		Seal, Pitt
9	0673-362	1	S	Pitt
10	1673-111	4		Plug, Mushrm
11	8060-230	4		Rivet
12	0620-175	1		Backclamp, Tachmeter
13	0624-328	2		Washer
14	0624-327	2		Washer, Lck
15	0624-326	2		Nut, Jam
16	0620-173	1		Backclamp, Fuel Gauge
17	0624-329	1		Nut, Jam
18	0624-330	1		Washer, Lck
19	0624-331	1		Washer
20	0620-177	1		Backclamp, Speedmeter

1996 DAYTONA 770 (96DTB-W-1996)
INTAKE ASSEMBLY

Page 32 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0624-213	4		Screw, Cap
2	0624-022	10		Washer
3	1673-123	1		Cover, Sound Attenuator
4	1673-159	1		Center, Sound Attenuator
5	1673-117	1		Base, Spark Arrestor
6	0624-214	6		Screw, Cap
7	3008-076	4	S	Gasket, Reed Valve
8	0624-229	1		Screw, Cap
9	0624-380	8		Clamp, Hose
10	1673-258	1		Brace, Sound Attenuator
11	0674-027	4		Washer, Lock
12	1673-091	2		Gasket, Spark Arrestor
13	0624-338	4	/P	Screw, Cap
14	0624-397	6		Stud
15	0624-028	4		Washer
16	0670-567	1		Carburetor - Assembly (inc. Mag and PT)
16	0670-555	1		Carburetor - Mag Side
16	0670-556	1		Carburetor - PT Side
17	0670-323	1		Plug, Impulse Nipple
18	3008-213	6	/P	Screw, Cap
19	3008-087	2	S	Valve, Check
20	1673-090	2		Gasket, Intake
21	0624-250	4		Nut
22	0673-848	2	S	Manifld, Intake
23	3008-073	2	S	Reed Valve - Assembly (inc. 24-26)
24	3004-506	12	/P	Screw, Cap
25	3008-074	4		Stpper, Reed Valve
26	3008-075	4		Valve, Reed
27	0687-077	1	/P	Cable, Chke
28	0687-051	1	/P	Nut
29	0687-052	1	/P	Cover, Bt
30	6505-855	2		Screw, Machine
31	0670-619	2	/P	Fitting, Barb
32	6505-927	1		Throttle Linkage
33	6505-858	1		End, Adjuster - Left
34	6505-859	1		Nut, Jam - Left
35	6505-860	1		Nut, Jam
36	6505-861	1		End, Adjuster
37	6505-857	1	S	Adjuster, Throttle Linkage
38	0610-107	0		Hose
39	0624-036	10		Washer, Lock

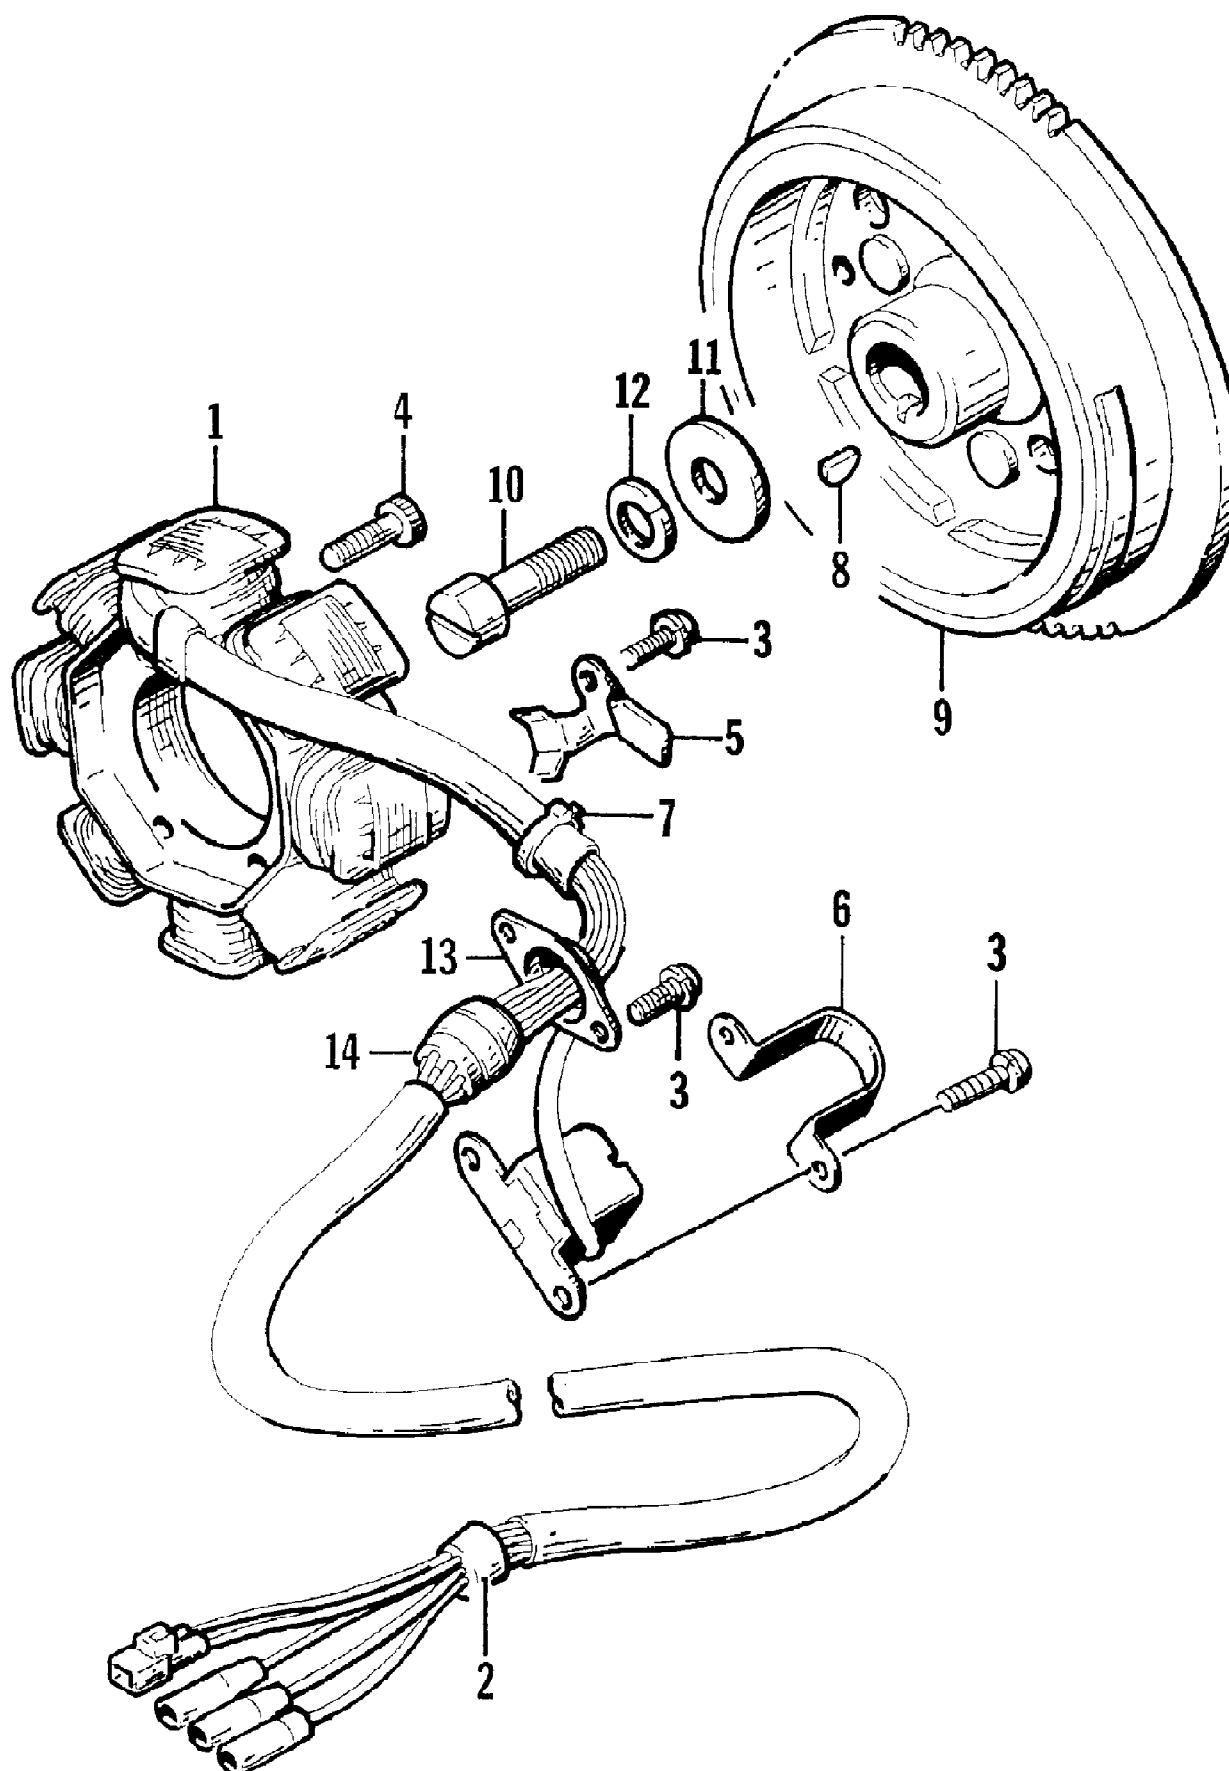


1996 DAYTONA 770 (96DTB-W-1996)
MAGNETO

Page 34 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-329	1	S	Stator
2	3008-362	1	/P	Grommet
3	3004-706	5	S/P	Screw, Cap
4	3004-484	3	S	Screw, Cap
5	3008-109	1		Holder
6	3008-331	1	/P	Clamp
7	0693-275	1		Clamp
8	3004-540	1	/P	Key
9	3008-108	1	S	Flywheel
10	3008-388	1	S	Screw, Cap
11	3008-017	1		Washer
12	3004-362	1	S/P	Washer, Lock
13	3008-110	1		Hlder, Grommet
14	3008-118	1		Grommet


1996 DAYTONA 770 (96DTB-W-1996)
MAGNETO CASE

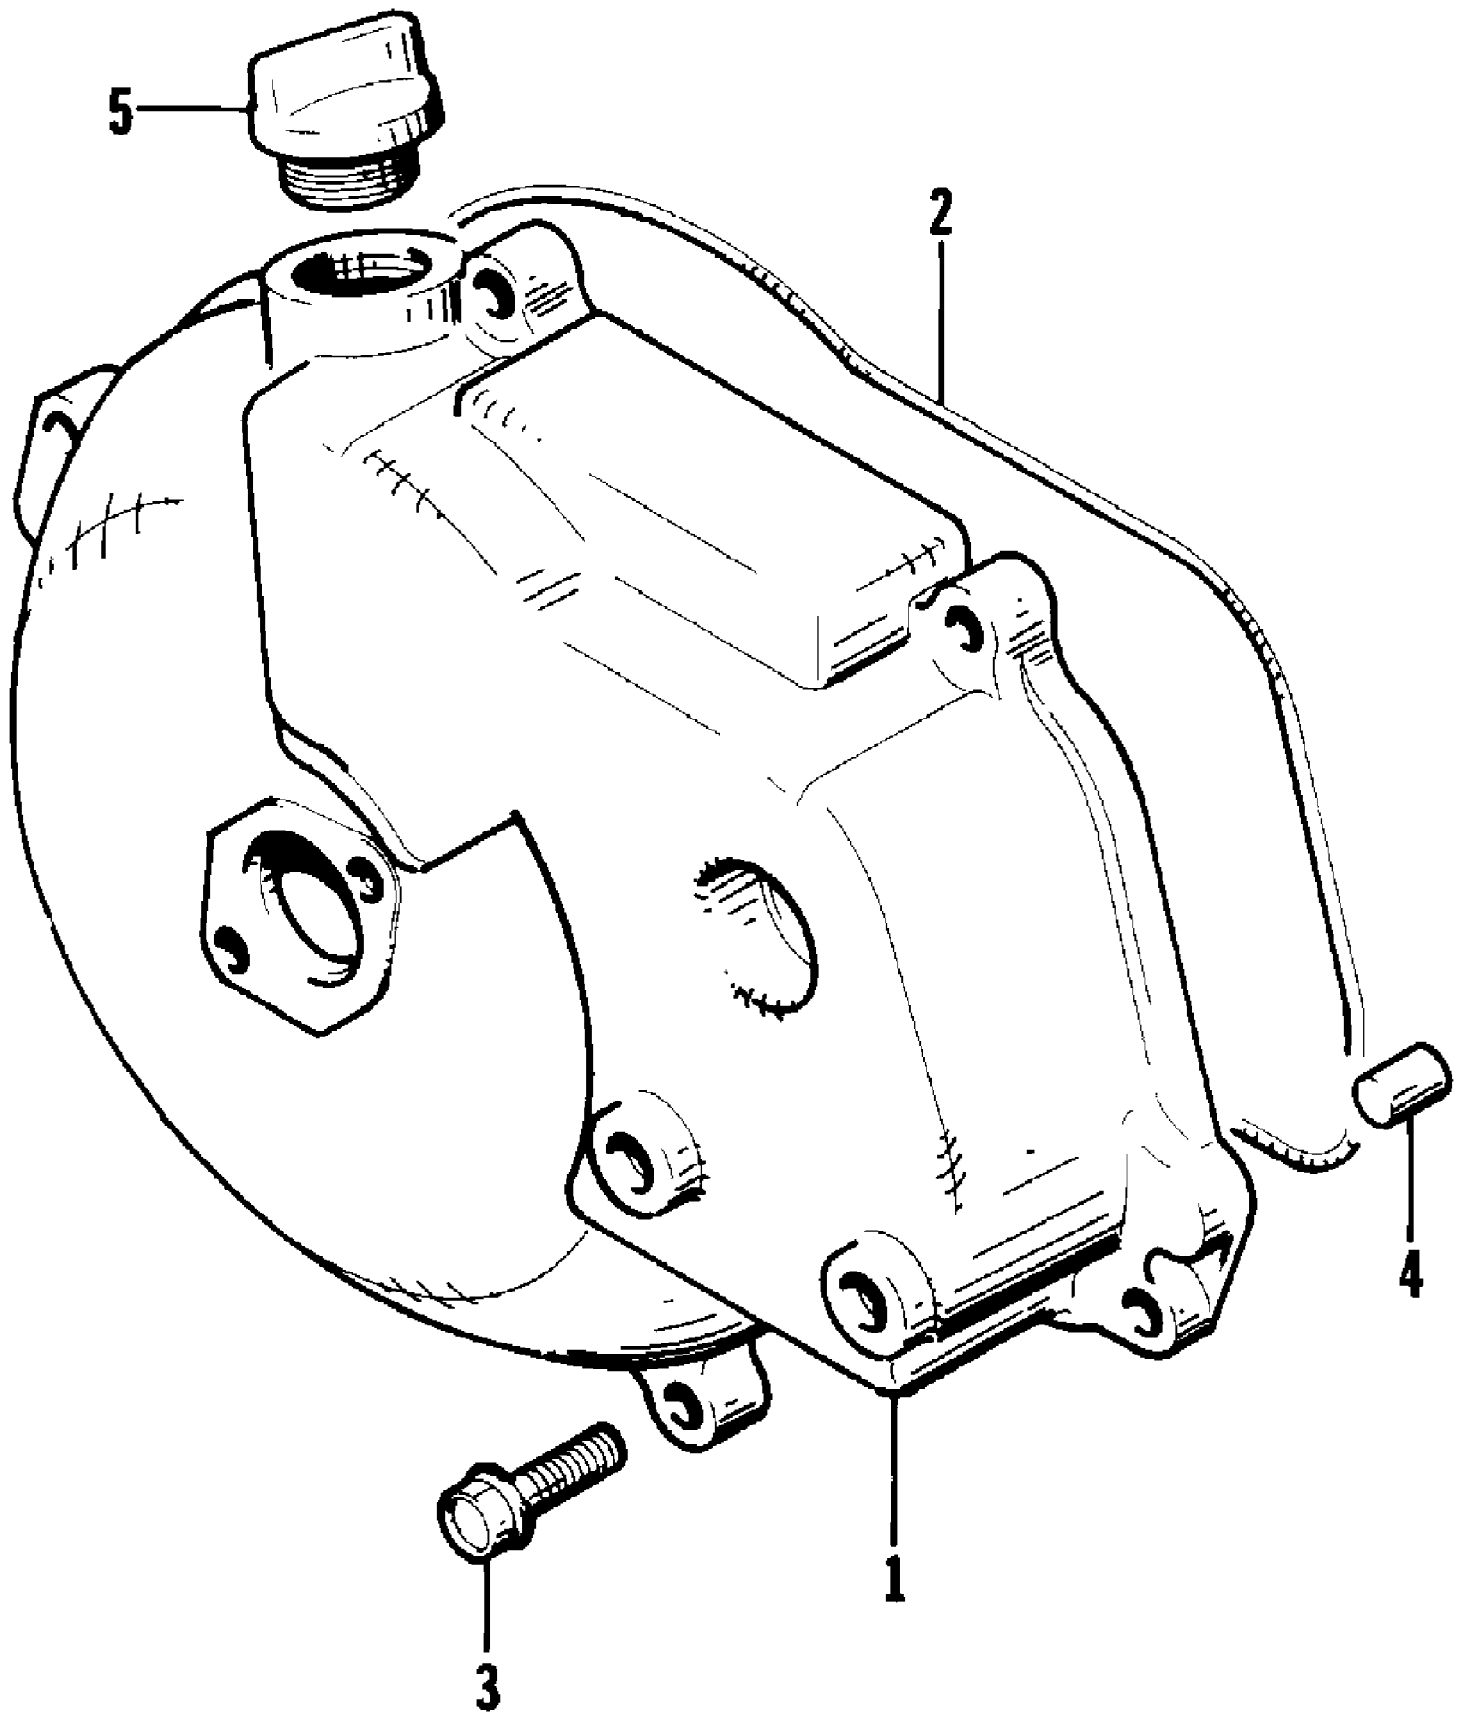

1996 DAYTONA 770 (96DTB-W-1996)
MAGNETO CASE

Ref #	Part Number	Qty	S/P/F	Description
1	3008-461	1	S	Case, Magnet
2	3008-053	1		O-Ring
3	3008-213	6	/P	Screw, Cap
4	3008-146	2		Pin
5	3008-023	1		Plug


1996 DAYTONA 770 (96DTB-W-1996)
MAGNETO SIDE CARBURETOR

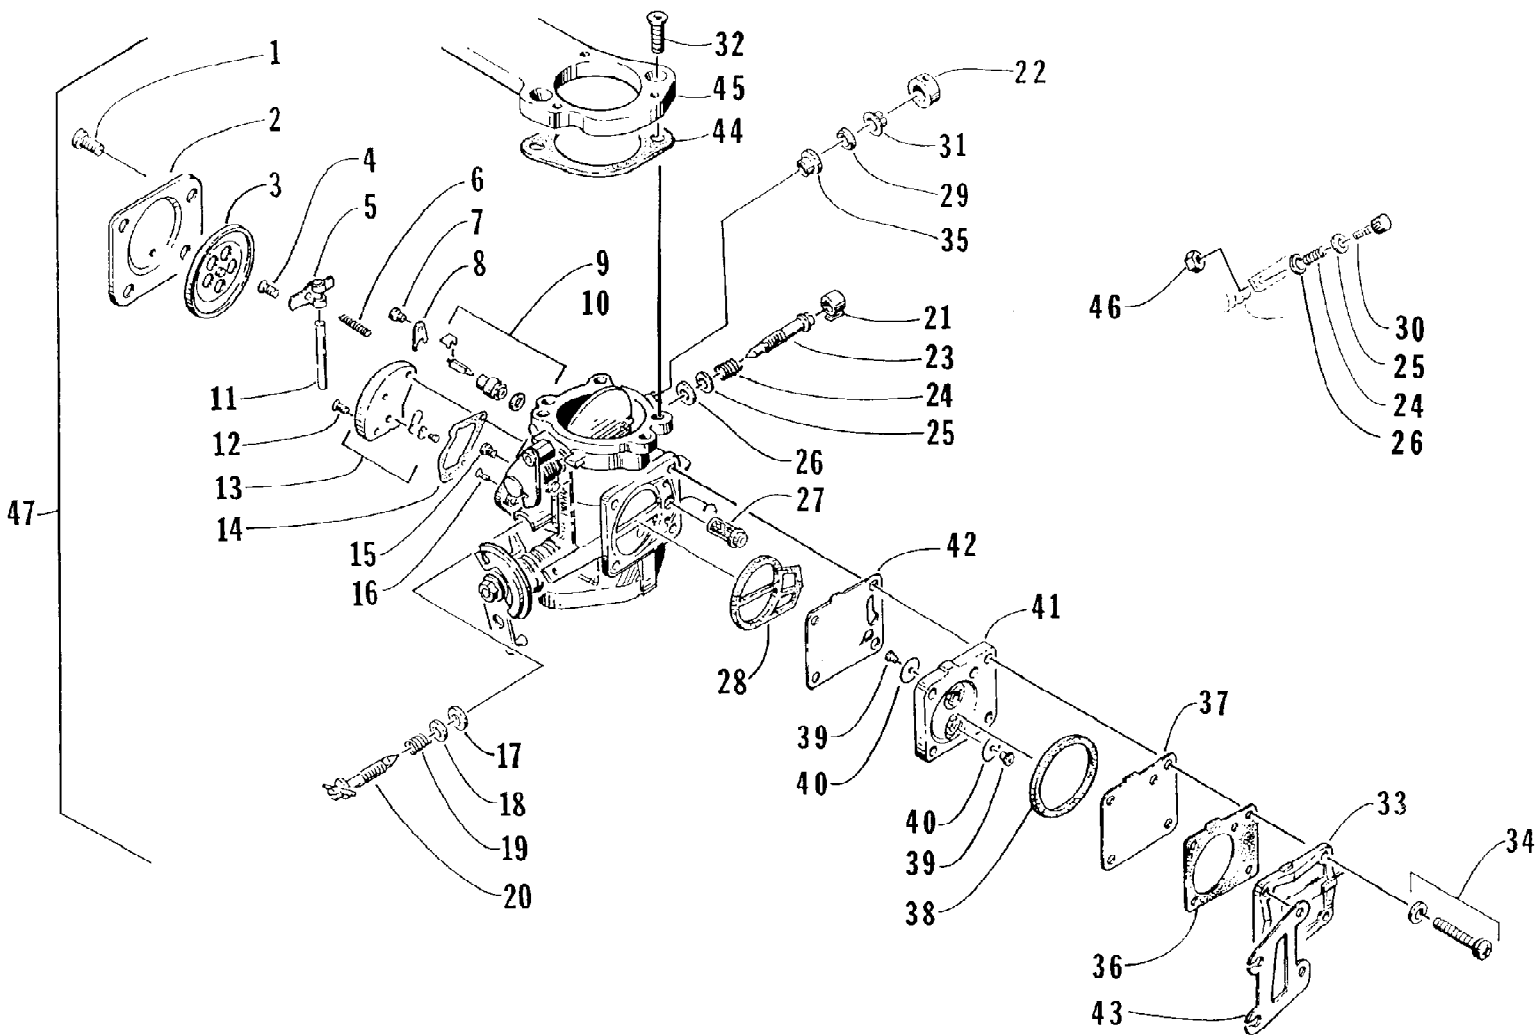

1996 DAYTONA 770 (96DTB-W-1996)
MAGNETO SIDE CARBURETOR

Page 38 of 58


Ref #	Part Number	Qty	S/P/F	Description
	0670-567	1		Complete Assembly inc. Mag, and PT Carburetors
1	6505-915	4		Screw, Cap
2	6505-662	1		Cover
3	6505-663	1		Diaphragm Assembly
4	6505-692	1		Screw, Machine
5	6505-664	1		Arm
6	6505-925	1	/P	Spring
7	6505-695	1		Screw, Machine
8	6505-682	1		Plate
9	6505-851	1	/P	Needle Valve Assembly
10	0	1	F	Mixing Body
11	6505-681	1		Pin
12	6505-679	2		Screw, Machine
13	6505-680	1		Block, Metering
14	6505-677	1		Gasket
15	6505-730	1		Main Jet - 100
16	6505-777	1		Pilot Jet - 77.5
17	6505-668	1		Seal
18	6505-661	1		Washer
19	6505-660	1		Spring
20	6505-852	1		Adjuster
21	6505-659	1		Cap
22	6505-822	1		Collar, Choke Shaft
23	6505-699	1		Adjuster
24	6505-678	2		Spring
25	6505-703	1		Washer
26	6505-872	2	/P	O-Ring
27	6505-676	1		Filter
28	6505-665	1		S-Gasket
29	6505-701	1		Seal, Choke Shaft
30	6505-912	1		Screw Assembly
31	6505-703	1		Washer
32	6505-914	4		Screw, Machine
33	6505-652	1		Cover, Pump
34	6505-704	4		Screw w/Washer
35	6505-817	1		Bushing, Choke Shaft
36	6505-653	1		Gasket
37	6505-654	1		Diaphragm, Pump
38	6505-683	1		O-Ring
39	0	2	F	Grommet
40	0	2	F	Valve
41	6505-924	1		Body Assembly, Diaphragm
42	6505-656	1	/P	Diaphragm, Damper
43	6505-923	1		Bracket, Cable
44	6505-916	2		Gasket
45	6505-926	1		Plate, Mounting
46	6505-911	1		Nut
47	0670-555	1		Carburetor Assembly - Mag

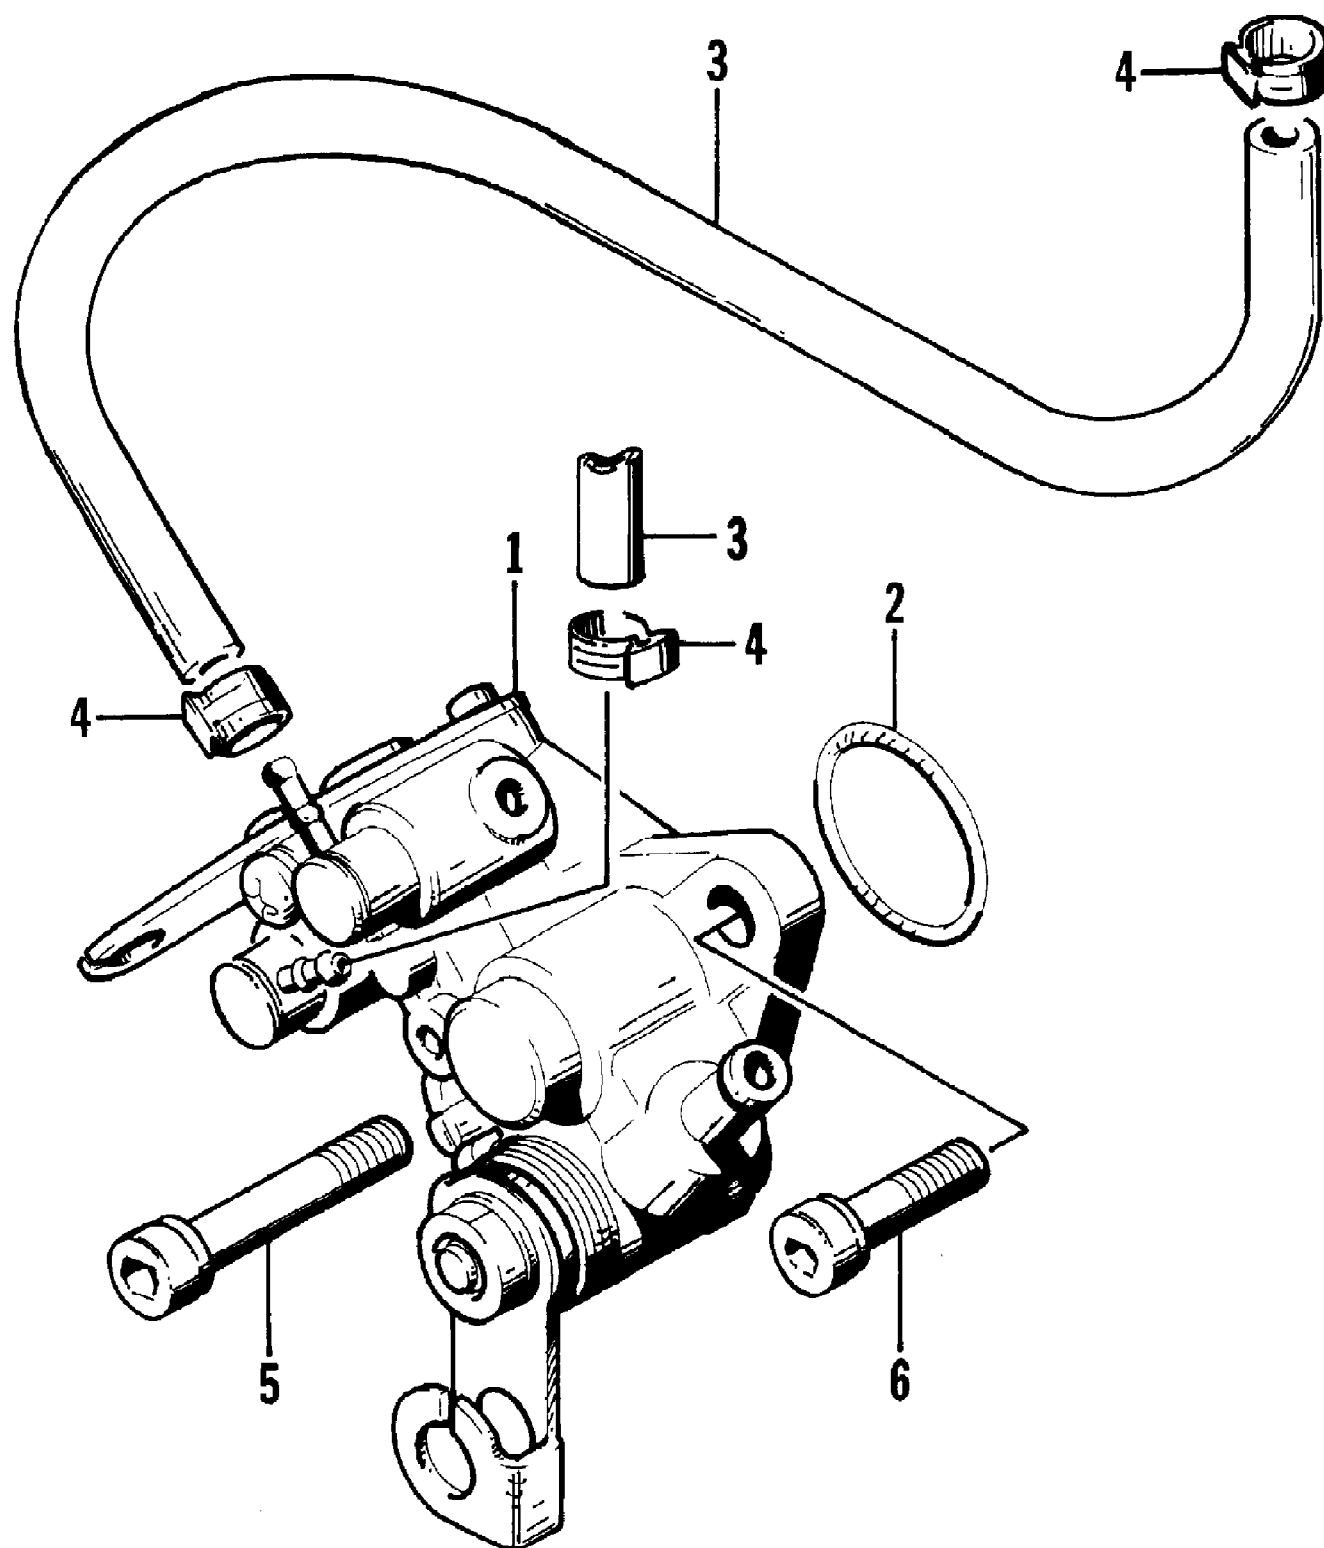

1996 DAYTONA 770 (96DTB-W-1996)
OIL PUMP

Page 40 of 58


Ref #	Part Number	Qty	S/P/F	Description
1	3008-435	1		Oil Pump Assembly
2	3008-030	1		O-Ring
3	3008-035	2	/P	Hose
4	3008-037	4	/P	Clamp
5	3008-242	1		Screw, Cap
6	3008-243	1		Screw, Cap

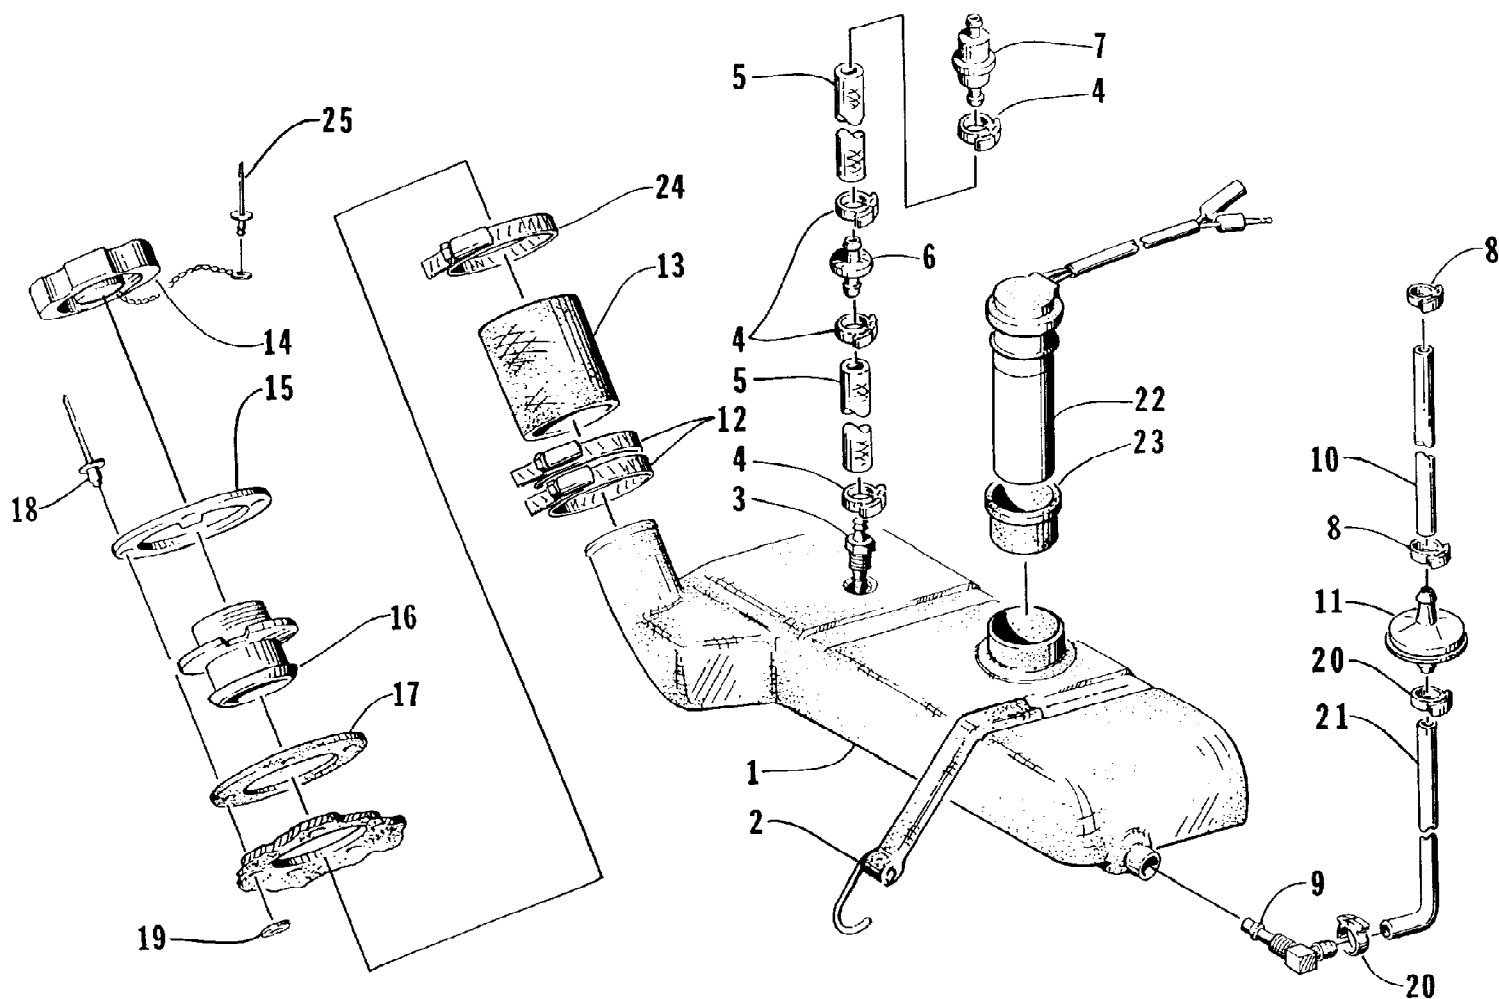

1996 DAYTONA 770 (96DTB-W-1996)
OIL TANK ASSEMBLY

Page 42 of 58


Ref #	Part Number	Qty	S/P/F	Description
1	0670-476	1		Tank, Oil
2	0773-383	2		Tiedwn
3	0670-564	1		Outlet, Tank
4	0624-120	4		Clamp, Hse
5	0610-107	0		Hose
6	0610-059	1		Valve, Check
7	0510-335	1	/P	Filter, Fuel
8	0623-063	4		Clamp
9	0673-984	1		Fitting, Elbow
10	0610-008	0	/P	Hose, oil Line
11	0673-998	1		Filter, oil
12	0624-037	2		Clamp, Hose
13	0710-189	1		Hose, Filler
14	0670-551	1	/P	Cap, oil
15	0670-304	1		Ring, Mounting Filler Neck
16	0670-270	1		Filler Neck
17	0670-271	1		Seal, Filler Neck
18	0623-602	6	S	Rivet
19	0623-603	6		Washer
20	0623-646	2		Clamp
21	0610-263	0		Hose, oil
22	0620-181	1	S	Sensor, Low oil
23	0609-237	1		Seal, Grmmet - Oil Sensor
24	0624-390	1		Clamp, Hose
25	0624-074	1		Rivet

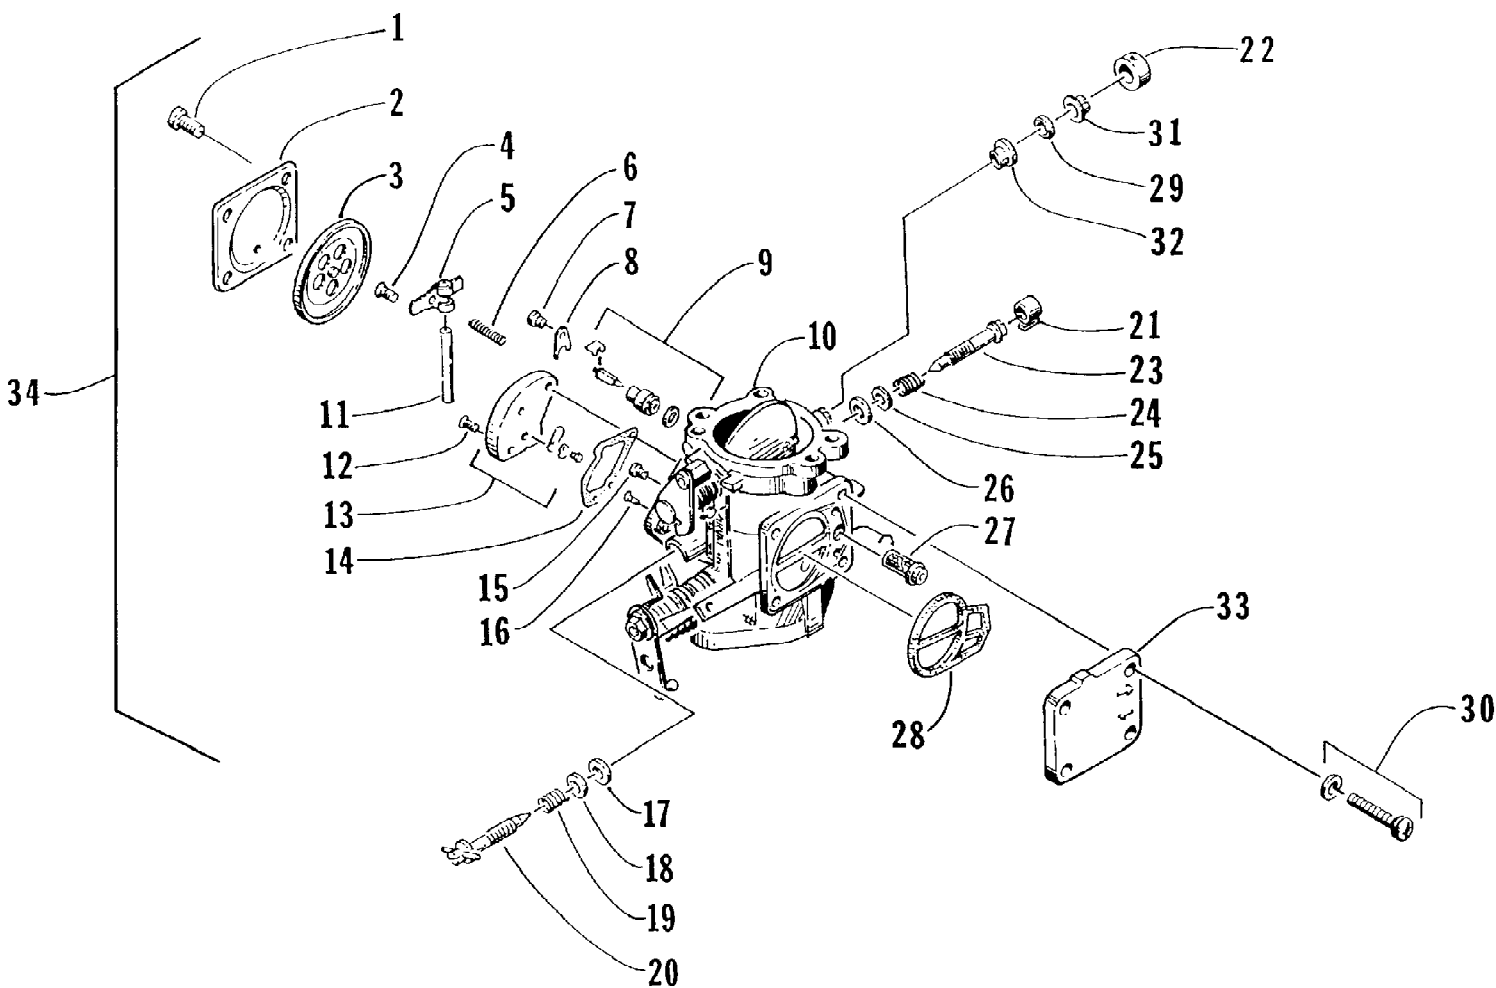

1996 DAYTONA 770 (96DTB-W-1996)
PT SIDE CARBURETOR

Page 44 of 58


Ref #	Part Number	Qty	S/P/F	Description
	0670-567	1		Complete Assembly inc. Mag and PT Carburetors
1	6505-915	4		Screw, Cap
2	6505-662	1		Cover
3	6505-663	1		Diaphragm Assembly
4	6505-692	1		Screw, Machine
5	6505-664	1		Arm
6	6505-925	1	/P	Spring
7	6505-695	1		Screw, Machine
8	6505-682	1		Plate
9	6505-851	1	/P	Needle Valve Assembly
10	0	1	F	Mixing Body
11	6505-681	1		Pin
12	6505-679	2		Screw, Machine
13	6505-680	1		BLOCK, Metering
14	6505-677	1		Gasket
15	6505-730	1		Main Jet - 100
16	6505-777	1		Pilot Jet - 77.5
17	6505-668	1		Seal
18	6505-661	1		Washer
19	6505-660	1		Spring
20	6505-852	1		Adjuster
21	6505-659	1		Cap
22	6505-822	1		Collar, Choke Shaft
23	6505-699	1		Adjuster
24	6505-678	1		Spring
25	6505-703	1		Washer
26	6505-872	1	/P	O-Ring
27	6505-676	1		Filter
28	6505-665	1		S-Gasket
29	6505-701	1		Seal, Choke Shaft
30	6505-853	4		Screw w/Washer
31	6505-703	1		Washer
32	6505-817	1		Bushing, Choke Shaft
33	6505-848	1		Cover
34	0670-556	1		Carburetor Assembly - PT

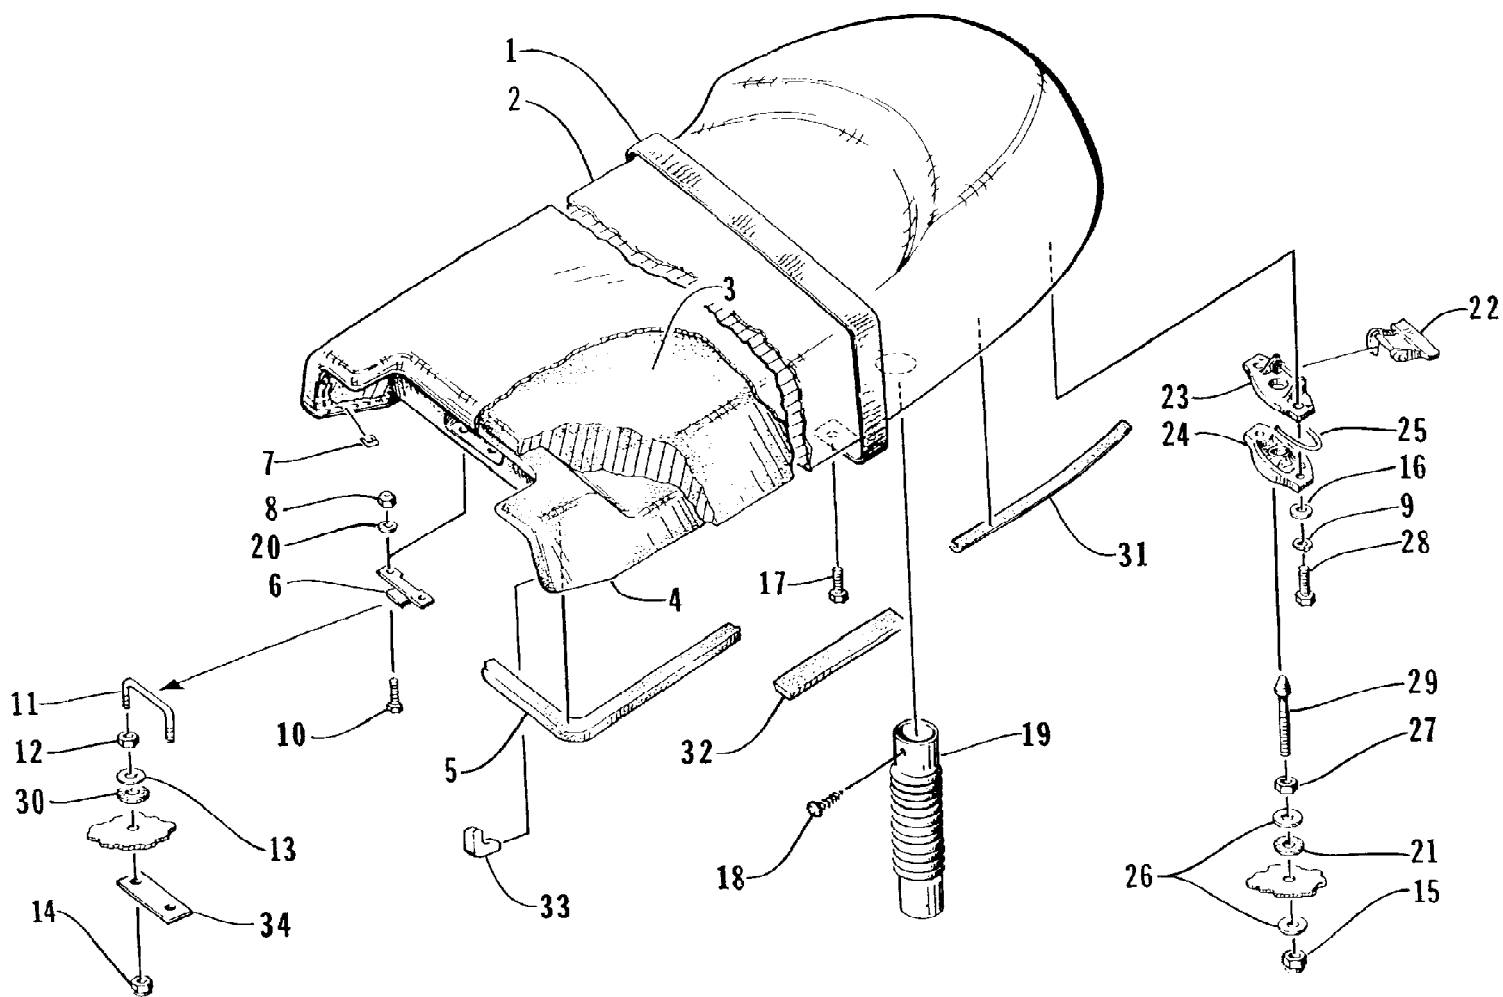

1996 DAYTONA 770 (96DTB-W-1996)
SEAT ASSEMBLY

Page 46 of 58

Ref #	Part Number	Qty	S/P/F	Description
	0773-656	1		Complete Seat Assembly
1	0773-352	2		Strap, Seat
2	0773-655	1		Cover, Seat w/Silkscreen
3	0773-500	1		Foam, Seat
4	0773-499	1		Base, Seat
5	0773-623	0		Seal, Seat Base
6	0673-668	1		Catch, Seat
7	0624-263	0		Staple
8	0624-250	2		Nut, Lck
9	0624-036	2	F	Washer, Lck
10	0624-112	2	/P/F	Screw, Cap
11	0624-262	1	F	U-Blt, Seat
12	0624-061	2	F	Nut, Jam
13	0624-125	4	/P/F	Washer
14	0624-090	2	F	Nut, Lock
15	0624-009	1	F	Nut, Lck
16	0624-022	2		Washer
17	0624-226	4		Screw, Cap
18	0623-585	3	F	Clip, Retaining
19	0610-242	1	F	Air Tube, Exhaust
20	0624-182	2		Washer
21	0623-391	1		Washer, Rubber
22	0673-026	1	F	Lever, Release - Seat Latch
23	0673-024	1	S/F	Cover, Latch - Seat
24	0673-025	1	F	Back, Latch - Seat
25	0673-023	1	F	Clip, Retaining
26	0624-159	2	F	Washer
27	0624-047	1	F	Nut, Jam
28	0624-289	2	F	Screw, Cap
29	1673-108	1	S	Stud, Latch -Seat
30	0624-126	2	F	Washer, Rubber
31	0706-371	0	/P	Trim
32	0617-195	4		Pad, Fam
33	1673-110	2		Corner, Seat
34	0673-752	1		Plate, Backing

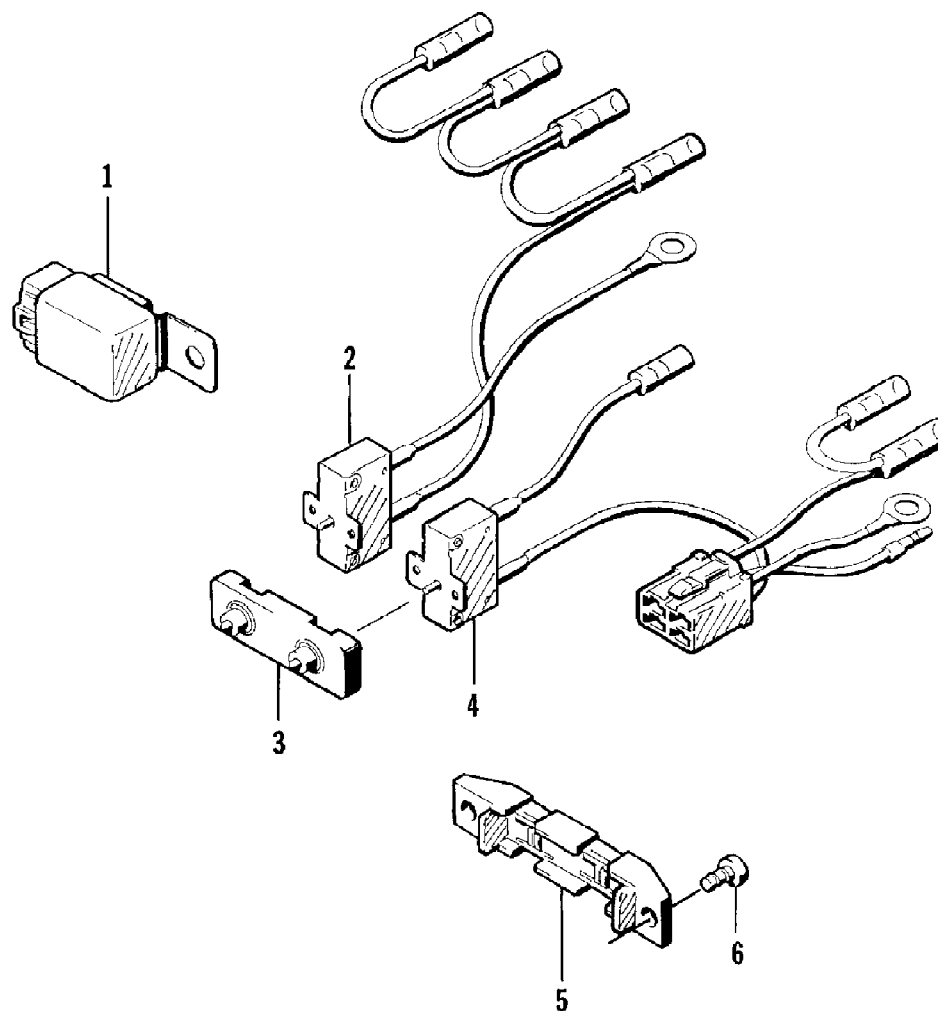


1996 DAYTONA 770 (96DTB-W-1996)
SENSOR ASSEMBLY

Page 48 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-297	1	/P	Relay - Assembly
2	3008-348	1	S	Protector, Circuit Charge
3	3008-351	1		Cap, Circuit Protector
4	3008-350	1	/P	Portector, Circuit Load
5	3008-294	1	/P	Holder, Circuit Protector
6	3008-313	2		Screw, Cap

1996 DAYTONA 770 (96DTB-W-1996)
STARTER MOTOR

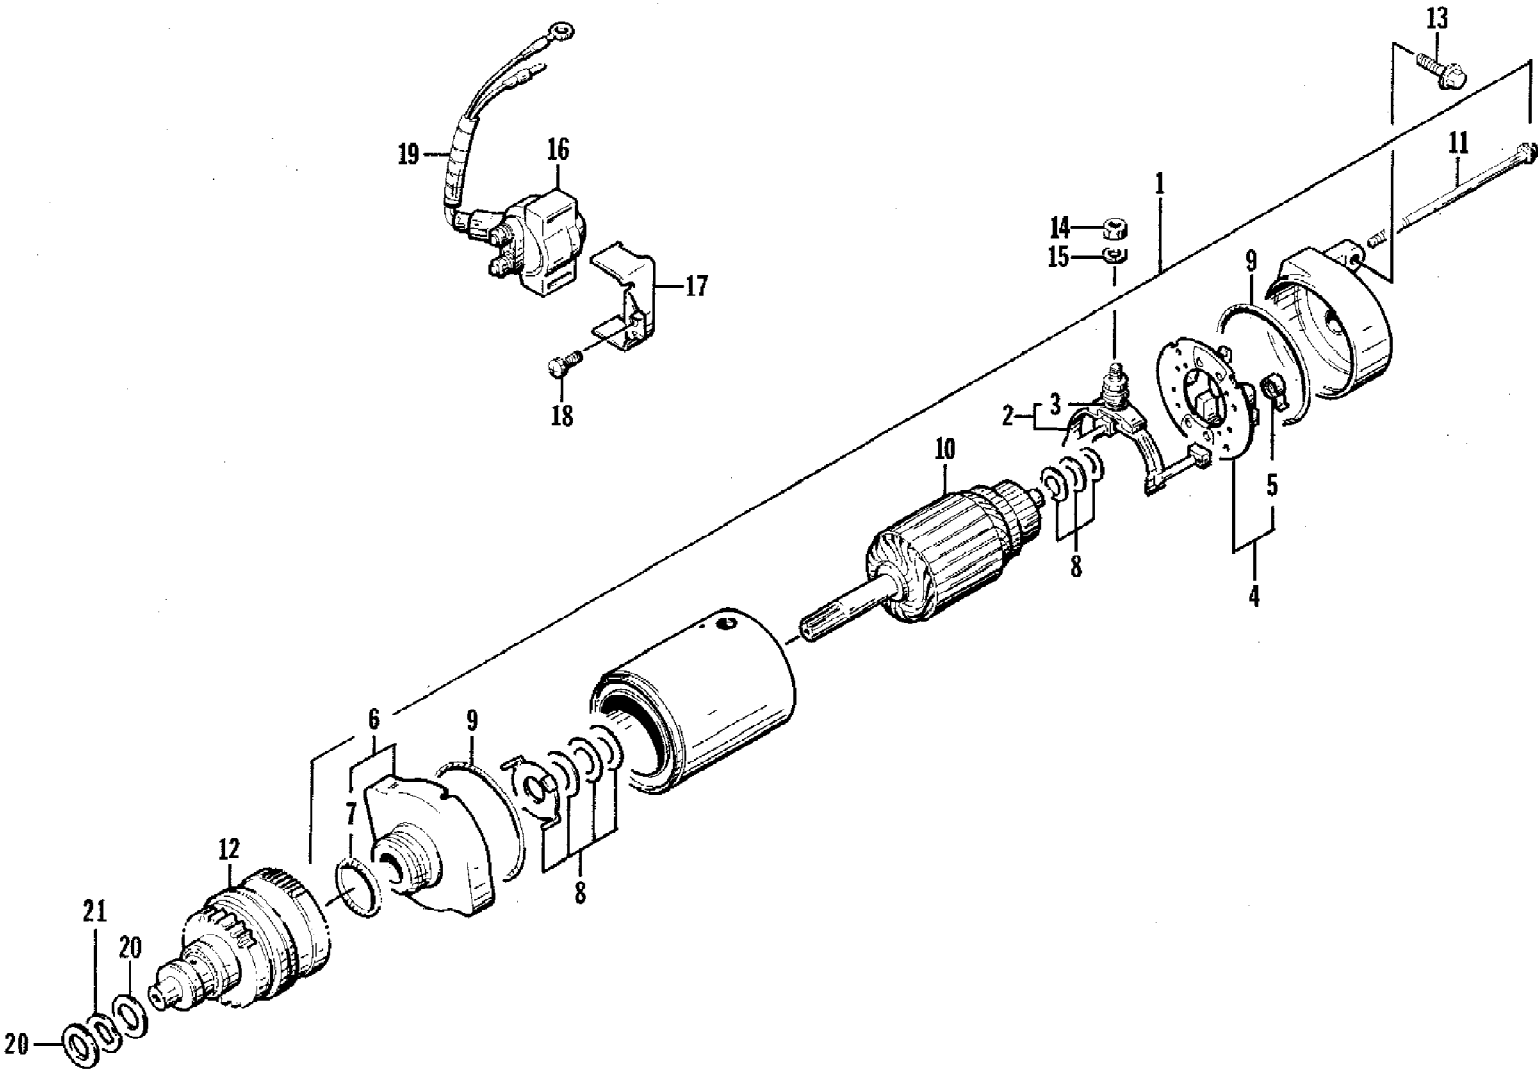


1996 DAYTONA 770 (96DTB-W-1996)
STARTER MOTOR

Page 50 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-462	1		Starter Motor Assembly (inc. 2-11)
2	3008-094	1	/P	Terminal Set, Brush (inc. 3)
3	3008-164	1		O-Ring
4	3008-095	1	/P	Holder Set, Brush (inc. 5)
5	3008-096	4		Spring,Brush
6	3008-328	1	/P	Front Bracket Assembly (inc. 7)
7	3008-363	1	/P	O-Ring
8	3008-099	2		Washer Set
9	3008-101	2	S	O-Ring
10	3008-103	1		Armature
11	3008-102	2		Cap, Screw
12	3008-387	1	/P	Pinin Assembly
13	3008-463	2		Screw, Cap
14	3008-014	1		Nut
15	3008-020	1		Washer
16	3008-165	1	/P	Relay
17	3008-140	1		Bracket
18	3008-313	1		Screw, Cap
19	3008-135	1	S	Tube
20	3008-193	2	S	Washer
21	3008-221	1		Washer

1996 DAYTONA 770 (96DTB-W-1996)
STEERING POST ASSEMBLY

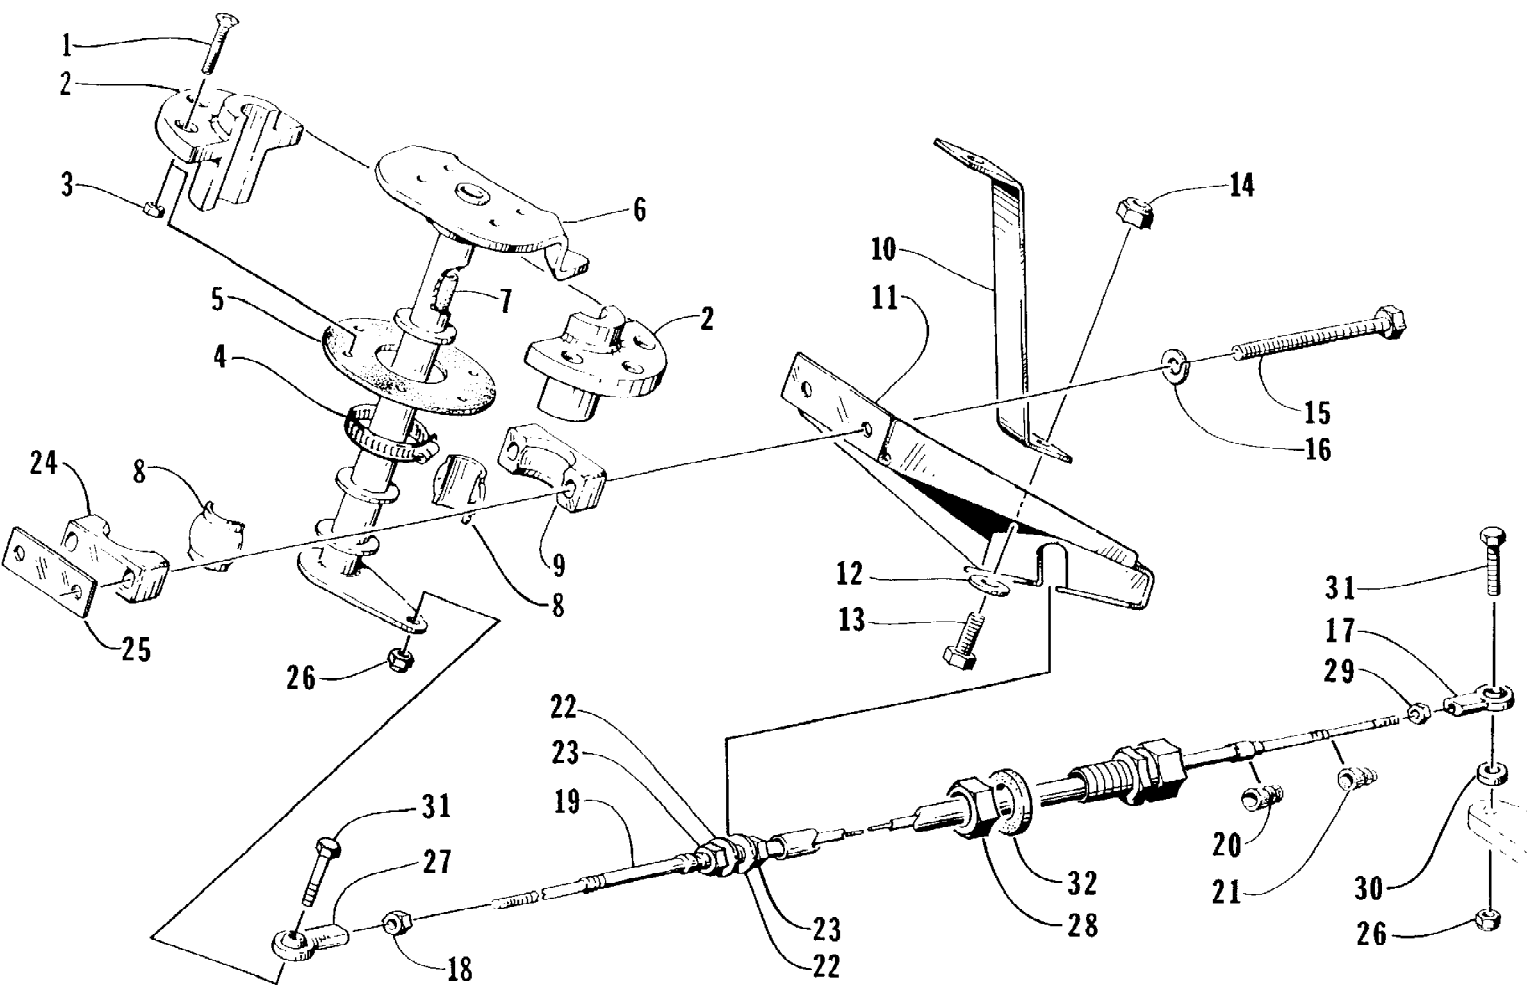

1996 DAYTONA 770 (96DTB-W-1996)
STEERING POST ASSEMBLY


Page 52 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0624-186	6		Screw, Machine
2	0673-122	2		Bearing, Half - Steering Pst
3	0624-021	6		Nut, Lck
4	0624-038	2		Clamp
5	0673-056	1		Seal, Bearing
6	0773-096	1	/P	Pst, Steering
7	0717-052	0	/P	Fam, Neprene Tape
8	0605-149	2		Bearing, Steering Pst
9	0605-171	1		Husing, Bearing
10	0673-457	1		Bracket, Supprt
11	0773-629	1		Bracket, Steering Cable
12	0624-125	1	/P	Washer
13	0624-229	1		Screw, Cap
14	0624-090	1		Nut, Lck
15	0624-192	2		Screw, Cap
16	0624-125	2	/P	Washer
17	0673-932	1		End, Steering Cable
18	0624-107	1		Nut, Jam
19	0673-843	1	/P	Cable, Steering
20	0612-363	1		Seal, Rd
21	0612-364	1		Cver, Thread Cap - Steering Cable
22	0624-106	4		Washer
23	0624-105	4		Nut, Jam
24	0705-064	1	/P	Husing, Bearing
25	0673-366	1		Spacer, Bearing Husing
26	0624-089	2		Nut, Lck
27	0673-931	1		End, Steering Cable
28	0623-669	1		Nut
29	0624-279	1		Nut, Jam
30	0624-381	1		Spacer
31	0624-290	2		Screw, Cap
32	1673-193	1		Gasket, Cable - Fam

1996 DAYTONA 770 (96DTB-W-1996)
TRIM ASSEMBLY

Page 54 of 58


Ref #	Part Number	Qty	S/P/F	Description
1	0673-938	1		Plate, Console - Trim
2	1673-147	1		Bracket, Trim Motor
3	0624-289	1		Screw, Cap
4	0624-279	1		Nut, Jam
5	0624-213	1		Screw, Cap
6	0686-312	1		Harness, Trim
7	1673-195	1		Cable, Indicator
8	0624-250	1		Nut, Lock
9	0624-022	3		Washer
10	0673-487	1		Spacer
11	0624-089	1		Nut, Lock
12	0624-247	2		Washer
13	0673-932	1		Rd End
14	1673-197	1		Pad, Fam
15	0624-231	1		Screw, Cap
16	0624-115	1		Washer, Lock
17	0773-737	1		Rd, Trim
18	0673-632	1		Bt, Trim Rd
19	0673-711	1	/P	Actuator, Trim
20	0624-019	1		Clamp
21	1673-196	1		Fitting, Bellows - Lock
22	0123-811	1		Tie, Cable
23	1673-049	1		Spacer

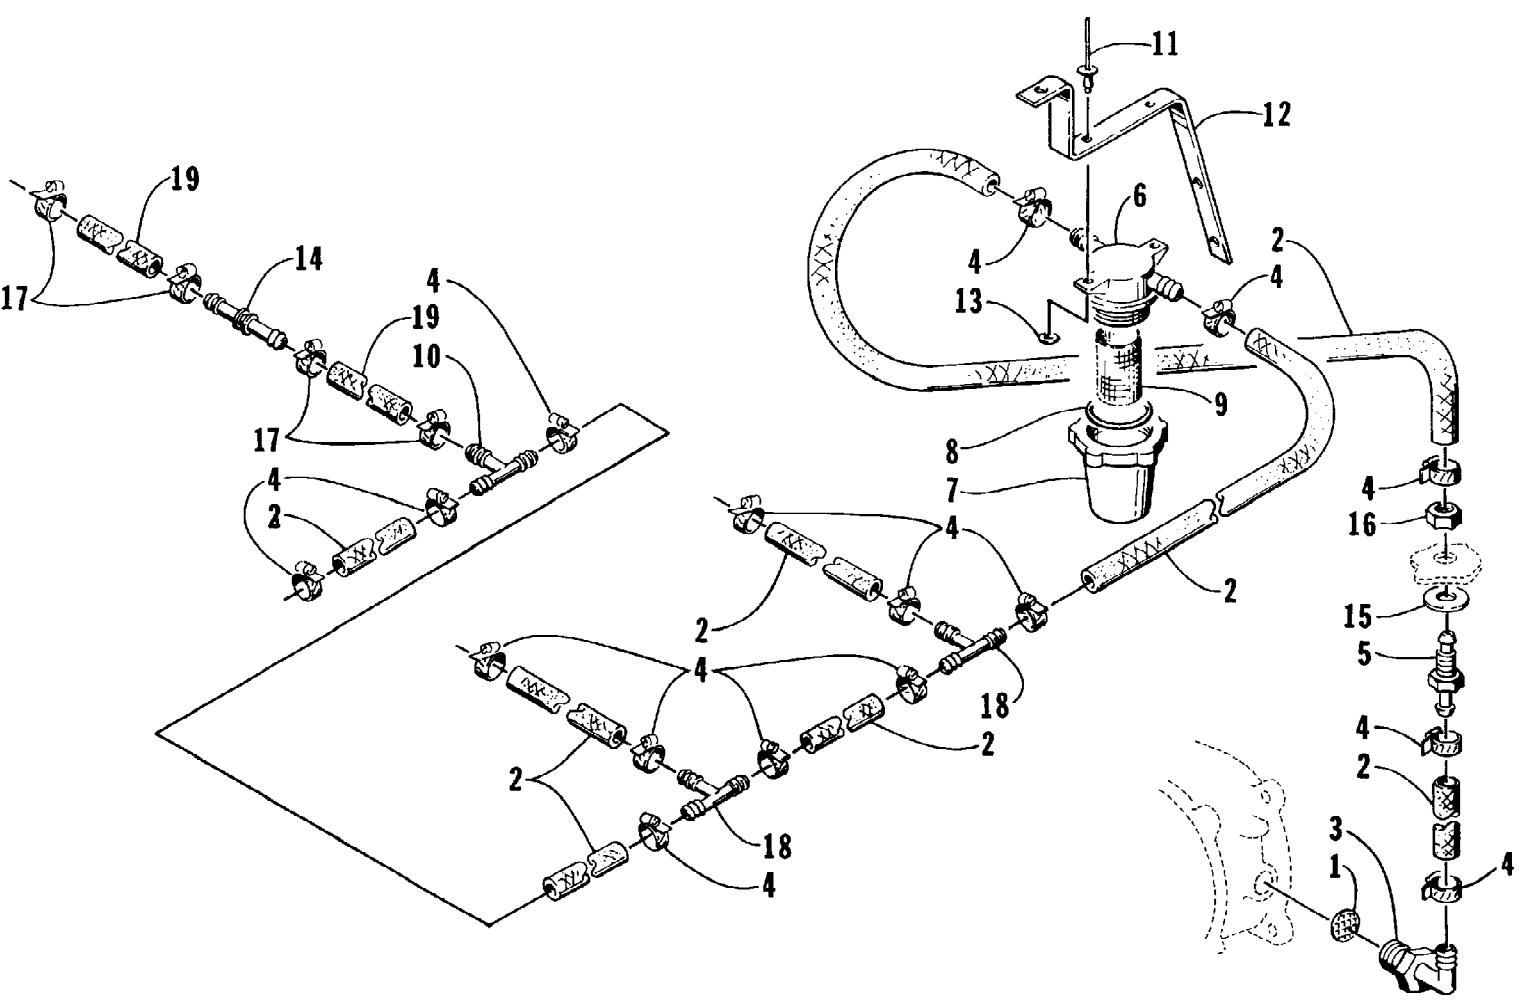

1996 DAYTONA 770 (96DTB-W-1996)
WATER FILTER ASSEMBLY

Page 56 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0675-042	1		Screen
2	0710-190	0		Hose, Water
3	0673-850	1		Fitting, Elbow
4	0624-016	16		Clamp
5	1673-157	1	S	Fitting
6	1673-161	1		Filter, Water Assembly (inc. 7-9)
7	0673-669	1		Cover
8	0673-670	1		O-Ring
9	0673-671	1		Screen
10	1673-162	1		T-Connectin
11	8060-428	2		Rivet
12	1673-138	1		Bracket, Mounting
13	0624-025	2		Washer
14	1673-283	1		Jet, Restrictor - Water
15	0624-388	1		Washer, Sealing
16	0623-648	1		Nut
17	0624-324	4		Clamp
18	1673-163	2		T-Connecting
19	0610-183	0		Hose, Water

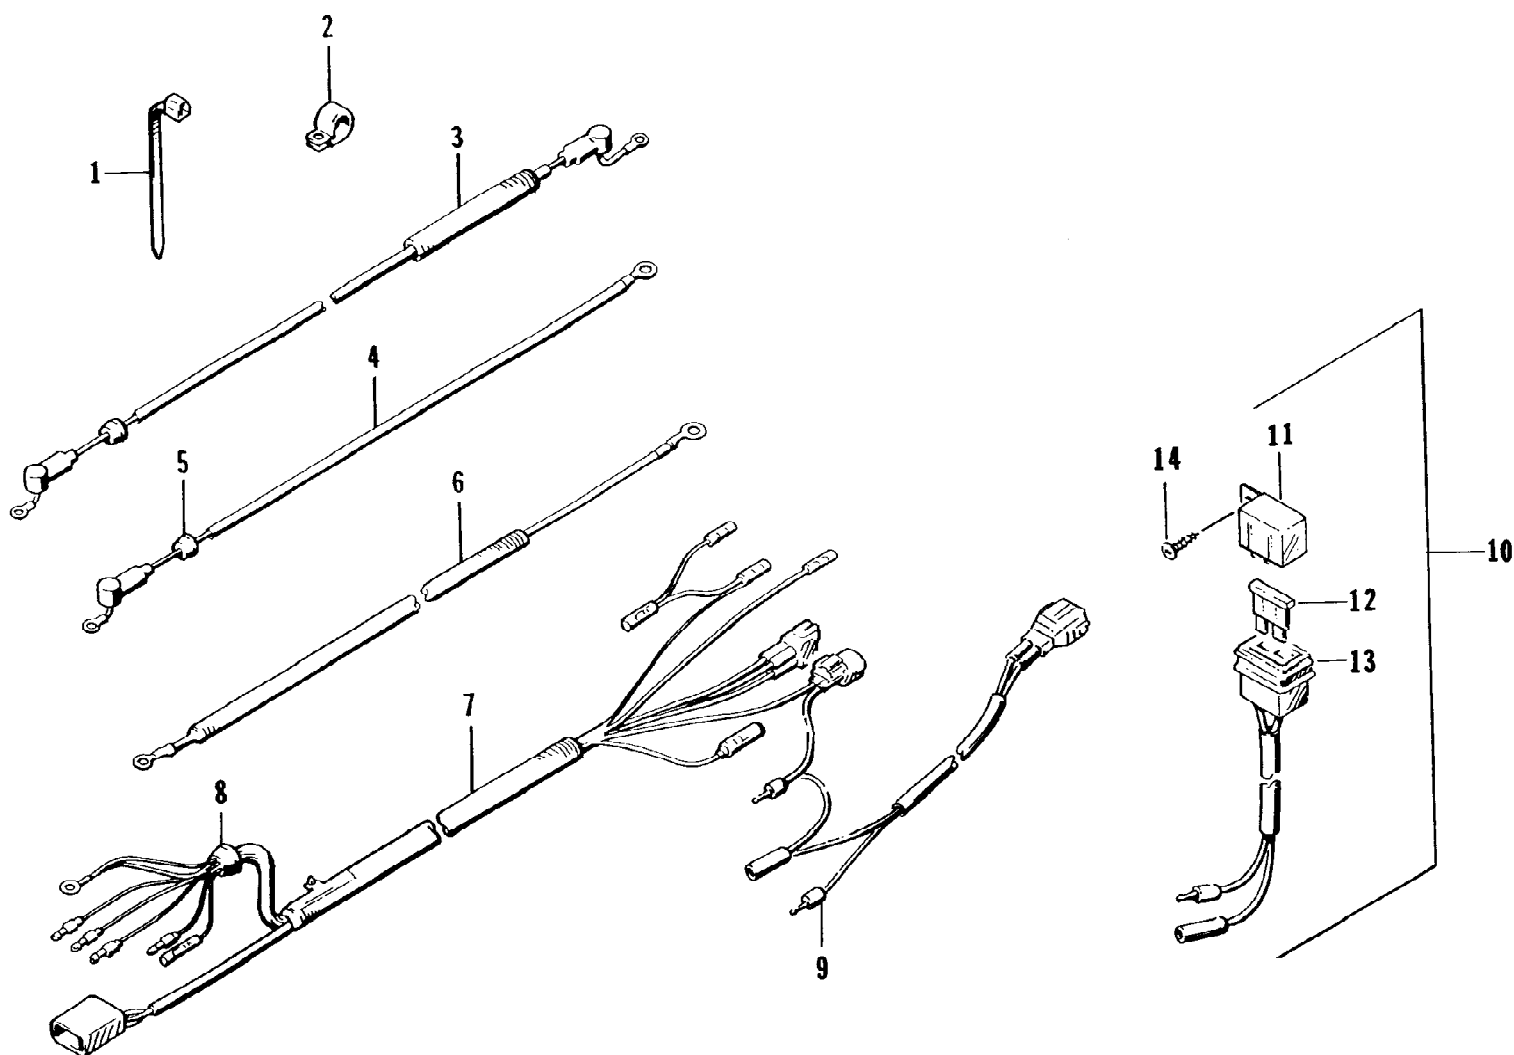

1996 DAYTONA 770 (96DTB-W-1996)
WIRING HARNESS

Page 58 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-044	1		Tie, Cable
2	3008-357	2		Clamp
3	3008-466	1		Cable
4	3008-345	1	/P	Cable
5	3008-334	1	/P	Grommet
6	3008-467	1		Cable, Grund
7	3008-347	1		Harness, Wiring
8	3008-362	1	/P	Grommet
9	0686-370	1		Harness, Gauge
10	0630-089	1		Fuse Holder, Blade (inc. 11-13)
11	0630-087	1		Cover, Fuse Holder
12	0630-056	1		Fuse, 3AMP
13	0630-086	1		Bdy, Fuse Holder
14	0623-165	1	/P	Clip, Retaining