 


1998 TS 770 (98MTB-1998)
BILGE PUMP ASSEMBLY

Page 1 of 58

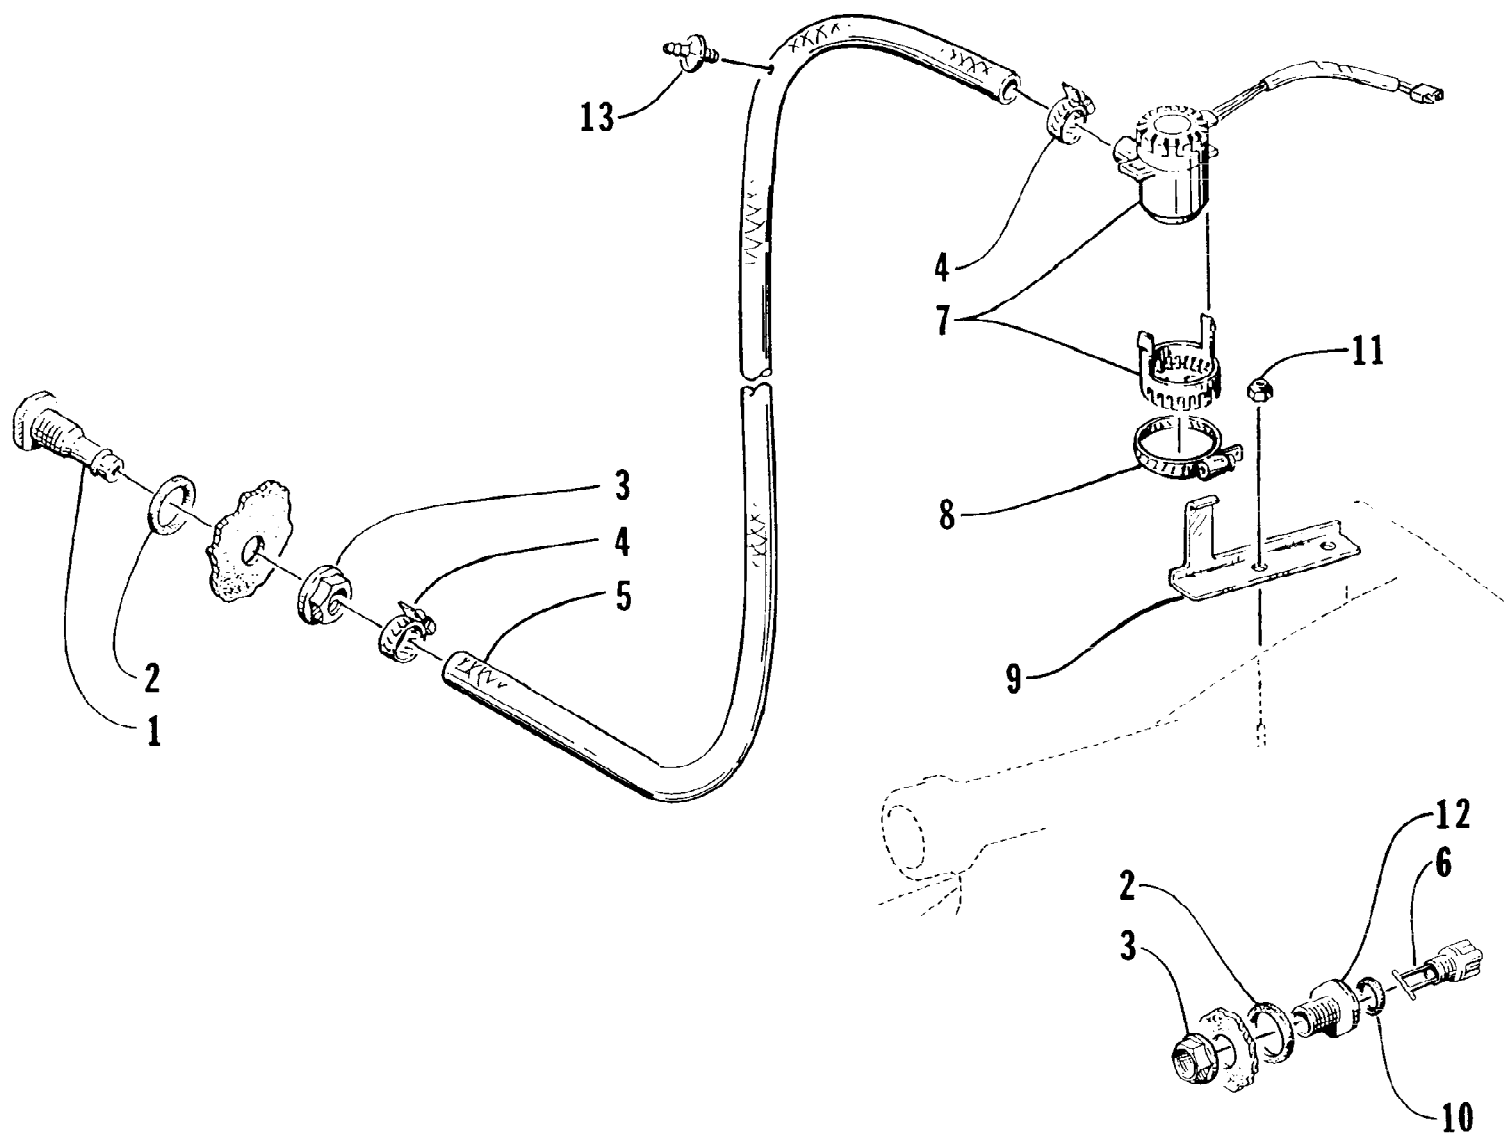


1998 TS 770 (98MTB-1998)
BILGE PUMP ASSEMBLY

Page 2 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0673-377	1		Fitting, Outlet - Bilge
2	0612-456	2		Seal, Fitting
3	0673-378	2	S	Nut, Fitting
4	0624-018	2		Clamp, Hose
5	0710-201	1		Hose, Bilge
6	0673-404	1		Plug, Drain
7	1673-331	1	S	Pump, Bilge
8	0624-037	1		Clamp
9	1673-354	1		Mount, Bilge Pump
10	0673-459	1		O-Ring
11	0624-250	2		Nut, Lock
12	0673-278	1		Retainer, Drain Plug
13	0610-059	1		Valve, Check

 1998 TS 770 (98MTB-1998)
CARBURETOR

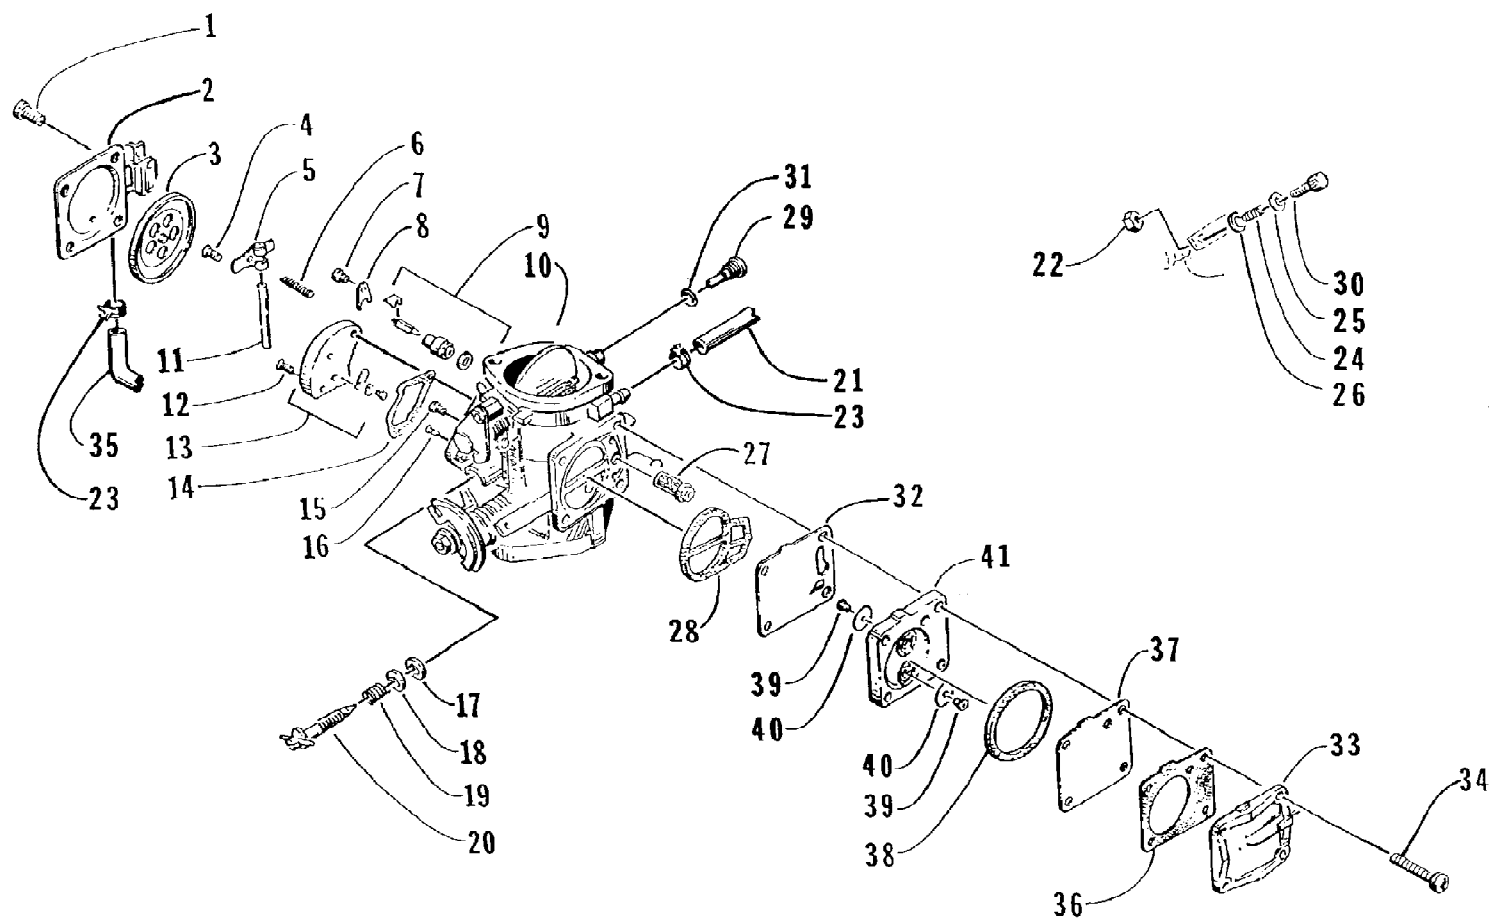


1998 TS 770 (98MTB-1998)
CARBURETOR

Page 4 of 58

Ref #	Part Number	Qty	S/P/F	Description
	0670-724	1		Complete Assembly
1	6505-943	4		Screw, Cap
2	6505-946	1		Cover, Diaphragm
3	6505-663	1		Diaphragm Assembly
4	6505-692	1		Screw, Machine
5	6505-664	1		Arm
6	6505-925	1	/P	Spring
7	6505-695	1		Screw, Machine
8	6505-682	1		Plate
9	6505-929	1		Needle Valve Assembly
10	0	1	F	Mixing Body
11	6505-681	1		Pin
12	6505-679	2		Screw, Machine
13	6505-680	1		Block, Metering
14	6505-677	1		Gasket
15	6505-757	1		Main Jet - 170
16	6505-772	1		Jet, Low Speed - 65
17	6505-668	1		Seal
18	6505-661	1		Washer
19	6505-660	1		Spring
20	6505-852	1		Adjuster
21	6505-945	1		Hose
22	6505-911	1		Nut
23	6505-941	4		Clip
24	6505-678	1		Spring
25	6505-703	1		Washer
26	6505-872	1	/P	O-Ring
27	6505-676	1		Filter
28	6505-665	1		S-Gasket
29	6505-947	1		Main Jet - Fixed
30	6505-912	1		Screw, Adjust
31	6505-042	1		O-Ring
32	6505-656	1	/P	Diaphragm, Damper
33	6505-652	1		Cover, Pump
34	6505-704	4		Screw, Machine
35	6505-942	1		Hose
36	6505-653	1		Gasket
37	6505-654	1		Diaphragm, Pump
38	6505-683	1		O-Ring
39	0	2	F	Grommet
40	0	2	F	Valve
41	6505-655	1		Body Assembly, Pump

1998 TS 770 (98MTB-1998)
COOLING INTAKE LINE

 Page 5 of 58

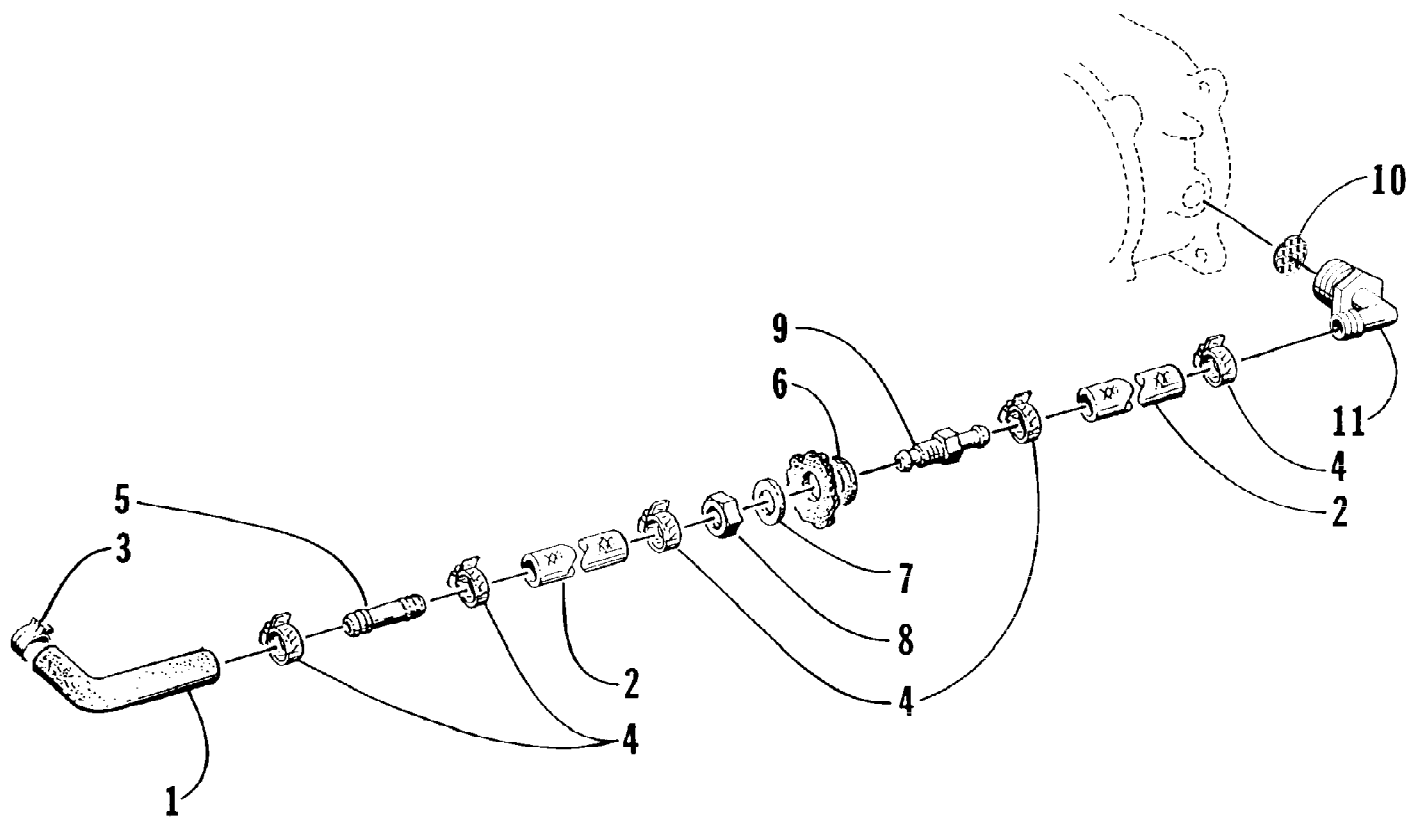


1998 TS 770 (98MTB-1998)
COOLING INTAKE LINE

Page 6 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0610-206	1	/P	Hose
2	0610-106	0	/P	Hose, Water
3	3008-455	1		Clamp
4	0624-016	5		Clamp
5	0673-564	1		Coupler
6	1673-192	1		Gasket
7	0624-222	1		Washer
8	0624-117	1		Nut
9	0673-981	1		Fitting, Hull
10	0675-042	1		Screen
11	0673-850	1		Fitting, Elbow

1998 TS 770 (98MTB-1998)
CRANKCASE ASSEMBLY

 Page 7 of 58

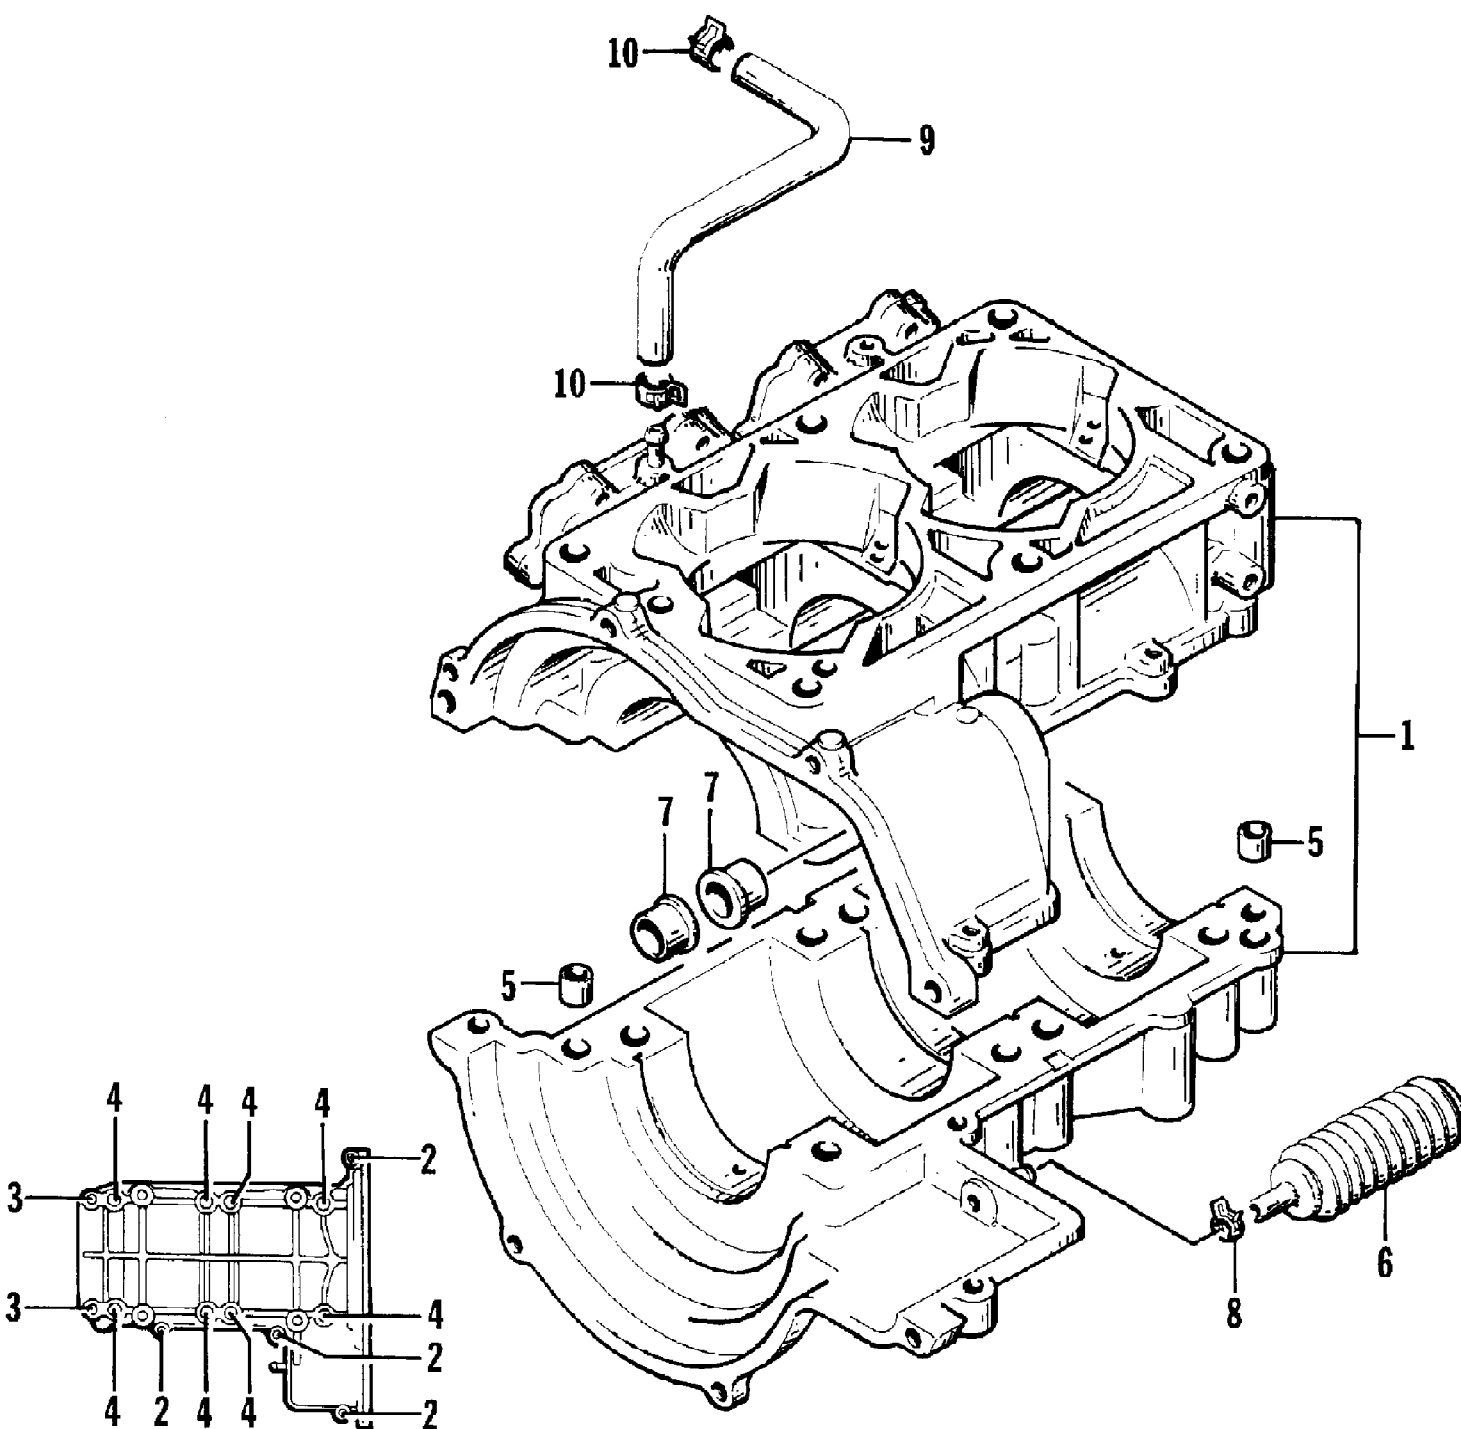


1998 TS 770 (98MTB-1998)
CRANKCASE ASSEMBLY

Page 8 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-426	1	/P	Crankcase Assembly (inc. 2-5) (770)
2	3008-210	4	/P	Screw, Cap
3	3008-373	2	/P	Screw, Cap
4	3008-212	8	/P	Screw, Cap
5	3008-199	2	/P	Pin
6	3008-100	1		Bladder, Magneto Case
7	3008-105	2		Bushing, Pinion Shaft
8	3008-546	1		Clamp (770)
9	3008-200	1	/P	Hose, Vacuum
10	3008-039	2		Clamp, Hose

1998 TS 770 (98MTB-1998)
CRANKSHAFT

 
Page 9 of 58

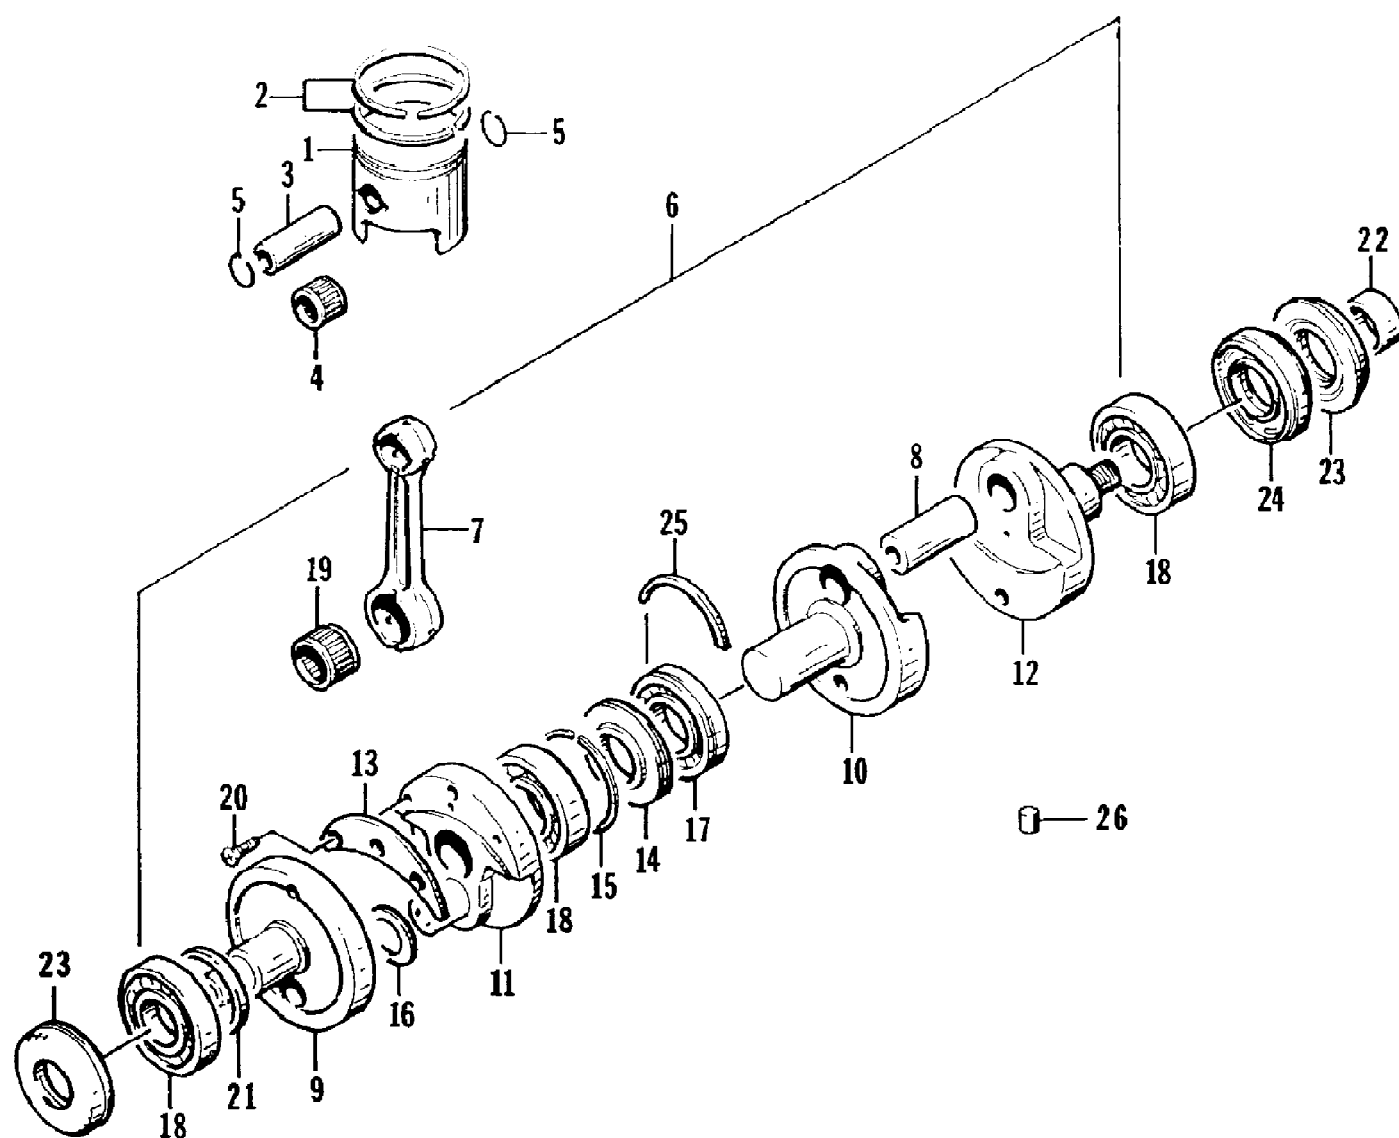

1998 TS 770 (98MTB-1998)
CRANKSHAFT

Page 10 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-569	2	/P	Piston, Standard
1	3008-414	2		Piston, Optional (+ 0.010 in.)
1	3008-416	2		Piston, Optional (+ 0.020 in.)
2	3008-413	2		Ring Set, Standard
2	3008-415	2		Ring Set, Optional (+ 0.010 in.)
2	3008-417	2		Ring Set, Optional (+ 0.020 in.)
3	3008-482	2	/P	Pin
4	3003-433	2	/P	Bearing
5	3003-439	4	/P	Ring, Snap
6	3008-428	1		Crankshaft Assembly (inc. 7-21)
7	3008-427	2		Connecting Rod
8	3008-429	1	/P	Crank Pin
9	3008-430	1		Crankshaft, Right
10	3008-431	1		Crankshaft, Center
11	3008-432	1		Wheel
12	3008-433	1		Crankshaft, Left
13	3008-069	1		Balancer
14	3003-606	1		Race, Center
15	3003-453	1		Ring, Center
16	3008-019	1		Washer
17	3008-421	1	/P	Bearing
18	3008-422	3	S	Bearing
19	3008-423	2		Bearing
20	3004-372	3	S	Screw, Machine
21	3008-495	1	/P	Washer
22	3008-072	1		Spacer, Crankshaft
23	3003-367	2		Seal, Oil
24	3002-355	1		Seal, Oil - Center
25	3003-359	1		C-Ring
26	3003-658	4	/P	Pin

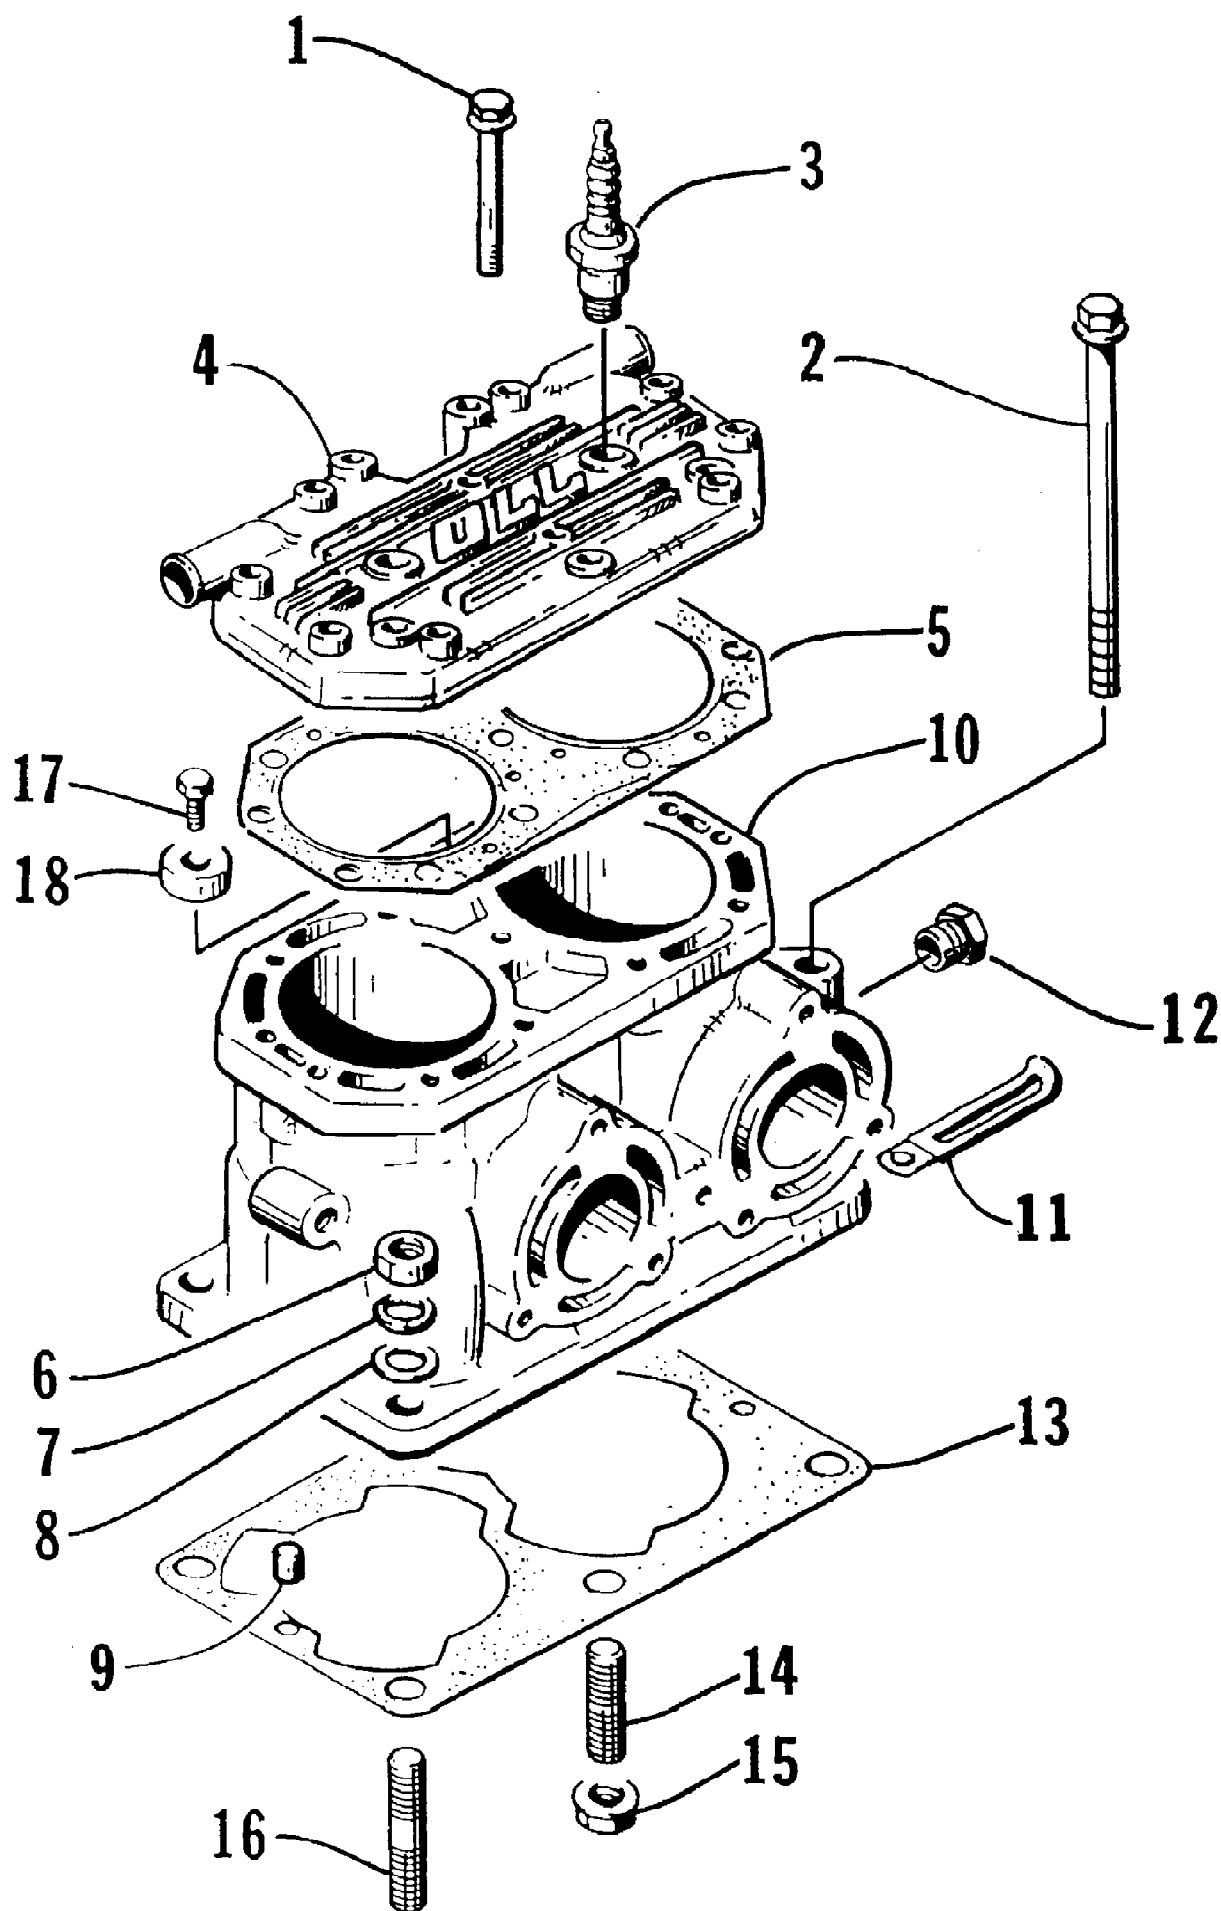 


1998 TS 770 (98MTB-1998)
CYLINDER ASSEMBLY

Page 12 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-381	10		Screw, Cap
2	3008-459	1	/P	Screw, Cap
3	0217-709	2		Spark Plug (BREYA)
4	3008-531	1	/P	Head, Cylinder
5	3008-538	1	S	Gasket, Cylinder Head
6	3008-209	5	/P	Nut
7	3008-207	5	/P	Washer, Lock
8	3004-278	5	S/P	Washer
9	3008-146	2		Pin
10	3008-425	1	/P	Cylinder
11	3008-358	2	/P	Clamp
12	1673-190	1		Union
13	3008-411	1		Gasket, Cylinder
14	3008-394	1	/P	Stud
15	3008-208	1		Nut
16	3008-300	5		Stud
17	3008-013	1		Screw, Cap
18	3008-047	1		Zinc, Anode (inc. 17)

1998 TS 770 (98MTB-1998)
DECAL AND FOOTPAD ASSEMBLY

 Page 13 of 58

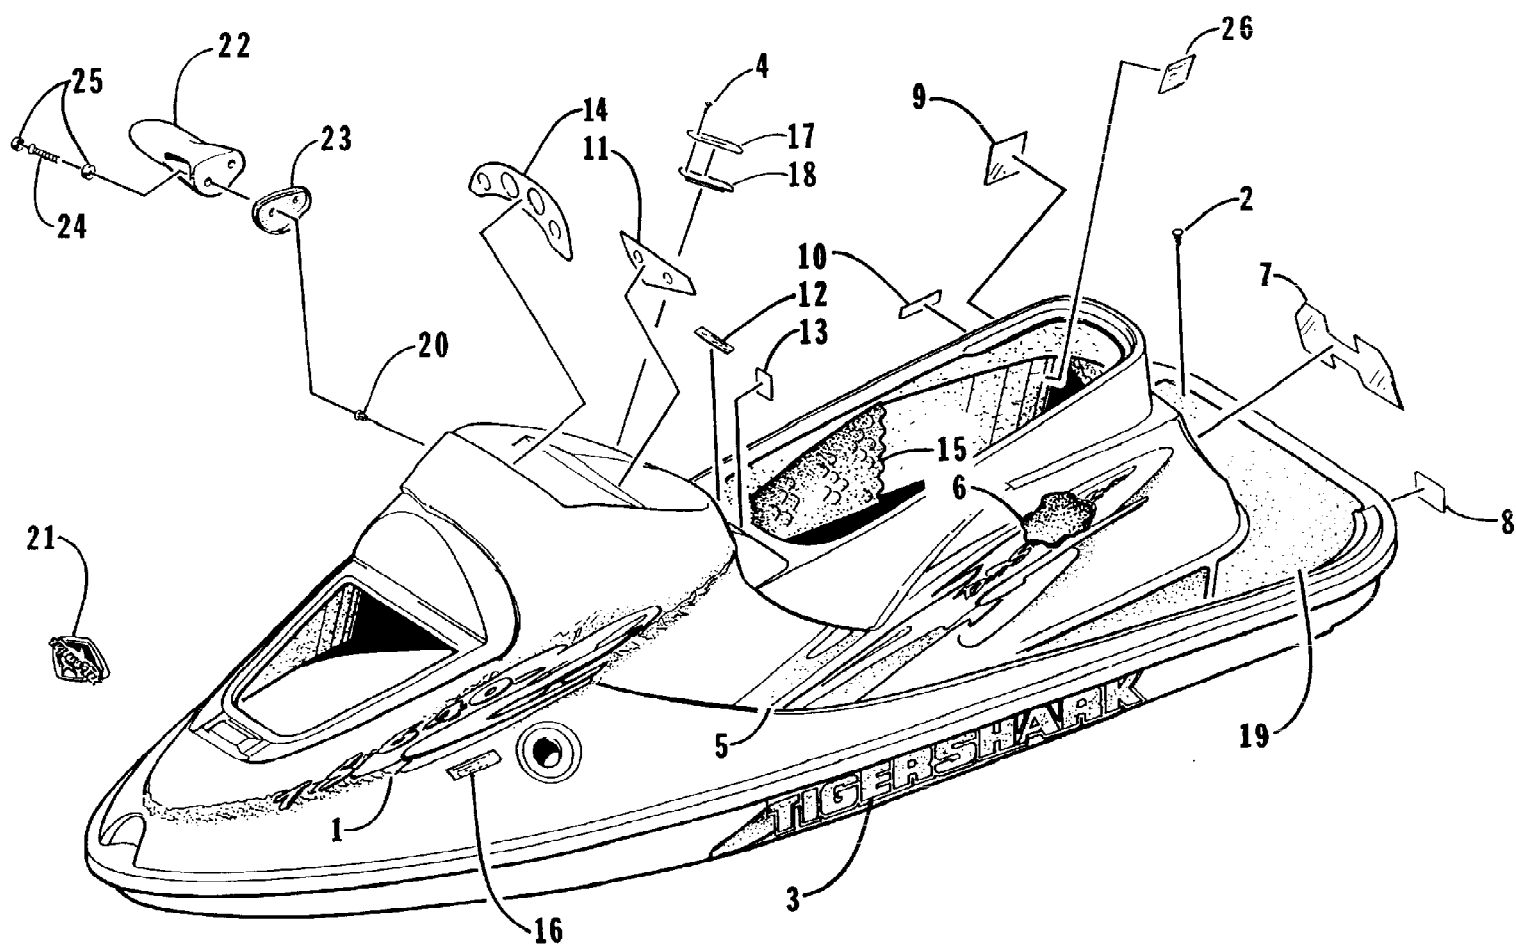

1998 TS 770 (98MTB-1998)



Page 14 of 58

DECAL AND FOOTPAD ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0614-398	1		Decal, Deck - Starboard (770)
1	0614-399	1		Decal, Deck - Port (770)
2	0623-748	14		Clip, Retainer (770)
3	0614-396	1		Decal, Hull - Starboard - "Tigershark" (770)
3	0614-397	1		Decal, Hull - Port - "Tigershark" (770)
4	0623-760	2		Clip, Retainer
5	0614-400	1		Decal, Side - Port (770)
5	0614-401	1		Decal, Side - Starboard - (770)
6	0617-259	1		Foam, Deck - Left
7	0614-350	1		Decal, Regulation
8	0614-154	1		Decal, Caution - Uprighting
9	0614-066	1		Decal, USCG Exemption
10	0614-059	1		Decal, Common Sense
11	0614-395	1		Decal, Console (770)
12	0614-300	1		Decal, Oil Filler
13	1611-866	1		Decal, Warning - Gas Vapors
14	0614-402	1		Decal, Instrument Panel (770)
15	0617-258	1		Foam, Deck - Right
16	0614-405	1		Decal, Warning - Fuel (770)
17	0614-360	1		Decal, Gauge Lens
18	0670-363	1		Lens, Gauge - Oil Level
19	1673-486	1		Pad, Foot - Rear (770)
20	0623-557	4		Insert, Brass
21	0614-403	1		Decal, Crest (770)
22	1673-500	1	S	Mirror Assy, Starboard (770)
22	1673-501	1	S	Mirror Assy, Port (770)
23	1673-120	1		Gasket, Mounting - Starboard (770)
23	1673-127	1		Gasket, Mounting - Port (770)
24	0624-271	4		Screw (770)
25	0124-054	4	/P	Snap Cap w/ Washer (770)
26	0614-443	1		Decal, Winterization (770)

1998 TS 770 (98MTB-1998)
ELECTRICAL MODULE AND BATTERY

  Page 15 of 58

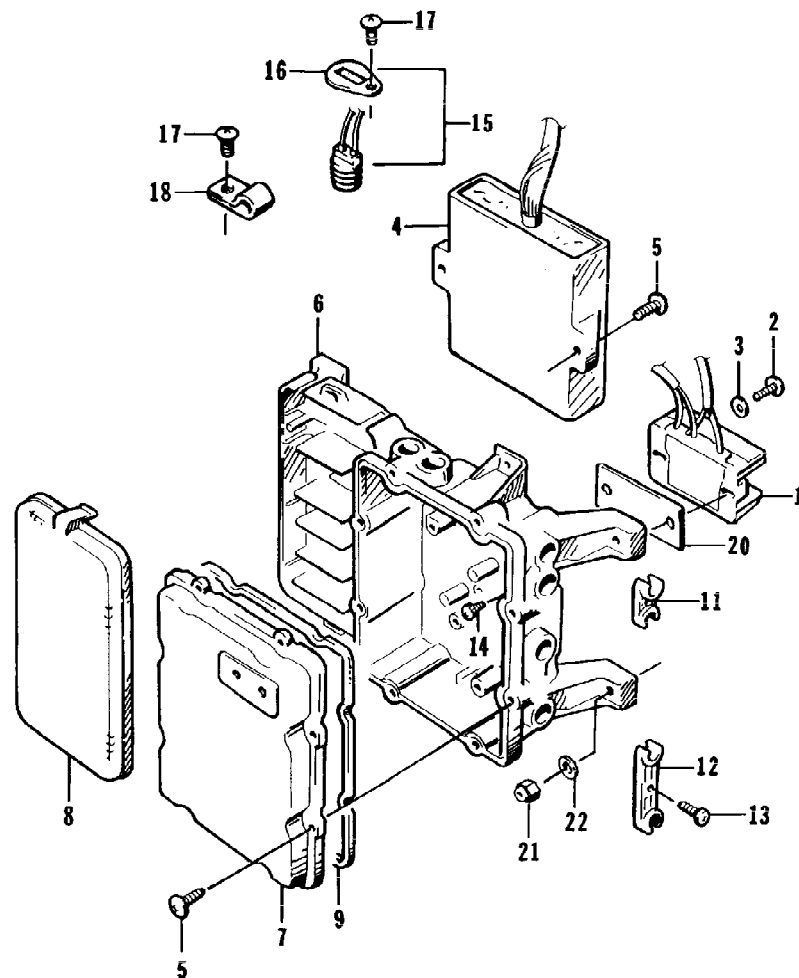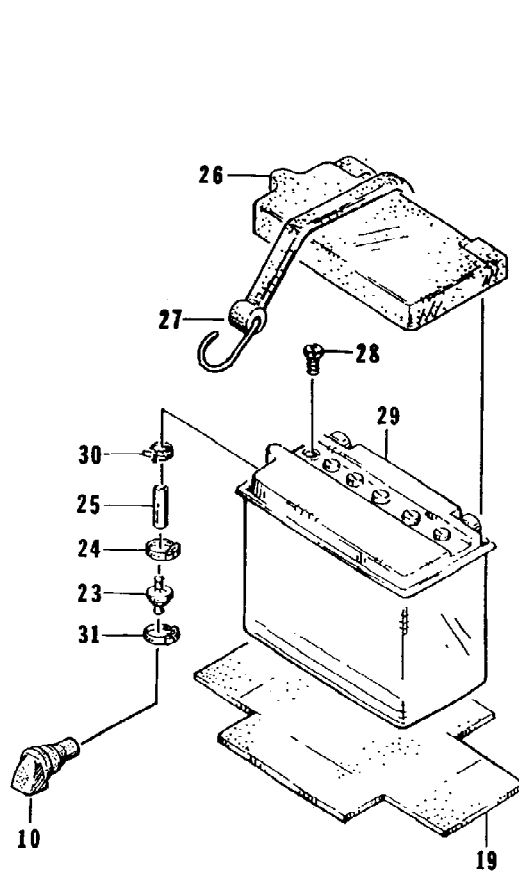

1998 TS 770 (98MTB-1998)


Page 16 of 58

ELECTRICAL MODULE AND BATTERY

Ref #	Part Number	Qty	S/P/F	Description
1	3008-279	1	/P	Regulator Assembly (inc. 2)
2	3008-479	2		Screw, Regulator (770)
3	3008-337	2		Washer, Regulator
4	3008-566	1		Unit, CDI (770)
5	3008-478	3		Screw, Cap (770)
6	3008-282	1		Case
7	3008-283	1	/P	Cover
8	3008-284	1	/P	Cover
9	3008-285	1	/P	Packing
10	0673-755	1		Vent, Thru Hull - w/Hood
11	3008-124	2		Holder
12	3008-125	1		Holder
13	3008-477	4		Screw, Cap (770)
14	3008-217	1		Screw, Cap
15	3008-330	1	S/P	Sensor - Assembly (inc. 16)
16	3008-134	1		Supporter
17	3008-219	2		Screw, Machine
18	3008-040	1		Clamp
19	1673-310	1	S	Pad, Battery (770)
20	3008-336	1	/P	Base, Regulator
21	0624-089	4		Nut, Lock
22	0624-022	4		Washer
23	0670-295	1		Valve, Check
24	0623-502	1		Clamp
25	0610-008	1	/P	Hose, Battery Vent
26	0673-454	1		Cover, Battery
27	0773-382	3	/P	Tie-Down
28	0645-045	6		Cap, Battery
29	0645-232	1	S	Battery (inc. 28)
30	0645-323	1		Clamp, Hose - Battery
31	0623-063	1		Clamp

1998 TS 770 (98MTB-1998)
ENGINE AND RELATED ASSEMBLY

 Page 17 of 58

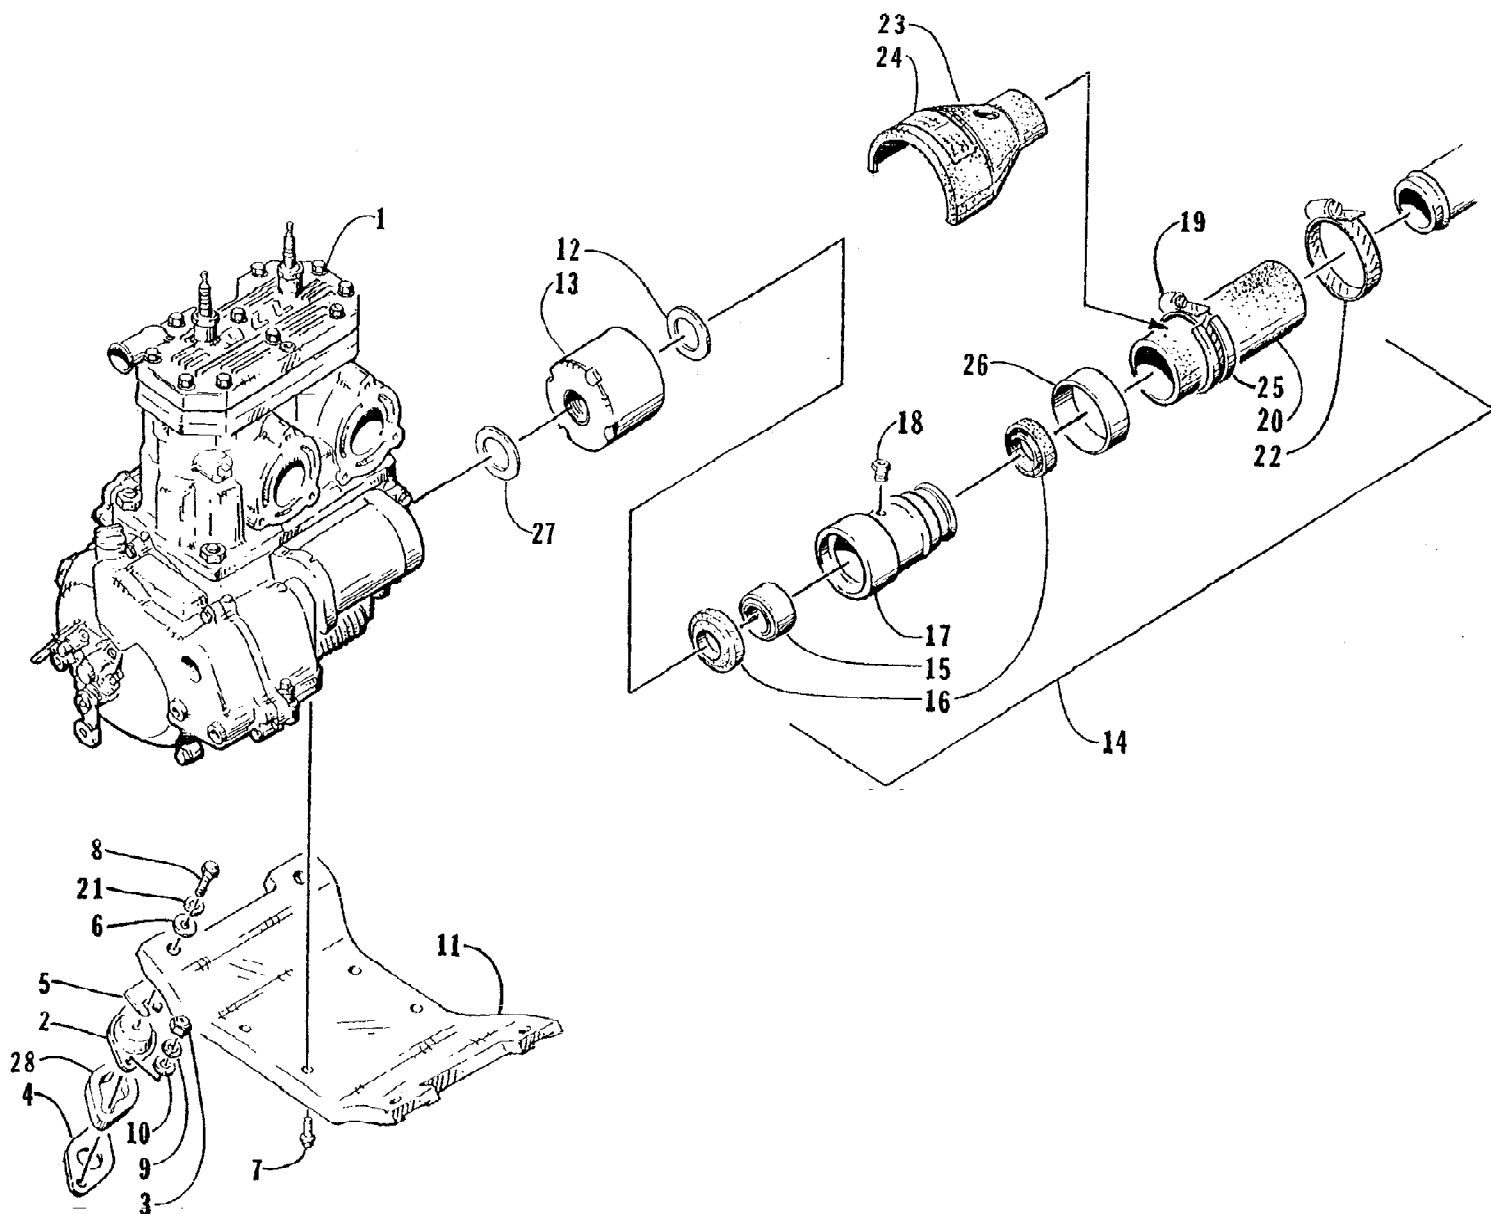

1998 TS 770 (98MTB-1998)


Page 18 of 58

ENGINE AND RELATED ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0662-156	1		Engine
2	3008-054	4		Damper, Engine
3	0624-149	8		Nut
4	0673-508	0	/P	Shim, Engine Mount - 0.125 in.
4	0673-509	0		Shim, Engine Mount - 0.063 in.
5	0624-014	0	/P	Shim - 0.5 mm
5	0624-015	0	/P	Shim - 1.5 mm
6	0624-406	4		Washer
7	3008-203	4	/P	Screw, Cap
8	3008-240	4		Screw, Cap
9	0624-465	8		Washer, Lock
10	0624-028	8		Washer
11	0608-167	1		Plate, Engine Mount
12	0624-447	1		Washer
13	0675-174	1		Coupler, Engine
14	0775-081	1		Housing, Seal - Assembly (inc. 15-18,20, & 26)
15	0675-161	2		Bearing
16	0675-169	2	S	Seal
17	0675-214	1	S	Housing/Bearing - Floating
18	0624-341	1		Fitting, Grease
19	0624-037	1		Clamp
20	0710-210	1	/P	Hose, Coupler
21	0624-012	4		Washer, Lock
22	0624-390	1		Clamp, Hose
23	0775-104	1	S	Guard, Coupler - Assembly (inc. 24)
24	0614-429	1		Decal, Warning
25	0775-099	1		Isolater, Clamp
26	1673-476	1		Clamp, Shrink
27	0624-448	1		Washer
28	0608-238	4		Plate, Spacer

1998 TS 770 (98MTB-1998)
EXHAUST ASSEMBLY

 Page 19 of 58

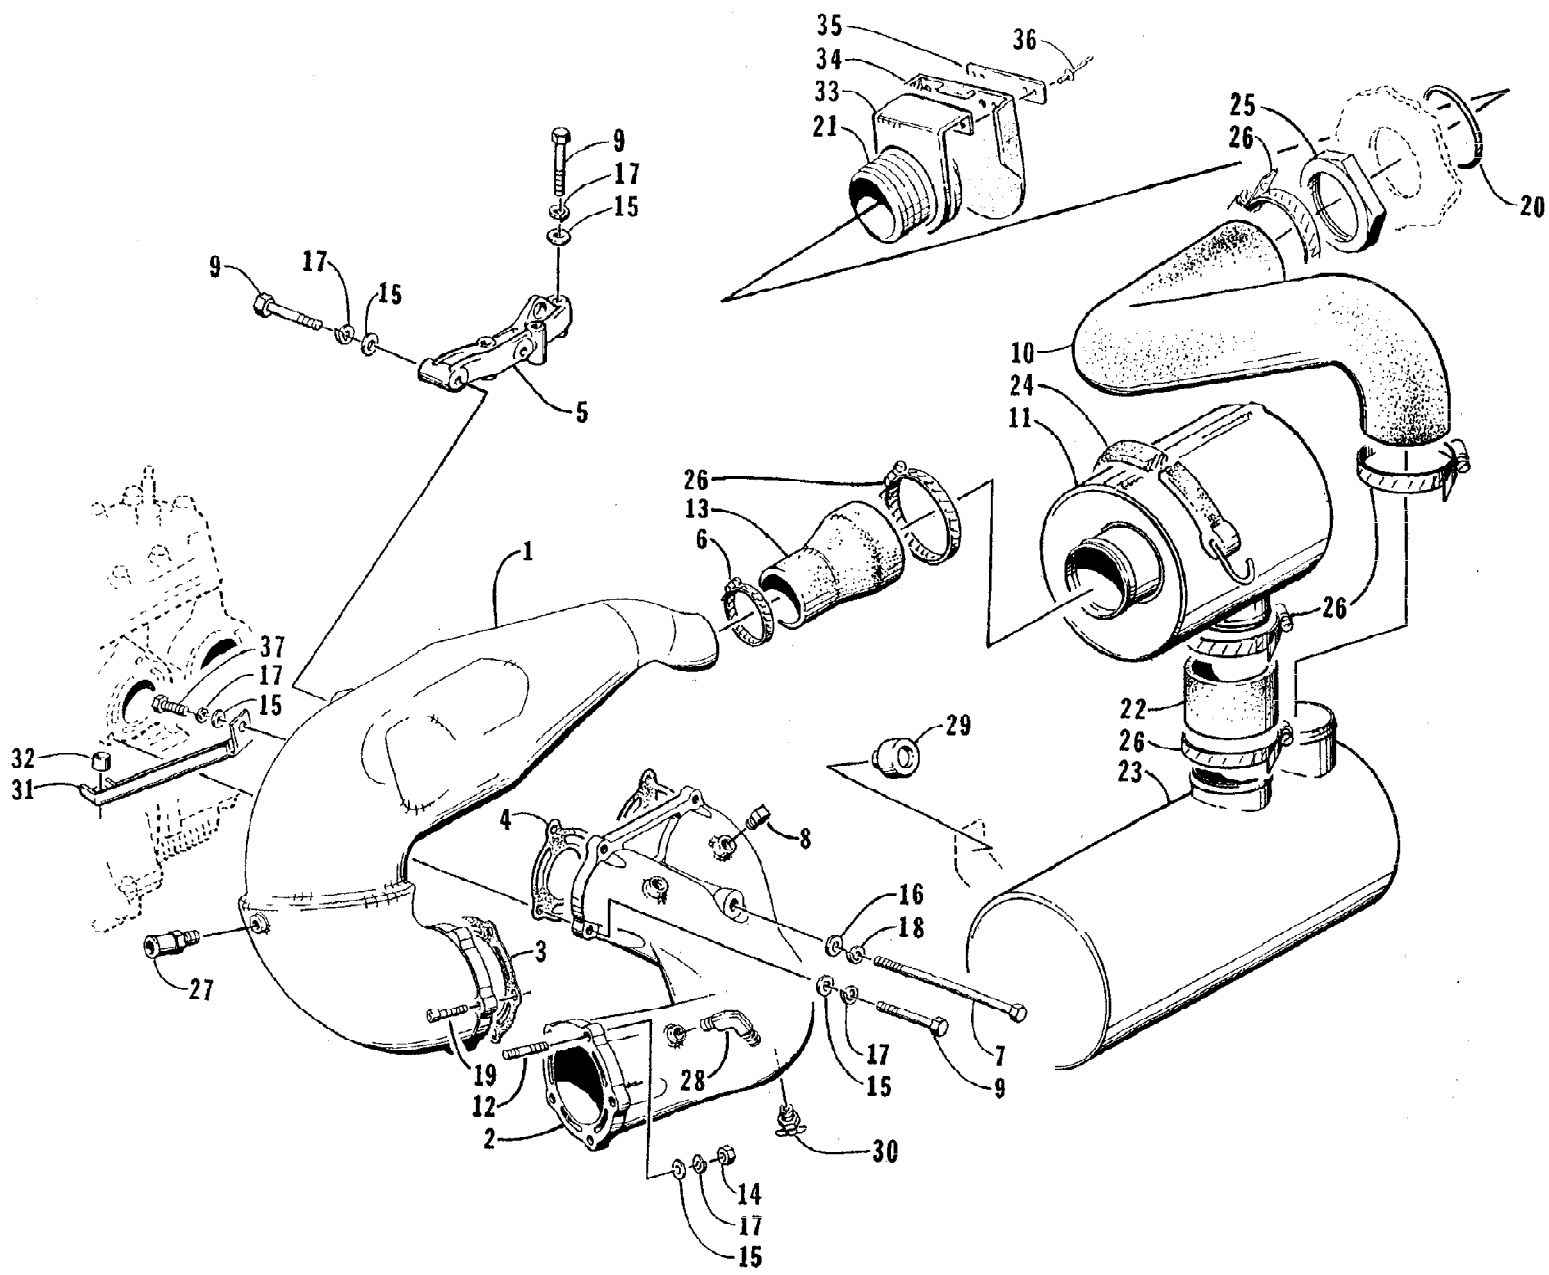


1998 TS 770 (98MTB-1998)
EXHAUST ASSEMBLY

Page 20 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0612-795	1		Chamber, Expansion
2	0612-794	1		Manifold, Exhaust
3	0612-741	1	S	Gasket, Expansion Chamber
4	3008-434	1		Gasket, Exhaust Manifold
5	0612-732	1	S	Bracket, Expansion Chamber
6	0624-390	1		Clamp, Hose
7	0624-344	1		Screw, Cap
8	0676-003	2		Plug
9	0624-402	9		Screw, Cap
10	0610-332	1		Hose, Exhaust - Out
11	0712-320	1		Resonator
12	0624-383	4		Stud
13	0610-372	1		Hose, Exhaust - In
14	0624-149	4		Nut
15	0624-028	15		Washer
16	0624-008	1		Washer
17	0624-027	15		Washer, Lock
18	0624-012	1		Washer, Lock
19	0624-313	1	/P	Screw, Cap
20	0612-676	1		Gasket
21	0612-762	1	/P	Outlet, Exhaust
22	0610-353	1		Hose, Exhaust - Intermediate
23	0712-321	1		Muffler
24	0773-805	1		Tie-Down, Rubber
25	0612-576	1		Nut, Exhaust Outlet
26	0624-169	5		Clamp, Hose
27	0676-002	1		Fitting, Elbow
28	1673-101	1	/P	Fitting, Elbow
29	0673-792	4	/P	Bumper, Grommet
30	0676-012	1	S	Valve, Drain
31	0612-737	1		Brace, Expansion Chamber
32	0624-420	1		Spacer
33	1673-411	1		Bracket
34	1673-413	1		Flap
35	1673-412	1		Plate, Backing
36	0624-590	4		Rivet
37	0624-026	1		Screw, Cap

1998 TS 770 (98MTB-1998)
GAS TANK ASSEMBLY

 Page 21 of 58

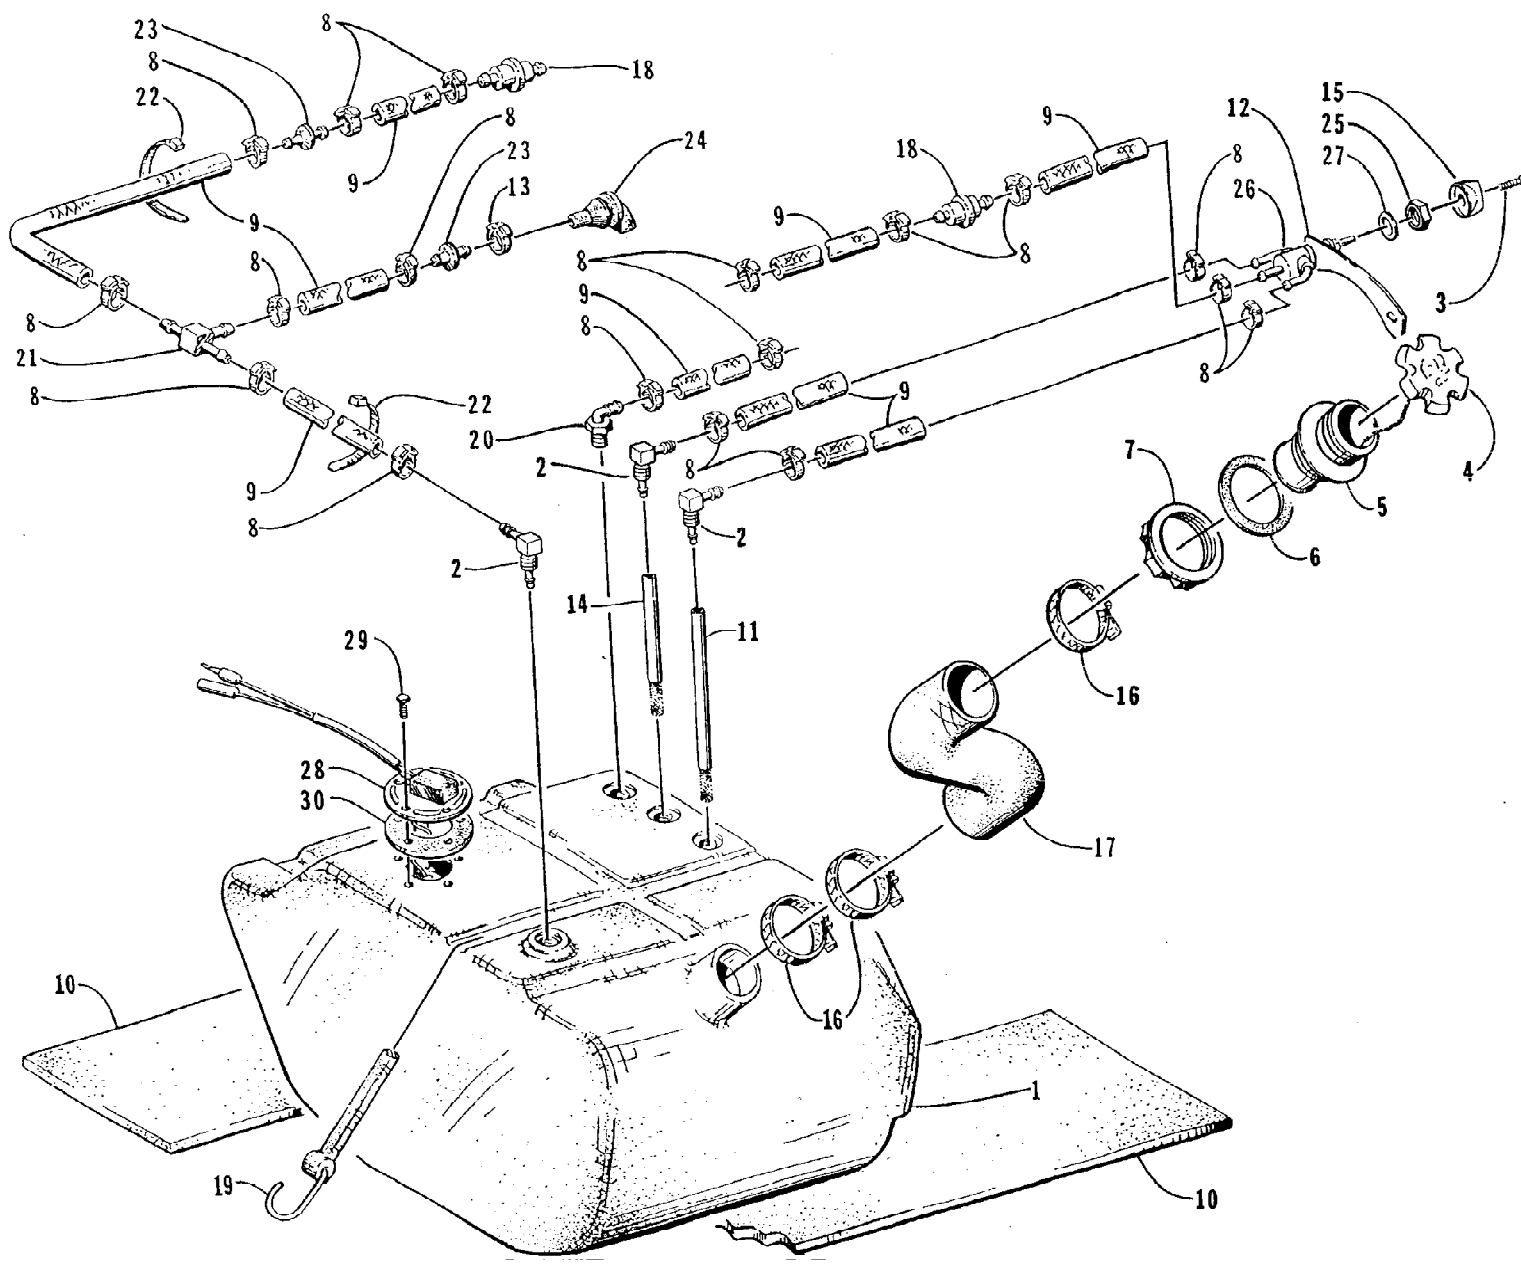


1998 TS 770 (98MTB-1998)
GAS TANK ASSEMBLY

Page 22 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0770-183	1		Tank, Fuel-Assembly (inc. 2,11,14,20,&27) (770)
2	0670-762	3		Outlet, Fuel Tank
3	0624-428	1		Screw, Machine
4	0670-398	1	S/P	Cap
5	0670-428	1	S	Neck, Filler
6	0670-688	1		Seal, Filler Neck
7	0670-548	1		Nut, Filler Neck
8	0624-120	19		Clamp, Hose
9	0710-425	0	/P	Hose - 25 ft
10	1673-344	2		Pad, Fuel Tank
11	1673-130	1		Tube, Drop - Reserve
12	1673-590	1		Plate, Fuel Reserve
13	0623-063	1		Clamp
14	1673-055	1		Tube, Drop - Main
15	1673-274	1		Knob, Fuel
16	0624-037	3		Clamp, Hose
17	0610-339	1		Hose, Filler
18	0510-335	2	/P	Filter, Fuel
19	0773-866	2	/P	Tiedown
20	0115-607	1	S	Fitting, Elbow
21	0109-332	1		T-Connection
22	0123-788	2	/P	Tie, Cable
23	0610-059	2		Valve, Check
24	0673-755	1		Vent, Fuel
25	0623-687	1		Nut
26	0670-710	1		Valve, Fuel Reserve
27	0623-693	1		Washer
28	0620-180	1		Sender, Fuel Level (770)
29	0624-312	5		Screw (770)
30	0670-474	1		Gasket, Fuel Level Sender (770)

 1998 TS 770 (98MTB-1998)
HANDLEBAR ASSEMBLY

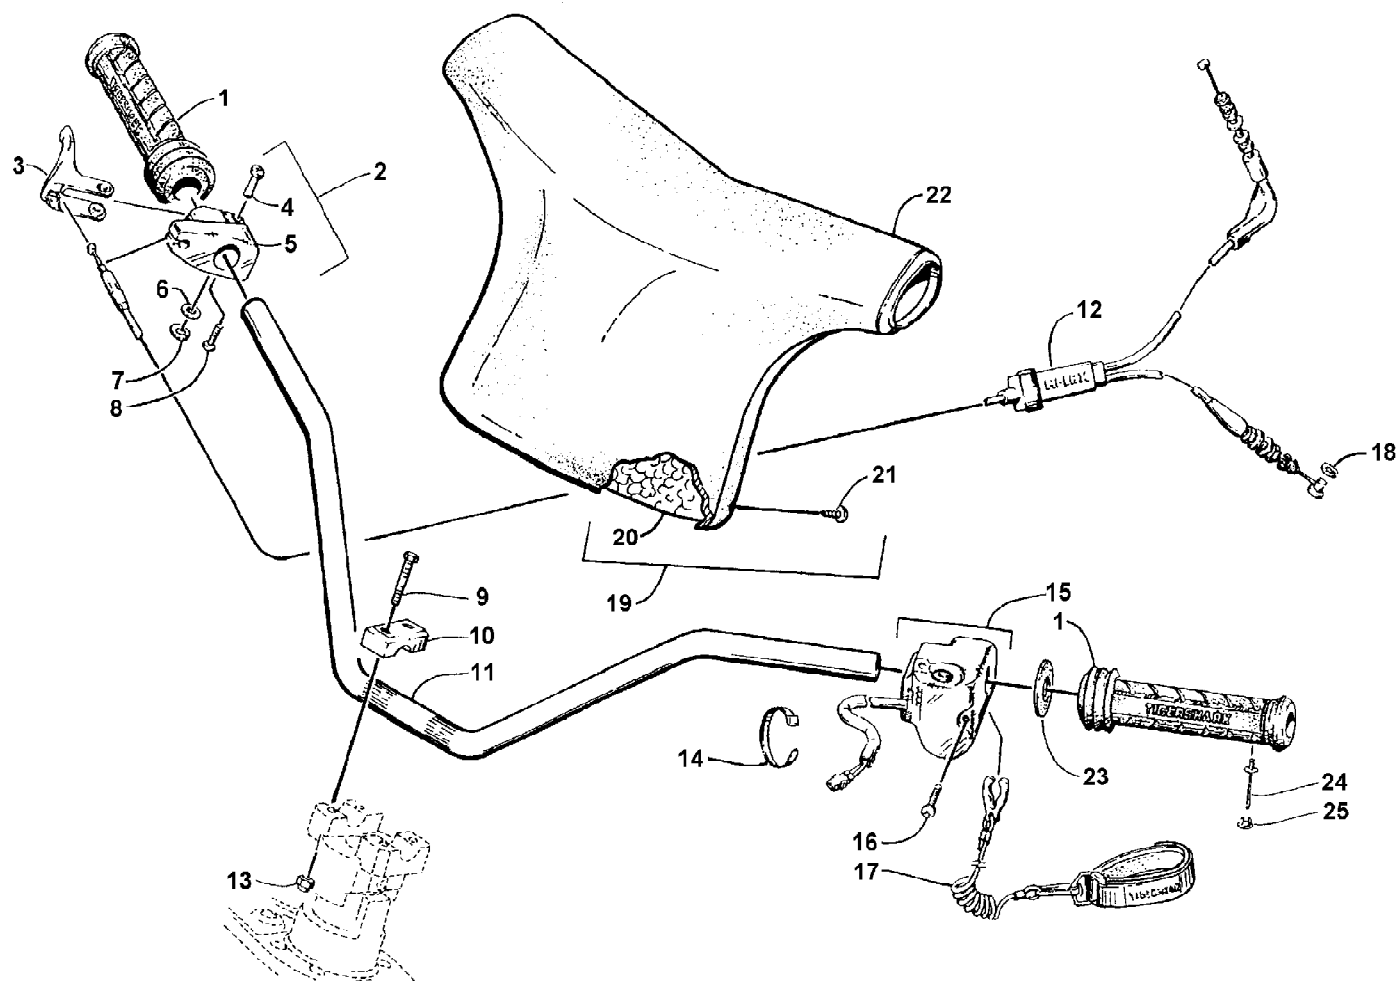

1998 TS 770 (98MTB-1998)
HANDLEBAR ASSEMBLY

Page 24 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0673-990	2	S	Grip, Handlebar
2	0773-018	1		Throttle, Assembly (inc. 3-8)
3	0605-234	1		Lever, Throttle
4	0605-236	1		Pin, Throttle Lever
5	0605-235	1		Housing, Throttle
6	0624-099	1		Washer
7	0624-113	1		C-Clip
8	0624-091	1		Screw, Machine
9	0624-278	4		Screw, Cap
10	0673-282	2		Cap, Steering Adjuster
11	1673-038	1		Handlebar
12	0687-093	1		Cable, Throttle
13	0624-250	4		Nut, Lock
14	0123-788	0	/P	Tie, Cable
15	0609-308	1		Switch, Start/Stop/Tether/Bilge
16	0624-148	3	F	Screw, Machine

1998 TS 770 (98MTB-1998)


Page 26 of 58

HATCH COVER AND STORAGE TRAY

Ref #	Part Number	Qty	S/P/F	Description
1	0673-882	1		Latch, Hatch Cover
2	1673-492	1		Cover, Hatch (770)
3	0624-004	2		Washer
4	0624-092	2		Screw, Cap
5	1673-567	1	/P	Seal, Hatch
6	0623-685	5		Rivet
7	0773-217	1		Tiedown, Tool Kit
8	1673-046	1		Tube, Fire Extinguisher
9	8060-633	6	/P	Rivet (770)
10	0406-208	1		Lid, Storage Cover (770)
11	1673-146	1		Seal (770)
12	0406-205	1	/P	Ring, Mount (770)
13	0678-399	1		Kit, Tool
14	1673-566	1	/P	Tray, Storage
15	0773-926	1		Chain, Cover (770)
16	0673-973	1		Seal, Storage Cover (770)
17	1673-155	1		Gasket, Mounting - Storage Container (770)
18	0673-652	1	/P	Container, Storage (770)
19	0610-358	2		Hose, Air Intake
20	0624-200	2		Washer, Lock
21	0623-603	6		Washer, Backup (770)
22	0614-431	1		Decal, Storage Tray
23	0624-115	3		Washer, Lock
24	0624-432	3		Screw, Self-Tapping
25	1673-575	2		Fitting
26	0670-546	2		Gasket
27	0670-548	2		Nut

1998 TS 770 (98MTB-1998)
HULL AND RELATED PARTS ASSEMBLY

 Page 27 of 58

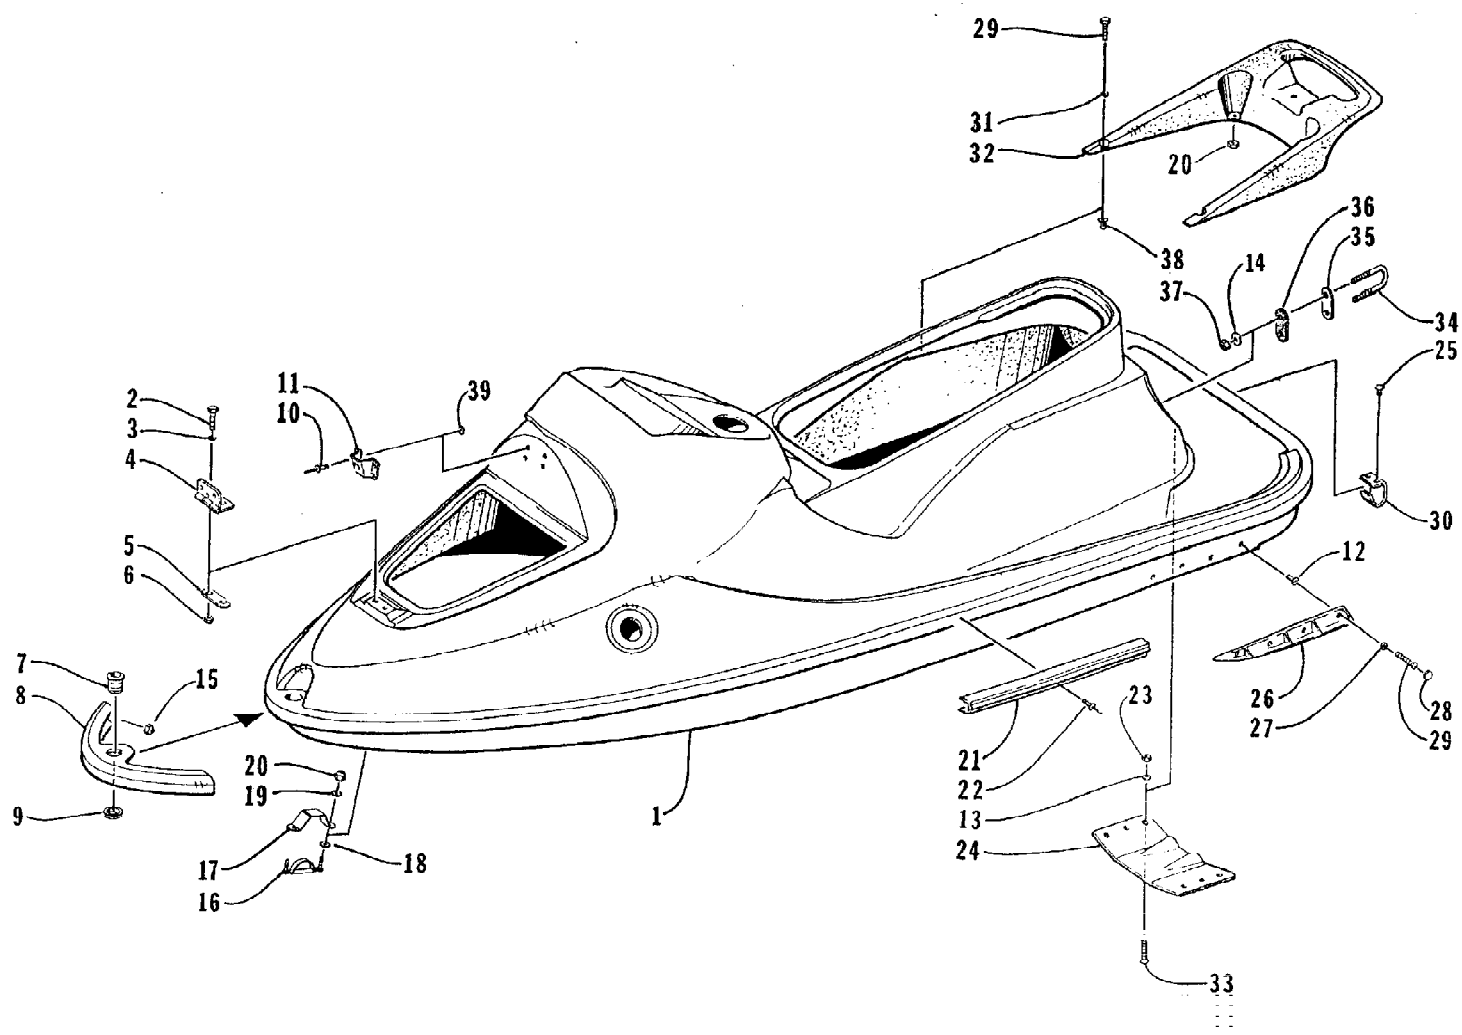

1998 TS 770 (98MTB-1998)


Page 28 of 58

HULL AND RELATED PARTS ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0773-929	1		Hull/Deck - Assembly (770)
2	0624-112	2	/P	Screw, Cap
3	0624-022	2		Washer
4	1673-032	1		Hinge, Hatch
5	1673-031	1		Plate, Backing - Hinge
6	0624-250	2		Nut, Lock
7	1673-479	1		Bushing, Boweye
8	1673-489	1		Nose, Cone (770)
9	0623-753	1	/P	Nut, Boweye Bushing
10	0624-072	4		Rivet
11	1673-034	1		Strike, Hatch Latch
12	0623-737	8		Insert, Brass
13	0624-182	6		Washer
14	0624-159	2		Washer
15	0624-005	2	/P	Nut, Lock
16	0773-516	1	/P	Boweye
17	0673-897	1		Strap, Reinforcement
18	0624-299	2		Washer, Sealing
19	0624-247	2		Washer
20	0624-089	4		Nut, Lock
21	1673-490	1		Rail, Rub - Starboard (770)
21	1673-491	1		Rail, Rub - Port (770)
22	0624-030	48		Rivet
23	0624-250	6		Nut
24	0673-814	1		Plate, Ride
25	0623-748	2		Clip (770)
26	1673-474	1		Sponson - Starboard
26	1673-475	1		Sponson - Port
27	0124-065	8		Washer, Snap Cap
28	1673-057	8	S	Cover, Snap Cap
29	0624-271	12		Screw, Cap
30	1673-488	1		Cover, Rub Rail (770)
31	0624-182	4		Washer, Lock
32	1673-498	1		Handle, Grab (770)
33	0624-186	6		Screw, Machine
34	0624-394	1	/P	U-Bolt
35	0673-656	1		Plate, Backing - Eyehook
36	1673-083	1		Gasket, Eyehook
37	0624-258	2		Nut, Lock
38	0623-737	2		Insert, Brass
39	0624-004	4		Washer, Backup

1998 TS 770 (98MTB-1998)
IGNITION COIL

 Page 29 of 58

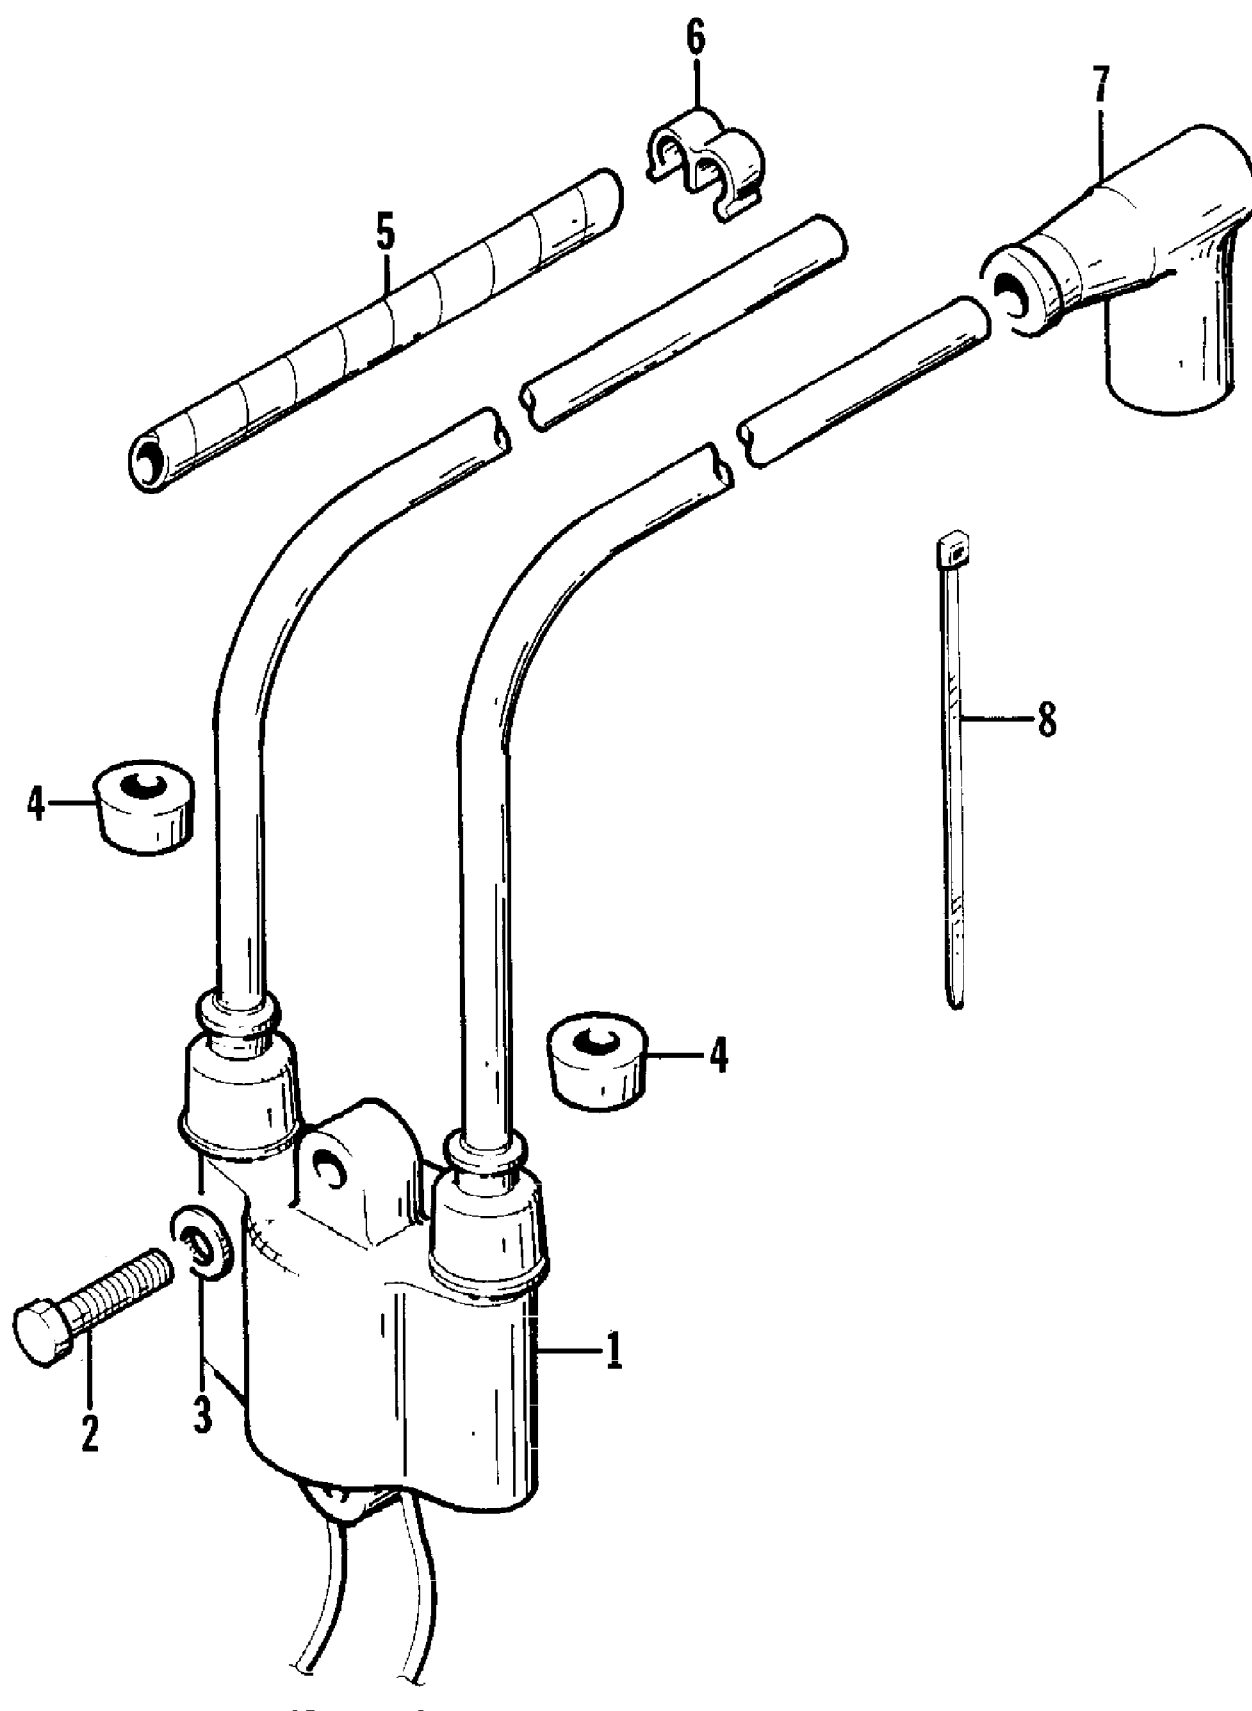


1998 TS 770 (98MTB-1998)
IGNITION COIL

Page 30 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-532	1		Coil Assembly, Ignition
2	3008-402	2		Screw, Cap (770)
3	3003-023	2	/P	Washer
4	3008-334	2	/P	Grommet
5	3008-129	2	/P	Protector, Lead Wire
6	3008-045	1		Clip
7	3003-737	2	S	Cap Assembly, Spark Plug
8	3003-787	2		Tie, Cable

1998 TS 770 (98MTB-1998)
IMPELLER DRIVE ASSEMBLY

 Page 31 of 58

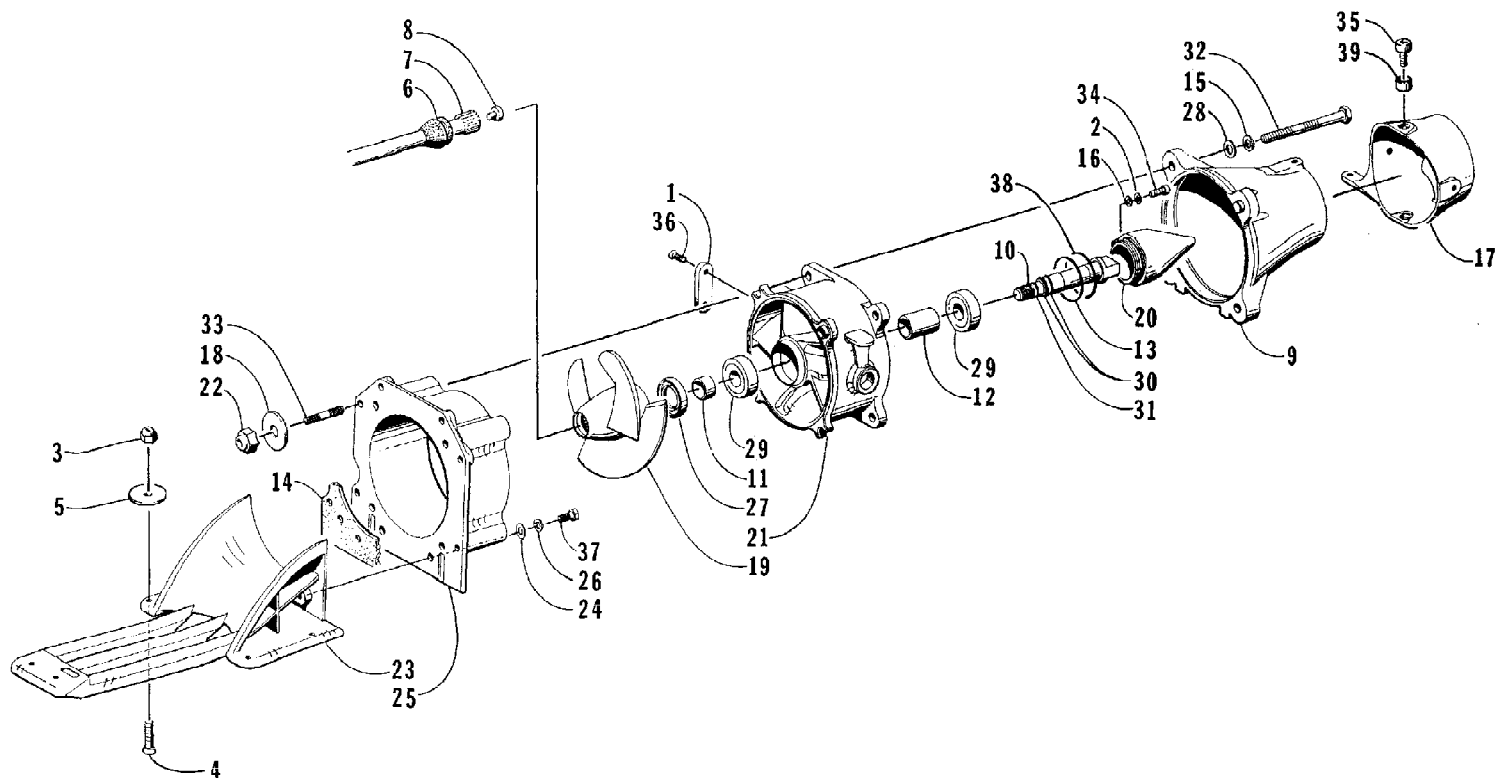


1998 TS 770 (98MTB-1998)
IMPELLER DRIVE ASSEMBLY

Page 32 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0624-084	1		Anode, Zinc
2	0624-036	2		Washer, Lock
3	0624-250	6		Nut, Lock
4	0624-186	6		Screw, Machine
5	0624-182	6		Washer
6	0675-187	1		Grommet, Seal
7	0675-173	1		Driveshaft
8	0673-618	1	/P	Bumper, Driveshaft
9	0675-133	1		Venturi
10	0675-163	1	S	Shaft, Rear - Impeller
11	0675-085	1		Spacer, Impeller
12	0675-084	1		Spacer, Bearing
14	0675-107	1		Gasket, Pump
15	0624-012	4		Washer, Lock
16	0624-022	2		Washer
17	0675-134	1		Nozzle, Steering
18	0624-125	6	/P	Washer
19	0675-233	1		Impeller (770)
20	0675-149	1	S	Endcap, Stator (770)
21	0675-137	1		Stator (770)
22	0624-090	6		Nut, Lock
23	0675-019	1	S	Grate, Inlet
24	0624-028	2		Washer
25	0775-065	1		Wear Ring
26	0624-027	2		Washer, Lock
27	0675-119	1	S	Seal
28	0624-008	4		Washer
29	0673-609	2		Bearing, Stator
30	0673-608	2		O-Ring
31	0673-607	1		O-Ring
32	0624-386	4		Screw, Cap
33	0624-417	6		Stud
34	0624-314	2		Screw, Cap
35	0624-174	2		Screw, Cap
36	0624-184	2		Screw, Machine
37	0624-026	2		Screw, Cap
38	0675-078	1		O-Ring
39	1673-121	2	/P	Bushing

1998 TS 770 (98MTB-1998)
INSTRUMENT ASSEMBLY

 Page 33 of 58

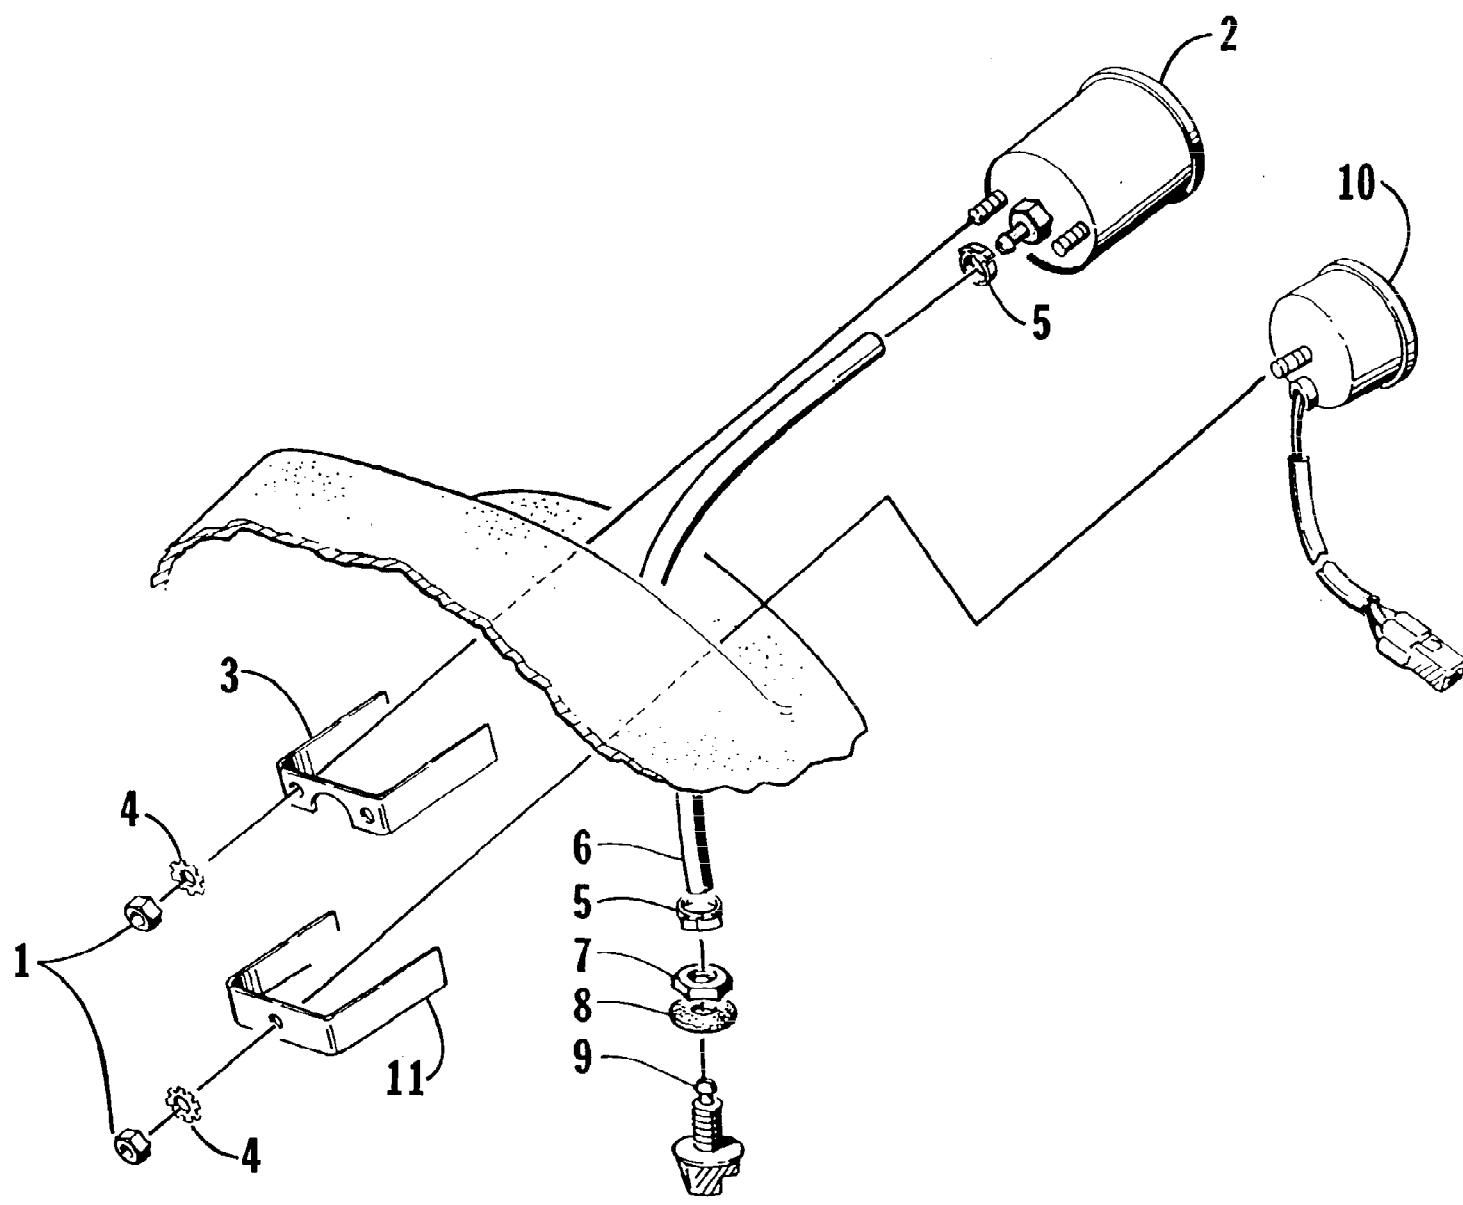


1998 TS 770 (98MTB-1998)
INSTRUMENT ASSEMBLY

Page 34 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0623-701	3		Nut
2	0620-189	1		Speedometer
3	0620-199	1		Backclamp, Speedometer
4	0623-702	3		Washer, Star
5	0624-323	2		Clamp
6	0673-809	0	/P	Hose
7	0673-348	1		Nut, Pitot
8	0673-349	1		Seal, Pitot
9	0673-362	1	S	Pitot
10	0620-172	1		Gauge, Fuel
11	0620-173	1		Backclamp, Fuel Gauge/Trim Gauge

1998 TS 770 (98MTB-1998)
INTAKE ASSEMBLY

 Page 35 of 58

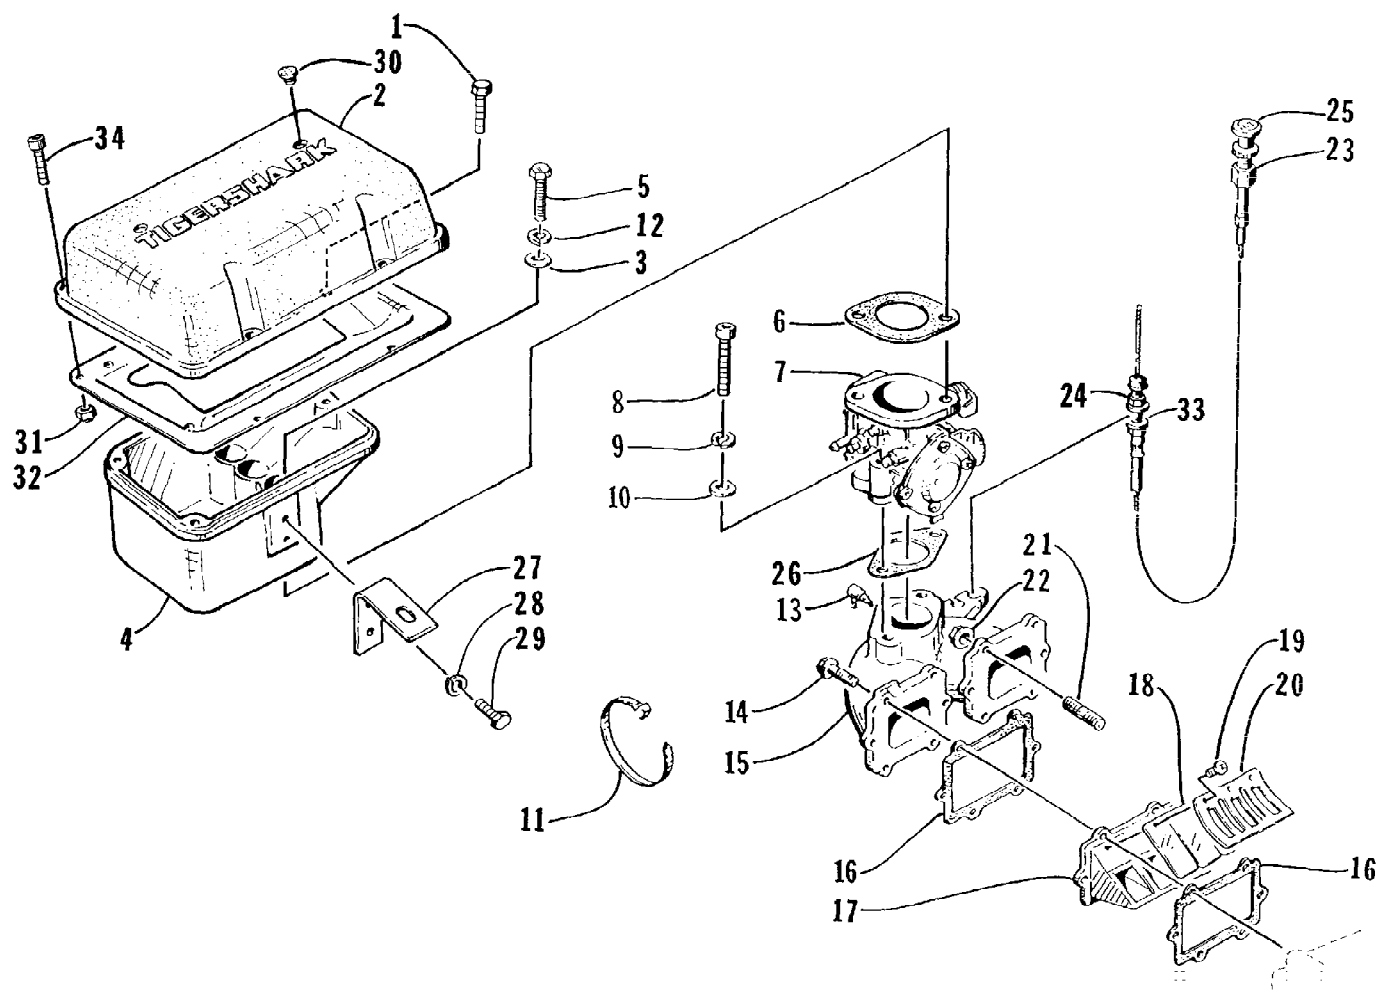


1998 TS 770 (98MTB-1998)
INTAKE ASSEMBLY

Page 36 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0624-442	4		Screw, Cap
2	1673-255	1		Cover, Sound Attenuator
3	0624-022	2		Washer
4	1673-434	1		Base, Sound Attenuator
5	0624-112	2	/P	Screw, Cap
6	1673-398	1		Gasket, Sound Attenuator
7	0670-724	1		Carburetor
8	0624-338	2	/P	Screw, Cap
9	0624-027	2		Washer, Lock
10	0624-028	2		Washer
11	0123-811	0		Tie, Cable
12	0624-036	2		Washer, Lock
13	3008-087	2	S	Fitting, Injection - Oil
14	3008-213	8	/P	Screw, Cap
15	0670-732	1		Manifold, Intake
16	3008-076	4	S	Gasket, Reed Valve
17	3008-578	2		Reed Valve Assembly (inc. 18-20)
18	3008-574	4		Valve, Reed
19	3004-210	12		Screw, Cap
20	3008-074	4		Stopper, Reed Valve
21	3008-370	4	/P	Stud
22	3008-214	4		Nut
23	0687-051	1	/P	Nut
24	0624-057	2		Nut
25	0687-077	1	/P	Cable, Choke
26	1673-090	1		Gasket, Intake
27	1673-429	1		Brace, Sound Attenuator
28	0624-200	2		Washer, Lock
29	0624-155	2		Screw, Cap
30	1606-038	1		Plug
31	0624-443	4		Nut, Lock
32	0670-794	1	/P	Plate, Cover
33	0624-022	2		Washer
34	0624-442	4		Screw, Cap

1998 TS 770 (98MTB-1998)
MAGNETO

 Page 37 of 58

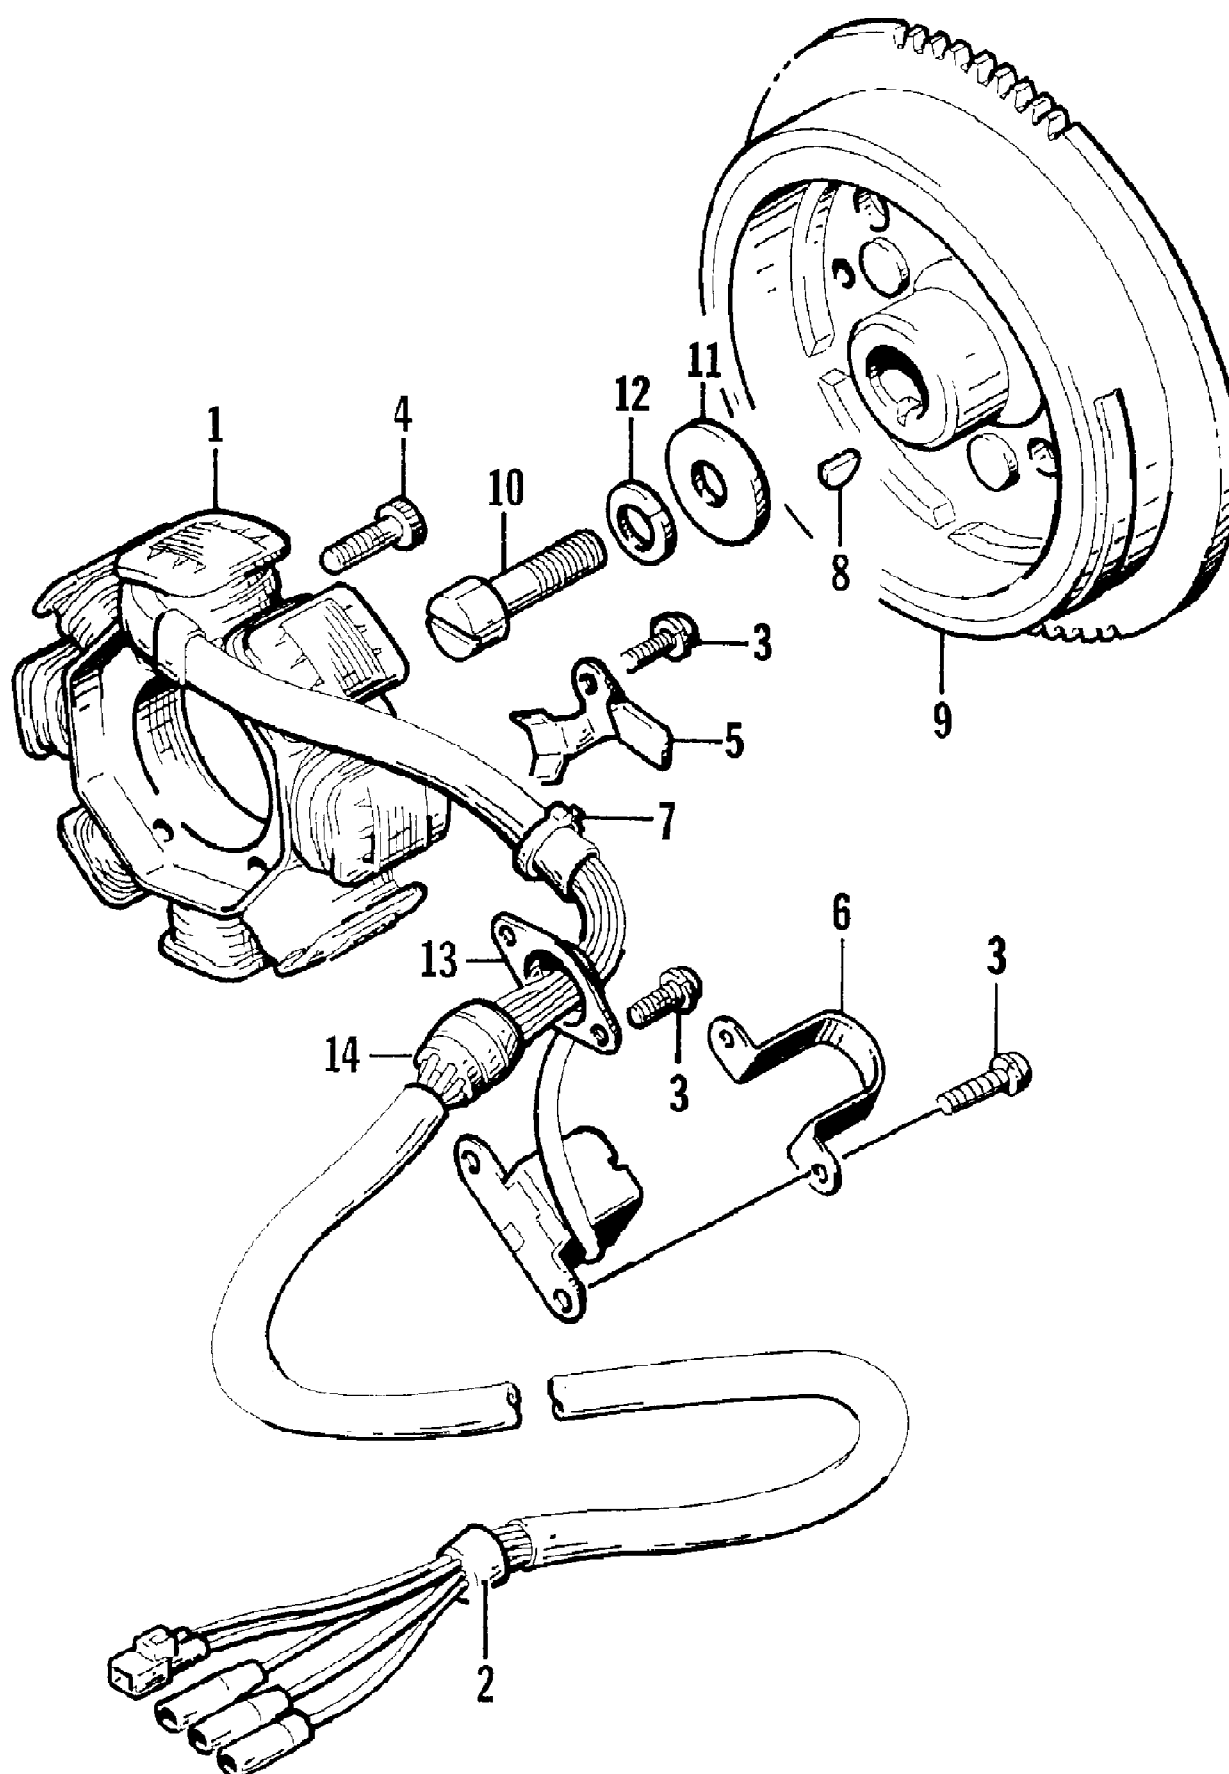


1998 TS 770 (98MTB-1998)
MAGNETO

Page 38 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-564	1	/P	Stator
2	3008-362	1	/P	Grommet
3	3004-706	5	S/P	Screw, Cap
4	3004-484	4	S	Screw, Cap
5	3008-109	1		Holder
6	3008-331	1	/P	Clamp
7	0693-275	1		Clamp (770)
8	3004-540	1	/P	Key
9	3008-602	1	/P	Flywheel
10	3008-388	1	S	Screw, Cap
11	3008-017	1		Washer
12	3004-362	1	S/P	Washer, Lock
13	3008-110	1		Holder, Grommet
14	3008-118	1		Grommet

1998 TS 770 (98MTB-1998)
MAGNETO CASE

 Page 39 of 58

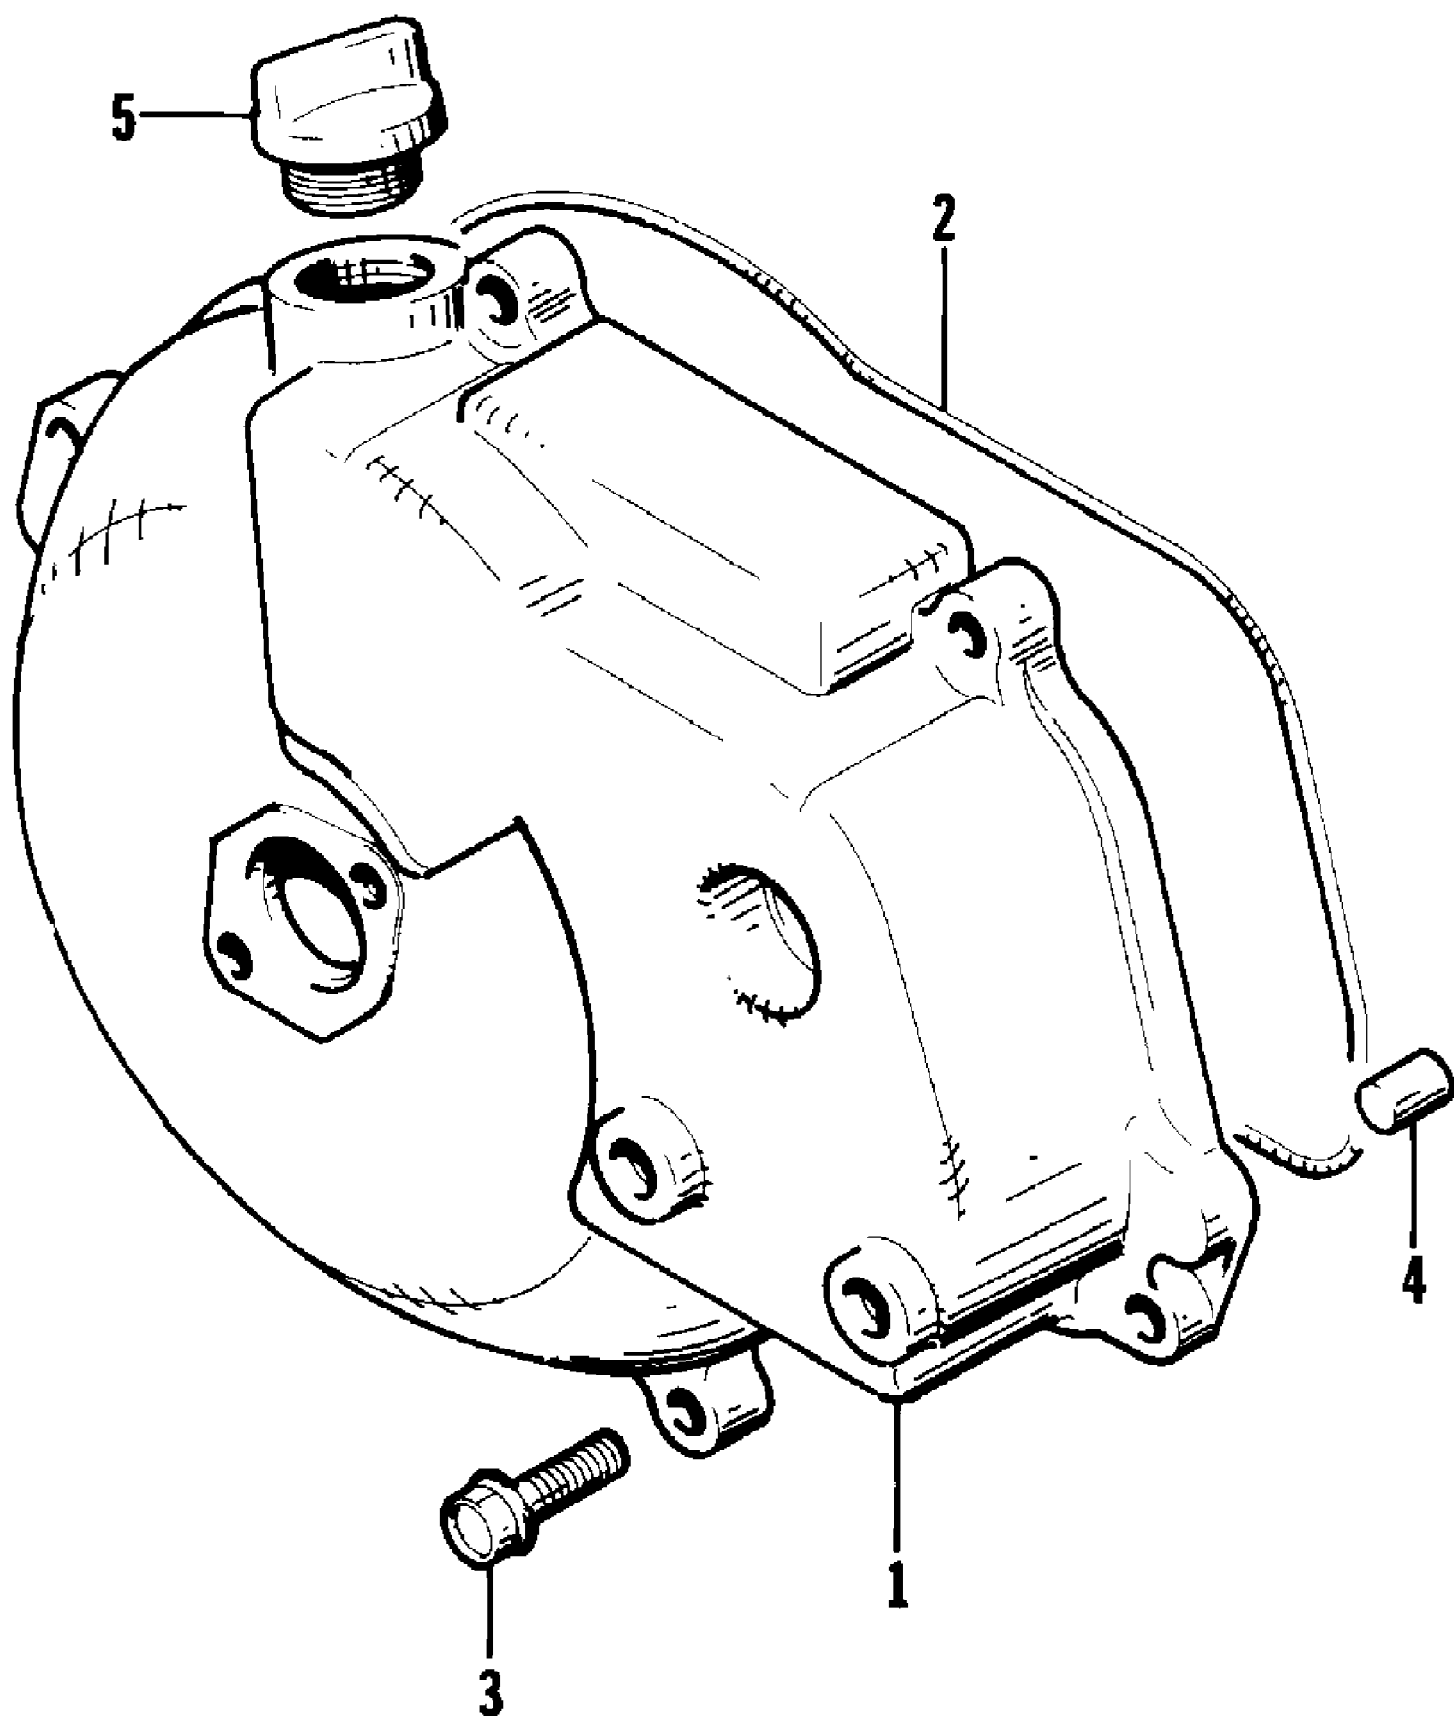


1998 TS 770 (98MTB-1998)
MAGNETO CASE

Page 40 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-238	1	/P	Case, Magneto
2	3008-053	1		O-Ring
3	3008-213	6	/P	Screw, Cap
4	3008-146	2		Pin
5	3008-023	1		Plug

1998 TS 770 (98MTB-1998)
OIL PUMP

 Page 41 of 58

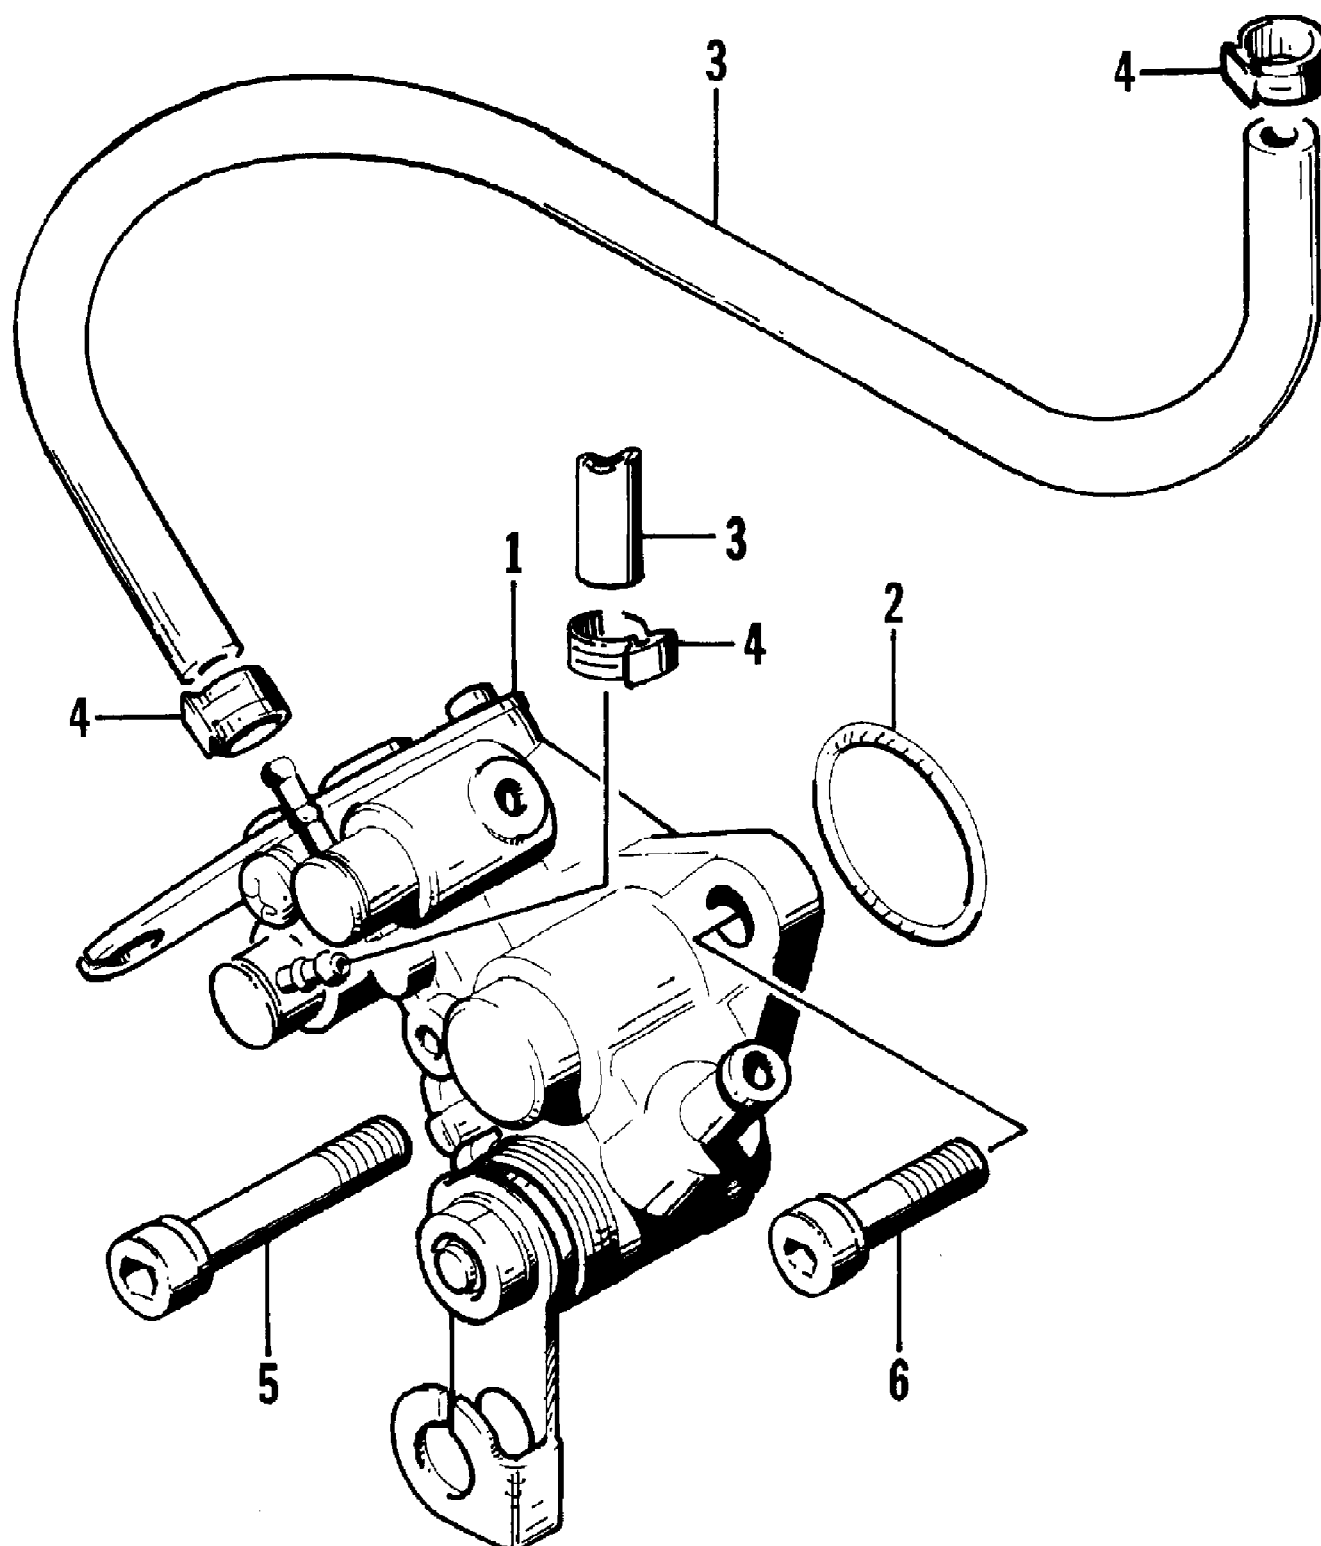


1998 TS 770 (98MTB-1998)
OIL PUMP

Page 42 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-435	1		Oil Pump Assembly
2	3008-030	1		O-Ring
3	3008-035	2	/P	Hose
4	3008-037	4	/P	Clamp
5	3008-242	1		Screw, Cap
6	3008-243	1		Screw, Cap

1998 TS 770 (98MTB-1998)
OIL TANK ASSEMBLY

 Page 43 of 58

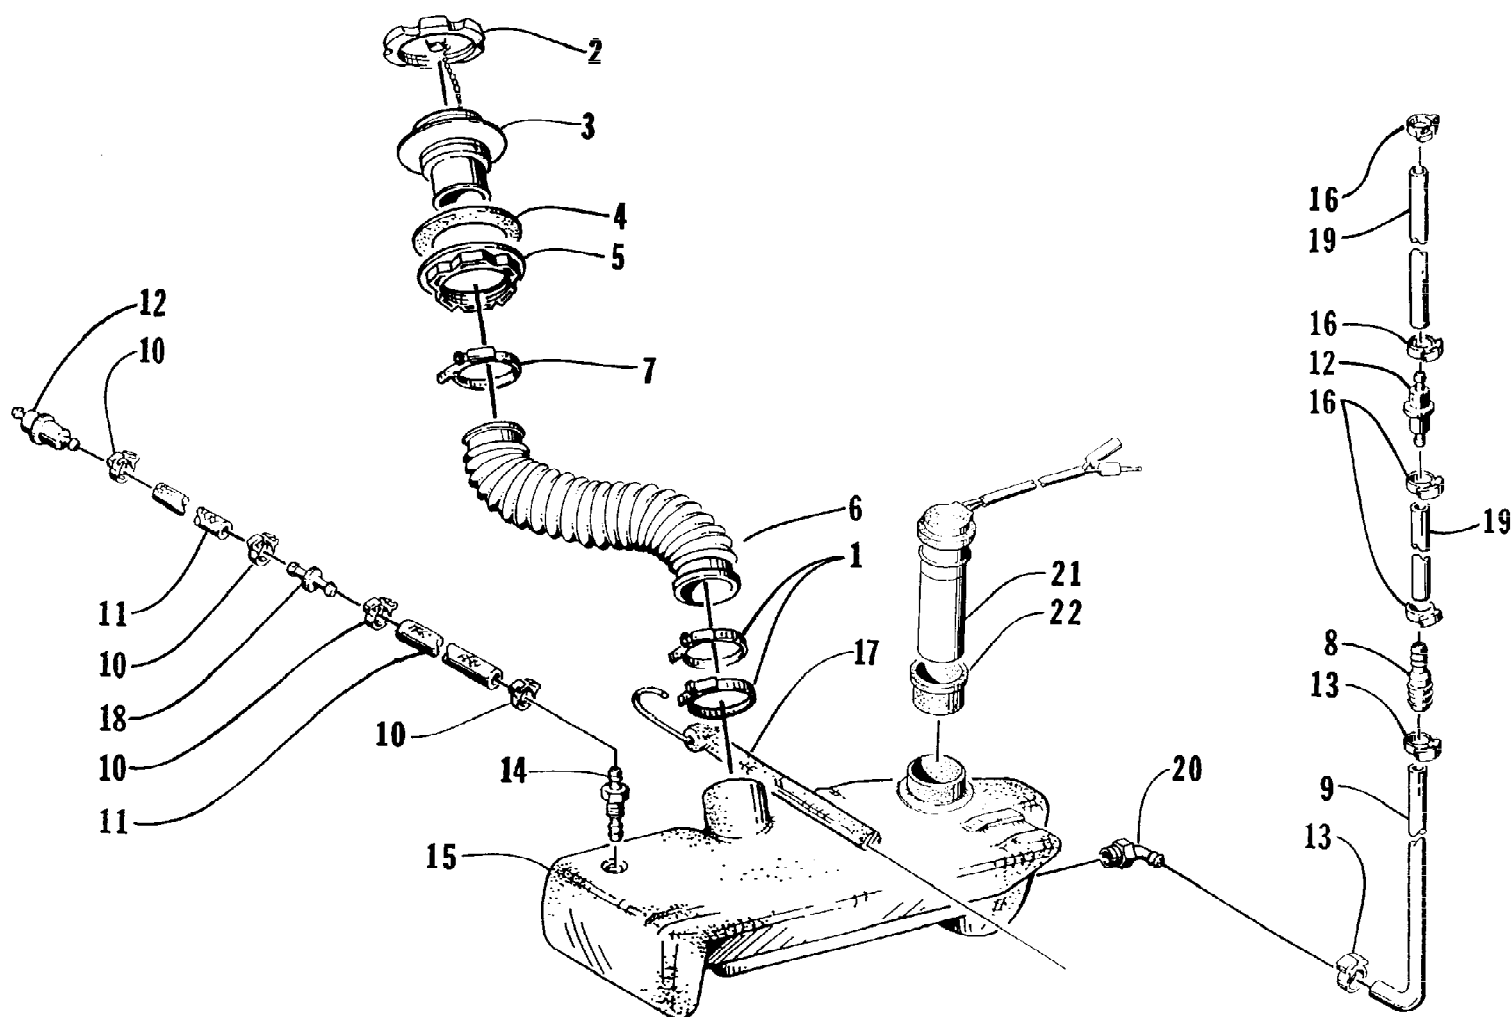

1998 TS 770 (98MTB-1998)
OIL TANK ASSEMBLY

Page 44 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0624-037	2		Clamp, Hose
2	0670-394	1		Cap
3	0670-428	1	S	Neck, Filler
4	0670-688	1		Seal, Filler Neck
5	0670-548	1		Nut, Filler Neck
6	0670-801	1		Hose, Filler
7	0624-390	1		Clamp, Hose
8	0673-985	1		Union, Coupler
9	0610-263	0		Hose, Oil
10	0624-120	4		Clamp, Hose
11	0710-425	0	/P	Hose
12	0510-335	2	/P	Filter, Fuel
13	0623-646	2		Clamp, Hose
14	0670-762	1		Outlet, Tank
15	0670-720	1	/P	Tank, Oil (770)
16	0623-063	4		Clamp
17	0773-819	1	S	Tie-Down Assembly
18	0610-059	1		Valve, Check
19	0610-016	0	/P	Hose, Oil Line - 25 ft
20	0673-984	1		Fitting
21	0620-181	1	S	Sender, Oil Level (770)
22	0609-237	1		Seal, Grommet - Oil Level Sender (770)

No
Diagram
Available

Parts List
Only


1998 TS 770 (98MTB-1998)
RELATED ITEMS

Page 46 of 58

Ref #	Part Number	Qty	S/P/F	Description
	0678-132	0	S	Anchor Bag
	0678-051	0	S	Anchor w/Float and Mooring Rope
	0678-063	0		Battery Charger Kit
	0678-363	0	/P	Beach Dolly
	0678-370	0		Bilge Cleaner
	0678-459	0	S	Cover, Premium
	0673-093	0	S	Fire Extinguisher
	0678-274	0		Flush Kit
	0678-469	0		Fold-Up Sharkstand
	0678-348	0		Grease Gun Kit
	0678-137	0		Grips, Handlebar - Purple
	0678-138	0		Grips, Handlebar - Teal
	0678-287	0		Grips, Handlebar - Yellow
	0678-252	0	/P	Handlebar Bag - Red/Purple
	0678-362	0		Hourmeter
	0678-064	0		Horn Kit
	0678-390	0		Lanyard - Black
	0678-391	0		Lanyard - Purple
	0678-364	0	/P	Lanyard - Red
	0678-392	0		Lanyard - Yellow
	0678-180	0		Lift Harness
	2255-866	0		Manual, Operator's
	2255-973	0		Manual, Illustrated Parts
	2255-947	0		Manual, Service
	0678-507	0		Mirror Kit - Sea Green
	0678-294	0		Mirror Kit - White
	0678-358	0		Mooring Rope - Black
	0678-357	0		Mooring Rope - Dark Blue
	0678-356	0		Mooring Rope - Lavender
	0678-352	0	S	Mooring Rope - Purple
	0678-354	0		Mooring Rope - Red
	0678-355	0		Mooring Rope - Silver
	0678-353	0		Mooring Rope - Teal
	0678-189	0	/P	Nylon Rope - Purple
	0678-035	0		Paint, Touch-Up - White
	0678-185	0		Plug Caddy - Purple
	0678-149	0		Plug Caddy - Rivet-On
	0678-263	0		Registration Letters - Yellow/Purple
	0678-246	0		Sport Compass
	0678-135	0		Start/Stop Switch Lock
	0678-374	0		Stortech Plugs
	0678-026	0		Tigershark Cleaner
	0678-025	0		Tigershark Wax
	0678-105	0		Tool Kit
	0678-393	0		Waterproof Bag
	0678-303	0		Waterproof Storage Case
	0678-465	0		Footpad Kit
	0678-178	0		Registration Letters - Purple/Teal
	0678-471	0		PWC Lift
	0678-269	0		Hydro Trailer

1998 TS 770 (98MTB-1998)
SEAT ASSEMBLY

 Page 47 of 58

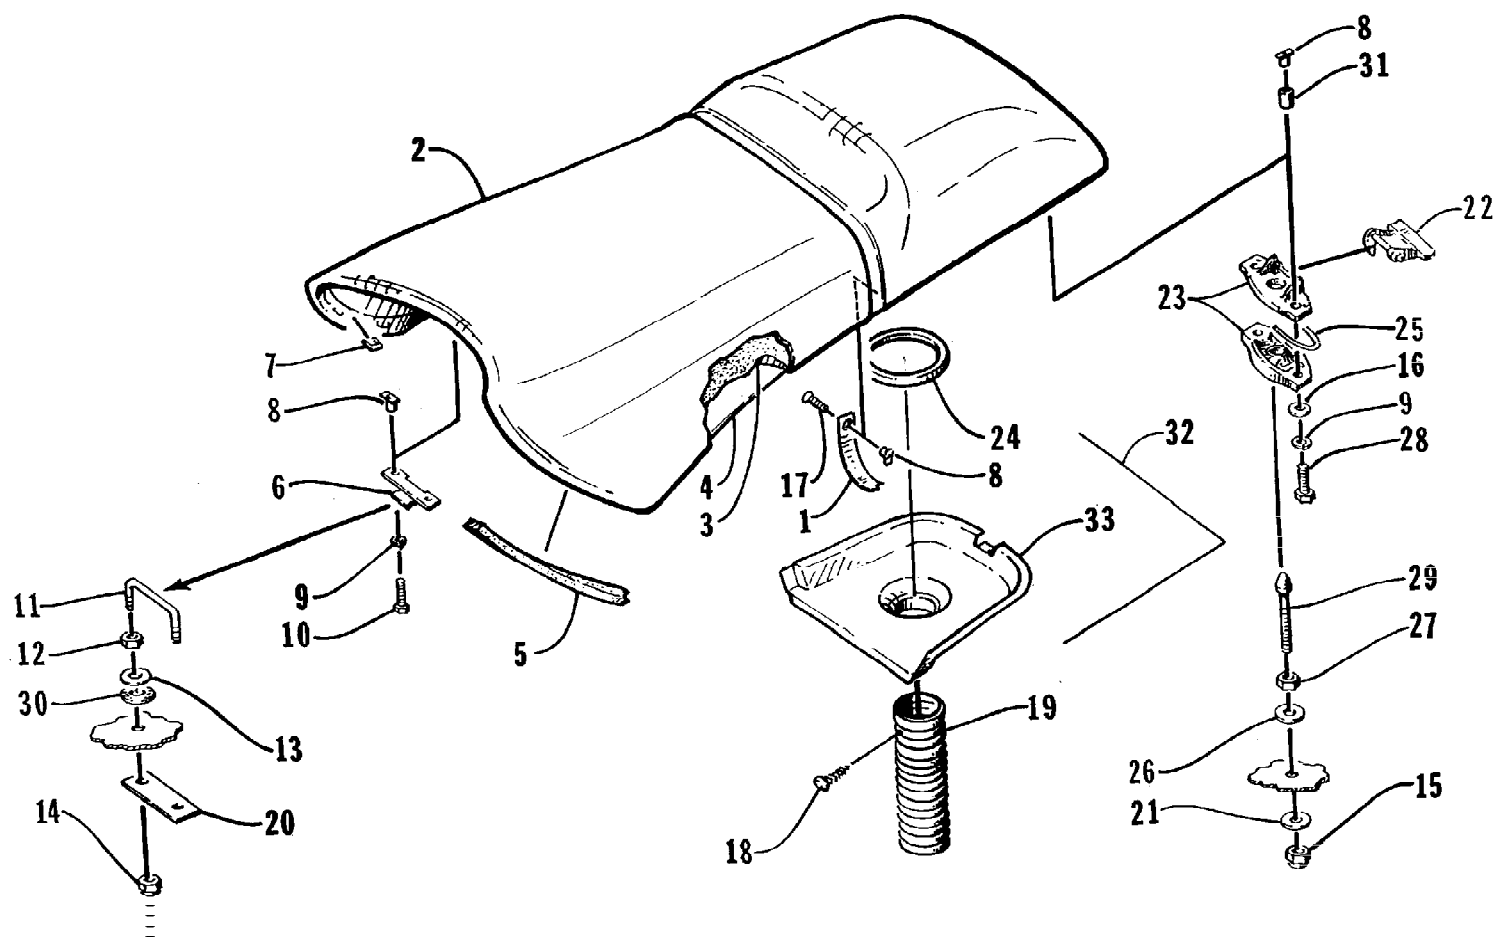


1998 TS 770 (98MTB-1998)
SEAT ASSEMBLY

Page 48 of 58

Ref #	Part Number	Qty	S/P/F	Description
	773-883	0		Complete Seat Assembly (770)
1	1673-487	1		Strap, Seat (770)
2	0773-931	1		Cover, Seat w/Silkscreen (770)
3	0773-314	1		Foam, Seat
4	1673-039	1		Base, Seat
5	1673-396	1		Seal, Seat Base
6	0673-668	1		Catch, Seat
7	0624-263	0		Staple
8	0624-396	6		Nut
9	0624-036	4		Washer, Lock
10	0624-046	2		Screw, Cap
11	0624-262	1	F	U-Bolt, Seat
12	0624-061	2	F	Nut
13	0624-125	2	/P/F	Washer
14	0624-090	2	F	Nut, Lock
15	0624-009	1	F	Nut, Lock
16	0624-022	2		Washer
17	0624-272	2		Screw, Machine
18	0623-585	3	F	Clip, Retaining
19	0610-261	1	F	Hose, Air Exhaust
20	0673-752	1	F	Plate, Backing
21	0624-159	1	F	Washer
22	0673-026	1		Lever, Release - Seat Latch
23	0773-941	1	/P	Latch Housing Assembly - Seat
24	1673-397	1	F	Seal, Vent - Seat-Base
25	0673-023	1		Clip, Retaining
26	0624-013	1	F	Washer
27	0624-047	1	F	Nut
28	0624-302	2		Screw, Cap
29	1673-383	1	/P/F	Stud, Latch - Seat
30	0624-126	2	F	Washer, Rubber
31	0623-698	2		Spacer, Seat Latch
32	0	1	F	Vent, Seat - Assembly (inc. 18, 19, 24, & 33)
33	1673-203	1	F	Vent, Seatbase

1998 TS 770 (98MTB-1998)
SENSOR ASSEMBLY

 Page 49 of 58

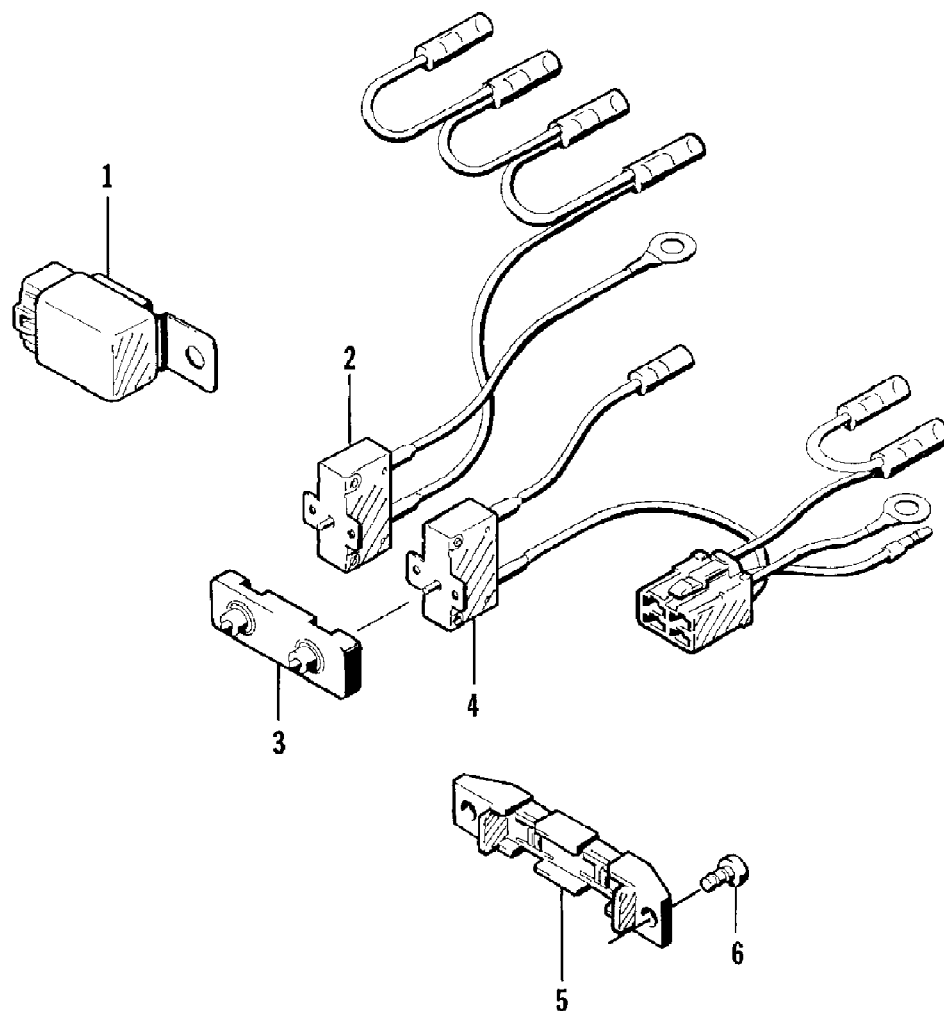


1998 TS 770 (98MTB-1998)
SENSOR ASSEMBLY

Page 50 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-297	1	/P	Relay - Assembly
2	3008-348	1	S	Protector, Circuit Charge
3	3008-351	1		Cap, Circuit Protector
4	3008-350	1	/P	Protector, Circuit Load
5	3008-294	1	/P	Holder, Circuit Protector
6	3008-313	2		Screw, Cap

1998 TS 770 (98MTB-1998) STARTER MOTOR

 Page 51 of 58

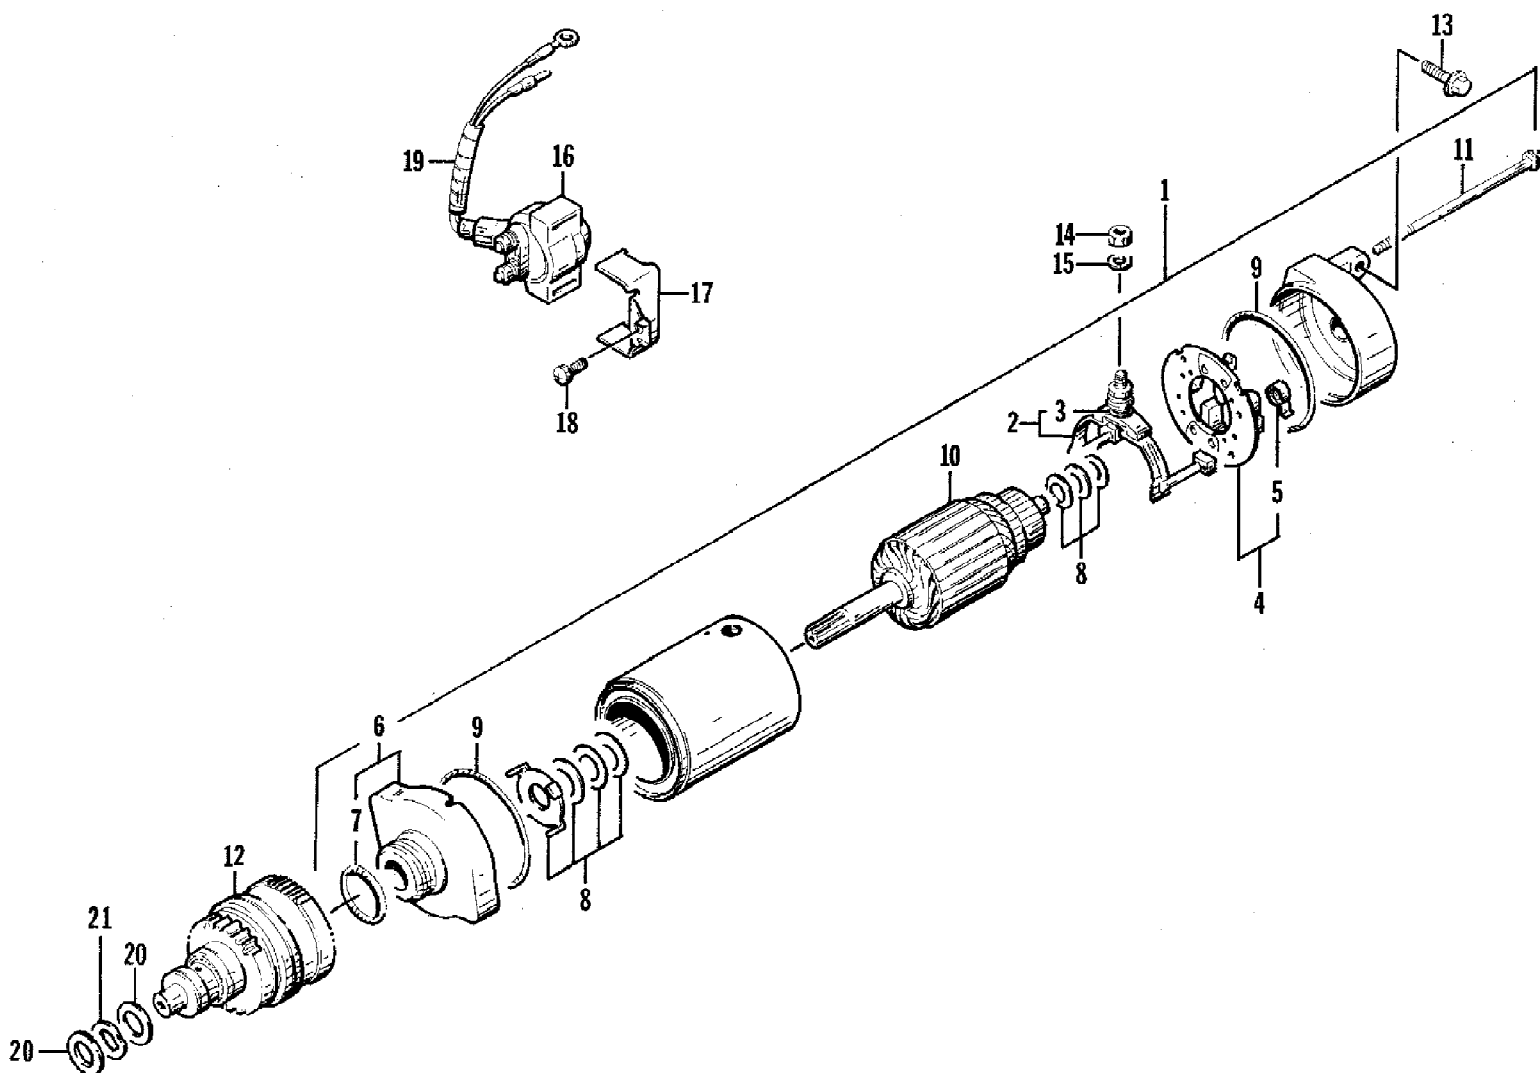


1998 TS 770 (98MTB-1998)
STARTER MOTOR

Page 52 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-462	1		Starter Motor Assembly (inc. 2-11)
2	3008-094	1	/P	Terminal Set, Brush (inc. 3)
3	3008-164	1		O-Ring
4	3008-095	1	/P	Holder Set, Brush (inc. 5)
5	3008-096	4		Spring, Brush
6	3008-328	1	/P	Front Bracket Assembly (inc. 7)
7	3008-363	1	/P	O-Ring
8	3008-099	2		Washer Set
9	3008-553	2	/P	O-Ring
10	3008-103	1		Armature
11	3008-102	2		Cap, Screw
12	3008-387	1	/P	Pinion Assembly
13	3008-463	2		Screw, Cap
14	3008-014	1		Nut
15	3008-020	1		Washer
16	3008-165	1	/P	Relay
17	3008-140	1		Bracket
18	3008-313	1		Screw, Cap
19	3008-135	1	S	Tube
20	3008-480	2	/P	Washer
21	3008-537	1		Washer

1998 TS 770 (98MTB-1998)
STEERING POST ASSEMBLY

 Page 53 of 58

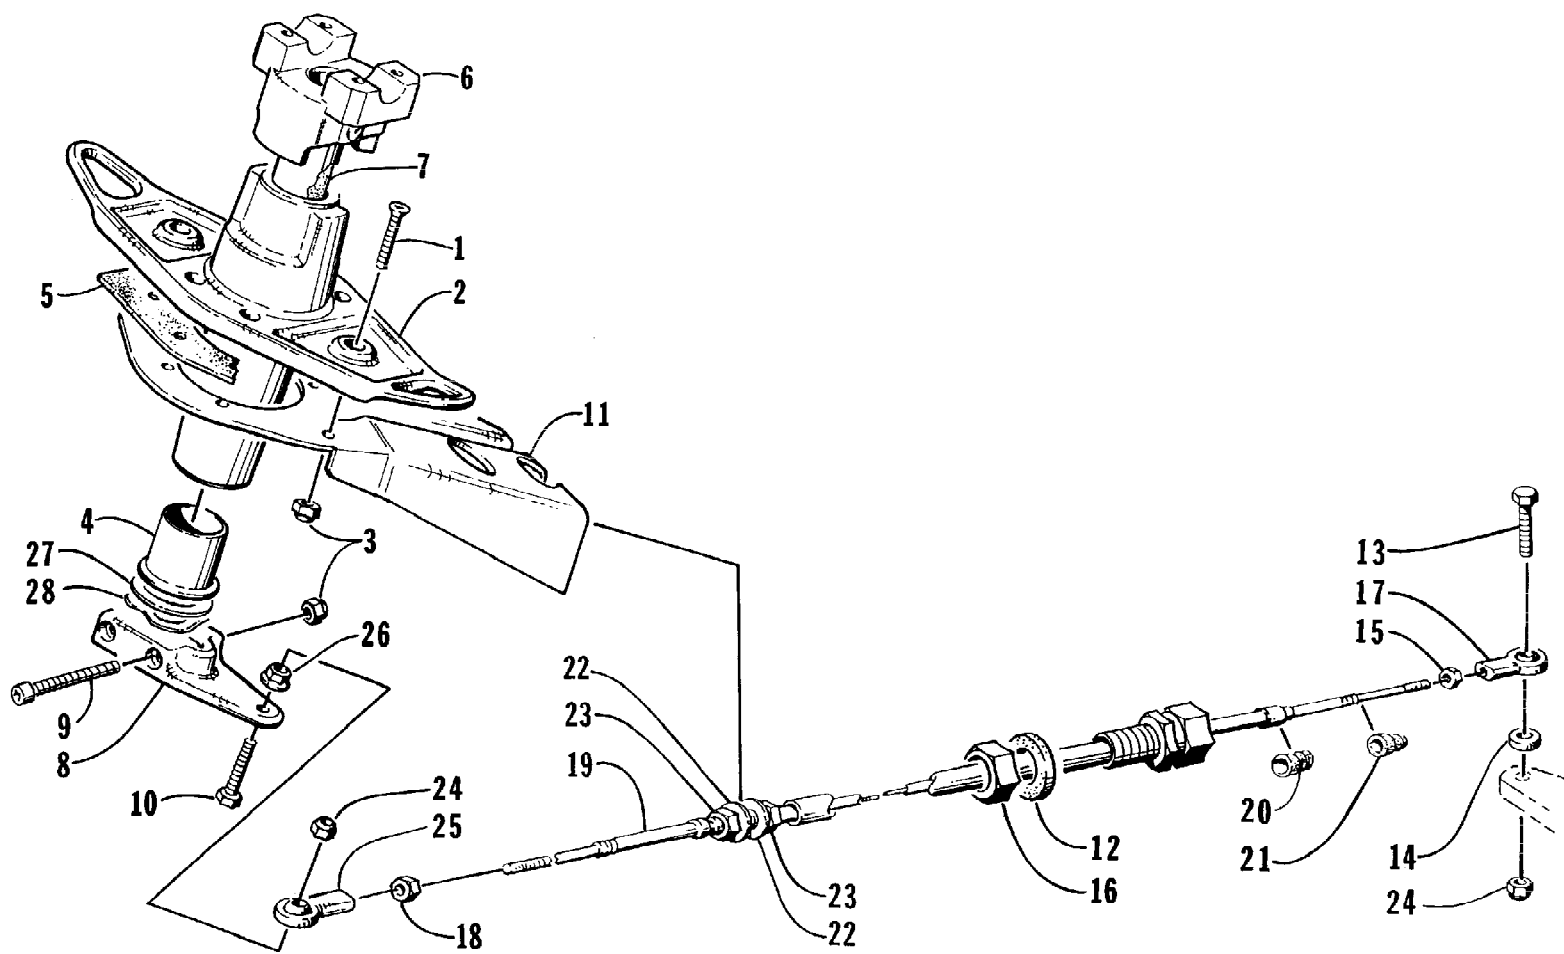


1998 TS 770 (98MTB-1998)
STEERING POST ASSEMBLY

Page 54 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0624-464	6		Screw, Machine
2	0605-046	1		Housing, Steering
3	0624-250	8		Nut, Lock
4	0605-055	2		Bearing, Flange
5	0605-391	1		Seal
6	0605-377	1		Post, Steering
7	0717-052	0	/P	Foam, Neoprene Tape
8	0605-072	1		Arm, Steering
9	0624-456	2	/P	Screw, Cap
10	0624-476	1		Screw, Cap
11	0605-379	1		Bracket, Steering Cable
12	1673-193	1		Gasket, Cable - Foam
13	0624-290	1		Screw, Cap
14	0624-381	1		Spacer
15	0624-279	1		Nut
16	0623-669	1		Nut
17	0673-932	1		End, Steering Cable
18	0624-107	1		Nut
19	1673-568	1		Cable, Steering
20	0612-364	1		Cover, Thread Cap - Steering Cable
21	0612-363	1		Seal, Rod
22	0624-106	2		Washer
23	0624-105	2		Nut
24	0624-089	2		Nut, Lock
25	0673-931	1		End, Steering Cable
26	0624-233	1		Nut, Flange
27	0624-468	2		Washer
28	0624-469	2		Washer, Wave

1998 TS 770 (98MTB-1998)
WATER FILTER ASSEMBLY

 Page 55 of 58

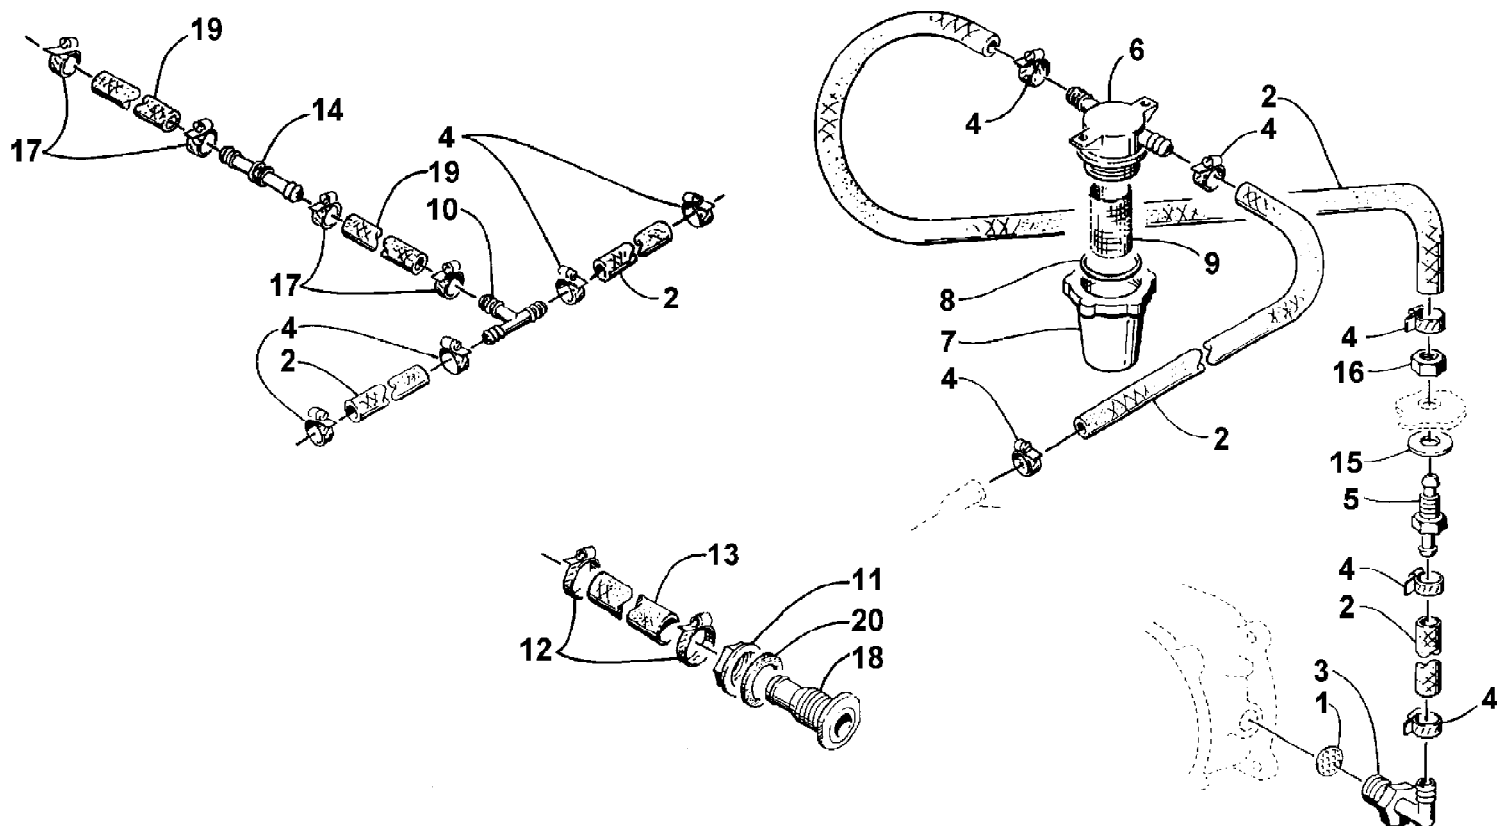


1998 TS 770 (98MTB-1998)
WATER FILTER ASSEMBLY

Page 56 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	0675-042	1		Screen
2	0710-190	0		Hose, Water - 25 ft
3	1673-158	1		Fitting, Elbow
4	0624-016	10		Clamp
5	0676-015	1		Fitting
6	1673-161	1		Filter, Water Assembly (inc. 7-9)
7	0673-669	1		Cover
8	0673-670	1		O-Ring
9	0673-671	1		Screen
10	1673-162	1		T-Connection
11	0623-753	1	/P	Nut, Outlet
12	0624-018	2		Clamp, Hose
13	0710-191	0		Hose, Water
14	1673-170	1		Jet, Restrictor - Water
15	1673-193	1		Gasket, Foam
16	0623-648	1		Nut
17	0623-365	4		Clamp
18	0673-377	1		Outlet, Water
19	0610-183	0		Hose, Water - 25 ft
20	0612-456	1		Seal, Outlet

1998 TS 770 (98MTB-1998)
WIRING HARNESS

 Page 57 of 58

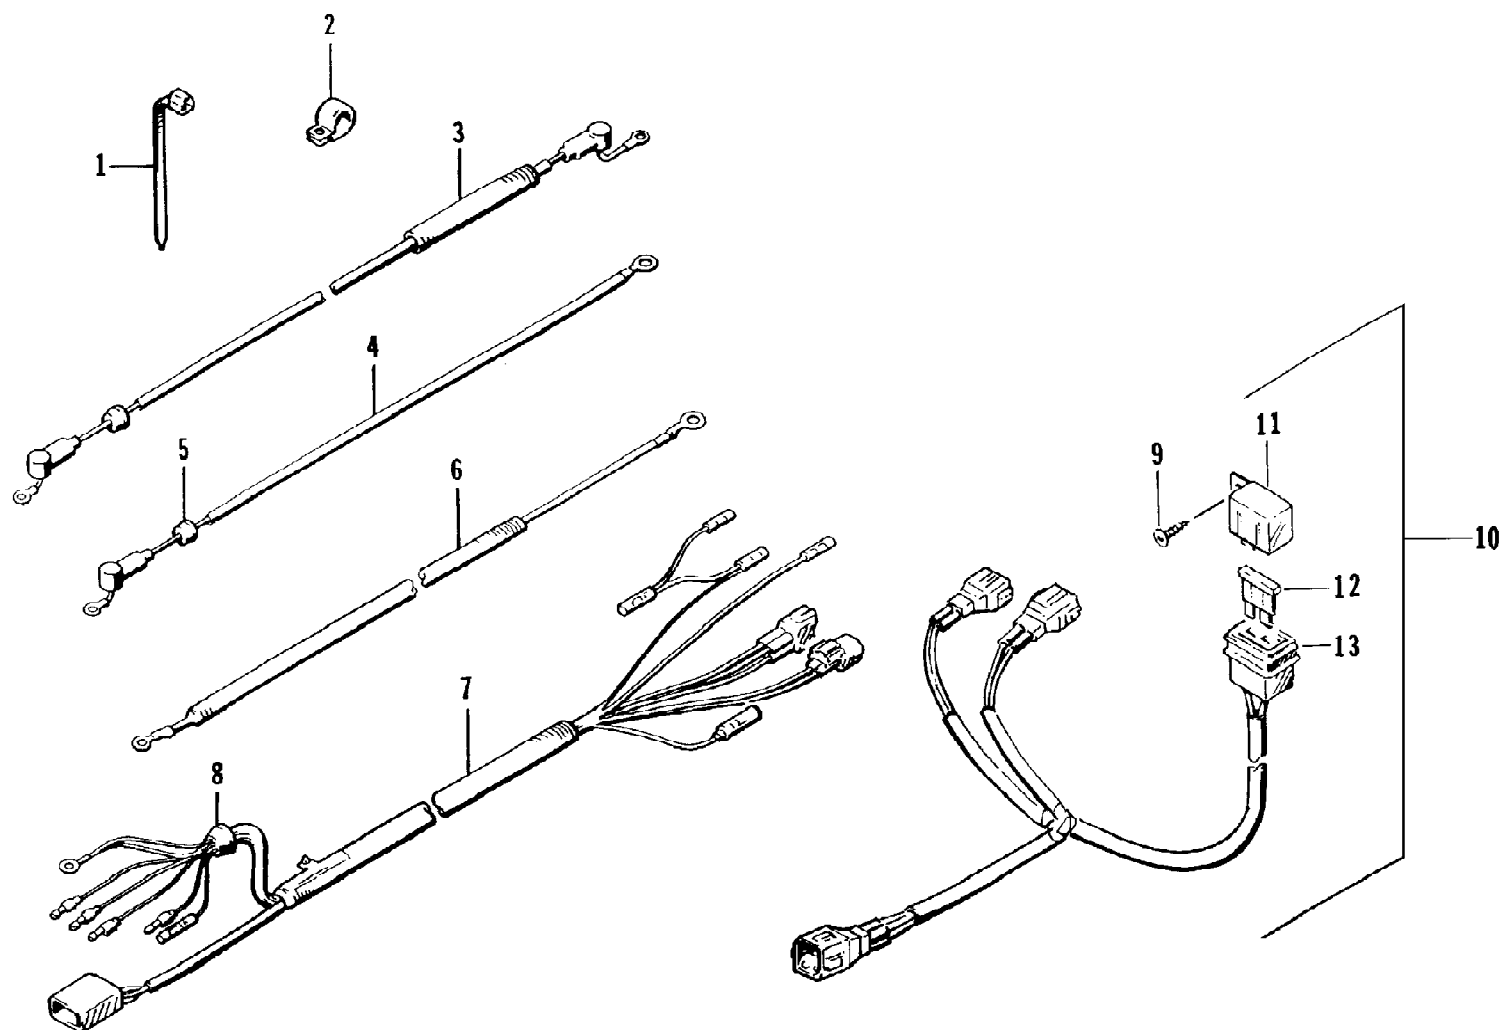

1998 TS 770 (98MTB-1998)
WIRING HARNESS

Page 58 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	3008-044	1		Tie, Cable
2	3002-964	2	/P	Clamp
3	3008-466	1		Cable
4	3008-345	1	/P	Cable
5	3008-334	2	/P	Grommet
6	3008-467	1		Cable, Ground
7	3008-547	1	/P	Harness, Wiring
8	3008-362	1	/P	Grommet
9	0623-165	1	/P	Clip, Retaining
10	0686-554	1		Harness, Gauge
11	0	1	F	Cover, Fuse Holder
12	0630-056	1		Fuse, 3 AMP
13	0	1	F	Body, Fuse Holder