 


1998 TS-L 1000 (98MCC-1998)
BILGE PUMP ASSEMBLY

Page 1 of 69

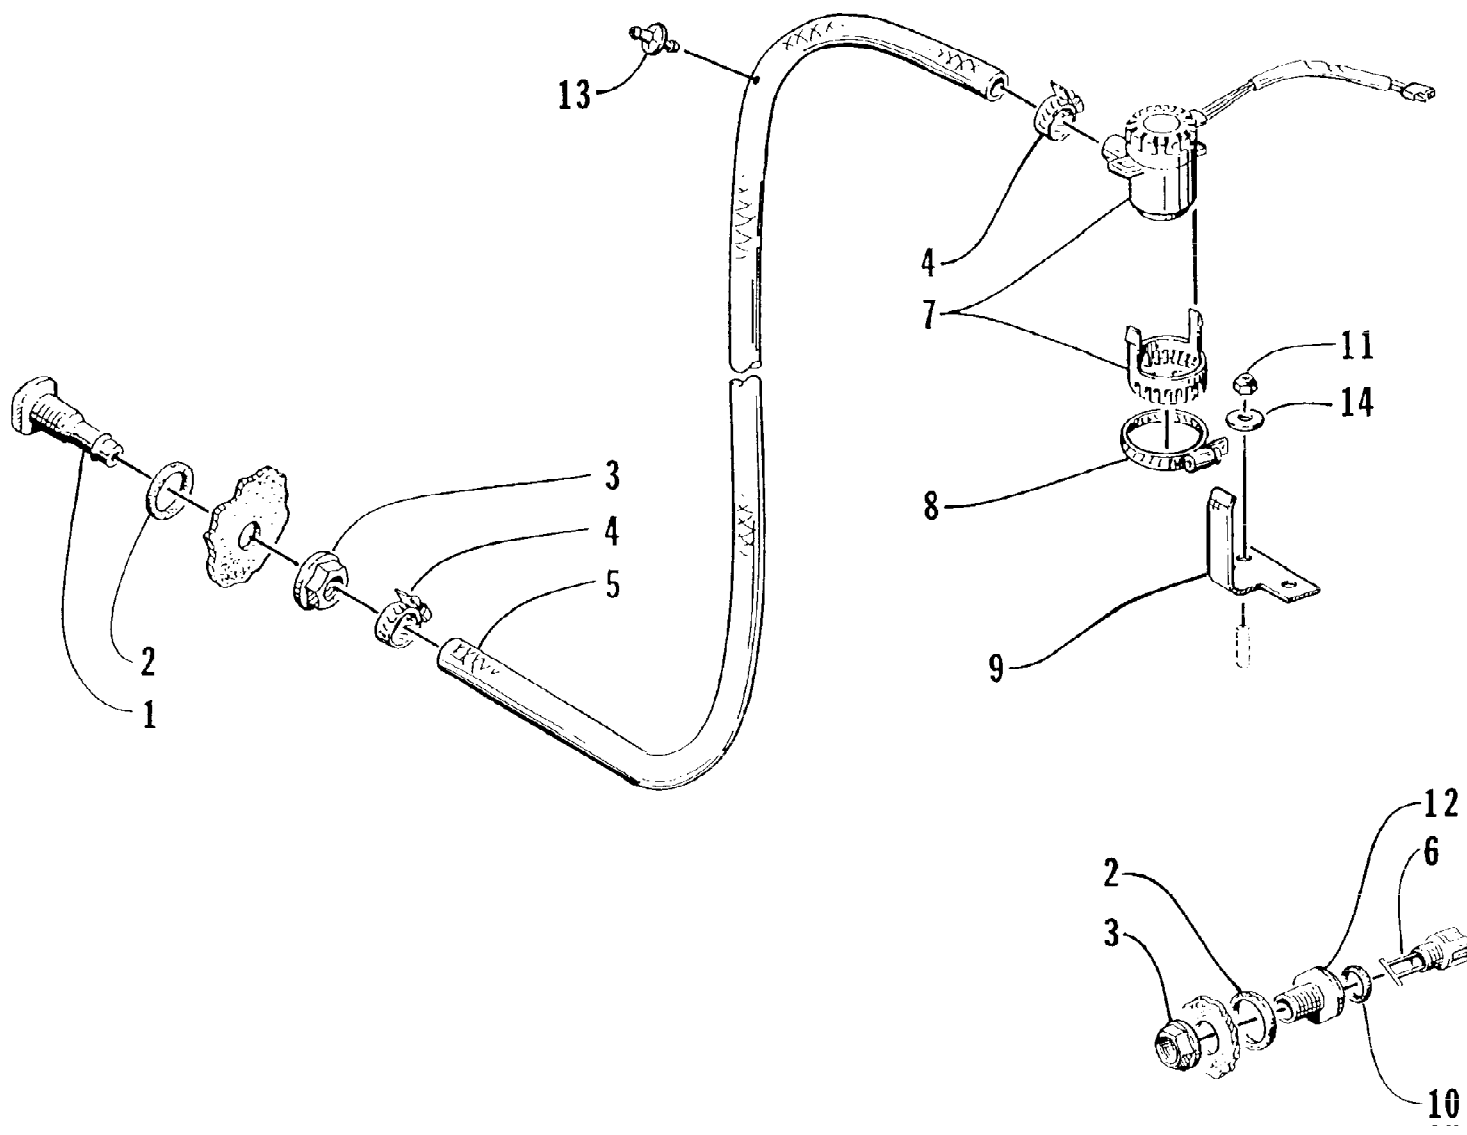


1998 TS-L 1000 (98MCC-1998)
BILGE PUMP ASSEMBLY

Page 2 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	0673-377	1		Fitting, Outlet - Bilge
2	0612-456	2		Seal, Fitting
3	0623-753	2	/P	Nut, Fitting
4	0624-018	2		Clamp, Hose
5	0710-201	1		Hose, Bilge
6	0673-404	1		Plug, Drain
7	1673-331	1	S	Pump, Bilge
8	0624-037	1		Clamp
9	1673-558	1		Mount, Bilge Pump (1000)
10	0673-459	1		O-Ring
11	0624-250	1		Nut, Lock
12	0673-278	1		Retainer, Drain Plug
13	0610-059	1		Valve, Check
14	0624-182	1		Washer

1998 TS-L 1000 (98MCC-1998)
CARBURETOR

 Page 3 of 69

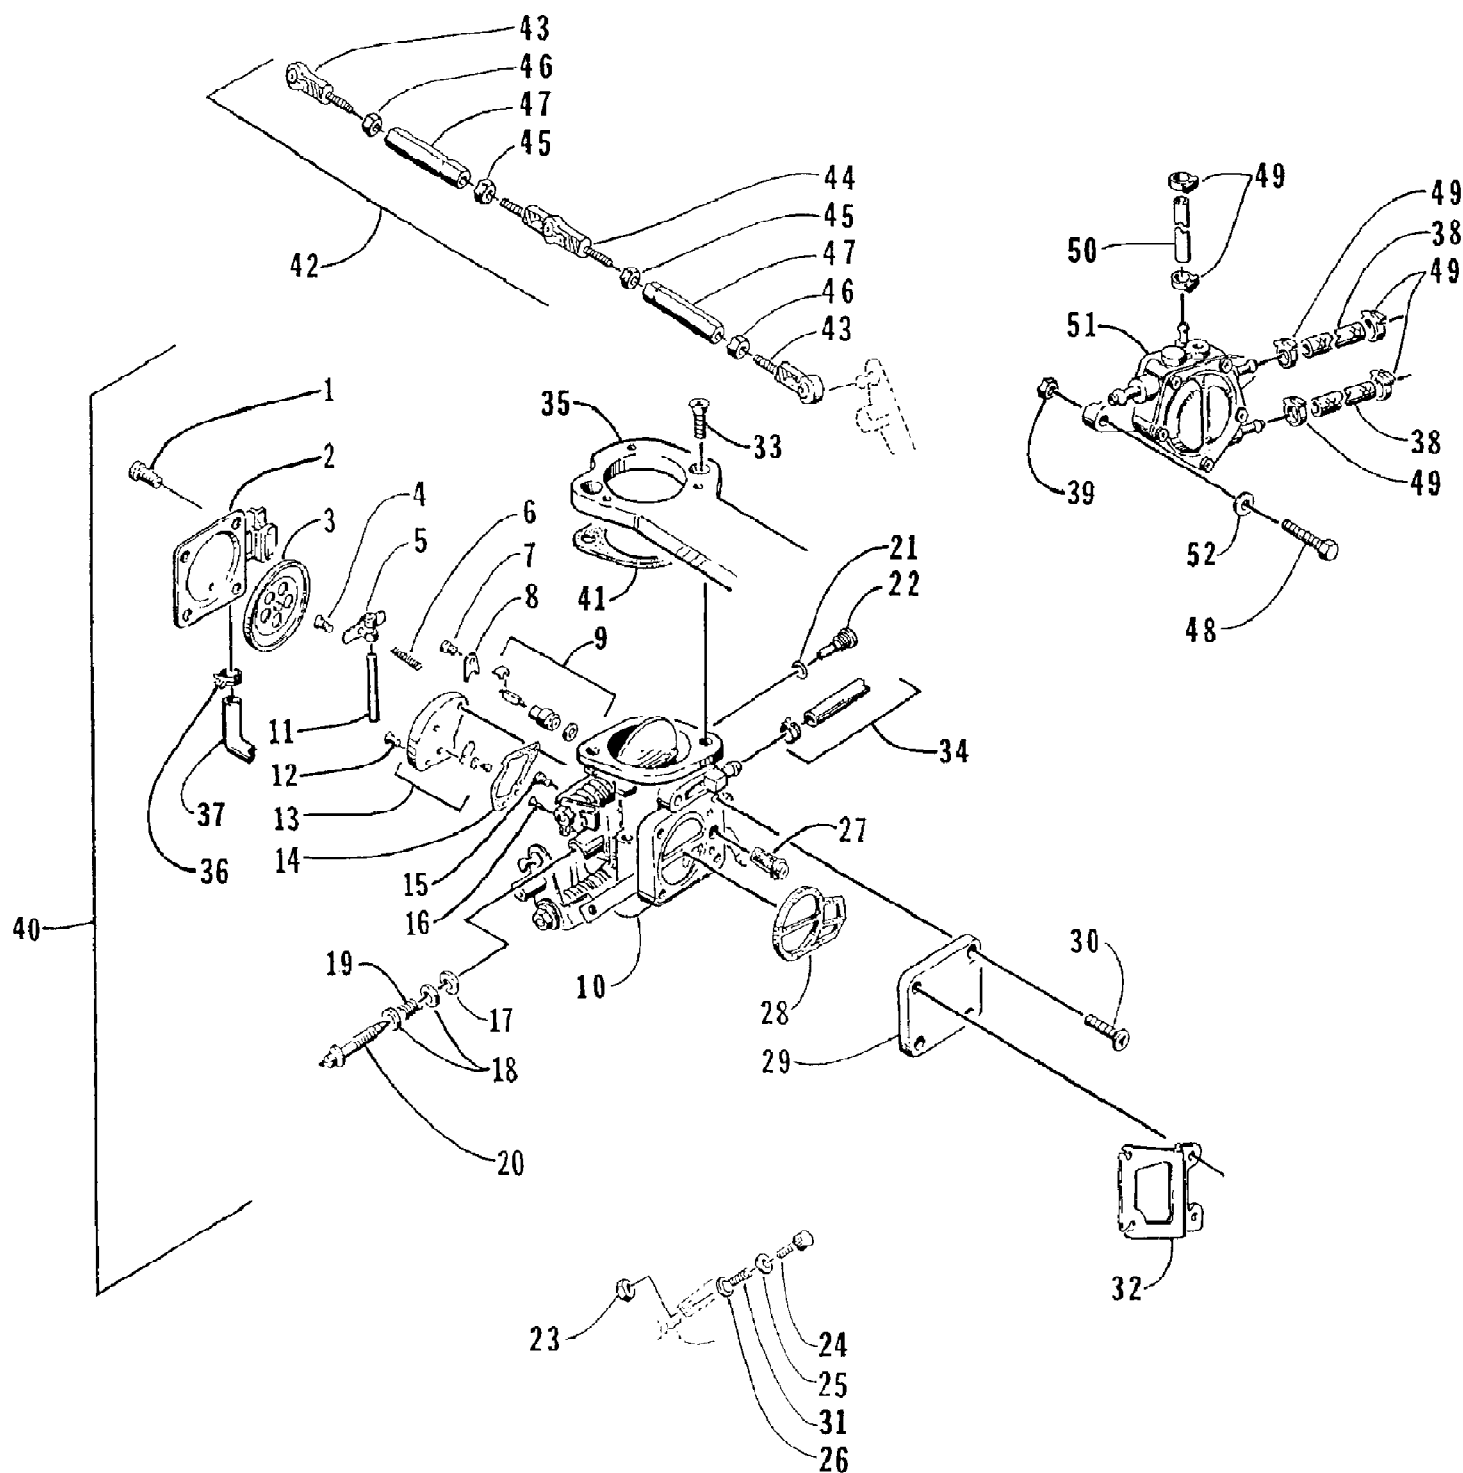

1998 TS-L 1000 (98MCC-1998)
CARBURETOR

Page 4 of 69

Ref #	Part Number	Qty	S/P/F	Description
	0670-884	1		Complete Assembly (inc. 1-37, 40-47)
1	6505-915	8		Screw, Machine (Mag and Center Carburetor)
1	6505-943	4		Screw, Machine (PTO Carburetor)
2	6505-662	2		Cover (Mag and Center Carburetor)
2	6506-027	1		Cover (PTO Carburetor)
3	6505-663	3		Diaphragm Assembly
4	6505-692	3		Screw, Machine
5	6505-664	3		Arm
6	6505-934	3		Spring
7	6505-695	3		Screw, Machine
8	6505-682	3		Plate
9	6505-944	3		Needle Valve Assembly
10	0	3	F	Mixing Body
11	6505-681	3		Pin
12	6505-679	6		Screw, Machine
13	6505-680	3		Block, Metering
14	6505-677	3		Gasket
15	6505-732	1		Jet, High Speed - 105 (Mag Carburetor)
15	6505-743	1		Jet, High Speed - 135 (Center Carburetor)
15	6505-737	1		Jet, High Speed - 120 (PTO Carburetor)
16	6505-774	1		Jet, Low Speed - 70
17	6505-668	3		Seal
18	6505-661	6		Washer
19	6505-660	3		Spring
20	6505-852	3		Adjuster
21	6505-042	3		O-Ring
22	6505-109	1		Jet, Main Fixed (Mag Carburetor)
22	6505-394	2		Jet, Pilot #95 (Center and PTO Carburetor)
23	6505-911	1		Nut
24	6505-912	1		Screw Assembly
25	6505-703	1		Washer
26	6505-872	1	/P	O-Ring
27	6505-676	3		Filter
28	6505-665	3		S-Gasket
29	6505-848	3		Cover Assembly
30	6505-853	12		Screw, Machine
31	6505-678	1		Spring
32	6505-913	1		Bracket, Cable
33	6505-914	6		Screw, Machine
34	0710-425	0	/P	Hose Assembly
35	6505-917	1		Plate, Mounting
36	6505-941	2		Clip (PTO Carburetor)
37	6505-942	1		Hose (PTO Carburetor)
38	0710-425	0	/P	Hose - 25 ft
39	0624-089	2		Nut, Lock
40	6506-107	1		Mag-Carburetor Assembly (inc. 1-32)
40	6506-106	1		Center-Carburetor Assembly (inc. 1-22 & 27-30)
40	6506-105	1		PTO-Carburetor Assembly (inc. 1-22 & 27-30)
41	6505-916	3		Gasket
42	6505-919	1		Rod Assembly (inc. 43-47)
43	6505-858	1		Rod - End


1998 TS-L 1000 (98MCC-1998)
CARBURETOR

Page 5 of 69

Ref #	Part Number	Qty	S/P/F	Description
44	6505-922	1		Rod - Center
45	6505-859	2		Nut - Left
46	6505-860	2		Nut - Right
47	6505-921	2	/P	Adjuster, Throttle Linkage
48	0624-289	2		Screw, Cap
49	0624-120	14		Clamp
50	0710-425	0	/P	Hose, Impulse
51	0670-573	1		Pump, Fuel
52	0624-022	2		Washer
53	6505-861	1		Rod - End - Left

1998 TS-L 1000 (98MCC-1998)
COOLING INTAKE LINE

 Page 6 of 69

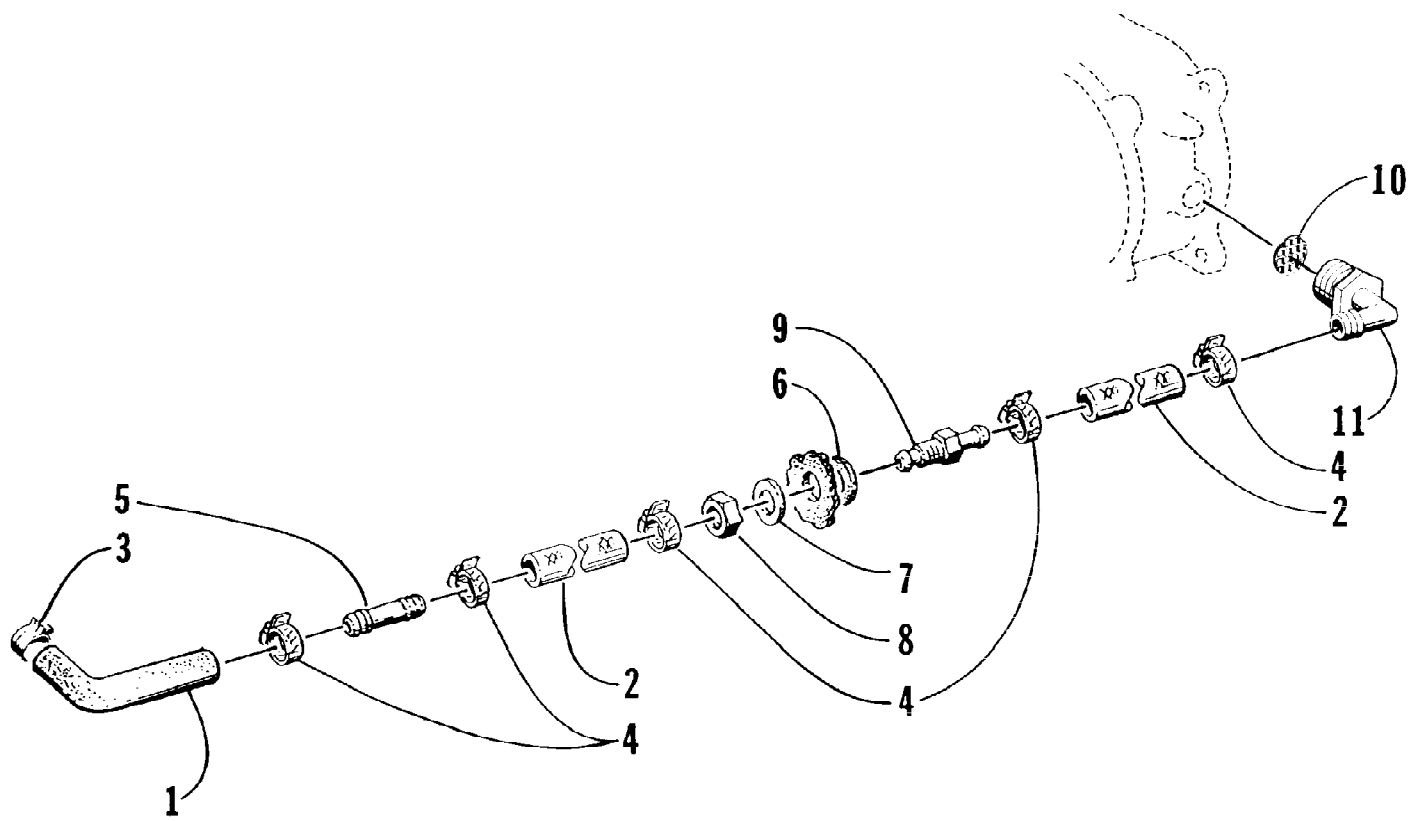


1998 TS-L 1000 (98MCC-1998)
COOLING INTAKE LINE

Page 7 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	0610-206	1	/P	Hose
2	0610-106	0	/P	Hose, Water
3	3008-455	1		Clamp
4	0624-016	5		Clamp
5	0673-564	1		Coupler
6	1673-192	1		Gasket
7	0624-222	1		Washer
8	0624-117	1		Nut
9	0673-981	1		Fitting, Hull
10	0675-042	1		Screen
11	0673-850	1		Fitting, Elbow

1998 TS-L 1000 (98MCC-1998)
CRANKCASE ASSEMBLY

 Page 8 of 69

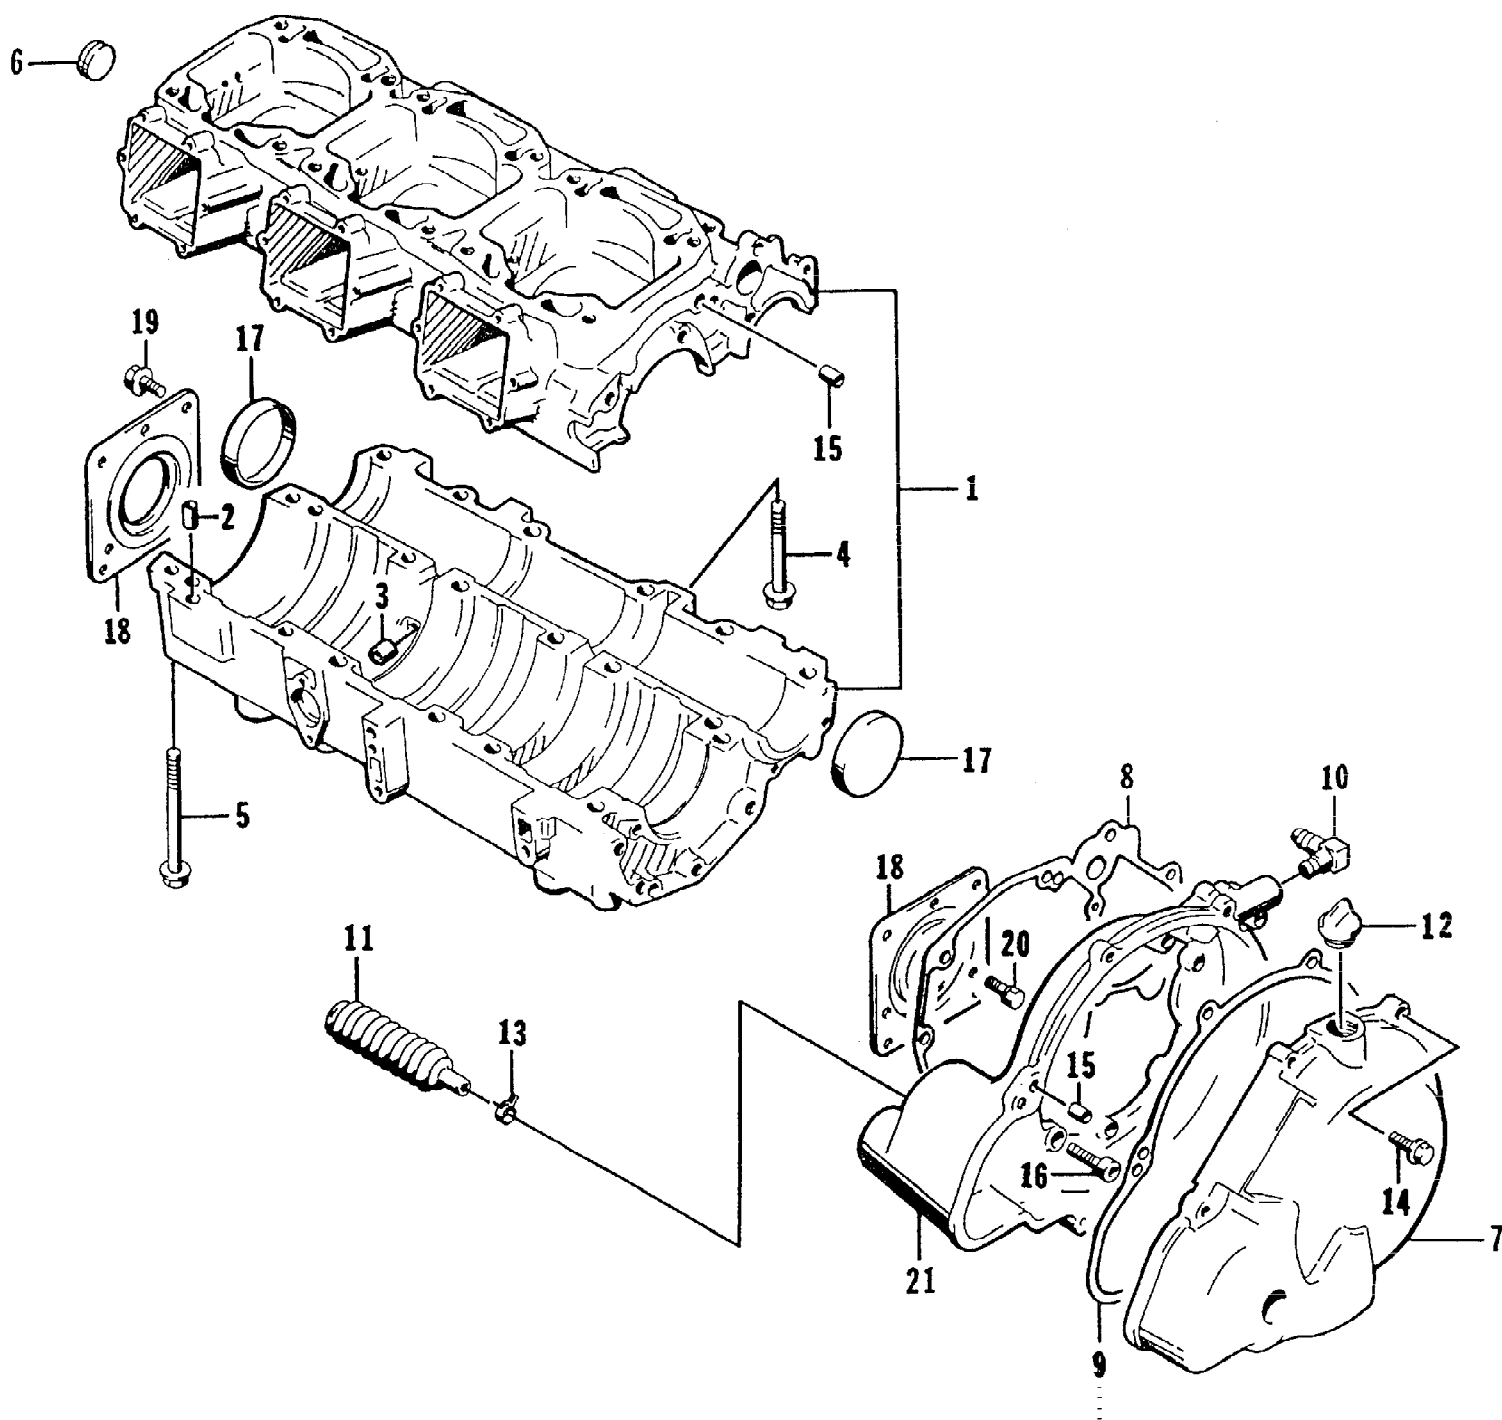


1998 TS-L 1000 (98MCC-1998)
CRANKCASE ASSEMBLY

Page 9 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	3008-507	1		Crankcase Assembly (inc. 2-6)
2	3003-646	2		Pin, Knock
3	3003-289	1		Bushing
4	3008-212	6	/P	Screw, Cap
5	3008-301	14		Screw, Cap
6	3008-249	1		Plug, Water Gallery
7	3008-258	1		Cover, Magneto Case
8	3008-570	1	/P	Gasket, Magneto Case
9	3008-260	1		Gasket, Magneto Case Cover
10	3008-092	1		Union, Cooling Hose
11	3008-100	1		Bladder
12	3008-023	1		Plug, Timing Hole
13	3008-546	1		Clip
14	3008-213	12	/P	Screw, Cap
15	3002-012	4		Pin, Knock
16	3008-533	6		Screw, Cap
17	3008-502	2	S	Plug, Balancer Shaft
18	3008-304	2	/P	Plate, Oil Seal
19	3008-216	4		Screw, Cap
20	3008-305	3		Screw, Cap
21	3008-257	1		Case, Magneto

1998 TS-L 1000 (98MCC-1998)
CRANKSHAFT ASSEMBLY

 
Page 10 of 69

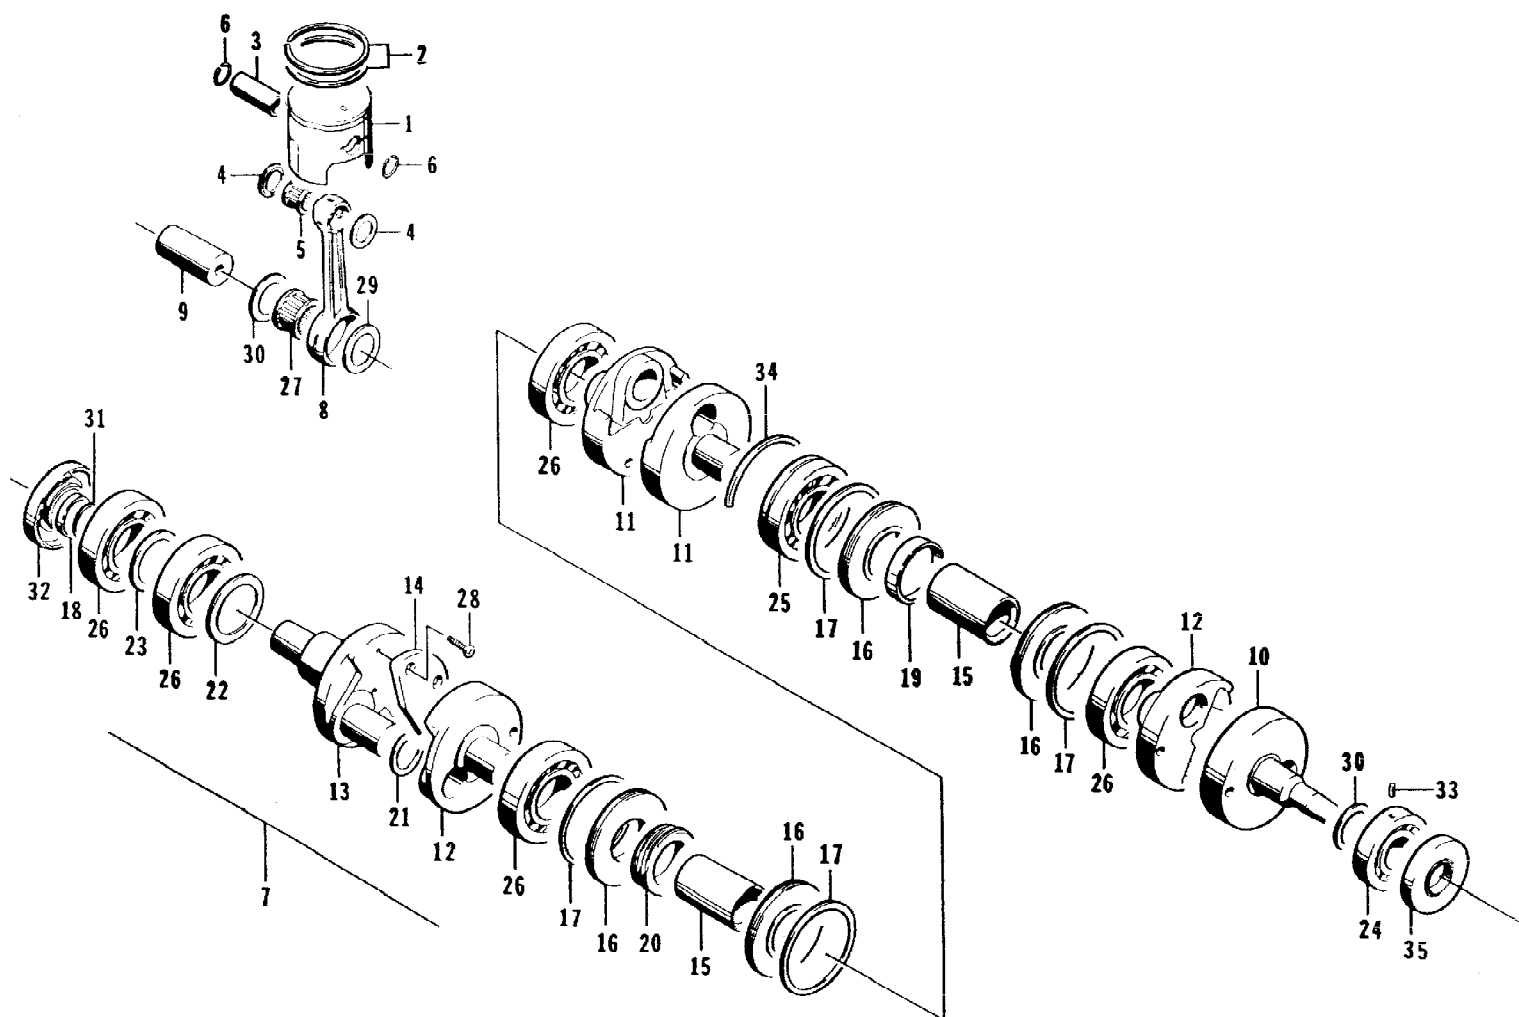

1998 TS-L 1000 (98MCC-1998)
CRANKSHAFT ASSEMBLY

Page 11 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	3008-508	3	/P	Piston Assembly (inc. 2 and 6)
1	3008-539	3	S	Piston
2	3003-822	3	/P	Ring Set, Standard
3	3008-509	3		Pin
4	3008-500	6		Washer
5	3008-503	3		Bearing
6	3008-529	6		Ring, Piston Pin Snap
7	3008-580	1	/P	Crankshaft Assembly (inc. 8-30)
8	3005-308	3	S/P	Connecting Rod
9	3004-700	2	/P	Pin, Crank
10	3008-512	1	S	Crankshaft - Right
11	3008-513	2		Crankshaft - Middle
12	3008-514	2	S	Crankshaft - Middle
13	3008-515	1	S	Crankshaft - Left
14	3008-516	1		Balancer, Crankshaft
15	3005-312	2	/P	Pipe, Crankshaft Joint
16	3004-167	4		Lace, Middle Crank Seal
17	3004-168	4		Ring, Middle Crank Seal
18	3008-517	1		Spacer, Crankshaft
19	3008-518	1		Gear, Balancer Driveshaft
20	3004-178	1		Gear, Oil Pump Drive
21	3008-499	1		Washer, Crank Pin
22	3004-204	1		Washer, Crank Bearing
23	3008-501	1	/P	Washer, Crank Bearing
24	3004-150	1		Bearing, Crankshaft
25	3004-151	1		Bearing, Crankshaft
26	3004-152	5		Bearing, Crankshaft
27	3008-504	3	S/P	Bearing, Crank Pin
28	3004-372	3	S	Screw, Crank Balancer
29	3005-145	5		Washer, Crank Pin
30	3004-703	5		Washer, Crank Bearing
31	3008-530	1		O-Ring, Spacer
32	3008-526	1	/P	Seal, Crankshaft Oil - Left
33	3003-658	7	/P	Pin, Knock
34	3004-157	1		C-Ring, Crankshaft
35	3008-525	1	/P	Seal, Crankshaft Oil - Right

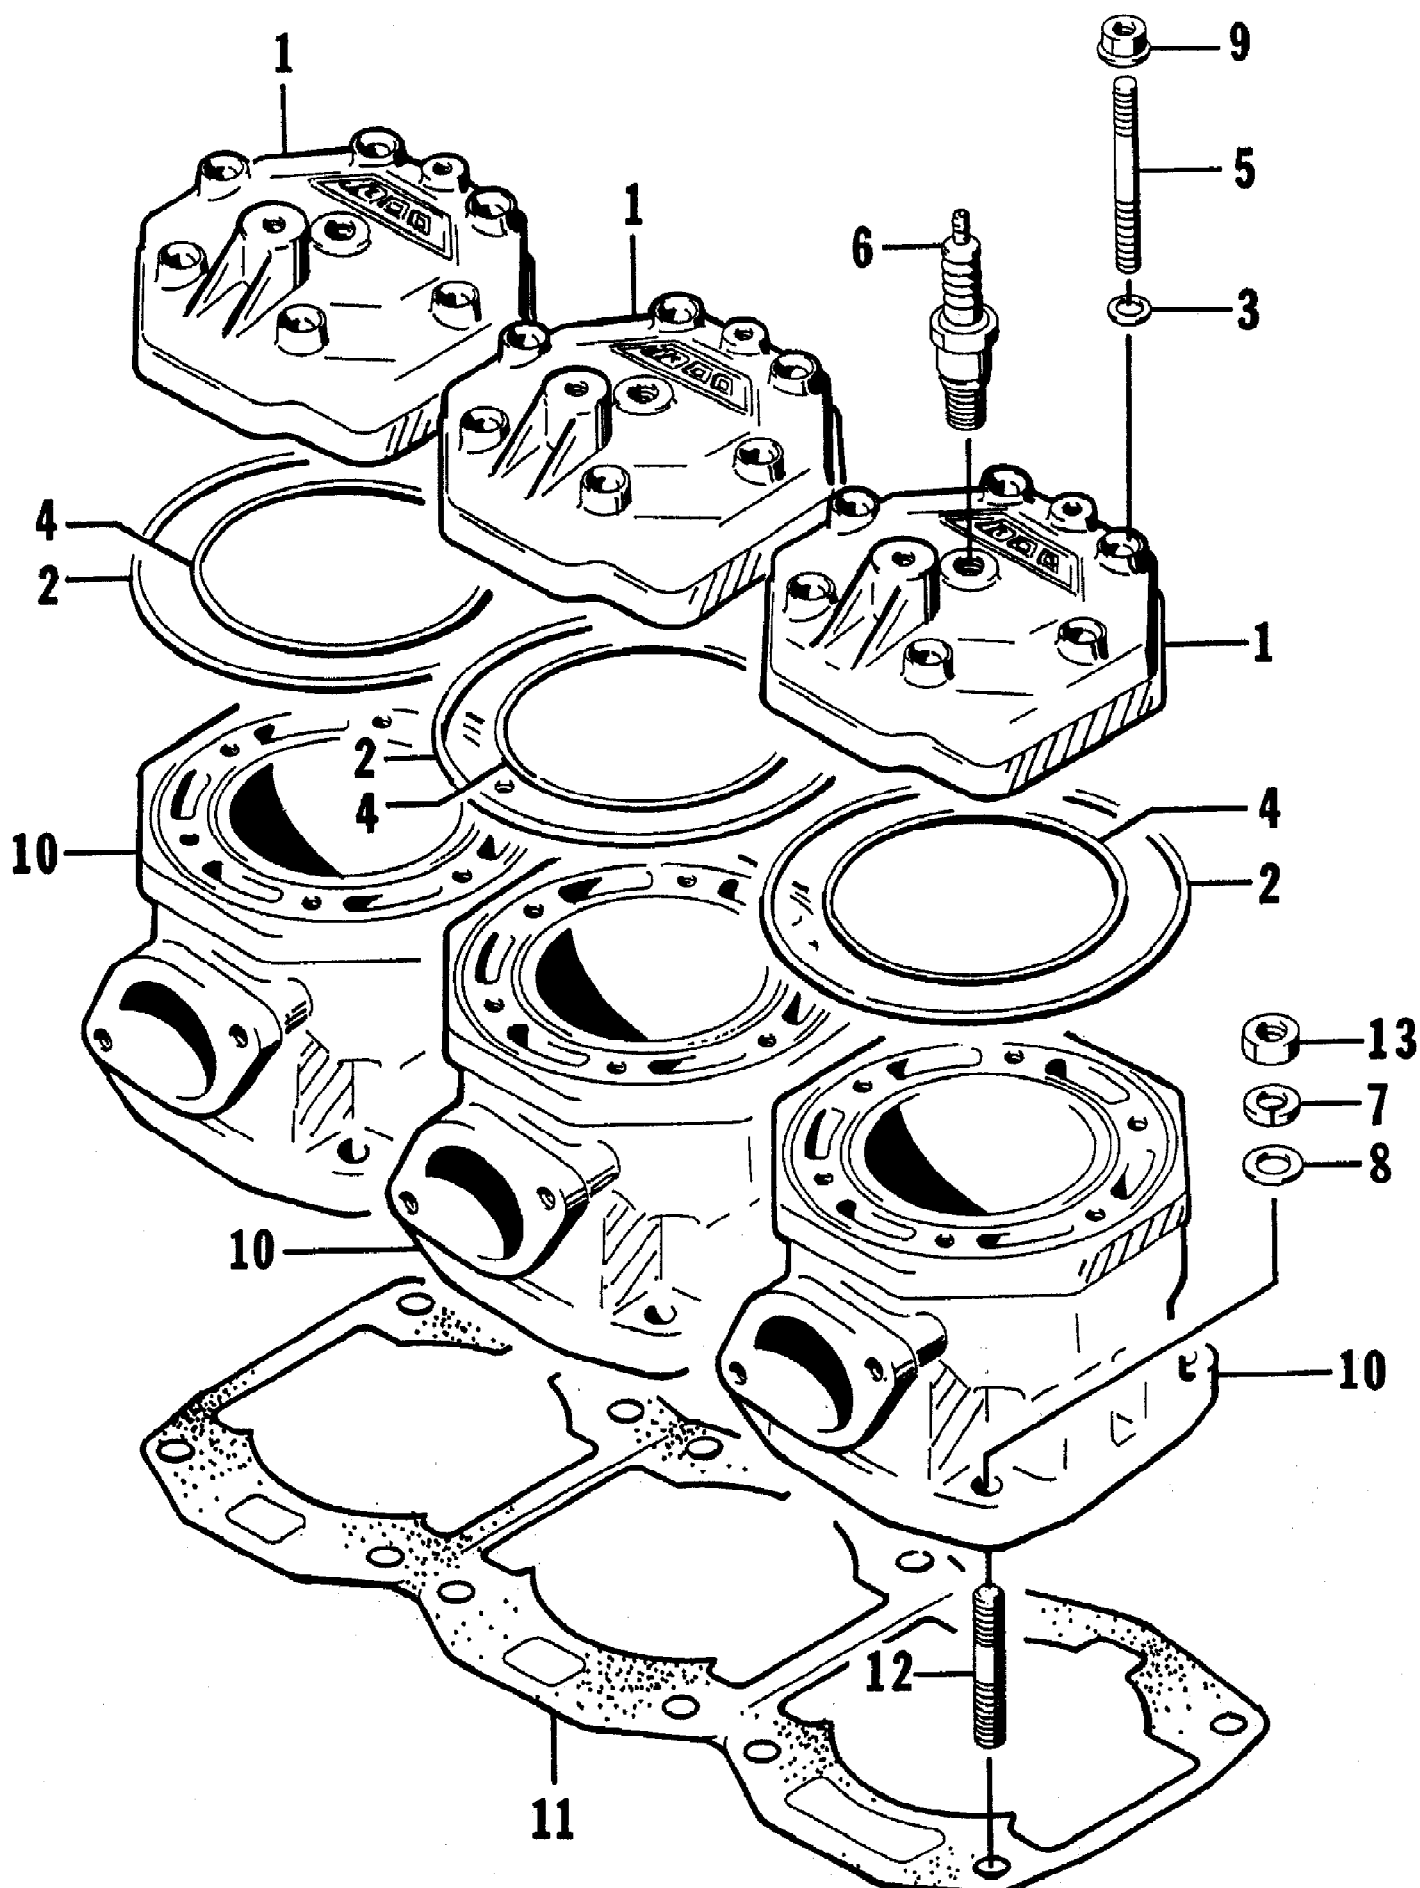 


1998 TS-L 1000 (98MCC-1998)
CYLINDER ASSEMBLY

Page 13 of 69

Ref #	Part Number	Qty	S/P/F	Description
	0638-205	1		Complete Gasket Set
1	3008-540	3	/P	Head, Cylinder
2	3004-081	3		O-Ring
3	3003-227	18	/P	O-Ring
4	3004-080	3		O-Ring
5	3423-203	18	S/P	Stud, Cylinder
6	0217-709	3		Plug, Spark (BR9EYA)
7	3008-207	12	/P	Washer, Lock
8	3004-278	12	S/P	Washer
9	3004-326	18	S/P	Nut
10	3008-506	1	/P	Cylinder
11	3004-753	1	S	Gasket, Cylinder
12	3008-300	12		Stud, Bolt
13	3008-209	12	/P	Nut

1998 TS-L 1000 (98MCC-1998)
DECAL AND FOOTPAD ASSEMBLY

 Page 14 of 69

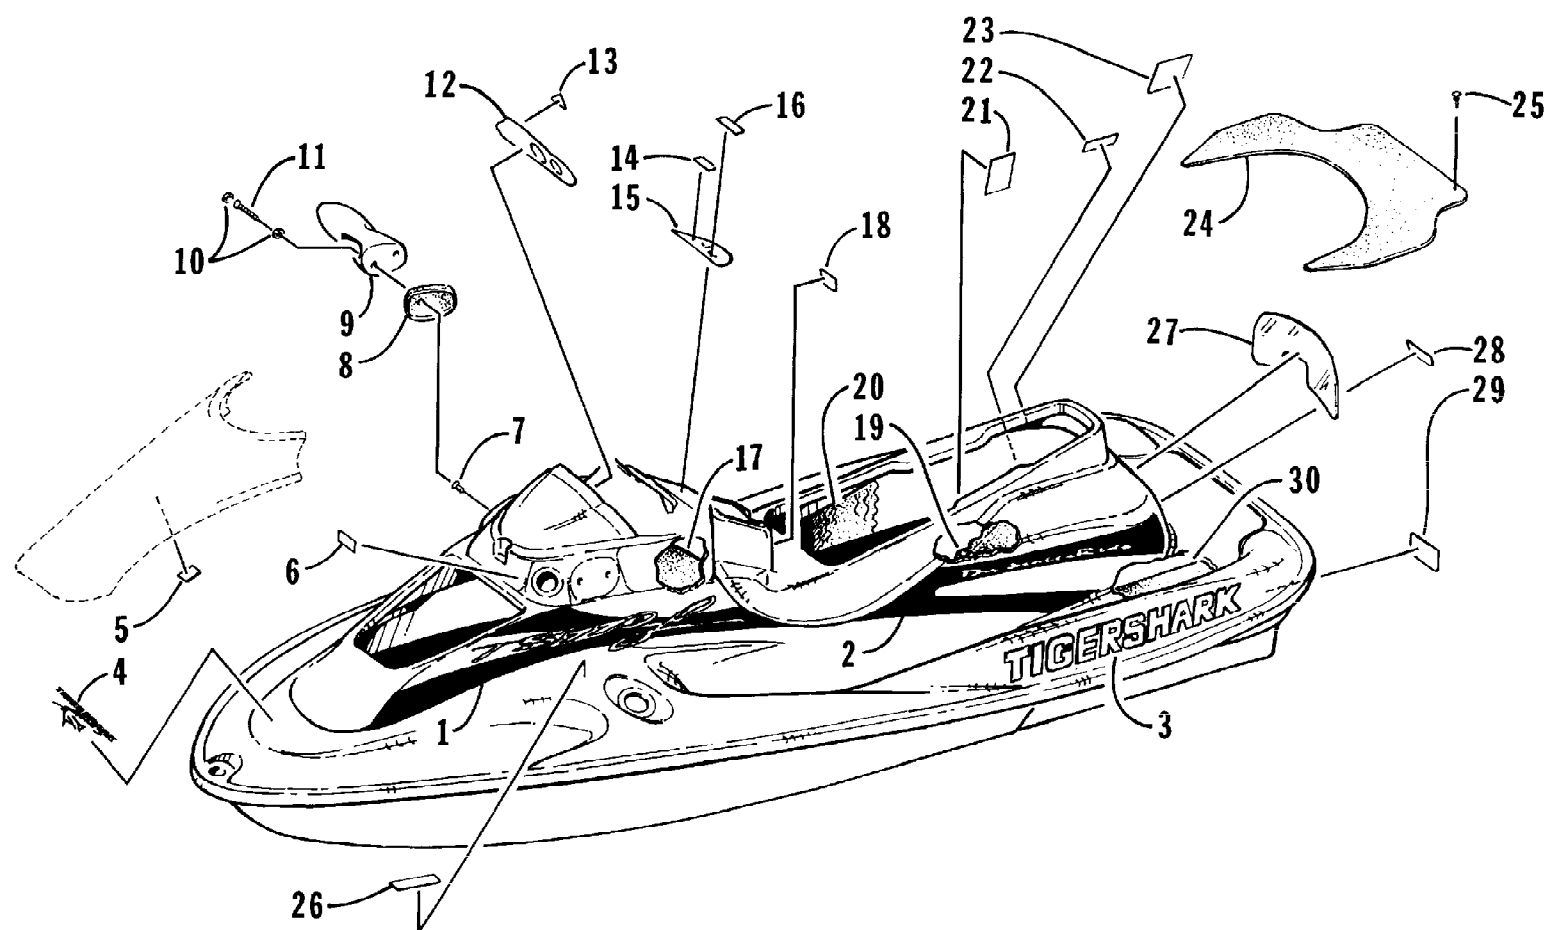



1998 TS-L 1000 (98MCC-1998)
DECAL AND FOOTPAD ASSEMBLY

Page 15 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	0614-422	1		Decal, Deck - Forward - Starboard (1000)
1	0614-423	1		Decal, Deck - Forward - Port (1000)
2	0614-424	1		Decal, Deck - Aft - Starboard (1000)
2	0614-425	1		Decal, Deck - Aft - Port (1000)
3	0614-426	1		Decal, Deck - "Tigershark" - Starboard
3	0614-427	1		Decal, Deck - "Tigershark" - Port
4	0614-421	1		Decal, Crest (1000)
5	0614-431	2		Decal, Loading
6	0614-300	1		Decal, Oil
7	0623-737	4		Insert, Brass
8	1673-120	1		Gasket, Mirror Mounting - Starboard
8	1673-127	1		Gasket, Mirror Mounting - Port
9	1673-536	1		Mirror Assembly - Starboard (1000)
9	1673-537	1		Mirror Assembly - Port (1000)
10	0124-054	4	/P	Snap w/Washer
11	0624-271	4		Screw, Cap
12	0614-415	1		Decal, Instrument Panel
13	3611-003	1		Decal, "Made In The U.S.A."
14	0614-356	1		Decal, Warning "Lean Condition" (1000)
15	0614-436	1		Decal, Console (1000)
16	0614-359	1		Decal, Warning " Lift Vent"
17	0617-284	1		Foam, Deck - Forward - Starboard
17	0617-285	1		Foam, Deck - Forward - Port
18	1611-866	1		Warning - Leaking Fuel
19	0617-281	1		Foam, Deck - Aft - Port
20	0617-292	1		Foam, Deck - Aft - Starboard
21	0614-404	1		Decal, Winterization (1000)
22	0614-059	1		Decal, Common Sense
23	0614-067	1		Decal, USCG Exemption
24	1673-419	1		Pad, Foot - Rear
25	0623-725	20	/P	Clip, Retainer
26	0614-299	1		Decal, Warning - Fuel (640/1000)
27	0614-350	1		Decal, Regulation
28	0614-358	1		Decal, Patent
29	0614-154	1		Decal, Caution - Uprighting
30	0617-262	2		Foam, Footwell

1998 TS-L 1000 (98MCC-1998)
ELECTRICAL MODULE AND BATTERY

  Page 16 of 69

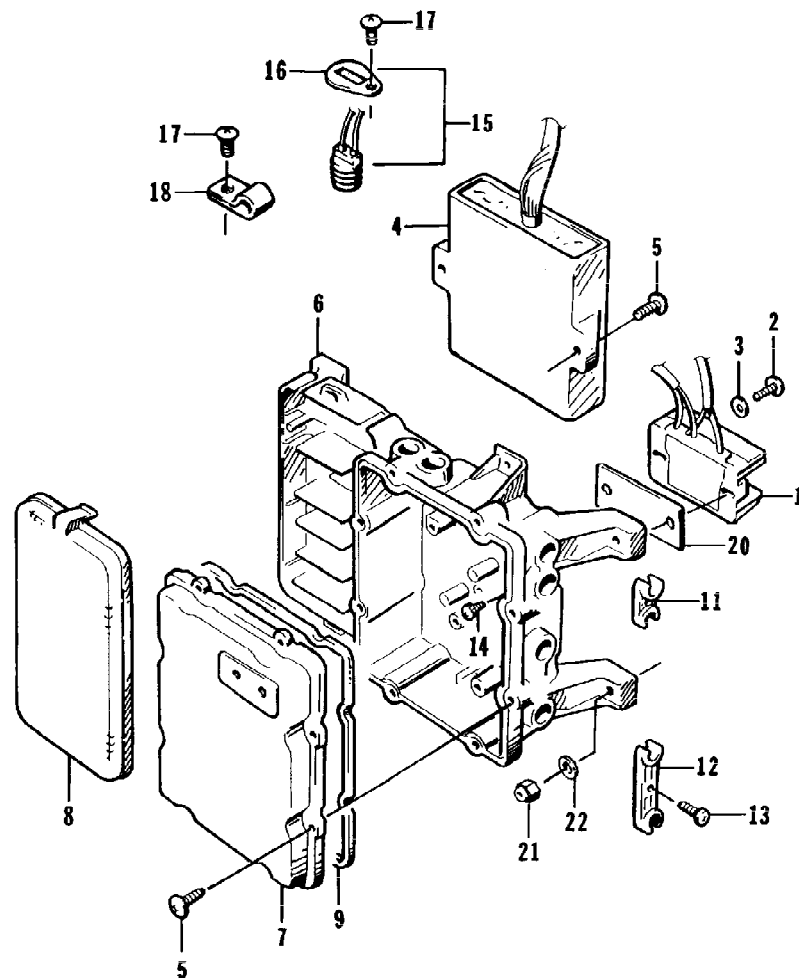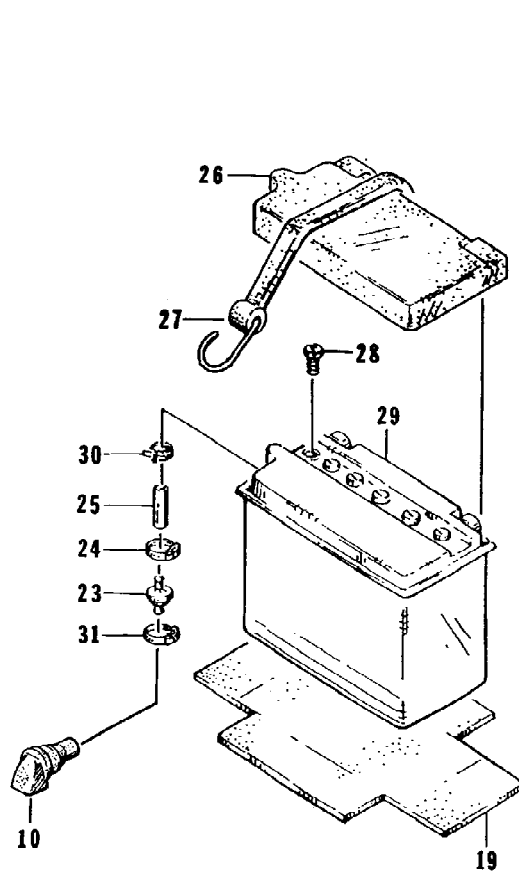

1998 TS-L 1000 (98MCC-1998)


Page 17 of 69

ELECTRICAL MODULE AND BATTERY

Ref #	Part Number	Qty	S/P/F	Description
1	3008-279	1	/P	Regulator Assembly (inc. 2)
2	3008-479	2		Screw, Regulator (770/1000)
3	3008-337	2		Washer, Regulator
4	3008-572	1	/P	Unit, CDI (1000)
5	3008-478	10		Screw, Cap
6	3008-465	1		Case (770/1000)
7	3008-283	1	/P	Cover
8	3008-284	1	/P	Cover
9	3008-285	1	/P	Packing
10	0673-755	1		Vent, Thru Hull - w/Hood
11	3008-124	2		Holder
12	3008-125	1		Holder
13	3008-477	4		Screw, Cap (770/1000)
14	3008-217	1		Screw, Cap
15	3008-330	1	S/P	Sensor Assembly (inc. 16)
16	3008-134	1		Supporter
17	3008-219	2		Screw, Machine
18	3008-040	1		Clamp
19	1673-310	1	S	Pad, Battery
20	3008-336	1	/P	Base, Regulator
21	0624-089	4		Nut, Lock
22	0624-022	4		Washer
23	0670-295	1		Valve, Check
24	0623-502	1		Clamp
25	0610-008	1	/P	Hose, Battery Vent
26	0673-454	1		Cover, Battery
27	0773-382	3	/P	Tiedown
28	0645-045	6		Cap, Battery
29	0645-232	1	S	Battery (inc. 28)
30	0624-323	1		Clamp, Hose - Battery
31	0623-063	1		Clamp

1998 TS-L 1000 (98MCC-1998)
ENGINE AND RELATED ASSEMBLY

 
Page 18 of 69

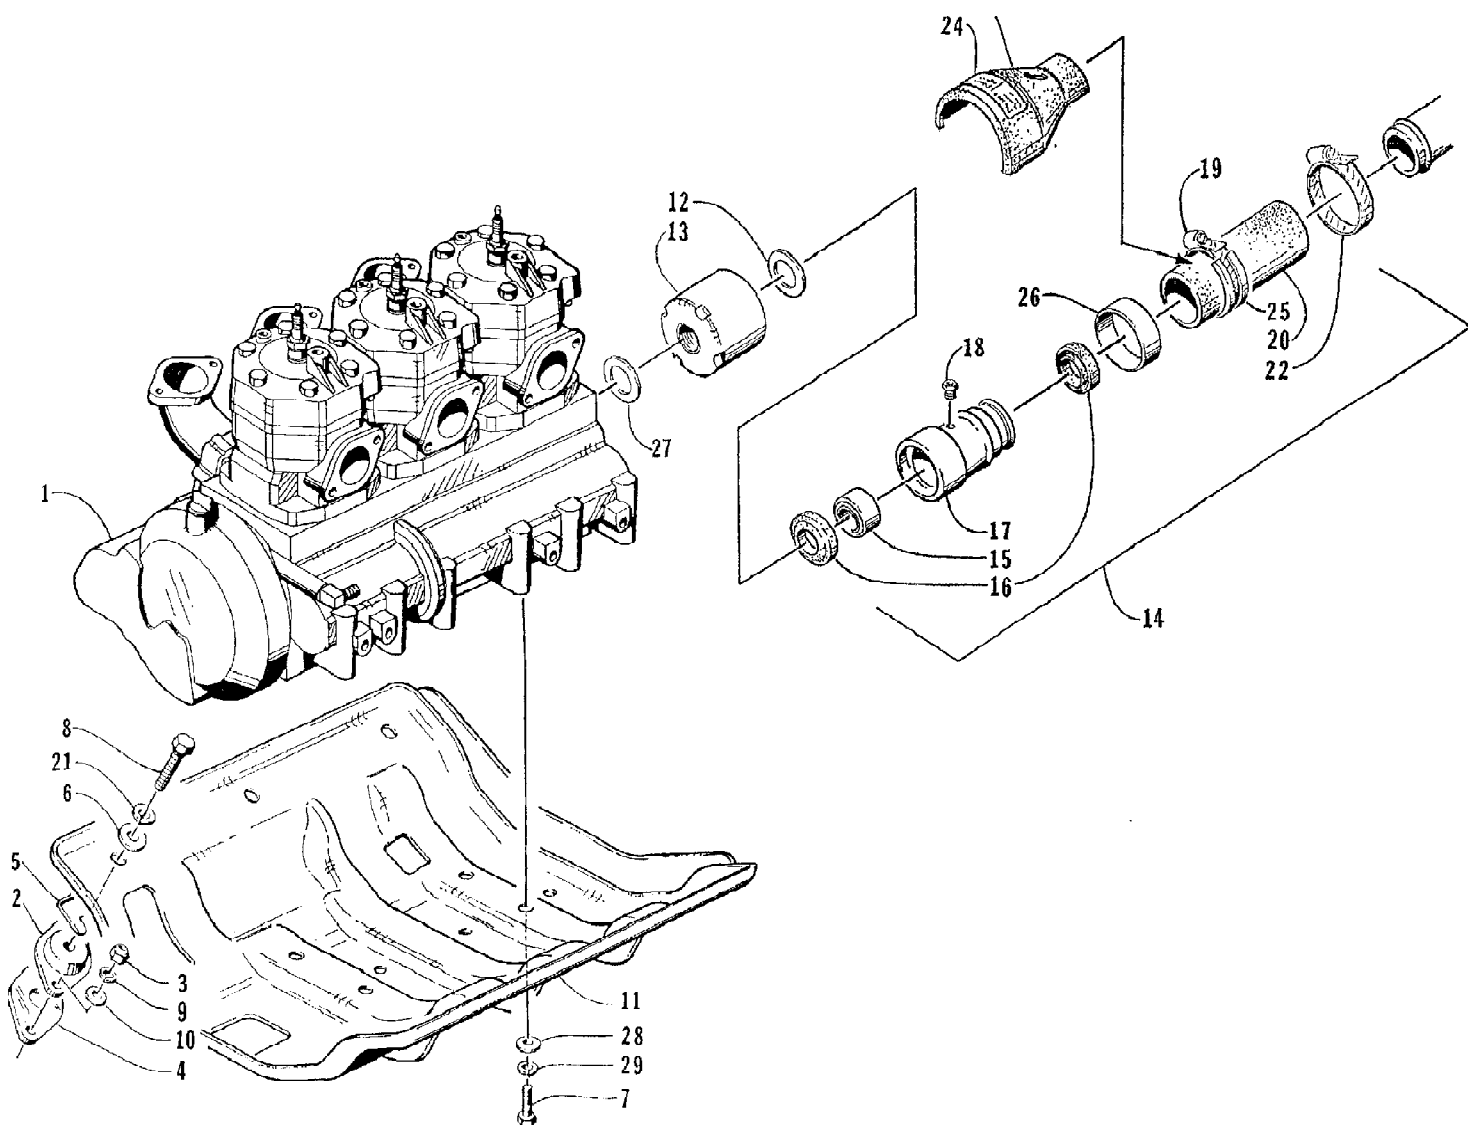

1998 TS-L 1000 (98MCC-1998)
ENGINE AND RELATED ASSEMBLY

Page 19 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	0662-155	1	/P	Engine
2	0608-174	6		Damper, Engine
3	0624-149	12		Nut
4	0673-508	0	/P	Shim, Engine Mount - 0.125 in.
4	0673-509	0		Shim, Engine Mount - 0.063 in.
5	0624-014	0	/P	Shim - 0.5 mm
5	0624-015	0	/P	Shim - 1.5 mm
6	0624-406	6		Washer
7	0624-416	4		Screw, Cap
8	0624-421	6		Screw, Cap
9	0624-027	12		Washer, Lock
10	0624-028	12		Washer
11	0608-271	1	/P	Plate, Engine Mount
12	0624-447	1		Washer
13	0675-174	1		Coupler, Engine
14	0775-109	1		Housing, Seal - Assembly (inc. 15-18, 20, & 26)
15	0675-161	2		Bearing
16	0675-169	2	S	Seal
17	0675-162	1		Housing/Bearing - Floating
18	0624-341	2		Fitting, Grease
19	0624-037	1		Clamp
20	0710-214	1		Hose, Coupler
21	0624-012	6		Washer, Lock
22	0624-390	2		Clamp, Hose
23	0775-104	1	S	Guard, Coupler - Assembly (inc. 24)
24	0614-429	1		Decal, Warning
25	0775-099	1		Isolator
26	1673-476	1		Clamp, Shrink
27	0624-448	1		Washer
28	0624-282	4		Washer
29	0624-281	4		Washer, Lock

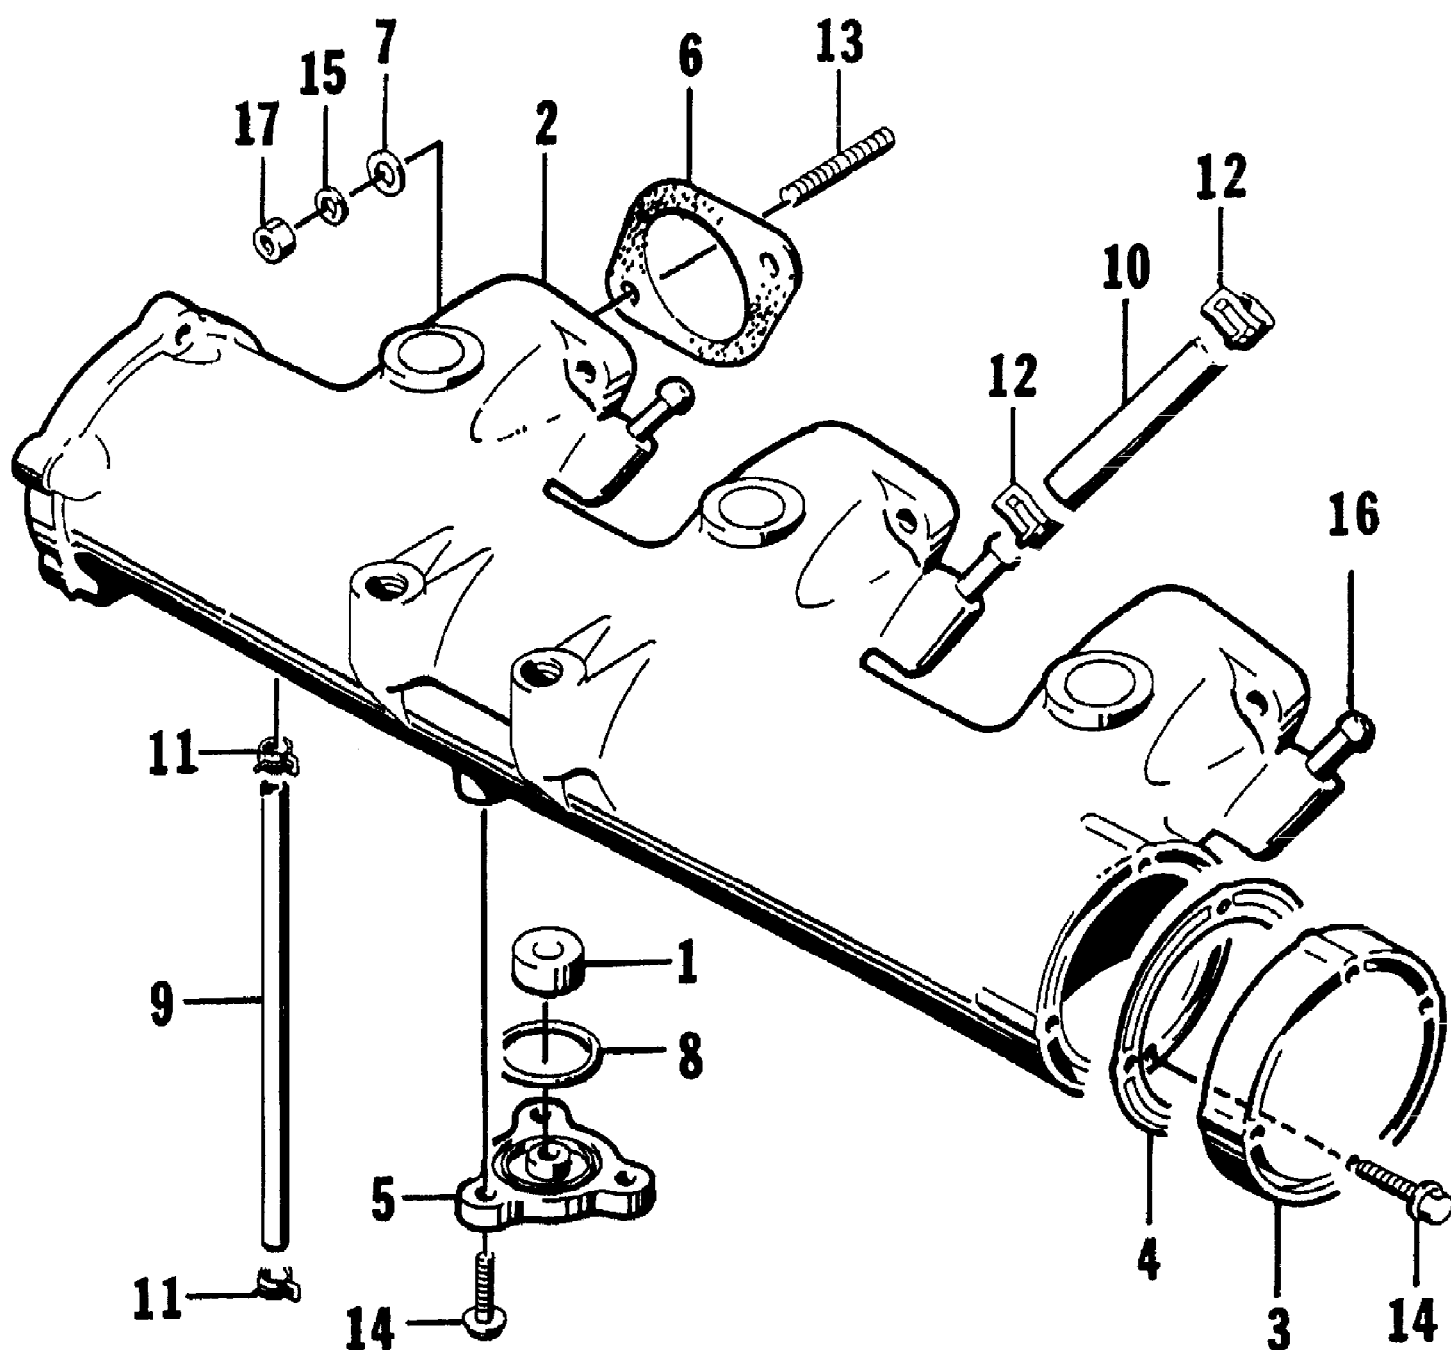 


1998 TS-L 1000 (98MCC-1998)
EXHAUST MANIFOLD ASSEMBLY

Page 21 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	3008-047	1		Zinc, Protection
2	3008-444	1	/P	Manifold, Exhaust - Assembly
3	3008-268	1		Cover, Exhaust Manifold
4	3008-519	1	/P	Gasket, Exhaust Manifold Cover
5	3008-520	1	/P	Cover, Protection Zinc
6	3008-407	3	/P	Gasket, Exhaust Manifold
7	3008-312	6		Washer
8	3008-250	1		O-Ring, Protection Zinc Cover
9	3008-251	1		Hose, Drain
10	3008-527	3		Hose, Cooling
11	3008-037	2	/P	Clip, Drain Hose
12	3008-366	6		Clip, Cooling Hose
13	3008-391	6		Bolt, Stud
14	3008-213	7	/P	Screw, Cap
15	3008-392	6		Washer, Lock
16	3008-364	3		Fitting
17	3004-334	6	S/P	Nut

1998 TS-L 1000 (98MCC-1998)
EXPANSION CHAMBER ASSEMBLY

 Page 22 of 69

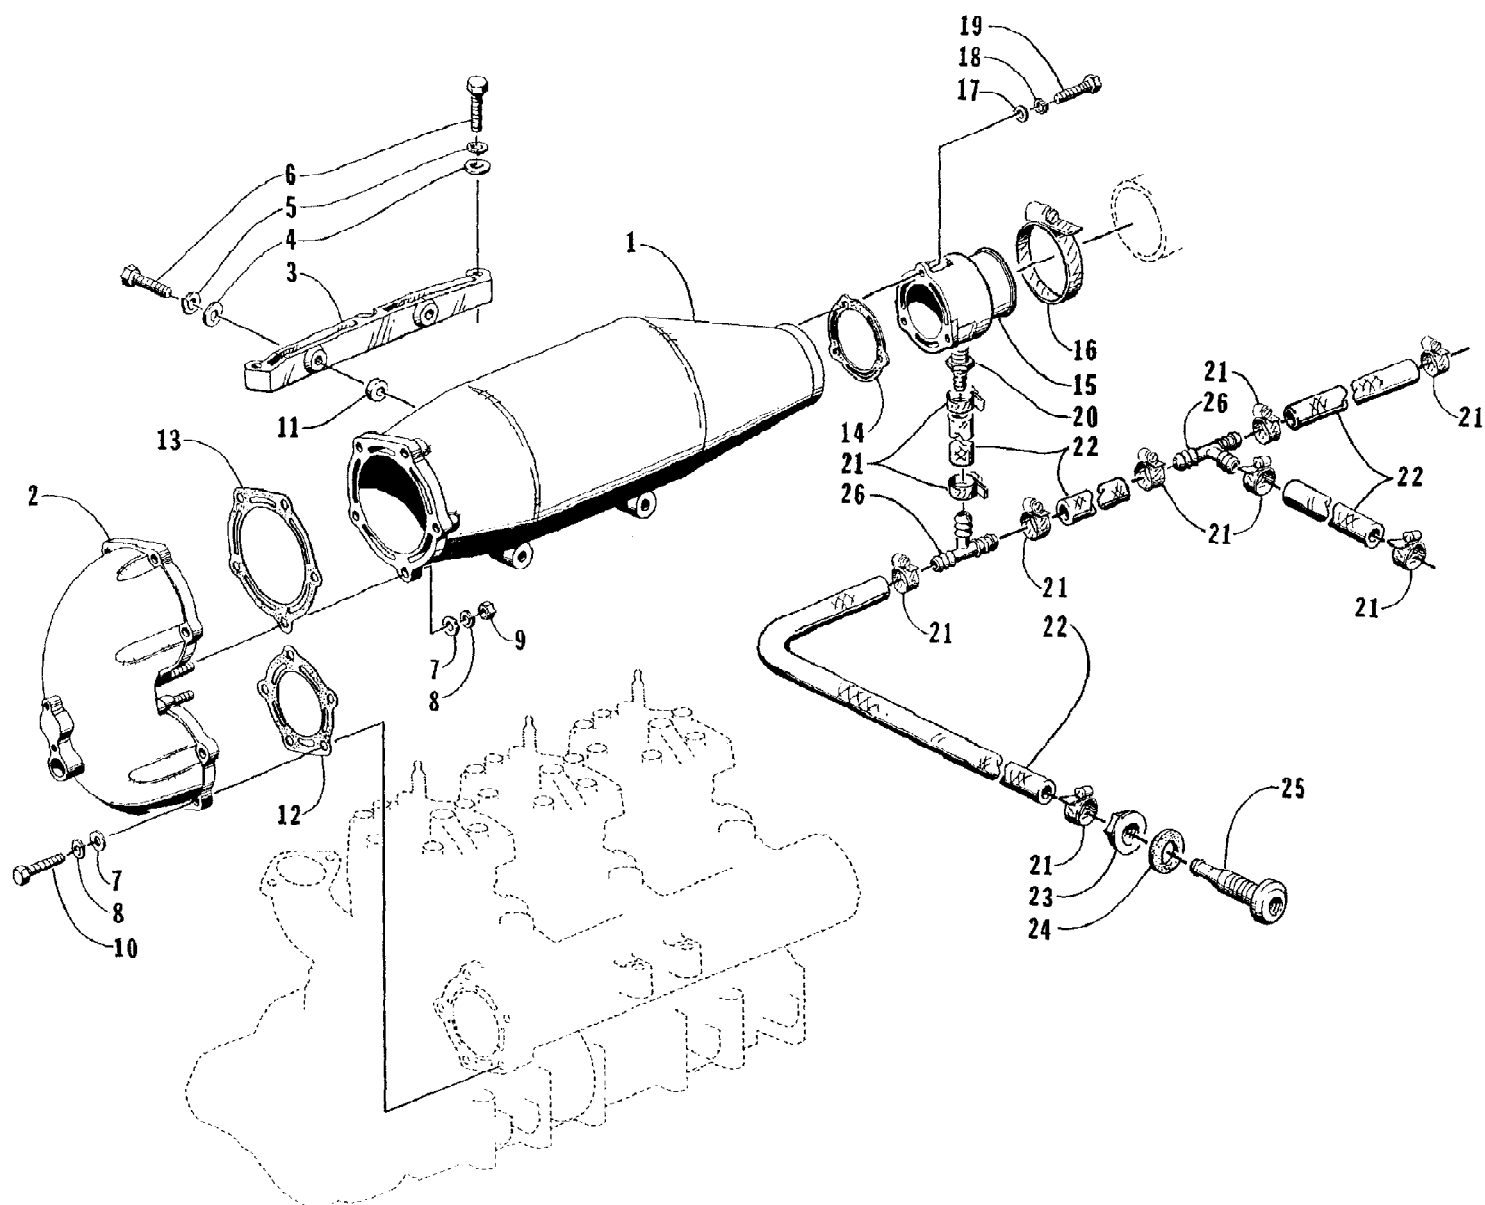


1998 TS-L 1000 (98MCC-1998)
EXPANSION CHAMBER ASSEMBLY

Page 23 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	0612-802	1	/P	Chamber, Expansion
2	0612-801	1	S	Pipe, Head
3	0612-804	1	S	Bracket, Expansion Chamber
4	0624-008	5		Washer
5	0624-012	5		Washer, Lock
6	0624-238	5		Screw, Cap
7	0624-028	10		Washer
8	0624-027	10		Washer, Lock
9	0624-149	2		Nut
10	0624-313	8	/P	Screw, Cap
11	0624-378	2		Spacer
12	0612-460	1		Gasket, Manifold
13	0612-461	1		Gasket, Expansion Chamber
14	0612-627	1		Gasket, Tailpipe
15	0612-803	1	S	Pipe, Tail
16	0624-037	1		Clamp, Hose
17	0624-022	3		Washer
18	0624-036	3		Washer, Lock
19	0624-314	3		Screw, Cap
20	1673-164	1		Fitting, Brass
21	0624-016	6		Clamp, Hose
22	0610-268	0		Hose, Water - 25 ft
23	0623-753	1	/P	Nut, Outlet
24	0612-456	1		Seal, Outlet
25	0673-374	1		Outlet, Water
26	0673-136	1		T-Connection

1998 TS-L 1000 (98MCC-1998)
FUEL TANK ASSEMBLY

 Page 24 of 69

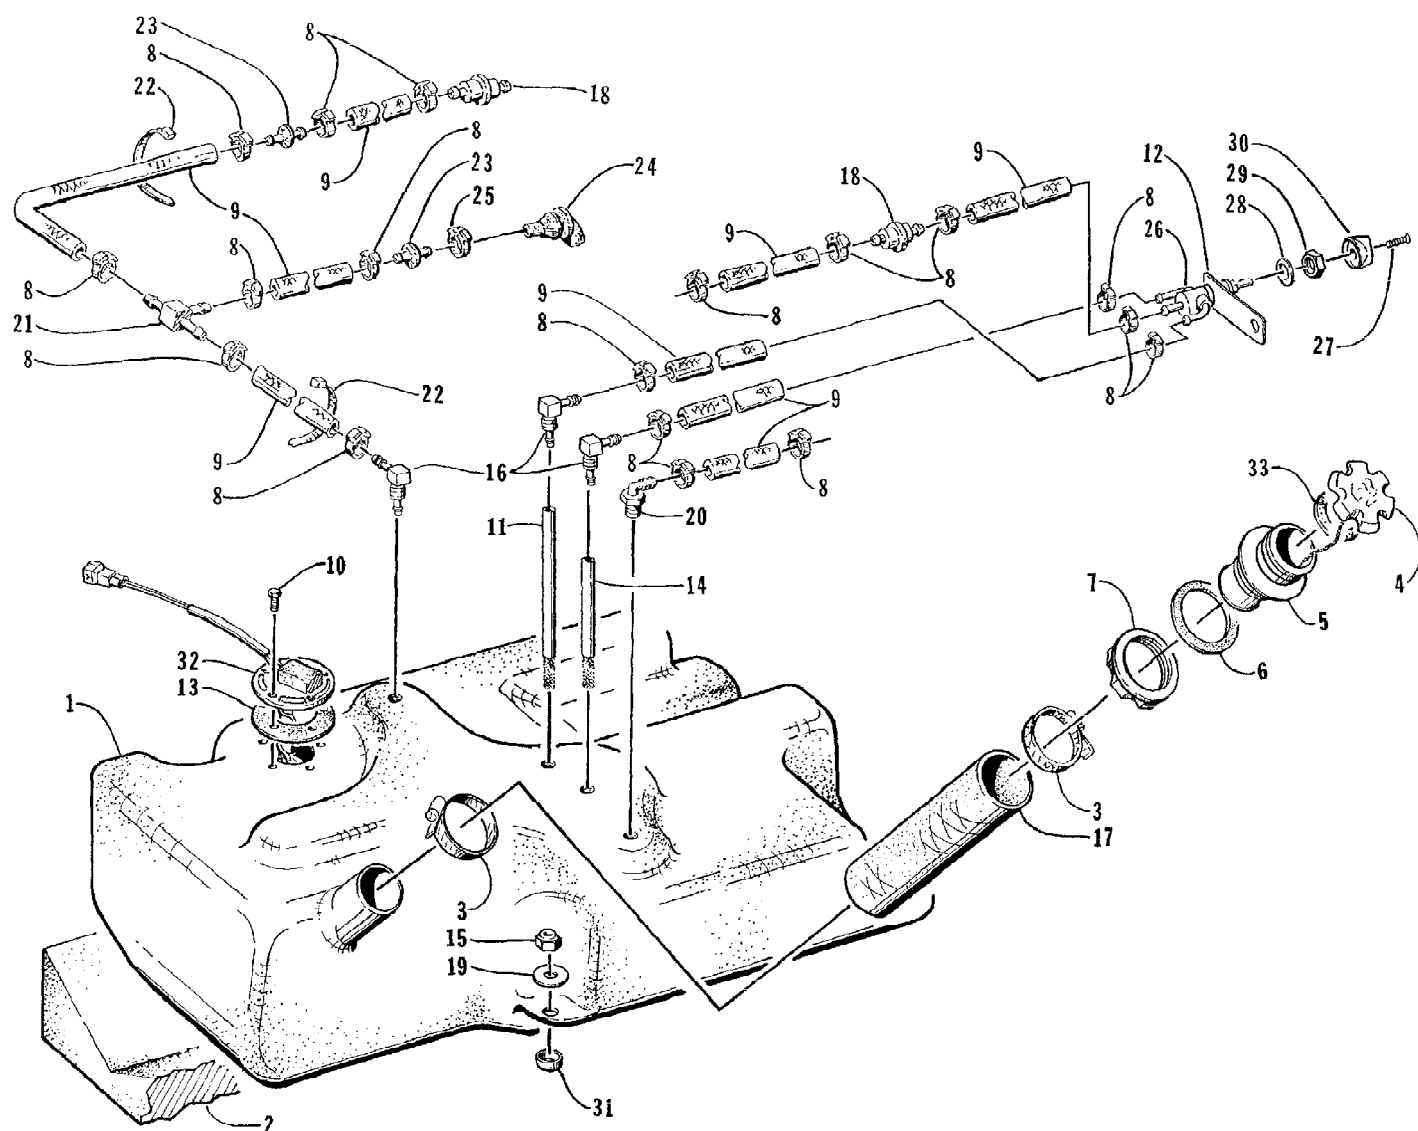


1998 TS-L 1000 (98MCC-1998)
FUEL TANK ASSEMBLY

Page 25 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	0770-331	1		Tank, Fuel - Assembly (inc. 2, 11, 16, & 20) (1000)
2	1673-584	1		Foam, Fuel Tank
3	0624-390	2		Clamp, Hose
4	0670-398	1	S/P	Cap, Filler Neck
5	0670-428	1	S	Neck, Filler
6	0670-688	1		Seal, Filler Neck
7	0670-548	1		Nut, Filler Neck
8	0624-120	17		Clamp, Hose (1000)
9	0710-425	0	/P	Hose, Fuel - 25 ft
10	0624-312	5		Screw, Cap
11	1673-055	1		Tube, Drop
12	1673-373	2		Plate, Backing - Fuel Valve
13	0670-474	1		Gasket, Fuel Sensor
15	0624-090	4		Nut, Lock
16	0670-762	2		Fitting, Outlet (1000)
17	0710-245	1		Hose, Filler
18	0510-335	2	/P	Filter, Fuel
19	0624-125	8	/P	Washer
20	0115-607	1	S	Fitting, Elbow
21	0109-332	1		T-Connection
22	0123-788	2	/P	Tie, Cable
23	0610-059	2		Valve, Check
24	0673-755	1		Vent, Fuel
25	0623-063	1		Clamp, Hose
26	0670-710	1		Valve, Fuel Reserve
28	0623-693	1		Washer
29	0623-687	1		Nut
30	1673-274	1		Knob, Fuel
31	1673-327	4		Spacer, Fuel Tank
32	0620-180	1		Sender, Fuel Level (770/1000)
33	0670-689	1	S	Gasket

1998 TS-L 1000 (98MCC-1998)
HANDLEBAR ASSEMBLY

 Page 26 of 69

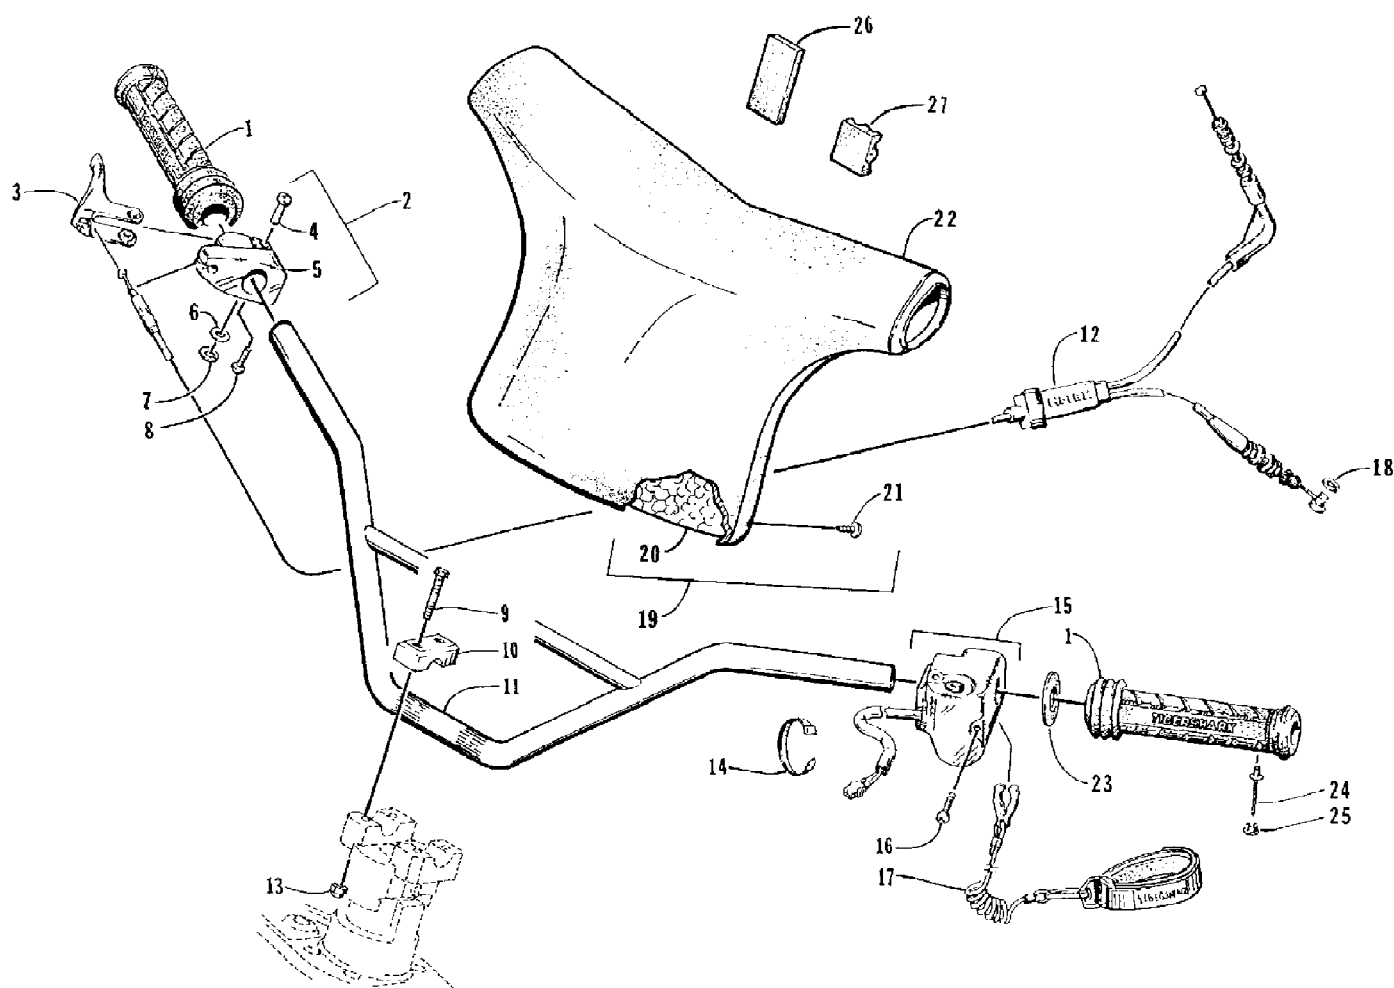


1998 TS-L 1000 (98MCC-1998)
HANDLEBAR ASSEMBLY

Page 27 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	0673-990	2	S	Grip, Handlebar
2	0773-018	1		Throttle, Assembly (inc. 3-8)
3	0605-234	1		Lever, Throttle
4	0605-236	1		Pin, Throttle Lever
5	0605-235	1		Housing, Throttle
6	0624-099	1		Washer
7	0624-113	2		C-Clip
8	0624-091	1		Screw, Machine
9	0624-278	4		Screw, Cap
10	0673-282	2		Cap, Steering Adjuster
11	0773-608	1		Handlebar (770/1000)
12	0687-102	1	/P	Cable, Throttle (1000)
13	0624-250	4		Nut, Lock
14	0123-788	0	/P	Tie, Cable
15	0609-284	1		Switch, Start/Trim/Bilge
16	0	3	F	Screw, Machine
17	0609-427	1	S	Cord, Tether
18	0624-104	1		C-Clip
19	0773-860	1		Handlebar Pad Assembly (inc. 20-22)
20	1673-445	1		Pad, Handlebar
21	0624-350	6	S	Screw, Cap
22	0	1	F	Cover, Handlebar Pad
23	1673-095	1		Washer, Rubber - Handlebar
24	0624-216	2		Rivet
25	1673-111	2		Plug
26	1673-624	1		Pad
27	0617-296	1		Pad, Spacer

1998 TS-L 1000 (98MCC-1998)
HATCH COVER AND STORAGE TRAY

 Page 28 of 69

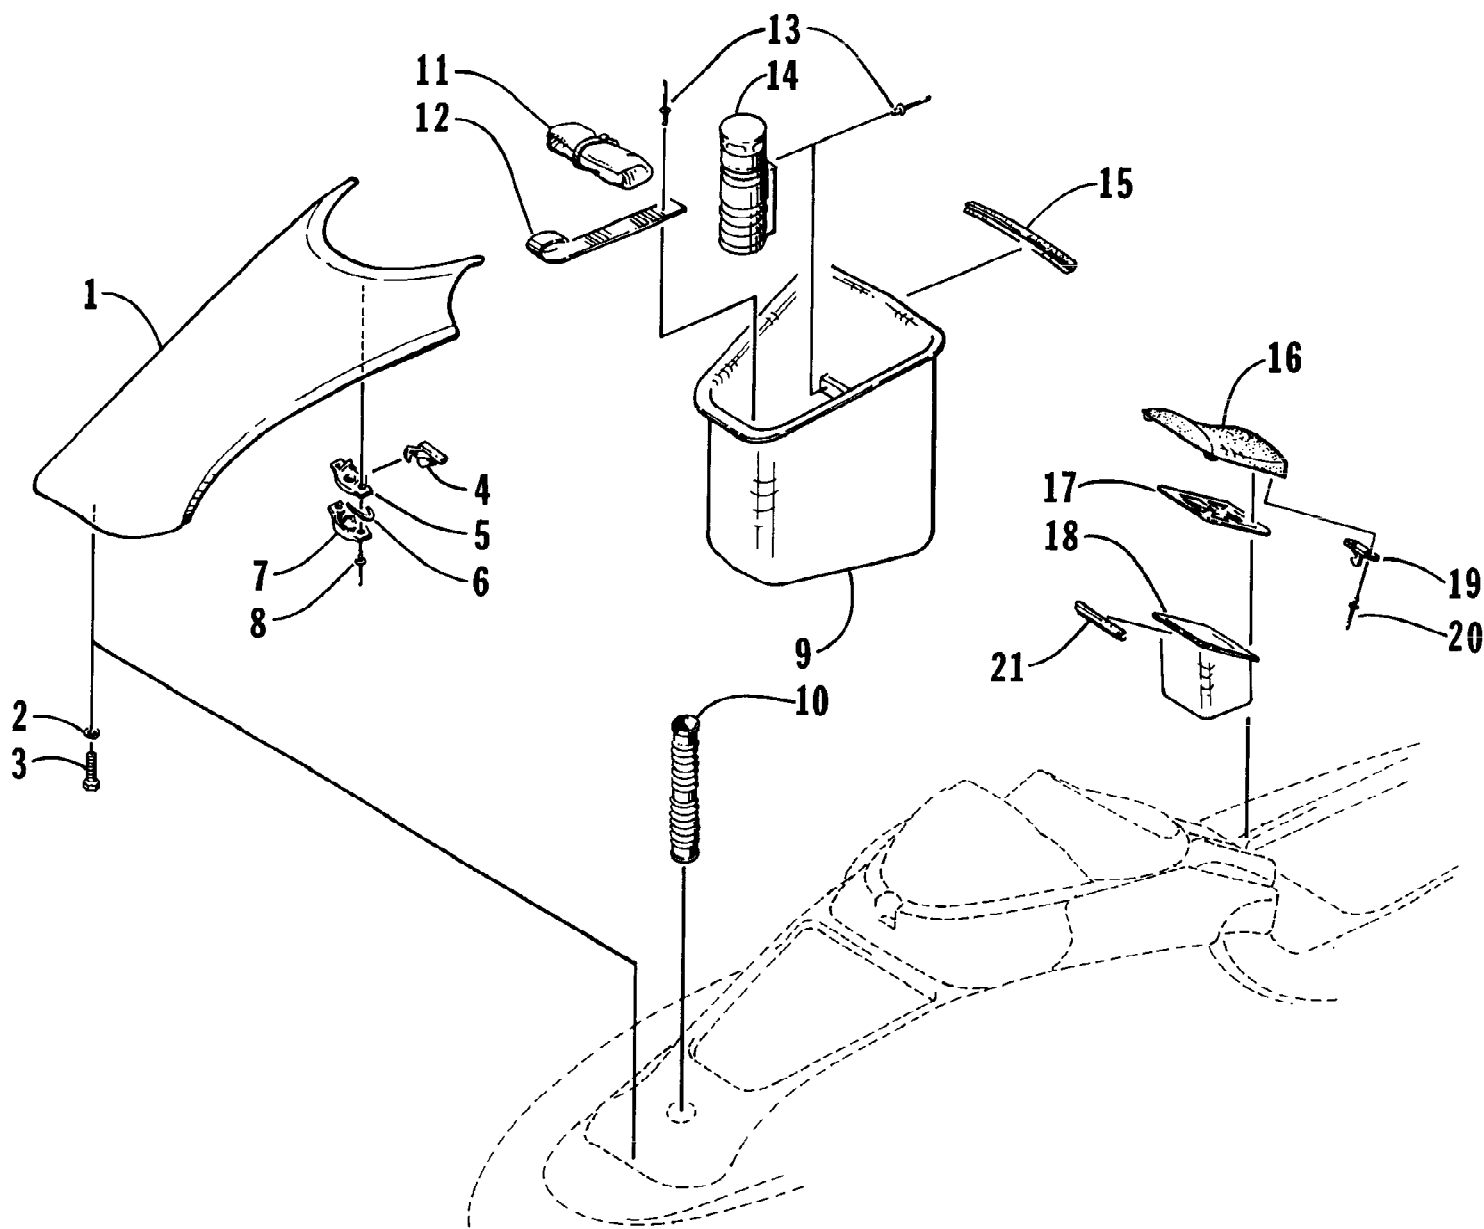

1998 TS-L 1000 (98MCC-1998)


Page 29 of 69

HATCH COVER AND STORAGE TRAY

Ref #	Part Number	Qty	S/P/F	Description
1	1673-534	1	S	Cover, Hatch (1000)
2	0624-115	3		Washer, Lock
3	0624-432	3		Screw, Cap
4	1673-459	1		Lever, Hatch Latch
5	1673-461	1		Housing, Upper - Hatch Latch
6	1673-465	1		Spring - Hatch Latch
7	1673-462	1		Housing, Lower - Hatch Latch
8	0623-778	2		Rivet
9	1673-566	1	/P	Tray, Storage
10	0610-340	2		Hose, Air Intake
11	0678-399	1		Kit, Tool
12	0773-217	1		Tiedown, Tool Kit
13	0623-685	5		Rivet
14	1673-046	1		Tube, Fire Extinguisher
15	1673-567	1	/P	Seal, Hatch
16	1673-561	1		Cover, Glove Box (1000)
17	1673-576	1		Net, Cargo
18	1673-482	1		Box, Glove
19	1673-516	1		Strike, Latch - Glove Box
20	8060-230	2		Rivet
21	1673-494	1		Seal, Glove Box

1998 TS-L 1000 (98MCC-1998)
HULL AND RELATED PARTS ASSEMBLY

 Page 30 of 69

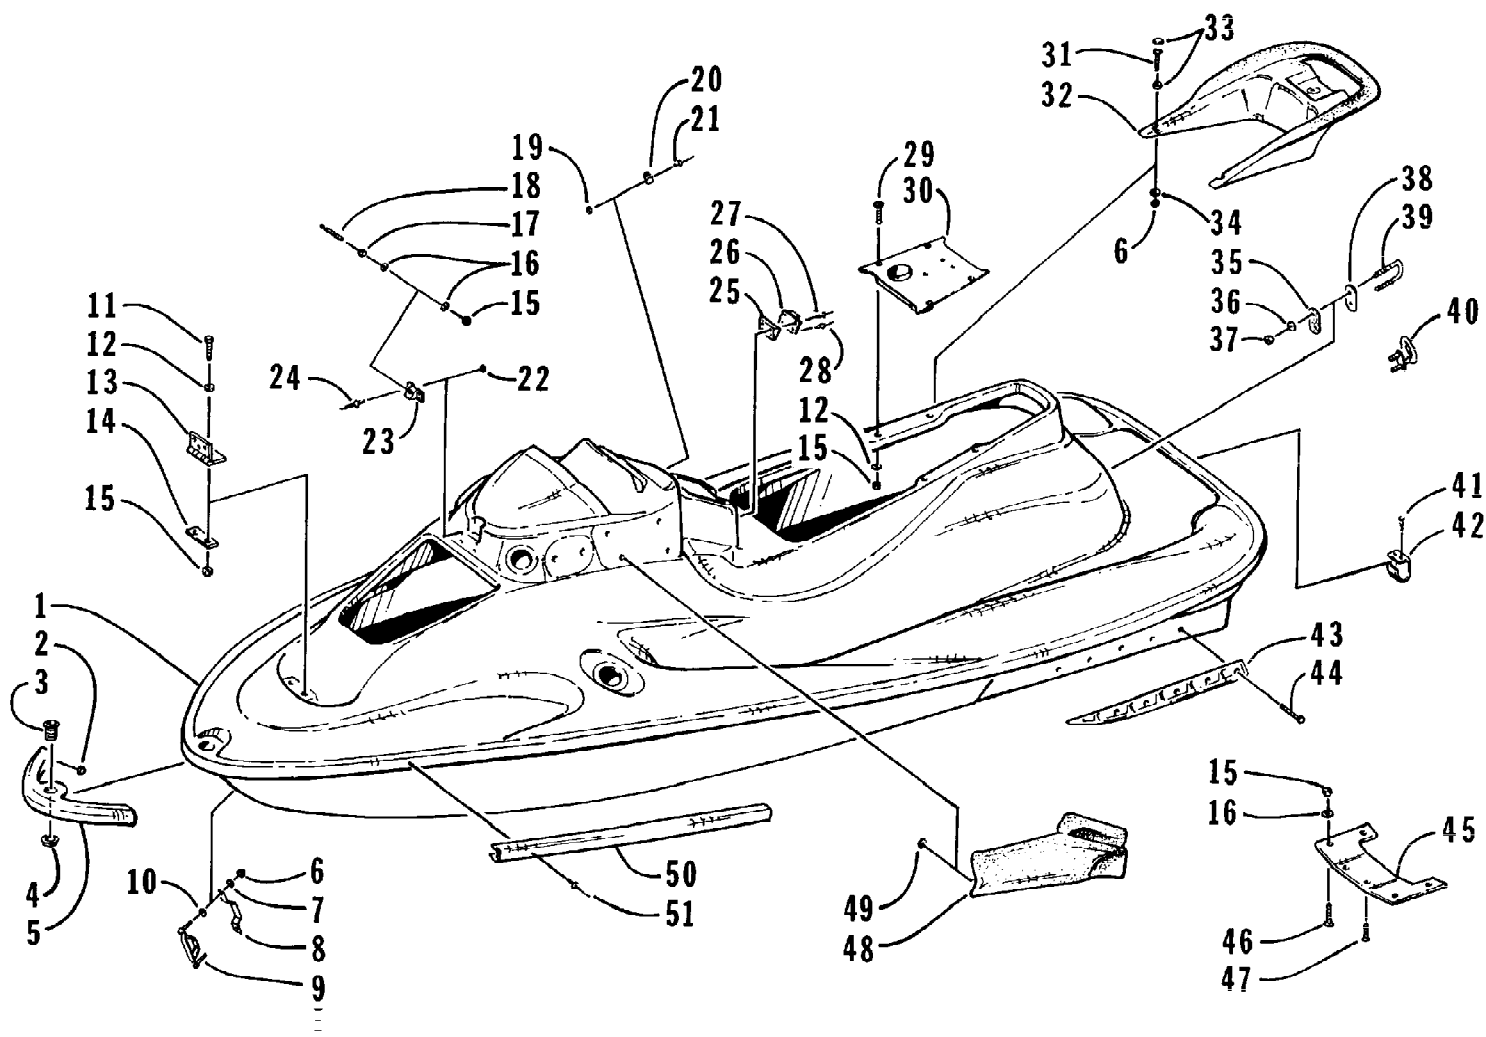

1998 TS-L 1000 (98MCC-1998)


Page 31 of 69

HULL AND RELATED PARTS ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0773-936	1		Hull/Deck - Assembly (1000)
2	0624-005	2	/P	Nut
3	1673-479	1		Boweye
4	0623-753	1	/P	Nut
5	1673-542	1	S	Nose, Cone (1000)
6	0624-089	6		Nut, Lock
7	0624-247	2		Washer
8	0673-897	1		Strap, Reinforcement
9	0773-516	1	/P	Boweye
10	0624-299	2		Washer, Sealing
11	0624-112	2	/P	Screw, Cap
12	0624-022	6		Washer
13	1673-032	1		Hinge, Hatch Assembly
14	1673-031	1		Plate, Hinge
15	0624-250	11		Nut, Lock
16	0624-182	6		Washer
17	0624-059	1		Nut
18	1673-467	1		Stud, Strike
19	0623-603	2		Washer
20	1673-578	1		Receiver, Glove Box Lid - Starboard
20	1673-579	1		Receiver, Glove Box Lid - Port
21	8060-633	2	/P	Rivet
22	0624-004	4		Washer
23	1673-483	1		Strike, Hatch Cover
24	0624-072	4		Rivet
25	1673-609	1		Wedge, Latch
26	1673-592	1		Latch, Glove Box Lid
27	0623-763	2		Rivet
28	8060-211	2		Rivet
29	0624-184	4		Screw, Machine
30	1673-480	1		Bridge, Seat
31	0624-271	4		Screw, Cap
32	1673-417	1		Handle, Grab
33	0124-054	14	/P	Snap Cap w/Washer
34	0624-228	4		Washer
35	1673-083	1		Gasket, Eyehook
37	0624-258	2		Nut
40	0624-436	1	S	Eyehook (770/1000)
41	0623-750	8		Clip, Retainer (1000)
42	1673-539	1		Cover, Rub Rail (1000)
43	0673-996	1		Sponson - Starboard
43	0673-997	1		Sponson - Port
44	0624-271	10		Screw, Cap
45	0675-179	1		Plate, Ride
46	0624-186	4		Screw, Machine
47	0624-184	2		Screw, Machine
48	1673-562	1		Pad, Knee - Starboard (1000)
48	1673-563	1		Pad, Knee - Port (1000)
49	0624-466	20		Clip, Retainer
49	0623-737	10		Insert, Brass
50	1673-508	1		Trim, Rub Rail - Starboard (1000)
50	1673-509	1		Trim, Rub Rail - Port (1000)
51	0624-068	1		

1998 TS-L 1000 (98MCC-1998)
IGNITION COIL

 Page 32 of 69

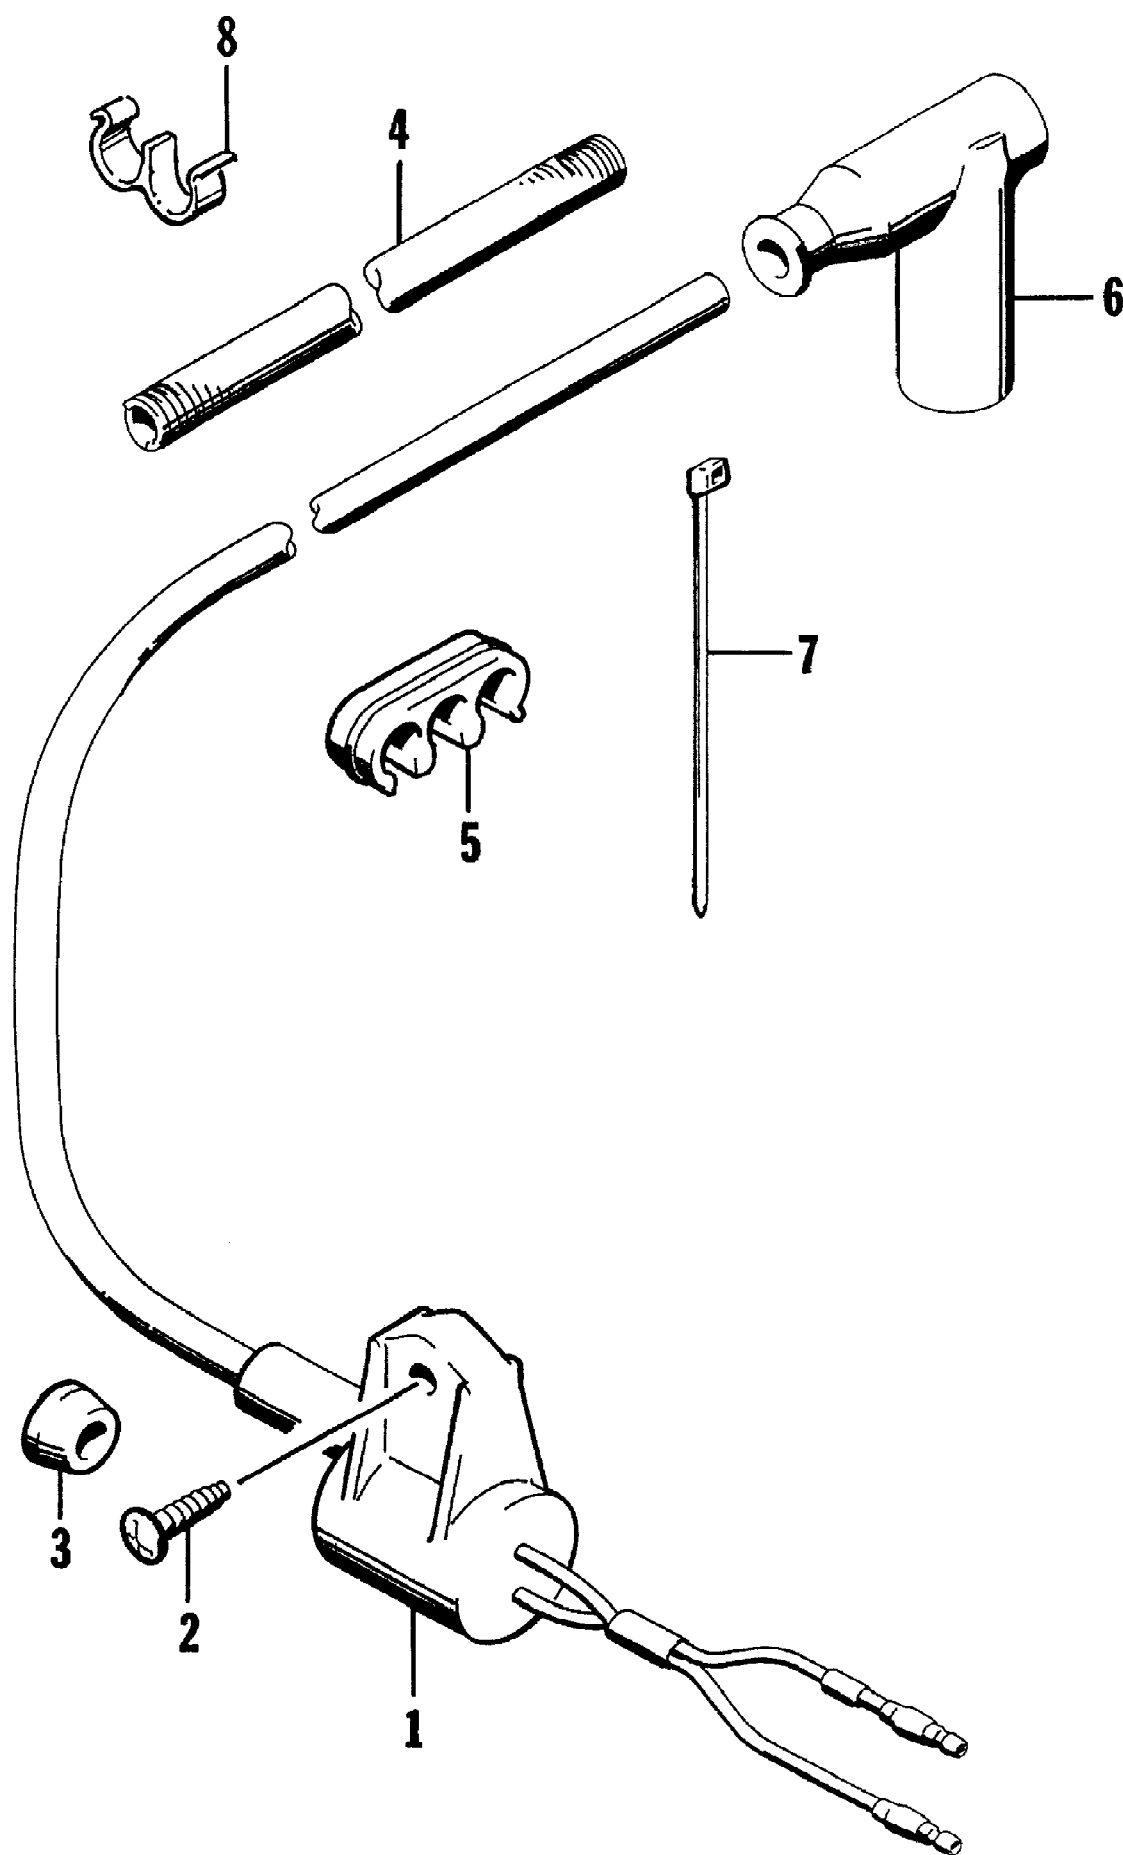


1998 TS-L 1000 (98MCC-1998)
IGNITION COIL

Page 33 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	3008-523	3	/P	Coil Assembly, Ignition
2	3008-321	3		Screw, Cap
3	3008-334	3	/P	Grommet
4	3008-445	3		Protector, Lead Wire
5	3008-252	1		Clip
6	3003-737	3	S	Cap Assembly, Spark Plug
7	3003-787	3		Tie, Cable
8	3008-045	1		Clip, Tube

1998 TS-L 1000 (98MCC-1998)
IMPELLER DRIVE ASSEMBLY

 Page 34 of 69

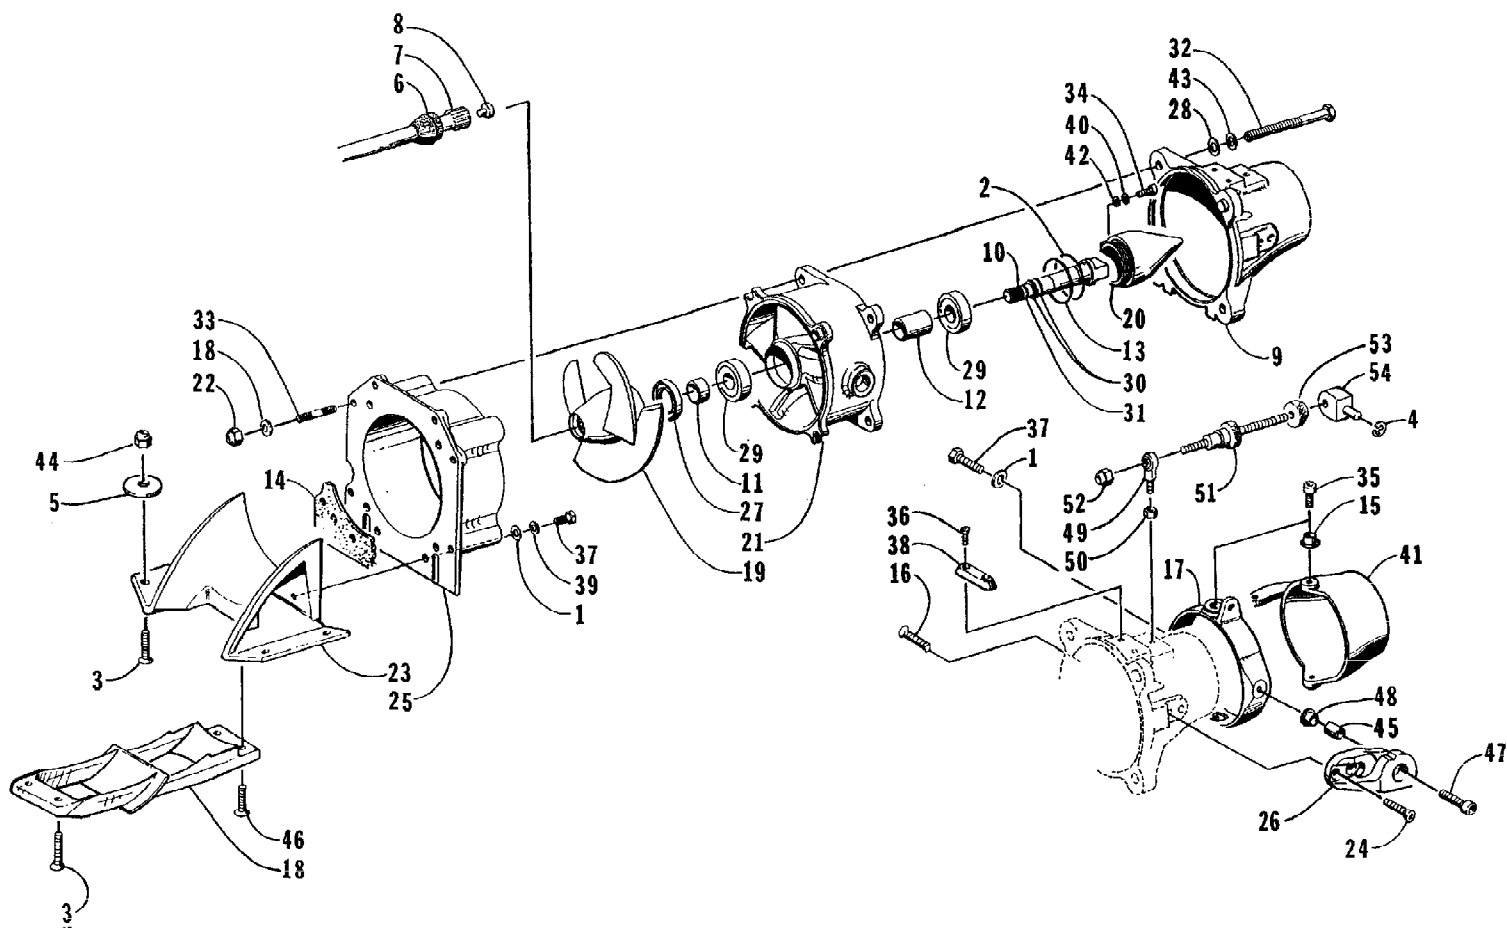

1998 TS-L 1000 (98MCC-1998)
IMPELLER DRIVE ASSEMBLY

Page 35 of 69


Ref #	Part Number	Qty	S/P/F	Description
1	0624-028	9		Washer
2	0675-078	1		O-Ring
3	0624-186	6		Screw, Machine
4	0624-446	1		Ring, Retaining
5	0624-182	4		Washer, Sealing
6	0675-187	1		Grommet, Seal
7	0675-205	1		Driveshaft (1000)
8	0673-618	2	/P	Bumper, Driveshaft
9	0675-215	1		Venturi (640/1000)
10	0675-163	1	S	Shaft, Rear - Impeller
11	0675-085	1		Spacer, Impeller
12	0675-084	1		Spacer, Bearing
13	0675-127	1		O-Ring
14	0675-230	1		Gasket, Pump
15	1673-593	2	/P	Bushing
16	0624-272	1		Screw, Machine
17	0675-222	1		Ring, Trim
18	0675-239	1		Grate, Inlet
19	0675-142	1		Impeller (1000)
20	0675-146	1		Endcap, Stator (1000)
21	0675-108	1	S	Stator (1000)
22	0624-090	6		Nut, Lock
23	0675-199	1		Ramp, Inlet
24	0624-273	3		Screw, Machine
25	0775-069	1	/P	Ring, Wear
26	0675-251	1	/P	Strike, Reverse - Starboard
26	0675-087	1	S	Strike, Reverse - Port
27	0675-119	1	S	Seal
28	0624-008	4		Washer
29	0673-609	2		Bearing, Stator
30	0673-608	2		O-Ring
31	0673-607	1		O-Ring
32	0624-386	4		Screw, Cap
33	0624-319	6		Stud
34	0624-314	2		Screw, Cap
35	0624-174	2		Screw, Cap
36	0624-184	2		Screw, Machine
37	0624-026	3		Screw, Cap
38	0624-084	1		Anode, Zinc
39	0624-027	2		Washer, Lock
40	0624-036	2		Washer, Lock
41	0675-208	1		Nozzle, Steering
42	0624-022	2		Washer
43	0624-012	4		Washer, Lock
44	0624-250	6		Nut, Lock
45	0624-452	2		Spacer
46	0624-183	2		Screw, Cap
47	0624-471	1		Screw, Cap
48	1673-630	4		Bushing
49	0675-201	1		Rod, End
50	0624-460	1		Nut, Jam
51	0675-200	1		Shaft, Trim
52	0624-090	1		Nut, Lock

1998 TS-L 1000 (98MCC-1998)
IMPELLER DRIVE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
53	0675-202	1		Lockwheel, Trim
54	0675-203	1		Block, Adjustment

1998 TS-L 1000 (98MCC-1998)
INSTRUMENT ASSEMBLY

 Page 37 of 69

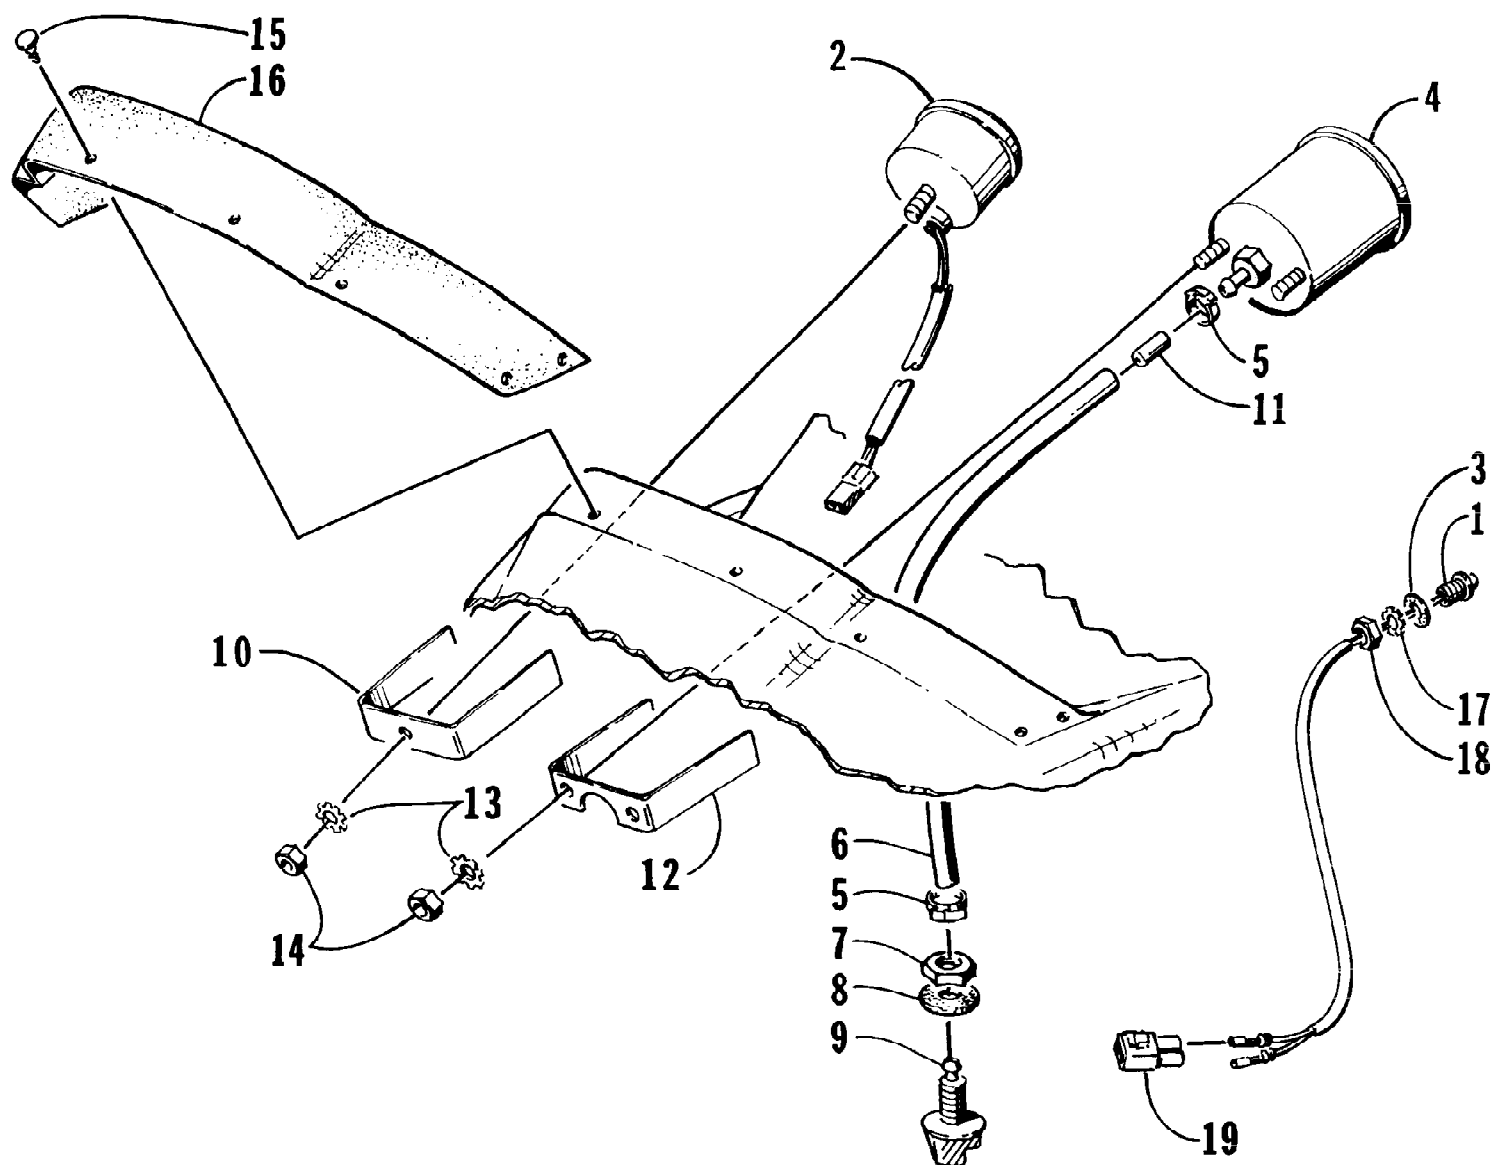


1998 TS-L 1000 (98MCC-1998)
INSTRUMENT ASSEMBLY

Page 38 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	0609-444	1	/P/F	Light, Low Oil Warning (640)
3	0623-774	1	F	Seal, Light (640)
4	0620-219	1		Speedometer (770/1000)
5	0123-811	2		Clamp (770/1000)
6	0673-809	0	/P	Hose (770/1000)
7	0673-348	1		Nut, Pitot (770/1000)
8	0673-349	1		Seal, Pitot (770/1000)
9	0673-362	1	S	Pitot (770/1000)
10	0620-173	2		Backclamp, Fuel Gauge (770/1000)
11	1673-427	1	/P	Fitting, Restrictor - Speedometer (770/1000)
2	0620-214	1	/P	Gauge, Fuel (770/1000)
12	0620-199	2		Backclamp, Speedometer (770/1000)
13	0623-702	3		Washer, Star (770/1000)
14	0623-701	3		Nut (770/1000)
15	0623-725	8	/P	Clip, Retainer
16	1673-456	1	S	Visor
17	0624-480	1	F	Washer, Star (640)
18	0624-481	1	F	Nut (640)
19	0609-445	1	F	Connector, Low Oil Warning Light (640)

1998 TS-L 1000 (98MCC-1998)
INTAKE ASSEMBLY

 Page 39 of 69

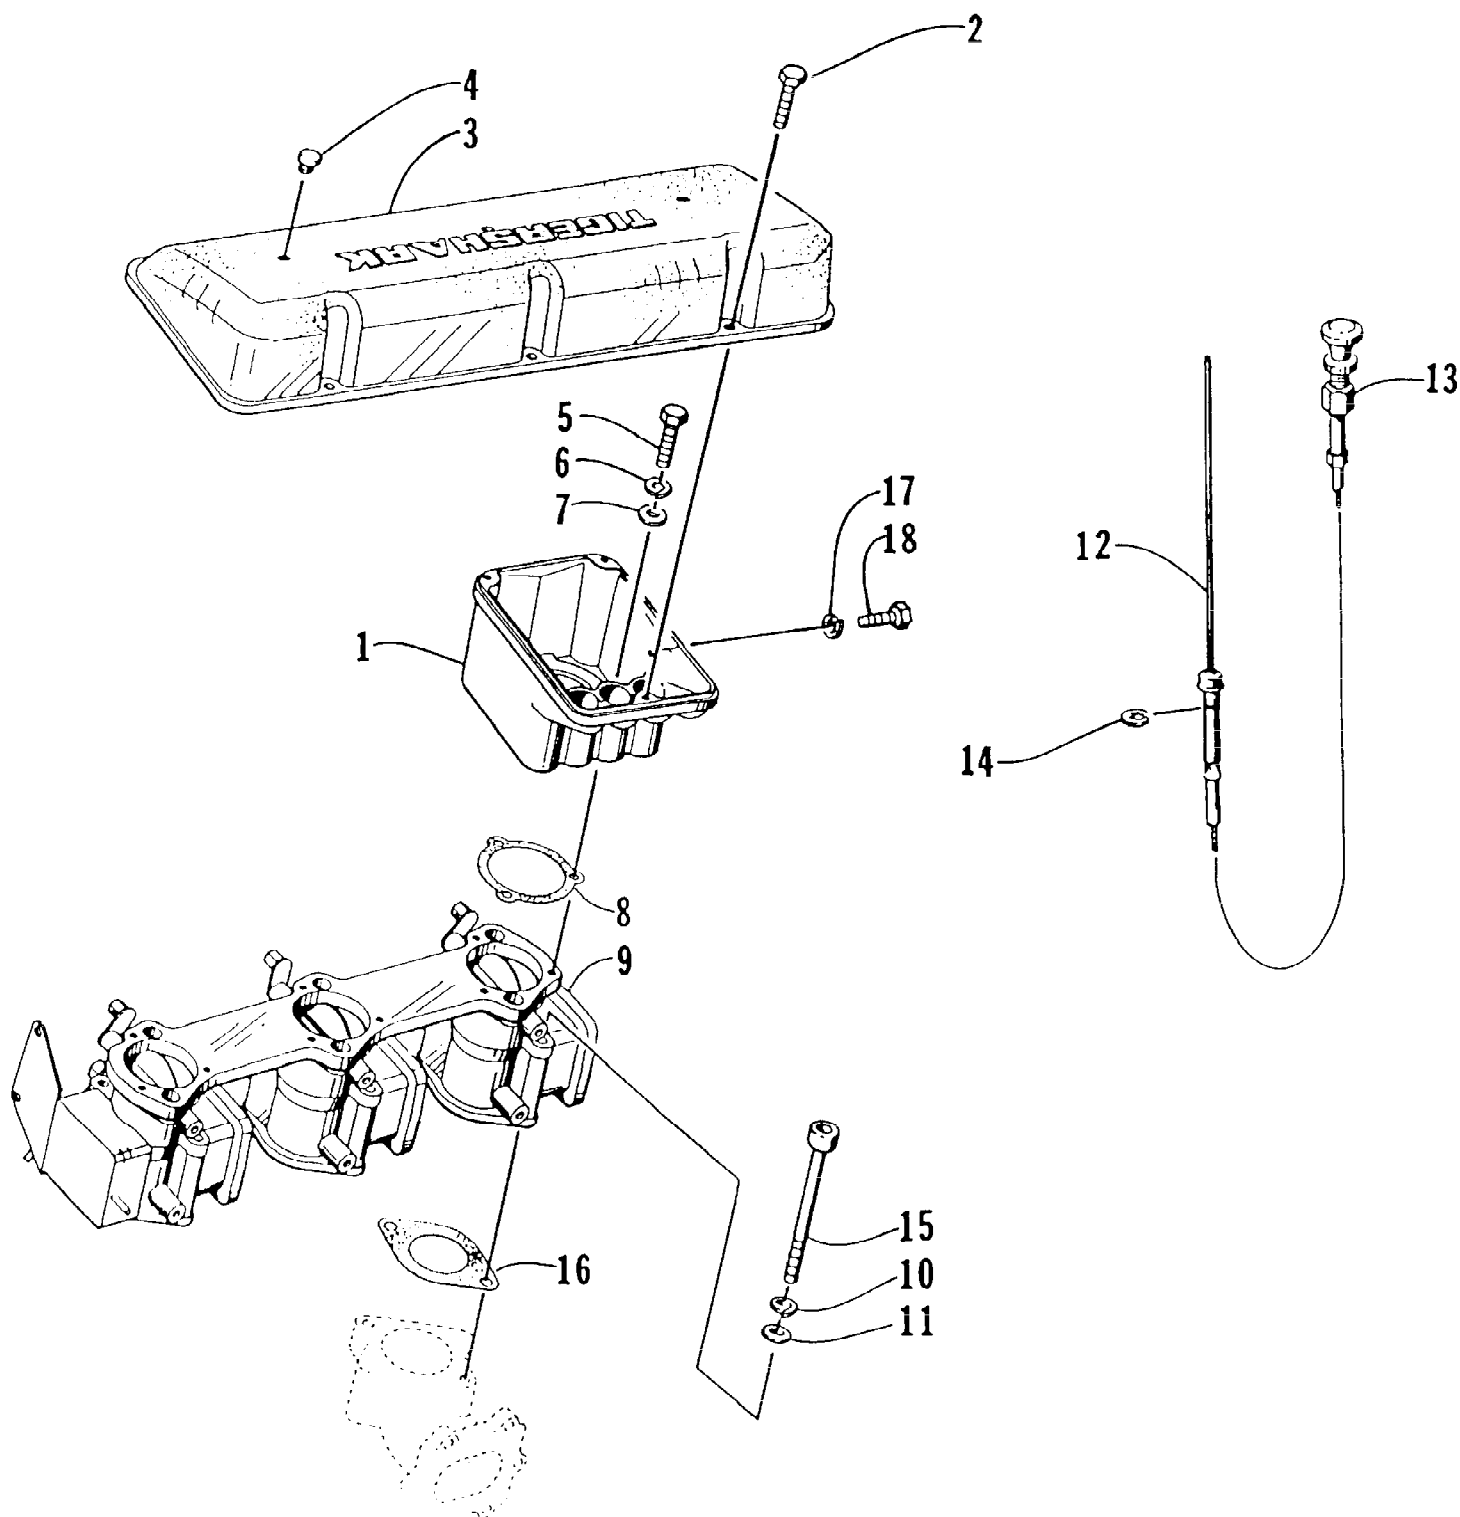


1998 TS-L 1000 (98MCC-1998)
INTAKE ASSEMBLY

Page 40 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	1673-403	2		Base, Sound Attenuator
1	1673-375	1		Base, Sound Attenuator - Center
2	0624-408	9		Screw, Cap
3	1673-332	1		Cover, Sound Attenuator
4	1606-038	3		Plug
5	0624-112	9	/P	Screw, Cap
6	0624-036	9		Washer, Lock
7	0624-022	9		Washer
8	1673-091	3		Gasket, Sound Attenuator
9	0670-884	1		Carburetor Assembly
10	0624-027	6		Washer, Lock
11	0624-028	6		Washer
12	0687-105	1		Cable, Choke
13	0687-051	1	/P	Nut, Choke Cable
14	0624-268	1		Ring, Retaining
15	0624-338	6	/P	Screw, Cap
16	1673-415	3		Gasket, Intake
17	0624-200	4		Washer, Lock
18	0624-155	2		Screw, Cap

1998 TS-L 1000 (98MCC-1998)
MAGNETO

 Page 41 of 69

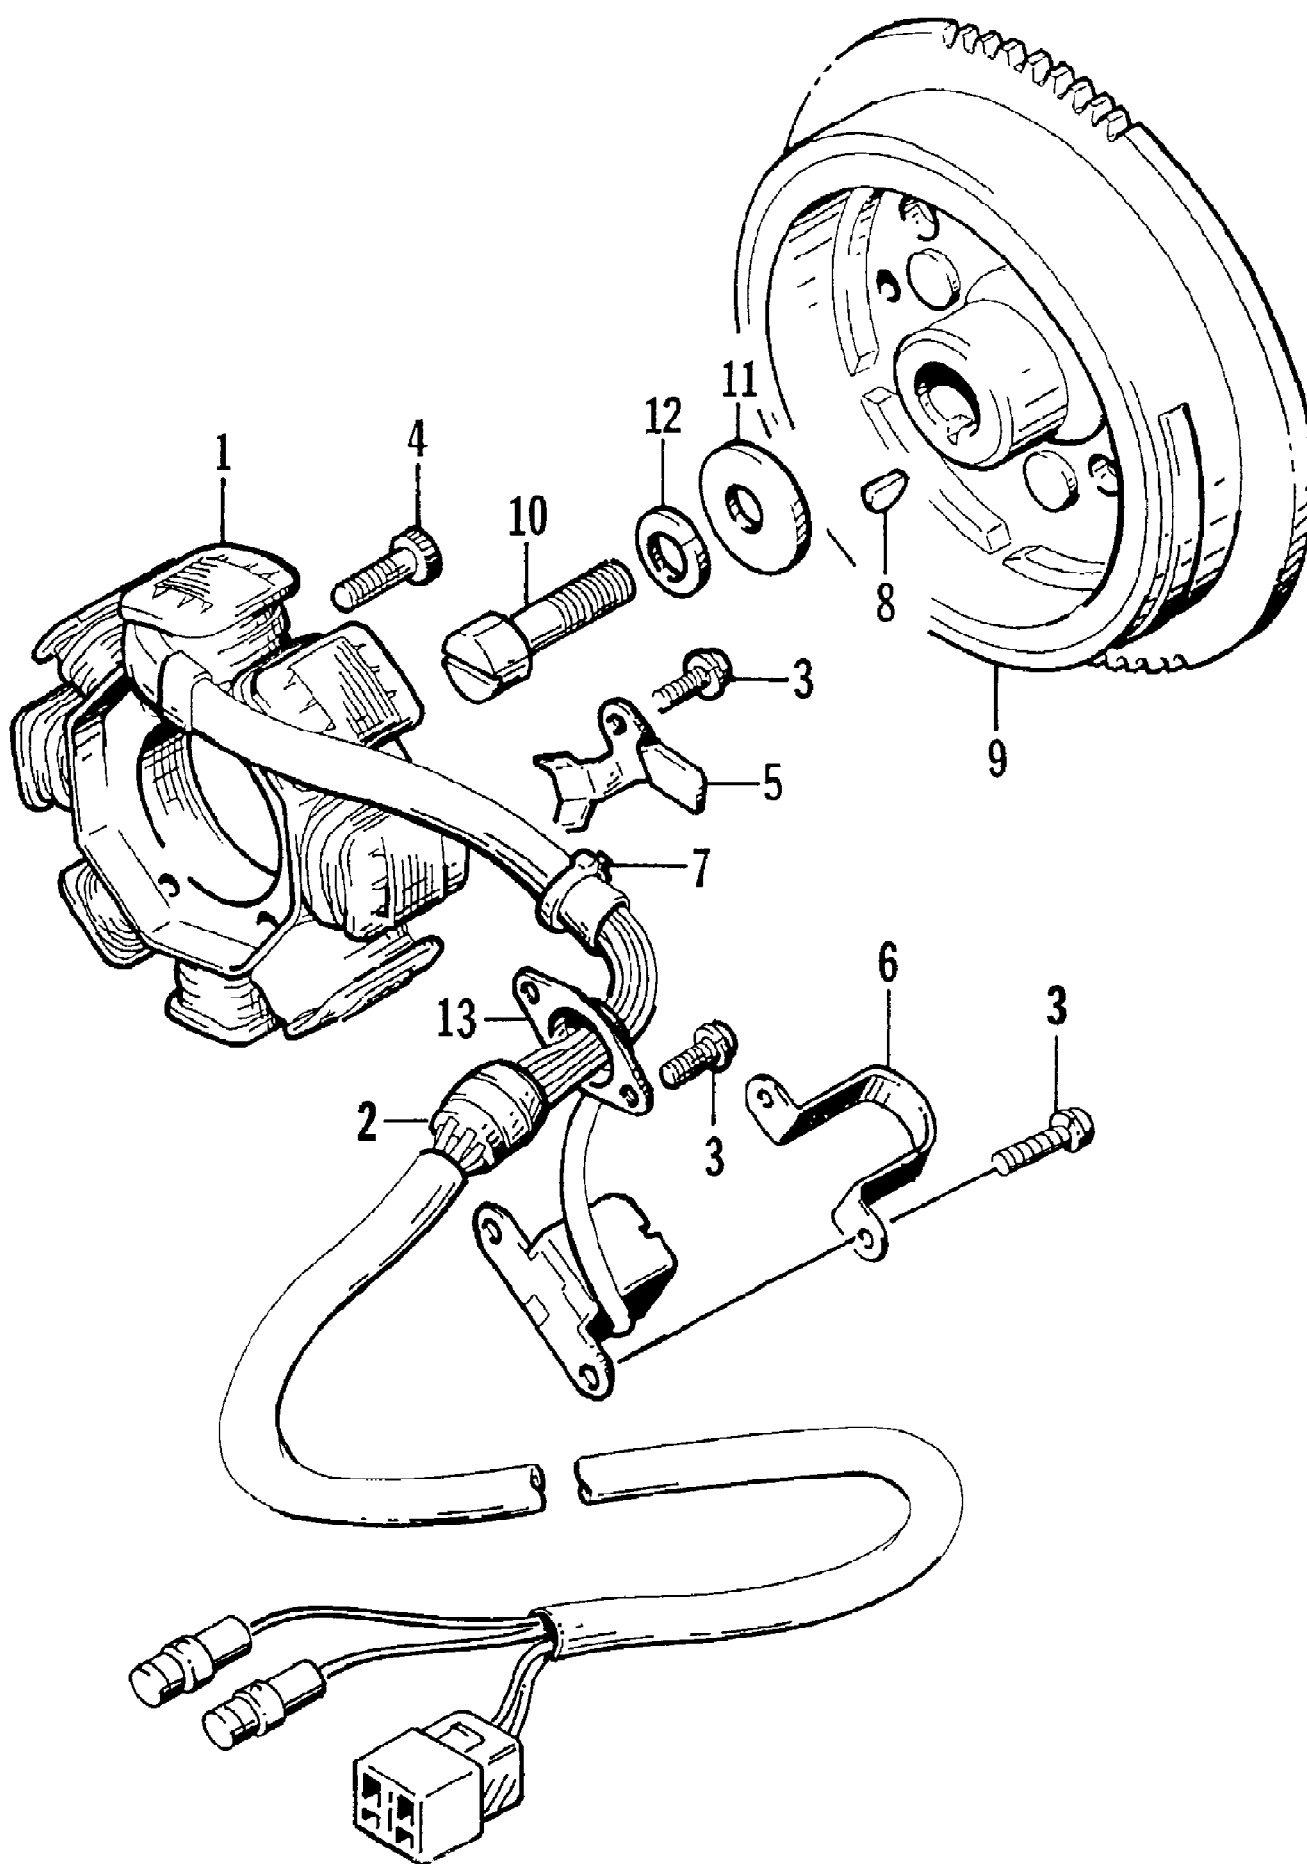


1998 TS-L 1000 (98MCC-1998)
MAGNETO

Page 42 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	3008-315	1		Stator
2	3008-278	1		Grommet
3	3004-706	5	S/P	Screw, Cap
4	3004-484	3	S	Screw, Cap
5	3008-109	1		Holder
6	3008-331	1	/P	Clamp
7	0693-275	1		Clamp
8	3004-540	1	/P	Key
9	3008-571	1		Flywheel
10	3008-448	1		Screw, Cap
11	3008-017	1		Washer
12	3004-362	1	S/P	Washer, Lock
13	3008-110	1		Holder, Grommet

1998 TS-L 1000 (98MCC-1998)
MAGNETO CASE

 Page 43 of 69

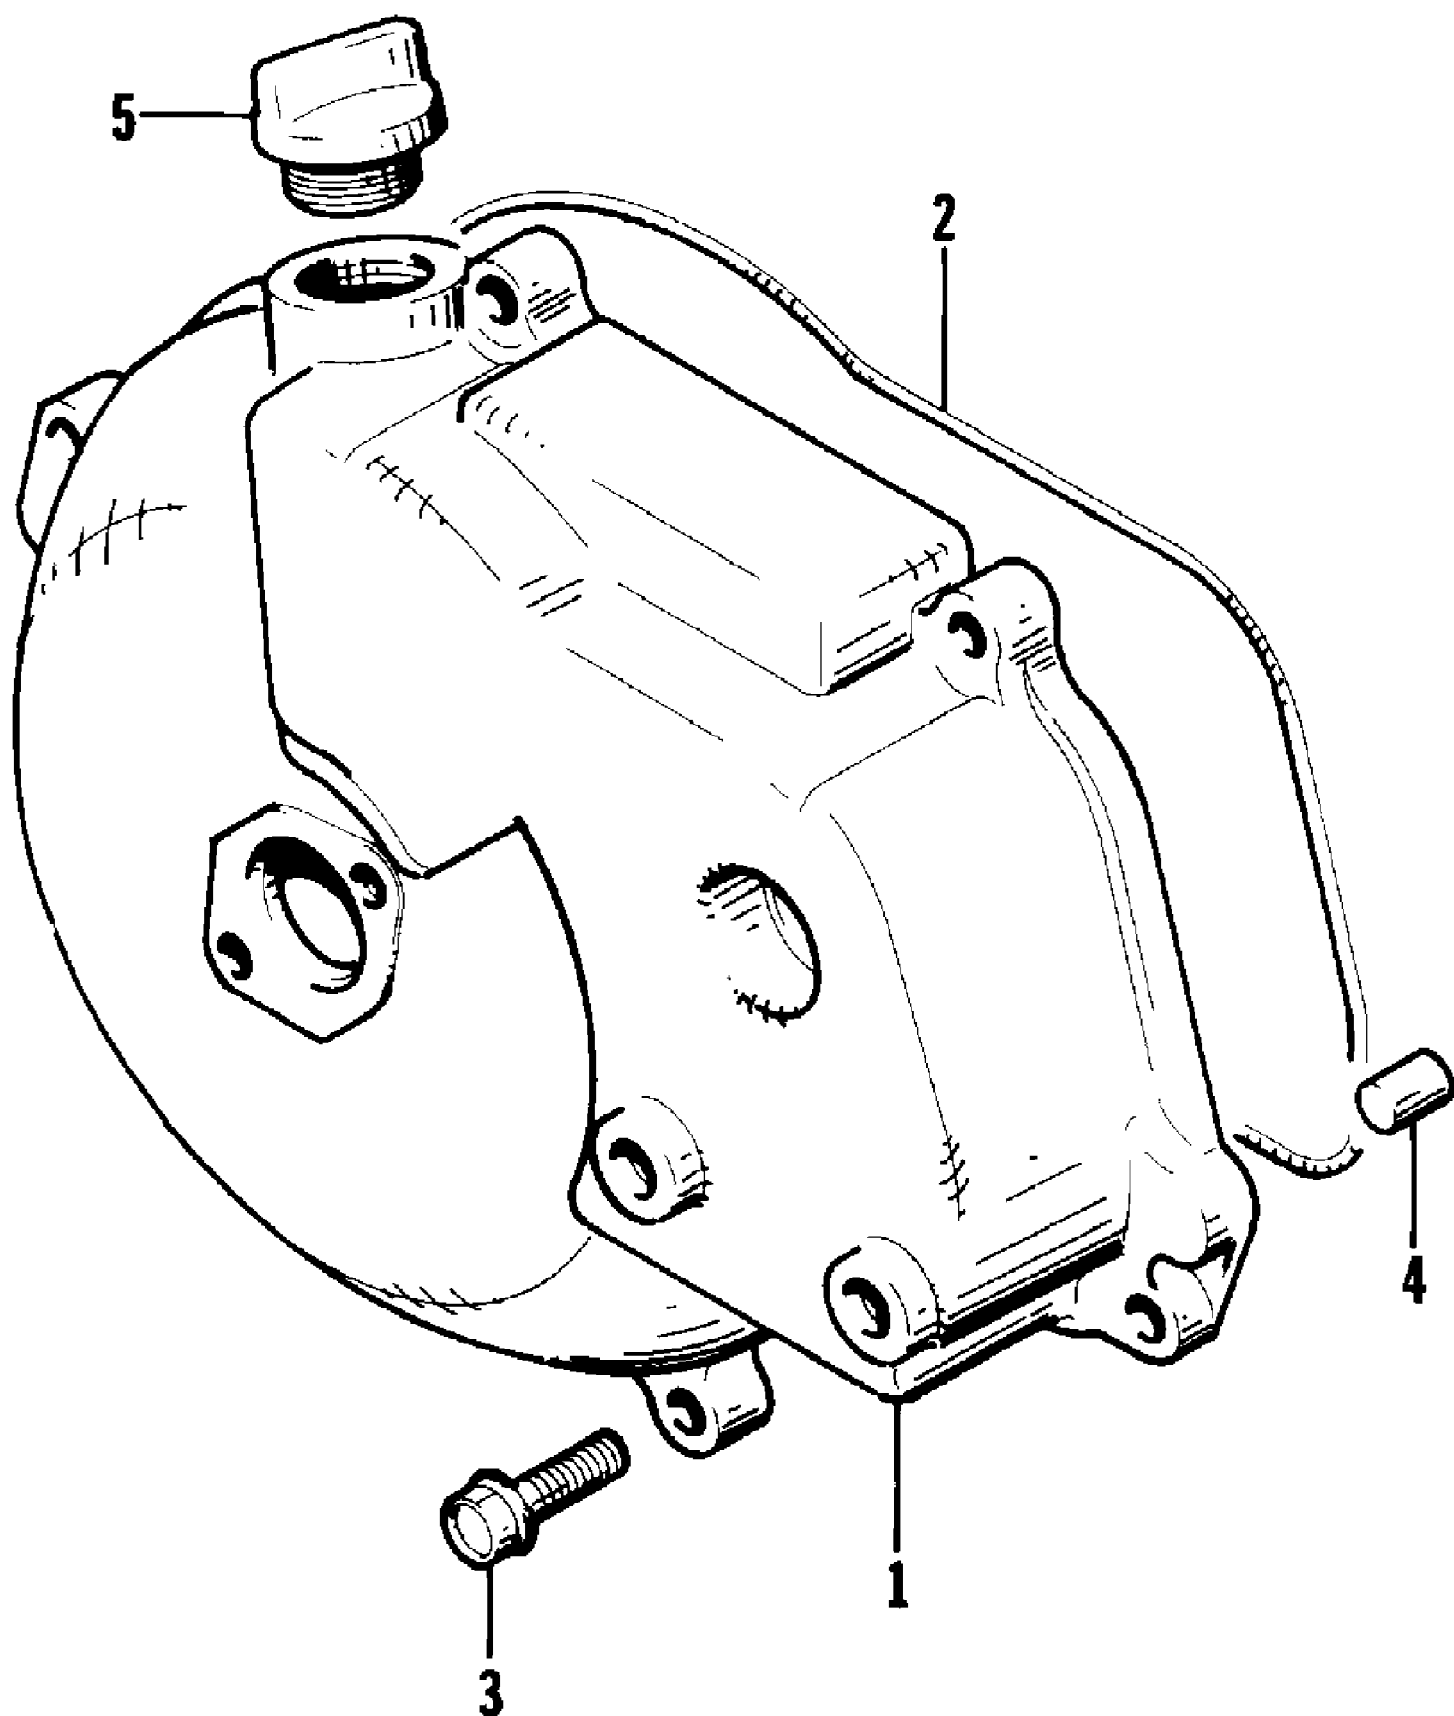


1998 TS-L 1000 (98MCC-1998)
MAGNETO CASE

Page 44 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	3008-238	1	/P	Case, Magneto
2	3008-053	1		O-Ring
3	3008-213	6	/P	Screw, Cap
4	3008-146	2		Pin
5	3008-023	1		Plug

1998 TS-L 1000 (98MCC-1998)
MUFFLER ASSEMBLY

 Page 45 of 69

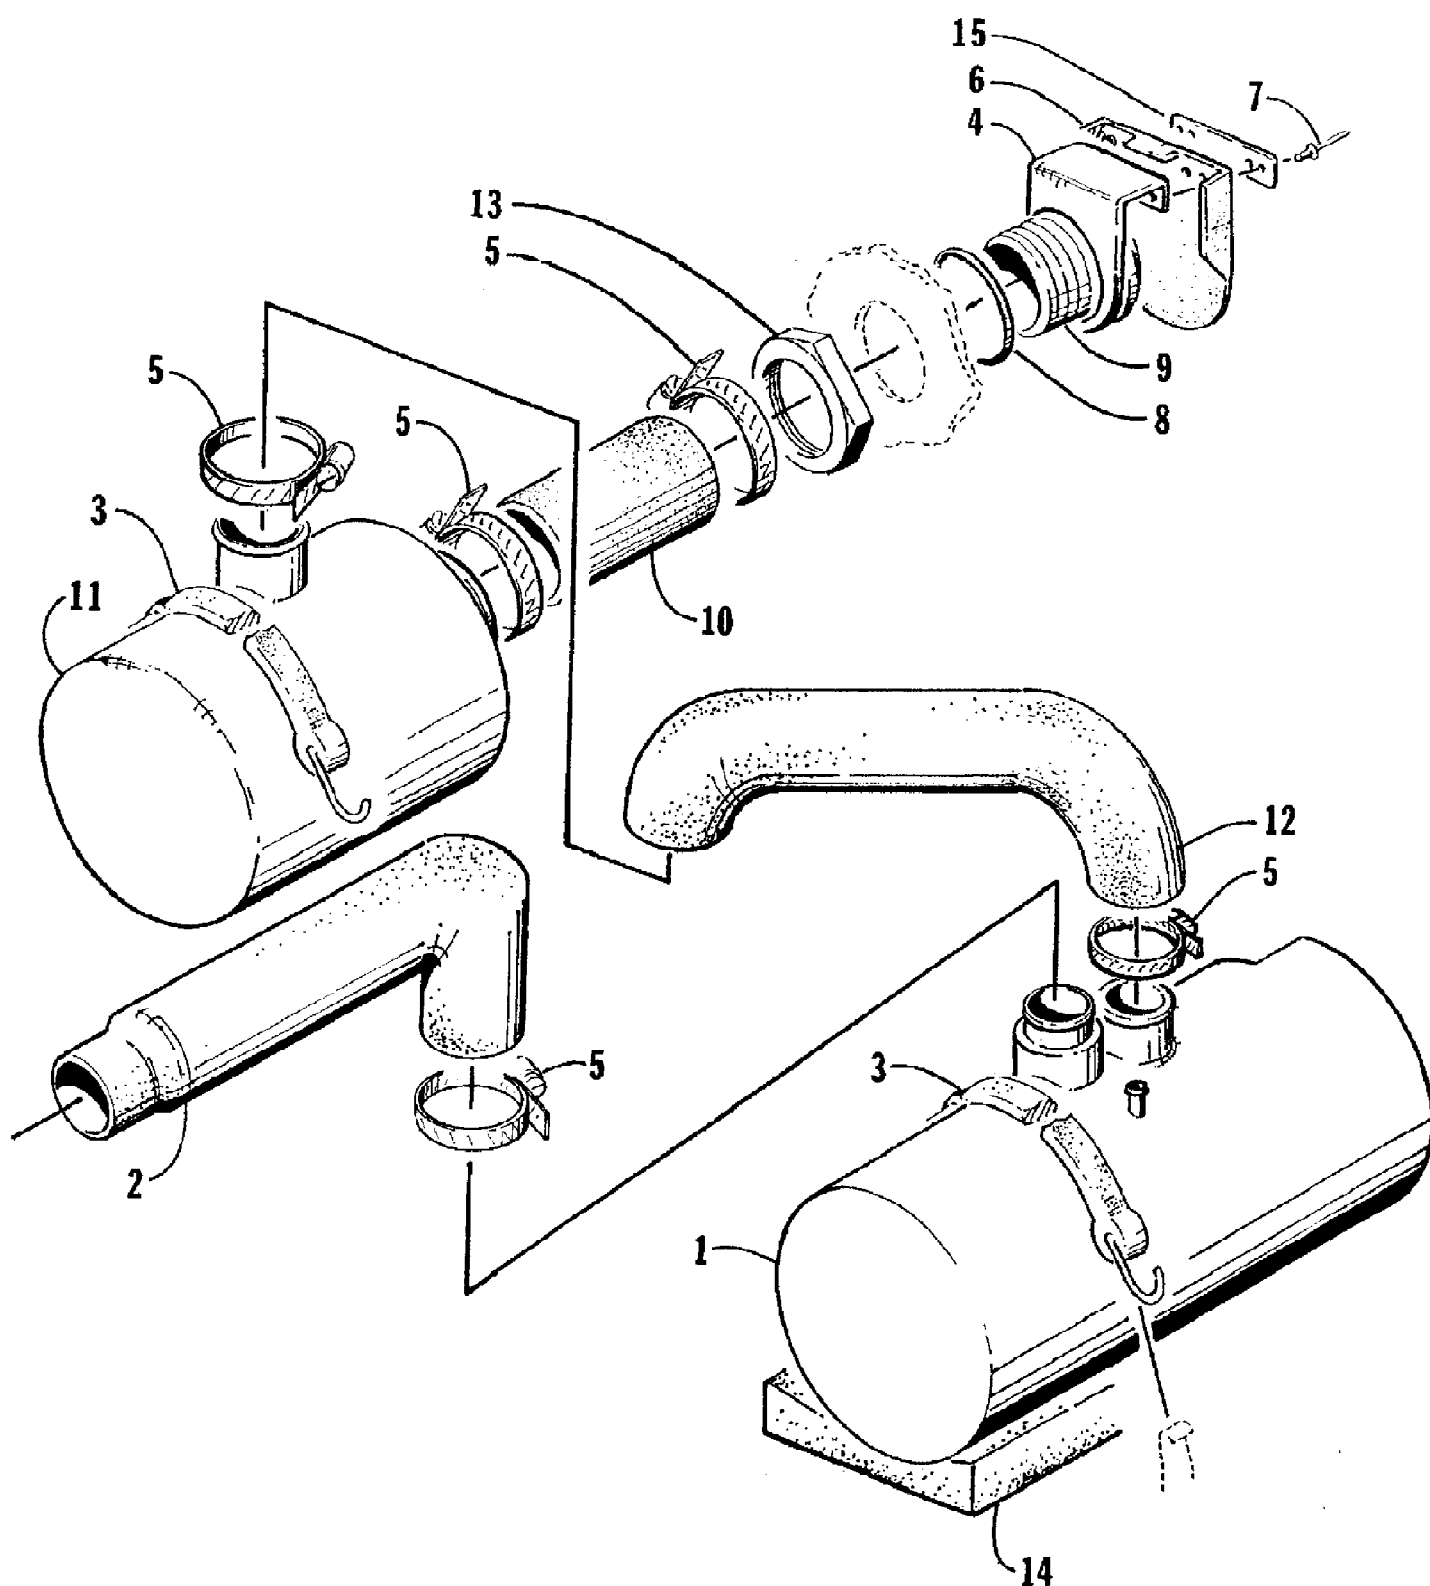


1998 TS-L 1000 (98MCC-1998)
MUFFLER ASSEMBLY

Page 46 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	0712-316	1		Muffler
2	0610-321	1		Hose, Exhaust - In
3	0773-944	4		Tiedown, Muffler
4	1673-411	1		Bracket
5	0624-169	5		Clamp, Hose
6	1673-413	1		Flap
7	0623-590	4		Rivet
8	0612-676	1		Gasket, Exhaust - Foam
9	0612-762	1	/P	Outlet, Exhaust
10	0610-371	1		Hose, Exhaust - Out
11	0712-338	1		Muffler, Secondary
12	0610-370	1		Hose, Exhaust - Intermediate
13	0612-576	1		Nut, Exhaust Outlet
14	1673-585	1		Foam, Support - Muffler
15	1673-412	1		Plate, Backing

1998 TS-L 1000 (98MCC-1998)
OIL PUMP

 Page 47 of 69

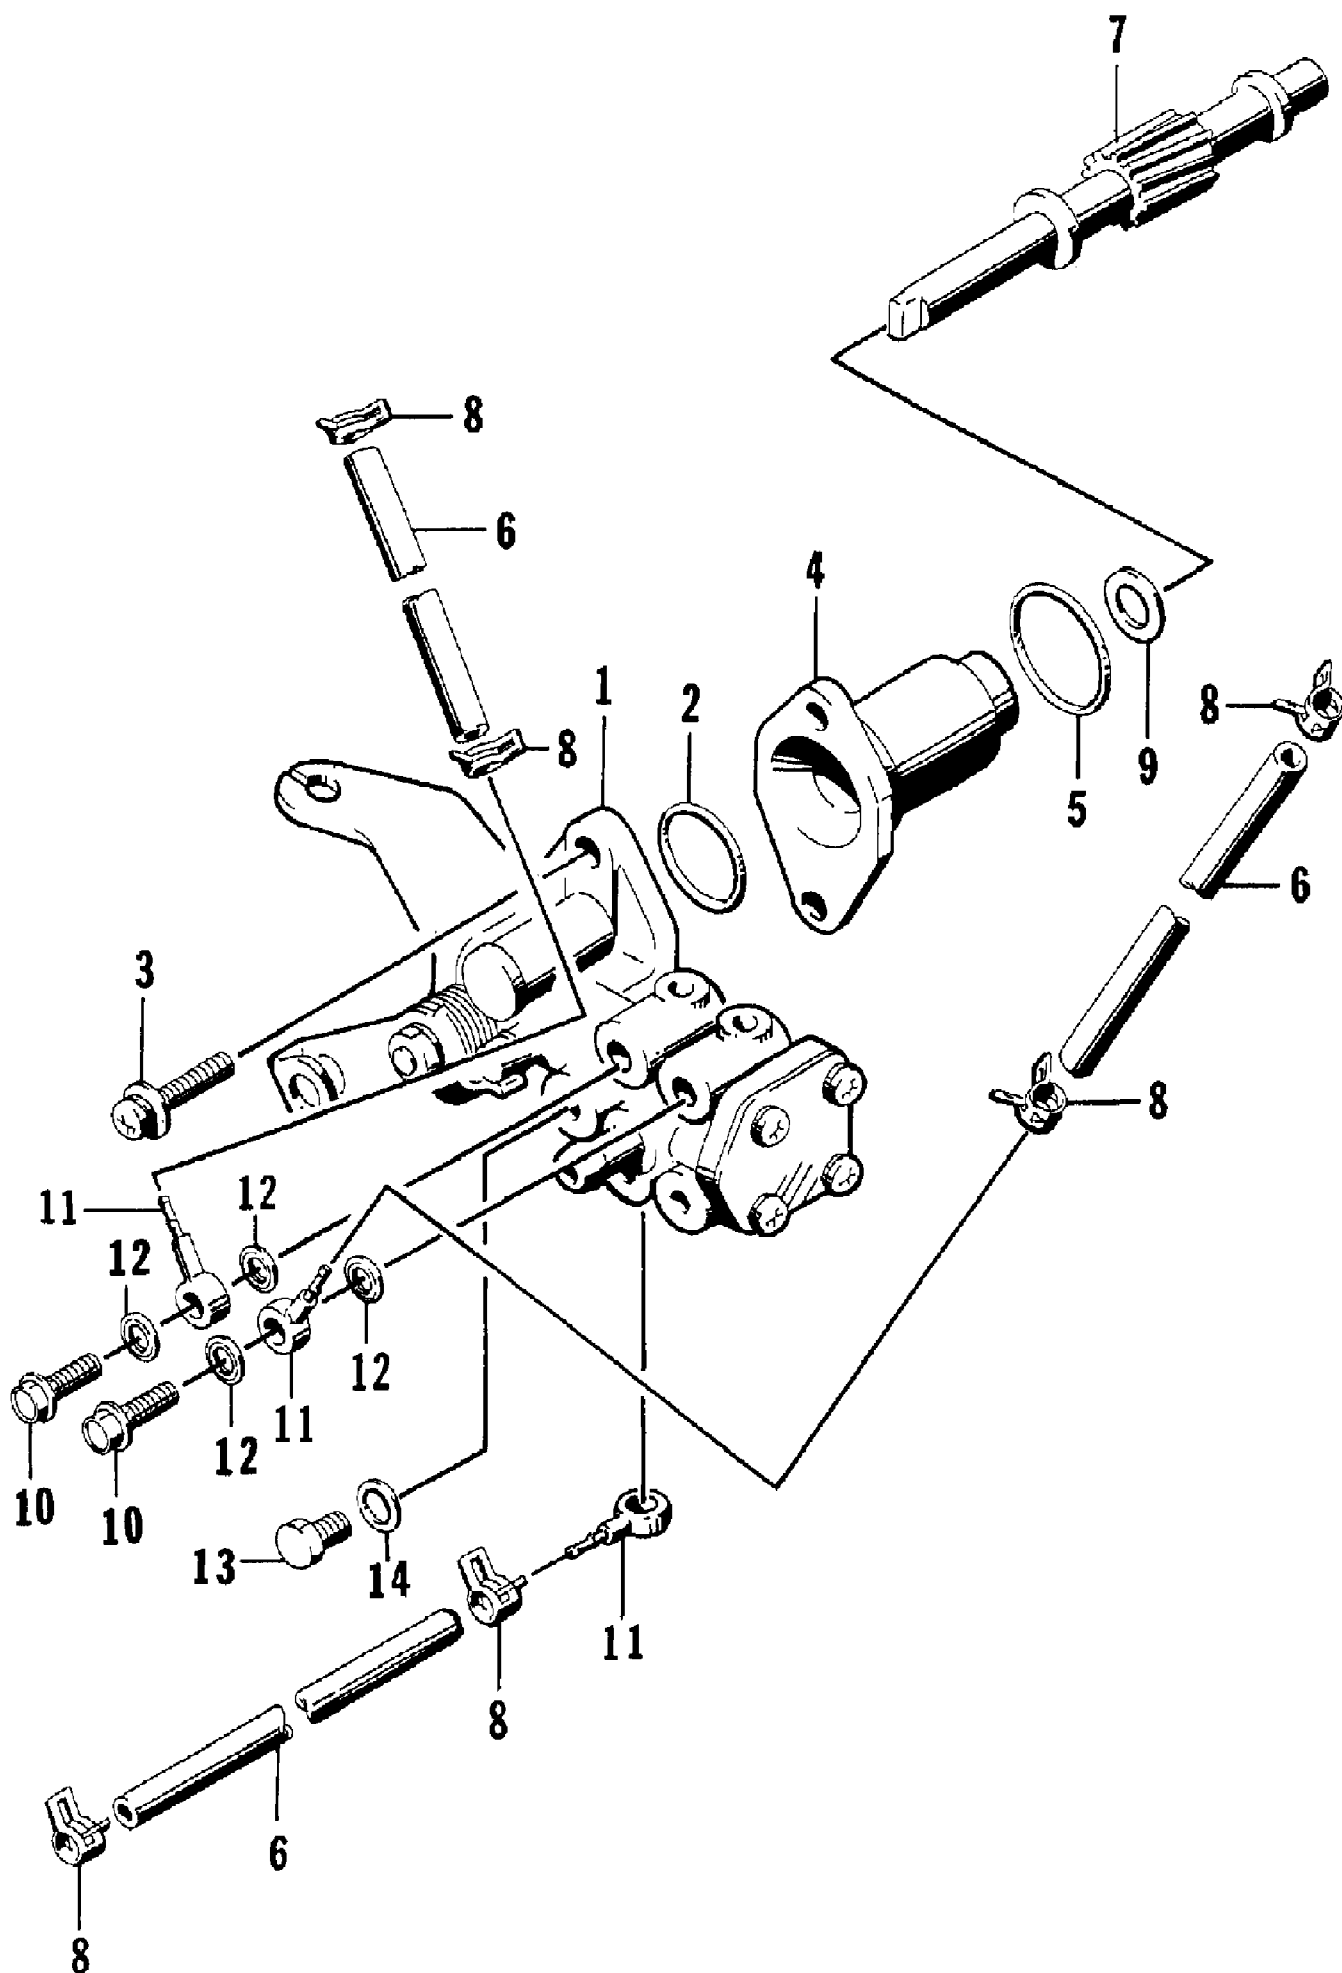

1998 TS-L 1000 (98MCC-1998)
OIL PUMP

Page 48 of 69


Ref #	Part Number	Qty	S/P/F	Description
1	3008-522	1	S	Oil Pump
2	3008-030	1		O-Ring
3	3008-393	2		Screw, Oil Pump
4	3004-763	1	/P	Retainer, Oil Pump Shaft
5	3005-126	1	/P	O-Ring, Retainer
6	3008-035	3	/P	Hose, Oil Pump
7	3004-179	1		Gear, Oil Pump Driven
8	3008-037	6	/P	Clip
9	3005-049	1	/P	Shim, Oil Pump Input Shaft
10	3008-528	3		Screw, Cap
11	3003-217	3	/P	Check Valve, Oil
12	3003-290	6	/P	Gasket, Check Valve
13	6505-820	1		Screw, Oil Pump Bleed
14	6505-821	1		Washer, Bleed Screw



1998 TS-L 1000 (98MCC-1998)
OIL TANK ASSEMBLY

Page 50 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	0670-807	1	/P	Tank, Oil
2	0624-005	3	/P	Nut, Lock
3	0115-607	1	S	Outlet, Tank
4	0624-120	4		Clamp, Hose
5	0710-425	0	/P	Hose, Gas - 25 ft
6	0610-059	1		Valve, Check
7	0510-335	1	/P	Filter, Fuel
8	0624-045	2		Clamp, Hose
9	0673-983	1		Fitting, Tank
10	0610-016	0	/P	Hose, Oil - 25 ft
11	0673-998	1		Filter, Oil
12	0624-019	4		Clamp, Hose
13	0610-368	1		Hose, Elbow Filler
14	0624-182	3		Washer
15	0624-099	3		Washer, Lock
16	0670-697	1		Filler, Oil - Assembly
17	0670-679	1		Seal, Oil Filler
18	8060-633	3	/P	Rivet
19	0623-603	3		Washer
20	0623-646	2		Clamp, Hose
21	0610-263	0		Hose, Oil
22	0620-225	1	/P	Sensor, Oil Level
23	0609-237	1		Seal, Grommet - Oil Sensor
24	0670-877	1		Oil Cap Assembly
25	0670-878	1		Seal, Oil Cap
26	0670-772	1		Connector, Oil Filler Tube
27	0670-904	1		Tube, Oil Filler

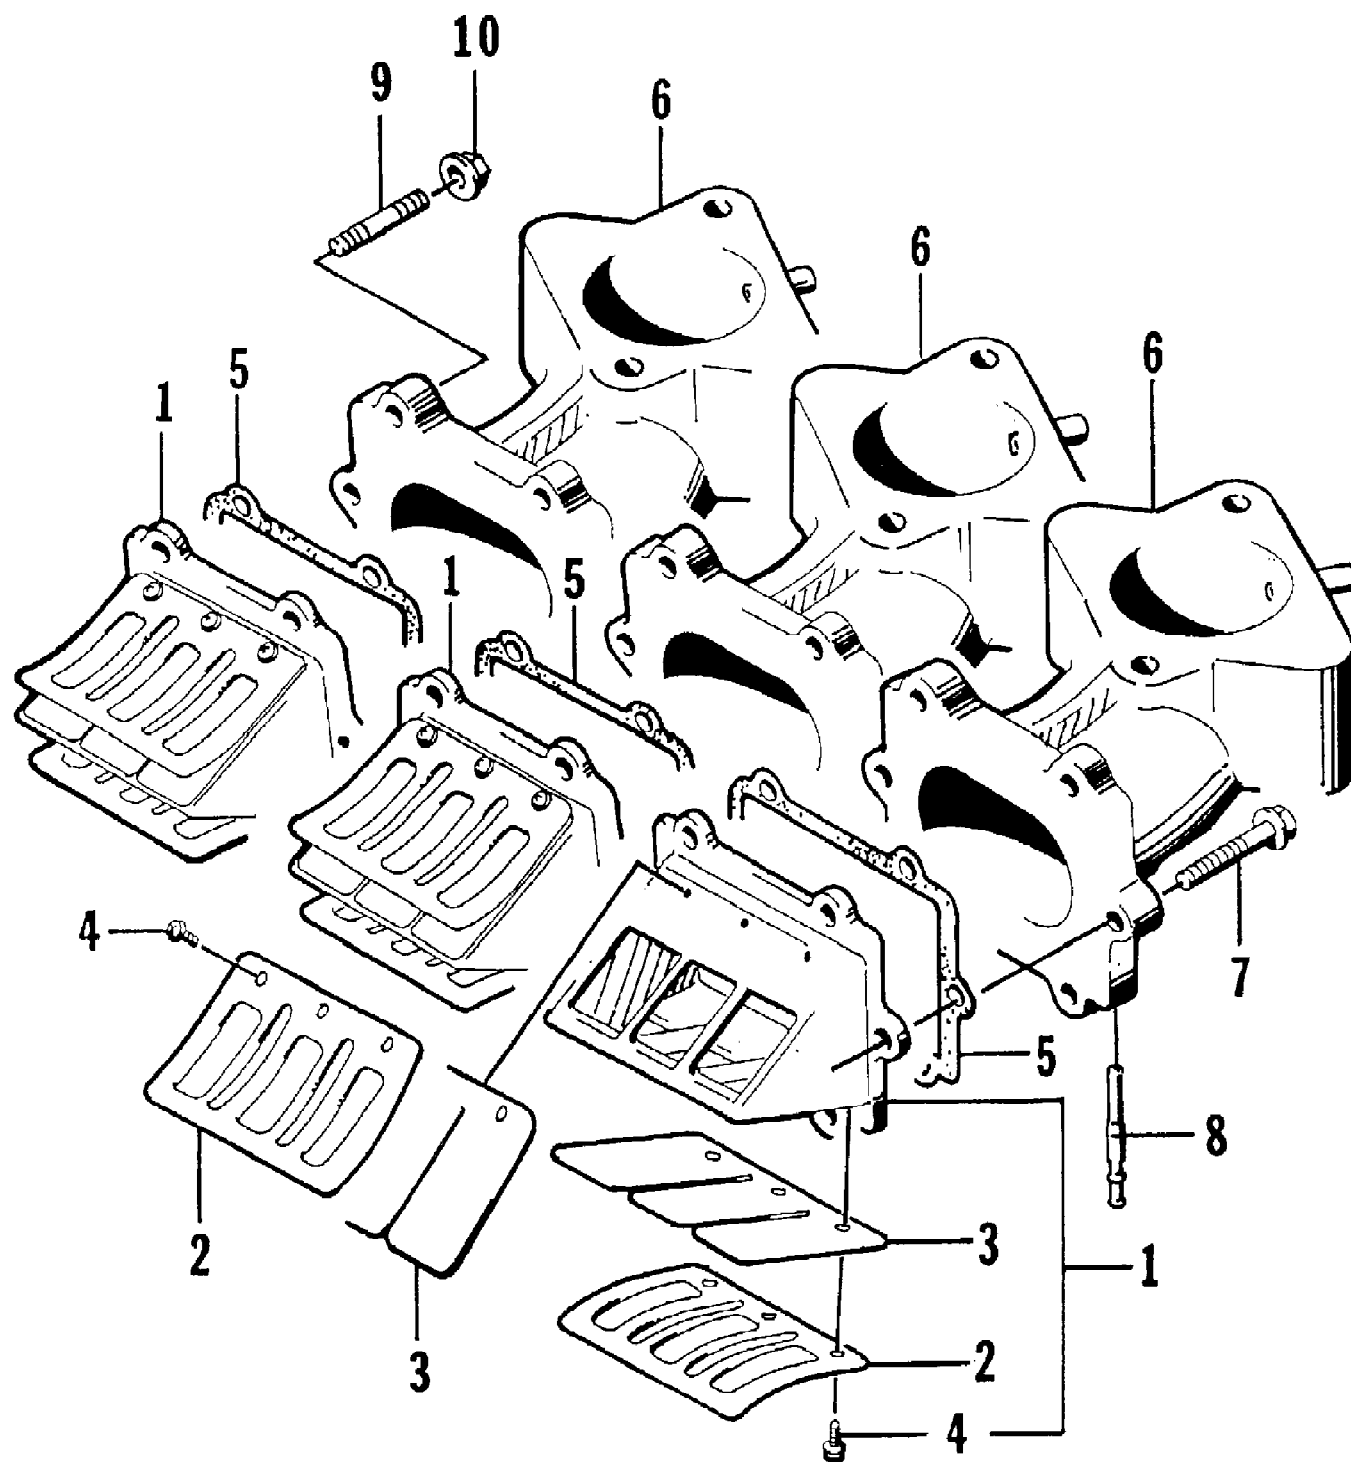 

1998 TS-L 1000 (98MCC-1998)
 REED VALVE ASSEMBLY

Page 52 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	3008-534	3	/P	Valve, Reed - Assembly (inc. 2-4)
2	3008-074	6		Stopper, Reed Valve
3	3008-075	6		Valve, Reed
4	3004-210	18		Screw, Reed Valve
5	3008-076	3	S	Gasket, Reed Valve
6	0670-712	3	S	Manifold, Intake
7	3008-220	12		Screw, Cap
8	3003-597	3		Nozzle, Oil
9	3008-370	6	/P	Stud
10	3004-326	6	S/P	Nut

No
Diagram
Available

Parts List
Only

1998 TS-L 1000 (98MCC-1998)
RELATED ITEMS

Page 54 of 69

Ref #	Part Number	Qty	S/P/F	Description
	0678-325	0	/P	Anchor Bag
	0678-05AR	0		Anchor w/Float and Mooring Rope
	0678-063	0		Battery Charger Kit
	0678-363	0	/P	Beach Dolly
	0678-370	0		Bilge Cleaner
	0678-460	0	S	Cover, Premium
	0673-093	0	S	Fire Extinguisher
	0678-274	0		Flush Kit
	0678-469	0		Fold-Up Sharkstand
	0678-466	0		Footpad Kit, Black
	0652-078	0		Gelcoat, AR Qt, Green (TS 770 L)
	0652-079	0		Gelcoat, AR Qt, Red (TS AR000 L)
	0678-348	0		Grease Gun Kit
	0678-AR37	0		Grips, Handlebar - Purple
	0678-AR38	0		Grips, Handlebar - Teal
	0678-287	0		Grips, Handlebar - Yellow
	0678-252	0	/P	Handlebar Bag - Red/Purple
	0678-362	0		Hourmeter
	0678-064	0		Horn Kit
	0678-463	0		Hydroshark, 2-Up Tube
	0678-462	0		Hydroshark Tube, 60 in.
	0678-242	0	/P	Kneeboard
	0678-390	0		Lanyard - Black
	0678-39AR	0		Lanyard - Purple
	0678-364	0	/P	Lanyard - Red
	0678-392	0		Lanyard - Yellow
	0678-AR80	0		Lift Harness
	2255-866	0		Manual, Operator's
	2255-966	0		Manual, Illustrated Parts
	2255-947	0		Manual, Service
	0678-358	0		Mooring Rope - Black
	0678-357	0		Mooring Rope - Dark Blue
	0678-052	0	/P	Mooring Rope - Purple
	0678-054	0		Mooring Rope - Red
	0678-053	0		Mooring Rope - Teal
	0678-AR89	0		Nylon Rope - Purple
	0678-035	0		Paint, Touch-Up - White
	0678-AR85	0		Plug Caddy - Purple
	0678-AR49	0		Plug Caddy - Rivet-On
	0678-496	0		Power Trim Kit
	0678-360	0		Registration Letters, Gold and Black
	0678-36AR	0		Registration Letters, Red and Black
	0678-AR77	0		Registration Letters, Red and Purple
	0678-AR78	0		Registration Letters, Purple and Teal
	0678-262	0		Registration Letters, Red and Yellow
	0678-AR35	0		Start/Stop Switch Lock
	0678-373	0		Stortech Plug (AR000)
	0678-374	0		Stortech Plug (640/770)
	0678-026	0		Tigershark Cleaner
	0678-025	0		Tigershark Wax
	0678-AR05	0		Tool Kit
	0652-082	0		Touch Up Paint, Blue (TS 640 L)
	0652-083	0		Touch Up Paint, Green (TS 770 L)

1998 TS-L 1000 (98MCC-1998)
RELATED ITEMS



Page 55 of 69

Ref #	Part Number	Qty	S/P/F	Description
	0652-084	0		Touch Up Paint, Red (TS AR000 L)
	0678-457	0	/P	Wake/Kneeboard - Waterski Rope, Purple
	0678-458	0	/P	Wake/Kneeboard - Waterski Rope, Red
	0678-243	0		Wakeboard
	0678-406	0	/P	Water Toy Connector, Purple
	0678-407	0		Water Toy Connector, Red
	0678-402	0	/P	Water Toy Rope, Purple
	0678-403	0	/P	Water Toy Rope, Red
	0678-393	0		Waterproof Bag
	0678-464	0		Waterski, Combo Set
	0678-47AR	0		PWC Lift
	0678-269	0		Hydro Trailer

1998 TS-L 1000 (98MCC-1998)

Page 56 of 69

  REVERSE DEFLECTOR AND LEVER ASSEMBLY

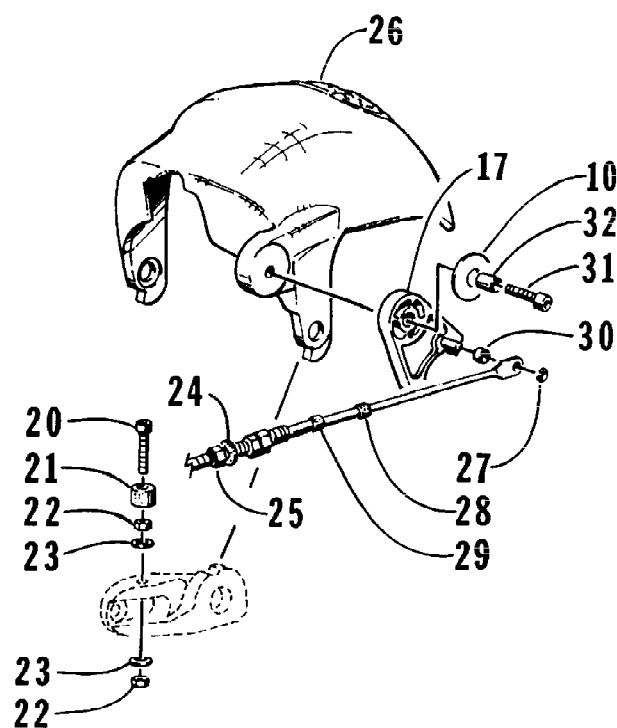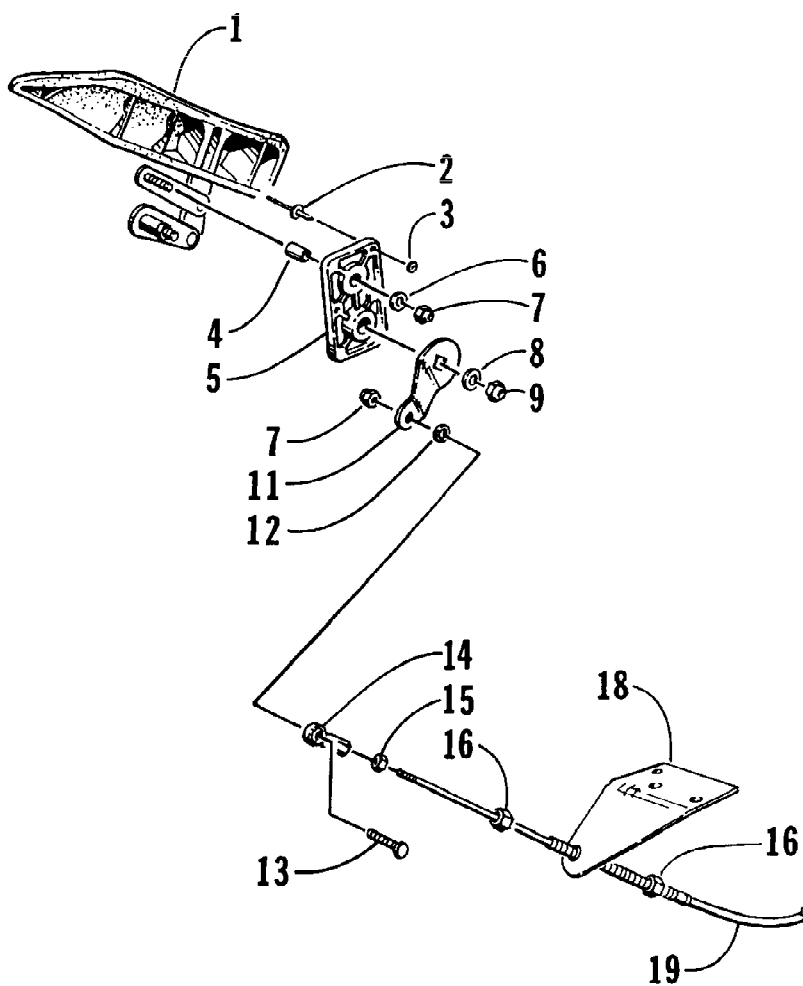

1998 TS-L 1000 (98MCC-1998)


Page 57 of 69

REVERSE DEFLECTOR AND LEVER ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	1673-564	1		Lever, Reverse Assembly (1000)
2	0624-288	1		Rivet
3	0624-004	3		Washer
4	0624-478	1		Spacer, Lever
5	1673-636	1	/P	Plate, Reverse
6	0624-228	1		Washer
7	0624-089	2		Nut, Lock
8	0624-028	1		Washer
9	0624-090	1		Nut, Lock
10	0624-160	1		Washer
11	1673-389	1		Arm, Reverse Lever
12	0624-381	1		Spacer
13	0624-290	1		Screw, Cap
14	0673-932	1		Rod, End
15	0624-279	1		Nut
16	0624-470	2		Nut
17	0775-113	1	S	Latch
18	1673-543	1		Bracket, Reverse Cable
19	1673-416	1		Cable, Reverse
20	0624-292	1		Screw, Cap
21	1673-626	1		Bumper, Rear
22	0624-107	3		Nut
23	0624-328	2		Washer
24	1673-193	1		Gasket
25	0623-669	1		Nut
26	0775-108	1		Deflector, Reverse
27	0624-446	1		Ring, Retaining
28	0612-363	1		Seal
29	0612-364	1		Cover, Cap
30	0624-450	1		Spacer
31	0624-157	1		Screw, Cap
32	0624-452	1		Spacer

1998 TS-L 1000 (98MCC-1998)
SEAT ASSEMBLY

 Page 58 of 69

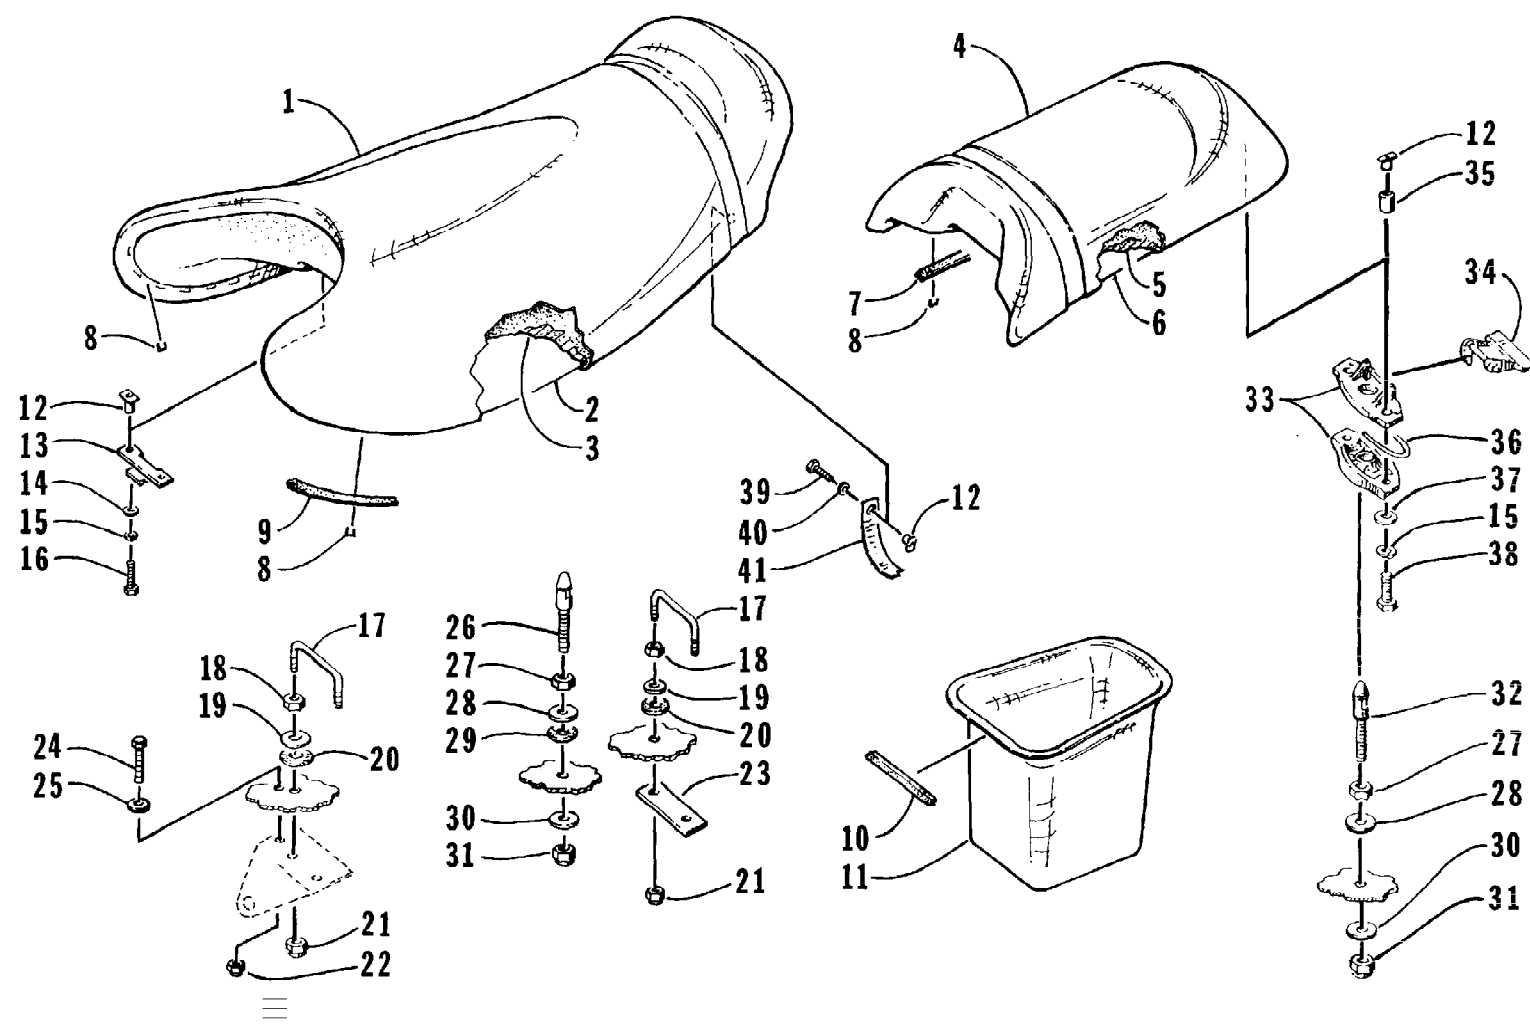


1998 TS-L 1000 (98MCC-1998)
SEAT ASSEMBLY

Page 59 of 69

Ref #	Part Number	Qty	S/P/F	Description
	0773-892	1		Seat Ass'y Box - Forward (1000)
	0773-893	1		Seat Ass'y Box - AFT (1000)
1	0773-894	1		Cover, Seat - Forward (1000)
2	1673-437	1		Base, Seat - Forward
3	0773-872	1		Foam, Seat - Forward
4	0773-939	1	S	Cover, Seat - Aft (1000)
5	0773-873	1		Foam, Seat - Aft
6	1673-438	1		Base, Seat - Aft
8	0624-263	0		Staple
9	1673-556	1		Seal, Seat Base - Forward
10	1673-557	1	F	Seal, Cooler (770/1000)
11	1673-443	1	F	Cooler, Rear (770/1000)
12	0624-396	12		Nut Tee
13	0673-668	1		Catch, Seat
14	0624-182	2		Washer, Forward
15	0624-036	8		Washer, Lock
16	0624-046	4		Screw, Cap
17	0624-262	2	F	U-Bolt, Seat
18	0624-061	4	F	Nut
19	0624-125	4	/P/F	Washer
20	0624-126	4	F	Washer Rubber
21	0624-090	4	F	Nut Lock
22	0624-089	12	F	Nut, Lock
23	0673-752	1	F	Plate, Backing - Aft
24	0624-271	2	F	Screw, Cap
25	0624-299	1	F	Washer, Sealing
26	1673-383	1	/P/F	Stud, Latch - Seat - Forward
27	0624-047	2	F	Nut
28	0624-159	2	F	Washer
29	0623-391	1	F	Washer Rubber - Forward
30	0624-013	2	F	Washer
31	0624-009	2	F	Nut Lock
32	1673-454	1	F	Stud Latch - Seat - Aft
33	0773-941	2	/P/F	Seat Latch Housing Assembly
34	1673-453	1	F	Lever, Release - Seat Latch - Forward
34	0673-026	1	F	Lever, Release - Seat Latch - Aft
35	0623-698	4	F	Spacer - Seat Latch
36	0673-023	2	F	Clip, Retaining - Seat Latch
37	0624-022	4	F	Washer
38	0624-302	4	F	Screw, Cap
39	0624-272	4	F	Screw, Cap
40	0624-293	4	F	Washer
	1673-497	1		Strap, Seat - Forward (1000)
	1673-535	1		Strap, Seat - Aft (1000)

1998 TS-L 1000 (98MCC-1998)
SENSOR ASSEMBLY

 Page 60 of 69

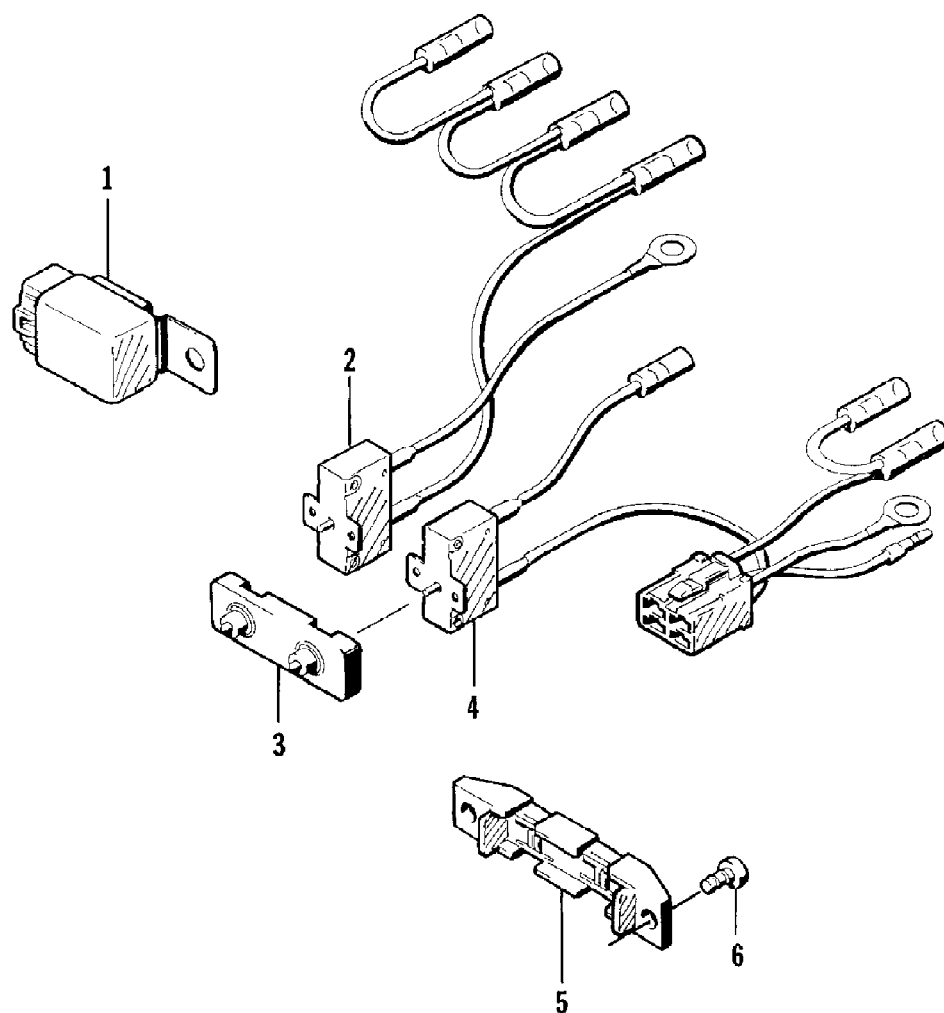

1998 TS-L 1000 (98MCC-1998)
SENSOR ASSEMBLY

Page 61 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	3008-297	1	/P	Relay - Assembly
2	3008-348	1	S	Protector, Circuit Charge
3	3008-351	1		Cap, Circuit Protector
4	3008-350	1	/P	Protector, Circuit Load
4	3008-350	1	/P	Protector, Circuit Load (770/1000)
5	3008-294	1	/P	Holder, Circuit Protector
6	3008-313	2		Screw, Cap


1998 TS-L 1000 (98MCC-1998)
STARTER MOTOR ASSEMBLY

Page 63 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	3008-536	1	/P	Starter Motor Assembly (inc. 2-11)
2	3008-094	1	/P	Terminal Set, Brush (inc. 3)
3	3008-164	1		O-Ring
4	3008-095	1	/P	Holder Set, Brush (inc. 5)
5	3008-096	4		Spring, Brush
6	3008-328	1	/P	Front Bracket Assembly (inc. 7)
7	3008-363	1	/P	O-Ring
8	3008-099	2		Washer Set
9	3008-553	2	/P	O-Ring
10	3008-103	1		Armature
11	3008-102	2		Screw, Cap
12	3008-408	1	/P	Pinion Assembly
13	3008-447	2		Screw, Cap
14	3008-014	1		Nut
15	3008-020	1		Washer
16	3008-480	2	/P	Washer
17	3008-165	1	/P	Relay
18	3008-140	1		Bracket
19	3008-313	1		Screw, Bracket
20	3008-105	2		Bushing, Pinion Shaft
21	3008-277	1		Spacer, Starter Motor
22	3008-537	1		Washer

1998 TS-L 1000 (98MCC-1998)
STEERING POST ASSEMBLY

 Page 64 of 69

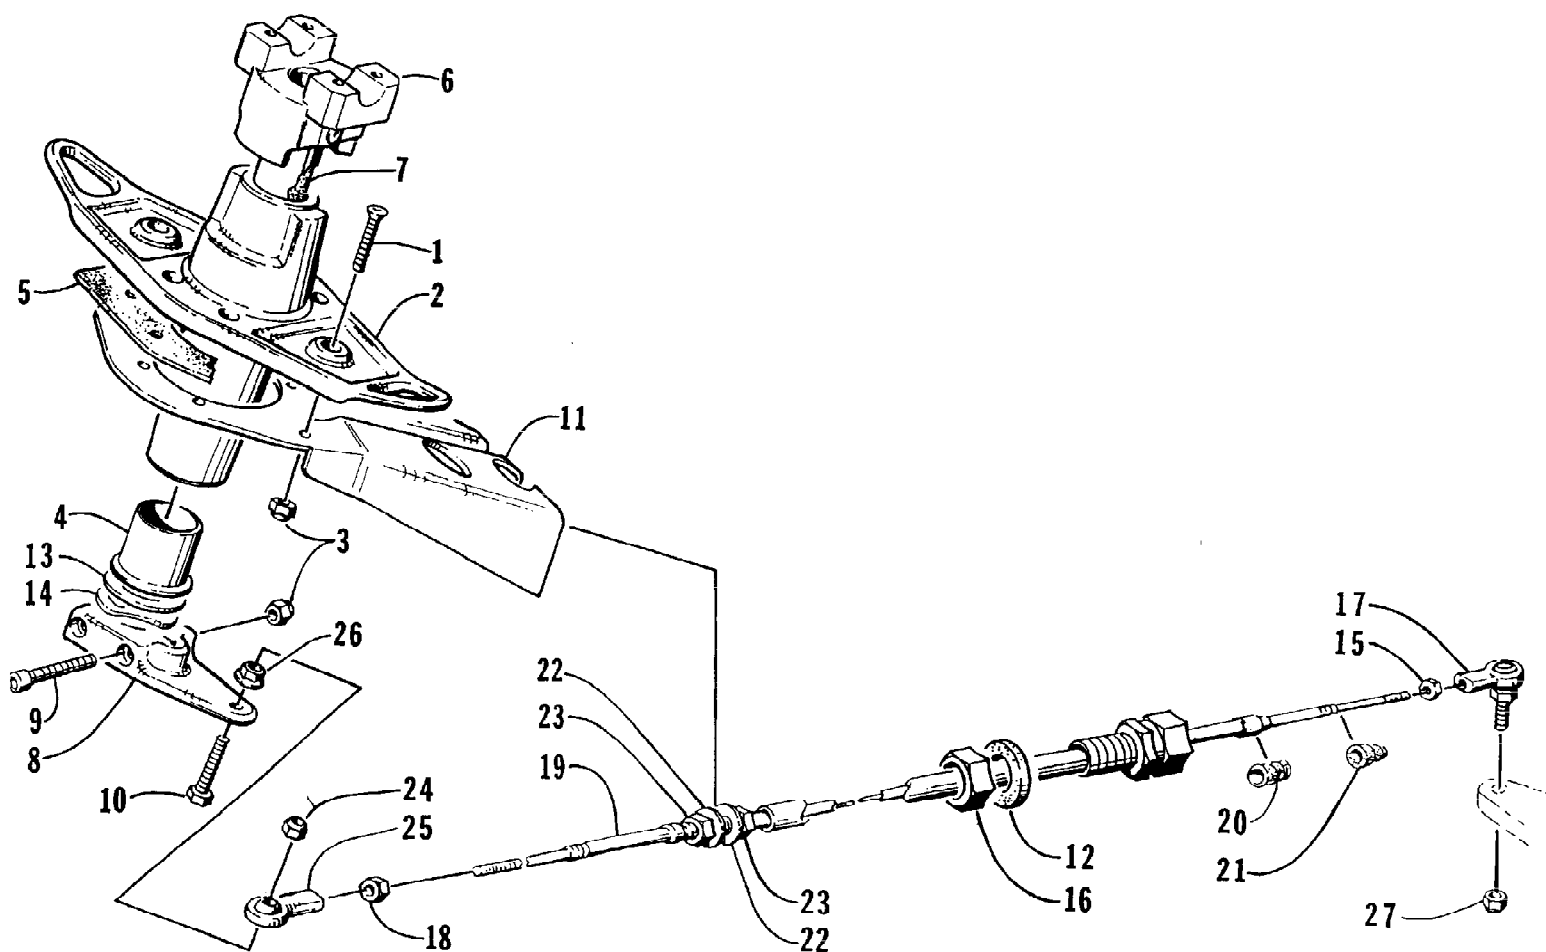


1998 TS-L 1000 (98MCC-1998)
STEERING POST ASSEMBLY

Page 65 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	0624-464	6		Screw, Machine
2	0605-046	1		Bearing, Housing
3	0624-250	8		Nut, Lock
4	0605-055	2		Bearing, Flange
5	0605-391	1		Seal
6	0605-382	1		Post, Steering
7	0717-052	0	/P	Foam, Neoprene Tape
8	0605-072	1		Arm, Steering
9	0624-456	2	/P	Screw, Cap
10	0624-476	1		Screw, Cap
11	0605-054	1		Bracket, Steering Cable
12	1673-193	1		Gasket, Cable - Foam
13	0624-468	2		Washer
14	0624-469	2		Washer, Wave
15	0624-279	1		Nut
16	0623-669	1		Nut
17	1673-145	1		End, Steering Cable
18	0624-107	1		Nut
19	1673-359	1		Cable, Steering
20	0612-364	1		Cover, Thread Cap - Steering Cable
21	0612-363	1		Seal, Rod
22	0624-106	2		Washer
23	0624-105	2		Nut
24	0624-089	1		Nut, Lock
25	0673-931	1		End, Steering Cable
26	0624-233	1		Nut, Flange
27	0624-308	1		Nut, Lock

1998 TS-L 1000 (98MCC-1998)
WATER FILTER ASSEMBLY

 Page 66 of 69

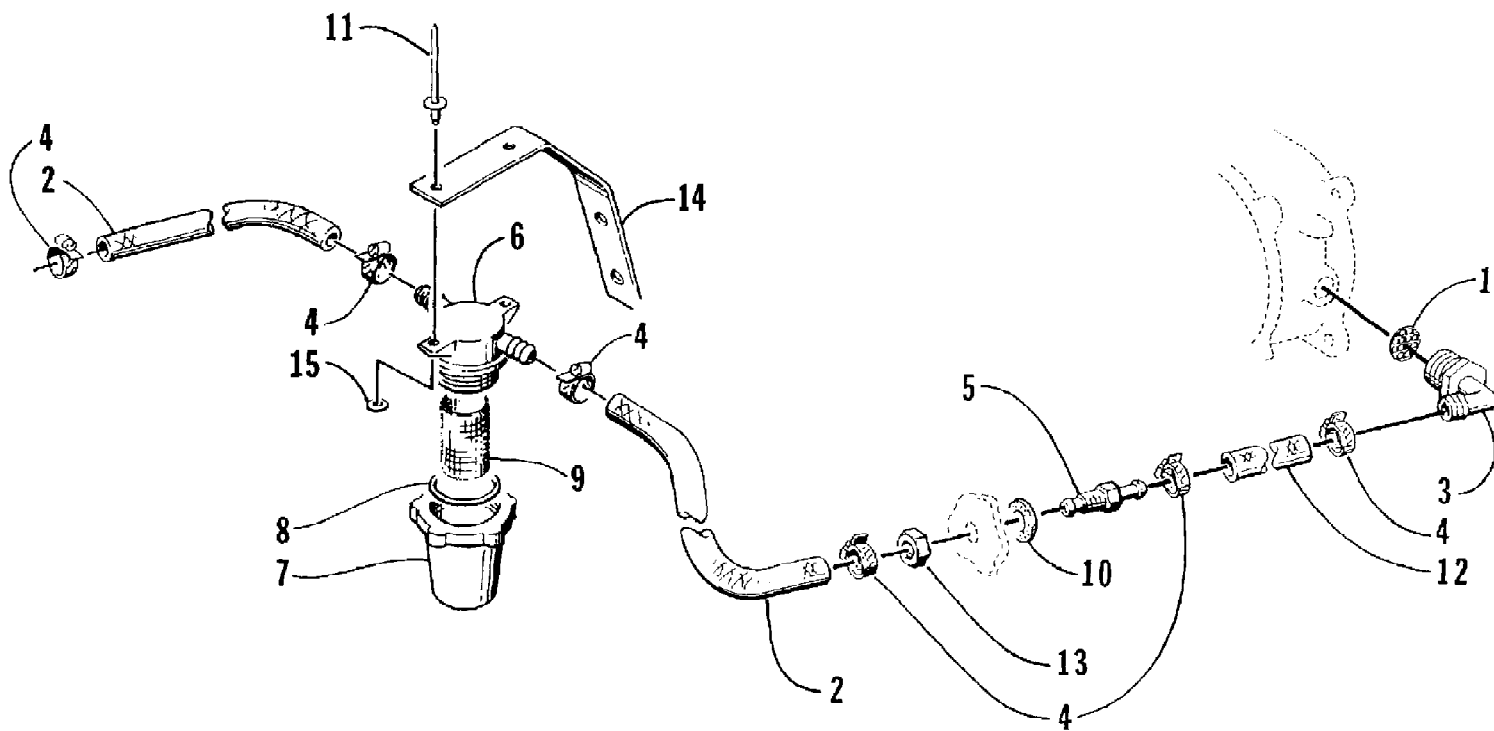


1998 TS-L 1000 (98MCC-1998)
WATER FILTER ASSEMBLY

Page 67 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	0675-042	1		Screen
2	0610-268	0		Hose, Water - 25 ft (1000)
3	0673-850	1		Fitting, Elbow (1000)
4	0624-016	6		Clamp, Hose
5	1673-447	1		Fitting (1000)
6	0673-653	1		Filter, Water Assembly (inc. 7-9) (1000)
7	0673-669	1		Cover
8	0673-670	1		O-Ring
9	0673-671	1		Screen
10	0676-001	1		Gasket, Foam
11	8060-428	2		Rivet
12	0710-196	1		Hose, Water
13	0623-709	1		Nut
14	0676-009	1		Bracket, Mounting
15	0624-025	2		Washer

1998 TS-L 1000 (98MCC-1998)
WIRING HARNESS

 Page 68 of 69

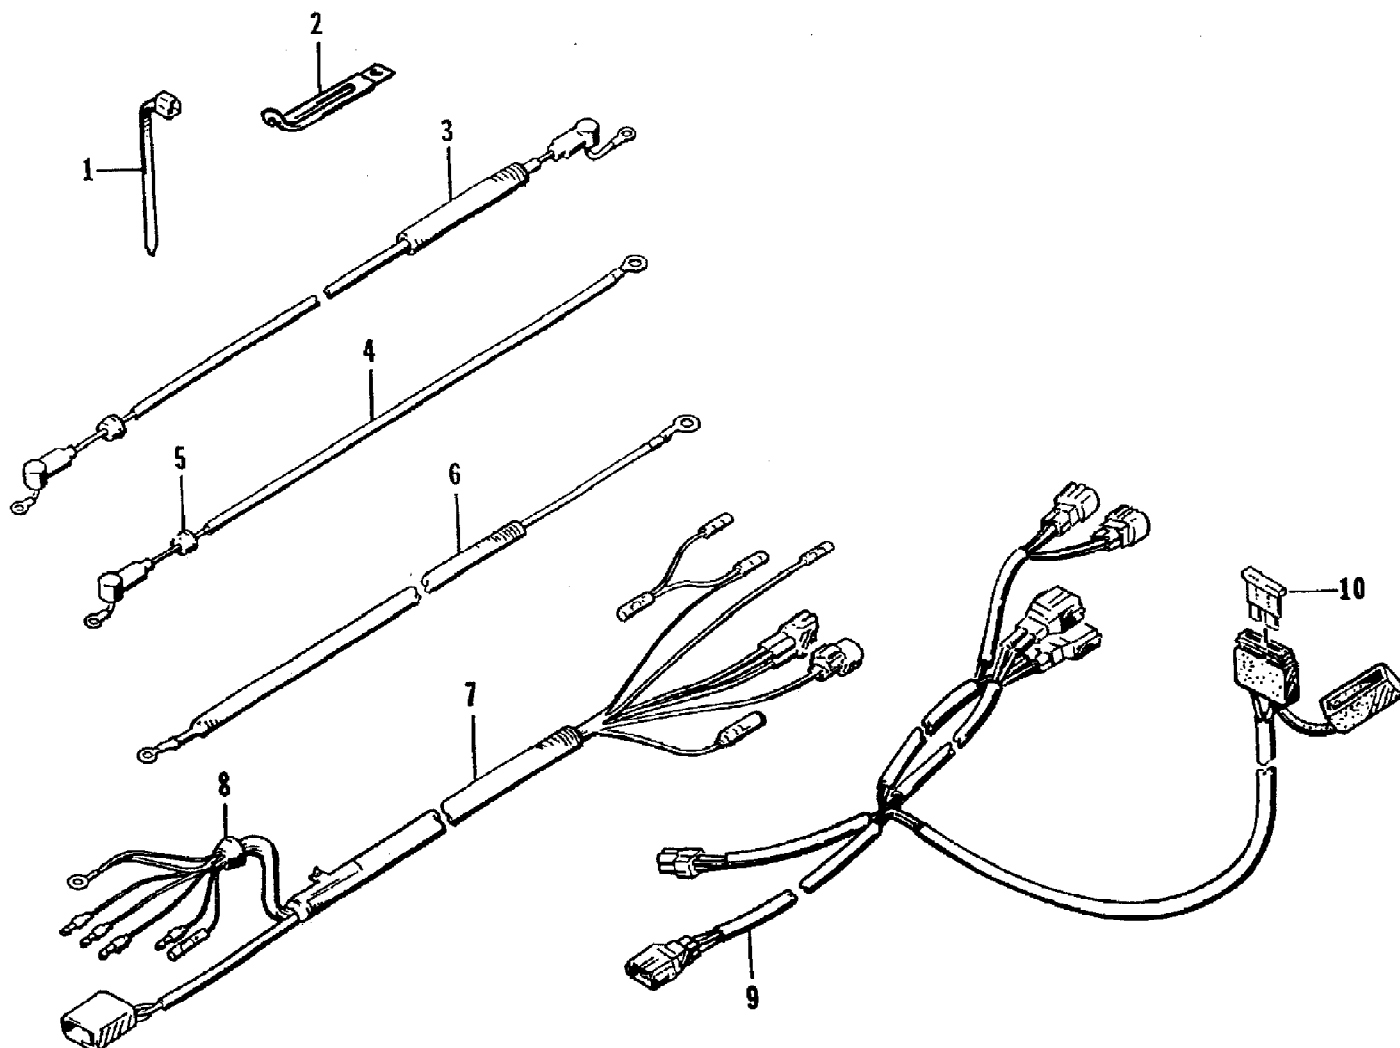

1998 TS-L 1000 (98MCC-1998)
WIRING HARNESS

Page 69 of 69

Ref #	Part Number	Qty	S/P/F	Description
1	3008-044	1		Tie, Cable
2	3002-964	2	/P	Clamp
3	3008-466	1		Cable (770/1000)
4	3008-345	1	/P	Cable (inc. 5)
5	3008-334	1	/P	Grommet
6	3008-154	1		Cable, Ground (1000)
7	3008-547	1	/P	Harness, Wiring (770/1000)
8	3008-362	1	/P	Grommet
9	0686-430	1		Harness, Gauge (770/1000)
10	0630-056	1		Fuse, 3 AMP