Illustrated Parts List Model Series 197700 to 197799

TYPE NUMBERS 0119, 0120, 0122, 0123, 0141, 1015, 1025, 1026.


TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

BRIGGS & STRATTON

PRINTED IN U.S.A.


COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

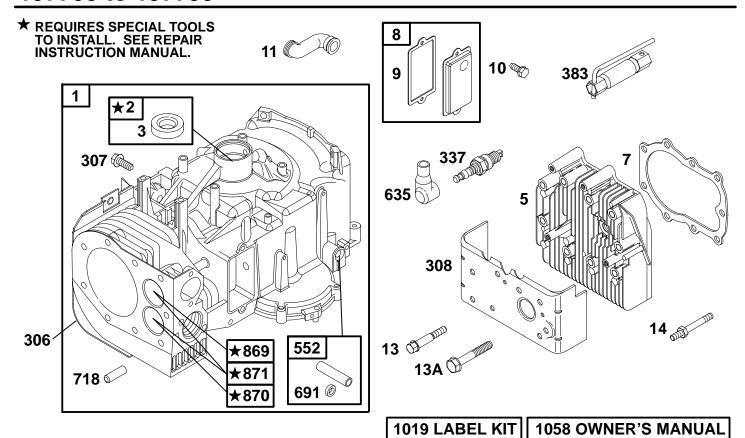



[★] Included in Engine Gasket Set–Ref. 358.

Included in Carburetor Overhaul Kit-Ref. 121.

  [◆] Included in Carburetor Gasket Set–Ref. 977. Ø Included in Valve Gasket Set–Ref. 1095.






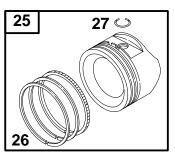



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
25	499907	Piston Assembly (Standard) Note 499908 Piston Assembly (.010" O.S.) 499909 Piston	26	391669	Ring Set (Standard) Note 299743 Ring Set (Standard Chrome) 391670 Ring Set (.010" O.S.)	27 28	295840	Lock–Piston Pin Pin–Piston (Standard) ——— Note 295841 Pin–Piston (.005" O.S.)
		Assembly (.020" O.S.) 499910 Piston Assembly (.030" O.S.)			391671 Ring Set (.020" O.S.) 690020 Ring Set (.030" O.S.)	29		Rod-Connecting (Standard) Note 390773 Rod- Connecting (.020" Undersize)
						32	690352	Screw (Connecting Rod)

<sup>Included in Engine Gasket Set–Ref. 358.
Included in Carburetor Overhaul Kit–Ref. 121.</sup>

  [◆] Included in Carburetor Gasket Set–Ref. 977.
 Ø Included in Valve Gasket Set–Ref. 1095.

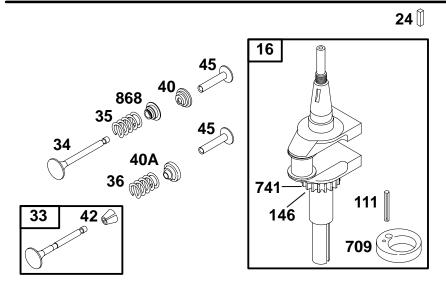

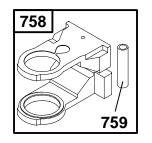





REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	495629	Crankshaft	40	221596	Retainer-Valve	709	691268	Eccentric
24	222698	Key–Flywheel			(Intake)	741	691288	Gear-Timing
33	390420	Valve–Exhaust	40A	292260	Retainer-Valve	757		Link–Counterweight
34		Valve-Intake			(Exhaust)	758		Counterweight
35	65906	Spring-Valve	42		Keeper-Valve	759		Pin–Counterweight
		(Intake)	45		Tappet-Valve	761	690346	
36	26828	. 0	111		Pin–Retainer			(Counterweight)
		(Exhaust)	146	94388	Key-Timing	868	497656	Seal-Valve

6067-4

<sup>Included in Engine Gasket Set–Ref. 358.
Included in Carburetor Overhaul Kit–Ref. 121.</sup>

 [◆] Included in Carburetor Gasket Set–Ref. 977.
 Ø Included in Valve Gasket Set–Ref. 1095.

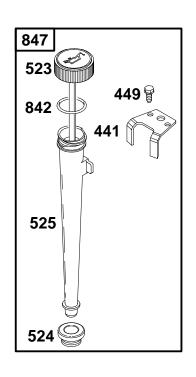


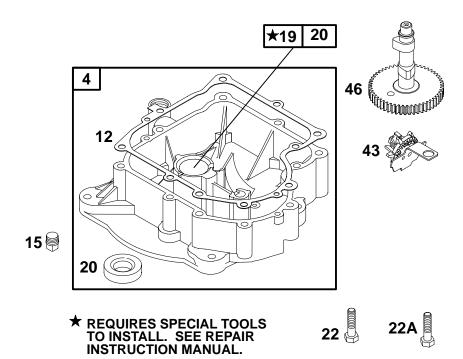

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
4 12		Sump-Engine Gasket-Crankcase (.015" Standard)	19 20	295963 *391086		46 441 449	224872	Camshaft Bracket–Oil Fill Screw (Oil Fill Bracket)
		★27876 Gasket– Crankcase (.005")	22	93585	(PTO Side) Screw (Crankcase Cover/ Sump)	523 524 525	★281370	Dipstick Seal-Dipstick Tube Tube-Dipstick
		*27877 Gasket- Crankcase (.009")	22A	691103	(Crankcase Cover/ Sump)	842 847		O–Ring Seal (Dipstick/Tube) Dipstick/Tube
15	94239	Plug–Oil Drain (Square Head)	43	491397	(Used in Position 1) Slinger–Governor/Oil			Assembly

<sup>Included in Engine Gasket Set–Ref. 358.
Included in Carburetor Overhaul Kit–Ref. 121.</sup>

 [◆] Included in Carburetor Gasket Set–Ref. 977.
 Ø Included in Valve Gasket Set–Ref. 1095.

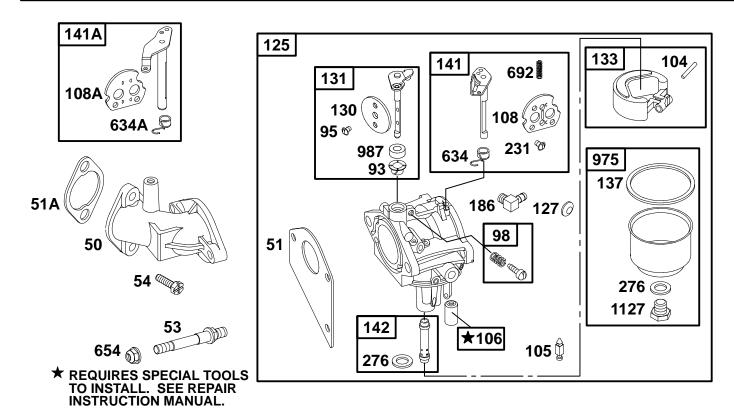


	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51 ••272 51A Ø*272 53 692 54 94 93 696 95 •94 98 499 104 •696 105 •23	2465 2554 1098 4913 0602 4098 5800 0525 1855	Manifold-Intake Gasket-Intake (Intake Manifold to Carburetor) Gasket-Intake (Intake Manifold to Cylinder) Stud (Carburetor) Screw (Intake Manifold) Bushing-Throttle Shaft Screw (Throttle Valve) Kit-Idle Speed Pin-Float Hinge Valve-Float Needle Seat-Inlet	108A 125 127 130 131 133 137 141 141A 142	692344 692684 •694530 690468 494885 494381 ••281165 495097	Valve-Choke (Manual Choke) Valve-Choke (Choke A Matic®) Carburetor Plug-Welch Valve-Throttle Kit-Throttle Shaft Float-Carburetor Gasket-Float Bowl Kit-Choke Shaft (Manual Choke) Kit-Choke Shaft (Choke A Matic®) Nozzle-Carburetor (Standard)	634	94098 ••281164 •690801 •690802 94010 690572 495933 •691326	(Choke Valve) Washer–Sealing Spring/Seal Assembly (Manual Choke) Spring/Seal Assembly (Choke A Matic®)

[★] Included in Engine Gasket Set–Ref. 358.

Included in Carburetor Overhaul Kit-Ref. 121.


 [◆] Included in Carburetor Gasket Set–Ref. 977.
 Ø Included in Valve Gasket Set–Ref. 1095.

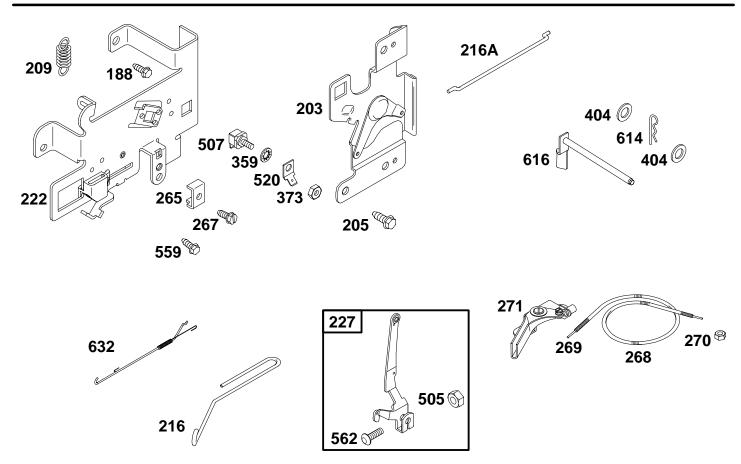

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
188	94929	Screw (Control Bracket)	265 267	221535 94906	Clamp–Casing Screw	505	691251	Nut (Governor Control
203	691381	Crank-Bell			(Casing Clamp)			Lever)
205	94929	Screw	268	65616	Casing-Control Wire	507	398525	Insulator
		(Bell Crank)			(Cut to Required	520		Terminal-Ground
209	260871	Spring–Governor			Length)	559	94896	
216			269	26633	Wire-Control	500	00040	(Remote Choke Stop)
216A 222	691281	Link–Choke Bracket–Control			(Cut to Required	562	92613	(Governor Control
	094042	(Used After Code Date	270	63426	Length)			Lever)
		99010600).	210	03420	(Control Wire Casing)	614	93306	Pin-Cotter
		Note	271	290568	Lever-Control	616		Crank-Governor
		495611 Bracket-	359	691077	Washer	632	693663	Spring/Link-
		Control			(Ground Terminal)			Mechanical Governor
		(Used Before Code	373	90576				
		Date 99010700).			(Ground Terminal)			
227	691374	Lever-Governor	404	94927	Washer			
		Control			(Governor Crank)			

<sup>Included in Engine Gasket Set–Ref. 358.
Included in Carburetor Overhaul Kit–Ref. 121.</sup>


 [◆] Included in Carburetor Gasket Set–Ref. 977.
 Ø Included in Valve Gasket Set–Ref. 1095.

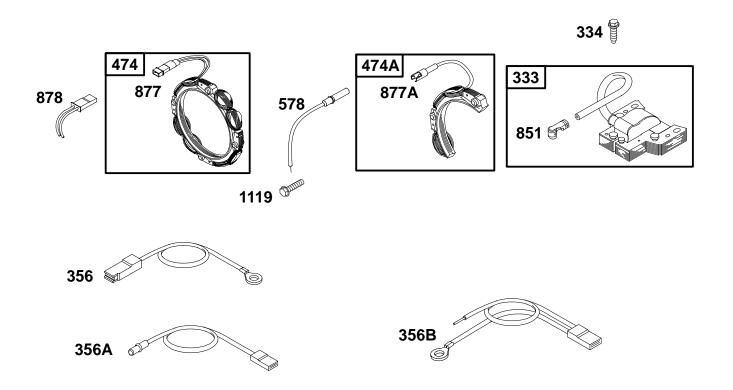

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
333 334		Armature–Magneto Screw	356B	398808	Wire–Stop (1 Wire Insulated Flat	877	393456	Wire/Connector– Alternator
334	94731	(Magneto Armature)			Terminal, Ring			(Dual Circuit)
356	399223	Wire-Stop (1 Wire Insulated Flat	474	202474	Tongue/Bare Wire) Alternator	877A	393814	Wire/Connector– Alternator
		Terminal, Ring Tongue	4/4	393474	(Dual Circuit)			(DC Only)
2504	C00700	Terminal)	474A	391529	Alternator	878	393362	
356A	690799	Wire-Stop (1 Wire Insulated Flat	578	393422	(DC Only) Wire Assembly	1119	93621	(Dual Circuit) Screw
		Terminal, Contact	851		=			(Alternator)
		Socket)						

<sup>Included in Engine Gasket Set–Ref. 358.
Included in Carburetor Overhaul Kit–Ref. 121.</sup>

 [◆] Included in Carburetor Gasket Set–Ref. 977.
 Ø Included in Valve Gasket Set–Ref. 1095.

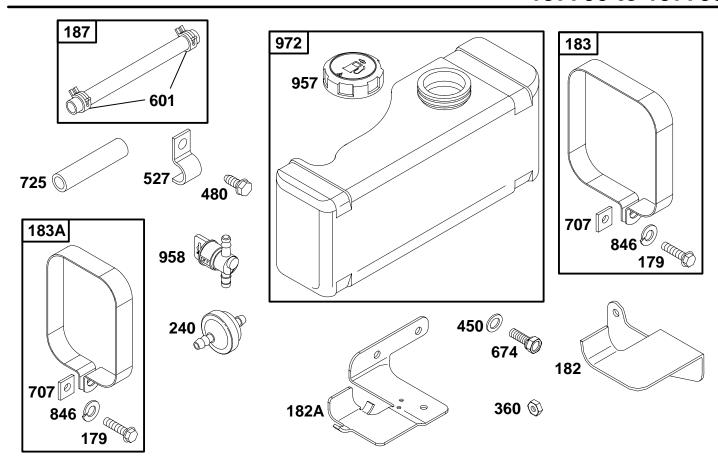


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
179	692331	Screw	240	298090	Filter–Fuel	674	94627	Screw
		(Fuel Tank Strap)	360	94726				(Fuel Tank Bracket)
182	691214	Bracket–Fuel Tank	450	00000	(Fuel Tank Bracket)			(Used on Rewind Start
4004	C020C7	(R.H.)	450	22963	Washer			Engines; 47/64 Long)
182A	692867	Bracket–Fuel Tank (L.H.)			(Fuel Tank Bracket) (4 Used on Rewind			Note 690341 Screw
183	496853	Strap-Fuel Tank			Start Engines)			(Fuel Tank Bracket)
100	40000	(R.H.)			Note			(Used on Electric Start
183A	496852	Strap-Fuel Tank			690259 Washer			Engines; 55/64 Long)
		(L.H.)			(Fuel Tank Bracket)	707	690279	Nut
187	296004	Line-Fuel			(2 Used on Electric			(Fuel Tank Strap)
		(Cut to Required			Start Engines)	725	690403	Shield-Heat
		Length)	480	94874				(Tubular)
					(Tube Clamp)	846	90832	Washer
			527		Clamp-Tube		400000	(Fuel Tank Strap)
			601	93053	Clamp-Hose	957	493988	Cap-Fuel Tank
						958	404769	(Plastic) Valve–Fuel Shut Off
						972		Tank-Fuel
						3,2	330223	Tank-i dei

<sup>Included in Engine Gasket Set–Ref. 358.
Included in Carburetor Overhaul Kit–Ref. 121.</sup>

6067-9


 [◆] Included in Carburetor Gasket Set–Ref. 977.
 Ø Included in Valve Gasket Set–Ref. 1095.

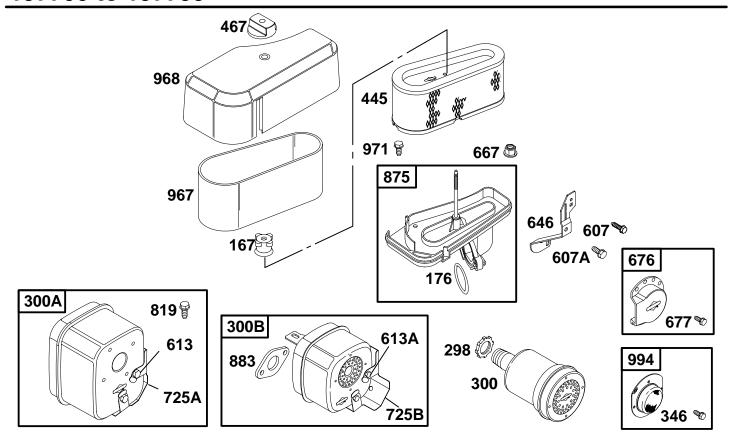

NO. NO. DESCRIPTION NO. NO. DESCRIPTION NO. NO.	DESCRIPTION
167 281051 Seal—Air Cleaner Nut 176 ∅ ★ 281106 O—Ring Seal (Air Cleaner Base) 298 261409 Locknut—Muffler/Elbow 300 393010 Muffler (Round Lo Tone) 300A 494222 Muffler (Super Lo Tone) 300B 398507 Muffler (Lo Tone, Heat Shield) 346 94896 Screw (Spark Arrestor) 445 493910 Filter—Air Cleaner	Gasket–Exhaust Filter–Pre Cleaner Cover–Air Cleaner (Uses Foam Filter) Screw (Air Cleaner Base) (Used After Code Date 98091300). Note 692198 Screw (Air Cleaner Base) (Used Before Code Date 98091400).

Included in Engine Gasket Set–Ref. 358. Included in Carburetor Overhaul Kit–Ref. 121.


 [◆] Included in Carburetor Gasket Set–Ref. 977.
 Ø Included in Valve Gasket Set–Ref. 1095.

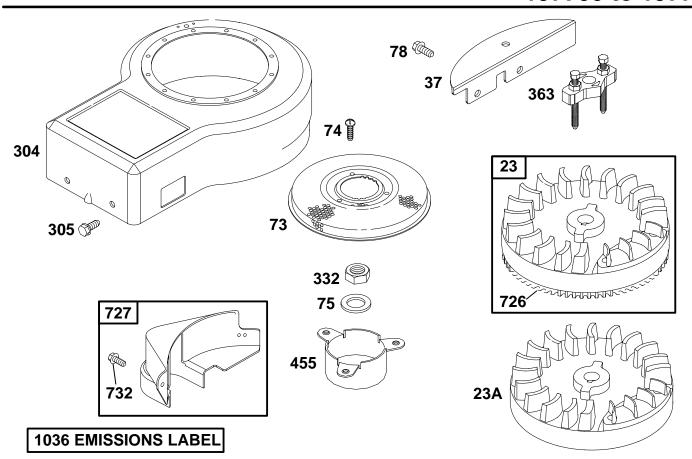

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	691354	Flywheel (Aluminum Ring Gear and Alternator Magnets)	304	496439	Housing–Blower (Electric Start) Note 496832 Housing–	732 1036	691097 695697	Screw (Starter Drive Cover) Label–Emissions (Used After Code Date
23A	690615	Flywheel (Standard)			Blower (Rewind Start)			0006300). ——— Note ———
37	690411	Guard-Flywheel (Electric Start)			Used on Type No(s). 0119, 1015, 1026.			695096 Label- Emissions
73	224517	Screen–Rotating (No Collar, Flush)	305	94786	Screw (Blower Housing)			(Used After Code Date 99093000 and Before
74	94626	Screw (Rotating Screen)	332	94877	Nut (Flywheel)			Code Date 00070100). 694305 Label–
75	225136	Washer (Flywheel)	363 455	19165 691173	Flywheel Puller Cup–Flywheel			Emissions (Used After Code Date
78	690364	Screw (Flywheel Guard)	726	399676	(Straight Side) Gear–Ring (Includes Mounting Parts)			99100100 and Before Code Date 98123100). 499356 Label– Emissions
			727	395405	Cover–Starter Drive			(Used After Code Date 990101).

<sup>Included in Engine Gasket Set–Ref. 358.
Included in Carburetor Overhaul Kit–Ref. 121.</sup>


 [◆] Included in Carburetor Gasket Set–Ref. 977.
 Ø Included in Valve Gasket Set–Ref. 1095.

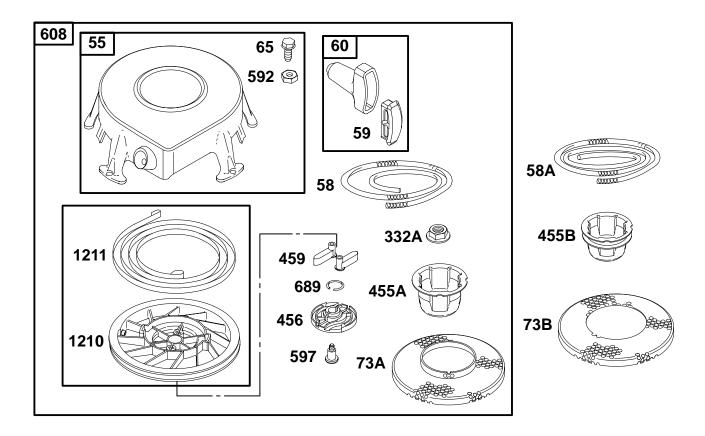

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	693904	Housing–Rewind Starter (Used After Code Date 98111500).	73B	694020	Screen–Rotating (Tapered Cup Without Ring) (Used with 99" Rope)	597 608	94943 693900	(Pawl Friction Plate)
58	66884	Rope–Starter (63" Cut To Required Length)	332A 455A	693899 693902	Nut (Flywheel)	689	263073	(Used After Code Date 98111500). Spring–Friction
58A	66894	Rope–Starter (99" Cut To Required Length)	455B	694017	(Tapered Side With Ring Retainer) Cup–Flywheel	1210		Pulley/Spring Assembly (Pulley)
59 60		Insert–Grip Grip–Starter Rope (2 Piece)			(Tapered Side With Ring Retainer and Rotating Ring)	4044	400444	(Used After Code Date 98111500).
65	94904	Screw (Rewind Starter)	456	281503	(Used with 99" Rope) Plate–Pawl Friction	1211	498144	Pulley/Spring Assembly
73A	693905	,	459 592	281505 94908	Pawl–Ratchet Nut (Rewind Starter)			(Spring) (Used After Code Date 98111500).

<sup>Included in Engine Gasket Set–Ref. 358.
Included in Carburetor Overhaul Kit–Ref. 121.</sup>


 [◆] Included in Carburetor Gasket Set–Ref. 977.
 Ø Included in Valve Gasket Set–Ref. 1095.

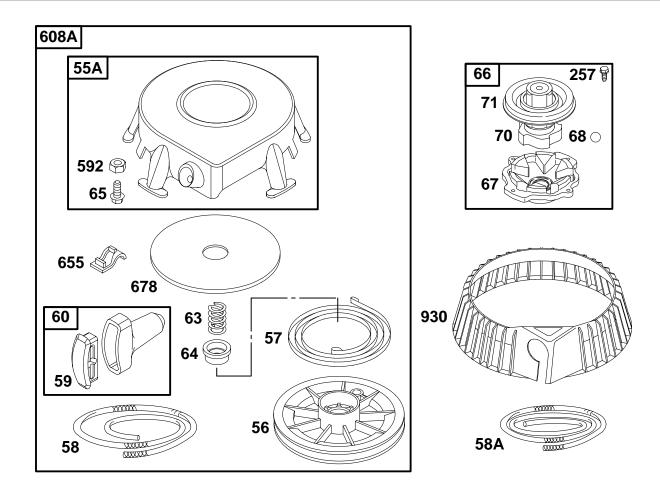

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55A	393576	Starter (Used Before Code	58A	66894	Rope–Starter (99" Cut To Required Length)	67 68 70	63770 298799	Housing–Clutch Ball–Clutch Ratchet–Clutch
56	295871	Date 98111600). Pulley–Starter (Used Before Code Date 98111600).	59 60		(2 Piece)	71 257	94680	Cover–Ratchet Screw (Starter Clutch)
57	490179	Spring–Rewind Starter (Used Before Code Date 98111600).	63 64	260414 281204	Spring–Ratchet Adapter–Ratchet Spring	592 608A	94908 390391	Nut (Rewind Starter) Starter–Rewind
58	66884	Rope–Starter (63" Cut To Required	65		Screw (Rewind Starter)			(Used Before Code Date 98111600).
		Length)	66	399671	Clutch–Starter (Used Before Code Date 99030100).	655 678 930	490817	Anchor–Rewind Spring Spacer–Rewind Guard–Rewind

<sup>Included in Engine Gasket Set–Ref. 358.
Included in Carburetor Overhaul Kit–Ref. 121.</sup>


 [◆] Included in Carburetor Gasket Set–Ref. 977.
 Ø Included in Valve Gasket Set–Ref. 1095.

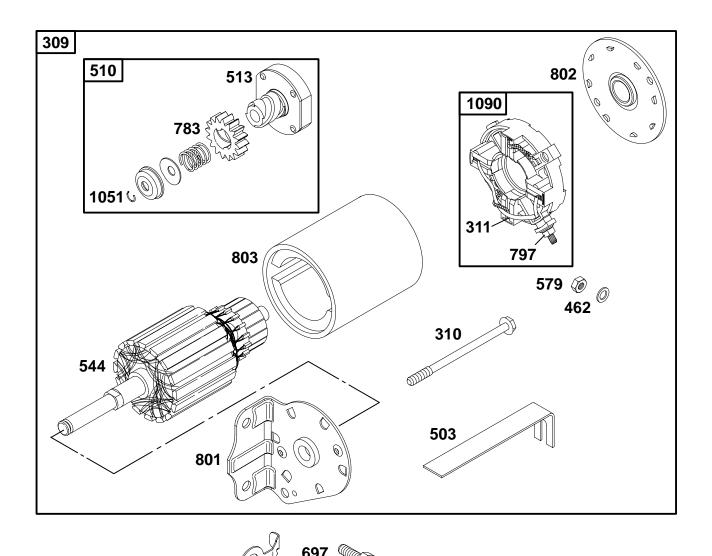



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309	693054	Motor-Starter	513	398003	Clutch-Drive	797	693167	Nut
310	690323	Bolt	544	497603	Armature-Starter			(Brush Retainer)
		(Starter Motor)	579	92278	Nut	801	394856	Cap-Drive
311	497608	Brush Set			(Starter Cable)	802	497607	Cap-End
462	225137	Washer	697	690372	Screw	803	693757	Housing-Starter
		(Starter Cable)			(Drive Cap)	1051	263080	Ring-Retainer
503	691532	Strap-Starter	729	691224	Clip-Wire	1090		Retainer-Brush
510	497606	Drive-Starter	783	693059	Gear-Pinion			


<sup>Included in Engine Gasket Set–Ref. 358.
Included in Carburetor Overhaul Kit–Ref. 121.</sup>

 [◆] Included in Carburetor Gasket Set–Ref. 977.
 Ø Included in Valve Gasket Set–Ref. 1095.

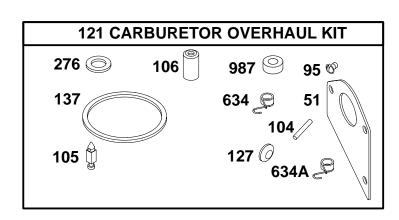

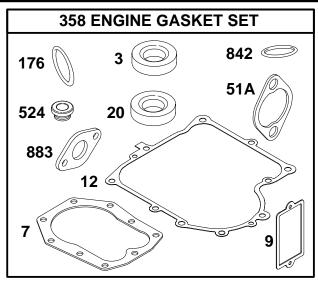

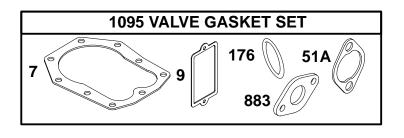

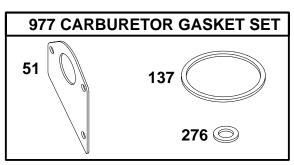

REF NO.	. PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3 7 9 12	Ø ★272163 Ø ★27803	Seal-Oil (Magneto Side) Gasket-Cylinder Head Gasket-Breather Gasket-Crankcase (.015" Standard)	51A 95 104 105 106 121	●◆272465 Ø★272554 ●94098 ●690525 ●231855 ●231854 497535 ●694530	(PTO Side) Gasket–Intake Gasket–Intake	276 358 524 634 634A 842	●◆281164 299577 *281370 ●690801 ●690802 *270920 Ø*272309 494385 ●691326	O-Ring Seal (Air Cleaner Base) Washer-Sealing Gasket Set-Engine Seal-Dipstick Tube Spring/Seal Assembly O-Ring Seal Gasket-Exhaust Gasket Set-Carburetor Seal-Throttle Shaft Gasket Set-Valve

[★] Included in Engine Gasket Set–Ref. 358.
◆ Included in Carburetor Overhaul Kit–Ref. 121.

[◆] Included in Carburetor Gasket Set–Ref. 977. Ø Included in Valve Gasket Set–Ref. 1095.