Illustrated Parts List Model Series 327400 to 327499

TYPE NUMBERS 0100, 0131.


TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

BRIGGS & STRATTON ®

PRINTED IN U.S.A.


COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

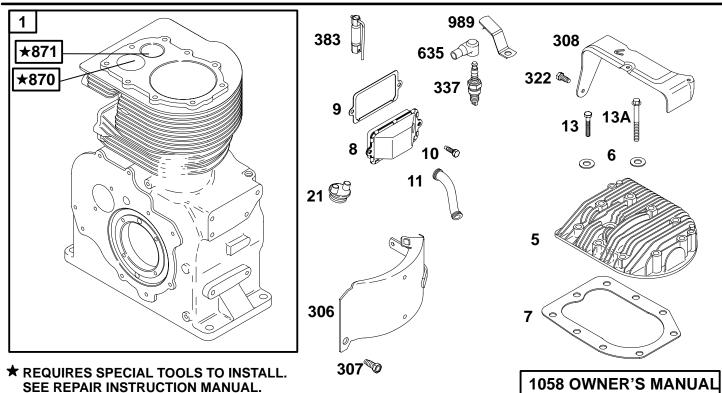

T DESCRIPTION
Wrench–SparkplugBoot–SparkplugSeat–Valve (Exhaust)
Bushing–Valve GuideStopswitch–SparkplugOwner's Manual
);

[★] Included in Engine Gasket Set-Ref. No. 358.


[•]Included in Carburetor Overhaul Kit-Ref. No. 121.

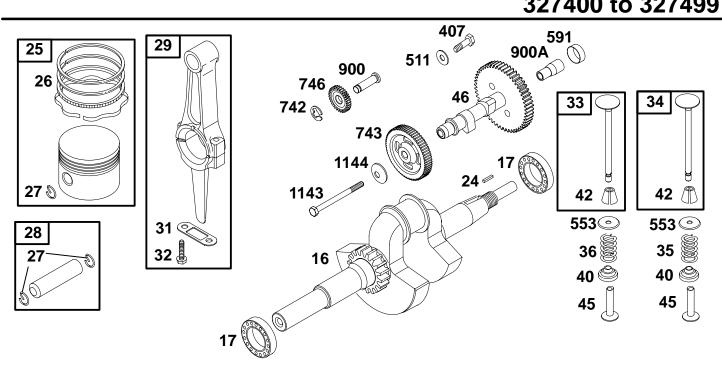

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16 17 24 25	291667 222698	Crankshaft Bearing–Ball Key–Flywheel Piston Assembly (Standard) Note	28	299691	Pin-Piston (Standard) Note 391286 Pin- Piston (.005" O.S.)	511 553 591 742 743	690269 224083 691080	Washer (Camshaft Bearing) Retainer–Valve Spring Plug–Camshaft Retainer–E Ring Gear–Drive
		390365 Piston Assembly (.010" O.S.) 390366 Piston Assembly (.020" O.S.)	29	695581	Rod–Connecting (Standard) — Note 695585 Rod– Connecting (.020" Undersize)	746 900 900A 1143	261466 230890	Gear-Idler Shaft-Gear Shaft-Gear Screw (Drive Gear Cover)
00	200404	390367 Piston Assembly (.030" O.S.)	31 32	690396 692345	Lock-Rod Screw	1144	690301	(Drive Gear Cover)
26	390484	Ring Set (Standard) Note 390679 Ring Set (Standard Chrome)	33 34 35	394435	Valve–Exhaust Valve–Intake Spring–Valve (Intake)			
		390486 Ring Set (.010" O.S.) 390505 Ring Set	36 40	292260	Spring-Valve (Exhaust) Retainer-Valve			
27	260924	(.020" O.S.) 390507 Ring Set (.030" O.S.) Lock–Piston Pin	42 45 46 407	26670	Keeper–Valve Tappet–Valve Camshaft			
21	200924	LUCK-PISION PIN	407	090010	(Camshaft Bearing)			
الماداد مادداد	ladia Faa	ing Casket Set_Pet_No. 3	F0		• Includ	ad in Carbu	ıratar Ova	rhaul Kit_Pof No. 121

[★] Included in Engine Gasket Set–Ref. No. 358.


[•]Included in Carburetor Overhaul Kit-Ref. No. 121.

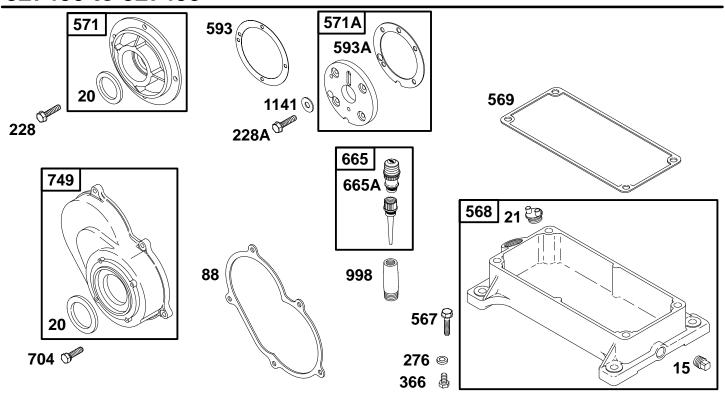


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	NO. 94239 *299609 281658 *691310 94627	Plug-Oil Drain		NO. 690258 690304 691104 294751 *27351 391062 299705	Washer–Sealing Screw (Timing Hole Plug)	665 665A 704 749 998	NO. *270513 298860 692939 691083 391061 690502	Gasket–Bearing Support (.015") Note *270514 Gasket– Bearing Support (.010") *270515 Gasket– Bearing Support (.005") Kit–Oil Minder Minder–Oil Screw (Counterweight Cover) Cover–Counterweight Pipe–Oil
						1141		Washer (Bearing Support)

[★] Included in Engine Gasket Set–Ref. No. 358.

[●]Included in Carburetor Overhaul Kit–Ref. No. 121.

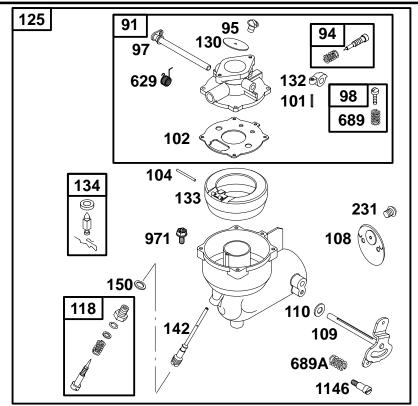

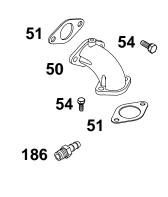




REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
50 51 54	★ 695598	Manifold-Intake Gasket-Intake Screw (Intake Manifold)	108 109 110	691353	Valve-Choke Shaft-Choke Washer (Choke Shaft)	581 629 689	695607	Intake Horn– Carburetor Spring–Throttle Return Spring–Friction
91		Body–Upper Carburetor	118 125	695608	Valve–High Speed Carburetor	689A 971		Spring–Friction Screw
94 95	93499	Kit–Idle Mixture Screw (Throttle Valve)	130 132 133	212904 298514	Valve–Throttle Stop–Throttle Float–Carburetor	1146	23123	
97 98 101	693942 93043	Shaft-Throttle Kit-Idle Speed Pin-Shaft	134 142 150	●394730 ●68667	Kit-Needle/Seat Nozzle-Carburetor Gasket-Nozzle	1223	695601	(Carburetor Intake
102		Gasket–Carburetor Body Pin–Float Hinge	186 231		Connector–Hose Screw (Choke Valve)			Horn)

[★] Included in Engine Gasket Set-Ref. No. 358.


[•]Included in Carburetor Overhaul Kit-Ref. No. 121.

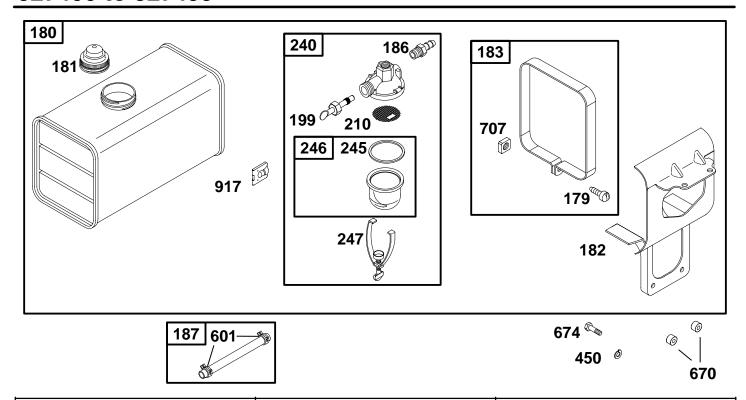

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
179 180 181 182 183 186 187	690280 292415 392305 695587 291490 230318	Screw (FuelTank Strap) Tank–Fuel Cap–Fuel Tank Bracket–Fuel Tank Strap–Fuel Tank Connector–Hose Line–Fuel	199 210 240 245 246 247 450	295913 22547 393169 *68477 298683 99665	Valve-Fuel Shut Off Strainer-Fuel Filter-Fuel Gasket-Fuel Bowl Bowl-Fuel Filter Yoke-Bowl Washer (Fuel Tank Bracket)	601 670 674 707 917	95162 690505 690303 690279	Clamp-Hose Spacer-Fuel Tank Screw (Fuel Tank Bracket)

[★] Included in Engine Gasket Set–Ref. No. 358.


[•]Included in Carburetor Overhaul Kit-Ref. No. 121.

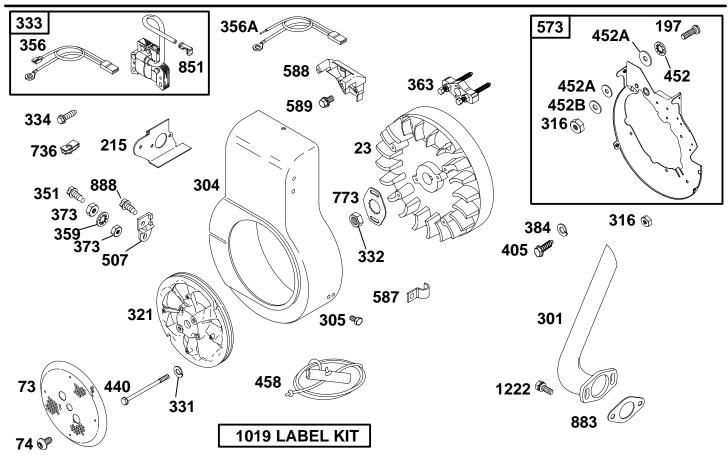


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23 73		Flywheel Screen–Rotating	334	94731	Screw (Magneto Armature)	452A	66154	Washer (Back Plate)
74	94626		351	690292		452B	26404	Washer
		(Rotating Screen)			(Ground Terminal)			(Back Plate)
197	90072		356	398808	Wire-Stop	458	69932	Kit-Handle/Rope
		(Back Plate)	356A	690650	Wire-Stop	507	690584	Insulator
215	695584	Guide-Air	359	691077	Washer	573	299450	Plate-Back
301		Pipe–Exhaust			(Ground Terminal)	587		Clamp-Cable
304	695595	Housing-Blower	363	19203	Flywheel Puller	588	690375	Bracket–Armature
305	692198		373	90576		589	690300	Screw
		(Blower Housing)			(Ground Terminal)			(Armature Bracket)
316	90576		384	90832	Washer	736		Nut-Clip
		(Back Plate)			(Back Plate)	773		Retainer
321		Fan-Booster	405	690290		851		Terminal-Sparkplug
331	691075	Washer			(Back Plate)	883		Gasket–Exhaust
		(Booster Fan)	440	691076		888	690295	
332	230674				(Booster Fan)			(Insulator)
		(Flywheel)	452	92864	Washer	1019		Kit-Label
333	398811	Armature–Magneto			(Back Plate)	1222	691058	
								(Exhaust Pipe)

[★] Included in Engine Gasket Set-Ref. No. 358.

[•]Included in Carburetor Overhaul Kit-Ref. No. 121.

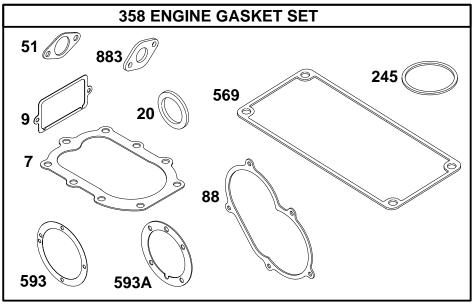

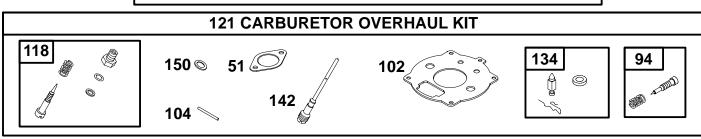

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
7 9 20 51 88	*272166	Gasket–Cylinder Head Gasket–Breather Seal–Oil (PTO Side) Gasket–Intake Gasket–Gear Reduction Cover (Magneto Side) Kit–Idle Mixture	118 121 134 142 150 245 358 569	•99525 695611 •394681 •394730 •68667 *68477 695610 *27351	Valve—High Speed Kit—Carburetor Overhaul Kit—Needle/Seat Nozzle—Carburetor Gasket—Nozzle Gasket—Fuel Bowl Gasket Set—Engine Gasket—Engine Base			Gasket–Bearing Support (.015") Note *270514 Gasket– Bearing Support (.010") *270515 Gasket– Bearing Support
104		Gasket–Carburetor Body Pin–Float Hinge	593	*691311	Gasket–Bearing Support	883	★695597	(.005") Gasket–Exhaust

[★] Included in Engine Gasket Set–Ref. No. 358.

[•]Included in Carburetor Overhaul Kit-Ref. No. 121.