FORM MS-5308-5/97 REPLACES FORM MS-5308-1/95 FILE IN SECT. 2 OF SERVICE MANUAL

83400 to 83499

Illustrated Parts List Model Series 83400 to 83499

TYPE NUMBERS 0101, 0105, 0106.


TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.



PRINTED IN U.S.A

COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

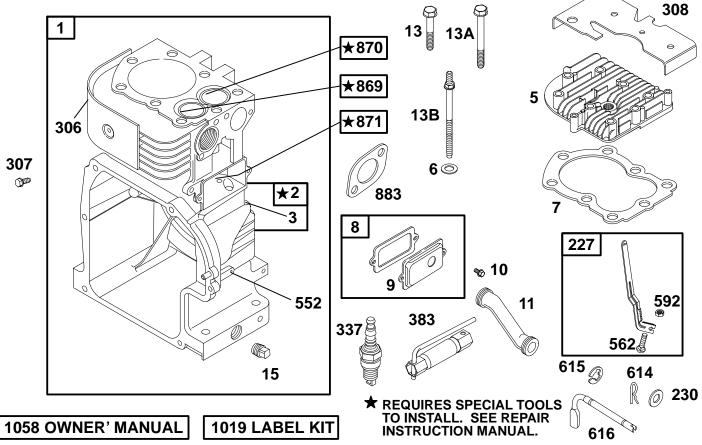



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1 2 3 5 6 7 8 9 10 11 13	293708 *299819 213953 22963 *272167 495774 *27549 94621 281010 93111 94547	Cylinder Assembly Bushing Seal-Oil Head-Cylinder Washer Gasket-Cylinder Head Breather Assy. Gasket-Breather Screw-Hex. Tube-Breather Screw-Hex. (2" Long) Screw-Hex. (2-5/16" Long)	13B 15 227 230 306 307 308 337	94387 493402 222450 224377 94515 223390 298809	Stud-Hex. Drive Plug-Oil Drain Lever-Governor Washer-Gov. Lever Shield-Cylinder Screw-Hex. Cover-Cylinder Head Plug-Spark (1-1/2" High, 38 mm)	562 592 614 615 616 869 870 871 883 1019 1058	231978 93306 93307 231077 211172 211291 231348 *272252 491675	Bolt-Governor Lever Nut-Hex. Pin-Cotter Retainer-Lock Crank-Governor Seat-Valve (Intake) Seat-Valve (Exhaust) Bushing-Guide Gasket-Exhaust Label Kit Owner's Manual


5308-2


Assemblies include all parts shown in frames.

 
[★] Included in Gasket Set–Part No. 397144.
◆ Included in Carburetor Kit–Part No. 493762.
◆ Included in Carburetor Gasket Set–Part No. 490937.

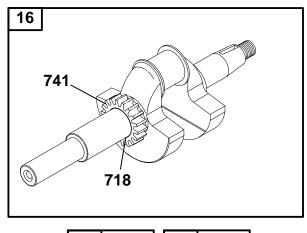

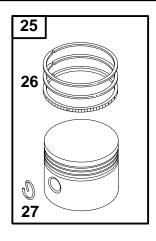

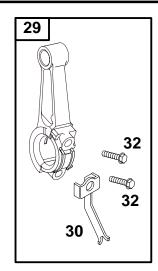

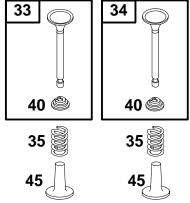




REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16 25		Crankshaft Piston Assembly (Standard) 295588 Piston Assy. (.010" O.S.) 295589 Piston Assy. (.020" O.S.)	27 28 29	298909 294367 220670	Lock-Piston Pin Pin-Piston Rod-Connecting (Standard) 296079 Rod-Conn. (.020 Undersize) Dipper-Conn. Rod	33 34 35 40 45 718 741	296677 260552 93312 230173 499047	Valve–Exhaust Valve–Intake Spring–Valve Retainer–Valve Tappet–Valve Key–Timing Gear–Timing
26	294232	295590 Piston Assy. (.030" O.S.) Ring Set (Standard) 297201 Ring Set (Standard Chrome) 294224 Ring Set (.010" O.S.) 294225 Ring Set) (.020" O.S.) 294226 Ring Set (.030" O.S.) (Standard) 298908 Pin—Piston (.005" O.S.)	32	94699	Screw-Conn. Rod			

- ★ Included in Gasket Set–Part No. 397144.
 ◆ Included in Carburetor Kit–Part No. 493762.
 ◆ Included in Carburetor Gasket Set–Part No. 490937.

5308-3

Assemblies include all parts shown in frames.

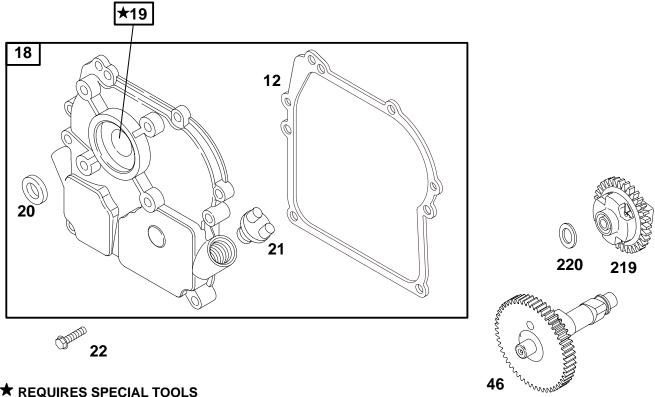


★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
12	★270833	Gasket–Crankcase (.015" Thick, Std.) *270895 Gasket– Crankcase (.005" Thick) *270896 Gasket–	19 20 21 22	★392986 66768	Bushing Seal-Oil Plug-Oil Fill Screw-Hex. Note 92747 Screw-Hex.	46 219		Gear–Cam Gear–Governor Note 391737 Gear–Gov. (Used Before Code Date 91061000).
18	496680	Crankcase (.009" Thick) Cover–Crankcase Used on Model Series 83412.			Used on Two Top Holes to Mount Cover Used on Model Series 83412.	220	221551	Washer–Thrust

- ★ Included in Gasket Set–Part No. 397144.
 ◆ Included in Carburetor Kit–Part No. 493762.
 ◆ Included in Carburetor Gasket Set–Part No. 490937.

5308-4

Assemblies include all parts shown in frames.

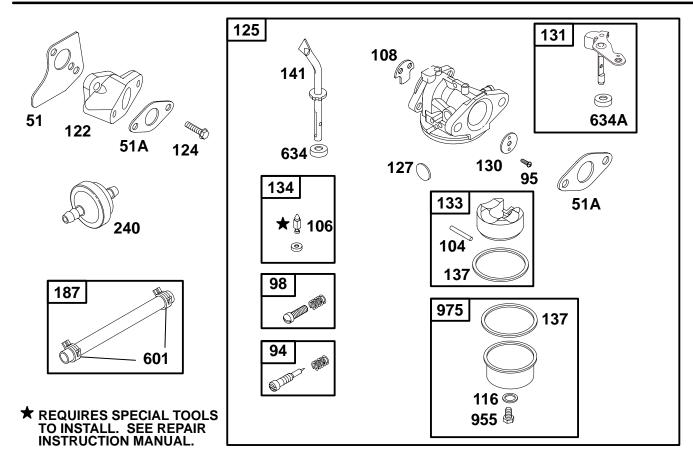


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51 51A 94 95 98 104 106 108 116	*272585 *272295 •493765 94098 398185 •231371 •	Gasket–Intake Gasket–Intake Valve–Idle Adjust Screw–Rd. Hd. Screw–Idle Adjustment Pin–Float Hinge Seat–Inlet (Sold in Kit and Ref. 134 only) Valve–Choke Gasket–Sealing (Sold in Kit Only)	124 125 127 130 131 133 134 137	93357 494466 • 223470 493556 398187 •398188	Screw-Carburetor Mounting Carburetor Plug-Welch (Sold in Kit Only)	141 187 240 601 634 634A 955 975	231741 296004 298090 93053 •• 231373	Shaft–Choke Line–Fuel (Cut to Required Length) Filter–Fuel

5308-5

Assemblies include all parts shown in frames.

[★] Included in Gasket Set–Part No. 397144.
◆ Included in Carburetor Kit–Part No. 493762.
◆ Included in Carburetor Gasket Set–Part No. 490937.

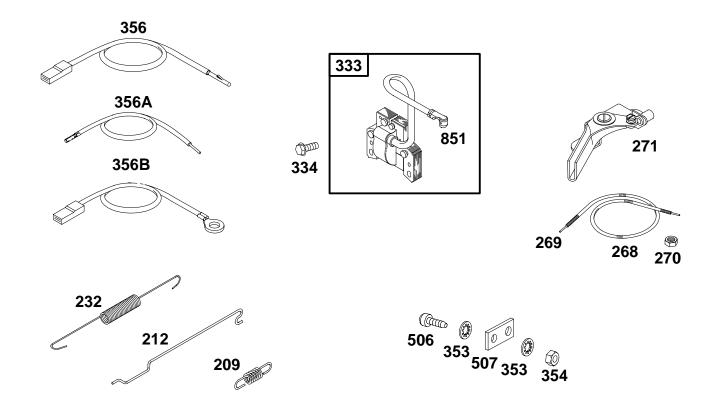


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209 212 232 268	262575 262695 262696	Spring-Governor Note 262576 Spring- Governor Used on Type No(s). 0105, 0106. Link-Governor Spring-Link Casing-Wire (48" Long) (Cut to Required Length)	269 270 271 333 334 353 354 356 356A	26099 63426 290568 496914 94731 92791 90576 493400	Wire–Control (54" Long) (Cut to Required Length) Locknut–Casing Lever–Control Armature–Magneto Screw–Hex. Washer–Lock Nut–Hex. Wire–Stop Wire–Stop	356B 506 507 506 507 851	398808 90200 66895 90200 66895	Wire—Stop Screw—Fill. Hd. Insulator Screw—Fill. Hd. Insulator Terminal—Cable

5308-6

Assemblies include all parts shown in frames.

[★] Included in Gasket Set–Part No. 397144.
◆ Included in Carburetor Kit–Part No. 493762.
◆ Included in Carburetor Gasket Set–Part No. 490937.

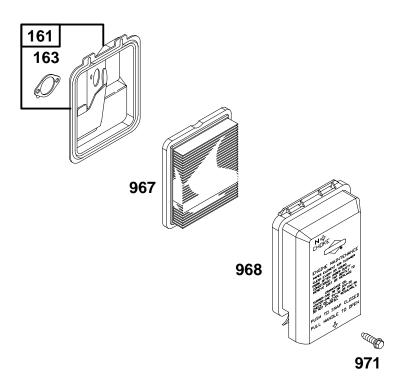


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
161	493394	Base–Air Cleaner Gasket–Air Cleaner	967 968	491588	Filter–Air Cover–Air Cleaner	971		Screw-Air Cleaner

- Included in Gasket Set–Part No. 397144.
 Included in Carburetor Kit–Part No. 493762.
 Included in Carburetor Gasket Set–Part No. 490937.

5308-7

Assemblies include all parts shown in frames. 7

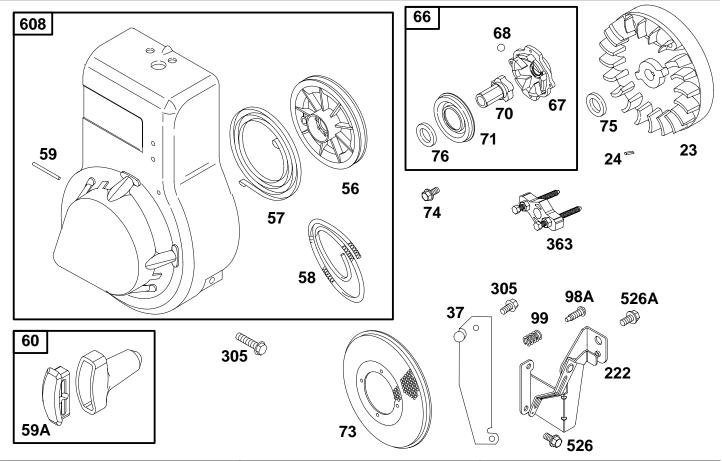



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23 24 37 56 57 58	222698 220971 280439 490179	Flywheel Key–Flywheel Guard–Flywheel Pulley–Starter Spring–Rewind Starter Rope–Starter (48–5/8" Long) ———— Note ——— 280399 Rope–Starter (Cut to Required Length)	60 59 66 67 68 70 71 73 74 75	230228 399671 394897 63770 298799 394506 221661 93490 223047	Grip-Starter Rope Pin-Starter Grip Clutch-Starter Housing-Clutch Ball-Clutch Ratchet-Clutch Washer-Retainer Screen-Rotating Screw-Hex. Washer-Spring Washer	222 305 363 526 526A 608	94786 19069 93062 94523	Bracket–Control Screw–Hex. Flywheel Puller Screw–Hex. Screw–Hex. Starter–Rewind (12 o'clock) ————————————————————————————————————
59 59A		Insert–Grip Pin–Starter Grip	98A 99	94094	Screw–Phillips Spring–Idle Valve			0106.


5308-8

Assemblies include all parts shown in frames.

<sup>Included in Gasket Set–Part No. 397144.
Included in Carburetor Kit–Part No. 493762.
Included in Carburetor Gasket Set–Part No. 490937.</sup>

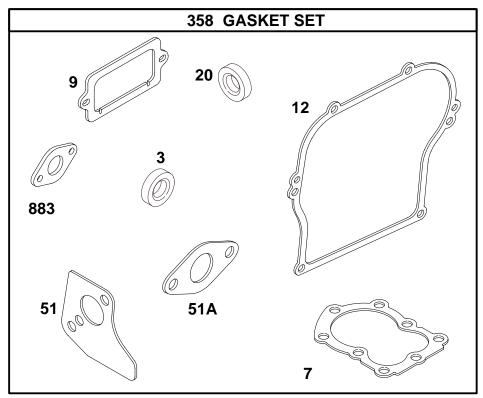

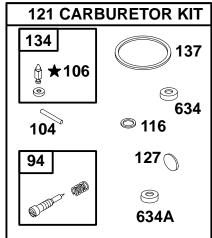

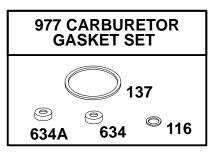

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3 7	*299819 *272167	Seal-Oil Gasket-Cylinder Head	51 51A		Gasket–Intake Gasket–Intake	134	•398188	Valve-Needle (Includes Seat)
9		Gasket-Breather	94		Valve-Needle	137	••	Gasket–Float Bowl
12	★270833	Gasket-Crankcase	104	●231371	Pin–Float Hinge	_		(Sold in Kit Only)
		(.015" Thick, Std.)	106	•	Seat-Inlet	358		Gasket Set
		★270895 Gasket–			(Sold in Kit and	634		Washer–Throttle Shaft
		Crankcase	116		Ref. 134 only))	634A 883		Seal–Choke Gasket–Exhaust
		(.005" Thick) ★270896 Gasket–	110	••	Gasket–Sealing (Sold in Kit Only)	977	_	Gasket Set-
		Crankcase	121	493762	Carburetor Kit	377	730331	Carburetor
		(.009" Thick)	127	•	Plug-Welch			Carbarotor
20	*392986	` '			(Sold in Kit Only)			
		L . O . D . M . 007444						

- ★ Included in Gasket Set–Part No. 397144.
 ◆ Included in Carburetor Kit–Part No. 493762.
 ◆ Included in Carburetor Gasket Set–Part No. 490937.

5308-9

Assemblies include all parts shown in frames.