

9B900 to 9B999

Illustrated Parts List

Model Series

9B900 to 9B999

TYPE NUMBERS
0050, 0051, 1651,
1652.

TO FIND

THE CORRECT NUMBER OF THE PART YOU NEED:

FOLLOW THE INSTRUCTIONS BELOW


- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. **THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."**
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.



COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

9B900 to 9B999

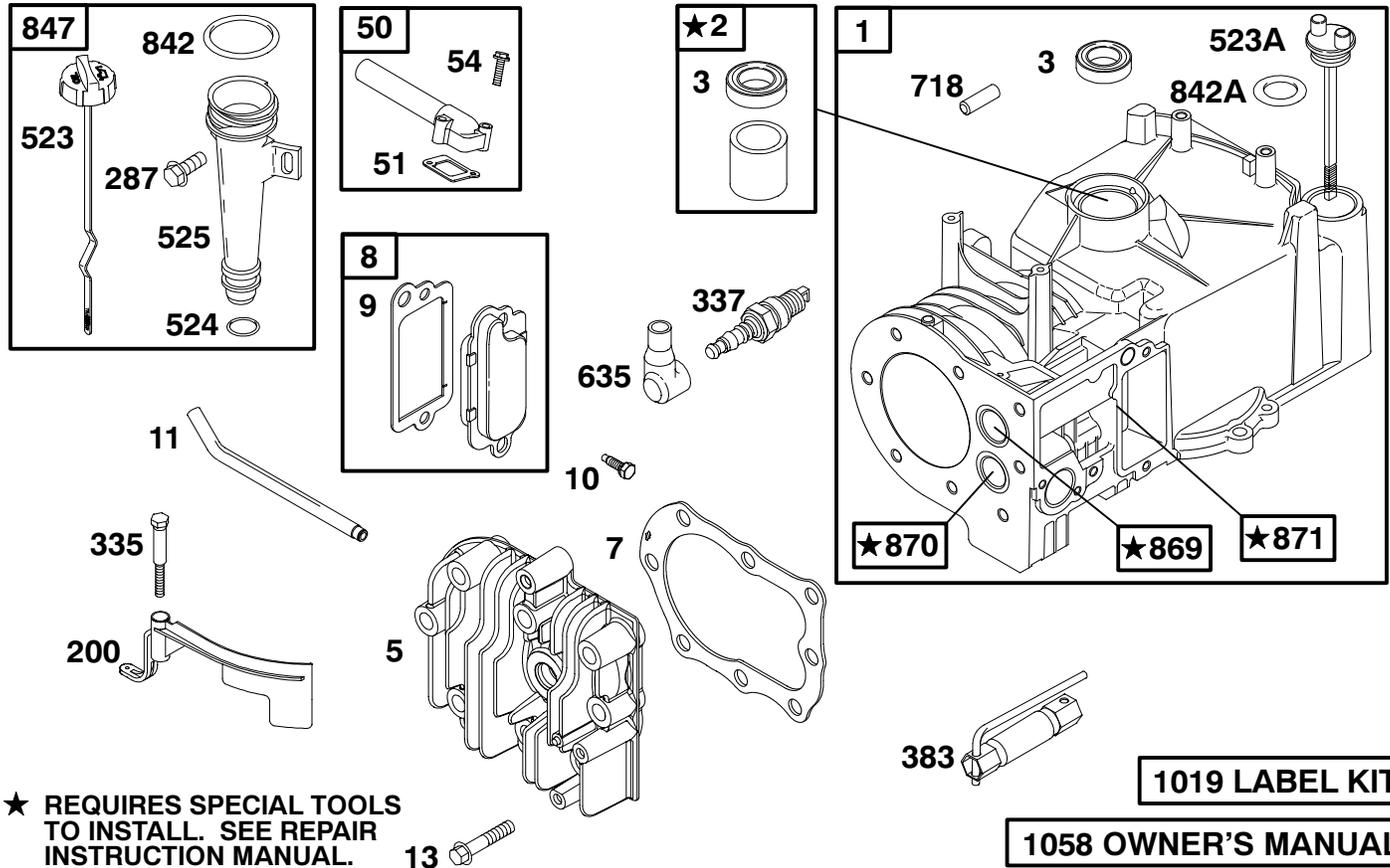


★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	399164	Cylinder Assembly	10	94719	Screw	718	230192	Pin-Locating
2	399269	Kit-Bushing/Seal (Magneto Side)	11	691245	Tube-Breather	842	270920	O-Ring Seal (Dipstick Cap to Tube)
3	★299819	Seal-Oil (Magneto Side)	13	691697	Screw (Cylinder Head)	842A	271485	O-Ring Seal (Dipstick to Cylinder)
5	690386	Head-Cylinder (Used After Code Date 95021900).	50	298775	Manifold-Intake	847	691440	Dipstick/Tube Assembly
		----- Note -----	51	★270345	Gasket-Intake	869	211172	Seat-Valve (Intake)
		214277 Head-Cylinder (Used Before Code Date 95022000).	54	691111	Screw (Intake Manifold)	870	211291	Seat-Valve (Exhaust)
7	272694	Gasket-Cylinder Head (Used After Code Date 95021900).	200	281024	Blade-Governor	871	231348	Bushing-Guide (Exhaust Valve)
		----- Note -----	287	94903	Screw (Dipstick Tube)			----- Note -----
		★272536 Gasket-Cylinder Head (Used Before Code Date 95022000).	335	691107	Screw (Armature/Air Vane)			63709 Bushing-Guide (Intake Valve)
8	495785	Breather Assembly	337	802592	Sparkplug	1019	496757	Kit-Label
9	★272602	Gasket-Breather	383	89838	Wrench-Sparkplug	1058	274262	Owner's Manual (Emission)
			523	497968	Dipstick (Fill and Level Check)			----- Note -----
			523A	281081	Dipstick (Fill and Drain)			272308 Owner's Manual (Non Emission)
			524	★271485	Seal-Dipstick Tube			
			525	691320	Tube-Dipstick			
			635	66538	Boot-Sparkplug			

★ Included in Engine Gasket Set-Ref. No. 358.

Included in Valve Gasket Set-Ref. No. 1095.

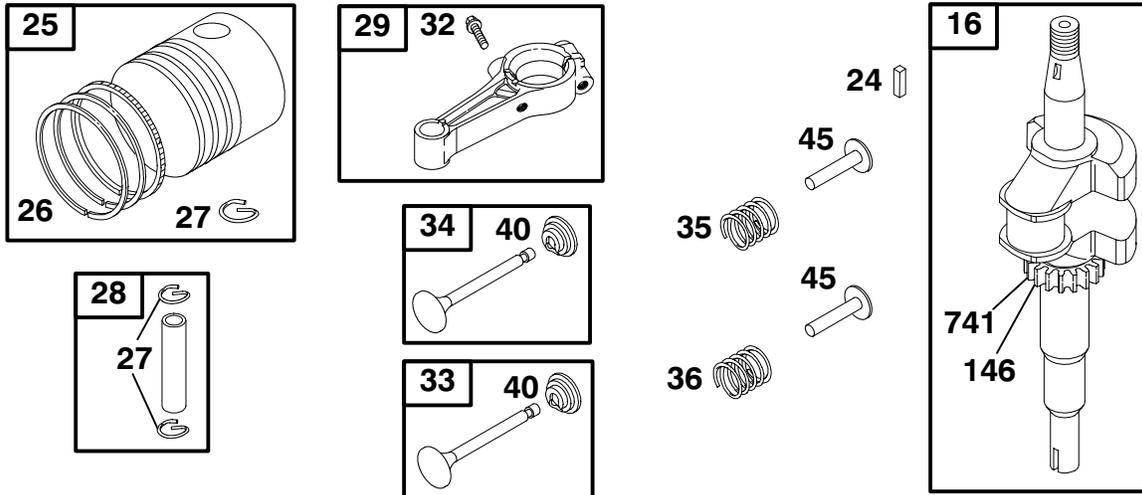


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	690805	Crankshaft Used on Type No(s). 0050, 0051. ----- Note ----- 692991 Crankshaft Used on Type No(s). 1651, 1652.		298906	Piston Assembly (.020 O.S.) (Used Before Code Date 96020600).		298984	Ring Set (.020 O.S.) (Used Before Code Date 96020600).
24	222698	Key-Flywheel		498671	Piston Assembly (.030 O.S.) (Used After Code Date 96020500).		498683	Ring Set (.030 O.S.) (Used After Code Date 96020500).
25	498668	Piston Assembly (Standard) (Used After Code Date 96020500). ----- Note ----- 298904 Piston Assembly (Standard) (Used Before Code Date 96020600).		298907	Piston Assembly (.030 O.S.) (Used Before Code Date 96020600).		298985	Ring Set (.030 O.S.) (Used Before Code Date 96020600).
		498669 Piston Assembly (.010 O.S.) (Used After Code Date 96020500).	26	498680	Ring Set (Standard) (Used After Code Date 96020500). ----- Note ----- 298982 Ring Set (Standard) (Used Before Code Date 96020600).	27	26026	Lock-Piston Pin
		298905 Piston Assembly (.010 O.S.) (Used Before Code Date 96020600).		498681	Ring Set (.010 O.S.) (Used After Code Date 96020500).	28	298909	Pin-Piston (Standard) ----- Note ----- 298908 Pin-Piston (.005 O.S.)
		498670 Piston Assembly (.020 O.S.) (Used After Code Date 96020500).		298983	Ring Set (.010 O.S.) (Used Before Code Date 96020600).	29	294201	Rod-Connecting (Standard) ----- Note ----- 296079 Rod- Connecting (.020 Undersize)
				498682	Ring Set (.020 O.S.) (Used After Code Date 96020500).	32	94699	Screw (Connecting Rod)
						33	296676	Valve-Exhaust
						34	296677	Valve-Intake
						35	260552	Spring-Valve (Intake)
						36	260552	Spring-Valve (Exhaust)
						40	93312	Retainer-Valve
						45	230173	Tappet-Valve
						146	499047	Key-Timing
						741	261533	Gear-Timing

★ Included in Engine Gasket Set-Ref. No. 358.

Included in Valve Gasket Set-Ref. No. 1095.

9B900 to 9B999

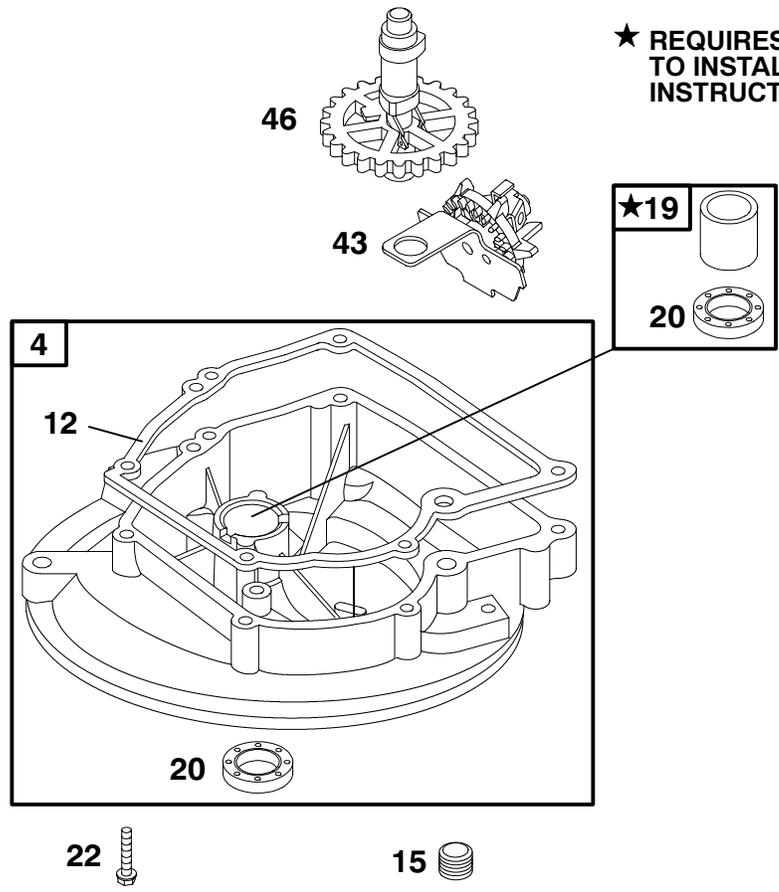


★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
4	395384	Sump-Engine	15	94880	Plug-Oil Drain	22	94682	Screw
12	★270833	Gasket-Crankcase (.015 Thick, Standard)	19	293709	Kit-Bushing/Seal (PTO Side)			(Crankcase Cover/Sump)
		----- Note -----	20	★391483	Seal-Oil (PTO Side)	43	491688	Slinger-Governor/Oil
		★270895 Gasket-Crankcase (.005 Thick)				46	493747	Camshaft
		★270896 Gasket-Crankcase (.009 Thick)						

★ Included in Engine Gasket Set-Ref. No. 358.

Included in Valve Gasket Set-Ref. No. 1095.

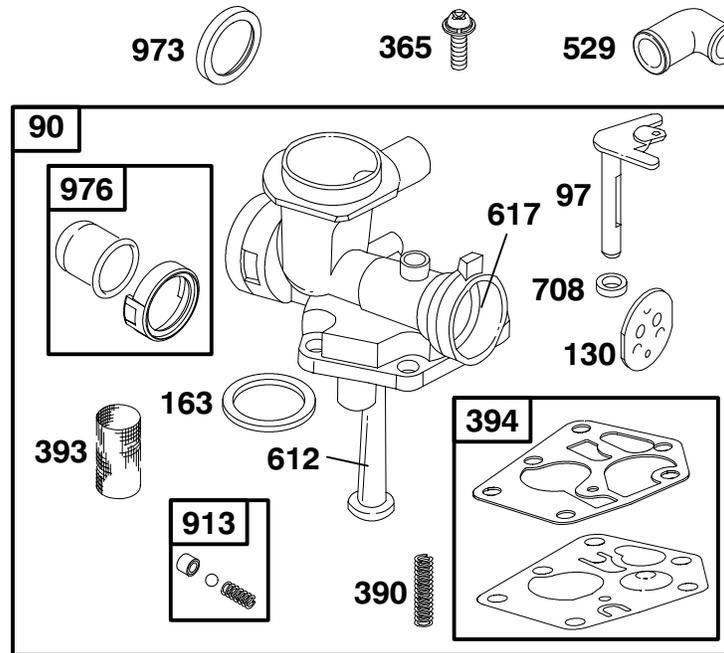


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
90	498809	Carburetor (Used After Code Date 96051900). ----- Note ----- 494775 Carburetor (Used Before Code Date 96052000).	390	262764	Spring-Choke Diaphragm	973	691347	Ring-Trim (Primer Bulb) (Used Before Code Date 99051300).
97	281437	Shaft-Throttle	393	262734	Screen-Carburetor	976	694394	Primer-Carburetor (Used After Code Date 99051200). ----- Note ----- 494408 Primer-Carburetor (Used Before Code Date 99051300).
130	691190	Valve-Throttle	394	495770	Gasket-Carburetor Pump			
163	*271139	Gasket-Air Cleaner	529	67838	Grommet			
365	94924	Screw (Carburetor)	612	496046	Tube-Pickup			
			617	270344	O-Ring Seal (Intake Manifold)			
			708	691321	Seal-Dust			
			913	494409	Seat-Check Valve			

* Included in Engine Gasket Set-Ref. No. 358.

Included in Valve Gasket Set-Ref. No. 1095.


9B900 to 9B999

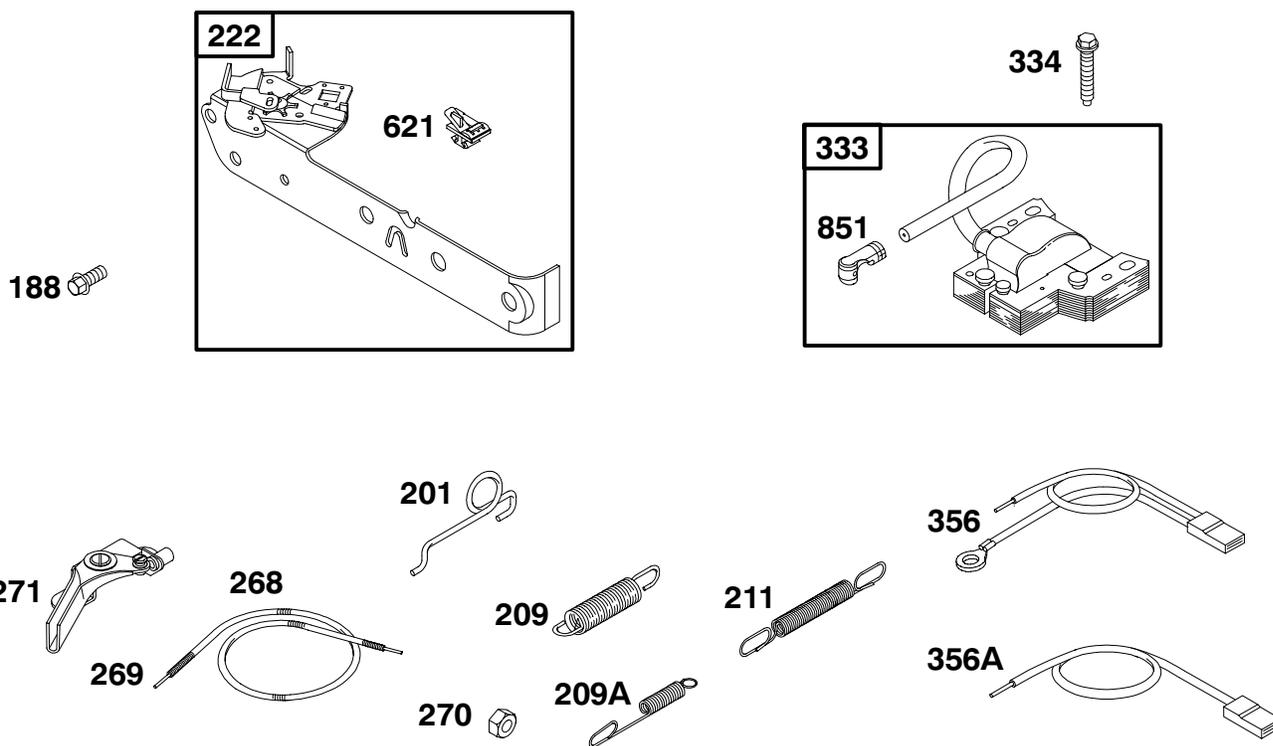

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
188	94786	Screw (Control Bracket)	209A	692698	Spring-Governor (Fixed Speed) Used on Type No(s). 1651.	270	63426	Nut (Control Wire Casing)
201	262753	Link-Air Vane	211	263109	Spring-Governed Idle	271	290568	Lever-Control
209	263122	Spring-Governor (Air Vane)	222	691445	Bracket-Control	333	496914	Armature-Magneto
		----- Note -----	268	691072	Casing-Control Wire (Cut to Required Length)	334	94731	Screw (Magneto Armature)
		262942 Spring-Governor (Air Vane) (Used Before Code Date 96052000). Used on Type No(s). 0050.	269	26099	Wire-Control (Cut to Required Length)	356	398808	Wire-Stop (Strip/Terminal End)
						356A	692390	Wire-Stop (Strip End)
						621	396847	Switch-Stop
						851	493880	Terminal-Sparkplug

★ Included in Engine Gasket Set-Ref. No. 358.

Included in Valve Gasket Set-Ref. No. 1095.







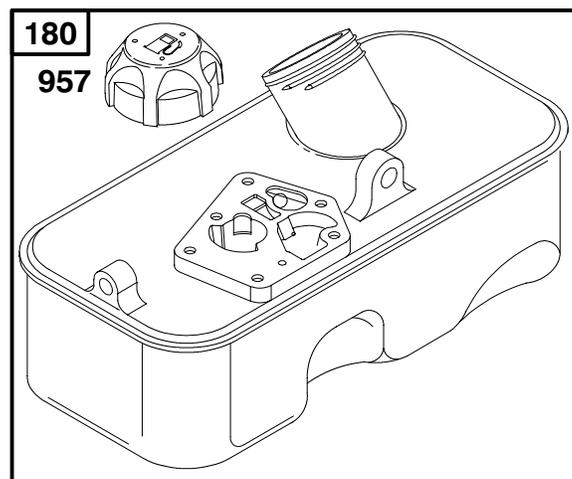


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
180	494406	Tank-Fuel	670	94047	Spacer-Fuel Tank (Used After Code Date 97071300).	957	497929	Cap-Fuel Tank (Plastic)
181	493982	Cap-Fuel Tank (Metal)			----- Note -----			694120 Cap-Fuel Tank
190	94960	Screw (Fuel Tank)			(Used Before Code Date 97071400).			Used on Type No(s). 1652.
190A	94786	Screw (Fuel Tank)						
365	94924	Screw (Carburetor)						

★ Included in Engine Gasket Set-Ref. No. 358.

Included in Valve Gasket Set-Ref. No. 1095.

 
9B900 to 9B999

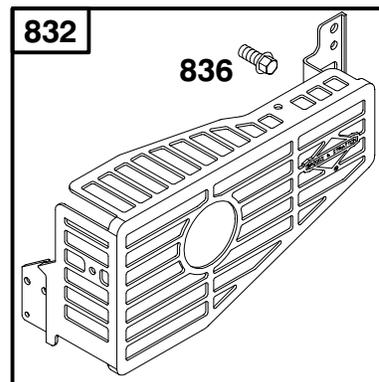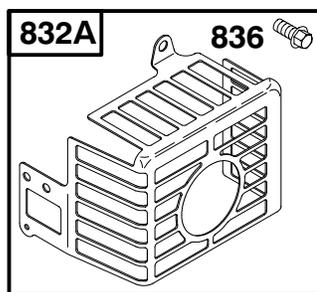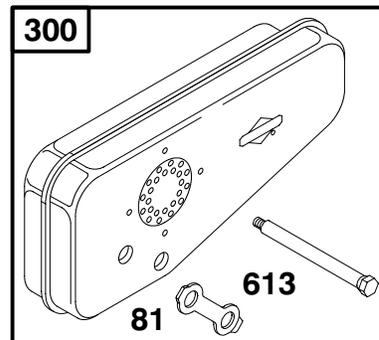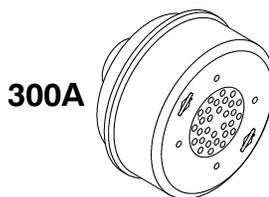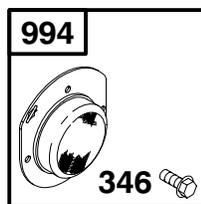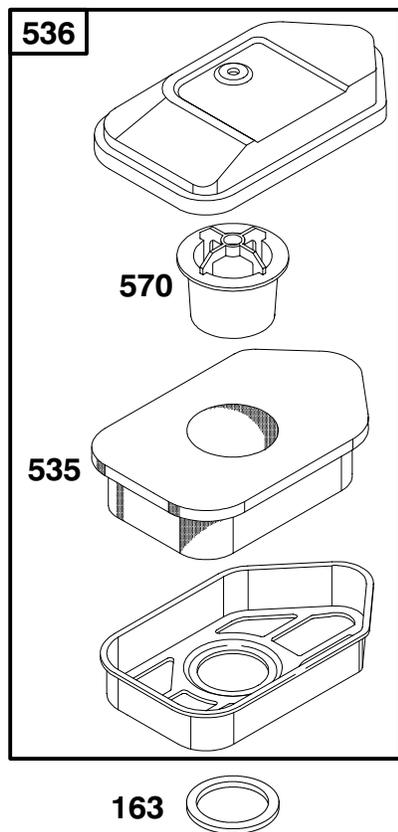

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
81	691179	Lock-Muffler Screw	535	272235	Filter-Air Cleaner Foam	832A	691443	Guard-Muffler (Round Lo-Tone Muffler)
163	★271139	Gasket-Air Cleaner	536	493492	Cleaner-Air	836	94874	Screw (Muffler Guard)
300	394644	Muffler (Super Lo-Tone)	570	280972	Support-Foam Element	994	398067	Arrester-Spark
300A	394569	Muffler (Round Lo-Tone)	613	93935	Screw (Exhaust Muffler)			
346	94896	Screw (Spark Arrester)	832	494896	Guard-Muffler (Super Lo-Tone Muffler)			
534	93865	Screw (Air Cleaner)						

★ Included in Engine Gasket Set-Ref. No. 358.

Included in Valve Gasket Set-Ref. No. 1095.


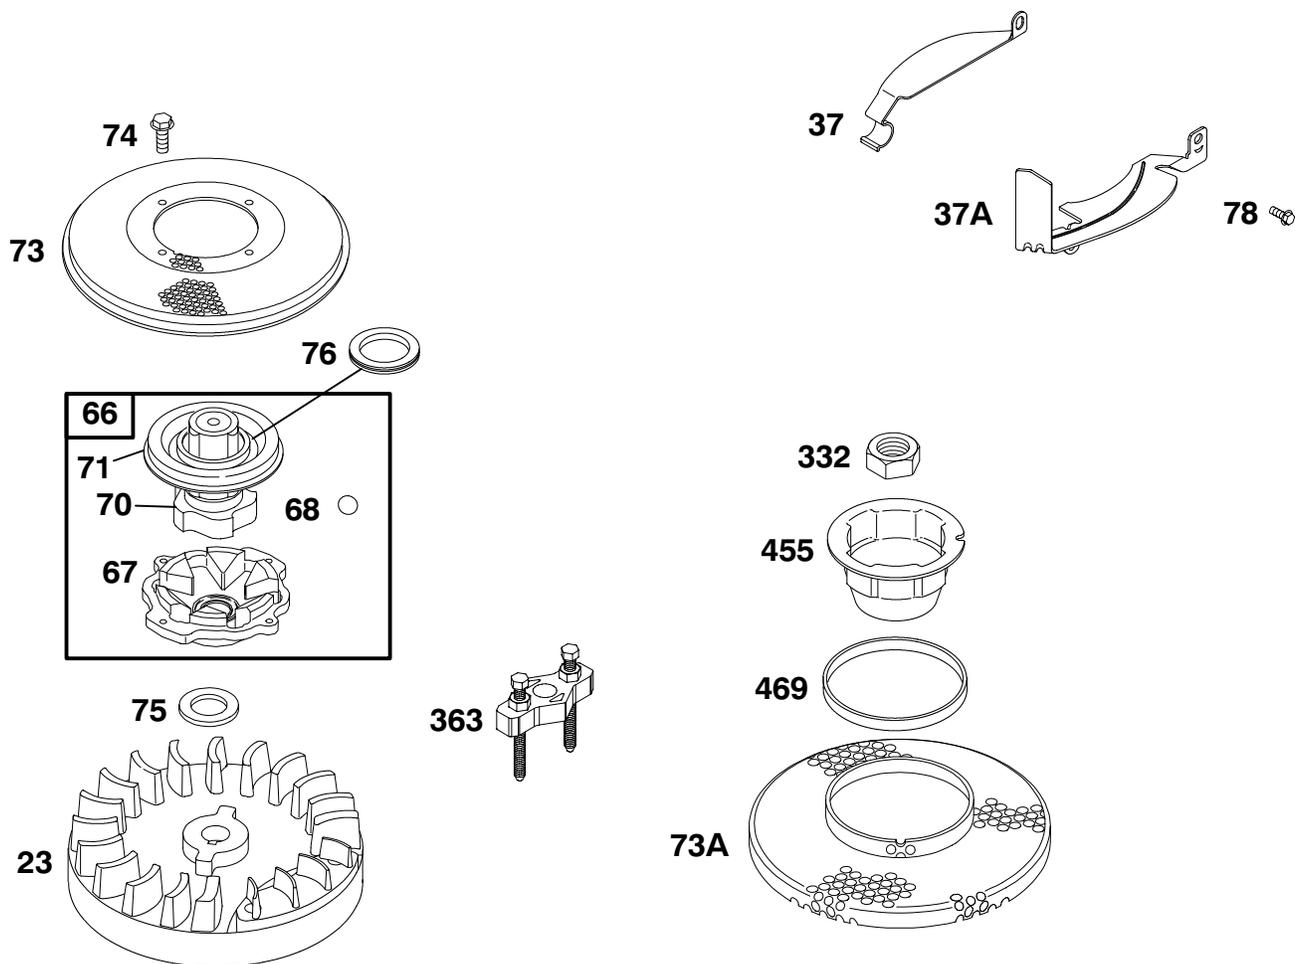


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	690843	Flywheel	70	298799	Ratchet-Clutch	75	223047	Washer (Flywheel)
37	690482	Guard-Flywheel (Carburetor Side)	71	691359	Cover-Ratchet	76	68238	Seal-Ratchet
37A	691209	Guard-Flywheel (Muffler Side)	73	221661	Screen-Rotating Used on Type No(s). 0050, 0051.	78	94786	Screw (Flywheel Guard)
66	399671	Clutch-Starter (Used Before Code Date 97060600).	73A	691235	Screen-Rotating Used on Type No(s). 1651, 1652.	332	94877	Nut (Flywheel)
67	394897	Housing-Clutch	74	93758	Screw (Rotating Screen)	363	19069	Flywheel Puller
68	63770	Ball-Clutch				455	691236	Cup-Flywheel
						469	694420	Ring-Rotating Trim

★ Included in Engine Gasket Set-Ref. No. 358.

Included in Valve Gasket Set-Ref. No. 1095.

9B900 to 9B999

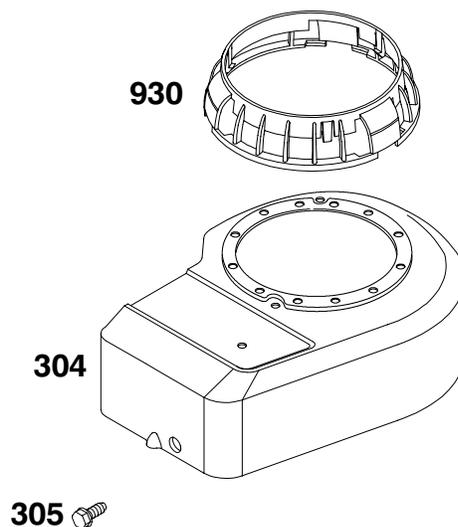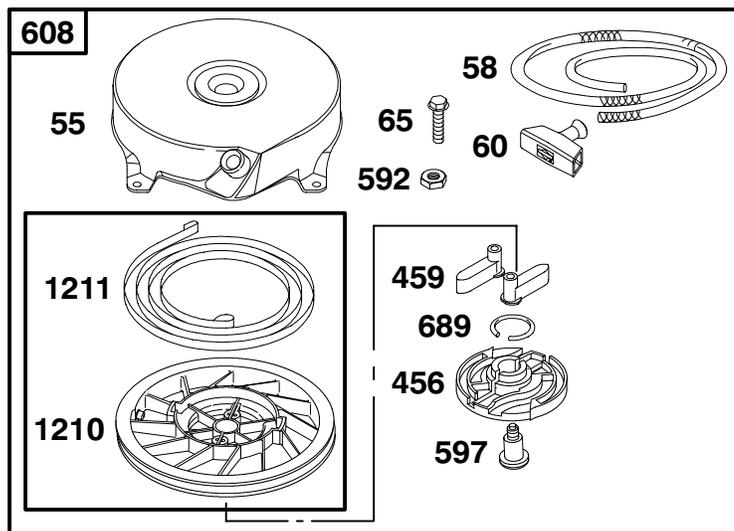


1036 EMISSIONS LABEL

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	692144	Housing-Rewind Starter	459	281505	Pawl-Ratchet	1036	695108	Label-Emissions (Used After Code Date 99093000).
58	281464	Rope-Starter (88 5/8" Long)	592	94908	Nut (Rewind Starter)	----- Note -----		
60	281101	Grip-Starter Rope (One Piece)	597	94943	Screw (Pawl Friction Plate)	694409	Label-Emissions (Used After Code Date 98123100 and Before Code Date 99100100).	
65	94904	Screw (Rewind Starter)	608	499706	Starter-Rewind (Used After Code Date 97092800).	499332	Label-Emissions (Used Before Code Date 99010100).	
304	692536	Housing-Blower	689	263073	Spring-Friction	1210	499901	Pulley/Spring Assembly (Pulley)
305	94786	Screw (Blower Housing)	930	691348	Guard-Rewind	1211	499901	Pulley/Spring Assembly (Spring)
456	281503	Plate-Pawl Friction						

★ Included in Engine Gasket Set-Ref. No. 358.

Included in Valve Gasket Set-Ref. No. 1095.

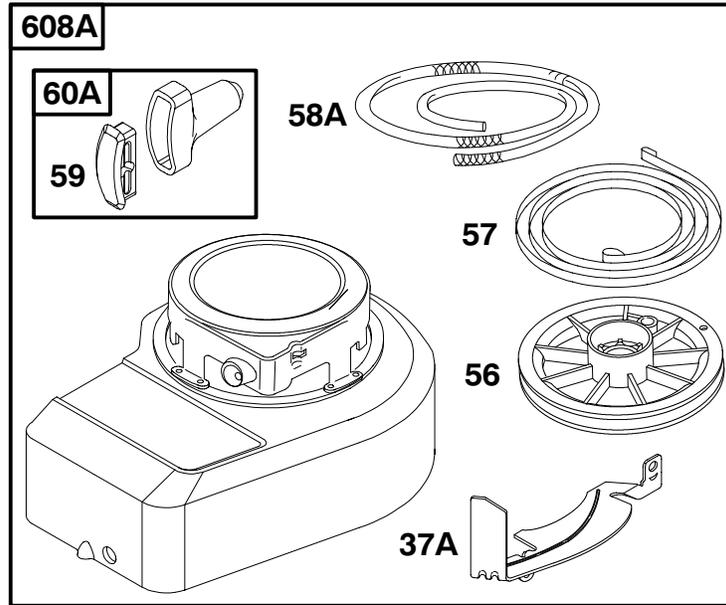



305 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
37A	691209	Guard-Flywheel (Muffler Side)	59	396892	Insert-Grip	608A	499925	Starter-Rewind (Used After Code Date 95072300 and Before Code Date 97092700).
56	281336	Pulley-Starter	60A	393152	Grip-Starter Rope (Two Piece)			----- Note -----
57	490179	Spring-Rewind Starter	305	94786	Screw (Blower Housing)			496502 StarterRewind (Used Before Code Date 95072400). Used on Type No(s). 0050, 0051.
58A	280406	Rope-Starter (82" Long)						

★ Included in Engine Gasket Set-Ref. No. 358.

Included in Valve Gasket Set-Ref. No. 1095.

9B900 to 9B999

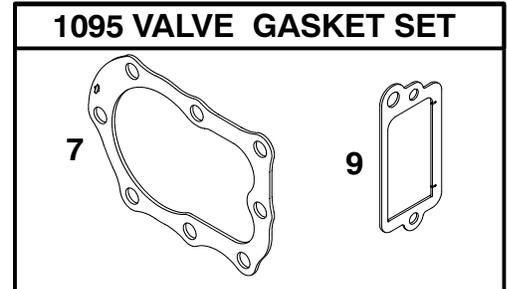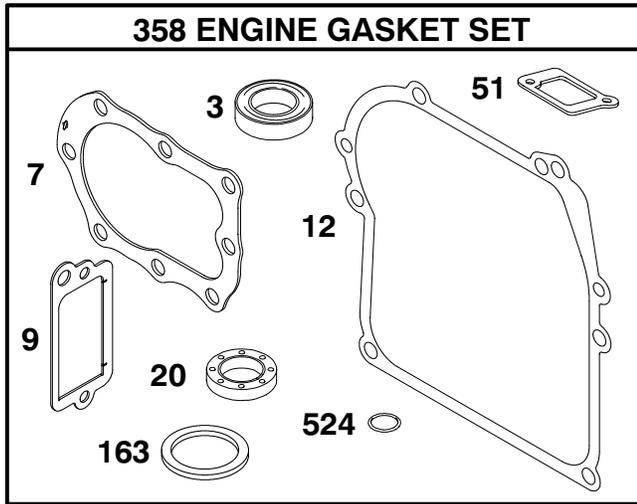

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	★299819	Seal-Oil (Magneto Side)	9	★272602	Gasket-Breather	20	★391483	Seal-Oil (PTO Side)
7	272694	Gasket-Cylinder Head (Used After Code Date 95021900). ----- Note ----- ★272536 Gasket-Cylinder Head (Used Before Code Date 95022000).	12	★270833	Gasket-Crankcase (.015 Thick, Standard) ----- Note ----- ★270895 Gasket-Crankcase (.005 Thick) ★270896 Gasket-Crankcase (.009 Thick)	51	★270345	Gasket-Intake
						163	★271139	Gasket-Air Cleaner
						358	298989	Gasket Set-Engine
						524	★271485	Seal-Dipstick Tube
						1095	498526	Gasket Set-Valve

★ Included in Engine Gasket Set-Ref. No. 358.

Included in Valve Gasket Set-Ref. No. 1095.