



**10H900**

# Illustrated Parts List

## Model Series

# 10H900

### TYPE NUMBERS

0101, 0111, 0113, 0114,  
0115, 0116, 0117, 0216,  
0246, 0285, 0327, 0333,  
0437, 0455, 0522.

## TABLE OF CONTENTS


Air Cleaner .....	6
Blower Housing/Shrouds .....	7
Brake .....	5
Cam .....	3
Carburetor .....	4
Controls .....	5
Crankcase Cover/Sump .....	3
Crankshaft .....	3
Cylinder .....	2
Flywheel .....	7
Fuel Tank .....	4
Governor Spring .....	5
Head .....	2
Ignition .....	5
Kits/Gaskets-Engine/Valve .....	2
Muffler .....	6
Oil Group .....	2
Piston Group .....	3
Rewind .....	7
Valves .....	3



PRINTED IN U.S.A.







COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


# 10H900

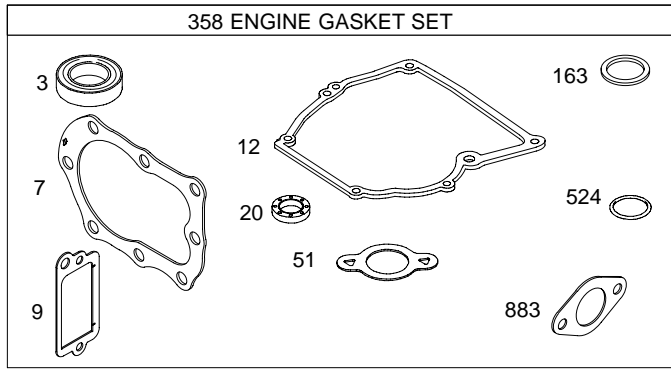



1058 OWNER'S MANUAL






1330 REPAIR MANUAL

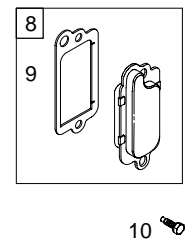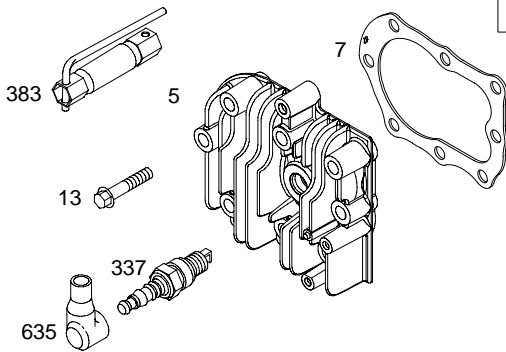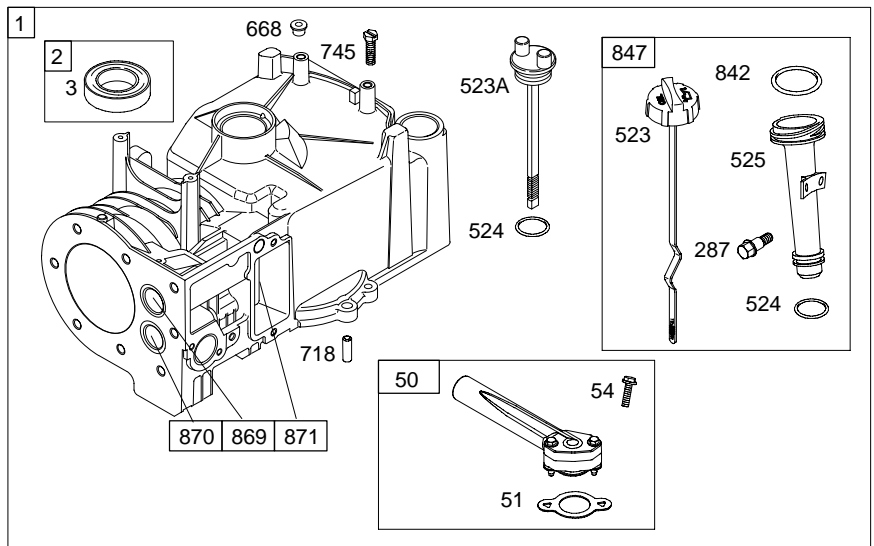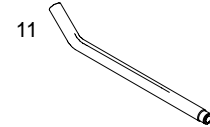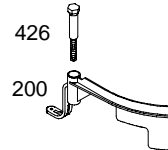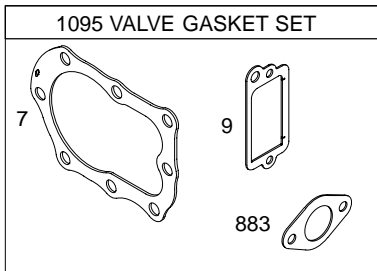

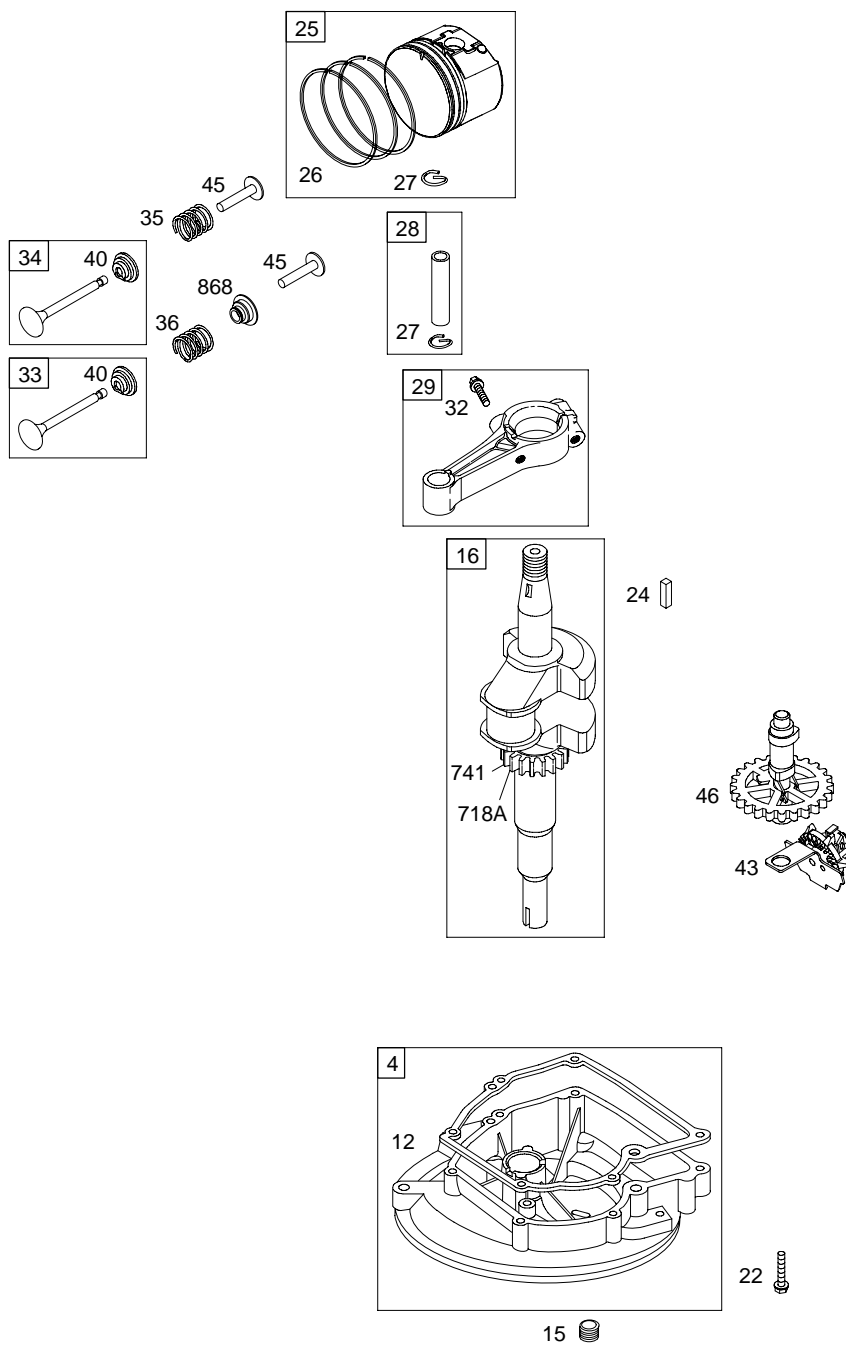





# 10H900

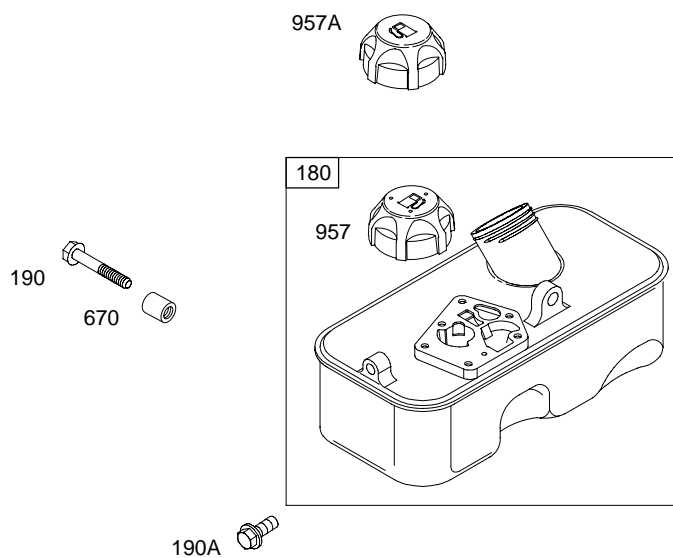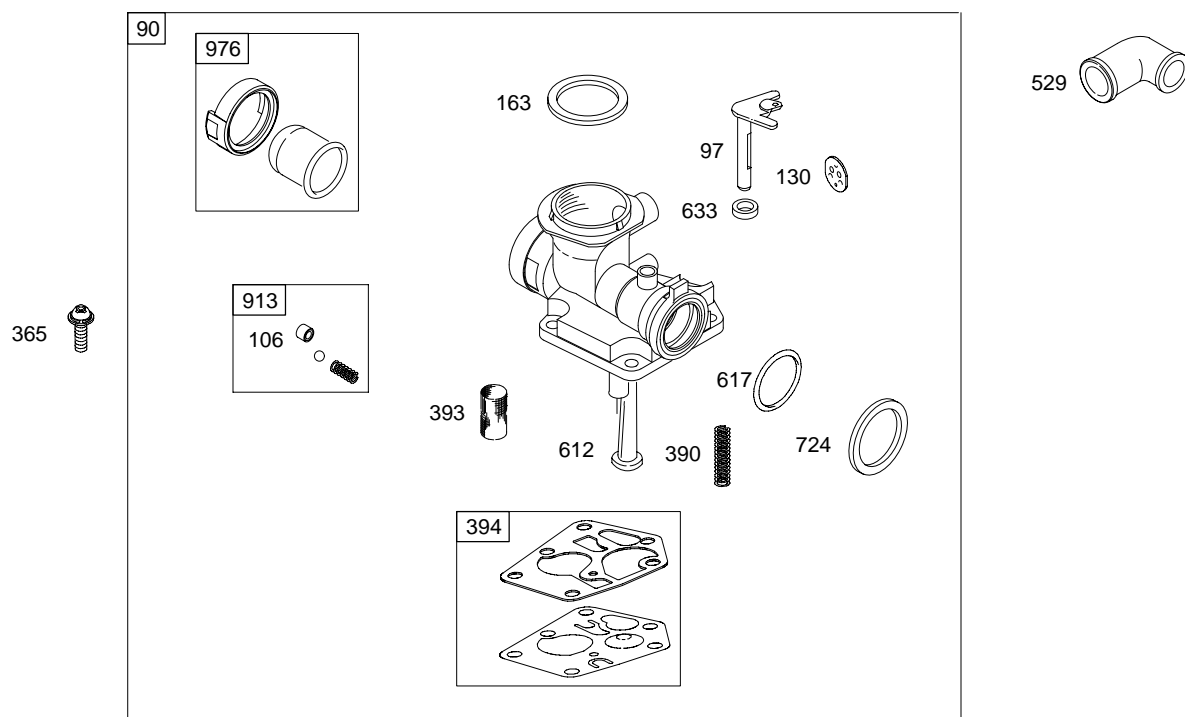

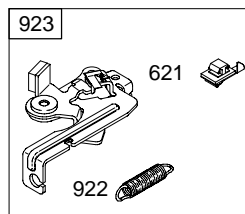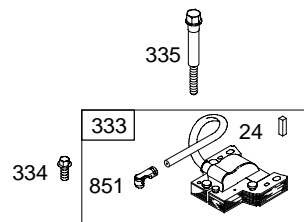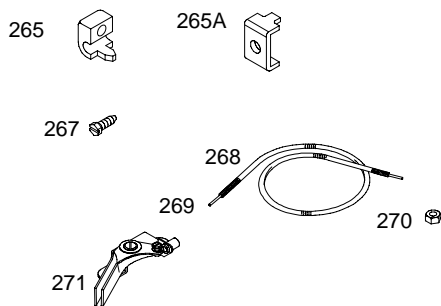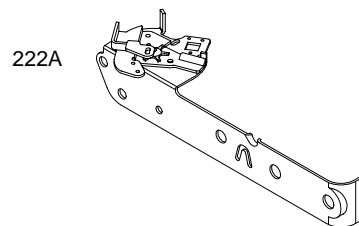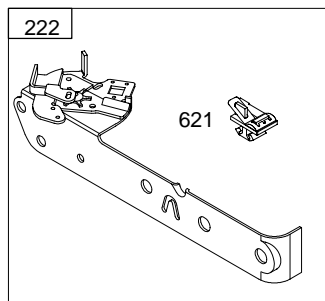










# 10H900

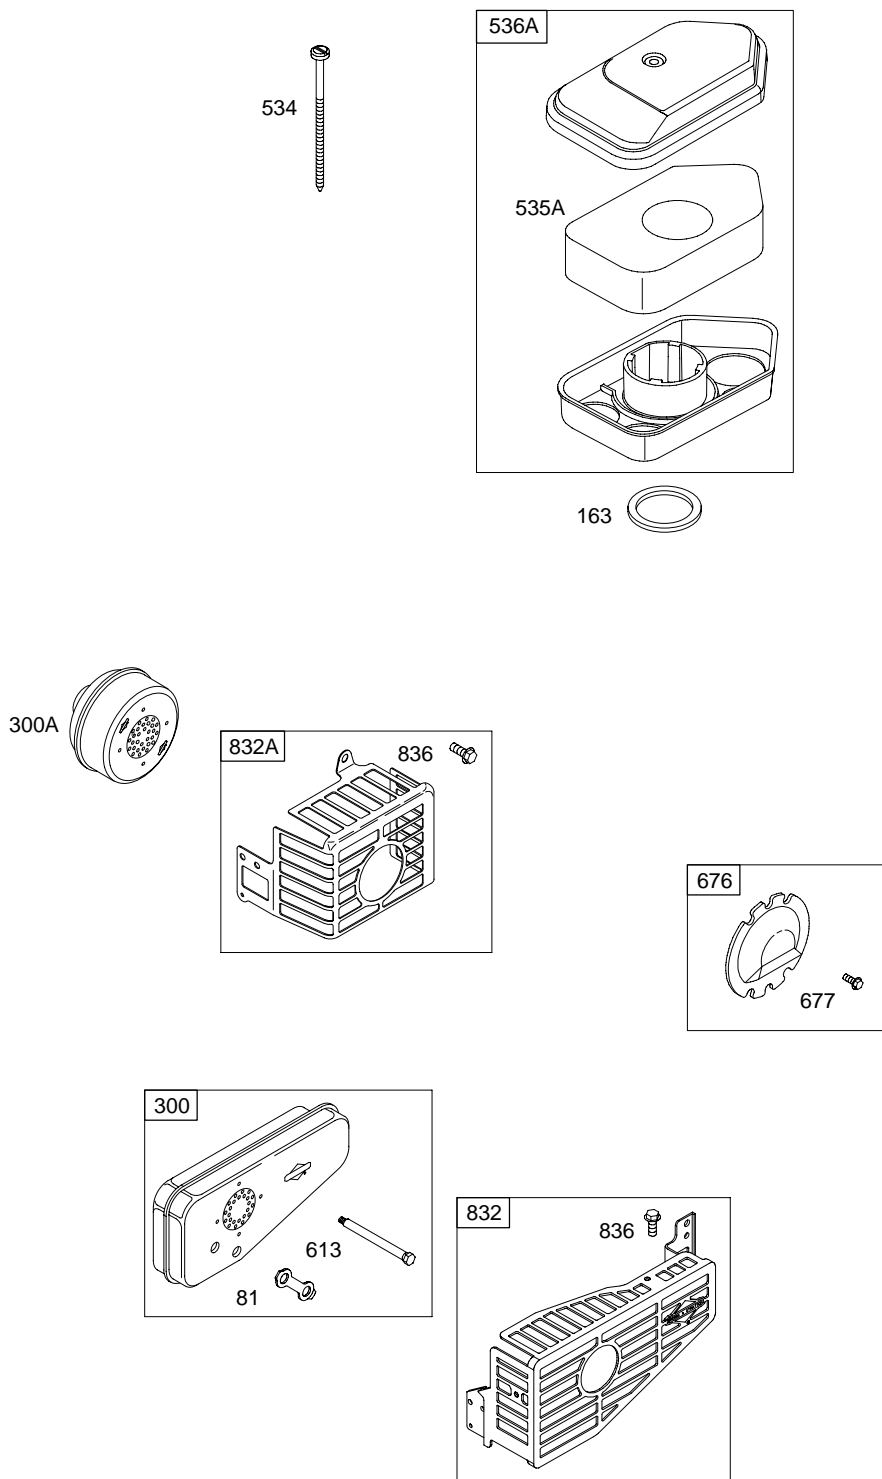

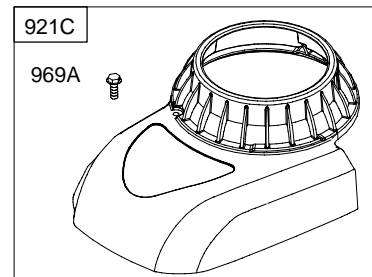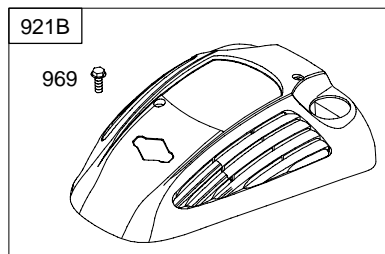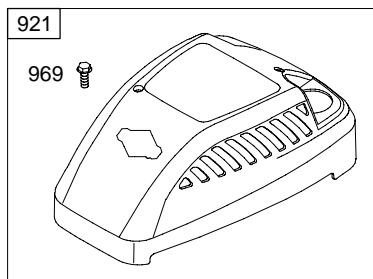

1019 LABEL KIT

 1036 EMISSIONS LABEL

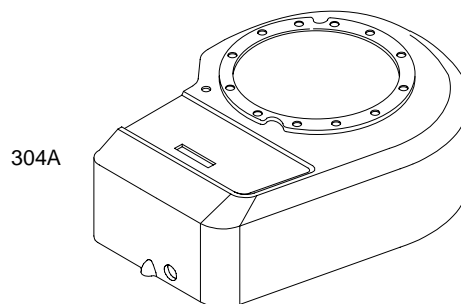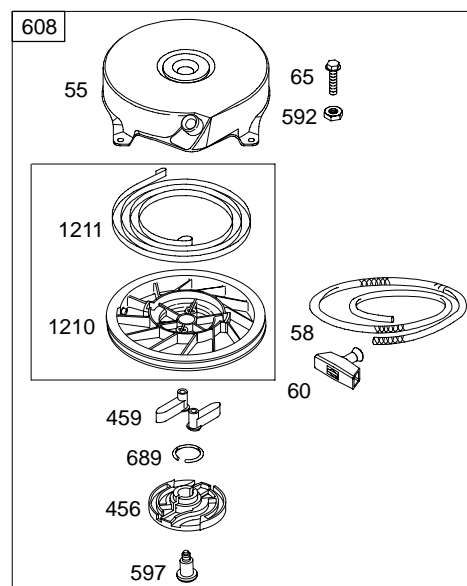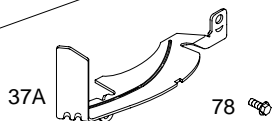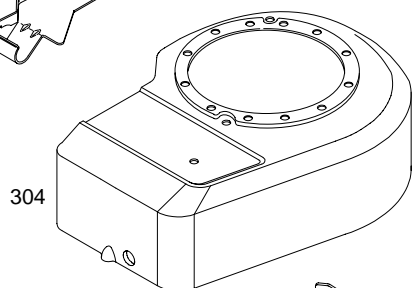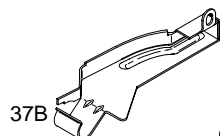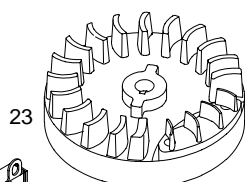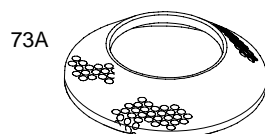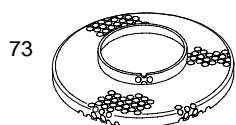

# 10H900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699653	Cylinder Assembly	25	790908	Piston Assembly (Standard) (Used After Code Date 04111400).	32	691664	Screw (Connecting Rod)
2	399269	Kit-Bushing/Seal (Magneto Side)				33	296676	Valve-Exhaust
3	★299819	Seal-Oil (Magneto Side)				34	296677	Valve-Intake
4	698691	Sump-Engine				35	690520	Spring-Valve (Intake)
5	790169	Head-Cylinder				36	690520	Spring-Valve (Exhaust)
7	★△698717	Gasket-Cylinder Head				37A	691209	Guard-Flywheel (Muffler Side)
8	699640	Breather Assembly				37B	690482	Guard-Flywheel (Carburetor Side)
9	★△695890	Gasket-Breather				40	692194	Retainer-Valve
10	691666	Screw (Breather Assembly)				43	698690	Slinger-Governor/Oil
11	691245	Tube-Breather				45	691762	Tappet-Valve
12	★692218	Gasket-Crankcase (.015" Thick) (Standard)				46	691998	Camshaft
13	691640	Screw (Cylinder Head)				50	699644	Manifold-Intake
15	691680	Plug-Oil Drain	26	790909	Ring Set (Standard) (Used After Code Date 04111400).	51	★699649	Gasket-Intake
16	692989	Crankshaft Used on Type No(s). 0111, 0113, 0114, 0115, 0216, 0327.				54	691111	Screw (Intake Manifold)
		----- Note -----				55	692144	Housing-Rewind Starter
		691472 Crankshaft Used on Type No(s). 0101, 0116, 0246, 0285, 0333, 0437, 0455, 0522.				58	697316	Rope-Starter (88 5/8" Long)
		691471 Crankshaft Used on Type No(s). 0117.				58A	691921	Rope-Starter (70" Long) Used on Type No(s). 0111, 0113, 0114, 0115.
20	★391483	Seal-Oil (PTO Side)				60	691915	Grip-Starter Rope
22	692551	Screw (Crankcase Cover/Sump)	27	691588	Lock-Piston Pin	65	690837	Screw (Rewind Starter)
23	692009	Flywheel	28	699659	Pin-Piston (Standard) (Used After Code Date 03093000).	73	694018	Screen-Rotating (Used Before Code Date 03080800).
		----- Note -----						Used on Type No(s). 0111, 0216, 0285.
		690843 Flywheel Used on Type No(s). 0111, 0113, 0114, 0115.				73A	699850	Screen-Rotating (Used After Code Date 03080700).
24	222698	Key-Flywheel				78	692198	Screw (Flywheel Guard)
						81	691179	Lock-Muffler Screw
						90	699660	Carburetor
						97	691931	Shaft-Throttle
						106	691901	Seat-Inlet
						130	691190	Valve-Throttle
						163	★271139	Gasket-Air Cleaner
			29	699654	Rod-Connecting	180	494406	Tank-Fuel
						188	692198	Screw (Control Bracket)

★ Engine Gasket Set-Reference 358

△ Valve Gasket Set-Reference 1095



**10H900**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
190	691640	Screw (Fuel Tank) (1 3/4" Long)	270	691027	Nut (Control Wire Casing)	356	692390	Wire-Stop
190A	692198	Screw (Fuel Tank) (1/2" Long)	271	691028	Lever-Control	358	699933	Gasket Set-Engine
200	691912	Blade-Governor	287	691002	Screw (Dipstick Tube)	363	19069	Puller-Flywheel
201	690347	Link-Air Vane	300	692307	Muffler (Super Lo Tone)	365	790029	Screw (Carburetor)
209	691297	Spring-Governor (White) Used on Type No(s). 0101, 0116, 0216, 0246, 0285, 0327.	300A	394569	Muffler (Round Lo Tone)	383	89838	Wrench-Spark Plug
		----- Note -----	304	694051	Housing-Blower (Non Compliance Engines) Used on Type No(s). 0111, 0113, 0114, 0115, 0116, 0117.	390	691839	Spring-Choke Diaphragm
		691862 Spring-Governor (Dark Green) Used on Type No(s). 0111, 0114.	304A	694236	Housing-Blower (Compliance Engines) Used on Type No(s). 0101, 0216, 0246, 0285, 0327, 0333, 0437, 0455, 0522.	393	691837	Screen-Carburetor
		690251 Spring-Governor (Yellow) Used on Type No(s). 0117, 0333, 0437, 0455, 0522.	305	692198	Screw (Blower Housing)	394	495770	Diaphragm-Carburetor
		692211 Spring-Governor (No Color) Used on Type No(s). 0113, 0115.	306	690400	Shield-Cylinder (Used Before Code Date 040714000). Used on Type No(s). 0111, 0216, 0246, 0285, 0333.	426	691107	Screw (Governor Blade)
211	691859	Spring-Governed Idle	307	690345	Screw (Cylinder Shield) Used on Type No(s). 0111, 0216, 0246, 0285, 0333.	455	691236	Cup-Flywheel
222	691445	Bracket-Governor Used on Type No(s). 0111, 0113, 0114, 0115, 0116, 0117.	332	690662	Nut (Flywheel)	456	692299	Plate-Pawl Friction
222A	691446	Bracket-Control Used on Type No(s). 0101, 0216, 0246, 0285, 0327, 0333, 0437, 0455, 0522.	333	496914	Armature-Magneto	459	281505	Pawl-Ratchet
265	690798	Clamp-Casing Used on Type No(s). 0101, 0116.	334	691061	Screw (Magneto Armature) (1" Long)	523	692040	Dipstick
265A	691024	Clamp-Casing Used on Type No(s). 0117.	335	691107	Screw (Magneto Armature With Air Vane) (1 15/16" Long)	523A	691913	Dipstick Used on Type No(s). 0216, 0285, 0327, 0522.
267	691044	Screw (Casing Clamp)	337	802592	Plug-Spark ----- Note -----	524	691876	Seal-Dipstick Tube
268	691072	Casing-Control Wire (Cut To Required Length)			697451 Plug-Spark Used on Type No(s). 0116, 0117.	525	691320	Tube-Dipstick
269	691026	Wire-Control (Cut To Required Length)				529	692189	Grommet
						534	691417	Screw (Air Cleaner)
						535A	698369	Filter-Air Cleaner Foam
						536A	698472	Cleaner-Air
						592	690800	Nut (Rewind Starter)
						597	691696	Screw (Pawl Friction Plate)
						608	499706	Starter-Rewind
						612	496046	Tube-Pick Up
						613	691413	Screw (Muffler) Used on Type No(s). 0114.
						617	270344	Seal-O Ring (Intake Manifold)
						621	692310	Switch-Stop
						633	691321	Seal-Choke/Throttle Shaft (Throttle)
						635	66538	Boot-Spark Plug
						668	692889	Spacer
						670	691633	Spacer-Fuel Tank
						676	393756	Deflector-Muffler Used on Type No(s). 0115.
						677	690661	Screw (Muffler Deflector) Used on Type No(s). 0115.

★ Engine Gasket Set-Reference 358

△ Valve Gasket Set-Reference 1095

# 10H900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
689	691855	Spring-Friction	869	699641	Seat-Valve (Intake)	969	694046	Screw (Blower Housing Cover) (2 1/4" Long)
718	690959	Pin-Locating (Cylinder)	870	699642	Seat-Valve (Exhaust)			Used on Type No(s). 0111, 0114, 0115, 0116, 0117.
718A	499047	Pin-Locating (Crankshaft)	871	699643	Bushing-Valve Guide (Exhaust)	969A	692523	Screw (Blower Housing Cover) (19/32" Long)
724	697478	Retainer-Seal			----- Note -----			Used on Type No(s). 0101, 0216, 0246, 0285, 0327, 0333, 0437, 0455, 0522.
729	690586	Clip-Wire	63709		Bushing-Valve Guide (Intake)	976	694394	Primer-Carburetor
741	691805	Gear-Timing	883	★Δ691880	Gasket-Exhaust Used on Type No(s). 0114.	1019	496757	Kit-Label
745	691146	Screw (Brake) (7/8" Long)	913	494409	Seat-Check Valve	1036	790713	Label-Emissions (Used After Code Date 04063000).
745A	690859	Screw (Brake) (1/2" Long)	921	694044	Cover-Blower Housing Used on Type No(s). 0114, 0115.			----- Note -----
772	691111	Screw (Linkage Cover)	921B	698709	Cover-Blower Housing Used on Type No(s). 0111, 0116, 0117.			699930 Label-Emissions (Used Before Code Date 04070100).
832	699299	Guard-Muffler Used on Type No(s). 0114.	921C	699796	Cover-Blower Housing Used on Type No(s). 0101, 0216, 0246, 0285, 0327, 0333, 0437, 0455, 0522.	1058	275508	Operator's Manual
832A	699670	Guard-Muffler Used on Type No(s). 0111, 0113, 0114, 0115.	922	692135	Spring-Brake	1095	498526	Gasket Set-Valve
836	690664	Screw (Muffler Guard) (13/32" Long) Used on Type No(s). 0111, 0113, 0114, 0115.	923	691487	Brake	1210	499901	Pulley/Spring Assembly (Pulley)
842	★691870	Seal-O Ring (Dipstick Tube)	925	691349	Cover-Linkage			Pulley/Spring Assembly (Spring)
847	691440	Dipstick/Tube Assembly	957	497929	Cap-Fuel Tank	1211	499901	Pulley/Spring Assembly (Spring)
851	493880	Terminal-Spark Plug	957A	791129	Cap-Fuel Tank Used on Type No(s). 0111, 0113, 0114, 0115.	1330	270962	Repair Manual
868	697338	Seal-Valve						

★ Engine Gasket Set-Reference 358

Δ Valve Gasket Set-Reference 1095