



121300

Illustrated Parts List

Model Series

121300

TYPE NUMBERS
0014 through 0401.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing	7
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	5
Exhaust System	6
Flywheel	7
Fuel Supply	5
Gear Reduction	6
Governor Spring	5
Ignition	5
Kits/Gaskets – Carburetor	4
Kits/Gaskets – Engine	2
Kits/Gaskets – Valve	3
Lubrication	5
Piston Group	2
Rewind Starter	7

BRIGGS & STRATTON



PRINTED IN U.S.A.






COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

121300

1019 LABEL KIT

1058 OWNER'S MANUAL

1330 REPAIR MANUAL

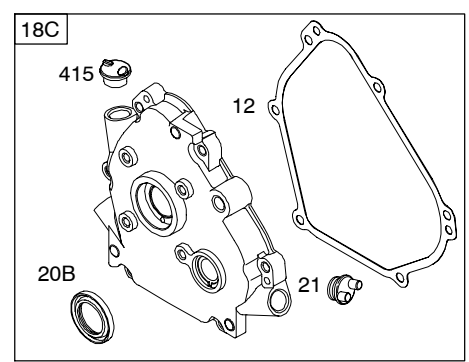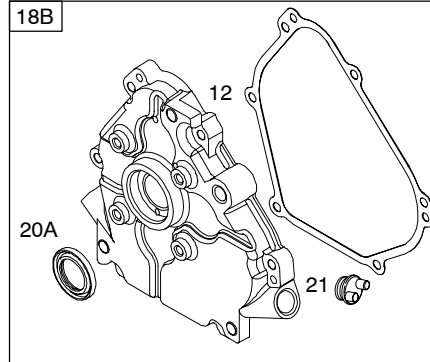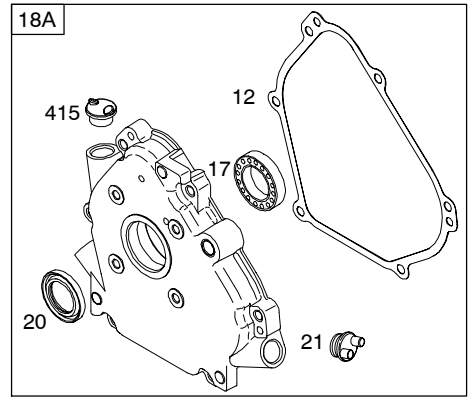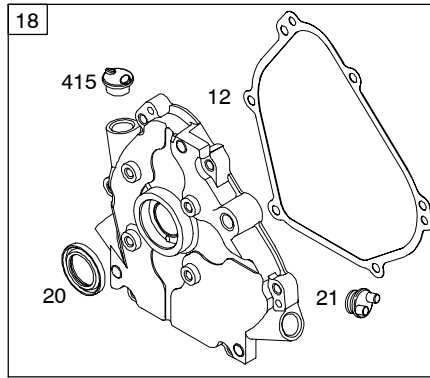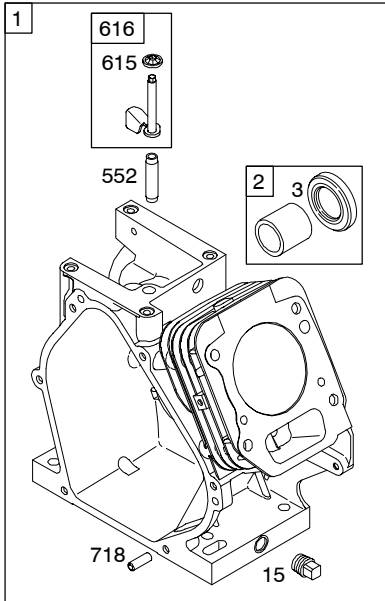

15A


 


22

170



522

746 742

219 220

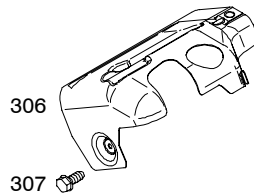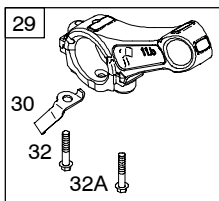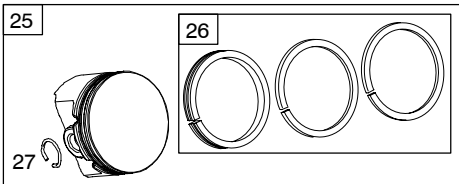

357 24

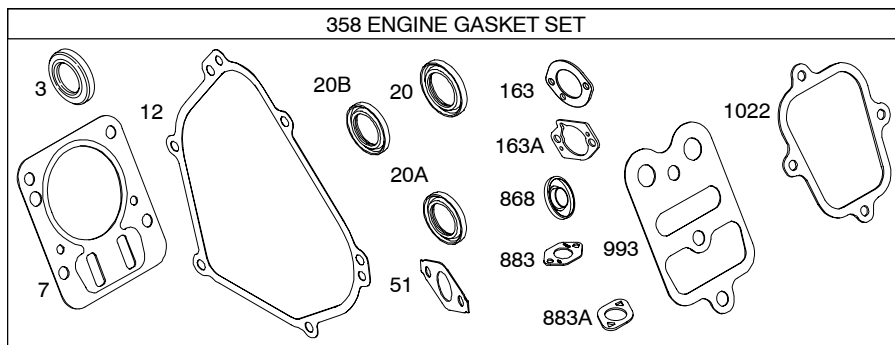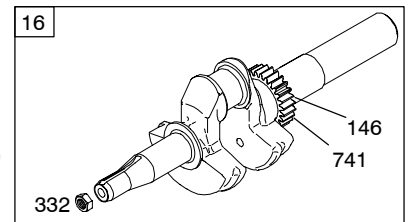


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5687-2

Assemblies include all parts shown in frames.

11/02/2005

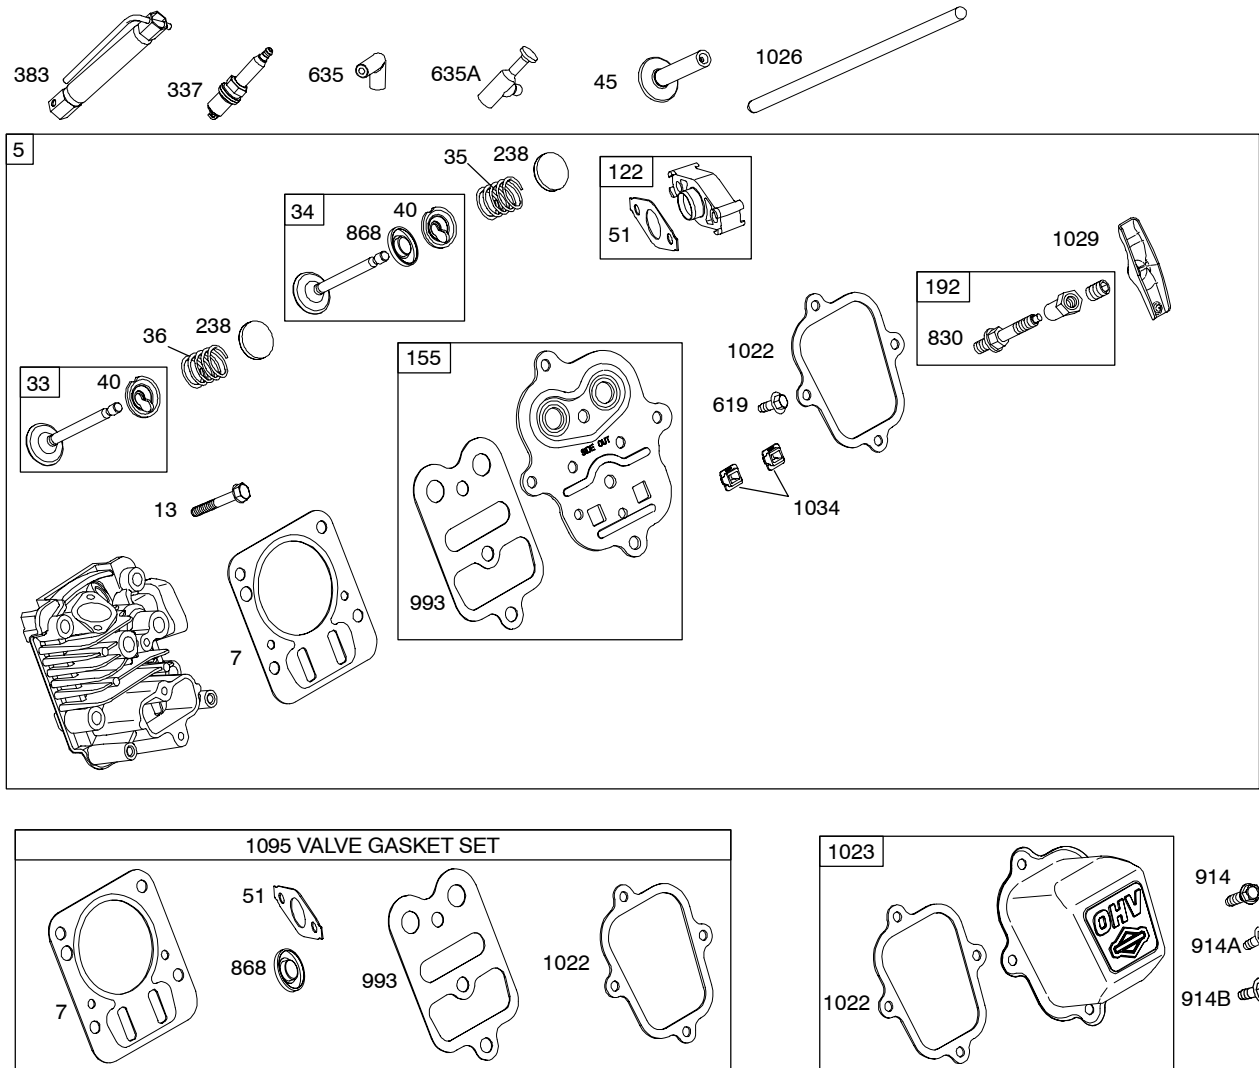




Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5687-3

Assemblies include all parts shown in frames.

11/02/2005

121300

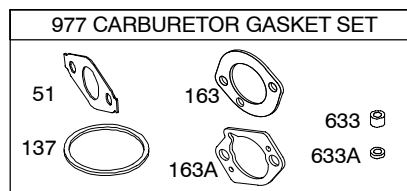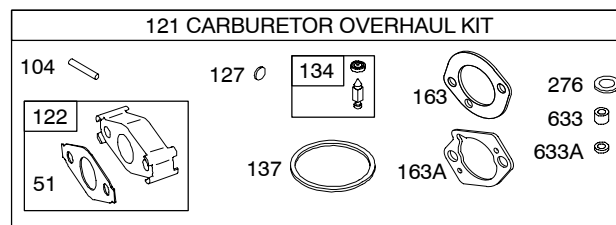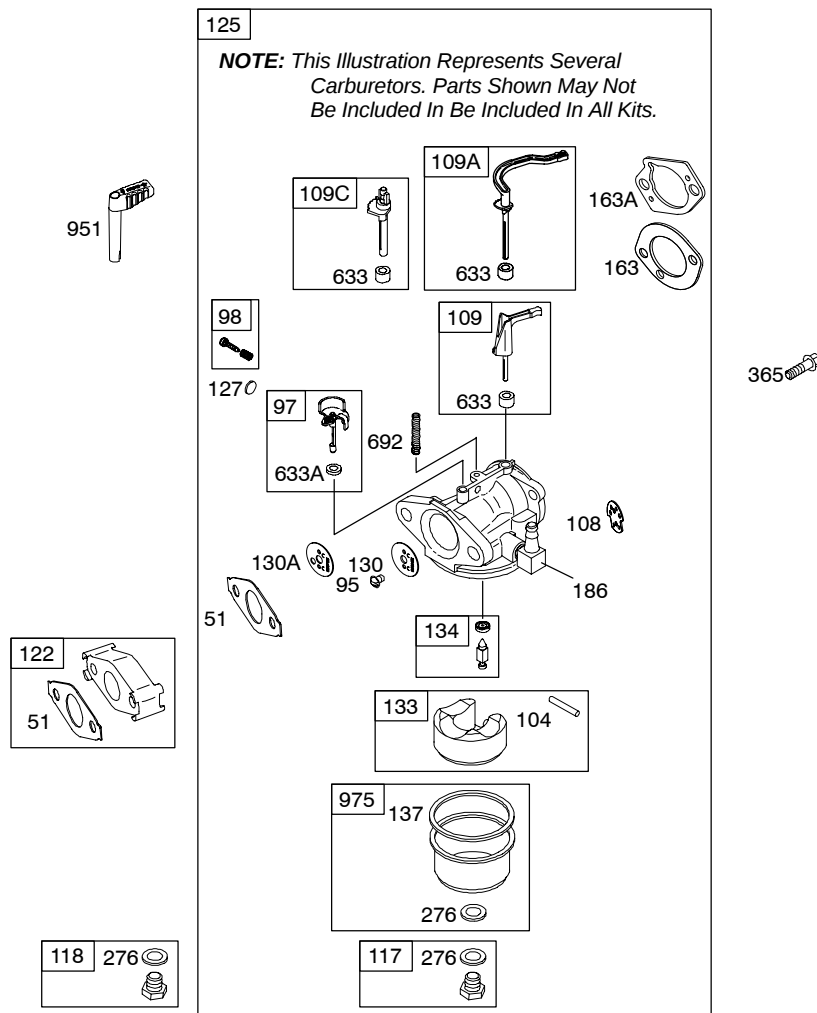


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5687-4

Assemblies include all parts shown in frames.

11/02/2005

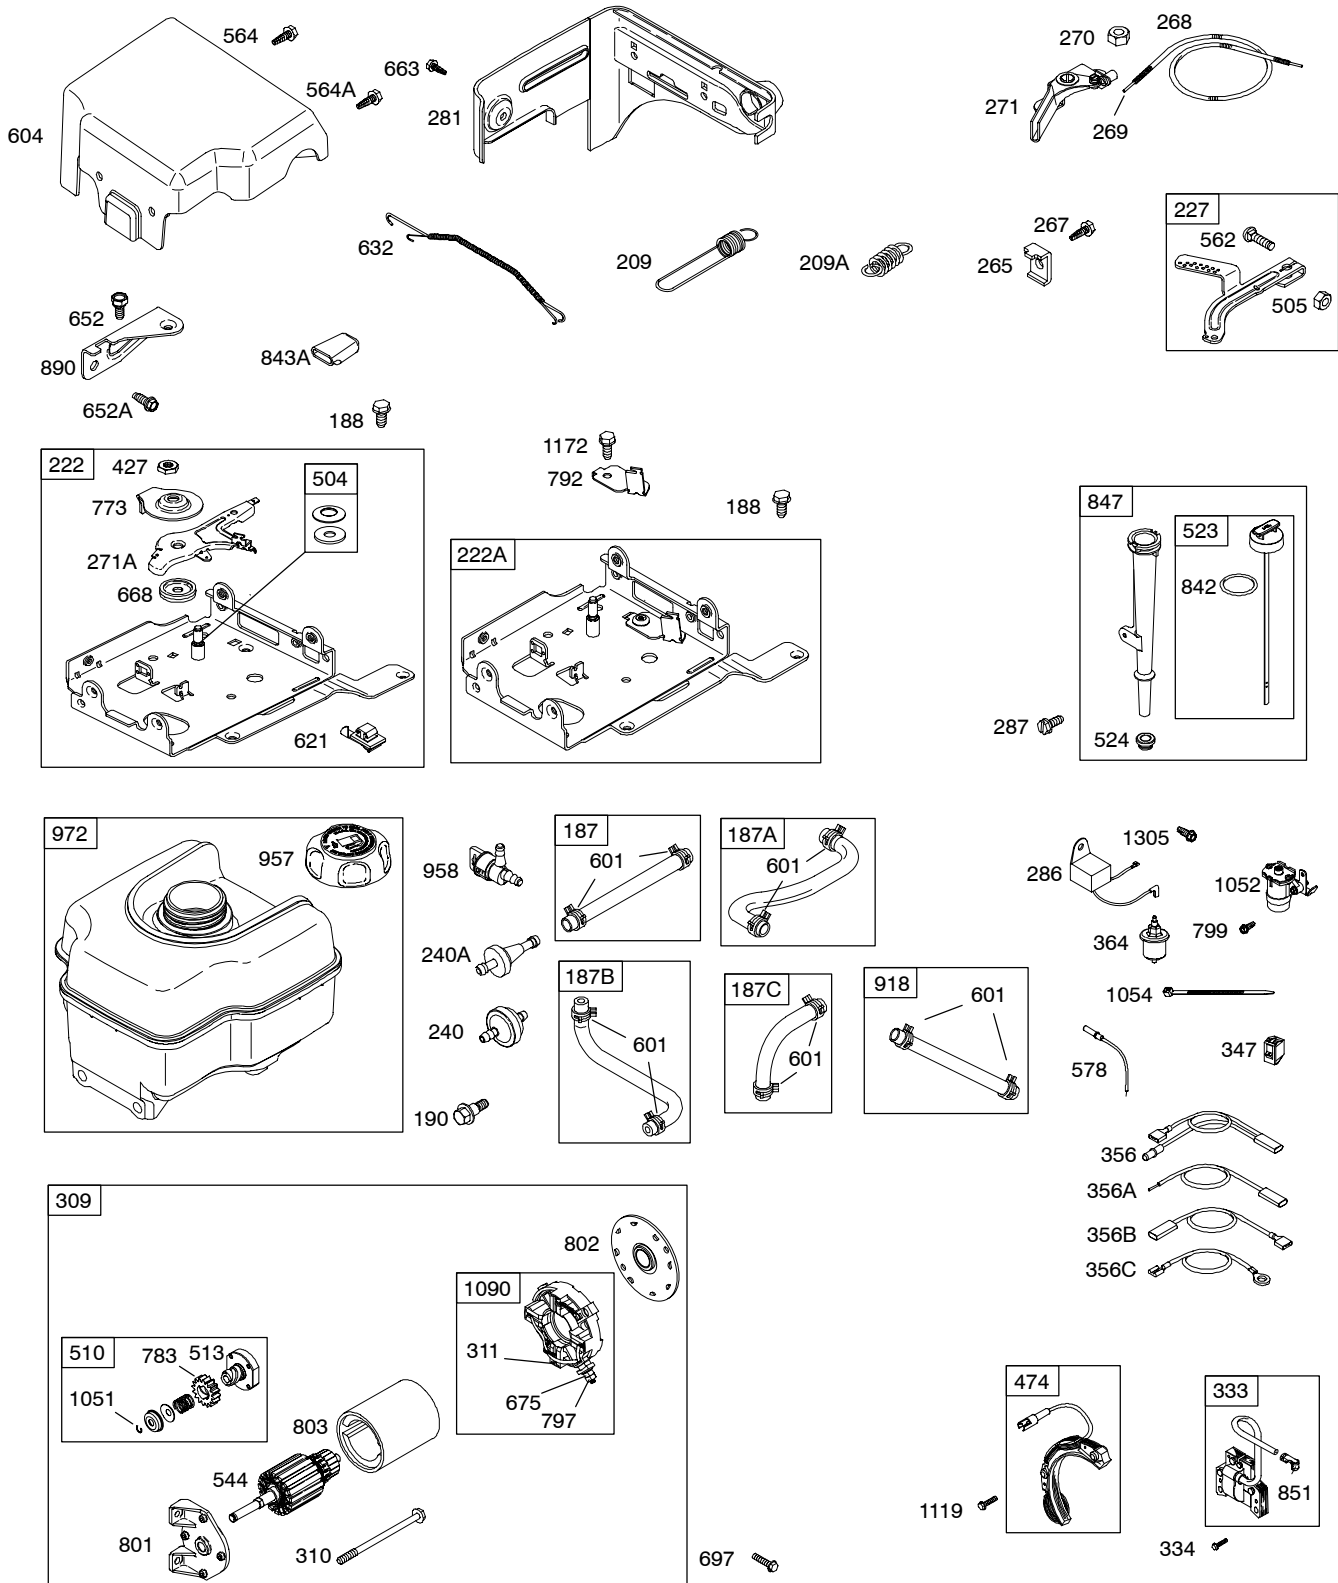





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5687-5

Assemblies include all parts shown in frames.

 11/02/2005



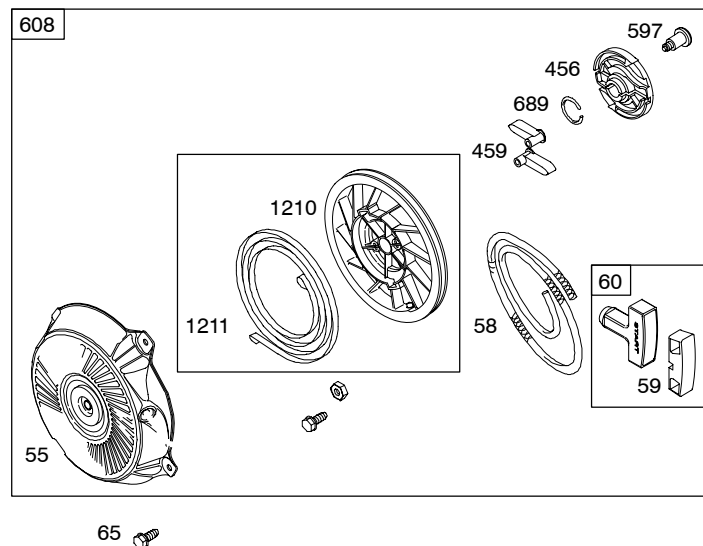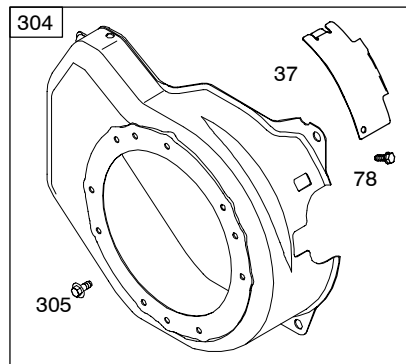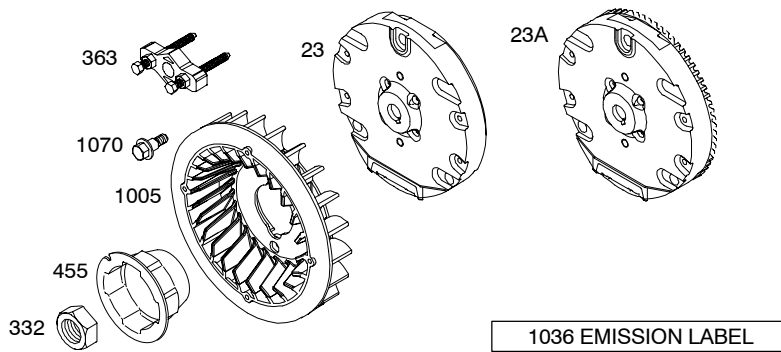

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5687-7

Assemblies include all parts shown in frames.

11/02/2005

121300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699505	Cylinder Assembly	16	699445	Crankshaft	17	692517	Bearing-Ball
2	399269	Kit-Bushing/Seal (Magneto Side)			----- Note -----	18	699804	Cover-Crankcase
3	★299819S	Seal-Oil (Magneto Side)		699444	Crankshaft Used on Type No(s). 0014, 0049, 0163, 0191, 0218.			----- Note -----
5	699486	Head-Cylinder		699447	Crankshaft Used on Type No(s). 0026, 0122, 0125, 0126, 0140, 0175, 0176, 0209, 0210, 0212, 0213, 0224, 0271.		699696	Cover-Crankcase Used on Type No(s). 0161, 0194, 0216, 0281, 0353.
7	★Ø698210	Gasket-Cylinder Head		699452	Crankshaft Used on Type No(s). 0028, 0145, 0280, 0322.	18A	699672	Cover-Crankcase Used on Type No(s). 0033, 0035, 0036, 0050, 0119, 0120, 0131, 0133, 0135, 0147, 0156, 0164, 0165, 0168, 0184, 0187, 0190, 0192, 0193, 0196, 0197, 0198, 0220, 0225, 0233, 0235, 0236, 0240, 0241, 0242, 0243, 0250, 0251, 0265, 0270.
11	692600	Tube-Breather (Flat Panel Air Cleaner)		699449	Crankshaft Used on Type No(s). 0144, 0247, 0269, 0326, 0401.	18B	699761	Cover-Crankcase Used on Type No(s). 0014, 0049, 0163, 0191, 0218.
11A	693647	Tube-Breather (High Mount Air Cleaner)		699451	Crankshaft Used on Type No(s). 0060, 0071, 0109, 0135, 0136, 0157, 0170, 0171, 0183, 0192, 0198, 0214, 0260.	18C	699677	Cover-Crankcase Used on Type No(s). 0070, 0071, 0109.
11B	790632	Tube-Breather (Ultra Low Air Cleaner)		699442	Crankshaft Used on Type No(s). 0033, 0119, 0133, 0156, 0184, 0193, 0220, 0233, 0240, 0241.	20	★692550	Seal-Oil (PTO Side)
12	★699485	Gasket-Crankcase		699441	Crankshaft Used on Type No(s). 0164, 0168, 0187, 0235, 0243.	20A	★694171	Seal-Oil (PTO Side)
13	699482	Screw (Cylinder Head)		699443	Crankshaft Used on Type No(s). 0036, 0050, 0120, 0131, 0147, 0165, 0186, 0190, 0196, 0197, 0225, 0236, 0242, 0250, 0270.	20B	★691952	Seal-Oil (PTO Side)
15	691686	Plug-Oil Drain (Square Head)				21	281658S	Cap-Oil Fill
15A	691682	Plug-Oil Drain (Flush)				22	699478	Screw (Crankcase Cover/ Sump)
						23	699488	Flywheel
						23A	699514	Flywheel
						24	222698S	Key-Flywheel

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5687-8

Assemblies include all parts shown in frames.

11/02/2005

121300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
25	792004	Piston Assembly (Standard) (Used After Code Date 05030800). ----- Note ----- 499627 Piston Assembly (Standard) (Used Before Code Date 05030900). 791325 Piston Assembly (.020" Oversize) (Used After Code Date 05030800). 692789 Piston Assembly (.020" Oversize) (Used Before Code Date 05030900).	36	691304	Spring-Valve (Exhaust)	109	690023	Shaft-Choke
			37	699661	Guard-Flywheel	109A	693628	Shaft-Choke
			40	692194	Retainer-Valve	109C	790624	Shaft-Choke
			45	690977	Tappet-Valve	117	690048	Jet-Main (Standard) ----- Note -----
			46	693404	Camshaft			698344 Jet-Main (Standard) Used on Type No(s). 0131, 0136, 0144, 0145, 0161, 0194, 0214, 0216, 0280, 0281, 0353.
			46A	694831	Camshaft Used on Type No(s). 0070. ----- Note ----- 695285 Camshaft Used on Type No(s). 0071, 0109.			691428 Jet-Main (Standard) Used on Type No(s). 0026, 0033, 0122, 0125, 0140, 0175, 0184, 0193, 0212, 0220, 0233, 0241, 0271.
			51★◆◇	692555	Gasket-Intake			498975 Jet-Main (Standard) Used on Type No(s). 0119, 0126, 0133, 0156, 0176, 0209, 0210, 0213, 0224.
			55	691422	Housing-Rewind Starter	118	498976	Jet-Main (High Altitude) ----- Note -----
			58	693389	Rope-Starter (Cut to Required Length)			694176 Jet-Main (High Altitude) Used on Type No(s). 0131, 0136, 0144, 0145, 0161, 0194, 0214, 0216, 0280, 0281, 0353.
			59	490653	Grip-Insert			695042 Jet-Main (High Altitude) Used on Type No(s). 0026, 0033, 0122, 0125, 0140, 0175, 0184, 0193, 0212, 0220, 0233, 0241, 0271.
26	791969	Ring Set (Standard) (Used After Code Date 05030800). ----- Note ----- 499631 Ring Set (Standard) (Used Before Code Date 05030900). 791324 Ring Set (.020" Oversize) (Used After Code Date 05030800). 692786 Ring Set (.020" Oversize) (Used Before Code Date 05030900).	60	490652	Grip-Starter Rope (2 Piece)			467466 Jet-Main (High Altitude) Used on Type No(s). 0119, 0126, 0133, 0156, 0176, 0209, 0210, 0213, 0224.
			65	699228	Screw (Rewind Starter)			
			78	699205	Screw (Flywheel Guard)			
			79	694511	Case-Gear Reduction			
			82	690369	Screw (Gear Reduction Case)			
			82A	790197	Screw (Gear Reduction Case)			
			83	690374	Shaft-Auxiliary Drive			
			84	691121	Plug-Breather			
			85	692551	Screw (Gear Cover to Gear Reduction)			
			86	690608	Cover-Gear			
27	691866	Lock-Piston Pin	87	691582	Seal-Gear Reduction			
28	499423	Pin-Piston	88	691600	Gasket-Gear Reduction Cover			
29	690124	Rod-Connecting						
30	692562	Dipper-Connecting Rod	95	691636	Screw (Throttle Valve)			
32	691664	Screw (Connecting Rod)	97	690024	Shaft-Throttle			
32A	695759	Screw (Connecting Rod)	98	398185	Kit-Idle Speed (Carburetor)			
33	499642	Valve-Exhaust	104	◆691242	Pin-Float Hinge			
34	499641	Valve-Intake	108	692567	Valve-Choke (.156" Diameter Holes, Stamped 224449)			
35	691304	Spring-Valve (Intake)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

◇ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5687-9

Assemblies include all parts shown in frames.

11/02/2005

121300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
121	696998	Kit-Carburetor Overhaul	161	699207	Base-Air Cleaner (Flat Panel Air Cleaner)	192	694543	Adjustor-Rocker Arm
122	★693749	Spacer-Carburetor				209	692571	Spring-Governor
125	698474	Carburetor	161A	790631	Base-Air Cleaner (Ultra Low Air Cleaner)			----- Note -----
		----- Note -----						693206 Spring-Governor
		698475 Carburetor Used on Type No(s). 0131, 0136, 0144, 0145, 0161, 0194, 0214, 0216, 0280, 0281, 0353.						Used on Type No(s). 0023, 0026, 0033, 0060, 0070, 0122, 0125, 0140, 0157, 0168, 0170, 0171, 0175, 0184, 0187, 0193, 0220, 0223, 0241, 0243.
		698810 Carburetor Used on Type No(s). 0026, 0033, 0122, 0140, 0175, 0184, 0193, 0212, 0220, 0233, 0241, 0271.						693710 Spring-Governor Used on Type No(s). 0131.
		698860 Carburetor Used on Type No(s). 0119, 0126, 0133, 0156, 0176, 0209, 0210, 0213, 0224.				209A	691278	Spring-Governor
		791991 Carburetor Used on Type No(s). 0125.				219	693578	Gear-Governor
						220	691724	Washer (Governor Gear)
127	★691739	Plug-Welch				222	699589	Bracket-Control
		----- Note -----				222A	699493	Bracket-Control Used on Type No(s). 0125, 0140, 0175, 0176, 0209, 0220, 0224.
		694468 Plug-Welch Used on Type No(s). 0126, 0210, 0213, 0224.						----- Note -----
127A	691585	Plug-Welch						699590 Bracket-Control Used on Type No(s). 0026, 0033, 0071, 0119, 0122, 0126, 0133, 0156, 0184, 0193, 0210, 0212, 0213, 0233, 0240, 0241, 0271.
130	691181	Valve-Throttle	187B	791874	Line-Fuel (Molded)	227	692573	Lever-Governor Control
130A	691203	Valve-Throttle Used on Type No(s). 0033, 0126, 0140, 0175, 0184, 0210, 0213, 0220, 0224.	187C	791866	Line-Fuel (Molded) (Used After Code Date 05063000).	238	691300	Valve-Cap
					----- Note -----	240	298090S	Filter-Fuel
133	398187	Float-Carburetor			694486 Line-Fuel (Molded) (Used Before Code Date 05070100).			----- Note -----
134	★398188	Kit-Needle/Seat						394358S Filter-Fuel Used on Type No(s). 0201.
137	★693981	Gasket-Float Bowl	188	699479	Screw (Control Bracket)	240A	694485	Filter-Fuel
146	690979	Key-Timing	190	699220	Screw (Fuel Tank)			
155	★698214	Plate-Cylinder Head						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5687-10

Assemblies include all parts shown in frames.

11/02/2005

121300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
265	691024	Clamp-Casing	356	693651	Wire-Stop	564	699491	Screw
267	699492	Screw	356A	692390	Wire-Stop			(Control Cover)
		(Casing Clamp)	356B	692602	Wire-Stop	564A	699492	Screw
268	691025	Casing-Control Wire	356C	695630	Wire-Stop			(Control Cover)
		(Cut to Required Length)	357	691483	Key-Drive Pulley			----- Note -----
269	691026	Wire-Control			Used on Type No(s).			699206 Screw
		(Cut to Required Length)	358	699638	Gasket Set-Engine			(Control Cover)
270	691027	Nut	363	19069	Puller-Flywheel			Used on Type No(s).
		(Control Wire Casing)	364	695693	Terminal-Oil Plug			0125, 0140, 0176, 0209.
271	691028	Lever-Control	365	699484	Screw	578	692306	Wire Assembly
271A	694256	Lever-Control			(Carburetor)	597	691696	Screw
276	●271716	Washer-Sealing	383	19374S	Wrench-Spark Plug			(Pawl Friction Plate)
281	699639	Panel-Control	415	693463	Plug	601	95162S	Clamp-Hose
286	698611	Module-Oil Sensor	425	699208	Screw	604	697326	Cover-Control
287	699629	Screw			(Air Cleaner Cover)	608	693394	Starter-Rewind
		(Dipstick Tube)	425A	699492	Screw	613	699209	Screw
300	693593	Muffler			(Air Cleaner Cover)			(Muffler)
300A	699231	Muffler	427	694255	Nut	613A	699230	Screw
304	699598	Housing-Blower			(Control Bracket)			(Muffler)
305	699480	Screw	445	491588S	Filter-Air Cleaner	613B	697812	Screw
		(Blower Housing)			Cartridge			(Muffler)
306	693610	Shield-Cylinder			(Flat Panel)	615	692576	Retainer-Governor
307	699483	Screw	445A	697029	Filter-Air Cleaner			Shaft
		(Cylinder Shield)			Cartridge	616	692547	Crank-Governor
309	694504	Motor-Starter			(High Mount)	619	699230	Screw
310	690323	Screw	455	692591	Cup-Flywheel			(Cylinder Head Plate)
		(Starter Motor)	456	692299	Plate-Pawl Friction	621	692310	Switch-Stop
311	497608	Brush Set	459	281505S	Pawl-Ratchet	632	693408	Spring/Link-
332	699359	Nut	467	691668	Knob-Air Cleaner			Mechanical Governor
		(Flywheel)	474	694457	Alternator	633	●●693867	Seal-Choke/Throttle
333	695711	Armature-Magneto	504	694254	Washer Set-Friction			Shaft
334	699477	Screw	505	691251	Nut	633A	●●691321	Seal-Choke/Throttle
		(Magneto Armature)			(Governor Control Lever)			Shaft
337	491055S	Plug-Spark	510	499308	Drive-Starter	635	692076	Boot-Spark Plug
		(Resistor)	513	692024	Drive-Clutch	635A	692927	Boot-Spark Plug
		----- Note -----	522	697689	Plug-Dipstick/Fill	652	699755	Screw
		691043 Plug-Spark	523	693618	Dipstick			(Support Bracket)
		(EMS)			----- Note -----	652A	699230	Screw
346	690661	Screw			790546 Dipstick			(Support Bracket)
		(Spark Arrester)			Used on Type No(s).	663	699206	Screw
347	697854	Switch-Rocker			0326, 0401.			(Control Panel)
		----- Note -----	524	281370S	Seal-Dipstick Tube	668	694257	Spacer
		698338 Switch-Rocker	544	692966	Armature-Starter	675	691261	Washer
		Used on Type No(s).	552	692346	Bushing-Governor			(Brush Retainer)
		0026, 0028, 0033,			Crank	676	393757	Deflector-Muffler
		0120, 0122, 0147,	562	691119	Bolt	676A	697816	Deflector-Muffler
		0175, 0183, 0193,			(Governor Control Lever)			
		0233.						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5687-11

Assemblies include all parts shown in frames.

11/02/2005

121300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
677	690661	Screw (Muffler Deflector)	842	691031	Seal-O Ring (Dipstick Tube)	971	690370	Screw (Air Cleaner Base)
677A	699776	Screw (Muffler Deflector)	843A	695588	Sleeve-Lever	971A	690349	Screw (Air Cleaner Base)
689	691855	Spring-Friction	847	693617	Dipstick/Tube Assembly	971B	699629	Screw (Air Cleaner Base)
692	690572	Spring-Detent	----- Note -----			972	694260	Tank-Fuel
697	790537	Screw (Starter Motor) (Used After Code Date 04110800).	790545 Dipstick/Tube Assembly Used on Type No(s). 0326, 0401.			975	493640	Bowl-Float
		----- Note -----	851	493880S	Terminal-Spark Plug	977	697001	Gasket Set-Carburetor
		699773 Screw (Starter Motor) (Used Before Code Date 04110900).	863	699229	Bracket-Muffler	993	Ø694088	Gasket-Cylinder Head Plate
			864	699232	Adapter-Muffler	994	399541	Arrester-Spark
			868	★Ø692044	Seal-Valve	1005	692592	Fan-Flywheel
717	693462	Bracket-Air Cleaner	875	697030	Base-Air Cleaner (High Mount)	1019	694852	Kit-Label
718	690959	Pin-Locating	883	★691893	Gasket-Exhaust	1022	★Ø691890	Gasket-Rocker Cover
727	698039	Cover-Starter Drive	883A	★692237	Gasket-Exhaust (Adapter Mounting)	1023	499924	Cover-Rocker Arm
732	699200	Screw (Starter Drive Cover)	890	790203	Bracket-Support	1026	790287	Rod-Push
741	695087	Gear-Timing	914	699481	Screw (Rocker Cover) (Bottom)	1029	691230	Arm-Rocker
742	692564	Retainer-E Ring	914A	692557	Screw (Rocker Cover) (Top)	1034	691343	Guide-Push Rod
746	692566	Gear-Idler	914B	697551	Screw (Rocker Cover) (Center)	1036		Label-Emission (Available From An Authorized Briggs & Statton Sevice Dealer)
773	694258	Retainer	918	499214	Hose-Vacuum (Cut to Required Length) Used on Type No(s). 0140.	1051	691265	Ring-Retaining
783	692353	Gear-Pinion	951	790630	Lever-Choke	1052	790141	Sensor-Oil
792	694259	Bracket-Fixed Speed	957	694261	Cap-Fuel Tank	1054	280275	Cable-Tie
797	691029	Nut (Brush Retainer)	958	698180	Valve-Fuel Shut Off	1058	276355	Owner's Manual
799	699202	Screw (Oil Sensor)	961	698304	Screw (Air Cleaner Bracket)	1070	699201	Screw (Flywheel Fan)
801	694482	Cap-Drive	967	493537	Filter-Pre Cleaner (Flat Panel)	1090	691293	Retainer-Brush
802	691286	Cap-End	967A	273356	Filter-Pre Cleaner (High Mount)	1095	698215	Gasket Set-Valve
803	693757	Housing-Starter	968	692584	Cover-Air Cleaner (Flat Panel Air Cleaner)	1119	699772	Screw (Alternator)
819	699233	Screw (Muffler Bracket)	968A	693460	Cover-Air Cleaner (High Mount)	1172	699230	Screw (Fixed Speed Bracket)
823	699209	Screw (Muffler Adapter)	968B	791082	Cover-Air Cleaner (Ultra Low Air Cleaner)	1210	498144	Pulley/Spring Assembly (Pulley)
830	694544	Stud-Rocker Arm				1211	498144	Pulley/Spring Assembly (Spring)
832	693583	Guard-Muffler				1305	699691	Screw (Oil Sensor Module)
832A	697818	Guard-Muffler				1330	272147	Repair Manual
832B	696516	Guard-Muffler						
836	699203	Screw (Muffler Guard)						
836A	699632	Screw (Muffler Guard)						
836B	699209	Screw (Muffler Guard)						
836C	699234	Screw (Muffler Guard)						
836D	699204	Screw (Muffler Guard)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5687-12

Assemblies include all parts shown in frames.

11/02/2005