



123J00

Illustrated Parts List

Model Series

123J00

TYPE NUMBERS
0100 through 0188.

TABLE OF CONTENTS

Air Cleaner	4
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder	2
Electric Starter	5
Electrical	4
Engine Sump	2
Exhaust System	4
Flywheel	5
Flywheel Brake	4
Fuel Supply	3
Governor Spring	4
Ignition	4
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	5
Valves	2


BRIGGS & STRATTON









PRINTED IN U.S.A.


COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

123J00





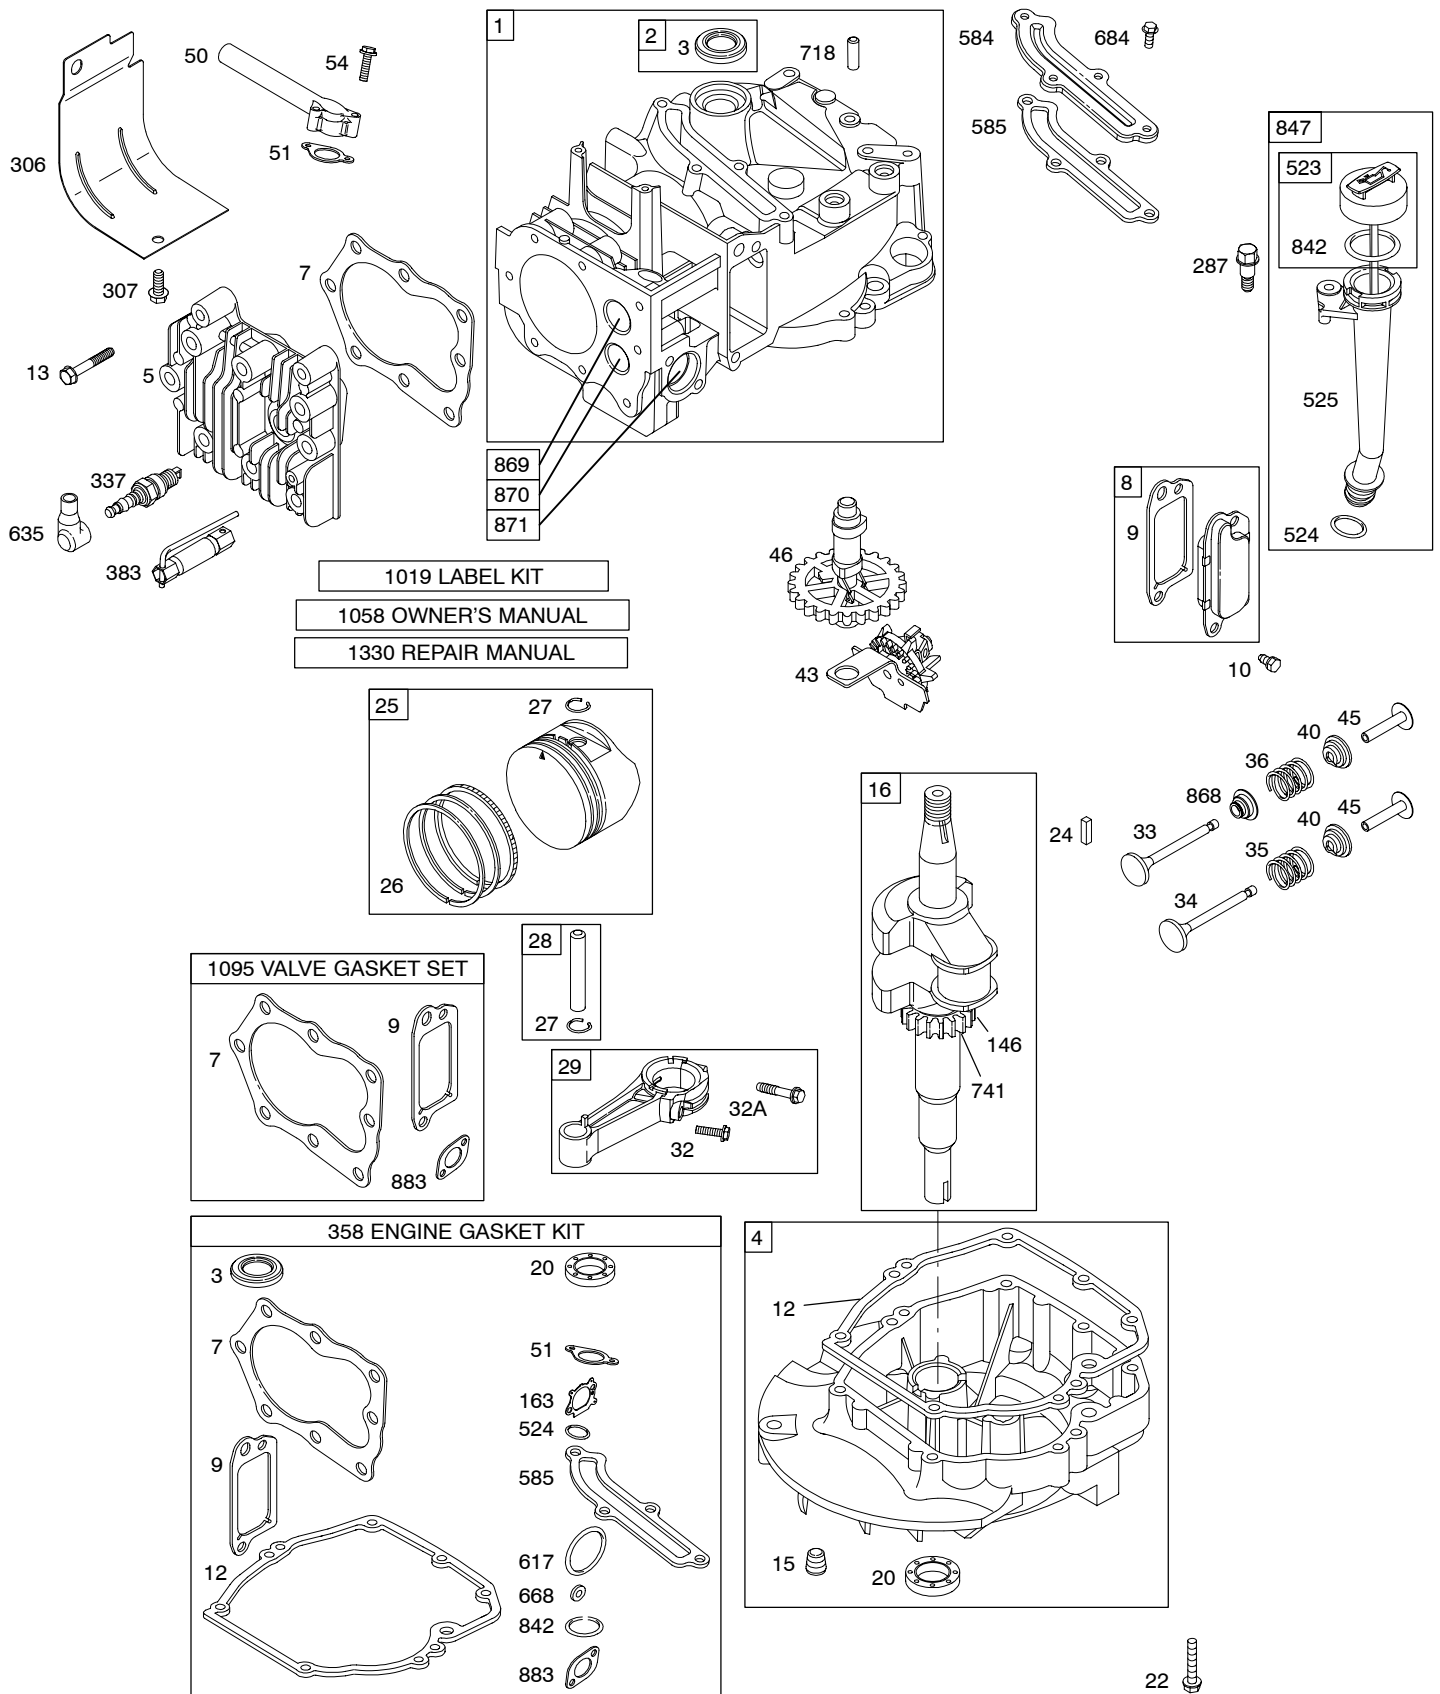


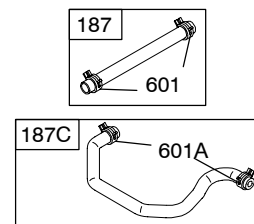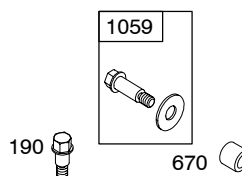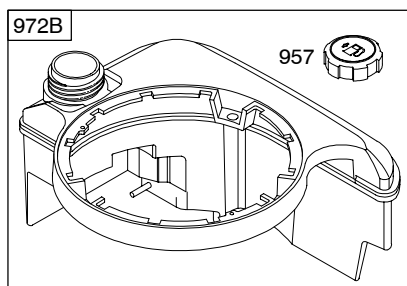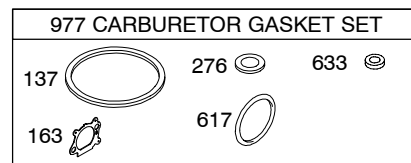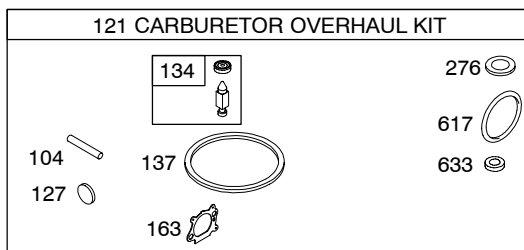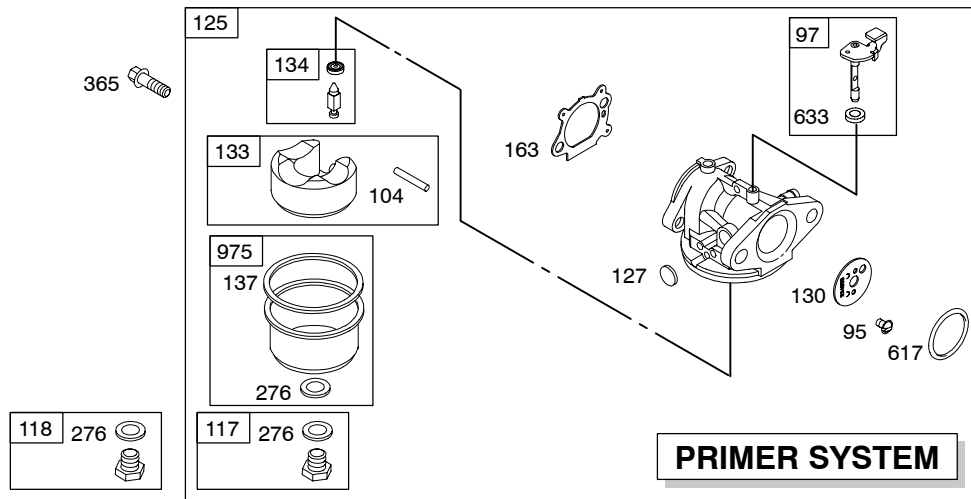


123J00

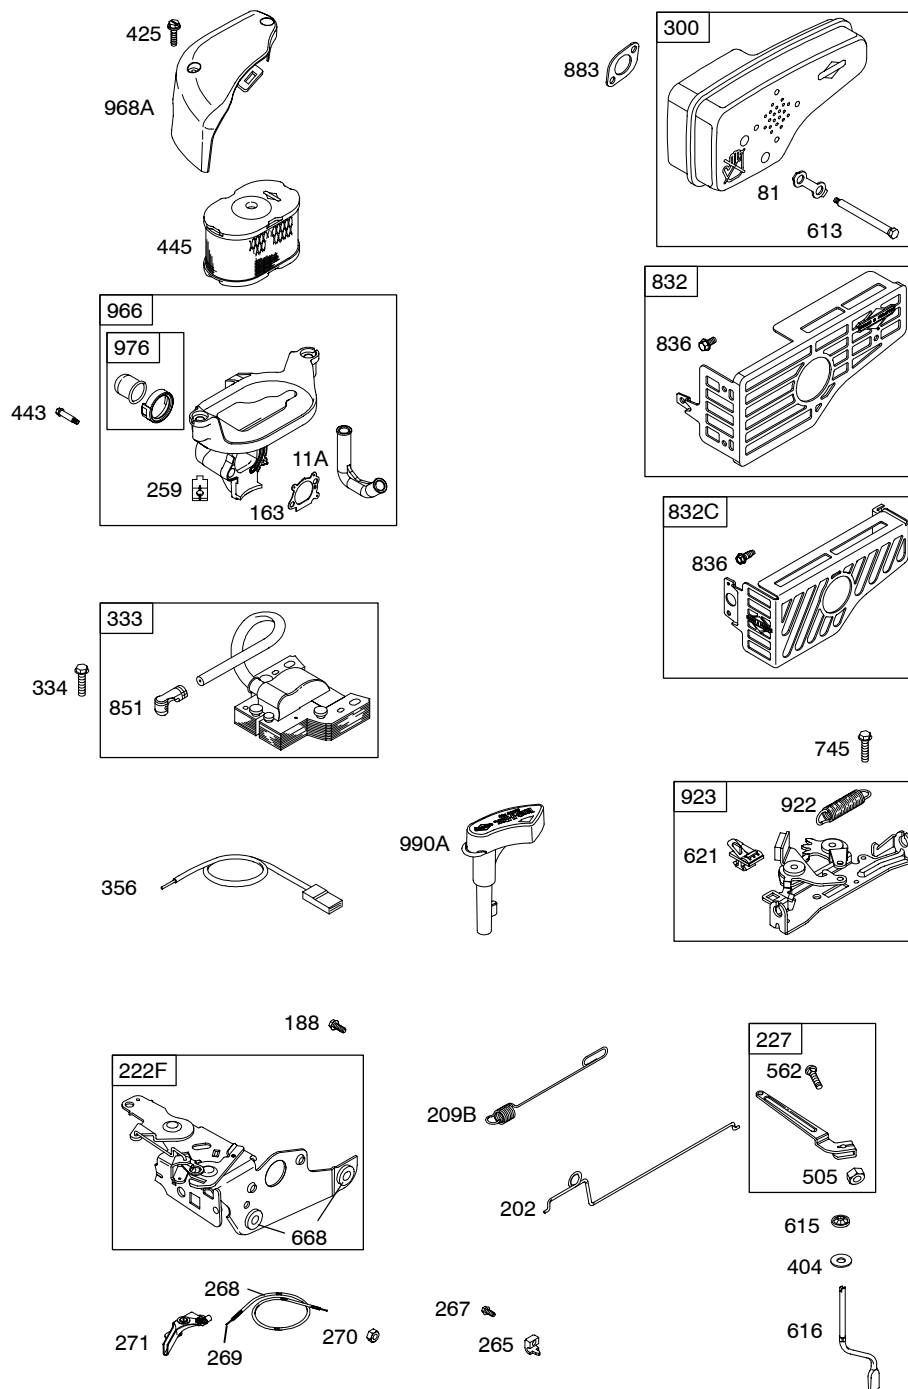

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5117-4 Assemblies include all parts shown in frames. 10/05/2005

 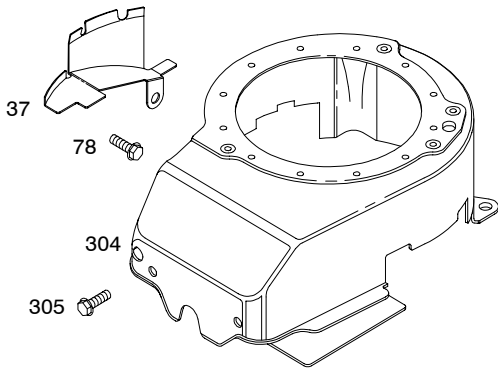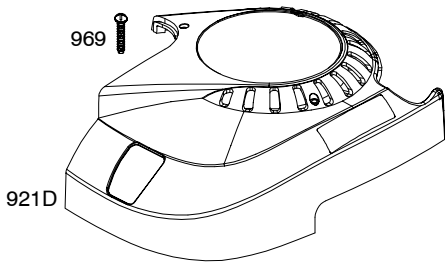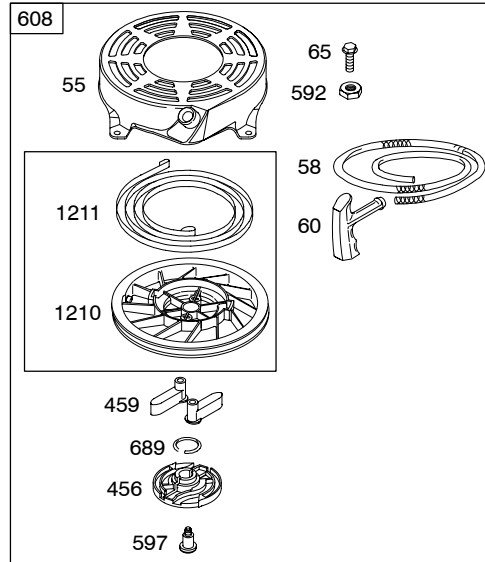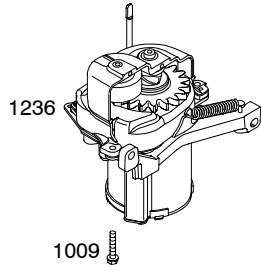

1036 EMISSION LABEL

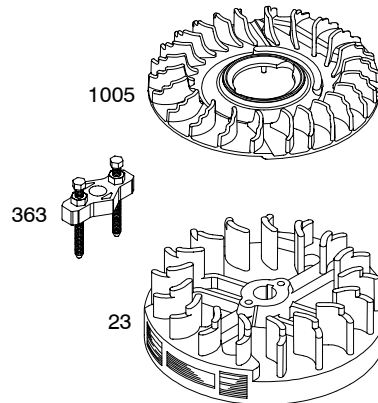

123J00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	25	790359	Piston Assembly (Standard) (Used After Code Date 04031400). ----- Note -----	27	691866	Lock-Piston Pin
2	399269	Kit-Bushing/Seal (Magneto Side)				28	499423	Pin-Piston (Standard)
3	★299819	Seal-Oil (Magneto Side)				29	499424	Rod-Connecting (Standard)
4	493279	Sump-Engine ----- Note ----- 696294 Sump-Engine Used on Type No(s). 0188.				32	691664	Screw (Connecting Rod)
5	691160	Head-Cylinder				32A	695759	Screw (Connecting Rod)
7	★Ø692249	Gasket-Cylinder Head				33	262651	Valve-Exhaust
8	695250	Breather Assembly				34	262652	Valve-Intake
9	★Ø696125	Gasket-Breather				35	691270	Spring-Valve (Intake)
10	691125	Screw (Breather Assembly)				36	691270	Spring-Valve (Exhaust)
11A	691934	Tube-Breather				37	694086	Guard-Flywheel
12	★692232	Gasket-Crankcase				40	692194	Retainer-Valve
13	690912	Screw (Cylinder Head)				43	691997	Slinger-Governor/Oil
15	691680	Plug-Oil Drain (Square Socket)				45	690548	Tappet-Valve
16	691451	Crankshaft ----- Note ----- 691450 Crankshaft Used on Type No(s). 0100.				46	691449	Camshaft
20	★399781	Seal-Oil (PTO Side)				50	497465	Manifold-Intake
22	691092	Screw (Crankcase Cover/ Sump)				51	★272199	Gasket-Intake
23	692315	Flywheel (Rewind Start) ----- Note ----- 696291 Flywheel Used on Type No(s). 0188.				54	691650	Screw (Intake Manifold)
24	222698	Key-Flywheel	26	790360	Ring Set (Standard) (Used After Code Date 04031400). ----- Note ----- 499425 Ring Set (Standard) (Used Before Code Date 04031500). 499426 Ring Set (.010" Oversize) 791324 Ring Set (.020" Oversize) (Used After Code Date 04102100). 499427 Ring Set (.020" Oversize) (Used Before Code Date 04102200). 499428 Ring Set (.030" Oversize)			
						55	691421	Housing-Rewind Starter
						58	697316	Rope-Starter (Cut To Required Length)
						60	281434	Grip-Starter Rope
						65	690837	Screw (Rewind Starter)
						78	691108	Screw (Flywheel Guard)
						81	691740	Lock-Muffler Screw
						95	691636	Screw (Throttle Valve)
						97	493267	Shaft-Throttle (Metal) ----- Note ----- 696565 Shaft-Throttle (Plastic)
						104	●691242	Pin-Float Hinge

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5117-6

Assemblies include all parts shown in frames.

10/05/2005

123J00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
117	494870	Jet–Main (Standard) (Used After Code Date 02092900). ----- Note ----- 498975 Jet–Main (Standard) (Used Before Code Date 02093000).	187C	791875	Line–Fuel (Molded) (Used After Code Date 05063000). ----- Note ----- 696292 Line–Fuel (Molded) (Used Before Code Date 05070100).	304	695892	Housing–Blower ----- Note ----- 696298 Housing–Blower Used on Type No(s). 0188.
118	497315	Jet–Main (High Altitude) (Used After Code Date 02092900). ----- Note ----- 496495 Jet–Main (High Altitude) (Used Before Code Date 02093000).	188	693399	Screw (Control Bracket)	305	691108	Screw (Blower Housing)
121	498260	Kit–Carburetor Overhaul	190	690940	Screw (Fuel Tank)	306	690450	Shield–Cylinder
125	698444	Carburetor (Primer System)	202	691829	Link–Mechanical Governor	307	690345	Screw (Cylinder Shield)
127	694468	Plug–Welch	209B	699056	Spring–Governor	332	690662	Nut (Flywheel)
130	691203	Valve–Throttle ----- Note ----- 696564 Valve–Throttle (Used With Plastic Throttle Shaft)	222F	691436	Bracket–Control (Remote/Manual Friction)(Compliance) ----- Note ----- 698163 Bracket–Control Used on Type No(s). 0188.	333	802574	Armature–Magneto
133	398187	Float–Carburetor	227	690783	Lever–Governor Control	334	691061	Screw (Magneto Armature)
134	398188	Kit–Needle/Seat	259	691189	Bracket–Casing Clamp	337	802592	Plug–Spark
137	693981	Gasket–Float Bowl	265	690798	Clamp–Casing	356	692390	Wire–Stop
146	690979	Key–Timing	267	691044	Screw (Casing Clamp)	358	497316	Gasket Set–Engine
163	272653	Gasket–Air Cleaner	268	691072	Casing–Control Wire (Cut to Required Length)	363	19069	Flywheel Puller
187	791766	Line–Fuel (Cut to Required Length) (Used After Code Date 05063000). ----- Note ----- 691050 Line–Fuel (Cut to Required Length) (Used Before Code Date 05070100).	269	691026	Wire–Control (Cut to Required Length)	365	691688	Screw (Carburetor)
			270	691027	Nut (Control Wire Casing)	383	89838	Wrench–Spark Plug
			271	691028	Lever–Control	404	690272	Washer (Governor Crank)
			276	271716	Washer–Sealing (Main Jet)	425	691135	Screw (Air Cleaner Cover)
			287	690940	Screw (Dipstick Tube)	443	690349	Screw (Air Cleaner Primer Base)
			300	692038	Muffler (Super Lo Tone)	445	497725	Filter–Air Cleaner Cartridge
						455	695161	Cup–Flywheel
						456	692299	Plate–Pawl Friction
						459	281505	Plate–Ratchet
						505	691251	Nut (Governor Control Lever)
						523	495264	Dipstick
						524	692296	Seal–Dipstick Tube
						525	495265	Tube–Dipstick
						562	92613	Bolt (Governor Control Lever)

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊗ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5117–7

Assemblies include all parts shown in frames.

10/05/2005

123J00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
584	697734	Cover-Breather Passage	832	499034	Guard-Muffler	975	493640	Bowl-Float
585	★691879	Gasket-Breather Passage	832C	691442	Guard-Muffler	976	694395	Primer-Carburetor
592	690800	Nut (Rewind Starter)	836	690664	Screw (Muffler Guard)	977	498261	Gasket Set-Carburetor
597	691696	Screw (Pawl Friction Plate)	842	★691031	Seal-O Ring (Dipstick Tube)	990A	695951	Key Set
601	95162	Clamp-Hose	847	692017	Dipstick/Tube Assembly	1005	691346	Fan-Flywheel
601A	691038	Clamp-Hose	851	493880	Terminal-Spark Plug	1009	696255	Screw (Starter Motor)
608	497680	Starter-Rewind	868	697338	Seal-Valve	1019	790231	Kit-Label (Touch N Mow)
613	691340	Screw (Muffler)	869	691155	Seat-Valve (Intake)	1036		Label-Emission (Available From An Authorized Briggs & Statton Service Dealer)
615	690340	Retainer-Governor Shaft	870	690380	Seat-Valve (Exhaust)	1058	276171	Manual-Owner's ----- Note -----
616	698801	Crank-Governor	871	262001	Bushing-Valve Guide (Exhaust)			275054 Manual- Owner's (Touch N Mow)
617★◆270344		Seal-O Ring (Intake Manifold)			----- Note -----			275054 Manual- Owner's (Touch N Mow)
621	692310	Switch-Stop			63709 Bushing-Valve Guide (Intake)	1059	692311	Kit-Screw/Washer
633 ◆★691321		Seal-Choke/Throttle Shaft (Throttle)	883 ★Ø691881		Gasket-Exhaust	1095	498528	Gasket Set-Valve
635	66538	Boot-Spark Plug	921D	691339	Cover-Blower Housing	1210	498144	Pulley/Spring Assembly (Pulley)
668	★493823	Spacer (Includes 2)	922	692135	Spring-Brake	1211	498144	Pulley/Spring Assembly (Spring)
670	692294	Spacer-Fuel Tank	923	695891	Brake	1236	695959	Starter-Machanical (Touch N Mow) (Do Not Service Individual Parts, Only As A Whole)
684	690345	Screw (Breather Passage Cover)	957	397974	Cap-Fuel Tank (Plastic) (Black)	1330	270962	Manual-Repair
689	691855	Spring-Friction	966	691439	Base-Air Cleaner Primer			
718	690959	Pin-Locating	968A	498997	Cover-Air Cleaner			
741	790345	Gear-Timing (Use Without Woodruff Key)	969	690700	Screw (Blower Housing Cover)			
		----- Note -----	972B	699374	Tank-Fuel (Plastic)			
		691830 Gear-Timing (Uses Woodruff Key)			----- Note -----			
745	691648	Screw (Brake)			699387 Tank-Fuel (Plastic) Used on Type No(s). 0188.			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5117-8

Assemblies include all parts shown in frames.

10/05/2005