



12H600

Illustrated Parts List

Model Series

12H600

TYPE NUMBERS
0005 through 0545.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing/Shrouds	7
Camshaft	2
Carburetor	4
Controls	5
Crankshaft	2
Cylinder	2
Cylinder Head	3
Engine Sump	2
Exhaust System	6
Flywheel	7
Flywheel Brake	5
Fuel Supply	4
Governor Spring	5
Ignition	5
Lubrication	2
Piston Group	2
Rewind Starter	7


BRIGGS & STRATTON




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

12H600







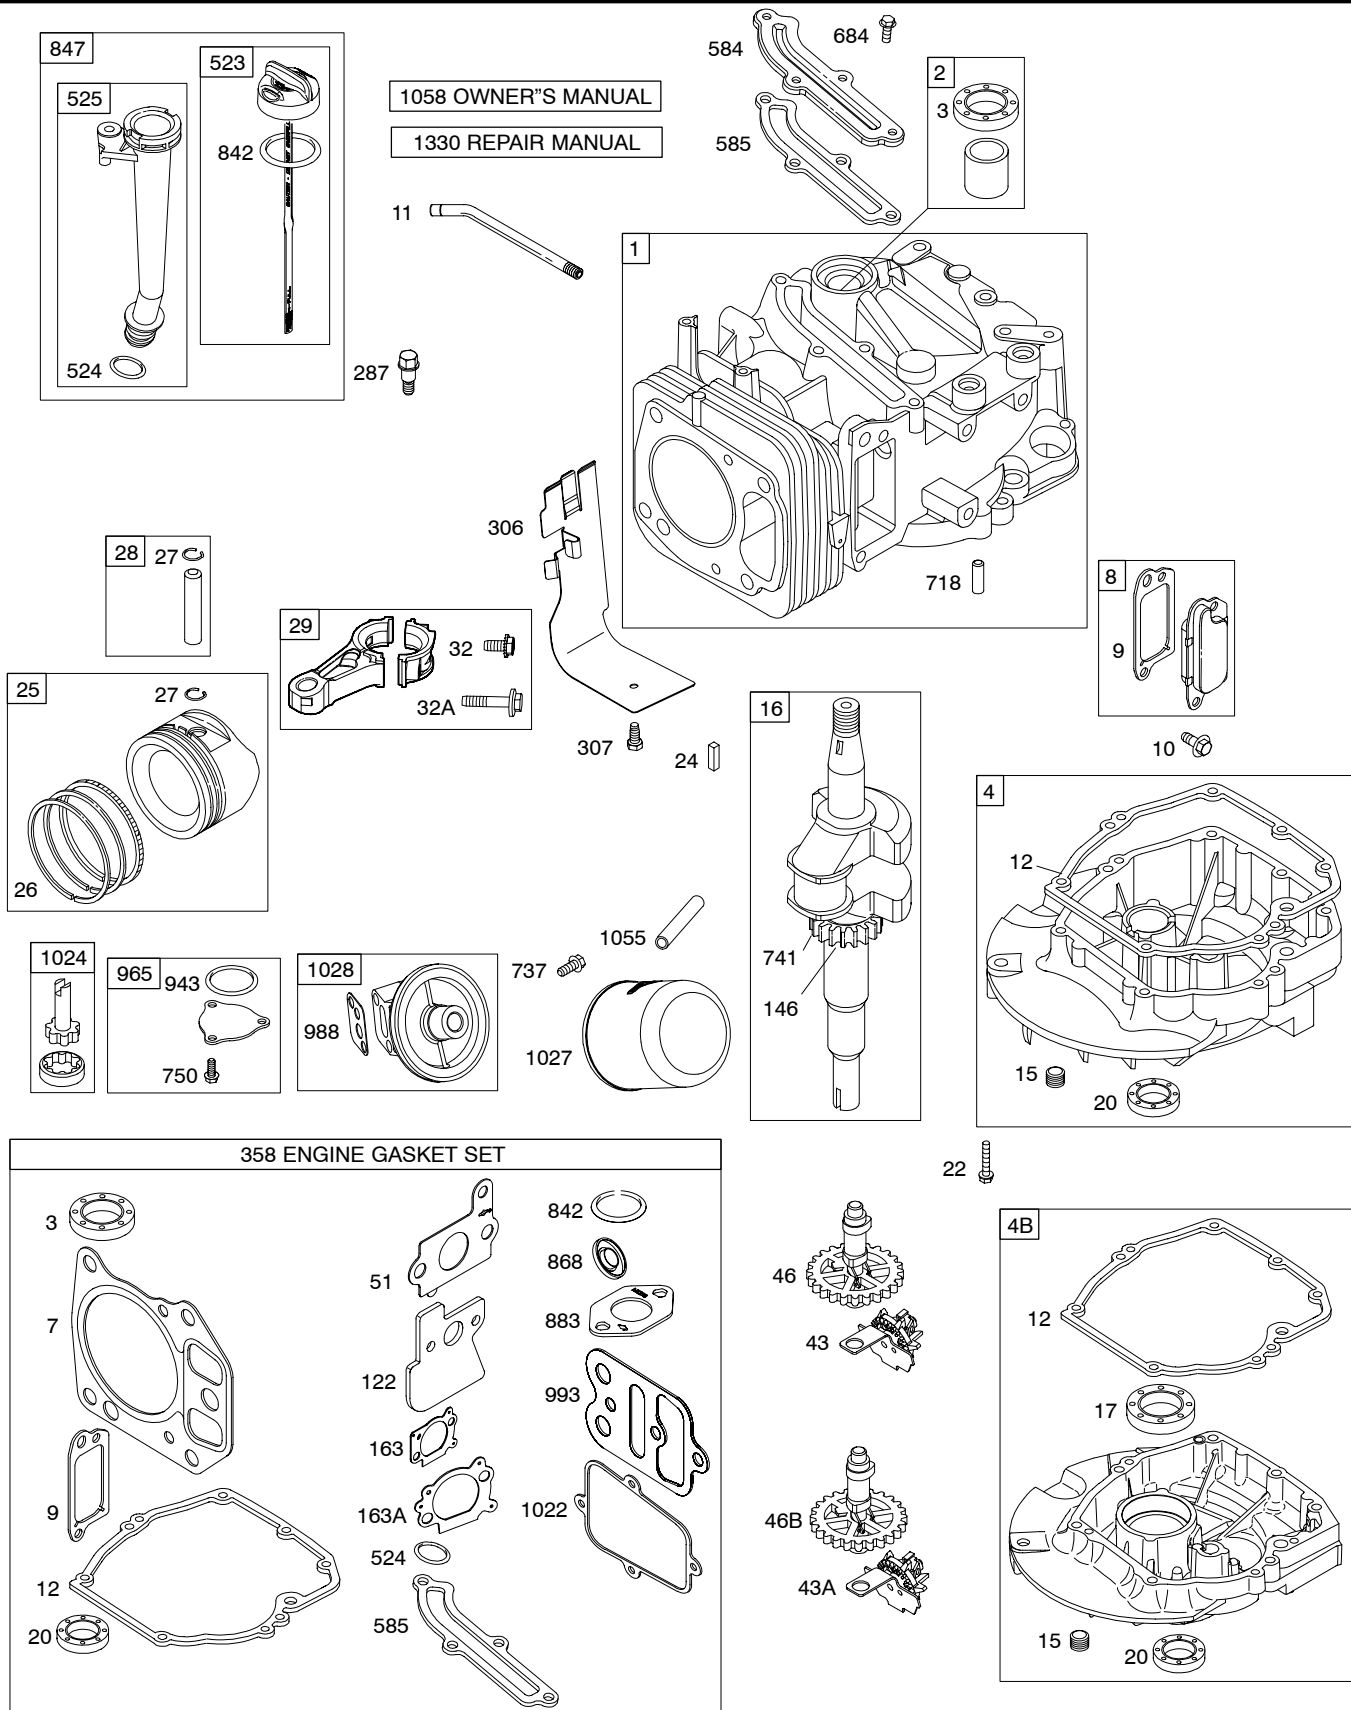


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5686-2 Assemblies include all parts shown in frames. 10/12/2005











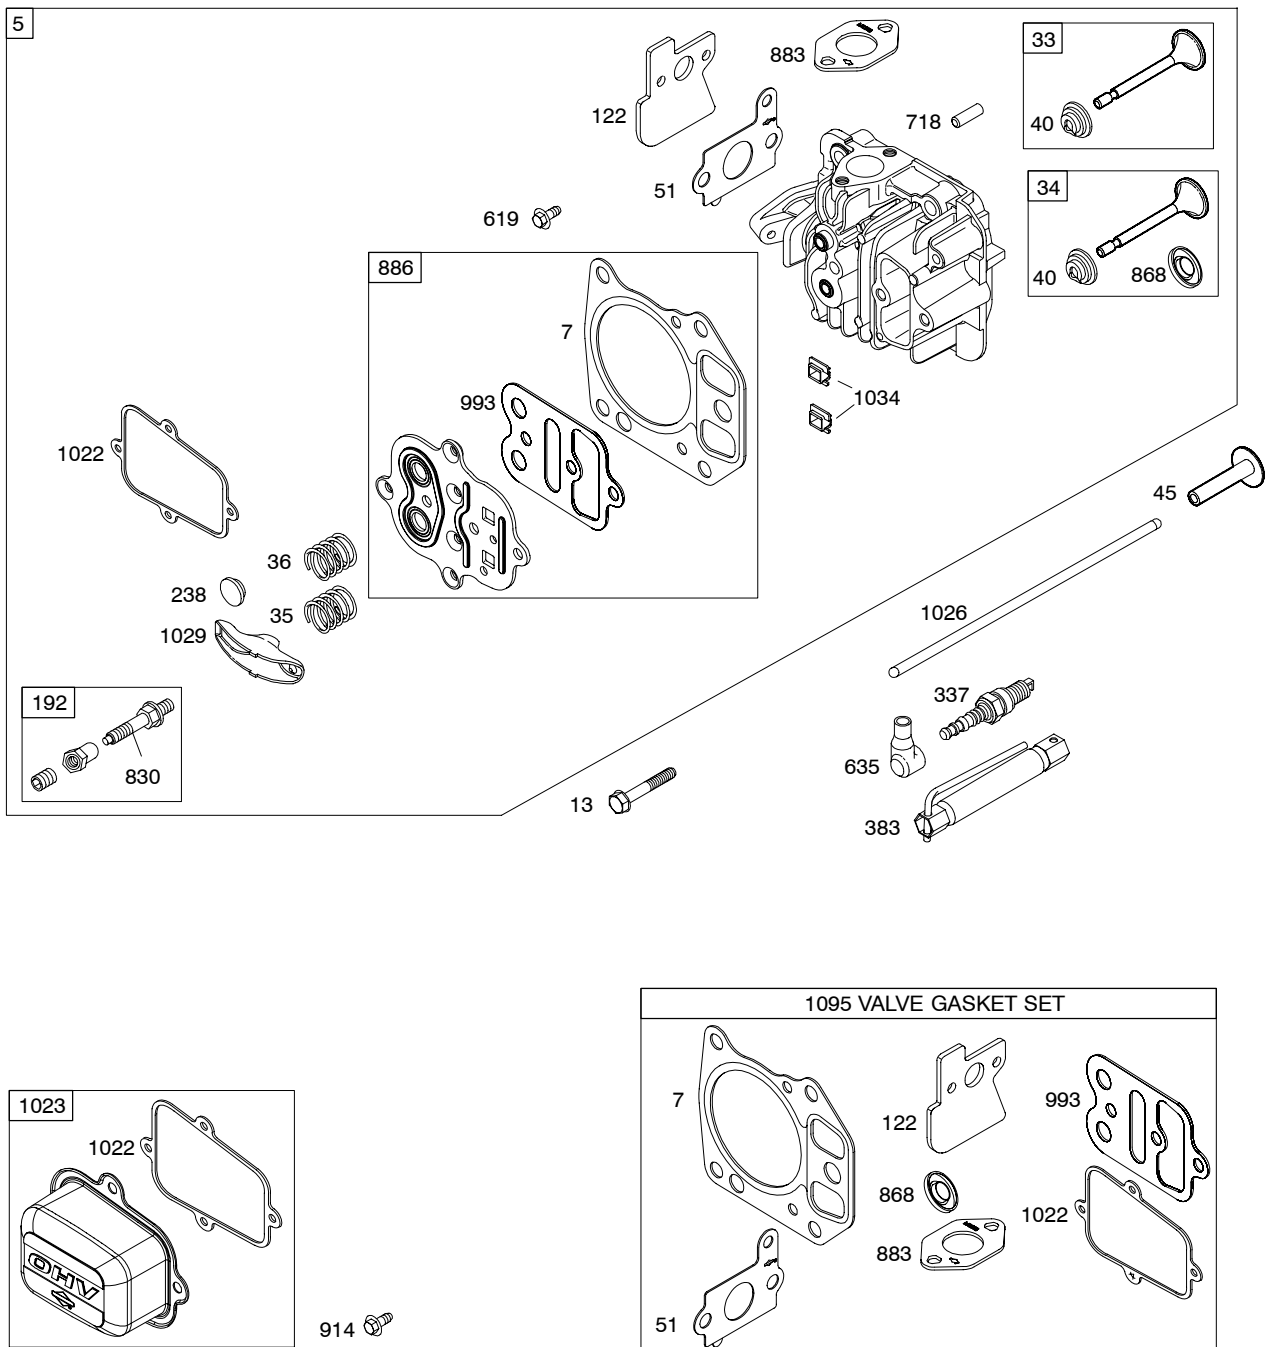


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5686-3 Assemblies include all parts shown in frames. 10/12/2005


12H600

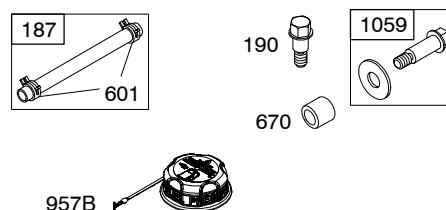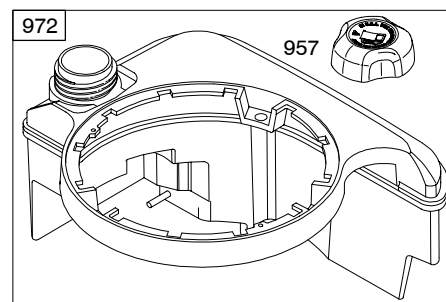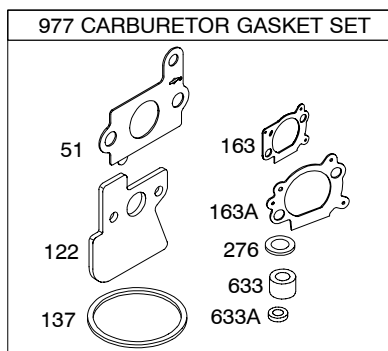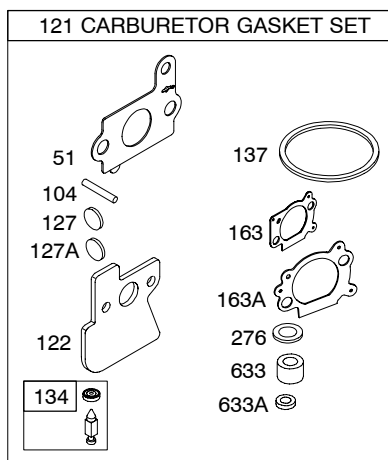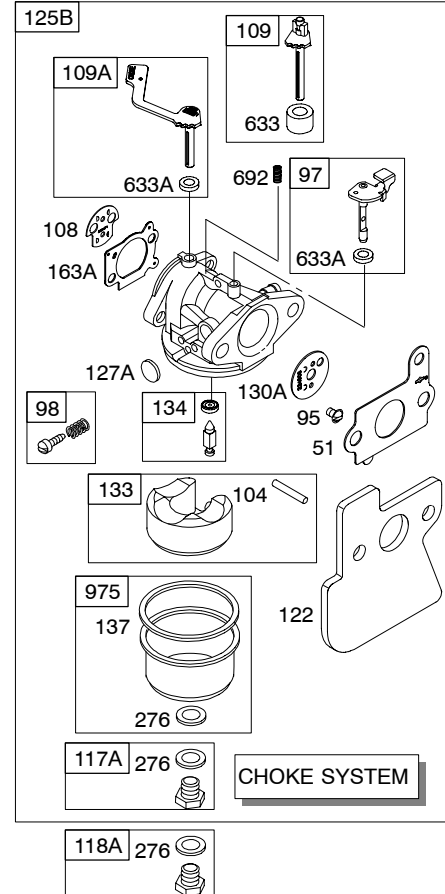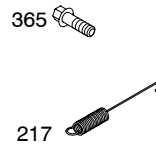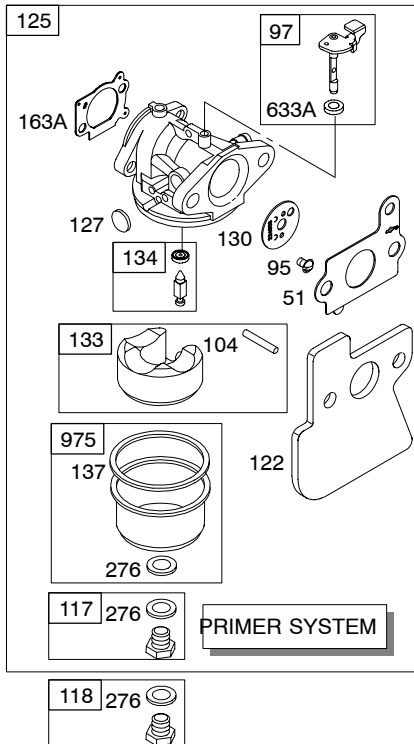


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5686-4 Assemblies include all parts shown in frames. **10/12/2005**

   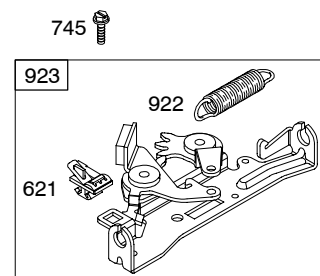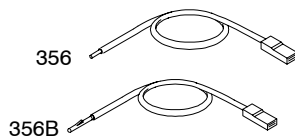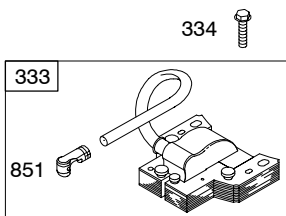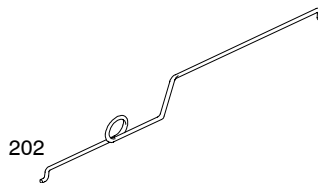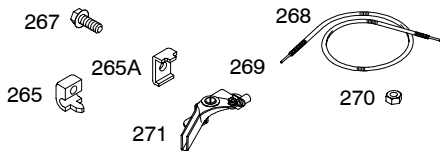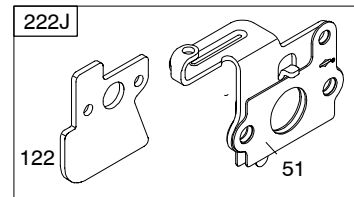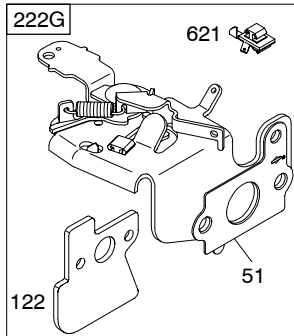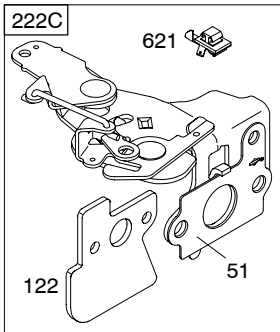

12H600

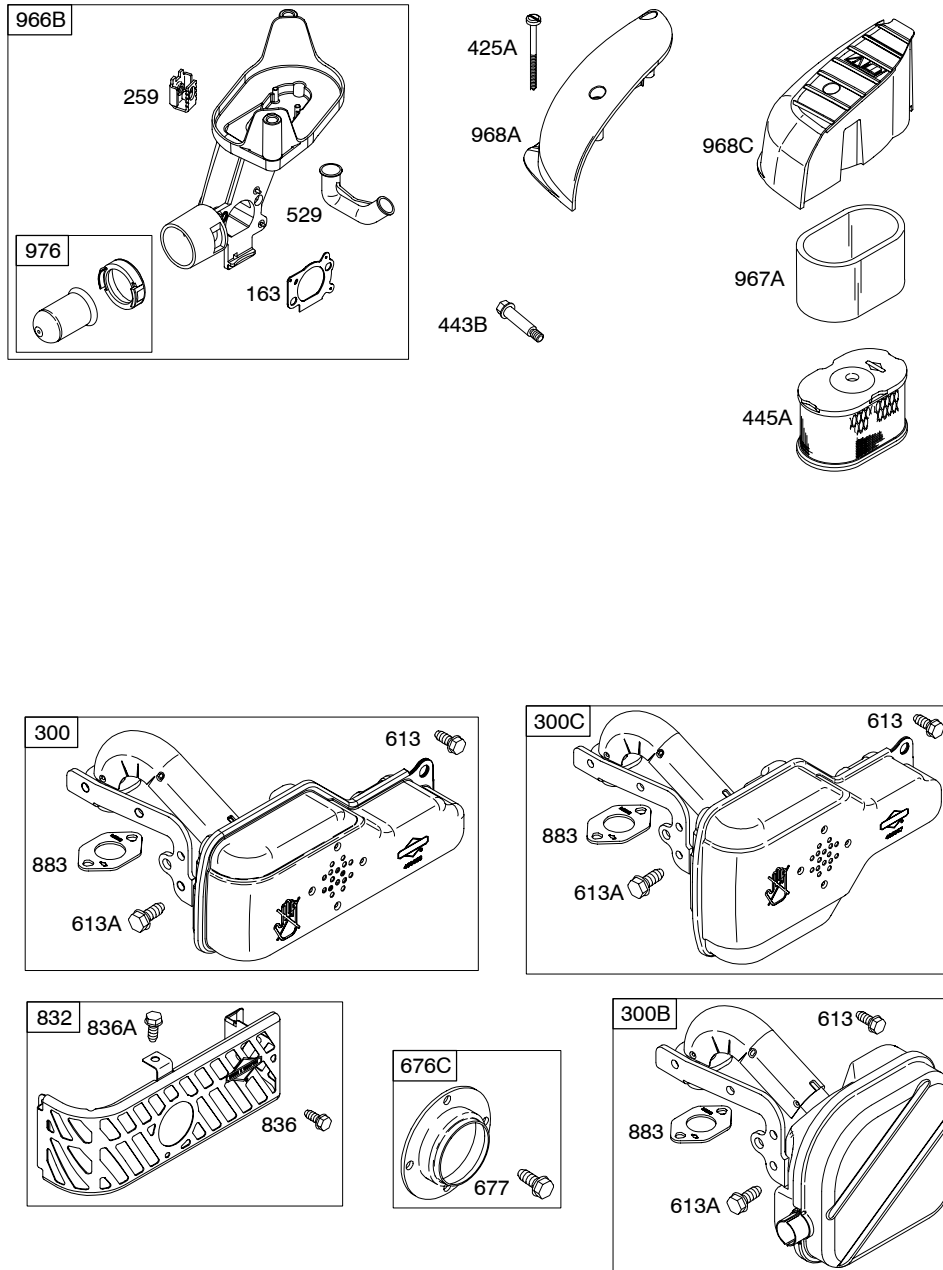

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5686-6 Assemblies include all parts shown in frames. **10/12/2005**

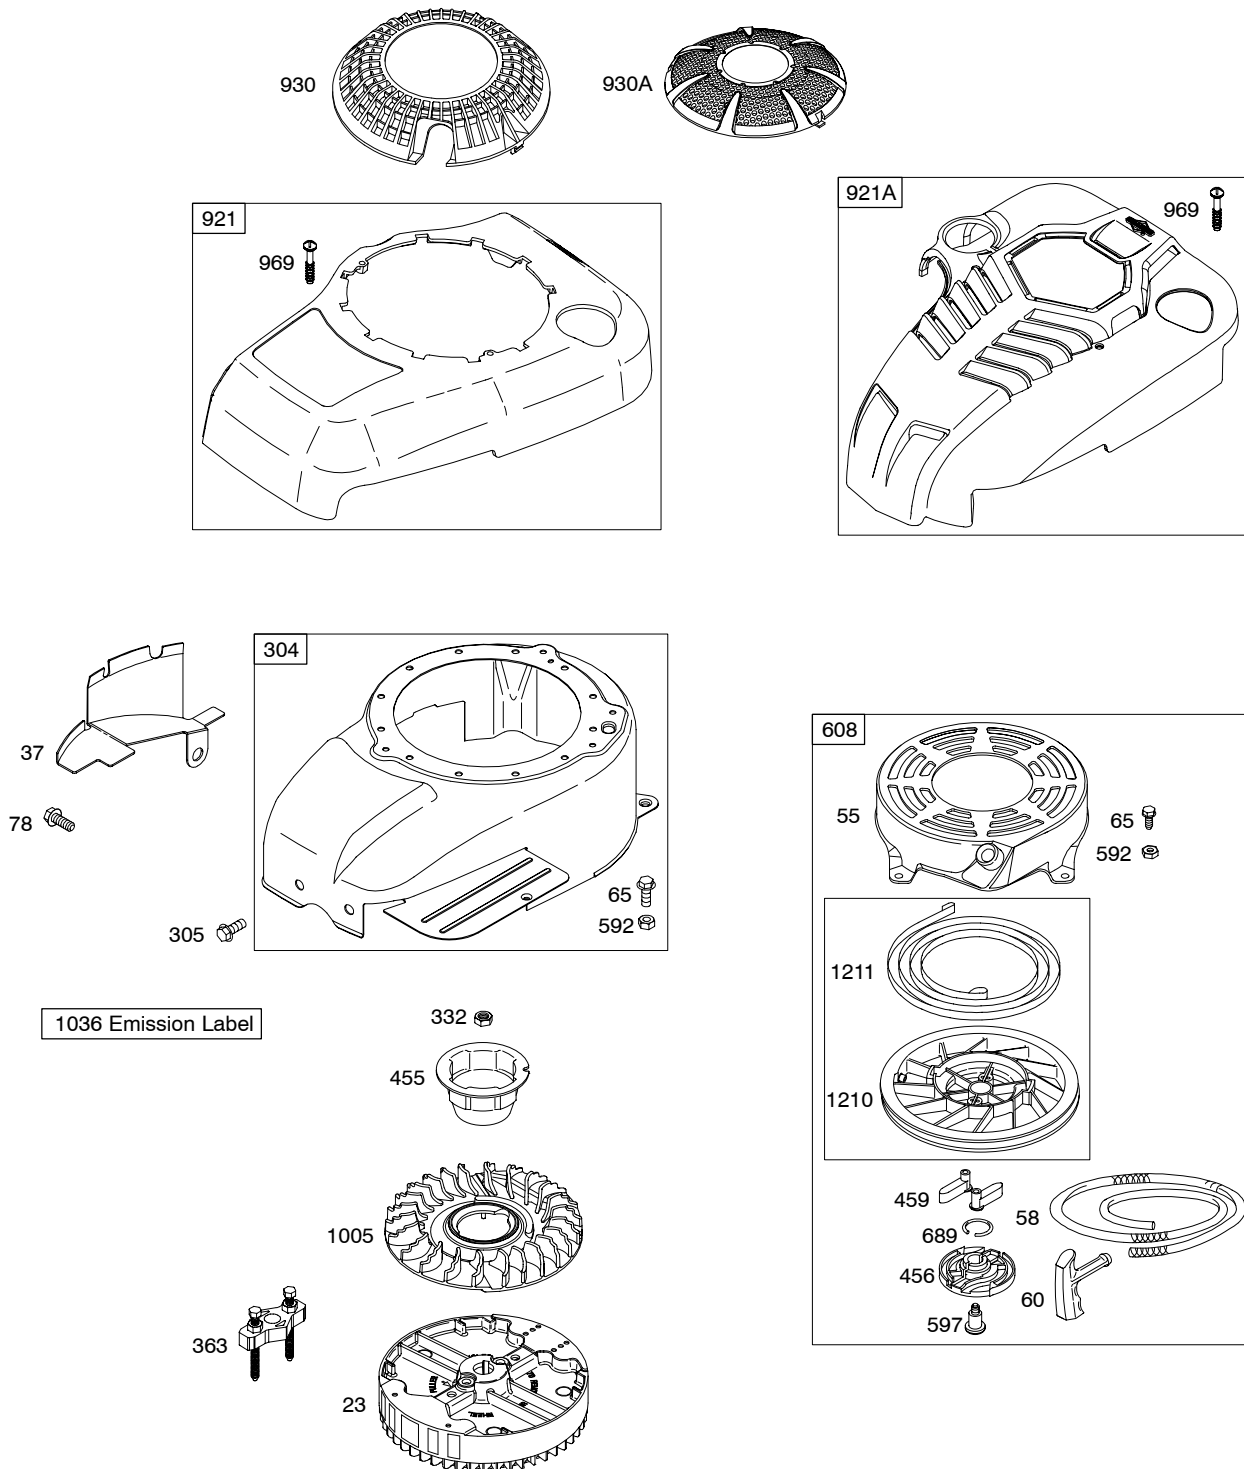

12H600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	790363	Cylinder Assembly (Used After Code Date 04040400). ----- Note ----- 499678 Cylinder Assembly (Used Before Code Date 04040500).	22	691092	Screw (Crankcase Cover/Sump)	26	791969	Ring Set (Standard) (Used After Code Date 05030700). ----- Note ----- 499631 Ring Set (Standard) (Used Before Code Date 05030800).
2	399269	Kit-Bushing/Seal (Magneto Side)	23	696569	Flywheel ----- Note ----- 697586 Flywheel Used on Type No(s). 0005, 0110. 790116 Flywheel Used on Type No(s). 0006, 0112, 0492.	27	691866	Lock-Piston Pin
3	★299819	Seal-Oil (Magneto Side)	24	222698	Key-Flywheel	28	499423	Pin-Piston
4	493279	Sump-Engine	25	792004	Piston Assembly (Standard) (Used After Code Date 05030700). ----- Note ----- 499627 Piston Assembly (Standard) (Used Before Code Date 05030800).	29	499424	Rod-Connecting
4B	692509	Sump-Engine Used on Type No(s). 0005, 0110.				32	691664	Screw (Connecting Rod)
5	695276	Head-Cylinder				32A	695759	Screw (Connecting Rod)
7	★△695166	Gasket-Cylinder Head				33	499642	Valve-Exhaust
8	495786	Breather Assembly				34	499641	Valve-Intake
9	★272481	Gasket-Breather				35	691304	Spring-Valve (Intake)
10	691125	Screw (Breather Assembly)				36	691304	Spring-Valve (Exhaust)
11	499675	Tube-Breather				37	694086	Guard-Flywheel
12	★692232	Gasket-Crankcase				40	692194	Retainer-Valve
13	691137	Screw (Cylinder Head)				43	691997	Slinger-Governor/Oil
15	691680	Plug-Oil Drain (Square Socket)				43A	692505	Slinger-Governor/Oil Used on Type No(s). 0005, 0110.
16	691456	Crankshaft ----- Note ----- 691457 Crankshaft Used on Type No(s). 0006, 0111, 0112, 0113. 692823 Crankshaft Used on Type No(s). 0492.						
17	692517	Bearing-Ball						
20	★399781	Seal-Oil (PTO Side)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5686-8

Assemblies include all parts shown in frames.

10/12/2005

12H600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
211	692434	Spring-Governed Idle	304	695976	Housing-Blower	443B	690255	Screw
217	690354	Spring-Choke Return			----- Note -----			(Air Cleaner Primer Base)
222C	692617	Bracket-Control		499677	Housing-Blower	445A	697029	Filter-Air Cleaner Cartridge
		Used on Type No(s). 0111, 0113, 0308.			Used on Type No(s). 0111.	455	695161	Cup-Flywheel
		----- Note -----		499676	Housing-Blower	456	692299	Plate-Pawl Friction
	692618	Bracket-Control			Used on Type No(s). 0005, 0006, 0110, 0112, 0113, 0492.	459	281505	Ratchet-Pawl
		Used on Type No(s). 0006, 0112, 0492.				505	694251	Nut
222G	692615	Bracket-Control	305	691108	Screw (Blower Housing)			(Governor Control Lever)
		Used on Type No(s). 0005, 0110.			----- Note -----	523	499621	Dipstick
222J	697614	Bracket-Control		691138	Screw (Blower Housing)	524	★692296	Seal-Dipstick Tube
		Used on Type No(s). 0334, 0342, 0486, 0491, 0544, 0545.	306	691232	Shield-Cylinder	525	495265	Tube-Dipstick
227	691467	Lever-Governor Control	307	690345	Screw (Cylinder Shield) (Starter Motor)	529	692937	Grommet (Starter Motor)
238	691300	Cap-Valve	332	690662	Nut (Flywheel)	562	691119	Bolt
259	691189	Bracket-Casing Clamp	333	802574	Armature-Magneto			(Governor Control Lever)
265	690798	Clamp-Casing	334	691061	Screw (Magneto Armature)	584	697734	Cover-Breather Passage
265A	691024	Clamp-Casing	337	692051	Plug-Spark (Resistor)	585	★691879	Gasket-Breather Passage
267	691044	Screw (Casing Clamp)			----- Note -----	592	690800	Nut (Rewind Starter)
268	691025	Casing-Control Wire (Cut To Required Length)		692720	Plug-Spark (EMS)	597	691696	Screw (Pawl Friction Plate)
269	691026	Wire-Control (Cut To Required Length)	356	692390	Wire-Stop	601	95162	Clamp-Hose
270	691027	Nut (Control Wire Casing)	356B	692151	Wire-Stop	608	497680	Starter-Rewind
271	691028	Lever-Control	358	694090	Gasket Set-Engine	613	691108	Screw (Muffler)
276	◆271716	Washer-Sealing	363	19069	Puller-Flywheel	613A	691140	Screw (Muffler)
287	690940	Screw (Dipstick Tube)	365	691136	Screw (Carburetor)	615	690340	Retainer-Governor Shaft
300	697590	Muffler-Exhaust	383	19374	Wrench-Spark Plug	616	698801	Crank-Governor
300B	699769	Muffler-Exhaust	404	690272	Washer (Governor Crank)	619	691108	Screw (Cylinder Head Plate)
300C	694248	Muffler-Exhaust	425A	690244	Screw (Air Cleaner Cover)	621	692310	Switch-Stop

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5686-10

Assemblies include all parts shown in frames.

10/12/2005

12H600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
633	♦♦693867	Seal-Choke/Throttle Shaft	843	691884	Sleeve-Lever	969	691138	Screw (Blower Housing Cover)
633A♦♦691321		Seal-Choke/Throttle Shaft	847	692047	Dipstick/Tube Assembly	972	699374	Tank-Fuel (Plastic)
635	66538	Boot-Spark Plug	851	493880	Terminal-Sparkplug	975	493640	Bowl-Float
676C	497682	Deflector-Muffler	868	★Δ692044	Seal-Valve	976	694395	Primer-Carburetor
677	690661	Screw (Muffler Deflector)	883	★Δ691893	Gasket-Exhaust	977	692704	Gasket Set-Carburetor
670	692294	Spacer-Fuel Tank	886	696268	Gasket Set-Cylinder Head/Plate	988	692515	Gasket-Oil Adapter
684	690345	Screw (Breather Passage Cover)	914	691108	Screw (Rocker Arm Cover)	993	★Δ694088	Gasket-Cylinder Head Plate
689	691855	Spring-Friction	921	692699	Cover-Blower Housing	1005	691346	Fan-Flywheel
692	690572	Spring-Friction	921A	699633	Cover-Blower Housing	1022	★Δ691890	Gasket-Rocker Cover
718	690959	Pin-Locating	922	692135	Spring-Brake	1023	499624	Cover-Rocker Arm
737	692511	Screw (Oil Filter Adapter)			----- Note -----	1024	692508	Pump-Oil
741	790345	Gear-Timing (Use Without Woodruff Key)			691831 Spring-Brake Used on Type No(s). 0111.	1026	692045	Rod-Push
		----- Note -----	923	695891	Brake	1027	692513	Filter-Oil
		691830 Gear-Timing (Uses Woodruff Key)			----- Note -----	1028	692516	Adapter_Oil Filter
745	691648	Screw (Brake)			691994 Brake Used on Type No(s). 0111.	1029	691230	Arm-Rocker
750	691683	Screw (Oil Pump Cover)	930	692691	Guard-Rewind	1034	691343	Guide-Push Rod
830	694544	Stud-Rocker Arm	930A	692675	Guard-Rewind	1036		Label-Emission (Available From An Authorized Briggs & Stratton Service Dealer)
832	691466	Guard-Muffler	943	692514	Seal-O Ring (Oil Pump Cover)	1055	692623	Tube-Oil Pump
836	691147	Screw (Muffler Guard)	957	692046	Cap-Fuel Tank (Plastic)	1058	276348	Manual-Owner's
836A	697551	Screw (Muffler Guard)	957B	699985	Cap-Fuel Tank (Plastic)	1059	692311	Kit-Screw/Washer
842	★691031	Seal-O Ring (Dipstick Tube)	965	692507	Cover-Oil Pump	1095	694091	Gasket Set-Valve
			966B	690243	Base-Air Cleaner Primer	1210	498144	Pulley/Spring Assembly (Pulley)
			967A	273356	Filter-Pre Cleaner	1211	498144	Pulley/Spring Assembly (Spring)
			968A	691342	Cover-Air Cleaner	1330	272147	Manual-Repair
			968C	692692	Cover-Air Cleaner			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5686-11

Assemblies include all parts shown in frames.

10/12/2005