

192400

Illustrated Parts List

Model Series

192400

TYPE NUMBERS
0001 through 6167.

For Use On Engines Built Before Date Code – 02051800

TABLE OF CONTENTS

Air Cleaner Group	4
Alternator	8
Blower Housing/Shrouds	5
Cam	2
Carburetor	3
Controls	7
Crankcase Cover/Sump	2
Crankshaft	2
Cylinder Group	2
Electric Starter	6
Flywheel Group	6
Fuel Tank Group	7
Gear Reducer	8
Governor Spring	7
Head	2
Ignition	6
Kits/Gaskets–Carburetor	3
Kits/Gaskets–Valve	8
Muffler	4
Oil	2
Piston Group	2
Rewind	5
Valves	2


PRINTED IN U.S.A.

BRIGGS & STRATTON






COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

192400

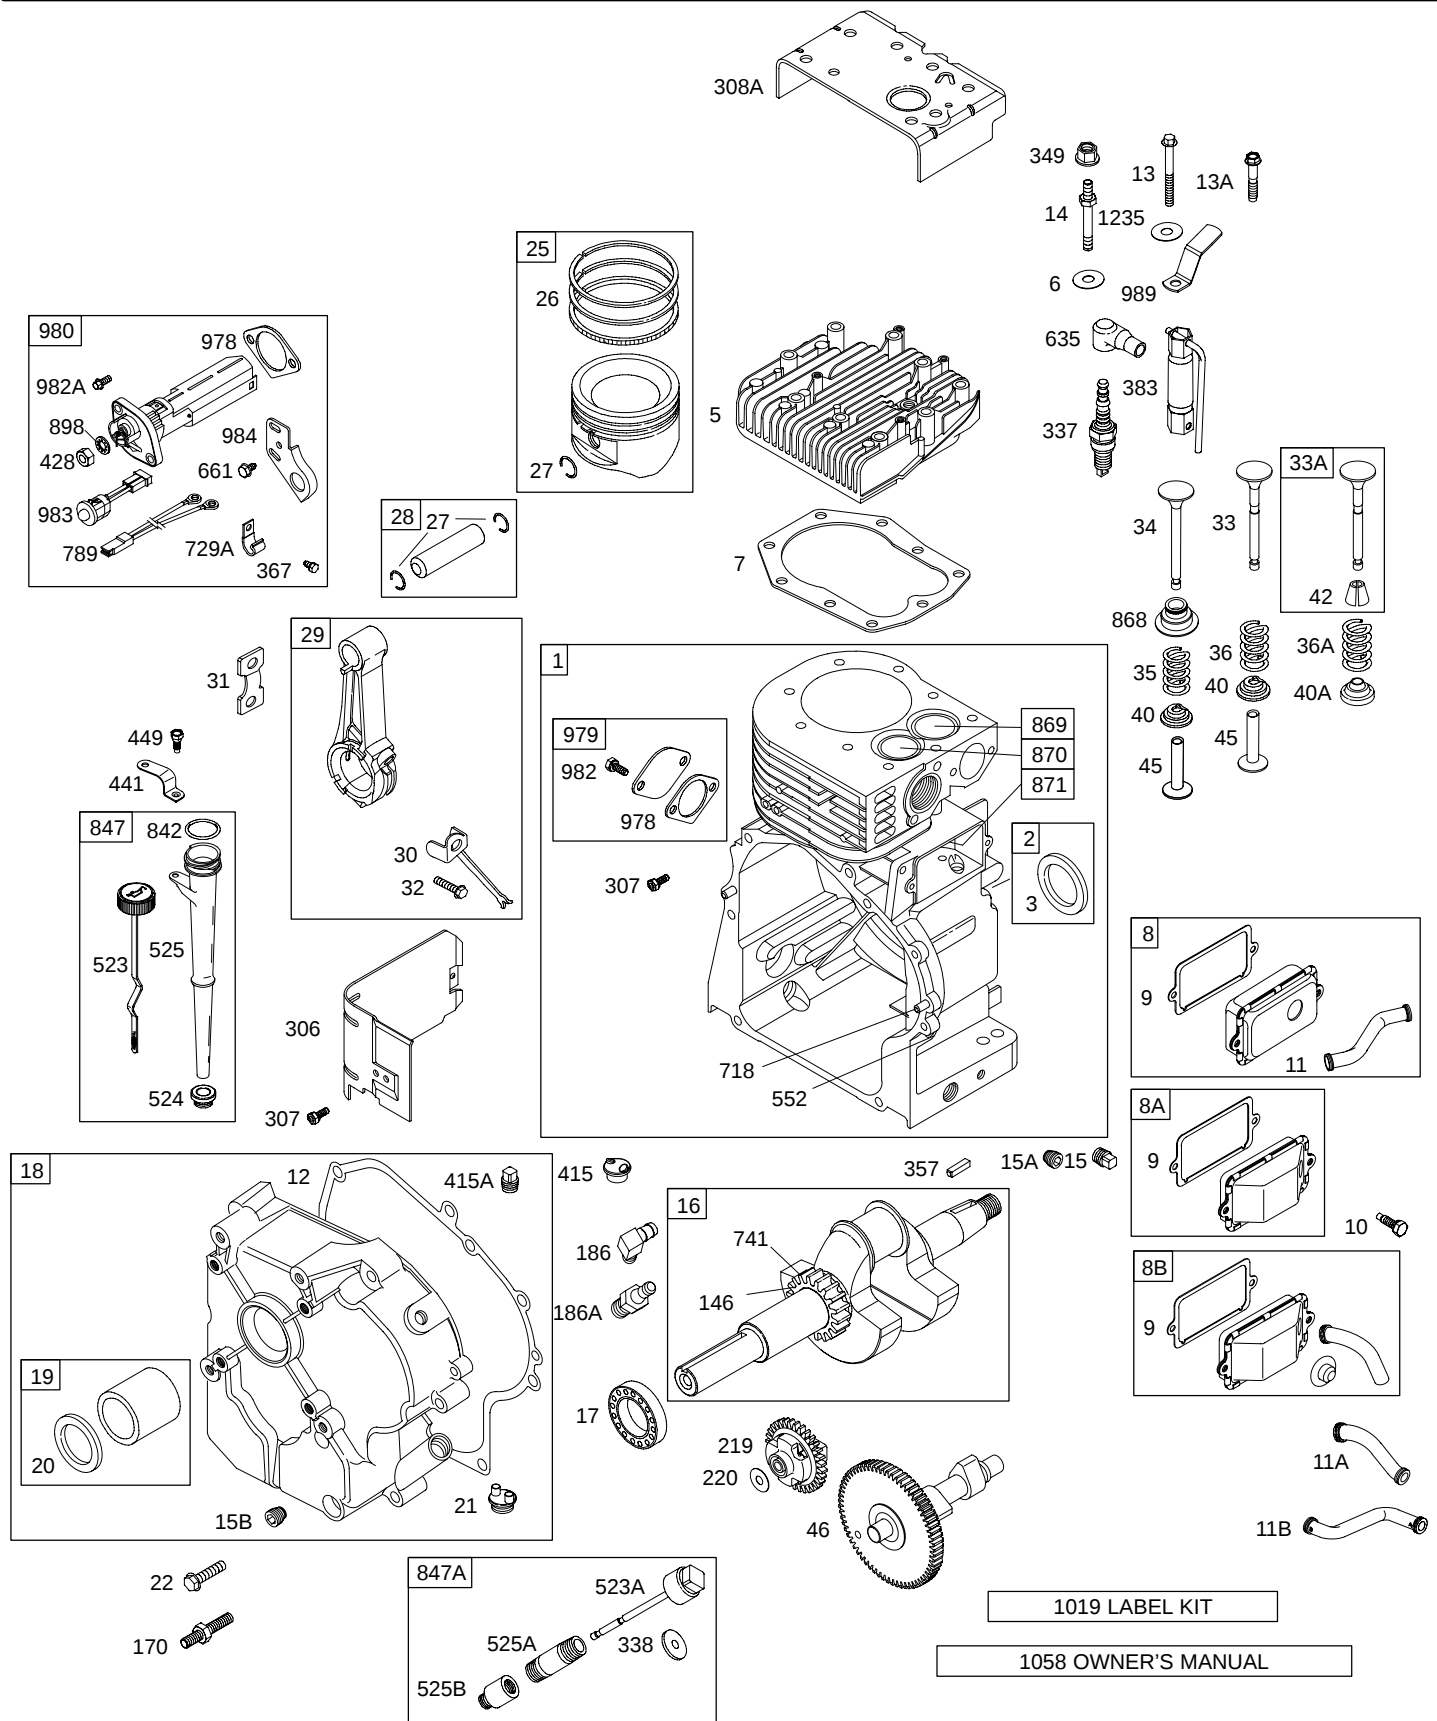


1019 LABEL KIT

1058 OWNER'S MANUAL

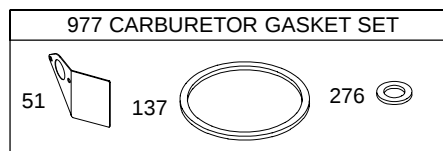
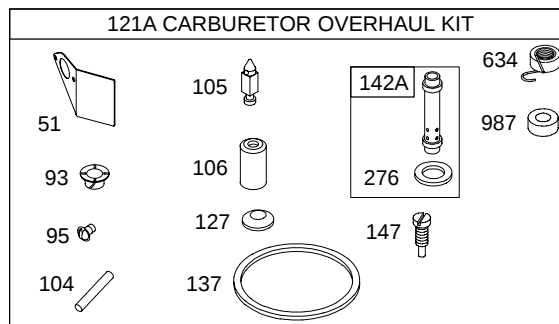
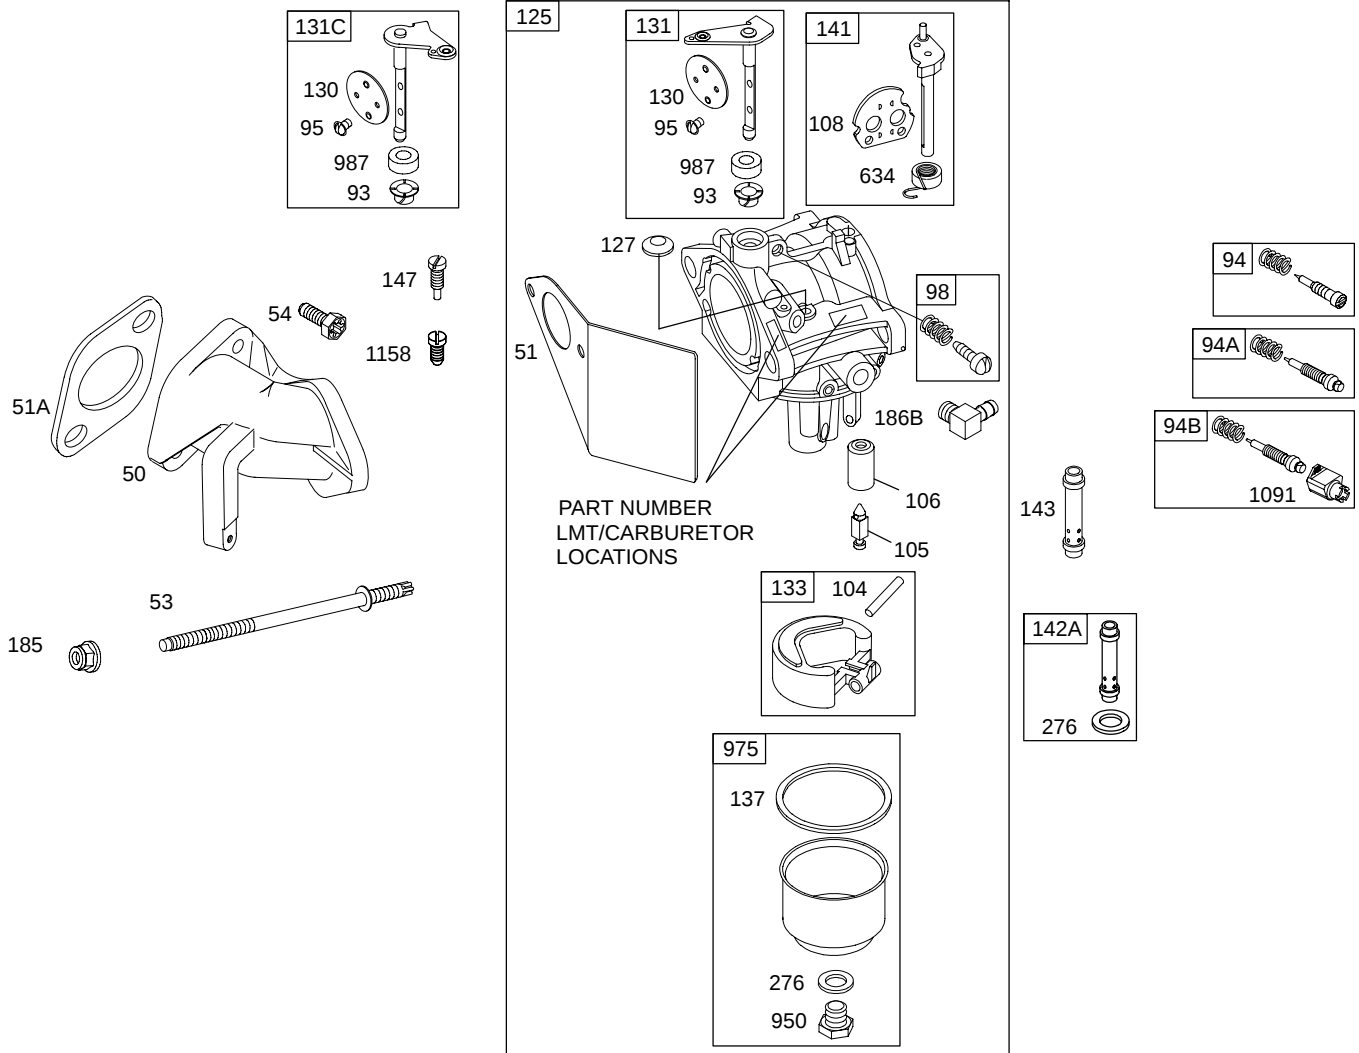


192400

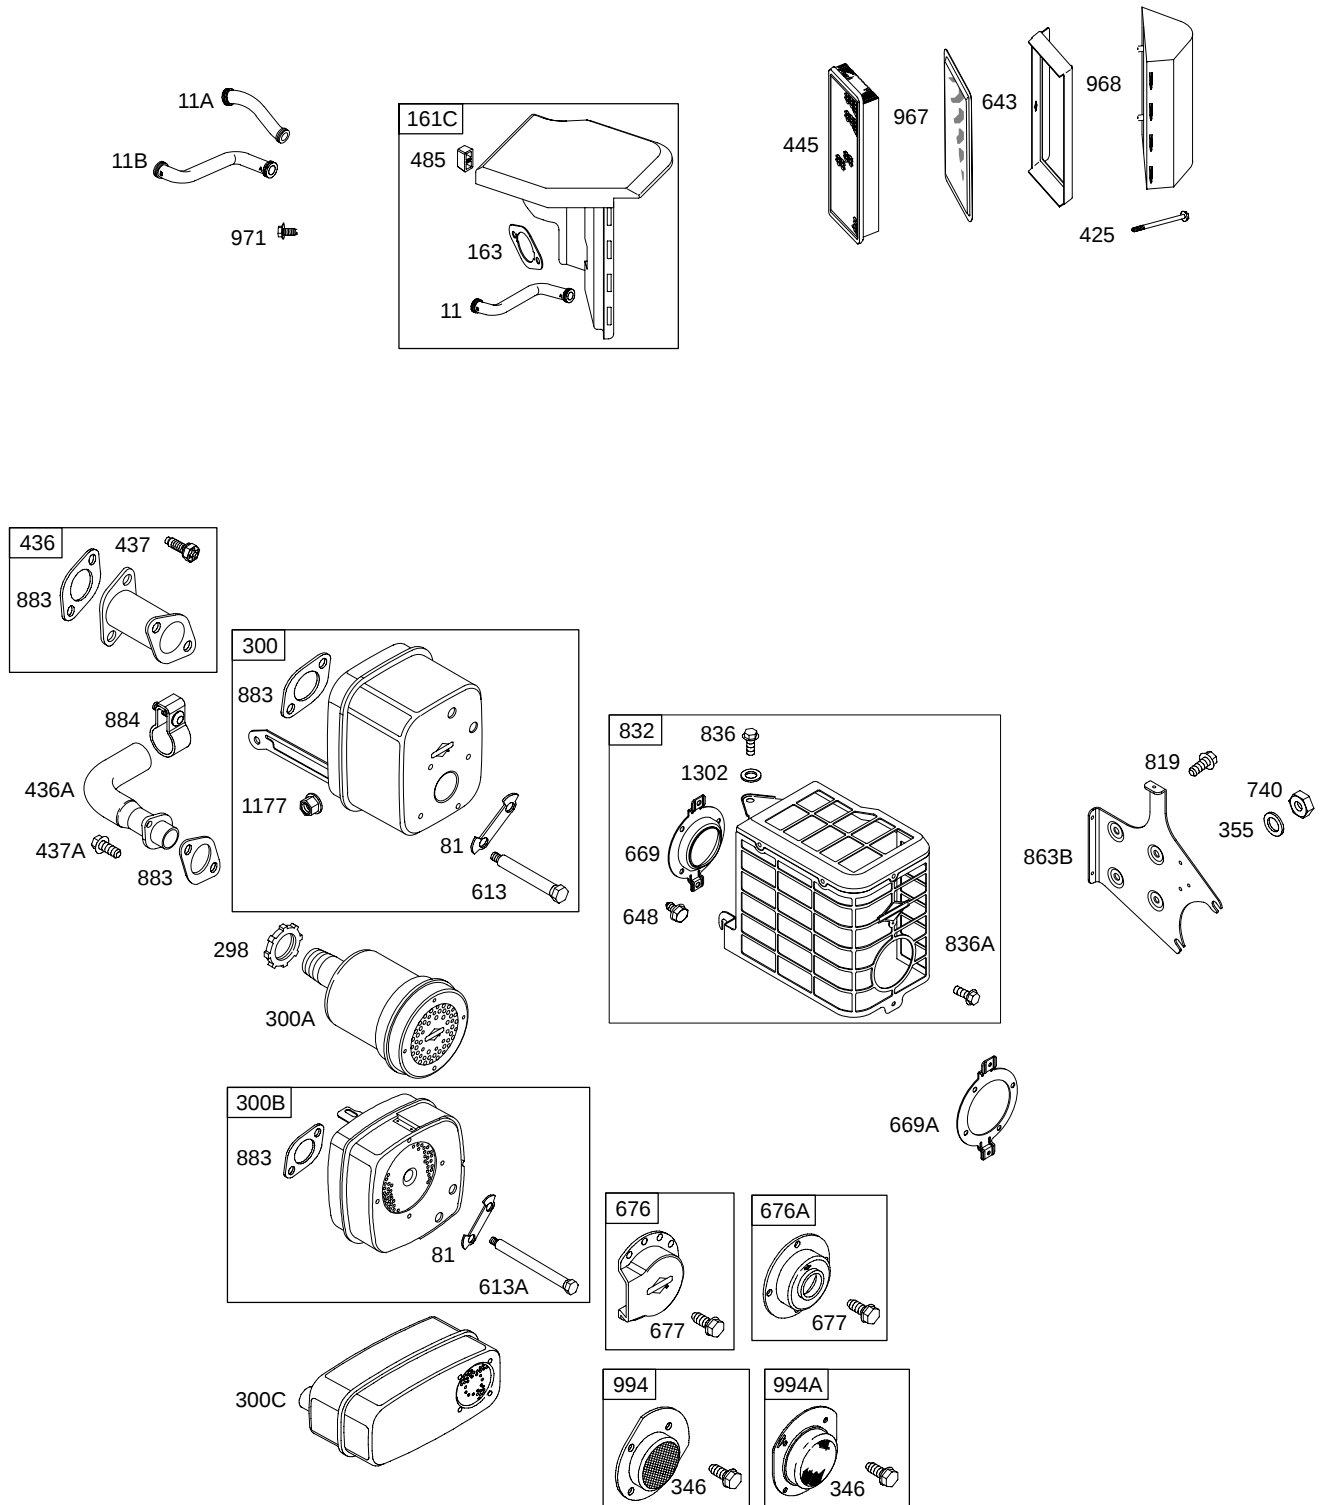



192400

1036 EMISSION LABEL



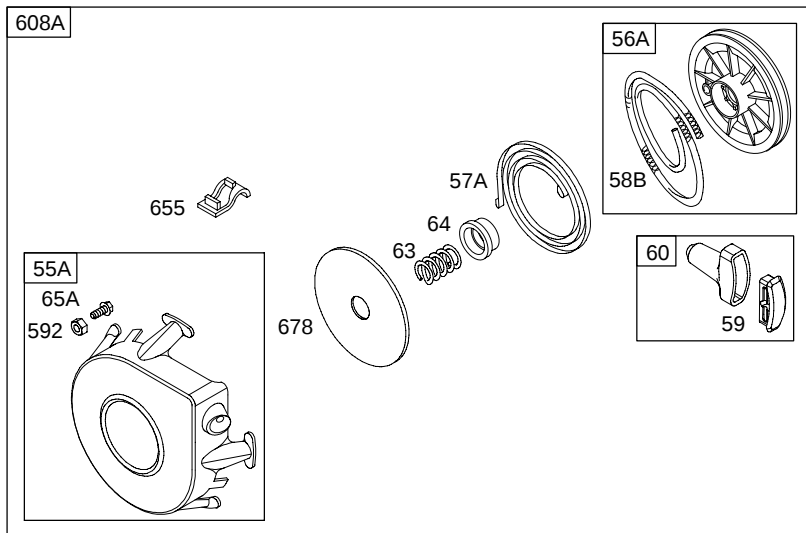
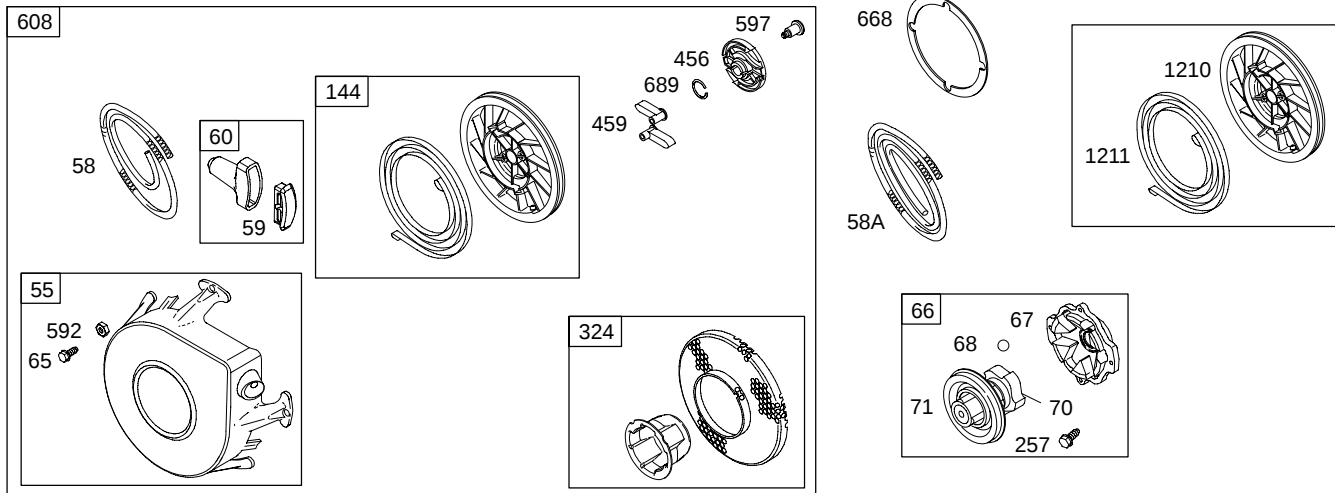
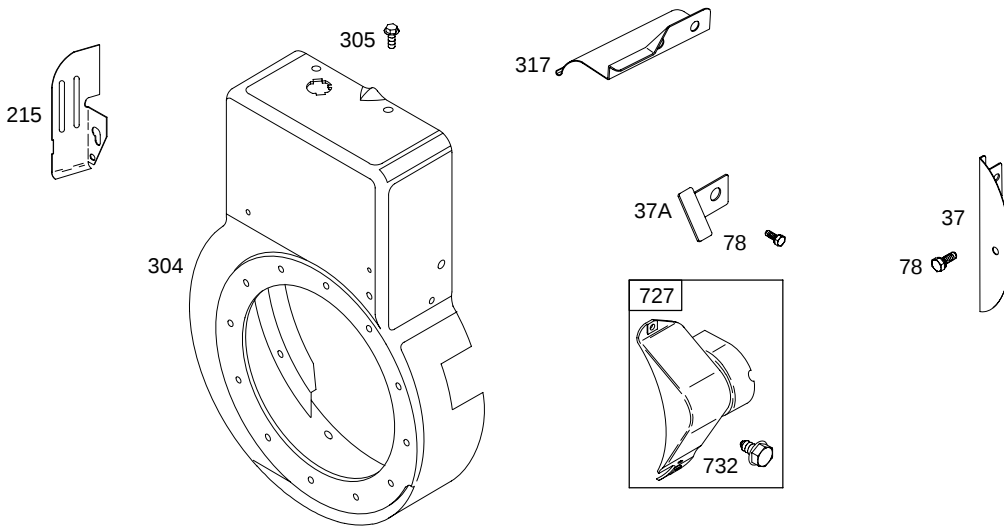


192400




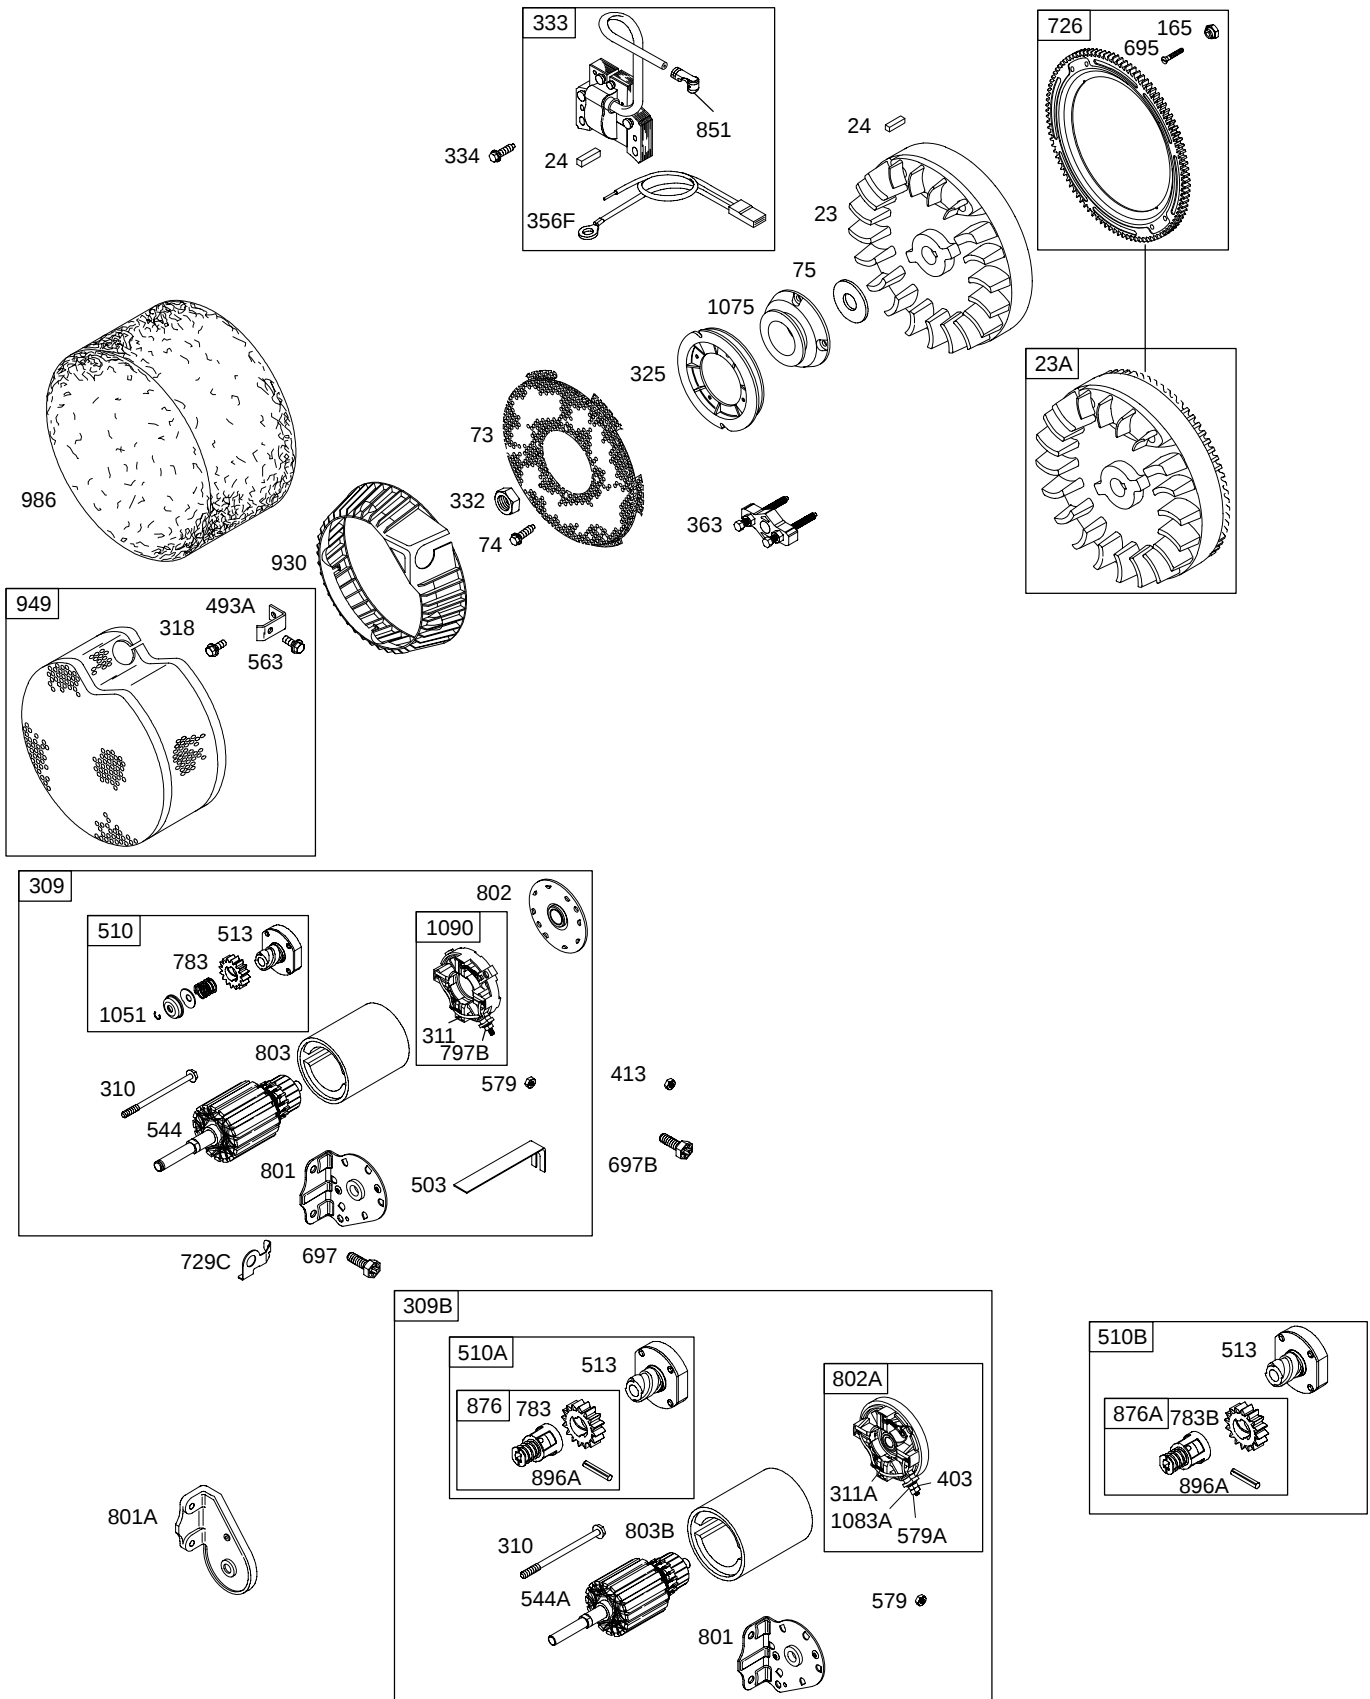


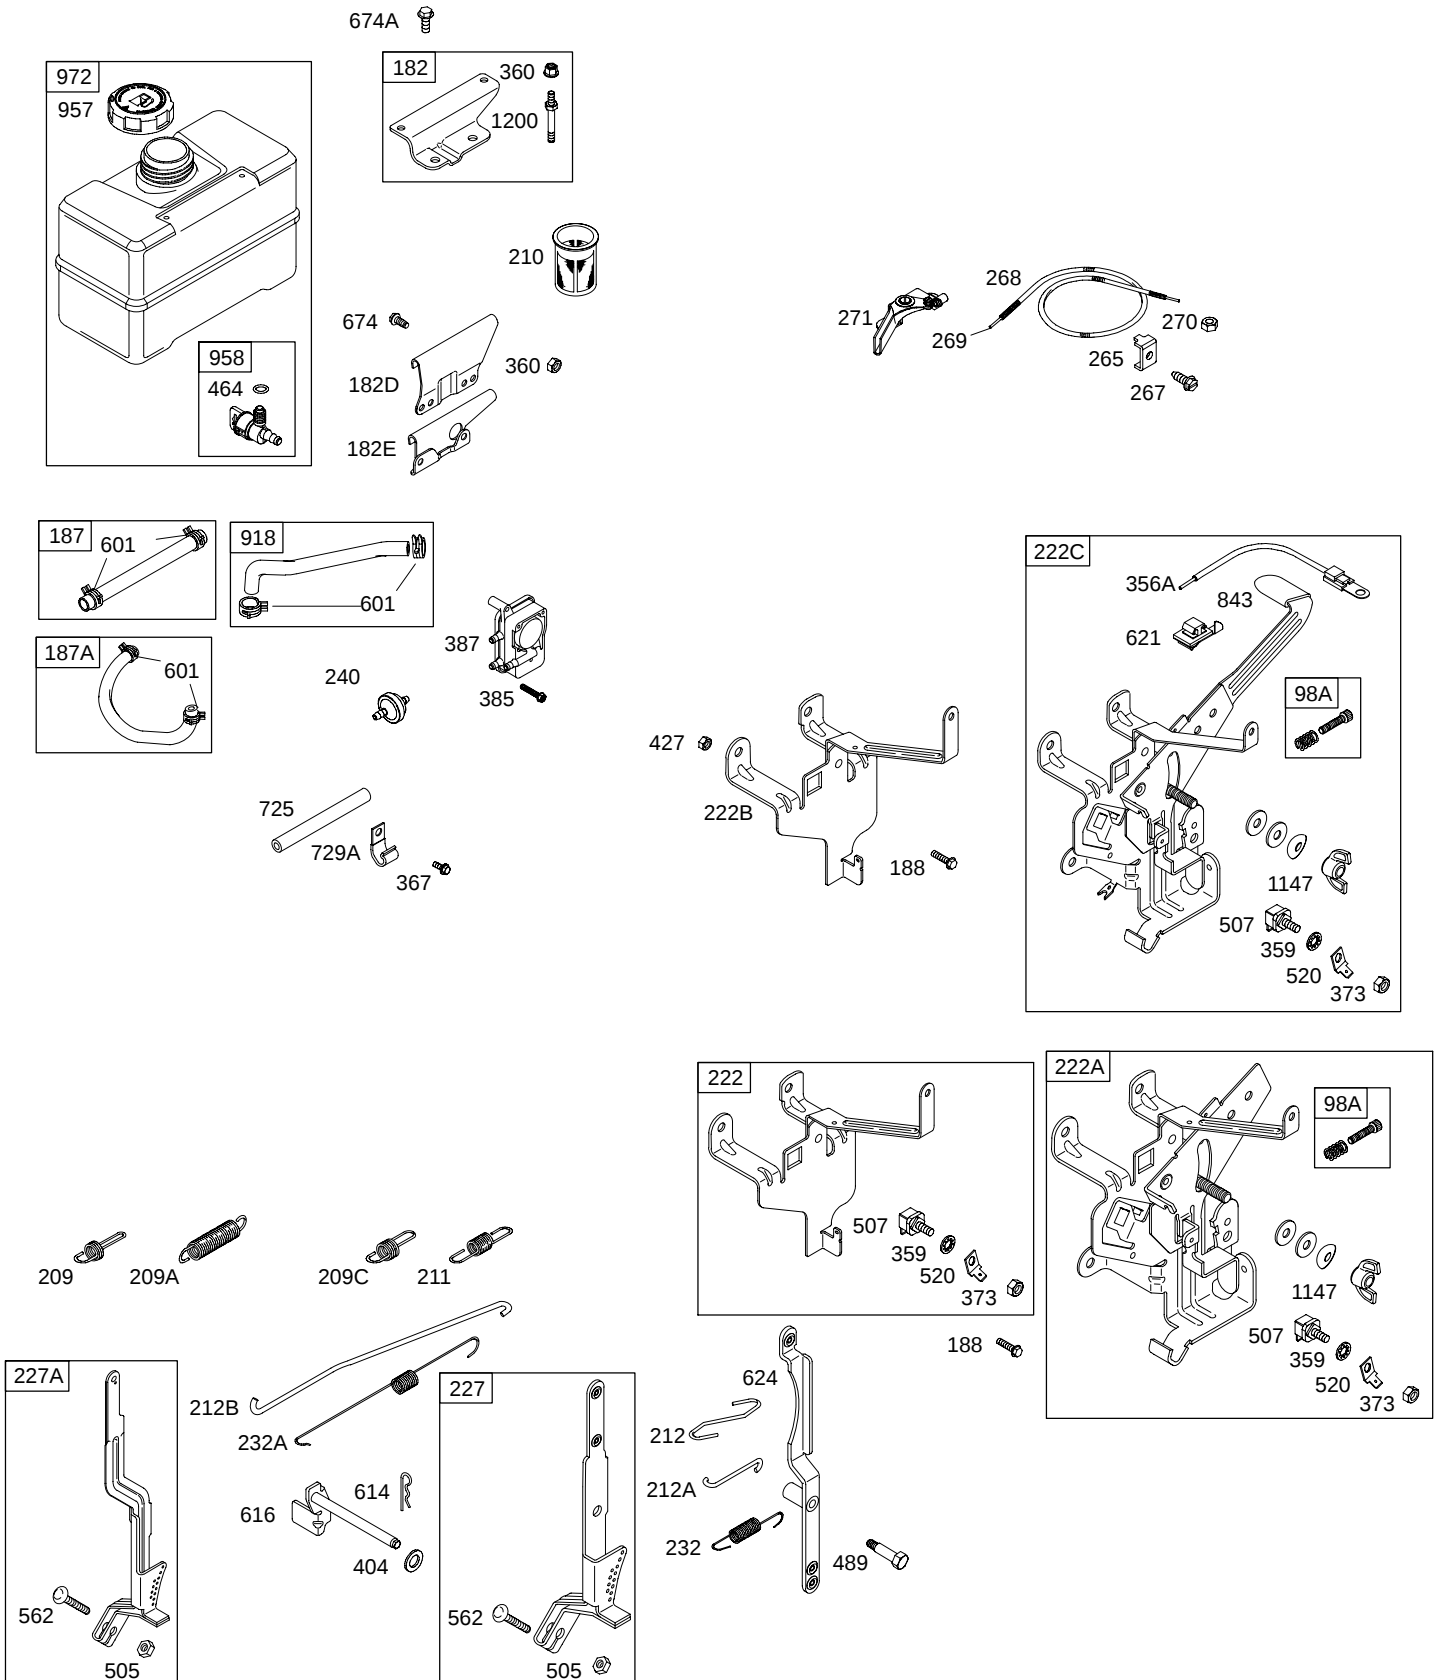

192400

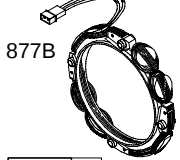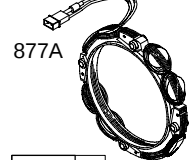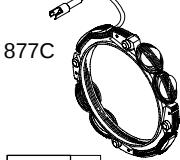  DC ONLY	10 AMP	DUAL CIRCUIT	TRI-CIRCUIT
SEE FLYWHEEL ASSEMBLY	SEE FLYWHEEL ASSEMBLY	SEE FLYWHEEL ASSEMBLY	SEE FLYWHEEL ASSEMBLY
474 	474B 	474A 	474C 
1059 	1059 	1059 	1059 
578A 	578A 	878A 	878B 

NOTE: ALL OLD STYLE STATORS USE
REFERENCE NUMBER 1119 MOUNTING SCREW

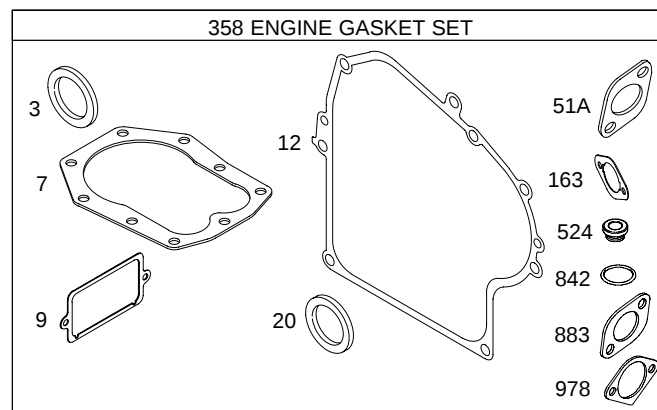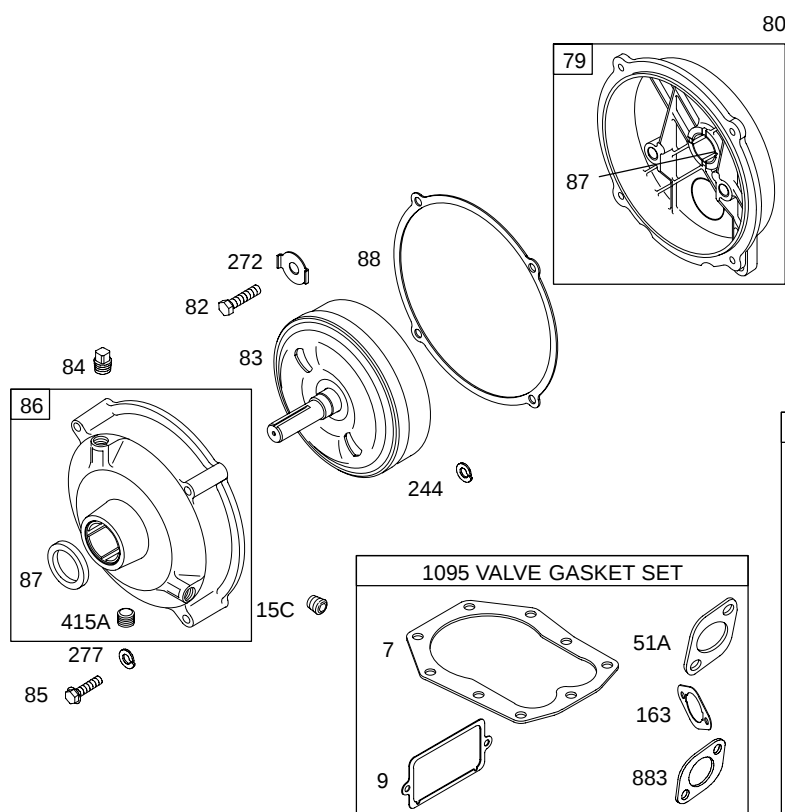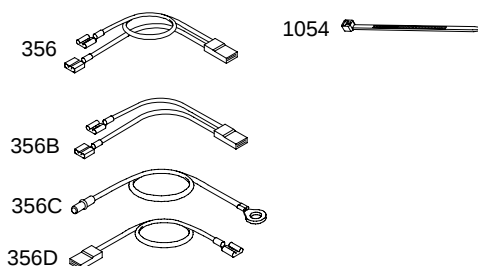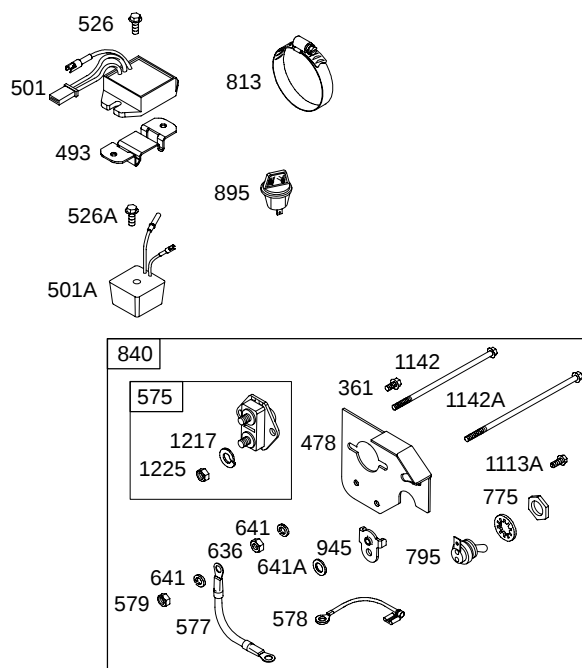

192400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	495631	Cylinder Assembly	15	690946	Plug–Oil Drain (Square Head)			495884 Crankshaft Used on Type No(s).
2	495657	Kit–Bushing/Seal (Magneto Side)	15A	691680	Plug–Oil Drain (3/8" Square Socket)			0023, 0128, 0159, 0160, 0161, 0185, 0523, 1023, 1128, 1137, 1147, 1148 1159, 1161, 6167.
3	391086	Seal–Oil (Magneto Side)	15B	690343	Plug–Oil Drain (Hex Socket) Used on Type No(s).			1203.
5	691715	Head–Cylinder	15C	691682	Plug–Oil Drain (1/4" Hex Socket)			497146 Crankshaft Used on Type No(s).
6	691261	Washer (Cylinder Head)	16	495790	Crankshaft			0122, 0123, 0125, 0622, 0623, 0625, 1122, 1125.
7	Ø★272163	Gasket–Cylinder Head			----- Note -----			693013 Crankshaft Used on Type No(s).
8	498038	Breather Assembly (Used After Code Date 95040200).			495648 Crankshaft Used on Type No(s).			0626, 0702, 1198, 1220.
8A	495736	Breather Assembly (Used After Code Date 95010100 and Before Code Date 95040300).			0015, 0025, 0100, 0127, 0131, 0132, 0145, 0515, 0525, 0645, 1015, 1025, 1100, 1127, 1131, 1132, 1145, 1196, 1197, 1200, 1209, 1221.			499531 Crankshaft Used on Type No(s).
8B	497710	Breather Assembly (Used Before Code Date 95010200).			495655 Crankshaft Used on Type No(s).			1205, 1211.
9	Ø★27803	Gasket–Breather			0008, 0035, 0041, 0102, 0135, 0166, 0170, 0173, 0189, 0535, 0541, 0669, 0670, 0671, 1008, 1035, 1041, 1102, 1173, 1189, 1212, 1213.	17	691069	Bearing–Ball
10	691666	Screw (Breather Assembly)			690834 Crankshaft Used on Type No(s).	18	496984	Cover–Crankcase
11	691907	Tube–Breather (Used After Code Date 95040200).			0049, 0103, 0549, 1049.			----- Note -----
11A	691899	Tube–Breather (Used After Code Date 95010100 and Before Code Date 95040300).			495788 Crankshaft Used on Type No(s).			496979 Cover– Crankcase
11B	281426	Tube–Breather (Used Before Code Date 94111100).			0192, 0193, 1193, 1204, 1218, 1219.			Used on Type No(s).
12	★692221	Gasket–Crankcase (.015" Thick) ----- Note ----- ★27876 Gasket– Crankcase (.005" Thick) ★27877 Gasket– Crankcase (.009" Thick)			495789 Crankshaft Used on Type No(s).			0122, 0156, 0159, 0161, 0193, 0622, 0656, 1063, 1122, 1147, 1159, 1193, 1204, 1218, 1219.
13	691651	Screw (Cylinder Head) (2 5/8" Long)			0047, 0126, 0547, 1047, 1126, 1206.			496980 Cover– Crankcase
13A	690904	Screw (Cylinder Head) (3" Long)			495866 Crankshaft Used on Type No(s).			Used on Type No(s).
14	691690	Stud (Cylinder Head) (3" Long) ----- Note ----- 691109 Stud (Cylinder Head) (Used in Position 1)			0065, 0156, 0172, 0176, 0187, 0565, 0654, 0656, 1065.			0006, 0008, 0011, 0035, 0041, 0047, 0065, 0070, 0102, 0126, 0133, 0135, 0163, 0166, 0170, 0172, 0173, 0175, 0176, 0187, 0189, 0195, 0535, 0541, 0565, 0570, 0636, 0669, 0670, 0671, 1008, 1011, 1035, 1041, 1065, 1070, 1102, 1129, 1136, 1173, 1175, 1189, 1195, 1206, 1212, 1213, 1222.
								496981 Cover– Crankcase Used on Type No(s).
								0047, 0126, 0547, 1047, 1126, 6167.

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Ø Included in Valve Gasket Set–Ref. No 1095.

192400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		496982 Cover– Crankcase Used on Type No(s). 0015, 0025, 0100, 0127, 0131, 0132, 0145, 0515, 0525, 0645, 1015, 1025, 1100, 1127, 1131, 1132, 1145, 1196, 1197, 1200, 1205, 1209, 1211, 1221. 496983 Cover– Crankcase Used on Type No(s). 0023, 0049, 0103, 0123, 0160, 0185, 0523, 0549, 0623, 0626, 0702, 1023, 1049, 1198, 1220. 497171 Cover– Crankcase Used on Type No(s). 0125, 0161, 0625, 0654, 1125, 1148, 1161.	25	499907 Piston Assembly (Standard) ----- Note ----- 499908 Piston Assembly (.010" Oversize) 499909 Piston Assembly (.020" Oversize) 499910 Piston Assembly (.030" Oversize)		37	690411 Guard–Flywheel ----- Note ----- 690490 Guard– Flywheel Used on Type No(s). 1129.	
		496983 Cover– Crankcase Used on Type No(s). 0023, 0049, 0103, 0123, 0160, 0185, 0523, 0549, 0623, 0626, 0702, 1023, 1049, 1198, 1220. 497171 Cover– Crankcase Used on Type No(s). 0125, 0161, 0625, 0654, 1125, 1148, 1161.	26	499921 Ring Set (Standard) ----- Note ----- 299743 Ring Set (Standard) (Chrome) 690018 Ring Set (.010" Oversize) 690019 Ring Set (.020" Oversize) 690020 Ring Set (.030" Oversize)		37A	690488 Guard–Flywheel	
19	295964	Kit–Bushing/Seal (PTO Side)	27	690975 Lock–Piston Pin		40	690656 Retainer–Valve (Intake)	
20	★391086	Seal–Oil (PTO Side)	28	499302 Pin–Piston (Standard) ----- Note ----- 499303 Pin–Piston (.005" Oversize)		40A	691939 Retainer–Valve (Exhaust) (Used Before Code Date 95041700).	
21	281658	Cap–Oil Fill				42	494553 Keeper–Valve (Exhaust) (Used Before Code Date 95041700).	
22	691625	Screw (Crankcase Cover/Sump) ----- Note ----- 691103 Screw (Crankcase Cover/Sump) (Used in Position 1)	29	390401 Rod–Connecting ----- Note ----- 390773 Rod– Connecting (.020" Undersize)		45	691793 Tappet–Valve	
			30	691728 Dipper–Connecting Rod		46	691167 Camshaft	
23	690615	Flywheel (Rewind Start)	31	222114 Lock–Rod Screw		50	691157 Manifold–Intake	
23A	691354	Flywheel (Electric Start)	32	690352 Screw (Connecting Rod)		51	◆◆691886 Gasket–Intake (Manifold to Carburetor)	
24	222698	Key–Flywheel	33	691287 Valve–Exhaust (Used After Code Date 95041600).		51A	Ø★691885 Gasket–Intake (Manifold to Engine)	
			33A	691794 Valve–Exhaust (Used Before Code Date 95041700).		53	691672 Stud (Carburetor)	
			34	261055 Valve–Intake		54	93208 Screw (Intake Manifold)	
			35	691605 Spring–Valve (Intake)		55	693904 Housing–Rewind Starter (Used After Code Date 99022800).	
			36	691605 Spring–Valve (Exhaust) (Used After Code Date 95041600).		55A	393576 Housing–Rewind Starter (Used Before Code Date 99030100).	
			36A	691597 Spring–Valve (Exhaust) (Used Before Code Date 95041700).		56A	295871 Pulley–Starter (Used Before Code Date 99030100).	
						57A	490179 Spring–Rewind Starter (Used Before Code Date 99030100).	
						58	693389 Rope–Starter (70" Long)	
						58A	66894 Rope–Starter (99" Long) (Cut to Required Length)	
						58B	692188 Rope–Starter (63" Long) (Cut to Required Length)	
						59	490653 Insert–Grip	

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Ø Included in Valve Gasket Set–Ref. No 1095.

192400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
60	490652	Grip–Starter Rope	84	691121	Plug–Breather (Square Head)			----- Note -----
63	690547	Spring–Ratchet (Used Before Code Date 99030100).	85	691076	Screw (Gear Case to Gear Reduction Case)			498838 Carburetor (LMT 119) (Used After Code Date 97052500 and Before Code Date 98032300). Used on Type No(s). 0505, 0515, 0523, 0525, 0535, 0541, 0547, 0549, 0565, 0570, 0616, 0622, 0623, 0625, 0626, 0636, 0643, 0645, 0654, 0656, 0667, 0668, 0669, 0670, 0671, 0672, 0673, 0691, 0694, 0702, 1005, 1011, 1015, 1023, 1025, 1035, 1041, 1047, 1049, 1065, 1070, 1100, 1102, 1115, 1116, 1122, 1125, 1126, 1127, 1128, 1131, 1132, 1136, 1143, 1159, 1161, 1167, 1168, 1189, 1191, 1193, 1194, 1196, 1197, 6167.
64	691920	Adapter–Ratchet Spring (Used Before Code Date 99030100).	86	690613	Cover–Gear			497581 Carburetor (LMT 171) (Used After Code Date 94083100 and Before Code Date 97052600).
65	690837	Screw (Rewind Starter) (Used After Code Date 99022800).	87	★391086	Seal–Gear Reduction			497038 Carburetor (LMT 103) (Used Before Code Date 94090100).
65A	690759	Screw (Rewind Starter) (Used Before Code Date 99030100).	88	691601	Gasket–Gear Reduction Cover			694285 Carburetor Used on Type No(s). 1203.
66	399671	Clutch–Starter (Used Before Code Date 99030100).	93	●690602	Bushing–Throttle Shaft			127 ●694524 Plug–Welch
67	394897	Clutch–Housing (Used Before Code Date 99030100).	94	494383	Kit–Idle Mixture			130 690468 Valve–Throttle
68	691604	Ball–Clutch (Used Before Code Date 99030100).	94B	498836	Kit–Idle Mixture			131 693602 Kit–Throttle Shaft (Used After Code Date 94083100).
70	691945	Ratchet–Clutch (Used Before Code Date 99030100).	95	●691636	Screw (Throttle Valve)			131C 497042 Kit–Throttle Shaft (Used Before Code Date 94090100).
71	691359	Cover–Ratchet (Used Before Code Date 99030100).	98	495800	Kit–Idle Speed (Carburetor)			133 494381 Float–Carburetor
		----- Note -----	98A	493280	Kit–Idle Speed (Control Bracket)			137 ●281165 Gasket–Float Bowl
		691945 Ratchet–Clutch Used on Type No(s). 1122, 1125.	104	●690525	Pin–Float Hinge			141 497043 Kit–Choke Shaft
73	691754	Screen–Rotating (Used After Code Date 99022800).	105	●691782	Valve–Float Needle			
74	691627	Screw (Rotating Screen)	106	●691780	Seat–Inlet			
		----- Note -----			----- Note -----			
		691692 Screw (Rotating Screen) Used on Type No(s). 0122, 0125, 0622, 0625, 1122, 1125.			690577 Seat–Inlet Used on Type No(s). 1203.			
75	690582	Washer (Flywheel)	108	692344	Valve–Choke			
78	690364	Screw (Flywheel Guard)	121A	497578	Kit–Carburetor Overhaul			
79	690614	Case–Gear Reduction	125	690119	Carburetor (LMT 204) (Used After Code Date 98032200). Used on Type No(s). 1005, 1008, 1011, 1015, 1023, 1025, 1035, 1041, 1047, 1049, 1063, 1065, 1070, 1100, 1102, 1115, 1116, 1122, 1125, 1126, 1127, 1128, 1129, 1131, 1132, 1136, 1137, 1143, 1144, 1145, 1147, 1148, 1159, 1161, 1167, 1168, 1173, 1175, 1186, 1189, 1191, 1193, 1194, 1195, 1196, 1197, 1198, 1200, 1204, 1205, 1206, 1209, 1211, 1212, 1213, 1216, 1218, 1219, 1220, 1221, 1222, 6167.			
80	691603	Gasket–Gear Case						
81	691729	Lock–Muffler Screw						
82	690287	Screw (Gear Reduction Case)						
83	690387	Shaft–Auxillary Drive						

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊗ Included in Valve Gasket Set–Ref. No 1095.

192400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
142A	693304	Nozzle–Carburetor (Standard) (Used On Carburetors 690119 & 694285) ----- Note ----- 691430 Nozzle– Carburetor (Standard) (Used On LMT 119) 690003 Nozzle– Carburetor (Standard) (Used On LMT 204) 499094 Nozzle– Carburetor (Standard) (Used On LMT 171) ● 497196 Nozzle– Carburetor (Standard) (LMT 103)	170	691695	Stud (Crankcase Cover/Sump) (Used in Position 1) Used on Type No(s). 0122, 0125, 0133, 0145, 0156, 0166, 0173, 0175, 0185, 0186, 0189, 0622, 0625, 0645, 0654, 0656, 1122, 1125, 1145, 1147, 1148, 1173, 1175, 1186, 1189, 1197, 1204, 1209, 1218, 1219.	209	691309	Spring–Governor (Blue) ----- Note ----- 692136 Spring– Governor (Yellow) Used on Type No(s). 0001, 0005, 0006, 0007, 0011, 0070, 0115, 0116, 0133, 0134, 0137, 0140, 0141, 0143, 0152, 0163, 0167, 0168, 0171, 0175, 0177, 0180, 0185, 0186, 0190, 0191, 0195, 0505, 0570, 0616, 0636, 0643, 0667, 0668, 0672, 0673, 0691, 0694, 1005, 1011, 1065, 1070, 1115, 1116, 1129, 1136, 1143, 1144, 1167, 1168, 1175, 1186, 1191, 1194, 1195, 1203, 1216, 1222.
143	693301	Nozzle–Carburetor (High Altitude) (Used On Carburetors 690119 & 694285) ----- Note ----- 497660 Nozzle– Carburetor (High Altitude) (Used on LMT 119) 690006 Nozzle– Carburetor (High Altitude) (Used on LMT 204) 499111 Nozzle– Carburetor (High Altitude) (Used on LMT 171) 497040 Nozzle– Carburetor (High Altitude) (Used on LMT 103)	182	495664	Bracket–Fuel Tank	209A	260723	Spring–Governor (Used Before Code Date 94090100).
144	697843	Pulley/Spring Assembly	182D	694592	Bracket–Fuel Tank (High Mount)	209C	263054	Spring–Governor (Used After Code Date 94083100 and Before Code Date 97042800).
146	690979	Key–Timing	182E	690486	Bracket–Fuel Tank (Low Mount) Used on Type No(s). 0100, 0102, 0103.	210	691370	Strainer–Fuel Used on Type No(s). 0115, 0116, 0190.
147	● 497472	Jet–Pilot (Used on LMT 103) ----- Note ----- 691258 Jet–Pilot (Used on LMT 119)	185	690958	Nut (Air Cleaner Base)	211	691307	Spring–Governed Idle
161C	498544	Base–Air Cleaner	186	691609	Connector–Hose (90 Degree)	212	691853	Link–Throttle (Linkage Lever to Throttle Shaft)
163	Ø★ 692277	Gasket–Air Cleaner	186A	691764	Connector–Hose (Straight)	212A	691854	Link–Throttle (Governor Control Lever to Throttle Shaft)
165	693148	Nut (Ring Gear)	186B	692317	Connector–Hose (90 Degree) (Carburetor)	212B	262970	Link–Throttle (Governor Control Lever To Linkage Lever)
			187	296004	Line–Fuel (Cut to Required Length)	215	691170	Guide–Air
			187A	497029	Line–Fuel (Molded)	219	496786	Gear–Governor
			188	691693	Screw (Control Bracket)	220	691724	Washer (Governor Gear)

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Ø Included in Valve Gasket Set–Ref. No 1095.

192400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
222	694182	Bracket-Control	300A	692025	Muffler	332	693899	Nut
222A	691480	Bracket-Control (Used After Code Date 97042700).	300B	691951	Muffler			(Flywheel)
		----- Note -----	300C	498984	Muffler			(Used After Code Date 99022800).
		499724 Bracket-Control	304	491596	Housing-Blower	333	398811	Armature-Magneto
		(Used Before Code Date 97042800).			----- Note -----	334	691061	Screw
222B	693606	Bracket-Control			491592 Housing-Blower			(Magneto Armature)
222C	691478	Bracket-Control (Used After Code Date 97042700).			Used on Type No(s).	337	802592	Plug-Spark
		----- Note -----			0001, 0006, 0025,	338	690270	Gasket-Dipstick
		499722 Bracket-Control			0041, 0115, 0131,	346	690661	Screw
		(Used Before Code Date 97042800).			0141, 0171, 0191,			(Spark Arrestor)
227	692143	Lever-Governor Control (Short Lever)			0525, 0541, 0670,	349	691105	Nut
227A	496253	Lever-Governor Control (Long Lever) (Used Before Code Date 94090100).			0673, 0691, 0694,			(Cylinder Head Cover)
					1025, 1041, 1115,	355	690310	Washer
					1129, 1131, 1137,			(Muffler Bracket)
					1144, 1191, 1194,	356	491391	Wire-Stop
					1203, 1212, 1218,			(Magneto Armature to Stop Switch)
					1221, 1222.	356A	691408	Wire-Stop
					496835 Housing-Blower			(Jumper Wire)
					Used on Type No(s).	356B	398838	Wire-Stop
					0125, 0161, 0625,			(Dual Stop)
					0654, 1125, 1148,	356C	692149	Wire-Stop
					1161.	356D	491927	Wire-Stop
					497172 Housing-Blower	356F	398808	Wire-Stop
232	691846	Spring-Governor Link			Used on Type No(s).			(Magneto Armature)
232A	691848	Spring-Governor Link			0122, 0156, 0622,	357	691483	Key-Drive Pulley
240	394358	Filter-Fuel			0656, 1122.	358	497070	Gasket Set-Engine
		----- Note -----	305	692198	Screw	359	691077	Washer
		298090 Filter-Fuel			(Blower Housing)			(Ground Terminal)
		Used on Type No(s).			Shield-Cylinder	360	691105	Nut
		0160, 0185, 1203.	306	496797	Shield-Cylinder			(Fuel Tank Bracket)
244	691075	Washer (Gear Reduction Case)	307	691003	Screw	361	691681	Screw
257	691660	Screw (Starter Clutch)			(Cylinder Shield)			(Starting Switch)
265	691024	Clamp-Casing	308A	691201	Cover-Cylinder Head	363	19203	Puller-Flywheel
267	690804	Screw (Casing Clamp)	309	693054	Motor-Starter	367	691058	Screw
268	691025	Casing-Control Wire (Cut to Required Length)	309B	498149	Motor-Starter			(Wire Clip)
269	691026	Wire-Control (Cut to Required Length)			Used on Type No(s).			(OIL GARD® Kit)
					0125, 0161, 0625,	373	691612	Nut
270	691027	Nut (Control Wire Casing)			0654, 1125, 1148,			(Ground Terminal)
271	691028	Lever-Control			1161.	383	89838	Wrench-Spark Plug
272	691168	Lock-Screw Head (Gear Reduction Case)	310	690323	Bolt (Starter Motor) (3 5/8" Housing Length)	385	691673	Screw
276 ♦	692255	Washer-Sealing						(Fuel Pump)
277	691075	Washer (Gear Case to Gear Reduction)				387	692026	Pump-Fuel
298	690453	Locknut-Muffler/Elbow				403	690288	Washer
300	497141	Muffler						(End Cap)
						404	691691	Washer
								(Governor Crank)
			311	497608	Brush Set	413	691029	Nut
			311A	395538	Brush Set (3 5/8" Housing Length)			(Starter Motor)
								(Terminal)
			317	692860	Cover-Starter	415	693463	Plug
			318	691617	Screw (Mounting Bracket)			Used on Type No(s).
								1015, 1025, 1196,
			324	695160	Screen/Cup Assembly			1197, 1200.
			325	691903	Pulley-Starter Rope	415A	690283	Plug
								(Square Head)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

192400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
425	691671	Screw (Air Cleaner Cover)	525B	691257	Tube–Dipstick	641A	690282	Washer (Starting Switch)
428	691612	Nut (OIL GARD® Kit)	526	690297	Screw (Regulator)	643	691926	Retainer–Air Filter
436	497140	Manifold–Exhaust	526A	690326	Screw (Regulator)	648	690661	Screw (Muffler Guard Bracket)
436A	690797	Manifold–Exhaust	544	692034	Armature–Starter	655	691734	Anchor–Rewind Spring
437	695974	Screw (Exhaust Manifold)	544A	390837	Armature–Starter (3 5/8" Housing Length)	661	690661	Screw (OIL GARD® Light Bracket)
437A	690810	Screw (Exhaust Manifold)	552	491986	Bushing–Governor Crank	668	690500	Spacer
441	690501	Bracket–Oil Fill	562	691119	Bolt (Governor Control Lever)	669	691228	Bracket–Muffler Guard
445	691643	Filter–Air Cleaner Cartridge	563	690859	Screw (Debris Screen Guard)	669A	692869	Bracket–Muffler Guard
449	691130	Screw (Oil Fill Bracket)	575	692303	Switch–Starting	674	691058	Screw (Fuel Tank Bracket)
456	692299	Plate–Pawl Friction (Used After Code Date 99022800).	577	690630	Cable–Starter	674A	690708	Screw (Fuel Tank Bracket)
459	281505	Pawl–Ratchet (Used After Code Date 99022800).	578	690647	Wire Assembly (Starter Switch to Ground Wire Terminal)	676	393757	Deflector–Muffler (Side Out) ----- Note ----- 393761 Deflector– Muffler (Side Out) Used on Type No(s). 0133, 0175, 1175.
464	691898	Seal–O Ring (Fuel Shut–Off Valve)	578A	692306	Wire Assembly (DC Only)	676A	395700	Deflector–Muffler (Direct Out)
474	696578	Alternator (DC Only)	579	691029	Nut (Starter Cable)	677	690661	Screw (Muffler Deflector)
474A	696459	Alternator (Dual Circuit)	579A	691626	Nut (Starter Cable)	678	490817	Spacer–Rewind
474B	696458	Alternator (10 Amp)	592	690800	Nut (Rewind Starter)	689	691855	Spring–Friction (Used After Code Date 99022800).
474C	696457	Alternator (Tri–Circuit)	597	691696	Screw (Pawl Friction Plate) (Used After Code Date 99022800).	695	693109	Screw (Ring Gear)
478	395410	Panel	601	95162	Clamp–Hose	697	691110	Screw (Drive Cap) (1 1/4" Long)
485	692295	Knob–Control	608	693900	Starter–Rewind (70" Long) (Used After Code Date 99022800).	697B	690372	Screw (Drive Cap) (1/2" Long)
489	691776	Screw (Linkage Lever)	608A	390391	Starter–Rewind (Used Before Code Date 99030100).	718	690959	Pin–Locating
493	691177	Bracket–Mounting (Regulator)	613	691351	Screw (Muffler)	725	690403	Shield–Heat Used on Type No(s). 1203.
493A	692825	Bracket–Mounting (Debris Screen Guard)	613A	691632	Screw (Muffler)	726	399676	Gear–Ring
501	691185	Regulator	614	691620	Pin–Cotter	727	395405	Cover–Starter Drive ----- Note ----- 497169 Cover–Starter Drive Used on Type No(s). 0125, 0161, 0625, 0654, 1125, 1148, 1161.
501A	691188	Regulator	616	691405	Crank–Governor			
503	691532	Strap–Starter	621	692310	Switch–Stop			
505	691251	Nut (Governor Control Lever)	624	691415	Lever–Linkage			
507	691972	Insulator	634	●690802	Spring/Seal Assembly			
510	497606	Drive–Starter	635	66538	Boot–Spark Plug			
510A	490768	Drive–Starter	636	696198	Nut (Starting Switch) (Terminal)			
510B	495878	Drive–Starter	641	691075	Washer (Starting Switch)			
513	692024	Clutch–Drive						
520	691084	Terminal–Ground						
523	691386	Dipstick						
523A	691942	Dipstick						
524	★281370	Seal–Dipstick Tube						
525	691389	Tube–Dipstick						
525A	91258	Tube–Dipstick						

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊗ Included in Valve Gasket Set–Ref. No 1095.

192400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
729A	690430	Clip–Wire (OIL GARD® Kit)	876	495877	Kit–Pinion Spring	983	398660	Light–Indicator
729C	691224	Clip–Wire (Starter Motor)	876A	495879	Kit–Pinion Spring Used on Type No(s). 0125, 0161.	984	692340	Bracket– OIL GARD® Light
732	691097	Screw (Starter Drive Cover)	877	393814	Wire/Connector– Alternator (DC Only)	986	271735	Filter–Debris Foam
740	691105	Nut (Muffler Bracket)	877A	393456	Wire/Connector– Alternator (Dual Circuit)	987	691326	Seal–Throttle Shaft
741	691288	Gear–Timing	877B	399916	Wire/Connector– Alternator (10 Amp)	989	690578	Stop Switch– Spark Plug
775	690315	Nut (Toggle Switch)	877C	393537	Wire/Connector– Alternator (Tri–Circuit)	994	399541	Arrestor–Spark
783	693059	Gear–Pinion	878A	691237	Harness–Alternator (Dual Circuit)	994A	392390	Arrestor–Spark
783B	692353	Gear–Pinion	878B	691955	Harness–Alternator (Tri–Circuit)	1019	491193	Kit–Label
789	398661	Harness–Wiring	883	697815	Gasket–Exhaust	1036	696768	Label–Emissions (Used After Code Date 01073000).
795	496590	Switch–Toggle	884	691956	Clamp–Muffler	----- Note -----		
797B	690958	Nut (Brush Retainer)	895	692309	Switch–Rotary	695696 Label– Emissions (Used After Code Date 000630000 and Before Code Date 01073100).		
801	691429	Cap–Drive	896A	691641	Pin–Drive Retainer	694988 Label– Emissions (Used After Code Date 99093000 and Before Code Date 00070100).		
801A	496825	Cap–Drive Used on Type No(s). 0125, 0161.	898	691077	Washer (OIL GARD® Kit)	694313 Label– Emissions (Used After Code Date 98123100 and Before Code Date 99100100).		
802	691286	Cap–End	918	497457	Hose–Vacuum (Molded)	499354 Label– Emissions (Used After Code Date 97052500 and Before Code Date 99010100).		
802A	395537	Cap–End (3 5/8” Housing Length)	930	691904	Guard–Rewind	499353 Label– Emissions (Used Before Code Date 97052600).		
803	693757	Housing–Starter	----- Note -----			1051	691265	Ring–Retaining
803B	398159	Housing–Starter (3 5/8” Housing Length)	692930 Guard– Rewind Used on Type No(s). 0122, 0125, 0622, 0625, 1122, 1125.			1054	280275	Tie–Cable
813	690635	Clamp	945	692132	Bracket–Starter Motor	1058	274786	Owner's Manual
819	690661	Screw (Muffler Bracket)	949	397530	Guard–Debris Screen	1059	698516	Kit–Screw/Washer
832	691447	Guard–Muffler	950	691657	Screw–Float Bowl	1075	691158	Pulley–Crankshaft
836	692198	Screw (Muffler Guard)	957	493988	Cap–Fuel Tank	1083A	690958	Nut (End Cap)
840	395408	Kit–Panel	958	698182	Valve–Fuel Shut Off	1090	691293	Retainer–Brush
842	691870	Seal–O Ring (Dipstick/Tube)	967	492889	Filter–Pre Cleaner	1091	691333	Cap–Limiter
843	691322	Sleeve–Lever	968	691925	Cover–Air Cleaner	1095	498534	Gasket Set–Valve
847	399901	Dipstick/Tube Assembly	971	691003	Screw (Air Cleaner Base to Carburetor)	1113A	691693	Screw (Panel)
847A	493955	Dipstick/Tube Assembly	972	691993	Tank–Fuel (4 Quart)	1119	691183	Screw (Alternator)
851	493880	Terminal–Spark Plug	975	495933	Bowl–Float			
863B	690454	Bracket–Muffler	977	497069	Gasket Set– Carburetor			
868	692036	Seal–Valve	978	273326	Gasket–OIL GARD®			
869	691703	Seat–Valve (Intake)	979	691382	Cover–OIL GARD®			
870	691844	Seat–Valve (Exhaust)	980	398182	Kit–OIL GARD®			
871	261961	Bushing–Valve Guide (Exhaust)	982	690351	Screw (OIL GARD® Cover)			
----- Note -----			982A	690350	Screw (OIL GARD® Kit)			
231218 Bushing– Valve Guide (Intake)								

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

192400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1142	690323	Screw (Starter Motor Bracket) (4 7/16" Long)	1200	691690	Stud (Fuel Tank Bracket)	1217	691075	Washer (Starting Switch)
1142A	692329	Screw (Starter Motor Bracket) (5" Long)	1210	498144	Pulley/Spring Assembly (Pulley) (Used After Code Date 00082000 and Before Code Date 01051100).	1225	691029	Nut (Starting Switch)
1147	690355	Nut (Control Bracket)				1235	691261	Washer (Spark Plug Stop Switch)
1158	695659	Screw (Carburetor Plug)	1211	498144	Pulley/Spring Assembly (Spring) (Used After Code Date 00082000 and Before Code Date 01051100).	1302	691113	Washer (Muffler Guard)
1177	691105	Nut (Muffler)						

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

⊘ Included in Valve Gasket Set—Ref. No 1095.