



Illustrated Parts List

Model Series

201400

TYPE NUMBERS
0015 through 0377.

TABLE OF CONTENTS

Air Cleaner	6
Alternator	10
Blower Housing/Shrouds	7
Camshaft	2
Carburetor #1	4
Carburetor #2	5
Controls	8
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	9
Exhaust System	6
Flywheel	7
Fuel Supply	9
Gear Reduction	9
Governor Spring	8
Ignition	10
Kit/Gasket Sets – Carburetor	5
Kit/Gasket Sets – Engine	2
Kit/Gasket Sets – Valve	2
Lubrication	2
Piston, Rings, Connecting Rod	2
Rewind Starter	7
Valves	3


PRINTED IN U.S.A.

BRIGGS & STRATTON



COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

201400


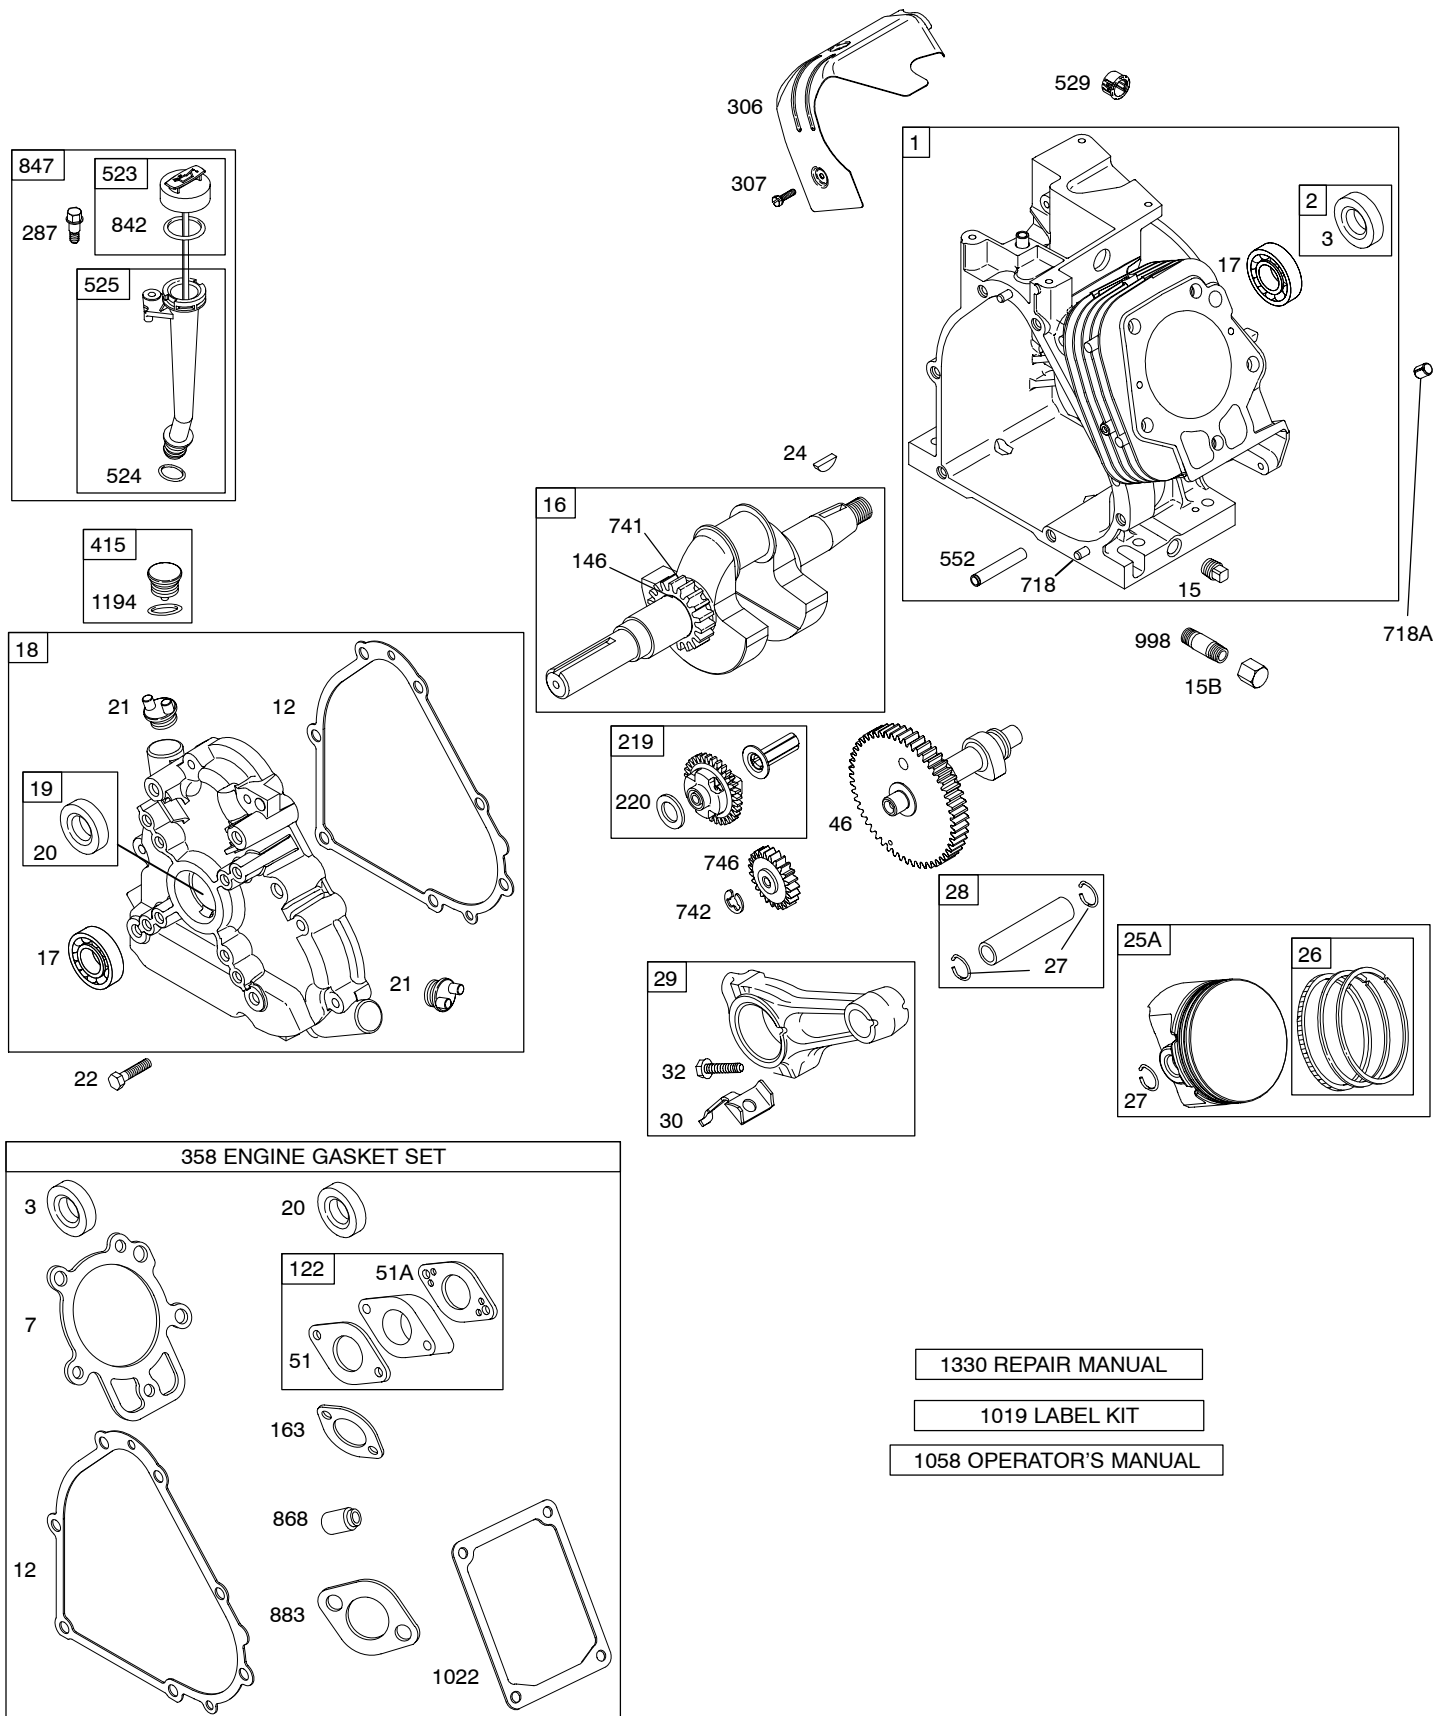


Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

5132-2

Assemblies include all parts shown in frames.

09/19/2005

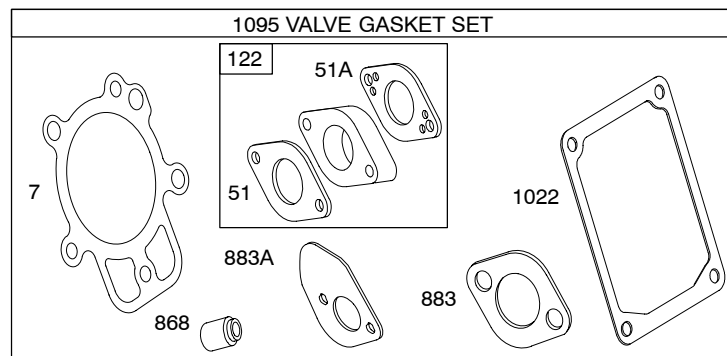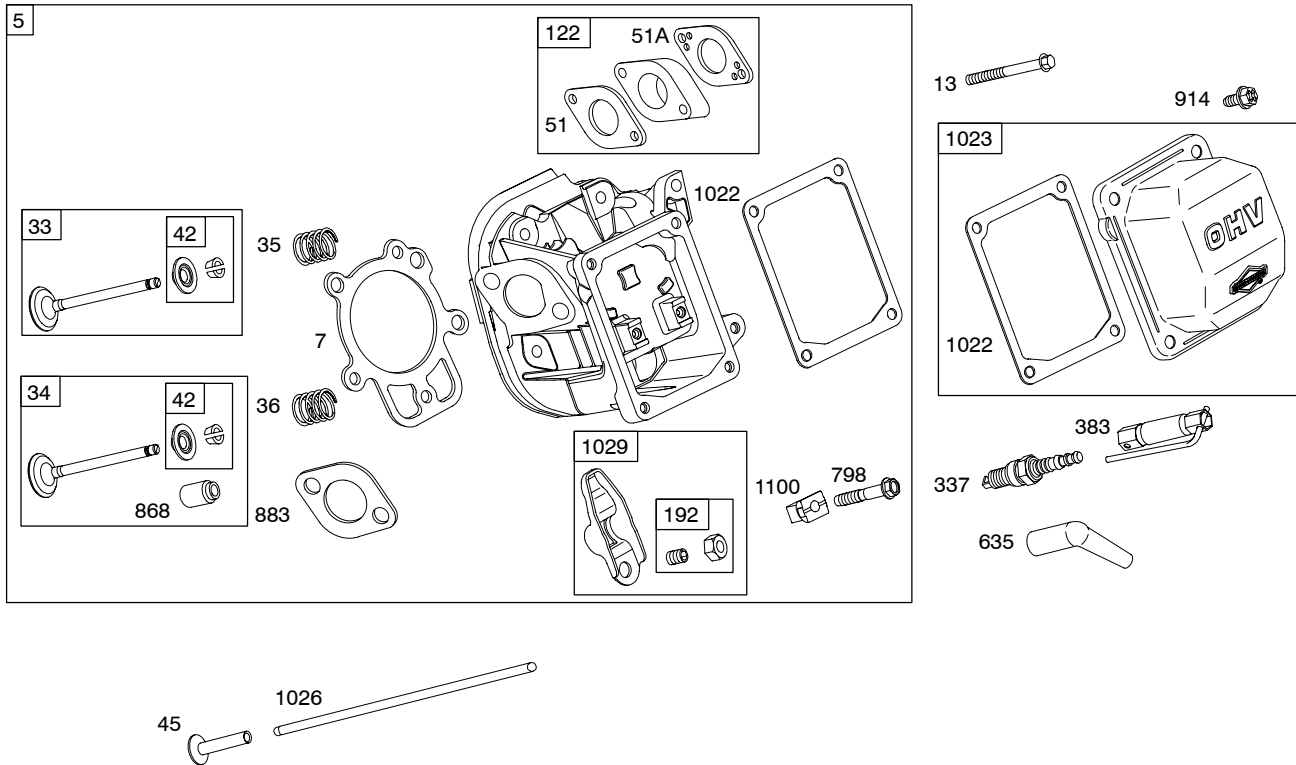




Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

5132-3

Assemblies include all parts shown in frames.

09/19/2005

201400





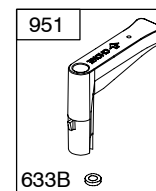
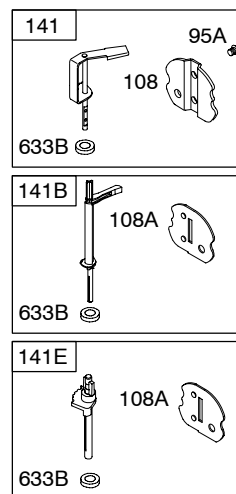
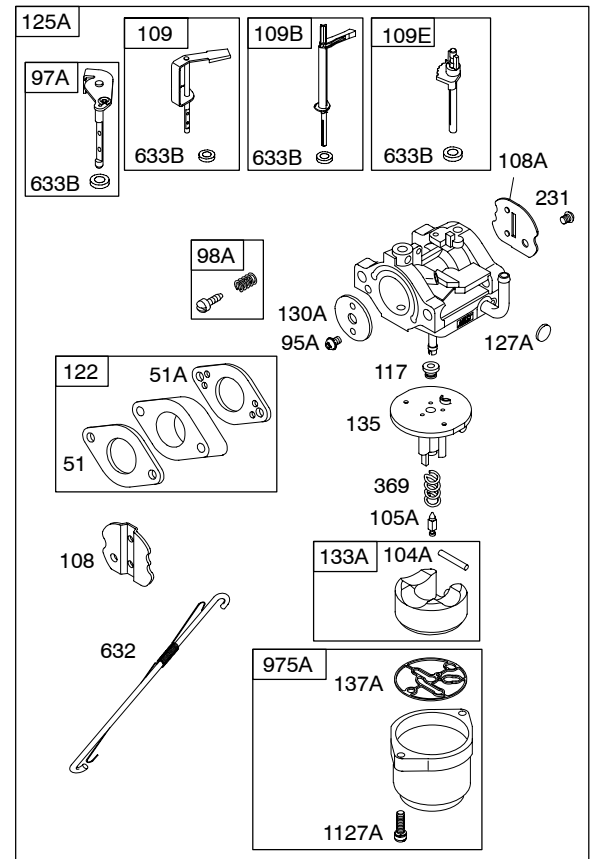


Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

5132-4

Assemblies include all parts shown in frames.

09/19/2005

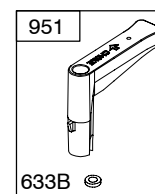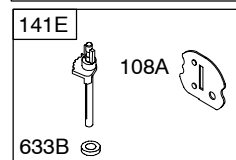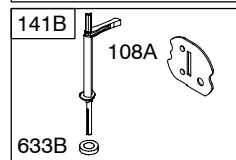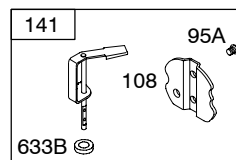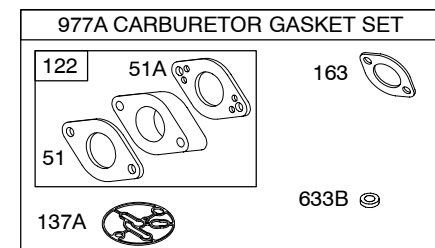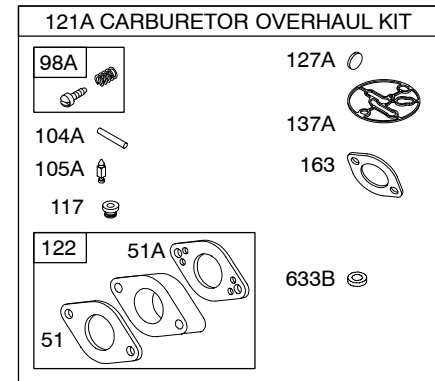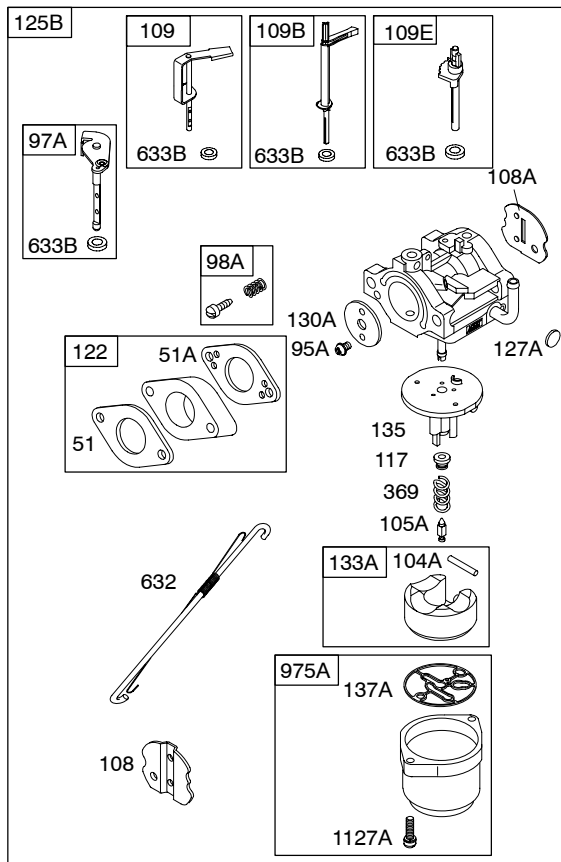


Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

5132-5

Assemblies include all parts shown in frames.

09/19/2005

201400

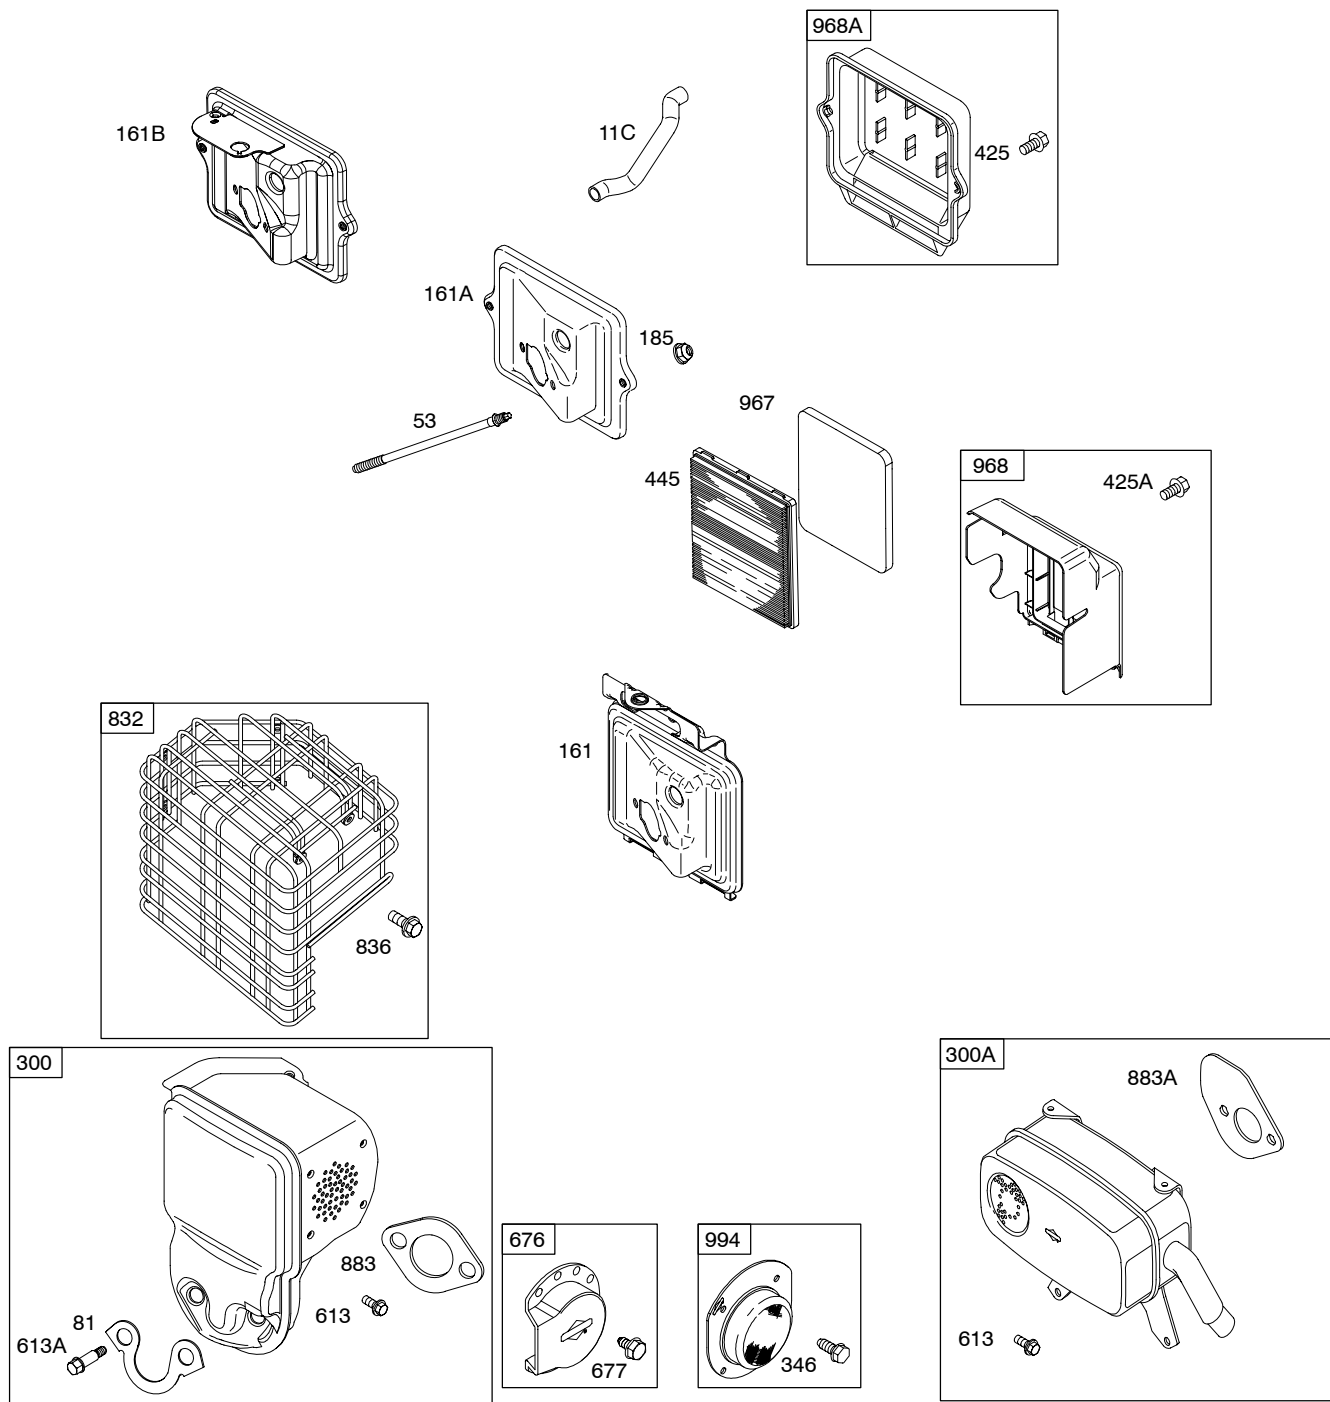


Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

5132-6

Assemblies include all parts shown in frames.

09/19/2005

1036 EMISSION LABEL

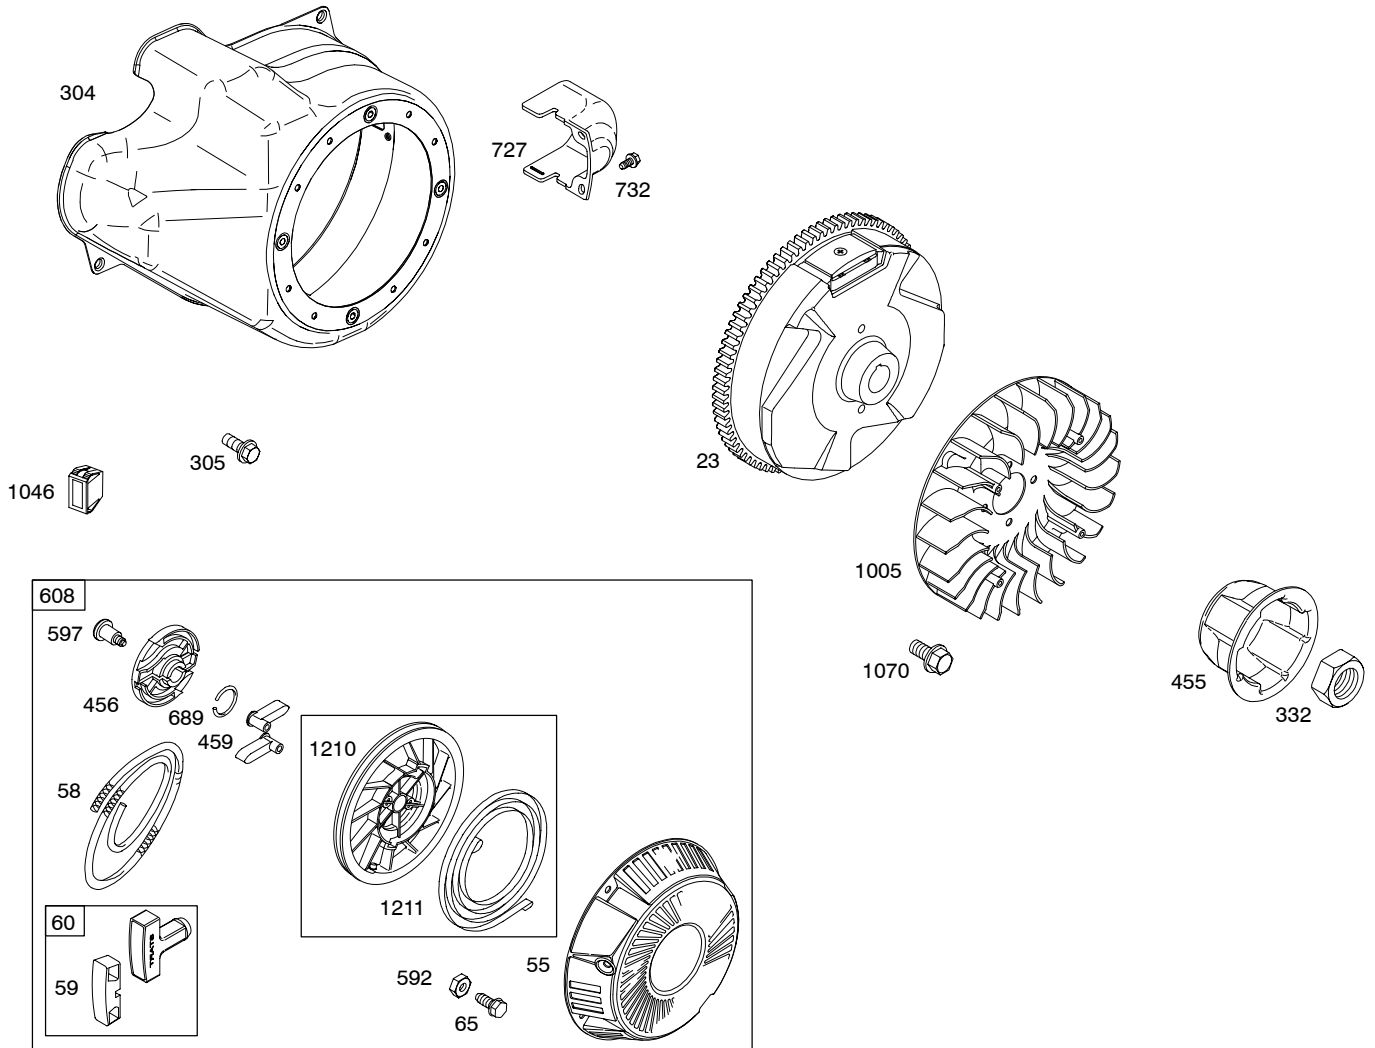


Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

5132-7

Assemblies include all parts shown in frames.

09/19/2005

201400

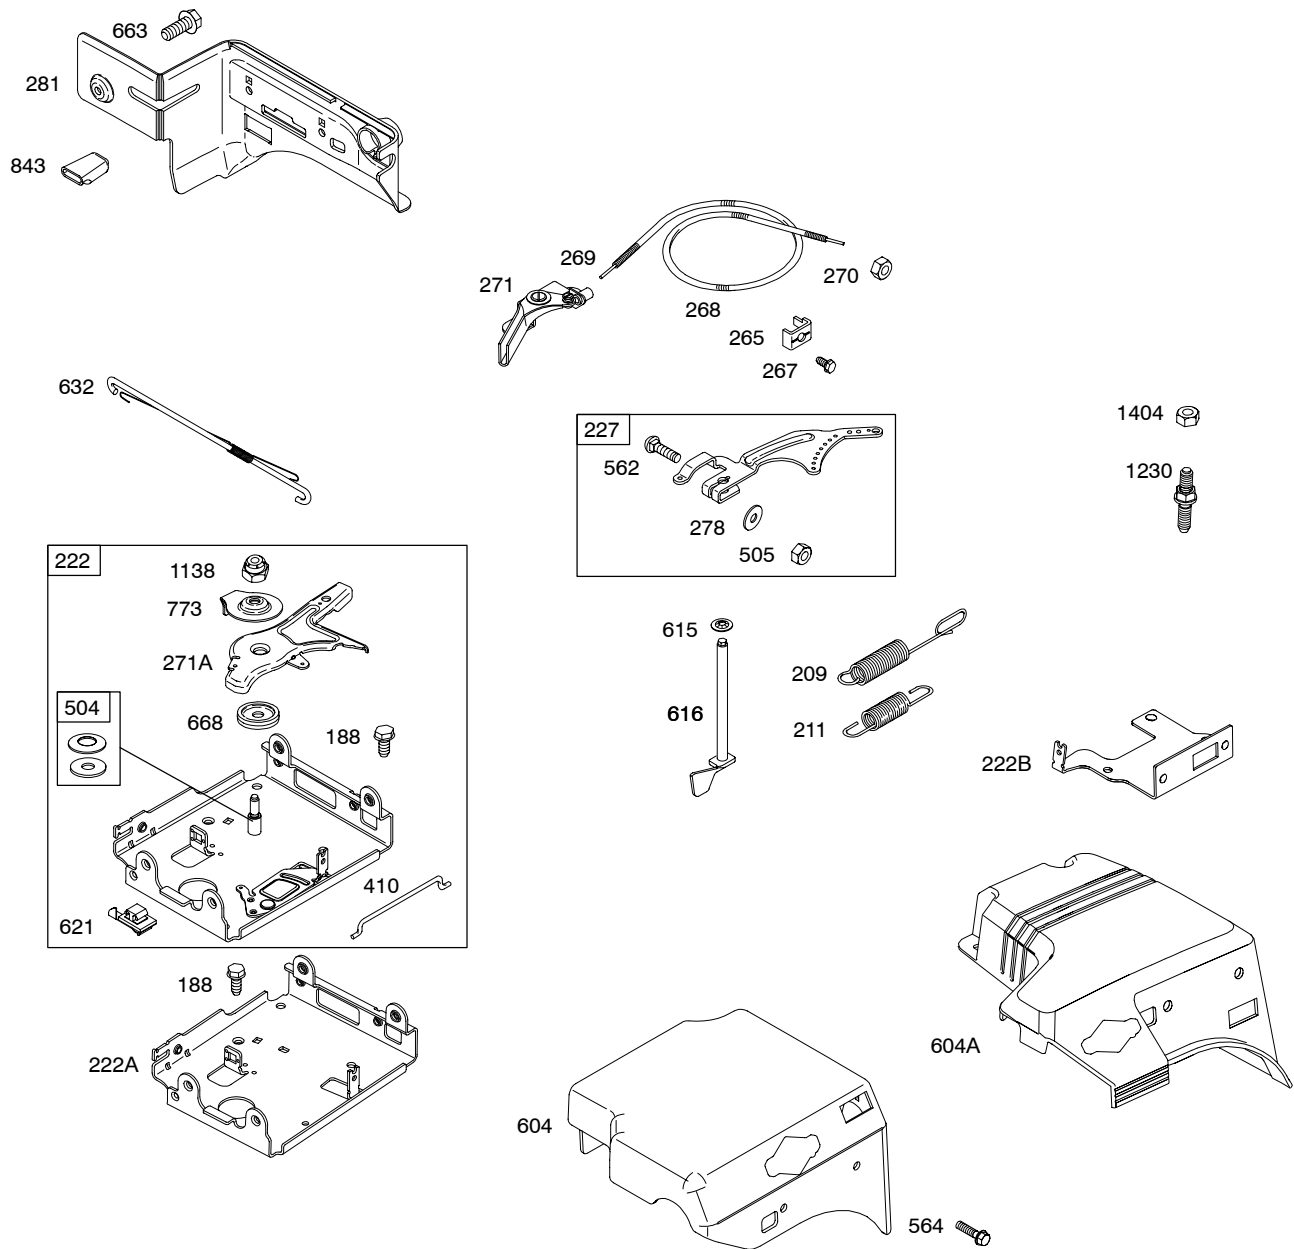


Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

5132-8

Assemblies include all parts shown in frames.

09/19/2005

201400

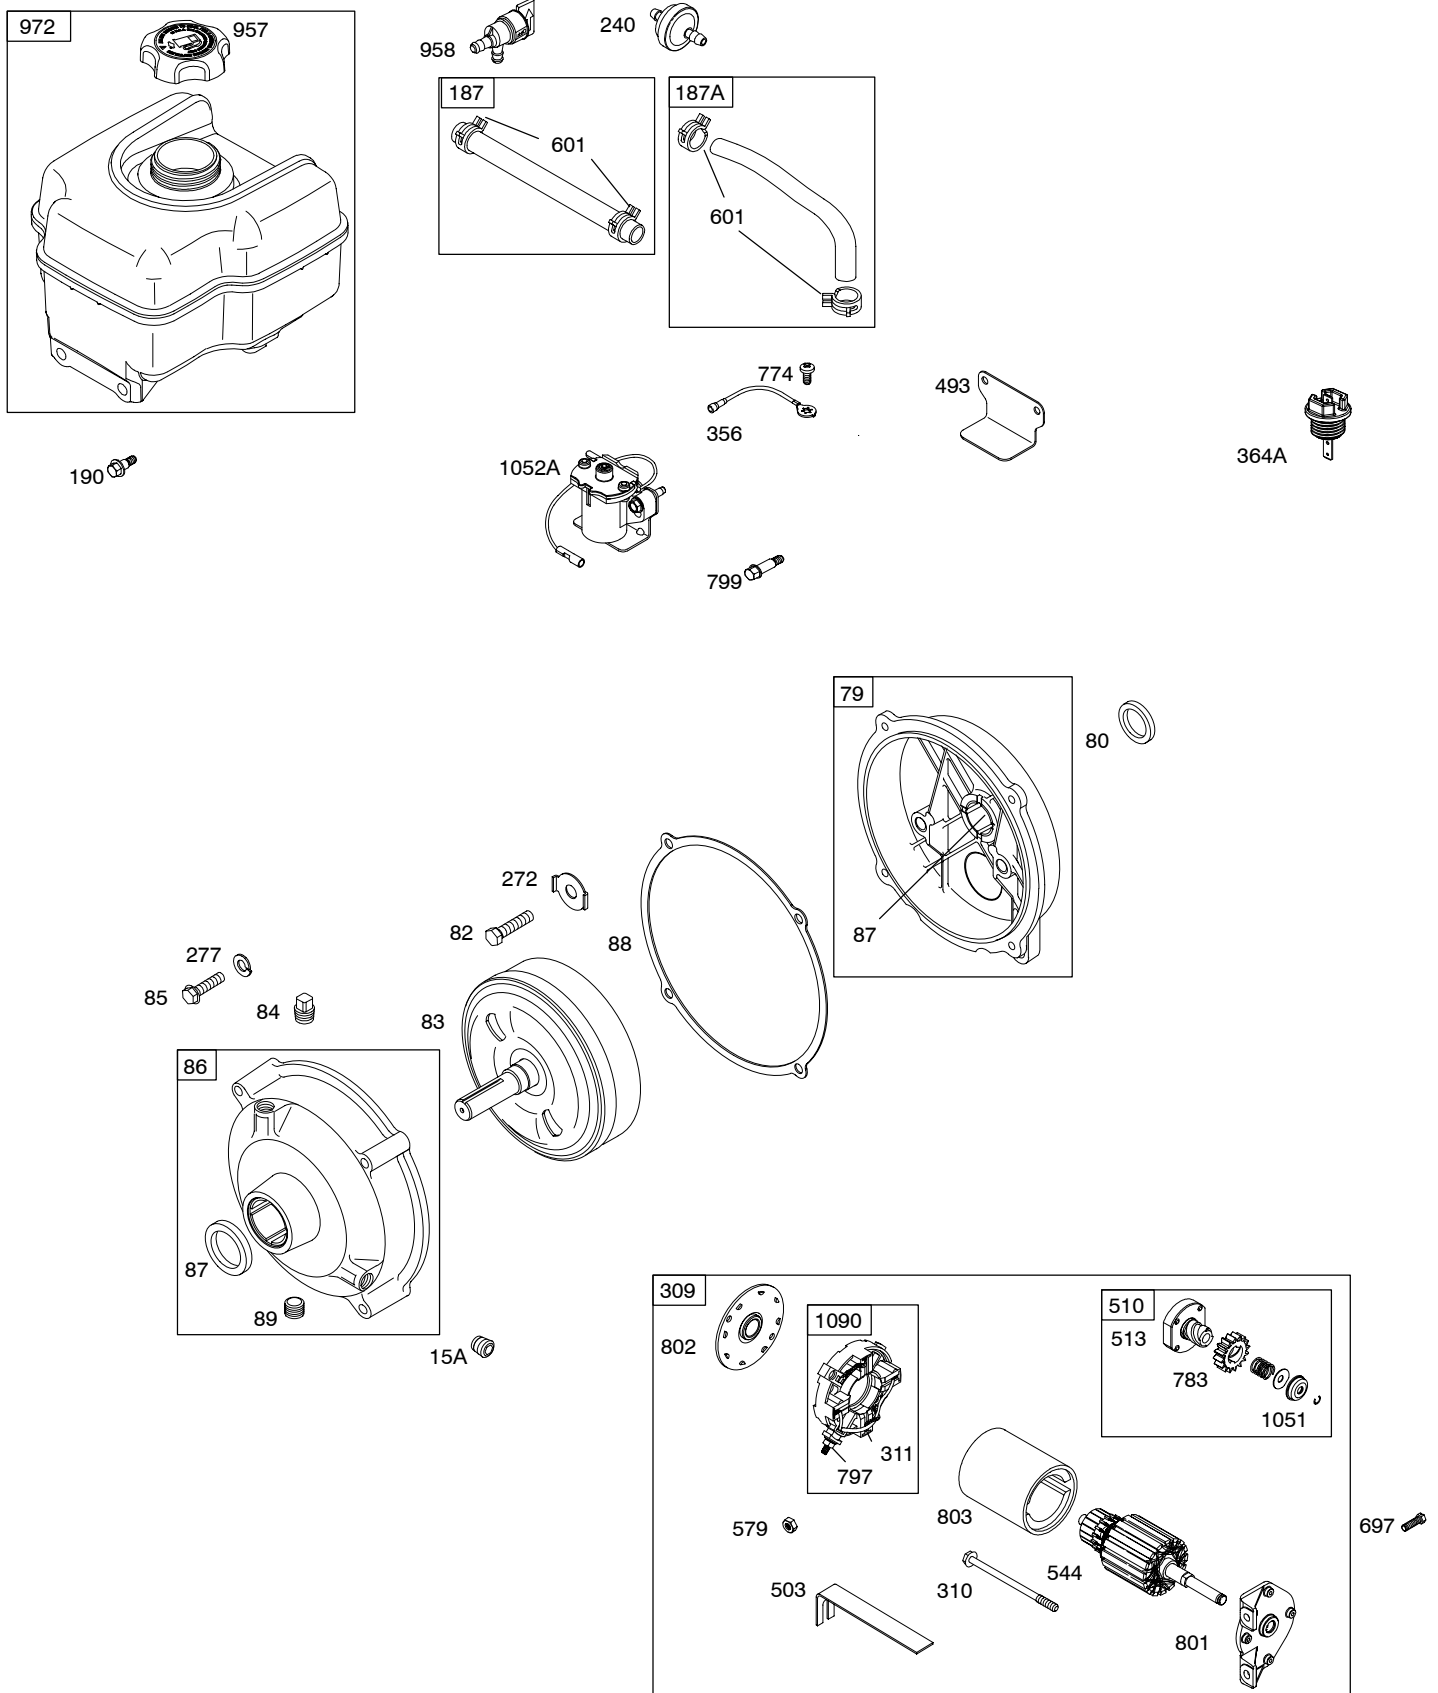



Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

5132-9

Assemblies include all parts shown in frames.

09/19/2005

201400

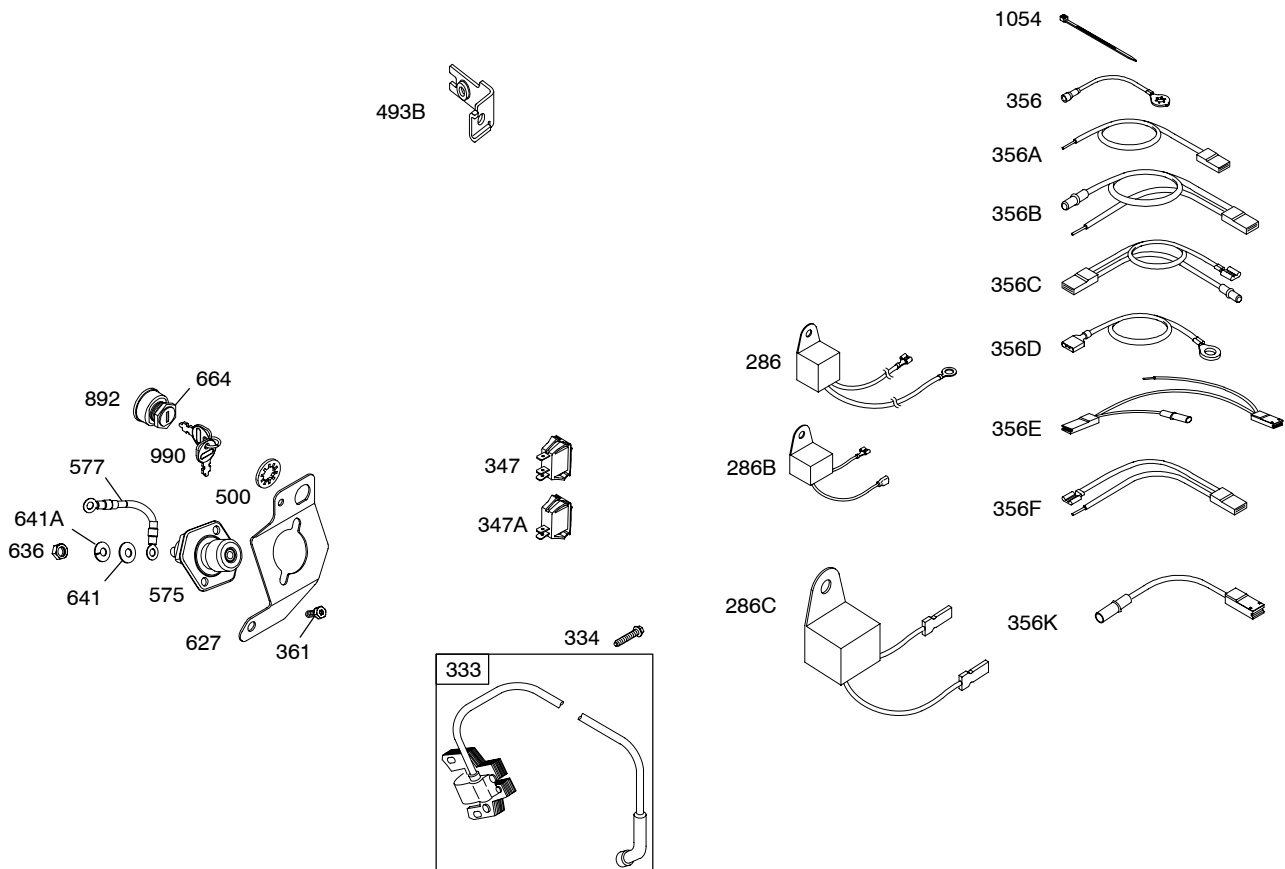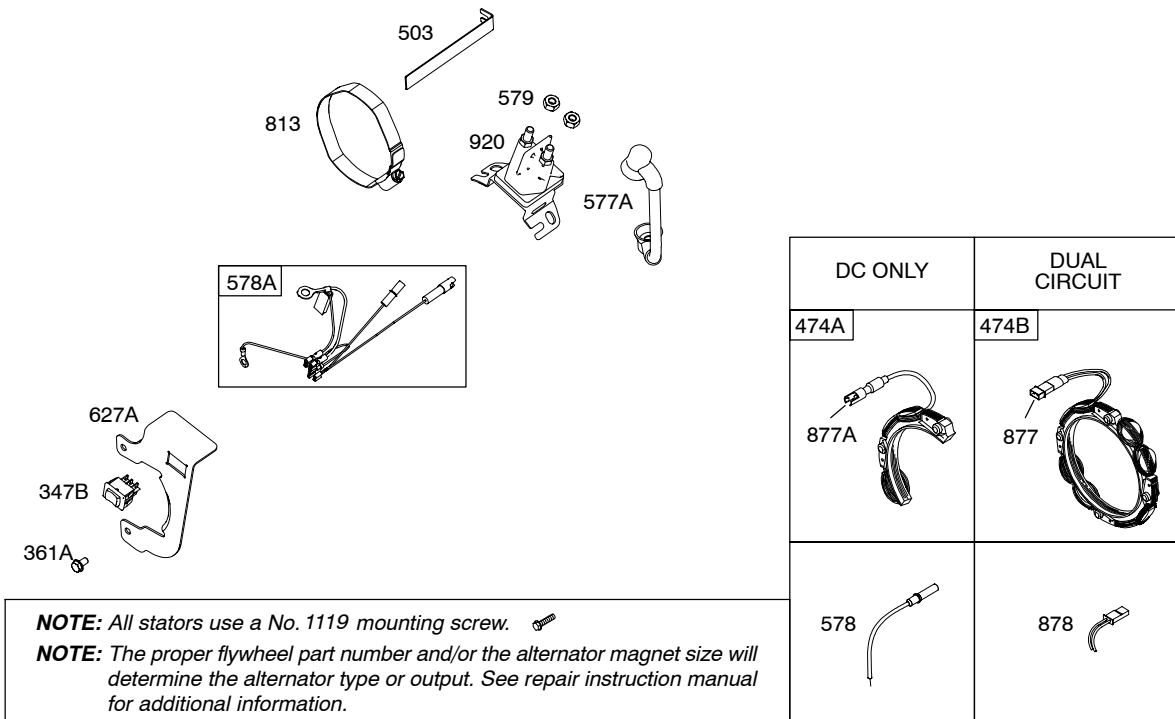

Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

5132-10

Assemblies include all parts shown in frames.

09/19/2005

201400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	695464	Cylinder Assembly	18	696914	Cover-Crankcase	26	694004	Ring Set (Standard)
2	698340	Kit-Bushing/Seal (Magnetos Side)			----- Note -----			----- Note -----
3	★391086	Seal-Oil (Magnetos Side)			695816 Cover- Crankcase (Gear Reduction)			694006 Ring Set (.010" Oversize)
5	697233	Head-Cylinder (Used After Code Date 01102800)			695372 Cover- Crankcase Used on Type No(s). 0035, 0036, 0063, 0118, 0141, 0142, 0145, 0376, 0377.			694008 Ring Set (.020" Oversize)
		----- Note -----						694010 Ring Set (.030" Oversize)
		698040 Head-Cylinder (Used Before Code Date 01102900)	19	698340	Kit-Bushing/Seal (PTO Side)	27	690975	Lock-Piston Pin
7	★△694872	Gasket-Cylinder Head	20	★391086	Seal-Oil (PTO Side)	28	696581	Pin-Piston
11C	696796	Tube-Breather Used on Type No(s). 0131, 0376, 0377, 0142, 0145, 0147.	21	281658	Cap-Oil Fill	29	694691	Rod-Connecting
12	★694953	Gasket-Crankcase	22	695174	Screw (Crankcase Cover/Sump)	30	694692	Dipper-Connecting Rod
13	690360	Screw (Cylinder Head)	23	694954	Flywheel	32	690976	Screw (Connecting Rod)
15	691686	Plug-Oil Drain			----- Note -----	33	499596	Valve-Exhaust
15A	691682	Plug-Oil Drain			695485 Flywheel Used on Type No(s). 0114, 0130, 0132, 0142, 0145, 0377.	34	697464	Valve-Intake
15B	695757	Plug-Oil Drain			790144 Flywheel Used on Type No(s). 0117.	35	694865	Spring-Valve (Intake)
16	695462	Crankshaft				36	694865	Spring-Valve (Exhaust)
		----- Note -----	24	222698	Key-Flywheel	42	499586	Keeper-Valve
		694678 Crankshaft Used on Type No(s). 0114, 0115, 0116, 0128, 0132.	25A	695457	Piston Assembly (Standard)	45	690977	Tappet-Valve
		695306 Crankshaft Used on Type No(s). 0138.			----- Note -----	46	790496	Camshaft
		695369 Crankshaft Used on Type No(s). 0139, 0141, 0148.			695458 Piston Assembly (.010" Oversize)	51★◆◆694874		Gasket-Intake
		695817 Crankshaft Used on Type No(s). 0049.			695459 Piston Assembly (.020" Oversize)	51A★△◆◆694875		Gasket-Intake
		695818 Crankshaft Used on Type No(s). 0035.			695460 Piston Assembly (.030" Oversize)	53	694869	Stud (Carburetor)
		696412 Crankshaft Used on Type No(s). 0063, 0118, 0376, 0377.				55	695288	Housing-Rewind Starter
17	695434	Bearing-Ball				58	693389	Rope-Starter (Cut To Required Length)
						59	805957	Insert-Grip
						60	490652	Grip-Starter Rope

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5132-11

Assemblies include all parts shown in frames.

09/19/2005

201400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
65	690837	Screw (Rewind Starter) ----- Note ----- 690759 Screw (Rewind Starter) Used on Type No(s). 0016, 0114, 0117, 0144, 0145, 0377.	122 Δ ♦ ♦ 694876	Spacer-Carburetor	187	791766	Line-Fuel (Cut To Required Length) (Used After Code Date 05063000) ----- Note ----- 691050 Line-Fuel (Cut To Required Length) (Used Before Code Date 05070100)	
79	690614	Case-Gear Reduction	125A	696132	Carburetor ----- Note ----- 698456 Carburetor (Used After Code Date 03062900). Used on Type No(s). 0114, 0131, 0142.	187A	791869	Line-Fuel (Used After Code Date 05063000) ----- Note ----- 695429 Line-Fuel (Used Before Code Date 05070100)
80	691603	Gasket-Gear Case			697351 Carburetor (Used Before Code Date 03063000) Used on Type No(s). 0114, 0131, 0142.			
81	695400	Lock-Muffler Screw			699966 Carburetor (Used After Code Date 03020900). Used on Type No(s). 0145.			
82	690287	Screw (Gear Reduction Case)						
83	690387	Shaft-Auxiliary Drive						
84	691121	Plug-Breather						
85	691076	Screw (Gear Cover to Gear Reduction Case)						
86	690613	Cover-Gear	127A	♦ 690727	Plug-Welch	188	690877	Screw (Control Bracket)
87	391086	Seal-Gear Reduction	130A	696139	Valve-Throttle	190	692127	Screw (Fuel Tank)
88	691601	Gasket-Gear Reduction Cover	133A	694914	Float-Carburetor	192	690083	Adjuster-Rocker Arm
89	690283	Plug-Oil	135	696142	Tube-Fuel Transfer	209	694867	Spring-Governor
95A	690718	Screw (Throttle Valve)	137A	♦ ♦ 695426	Gasket-Float Bowl	211	695307	Spring-Governed Idle
97A	696140	Shaft-Throttle ----- Note ----- 696387 Shaft-Throttle Used on Type No(s). 0145.	141	693628	Kit-Choke Shaft	219	693578	Gear-Governor
			141B	696145	Kit-Choke Shaft	220	691724	Washer (Governor Gear)
			141E	699979	Kit-Choke Shaft	222	695380	Bracket-Control
			146	690979	Key-Timing	222A	694866	Bracket-Control Used on Type No(s). 0114, 0115, 0116, 0128, 0131, 0132, 0138, 0140.
			161	695384	Base-Air Cleaner (Metal)	222B	791753	Bracket-Control
98A	♦ 695408	Kit-Idle Speed	161A	694870	Base-Air Cleaner (Used Before Code Date 04020500) Used on Type No(s). 0114, 0131, 0142, 0145.	227	694864	Lever-Governor Control
104A	♦ 694918	Pin-Float Hinge				231	691636	Screw (Choke Valve) ----- Note ----- 690718 Screw (Choke Valve)
105A	♦ 696136	Valve-Float Needle				240	394358	Filter-Fuel Used on Type No(s). 0114, 0142, 0145.
108	696143	Valve-Choke						
108A	696209	Valve-Choke						
109	790071	Shaft-Choke	161B	699960	Base-Air Cleaner (Metal) (Used After Code Date 04020500). Used on Type No(s). 0114, 0131, 0142, 0145.			
109B	696145	Shaft-Choke						
109E	696735	Shaft-Choke						
117	♦ 696134	Jet-Main (Standard)	163 ♦ ♦ ♦ 692277	Gasket-Air Cleaner				
118	696135	Jet-Main (High Altitude)	185	690958	Nut (Air Cleaner Base)			
121A	696146	Kit-Carburetor Overhaul (Use With Nikki Carburetor)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

201400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
265	691024	Clamp-Casing ----- Note ----- 692179 Clamp-Casing Used on Type No(s). 0145.	287	691693	Screw (Dipstick Tube)	346	690367	Screw (Spark Arrestor)
267	692577	Screw (Casing Clamp)	300	697252	Muffler (Used After Code Date 02012000)	347	698338	Switch-Rocker Used on Type No(s). 0111, 0117, 0139.
268	691025	Casing-Control Wire (Cut To Required Length)			----- Note ----- 695311 Muffler (Used Before Code Date 02012100)	347A	697854	Switch-Rocker Used on Type No(s). 0115, 0116, 0128, 0132, 0141.
269	691026	Wire-Control (Cut To Required Length)			698101 Muffler Used on Type No(s). 0140.	347B	790949	Switch-Rocker
270	691027	Nut (Control Wire Casing)	300A	790018	Muffler Used on Type No(s). 0131.	356	692603	Wire-Stop
271	691028	Lever-Control				356A	692390	Wire-Stop
271A	695381	Lever-Control	304	791479	Housing-Blower (Used After Code Date 01102800)	356B	695815	Wire-Stop
272	691168	Lock-Screw Head			----- Note ----- 699019 Housing- Blower (Used Before Code Date 01102900)	356C	695295	Wire-Stop Used on Type No(s). 0130.
277	691075	Washer (Gear Case To Gear Reduction)				356D	699994	Wire-Stop (Used After Code Date 03072500) Used on Type No(s). 0115, 0116, 0128, 0131, 0132, 0140, 0141.
278	691075	Washer (Gear Case To Gear Reduction)	305	691108	Screw (Blower Housing)			----- Note ----- 695366 Wire-Stop (Used Before Code Date 03072400) Used on Type No(s). 0115, 0116, 0128, 0131, 0132, 0138, 0140, 0141.
281	697268	Panel-Control (Used After Code Date 01102800) ----- Note ----- 695294 Panel-Control (Used Before Code Date 01102900)	306	697240	Shield-Cylinder (Used After Code Date 01102800) ----- Note ----- 696698 Shield- Cylinder (Used Before Code Date 01102900)			695366 Wire-Stop (Used After Code Date 03082800) Used on Type No(s). 0114.
286	695186	Module-Oil Sensor (Rewind Starter) (Used Before Code Date 03010600) Used on Type No(s). 0115, 0116, 0128, 0131, 0138, 0140.	307	691660	Screw (Cylinder Shield)	356E	696328	Wire-Stop ----- Note ----- 694340 Wire-Stop Used on Type No(s). 0376, 0348, 0377.
286B	699952	Module-Oil Sensor Used on Type No(s). 0114. ----- Note ----- 696058 Module-Oil Sensor (Electric Start) (Used Before Code Date 03010600) Used on Type No(s). 0132.	309	695479	Motor-Starter	356F	697336	Wire-Stop (Used Before Code Date 03082700) Used on Type No(s). 0114.
			310	690323	Screw (Starter Motor)	356K	694372	Wire-Stop Used on Type No(s). 0142, 0145.
			311	497608	Brush Set Used on Type No(s). 0116, 0122, 0128.	358	695438	Gasket Set-Engine
			332	694685	Nut (Flywheel)	361	691681	Screw (Starting Switch)
			333	715231	Armature-Magneto	361A	690297	Screw (Starting Switch)
			334	691061	Screw (Magneto Armature)			
			337	491055	Plug-Spark ----- Note ----- 691043 Plug-Spark Used on Type No(s). 0116, 0128, 0138, 0141.			
286C	699951	Module-Oil Sensor (Used After Code Date 03010500) Used on Type No(s). 0115, 0116, 0128, 0131, 0132, 0138, 0140, 0141.						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5132-13

Assemblies include all parts shown in frames.

09/19/2005

201400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
364A	699947	Terminal–Oil Plug (Run Sense) Used on Type No(s). 0114, 0115, 0116, 0128, 0131, 0132, 0138, 0140, 0141.	562	691119	Bolt (Governor Control Lever)	633B ♦♦690998		Seal–Choke/Throttle Shaft
369	695422	Spring–Float Bowl	564	692198	Screw (Control Cover)	635	710901	Boot–Spark Plug
383	19374	Wrench–Spark Plug	575	692303	Switch–Starting	636	696198	Nut (Starting Switch) (Used On The Terminals)
410	695382	Link–Control	577	690630	Cable–Starter	641	691075	Washer (Starting Switch)
415	691363	Plug	577A	690795	Cable–Starter	641A	690282	Washer (Starting Switch)
425	694515	Screw (Air Cleaner Cover)	578	691237	Wire Assembly Used on Type No(s). 0130, 0142, 0145.	654	690958	Nut (Carburetor)
425A	790043	Screw (Air Cleaner Cover)	578A	790948	Wire Assembly	663	692577	Screw (Control Panel)
445	491588	Filter–Air Cleaner Cartridge	579	691029	Nut (Starter Cable)	----- Note -----		
455	694683	Cup–Flywheel	592	690800	Nut (Rewind Starter)			690372 Screw (Control Panel)
456	692299	Plate–Pawl Friction	597	691696	Screw (Pawl Friction Plate)	664	691087	Nut (Key Switch)
459	281505	Pawl–Ratchet	601	95162	Clamp–Hose	668	694257	Spacer (Control Bracket)
474A	695730	Alternator Used on Type No(s). 0114, 0132.	604	697326	Cover–Control Used on Type No(s). 0114.	676	393761	Deflector–Muffler Used on Type No(s). 0122, 0130, 0132, 0139, 0140, 0141, 0142.
474B	696742	Alternator Used on Type No(s). 0130, 0142, 0145.	----- Note -----			689	691855	Spring–Friction
493	694861	Bracket–Mounting	604A	791752	Cover–Control	697	690372	Screw (Drive Cap)
493B	699973	Bracket–Mounting Used on Type No(s). 0145.	608	695287	Starter–Rewind	718	690959	Pin–Locating (Cylinder)
500	691086	Washer (Key Switch)	613	695312	Screw (Muffler)	718A	695178	Pin–Locating (Head)
503	691532	Strap–Starter	613A	695399	Screw (Muffler)	727	697465	Cover–Starter Drive Used on Type No(s). 0114, 0117, 0130, 0142, 0145, 0377.
504	695383	Washer Set–Friction	615	694676	Retainer–Governor Shaft	732	691097	Screw (Starter Drive Cover)
505	691251	Nut (Governor Control Lever)	616	694675	Crank–Governor	741	691288	Gear–Timing
510	693699	Drive–Starter	621	692310	Switch–Stop	742	692564	Retainer–E Ring
513	692024	Clutch–Drive	627	696064	Bracket–Stopswitch	746	694679	Gear–Idler
523	695344	Dipstick	627A	790952	Bracket–Stopswitch	773	694258	Retainer
524	691876	Seal–Dipstick Tube	632	695917	Link–Throttle			
525	695343	Tube–Dipstick	----- Note -----					
529	791822	Grommet			696059 Link– Throttle (Used Before Code Date 02090400).			
544	692034	Armature–Starter			Used on Type No(s). 0145.			
552	694674	Bushing–Governor Crank						

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

♦ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5132–14

Assemblies include all parts shown in frames.

09/19/2005

201400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
774	695447	Screw (Stop Wire)	892	392833	Switch–Key	1036		Label–Emissions (Available from an Authorized Briggs & Stratton Service Dealer)
783	693713	Gear–Pinion	914	693732	Screw (Rocker Cover)	1046	691337	Plug–Blower Housing Used on Type No(s). 0114, 0145.
797	693167	Nut (Brush Retainer)	920	790951	Solenoid–Starter	1051	691265	Ring–Retaining
798	697890	Screw (Rocker Arm)	951	699961	Lever–Choke	1052A	790274	Sensor–Oil
799	695446	Screw (Oil Sensor)	957	694261	Cap–Fuel Tank (Plastic)	1054	280275	Tie–Cable
	----- Note -----		958	698180	Valve–Fuel Shut Off (Plastic)	1058	276355	Manual–Operator's
	690297	Screw (Oil Sensor)	967	491435	Filter–Pre Cleaner Used on Type No(s). 0114, 0115, 0128, 0132, 0138, 0139, 0140, 0141, 0144, 0147, 0376, 0377.	1070	691058	Screw (Flywheel Fan)
801	694482	Cap–Drive	968	697061	Cover–Air Cleaner	1090	691293	Retainer–Brush
802	691286	Cap–End	968A	692321	Cover–Air Cleaner Used on Type No(s). 0114, 0131, 0142, 0145.	1095	695440	Gasket Set–Valve
803	693757	Housing–Starter	968B	695301	Cover–Air Cleaner Used on Type No(s). 0100.	1100	690973	Pivot–Rocker Arm
813	690635	Clamp	971	695181	Screw (Air Cleaner Base to Carburetor) Used on Type No(s). 0100.	1119	691183	Screw (Alternator) Used on Type No(s). 0114, 0132, 0145.
832	695386	Guard–Muffler	972	694260	Tank–Fuel (Plastic)	1127A	695407	Screw (Float Bowl)
836	690367	Screw (Muffler Guard)	975A	696138	Bowl–Float	1138	694255	Nut (Control Bracket)
842	691031	Seal–O Ring (Dipstick Tube)	977A	696147	Gasket Set–Carburetor	1194	691876	Seal–O Ring (Plug)
843	695588	Sleeve–Lever	990	691959	Key Set Used on Type No(s). 0114.	1210	498144	Pulley/Spring Assembly (Pulley)
847	695342	Dipstick/Tube Assembly	994	392390	Arrestor–Spark Used on Type No(s). 0138, 0140, 0141.	1211	498144	Pulley/Spring Assembly (Spring)
868	★△690968	Seal–Valve	998	696683	Pipe–Oil	1230	791754	Stud (Control Bracket)
877	393456	Wire/Connector– Alternator	1005	694684	Fan–Flywheel	1330	272147	Repair Manual
877A	394251	Wire/Connector– Alternator	1019	695442	Kit–Label	1404	696757	Nut (Control Cover)
878	691237	Harness–Alternator Used on Type No(s). 0130, 0142, 0145.	1022	★△690971	Gasket–Rocker Cover			
883	★△695398	Gasket–Exhaust (Used Before Code Date 02012000) Used on Type No(s). 0131.	1023	697691	Cover–Rocker			
883A	697255	Gasket–Exhaust (Used After Code Date 02011900) Used on Type No(s). 0131.	1026	695177	Rod–Push			
			1029	690972	Arm–Rocker			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5132–15

Assemblies include all parts shown in frames.

09/19/2005