



20E300

Illustrated Parts List

Model Series

20E300

TYPE NUMBERS
0110.

TABLE OF CONTENTS

Air Cleaner	5
Alternator	8
Blower Housing/Shrouds	6
Camshaft	2
Carburetor	4
Controls	7
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	8
Exhaust System	5
Flywheel	6
Fuel Supply	8
Governor Spring	7
Ignition	8
Kit/Gasket Sets – Carburetor	4
Kit/Gasket Sets – Engine	2
Kit/Gasket Sets – Valves	3
Lubrication	2
Piston, Rings, Connecting Rod	2
Rewind Starter	6
Valves	3

 
BRIGGS & STRATTON



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

20E300

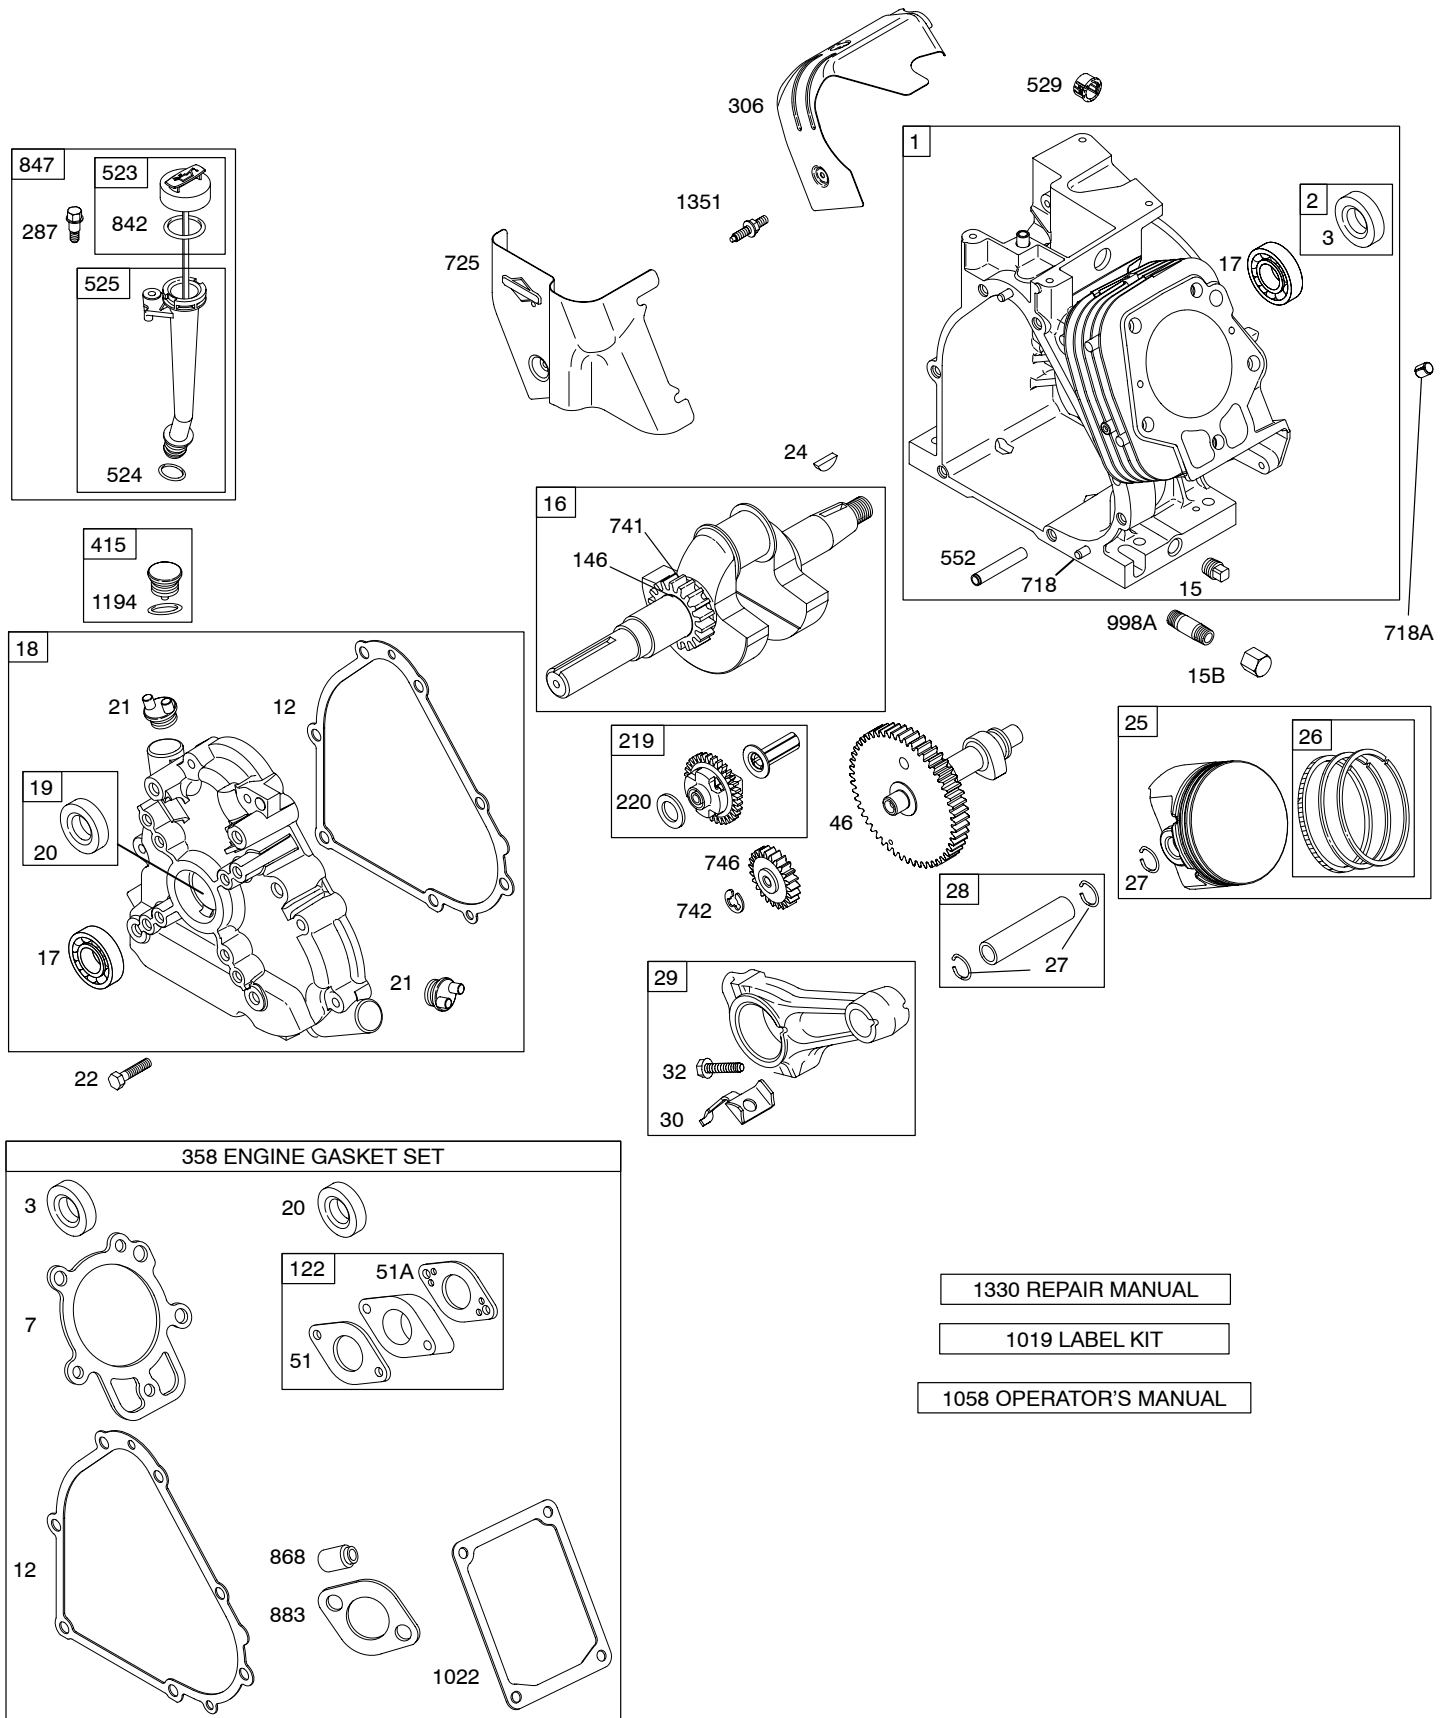

1330 REPAIR MANUAL

1019 LABEL KIT


1058 OPERATOR'S MANUAL

Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

3461-2

Assemblies include all parts shown in frames.

 09/30/2005

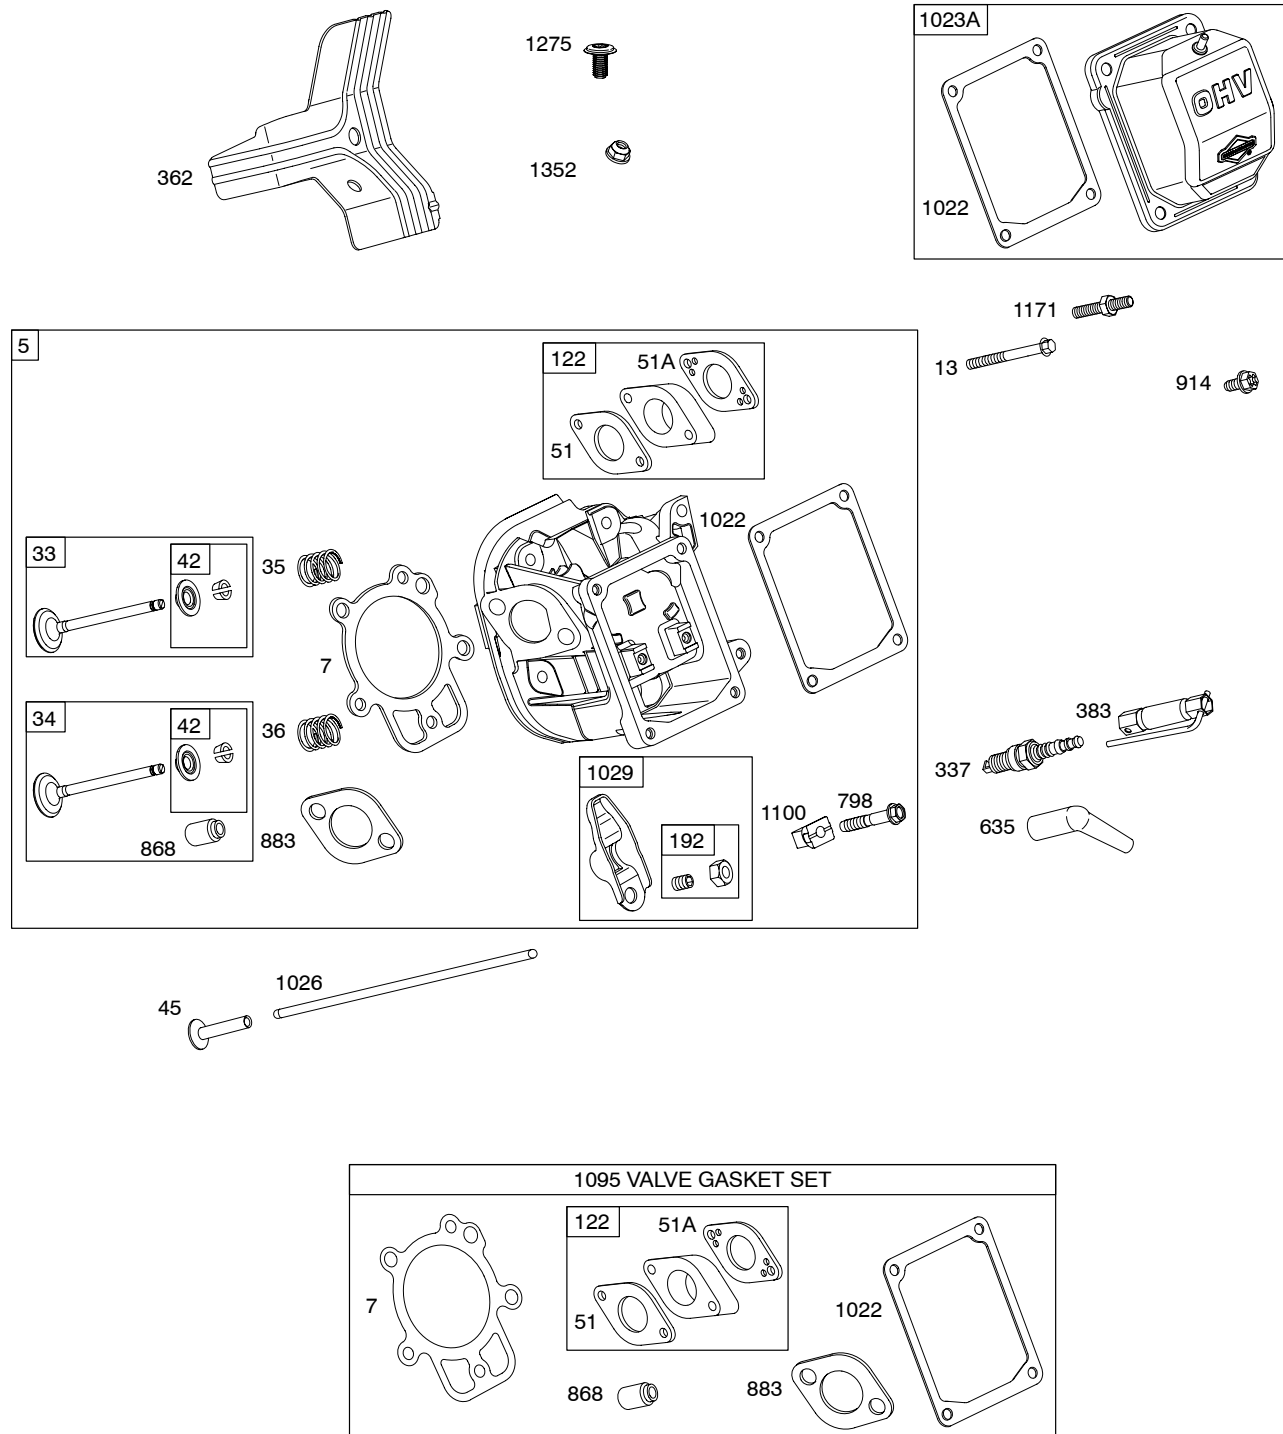




Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

3461-3

Assemblies include all parts shown in frames.

09/30/2005

   20E300


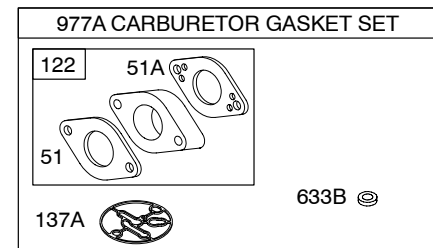
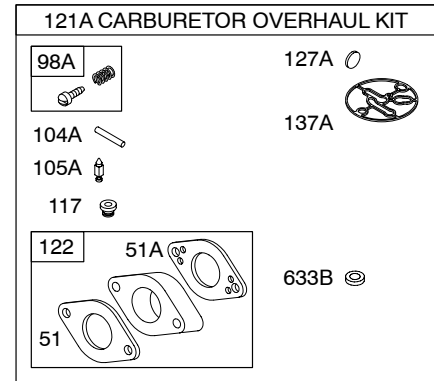
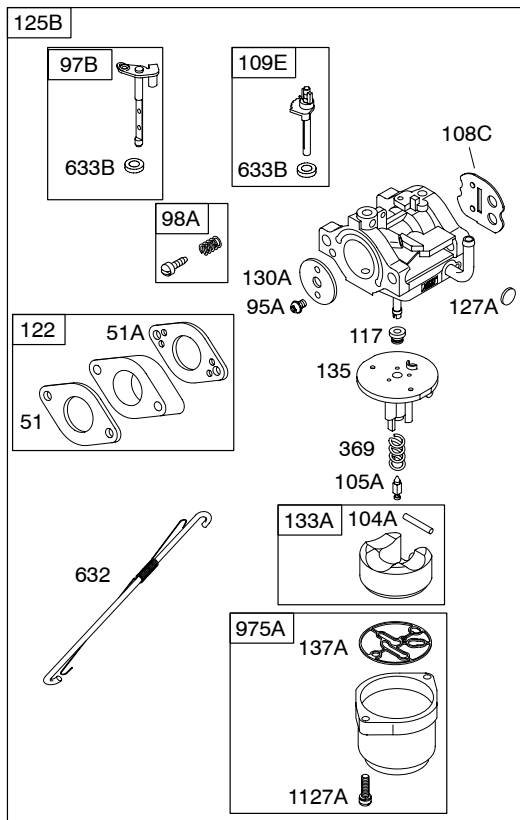


Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

3461-4

Assemblies include all parts shown in frames.

   
 
09/30/2005

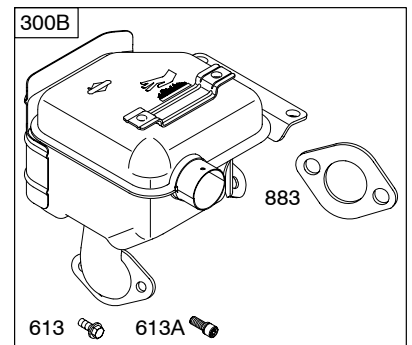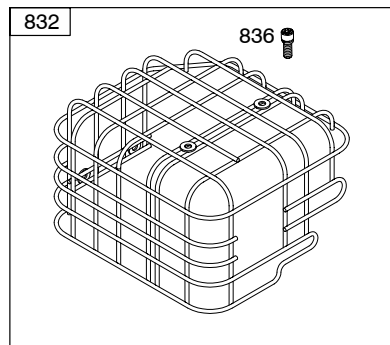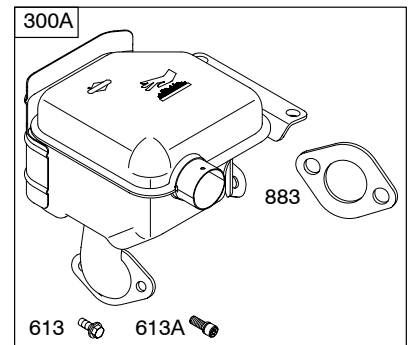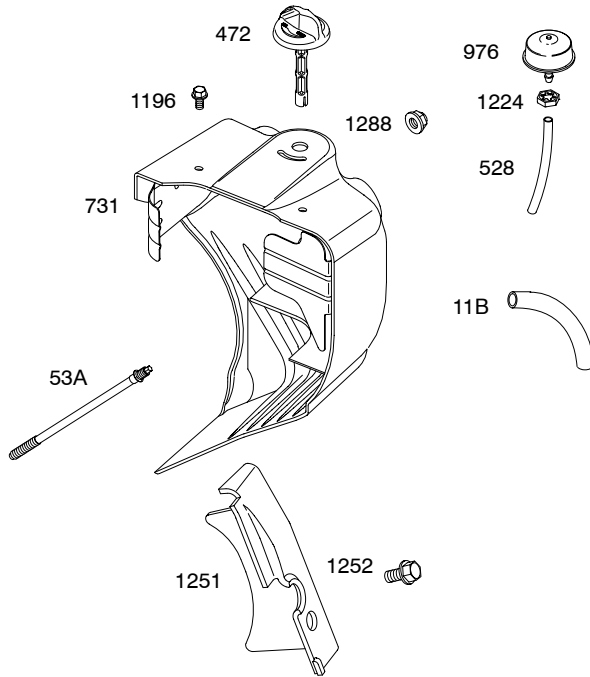

Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.
3461-5 Assemblies include all parts shown in frames. **09/30/2005**

20E300

  1036 EMISSION LABEL






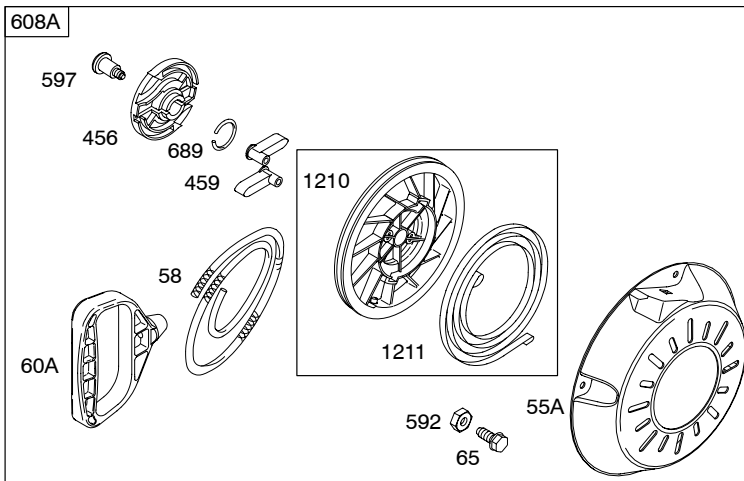
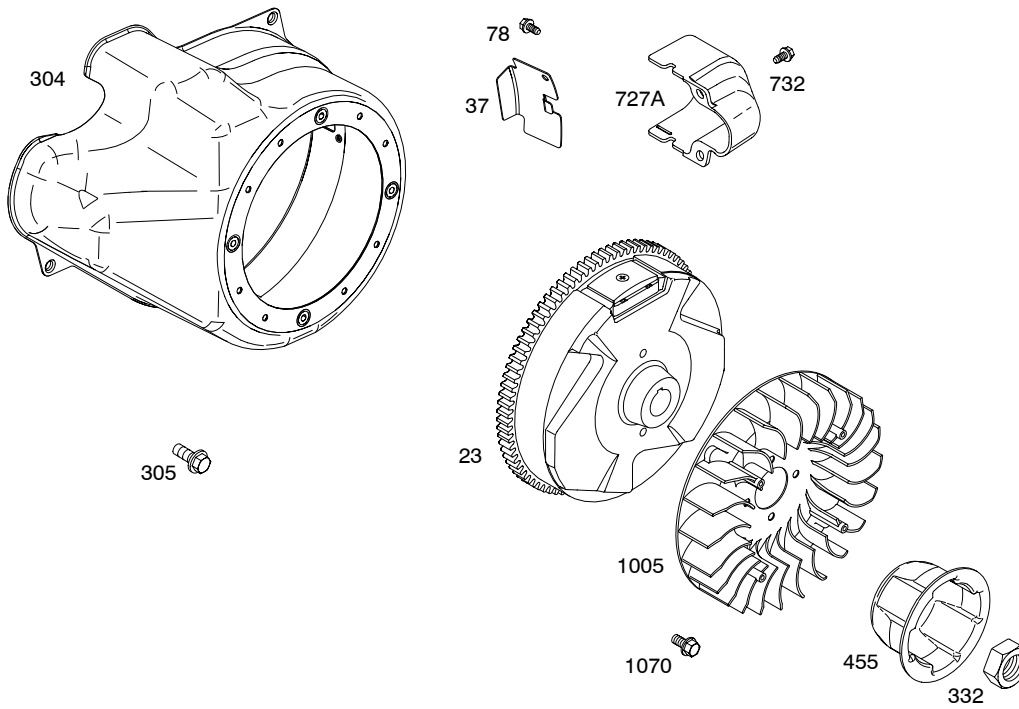


Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

3461-6

Assemblies include all parts shown in frames.

       09/30/2005

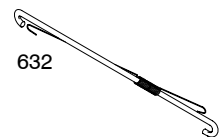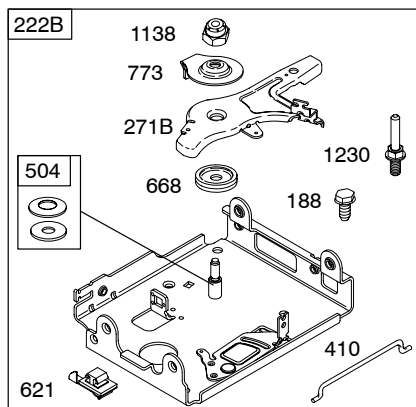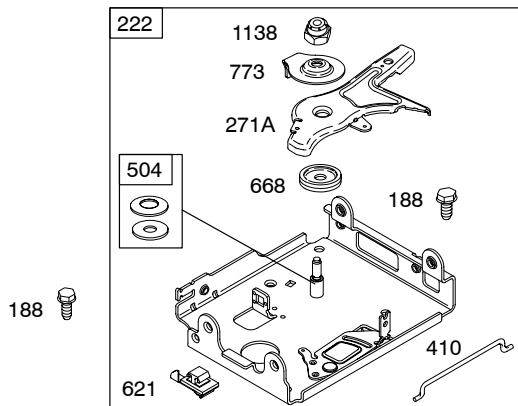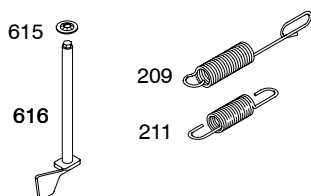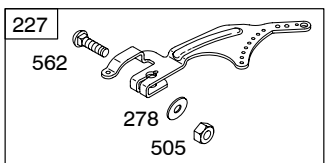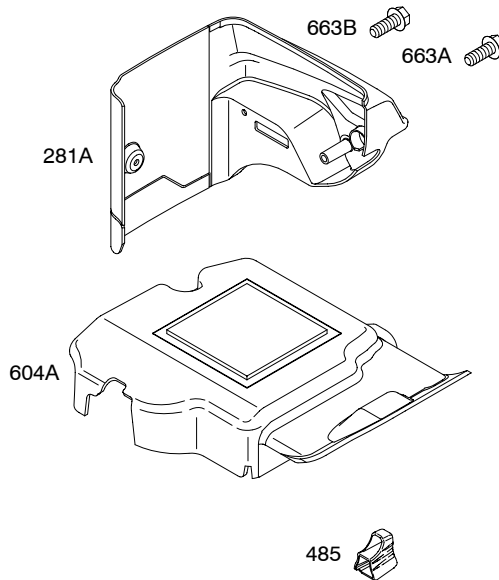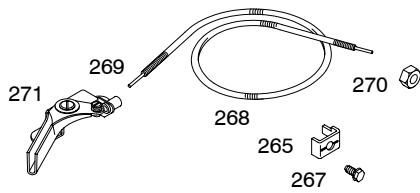





Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

3461-7









Assemblies include all parts shown in frames.

09/30/2005

    20E300

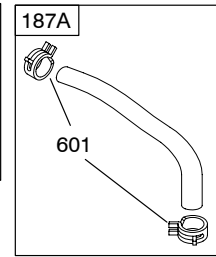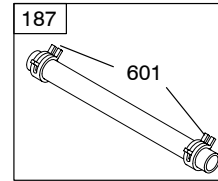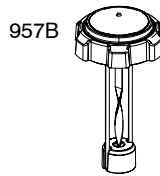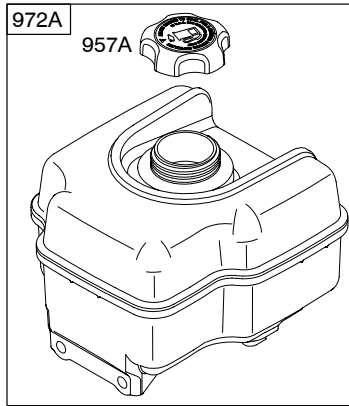

DC ONLY	10 – 16 AMP
NOTE: All stators use a No. 1119 mounting screw. NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.	

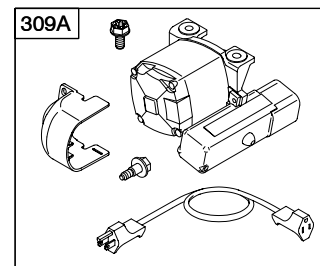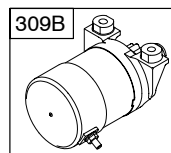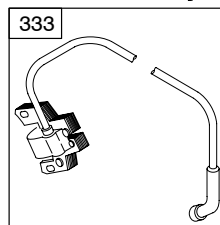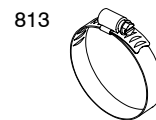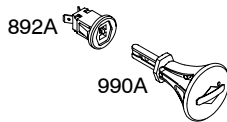        

Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

3461-8

Assemblies include all parts shown in frames.

09/30/2005

20E300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	696772	Cylinder Assembly	26	792026	Ring Set	65	695453	Screw
2	698340	Kit-Bushing/Seal (Magneto Side)			(Standard)			(Rewind Starter)
3	★391086	Seal-Oil (Magneto Side)			(Used After Code Date 05081000)	78	695724	Screw (Flywheel Guard)
5	697233	Head-Cylinder			----- Note -----	95A	690718	Screw (Throttle Valve)
7	★Δ694872	Gasket-Cylinder Head			694004 Ring Set	97B	696387	Shaft-Throttle
11B	696750	Tube-Breather			(Used Before Code Date 05081100)	98A	●695408	Kit-Idle Speed
12	★694953	Gasket-Crankcase			792073 Ring Set	104A	●694918	Pin-Float Hinge
13	690360	Screw (Cylinder Head)			(.020" Oversize)	105A	●696136	Valve-Float Needle
15	691686	Plug-Oil Drain			(Used After Code Date 05081000)	108C	696736	Valve-Choke
15B	695757	Plug-Oil Drain			694008 Ring Set	109E	696735	Shaft-Choke
16	695369	Crankshaft			(.020" Oversize)	117	●696134	Jet-Main (Standard)
		----- Note -----			(Used Before Code Date 05081100)	118	696135	Jet-Main (High Altitude)
		695462 Crankshaft Used on Type No(s). 0110.	27	690975	Lock-Piston Pin	121A	696146	Kit-Carburetor Overhaul (Nikki Carburetor)
17	695434	Bearing-Ball Used on Type No(s). 0110.	28	690229	Pin-Piston			
18	696914	Cover-Crankcase	29	694691	Rod-Connecting			
		----- Note -----	30	694692	Dipper-Connecting Rod	122●★Δ◆694876		Spacer-Carburetor
		698343 Cover- Crankcase Used on Type No(s). 0110.	32	690976	Screw (Connecting Rod)	125B	696737	Carburetor
19	698340	Kit-Bushing/Seal (PTO Side)	33	499596	Valve-Exhaust	127A	●690727	Plug-Welch
20	★391086	Seal-Oil (PTO Side)	34	697464	Valve-Intake	130A	696139	Valve-Throttle
21	281658	Cap-Oil Fill	35	694865	Spring-Valve (Intake)	133A	694914	Float-Carburetor
22	695174	Screw (Crankcase Cover/Sump)	36	694865	Spring-Valve (Exhaust)	135	696142	Tube-Fuel Transfer
23	695485	Flywheel	37	699047	Guard-Flywheel	137A	●◆695426	Gasket-Float Bowl
24	222698	Key-Flywheel	42	499586	Keeper-Valve	146	690979	Key-Timing
25	792117	Piston Assembly (Standard)	45	690977	Tappet-Valve	187	791766	Line-Fuel (Cut To Required Length)
		----- Note -----	46	790496	Camshaft	187A	791869	Line-Fuel
		792144 Piston Assembly (.020" Oversize)	51●★Δ◆694874		Gasket-Intake	188	690877	Screw (Control Bracket)
			51A●★Δ◆694875		Gasket-Intake	190	692127	Screw (Fuel Tank)
			53A	696753	Stud (Carburetor)	192	690083	Adjuster-Rocker Arm
			55A	696710	Housing-Rewind Starter	209	694867	Spring-Governor
			58	693389	Rope-Starter (Cut To Required Length)	211	695307	Spring-Governed Idle
			60A	695740	Grip-Starter Rope	219	693578	Gear-Governor
						220	691724	Washer (Governor Gear)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3461-9

Assemblies include all parts shown in frames.

09/30/2005

20E300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
222	698161	Bracket-Control Used on Type No(s). 0110.	337	491055	Plug-Spark	592	690800	Nut (Rewind Starter)
222B	698034	Bracket-Control	356B	699340	Wire-Stop Used on Type No(s). 0110.	597	691696	Screw (Pawl Friction Plate)
227	694864	Lever-Governor Control	356G	696748	Wire-Stop	601	95162	Clamp-Hose
265	691024	Clamp-Casing	356J	696700	Wire-Stop	604A	696758	Cover-Control
267	692577	Screw (Casing Clamp)	358	695438	Gasket Set-Engine	608A	699335	Starter-Rewind
268	691025	Casing-Control Wire (Cut To Required Length)	362	698041	Shield-Spark Plug	613	695312	Screw (Muffler)
269	691026	Wire-Control (Cut To Required Length)	369	695422	Spring-Float Bowl	613A	696705	Screw (Muffler)(TORX HEAD)
270	691027	Nut (Control Wire Casing)	383	19374	Wrench-Spark Plug	615	694676	Retainer-Governor Shaft
271	691028	Lever-Control	410	695382	Link-Control	616	694675	Crank-Governor
271A	695381	Lever-Control Used on Type No(s). 0110.	415	691363	Plug	621	692310	Switch-Stop
271B	698035	Lever-Control	415A	699337	Plug Used on Type No(s). 0110.	632	695917	Spring/Link-Mechanical Governor (Use With Nikki Carburetor)
278	792008	Washer (Governor Control Lever)	455	697226	Cup-Flywheel	633B ♦♦690998		Seal-Choke/Throttle Shaft
281A	697400	Panel-Control	456	692299	Plate-Pawl Friction	635	710901	Boot-Spark Plug (Alternator)
287	691693	Screw (Dipstick Tube)	459	281505	Pawl-Ratchet	663A	696685	Screw (Control Panel)
300A	699211	Muffler	472	696752	Knob-Choke Shaft	663B	696704	Screw (Control Panel)
300B	699222	Muffler Used on Type No(s). 0110.	474A	695730	Alternator (3 Amps DC)	668	694257	Spacer (Control Bracket)
304	791479	Housing-Blower ----- Note ----- 699339 Housing- Blower Used on Type No(s). 0110.	474D	695466	Alternator (10-16 Amp Regulated) Used on Type No(s). 0110.	689	691855	Spring-Friction
305	691108	Screw (Blower Housing)	485	695755	Knob-Control	718	690959	Pin-Locating (Cylinder)
306	697240	Shield-Cylinder	493A	691177	Bracket-Mounting	718A	695178	Pin-Locating (Head)
309A	696611	Motor-Starter	501	698315	Regulator	725	696756	Shield-Heat
309B	698162	Motor-Starter	504	695383	Washer Set-Friction	727A	697465	Cover-Starter Drive Used on Type No(s). 0110.
332	694685	Nut (Flywheel)	505	691251	Nut (Governor Control Lever)	731	790222	Hood-Snow
333	715231	Armature-Magneto	523	695344	Dipstick	732	691097	Screw (Starter Drive Cover) Used on Type No(s). 0110.
334	691061	Screw (Magneto Armature)	524	691876	Seal-Dipstick Tube	741	691288	Gear-Timing
			525	695343	Tube-Dipstick			
			526	690297	Screw (Regulator)			
			528	696751	Hose-Primer			
			529	791822	Grommet			
			552	694674	Bushing-Governor Crank			
			562	691119	Bolt (Governor Control Lever)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3461-10

Assemblies include all parts shown in frames.

09/30/2005

20E300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
742	692564	Retainer-E Ring	958	698180	Valve-Fuel Shut Off (Plastic)	1138	694255	Nut (Control Bracket)
746	694679	Gear-Idler	972A	694260	Tank-Fuel (Plastic)	1171	696754	Stud (Rocker Cover)
773	694258	Retainer	975A	696138	Bowl-Float	1194	691876	Seal-O Ring (Plug)
798	697890	Screw (Rocker Arm)	976	790221	Primer-Carburetor	1196	699166	Screw (Snow Hood)
813	690635	Clamp	977A	696147	Gasket Set-Carburetor	1210	498144	Pulley/Spring Assembly (Pulley)
832	699223	Guard-Muffler	990A	695756	Key Set	1211	498144	Pulley/Spring Assembly (Spring)
836	691003	Screw (Muffler Guard)	998A	696683	Pipe-Oil	1224	696824	Nut (Carburetor Primer)
842	691031	Seal-O Ring (Dipstick Tube)	1005	694684	Fan-Flywheel	1230	696747	Stud (Control Bracket)
847	695342	Dipstick/Tube Assembly	1019	696745	Kit-Label	1251	696762	Shield-Snow
868	★△690968	Seal-Valve	1022	★△690971	Gasket-Rocker Cover	1252	691108	Screw (Snow Shield)
877A	399916	Wire/Connector-Alternator	1023A	698042	Cover-Rocker	1275	696757	Screw (Rocker Cover)
877C	393456	Wire/Connector-Alternator	1026	695177	Rod-Push	1288	696757	Nut (Snow Hood)
883	★△695398	Gasket-Exhaust	1029	690972	Arm-Rocker	1330	272147	Repair Manual
892A	★△696749	Switch-Key	1036		Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer)	1351	790017	Stud (Cylinder Shield)
914	693732	Screw (Rocker Cover)	1058	275964	Operator's Manual	1352	790026	Nut (Spark Plug Shield)
930	696709	Guard-Rewind	1070	691058	Screw (Flywheel Fan)			
957A	694261	Cap-Fuel Tank (Plastic)	1095	695440	Gasket Set-Valve			
957B	698109	Cap-Fuel Tank (Plastic)	1100	690973	Pivot-Rocker Arm			
		Used on Type No(s). 0110.	1119	691183	Screw (Alternator)			
			1127A	695407	Screw (Float Bowl)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3461-11

Assemblies include all parts shown in frames.

09/30/2005