



282H00

Illustrated Parts List

Model Series

282H00

TYPE NUMBERS
0105 through 0600.

TABLE OF CONTENTS

Air Cleaner	5
Alternator	7
Blower Housing	5
Camshaft	2
Carburetor	4
Controls	7
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	7
Engine Sump	2
Flywheel	6
Fuel Supply	4
Gasket Set – Engine	2
Gasket Set – Valve	3
Governor Spring	7
Ignition	7
Kit – Carburetor Overhaul	4
Lubrication	3
Piston, Rings, Connecting Rod	2
Valves	3


BRIGGS & STRATTON



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

282H00

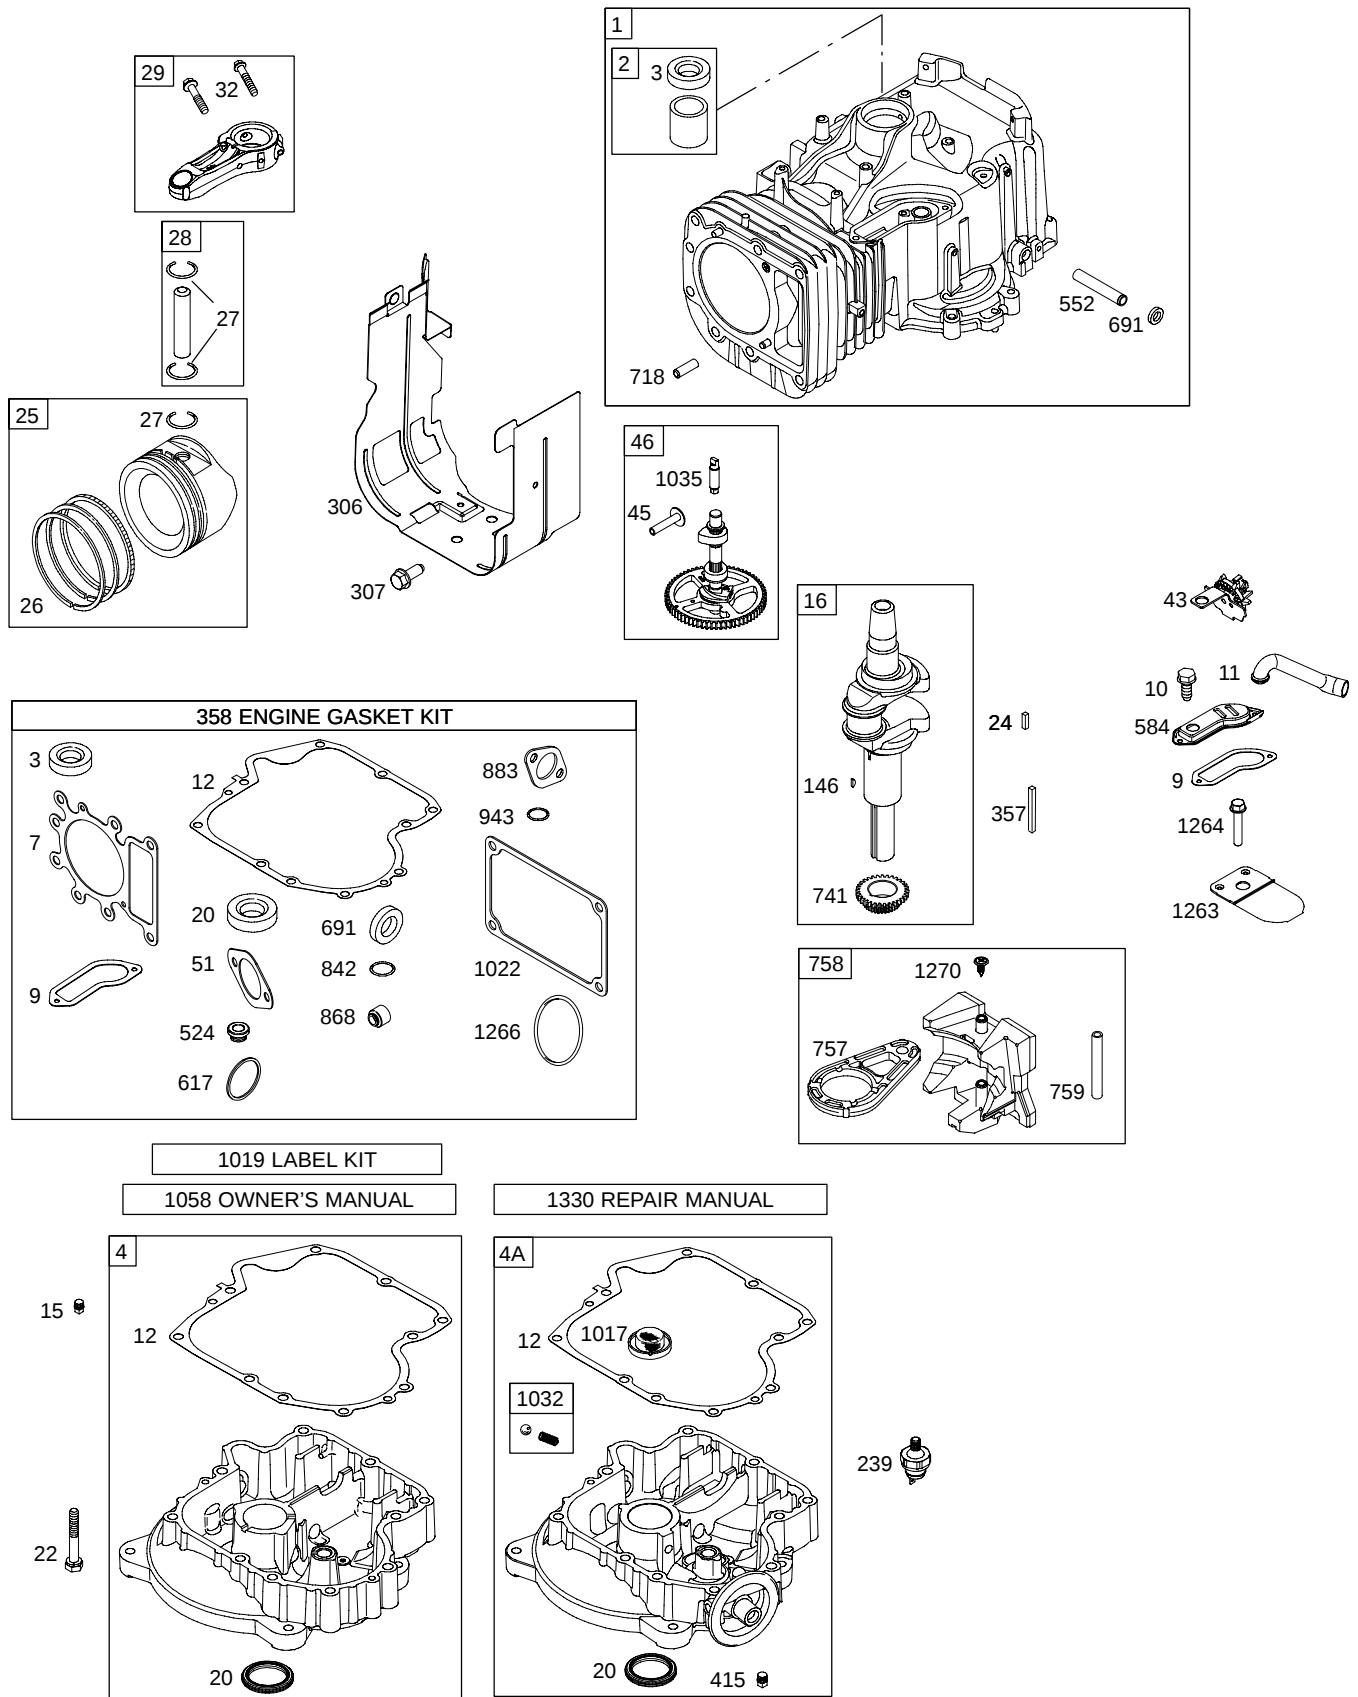











Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5448-2


Assemblies include all parts shown in frames.

 06/28/2005

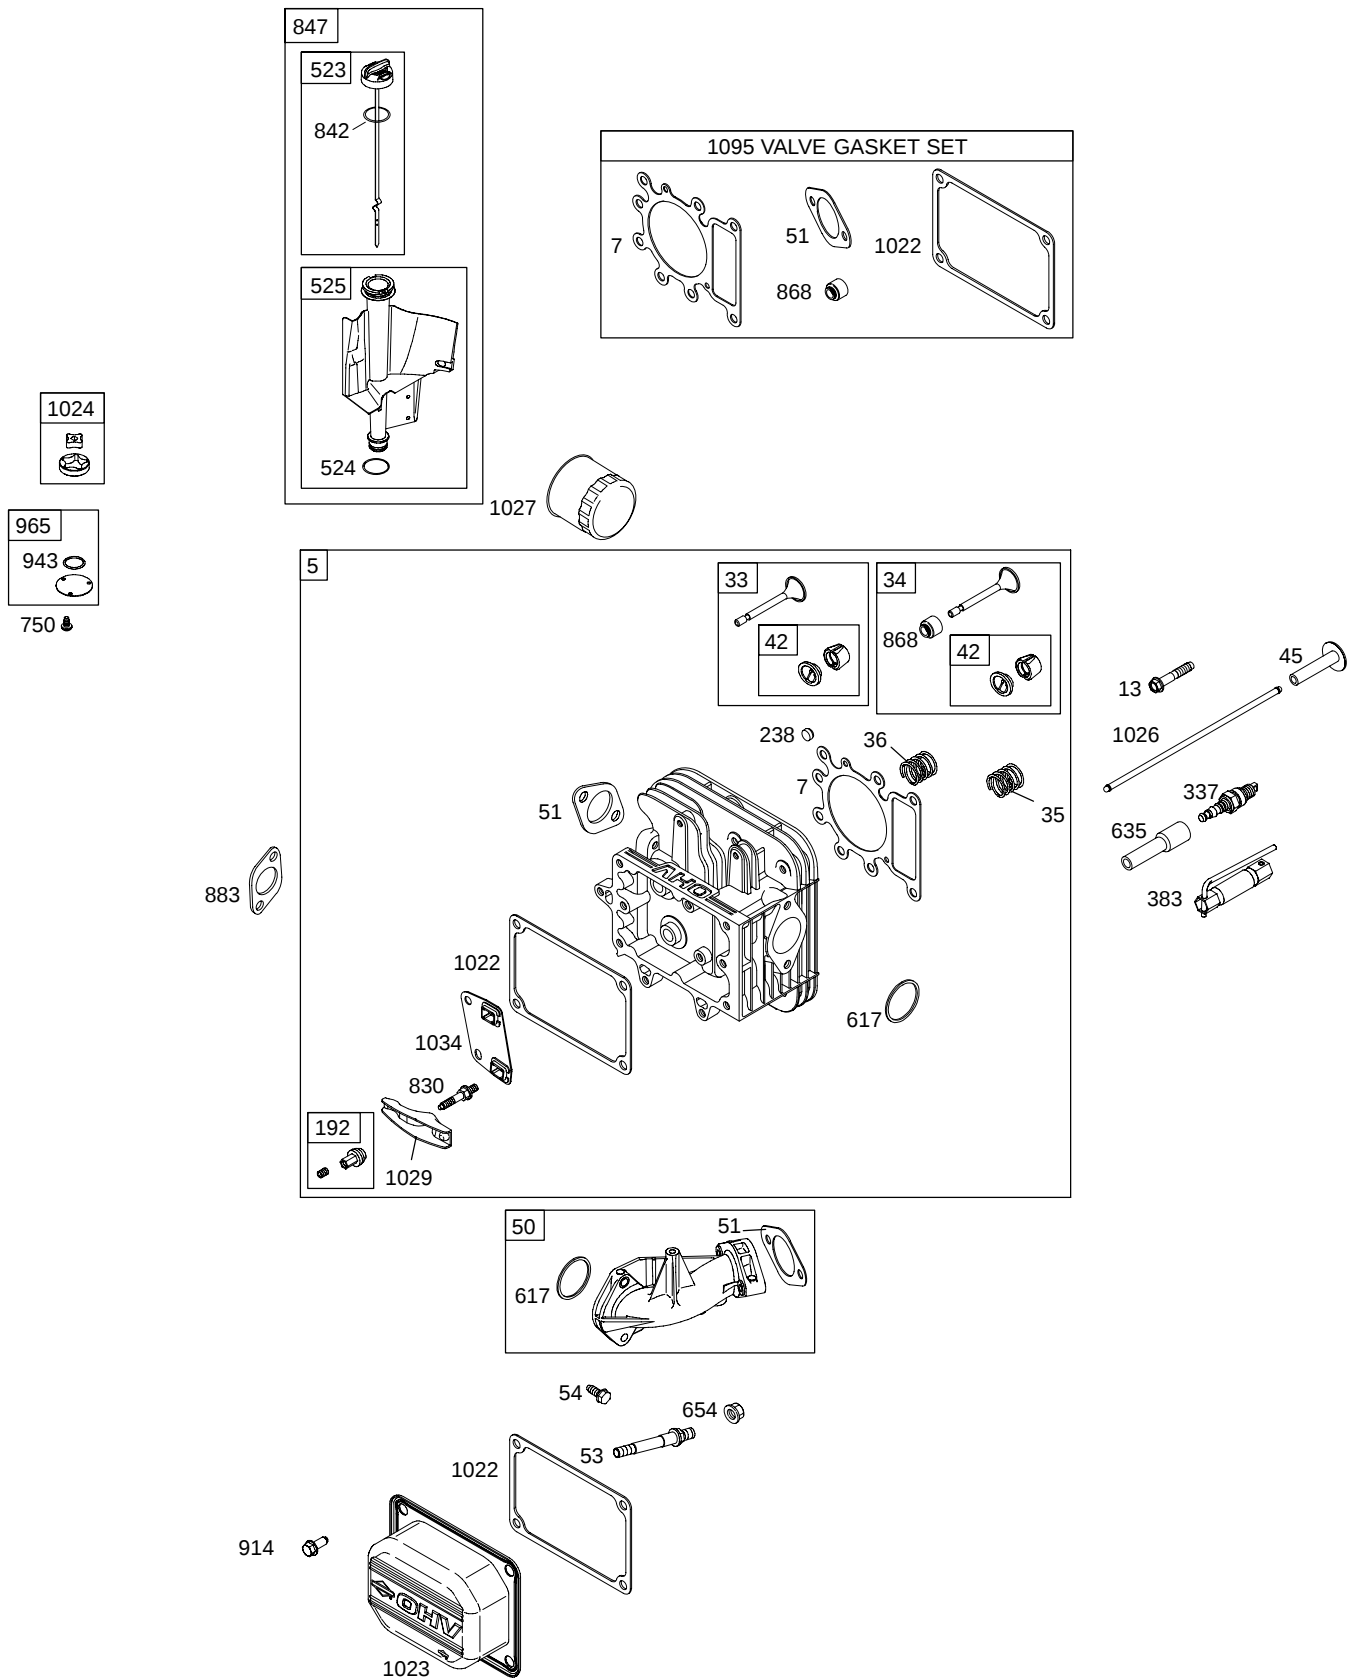


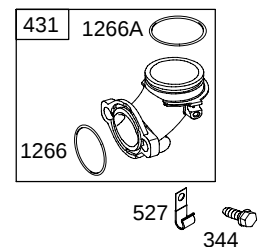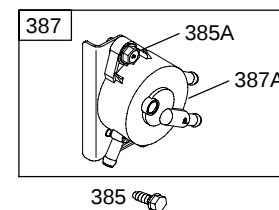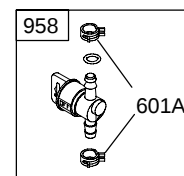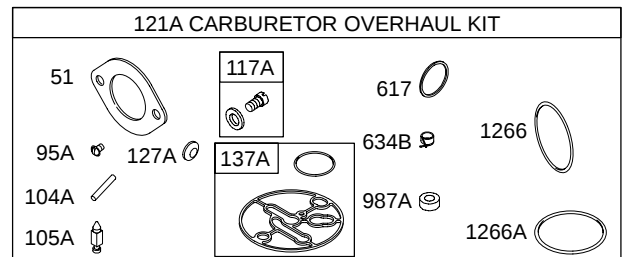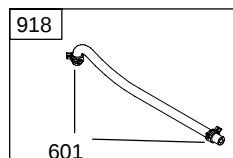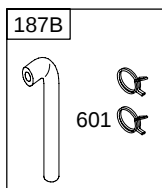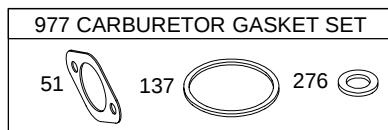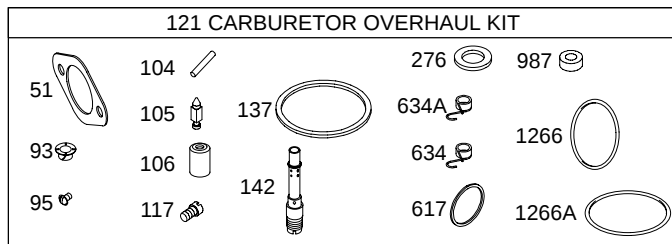

4

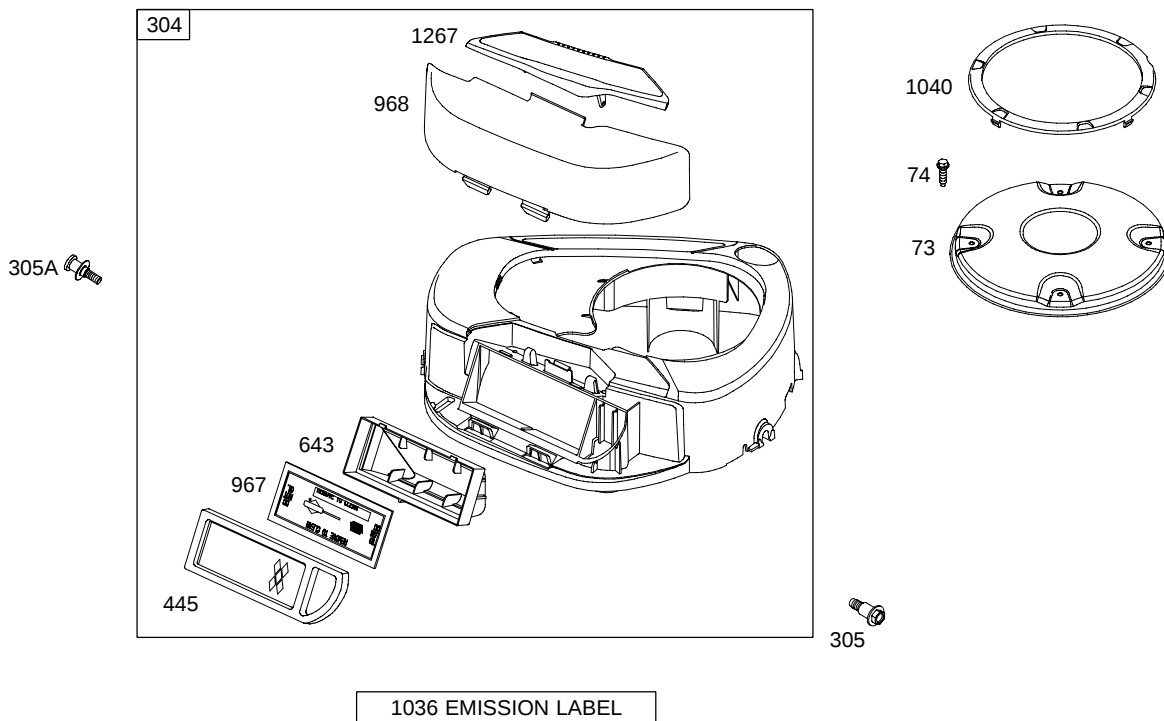

282H00

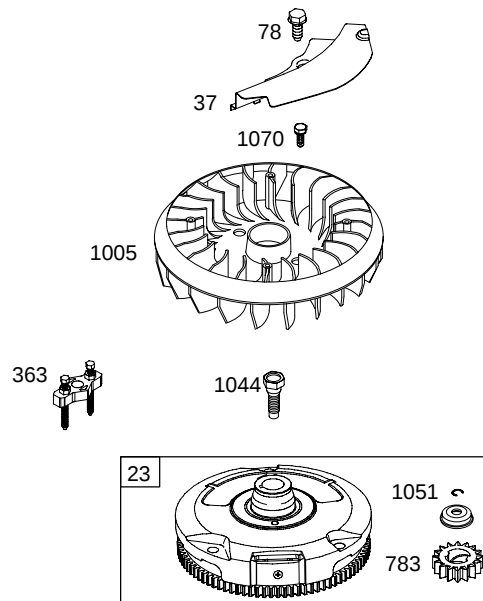

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5448-6

Assemblies include all parts shown in frames.












06/28/2005

DC ONLY	DUAL CIRCUIT	TRI CIRCUIT
474 877A	474A 877	474B 877B
578	878	878A



NOTE: All stators use a No. 1119 mounting screw.

      NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

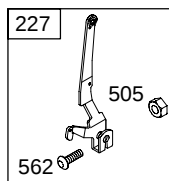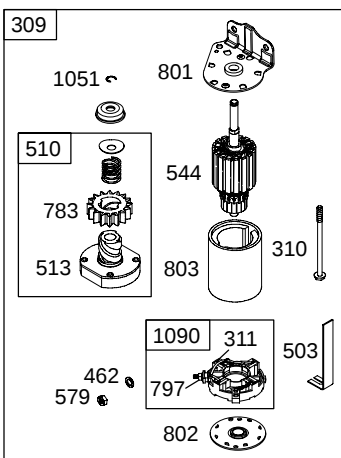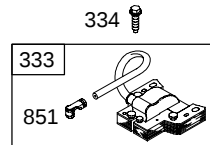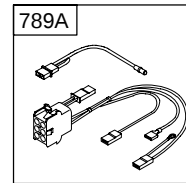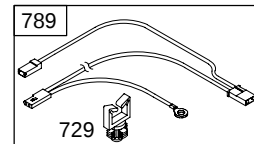

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5448-7

Assemblies include all parts shown in frames.

06/28/2005

282H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697132	Cylinder Assembly	26	698375	Ring Set (Standard)	98	495800	Kit-Idle Speed
2	399265	Kit-Bushing/Seal (Magneto Side)			----- Note -----	98A	695408	Kit-Idle Speed
3	★391086	Seal-Oil (Magneto Side)		698396	Ring Set (.010" Oversize)	104	●690525	Pin-Float Hinge
4	697106	Sump-Engine		698397	Ring Set (.020" Oversize)	104A	●694918	Pin-Float Hinge
4A	697188	Sump-Engine Used on Type No(s). 0242, 0257.		698398	Ring Set (.030" Oversize)	105	●231855	Valve-Float Needle
5	698148	Head-Cylinder	27	698469	Lock-Piston Pin	105A	●696136	Valve-Float Needle
7	Δ★273280	Gasket-Cylinder Head	28	697099	Pin-Piston (Standard)	106	●690577	Seat-Inlet (Gravity Feed) (696181, 697203, 697204)
9	★697109	Gasket-Breather			----- Note -----			●691780
10	697157	Screw (Breather Assembly)	29	697126	Rod-Connecting (Standard)			Seat-Inlet (Pump Feed) (696179, 697202)
11	697113	Tube-Breather	32	692852	Screw (Connecting Rod)	108	690464	Valve-Choke (697204)
12	★697110	Gasket-Crankcase	33	695760	Valve-Exhaust	108A	692344	Valve-Choke (696179, 696181, 697202, 697203)
13	690360	Screw (Cylinder Head)	34	695761	Valve-Intake	108B	695419	Valve-Choke
15	690946	Plug-Oil Drain (Square Head)	35	691279	Spring-Valve (Intake)	117	●694352	Jet-Main (Standard)
16	697127	Crankshaft	36	691279	Spring-Valve (Exhaust)	117A	●699457	Jet-Main (Standard)
20	★690947	Seal-Oil (PTO Side)	37	697352	Guard-Flywheel	118	697228	Jet-Main (High Altitude)
22	692125	Screw (Crankcase Cover/Sump)	42	499586	Keeper-Valve	118A	699458	Jet-Main (High Altitude)
23	790894	Flywheel (Painted Flywheel) Used on Type No(s). 0110, 0188, 0196, 0198, 0231, 0239, 0242, 0334, 0600.	43	691968	Slinger-Governor/Oil	121	697241	Kit-Carburetor Overhaul (Walbro Carburetor)
		----- Note -----	45	690564	Tappet-Valve	121A	699521	Kit-Carburetor Overhaul (Nikki Carburetor)
		693556 Flywheel (Painted Flywheel) Used on Type No(s). 0105, 0111, 0113, 0115, 0116, 0117, 0119, 0121, 0199, 0257, 0262.	46	698492	Camshaft	125	698445	Carburetor (Gravity Feed)(Use to replace pump and gravity feed Walbro carburetors)
			50	690193	Manifold-Intake	127	695005	Plug-Welch
24	222698	Key-Flywheel	51Δ★●	692137	Gasket-Intake	127A	●690727	Plug-Welch
25	698371	Piston Assembly (Standard)	53	690227	Stud (Carburetor)	130	691750	Valve-Throttle
		----- Note -----	54	691148	Screw (Intake Manifold)	130A	699500	Valve-Throttle
		698393 Piston Assembly (.010" Oversize)	73	697133	Screen-Rotating	131	494379	Kit-Throttle Shaft
		698394 Piston Assembly (.020" Oversize)	74	697897	Screw (Rotating Screen)	131A	699501	Kit-Throttle Shaft
		698395 Piston Assembly (.030" Oversize)	78	691003	Screw (Flywheel Guard)	133	494381	Float-Carburetor
			93	●690602	Bushing-Throttle Shaft	133A	694914	Float-Carburetor
			94	498030	Kit-Idle Mixture			
			94A	695425	Kit-Idle Mixture			
			95	●691636	Screw (Throttle Valve)			
			95A	●690718	Screw (Throttle Valve)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 & 121A.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5448-8

Assemblies include all parts shown in frames.

06/28/2005

282H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
135	698780	Tube–Fuel Transfer	209	692208	Spring–Governor Used on Type No(s). 0196, 0231, 0239, 0242, 0257, 0262, 0334, 0600.	268	691025	Casing–Control Wire (Cut To Required Length)
137	●♦281165	Gasket–Float Bowl				269	691026	Wire–Control (Cut To Required Length)
137A	●♦698781	Gasket–Float Bowl				270	691027	Nut (Control Wire Casing)
141	495097	Kit–Choke Shaft (697204)			----- Note -----	271	691028	Lever–Control
141A	495931	Kit–Choke Shaft (696179, 696181, 697202, 697203)			260902 Spring– Governor	276	●♦692255	Washer–Sealing
141B	698778	Kit–Choke Shaft			Used on Type No(s). 0188, 0382.	276A	●♦695410	Washer–Sealing
142	●697140	Nozzle–Carburetor (Standard)			690576 Spring– Governor	304	698402	Housing–Blower (Red)
146	691639	Key–Timing			Used on Type No(s). 0110, 0115, 0120, 0198, 0199.			Used on Type No(s). 0105, 0110, 0111, 0113, 0115, 0116, 0117, 0120, 0121, 0188, 0196, 0198, 0199, 0231, 0239, 0242, 0257, 0262, 0334, 0382, 0600.
186	692317	Connector–Hose (90 Degree)			691795 Spring– Governor			----- Note -----
186A	698174	Connector–Hose (Straight)			Used on Type No(s). 0105, 0111, 0113, 0116, 0117, 0119.			698599 Housing– Blower
187	791766	Line–Fuel (Cut To Required Length) (Used After Code Date 05063000).	216	691840	Link–Choke			Used on Type No(s). 0119.
		----- Note -----	222	694042	Bracket–Control	305	697102	Screw (Blower Housing)
		691050 Line–Fuel (Cut To Required Length) (Used Before Code Date 05070100).	227	691374	Lever–Governor Control	305A	697103	Screw (Blower Housing)
			232	691842	Spring–Governor Link	306	697107	Shield–Cylinder
			238	691843	Cap–Valve	307	691003	Screw (Cylinder Shield)
			239	491657	Switch–Oil Pressure	309	693551	Motor–Starter
187B	791805	Line–Fuel (Formed) (10 1/4 Inches Long) (Cut To Required Length) (Used After Code Date 05063000)	240	394358	Filter–Fuel (White, 75 Microns)			----- Note -----
			240B	691035	Filter–Fuel (Includes Paper Element With A 40 Micron Rating) Used on Type No(s). 0110, 0117, 0121.			693552 Motor–Starter Used on Type No(s). 0110, 0111.
		----- Note -----	265	691024	Clamp–Casing	310	690323	Bolt (Starter Motor)
		699331 Line–Fuel (Formed) (10 1/4 Inches Long) (Cut To Required Length) (Used Before Code Date 05070100).	267	690804	Screw (Casing Clamp) Used on Type No(s). 0105, 0110, 0111, 0113, 0115, 0116, 0117, 0119, 0120, 0188, 0199.	311	497608	Brush Set
188	691693	Screw (Control Bracket)			----- Note -----	333	492341	Armature–Magneto
192	691986	Adjuster–Rocker Arm			695134 Screw (Casing Clamp) Used on Type No(s). 0196, 0198, 0231, 0239, 0242, 0257, 0262, 0600.	334	691061	Screw (Magneto Armature)
202	691841	Link–Mechanical Governor				337	691043	Plug–Spark Used on Type No(s). 0105, 0110, 0111, 0113, 0115, 0116, 0117, 0119, 0120, 0121, 0199, 0239, 0262, 0382.
								----- Note -----
								491055 Plug–Spark Used on Type No(s). 0188, 0196, 0198, 0231, 0242, 0257, 0334, 0600.

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121 & 121A.

♦ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5448–9

Assemblies include all parts shown in frames.

06/28/2005

282H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
344	693675	Screw (Cable Clamp)	521	690581	Shield-Cable	697	690372	Screw (Drive Cap)
356	697089	Wire-Stop	523	699908	Dipstick	718	690959	Pin-Locating (Wire Saddle)
357	691483	Key-Drive Pulley Used on Type No(s). 0115, 0116, 0119.	524	★691032	Seal-Dipstick Tube	729	691335	Clip-Wire
358	697151	Gasket Set-Engine	525	697184	Tube-Dipstick Used on Type No(s). 0105, 0111, 0113, 0115, 0116, 0119, 0121, 0188, 0196, 0198, 0199, 0231, 0239, 0242, 0262, 0334, 0382, 0600.	729A	691224	Clip-Wire (Aluminum Coated Steel)
363	19203	Puller-Flywheel			----- Note -----	729B	694123	Clip-Wire (Nylon)
383	89838	Wrench-Spark Plug			697085 Tube-Dipstick Used on Type No(s). 0110, 0117, 0120, 0257.	741	697128	Gear-Timing
385	694476	Screw (Fuel Pump)				750	790832	Screw (Oil Pump Cover) Used on Type No(s). 0242, 0257.
385A	690297	Screw (Fuel Pump)	526	697088	Screw (Regulator)	757	697607	Link-Counterweight
387	697090	Pump-Fuel (Includes Mounting Bracket) Used on Type No(s). 0110, 0117, 0121, 0257.	527	698467	Clamp-Tube	758	697134	Counterweight
387A	808656	Pump-Fuel Used on Type No(s). 0110, 0117, 0121, 0257.	544	692034	Armature-Starter	759	697392	Pin-Counterweight
404	691691	Washer (Governor Crank)	552	697144	Bushing-Governor Crank	783	693713	Gear-Pinion
415	690283	Plug (Sump)	559	697561	Screw (Remote Choke Stop)	789	692037	Harness-Wiring Used on Type No(s). 0105, 0111, 0115, 0116, 0117, 0119, 0120, 0121.
431	697122	Elbow-Intake	562	691119	Bolt (Governor Control Lever)	789A	698329	Harness-Wiring Used on Type No(s). 0110, 0113, 0188, 0196, 0198, 0199, 0231, 0239, 0242, 0257, 0262, 0334, 0382, 0600.
445	698083	Filter-Air Cleaner Cartridge (Non Washable)	578	692306	Wire Assembly Used on Type No(s). 0110.	797	693167	Nut (Brush Retainer)
462	691261	Washer (Starter Cable)	579	691029	Nut (Starter Cable)	801	691283	Cap-Drive
474	696578	Alternator (DC Only) Used on Type No(s). 0110.	584	697112	Cover-Breather Passage	802	691286	Cap-End
474A	696459	Alternator (Dual Circuit) Used on Type No(s). 0188, 0196, 0198, 0231, 0239, 0242, 0334, 0382, 0600.	601	95162	Clamp-Hose	803	693757	Housing-Starter
474B	696457	Alternator (Tri Circuit) Used on Type No(s). 0105, 0111, 0113, 0115, 0116, 0117, 0119, 0120, 0199, 0257, 0262.	601A	691038	Clamp-Hose	830	691095	Stud-Rocker Arm
501	691188	Regulator	614	691620	Pin-Cotter	842	★691031	Seal-O Ring (Dipstick Tube)
503	691532	Strap-Starter	616	692012	Crank-Governor	847	790442	Dipstick/Tube Assembly Used on Type No(s). 0105, 0111, 0113, 0115, 0116, 0119, 0188, 0196, 0198, 0199, 0231, 0239, 0242, 0262, 0334, 0382.
505	691251	Nut (Governor Control Lever)	617	★692138	Seal-O Ring (Intake Manifold)			----- Note -----
510	693699	Drive-Starter	634	●690801	Spring/Seal Assembly (697204)			790443 Dipstick/Tube Assembly Used on Type No(s). 0110, 0117, 0120, 0257.
513	692024	Clutch-Drive	634A	●690802	Spring/Seal Assembly (696179, 696181, 697202, 697203)	851	692424	Terminal-Spark Plug
			634B	●698779	Spring/Seal Assembly	868	△690968	Seal-Valve
			635	691909	Boot-Spark Plug			
			643	698401	Retainer-Air Filter			
			654	690958	Nut (Carburetor)			
			691	★692407	Seal-Governor Shaft			
			692	690572	Spring-Detent			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 & 121A.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

282H00

^x REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
877	393456	Wire/Connector–Alternator (Dual Circuit) Used on Type No(s). 0188, 0196, 0198, 0231, 0239, 0242, 0334, 0382, 0600.	943	★690589	Seal–O Ring (Oil Pump Cover) Used on Type No(s). 0242, 0257.	1036	791932	Label–Emission (Used After Code Date 05070300). ----- Note ----- 790464 Label– Emission (Used After Code Date 0406300000 and Before Code Date 05070400). 695700 Label– Emission (Used Before Code Date 04070100).
877A	393814	Wire/Connector–Alternator (DC Only) Used on Type No(s). 0110.	947	694393	Solenoid–Fuel	1040	698368	Plate–Trim
877B	393537	Wire/Connector–Alternator (Tri Circuit) Used on Type No(s). 0105, 0111, 0113, 0115, 0116, 0117, 0119, 0120, 0121, 0199, 0257, 0262.	947A	695423	Solenoid–Fuel	1044	691658	Screw (Flywheel)
878	691237	Harness–Alternator Used on Type No(s). 0188, 0196, 0198, 0231, 0239, 0242, 0334, 0382, 0600.	950	695407	Screw–Float Bowl (Bottom Of Bowl)	1051	691265	Ring–Retaining
878A	691955	Harness–Alternator Used on Type No(s). 0105, 0111, 0113, 0115, 0116, 0117, 0119, 0120, 0121, 0199, 0257, 0262.	958	698183	Valve–Fuel Shut Off (Plastic)	1054	280275	Tie–Cable
883	★692236	Gasket–Exhaust	965	499613	Cover–Oil Pump Used on Type No(s). 0242, 0257.	1058	276344	Owner's Manual
914	691108	Screw (Rocker Cover)	967	697015	Filter–Pre Cleaner	1059	698516	Kit–Screw/Washer
918	791851	Hose–Vacuum (Formed) Used on Type No(s). 0110, 0257. (Used After Code Date 05063000). ----- Note ----- 697091 Hose–Vacuum (Formed) Used on Type No(s). 0110, 0257. (Used Before Code Date 05070100).	968	698403	Cover–Air Cleaner	1070	690372	Screw (Flywheel Fan)
			975	495933	Bowl–Float	1090	691293	Retainer–Brush
			975A	699502	Bowl–Float	1091	691333	Cap–Limiter
			977	690192	Gasket Set–Carburetor	1095	691581	Gasket Set–Valve
			987	●691326	Seal–Throttle Shaft	1119	691183	Screw (Alternator)
			987A	●698777	Seal–Throttle Shaft	1127	695407	Screw (Float Bowl)
			1005	699043	Fan–Flywheel	1263	697124	Reed–Breather
			1017	690770	Screen–Oil Pump	1264	697104	Screw (Breather Reed)
			1019	699196	Kit–Label	1266	★●691917	Seal–O Ring (Intake Elbow)
			1022	Δ★272475	Gasket–Rocker Cover Cover–Rocker (Used After Code Date 05013100). ----- Note ----- 692492 Cover–Rocker (Used Before Code Date 05020100).	1266A	●697123	Seal–O Ring (Intake Elbow)
			1023	791079	Pump–Oil Used on Type No(s). 0242, 0257.	1267	697575	Latch–Blower Housing (Black) ----- Note ----- 697419 Latch–Blower Housing (Black) Used on Type No(s). 0119, 0121.
			1024	499054	Rod–Push (Intake) ----- Note ----- 692011 Rod–Push (Exhaust)	1270	697156	Plug–AVS Counterweight
			1026	692003	Filter–Oil Used on Type No(s). 0242, 0257.	1330	272147	Repair Manual
			1027	492932	Arm–Rocker			
			1029	691751	Ball–Oil Pump			
			1032	491710	Guide–Push Rod			
			1034	690822	Shaft–Pump Used on Type No(s). 0242, 0257.			
			1035	693784				

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121 & 121A.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Δ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**5448–11**

Assemblies include all parts shown in frames.

06/28/2005