



304400

Illustrated Parts List

Model Series

304400

TYPE NUMBERS
0300 through 0416.

TABLE OF CONTENTS

Air Cleaner	7
Alternator	12
Blower Housing	10
Camshaft	2
Carburetor	6
Controls	8
Crankcase Cover	4
Crankshaft	2
Cylinder	2
Cylinder Head	2
Electric Starter	13
Flywheel	11
Gasket Set – Engine	2
Gasket Set – Valve	3
Governor Spring	8
Ignition	12
Intake Manifold	4
Lubrication	5
Piston, Rings, Connecting Rod	2
Shrouds	9
Valves	3


BRIGGS & STRATTON




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


304400

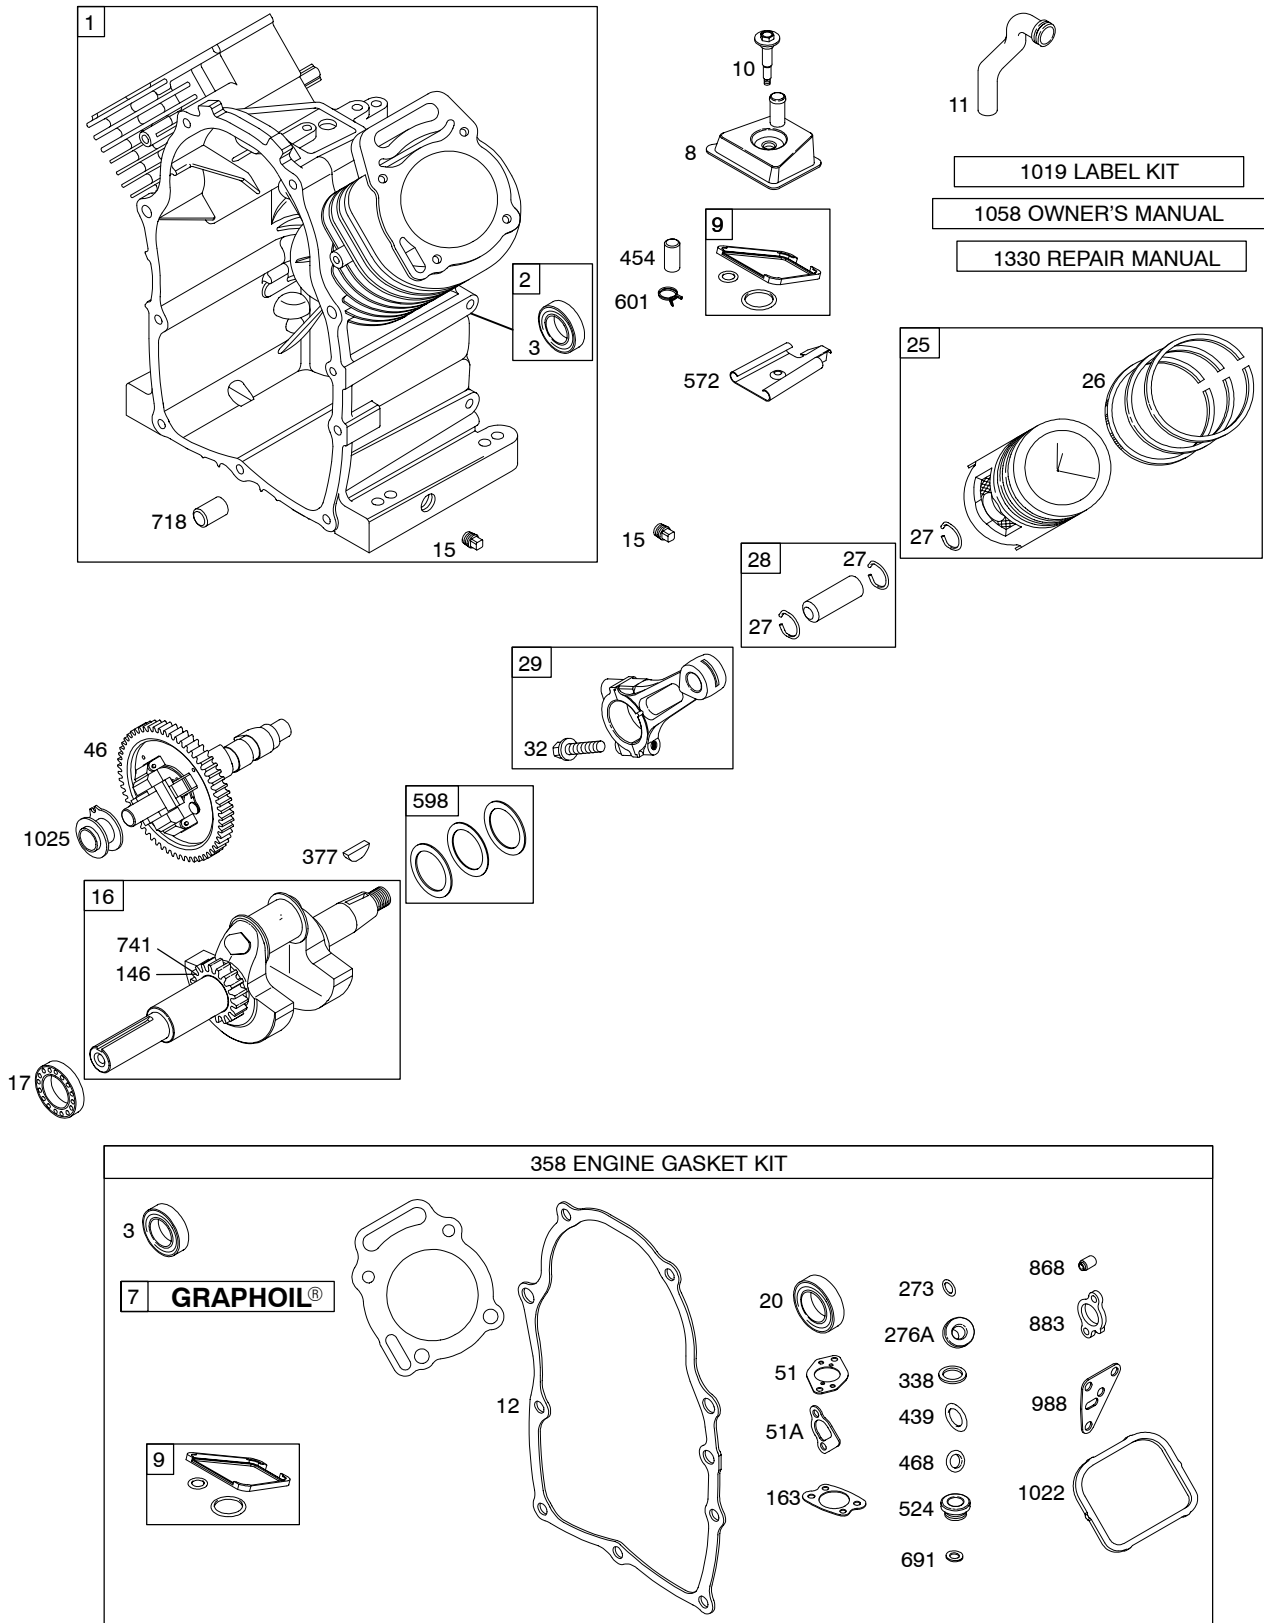


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6065-2 Assemblies include all parts shown in frames. 11/22/2005

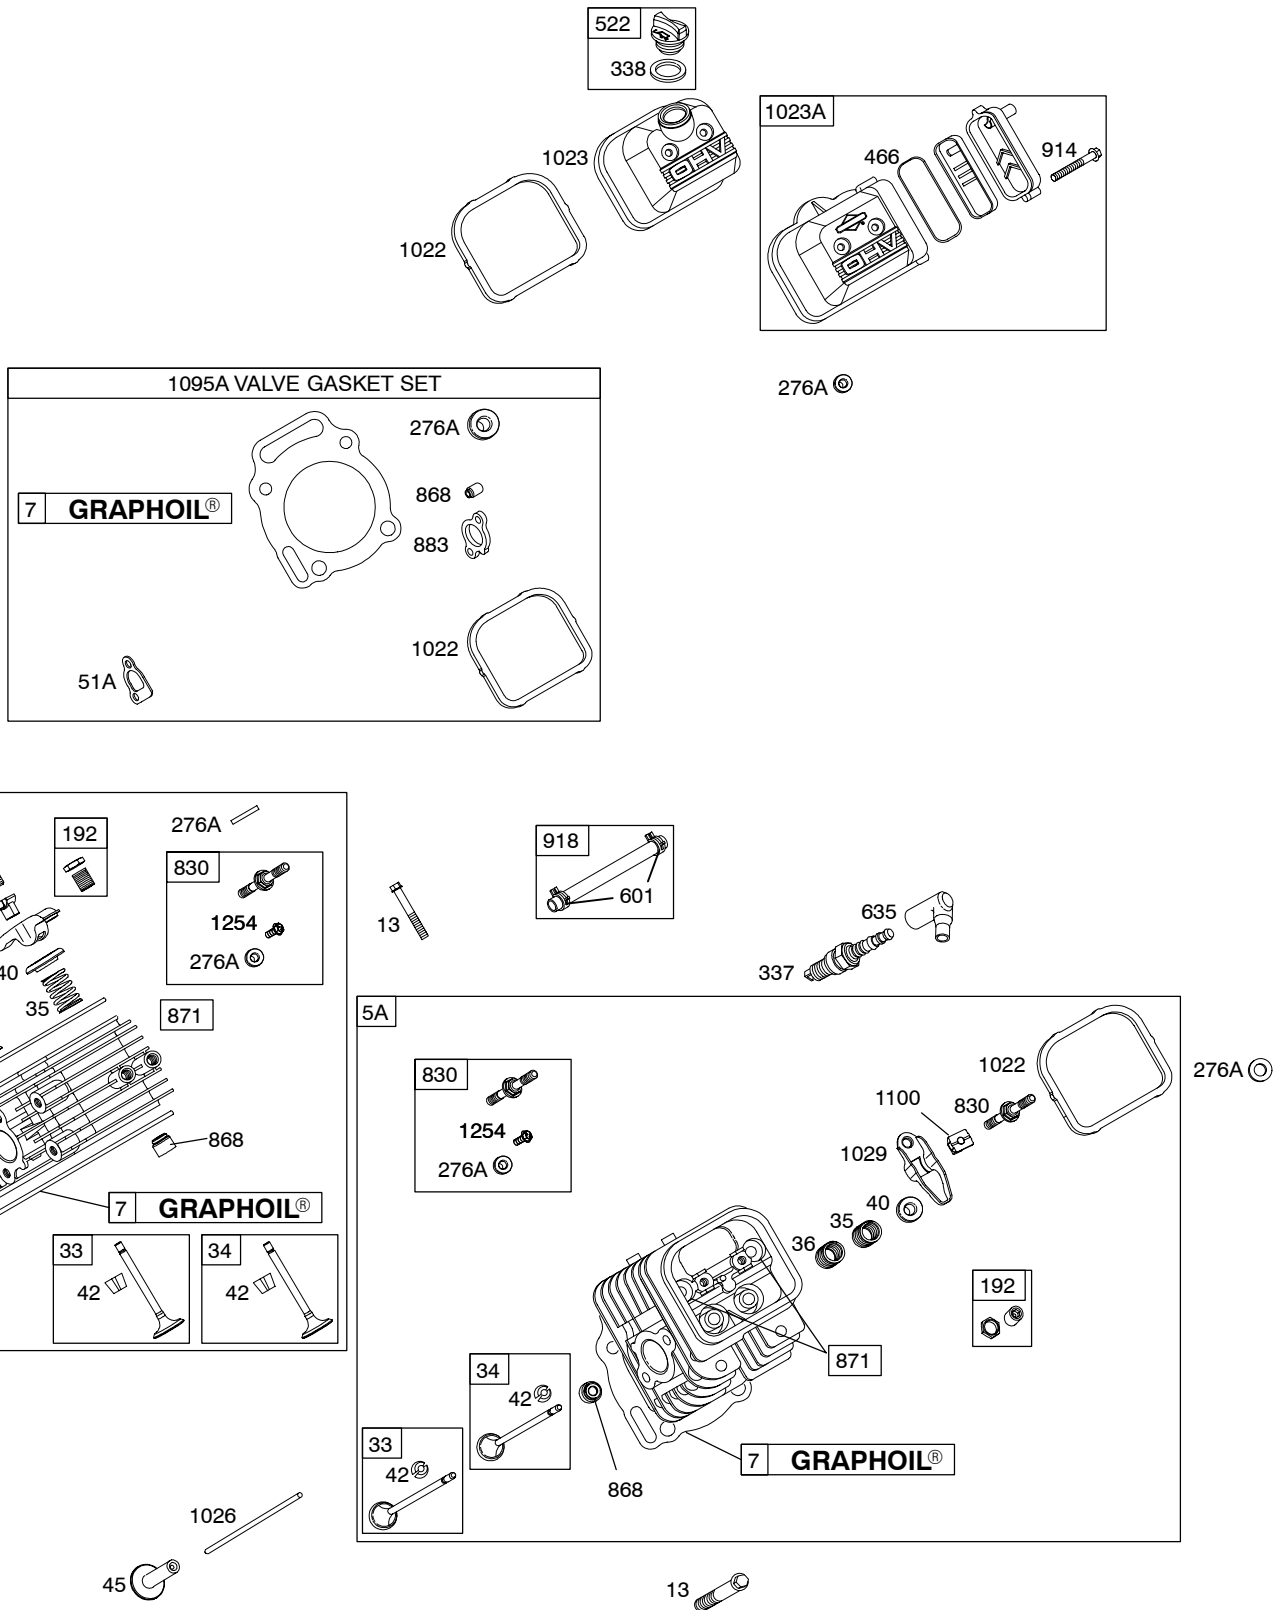

304400

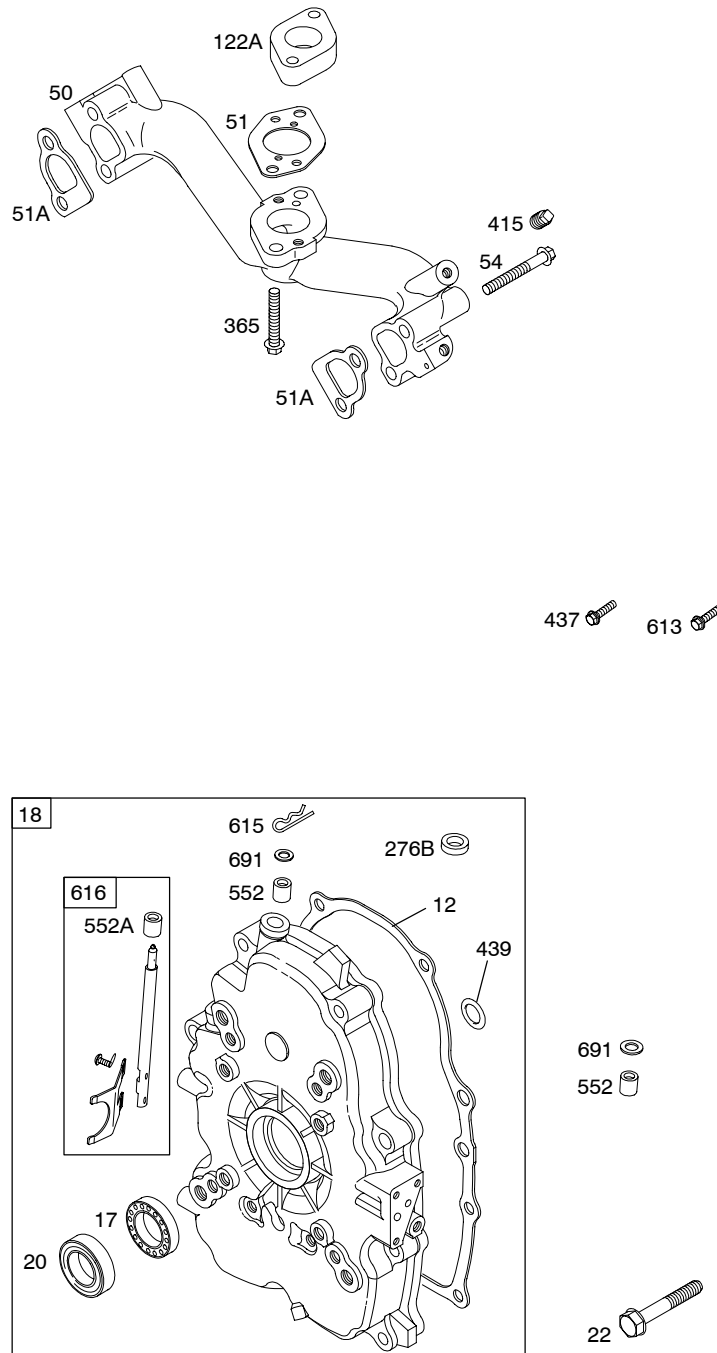


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6065-4 Assemblies include all parts shown in frames. 11/22/2005

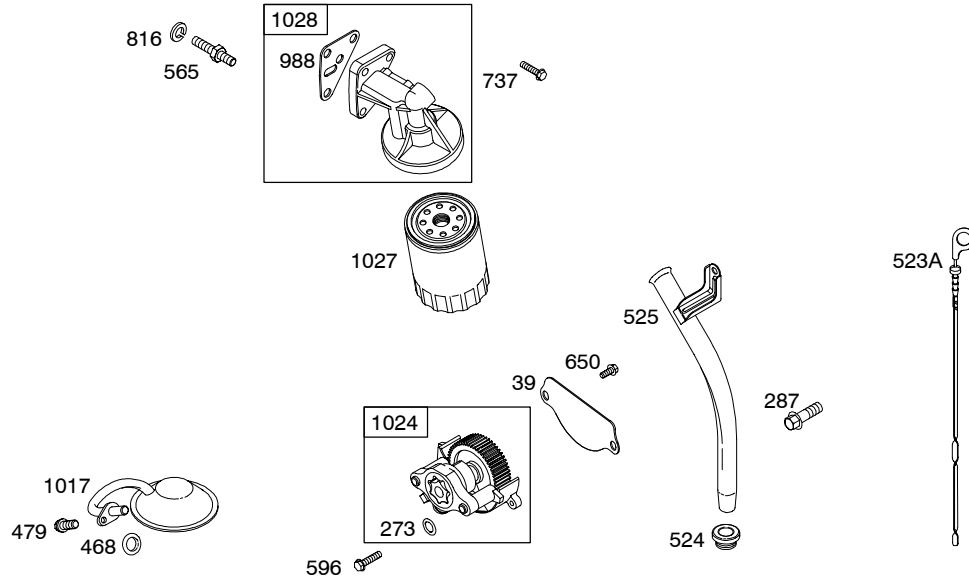


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6065-5 Assemblies include all parts shown in frames. **11/22/2005**

304400

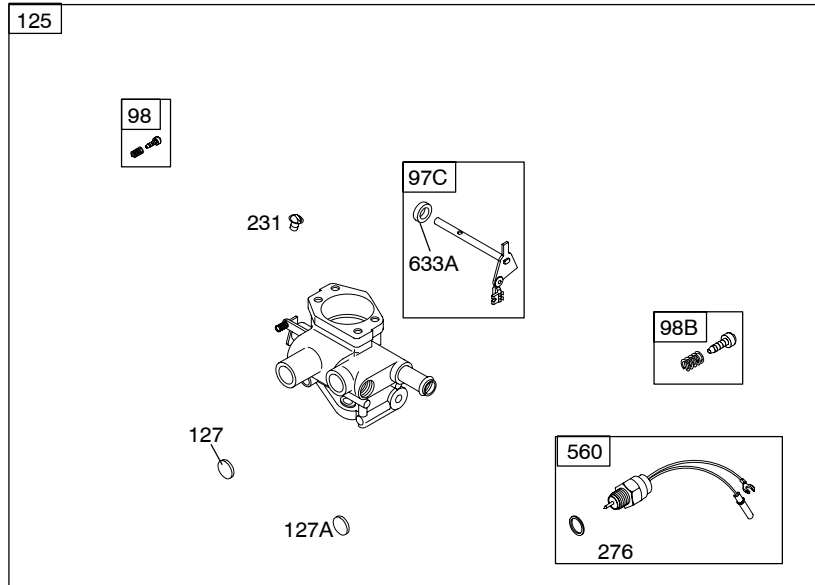


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6065-6 Assemblies include all parts shown in frames. 11/22/2005




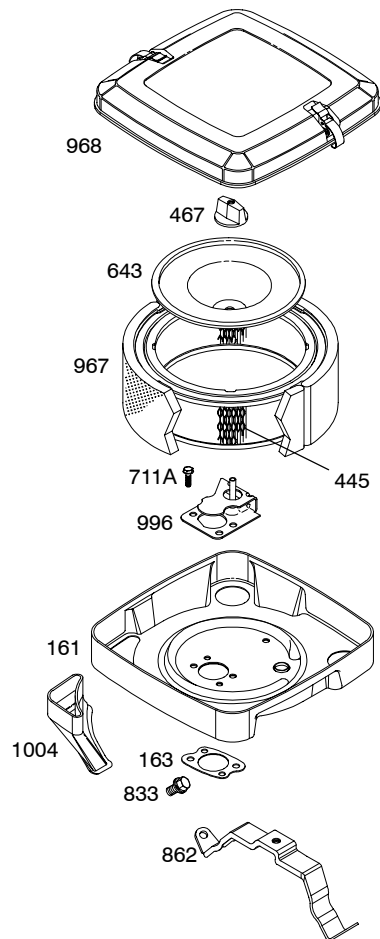


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6065-7 Assemblies include all parts shown in frames. **11/22/2005**


304400

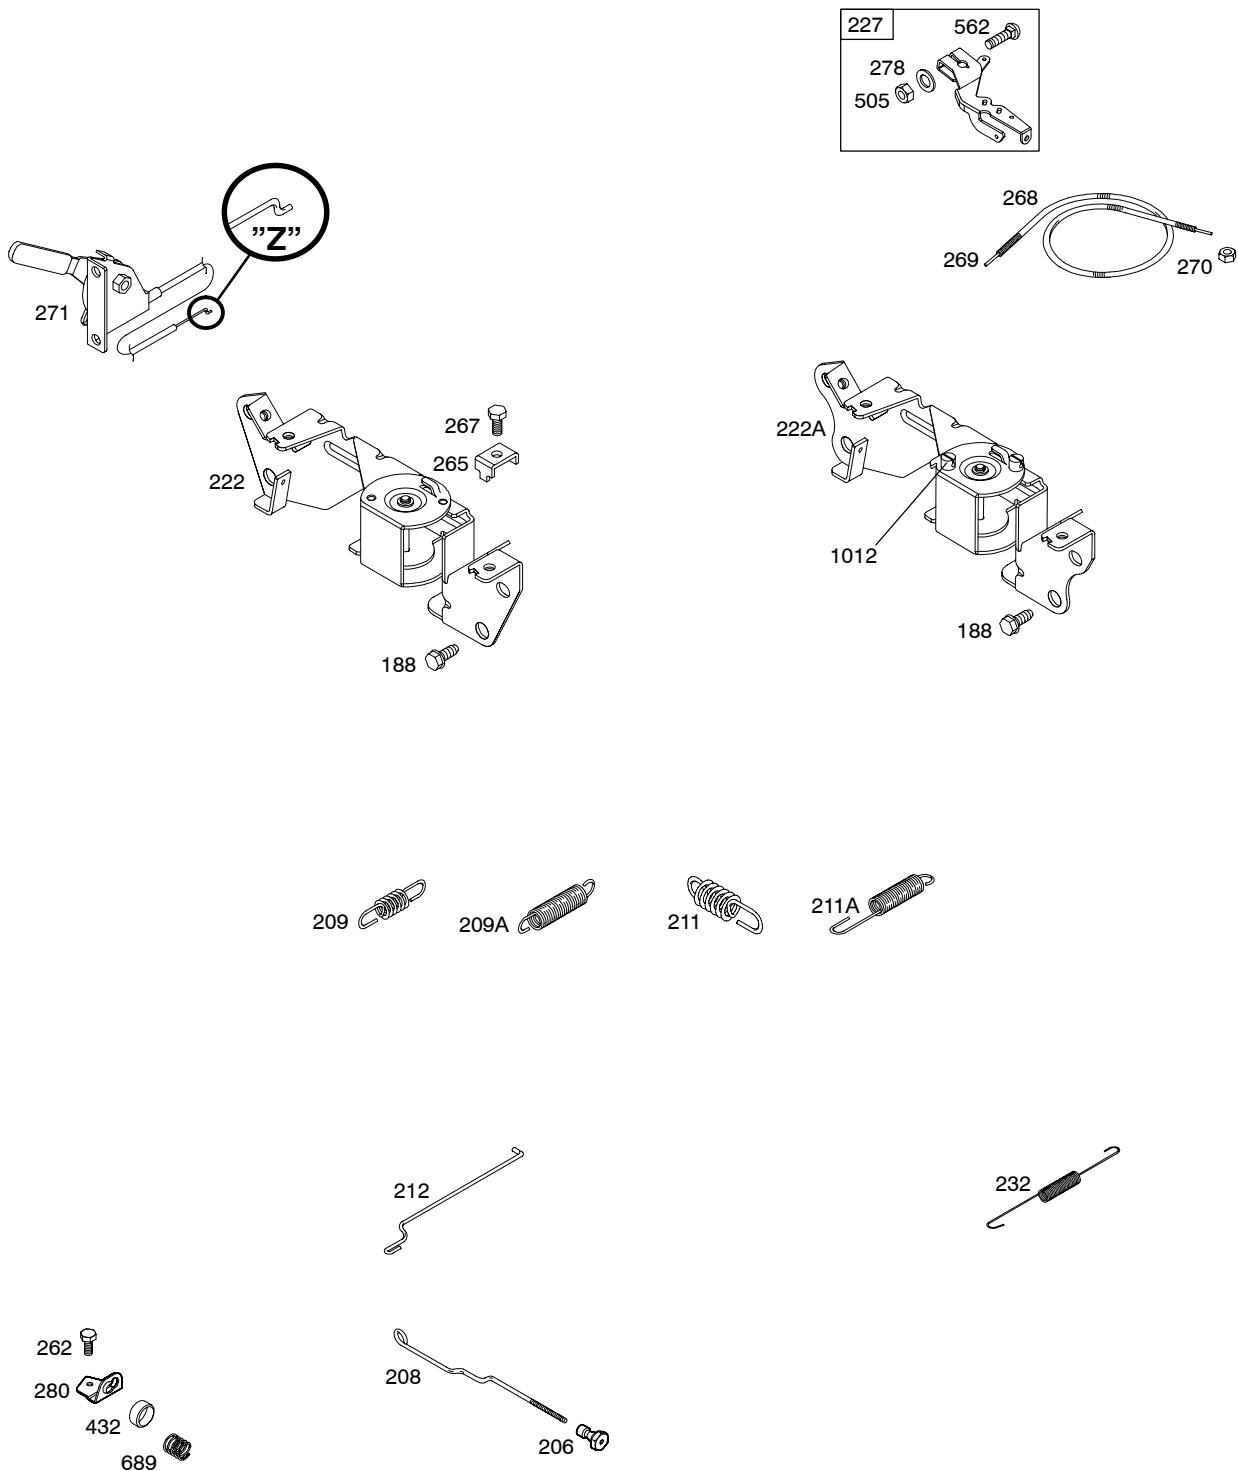





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6065-8 Assemblies include all parts shown in frames. 11/22/2005

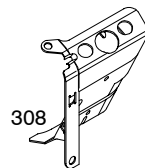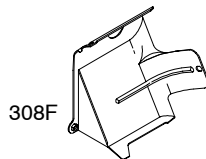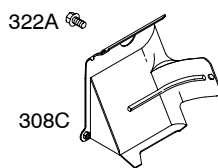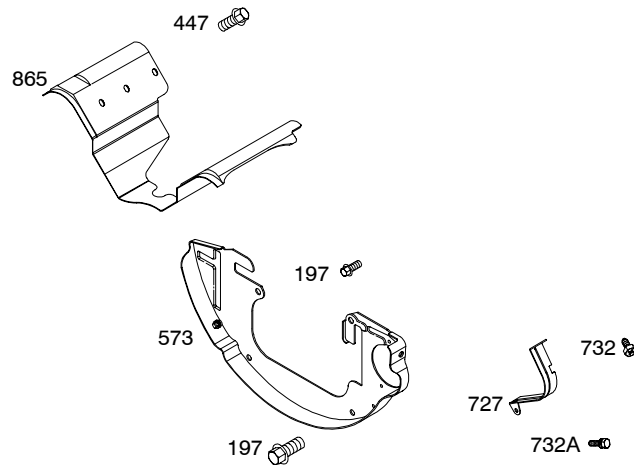



304400


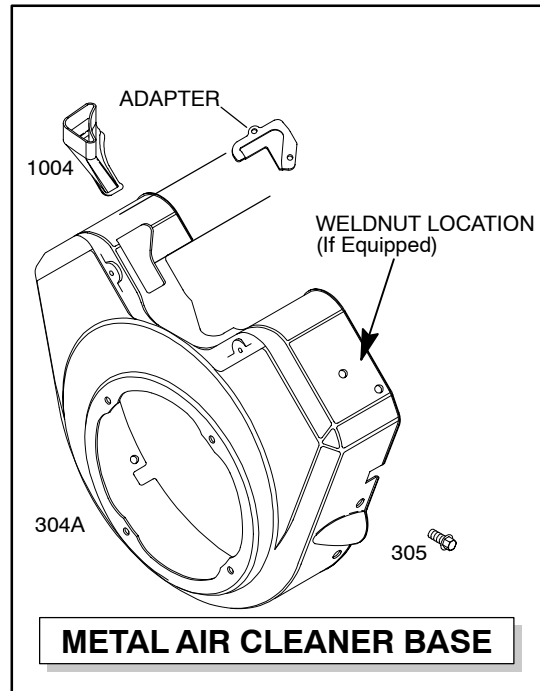


1036 EMISSION LABEL

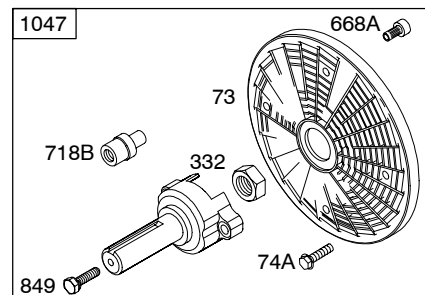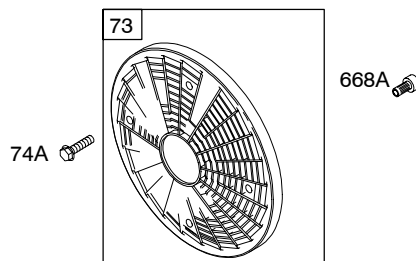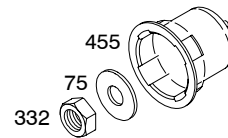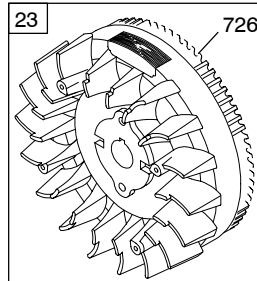

304400

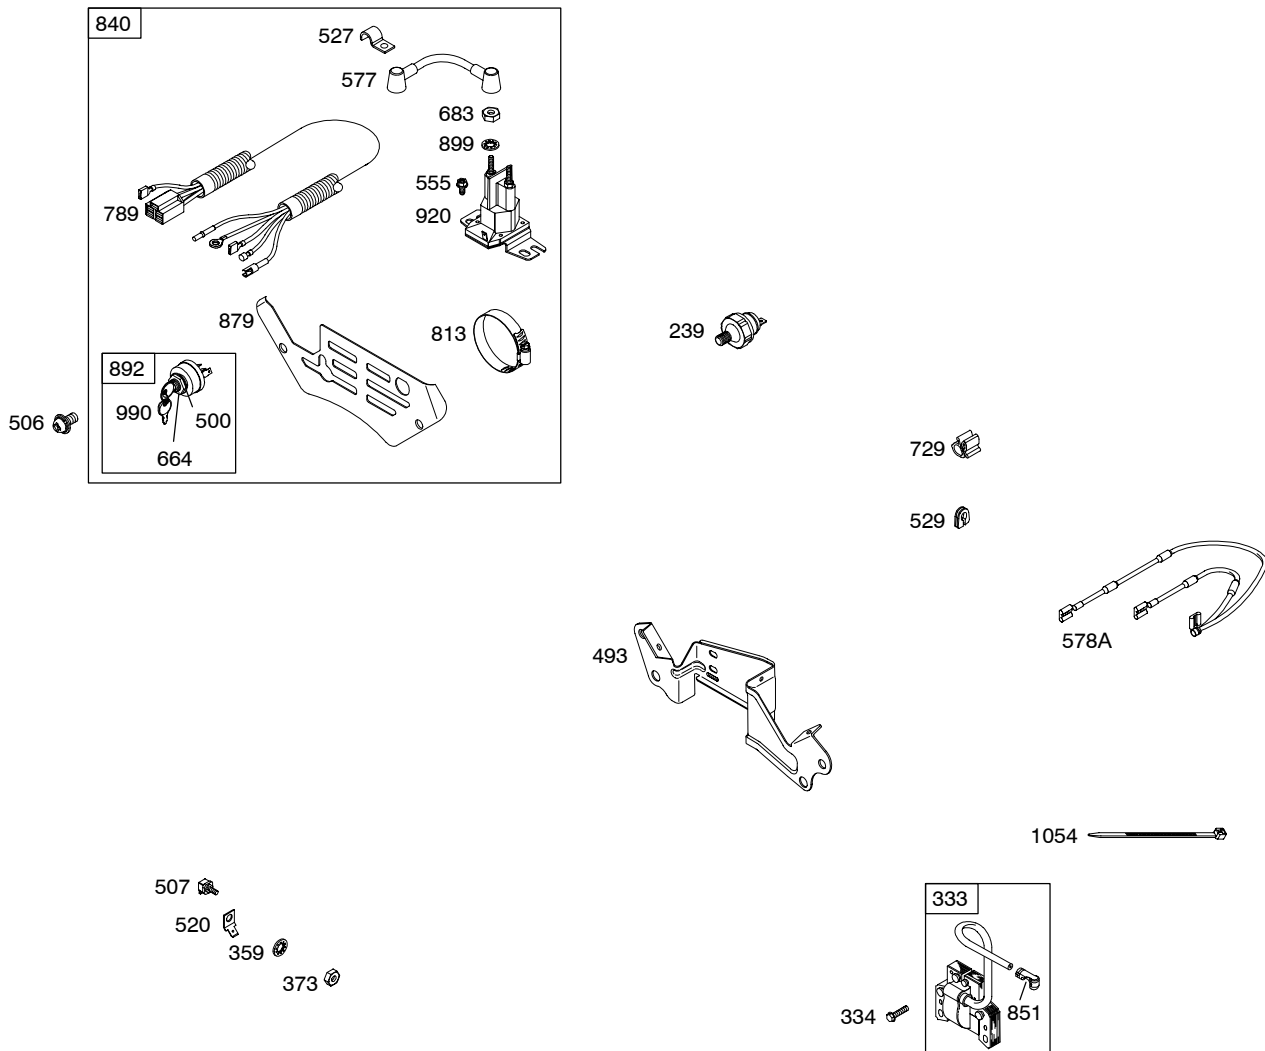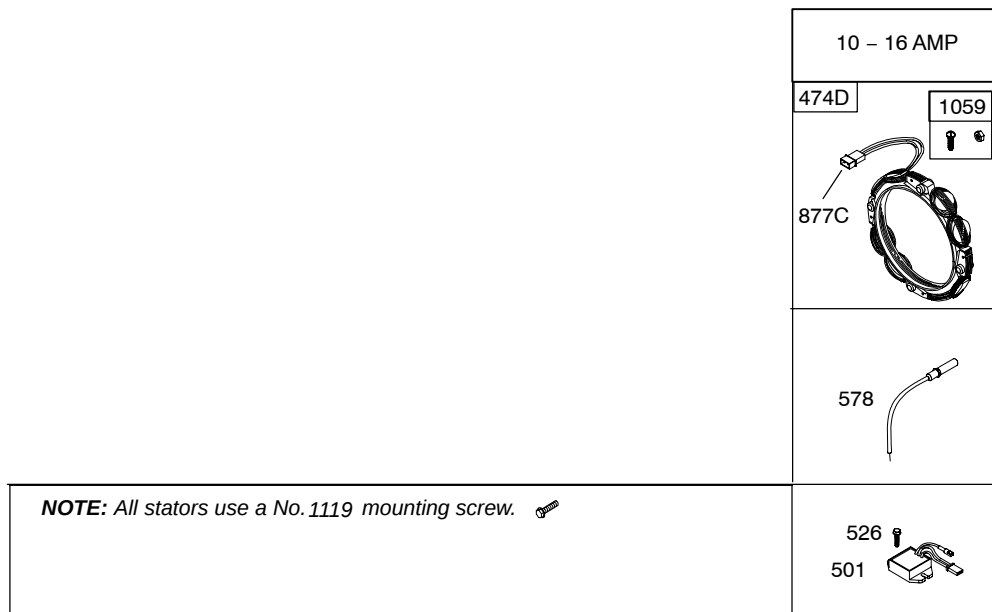

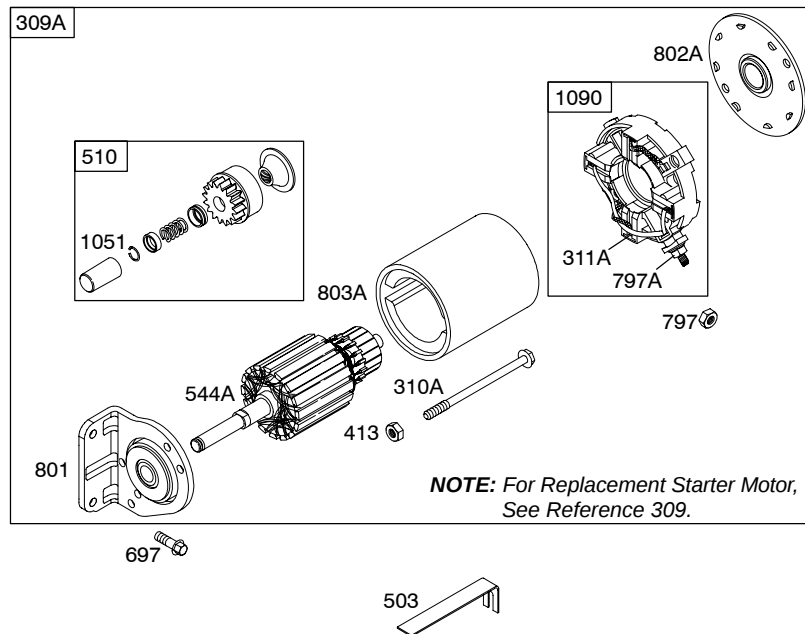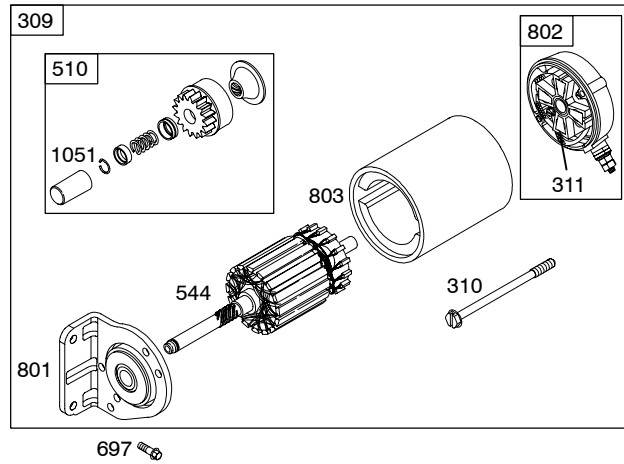

304400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	808690	Cylinder Assembly	25	807619	Piston Assembly	127	694916	Plug-Welch
2	808534	Kit-Bushing/Seal (Magnetos Side)			----- Note -----	127A	806460	Plug-Welch
3	★805101	Seal-Oil (Magnetos Side)			807809 Piston Assembly (.020" Oversize)	146	691639	Key-Timing
5	808688	Head-Cylinder	26	807620	Ring Set	161	691561	Base-Air Cleaner (Metal)
5A	808689	Head-Cylinder			----- Note -----	163	★692081	Gasket-Air Cleaner
7	★△806085	Gasket-Cylinder Head			807810 Ring Set (.020" Oversize)	188	692056	Screw (Control Bracket)
8	808984	Breather Assembly (Used Before Code Date 04060100).	27	690683	Lock-Piston Pin	192	807623	Adjuster-Rocker Arm
9	★809094	Gasket-Breather (Used Before Code Date 04060100).	28	807621	Pin-Piston	197	807163	Screw (Back Plate)
10	690751	Screw (Breather Assembly) (Used Before Code Date 04060100).	29	807900	Rod-Connecting	206	691244	Nut-Governor Adjusting
11	808686	Tube-Breather	32	690698	Screw (Connecting Rod)	208	691549	Rod-Governor Control
12	★691684	Gasket-Crankcase	33	808687	Valve-Exhaust	209	692070	Spring-Governor ----- Note -----
13	692059	Screw (Cylinder Head)	34	807680	Valve-Intake			691506 Spring- Governor Used on Type No(s). 0322.
15	690946	Plug-Oil Drain	35	692084	Spring-Valve (Intake)	209A	690709	Spring-Governor Used on Type No(s). 0323.
16	692161	Crankshaft ----- Note ----- 692163 Crankshaft Used on Type No(s). 0322, 0323.	36	692084	Spring-Valve (Exhaust)	211	692069	Spring-Governed Idle ----- Note ----- 692068 Spring- Governed Idle Used on Type No(s). 0322.
17	690752	Bearing-Ball	39	690745	Deflector-Oil	211A	690707	Spring-Governed Idle Used on Type No(s). 0323.
18	808847	Cover-Crankcase ----- Note ----- 808850 Cover- Crankcase Used on Type No(s). 0323.	40	692058	Retainer-Valve	212	690712	Link-Throttle
20	★805049	Seal-Oil (PTO Side)	42	807683	Keeper-Valve	222	808454	Bracket-Control
22	807362	Screw (Crankcase Cover/Sump)	45	690977	Tappet-Valve	222A	691570	Bracket-Control Used on Type No(s). 0416.
23	808766	Flywheel	46	691557	Camshaft	227	690236	Lever-Governor Control
			50	692124	Manifold-Intake	231	690718	Screw (Choke Valve)
			51	★806457	Gasket-Intake			
			51A	★△692035	Gasket-Intake			
			54	690676	Screw (Intake Manifold)			
			73	494439	Screen-Rotating			
			74A	691647	Screw (Rotating Screen)			
			75	691490	Washer (Flywheel)			
			97C	808397	Shaft-Throttle			
			98	841842	Kit-Idle Speed			
			98B	808177	Kit-Idle Speed			
			122A	690747	Spacer-Carburetor			
			125	808692	Carburetor			

★ Included in Engine Gasket Set-Ref. No. 358.

△ Included in Valve Gasket Set-Ref. No. 1095A.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6065-14

Assemblies include all parts shown in frames.

11/22/2005

304400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
232	692073	Spring-Governor Link	308F	841182	Cover-Cylinder Head (Cylinder 2)	415	690283	Plug
239	690233	Switch-Oil Pressure			(Used After Code Date 03103100).	432	691509	Cap-Spring
262	692083	Screw (Rod Bracket)				437	691902	Screw (Exhaust Manifold)
265	691024	Clamp-Casing	309	691564	Motor-Starter	439	★692154	Seal-O Ring (Crankcase Cover/Sump)
267	692083	Screw (Casing Clamp)	309A		Motor-Starter (For Replacement Starter Motor, Order Reference 309)	445	841359	Filter-Air Cleaner Cartridge (Used After Code Date 04022900).
268	691025	Casing-Control Wire	310	496880	Screw (Starter Motor)	----- Note -----		
269	691026	Wire-Control	310A	690323	Screw (Starter Motor)	394018		Filter-Air Cleaner Cartridge (Used Before Code Date 04030100).
270	691027	Nut (Control Wire Casing)	311	496887	Brush Set	447	807163	Screw (Air Guide Cover)
271	691028	Lever-Control	311A	395538	Brush Set	454	693289	Cap-Breather
273	★690681	Seal-O Ring (Oil Pump)	318	807163	Screw (Mounting Bracket)	455	691517	Cup-Flywheel
276	806998	Washer-Sealing (LP/NG Fuel Switch)	322	841233	Screw (Cylinder Head Cover)	466	806466	Seal-O Ring (Breather Assembly)
276A	★△807085	Washer-Sealing (Used After Code Date 01120200).	322A	692067	Screw (Cylinder Head Cover)	467	691985	Knob-Air Cleaner
		----- Note -----	332	690887	Nut (Flywheel)	468	★690690	Seal-O Ring (Oil Pump Screen)
		691766 Washer-Sealing (Used Before Code Date 01120300).	333	492341	Armature-Magneto	474D	696458	Alternator
276B	690704	Washer-Sealing (Crankcase Cover/Sump)	334	692066	Screw (Magneto Armature)	479	807084	Screw (Oil Pump Screen)
278	842122	Washer (Governor Control Lever)	337	491055s	Plug-Spark	----- Note -----		
280	691526	Bracket-Rod			792015 Plug-Spark Used on Type No(s). 0323.	692537		Screw (Oil Pump Screen) Used on Type No(s). 0323.
287	692062	Screw (Dipstick Tube)	338	★691312	Gasket-Dipstick	493	691177	Bracket-Mounting
304A	808055	Housing-Blower (Red)	358	841188	Gasket Set-Engine (Used After Code Date 01120200).	500	691086	Washer (Key Switch)
		----- Note -----			808704 Gasket Set-Engine (Used Before Code Date 01120300).	501	691185	Regulator
		808408 Housing-Blower (Black)	359	691077	Washer (Ground Terminal)	503	691532	Strap-Starter
305	692056	Screw (Blower Housing)	365	690711	Screw (Carburetor)	505	690238	Nut (Governor Control Lever)
308	841232	Cover-Cylinder Head (Cylinder 1)	373	691612	Nut (Ground Terminal)	506	690677	Screw (Carburetor Cover)
308C	806546	Cover-Cylinder Head (Cylinder 2) (Non Ducted) (Used Before Code Date 03110100).	377	808095	Key-Woodruff			
			413	693587	Nut (Starter Motor)			

★ Included in Engine Gasket Set-Ref. No. 358.

△ Included in Valve Gasket Set-Ref. No. 1095A.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6065-15

Assemblies include all parts shown in frames.

11/22/2005

304400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
507	691972	Insulator	635	692076	Boot-Spark Plug	801	808778	Cap-Drive
510	496881	Drive-Starter	638	691551	Washer (Cylinder Head Cover)	802	496813	Cap-End
520	691084	Terminal-Ground			(Used Before Code	802A	691286	Cap-End
522	491832	Plug-Dipstick/Fill			Date 03110100)	803	690854	Housing-Starter
523A	693175	Dipstick			Retainer-Air Filter	803A	693547	Housing-Starter
524	★693172	Seal-Dipstick Tube	643	692079		813	690635	Clamp
525	693174	Tube-Dipstick	650	841233	Screw (Oil Deflector)	816	690706	Washer (Oil Filter Adapter)
526	692067	Screw (Regulator)	664	691087	Nut (Key Switch)	830	809157	Stud-Rocker Arm
527	690423	Clamp-Tube			Spacer	833	841233	Screw (Air Cleaner Mounting
529	690744	Grommet	668A	691500				Strap/Stud)
544		Armature-Starter (For Replacement	683	691029	Nut (Starter Solenoid)	840	692096	Kit-Panel
		Armature, Order	689	691272	Spring-Friction	849	691088	Screw (Stub Shaft)
		Reference 309)	691	★690680	Seal-Governor Shaft	851	493880	Terminal-Spark Plug
544A		Armature-Starter (For Replacement	697	692062	Screw (Drive Cap)	862	692153	Strap/Stud-Air Cleaner
		Armature, Order	711A	690677	Screw (Carburetor Shield)			Mounting
		Reference 309)	718	806469	Pin-Locating	865	841312	Cover-Air Guide
552	690701	Bushing-Governor	718B	841581	Pin-Locating	868	★△691963	Seal-Valve
		Crank	726		Gear-Ring (Steel)(See Reference	871	692057	Bushing-Valve Guide
552A	806686	Bushing-Governor			23 for Service)	877C	399916	Wire/Connector- Alternator
		Crank			Cover-Starter Drive			(2 Wires, 7-53/64"
555	692067	Screw (Starter Solenoid)	727	841313				Long)(2 Bare Wire
560	808693	Switch-LP/NG Fuel	729	690586	Clip-Wire			Ends, And Insulated
562	690239	Bolt (Governor Control	732	690688	Screw (Starter Drive Cover)			Snap Connect Male
		Lever)	732A	841233	Screw (Starter Drive Cover)	879	806648	Cover-Carburetor
565	690682	Stud (Oil Filter Adapter)	737	690679	Screw (Oil Filter Adapter)	883	★△691613	Gasket-Exhaust
572	690686	Baffle-Breather (Used Before Code	741	691530	Gear-Timing	892	692318	Switch-Key
		Date 04060100).	789	691578	Harness-Wiring	899	691077	Washer (Starter Solenoid)
573	841310	Plate-Back			----- Note -----	914	806421	Screw (Rocker Cover)
577	690795	Cable-Starter			691996 Harness- Wiring	918	393815	Hose-Vacuum
578	692306	Wire Assembly			Used on Type No(s).	920	691656	Solenoid-Starter
578A	692319	Wire Assembly			0323, 0416.	967	272490	Filter-Pre Cleaner
596	691492	Screw (Oil Pump)	797	691029	Nut (Brush Retainer)	968	699959	Cover-Air Cleaner
598	807625	Shim-End Play (Crankshaft or	797A	693167	Nut (Brush Retainer)	988	★692063	Gasket-Oil Adapter
		Camshaft Bearing)				990	691959	Key Set
601	691145	Clamp-Hose				996	691577	Shield-Carburetor
613	691902	Screw (Muffler)				1004	690743	Duct-Air
615	691550	Retainer-Governor				1012	690592	Retainer-Link
		Shaft				1017	690900	Screen-Oil Pump
616	806685	Crank-Governor						
633A	695414	Seal-Choke/Throttle						
		Shaft						

★ Included in Engine Gasket Set-Ref. No. 358.

△ Included in Valve Gasket Set-Ref. No. 1095A.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

304400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1019	841626	Kit-Label	1047	841580	Shaft-Stub	1100	690973	Pivot-Rocker Arm
1022	★△806039	Gasket-Rocker Cover	1051	691124	Ring-Retaining	1119	691552	Screw
1023	690758	Cover-Rocker	1054	280275	Tie-Cable			(Alternator)
1023A	808648	Cover-Rocker	1058	275368	Operator's Manual	1254	807084	Screw
1024	693185	Pump-Oil	1059	698516	Kit-Screw/Washer			(Rocker Cover Stud)
1025	690689	Spool-Governor	1090	691293	Retainer-Brush			(Used After Code Date
1026	691836	Rod-Push (Intake)(Steel)	1095A	841191	Gasket Set-Valve (Used After Code Date	1330	272144	Repair Manual
		----- Note -----			01120200).			
		691758 Rod-Push			----- Note -----			
		(Exhaust)(Aluminum)			808391 Gasket			
1027	492932	Filter-Oil			Set-Valve			
1028	808235	Adapter-Oil Filter			(Used Before Code			
1029	807323	Arm-Rocker			Date 01120300).			
1036		Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer)						

★ Included in Engine Gasket Set-Ref. No. 358.

△ Included in Valve Gasket Set-Ref. No. 1095A.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6065-17

Assemblies include all parts shown in frames.

11/22/2005