



359400

Illustrated Parts List

Model Series

359400

TYPE NUMBERS
0044.

TABLE OF CONTENTS

 
Air Cleaner	7
Alternator	11
Blower Housing	9
Camshaft	2
Carburetor	6
Controls	8
Crankcase Cover	4
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	12
Exhaust System	8
Flywheel	10
Fuel Supply	8
Gasket Set - Engine	2
Gasket Set - Valves	3
Governor Spring	8
Ignition	11
Intake Manifold	4
Lubrication	5
Piston, Rings, Connecting Rod	2
Shrouds	9
Valves	3









PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.





359400

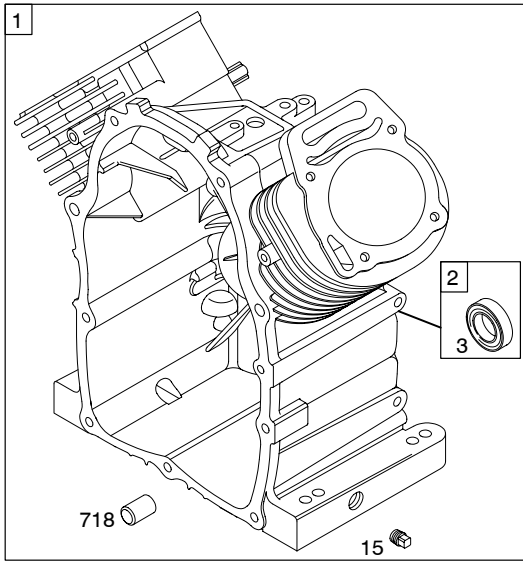

      - 1019 LABEL KIT
- 1058 OPERATOR'S MANUAL
- 1330 REPAIR MANUAL

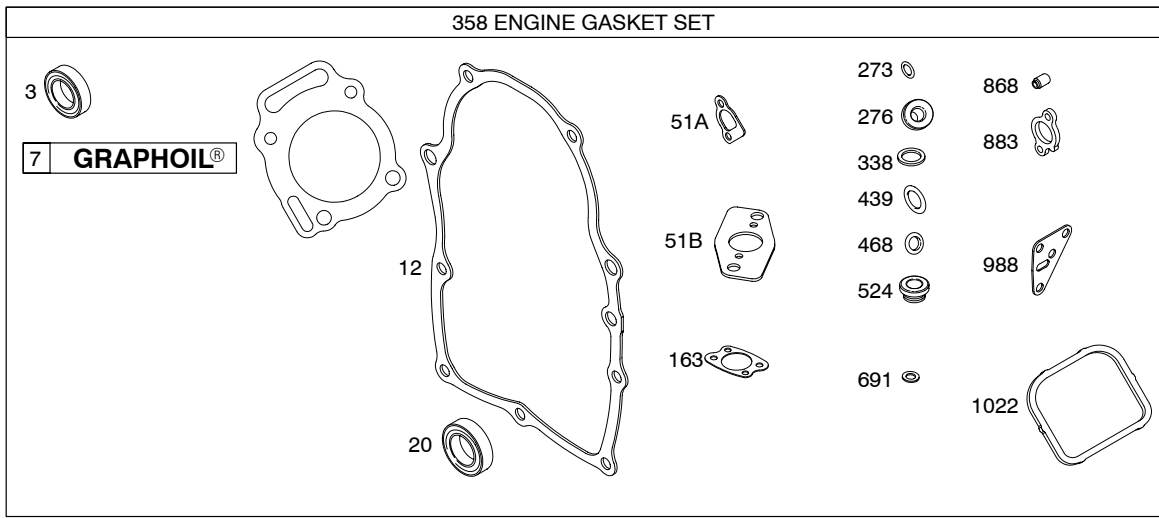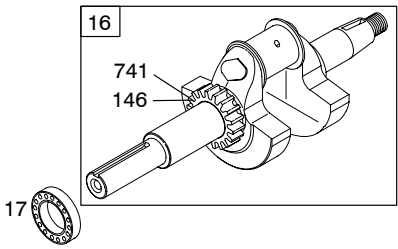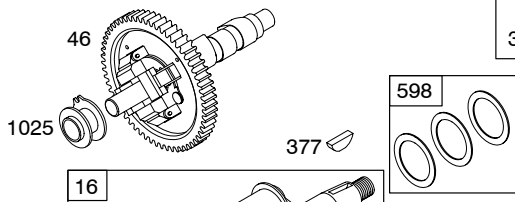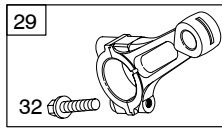
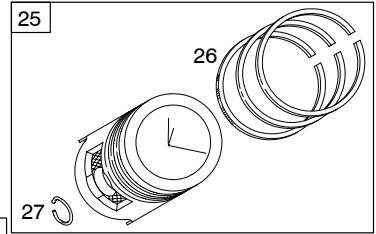


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3450-2 Assemblies include all parts shown in frames. 12/15/2005

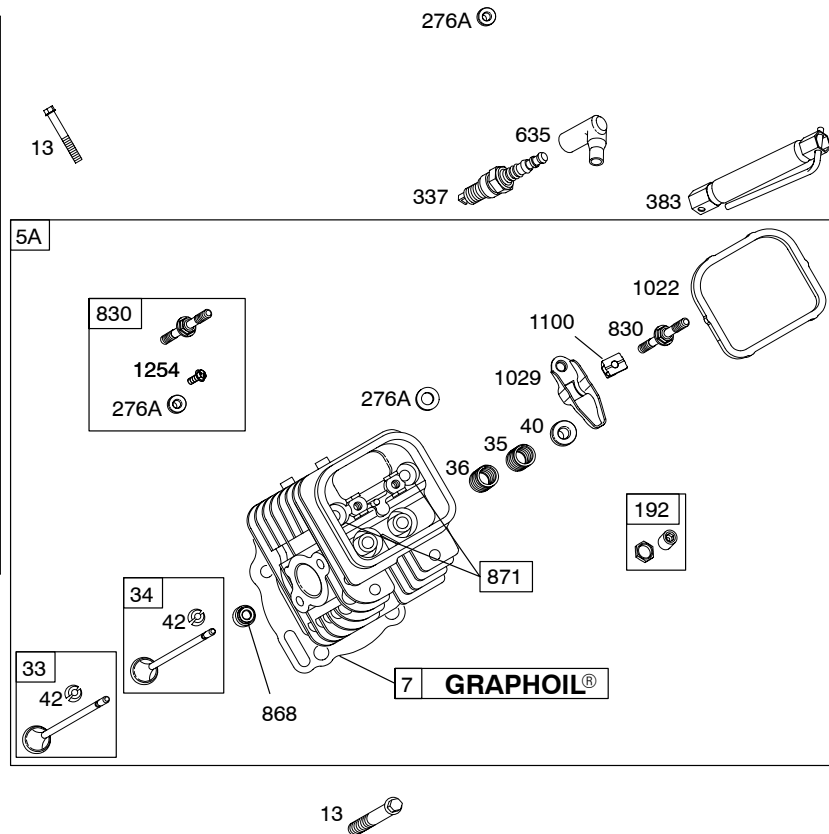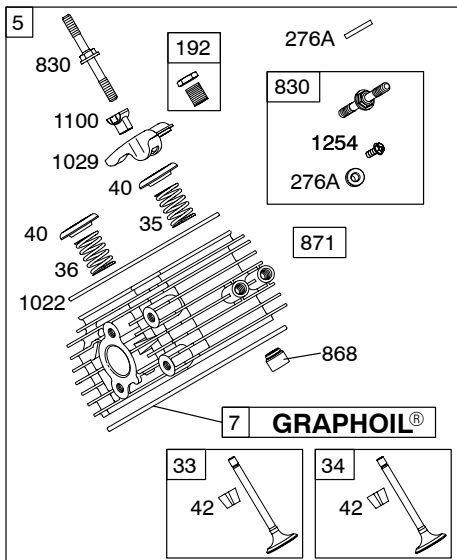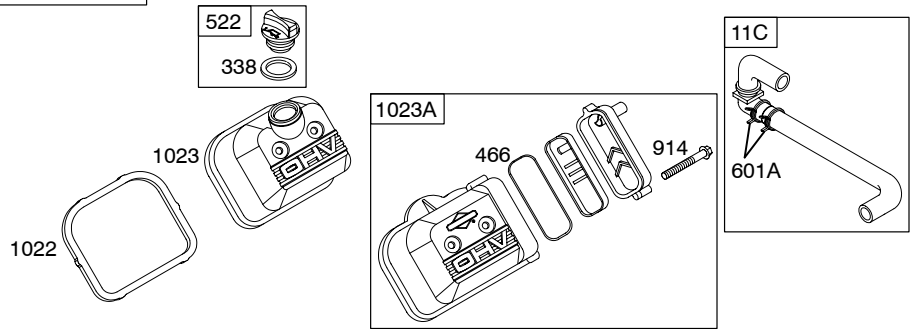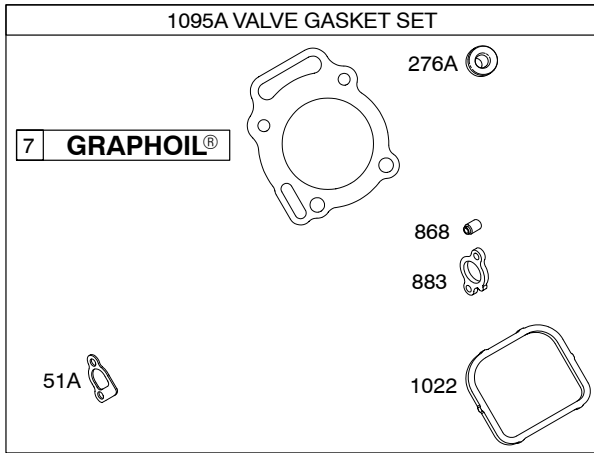    


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3450-3 Assemblies include all parts shown in frames. 12/15/2005

  359400

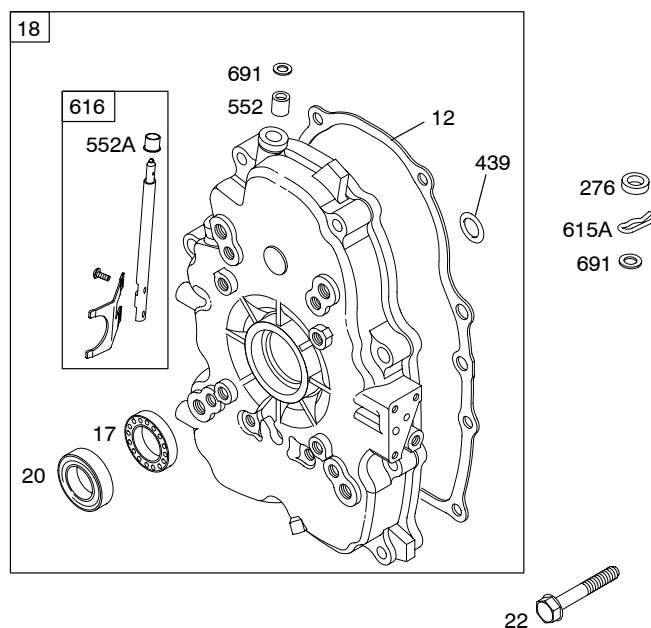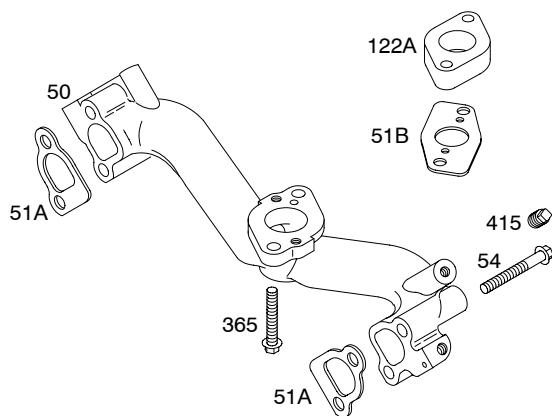


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3450-4 Assemblies include all parts shown in frames. 12/15/2005

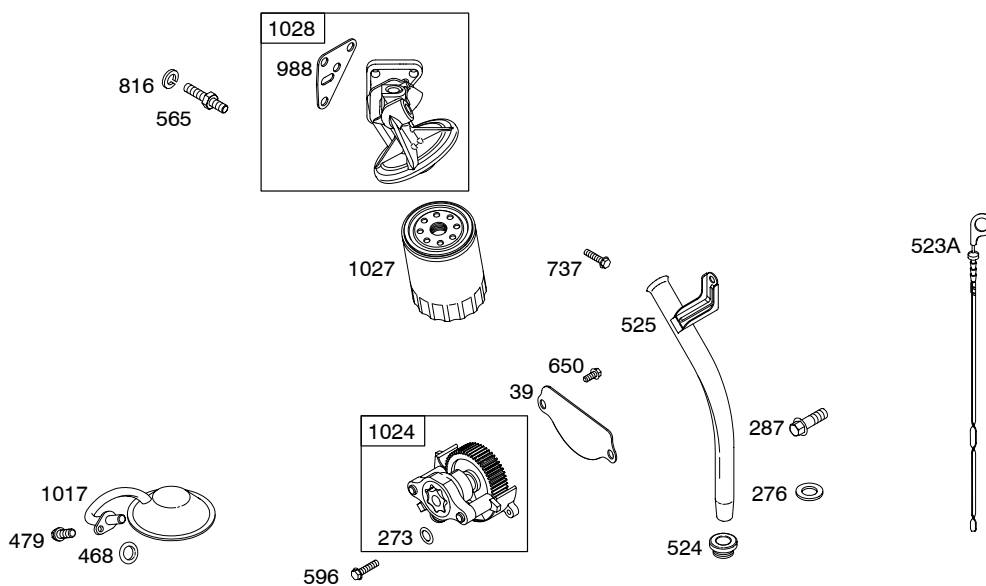 


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3450-5 Assemblies include all parts shown in frames. 12/15/2005

 359400








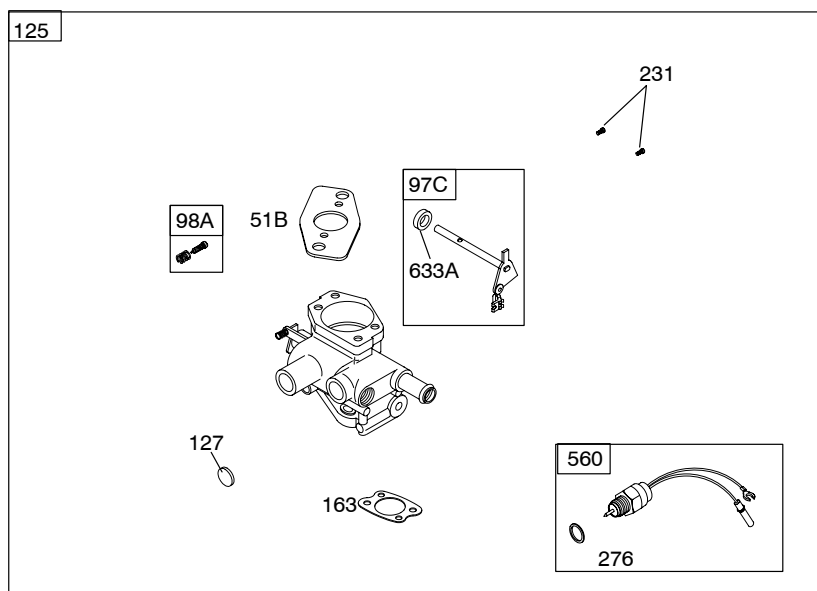


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3450-6 Assemblies include all parts shown in frames. 12/15/2005


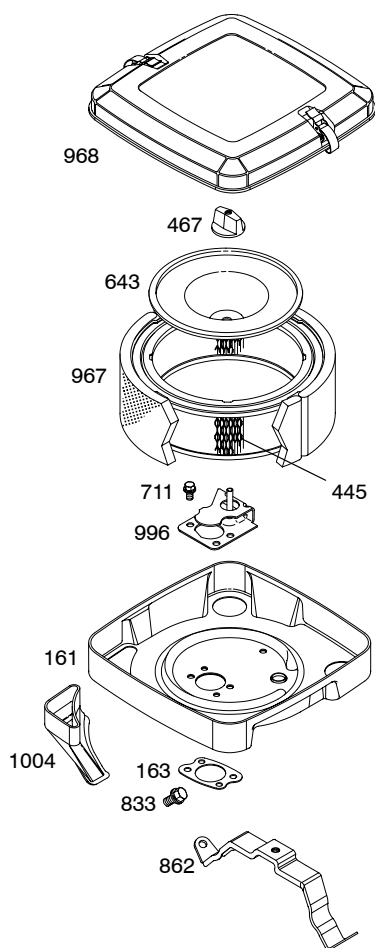 


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3450-7 Assemblies include all parts shown in frames. 12/15/2005

        359400

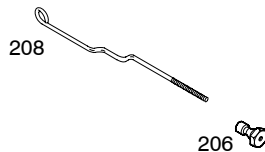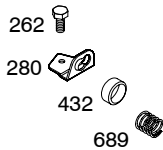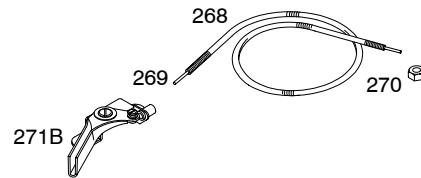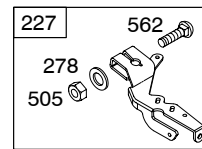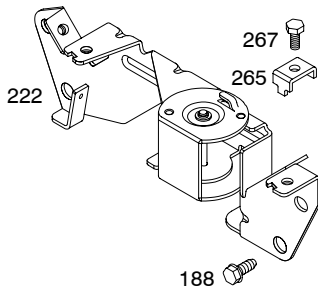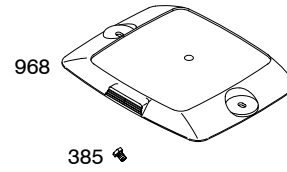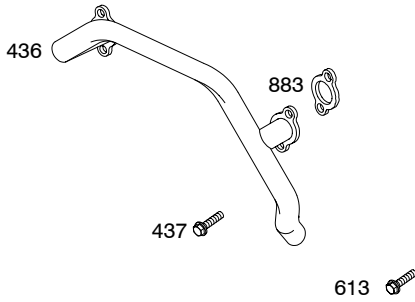

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3450-8 Assemblies include all parts shown in frames. 12/15/2005



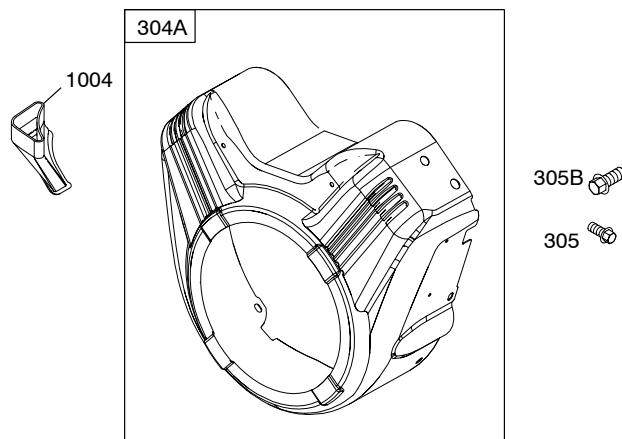 
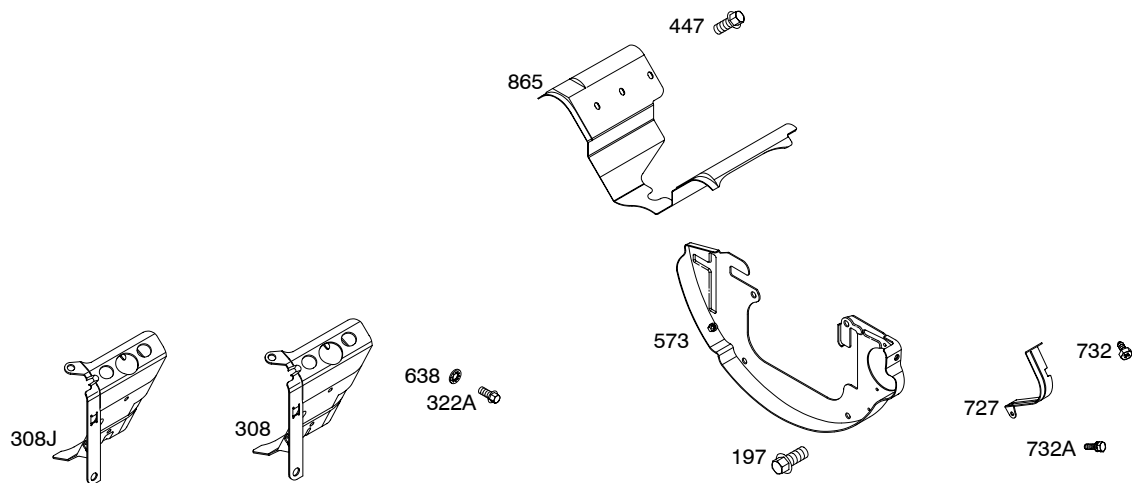 


METAL AIR CLEANER BASE

     

 
 


1036 EMISSION LABEL


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3450-9 Assemblies include all parts shown in frames. 12/15/2005

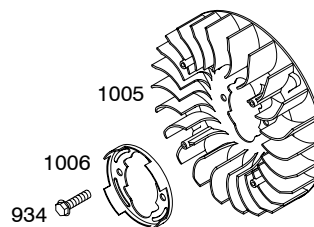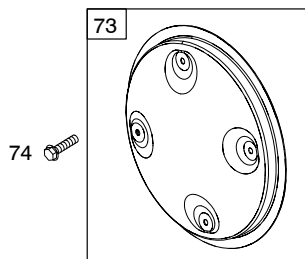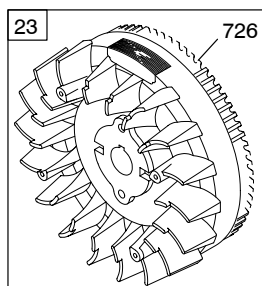359400

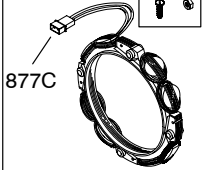



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3450-10 Assemblies include all parts shown in frames. 12/15/2005

	10 AMP	16 AMP
	<div data-bbox="889 233 954 264">474D</div> <div data-bbox="1024 233 1089 306">1059</div> <div data-bbox="889 348 954 380">877C</div> 	<div data-bbox="1097 233 1162 264">474D</div> <div data-bbox="1232 233 1297 306">1059</div> <div data-bbox="1097 348 1162 380">877C</div> 
	<div data-bbox="932 527 980 558">578</div> 	<div data-bbox="1136 527 1185 558">578</div> 
<p>NOTE: All stators use a No. 1119 mounting screw. </p>	<div data-bbox="1040 667 1089 699">526</div> <div data-bbox="1024 699 1073 730">501</div> 	

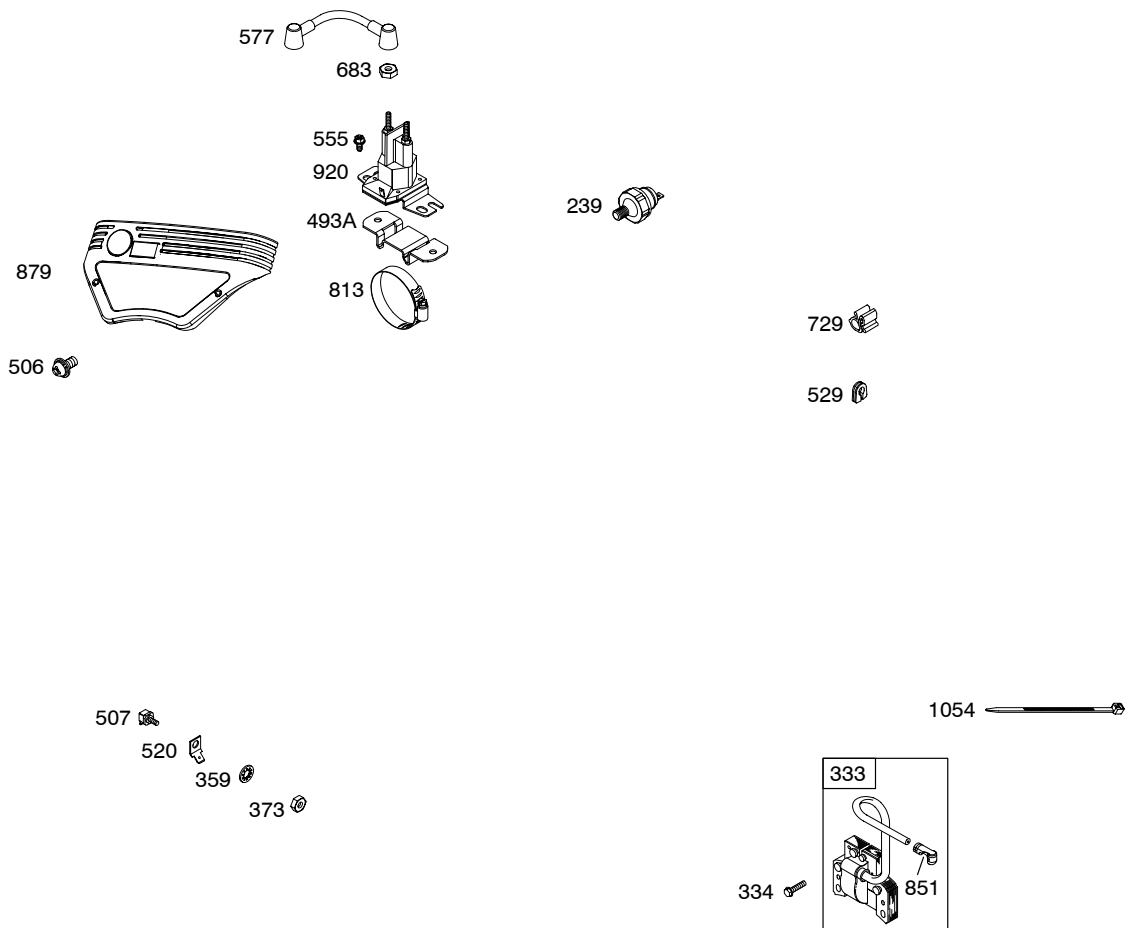 

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3450-11 Assemblies include all parts shown in frames. **12/15/2005**

  359400

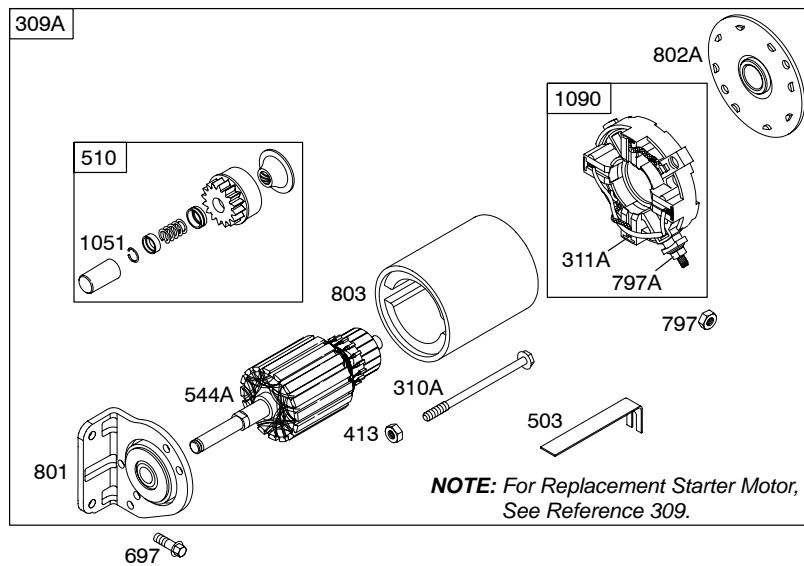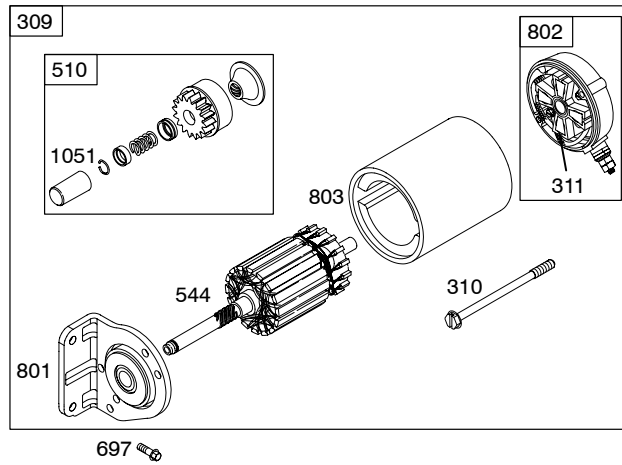

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3450-12 Assemblies include all parts shown in frames. 12/15/2005

359400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	808702	Cylinder Assembly	29	807900s	Rod-Connecting (Standard)	211A	692068	Spring-Governed Idle
2	808534	Kit-Bushing/Seal (Magneto Side)			----- Note -----	212	690712	Link-Throttle
3	★805101s	Seal-Oil (Magneto Side)			807803 Rod-Connecting (.020" Undersize)	222	808454	Bracket-Control
5	808698	Head-Cylinder (Cylinder 1)	32	690698	Screw (Connecting Rod)	227	690236	Lever-Governor Control
5A	808699	Head-Cylinder (Cylinder 2)	33	808687	Valve-Exhaust	231	690718	Screw (Choke Valve)
7	Δ★690888	Gasket-Cylinder Head	34	807680	Valve-Intake	232	692073	Spring-Governor Link
11C	808686	Tube-Breather	35	692084	Spring-Valve (Intake)	239	491657s	Switch-Oil Pressure
12	★691684	Gasket-Crankcase	36	692084	Spring-Valve (Exhaust)	262	692083	Screw (Rod Bracket)
13	692059	Screw (Cylinder Head)	39	690745	Deflector-Oil	265	691024	Clamp-Casing
15	690946	Plug-Oil Drain	40	692058	Retainer-Valve	267	692083	Screw (Casing Clamp)
16	809811	Crankshaft	42	807683	Keeper-Valve	268	691025	Casing-Control Wire (Cut To Required Length)
17	690752	Bearing-Ball	45	690977	Tappet-Valve	269	691026	Wire-Control (Cut To Required Length)
18	808847	Cover-Crankcase	46	691557	Camshaft	270	691027	Nut (Control Wire Casing)
20	★805049s	Seal-Oil (PTO Side)	50	692124	Manifold-Intake	271B	691028	Lever-Control
22	807362	Screw (Crankcase Cover/Sump)	51A	★Δ692035	Gasket-Intake (Manifold to Head)	273	★690681	Seal-O Ring (Oil Pump)
23	809236	Flywheel (Steel Ring Gear)	51B	★806457	Gasket-Intake (Manifold/Carburetor Spacer)	276	806998	Washer-Sealing (LP/NG Fuel Switch)
25	808326	Piston Assembly (Standard)	54	690676	Screw (Intake Manifold)	276A	★Δ807085	Washer-Sealing (Head)
		----- Note -----	73	841440	Screen-Rotating	278	842122	Washer (Governor Control Lever)
		808336 Piston Assembly (.010" Oversize)	74	841441	Screw (Rotating Screen)	280	691526	Bracket-Rod
		808337 Piston Assembly (.020" Oversize)	97C	808397	Shaft-Throttle	287	692062	Screw (Dipstick Tube)
		808338 Piston Assembly (.030" Oversize)	98A	808177	Kit-Idle Speed	304A	841398	Housing-Blower
26	807889	Ring Set (Standard)	122A	690747	Spacer-Carburetor	305	692056	Screw (Blower Housing) (M8 X 14)
		----- Note -----	125	808692	Carburetor	305B	807163	Screw (Blower Housing)
		807994 Ring Set (.010" Oversize)	127	806460	Plug-Welch	308	841232	Cover-Cylinder Head (Cylinder 1)
		807995 Ring Set (.020" Oversize)	146	691639	Key-Timing	308J	841182	Cover-Cylinder Head (Cylinder 2)
		807996 Ring Set (.030" Oversize)	161	691561	Base-Air Cleaner (Metal)	309	691564	Motor-Starter
27	690683	Lock-Piston Pin	163	★692081	Gasket-Air Cleaner			
28	807886	Pin-Piston	188	692056	Screw (Control Bracket)			
			192	807623	Adjuster-Rocker Arm			
			197	807163	Screw (Back Plate)			
			206	691244	Nut-Governor Adjusting			
			208	691549	Rod-Governor Control			
			209	691506	Spring-Governor			

★ Included in Engine Gasket Set-Ref. No. 358.

Δ Included in Valve Gasket Set-Ref. No. 1095A.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3450-13 Assemblies include all parts shown in frames. **12/15/2005**

359400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309A		Motor-Starter (For Replacement Starter Motor, Order Reference 309)	447	841233	Screw (Air Guide Cover)	552A	806686	Bushing-Governor Crank
310	690323	Screw (Starter Motor) (4 7/16" Long)	454	693289	Cap-Breather	555	692067	Screw (Starter Solenoid)
310A	692329	Screw (Starter Motor)	466	806466	Seal-O Ring (Breather Assembly)	560	808693	Switch-LP/NG Fuel
311	496887	Brush Set	467	691985	Knob-Air Cleaner	562	690239	Bolt (Governor Control Lever)
311A	497608	Brush Set	468	★690690	Seal-O Ring (Oil Pump Screen)	565	690682	Stud (Oil Filter Adapter)
322A	841233	Screw (Cylinder Head Cover)	474D	696458	Alternator (10-16 Amp Regulated)	573	841310	Plate-Back
332	690887	Nut (Flywheel)	479	807084	Screw (Oil Pump Screen)	577	690795	Cable-Starter
333	492341	Armature-Magneto	493A	691177	Bracket-Mounting (Solenoid)	578	692319	Wire Assembly
334	692066	Screw (Magneto Armature)	501	691185	Regulator (10-16 Amp Regulated)	596	691492	Screw (Oil Pump)
337	792015	Plug-Spark	503	691532	Strap-Starter	598	807625	Shim-End Play (Crankshaft)
338	★691312	Gasket-Dipstick	505	690238	Nut (Governor Control Lever)	601A	691145	Clamp-Hose
358	841188	Gasket Set-Engine	506	807120	Screw (Carburetor Cover)	613	692056	Screw (Muffler)
359	691077	Washer (Ground Terminal)	507	691972	Insulator	615A	691550	Retainer-Governor Shaft
363	19203	Puller-Flywheel	510	496881	Drive-Starter	616	806685	Crank-Governor
365	690711	Screw (Carburetor)	520	691084	Terminal-Ground	633A	695414	Seal-Choke/Throttle Shaft
373	691612	Nut (Ground Terminal)	522	491832	Plug-Dipstick/Fill	635	692076	Boot-Spark Plug
377	808095	Key-Woodruff	523A	693175	Dipstick	638	691551	Washer (Cylinder Head Cover)
383	19374s	Wrench-Spark Plug	524	★693172	Seal-Dipstick Tube	643	692079	Retainer-Air Filter
385	807084	Screw (Fuel Pump)	525	693174	Tube-Dipstick	650	692539	Screw (Oil Deflector)
413	693587	Nut (Starter Motor)	526	692067	Screw (Regulator)	683	691029	Nut (Starter Solenoid)
415	690283	Plug	529	690744	Grommet	689	691272	Spring-Friction
432	691509	Cap-Spring	544		Armature-Starter (For Replacement Armature, Order Reference 309)	691	★690680	Seal-Governor Shaft
436	692061	Manifold-Exhaust (Lo Mount)(Oil Filter Side)	544A		Armature-Starter (For Replacement Armature, Order Reference 309)	697	692062	Screw (Drive Cap)
437	691902	Screw (Exhaust Manifold)	552	690701	Bushing-Governor Crank (Output End)	711	841233	Screw (Carburetor Shield)
439	★692154	Seal-O Ring (Crankcase Cover/Sump)				718	806469	Pin-Locating Gear-Ring (Steel)(See Reference 23 for Service)
445	841359	Filter-Air Cleaner Cartridge				726		
						727	841313	Cover-Starter Drive (Black)
						729	690586	Clip-Wire

★ Included in Engine Gasket Set-Ref. No. 358.

△ Included in Valve Gasket Set-Ref. No. 1095A.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

359400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
732	690688	Screw (Starter Drive Cover)	868	★△691963	Seal-Valve	1024	693185	Pump-Oil
732A	841233	Screw (Starter Drive Cover)	871	692057	Bushing-Valve Guide	1025	690689	Spool-Governor
737	690679	Screw (Oil Filter Adapter)	877C	399916	Wire/Connector- Alternator	1026	691836	Rod-Push (Intake)(Steel)
741	691530	Gear-Timing	879	841607	Cover-Carburetor			----- Note -----
797	691029	Nut (Brush Retainer)	883	★△691613	Gasket-Exhaust			691758 Rod-Push (Exhaust)(Aluminum)
797A	693167	Nut (Brush Retainer)	914	806421	Screw (Rocker Cover)	1027	492932s	Filter-Oil
801	808778	Cap-Drive	920	691656	Solenoid-Starter	1028	808033	Adapter-Oil Filter
802	496813	Cap-End	934	691058	Screw (Fan Retainer)	1029	807323	Arm-Rocker
802A	691286	Cap-End	967	272490s	Filter-Pre Cleaner	1036		Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer)
803	693547	Housing-Starter	968	699959	Cover-Air Cleaner			
813	690635	Clamp	988	★692063	Gasket-Oil Adapter			
816	690706	Washer (Oil Filter Adapter)	996	691577	Shield-Carburetor	1051	691124	Ring-Retaining
830	809157	Stud-Rocker Arm	1004	807121	Duct-Air	1054	280275	Tie-Cable
833	841233	Screw (Air Cleaner Mounting Strap/Stud)	1005	841439	Fan-Flywheel	1058	275368	Operator's Manual
851	493880s	Terminal-Spark Plug	1006	690452	Retainer-Fan	1090	691293	Retainer-Brush
862	692153	Strap/Stud-Air Cleaner Mounting	1017	690900	Screen-Oil Pump	1095A	841191	Gasket Set-Valve
865	807119	Cover-Air Guide (Valley)(Black)	1019	808158	Kit-Label	1100	690973	Pivot-Rocker Arm
			1022★△	806039s	Gasket-Rocker Cover	1119	691552	Screw (Alternator)
			1023	690758	Cover-Rocker	1254	807084	Screw (Rocker Cover Stud)
			1023A	808648	Cover-Rocker (Includes Breather Assembly)	1330	272144	Repair Manual

★ Included in Engine Gasket Set-Ref. No. 358.

△ Included in Valve Gasket Set-Ref. No. 1095A.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3450-15 Assemblies include all parts shown in frames. **12/15/2005**