



380700

Illustrated Parts List

Model Series

380700

TYPE NUMBERS
0024 through 0143.

TABLE OF CONTENTS

Air Cleaner	8
Alternator	7
Blower Housing	11
Camshaft	4
Carburetor	5
Controls	7
Crankshaft	4
Cylinder	2
Cylinder Head	6
Electric Starter	12
Engine Sump	2
Exhaust System	9
Flywheel	10
Fuel Supply	5
Gasket Set – Engine	3
Gasket Set – Valve	3
Governor Spring	7
Ignition	7
Intake Manifold	8
Kit – Carburetor Overhaul	3
Lubrication	13
Piston, Rings, Connecting Rod	2
Rewind Starter	9
Shrouds	11
Valves	11


BRIGGS & STRATTON




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.






380700

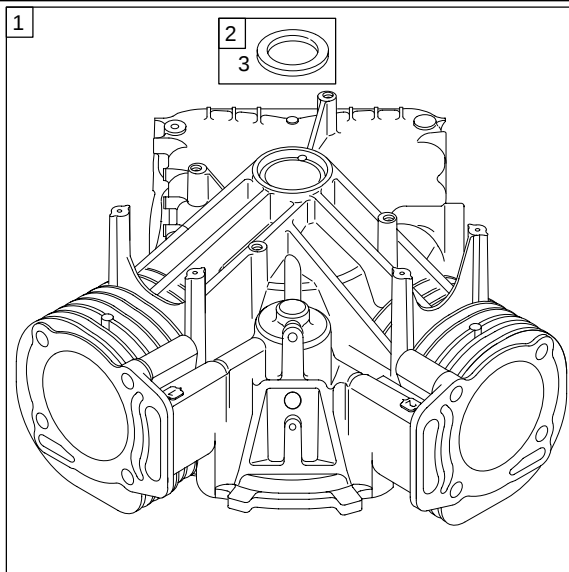




718B

 










415

   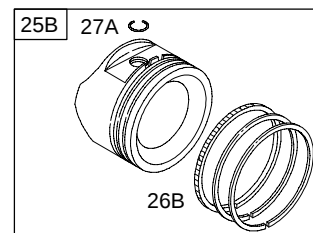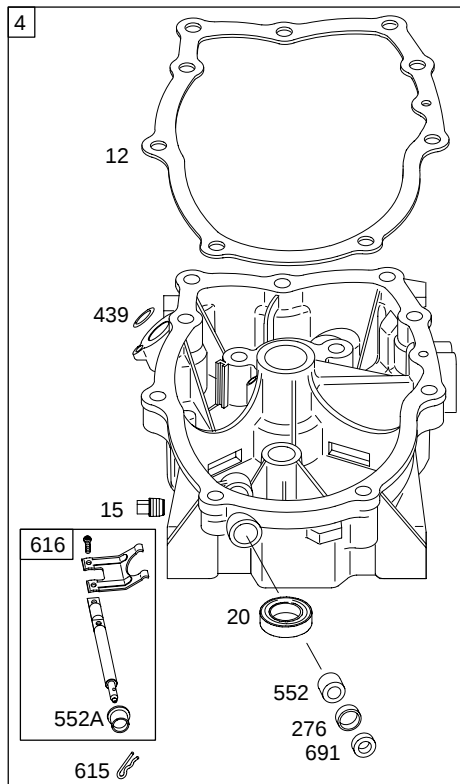


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5312-2 Assemblies include all parts shown in frames. 07/28/2005

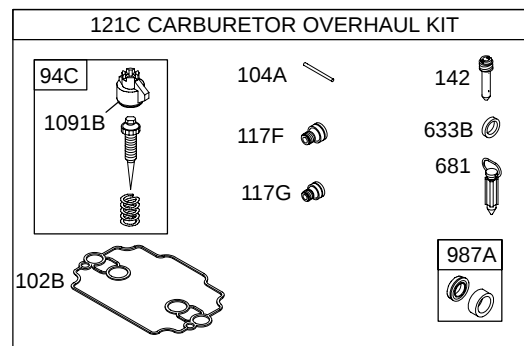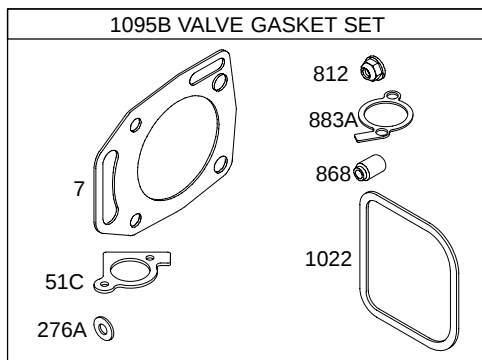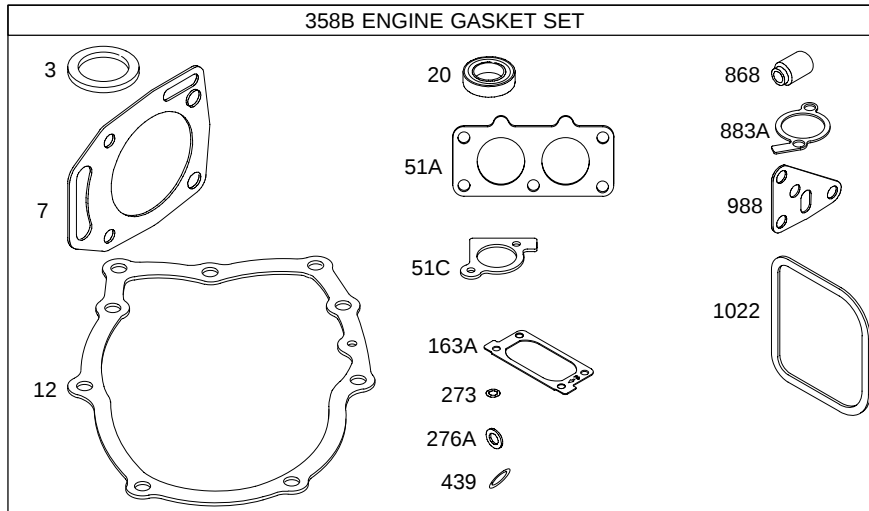


380700

     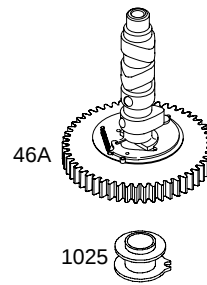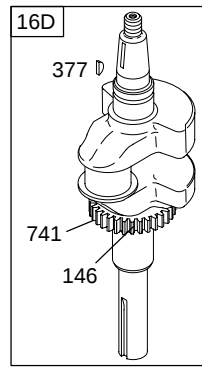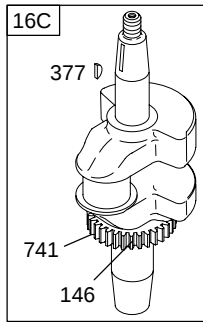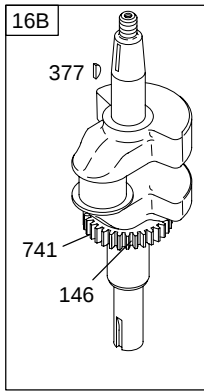

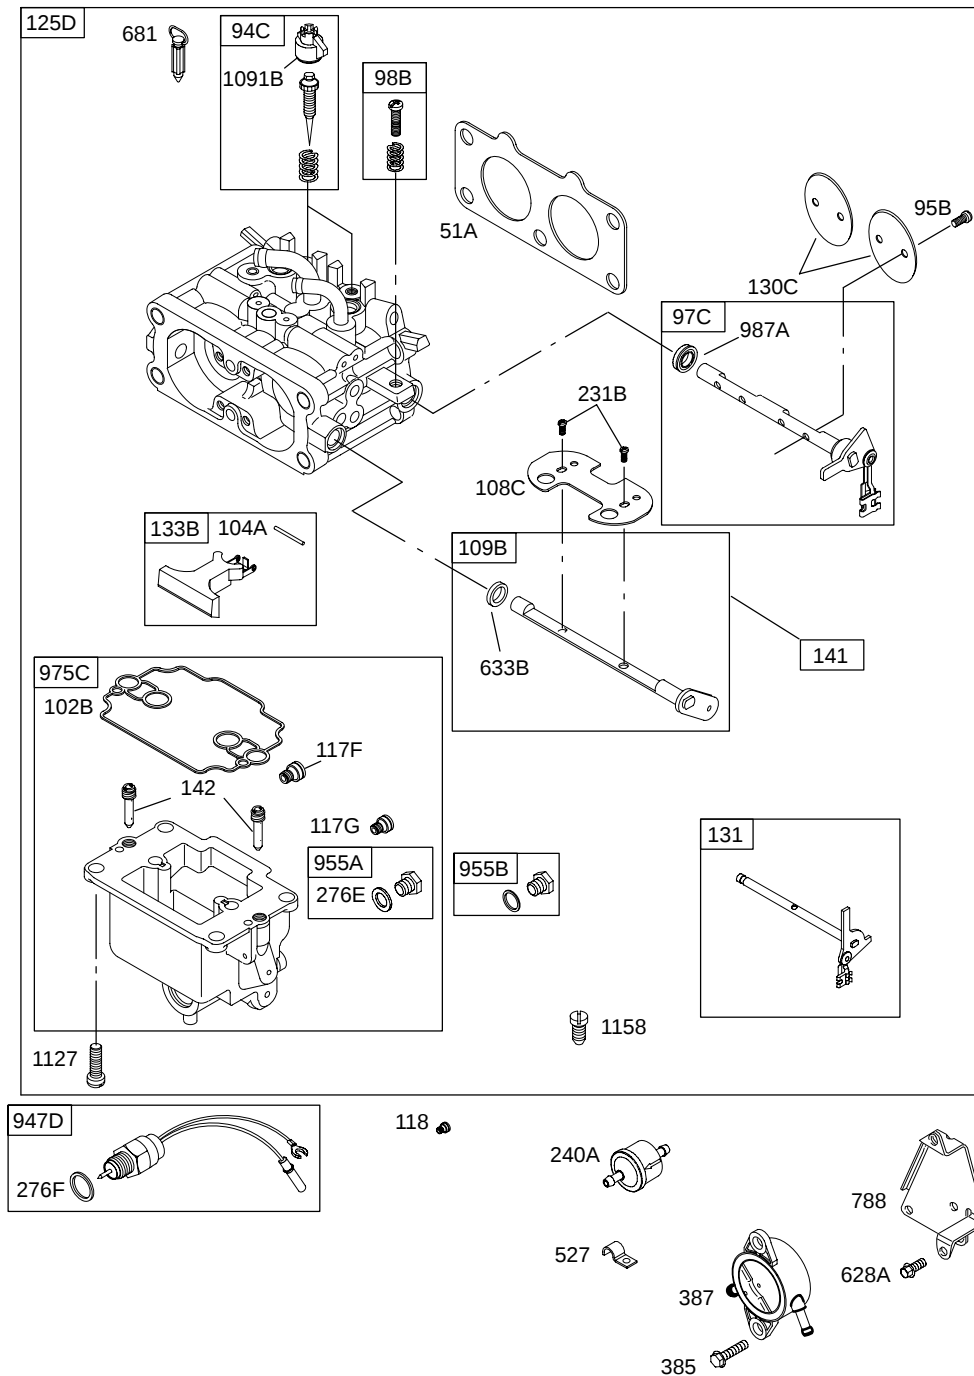


380700

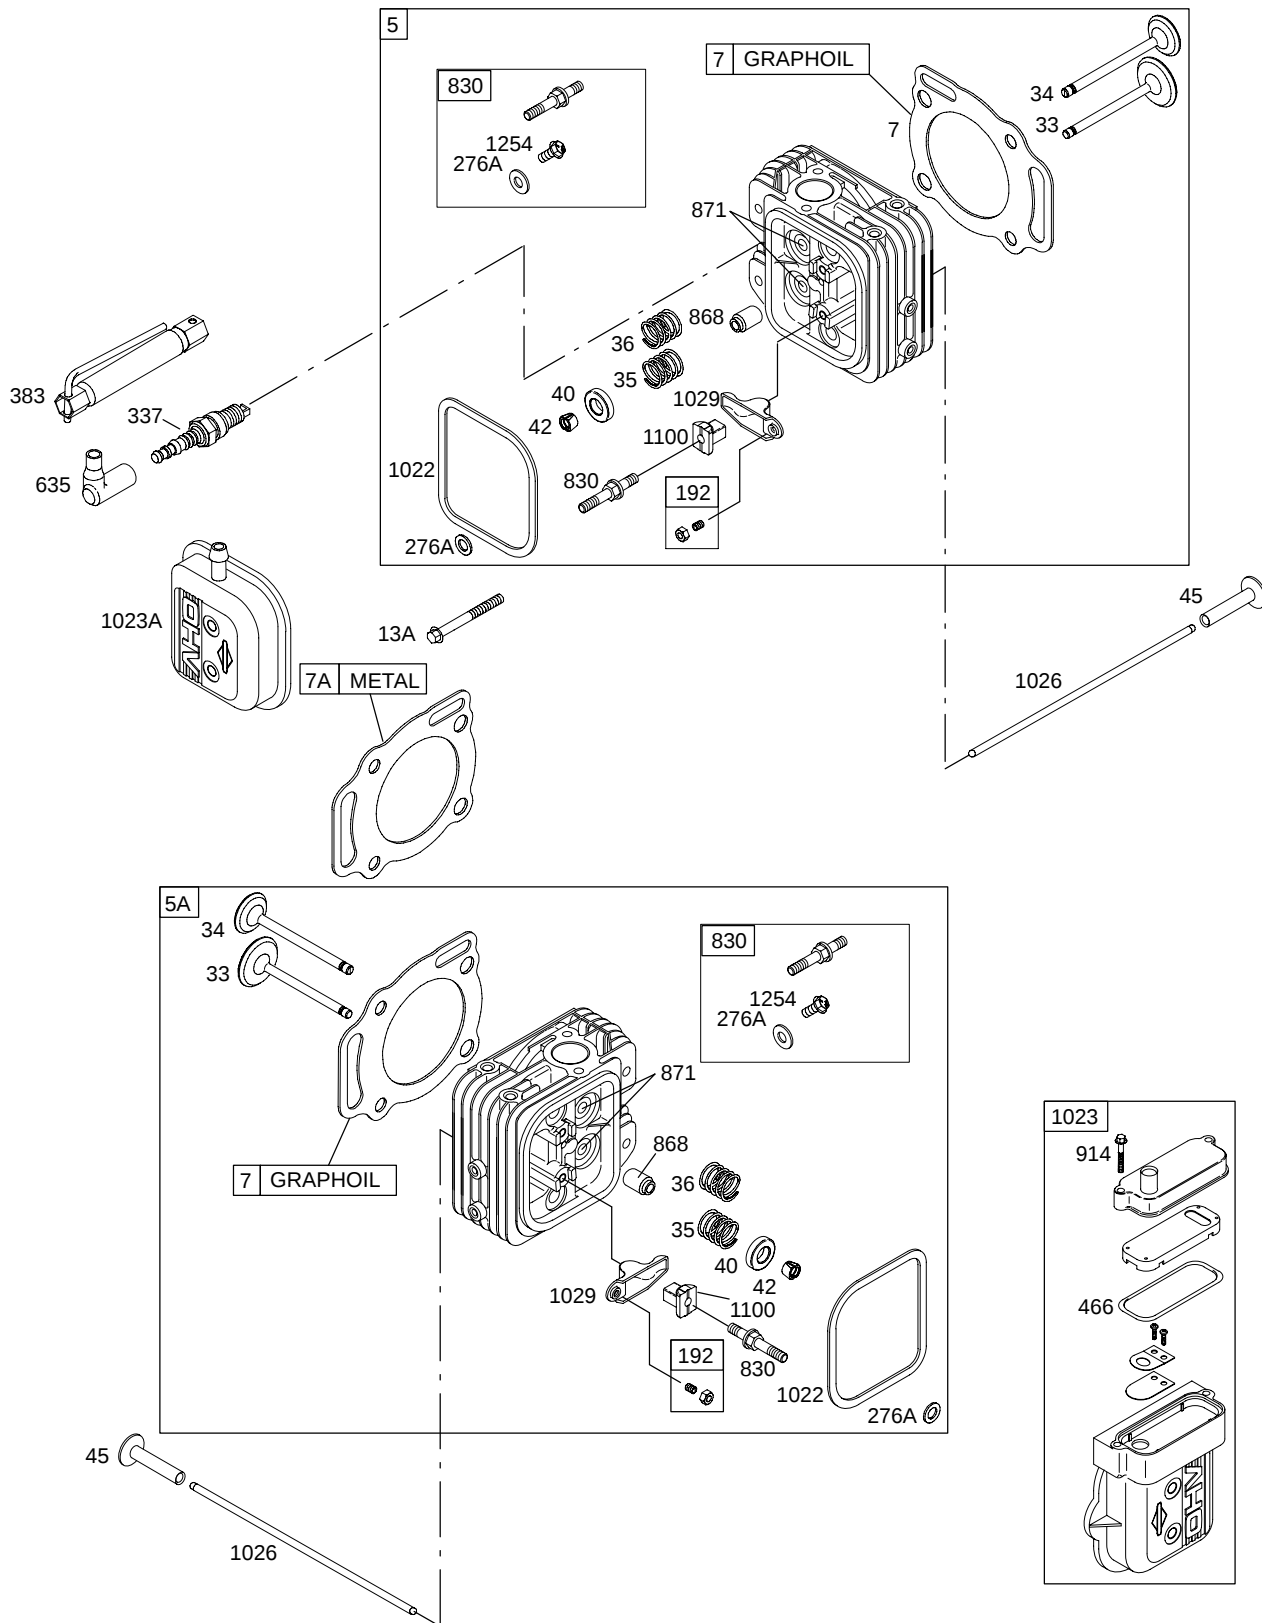





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5312-6 Assemblies include all parts shown in frames. 07/28/2005

380700

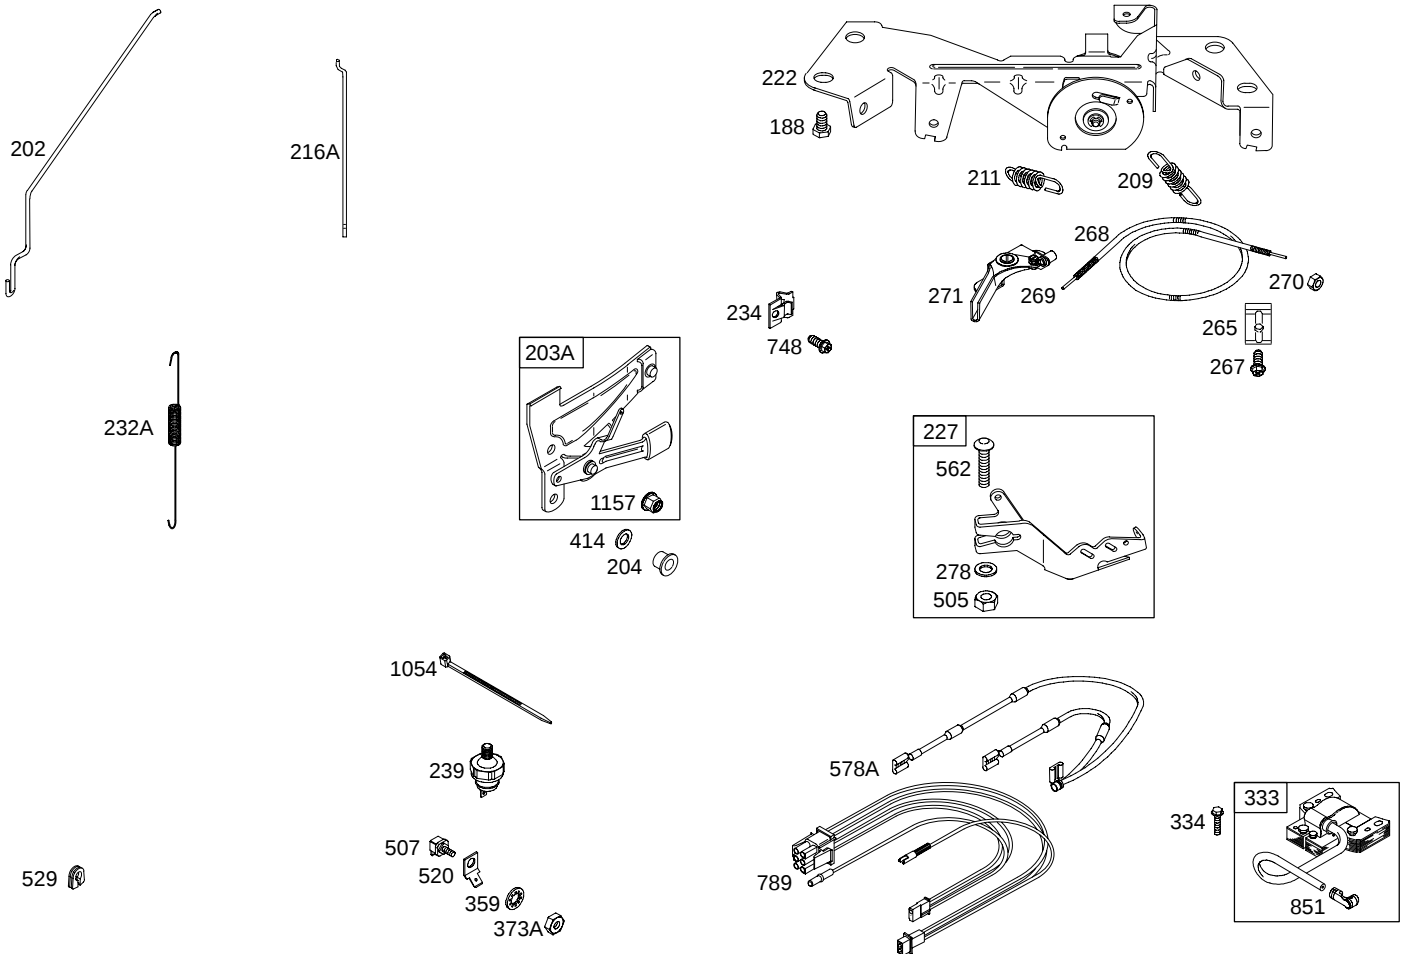


DC ONLY	10 - 16 AMP
474A 	474D
NOTE: All stators use a No. 1119 mounting screw.	
NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.	



380700

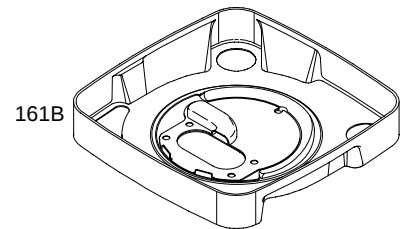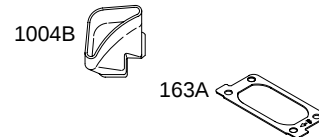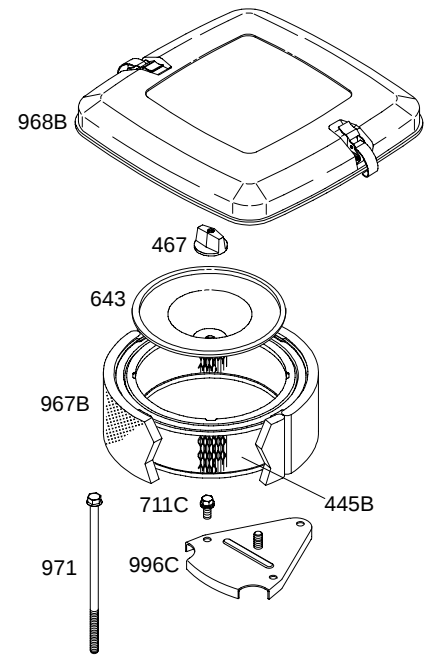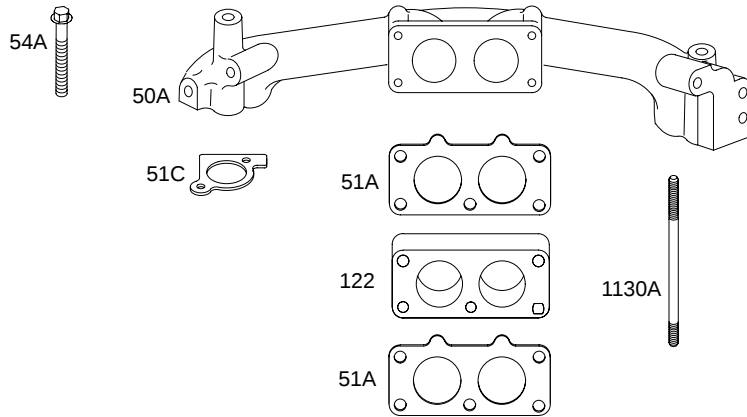


185

833

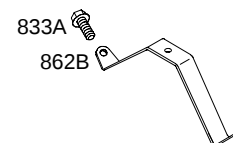


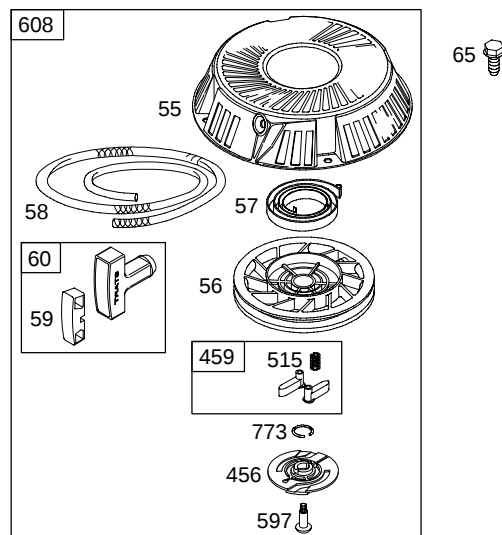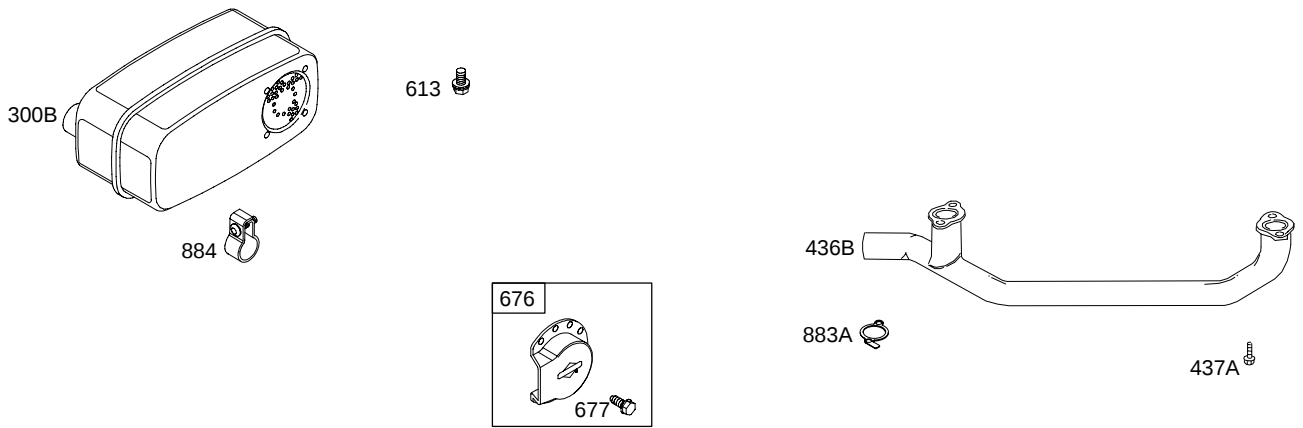




380700

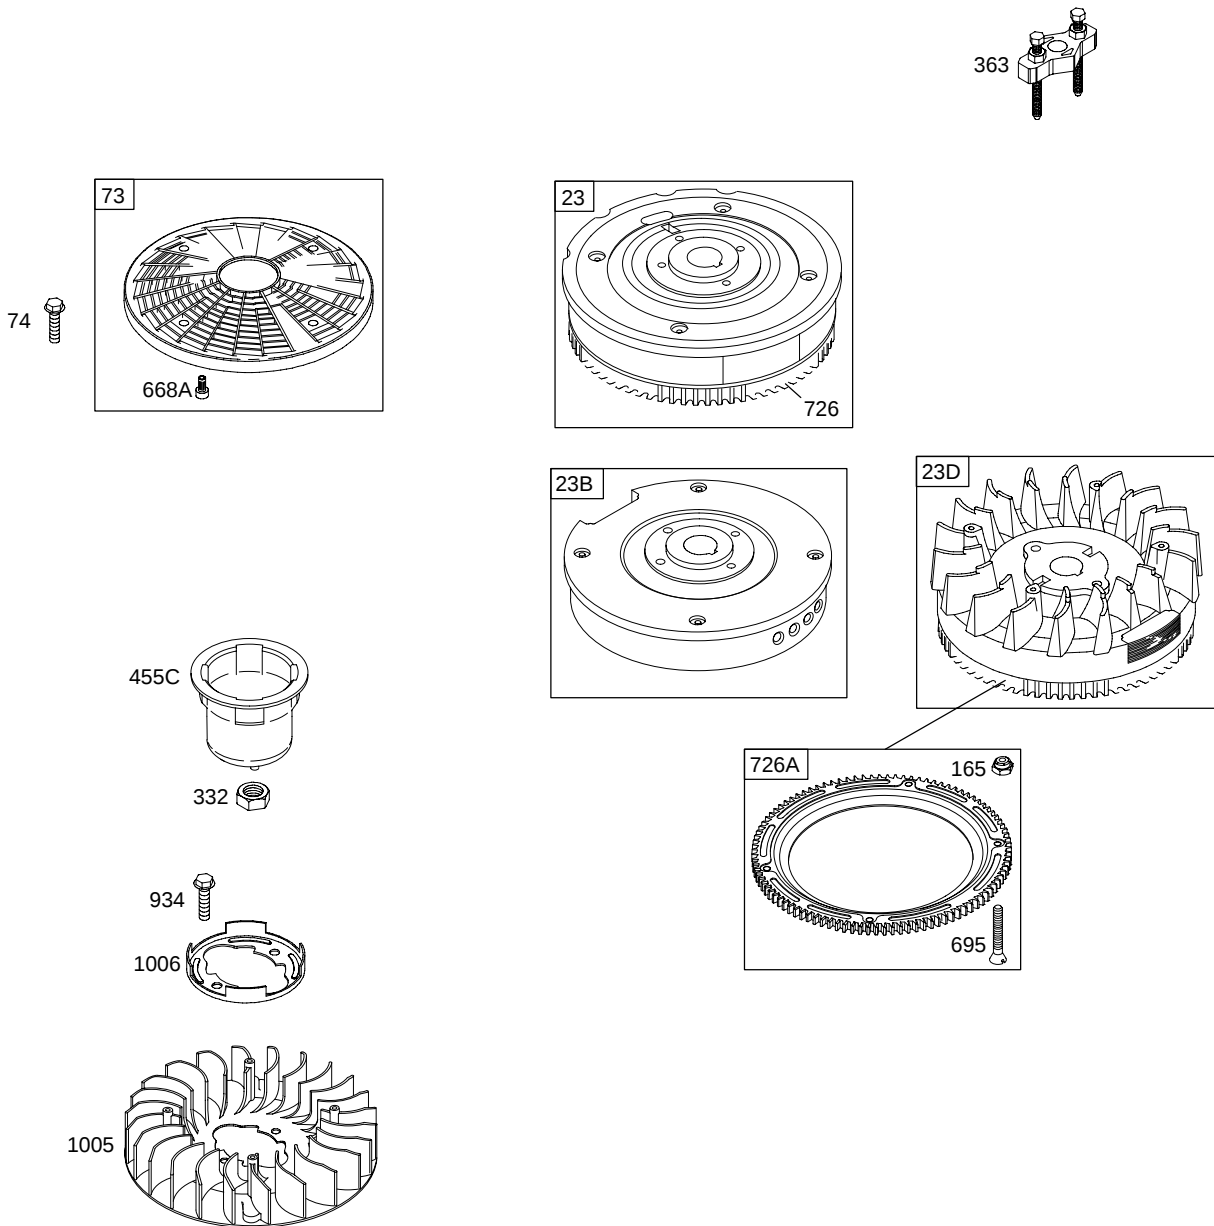


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5312-10 Assemblies include all parts shown in frames. **07/28/2005**

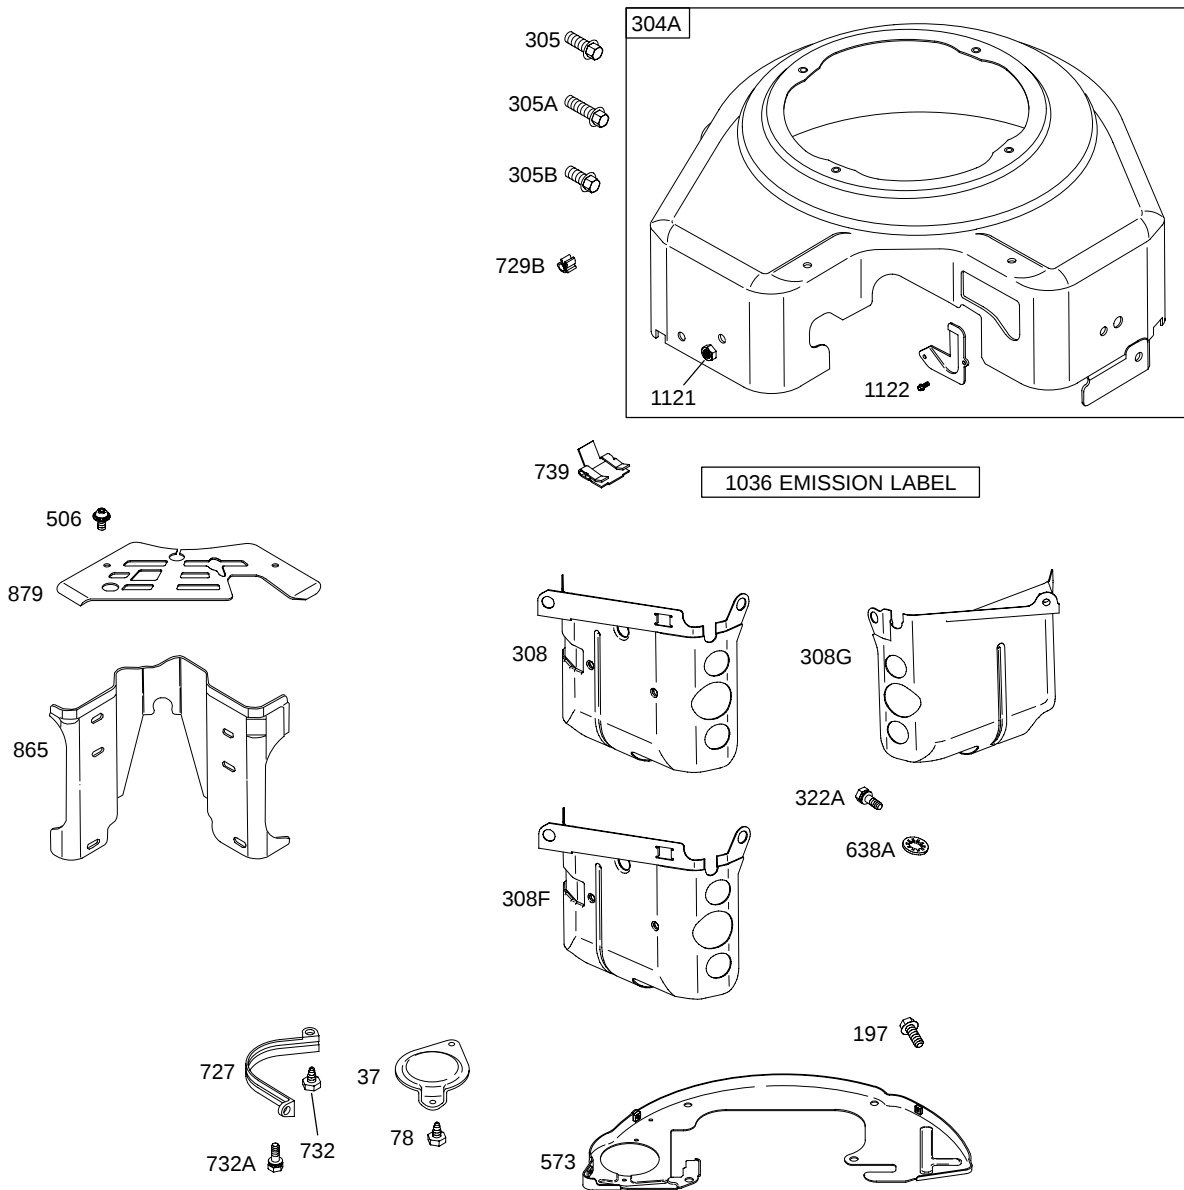

380700

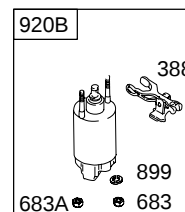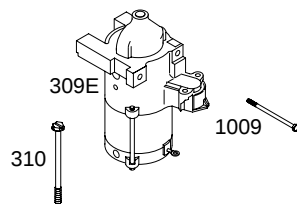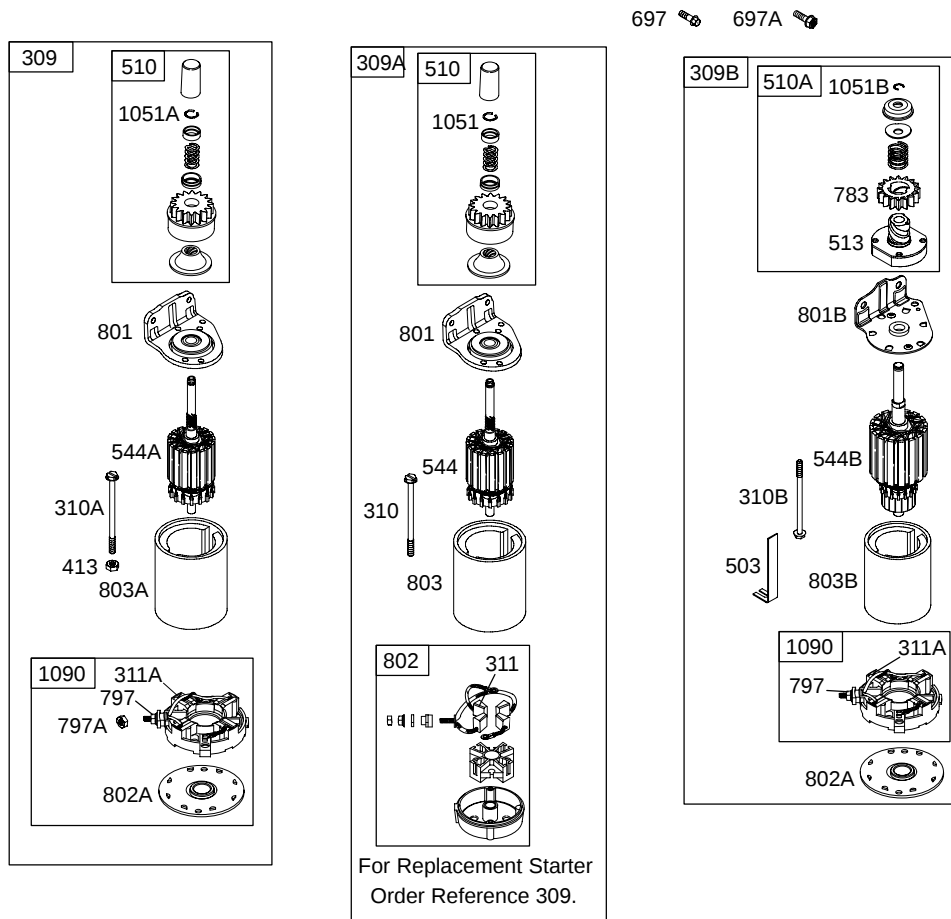

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5312-12 Assemblies include all parts shown in frames. **07/28/2005**

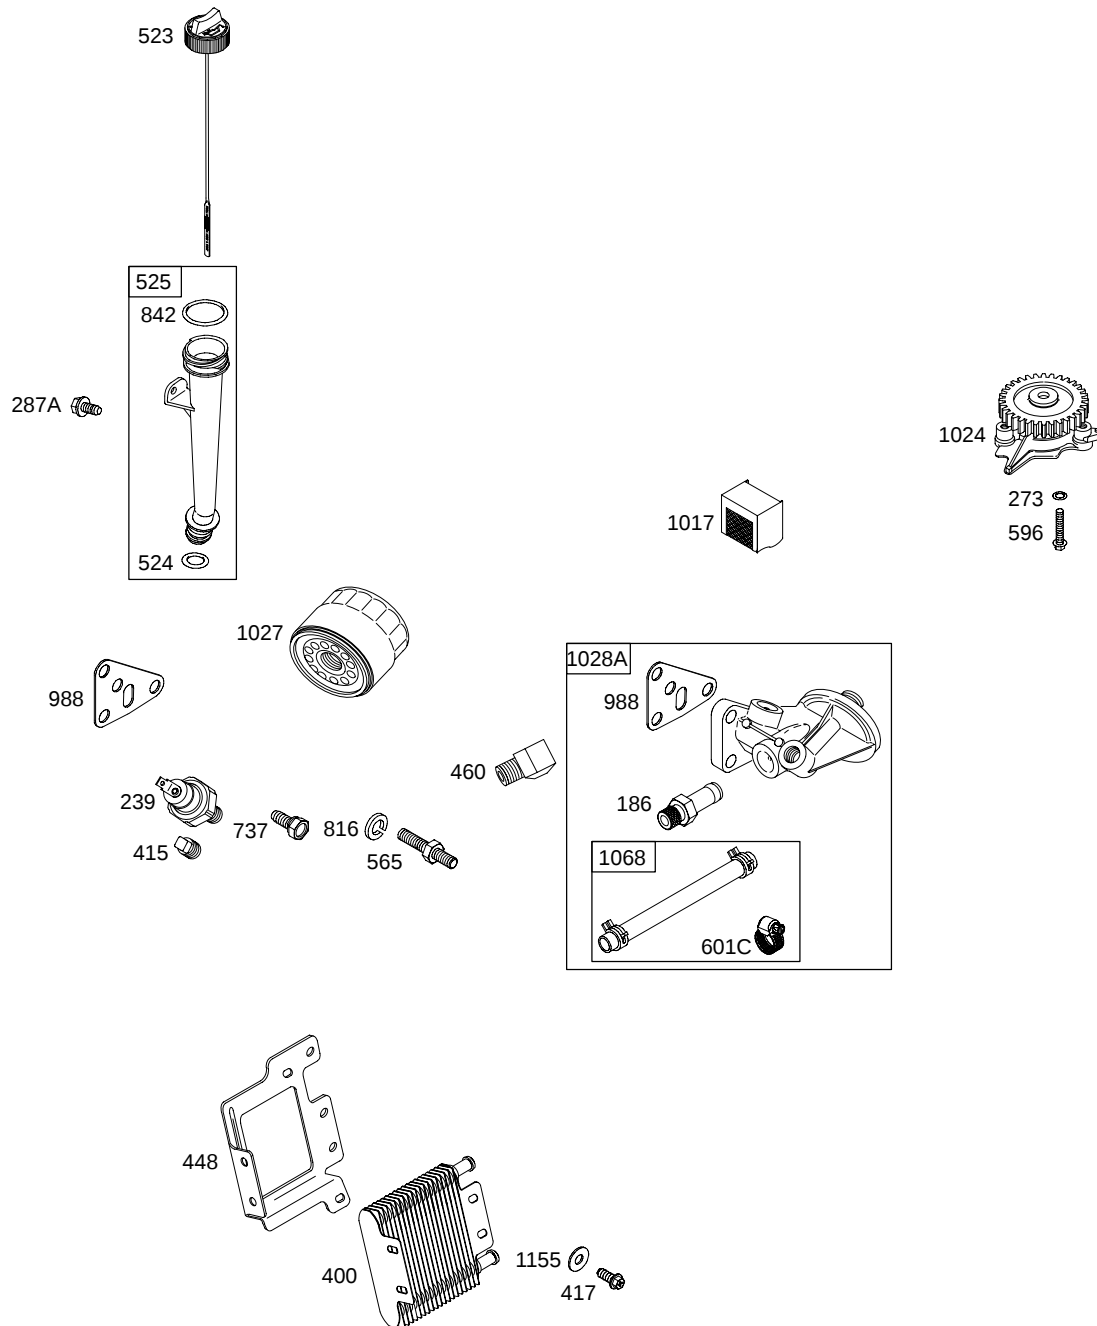

380700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	842648	Cylinder Assembly (Used After Code Date 05073100). ----- Note ----- 808647 Cylinder Assembly (Used Before Code Date 05080100).	16B	809809	Crankshaft (Used After Code Date 03043000). Used on Type No(s). 0036, 0138, 0140. ----- Note ----- 809807 Crankshaft (Used Before Code Date 03050100). Used on Type No(s). 0036, 0138, 0140.	33	806419	Valve-Exhaust
2	808534	Kit-Bushing/Seal (Magnetos Side)				34	806420	Valve-Intake
3	★805101	Seal-Oil (Magnetos Side)				35	692084	Spring-Valve (Intake)
4	808846	Sump-Engine	16C	809830	Crankshaft	36	692084	Spring-Valve (Exhaust)
5	842656	Head-Cylinder (Cylinder 1) (Used After Code Date 05073100). ----- Note ----- 808529 Head-Cylinder (Cylinder 1) (Used Before Code Date 05080100).	16D	809840	Crankshaft Used on Type No(s). 0143.	37	690715	Guard-Flywheel (Black)
			20	★805049	Seal-Oil (PTO Side)	40	692058	Retainer-Valve
			22	807362	Screw (Crankcase Cover/Sump)	42	807683	Keeper-Valve
5A	842657	Head-Cylinder (Cylinder 2) (Used After Code Date 05073100). ----- Note ----- 808530 Head-Cylinder (Cylinder 2) (Used Before Code Date 05080100).	23	808768	Flywheel (Steel Ring Gear) ----- Note ----- 808776 Flywheel (Steel Ring Gear) Used on Type No(s). 0135.	45	690977	Tappet-Valve
			23B	690922	Flywheel (Rewind Start)	46A	690927	Camshaft
7	★△842622	Gasket-Cylinder Head (Graphoil)	23D	690921	Flywheel (Aluminum Ring Gear)	50A	806376	Manifold-Intake ----- Note ----- 808810 Manifold-Intake Used on Type No(s). 0138.
7A	805653	Gasket-Cylinder Head (Metal)	25B	808527	Piston Assembly (Standard) ----- Note ----- 808652 Piston Assembly (.020" Oversize)	51A	★690950	Gasket-Intake (Manifold/Carburetor Spacer)
11B	806379	Tube-Breather				51C	★△806418	Gasket-Intake (Manifold/Heads)
12	★842589	Gasket-Crankcase				54A	806444	Screw (Intake Manifold)
13A	842618	Screw (Cylinder Head) (Used After Code Date 05073100). ----- Note ----- 806865 Screw (Cylinder Head) (Used Before Code Date 05080100).	26B	808528	Ring Set (Standard) ----- Note ----- 808661 Ring Set (.020" Oversize)	55	691568	Housing-Rewind Starter
			27A	806378	Lock-Piston Pin	56	692085	Pulley-Starter
15	690946	Plug-Oil Drain	28B	808526	Pin-Piston	57	692086	Spring-Rewind Starter
15A	691680	Plug-Oil Drain Used on Type No(s). 0135.	29A	808646	Rod-Connecting (Standard)	58	66574	Rope-Starter (Cut To Required Length)
			32	690698	Screw (Connecting Rod)	59	805957	Insert-Grip
						60	808167	Grip-Starter Rope
						65	691982	Screw (Rewind Starter)
						73	494439	Screen-Rotating
						74	691647	Screw (Rotating Screen)
						78	690688	Screw (Flywheel Guard)
						94C	●808257	Kit-Idle Mixture
						95B	690718	Screw (Throttle Valve)

★ Included in Engine Gasket Set-Ref. No. 358B.

△ Included in Valve Gasket Set-Ref. No. 1095B.

● Included in Carburetor Overhaul Kit-Ref. No. 121C.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5312-14

Assemblies include all parts shown in frames.

07/28/2005

380700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
97C	808719	Shaft-Throttle	187A	791745	Line-Fuel (Cut To Required Length) (Used After Code Date 05063000).	240A	691035	Filter-Fuel (Includes Paper Element With A 40 Micron Rating)
98B	808177	Kit-Idle Speed				265	691024	Clamp-Casing
102B	●693711	Gasket-Carburetor Body			----- Note -----	267	692083	Screw (Casing Clamp)
104A	●690882	Pin-Float Hinge			296004 Line-Fuel (Cut To Required Length) (Used Before Code Date 05070100).	268	691025	Casing-Control Wire (Cut To Required Length)
108C	806372	Valve-Choke				269	691026	Wire-Control (Cut To Required Length)
109B	808181	Shaft-Choke				270	691027	Nut (Control Wire Casing)
117F	●806374	Jet-Main (Standard)(Cylinder 1)				271	691028	Lever-Control
117G	●806373	Jet-Main (Standard)(Cylinder 2)	187C	791801	Line-Fuel (Molded) (Used After Code Date 05063000).	273	★690681	Seal-O Ring (Oil Pump)
118	842291	Jet-Main (High Altitude) (Left or Cylinder 1) ----- Note ----- 842439 Jet-Main (High Altitude) (Right Or Cylinder 2)			----- Note ----- 691049 Line-Fuel (Molded) (Used Before Code Date 05070100).	276	690704	Washer-Sealing (Crankcase Cover/Sump)
121C	808816	Kit-Carburetor Overhaul	188	692056	Screw (Control Bracket)	276A	★Δ807085	Washer-Sealing (Rocker Cover) (Used After Code Date 01120200).
122	690870	Spacer-Carburetor						----- Note ----- 691766 Washer- Sealing (Rocker Cover) (Used Before Code Date 01120300).
125D	808604	Carburetor	192	807623	Adjuster-Rocker Arm	276E	690724	Washer-Sealing (Carburetor Plug)
130C	690884	Valve-Throttle	197	807163	Screw (Back Plate)	276F	693497	Washer-Sealing
131	809718	Kit-Throttle Shaft	202	690867	Link-Mechanical Governor	278	842122	Washer (Governor Control Lever)
133B	808180	Float-Carburetor	203A	808753	Crank-Bell	287A	807084	Screw (Dipstick Tube)
141	809719	Kit-Choke Shaft	204	692884	Bushing-Lever	300B	498984	Muffler Used on Type No(s). 0135.
142	●806375	Nozzle-Carburetor (Standard)	209	692070	Spring-Governor (Red) ----- Note ----- 692071 Spring- Governor (White) Used on Type No(s). 0036, 0131, 0135, 0140.	304A	808658	Housing-Blower (Red) ----- Note ----- 808651 Housing- Blower (Black)
146	691639	Key-Timing						
161B	808676	Base-Air Cleaner (Metal)	211	692069	Spring-Governed Idle			
163A	★692087	Gasket-Air Cleaner (Used With Metal Air Cleaner Base)	216A	690871	Link-Choke			
165	693148	Nut (Ring Gear)	222	808454	Bracket-Control			
185	690939	Nut (Air Cleaner Base)	227	690236	Lever-Governor Control			
186	693184	Connector-Hose	231B	690718	Screw (Choke Valve)			
187	791766	Line-Fuel (Cut To Required Length) (Used After Code Date 05063000).	232A	690874	Spring-Governor Link			
		----- Note ----- 691050 Line-Fuel (Cut To Required Length) (Used Before Code Date 05070100).	234	691723	Clip-Control Rod			
			239	690233	Switch-Oil Pressure (Oil GARD Only)			

★ Included in Engine Gasket Set-Ref. No. 358B.

● Included in Carburetor Overhaul Kit-Ref. No. 121C.

Δ Included in Valve Gasket Set-Ref. No. 1095B.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5312-15

Assemblies include all parts shown in frames.

07/28/2005

380700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
305	692056	Screw (Blower Housing) (14mm)	332	690887	Nut (Flywheel)	474A	696578	Alternator (DC Only)
305A	692062	Screw (Blower Housing) (18mm Long)	333	492341	Armature-Magneto	474D	696458	Alternator (10 To 16 Amp Regulated)
305B	841233	Screw (Blower Housing) (12 mm)	334	692066	Screw (Magneto Armature) Plug-Spark	501	691185	Regulator (3 Wire)(16 Amp)
308	841232	Cover-Cylinder Head (Cylinder 1)	357	691483	Key-Drive Pulley Used on Type No(s). 0135.	503	691532	Strap-Starter
308F	841182	Cover-Cylinder Head (Cylinder 2) (Used After Code Date 03103100).	358B	808617	Gasket Set-Engine	505	690238	Nut (Governor Control Lever)
308G	806546	Cover-Cylinder Head (Cylinder 2) (Used After Code Date 98111300 and Before Code Date 03110100). ----- Note ----- 692805 Cover- Cylinder Head (Cylinder 2) (Used Before Code Date 98120100).	359	691077	Washer (Ground Terminal)	506	690677	Screw (Carburetor Cover)
309	691564	Motor-Starter (Steel Ring Gear Only)	363	19203	Puller-Flywheel	507	691972	Insulator
309A		Motor-Starter (For Replacement Starter Motor, Order Reference 309)	373A	691612	Nut (Ground Terminal)	510	496881	Drive-Starter
309B	499521	Motor-Starter (Services Aluminum Ring Gear Only)	377	808095	Key-Woodruff	510A	696541	Drive-Starter
309E	808726	Motor-Starter Used on Type No(s). 0142.	383	19576	Wrench-Spark Plug	513	692024	Clutch-Drive
310	496880	Screw (Starter Motor)	385	807084	Screw (Fuel Pump)	515	691528	Spring-Pawl
310A	690323	Screw (Starter Motor)	387	808656	Pump-Fuel	520	691084	Terminal-Ground (Brass)
310B	691263	Screw (Starter Motor)	388	820799	Lever-Pinion Drive	523	692101	Dipstick
311	496887	Brush Set	400	808657	Cooler-Oil	524	692053	Seal-Dipstick Tube
311A	497608	Brush Set	413	693587	Nut (Starter Motor)	525	692093	Tube-Dipstick
322A	841233	Screw (Cylinder Head Cover)	414	690344	Washer (Bell Crank)	526	692067	Screw (Regulator)
			415	690283	Plug (Square Head)	527	690423	Clamp-Tube
			417	810074	Screw (Oil Cooler)	529	690744	Grommet
			436B	808909	Manifold-Exhaust Used on Type No(s). 0135.	544	690855	Armature-Starter
			437A	691902	Screw (Exhaust Manifold)	544A	693548	Armature-Starter
			439	★692154	Seal-O Ring (Crankcase Cover/Sump)	544B		Armature-Starter (Served By 499521 Starter Motor Only)
			445B	692519	Filter-Air Cleaner Cartridge (Round)	552	690701	Bushing-Governor Crank
			448	806423	Bracket-Oil Cooler	552A	806686	Bushing-Governor Crank
			455C	690864	Cup-Flywheel	562	690239	Bolt (Governor Control Lever)
			456	691529	Plate-Pawl Friction	565	690682	Stud (Oil Filter Adapter)
			459	808166	Pawl-Ratchet	573	841310	Plate-Back
			460	806667	Connector-Filter Adapter	578	692306	Wire Assembly
			466	806466	Seal-O Ring (Breather Assembly)	578A	692319	Wire Assembly (With Diodes)
			467	691985	Knob-Air Cleaner	596	691492	Screw (Oil Pump)
						597	690876	Screw (Pawl Friction Plate)

★ Included in Engine Gasket Set-Ref. No. 358B.

● Included in Carburetor Overhaul Kit-Ref. No. 121C.

Δ Included in Valve Gasket Set-Ref. No. 1095B.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5312-16

Assemblies include all parts shown in frames.

07/28/2005

380700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
601A	691038	Clamp-Hose (Black)	718B	806469	Pin-Locating Gear-Ring (Steel)(See Reference 23 for Service)	816	690706	Washer (Oil Filter Adapter)
601B	791850	Clamp-Hose (Silver)	726			830	809157	Stud-Rocker Arm
601C	691145	Clamp-Hose (Silver)	726A	807805	Gear-Ring (Aluminum)	833	807084	Screw (Air Cleaner Mounting Strap/Stud)
608	692102	Starter-Rewind	727	841313	Cover-Starter Drive (Black)	833A	841233	Screw (Air Cleaner Mounting Strap/Stud)
613	690297	Screw (Muffler)	729B	690586	Clip-Wire (Snap In)(Nylon)	842	691870	Seal-O Ring (Dipstick Tube)
615	691550	Retainer-Governor Shaft	732	690688	Screw (Starter Drive Cover)	851	493880	Terminal-Spark Plug
616	806685	Crank-Governor (Used After Code Date 99072000).	732A	841233	Screw (Starter Drive Cover)	862B	806440	Strap/Stud-Air Cleaner Mounting
616A	690899	Crank-Governor (Used Before Code Date 99072100).	737	690679	Screw (Oil Filter Adapter)	865	841312	Cover-Air Guide (Black)
628A	806660	Screw (Fuel Pump Bracket)	739	690451	Clip-Debris	868	★Δ691963	Seal-Valve
633B	●690722	Seal-Choke/Throttle Shaft	741	691530	Gear-Timing	871	692057	Bushing-Valve Guide
635	692076	Boot-Spark Plug	748	692083	Screw (Control Rod Clip)	877A	393814	Wire/Connector-Alternator (DC Only)
638A	691551	Washer (Cylinder Head Cover) (Used Before Code Date 03110100).	773	690875	Retainer (Pawl Friction Plate)	877C	399916	Wire/Connector-Alternator (2 Wires, 7-53/64" Long)(2 Bare Wire Ends, And Insulated Snap Connect Male Pin Terminal)
643	692079	Retainer-Air Filter	783	695708	Gear-Pinion (Services Aluminum Ring Gear Only)	879	690757	Cover-Carburetor
668A	691500	Spacer (Knurled Insert)	788	691559	Bracket-Fuel Pump	883A	★Δ806425	Gasket-Exhaust
676	393761	Deflector-Muffler	789	698332	Harness-Wiring Used on Type No(s). 0142.	884	691956	Clamp-Muffler
677	690661	Screw (Muffler Deflector)	797	693167	Nut (Brush Retainer)	899	820811	Washer (Starter Solenoid)
681	●808798	Kit-Needle/Seat	797A	691029	Nut (Brush Retainer)	914	806421	Screw (Rocker Cover)
683	820809	Nut (Starter Solenoid)	801	808778	Cap-Drive	918	393815	Hose-Vacuum (Cut To Required Length)
683A	820813	Nut (Starter Solenoid)	801B	691283	Cap-Drive	920B	825418	Solenoid-Starter Used on Type No(s). 0142.
691	690680	Seal-Governor Shaft	802	496813	Cap-End	934	691058	Screw (Fan Retainer)
695	693109	Screw (Ring Gear)	802A	691286	Cap-End	947D	808624	Solenoid-Fuel
697	692062	Screw (Drive Cap)	803	690854	Housing-Starter	955A	807723	Plug-Carburetor (M9)
697A	691902	Screw (Drive Cap)	803A	693547	Housing-Starter			
711C	691492	Screw (Carburetor Shield)	803B		Housing-Starter (Served By 499521 Starter Motor Only)			
			812	Δ692055	Nut (Rocker Cover) (Used Before Code Date 01120300).			

★ Included in Engine Gasket Set-Ref. No. 358B.

● Included in Carburetor Overhaul Kit-Ref. No. 121C.

Δ Included in Valve Gasket Set-Ref. No. 1095B.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**5312-17**

Assemblies include all parts shown in frames.

07/28/2005

380700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
955B	808176	Plug-Carburetor (M12)	1028A	808537	Adapter-Oil Filter	1095B	808619	Gasket Set-Valve
967B	692520	Filter-Pre Cleaner (Round)	1029	807323	Arm-Rocker	1100	690973	Pivot-Rocker Arm
968B	808654	Cover-Air Cleaner (Used With Metal Air Cleaner Base)	1036		Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer) (Used After Code Date 05071700).	1119	691552	Screw (Alternator)
971	690866	Screw (Air Cleaner Base to Carburetor)			----- Note -----	1121	810056	Nut (Fuel Pump Bracket)
975C	808628	Bowl-Float		841642	Label-Emissions	1122	93410	Screw (Blower Housing Adapter)
987A	●691000	Seal-Throttle Shaft			(Used After Code Date 04063000 and Before Code Date 05071800).	1127	690885	Screw (Float Bowl) (Mount Float Bowl To Carburetor Body)
988	★692063	Gasket-Oil Adapter		806889	Label-Emissions	1130A	690869	Stud (Intake Manifold)
996C	690917	Shield-Carburetor			(Used After Code Date 00063000 and Before Code Date 04070100).	1135	806497	Washer (Crankcase Cover/Sump)
1004B	690865	Duct-Air (Used With Metal Air Cleaner Base)		806699	Label-Emissions	1155	806647	Washer (Oil Cooler)
1005	690911	Fan-Flywheel			(Used After Code Date 99093000 and Before Code Date 00070100).	1157	806447	Nut (Bell Crank)
1006	690452	Retainer-Fan		806644	Label-Emissions	1158	807468	Screw (Carburetor Plug)
1009	806474	Screw (Starter Motor) Used on Type No(s). 0142.			(Used After Code Date 98123100 and Before Code Date 99100100).	1254	807084	Screw (Rocker Cover Stud) (Used After Code Date 01120200).
1017	690878	Screen-Oil Pump		692817	Label-Emissions	1330	272144	Repair Manual
1019	808539	Kit-Label			(Used Before Code Date 99010100).			
1022	★△806039	Gasket-Rocker Cover	1051	690736	Ring-Retaining			
1023	808648	Cover-Rocker (Includes Breather Assembly)	1051A	691124	Ring-Retaining			
1023A	691558	Cover-Rocker (Cylinder 1) (With Fuel Pump)	1051B	691265	Ring-Retaining			
1024	693186	Pump-Oil	1054	280275	Tie-Cable			
1025	690689	Spool-Governor	1058	276353	Operator's Manual			
1026	691836	Rod-Push (Intake)(Steel)	1068	841999	Hose/Clamp Assembly			
		----- Note -----	1090	691293	Retainer-Brush			
		691758 Rod-Push (Exhaust)(Aluminum)			----- Note -----			
1027	492932	Filter-Oil (2 1/4" Long)			825412 Retainer-Brush			
					Used on Type No(s). 0142.			
			1091B	●691516	Cap-Limiter			

★ Included in Engine Gasket Set-Ref. No. 358B.

△ Included in Valve Gasket Set-Ref. No. 1095B.

● Included in Carburetor Overhaul Kit-Ref. No. 121C.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5312-18

Assemblies include all parts shown in frames.

07/28/2005