



385400

Illustrated Parts List

Model Series

385400

TYPE NUMBERS
0111 through 0254.

TABLE OF CONTENTS

 
Air Cleaner	7
Alternator	13
Blower Housing	10
Camshaft	2
Carburetor	6
Controls	9
Crankcase Cover	4
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	14
Exhaust System	8
Flywheel	12
Fuel Supply	8
Gasket Set - Engine	2
Gasket Set - Valve	3
Governor Spring	9
Ignition	13
Intake Manifold	4
Kit - Carburetor Overhaul	6
Lubrication	5
Piston, Rings, Connecting Rod	2
Rewind Starter	12
Shrouds	10
Valves	3

PRINTED IN U.S.A.







COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

385400



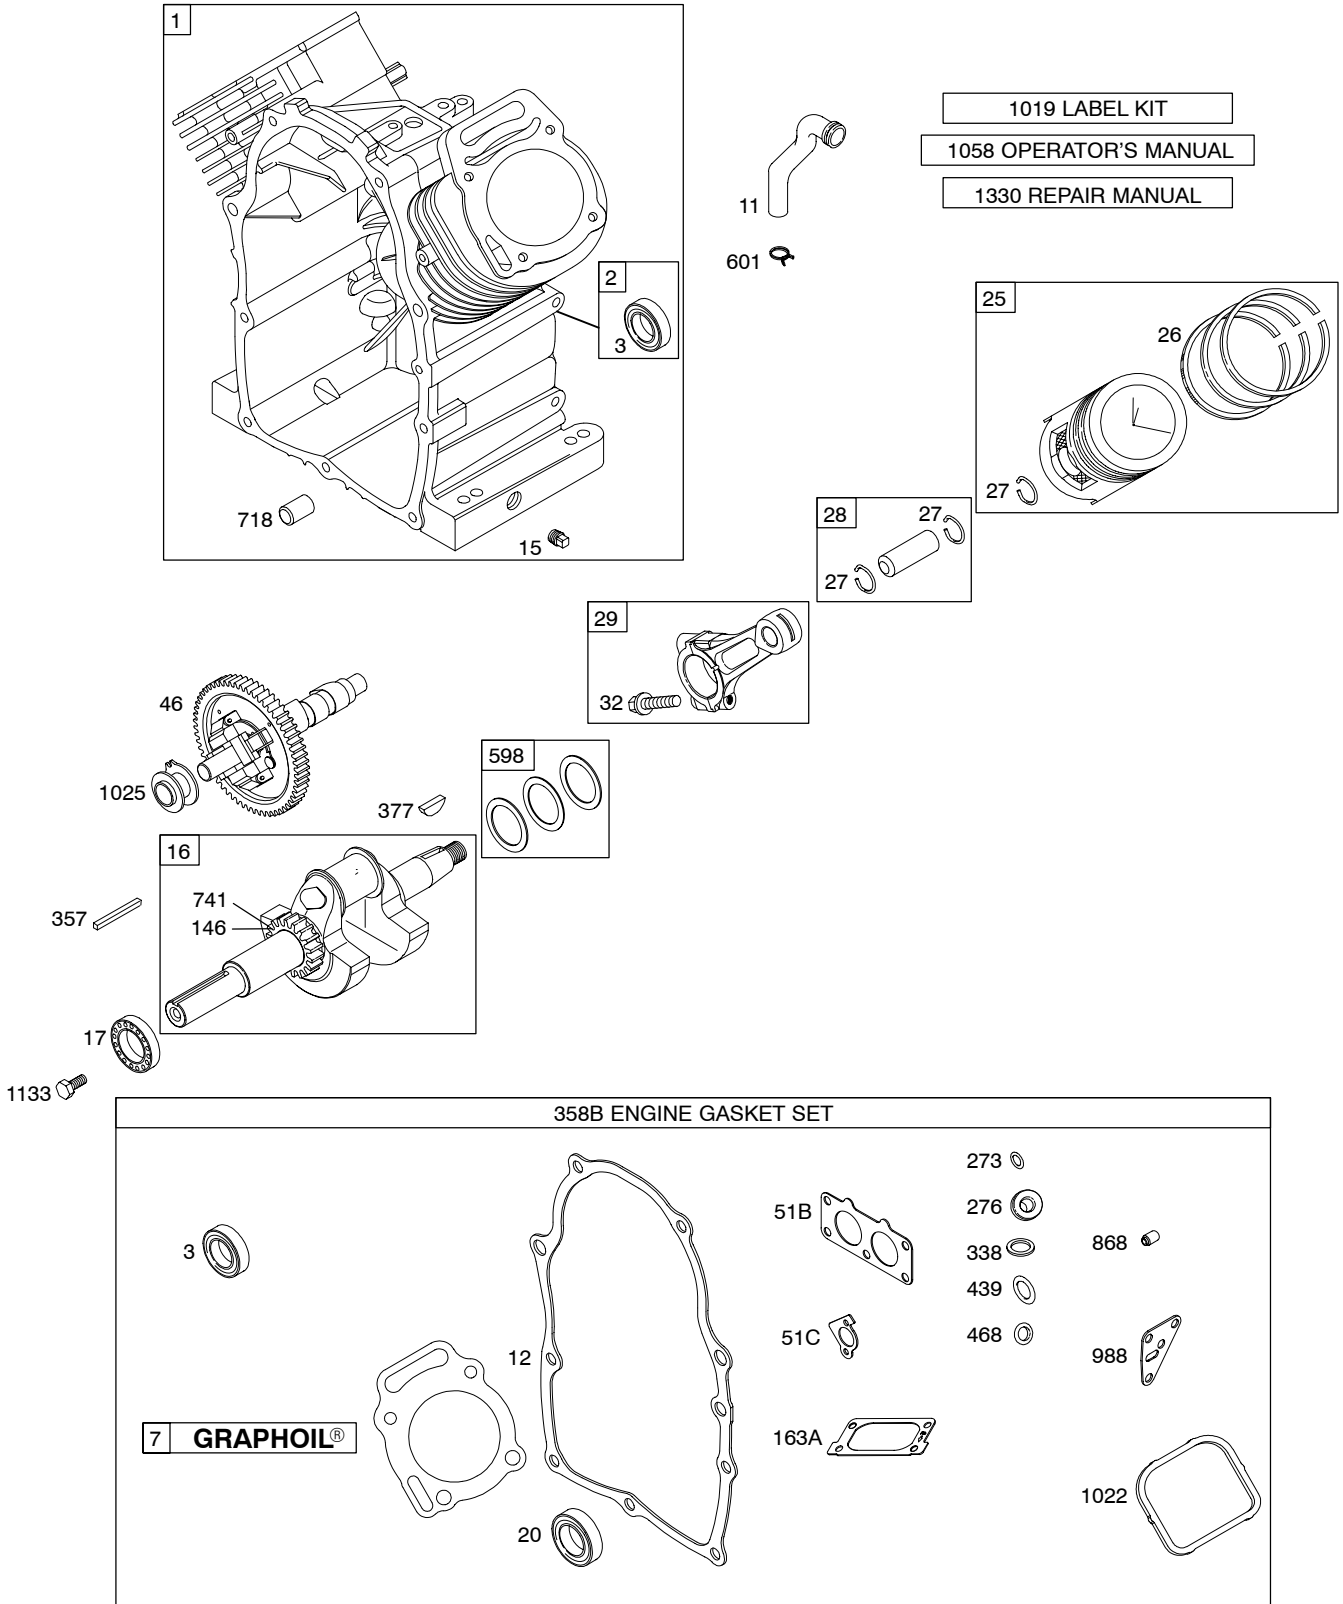


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3197-2 Assemblies include all parts shown in frames. 11/15/2005

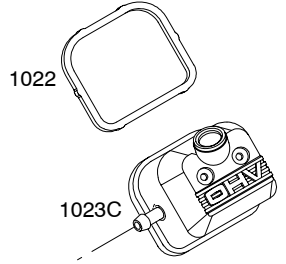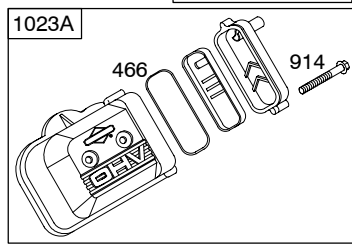    



276A ©

   1254

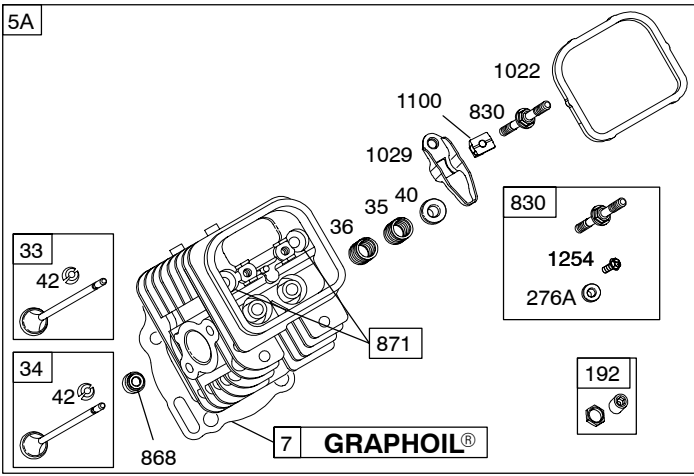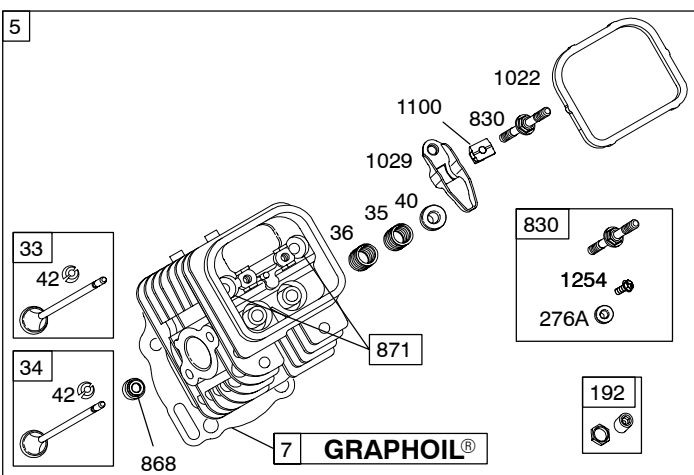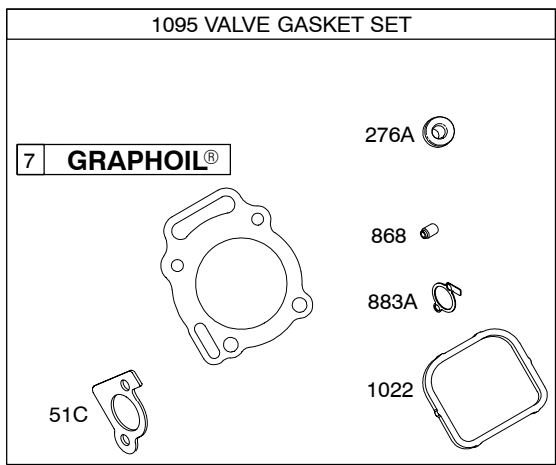


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3197-3 Assemblies include all parts shown in frames. 11/15/2005

  385400

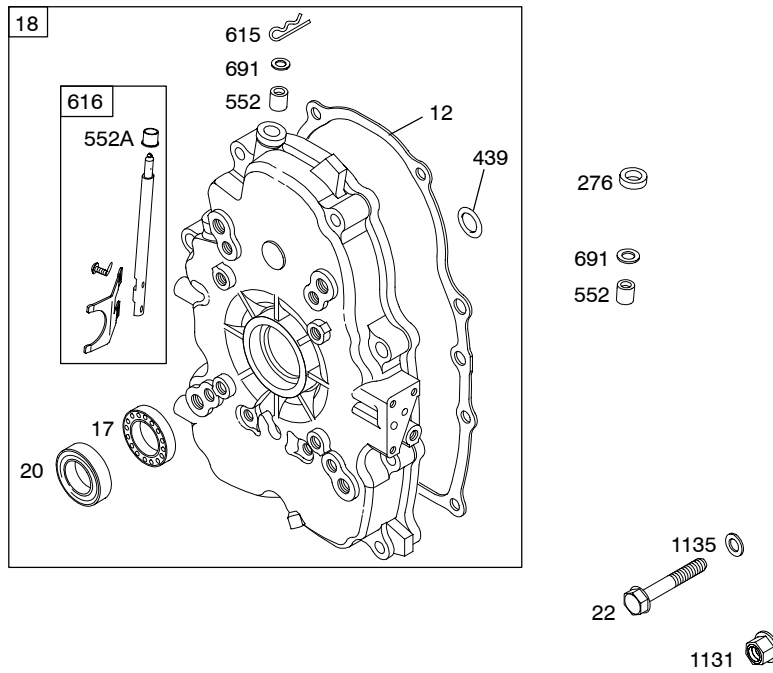
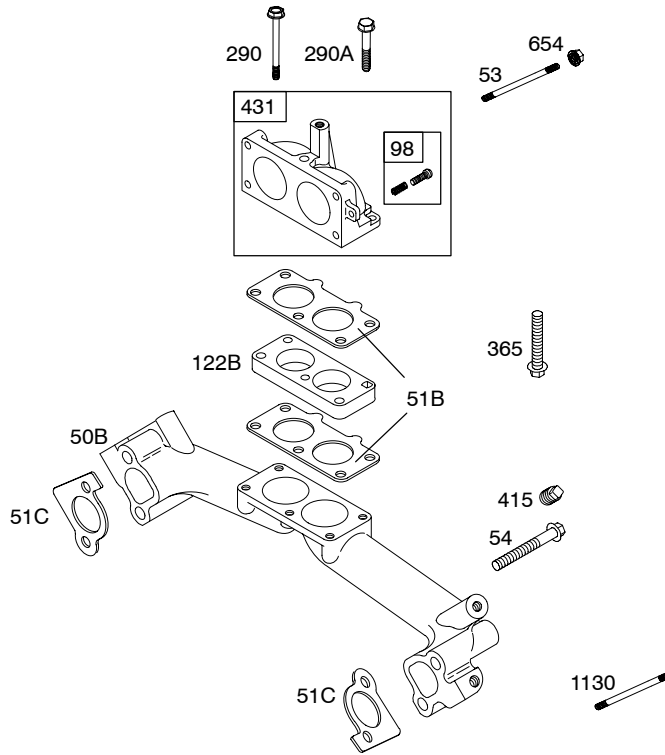


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

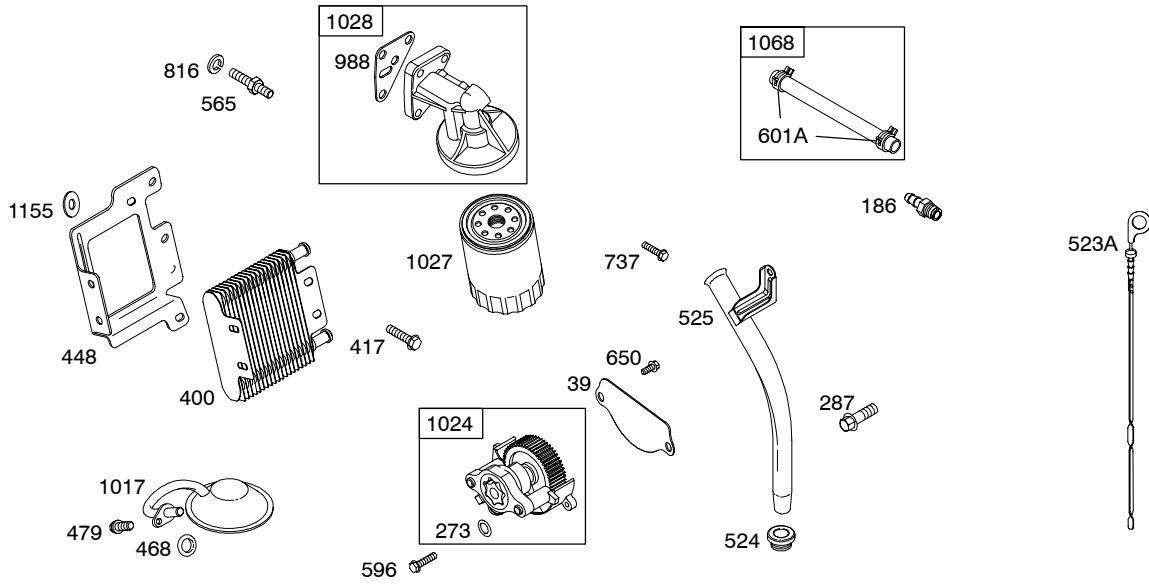 


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3197-5 Assemblies include all parts shown in frames. 11/15/2005

  385400

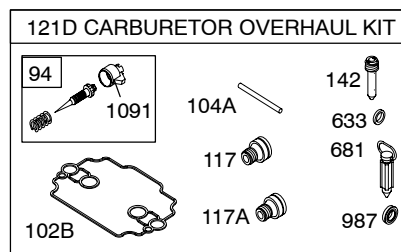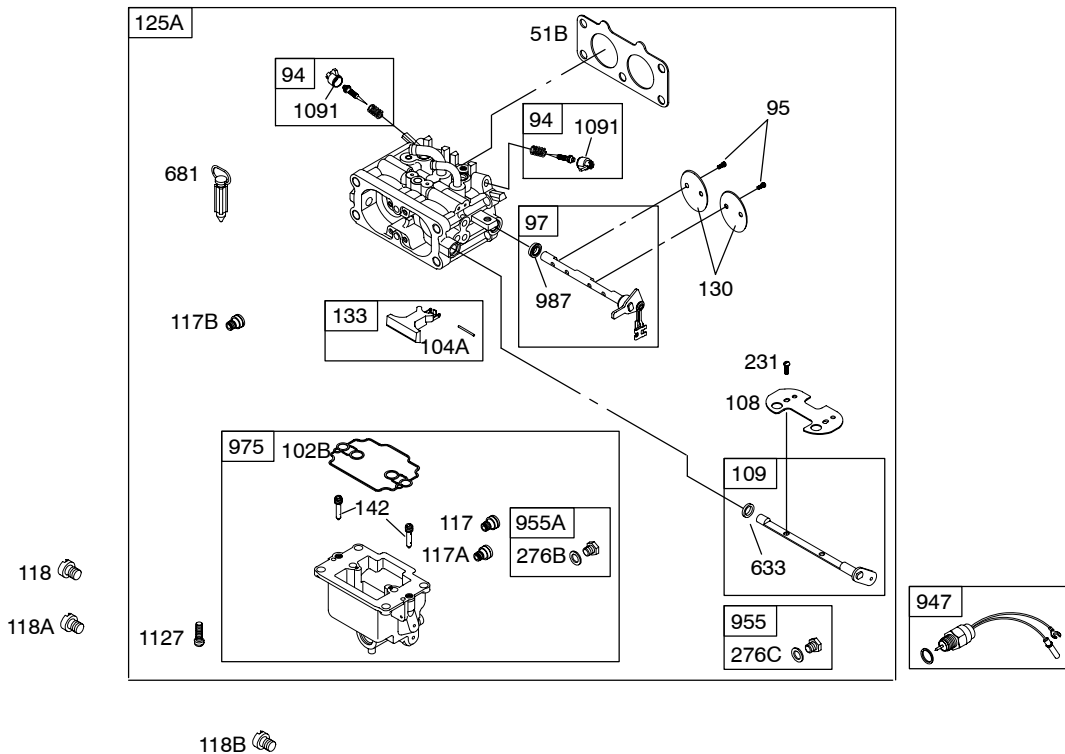


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3197-6 Assemblies include all parts shown in frames. 11/15/2005

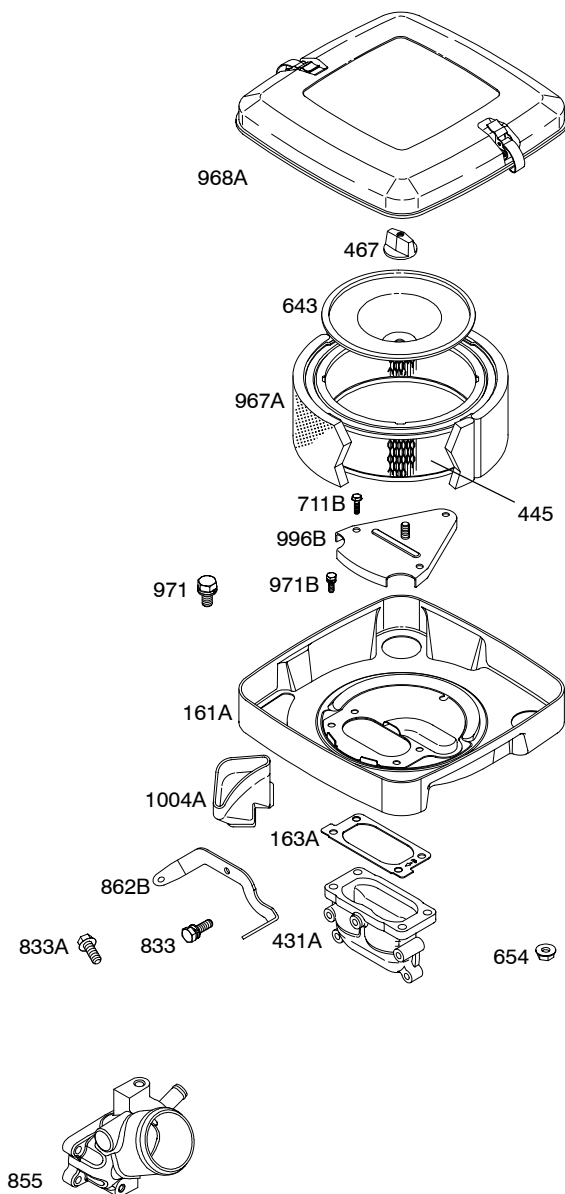 


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3197-7 Assemblies include all parts shown in frames.

11/15/2005

 385400

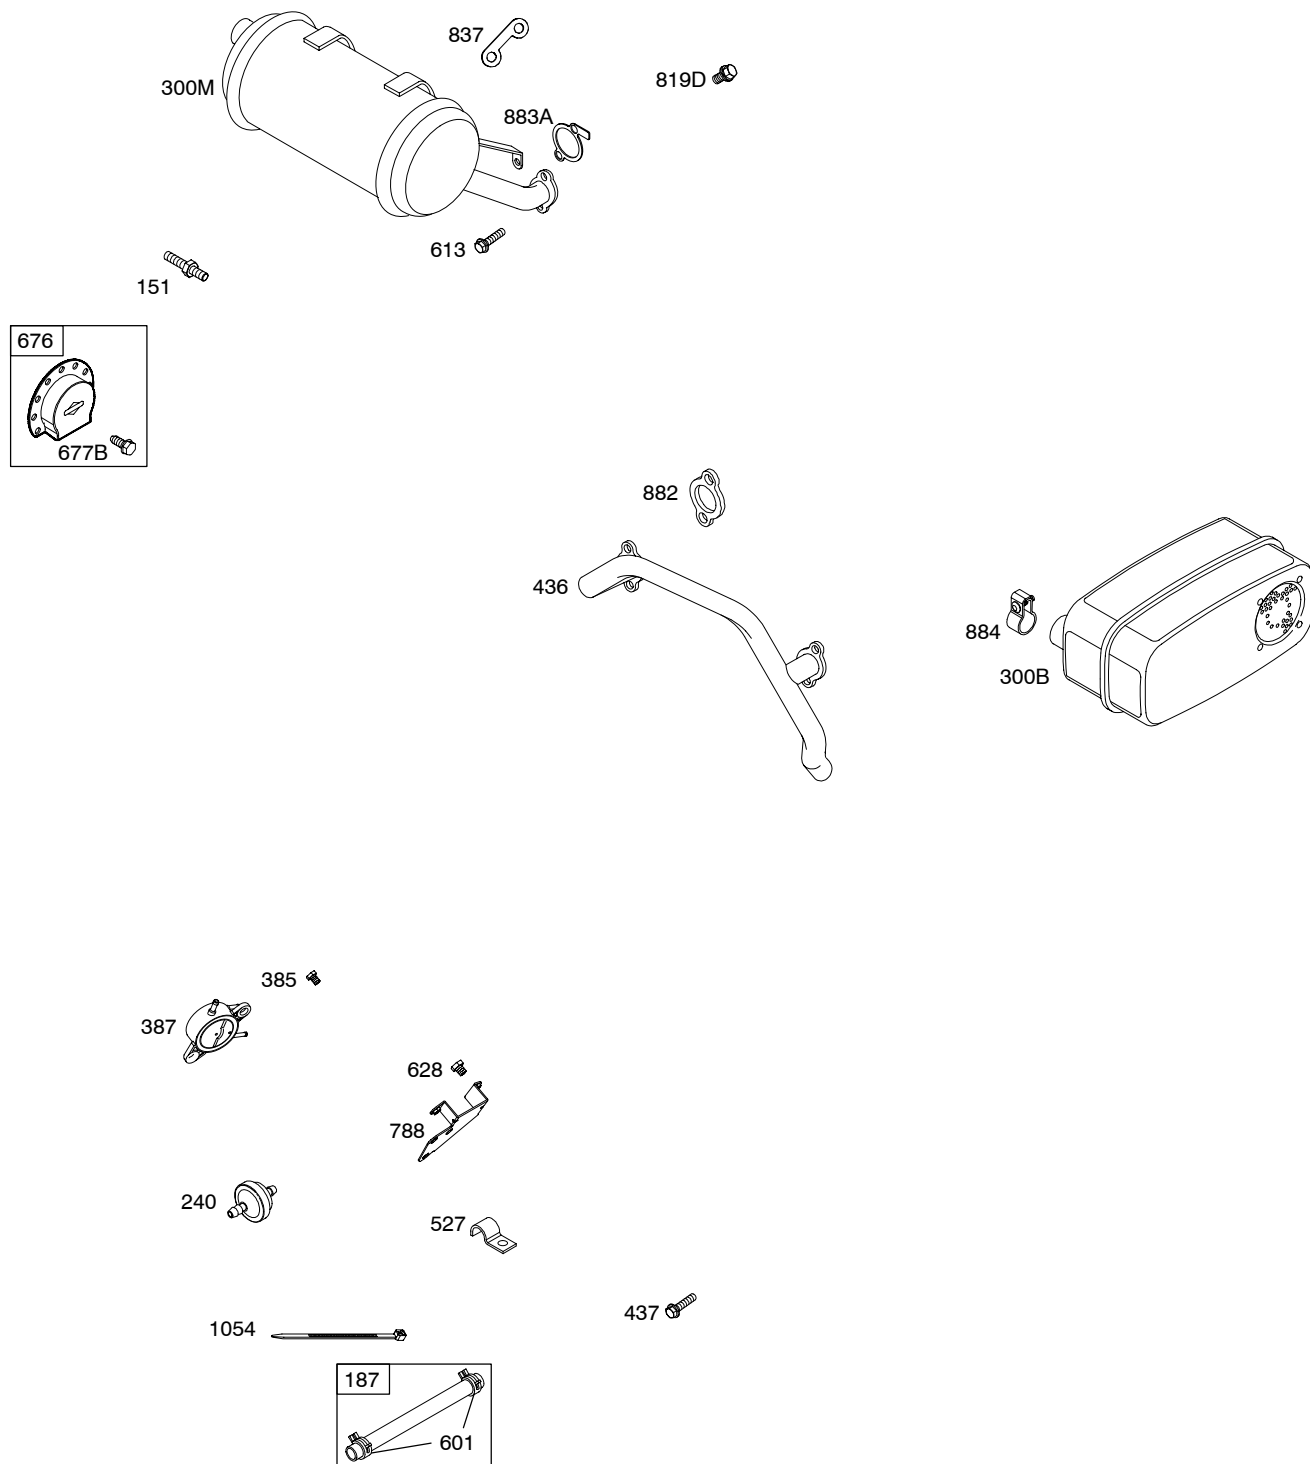


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3197-8 Assemblies include all parts shown in frames. 11/15/2005

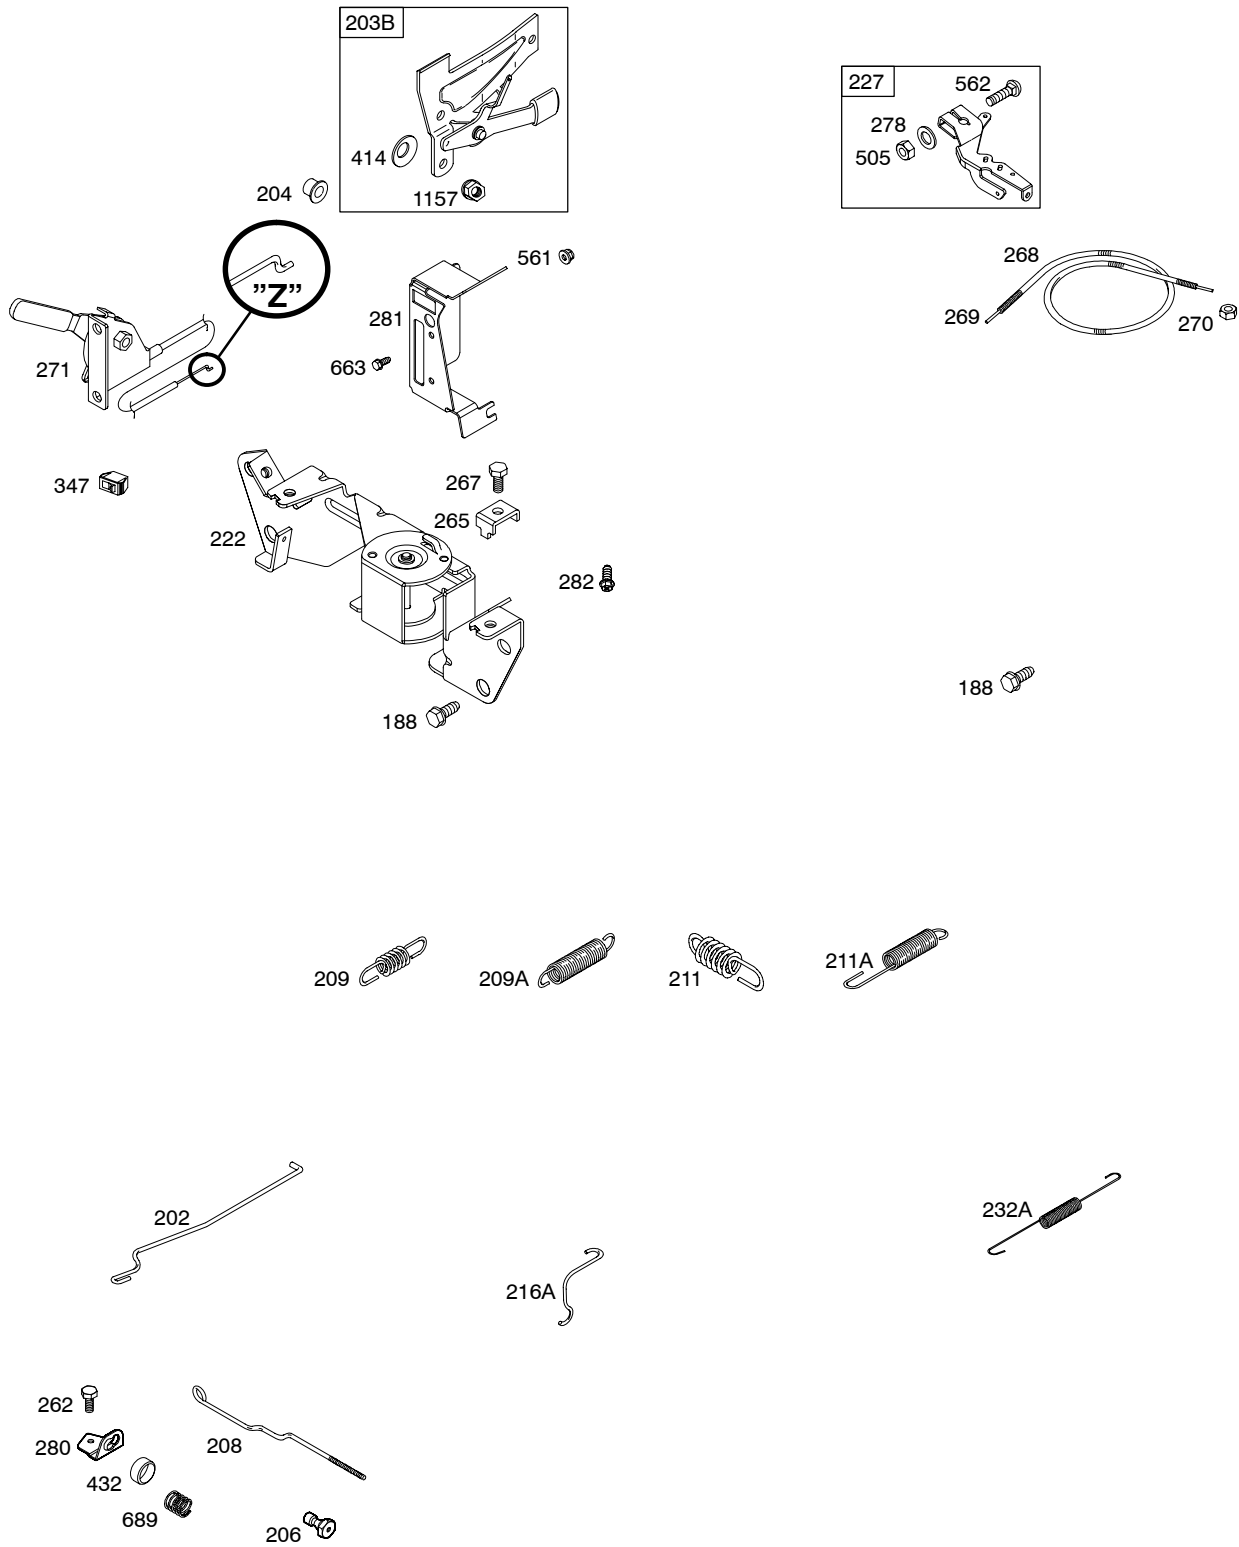 

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3197-9 Assemblies include all parts shown in frames. **11/15/2005**

 
385400

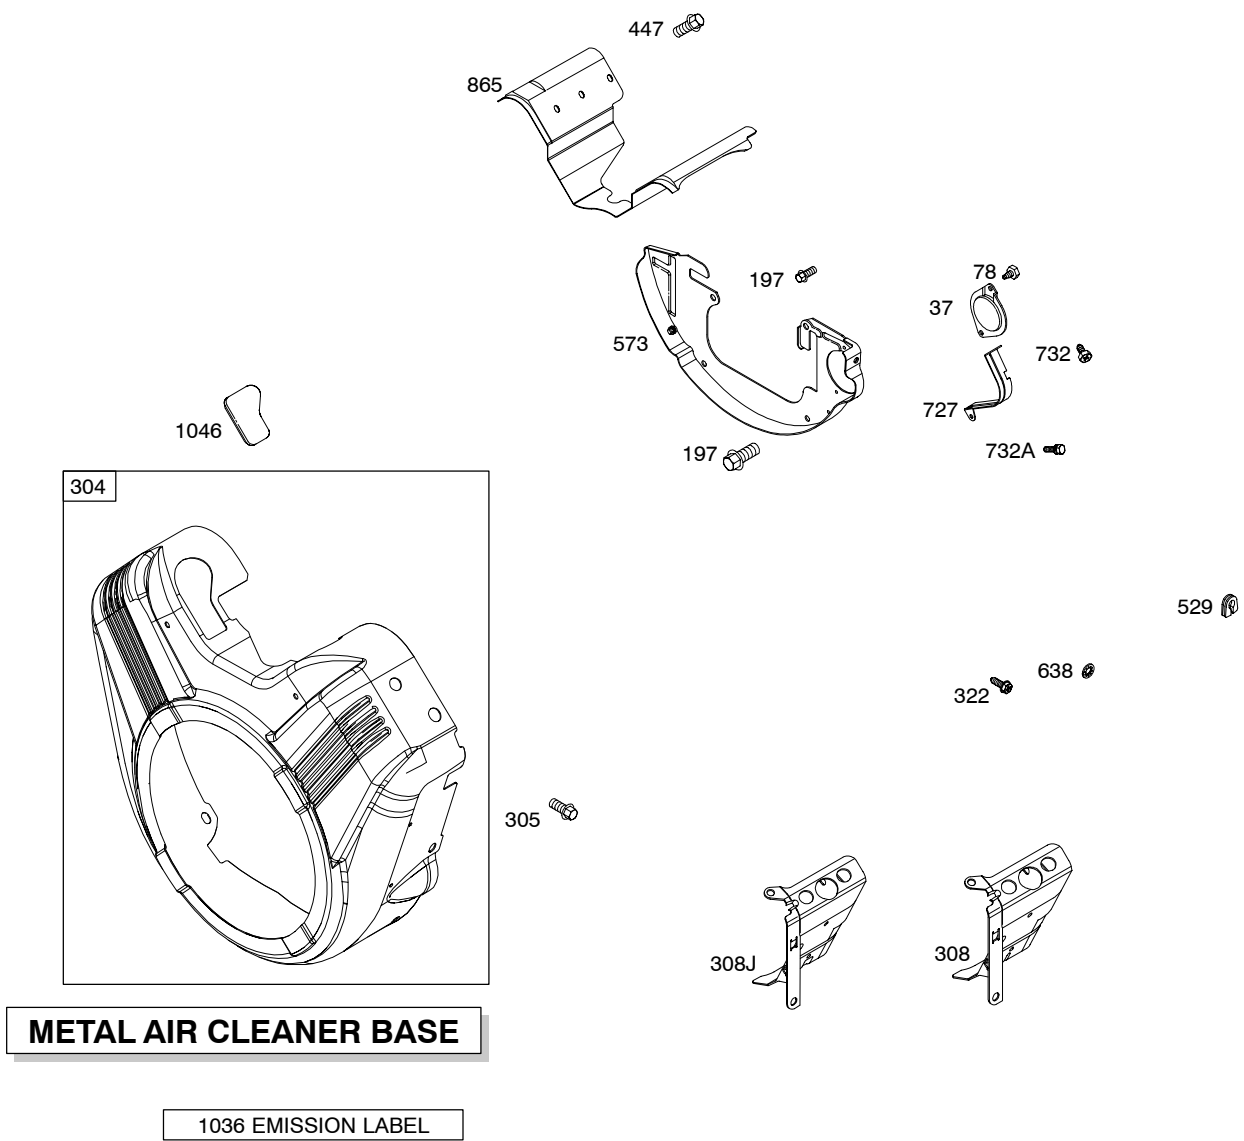

METAL AIR CLEANER BASE


1036 EMISSION LABEL

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3197-10 Assemblies include all parts shown in frames. 11/15/2005






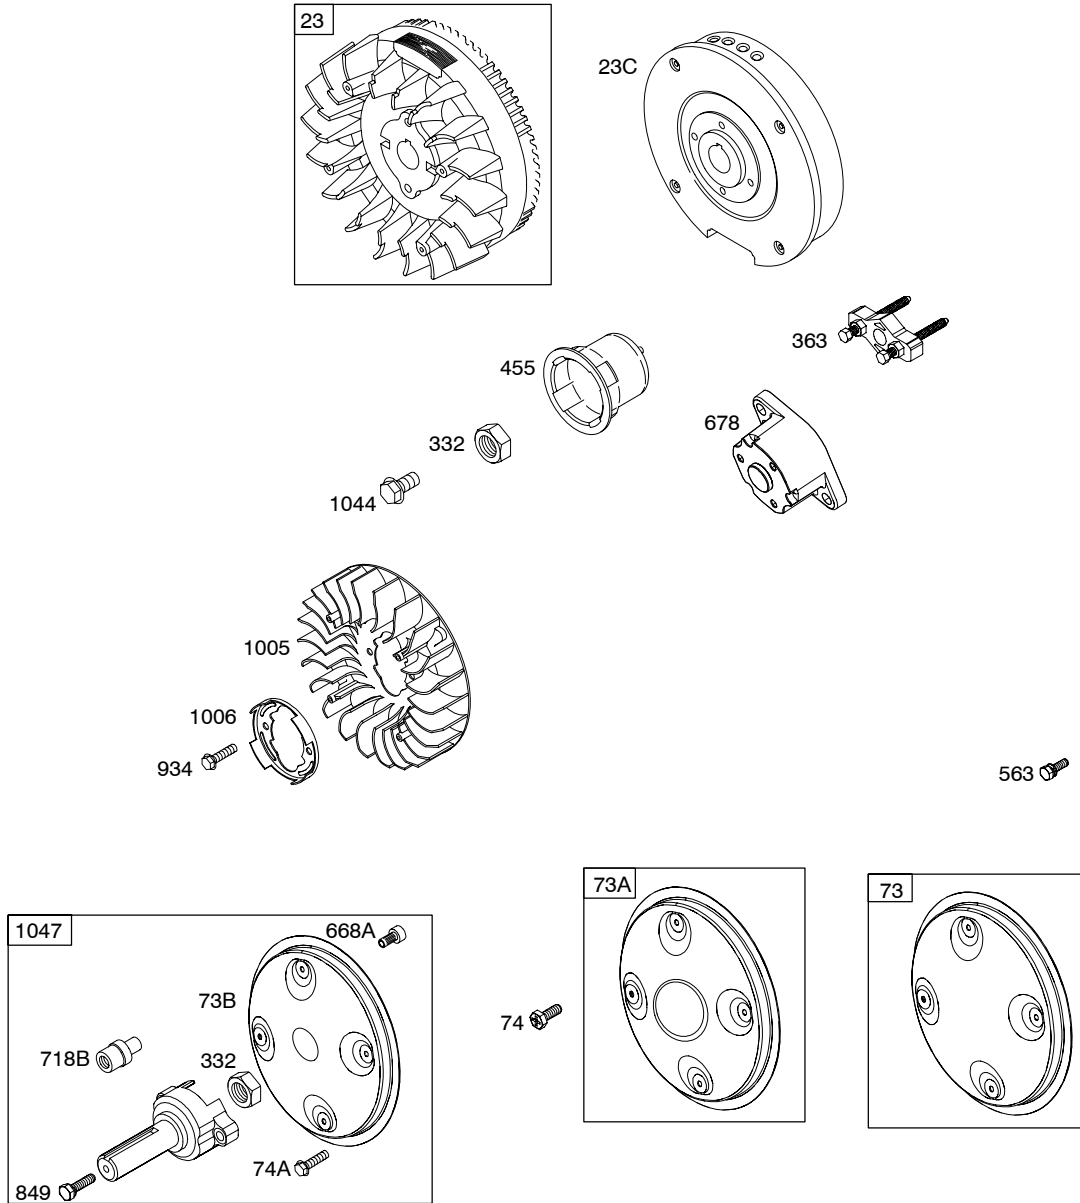 











Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3197-11 Assemblies include all parts shown in frames. 11/15/2005

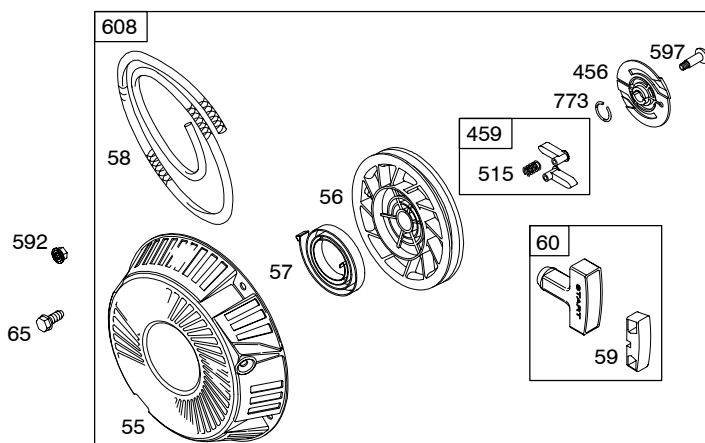 385400

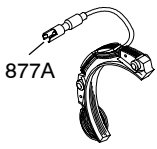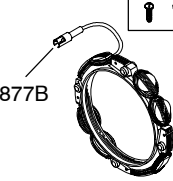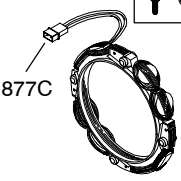      


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3197-12 Assemblies include all parts shown in frames. 11/15/2005

DC ONLY	5 - 9 AMP	10 - 16 AMP
<div data-bbox="662 241 727 273">474A</div>  <p>877A</p>	<div data-bbox="868 241 933 273">474C</div> <div data-bbox="998 241 1063 273">1059</div>  <p>877B</p>	<div data-bbox="1071 241 1136 273">474D</div> <div data-bbox="1209 241 1274 273">1059</div>  <p>877C</p>
 <p>578</p>	 <p>578</p>	 <p>578</p>
<p>NOTE: All stators use a No. 1119 mounting screw. </p>		<div data-bbox="1096 682 1161 714">526</div> <div data-bbox="1096 714 1161 745">501</div> 

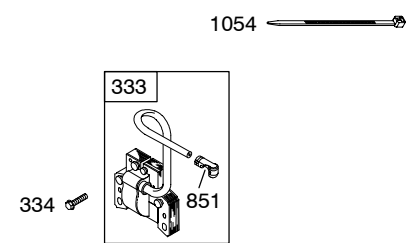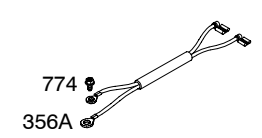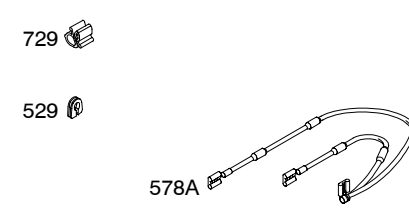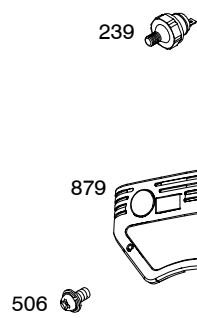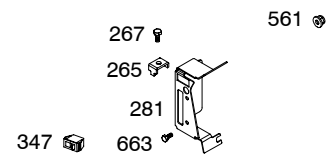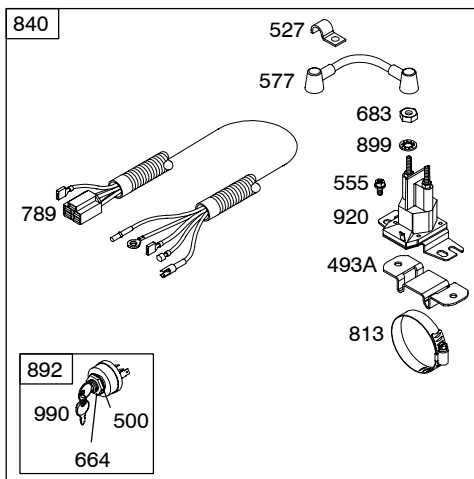       

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3197-13 Assemblies include all parts shown in frames. 11/15/2005

 385400

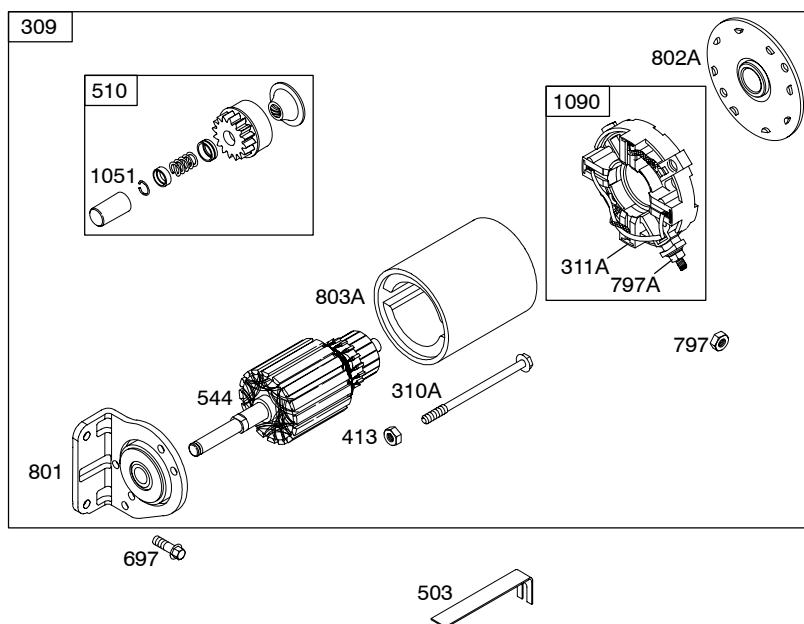

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3197-14 Assemblies include all parts shown in frames. 11/15/2005

385400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	842602	Cylinder Assembly (Used After Code Date 05073000). ----- Note ----- 808650 Cylinder Assembly (Used Before Code Date 05080100).	23	809236	Flywheel ----- Note ----- 841957 Flywheel Used on Type No(s). 0113.	65	690341	Screw (Rewind Starter)
2	808534	Kit-Bushing/Seal (Magneto Side)	23C	841728	Flywheel Used on Type No(s). 0118, 0254.	73	841440	Screen-Rotating Used on Type No(s). 0115, 0132, 0135, 0137, 0254.
3	★805101s	Seal-Oil (Magneto Side)	25	808527	Piston Assembly ----- Note ----- 808652 Piston Assembly (.020" Oversize)	73A	841662	Screen-Rotating
5	842656	Head-Cylinder (Cylinder #1)	26	808528	Ring Set ----- Note ----- 808661 Ring Set (.020" Oversize)	73B	841582	Screen-Rotating
5A	842657	Head-Cylinder (Cylinder #2)	27	806378	Lock-Piston Pin	74	841441	Screw (Rotating Screen)
7	★Δ842622	Gasket-Cylinder Head	28	808526	Pin-Piston	74A	691647	Screw (Rotating Screen)
11	841159	Tube-Breather	29	808646	Rod-Connecting	78	690688	Screw (Flywheel Guard)
11D	806379	Tube-Breather	32	690698	Screw (Connecting Rod)	94	●808257	Kit-Idle Mixture
12	★842589	Gasket-Crankcase	33	806419	Valve-Exhaust	95	690718	Screw (Throttle Valve)
13	806865	Screw (Cylinder Head) (Used Before Code Date 05080100).	34	806420	Valve-Intake	97	808713	Shaft-Throttle
13A	842618	Screw (Cylinder Head) (Used After Code Date 05073000).	35	692084	Spring-Valve (Intake)	98	808177	Kit-Idle Speed
15	690946	Plug-Oil Drain	36	692084	Spring-Valve (Exhaust)	102B	●693711	Gasket-Carburetor Body
16	809844	Crankshaft ----- Note ----- 809813 Crankshaft Used on Type No(s). 0111, 0118, 0121, 0123, 0130, 0139. 809834 Crankshaft Used on Type No(s). 0115. 809826 Crankshaft Used on Type No(s). 0131.	37	841309	Guard-Flywheel	104A	●690882	Pin-Float Hinge
17	690752	Bearing-Ball	39	690745	Deflector-Oil	108	690883	Valve-Choke
18	808849	Cover-Crankcase	40	692058	Retainer-Valve	109	808277	Shaft-Choke
20	★805049s	Seal-Oil (PTO Side)	42	807683	Keeper-Valve	117	●806438	Jet-Main (Standard) (Left or Cylinder 1)
22	807362	Screw (Crankcase Cover/Sump)	45	690977	Tappet-Valve	117A	●806439	Jet-Main (Standard) (Right Or Cylinder 2)
			46	690927	Camshaft	117B	806126	Jet-Main (Standard) Used on Type No(s). 0115.
			50B	806376	Manifold-Intake	118	693500	Jet-Main (High Altitude) (Right Or Cylinder 2)
			51B	★690950	Gasket-Intake	118A	841670	Jet-Main (High Altitude) (Left or Cylinder 1)
			51C	★Δ806418	Gasket-Intake	118B	809685	Jet-Main (High Altitude) Used on Type No(s). 0115.
			53	690746	Stud (Carburetor)	121D	808816	Kit-Carburetor Overhaul
			54	691492	Screw (Intake Manifold)	122B	690870	Spacer-Carburetor
			55	691568	Housing-Rewind Starter			
			56	692085	Pulley-Starter			
			57	692086	Spring-Rewind Starter			
			58	66574	Rope-Starter			
			59	805957	Insert-Grip			
			60	808167	Grip-Starter Rope			

★ Included in Engine Gasket Set-Ref. No.358B.

● Included in Carburetor Overhaul Kit-Ref. No. 121D.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

385400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
125A	808712	Carburetor ----- Note ----- 809877 Carburetor Used on Type No(s). 0115.	209A	690709	Spring-Governor Used on Type No(s). 0111, 0118, 0139.	287	692062	Screw (Dipstick Tube)
130	690884	Valve-Throttle	211	692069	Spring-Governed Idle ----- Note ----- 691504 Spring-Governed Idle	290	691537	Screw (Intake Elbow)
133	808180	Float-Carburetor				290A	691492	Screw (Intake Elbow)
142	●806375	Nozzle-Carburetor (Standard)				300B	498984s	Muffler Used on Type No(s). 0137.
142A	841164	Nozzle-Carburetor (Standard) Used on Type No(s). 0115.	211A	690707	Spring-Governed Idle Used on Type No(s). 0121, 0123, 0130.	300M	808896	Muffler Used on Type No(s). 0130.
146	691639	Key-Timing	216A	691542	Link-Choke			----- Note ----- 808705 Muffler Used on Type No(s). 0118, 0254.
151	841185	Stud (Exhaust Manifold)	222	808454	Bracket-Control	304	841489	Housing-Blower ----- Note ----- 841400 Housing-Blower Used on Type No(s). 0115.
161A	808655	Base-Air Cleaner (Metal)	227	690236	Lever-Governor Control			
163A	★692087	Gasket-Air Cleaner	231	690718	Screw (Choke Valve)			
186	693184	Connector-Hose	232A	691538	Spring-Governor Link			
187	791766	Line-Fuel	239	690233	Switch-Oil Pressure			
188	692056	Screw (Control Bracket)	240	691035	Filter-Fuel			
192	807623	Adjuster-Rocker Arm	262	692083	Screw (Rod Bracket)			
197	841233	Screw (Back Plate)	265	691024	Clamp-Casing	305	692056	Screw (Blower Housing)
202	691536	Link-Mechanical Governor	267	692083	Screw (Casing Clamp)	308	841183	Cover-Cylinder Head (Cylinder 1)(Black)
203B	808753	Crank-Bell	268	691025	Casing-Control Wire	308J	841182	Cover-Cylinder Head (Cylinder 2)(Black)
204	692884	Bushing-Lever	269	691026	Wire-Control	309	691564	Motor-Starter
206	691244	Nut-Governor Adjusting	270	691027	Nut (Control Wire Casing)	310A	690323	Screw (Starter Motor)
208	691549	Rod-Governor Control	271	692541	Lever-Control	322	841233	Screw (Cylinder Head Cover)
209	692070	Spring-Governor ----- Note ----- 691546 Spring-Governor Used on Type No(s). 0121, 0123, 0130. 692072 Spring-Governor Used on Type No(s). 0115. 692071 Spring-Governor Used on Type No(s). 0135.	273	★690681	Seal-O Ring (Oil Pump)	332	690887	Nut (Flywheel)
			276	★690704	Washer-Sealing (Governor Crank)	333	492341	Armature-Magneto
			276A	★△807085	Washer-Sealing (Rocker Cover)	334	692066	Screw (Magneto Armature)
			276B	690724	Washer-Sealing (Solenoid)	337	491055s	Plug-Spark ----- Note ----- 792015 Plug-Spark Used on Type No(s). 0111, 0112, 0113, 0121, 0130.
			276C	693497	Washer-Sealing	338	691312	Gasket-Dipstick
			278	842122	Washer (Governor Control Lever)			
			280	691526	Bracket-Rod			
			281	690742	Panel-Control			
			282	692083	Screw (Control Lever)			

★ Included in Engine Gasket Set-Ref. No.358B.

● Included in Carburetor Overhaul Kit-Ref. No. 121D.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

385400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
347	691995	Switch-Rocker	468	★690690	Seal-O Ring (Oil Pump Screen)	526A	690717	Screw (Regulator)(5 To 9 Amp Regulated) Used on Type No(s). 0254.
356A	690809	Wire-Stop	474A	696578	Alternator (DC Only) Used on Type No(s). 0118.	527	690423	Clamp-Tube
358B	842658	Gasket Set-Engine	474C	696457	Alternator (5 To 9 Amp Regulated) Used on Type No(s). 0254.	529	690744	Grommet
359	691077	Washer (Ground Terminal)	474D	696458	Alternator (10-16 Amp Regulated)	544		Armature-Starter (Service With 691564 Starter Motor Only)
363	19203	Puller-Flywheel	479	807084	Screw (Oil Pump Screen)	552	690701	Bushing-Governor Crank
365	690866	Screw (Carburetor)	493A	691177	Bracket-Mounting	552A	806686	Bushing-Governor Crank
373	691612	Nut (Ground Terminal)	500	691086	Washer (Key Switch)	555	692067	Screw (Starter Solenoid)
377	808095	Key-Woodruff	501	691185	Regulator ----- Note -----	561	690713	Nut (Control Lever)
383	19374s	Wrench-Spark Plug		493219	Regulator Used on Type No(s). 0112.	562	690239	Bolt (Governor Control Lever)
385	807084	Screw (Fuel Pump)	501A	691188	Regulator (2 Wire)(9 Amp) Used on Type No(s). 0254.	563	841735	Screw (Debris Screen Guard)
387	808656	Pump-Fuel	503	691532	Strap-Starter	565	690682	Stud (Oil Filter Adapter)
400	808657	Cooler-Oil	505	690238	Nut (Governor Control Lever)	573	841310	Plate-Back
413	693587	Nut (Starter Motor)	506	807120	Screw (Carburetor Cover)	577	690795	Cable-Starter
414	690344	Washer (Bell Crank)	507	691972	Insulator	578	692306	Wire Assembly
415	690283	Plug	510	496881	Drive-Starter	578A	692319	Wire Assembly
417	810074	Screw (Oil Cooler)	515	691528	Spring-Pawl	592	690939	Nut (Rewind Starter)
431	808659	Elbow-Intake	520	691084	Terminal-Ground	596	691492	Screw (Oil Pump)
431A	691534	Elbow-Intake	522	491832	Plug-Dipstick/Fill	597	690876	Screw (Pawl Friction Plate)
432	691509	Cap-Spring	523A	693175	Dipstick	598	807625	Shim-End Play (Crankshaft or Camshaft Bearing)
436	808916	Manifold-Exhaust Used on Type No(s). 0137.	524	693172	Seal-Dipstick Tube	601	691038	Clamp-Hose
437	691902	Screw (Exhaust Manifold)	525	693174	Tube-Dipstick	601A	841502	Clamp-Hose
439	★692154	Seal-O Ring (Crankcase Cover/Sump)	526	692067	Screw (Regulator)	601B	791850	Clamp-Hose
445	692519	Filter-Air Cleaner Cartridge				601C	691145	Clamp-Hose
447	841233	Screw (Air Guide Cover)				608	841729	Starter-Rewind
448	841488	Bracket-Oil Cooler				613	691902	Screw (Muffler)
455	841794	Cup-Flywheel						
456	691529	Plate-Pawl Friction						
459	808166	Pawl-Ratchet						
466	806466	Seal-O Ring (Breather Assembly)						
467	691985	Knob-Air Cleaner						

★ Included in Engine Gasket Set-Ref. No.358B.

● Included in Carburetor Overhaul Kit-Ref. No. 121D.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3197-17

Assemblies include all parts shown in frames.

11/15/2005

385400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
615	691550	Retainer-Governor Shaft	741	691530	Gear-Timing	879	841607	Cover-Carburetor
616	806685	Crank-Governor	773	690875	Retainer			----- Note -----
628	806660	Screw (Fuel Pump Bracket)	774	692067	Screw (Stop Wire)			842128 Cover-Carburetor
633	●690722	Seal-Choke/Throttle Shaft	788	691559	Bracket-Fuel Pump			Used on Type No(s). 0130, 0132, 0134, 0139, 0254.
635	692076	Boot-Spark Plug	789	691996	Harness-Wiring			842269 Cover-Carburetor
638	691551	Washer (Cylinder Head Cover)	797	691029	Nut (Brush Retainer)			Used on Type No(s). 0115.
643	692079	Retainer-Air Filter	801	808778	Cap-Drive	882	806965	Flange-Exhaust
650	692539	Screw (Oil Deflector)	802A	691286	Cap-End			Used on Type No(s). 0137.
654	690939	Nut (Carburetor)	803A	693547	Housing-Starter	883A	★△806425	Gasket-Exhaust
663	692083	Screw (Control Panel)	813	690635	Clamp	884	691956	Clamp-Muffler
664	691087	Nut (Key Switch)	816	690706	Washer (Oil Filter Adapter)			Used on Type No(s). 0137.
668A	691500	Spacer	819D	692062	Screw (Muffler Bracket)	892	692318	Switch-Key
676	393761	Deflector-Muffler Used on Type No(s). 0137.	830	809157	Stud-Rocker Arm	899	691077	Washer (Starter Solenoid)
677B	690661	Screw (Muffler Deflector) Used on Type No(s). 0137.	833	807084	Screw (Air Cleaner Mounting Strap/Stud)	914	806421	Screw (Rocker Cover)
678	841730	Spacer-Rewind	833A	807163	Screw (Air Cleaner Mounting Strap/Stud)	918	393815	Hose-Vacuum
681	●808798	Kit-Needle/Seat	837	808085	Spacer-Muffler	920	691656	Solenoid-Starter
683	691029	Nut (Starter Solenoid)	840	692096	Kit-Panel	934	691058	Screw (Fan Retainer)
689	691272	Spring-Friction	849	691088	Screw (Stub Shaft)	947	808624	Solenoid-Fuel
691	690680	Seal-Governor Shaft	851	493880s	Terminal-Spark Plug	955	808176	Plug-Carburetor
697	692062	Screw (Drive Cap)	855	809896	Adapter-Air Cleaner Used on Type No(s). 0115.	955A	807723	Plug-Carburetor
711B	807163	Screw (Carburetor Shield)	862B	691539	Strap/Stud-Air Cleaner Mounting	967A	692520	Filter-Pre Cleaner
718	806469	Pin-Locating	865	807119	Cover-Air Guide	968A	808654	Cover-Air Cleaner
718B	841581	Pin-Locating	868	★△691963	Seal-Valve	971	841233	Screw (Air Cleaner Base to Carburetor)
727	841313	Cover-Starter Drive	871	692057	Bushing-Valve Guide	971B	691492	Screw (Air Cleaner Base to Carburetor)
729	690586	Clip-Wire	877A	393814	Wire/Connector-Alternator (DC Only)	975	808627	Bowl-Float ----- Note -----
732	690688	Screw (Starter Drive Cover)	877B	393537	Wire/Connector-Alternator (Green)(Single Socket)			841160 Bowl-Float Used on Type No(s). 0115.
732A	841233	Screw (Starter Drive Cover)	877C	399916	Wire/Connector-Alternator	987	●691000	Seal-Throttle Shaft
737	690679	Screw (Oil Filter Adapter)				988	★692063	Gasket-Oil Adapter
						990	691959	Key Set
						996B	690917	Shield-Carburetor

★ Included in Engine Gasket Set-Ref. No.358B.

△ Included in Valve Gasket Set-Ref. No 1095.

● Included in Carburetor Overhaul Kit-Ref. No. 121D.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

385400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1004A	806422	Duct-Air	1027	492932s	Filter-Oil	1091	●691516	Cap-Limiter
1005	841439	Fan-Flywheel	1028	808537	Adapter-Oil Filter	1095	842659	Gasket Set-Valve
1006	690452	Retainer-Fan	1029	807323	Arm-Rocker	1100	791959	Pivot-Rocker Arm
1017	690900	Screen-Oil Pump	1036		Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer)	1119	691552	Screw (Alternator)
1019	841626	Kit-Label				1127	690885	Screw (Float Bowl)
1022*Δ	806039s	Gasket-Rocker Cover	1044	692056	Screw (Flywheel)	1130	690746	Stud (Intake Manifold)
1023A	808648	Cover-Rocker (Includes Breather Assembly)	1046	841165	Plug-Blower Housing	1131	842067	Nut (Crankcase Cover/Sump)
1023C	690910	Cover-Rocker	1047	841580	Shaft-Stub	1133	690342	Screw (Crankshaft)
1024	693185	Pump-Oil	1051	691124	Ring-Retaining	1135	806497	Washer (Crankcase Cover/Sump)
1025	690689	Spool-Governor	1054	280275	Tie-Cable	1155	806647	Washer (Oil Cooler)
1026	691836	Rod-Push (Intake)(Steel)	1058	276343	Operator's Manual	1157	806447	Nut (Bell Crank)
		----- Note -----	1068	841999	Hose/Clamp Assembly	1254	807084	Screw (Rocker Cover Stud)
		691758 Rod-Push (Exhaust)(Aluminum)	1090	691293	Retainer-Brush	1330	272144	Repair Manual

★ Included in Engine Gasket Set-Ref. No.358B.

● Included in Carburetor Overhaul Kit-Ref. No. 121D.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.