



Illustrated Parts List

Model Series

474100

TYPE NUMBERS
0100 through 0112.

TABLE OF CONTENTS

Air Cleaner	6
Alternator	8
Camshaft	2
Carburetor	5
Controls	8
Crankcase Cover	4
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	8
Exhaust System	6
Flywheel	7
Governor Springs	8
Intake Manifold	4
Kit/Gasket Set - Carburetor	5
Kit/Gasket Set - Valve	3
Kit/Gasket Set - Engine	2
Pistons	2
Radiator Fan	9
Radiator	10
Valves	3


BRIGGS & STRATTON




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1036 EMISSION LABEL

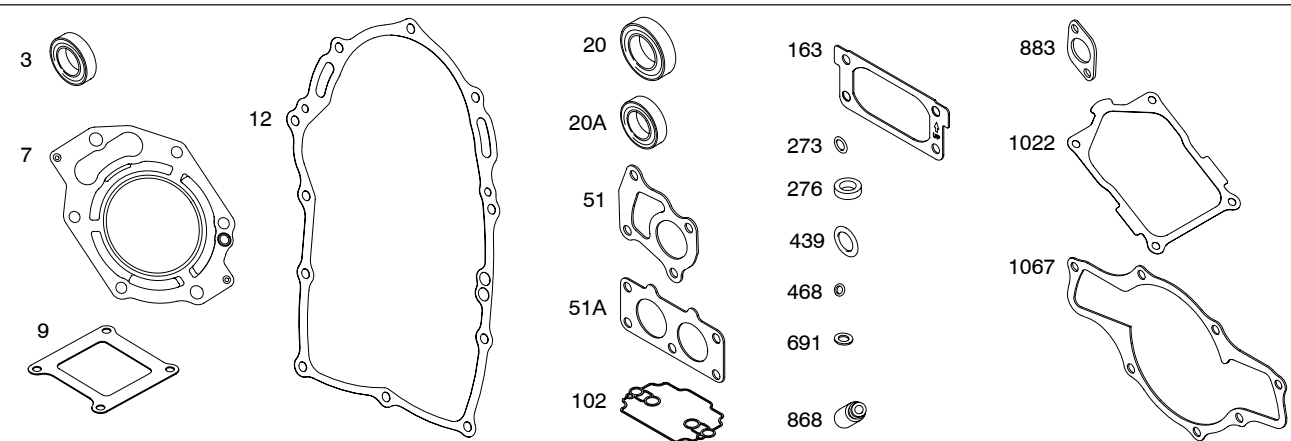


2

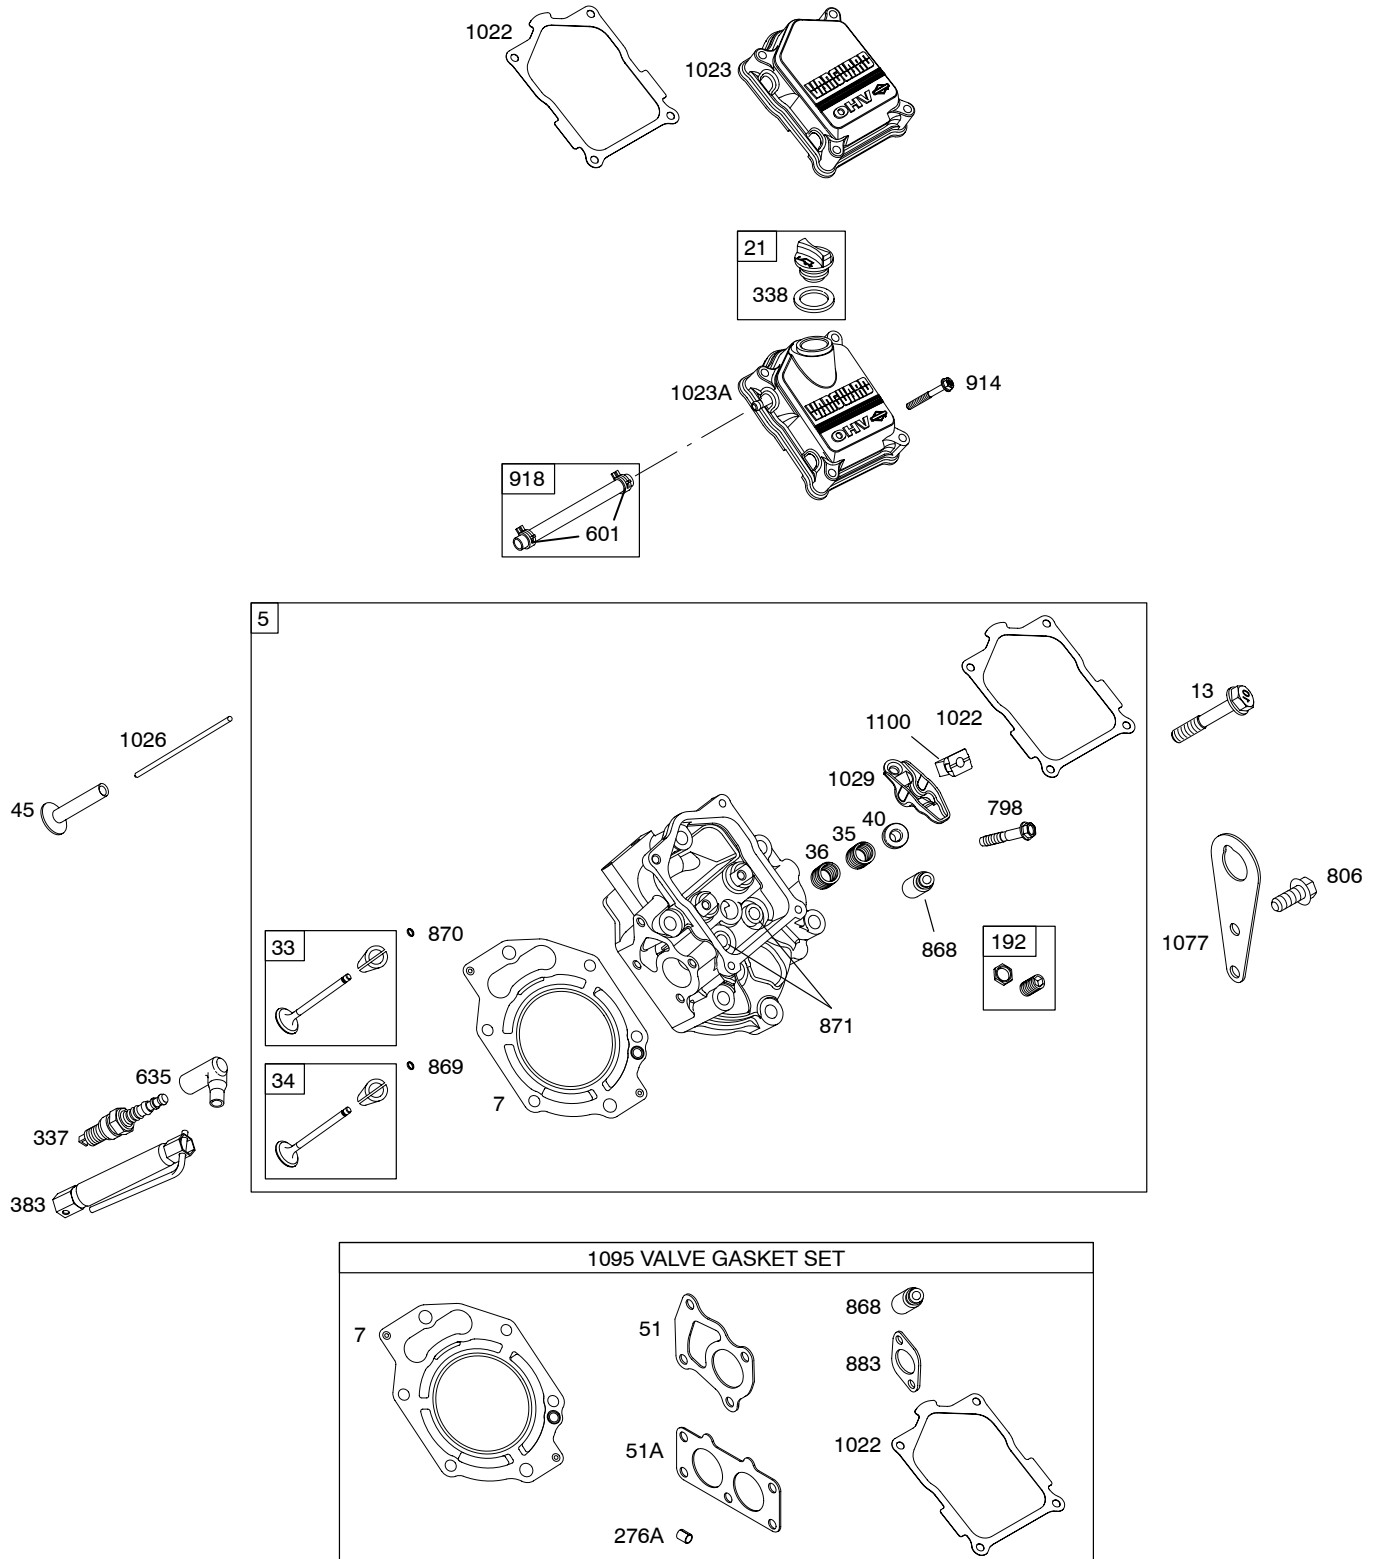



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3315-3 Assemblies include all parts shown in frames. 11/07/2005

474100

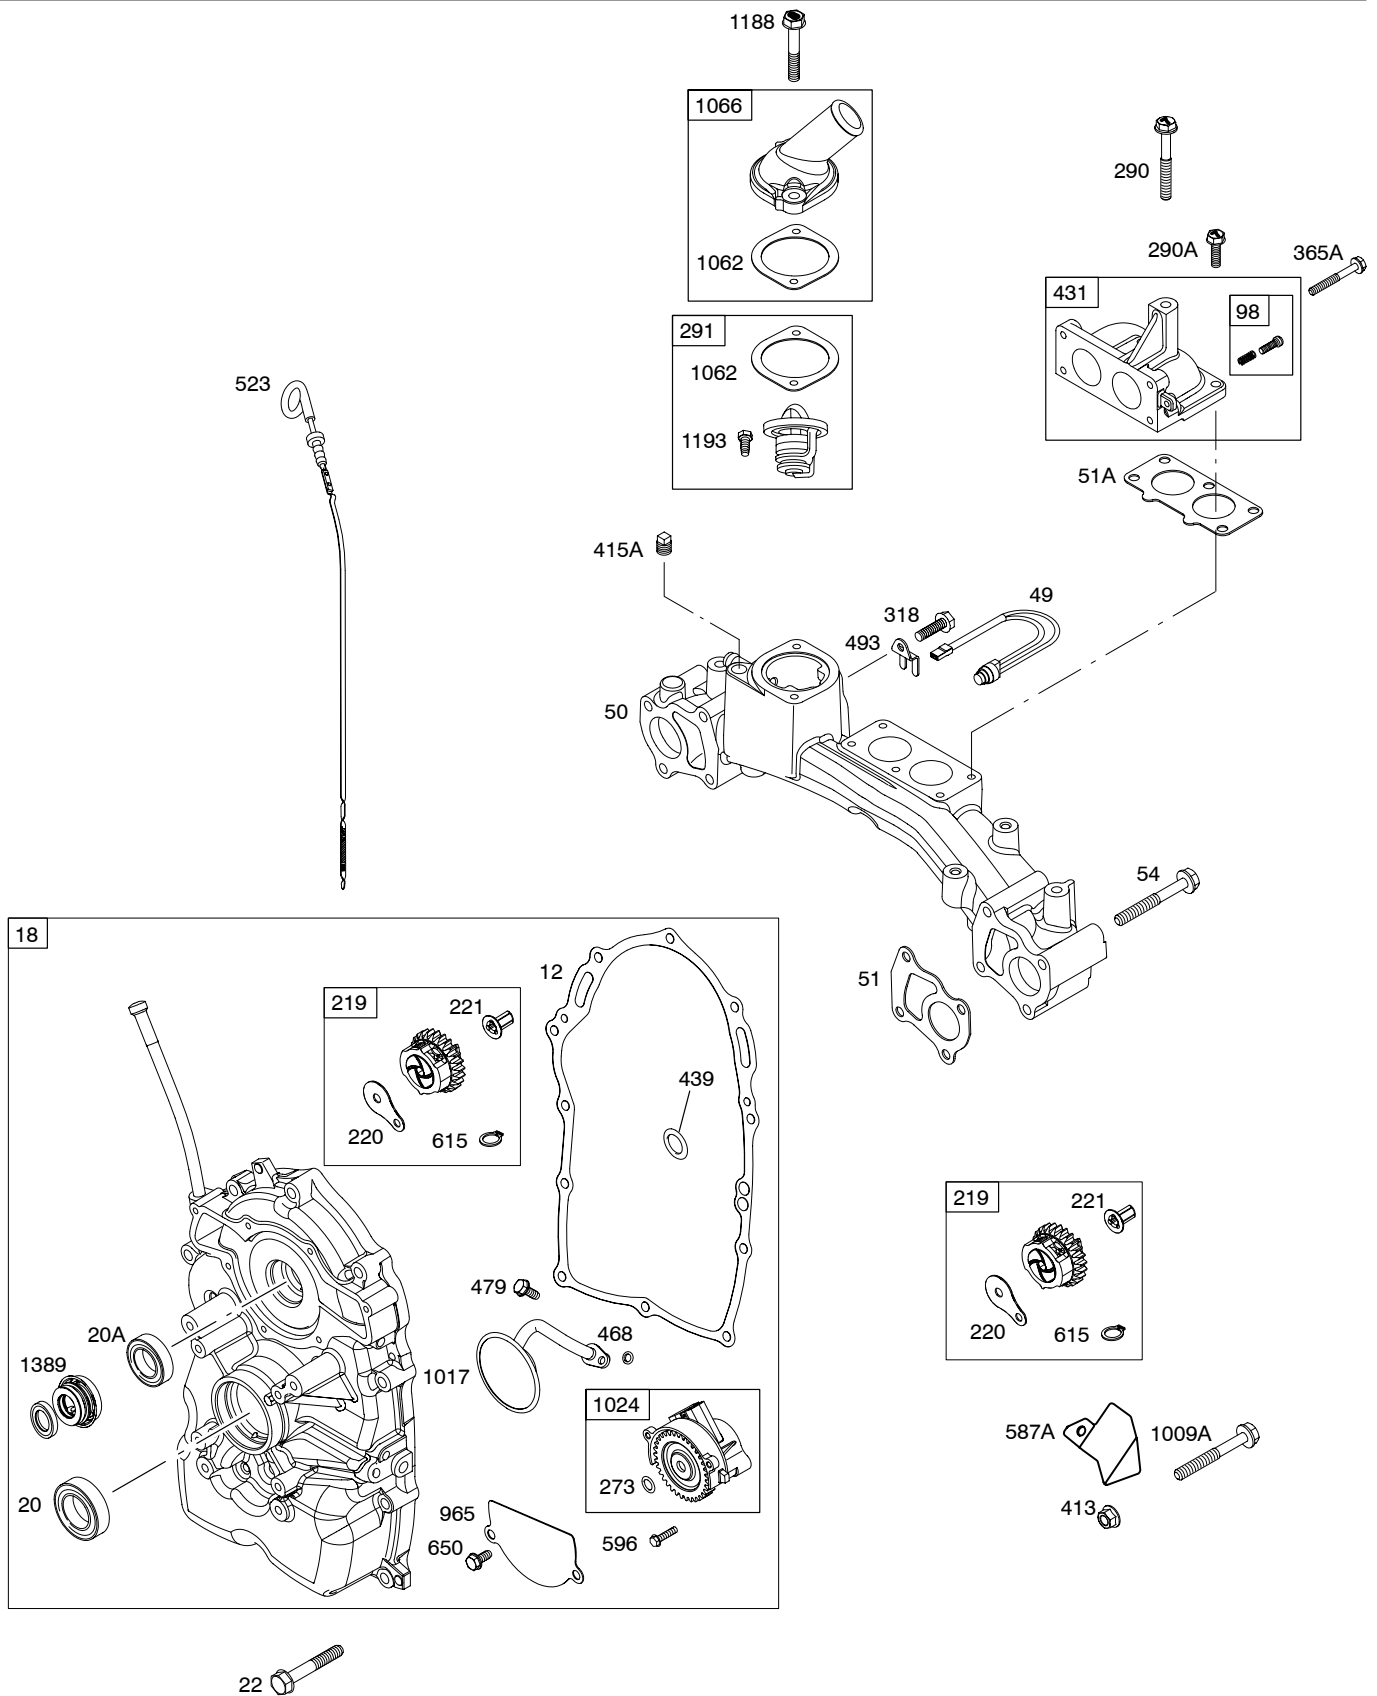


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3315-4 Assemblies include all parts shown in frames. 11/07/2005

474100

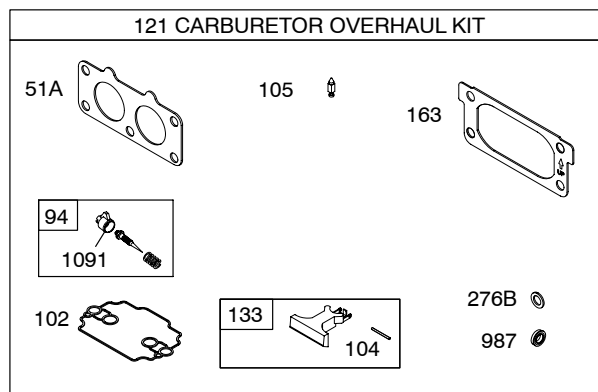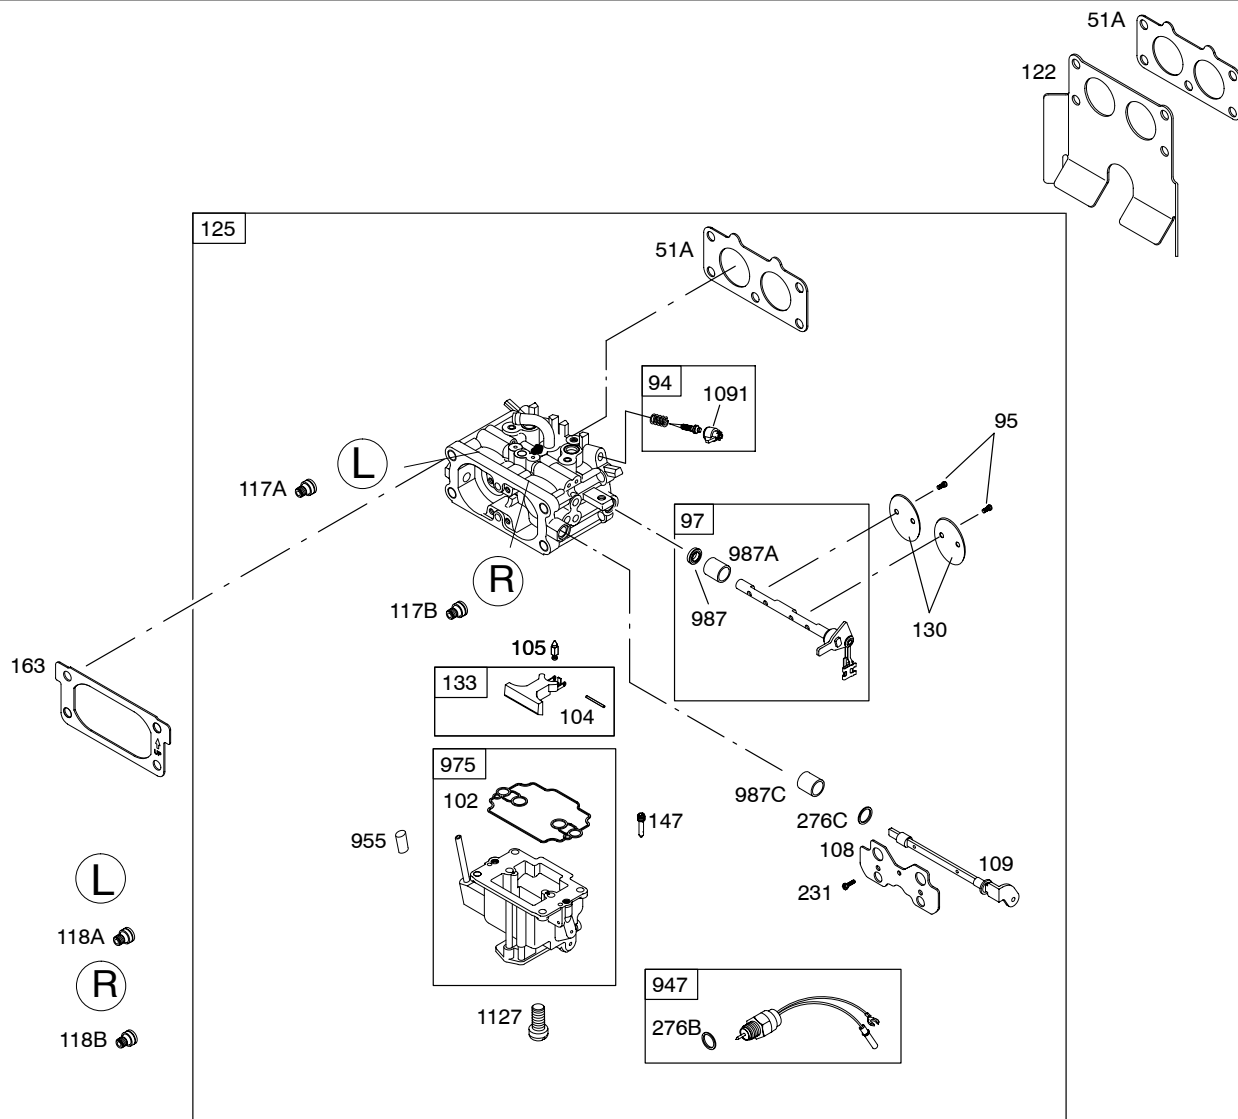

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3315-5 Assemblies include all parts shown in frames. **11/07/2005**

474100

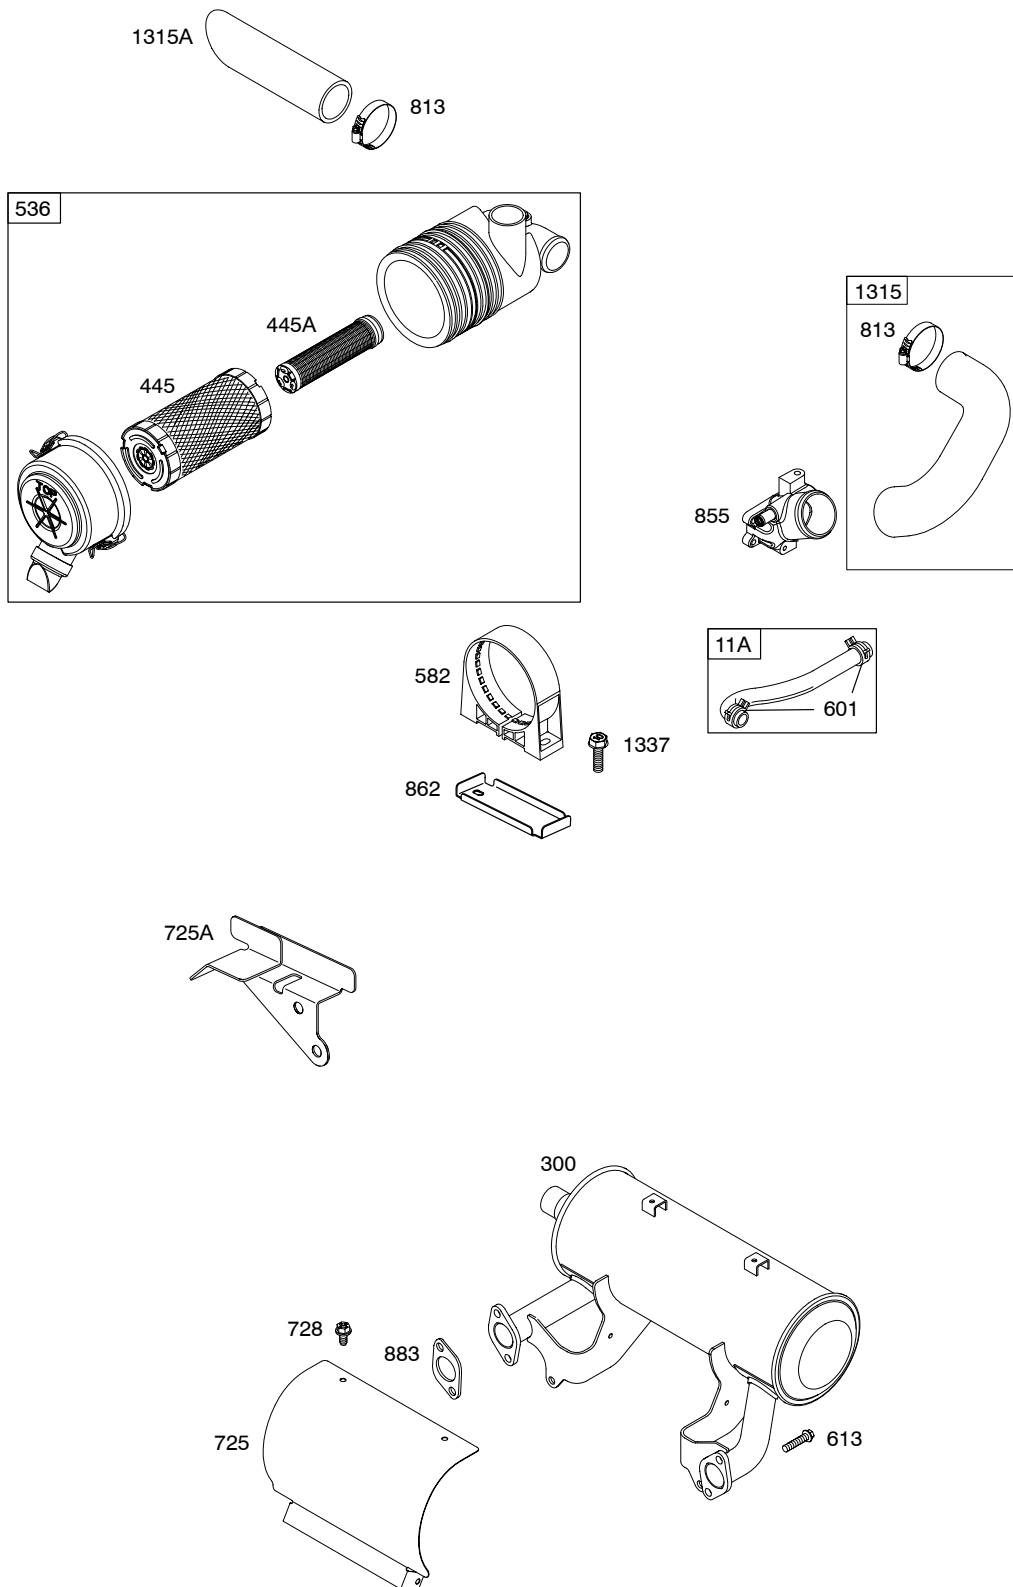


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3315-6

Assemblies include all parts shown in frames.

11/07/2005

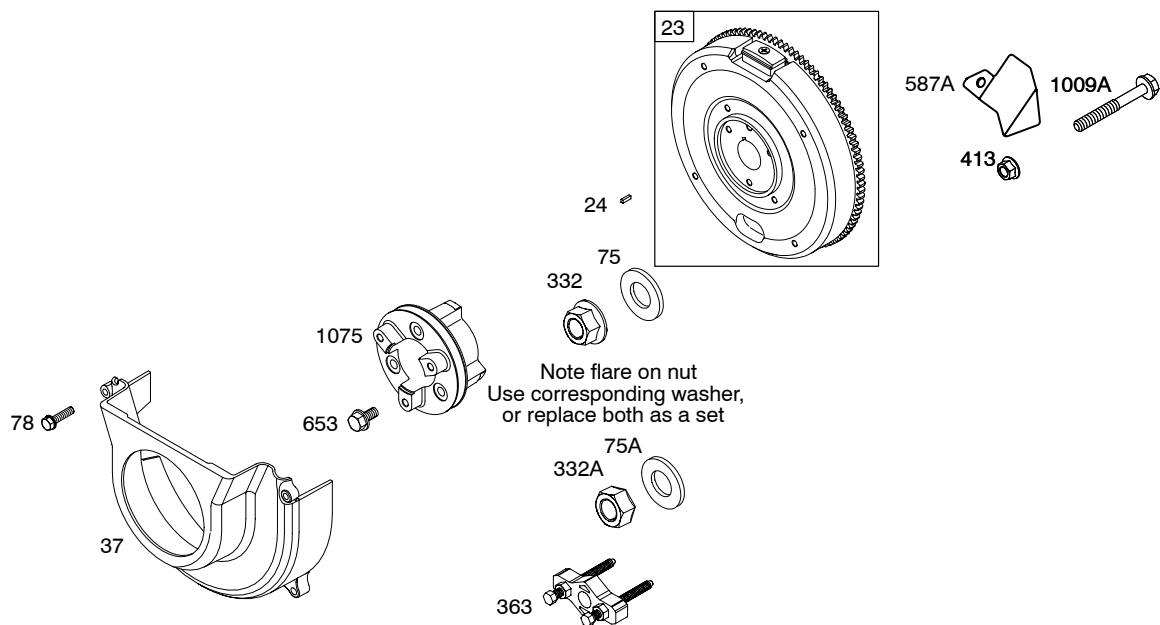

474100

NOTE: All stators use a No. 1119 mounting screw. 

NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

20 AMP





 

474E

877D



526B

501B

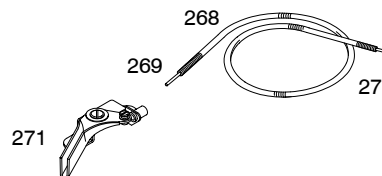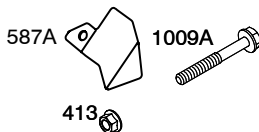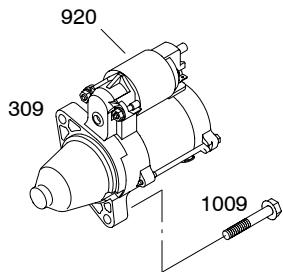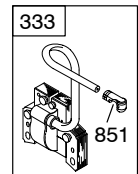
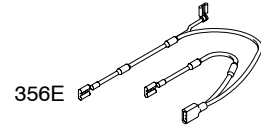


269

270



843

213

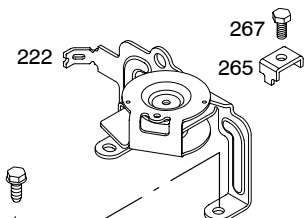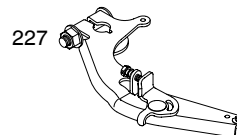

265

 188

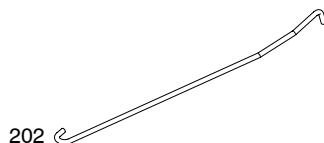






Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3315-8

Assemblies include all parts shown in frames.


11/07/2005

474100

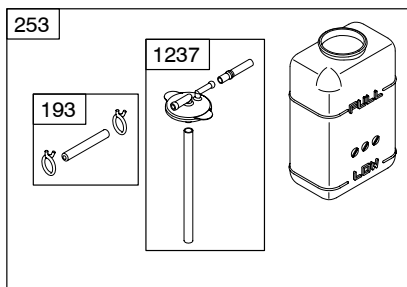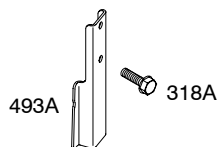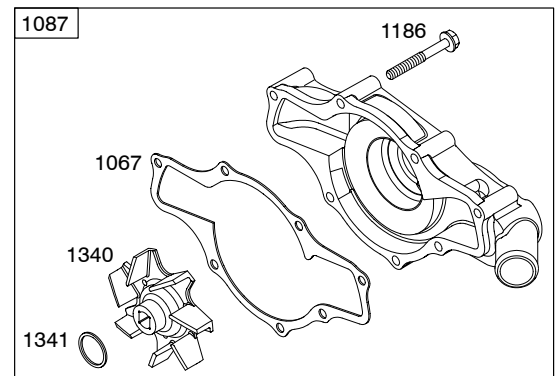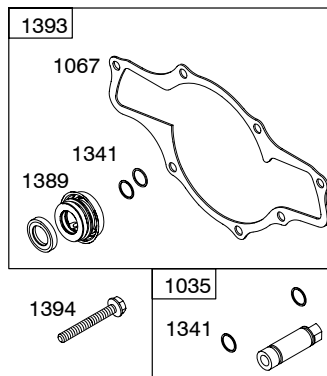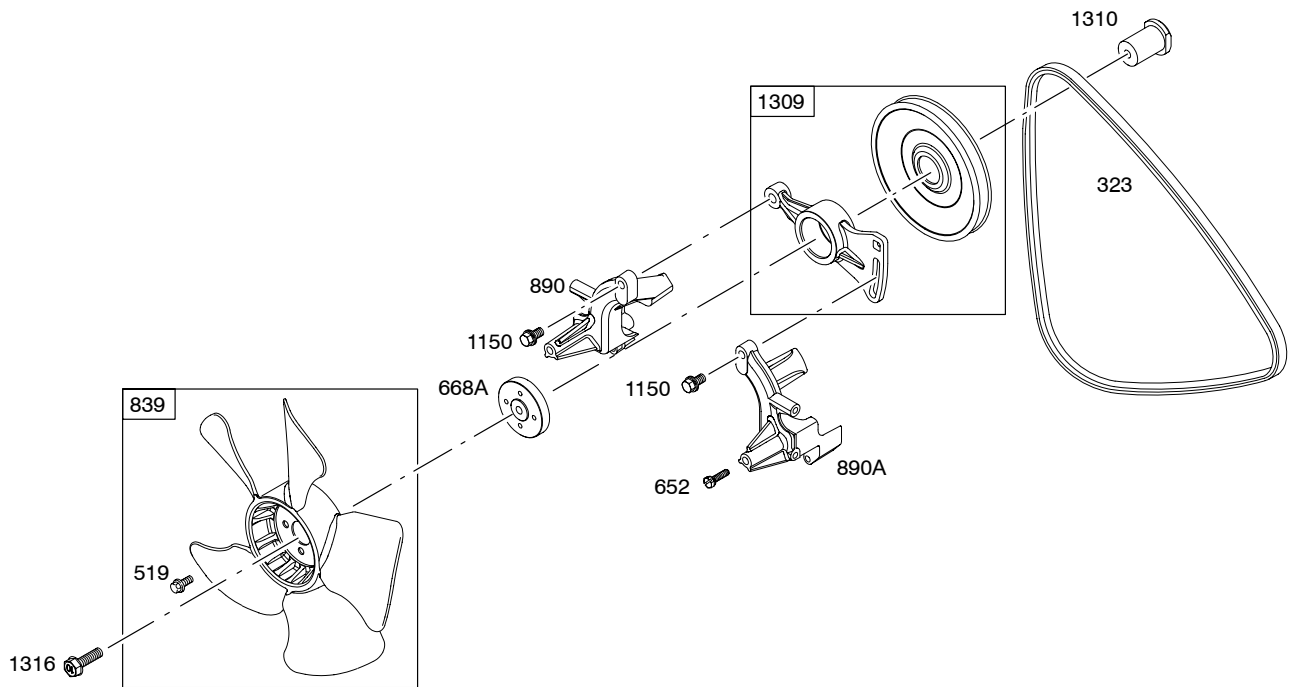

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3315-9 Assemblies include all parts shown in frames. **11/07/2005**

474100

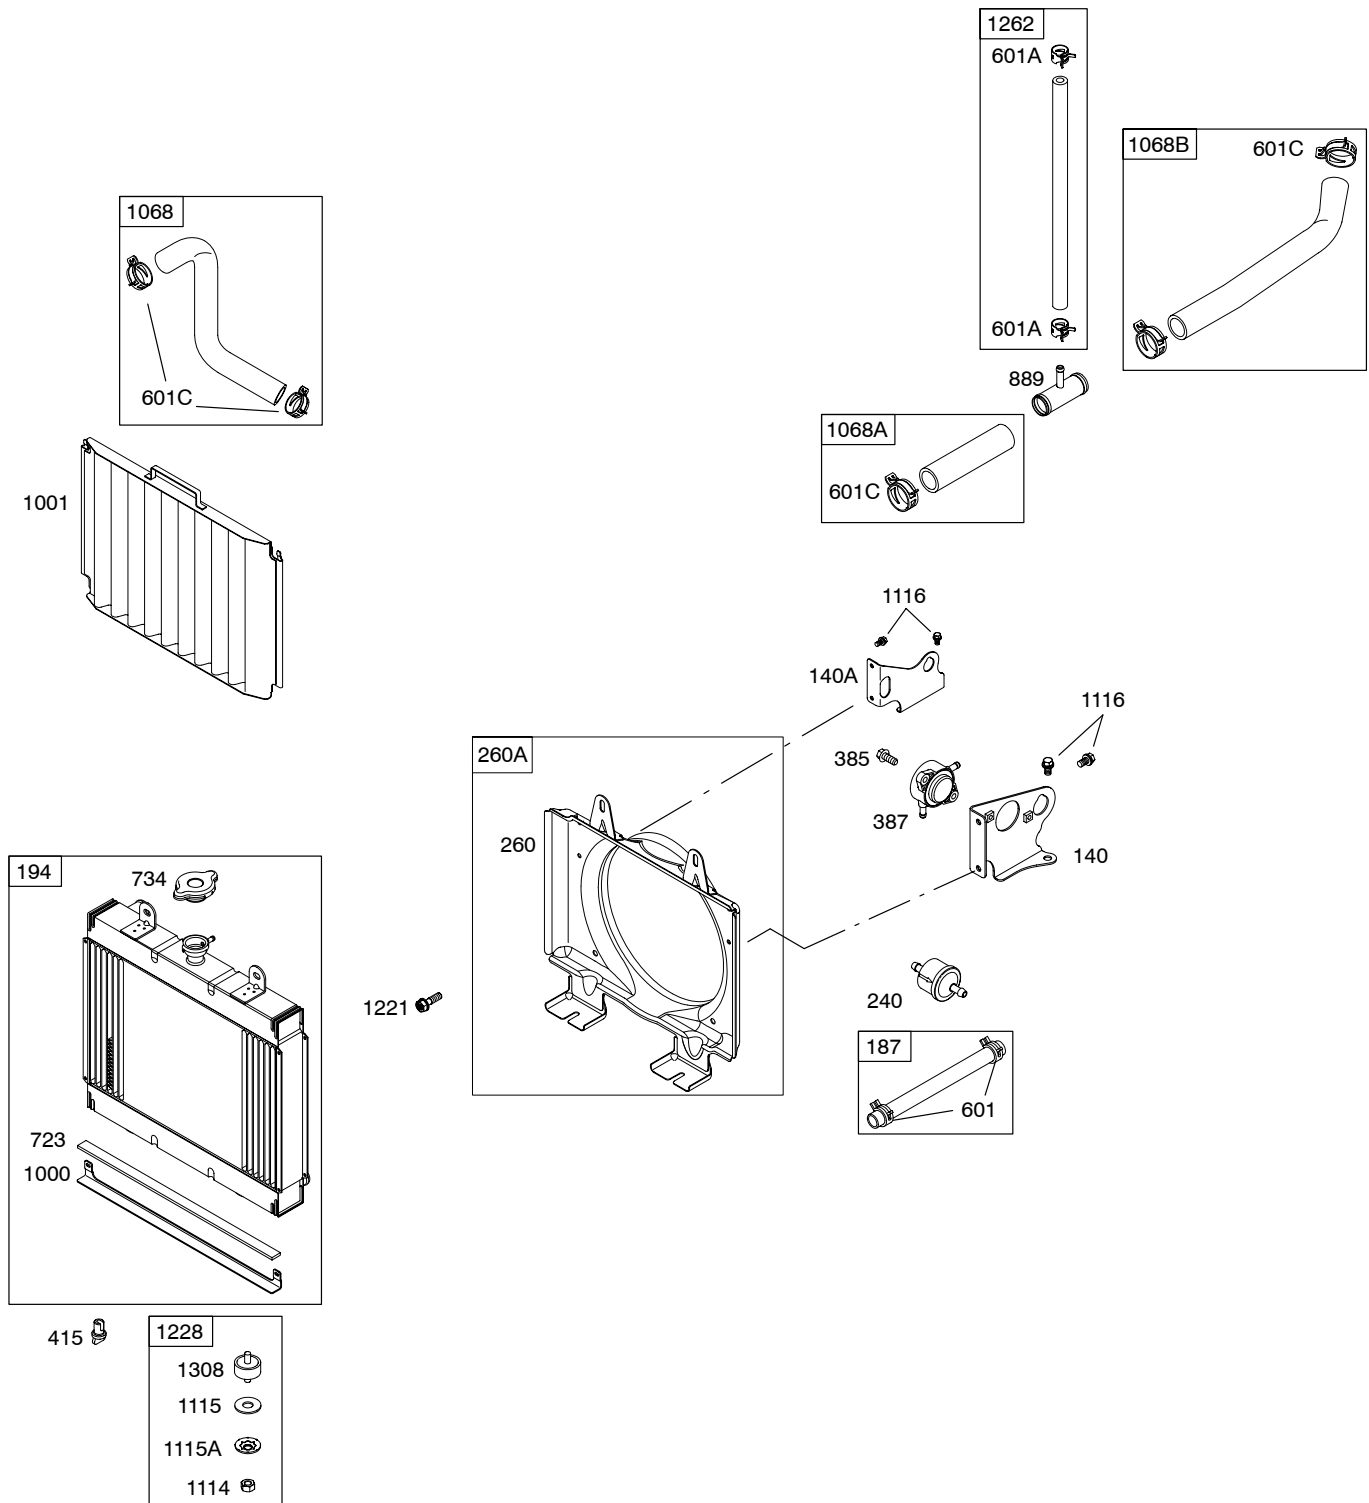

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3315-10 Assemblies include all parts shown in frames. 11/07/2005

474100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	841553	Cylinder Assembly	25	809561	Piston Assembly (Standard)	75	691056	Washer (Flywheel)
3	★809510	Seal-Oil (Magnet Side)			----- Note -----	75A	842548	Washer (Flywheel)
5	809276	Head-Cylinder (Cylinder 1)			809563 Piston Assembly (.020" Oversize)	78	807421	Screw (Flywheel Guard)
		----- Note -----	26	809557	Ring Set (Standard)	94	●809648	Kit-Idle Mixture
		809277 Head-Cylinder (Cylinder 2)			----- Note -----	95	690728	Screw (Throttle Valve)
7	★△807341	Gasket-Cylinder Head (Metal)			809559 Ring Set (.020" Oversize)	97	809630	Shaft-Throttle
8	809286	Breather Assembly	27	807351	Lock-Piston Pin	98	841842	Kit-Idle Speed
9	★841505	Gasket-Breather	28	807361	Pin-Piston (Standard)	102	●★809645	Gasket-Carburetor Body
10	692539	Screw (Breather Assembly)	29	809275	Rod-Connecting (Standard)	104	●690739	Pin-Float Hinge
11	807331	Tube-Breather	32	807363	Screw (Connecting Rod)	105	●809759	Valve-Float Needle
11A	842147	Tube-Breather	33	809376	Valve-Exhaust	108	809643	Valve-Choke
12	★807325	Gasket-Crankcase	34	809375	Valve-Intake	109	809802	Shaft-Choke
13	807371	Screw (Cylinder Head)	35	809374	Spring-Valve (Intake)	117A	809634	Jet-Main (Standard)
		----- Note -----	36	809374	Spring-Valve (Exhaust)	117B	842149	Jet-Main (Standard)
		807372 Screw (Cylinder Head)	37	807332	Guard-Flywheel	118A	809635	Jet-Main (High Altitude) (5000 Ft.)
15	807392	Plug-Oil Drain	40	807492	Retainer-Valve			----- Note -----
16	841280	Crankshaft	45	809785	Tappet-Valve			842151 Jet-Main (High Altitude) (6500 Ft.)
18	809539	Cover-Crankcase	46	842148	Camshaft			842153 Jet-Main (High Altitude) (9000 Ft.)
20	★841596	Seal-Oil (PTO Side)	49	807426	Sensor-Water Temperature			118B 842150 Jet-Main (High Altitude) (5000 Ft.)
20A	★809510	Seal-Oil (PTO Side)	50	807432	Manifold-Intake			----- Note -----
21	809500	Cap-Oil Fill	51	★△807434	Gasket-Intake			842152 Jet-Main (High Altitude) (6500 Ft.)
22	807362	Screw (Crankcase Cover/Sump) (50mm Long)	51A	★△690950	Gasket-Intake			842719 Jet-Main (High Altitude) (9000 Ft.)
		----- Note -----	54	806444	Screw (Intake Manifold) (2 1/2" Long)			121 809852 Kit-Carburetor Overhaul
		692539 Screw (Crankcase Cover/Sump) (12mm Long)			----- Note -----			
23	841294	Flywheel (Steel Ring Gear)			807437 Screw (Intake Manifold) (3 3/4" Long)			
24	222698	Key-Flywheel						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3315-11

Assemblies include all parts shown in frames.

11/07/2005

474100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
122	807433	Spacer-Carburetor	267	841552	Screw (Casing Clamp)	365A	807437	Screw (Carburetor)
125	842156	Carburetor	268	691025	Casing-Control Wire	383	19374	Wrench-Spark Plug
130	809642	Valve-Throttle	269	691026	Wire-Control	385	693169	Screw (Fuel Pump)
133	●809637	Float-Carburetor	270	691027	Nut (Control Wire Casing)	387	807429	Pump-Fuel
140	809401	Bracket-Radiator	271	691028	Lever-Control	413	842067	Nut (Starter Motor)
140A	809402	Bracket-Radiator	273	★690681	Seal-O Ring (Oil Pump)	415	809404	Plug (Radiator Plug)
146	691639	Key-Timing	276	★809436	Washer-Sealing	415A	690283	Plug (Intake Manifold)
147	841098	Jet-Pilot	276A	807491	Washer-Sealing	431	807319	Elbow-Intake
163	★807375	Gasket-Air Cleaner	276B	806476	Washer-Sealing	439	★692154	Seal-O Ring (Crankcase Cover/Sump)
187	691050	Line-Fuel	276C	809638	Washer-Sealing	445	841497	Filter-Air Cleaner Cartridge
188	692539	Screw (Control Bracket)	290	807436	Screw (Intake Elbow)	445A	821136	Filter-Air Cleaner Cartridge
192	807623	Adjuster-Rocker Arm	290A	807435	Screw (Intake Elbow)	468	★690690	Seal-O Ring (Oil Pump Screen)
193	809518	Hose-Reserve Tank	291	841491	Thermostat	474E	696579	Alternator (20 Amp)
194	809405	Radiator	300	807451	Muffler	479	807084	Screw (Oil Pump Screen)
202	807358	Link-Mechanical Governor	309	807383	Motor-Starter	493	807427	Bracket-Mounting (Water Temp Sensor)
205	692539	Screw (Bell Crank)	318	692539	Screw (Mounting Bracket)	493A	809400	Bracket-Mounting (Radiator/Shroud)
209	842315	Spring-Governor	318A	693169	Screw (Mounting Bracket)	501B	691573	Regulator (20 Amp)
211	842316	Spring-Governed Idle	323	809365	Belt-Vee	519	807382	Screw (Radiator Fan)
213	809660	Bracket-Choke Control	332	807356	Nut (Flywheel)	523	807450	Dipstick (Standard)
216	807342	Link-Choke	332A	842222	Nut (Flywheel)	526B	807385	Screw (Regulator)(20 Amp)
219	809426	Gear-Governor	333	841279	Armature-Magneto	536	809670	Cleaner-Air
220	841608	Washer (Governor Gear)	334	692066	Screw (Magneto Armature)	582	809878	Clamp-Air Cleaner
221	841026	Cup-Governor	337	692051	Plug-Spark	587	807386	Clamp-Cable
222	809273	Bracket-Control	338	★△691312	Gasket-Dipstick	587A	842066	Clamp-Cable
227	809274	Lever-Governor Control	344	692539	Screw (Cable Clamp)	596	691492	Screw (Oil Pump)
231	690728	Screw (Choke Valve)	356E	691999	Wire-Stop			
232	691538	Spring-Governor Link	358	809857	Gasket Set-Engine			
239	841281	Switch-Oil Pressure	363	19203	Puller-Flywheel			
240	691035	Filter-Fuel						
253	809411	Tank-Reserve						
260	809414	Shroud-Fan						
260A	841718	Shroud-Fan						
265	691024	Clamp-Casing						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

474100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
601	691038	Clamp-Hose (Fuel Pump) ----- Note ----- 807353 Clamp-Hose	741	809432	Gear-Timing	1009	690711	Screw (Starter Motor)
601A	807422	Clamp-Hose	789	807324	Harness-Wiring	1009A	842065	Screw (Starter Motor)
601C	807354	Clamp-Hose	798	691492	Screw (Rocker Arm)	1013	809505	Nipple-Oil Filter
613	809743	Screw (Muffler) ----- Note ----- 692062 Screw (Muffler) Used on Type No(s). 0100, 0112.	806	692062	Screw (Lifting Bracket)	1017	809421	Screen-Oil Pump
615	809533	Retainer-Governor Shaft	813	807376	Clamp	1022	★△807333	Gasket-Rocker Cover
616	809433	Crank-Governor	833	692062	Screw (Air Cleaner Mounting Strap/Stud)	1023	807359	Cover-Rocker
635	692076	Boot-Spark Plug	839	809321	Fan-Radiator	1023A	809521	Cover-Rocker ----- Note ----- 807359 Cover-Rocker Used on Type No(s). 0100, 0112.
650	692539	Screw (Oil Deflector)	843	809672	Sleeve-Lever	1024	841291	Pump-Oil
652	809529	Screw (Support Bracket)	851	493880	Terminal-Spark Plug	1026	807336	Rod-Push
653	809528	Screw (Crankshaft Pulley) ----- Note ----- 809527 Screw (Crankshaft Pulley)	855	809896	Adapter-Air Cleaner	1027	492932	Filter-Oil (2 1/4" Long)
668A	807443	Spacer	862	841886	Strap/Stud-Air Cleaner Mounting	1029	807323	Arm-Rocker
691	★809287	Seal-Governor Shaft	868	★△691963	Seal-Valve	1035	842079	Shaft-Pump
703	807116	Clip	869	807489	Seat-Valve (Intake)	1036		Label-Emissions (Available from an Authorized Briggs and Stratton Dealer)
718	690959	Pin-Locating	870	807489	Seat-Valve (Exhaust)	1054	807340	Tie-Cable
718A	809508	Pin-Locating	871	692057	Bushing-Valve Guide	1058	276061	Operator's Manual
723	841563	Seal-Foam	877D	698092	Wire/Connector- Alternator	1062	809397	Gasket-Outlet Housing
725	807453	Shield-Heat Used on Type No(s). 0100, 0112.	883	★△807326	Gasket-Exhaust (Manifold to Head)	1066	841284	Housing-Inlet
725A	841282	Shield-Heat	889	807339	Tee	1067	★807387	Gasket-Water Pump
728	692067	Screw (Heat Shield) Used on Type No(s). 0100, 0112. ----- Note ----- 692062 Screw (Heat Shield)	890	807444	Bracket-Support (Left Hand)	1068	841286	Hose/Clamp Assembly (Inlet)
734	809403	Cap-Radiator Used on Type No(s). 0100, 0112.	890A	807445	Bracket-Support (Right Hand)	1068A	809410	Hose/Clamp Assembly
			914	807357	Screw (Rocker Cover)	1068B	807425	Hose/Clamp Assembly
			918	809323	Hose-Vacuum	1075	841293	Pulley-Crankshaft
			920	825418	Solenoid-Starter	1077	807335	Bracket-Lifting
			947	809632	Solenoid-Fuel	1087	809282	Pump-Water
			955	809640	Plug-Carburetor	1091	△691515	Cap-Limiter
			965	809422	Cover-Oil Pump	1095	809856	Gasket Set-Valve
			975	842106	Bowl-Float	1100	690973	Pivot-Rocker Arm
			987	●809639	Seal-Throttle Shaft	1114	691105	Nut (Radiator Support)
			987A	809641	Seal-Throttle Shaft	1115	809408	Washer (Radiator Support)
			987C	809644	Seal-Throttle Shaft	1115A	809417	Washer (Radiator Support)
			1000	809406	Guard-Radiator	1116	841233	Screw (Radiator Bracket)
			1001	809399	Screen-Radiator			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**3315-13**

Assemblies include all parts shown in frames.

11/07/2005

474100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1119	691552	Screw (Alternator)	1228	809851	Mount-Radiator	1316	807382	Screw (Fan Shaft)
1127	809715	Screw (Float Bowl)	1237	841290	Cap/Hose-Reserve	1337	807382	Screw Air Cleaner Bracket
1150	692539	Screw (Adjusting Strap)	1262	807423	Line-Water	1338	809334	Tray-Oil Drip
1186	807389	Screw (Water Pump)	1308	809407	Isolator	1339	807435	Screw Oil Drip Tray
1188	807437	Screw (Inlet Housing)	1309	807442	Pulley-Fan	1340	809283	Impeller
1193	807421	Screw (Thermostat)	1310	809366	Shaft-Fan	1341	841042	Seal-O Ring (Impeller)
1221	692062	Screw (Fan Shroud)	1315	809905	Hose-Air Cleaner	1389	809423	Seal-Impeller
			1315A	807380	Hose-Air Cleaner (41mm Inside Diameter)	1393	842072	Kit-Pump Overhaul
					----- Note -----	1394	807390	Screw (Impeller)
					841292 Hose-Air Cleaner (51mm Inside Diameter)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.***3315-14**

Assemblies include all parts shown in frames.

11/07/2005