

60500 To 60597

61500 To 61597

Illustrated Parts List

MODEL SERIES

60500 To 60597

TYPE NUMBERS

0110 to 0139

941000 to 941203

61500 To 61597

TYPE NUMBERS

0131 to 0133

941500 to 941688

TO FIND

THE CORRECT NUMBER OF THE PART YOU NEED:

FOLLOW THE INSTRUCTIONS BELOW.

- A. Refer to Engine Model, Type and Serial Number that is stamped on the blower housing or name plate of engine. (Engine type numbers such as 941687 are listed complete. Engine type numbers such as 0137 01 are listed herein only as 0137. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification). Then use the Illustrated Parts List covering these Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Numbers are listed. **THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE"**
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type Number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.


PRINTED IN U.S.A.



www.mymowerparts.com



Assemblies include all parts shown in frames.

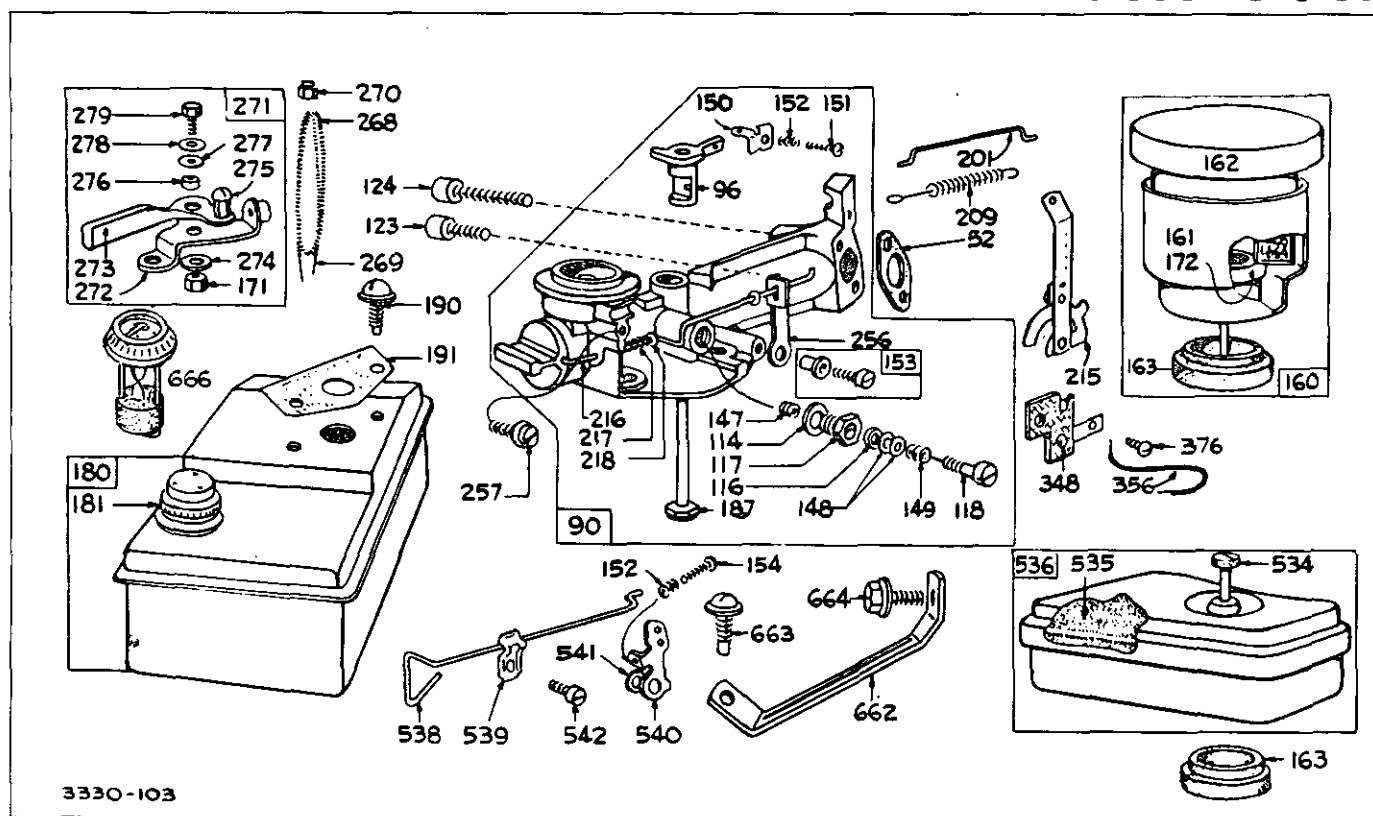

FUEL SYSTEM PARTS
 Assemblies include all parts shown in frames.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	295450	Cylinder Assembly Used on Model 60500 Series engines after Serial No. 5810030. Note: 293511 Cylinder Assy. Used on Model 60500 Series engines before Serial No. 5810060.		Note: 210209	Head—Cylinder Used on Model 60500 Series before Serial No. 5810060. Also used on Model 61500 Series be- fore Serial No. 5809290.	12	†27586	Gasket—Crankcase— .015" thick (Standard)
	296802	Cylinder Assembly Used on Model 61500 Series engines after Serial No. 5809260. Note: 295484 Cylinder Assy. Used on Model 61500 Series engines before Serial No. 5809290.	7	†27670	Gasket—Cylinder Head		†27617	Gasket—Crankcase— .005" thick
2	293708	Bushing—Cylinder Note: Requires special tools for installation.	8	292833	Breather—Valve Chamber	13	93111	Screw—Cylinder Head (1-15/16" long)
3	89660	Seal—Oil	9	†27549	Gasket—Valve Cover	14	93113	Screw—Cylinder Head (2-5/16" long)
5	210812	Head—Cylinder	10	93394	Screw—Breather Mtg. Sem	15	91084	Plug—Oil Drain Note: 93418 Plug—Oil Drain (Hexagon Socket Head) Used on Model 60500 Series type Nos. 0135, 941122, 941130, 941149, 941187, 941199; also used on Model 61500 Series type Nos. 0131, 941537, 941559, 941560, 941579, 941616, 941620, 941622.
			11	66638	Tube—Breather Note: 294032 Breather Tube and Spacer 66578 Grommet—Breather Cover Used on Model 60500 Series type Nos. 0135, 941097, 941149, 941187, 941199; also used on Model 61500 Series type Nos. 941544, 941579, 941622, 941680.			

† Included in Gasket Set—Part No. 297275.

† Included in Gasket Set—Part No. 297275.

60500 To 60597

61500 To 61597

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	260274	Crankshaft			941191, 941197, 941198, 941200; also used on Model 61500 Series type Nos. 0132, 941514, 941527, 941530, 941531, 941532, 941535, 941536, 941541, 941547, 941555, 941558, 941565, 941568, 941569, 941572, 941575, 941578, 941590, 941597, 941603, 941605, 941607, 941608, 941609, 941610, 941611, 941615, 941617, 941621, 941624, 941630, 941631, 941632, 941633, 941636, 941649, 941650, 941651, 941653, 941655, 941657, 941658, 941659, 941661, 941662, 941667, 941671, 941672, 941674, 941678, 941681, 941683, 941686, 941687.			260218 Crankshaft Used on Model 60500 Series type No. 941080.
	Note:	26976 Crankshaft Used on Model 60500 Series type Nos. 941024, 941037, 941079, 941091; also used on Model 61500 Series type Nos. 941640, 941656.						260232 Crankshaft Used on Model 60500 Series type Nos. 941027, 941098; also used on Model 61500 Series type Nos. 941604, 941643.
		26978 Crankshaft Used on Model 60500 Series type No. 941023; also used on Model 61500 Series type No. 941639.						260246 Crankshaft Used on Model 60500 Series type No. 941077.
		260002 Crankshaft Used on Model 60500 Series type Nos. 941026; also used on Model 61500 Series type No. 941642.						260251 Crankshaft Used on Model 60500 Series type No. 941049; also used on Model 61500 Series type Nos. 941546, 941594, 941660, 941663.
		260003 Crankshaft Used on Model 60500 Series type Nos. 0133, 0137, 941018, 941112, 941140, 941158, 941181, 941193, 941537, 941559; also used on Model 61500 Series type Nos. 941560, 941570, 941601, 941602, 941652, 941654, 941669, 941670.						260273 Crankshaft Used on Model 60500 Series type Nos. 941010, 941012, 941025, 941039, 941048, 941095, 941194, 941196; also used on Model 61500 Series type Nos. 941510, 941512, 941567, 941573, 941626, 941629, 941641.
		260005 Crankshaft Used on Model 60500 Series type Nos. 0138, 941016, 941031, 941038, 941040, 941045, 941046, 941050, 941051, 941057, 941058, 941059, 941060, 941061, 941068, 941081, 941082, 941083, 941084, 941086, 941089, 941090, 941096, 941099, 941103, 941108, 941111, 941113, 941116, 941117, 941118, 941119, 941121, 941123, 941124, 941126, 941127, 941131, 941132, 941134, 941135, 941141, 941142, 941143, 941144, 941146, 941149, 941156, 941161, 941162, 941163, 941169, 941170, 941172, 941176, 941184, 941186, 941189,						260378 Crankshaft Used on Model 61500 Series type No. 941524.
					260006 Crankshaft Used on Model 60500 Series type Nos. 941066, 941160, 941164, 941171, 941179; also used on Model 61500 Series type Nos. 941540, 941545, 941557, 941564, 941675, 941676.			260415 Crankshaft Used on Model 60500 Series type Nos. 941070, 941071.
					260085 Crankshaft Used on Model 60500 Series type Nos. 941043, 941130.			260432 Crankshaft Used on Model 60500 Series type Nos. 941092, 941093.
					260130 Crankshaft Used on Model 60500 Series type No. 941042.			260666 Crankshaft Used on Model 60500 Series type Nos. 0134, 941148, 941202; also used on Model 61500 Series type No. 941684.
					260157 Crankshaft Used on Model 60500 Series type Nos. 941034, 941035.			260669 Crankshaft Used on Model 60500 Series type Nos. 941159, 941180.
					260215 Crankshaft Used on Model 60500 Series type Nos. 941062, 941063.			
					260217 Crankshaft Used on Model 60500 Series type Nos. 0136, 941056; also used on Model 61500 Series type No. 941553.			

60500 To 60597**61500 To 61597**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
18	293512	Sump—Oil			941622, 941628, 941652, 941655, 941680.			Note: 293402 Piston Assy. — .020" O.S. (for 2-5/16" Bore) Used on Model 60500 Series before Serial No. 5810060.
	Note: 293597	Sump—Oil Used on Model 60500 Series type Nos. 0136, 941056; also used on Model 61500 Series type No. 941553.	24	61760	Key—Flywheel			295457 Piston Assy. — .020" O.S. (for 2-3/8" Bore) Used on Model 61500 Series after Serial No. 5809260.
	295041	Sump—Oil Used on Model 60500 Series type Nos. 941098, 941138, 941139, 941153, 941154; also used on Model 61500 Series type No. 941524.	25	295587	Piston Assy.—Standard (for 2-3/8" Bore) Used on Model 60500 Series after Serial No. 5810030.			295481 Piston Assy. — .020" O.S. (for 2-5/16" Bore) Used on Model 61500 Series after Serial No. 5809260.
19	293709	Bushing—Oil Sump			Note: 293400 Piston Assy.—Std. (for 2-5/16" Bore) Used on Model 60500 Series before Serial No. 5810060.			295455 Piston Assy.—Std. (for 2-3/8" Bore) Used on Model 61500 Series after Serial No. 5809260.
	Note:	Requires special tools for installation.			295479 Piston Assy.—Std. (for 2-5/16" Bore) Used on Model 61500 Series before Serial No. 5809290.			295590 Piston Assy.—.030" O.S. (for 2-3/8" Bore) Used on Model 60500 Series after Serial No. 5810030.
20	291841	Seal—Oil			295588 Piston Assembly— .010" O.S. (for 2-3/8" Bore) Used on Model 60500 Series after Serial No. 5810030.			Note: 293403 Piston Assy.—.030" O.S. (for 2-5/16" Bore) Used on Model 60500 Series before Serial No. 5810060.
21	66768	Plug—Oil Filler			Note: 293401 Piston Assy.—.010" O.S. (for 2-5/16" Bore) Used on Model 60500 Series before Serial No. 5810060.			295458 Piston Assy.—.030" O.S. (for 2-3/8" Bore) Used on Model 61500 Series after Serial No. 5809260.
22	93032	Screw—Sump Mtg. Sem			295456 Piston Assy.—.010" O.S. (for 2-3/8" Bore) Used on Model 61500 Series after Serial No. 5809260.			295482 Piston Assy.—.030" O.S. (for 2-5/16" Bore) Used on Model 61500 Series before Serial No. 5809290.
23	293205	Flywheel—Magneto (Used before Serial No. 6212310)			295480 Piston Assy.—.010" O.S. (for 2-5/16" Bore) Used on Model 61500 Series before Serial No. 5809290.			MODEL 60500 SERIES RING SETS:
	Note: 295936	Flywheel—Magneto Used before Serial No. 6212310 on Model 60500 Series type Nos. 941018, 941039, 941066, 941125, 941146, 941156, 941158, 941188; also used on Model 61500 Series type Nos. 941525, 941537, 941559, 941560, 941622, 941628, 941652, 941655, 941680.			295589 Piston Assy.—.020" O.S. (for 2-3/8" Bore) Used on Model 60500 Series after Serial No. 5810030.	26	294232	Ring Set—Std. Piston Used on Model 60500 Series after Serial No. 5810030. Consists of: 210471 Ring, Piston, Compression, Top 210472 Ring, Piston, Compression, Center
23A	297949	Flywheel—Magneto (Used on and after Serial No. 6212310)						
	Note: 296884	Flywheel—Magneto Used on and after Serial No. 6212310 on Model 60500 Series type Nos. 0133, 0136, 0137, 941018, 941039, 941066, 941125, 941146, 941156, 941158, 941188, 941193; also used on Model 61500 Series type Nos. 941525, 941537, 941559, 941560,						

60500 To 60597
61500 To 61597

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		210473 Ring, Piston, Oil			Note: 293508 Ring Set—.020" O.S. Piston Used on Model 60500 Series before Serial No. 5810060. Consists of: 210364 Ring, Piston, Comp., Top, .020" O.S. 210365 Ring, Piston, Comp., Center, .020" O.S. 210366 Ring, Piston, Oil, .020" O.S.			295661 Ring Set—(with expander), Std.
	Note:	293506 Ring Set—Standard Piston Used on Model 60500 Series before Serial No. 5810060. Consists of: 210222 Ring, Piston, Comp., Top, Std. 210223 Ring, Piston, Comp., Center, Std. 210224 Ring, Piston, Oil, Standard					Note:	295649 Ring Set—Standard Piston Used on Model 61500 Series before Serial No. 5809290. Consists of: 210788 Ring, Piston Comp., Top, Std. 210789 Ring, Piston, Comp., Center, Std. 295653 Ring, Oil (with expander), Std.
	294224	Ring Set—.010" O.S. Piston Used on Model 60500 Series after Serial No. 5810030. Consists of: 210490 Ring, Piston, Compression, Top 210489 Ring, Piston, Compression, Center 210491 Ring, Piston, Oil		294226	Ring Set—.030" O.S. Piston Used on Model 60500 Series after Serial No. 5810030. Consists of: 210496 Ring, Piston, Comp., Top, .030" O.S. 210495 Ring, Piston, Comp., Center, .030" O.S. 210497 Ring, Piston, Oil, .030" O.S.		295658	Ring Set—.010" O.S. Piston Used on Model 61500 Series after Serial No. 5809260. Consists of: 210799 Ring, Piston, Comp., Top, .010" O.S. 210798 Ring, Piston, Comp., Center, .010" O.S. 295662 Ring, Oil (with expander), .010" O.S.
	Note:	293507 Ring Set—.010" O.S. Piston Used on Model 60500 Series before Serial No. 5810060. Consists of: 210361 Ring, Piston, Comp., Top, .010" O.S. 210362 Ring, Piston, Comp., Center, .010" O.S. 210363 Ring, Piston, Oil, .010" O.S.		Note:	293509 Ring Set—.030" O.S. Piston Used on Model 60500 Series before Serial No. 5810060. Consists of: 210367 Ring, Piston, Comp., Top, .030" O.S. 210368 Ring, Piston, Comp., Center, .030" O.S. 210369 Ring, Piston, Oil, .030" O.S.		Note:	295659 Ring Set—.010" O.S. Piston Used on Model 61500 Series before Serial No. 5809290. Consists of: 210790 Ring, Piston, Comp., Top, .010" O.S. 210791 Ring, Piston, Comp., Center, .010" O.S. 295654 Ring, Oil (with expander), .010" O.S.
	294225	Ring Set—.020" O.S. Piston Used on Model 60500 Series after Serial No. 5810030. Consists of: 210493 Ring, Piston, Comp., Top, .020" O.S. 210492 Ring, Piston, Comp., Center, .020" O.S. 210494 Ring, Piston, Oil, .020" O.S.					295659	Ring Set—.020" O.S. Piston Used on Model 61500 Series after Serial No. 5809260. Consists of: 210801 Ring, Piston, Comp., Top, .020" O.S. 210800 Ring, Piston, Comp., Center, .020" O.S.
					MODEL 61500 SERIES RING SETS:			
				295657	Ring Set—Std. Piston Used on Model 61500 Series after Serial No. 5809260. Consists of: 210796 Ring, Piston, Comp., Top, Std. 210797 Ring, Piston, Comp., Center, Std.			

60500 To 60597

61500 To 61597

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		295663 Ring, Oil (with expander), .020" O.S.		Note:	23386 Valve—Intake Used on Model 60500 Series engines before Serial No. 5810060. Also used on Model 61500 Series engines before Serial No. 5809290.	75	220865	Washer—Spring (Used to lock starter clutch)
	Note:	295651 Ring Set— .020" O.S. Used on Model 61500 Series before Serial No. 5809290. Consists of: 210792 Ring, Piston, Comp., Top, .020" O.S. 210793 Ring, Piston, Comp., Center, .020" O.S. 295655 Ring, Oil (with expander), .020" O.S.	35	260552	Spring—Intake Valve	76	.66738	Washer—Ratchet Sealing (Used only with 7 point shank ratchet)
295660		Ring Set—.030" O.S. Piston Used on Model 61500 Series after Serial No. 5809260. Consists of: 210803 Ring, Piston, Comp., Top, .030" O.S. 210802 Ring, Piston, Comp., Center, .030" O.S. 295664 Ring, Oil (with expander), .030" O.S.	36	26478	Spring—Exhaust Valve	78	93014	Screw—Pulley Screen Mounting Sem
	Note:	295652 Ring Set— .030" O.S. Used on Model 61500 Series before Serial No. 5809290. Consists of: 210794 Ring, Piston, Comp., Top, .030" O.S. 210795 Ring, Piston, Comp., Center .030" O.S. 295656 Ring, Oil (with expander), .030" O.S.	40	93312	Retainer—Valve Spring (Used with valves with groove in stem) Note:	90	295334	Carburetor Assembly (Choke-A-Matic) Note:
				23184 Retainer—Valve Spring 23187 Pin—Valve Spring Retainer Used with valves with hole in stem.			295276 Carburetor Assy. (Manual Choke) Used on Model 60500 Series type Nos. 0115, 0131, 0134, 0136, 941010, 941011, 941012, 941015, 941016, 941017, 941022, 941023, 941024, 941025, 941026, 941027, 941028, 941029, 941033, 941034, 941036, 941037, 941038, 941039, 941040, 941042, 941043, 941048, 941049, 941050, 941053, 941054, 941058, 941061, 941062, 941064, 941070, 941073, 941076, 941079, 941080, 941082, 941083, 941091, 941094, 941095, 941096, 941097, 941105, 941108, 941115, 941116, 941118, 941125, 941127, 941130, 941141, 941144, 941148, 941187, 941189, 941200, 941202; also used on Model 61500 Series type Nos. 0132, 941510, 941511, 941512, 941518, 941519, 941525, 941527, 941528, 941529, 941532, 941533, 941536, 941543, 941544, 941546, 941547, 941551, 941563, 941567, 941569, 941570, 941579, 941586, 941594, 941599, 941628, 941633, 941639, 941640, 941641, 941642, 941643, 941660, 941668, 941671, 941683, 941686, 941687. 295471 Carburetor Assy. (Manual Choke)	
			45	230173	Tappet—Valve			
			46	210453	Gear—Cam			
			47	294652	Oil Slinger Gear and Bracket			
			52	†27355	Gasket—Intake Elbow Mounting			
			56	294088	Pulley—Rewind Starter			
			57	294303	Spring—Rewind Starter			
			58	66384	Rope—Rewind Starter—47-1/8" long Note:			
					If longer rope is needed, order No. 66514 and cut to required length.			
			59	230228	Pin—Starter Rope			
			61	66528	Bumper—Starter Pulley			
			66	296468	Clutch Assy.—Rewind and Wind-up Starter			
			67	210400	Housing—Starter Clutch			
			68	63770	Ball—Clutch			
			70	296597	Ratchet—Rewind and Wind-up Starter			
			71	221301	Washer—Clutch Retainer (Used with square shank ratchet) Note:			
					220575 Washer—Clutch Retainer (Used with 7 point shank ratchet)			
27	26026	Lock—Piston Pin	72	26032	Spring—Clutch Retainer			
28	291925	Pin Assy.—Piston—Std.	73	220648	Screen—Starter Pulley			
	291926	Pin Assy.—Piston—.005" O.S.	74	93042	Screw—Rotating Screen Mounting Sem			
29	293505	Rod Assy.—Connecting						
31	220460	Lock—Conn. Rod Screw						
32	92296	Screw—Connecting Rod						
33	296676	Valve—Exhaust						
34	296677	Valve—Intake						

† Included in Gasket Set—Part No. 297275.

60500 To 60597**61500 To 61597**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		Used on Model 60500 Series type Nos. 0135, 0137, 941018, 941041, 941056, 941060, 941066, 941069, 941072, 941076, 941078, 941102, 941104, 941120, 941122, 941123, 941140, 941145, 941146, 941149, 941150, 941169, 941190, 941197, 941199, 941201; also used on Model 61500 Series type Nos. 0131, 941514, 941516, 941534, 941541, 941543, 941549, 941553, 941558, 941562, 941568, 941572, 941584, 941598, 941600, 941616, 941620, 941622, 941629, 941645, 941651, 941656, 941657, 941666, 941680, 941682. 295534 Carburetor Assy. (Choke-A-Matic) Used on Model 60500 Series type Nos. 941077, 941100, 941101, 941132, 941133, 941134, 941160, 941179, 941185; also used on Model 61500 Series type Nos. 941524, 941554, 941557, 941564, 941580, 941581, 941601, 941602, 941606, 941609, 941610, 941632, 941635, 941636, 941669, 941670, 941674, 941675, 941676. 295604 Carburetor Assy. (Manual Choke) Used on Model 60500 Series type No. 941181. 295894 Carburetor Assy. (Manual Choke) Used on Model 60500 Series type No. 941131; also used on Model 61500 Series type Nos. 941573, 941582, 941630, 941631.	117 23431 Nut—Needle Valve 118 23433 Valve—Needle 120 92290 Washer—Lock—No. 10 x 1/16" x 3/64" 123 93353 Screw—Carburetor Mtg. 124 93360 Screw—Carburetor Mtg. 147 23432 Seat—Needle Valve 148 22235 Washer—Needle Valve 149 26336 Spring—Needle Valve 150 220105 Connector—Governor Link 151 92634 Screw—Machine, Rd. Hd. —5-40 x 5/8" 152 260575 Spring—Throttle Adjustment 153 298031 Screw—Carburetor Cam and Lever 154 93349 Screw—Machine, Rd. Hd. —5-40 x 5/8" 160 294870 Cleaner Assembly—Air (with mounting stud) Note: 294871 Cleaner Assy. — Air (with mounting stud) Used on Model 60500 Series type No. 941097; also used on Model 61500 Series type Nos. 941544, 941579, 941622. 161 293991 Bowl—Air Cleaner 162 294861 Cover and Filter—Air Cleaner (with mounting stud) Note: 294862 Cover and Filter— Air Cleaner (with mounting stud) Used on Model 60500 Series type No. 941097; also used on Model 61500 Series type Nos. 941544, 941579, 941622. 297778 Cover— Carburetor Intake (with mounting stud) Used on Model 60500 Series type Nos. 0137, 941018. 163 † 27660 Gasket—Air Cleaner Mtg. Note: 27666 Gasket—Air Cleaner Mtg. (Collar Type with Side Outlet) Used on Model 60500 Series type Nos. 941097,	941199; also used on Model 61500 Series type Nos. 941544, 941579, 941622. 171 92129 Nut—Hex. —1/4-28 172 27795 Gasket—Air Cleaner 180 293630 Tank Assembly—Fuel Note: 295119 Tank Assy.—Fuel Used on Model 60500 Series type Nos. 941077, 941100, 941101, 941131, 941132, 941133, 941134, 941160, 941179, 941181, 941185; also used on Model 61500 Series type Nos. 941524, 941554, 941557, 941564, 941573, 941580, 941581, 941582, 941601, 941602, 941606, 941609, 941610, 941630, 941631, 941635, 941636, 941669, 941670, 941671, 941674, 941675, 941676. 181 298425 Cap—Fuel Tank 187 296476 Pipe—Fuel (2-19/32" long) Used to Replace Plastic Pipes. Use: 293700 Pipe—Fuel To replace 2-17/32" long brass pipes. Note: 296842 Pipe—Fuel Used to replace 2-11/32" long plastic pipes. Use: 295121 Pipe—Fuel To replace 2-9/32" long brass pipes. 190 93395 Screw—Fuel Tank Mtg. 191 † 27404 Gasket—Fuel Tank Mtg. 200 294617 Blade—Governor (Used before Serial No. 6212310) 200A 297309 Blade—Governor (Used on and after Serial No. 6212310) 201 260024 Link—Governor 209 260202 Spring—Governor (Choke-A-Matic) Note: 260025 Spring—Governor (Manual Choke)				
96	210721	Throttle—Carburetor						
114	65787	Gasket—Needle Valve Nut						
116	65978	Packing—Needle Valve						

† Included in Gasket Set—Part No. 297275.

60500 To 60597

61500 To 61597

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		Used on Model 60500 Series type Nos. 0115, 0131, 0134, 0135, 0136, 0137, 941010, 941011, 941012, 941015, 941016, 941017, 941018, 941022, 941023, 941024, 941025, 941026, 941027, 941028, 941029, 941033, 941034, 941036, 941037, 941038, 941039, 941040, 941041, 941042, 941043, 941048, 941049, 941050, 941053, 941054, 941056, 941058, 941060, 941061, 941062, 941064, 941066, 941069, 941070, 941072, 941073, 941076, 941078, 941079, 941080, 941082, 941083, 941091, 941094, 941095, 941096, 941097, 941102, 941104, 941105, 941108, 941115, 941116, 941118, 941120, 941122, 941123, 941125, 941127, 941130, 941131, 941140, 941141, 941144, 941145, 941146, 941148, 941149, 941150, 941169, 941181, 941187, 941189, 941190, 941197, 941199, 941200, 941201; also used on Model 61500 Series type Nos. 0131, 0132, 941510, 941511, 941512, 941514, 941516, 941518, 941519, 941525, 941527, 941528, 941529, 941532, 941533, 941534, 941536, 941541, 941543, 941544, 941546, 941547, 941549, 941551, 941553, 941558, 941562, 941563, 941567, 941568, 941569, 941570, 941572, 941573, 941579, 941582, 941584, 941586, 941594, 941598, 941599, 941600, 941616, 941620, 941622, 941628, 941629, 941630, 941631, 941633, 941639, 941640, 941641, 941642, 941643,			941645, 941651, 941656, 941657, 941660, 941666, 941671, 941680, 941682, 941683, 941686, 941687. 260592 Spring—Governor (Choke-A-Matic) (for 3400 to 3600 rpm top speed set — no load) Used on Model 60500 Series type Nos. 0132, 0133, 0138, 941151, 941153, 941154, 941158, 941161, 941162, 941164, 941171, 941172, 941177, 941184, 941192, 941193, 941194, 941195; also used on Model 61500 Series type Nos. 941650, 941652, 941681, 941684. 260597 Spring—Governor (Choke-A-Matic) (for 3200 to 3400 rpm top speed set — no load) Used on Model 60500 Series type No. 941163. 260599 Spring—Governor (Choke-A-Matic) (for 4000 to 4200 rpm top speed set — no load) Used on Model 60500 Series type Nos. 0126, 0129, 941030, 941136, 941137, 941138, 941139, 941155, 941156, 941157, 941159, 941170, 941178, 941180, 941186, 941191; also used on Model 61500 Series type Nos. 941565, 941592, 941621, 941648, 941655, 941658, 941663, 941678, 941679. 215 293424 Control—Governor Note: 220107 Cam—Speed Adjuster 220949 Lever—Speed Adjuster Used on Model 60500 Series on type Nos. 0137, 941018, 941041, 941056, 941060, 941066, 941069, 941072, 941076, 941078,			941102, 941104, 941120, 941122, 941123; also used on Model 61500 Series type Nos. 941514, 941516, 941534, 941541, 941543, 941549, 941553, 941558, 941562, 941568, 941572, 941584, 941598, 941600, 941616, 941620, 941622, 941629, 941645, 941651, 941656, 941657. 216 260188 Link—Choke 217 260189 Spring—Choke Link 218 220968 Washer—Choke Link (3) 256 220952 Lever—Speed Adjuster 257 93263 Screw—Sem 264 90355 Nut—Hex. —No. 10-32 265 221407 Clamp—Control Casing 267 93351 Screw—Clamp Mounting 268 66986 Casing—Control Wire— 48" long Note: If longer casing is needed, specify length in inches; if shorter casing is needed, order No. 66986 and cut to re- quired length. 269 26099 Wire—Control, 54" long Note: If longer wire is needed, specify length in inches; if shorter wire is needed, order No. 26099 and cut to required length. 270 63426 Locknut—Control Wire Casing 271 290568 Lever Assembly—Control 272 290584 Base—Control Lever 273 290642 Lever—Control 274 91237 Washer—Lock— 1/4 x 3/32 x 5/64" 275 92287 Screw—Machine, Rd. Hd. —10-32 x 1/4" 276 22834 Washer—Spacer 277 22368 Washer—Control Lever 278 22725 Washer—Control Lever 279 92306 Screw—Cap, Hex. Hd. — 1/4-28 x 5/8" 297 91811 Locknut—Exhaust Elbow 298 220859 Locknut—Muffler 299 294441 Muffler—Exhaust (Lo-Tone)

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300	89966	Muffler—Exhaust			941074, 941075, 941077, 941081, 941087, 941090, 941093, 941099, 941100, 941103, 941122, 941125, 941130, 941132, 941151, 941153, 941164, 941178, 941180, 941184, 941195, 941198; also used on Model 61500 Series type Nos. 941515, 941516, 941520, 941521, 941522, 941526, 941531, 941539, 941548, 941550, 941552, 941555, 941556, 941559, 941565, 941574, 941575, 941576, 941577, 941578, 941580, 941617, 941632, 941634, 941646, 941673, 941678.			296284 Housing—Blower (For Rewind Starter) Used on Model 61500 Series type No. 941543.
	Note:	29807 Muffler—Exhaust Used on Model 60500 Series type Nos. 0137, 941018.						296301 Housing—Blower (For Rewind Starter) Used on Model 61500 Series type No. 941598.
		292054 Muffler—Exhaust Used on Model 60500 Series type No. 941019; also used on Model 61500 Series type Nos. 941521, 941537, 941583, 941588.						296325 Housing—Blower (For Wind-up Starter) Used on Model 60506, 61506 Series engines.
		295905 Muffler—Exhaust Used on Model 61500 Series type Nos. 941537, 941571, 941574.						296894 Housing—Blower (For Rewind Starter) Used on Model 60500 Series type Nos. 941151, 941172, 941189, 941201; also used on Model 61500 Series type No. 941660.
303	91810	Elbow—Exhaust, 45°, Street			295060 Housing—Blower (For Rewind Starter) Used on Model 60500 Series type Nos. 941034, 941035, 941070, 941071.	305	93158	Screw—Blower Housing Mounting Sem
	Note:	91812 Elbow—Exhaust, 90° Used on Model 61500 Series type Nos. 0131, 941559, 941560, 941620.					Note:	93294 Screw—Blower Housing Mounting Sem Used on type No. 941515.
		92124 Nipple			295191 Blower Housing and Brackets Assembly (For Electric Starter) Used on Model Series 60503, 61503.	306	220478	Shield—Cylinder
		92135 Elbow—90° Used on Model 61500 Series type No. 941537.			295729 Housing—Blower (For Rewind Starter) Used on Model 60500 Series type No. 941524.	307	93042	Screw—Cylinder Shield Mounting Sem
304	294260	Housing—Blower (For Rewind Starter)			295816 Housing—Blower (For Rewind Starter) Used on Model 60500 Series type Nos. 0133, 941163, 941174, 941175, 941193; also used on Model 61500 Series type Nos. 941540, 941557, 941564, 941583, 941588, 941596, 941599, 941600, 941614, 941627, 941653, 941664, 941671.	308	220581	Cover—Cylinder Head
	Note:	294263 Housing—Blower (For Rope Starter) Used on Model 60501, 61501 Series.			296101 Housing—Blower (For Rewind Starter) Used on Model 60500 Series type Nos. 941022, 941156; also used on Model 61500 Series type Nos. 941628, 941655.	309	295188	Motor—Electric Starter
		294282 Housing—Blower (For Rewind Starter) Used on Model 60500 Series type Nos. 941041, 941043, 941047, 941049, 941058, 941064, 941082, 941088, 941089; also used on Model 61500 Series type Nos. 941514, 941546, 941566, 941568, 941572, 941594, 941607.				310	93239	Bolt—Case
		294338 Housing—Blower (For Rewind Starter) Used on Model 60500 Series type Nos. 941019, 941021, 941030, 941031, 941032, 941046, 941051, 941055, 941057, 941059, 941060, 941063, 941065,				311	295697	Brush—Starter Motor
						312	260404	Spring—Brush
						321	210711	Pulley—Electric Starter
							Note:	When ordering this pulley order Vee-Belt part No. 67238 also.
						323	67238	Belt—Vee
							Note:	67038 Belt—Vee Used on engines before Serial No. 5903020.
						324	220648	Screen—Electric Starter Pulley
						325	293959	Starter Pulley with Screen
						328	221039	Guard—Belt
						329	93014	Screw—Belt Guard Mounting Sem
						330	29878	Rope—Starter
						331	62577	Washer—Flywheel
						332	91708	Nut—Flywheel
							Note:	92284 Nut—Flywheel Used on type No. 941019.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
333	291617	Armature—Magnet (Used before Serial No. 6212310)	374	92813	Washer—Lock—Shakeproof	515	260537	Spring—Ratchet Pawl
333A	297307	Armature—Magnet (Used on and after Serial No. 6212310)	375	294628	Breaker Points and Condenser Set	516	260374	Spring—Connector (Condenser Post)
334	93381	Screw—Armature Mtg. Sem		Note:	293999 Wire—Condenser Ground	534	93322	Screw—Air Cleaner
335	93381	Screw—Armature Mtg. Sem			92791 Washer—Lock—Shakeproof (2)		Note:	93330 Screw—Air Cleaner Used on Model 60500 Series type Nos. 0135, 941097, 941149, 941187, 941199; also used on Model 61500 Series type Nos. 941544, 941579, 941622, 941680.
336	292149	Cable—Ignition Used on engines before Serial No. 6212310. Cables used on and after this serial number are molded into the coil.			90576 Nut—Hex. —8-32	535	27987	Element—Air Cleaner
337	29693	Plug—Spark (with gasket)			90072 Screw—Machine, Rd. Hd. —8-32 x 5/8"	536	296766	Cleaner Assembly—Air
	Note:	293918 Plug—Spark (with gasket) Used on type No. 941197.	376	93167	Screw—Ground Wire	538	260560	Rod—Speed Control
338	29806	Gasket—Spark Plug	377	93065	Key—Woodruff No. 505		Note:	260683 Rod—Speed Control Used on Model 60500 Series type No. 941197. Uses: 260684 Link (between rod and speed adjuster lever)
340	26018	Spring—Breaker Arm	455	296455	Cup, Hub and Spring Assembly (with pinned Spring)	539	221372	Clip—Speed Control
341	93381	Screw—Contact Finger Post Mounting Sem		Note:	296327 Cup and Spring Assembly Used on earlier model engines.		Note:	66432 Washer 26157 Spring Used on Model 60500 Series type No. 941197.
342	65704	Plunger—Breaker Point	456	221222	Plate—Retainer	540	221380	Lever—Speed Adjuster
344	93042	Screw—Condenser Clamp Mounting Sem	457	296264	Hub and Spring Assy. Used on earlier model engines.	541	22398	Washer—Speed Adjuster to Carburetor
345	220366	Cover—Breaker Point and Condenser	458	296251	Handle Assy.—Cranking	542	91494	Screw—Speed Adjuster
346	93014	Screw—Dust Cover Mounting Sem	459	221332	Pawl—Ratchet (Single Acting)		Note:	91359 Screw—Machine, Fill. Hd. —10-32 x 3/4" Used on Model 60500 Series type No. 941197.
347	296110	Plate Assembly—Stop Switch Insulator		Note:	221220 Pawl—Ratchet (Double Acting) Used on earlier model engines.	544	296769	Armature—Electric Starter
356	296185	Wire—Ground	460	93272	Retainer—Ratchet Pawl	545	296770	Case Assembly—Long Shaft End
358	297275	Gasket Set	461	93298	Screw—Handle Mtg.	546	296775	Case Assembly—Short Shaft End
	Note:	293525 Gasket Set (Used on Model 60500 Series before Serial No. 5810060) Also used on Model 61500 Series before Serial No. 5809280.	462	221237	Washer—Handle Mtg.	547	270025	Washer—Fibre
363	19069	Puller—Flywheel (Optional Accessory)	463	296445	Holder Assy.—Flywheel	548	221381	Washer—Thrust (Steel)
364	295698	Plug—Connector	464	93291	Rivet—Holder Assembly Mounting (2)	662	221611	Bracket—Carburetor
365	93241	Screw—Plug Mtg. (long)	465	221226	Washer—Holder Assy. Mounting (2)	663	93395	Screw—Bracket Mtg.
366	93240	Screw—Plug Mtg. (short)	466	93272	Retainer—Holder Control Knob	664	93415	Screw—Bracket Mtg.
370	66432	Washer—Flat	467	211017	Knob—Control	665	296768	Oil Minder
371	260275	Restrictor—Belt	508	93294	Screw—Blower Housing Mounting Sem	666	297073	Gage—Fuel Level
372	220477	Clamp—Condenser	513	296567	Clutch Assembly—Electric Starter			
373	92987	Nut—Condenser Term.						