



084200

Illustrated Parts List

Model Series

084200

TYPE NUMBERS
0121, 0198.

TABLE OF CONTENTS


Blower Housing/Shrouds	4
Carburetor	3
Crankcase Cover/Sump	2
Crankshaft	2
Cylinder Head	2
Electric Start	4
Exhaust System	3
Flywheel	4
Governor Spring	3
Ignition	4
Kit-Carburetor Overhaul	3
Piston, Rings, Connecting Rod	2
Rewind Starter	4



 
 
 



 




PRINTED IN U.S.A.







COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

084200

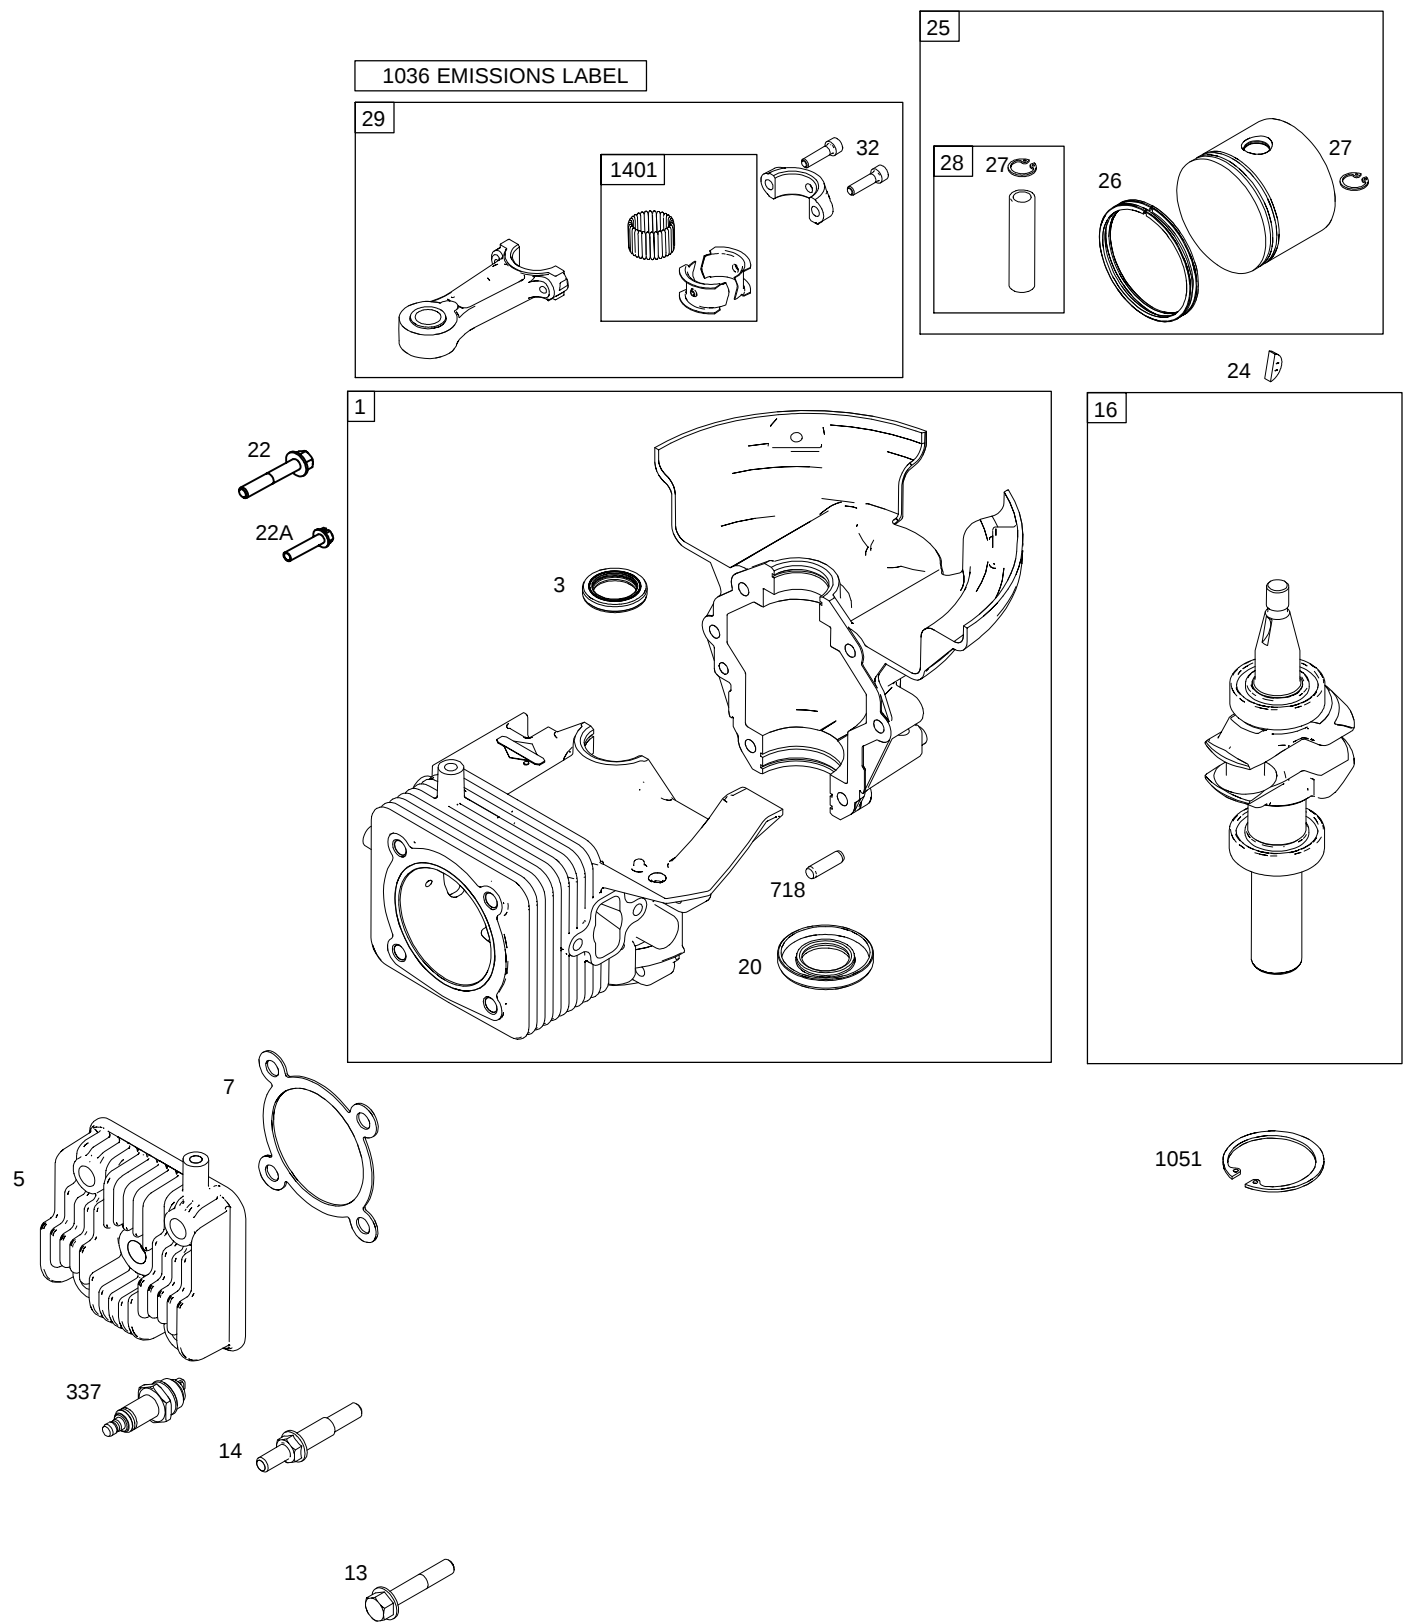

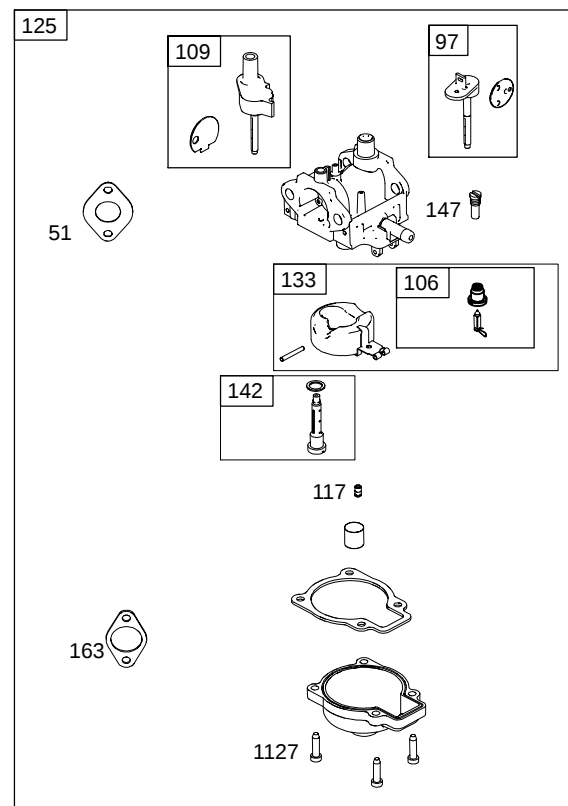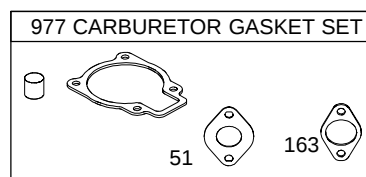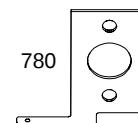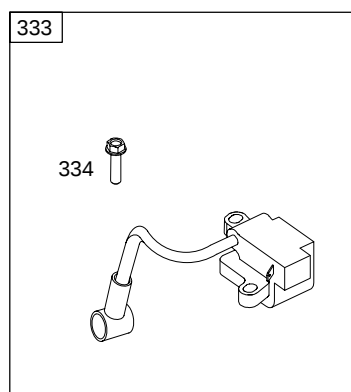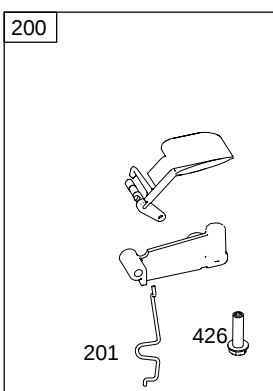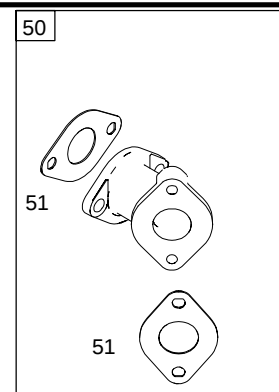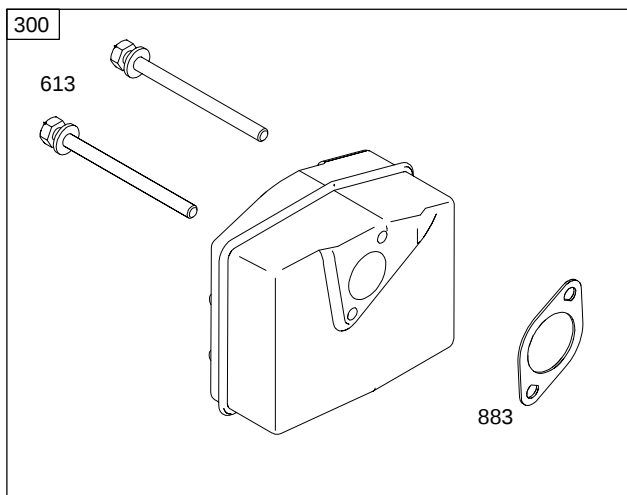

084200

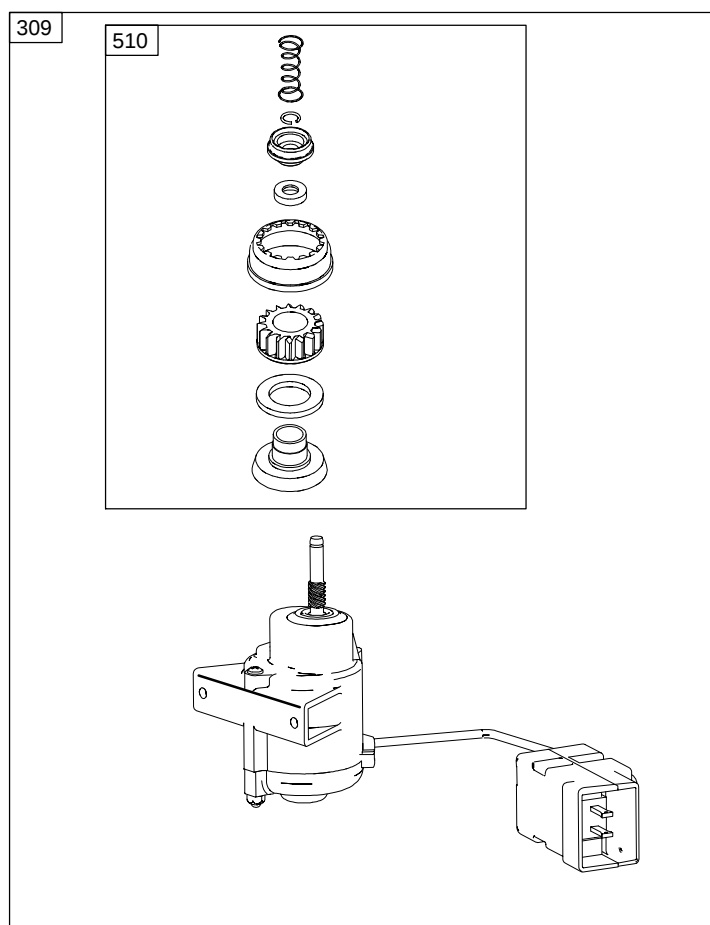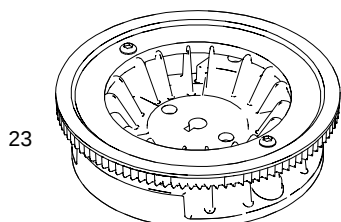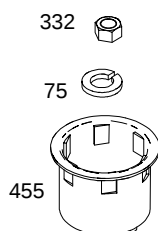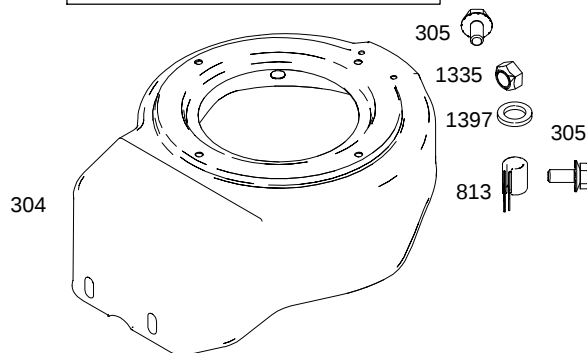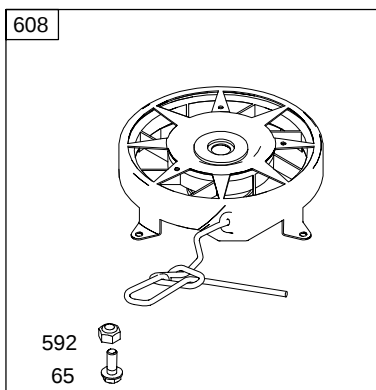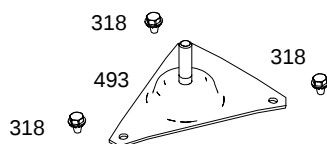

084200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	801260	Cylinder Assembly (Non Boost, Rewind Start) ----- Note ----- 801322 Cylinder Assembly (Non Boost, Electric Start) Used on Type No(s). 0198.	65	801243	(Intake Manifold) Screw (Rewind Starter)	333	801268	Armature-Magneto
3	801262	Seal-Oil (Magneto Side)	75	801237	Washer (Flywheel)	334	801267	Screw (Magneto Armature)
5	801283	Head-Cylinder	97	801306	Shaft-Throttle	337	801254	Plug-Spark
7	801263	Gasket-Cylinder Head	106	801317	Seat-Inlet	426	801231	Screw (Governor Blade)
13	801264	Screw (Cylinder Head)	109	801307	Shaft-Choke	455	801235	Cup-Flywheel
14	801265	Stud (Cylinder Head)	117	801310	Jet-Main	493	801240	Bracket-Mounting
16	801220	Crankshaft	125	801233	Carburetor	510	801293	Drive-Starter
20	801261	Seal-Oil (PTO Side)	133	801316	Float-Carburetor	592	801244	Nut (Rewind Starter)
22	801266	Screw (Crankcase Cover/ Sump)	142	801313	Nozzle-Carburetor	608	801242	Starter-Rewind
22A	801271	Screw (Crankcase Cover/ Sump)	147	801308	Pilot-Jet	613	801251	Screw (Muffler)
23	801246	Flywheel	163	801227	Gasket-Air Cleaner	654	801324	Nut (Intake Manifold) (Used Before Code Date 05042600).
24	801234	Key-Flywheel	200	801289	Blade-Governor	697	801248	Screw (Starter Motor)
25	801279	Piston Assembly	201	801225	Link-Air Vane	711	801229	Screw (Carburetor Shield)
26	801280	Ring Set	209	801223	Spring-Governor	718	690959	Pin-Locating
27	801275	Lock-Piston Pin	300	801250	Muffler	780	801228	Anchor-Spring
28	801276	Pin-Piston	304	801257	Housing-Blower ----- Note ----- 801236 Housing- Blower Used on Type No(s). 0198.	789	801253	Wire Assembly
29	801277	Rod-Connecting			801328 Housing- Blower (Used on 230 Volt Electric Start Engines)	813	801249	Clamp
32	801278	Screw (Connecting Rod)	305	801239	Screw (Blower Housing)	883	801252	Gasket-Exhaust
50	801232	Manifold-Intake	309	801247	Motor-Starter ----- Note ----- 801329 Motor-Starter (Used on 230 Volt Electric Start Engines)	977	801312	Gasket Set-Carburetor
51	801224	Gasket-Intake	318	801241	Screw (Mounting Bracket)	996	801226	Shield-Carburetor
54	801230	Screw	332	801238	Nut (Flywheel)	1051	801274	Ring-Retaining
						1036	801294	Label-Emissions
						1127	801318	Screw (Float Bowl)
						1335	801269	Nut (Blower Housing)
						1397	801270	Washer (Blower Housing)
						1401	801290	Roller-Strip