



95200

Illustrated Parts List

Model Series

95200

TYPE NUMBERS
0100, 0117, 0118,
0138, 0194, 0244.

TABLE OF CONTENTS

Air Cleaner	5
Blower Housing	6
Cam	2
Carburetor	4
Controls	5
Crankcase Cover/Sump	3
Crankshaft	2
Cylinder	2
Flywheel	6
Fuel Tank	4
Governor Spring	5
Head	2
Ignition	5
Kits/Gaskets-Carburetor	4
Kits/Gaskets-Engine	2
Kits/Gaskets-Valves	2
Muffler	5
Oil Group	3
Piston	2
Rewind Starter	6
Valves	2



BRIGGS & STRATTON













 
 

PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.




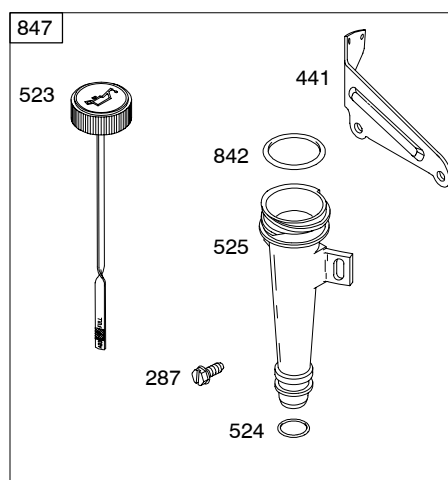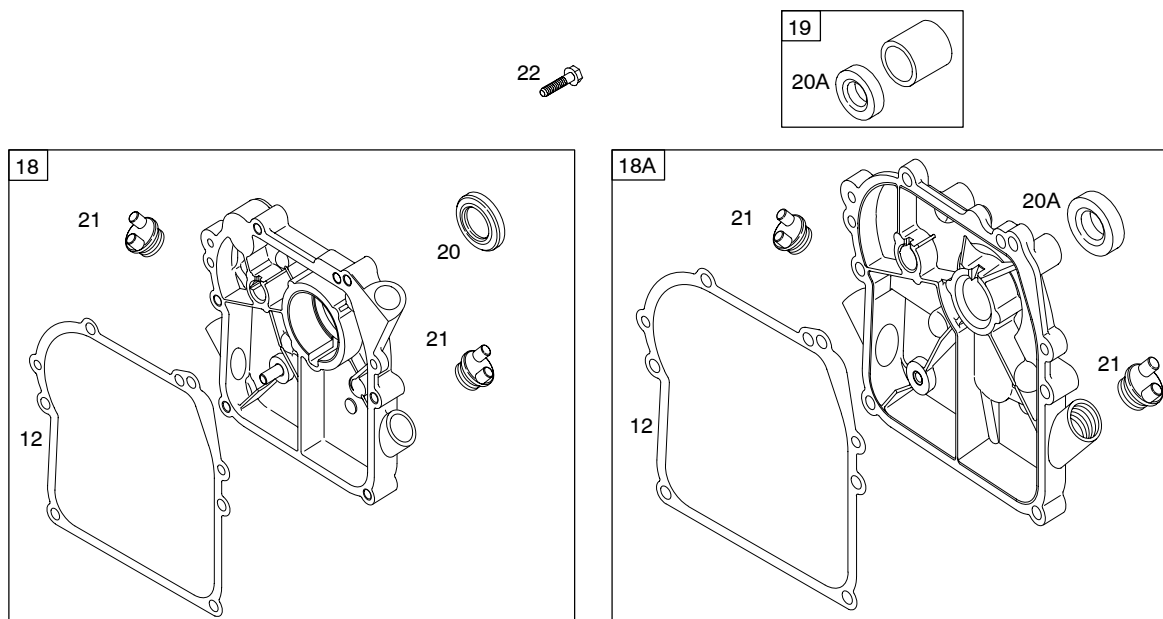

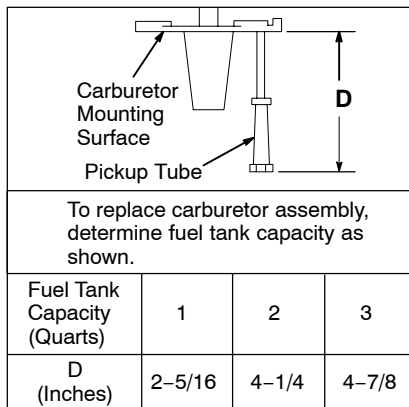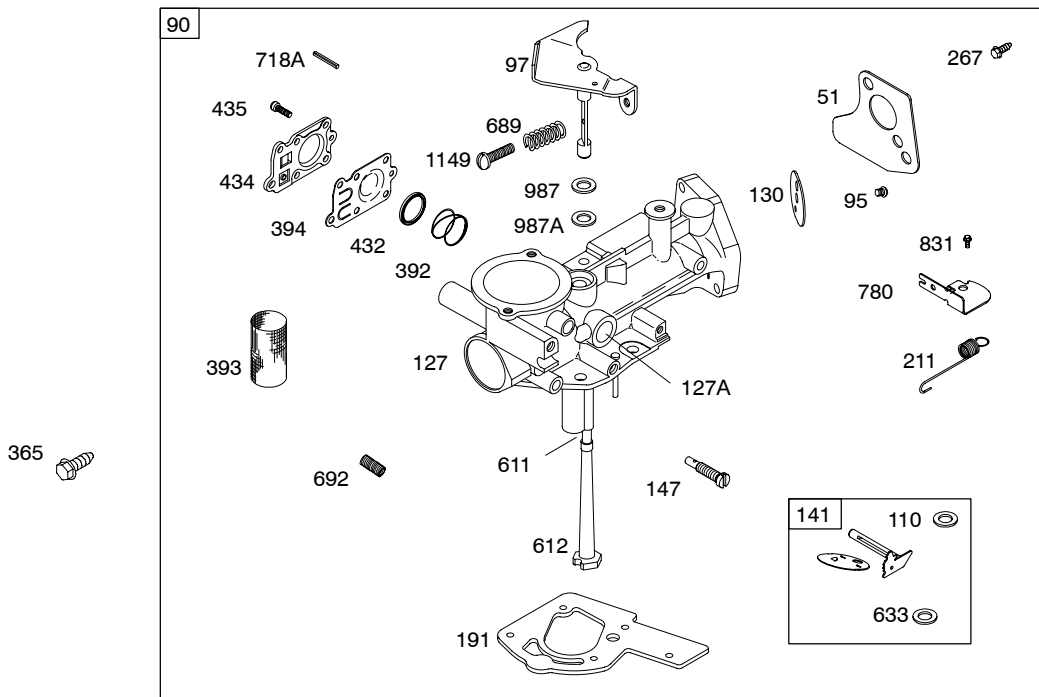

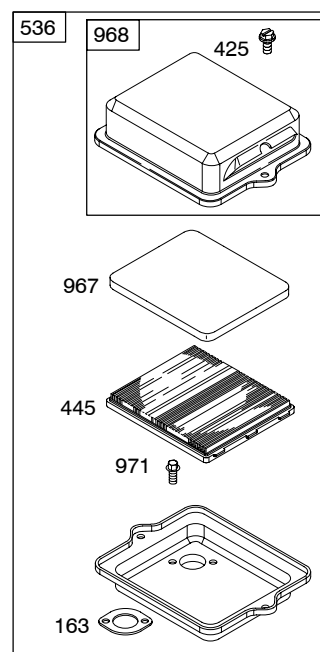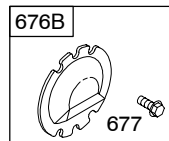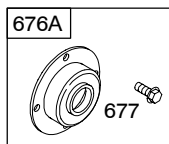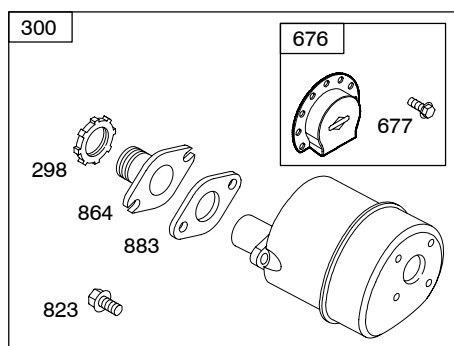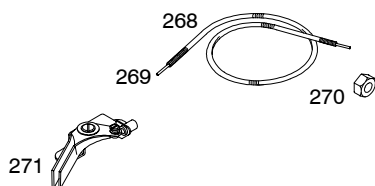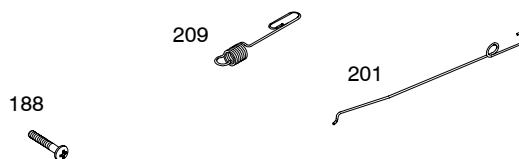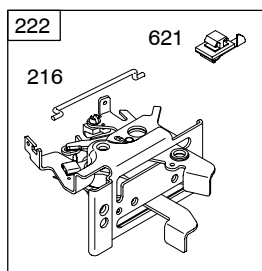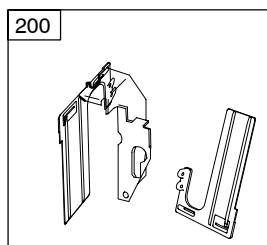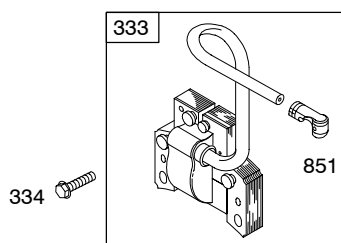


95200

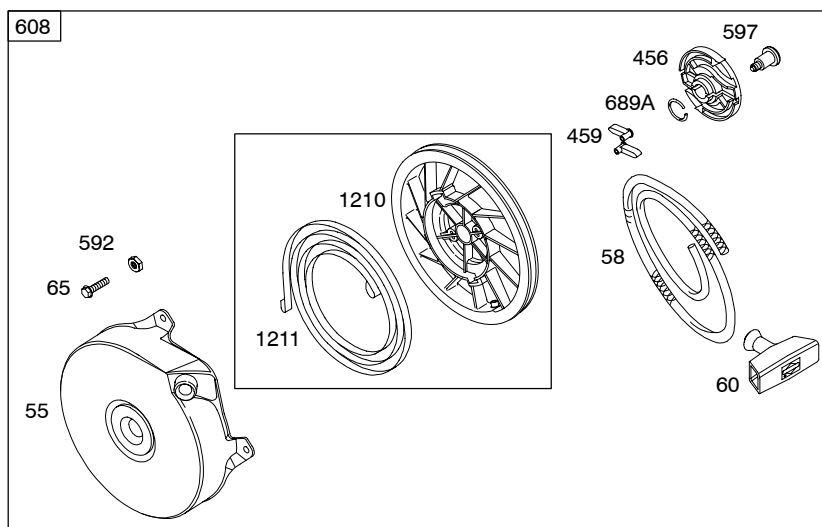

1019 LABEL KIT

1036 EMISSIONS LABEL

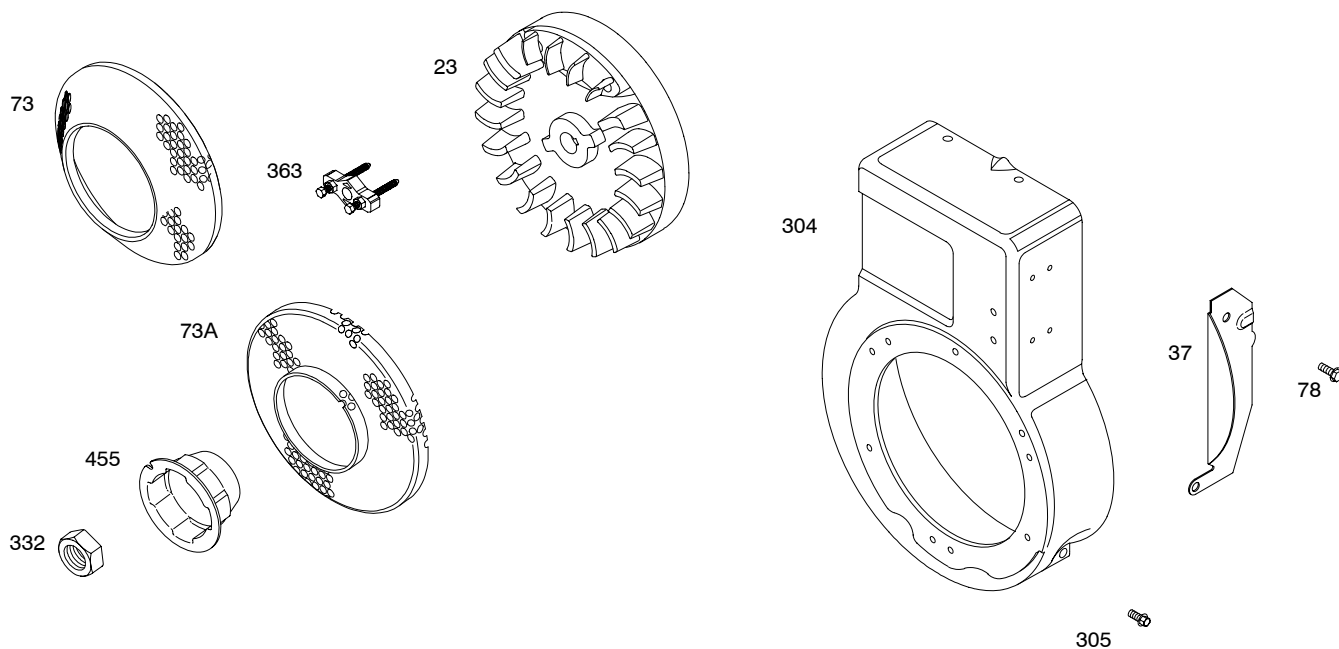

95200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	494549	Cylinder Assembly	18	496679	Cover-Crankcase Used on Type No(s). 0118, 0244.	24	222698s	Key-Flywheel
2	399269	Kit-Bushing/Seal (Magnetos Side)			----- Note -----	25	790908	Piston Assembly (Standard) (Used After Code Date 05051800).
3	299819s	Seal-Oil (Magnetos Side)			497506 Cover- Crankcase			----- Note -----
5	790169	Head-Cylinder			Used on Type No(s). 0138, 0194.			498668 Piston Assembly (Standard) (Used Before Code Date 05051900).
7	698717	Gasket-Cylinder Head	18A	699406	Cover-Crankcase Used on Type No(s). 0100, 0117.			498671 Piston Assembly (.030" Oversize) (Used Before Code Date 05051900).
8	791779	Breather Assembly						
9	695890	Gasket-Breather (Used After Code Date 03031900).	19	399269	Kit-Bushing/Seal (PTO Side)			
9A	27549s	Gasket-Breather (Used Before Code Date 03032000).	20	692020	Seal-Oil (PTO Side) Used on Type No(s). 0118, 0138, 0194, 0244.	26	790909	Ring Set (Standard) (Used After Code Date 05051800).
10	691666	Screw (Breather Assembly)	20A	299819s	Seal-Oil (PTO Side) Used on Type No(s). 0100, 0117.			----- Note -----
11	692528	Tube-Breather						695169 Ring Set (Standard) (Used Before Code Date 05051900).
11A	231550	Tube-Breather Used on Type No(s). 0138.	21	281658s	Cap-Oil Fill			695171 Ring Set (.010" Oversize) (Used Before Code Date 05051900).
12	692218	Gasket-Crankcase (.015" Thick) (Standard) ----- Note -----	22	691129	Screw (Crankcase Cover/Sump) (1 1/4" Long) ----- Note -----			695172 Ring Set (.020" Oversize) (Used Before Code Date 05051900).
		270895 Gasket- Crankcase (.005" Thick)			693732 Screw (Crankcase Cover/Sump) (Used in Positions 1 and 6) (7/8" Long) Used on Type No(s). 0118, 0244.			695173 Ring Set (.030" Oversize) (Used Before Code Date 05051900).
		270896 Gasket- Crankcase (.009" Thick)			691128 Screw (Crankcase Cover/Sump) (Used in Positions 1 and 6) (1 1/4" Long) Used on Type No(s). 0138, 0194.			----- Note -----
13	691640	Screw (Cylinder Head)						298909 Pin-Piston (Standard) (Used Before Code Date 05051900).
15	691682	Plug-Oil Drain						298908 Pin-Piston (.005" Oversize)
15A	691686	Plug-Oil Drain						
16	691474	Crankshaft Used on Type No(s). 0117. ----- Note -----	23	791119	Flywheel Used on Type No(s). 0117, 0138, 0194. ----- Note -----	27	691588	Lock-Piston Pin
		791414 Crankshaft Used on Type No(s). 0100, 0118.			690843 Flywheel Used on Type No(s). 0100, 0118, 0244.	28	699659	Pin-Piston (Standard) (Used After Code Date 05051800).
		791416 Crankshaft Used on Type No(s). 0244.						
		791415 Crankshaft Used on Type No(s). 0138, 0194.						

95200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
29	699655	Rod-Connecting	130	691743	Valve-Throttle	268	691025	Casing-Control Wire
30	691719	Dipper-Connecting Rod			Used on Type No(s). 0100.			(72" Long)
32	691664	Screw	141	497230	Kit-Choke Shaft			(Cut To
		(Connecting Rod)	147	691250	Jet-Pilot			Required Length)
33	296676	Valve-Exhaust	163	271935s	Gasket-Air Cleaner			----- Note -----
34	296677	Valve-Intake	180	495377	Tank-Fuel			691072 Casing-
35	690520	Spring-Valve (Intake)			(2 Quart)			Control Wire
36	690520	Spring-Valve (Exhaust)			Used on Type No(s). 0117, 0118, 0194.			(48" Long)
37	690463	Guard-Flywheel			----- Note -----			(Cut To
40	692194	Retainer-Valve			495391 Tank-Fuel	269	691026	Required Length)
45	691762	Tappet-Valve			(3 Quart)			Wire-Control
46	691998	Camshaft			Used on Type No(s). 0100, 0244.			(78" Long)
51	273113s	Gasket-Intake	180A	495370	Tank-Fuel			(Cut To
55	692144	Housing-Rewind Starter			(1 Quart)	270	691027	Required Length)
58	691921	Rope-Starter (70" Long)			Used on Type No(s). 0138.			Nut
60	691915	Grip-Starter Rope	188	692200	Screw			(Control Wire Casing)
65	690837	Screw			(Control Bracket)	271	691028	Lever-Control
		(Rewind Starter)	190	691685	Screw	287	695733	Screw
73	699850	Screen-Rotating (Used After Code Date 04032800).			(Fuel Tank)			(Dipstick Tube)
73A	694018	Screen-Rotating (Used Before Code Date 04032900).			(2/3" Long)			Used on Type No(s). 0138, 0194.
78	690364	Screw	190A	692200	Screw	298	691720	Locknut-Muffler/Elbow
		(Flywheel Guard)			(Fuel Tank)	300	493288	Muffler
90	499952	Carburetor (2 Quart Tank)			(3/4" Long)	304	693004	Housing-Blower
		Used on Type No(s). 0117, 0118, 0194.	190B	691687	Screw	305	692198	Screw
		----- Note -----			(Fuel Tank)			(Blower Housing)
		499953 Carburetor			(1 3/4" Long)	306	690461	Shield-Cylinder
		(3 Quart Tank)	191	692241	Gasket-Fuel Tank	307	691660	Screw
		Used on Type No(s). 0100, 0244.	200	498770	Blade-Governor			(Cylinder Shield)
		499492 Carburetor	201	691305	Link-Air Vane	308	690462	Cover-Cylinder Head
		(1 Quart Tank)	209	692205	Spring-Governor	332	690662	Nut
		Used on Type No(s). 0138.			(No Color)			(Flywheel)
95	691437	Screw			Used on Type No(s). 0100, 0117.	333	496914	Armature-Magneto
		(Throttle Valve)			----- Note -----	334	691061	Screw
97	692018	Shaft-Throttle			690563 Spring-			(Magneto Armature)
110	690401	Washer			Governor	337	802592s	Plug-Spark
		(Choke Shaft)			(White)	356A	692390	Wire-Stop
121	495606	Kit-Carburetor Overhaul			Used on Type No(s). 0118, 0138, 0194, 0244.			Used on Type No(s). 0117, 0138, 0194, 0244.
127	691718	Plug-Welch (Carburetor Body)	211	691289	Spring-Governed Idle	358	699933	Gasket Set-Engine
127A	691742	Plug-Welch (Mixing Chamber)	216	692904	Link-Choke	363	19069	Puller-Flywheel
			222	699132	Bracket-Control	365	690953	Screw
			267	691082	Screw			(Carburetor)
					(Casing Clamp)			

95200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
383	89838s	Wrench-Spark Plug	612	391813	Tube-Pick Up (2 and 3 Quart Tanks) (Includes Spring Clip) Used on Type No(s). 0100, 0117, 0118, 0194, 0244.	842	691870	Seal-O Ring (Dipstick Tube) Used on Type No(s). 0138, 0194.
392	691823	Spring-Pump Diaphragm				847	694532	Dipstick/Tube Assembly Used on Type No(s). 0138, 0194.
393	691213	Screen-Carburetor				851	493880s	Terminal-Spark Plug
394	272538	Diaphragm-Carburetor				864	690776	Adapter-Muffler
425	694515	Screw (Air Cleaner Cover)				869	699641	Seat-Valve (Intake) (Used After Code Date 05071000).
432	690766	Cap-Spring						----- Note -----
434	691713	Cover-Diaphragm						691701 Seat-Valve (Intake) (Used Before Code Date 05071100).
435	691619	Screw (Diaphragm Cover)	621	692310	Switch-Stop			
441	690484	Bracket-Oil Fill Used on Type No(s). 0138, 0194.	633	691869	Seal-Choke/Throttle Shaft	870	699642	Seat-Valve (Exhaust) (Used After Code Date 05071000).
445	491588s	Filter-Air Cleaner Cartridge	635	66538	Boot-Spark Plug Used on Type No(s). 0117, 0118, 0244.			----- Note -----
455	691236	Cup-Flywheel						691702 Seat-Valve (Exhaust) (Used Before Code Date 05071100).
456	692299	Plate-Pawl Friction	676	393760	Deflector-Muffler Used on Type No(s). 0118, 0138, 0194.	871	699643	Bushing-Valve Guide (Exhaust) (Used After Code Date 05071000).
459	281505s	Pawl-Ratchet	676A	397931	Deflector-Muffler Used on Type No(s). 0100, 0118.			----- Note -----
523	495264	Dipstick Used on Type No(s). 0138, 0194.	676B	393756	Deflector-Muffler Used on Type No(s). 0117.			262001 Bushing-Valve Guide (Exhaust) (Used Before Code Date 05071100).
524	691876	Seal-Dipstick Tube Used on Type No(s). 0138, 0194.						63709 Bushing-Valve Guide (Intake)
525	694426	Tube-Dipstick Used on Type No(s). 0138, 0194.	677	690661	Screw (Muffler Deflector)	883	691314	Gasket-Exhaust
527	691741	Clamp-Tube	689	691783	Spring-Friction (Throttle Shaft)	957	494559	Cap-Fuel Tank
529	692189	Grommet (90 Degree)	689A	691855	Spring-Friction (Rewind Starter)	967	491435	Filter-Pre Cleaner
529A	692187	Grommet (45 Degree)	692	690572	Spring-Detent	968	692321	Cover-Air Cleaner
536	494279	Cleaner-Air	718	690959	Pin-Locating (Cylinder)	971	690370	Screw (Air Cleaner Base to Carburetor)
578	696031	Wire Assembly Used on Type No(s). 0100, 0118.	718A	690296	Pin-Locating (Diaphragm Cover)			
592	690800	Nut (Rewind Starter)	718B	499047	Pin-Locating (Crankshaft)			
597	691696	Screw (Pawl Friction Plate)	741	791124	Gear-Timing (Used After Code Date 05013000).			
608	690101	Starter-Rewind (70" Long)	741A	691805	Gear-Timing (Used Before Code Date 05013100).			
611	690507	Pipe-Fuel Used on Type No(s). 0117, 0118, 0194.	780	691211	Anchor-Spring			
		----- Note -----	823	692336	Screw (Muffler Adapter)			
		691770 Pipe-Fuel Used on Type No(s). 0100, 0244.	831	691099	Screw (Spring Anchor)			

95200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
987	692279	Seal-Throttle Shaft (Foam)	1058	276376	Operator's Manual	1211	499901	Pulley/Spring Assembly
987A	270167	Seal-Throttle Shaft (Felt)	1095	699450	Gasket Set-Valve			(Spring)
1019	699456	Kit-Label	1149	691624	Screw (Throttle Shaft)	1330	270962	Repair Manual
1036		Label-Emissions (Available from Authorized Briggs & Stratton Service Dealer)	1210	499901	Pulley/Spring Assembly (Pulley)			