

10B900 to 10B999

SERVICE ENGINE



SALES MANUAL

**MODEL 10B900 SERIES ENGINES REPLACED WITH
 STANDARD SERVICE ENGINES**

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

Engine Replacement Notes:

NOTE 73: Transfer Flywheel Assembly to the replacement engine.

NOTE 88: Transfer Muffler and/or Spark Arrester Assembly from the original engine if suitable for additional service or add new parts as required

Short Block Notes:

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

NOTE R: Cut off 1-7/16" on Flywheel end of Crankshaft.

10B900 to 10B999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0050	10B902	496839	10M902	0018	1	698719	1	790220	73 88		All	3700	398213	
0051	10B902	496839	10M902	0018	1	698719	1	790220	73 88		All	3800	398213	
0110	10B902	496839	10M902	0018	1	698719	1	790220	73 88		All	3600	398213	
0111	10B902	498639	10M902	0018	1	698719	1	790220	73 88		All	3600	398213	
0130	10B902	496839	10M902	0018					73 88		All	3400	398213	
0131	10B902	496839	10M902	0018					73 88		All	3400	398213	
0132	10B902	496836	10M902	0016	1	698719	1	790220	73 88		All	3800	398211	
1650	10B902	692989	10M902	0018	1	698719	1	790220	73 88		All	3700	398213	R
1651	10B902	692989	10M902	0018	1	698719	1	790220	73 88		All	3800	398213	R
1652	10B902	692989	10M902	0018	1	698719	1	790220	73 88		All	3600	398213	R
2005	10B902	692989	10M902	0018	1	698719	1	790220	73 88		All	3600	398213	R
2011	10B902	692989	10M902	0018	1	698719	1	790220	73 88		All	3800	398213	R