FORM MS-3220-10/05 REPLACES FORM MS-3220-7/05

122000 to 122099



MODEL 122000 SERIES ENGINES REPLACED WITH STANDARD SERVICE ENGINES

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

Engine Replacement Notes:

- NOTE 15: For all Go-Karts use only a Model 136200 series engine as a replacement, regarless of the original Model.
- NOTE 64: Transfer Alternator Assembly from original engine to replacement engine.
- NOTE 81: Transfer Governor Spring to replacement engine.
- NOTE 88: Transfer Muffler and/or Spark Arrester Assembly from the original engine if suitable for additional service or add new parts as required
- NOTE 97: Transfer the Blower Housing, Rewind Assembly and related parts from the original engine to replacement engine.
- NOTE 101: Transfer the Extended Oil Fill Tube and Dipstick Assembly to the replacement engine.
- NOTE 102: Transfer the Flywheel, Alternator and/or 12V Starter Assembly to the replacement engine.

Short Block Notes:

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

122000 to 122099

Original Engine			Make From		Remove		Add			Change			Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #	Note	to Type Tri	im	RPM	Part #	Notes
0111	122032	699443	123332	0236			1	692586	15	,	All	3200	699579	
									81					
									88					
0112	122032	699451	121332	0236	1	699443	1	699451	15	,	All	3600		
									88					
									101					
0114	122012	699451	121312	0260					15	,	All	3800	699585	
									88					
0115	122012	699445	121312	0223					15	,	All	3800	699582	
0116	122012	699451	121312	0145	1	699452	1	692586	15	,	All	3700	699585	
							1	699451	97					
0118	122012	699445	121A12	0022	1	699449	1	699445	15		AII	3600		
									81					
0119	122032	699451	121332	0236	1	699443	1	692586	15		AII	3600		
							1	699451	88					
									101					
0120	122012	699451	121312	0260					15	,	All	3800	699585	
									88					
0121	122037	699451	123337	0250	1	699443	1	699451	15	,	All	3600	699584	
									64					
									88					
0123	122012	699451	121312	0260					15	,	All	3700	699585	
									97					
									101					
0358	122012	699452	STD.						15		All	3600	699581	

For Briggs & Stratton Discount Parts Call 606-678-9623 or 606-561-4983

122000 to 122099

Original Engine			Make From		Remove		Add			Change			Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #	Note	to Type	Trim	RPM	Part #	Notes
0361	122012	699449	121A12	0022					15		All	3600	791519	
									97					
0374	122017	699449	121A12	0022					15		All	3600	791519	
									102					
0394	122002	649445	STD.						15		All	3200		
0416	122012	699452	121312	0322					15		All	3600	699581	·
0496	122002	699445	122002	0394					15		All	3200		·