

122800 to 122899

SERVICE ENGINE



SALES MANUAL

**MODEL 122800 SERIES ENGINES REPLACED WITH
 STANDARD SERVICE ENGINES**

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

Engine Replacement Notes:

NOTE 88: Transfer Muffler and/or Spark Arrester Assembly from the original engine if suitable for additional service or add new parts as required

Short Block Notes:

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

122800 to 122899

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0220	122802	493362	122K02	0515	1	690319	1	691851	88		All	3300	498826	
0235	122802	493363	12F802	2916							All	3100	498827	
0410	122802	493282	122K02	0525	1	690319	1	691851			All	3400	498829	
0430	122802	493282	122K02	0525	1	690319	1	691851	88		All	3300	498829	
0431	122802	493362	122K02	0515							All	3000	498826	
0432	122802	493363	12F802	2916							All	3000	498827	
0433	122802	493282	122K02	0525	1	690319	1	691851			All	3300	498829	
0434	122802	493282	122K02	0525	1	690319	1	691851			All	3400	498829	
0436	122802	493282	122K02	0525	1	690319	1	691851			All	3300	498829	
3122	122802	493433	12F702	2624							All	3200		
3125	122802	493362	122K02	0515							All	3100	498826	
3126	122802	496078	No Replacement Repair With Individual Parts.								All	3000		
3211	122802	493362	122K02	0515							All	3150	498826	
3212	122802	493282	122K02	0525							All	3300	498829	
3213	122802	493363	12F802	2916							All	3150	498827	
3214	122802	496809	No Replacement Repair With Individual Parts.								All	2900		
3409	122802	493362	122K02	0515							All	3100	498826	
3410	122802	493362	122K02	0515							All	3150	498826	
3411	122802	493363	12F802	2916							All	3100	498827	
3412	122802	493947	122K02	0518							All	3000	498827	
3413	122802	493362	122K02	0515							All	2900	498826	
3414	122807	493362	122K07	0560							All	2900	498826	
3416	122802	496078	No Replacement Repair With Individual Parts.								All	3100		
3417	122802	493363	12F802	2916	1	690319	1	691851			All	3400	498827	
3422	122802	493282	122K02	0525					88		All	2900	498829	