

**128600 to 128699**

**SERVICE ENGINE**



**SALES MANUAL**

**MODEL 128600 SERIES ENGINES REPLACED WITH  
 STANDARD SERVICE ENGINES**

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

**Engine Replacement Notes:**

**NOTE 63:** Transfer Rewind Assembly from original engine to replacement engine.

**NOTE 81:** Transfer Governor Spring to replacement engine.

**NOTE 88:** Transfer Muffler and/or Spark Arrester Assembly from the original engine if suitable for additional service or add new parts as required

**Short Block Notes:**

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

**128600 to 128699**

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0110	128602	691457	121612	0545	1	498983	1	499619	81		All	3600	692745	
						1	692803	1	691457	88				
0111	128612	691457	121612	0545	1	692803	1	691457	81		All	3600		
									88					
0112	128602	691456	121602	0625					81		All	2900	692748	
0113	128607	691456	121607	0662					81		All	3350	692748	
0115	128602	691457	121602	0615					63		All	3400	692745	
									81					
									88					
0149	128602	691456	121602	0625					81		All	3350	692748	
0150	128602	691456	121602	0525					81		All	3350	692748	
0151	128602	691456	121602	0625	1	697316	1	791362	81		All	3400	692748	
0212	128602	691457	121602	0515							All	3100	692745	
0215	128602	691457	121602	0515							All	3100	692745	
0221	128602	691457	121602	0515					81		All	2800	692745	
0259	128602	699011	STD.								All	3100	692748	
0264	128602	691457	STD.								All	3100	692745	
0278	128602	691457	121602	0615					81		All	2750	692745	
0304	128602	699011	121602	0625							All	3100	692748	
0339	128602	699011	121602	0625					81		All	2750	692748	
0445	128602	699011	121602	0625							All	3050	692748	
0514	128602	699011	121602	0625					81		All	2800	692748	
0551	128602	699011	121602	0625							All	3050	692748	
0552	128602	699011	121602	0625							All	2950	692748	
0629	128605	699011	121607	0662							All	3050	692748	