

**140700 to 140799**

**SERVICE ENGINE**



**SALES MANUAL**

**MODEL 140700 SERIES ENGINES REPLACED WITH  
 STANDARD SERVICE ENGINES**

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

**Engine Replacement Notes:**

**NOTE 60:** The original engine was equipped with an Electric Starter-Generator and a 4 quart Fuel Tank. The replacement engine is not available with a Fuel Tank when equipped with a Starter- Generator. A Remote Fuel Tank installation is required.

**Short Block Notes:**

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

**140700 to 140799**

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0015	140702	260356	215702	0015							All	3300		
0110	140701	260356	215902	0020										
0111	140702	260356	215902	0020										
0112	140703	260356	No Replacement Repair With Individual Parts.											
0113	140704	260356	No Replacement Repair With Individual Parts.											
0114	140705	260356	215907	0028										
0116	140702	260356	215902	0020										
0117	140702	260356	215902	0020										
0118	140702	260356	215902	0020										
0119	140707	260356	215907	0028										
0120	140707	260356	215907	0028										
0125	140702	260506	No Replacement Repair With Individual Parts.											
0126	140702	260394	No Replacement Repair With Individual Parts.											
0127	140702	260356	215902	0020										
0128	140702	260707	No Replacement Repair With Individual Parts.											
0129	140702	260356	215702	0015										
0130	140702	260498	No Replacement Repair With Individual Parts.											
0131	140702	260498	No Replacement Repair With Individual Parts.											
0132	140702	260356	215902	0020										
0133	140702	260356	215902	0020							All	4000		
0134	140702	260356	215702	0015										
0135	140702	260356	215902	0020										
0136	140702	260394	No Replacement Repair With Individual Parts.											
0137	140702	260498	No Replacement Repair With Individual Parts.											
0138	140702	260356	215902	0020										
0139	140702	260506	No Replacement Repair With Individual Parts.											
0140	140702	260356	215902	0020										
0141	140702	260498	No Replacement Repair With Individual Parts.											
0142	140701	260536	No Replacement Repair With Individual Parts.											
501010	140701	260356	215902	0020							All	3600		

140700 to 140799

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
501011	140702	260356	215902	0020											
501012	140703	260356	No Replacement Repair With Individual Parts.												
501013	140704	260356	No Replacement Repair With Individual Parts.												
501014	140705	260356	215707	0025											
501016	140702	260356	215702	0015											
501020	140702	260356	215902	0020											
501021	140702	260356	215902	0020											
501022	140702	260356	215902	0020											
501023	140702	260506	No Replacement Repair With Individual Parts.								All	3300			
501024	140702	260707	No Replacement Repair With Individual Parts.								All	3600			
501025	140702	260506	No Replacement Repair With Individual Parts.								All	3300			
501026	140702	260356	215702	0015											
501027	140702	260356	215702	0015											
501028	140702	260356	215902	0020											
501029	140702	260356	215902	0020											
501030	140702	260394	No Replacement Repair With Individual Parts.								All	3900			
501031	140702	260356	215902	0020											
501032	140702	260356	215902	0020											
501033	140702	260498	No Replacement Repair With Individual Parts.												