

19F400 to 19F499**SERVICE ENGINE****SALES MANUAL**
**MODEL 19F400 SERIES ENGINES REPLACED WITH
STANDARD SERVICE ENGINES**

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

Engine Replacement Notes:

NOTE 15: For all Go-Karts use only a Model 136200 series engine as a replacement, regardless of the original Model.



Short Block Notes:

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

19F400 to 19F499

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0043	19F432	495790	No Replacement Repair With Individual Parts.						15		All	3750	497538	
0112	19F436	497155	No Replacement Repair With Individual Parts.						15		All	3300		
0113	19F432	495790	No Replacement Repair With Individual Parts.						15		All	3150	497538	
0132	19F437	495790	No Replacement Repair With Individual Parts.						15		All	3750	497538	
0133	19F432	495790	No Replacement Repair With Individual Parts.						15		All	3750	497538	
0134	19F437	495790	No Replacement Repair With Individual Parts.						15		All	3750	497538	
0135	19F432	495790	No Replacement Repair With Individual Parts.						15		All	3150	497538	
0136	19F412	495884	No Replacement Repair With Individual Parts.						15		All	3600	497542	
0144	19F412	495884	No Replacement Repair With Individual Parts.						15		All	3600	497542	
1043	19F432	495790	No Replacement Repair With Individual Parts.						15		All	3750	497538	
1113	19F432	495790	No Replacement Repair With Individual Parts.						15		All	3150	497538	
1137	19F432	495790	No Replacement Repair With Individual Parts.						15		All	3750	497538	

MODEL 19E400

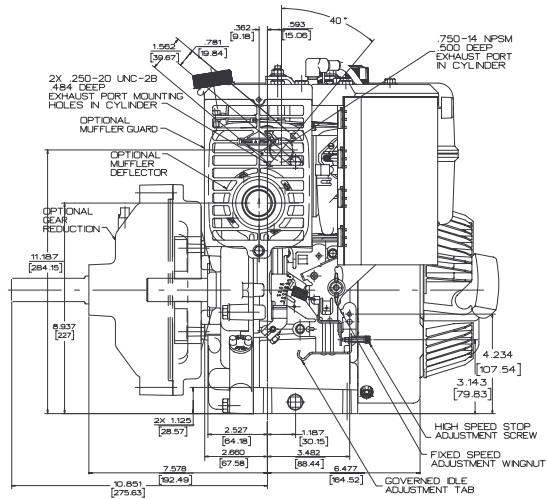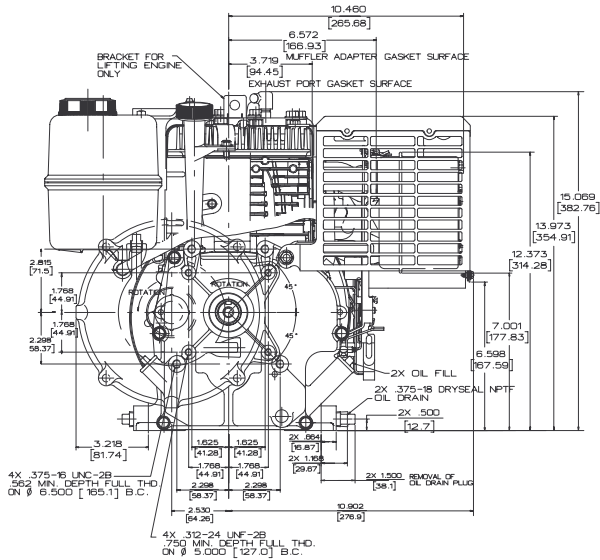

MODEL 200000

