

226400 to 226499

SERVICE ENGINE



SALES MANUAL

**MODEL 226400 SERIES ENGINES REPLACED WITH
 STANDARD SERVICE ENGINES**

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

Engine Replacement Notes:

NOTE 15: For all Go-Karts use only a Model 136200 series engine as a replacement, regardless of the original Model.

NOTE 30: If the replacement engine supersedes to or is a Model 200000 series engine, refer to the illustrations located after the conversion data for this model series. To make the crankshaft center line the same add 695154 spacer kit, other overall dimensions which differ, are shown in the illustrations. If after making a visual inspection and it is determined the Model 200000 series engine cannot be used because of equipment interference, the original engine should be repaired with a short block and/or individual parts.

Short Block Notes:

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

226400 to 226499

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0005	226437	491639	No Replacement		Repair With Individual Parts.				15		01	3800		
0006	226432	491639	205432	0035					15 30		All	3800		
0035	226432	497487	206432	0036					15 30		01	3600		
0036	226432	497487	206432	0036					15 30		01	3600		
0037	226432	491639	205432	0035					15 30		01	3600		
0044	226452	497490	205452	0049					15 30		01	3600		
0045	226437	497487	206437	0041					15 30		01	3600		
0046	226437	497489	No Replacement		Repair With Individual Parts.				15		01	3800		
0047	226432	497489	No Replacement		Repair With Individual Parts.				15		01 02	3800 3150		
0048	226457	497490	No Replacement		Repair With Individual Parts.				15		01	3600		
0049	226452	497490	205452	0049					15 30		01 03	3600 3600		
0050	226432	497489	No Replacement		Repair With Individual Parts.				15		01	3150		
0057	226432	497489	No Replacement		Repair With Individual Parts.				15		01	3800		
0060	226457	497490	No Replacement		Repair With Individual Parts.				15		01	3600		
0070	226432	497489	No Replacement		Repair With Individual Parts.				15					
0110	226432	497489	No Replacement		Repair With Individual Parts.				15		01	3150		
0111	226432	497487	206432	0036					15 30		01	3600		
0112	226432	497489	No Replacement		Repair With Individual Parts.				15		01	3750		
0114	226432	497487	206432	0036					15 30		01	3400		

226400 to 226499

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0115	226432	491639	205432	0035					15 30		01	3600		
0116	226432	497489	No Replacement Repair With Individual Parts.						15		01	3800		
0145	226432	491639	No Replacement Repair With Individual Parts.						15		01 02	3950 3600		
0147	226432	497489	No Replacement Repair With Individual Parts.						15		01	3150		

MODEL 20000

