

260700 to 260799

SERVICE ENGINE  **SALES MANUAL**

**MODEL 260700 SERIES ENGINES REPLACED WITH
 STANDARD SERVICE ENGINES**

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

Engine Replacement Notes:



Short Block Notes:

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

260700 to 260799

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0010	260777	262486	No Replacement Repair With Individual Parts.								01	3300		
0011	260777	262486	No Replacement Repair With Individual Parts.								01	3300		
0012	260776	262486	No Replacement Repair With Individual Parts.								01	3300		
0014	260777	262486	No Replacement Repair With Individual Parts.								01	3300		
0015	260776	262486	No Replacement Repair With Individual Parts.								01	3300		
0020	260772	262486	No Replacement Repair With Individual Parts.								01	3300		
0022	260772	262486	No Replacement Repair With Individual Parts.								01	3600		
0023	260772	262486	No Replacement Repair With Individual Parts.								01	3600		
0026	260777	262486	No Replacement Repair With Individual Parts.								01	3300		
0027	260777	262486	No Replacement Repair With Individual Parts.								01	3600		
0029	260777	262486	No Replacement Repair With Individual Parts.								01	3300		
0047	260777	262486	No Replacement Repair With Individual Parts.								01	3600		
0116	260777	262486	No Replacement Repair With Individual Parts.								01	3400		
0117	260777	262486	No Replacement Repair With Individual Parts.								01	3600		
											02	3600		
0118	260772	262486	No Replacement Repair With Individual Parts.								01	3600		
0119	260777	262486	No Replacement Repair With Individual Parts.								01	3300		
0120	260772	262486	No Replacement Repair With Individual Parts.								01	3600		
0121	260776	262486	No Replacement Repair With Individual Parts.								01	3200		
0122	260772	262486	No Replacement Repair With Individual Parts.								01	3400		
0123	260777	262486	No Replacement Repair With Individual Parts.								01	3600		
0125	260772	262486	No Replacement Repair With Individual Parts.								01	3600		

MODEL 260700

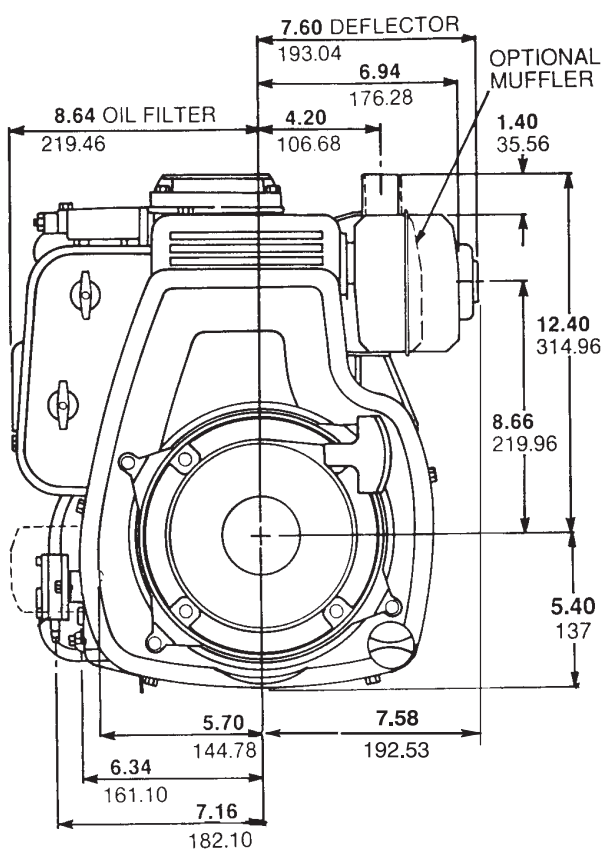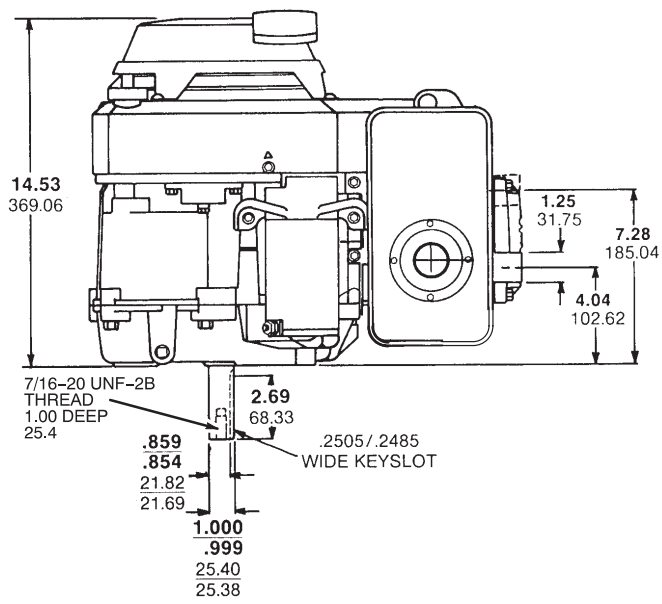

MODEL 28Q700

