

**261700 to 261799**

**SERVICE ENGINE**  **SALES MANUAL**

**MODEL 261700 SERIES ENGINES REPLACED WITH  
 STANDARD SERVICE ENGINES**

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

**Engine Replacement Notes:**

**Short Block Notes:**

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

**261700 to 261799**



Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0010	261777	262486	No Replacement Repair With Individual Parts.								01	3300		
0015	261776	262486	No Replacement Repair With Individual Parts.								01	3300		
											02	3300		
0020	261772	262486	No Replacement Repair With Individual Parts.								01	3300		
											02	3300		
0021	261772	262486	No Replacement Repair With Individual Parts.								01	3300		
											02	3300		
0022	261772	262486	No Replacement Repair With Individual Parts.											
0023	261772	262486	No Replacement Repair With Individual Parts.								01	3600		
											02	3600		
0026	261777	262486	No Replacement Repair With Individual Parts.								01	3300		
											02	3300		
											03	3300		
											04	3300		
0029	261777	262486	No Replacement Repair With Individual Parts.								01	3300		
											02	3300		
0033	261776	262486	No Replacement Repair With Individual Parts.								01	3300		
											02	3300		
0036	261777	262486	No Replacement Repair With Individual Parts.								01	3300		
0116	261772	262486	No Replacement Repair With Individual Parts.								01	3300		
0117	261777	262486	No Replacement Repair With Individual Parts.								01	3300		
0118	261772	262486	No Replacement Repair With Individual Parts.								01	3300		
0119	261777	262486	No Replacement Repair With Individual Parts.								01	3300		
0120	261772	262486	No Replacement Repair With Individual Parts.								01	3600		
0121	261777	262486	No Replacement Repair With Individual Parts.								01	3600		
0122	261772	262486	No Replacement Repair With Individual Parts.								01	3600		
0123	261777	262486	No Replacement Repair With Individual Parts.								01	3600		
0124	261777	262486	No Replacement Repair With Individual Parts.								01	3500		
0125	261777	262486	No Replacement Repair With Individual Parts.								01	3400		
0126	261777	262486	No Replacement Repair With Individual Parts.								01	3400		
											02	3400		
0127	261777	262486	No Replacement Repair With Individual Parts.								01	3600		

261700 to 261799

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
0128	261772	262486	No Replacement Repair With Individual Parts.									01	3600		
0129	261777	262486	No Replacement Repair With Individual Parts.									01	3300		
0130	261777	262486	No Replacement Repair With Individual Parts.									01	3500		
0131	261772	262486	No Replacement Repair With Individual Parts.									01	3600		
0132	261772	262486	No Replacement Repair With Individual Parts.									01	3600		
0133	261776	262486	No Replacement Repair With Individual Parts.									01	3600		
0134	261777	262486	No Replacement Repair With Individual Parts.												
0135	261777	262486	No Replacement Repair With Individual Parts.									01	3600		
0136	261777	262486	No Replacement Repair With Individual Parts.									01	3300		
0137	261777	262486	No Replacement Repair With Individual Parts.									01	3400		
0138	261777	262486	No Replacement Repair With Individual Parts.									01	3600		
0140	261777	262486	No Replacement Repair With Individual Parts.									01	3300		
0141	261777	262486	No Replacement Repair With Individual Parts.									01	3300		
0142	261777	262486	No Replacement Repair With Individual Parts.									01	3600		
0143	261777	262486	No Replacement Repair With Individual Parts.									01	3600		
0144	261777	262486	No Replacement Repair With Individual Parts.									01	3300		
0145	261777	262486	No Replacement Repair With Individual Parts.									01	3300		
0146	261777	262486	No Replacement Repair With Individual Parts.									01	3300		
0147	261772	262486	No Replacement Repair With Individual Parts.									01	3600		
0148	261772	262486	No Replacement Repair With Individual Parts.									01	3600		
0149	261772	262486	No Replacement Repair With Individual Parts.									01	3600		
0150	261777	262486	No Replacement Repair With Individual Parts.									01	3600		
0151	261772	262486	No Replacement Repair With Individual Parts.									01	3600		
0152	261772	262486	No Replacement Repair With Individual Parts.									01	3600		
0153	261777	262486	No Replacement Repair With Individual Parts.									01	3300		
0154	261777	262486	No Replacement Repair With Individual Parts.									01	3300		
0155	261777	262486	No Replacement Repair With Individual Parts.									01	3600		
0156	261777	262486	No Replacement Repair With Individual Parts.									01	3600		
0157	261777	262486	No Replacement Repair With Individual Parts.									01	3300		
0159	261777	262486	No Replacement Repair With Individual Parts.									01	3300		
0160	261777	262486	No Replacement Repair With Individual Parts.									01	3600		
0162	261776	262486	No Replacement Repair With Individual Parts.									01	3600		
0163	261777	262486	No Replacement Repair With Individual Parts.									01	3600		
0164	261777	493921	No Replacement Repair With Individual Parts.									01	3300		

261700 to 261799

# MODEL 261700

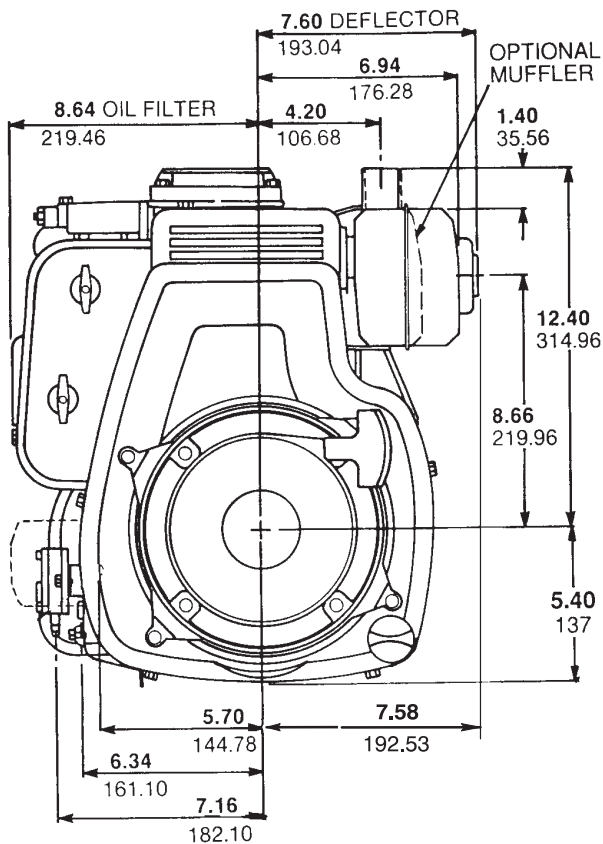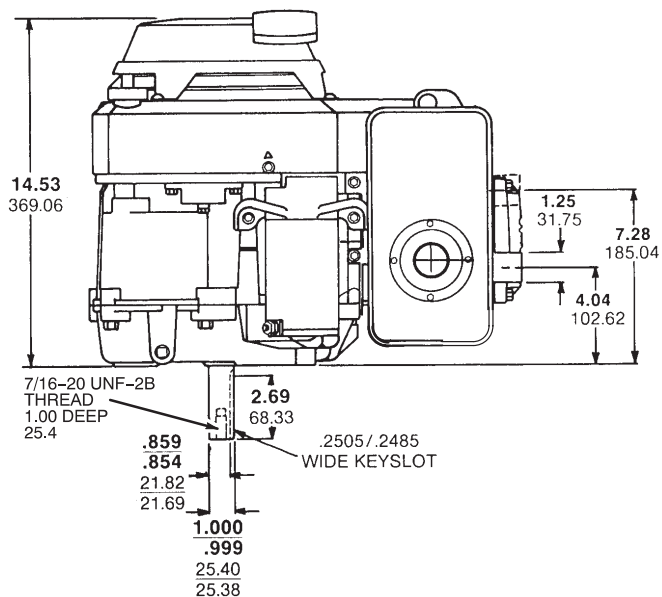

# MODEL 28Q700

