FORM MS-5666-1/05 REPLACES FORM MS-5666-10/04 FILE IN SECT.2B OF SERVICE ENGINE SALES

281H00 to 281H99

SALES MANUAL

SERVICE ENGINE BRIGGS & STRATTON

MODEL 281H00 SERIES ENGINES REPLACED WITH STANDARD SERVICE ENGINES

ര

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

Engine Replacement Notes:

NOTE 23: If the original engine is equipped with a Six Pin Wiring Harness transfer to the replacement engine.

- NOTE 35: Transfer the Speed Limiter Control Assembly to the replacement engine.
- NOTE 68: Transfer Flywheel and Alternator Assembly from original to replacement engine.
- **NOTE 81:** Transfer Governor Spring to replacement engine.
- NOTE 88: Transfer Muffler and/or Spark Arrester Assembly from the original engine if suitable for additional service or add new parts as required
- NOTE 97: Transfer the Blower Housing , Rewind Assembly and related parts from the original engine to replacement engine.

Short Block Notes:

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

20100														0 201 89
Original Engine			Make From		Remove		Add			Change			Short Block	
Туре	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #	Note	to Type	Trim	RPM	Part #	Notes
0110	281H06	697127	285H07	0026					68		All	3400	697761	
									88					
									97					
0111	281H07	697127	285H07	0026					88		All	3400	697761	
0112	281H07	697127	285H07	0026					81		All	2600	697761	
									88					
0113	281H07	697127	285H07	0026					81		All	2750	697761	
									88					
0372	281H07	697127	285H07	0026			1	790544	23		All	3300	697761	
									88					
0384	281H07	697127	285H07	0026	1	691840	1	790544	23		All	2500	697761	
									35					
									81					
									88					

281H00 to 281H99

Page 1 of 1

www.mymowerparts.com