

446800 to 446899

SERVICE ENGINE



SALES MANUAL

**MODEL 446800 SERIES ENGINES REPLACED WITH
STANDARD SERVICE ENGINES**

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

Engine Replacement Notes:

NOTE 23: If the original engine is equipped with a Six Pin Wiring Harness transfer to the replacement engine.

NOTE 81: Transfer Governor Spring to replacement engine.

NOTE 88: Transfer Muffler and/or Spark Arrester Assembly from the original engine if suitable for additional service or add new parts as required

NOTE 90: Transfer Oil Sensor to the replacement engine.

Short Block Notes:

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

446800 to 446899

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0025	446877	790133	STD.						88		All	3300	792046	
0026	446877	790132	STD.						88		All	3300	698173	
0027	446877	699700	STD.						88		All	3300	698172	
0121	446877	790132	44P777	0026					81		All	3600	698173	
									88					
									90					
0365	446877	790133	446877	0025					88		All	3300	792046	
0412	446877	790132	446877	0026					23		All	3300	698173	
									88					
									90					