

SLTX1054VT Tractor
Drive System



 







Page 2 of 63

Ref #	Part Number	Qty	S/P/F	Description
1	918-04270B	1	/P	Transmission, Hydro-Gear 0510
2	710-0176	1	/P	Hex Screw, 5/16-18, 2.75, Gr5, Std
3	710-0227	1	/P	Screw, #8-18, 0.500,
4	710-0351	1	/P	Screw, #10-16, 0.500
5	710-04484	1		Screw, Self-tapping, 5/16-18, .750
6	710-0653	1	/P	Screw, Self-tapping, 1/4-20, 0.375
7	710-1007	1	/P	Screw, Self-tapping, 3/8-16, 1.500
8	710-1325	1	/P	Screw, Self-tapping, 1/4-20, 1.625
9	710-3011	1	/P	Hex Screw, 3/8-16, 2.25, Gr5
10	912-0240	1	/P	Nut, Jam, 7/16-20, Gr2
11	912-0346	1	/P	Nut, Jam Lock, 1/2-20, Gr5, Nylon
12	712-04063	1	/P	Nut, Flange Lock, 5/16-18, Nylon
13	912-0431	1	/P	Nut, Flange Lock, 3/8-16
14	914-0111	1	/P	Pin, Cotter, 3/32, 1.0
15	725-0157	1	/P	Cable, Tie, 3/16 x .05 x 7.4
16	725-04791A	1		Jumper Harness, Ground & Reverse
17	725-1644	1		Switch, Spring, Short
18	926-0154	1	/P	Tie, Cable, Push Mount 7.5
19	926-0320	1	/P	Plate, Insulator Nut
20	731-05300A	1		Sleeve, .765 Id x 2.41
21	731-06098	1		Fan, Hydro
22	932-0209	1	/P	Spring, Extension, .48 Od x 2.03
23	732-04606	1		Spring, Extension, .500 Dia x 12.6
24	732-04624	1		Spring, Extension, 1.00 Dia x 4.75
25	732-0716D	1	/P	Spring, Extension, .59 Od x 4.00
26	732-0729	1	/P	Ring, Wire
27	732-3118	1		Spring, Extension, .375 Od x 1.44
28	936-0264	1	/P	Washer, Flat, .330 x .630 x .0635
29	736-04263	1		Washer, Lock, Transmission Hydro
30	936-3008	1	/P	Washer, Flat, .344 x .750 x .120
31	736-3010	1	/P	Washer, Flat, .407x.812x.135, Ht
32	736-0242	1	/P	Washer, Bell, .340 x .872 x .060
33	710-0627	1	/P	Hex Screw, 5/16-24, .750, Gr5, Lock
34	738-04420	1		Spacer, Shoulder, 1.375 x .380 x .183
35	747-04139	1		Rod, Brake, LT Hydro
36	747-04957A	1		Rod, Transmission, Bypass
37	747-04979	1		Rod, Control, Hydro
38	747-04991	1		Rod, Hydro Bypass
39	750-04456	1		Spacer, .260 x .372 x 1.420
40	954-04207	1	/P	Belt, V-Type
41	756-04224	1	/P	Pulley, Idler, Flat 2.75 OD
42	756-04308	1		Pulley, Input, 4.13 Dia
43	756-04325	1	/P	Pulley, Idler, V-Type x 3.06
44	783-06027A	1		Bracket, Idler, Center Double
45	783-06133-0637	1		Bracket, Mount, Hydro
46	783-06260-0637	1		Bracket, Support, Belt Disengage
47	783-1019B	1	/P	Bracket, Actuator, Switch
48	647-04152B	1		Control Assembly, Brake
49	683-04537	1		Bracket Assembly, Pedal, Hydro
50	710-0604A	1	/P	Screw, Self-tapping, 5/16-18, 0.625,
51	711-05068	1		Pin, Clevis, 5/16 x 3.985
52	712-04065	1	/P	Nut, Flange Lock, 3/8-16, Nylon
53	714-04040	1	/P	Pin, Cotter, Bow-Tie 72

SLTX1054VT Tractor
Drive System

Page 3 of 63

Ref #	Part Number	Qty	S/P/F	Description
54	783-06059-0637	1		Bracket, Pedal, Hydro
55	726-0214	1	/P	Cap, Push 5/8
56	732-04587	1		Spring, Extension, .63 Dia x 4.95
57	735-04136	1		Pad, Pedal, Brake
58	736-0242	1	/P	Washer, Bell, .340 x .872 x .060
59	918-04228	1	/P	Hub Assembly, Wheel
60	938-0380	1	/P	Bolt, Shoulder, .500 x .270, 3/8-16
61	741-0495	1	/P	Bearing, Flange, .630 x .695 x .60
62	748-04203	1		Latch, Cruise
63	783-05914	1		Bracket, Support, Pedal Strap
64	783-05940	1		Bracket, Support, Pedal Strap 5/8
65	783-06103A-0637	1		Bracket, Pedal, Brake
66	735-04135	1		Pad, Pedal, Reverse
67	735-04118A	1	/P	Pad, Pedal, Forward

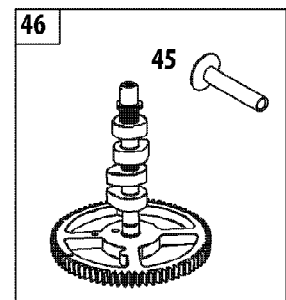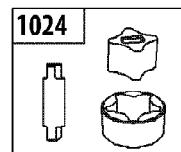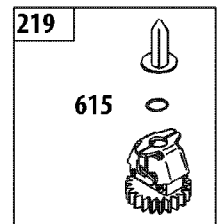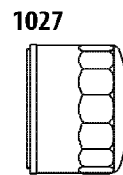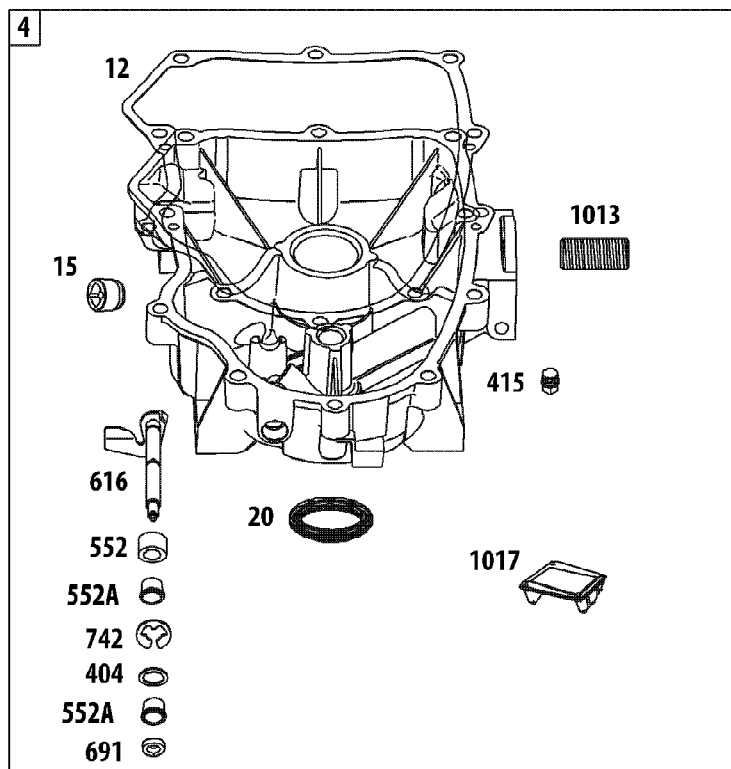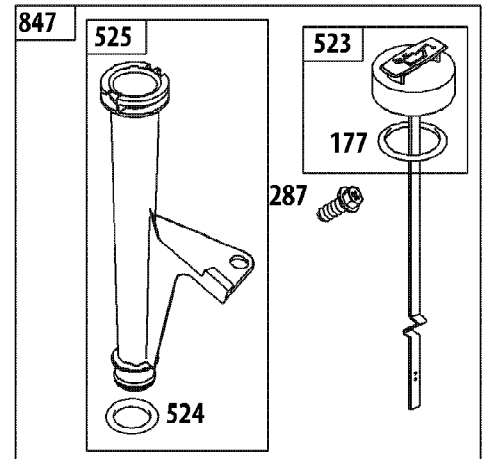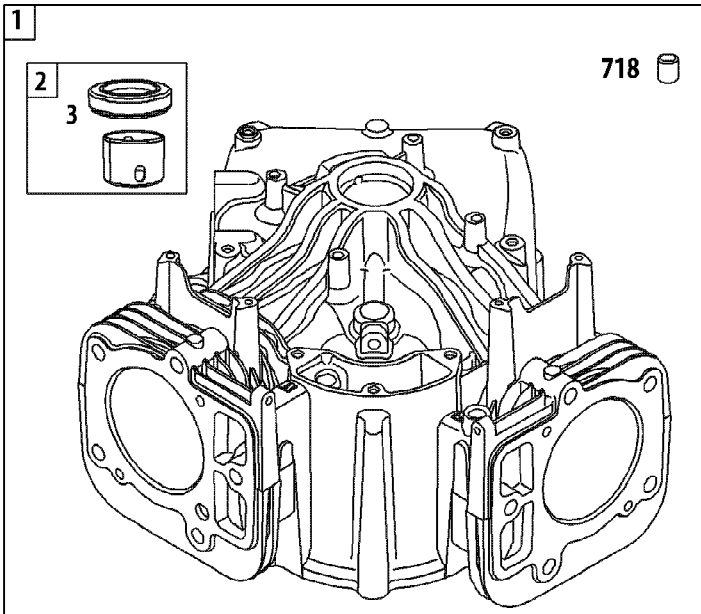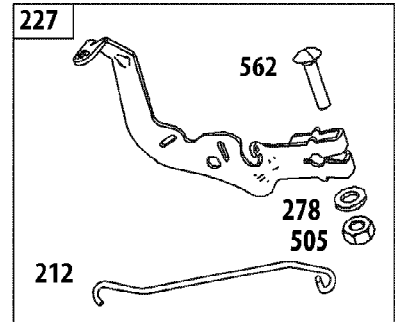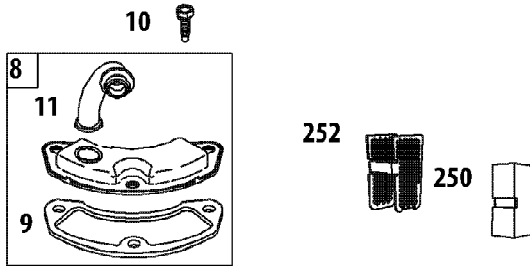

48 Short Block

1329 Replacement Engine

SLTX1054VT Tractor
Engine 44P777-0765-B1 1

Page 6 of 63

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Seal-Oil (Magneto Side)
4	BS-796307	1	/P	Sump-Engine
5	BS-796270	1		Head-Cylinder (Cylinder #1)
5A	BS-796271	1		Head-Cylinder (Cylinder #2)
7	BS-693997	1	/P	Gasket-Cylinder Head
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Gasket-Breather
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Tube-Breather
12	BS-697227	1	/P	Gasket-Crankcase
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Plug-Oil Drain
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Seal-Oil (PTO Side)
22	BS-694966	1	/P	Screw (Crankcase Cover/Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Key-Flywheel
25	BS-793560	1		Piston Assembly (Standard)
25	BS-793563	1		Piston Assembly (.020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-696581	1		Pin-Piston
29	BS-796209	1	/P	Rod-Connecting
32	BS-690976	1		Screw (Connecting Rod)
33	BS-793557	1		Valve-Exhaust
34	BS-793556	1		Valve-Intake
35	BS-694865	1		Spring-Valve (Intake)
36	BS-694865	1		Spring-Valve (Exhaust)
40	BS-690964	1	S	Retainer-Valve
42	BS-499586	1	/P	Keeper-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-792555	1		Gear-Cam
48	BS-698172	1	/P	Short Block
50	BS-695241	1	/P	Manifold-Intake
51	BS-795123	1		Gasket-Intake
51A	BS-690950	1		Gasket-Intake
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Screen-Rotating
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Kit-Idle Speed
104	BS-694918	1		Pin-Float Hinge
105	BS-698537	1		Valve-Float Needle
108	BS-699723	1		Valve-Choke
117	BS-792296	1		Jet-Main (Standard) (Left Jet)
117A	BS-842627	1		Jet-Main (Standard) (Right Jet)
118	BS-699457	1		Jet-Main (High Altitude) (Left Jet)
118A	BS-699733	1		Jet-Main (High Altitude) (Right Jet)

SLTX1054VT Tractor
Engine 44P777-0765-B1 1

Page 7 of 63






Ref #	Part Number	Qty	S/P/F	Description
121	BS-792455	1	S	Kit-Carburetor Overhaul
125	BS-796227	1		Carburetor (Primer System)
130	BS-690993	1		Valve-Throttle
131	BS-499805	1		Kit-Throttle Shaft
133	BS-699724	1		Float-Carburetor
135	BS-699729	1		Tube-Fuel Transfer
137	BS-690994	1		Gasket-Float Bowl
141	BS-796228	1		Kit-Choke Shaft
142	BS-699726	1		Nozzle-Carburetor
146	BS-690979	1	/P	Key-Timing
150	BS-690995	1		Gasket-Nozzle
163	BS-691001	1		Gasket-Air Cleaner
177	BS-691031	1	/P	Seal-O Ring (Dipstick)
186	BS-795985	1		Connector-Hose (Intake Manifold)
187	751-10349-16	1	/P	Line-Fuel (Cut to Required Length)
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Adjuster-Rocker Arm
197	BS-697820	1		Screw (Back Plate)
209	BS-796224	1		Spring-Governor (Yellow/ Black)
211	BS-796225	1		Spring-Governed Idle
212	BS-695238	1		Link-Throttle
216	BS-796229	1		Link-Choke
217	BS-695409	1		Spring-Choke Return
219	BS-793338	1	/P	Gear-Governor
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Cup-Governor
222	BS-796226	1		Bracket-Control
227	BS-796223	1		Lever-Governor Control
239	BS-792028	1		Switch-Oil Pressure
240	BS-691035	1	/P	Filter-Fuel
250	BS-690957	1		Retainer-Breather
252	BS-794389	1		Collector-Oil
265	BS-691024	1	/P	Clamp-Casing
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Washer-Sealing
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-691108	1	/P	Screw (Dipstick Tube)
304	BS-796678	1	S	Housing-Blower
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Shield-Cylinder (Cylinder #2)
307	BS-691003	1	/P	Screw (Cylinder Shield) (Short)
307A	BS-697551	1		Screw (Cylinder Shield) (Long)
309	BS-497595	1	/P	Motor-Starter
310	BS-690323	1		Screw (Starter Motor)
311	BS-497608	1	/P	Brush Set
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Armature-Magneto
334	BS-691061	1		Screw (Magneto Armature)
337	759-3336	1	/P	Plug-Spark
358	BS-694012	1	/P	Gasket Set-Engine
385	BS-697551	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Pump-Fuel

SLTX1054VT Tractor
Engine 44P777-0765-B1 1

Page 8 of 63

Ref #	Part Number	Qty	S/P/F	Description
404	BS-690442	1		Washer (Governor Crank)
415	BS-690283	1		Plug (Oil Pressure Switch Hole)
418	BS-795912	1		Plate-Carburetor
431	BS-792297	1		Elbow-Intake
445	BS-792105	1	/P	Filter-Air Cleaner Cartridge
447	BS-691003	1	/P	Screw (Air Guide Cover) (Short)
447A	BS-697551	1		Screw (Air Guide Cover) (Long)
467	BS-790697	1		Knob-Air Cleaner
474	BS-696457	1	/P	Alternator
501	BS-794360	1	/P	Regulator
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Drive-Starter
513	BS-692024	1	/P	Clutch-Drive
523	BS-691036	1		Dipstick
524	BS-691032	1		Seal-Dipstick Tube
525	BS-691037	1		Tube-Dipstick
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Armature-Starter (Service with Starter Motor 497595, Reference 309)
552	BS-690552	1		Bushing-Governor Crank
552A	BS-690553	1		Bushing-Governor Crank
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Plate-Back
579	BS-691029	1		Nut (Starter Cable)
601	BS-791850	1	/P	Clamp-Hose (Green)
601A	BS-691038	1		Clamp-Hose (Black)
615	BS-698290	1	/P	Retainer-Governor Shaft
616	BS-691045	1		Crank-Governor
617	BS-697891	1		Seal-O Ring (Intake Manifold) Red)
628	BS-697551	1		Screw (Fuel Pump Bracket)
633	BS-699813	1		Seal-Choke/Throttle Shaft Choke Shaft)
635	BS-66538s	1	/P	Boot-Spark Plug
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen)
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Gasket-Carburetor Plate
691	BS-790574	1		Seal-Governor Shaft
697	BS-791680	1	/P	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Pin-Locating
729	BS-694123	1		Clip-Wire
741	BS-690980	1		Gear-Timing
742	BS-690328	1	/P	Retainer-E Ring (Governor Crank)
750	BS-796208	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Gear-Pinion
788	BS-793145	1		Bracket-Fuel Pump
789	BS-696576	1		Harness-Wiring
797	BS-693167	1		Nut (Brush Retainer)
798	BS-697890	1		Screw (Rocker Arm)
801	BS-691283	1		Cap-Drive
802	BS-691286	1	/P	Cap-End

Ref #	Part Number	Qty	S/P/F	Description
803	N/A	1		Housing-Starter (Service with Starter Motor 497595, Reference 309)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
865	BS-691012	1		Cover-Air Guide (Cylinder #1)
865A	BS-792286	1		Cover-Air Guide (Valley)
868	BS-690968	1	/P	Seal-Valve
877	BS-790544	1		Wire/Connector-Alternator
883	BS-690970	1	/P	Gasket-Exhaust
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-793147	1		Hose-Vacuum
943	BS-796222	1		Seal-O Ring (Oil Pump Cover)
947	BS-841546	1		Solenoid-Fuel
965	BS-796221	1		Cover-Oil Pump
968	BS-795120	1	/P	Cover-Air Cleaner
975	BS-793592	1		Bowl-Float
987	BS-691000	1		Seal-Throttle Shaft
1005	BS-791236	1		Fan-Flywheel
1013	BS-690954	1	/P	Nipple-Oil Filter
1017	BS-690770	1		Screen-Oil Pump
1022	BS-690971	1	/P	Gasket-Rocker Cover
1023	BS-793146	1		Cover-Rocker (Cylinder #1)
1023A	BS-499600	1		Cover-Rocker (Cylinder #2)
1024	BS-796220	1		Pump-Oil
1026	BS-690981	1	/P	Rod-Push (Steel)
1026A	BS-690982	1	/P	Rod-Push (Aluminum)
1027	BS-696854	1	/P	Filter-Oil
1029	BS-690972	1		Arm-Rocker
1036	N/A	1		Label-Emissions (Available WHEEL-4.80/4.00)
1040	BS-791237	1		Plate-Trim
1051	BS-691265	1	/P	Ring-Retaining (Starter Drive)
1054	BS-280275	1		Tie-Cable
1059	BS-698516	1		Kit-Screw/Washer (Alternator)
1070	BS-791680	1	/P	Screw (Flywheel Fan)
1090	BS-691293	1	/P	Retainer-Brush
1095	BS-694013	1	/P	Gasket Set-Valve
1100	BS-791959	1		Pivot-Rocker Arm
1119	BS-93621	1	/P	Screw (Alternator)
1123	BS-841653	1		Seal-O Ring (Solenoid Retainer)
1124	BS-841653	1		Seal-O Ring (Fuel Transfer Tube)
1126	BS-690991	1		Screw (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Bowl)
1128	BS-690990	1		Screw (Carburetor Nozzle)
1169	BS-690990	1		Screw (Carburetor Cover Plate)
1329	BS-44Q777-0037	1	S	Replacement Engine

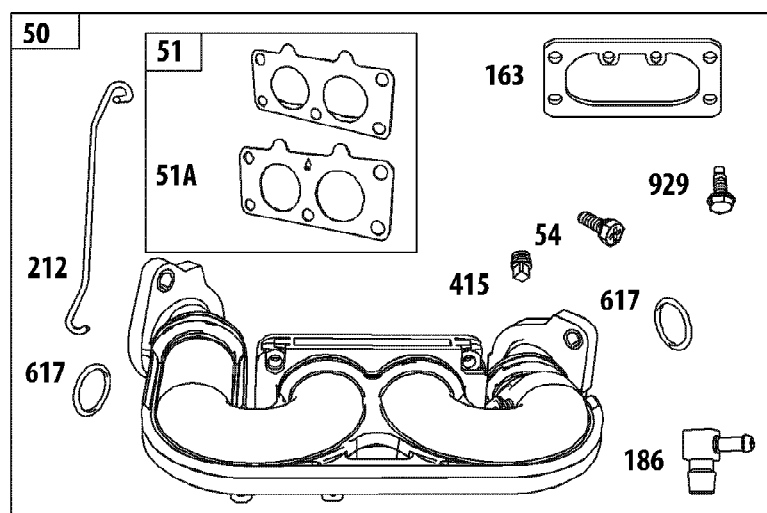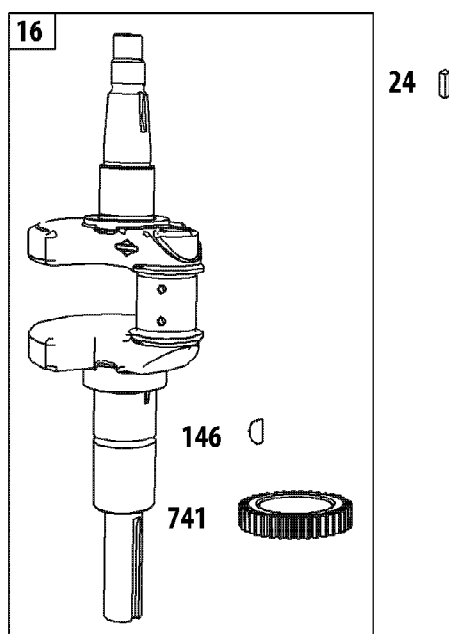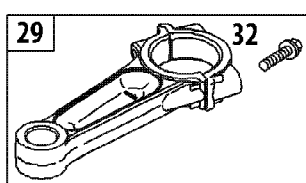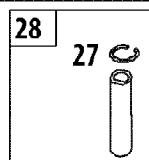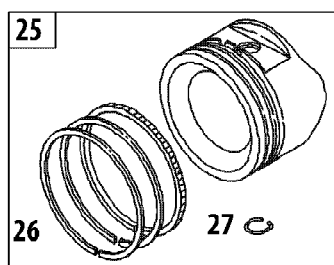

SLTX1054VT Tractor
Engine 44P777-0765-B1 2

Page 11 of 63

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Seal-Oil (Magneto Side)
4	BS-796307	1	/P	Sump-Engine
5	BS-796270	1		Head-Cylinder (Cylinder #1)
5A	BS-796271	1		Head-Cylinder (Cylinder #2)
7	BS-693997	1	/P	Gasket-Cylinder Head
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Gasket-Breather
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Tube-Breather
12	BS-697227	1	/P	Gasket-Crankcase
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Plug-Oil Drain
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Seal-Oil (PTO Side)
22	BS-694966	1	/P	Screw (Crankcase Cover/Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Key-Flywheel
25	BS-793560	1		Piston Assembly (Standard)
25	BS-793563	1		Piston Assembly (.020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-696581	1		Pin-Piston
29	BS-796209	1	/P	Rod-Connecting
32	BS-690976	1		Screw (Connecting Rod)
33	BS-793557	1		Valve-Exhaust
34	BS-793556	1		Valve-Intake
35	BS-694865	1		Spring-Valve (Intake)
36	BS-694865	1		Spring-Valve (Exhaust)
40	BS-690964	1	S	Retainer-Valve
42	BS-499586	1	/P	Keeper-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-792555	1		Gear-Cam
48	BS-698172	1	/P	Short Block
50	BS-695241	1	/P	Manifold-Intake
51	BS-795123	1		Gasket-Intake
51A	BS-690950	1		Gasket-Intake
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Screen-Rotating
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Kit-Idle Speed
104	BS-694918	1		Pin-Float Hinge
105	BS-698537	1		Valve-Float Needle
108	BS-699723	1		Valve-Choke
117	BS-792296	1		Jet-Main (Standard) (Left Jet)
117A	BS-842627	1		Jet-Main (Standard) (Right Jet)
118	BS-699457	1		Jet-Main (High Altitude) (Left Jet)
118A	BS-699733	1		Jet-Main (High Altitude) (Right Jet)

SLTX1054VT Tractor
Engine 44P777-0765-B1 2

Page 12 of 63

Ref #	Part Number	Qty	S/P/F	Description
121	BS-792455	1	S	Kit-Carburetor Overhaul
125	BS-796227	1		Carburetor (Primer System)
130	BS-690993	1		Valve-Throttle
131	BS-499805	1		Kit-Throttle Shaft
133	BS-699724	1		Float-Carburetor
135	BS-699729	1		Tube-Fuel Transfer
137	BS-690994	1		Gasket-Float Bowl
141	BS-796228	1		Kit-Choke Shaft
142	BS-699726	1		Nozzle-Carburetor
146	BS-690979	1	/P	Key-Timing
150	BS-690995	1		Gasket-Nozzle
163	BS-691001	1		Gasket-Air Cleaner
177	BS-691031	1	/P	Seal-O Ring (Dipstick)
186	BS-795985	1		Connector-Hose (Intake Manifold)
187	751-10349-16	1	/P	Line-Fuel (Cut to Required Length)
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Adjuster-Rocker Arm
197	BS-697820	1		Screw (Back Plate)
209	BS-796224	1		Spring-Governor (Yellow/ Black)
211	BS-796225	1		Spring-Governed Idle
212	BS-695238	1		Link-Throttle
216	BS-796229	1		Link-Choke
217	BS-695409	1		Spring-Choke Return
219	BS-793338	1	/P	Gear-Governor
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Cup-Governor
222	BS-796226	1		Bracket-Control
227	BS-796223	1		Lever-Governor Control
239	BS-792028	1		Switch-Oil Pressure
240	BS-691035	1	/P	Filter-Fuel
250	BS-690957	1		Retainer-Breather
252	BS-794389	1		Collector-Oil
265	BS-691024	1	/P	Clamp-Casing
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Washer-Sealing
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-691108	1	/P	Screw (Dipstick Tube)
304	BS-796678	1	S	Housing-Blower
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Shield-Cylinder (Cylinder #2)
307	BS-691003	1	/P	Screw (Cylinder Shield) (Short)
307A	BS-697551	1		Screw (Cylinder Shield) (Long)
309	BS-497595	1	/P	Motor-Starter
310	BS-690323	1		Screw (Starter Motor)
311	BS-497608	1	/P	Brush Set
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Armature-Magneto
334	BS-691061	1		Screw (Magneto Armature)
337	759-3336	1	/P	Plug-Spark
358	BS-694012	1	/P	Gasket Set-Engine
385	BS-697551	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Pump-Fuel






SLTX1054VT Tractor
Engine 44P777-0765-B1 2

Page 13 of 63

Ref #	Part Number	Qty	S/P/F	Description
404	BS-690442	1		Washer (Governor Crank)
415	BS-690283	1		Plug (Oil Pressure Switch Hole)
418	BS-795912	1		Plate-Carburetor
431	BS-792297	1		Elbow-Intake
445	BS-792105	1	/P	Filter-Air Cleaner Cartridge
447	BS-691003	1	/P	Screw (Air Guide Cover) (Short)
447A	BS-697551	1		Screw (Air Guide Cover) (Long)
467	BS-790697	1		Knob-Air Cleaner
474	BS-696457	1	/P	Alternator
501	BS-794360	1	/P	Regulator
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Drive-Starter
513	BS-692024	1	/P	Clutch-Drive
523	BS-691036	1		Dipstick
524	BS-691032	1		Seal-Dipstick Tube
525	BS-691037	1		Tube-Dipstick
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Armature-Starter (Service with Starter Motor 497595, Reference 309)
552	BS-690552	1		Bushing-Governor Crank
552A	BS-690553	1		Bushing-Governor Crank
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Plate-Back
579	BS-691029	1		Nut (Starter Cable)
601	BS-791850	1	/P	Clamp-Hose (Green)
601A	BS-691038	1		Clamp-Hose (Black)
615	BS-698290	1	/P	Retainer-Governor Shaft
616	BS-691045	1		Crank-Governor
617	BS-697891	1		Seal-O Ring (Intake Manifold) Red)
628	BS-697551	1		Screw (Fuel Pump Bracket)
633	BS-699813	1		Seal-Choke/Throttle Shaft Choke Shaft)
635	BS-66538s	1	/P	Boot-Spark Plug
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen)
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Gasket-Carburetor Plate
691	BS-790574	1		Seal-Governor Shaft
697	BS-791680	1	/P	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Pin-Locating
729	BS-694123	1		Clip-Wire
741	BS-690980	1		Gear-Timing
742	BS-690328	1	/P	Retainer-E Ring (Governor Crank)
750	BS-796208	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Gear-Pinion
788	BS-793145	1		Bracket-Fuel Pump
789	BS-696576	1		Harness-Wiring
797	BS-693167	1		Nut (Brush Retainer)
798	BS-697890	1		Screw (Rocker Arm)
801	BS-691283	1		Cap-Drive
802	BS-691286	1	/P	Cap-End

SLTX1054VT Tractor
 Engine 44P777-0765-B1 2

Ref #	Part Number	Qty	S/P/F	Description
803	N/A	1		Housing-Starter (Service with Starter Motor 497595, Reference 309)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
865	BS-691012	1		Cover-Air Guide (Cylinder #1)
865A	BS-792286	1		Cover-Air Guide (Valley)
868	BS-690968	1	/P	Seal-Valve
877	BS-790544	1		Wire/Connector-Alternator
883	BS-690970	1	/P	Gasket-Exhaust
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-793147	1		Hose-Vacuum
943	BS-796222	1		Seal-O Ring (Oil Pump Cover)
947	BS-841546	1		Solenoid-Fuel
965	BS-796221	1		Cover-Oil Pump
968	BS-795120	1	/P	Cover-Air Cleaner
975	BS-793592	1		Bowl-Float
987	BS-691000	1		Seal-Throttle Shaft
1005	BS-791236	1		Fan-Flywheel
1013	BS-690954	1	/P	Nipple-Oil Filter
1017	BS-690770	1		Screen-Oil Pump
1022	BS-690971	1	/P	Gasket-Rocker Cover
1023	BS-793146	1		Cover-Rocker (Cylinder #1)
1023A	BS-499600	1		Cover-Rocker (Cylinder #2)
1024	BS-796220	1		Pump-Oil
1026	BS-690981	1	/P	Rod-Push (Steel)
1026A	BS-690982	1	/P	Rod-Push (Aluminum)
1027	BS-696854	1	/P	Filter-Oil
1029	BS-690972	1		Arm-Rocker
1036	N/A	1		Label-Emissions (Available
1040	BS-791237	1		WHEEL-4.80/4.00
1051	BS-691265	1	/P	Plate-Trim
1054	BS-280275	1		Ring-Retaining (Starter Drive)
1059	BS-698516	1		Tie-Cable
1070	BS-791680	1	/P	Kit-Screw/Washer (Alternator)
1090	BS-691293	1	/P	Screw (Flywheel Fan)
1095	BS-694013	1	/P	Retainer-Brush
1100	BS-791959	1		Gasket Set-Valve
1119	BS-93621	1	/P	Pivot-Rocker Arm
1123	BS-841653	1		Screw (Alternator)
1124	BS-841653	1		Seal-O Ring (Solenoid Retainer)
1126	BS-690991	1		Seal-O Ring (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Transfer Tube)
1128	BS-690990	1		Screw (Fuel Bowl)
1169	BS-690990	1		Screw (Carburetor Nozzle)
1329	BS-44Q777-0037	1	S	Screw (Carburetor Cover Plate)
				Replacement Engine

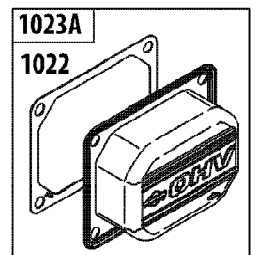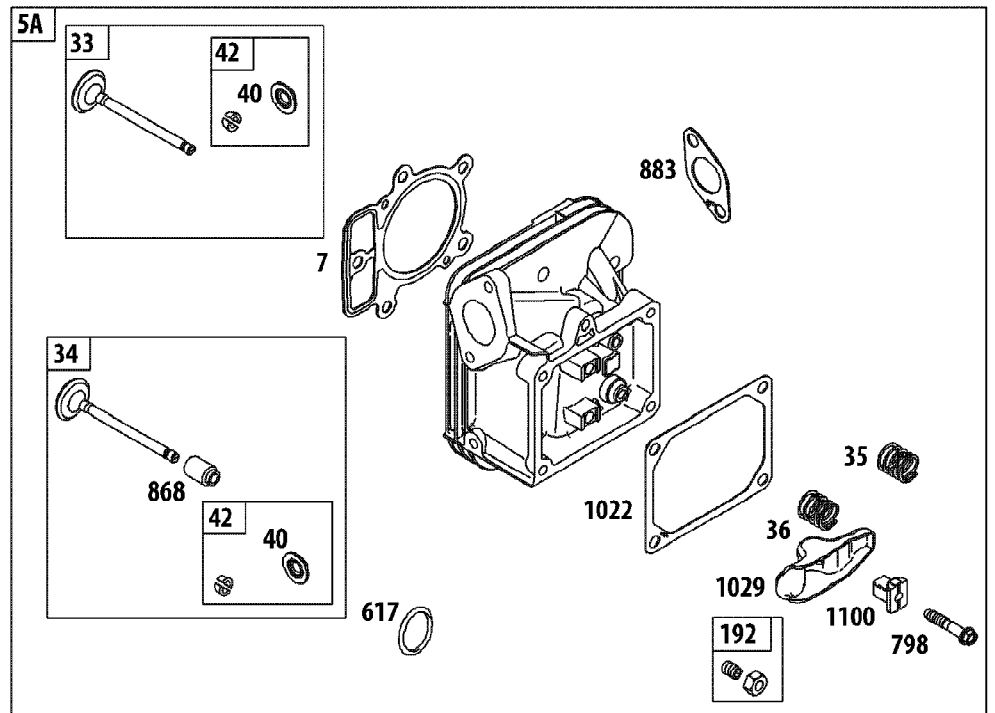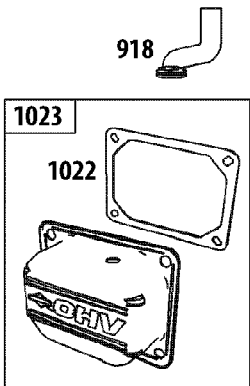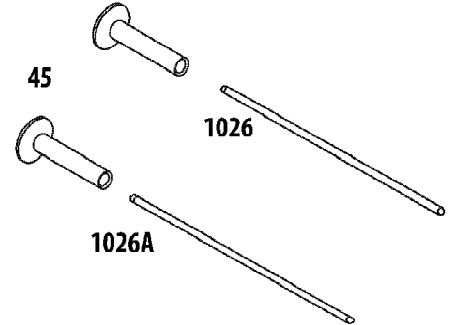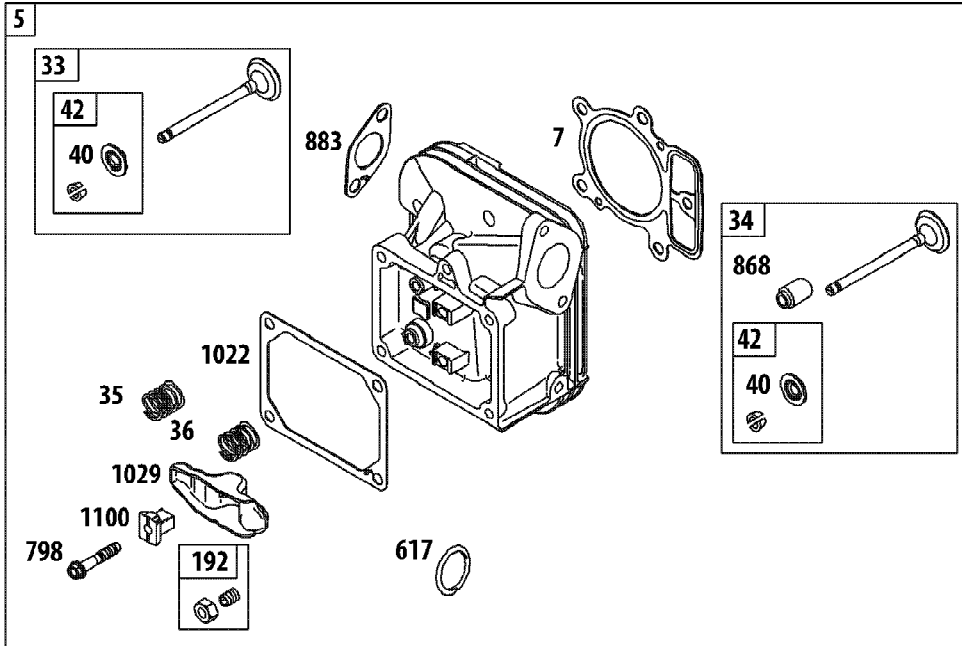

SLTX1054VT Tractor
Engine 44P777-0765-B1 3

Page 16 of 63

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Seal-Oil (Magneto Side)
4	BS-796307	1	/P	Sump-Engine
5	BS-796270	1		Head-Cylinder (Cylinder #1)
5A	BS-796271	1		Head-Cylinder (Cylinder #2)
7	BS-693997	1	/P	Gasket-Cylinder Head
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Gasket-Breather
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Tube-Breather
12	BS-697227	1	/P	Gasket-Crankcase
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Plug-Oil Drain
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Seal-Oil (PTO Side)
22	BS-694966	1	/P	Screw (Crankcase Cover/Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Key-Flywheel
25	BS-793560	1		Piston Assembly (Standard)
25	BS-793563	1		Piston Assembly (.020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-696581	1		Pin-Piston
29	BS-796209	1	/P	Rod-Connecting
32	BS-690976	1		Screw (Connecting Rod)
33	BS-793557	1		Valve-Exhaust
34	BS-793556	1		Valve-Intake
35	BS-694865	1		Spring-Valve (Intake)
36	BS-694865	1		Spring-Valve (Exhaust)
40	BS-690964	1	S	Retainer-Valve
42	BS-499586	1	/P	Keeper-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-792555	1		Gear-Cam
48	BS-698172	1	/P	Short Block
50	BS-695241	1	/P	Manifold-Intake
51	BS-795123	1		Gasket-Intake
51A	BS-690950	1		Gasket-Intake
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Screen-Rotating
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Kit-Idle Speed
104	BS-694918	1		Pin-Float Hinge
105	BS-698537	1		Valve-Float Needle
108	BS-699723	1		Valve-Choke
117	BS-792296	1		Jet-Main (Standard) (Left Jet)
117A	BS-842627	1		Jet-Main (Standard) (Right Jet)
118	BS-699457	1		Jet-Main (High Altitude) (Left Jet)
118A	BS-699733	1		Jet-Main (High Altitude) (Right Jet)

SLTX1054VT Tractor
Engine 44P777-0765-B1 3

Page 17 of 63

Ref #	Part Number	Qty	S/P/F	Description
121	BS-792455	1	S	Kit-Carburetor Overhaul
125	BS-796227	1		Carburetor (Primer System)
130	BS-690993	1		Valve-Throttle
131	BS-499805	1		Kit-Throttle Shaft
133	BS-699724	1		Float-Carburetor
135	BS-699729	1		Tube-Fuel Transfer
137	BS-690994	1		Gasket-Float Bowl
141	BS-796228	1		Kit-Choke Shaft
142	BS-699726	1		Nozzle-Carburetor
146	BS-690979	1	/P	Key-Timing
150	BS-690995	1		Gasket-Nozzle
163	BS-691001	1		Gasket-Air Cleaner
177	BS-691031	1	/P	Seal-O Ring (Dipstick)
186	BS-795985	1		Connector-Hose (Intake Manifold)
187	751-10349-16	1	/P	Line-Fuel (Cut to Required Length)
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Adjuster-Rocker Arm
197	BS-697820	1		Screw (Back Plate)
209	BS-796224	1		Spring-Governor (Yellow/ Black)
211	BS-796225	1		Spring-Governed Idle
212	BS-695238	1		Link-Throttle
216	BS-796229	1		Link-Choke
217	BS-695409	1		Spring-Choke Return
219	BS-793338	1	/P	Gear-Governor
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Cup-Governor
222	BS-796226	1		Bracket-Control
227	BS-796223	1		Lever-Governor Control
239	BS-792028	1		Switch-Oil Pressure
240	BS-691035	1	/P	Filter-Fuel
250	BS-690957	1		Retainer-Breather
252	BS-794389	1		Collector-Oil
265	BS-691024	1	/P	Clamp-Casing
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Washer-Sealing
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-691108	1	/P	Screw (Dipstick Tube)
304	BS-796678	1	S	Housing-Blower
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Shield-Cylinder (Cylinder #2)
307	BS-691003	1	/P	Screw (Cylinder Shield) (Short)
307A	BS-697551	1		Screw (Cylinder Shield) (Long)
309	BS-497595	1	/P	Motor-Starter
310	BS-690323	1		Screw (Starter Motor)
311	BS-497608	1	/P	Brush Set
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Armature-Magneto
334	BS-691061	1		Screw (Magneto Armature)
337	759-3336	1	/P	Plug-Spark
358	BS-694012	1	/P	Gasket Set-Engine
385	BS-697551	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Pump-Fuel





SLTX1054VT Tractor
Engine 44P777-0765-B1 3

Page 18 of 63

Ref #	Part Number	Qty	S/P/F	Description
404	BS-690442	1		Washer (Governor Crank)
415	BS-690283	1		Plug (Oil Pressure Switch Hole)
418	BS-795912	1		Plate-Carburetor
431	BS-792297	1		Elbow-Intake
445	BS-792105	1	/P	Filter-Air Cleaner Cartridge
447	BS-691003	1	/P	Screw (Air Guide Cover) (Short)
447A	BS-697551	1		Screw (Air Guide Cover) (Long)
467	BS-790697	1		Knob-Air Cleaner
474	BS-696457	1	/P	Alternator
501	BS-794360	1	/P	Regulator
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Drive-Starter
513	BS-692024	1	/P	Clutch-Drive
523	BS-691036	1		Dipstick
524	BS-691032	1		Seal-Dipstick Tube
525	BS-691037	1		Tube-Dipstick
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Armature-Starter (Service with Starter Motor 497595, Reference 309)
552	BS-690552	1		Bushing-Governor Crank
552A	BS-690553	1		Bushing-Governor Crank
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Plate-Back
579	BS-691029	1		Nut (Starter Cable)
601	BS-791850	1	/P	Clamp-Hose (Green)
601A	BS-691038	1		Clamp-Hose (Black)
615	BS-698290	1	/P	Retainer-Governor Shaft
616	BS-691045	1		Crank-Governor
617	BS-697891	1		Seal-O Ring (Intake Manifold) Red)
628	BS-697551	1		Screw (Fuel Pump Bracket)
633	BS-699813	1		Seal-Choke/Throttle Shaft Choke Shaft)
635	BS-66538s	1	/P	Boot-Spark Plug
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen)
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Gasket-Carburetor Plate
691	BS-790574	1		Seal-Governor Shaft
697	BS-791680	1	/P	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Pin-Locating
729	BS-694123	1		Clip-Wire
741	BS-690980	1		Gear-Timing
742	BS-690328	1	/P	Retainer-E Ring (Governor Crank)
750	BS-796208	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Gear-Pinion
788	BS-793145	1		Bracket-Fuel Pump
789	BS-696576	1		Harness-Wiring
797	BS-693167	1		Nut (Brush Retainer)
798	BS-697890	1		Screw (Rocker Arm)
801	BS-691283	1		Cap-Drive
802	BS-691286	1	/P	Cap-End

SLTX1054VT Tractor
 Engine 44P777-0765-B1 3

Ref #	Part Number	Qty	S/P/F	Description
803	N/A	1		Housing-Starter (Service with Starter Motor 497595, Reference 309)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
865	BS-691012	1		Cover-Air Guide (Cylinder #1)
865A	BS-792286	1		Cover-Air Guide (Valley)
868	BS-690968	1	/P	Seal-Valve
877	BS-790544	1		Wire/Connector-Alternator
883	BS-690970	1	/P	Gasket-Exhaust
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-793147	1		Hose-Vacuum
943	BS-796222	1		Seal-O Ring (Oil Pump Cover)
947	BS-841546	1		Solenoid-Fuel
965	BS-796221	1		Cover-Oil Pump
968	BS-795120	1	/P	Cover-Air Cleaner
975	BS-793592	1		Bowl-Float
987	BS-691000	1		Seal-Throttle Shaft
1005	BS-791236	1		Fan-Flywheel
1013	BS-690954	1	/P	Nipple-Oil Filter
1017	BS-690770	1		Screen-Oil Pump
1022	BS-690971	1	/P	Gasket-Rocker Cover
1023	BS-793146	1		Cover-Rocker (Cylinder #1)
1023A	BS-499600	1		Cover-Rocker (Cylinder #2)
1024	BS-796220	1		Pump-Oil
1026	BS-690981	1	/P	Rod-Push (Steel)
1026A	BS-690982	1	/P	Rod-Push (Aluminum)
1027	BS-696854	1	/P	Filter-Oil
1029	BS-690972	1		Arm-Rocker
1036	N/A	1		Label-Emissions (Available
1040	BS-791237	1		WHEEL-4.80/4.00
1051	BS-691265	1	/P	Plate-Trim
1054	BS-280275	1		Ring-Retaining (Starter Drive)
1059	BS-698516	1		Tie-Cable
1070	BS-791680	1	/P	Kit-Screw/Washer (Alternator)
1090	BS-691293	1	/P	Screw (Flywheel Fan)
1095	BS-694013	1	/P	Retainer-Brush
1100	BS-791959	1		Gasket Set-Valve
1119	BS-93621	1	/P	Pivot-Rocker Arm
1123	BS-841653	1		Screw (Alternator)
1124	BS-841653	1		Seal-O Ring (Solenoid Retainer)
1126	BS-690991	1		Seal-O Ring (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Transfer Tube)
1128	BS-690990	1		Screw (Fuel Bowl)
1169	BS-690990	1		Screw (Carburetor Nozzle)
1329	BS-44Q777-0037	1	S	Screw (Carburetor Cover Plate)
				Replacement Engine

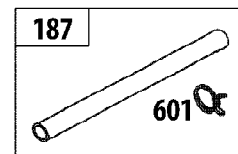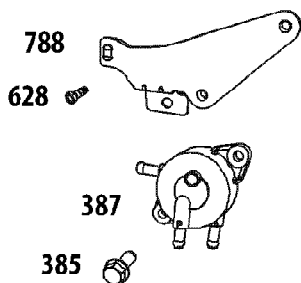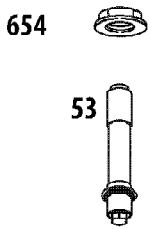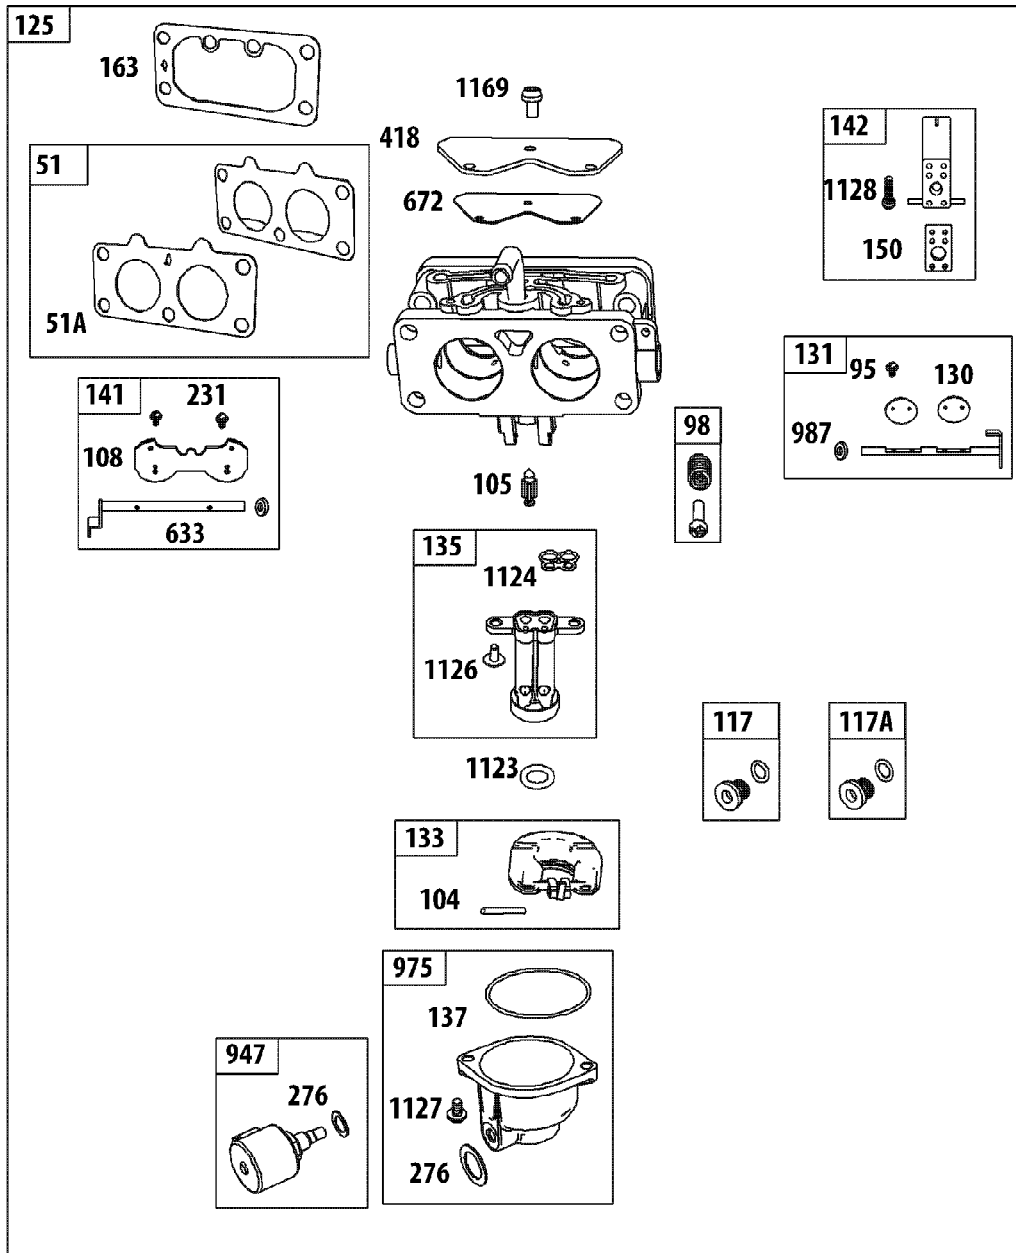

SLTX1054VT Tractor
Engine 44P777-0765-B1 4

Page 21 of 63

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Seal-Oil (Magneto Side)
4	BS-796307	1	/P	Sump-Engine
5	BS-796270	1		Head-Cylinder (Cylinder #1)
5A	BS-796271	1		Head-Cylinder (Cylinder #2)
7	BS-693997	1	/P	Gasket-Cylinder Head
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Gasket-Breather
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Tube-Breather
12	BS-697227	1	/P	Gasket-Crankcase
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Plug-Oil Drain
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Seal-Oil (PTO Side)
22	BS-694966	1	/P	Screw (Crankcase Cover/Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Key-Flywheel
25	BS-793560	1		Piston Assembly (Standard)
25	BS-793563	1		Piston Assembly (.020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-696581	1		Pin-Piston
29	BS-796209	1	/P	Rod-Connecting
32	BS-690976	1		Screw (Connecting Rod)
33	BS-793557	1		Valve-Exhaust
34	BS-793556	1		Valve-Intake
35	BS-694865	1		Spring-Valve (Intake)
36	BS-694865	1		Spring-Valve (Exhaust)
40	BS-690964	1	S	Retainer-Valve
42	BS-499586	1	/P	Keeper-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-792555	1		Gear-Cam
48	BS-698172	1	/P	Short Block
50	BS-695241	1	/P	Manifold-Intake
51	BS-795123	1		Gasket-Intake
51A	BS-690950	1		Gasket-Intake
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Screen-Rotating
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Kit-Idle Speed
104	BS-694918	1		Pin-Float Hinge
105	BS-698537	1		Valve-Float Needle
108	BS-699723	1		Valve-Choke
117	BS-792296	1		Jet-Main (Standard) (Left Jet)
117A	BS-842627	1		Jet-Main (Standard) (Right Jet)
118	BS-699457	1		Jet-Main (High Altitude) (Left Jet)
118A	BS-699733	1		Jet-Main (High Altitude) (Right Jet)

SLTX1054VT Tractor
Engine 44P777-0765-B1 4

Page 22 of 63

Ref #	Part Number	Qty	S/P/F	Description
121	BS-792455	1	S	Kit-Carburetor Overhaul
125	BS-796227	1		Carburetor (Primer System)
130	BS-690993	1		Valve-Throttle
131	BS-499805	1		Kit-Throttle Shaft
133	BS-699724	1		Float-Carburetor
135	BS-699729	1		Tube-Fuel Transfer
137	BS-690994	1		Gasket-Float Bowl
141	BS-796228	1		Kit-Choke Shaft
142	BS-699726	1		Nozzle-Carburetor
146	BS-690979	1	/P	Key-Timing
150	BS-690995	1		Gasket-Nozzle
163	BS-691001	1		Gasket-Air Cleaner
177	BS-691031	1	/P	Seal-O Ring (Dipstick)
186	BS-795985	1		Connector-Hose (Intake Manifold)
187	751-10349-16	1	/P	Line-Fuel (Cut to Required Length)
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Adjuster-Rocker Arm
197	BS-697820	1		Screw (Back Plate)
209	BS-796224	1		Spring-Governor (Yellow/ Black)
211	BS-796225	1		Spring-Governed Idle
212	BS-695238	1		Link-Throttle
216	BS-796229	1		Link-Choke
217	BS-695409	1		Spring-Choke Return
219	BS-793338	1	/P	Gear-Governor
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Cup-Governor
222	BS-796226	1		Bracket-Control
227	BS-796223	1		Lever-Governor Control
239	BS-792028	1		Switch-Oil Pressure
240	BS-691035	1	/P	Filter-Fuel
250	BS-690957	1		Retainer-Breather
252	BS-794389	1		Collector-Oil
265	BS-691024	1	/P	Clamp-Casing
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Washer-Sealing
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-691108	1	/P	Screw (Dipstick Tube)
304	BS-796678	1	S	Housing-Blower
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Shield-Cylinder (Cylinder #2)
307	BS-691003	1	/P	Screw (Cylinder Shield) (Short)
307A	BS-697551	1		Screw (Cylinder Shield) (Long)
309	BS-497595	1	/P	Motor-Starter
310	BS-690323	1		Screw (Starter Motor)
311	BS-497608	1	/P	Brush Set
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Armature-Magneto
334	BS-691061	1		Screw (Magneto Armature)
337	759-3336	1	/P	Plug-Spark
358	BS-694012	1	/P	Gasket Set-Engine
385	BS-697551	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Pump-Fuel

SLTX1054VT Tractor
Engine 44P777-0765-B1 4











Page 23 of 63

Ref #	Part Number	Qty	S/P/F	Description
404	BS-690442	1		Washer (Governor Crank)
415	BS-690283	1		Plug (Oil Pressure Switch Hole)
418	BS-795912	1		Plate-Carburetor
431	BS-792297	1		Elbow-Intake
445	BS-792105	1	/P	Filter-Air Cleaner Cartridge
447	BS-691003	1	/P	Screw (Air Guide Cover) (Short)
447A	BS-697551	1		Screw (Air Guide Cover) (Long)
467	BS-790697	1		Knob-Air Cleaner
474	BS-696457	1	/P	Alternator
501	BS-794360	1	/P	Regulator
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Drive-Starter
513	BS-692024	1	/P	Clutch-Drive
523	BS-691036	1		Dipstick
524	BS-691032	1		Seal-Dipstick Tube
525	BS-691037	1		Tube-Dipstick
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Armature-Starter (Service with Starter Motor 497595, Reference 309)
552	BS-690552	1		Bushing-Governor Crank
552A	BS-690553	1		Bushing-Governor Crank
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Plate-Back
579	BS-691029	1		Nut (Starter Cable)
601	BS-791850	1	/P	Clamp-Hose (Green)
601A	BS-691038	1		Clamp-Hose (Black)
615	BS-698290	1	/P	Retainer-Governor Shaft
616	BS-691045	1		Crank-Governor
617	BS-697891	1		Seal-O Ring (Intake Manifold) Red)
628	BS-697551	1		Screw (Fuel Pump Bracket)
633	BS-699813	1		Seal-Choke/Throttle Shaft Choke Shaft)
635	BS-66538s	1	/P	Boot-Spark Plug
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen)
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Gasket-Carburetor Plate
691	BS-790574	1		Seal-Governor Shaft
697	BS-791680	1	/P	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Pin-Locating
729	BS-694123	1		Clip-Wire
741	BS-690980	1		Gear-Timing
742	BS-690328	1	/P	Retainer-E Ring (Governor Crank)
750	BS-796208	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Gear-Pinion
788	BS-793145	1		Bracket-Fuel Pump
789	BS-696576	1		Harness-Wiring
797	BS-693167	1		Nut (Brush Retainer)
798	BS-697890	1		Screw (Rocker Arm)
801	BS-691283	1		Cap-Drive
802	BS-691286	1	/P	Cap-End

SLTX1054VT Tractor
 Engine 44P777-0765-B1 4

Ref #	Part Number	Qty	S/P/F	Description
803	N/A	1		Housing-Starter (Service with Starter Motor 497595, Reference 309)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
865	BS-691012	1		Cover-Air Guide (Cylinder #1)
865A	BS-792286	1		Cover-Air Guide (Valley)
868	BS-690968	1	/P	Seal-Valve
877	BS-790544	1		Wire/Connector-Alternator
883	BS-690970	1	/P	Gasket-Exhaust
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-793147	1		Hose-Vacuum
943	BS-796222	1		Seal-O Ring (Oil Pump Cover)
947	BS-841546	1		Solenoid-Fuel
965	BS-796221	1		Cover-Oil Pump
968	BS-795120	1	/P	Cover-Air Cleaner
975	BS-793592	1		Bowl-Float
987	BS-691000	1		Seal-Throttle Shaft
1005	BS-791236	1		Fan-Flywheel
1013	BS-690954	1	/P	Nipple-Oil Filter
1017	BS-690770	1		Screen-Oil Pump
1022	BS-690971	1	/P	Gasket-Rocker Cover
1023	BS-793146	1		Cover-Rocker (Cylinder #1)
1023A	BS-499600	1		Cover-Rocker (Cylinder #2)
1024	BS-796220	1		Pump-Oil
1026	BS-690981	1	/P	Rod-Push (Steel)
1026A	BS-690982	1	/P	Rod-Push (Aluminum)
1027	BS-696854	1	/P	Filter-Oil
1029	BS-690972	1		Arm-Rocker
1036	N/A	1		Label-Emissions (Available
1040	BS-791237	1		WHEEL-4.80/4.00
1051	BS-691265	1	/P	Plate-Trim
1054	BS-280275	1		Ring-Retaining (Starter Drive)
1059	BS-698516	1		Tie-Cable
1070	BS-791680	1	/P	Kit-Screw/Washer (Alternator)
1090	BS-691293	1	/P	Screw (Flywheel Fan)
1095	BS-694013	1	/P	Retainer-Brush
1100	BS-791959	1		Gasket Set-Valve
1119	BS-93621	1	/P	Pivot-Rocker Arm
1123	BS-841653	1		Screw (Alternator)
1124	BS-841653	1		Seal-O Ring (Solenoid Retainer)
1126	BS-690991	1		Seal-O Ring (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Transfer Tube)
1128	BS-690990	1		Screw (Fuel Bowl)
1169	BS-690990	1		Screw (Carburetor Nozzle)
1329	BS-44Q777-0037	1	S	Screw (Carburetor Cover Plate)
				Replacement Engine

  1036 Emissions Label

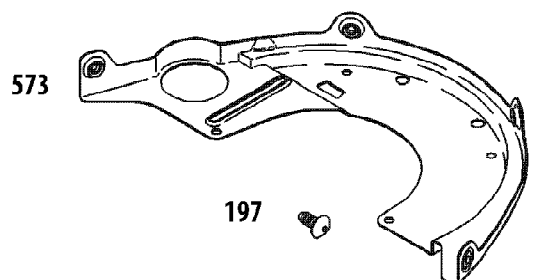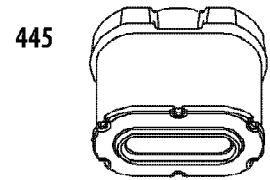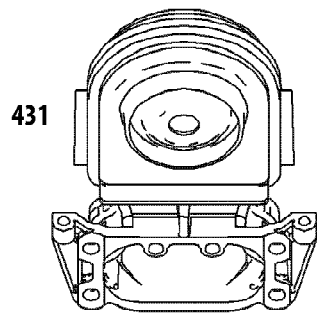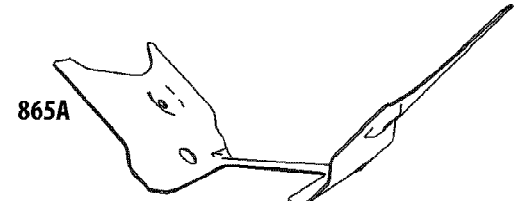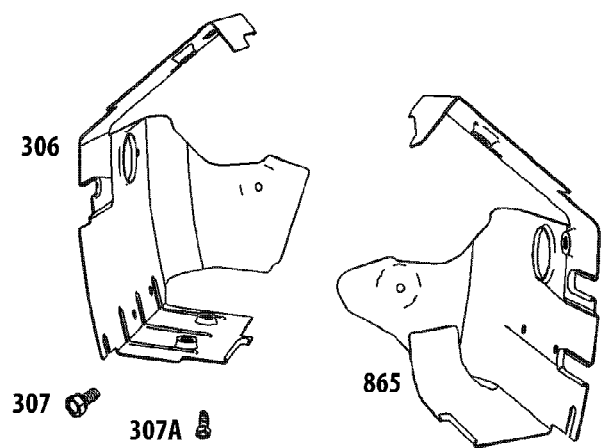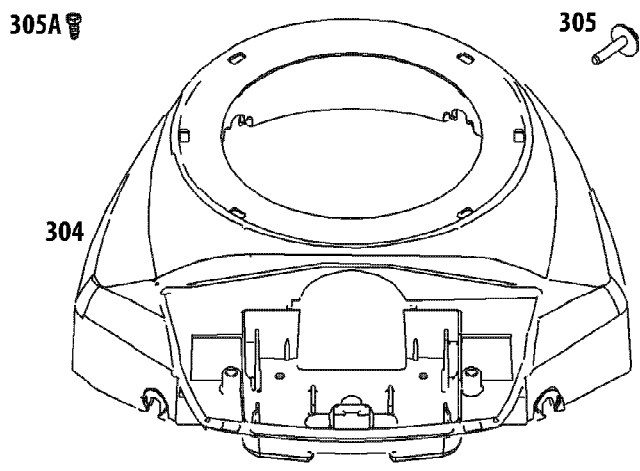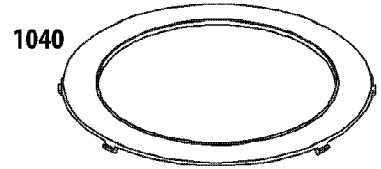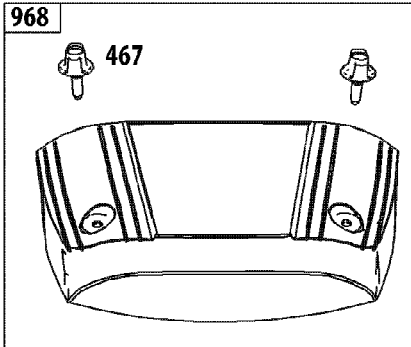

SLTX1054VT Tractor
Engine 44P777-0765-B1 5

Page 26 of 63

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Seal-Oil (Magneto Side)
4	BS-796307	1	/P	Sump-Engine
5	BS-796270	1		Head-Cylinder (Cylinder #1)
5A	BS-796271	1		Head-Cylinder (Cylinder #2)
7	BS-693997	1	/P	Gasket-Cylinder Head
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Gasket-Breather
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Tube-Breather
12	BS-697227	1	/P	Gasket-Crankcase
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Plug-Oil Drain
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Seal-Oil (PTO Side)
22	BS-694966	1	/P	Screw (Crankcase Cover/Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Key-Flywheel
25	BS-793560	1		Piston Assembly (Standard)
25	BS-793563	1		Piston Assembly (.020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-696581	1		Pin-Piston
29	BS-796209	1	/P	Rod-Connecting
32	BS-690976	1		Screw (Connecting Rod)
33	BS-793557	1		Valve-Exhaust
34	BS-793556	1		Valve-Intake
35	BS-694865	1		Spring-Valve (Intake)
36	BS-694865	1		Spring-Valve (Exhaust)
40	BS-690964	1	S	Retainer-Valve
42	BS-499586	1	/P	Keeper-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-792555	1		Gear-Cam
48	BS-698172	1	/P	Short Block
50	BS-695241	1	/P	Manifold-Intake
51	BS-795123	1		Gasket-Intake
51A	BS-690950	1		Gasket-Intake
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Screen-Rotating
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Kit-Idle Speed
104	BS-694918	1		Pin-Float Hinge
105	BS-698537	1		Valve-Float Needle
108	BS-699723	1		Valve-Choke
117	BS-792296	1		Jet-Main (Standard) (Left Jet)
117A	BS-842627	1		Jet-Main (Standard) (Right Jet)
118	BS-699457	1		Jet-Main (High Altitude) (Left Jet)
118A	BS-699733	1		Jet-Main (High Altitude) (Right Jet)

SLTX1054VT Tractor
Engine 44P777-0765-B1 5

Page 27 of 63

Ref #	Part Number	Qty	S/P/F	Description
121	BS-792455	1	S	Kit-Carburetor Overhaul
125	BS-796227	1		Carburetor (Primer System)
130	BS-690993	1		Valve-Throttle
131	BS-499805	1		Kit-Throttle Shaft
133	BS-699724	1		Float-Carburetor
135	BS-699729	1		Tube-Fuel Transfer
137	BS-690994	1		Gasket-Float Bowl
141	BS-796228	1		Kit-Choke Shaft
142	BS-699726	1		Nozzle-Carburetor
146	BS-690979	1	/P	Key-Timing
150	BS-690995	1		Gasket-Nozzle
163	BS-691001	1		Gasket-Air Cleaner
177	BS-691031	1	/P	Seal-O Ring (Dipstick)
186	BS-795985	1		Connector-Hose (Intake Manifold)
187	751-10349-16	1	/P	Line-Fuel (Cut to Required Length)
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Adjuster-Rocker Arm
197	BS-697820	1		Screw (Back Plate)
209	BS-796224	1		Spring-Governor (Yellow/ Black)
211	BS-796225	1		Spring-Governed Idle
212	BS-695238	1		Link-Throttle
216	BS-796229	1		Link-Choke
217	BS-695409	1		Spring-Choke Return
219	BS-793338	1	/P	Gear-Governor
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Cup-Governor
222	BS-796226	1		Bracket-Control
227	BS-796223	1		Lever-Governor Control
239	BS-792028	1		Switch-Oil Pressure
240	BS-691035	1	/P	Filter-Fuel
250	BS-690957	1		Retainer-Breather
252	BS-794389	1		Collector-Oil
265	BS-691024	1	/P	Clamp-Casing
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Washer-Sealing
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-691108	1	/P	Screw (Dipstick Tube)
304	BS-796678	1	S	Housing-Blower
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Shield-Cylinder (Cylinder #2)
307	BS-691003	1	/P	Screw (Cylinder Shield) (Short)
307A	BS-697551	1		Screw (Cylinder Shield) (Long)
309	BS-497595	1	/P	Motor-Starter
310	BS-690323	1		Screw (Starter Motor)
311	BS-497608	1	/P	Brush Set
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Armature-Magneto
334	BS-691061	1		Screw (Magneto Armature)
337	759-3336	1	/P	Plug-Spark
358	BS-694012	1	/P	Gasket Set-Engine
385	BS-697551	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Pump-Fuel












SLTX1054VT Tractor
Engine 44P777-0765-B1 5

Page 28 of 63

Ref #	Part Number	Qty	S/P/F	Description
404	BS-690442	1		Washer (Governor Crank)
415	BS-690283	1		Plug (Oil Pressure Switch Hole)
418	BS-795912	1		Plate-Carburetor
431	BS-792297	1		Elbow-Intake
445	BS-792105	1	/P	Filter-Air Cleaner Cartridge
447	BS-691003	1	/P	Screw (Air Guide Cover) (Short)
447A	BS-697551	1		Screw (Air Guide Cover) (Long)
467	BS-790697	1		Knob-Air Cleaner
474	BS-696457	1	/P	Alternator
501	BS-794360	1	/P	Regulator
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Drive-Starter
513	BS-692024	1	/P	Clutch-Drive
523	BS-691036	1		Dipstick
524	BS-691032	1		Seal-Dipstick Tube
525	BS-691037	1		Tube-Dipstick
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Armature-Starter (Service with Starter Motor 497595, Reference 309)
552	BS-690552	1		Bushing-Governor Crank
552A	BS-690553	1		Bushing-Governor Crank
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Plate-Back
579	BS-691029	1		Nut (Starter Cable)
601	BS-791850	1	/P	Clamp-Hose (Green)
601A	BS-691038	1		Clamp-Hose (Black)
615	BS-698290	1	/P	Retainer-Governor Shaft
616	BS-691045	1		Crank-Governor
617	BS-697891	1		Seal-O Ring (Intake Manifold) Red)
628	BS-697551	1		Screw (Fuel Pump Bracket)
633	BS-699813	1		Seal-Choke/Throttle Shaft Choke Shaft)
635	BS-66538s	1	/P	Boot-Spark Plug
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen)
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Gasket-Carburetor Plate
691	BS-790574	1		Seal-Governor Shaft
697	BS-791680	1	/P	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Pin-Locating
729	BS-694123	1		Clip-Wire
741	BS-690980	1		Gear-Timing
742	BS-690328	1	/P	Retainer-E Ring (Governor Crank)
750	BS-796208	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Gear-Pinion
788	BS-793145	1		Bracket-Fuel Pump
789	BS-696576	1		Harness-Wiring
797	BS-693167	1		Nut (Brush Retainer)
798	BS-697890	1		Screw (Rocker Arm)
801	BS-691283	1		Cap-Drive
802	BS-691286	1	/P	Cap-End

SLTX1054VT Tractor
 Engine 44P777-0765-B1 5

Ref #	Part Number	Qty	S/P/F	Description
803	N/A	1		Housing-Starter (Service with Starter Motor 497595, Reference 309)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
865	BS-691012	1		Cover-Air Guide (Cylinder #1)
865A	BS-792286	1		Cover-Air Guide (Valley)
868	BS-690968	1	/P	Seal-Valve
877	BS-790544	1		Wire/Connector-Alternator
883	BS-690970	1	/P	Gasket-Exhaust
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-793147	1		Hose-Vacuum
943	BS-796222	1		Seal-O Ring (Oil Pump Cover)
947	BS-841546	1		Solenoid-Fuel
965	BS-796221	1		Cover-Oil Pump
968	BS-795120	1	/P	Cover-Air Cleaner
975	BS-793592	1		Bowl-Float
987	BS-691000	1		Seal-Throttle Shaft
1005	BS-791236	1		Fan-Flywheel
1013	BS-690954	1	/P	Nipple-Oil Filter
1017	BS-690770	1		Screen-Oil Pump
1022	BS-690971	1	/P	Gasket-Rocker Cover
1023	BS-793146	1		Cover-Rocker (Cylinder #1)
1023A	BS-499600	1		Cover-Rocker (Cylinder #2)
1024	BS-796220	1		Pump-Oil
1026	BS-690981	1	/P	Rod-Push (Steel)
1026A	BS-690982	1	/P	Rod-Push (Aluminum)
1027	BS-696854	1	/P	Filter-Oil
1029	BS-690972	1		Arm-Rocker
1036	N/A	1		Label-Emissions (Available gs & Stratton)
1040	BS-791237	1		WHEEL-4.80/4.00 Plate-Trim
1051	BS-691265	1	/P	Ring-Retaining (Starter Drive)
1054	BS-280275	1		Tie-Cable
1059	BS-698516	1		Kit-Screw/Washer (Alternator)
1070	BS-791680	1	/P	Screw (Flywheel Fan)
1090	BS-691293	1	/P	Retainer-Brush
1095	BS-694013	1	/P	Gasket Set-Valve
1100	BS-791959	1		Pivot-Rocker Arm
1119	BS-93621	1	/P	Screw (Alternator)
1123	BS-841653	1		Seal-O Ring (Solenoid Retainer)
1124	BS-841653	1		Seal-O Ring (Fuel Transfer Tube)
1126	BS-690991	1		Screw (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Bowl)
1128	BS-690990	1		Screw (Carburetor Nozzle)
1169	BS-690990	1		Screw (Carburetor Cover Plate)
1329	BS-44Q777-0037	1	S	Replacement Engine

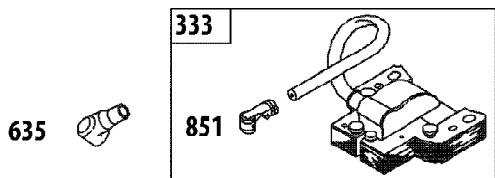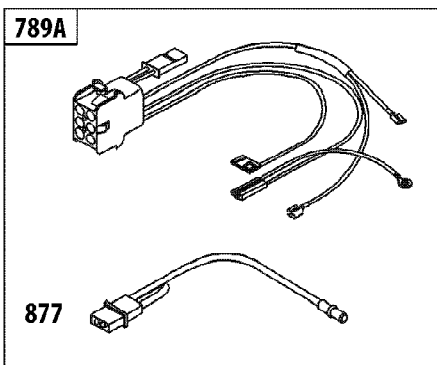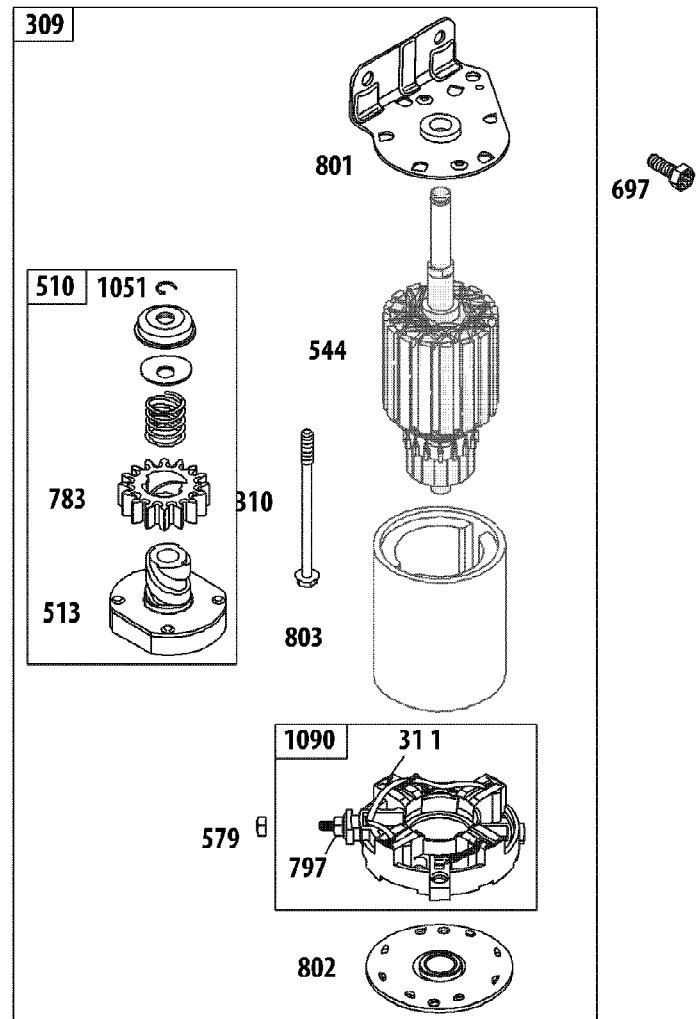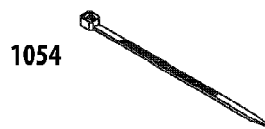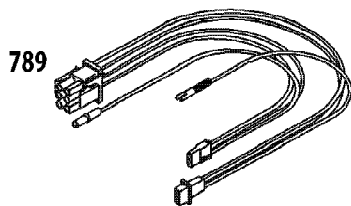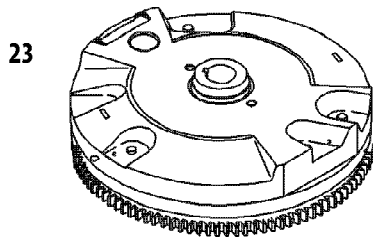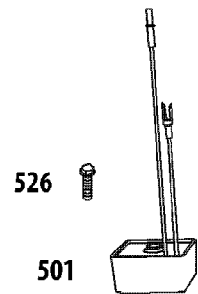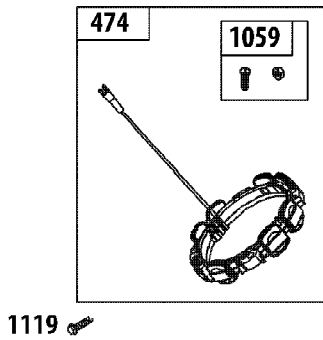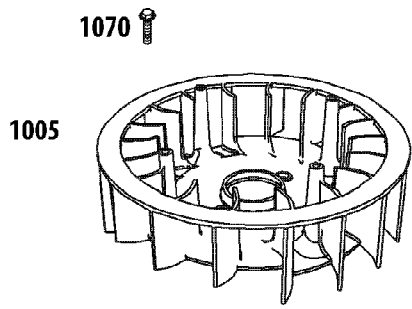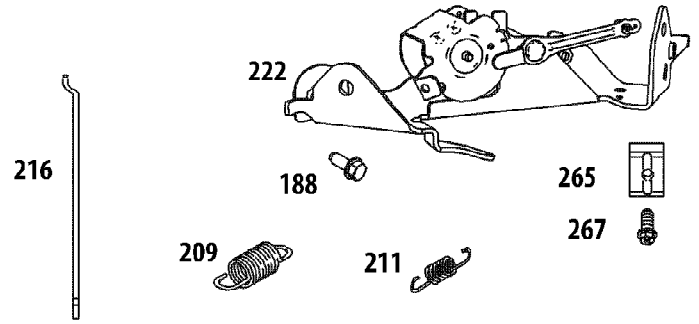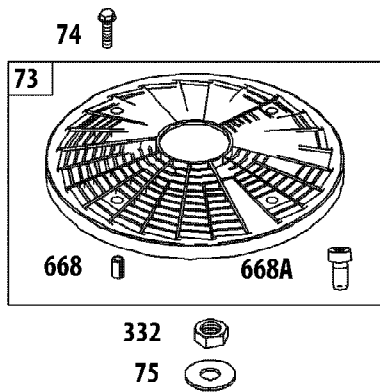

SLTX1054VT Tractor
Engine 44P777-0765-B1 6

Page 31 of 63

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Seal-Oil (Magneto Side)
4	BS-796307	1	/P	Sump-Engine
5	BS-796270	1		Head-Cylinder (Cylinder #1)
5A	BS-796271	1		Head-Cylinder (Cylinder #2)
7	BS-693997	1	/P	Gasket-Cylinder Head
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Gasket-Breather
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Tube-Breather
12	BS-697227	1	/P	Gasket-Crankcase
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Plug-Oil Drain
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Seal-Oil (PTO Side)
22	BS-694966	1	/P	Screw (Crankcase Cover/Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Key-Flywheel
25	BS-793560	1		Piston Assembly (Standard)
25	BS-793563	1		Piston Assembly (.020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-696581	1		Pin-Piston
29	BS-796209	1	/P	Rod-Connecting
32	BS-690976	1		Screw (Connecting Rod)
33	BS-793557	1		Valve-Exhaust
34	BS-793556	1		Valve-Intake
35	BS-694865	1		Spring-Valve (Intake)
36	BS-694865	1		Spring-Valve (Exhaust)
40	BS-690964	1	S	Retainer-Valve
42	BS-499586	1	/P	Keeper-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-792555	1		Gear-Cam
48	BS-698172	1	/P	Short Block
50	BS-695241	1	/P	Manifold-Intake
51	BS-795123	1		Gasket-Intake
51A	BS-690950	1		Gasket-Intake
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Screen-Rotating
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Kit-Idle Speed
104	BS-694918	1		Pin-Float Hinge
105	BS-698537	1		Valve-Float Needle
108	BS-699723	1		Valve-Choke
117	BS-792296	1		Jet-Main (Standard) (Left Jet)
117A	BS-842627	1		Jet-Main (Standard) (Right Jet)
118	BS-699457	1		Jet-Main (High Altitude) (Left Jet)
118A	BS-699733	1		Jet-Main (High Altitude) (Right Jet)

SLTX1054VT Tractor
Engine 44P777-0765-B1 6

Page 32 of 63

Ref #	Part Number	Qty	S/P/F	Description
121	BS-792455	1	S	Kit-Carburetor Overhaul
125	BS-796227	1		Carburetor (Primer System)
130	BS-690993	1		Valve-Throttle
131	BS-499805	1		Kit-Throttle Shaft
133	BS-699724	1		Float-Carburetor
135	BS-699729	1		Tube-Fuel Transfer
137	BS-690994	1		Gasket-Float Bowl
141	BS-796228	1		Kit-Choke Shaft
142	BS-699726	1		Nozzle-Carburetor
146	BS-690979	1	/P	Key-Timing
150	BS-690995	1		Gasket-Nozzle
163	BS-691001	1		Gasket-Air Cleaner
177	BS-691031	1	/P	Seal-O Ring (Dipstick)
186	BS-795985	1		Connector-Hose (Intake Manifold)
187	751-10349-16	1	/P	Line-Fuel (Cut to Required Length)
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Adjuster-Rocker Arm
197	BS-697820	1		Screw (Back Plate)
209	BS-796224	1		Spring-Governor (Yellow/ Black)
211	BS-796225	1		Spring-Governed Idle
212	BS-695238	1		Link-Throttle
216	BS-796229	1		Link-Choke
217	BS-695409	1		Spring-Choke Return
219	BS-793338	1	/P	Gear-Governor
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Cup-Governor
222	BS-796226	1		Bracket-Control
227	BS-796223	1		Lever-Governor Control
239	BS-792028	1		Switch-Oil Pressure
240	BS-691035	1	/P	Filter-Fuel
250	BS-690957	1		Retainer-Breather
252	BS-794389	1		Collector-Oil
265	BS-691024	1	/P	Clamp-Casing
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Washer-Sealing
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-691108	1	/P	Screw (Dipstick Tube)
304	BS-796678	1	S	Housing-Blower
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Shield-Cylinder (Cylinder #2)
307	BS-691003	1	/P	Screw (Cylinder Shield) (Short)
307A	BS-697551	1		Screw (Cylinder Shield) (Long)
309	BS-497595	1	/P	Motor-Starter
310	BS-690323	1		Screw (Starter Motor)
311	BS-497608	1	/P	Brush Set
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Armature-Magneto
334	BS-691061	1		Screw (Magneto Armature)
337	759-3336	1	/P	Plug-Spark
358	BS-694012	1	/P	Gasket Set-Engine
385	BS-697551	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Pump-Fuel




SLTX1054VT Tractor
Engine 44P777-0765-B1 6

Page 33 of 63

Ref #	Part Number	Qty	S/P/F	Description
404	BS-690442	1		Washer (Governor Crank)
415	BS-690283	1		Plug (Oil Pressure Switch Hole)
418	BS-795912	1		Plate-Carburetor
431	BS-792297	1		Elbow-Intake
445	BS-792105	1	/P	Filter-Air Cleaner Cartridge
447	BS-691003	1	/P	Screw (Air Guide Cover) (Short)
447A	BS-697551	1		Screw (Air Guide Cover) (Long)
467	BS-790697	1		Knob-Air Cleaner
474	BS-696457	1	/P	Alternator
501	BS-794360	1	/P	Regulator
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Drive-Starter
513	BS-692024	1	/P	Clutch-Drive
523	BS-691036	1		Dipstick
524	BS-691032	1		Seal-Dipstick Tube
525	BS-691037	1		Tube-Dipstick
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Armature-Starter (Service with Starter Motor 497595, Reference 309)
552	BS-690552	1		Bushing-Governor Crank
552A	BS-690553	1		Bushing-Governor Crank
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Plate-Back
579	BS-691029	1		Nut (Starter Cable)
601	BS-791850	1	/P	Clamp-Hose (Green)
601A	BS-691038	1		Clamp-Hose (Black)
615	BS-698290	1	/P	Retainer-Governor Shaft
616	BS-691045	1		Crank-Governor
617	BS-697891	1		Seal-O Ring (Intake Manifold) Red)
628	BS-697551	1		Screw (Fuel Pump Bracket)
633	BS-699813	1		Seal-Choke/Throttle Shaft Choke Shaft)
635	BS-66538s	1	/P	Boot-Spark Plug
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen)
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Gasket-Carburetor Plate
691	BS-790574	1		Seal-Governor Shaft
697	BS-791680	1	/P	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Pin-Locating
729	BS-694123	1		Clip-Wire
741	BS-690980	1		Gear-Timing
742	BS-690328	1	/P	Retainer-E Ring (Governor Crank)
750	BS-796208	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Gear-Pinion
788	BS-793145	1		Bracket-Fuel Pump
789	BS-696576	1		Harness-Wiring
797	BS-693167	1		Nut (Brush Retainer)
798	BS-697890	1		Screw (Rocker Arm)
801	BS-691283	1		Cap-Drive
802	BS-691286	1	/P	Cap-End

SLTX1054VT Tractor
 Engine 44P777-0765-B1 6

Ref #	Part Number	Qty	S/P/F	Description
803	N/A	1		Housing-Starter (Service with Starter Motor 497595, Reference 309)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
865	BS-691012	1		Cover-Air Guide (Cylinder #1)
865A	BS-792286	1		Cover-Air Guide (Valley)
868	BS-690968	1	/P	Seal-Valve
877	BS-790544	1		Wire/Connector-Alternator
883	BS-690970	1	/P	Gasket-Exhaust
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-793147	1		Hose-Vacuum
943	BS-796222	1		Seal-O Ring (Oil Pump Cover)
947	BS-841546	1		Solenoid-Fuel
965	BS-796221	1		Cover-Oil Pump
968	BS-795120	1	/P	Cover-Air Cleaner
975	BS-793592	1		Bowl-Float
987	BS-691000	1		Seal-Throttle Shaft
1005	BS-791236	1		Fan-Flywheel
1013	BS-690954	1	/P	Nipple-Oil Filter
1017	BS-690770	1		Screen-Oil Pump
1022	BS-690971	1	/P	Gasket-Rocker Cover
1023	BS-793146	1		Cover-Rocker (Cylinder #1)
1023A	BS-499600	1		Cover-Rocker (Cylinder #2)
1024	BS-796220	1		Pump-Oil
1026	BS-690981	1	/P	Rod-Push (Steel)
1026A	BS-690982	1	/P	Rod-Push (Aluminum)
1027	BS-696854	1	/P	Filter-Oil
1029	BS-690972	1		Arm-Rocker
1036	N/A	1		Label-Emissions (Available
1040	BS-791237	1		WHEEL-4.80/4.00
1051	BS-691265	1	/P	Plate-Trim
1054	BS-280275	1		Ring-Retaining (Starter Drive)
1059	BS-698516	1		Tie-Cable
1070	BS-791680	1	/P	Kit-Screw/Washer (Alternator)
1090	BS-691293	1	/P	Screw (Flywheel Fan)
1095	BS-694013	1	/P	Retainer-Brush
1100	BS-791959	1		Gasket Set-Valve
1119	BS-93621	1	/P	Pivot-Rocker Arm
1123	BS-841653	1		Screw (Alternator)
1124	BS-841653	1		Seal-O Ring (Solenoid Retainer)
1126	BS-690991	1		Seal-O Ring (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Transfer Tube)
1128	BS-690990	1		Screw (Fuel Bowl)
1169	BS-690990	1		Screw (Carburetor Nozzle)
1329	BS-44Q777-0037	1	S	Screw (Carburetor Cover Plate)
				Replacement Engine

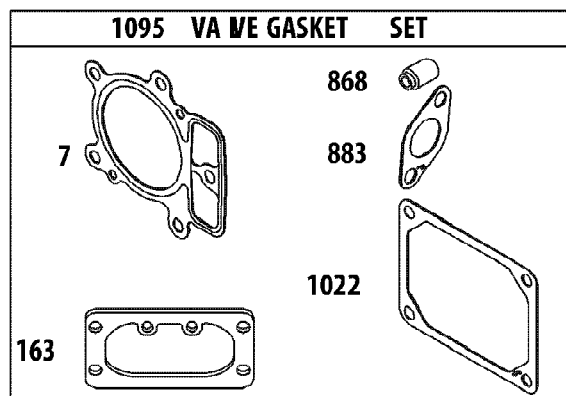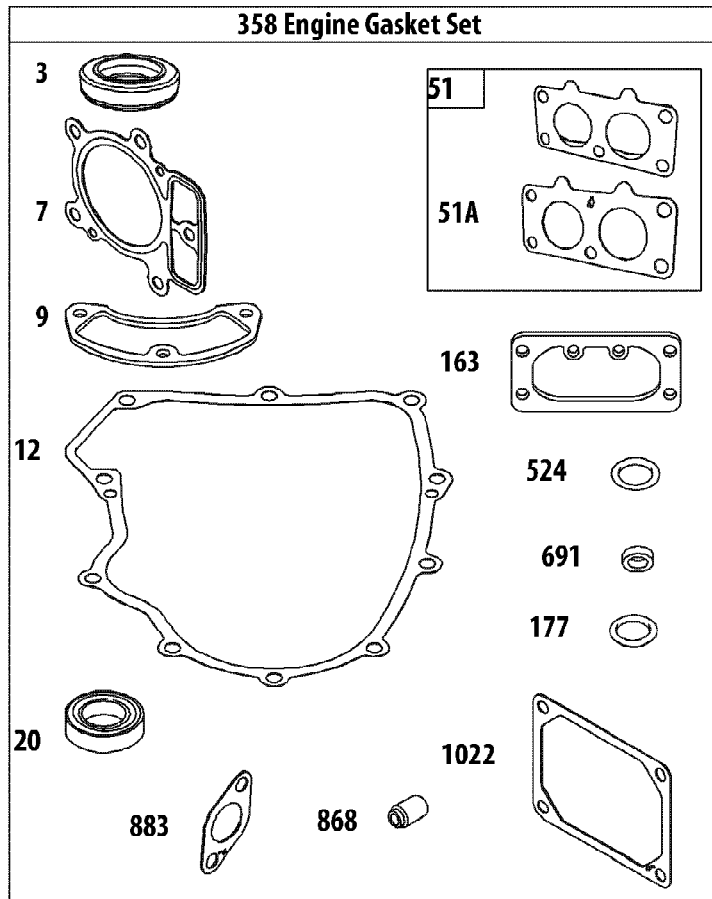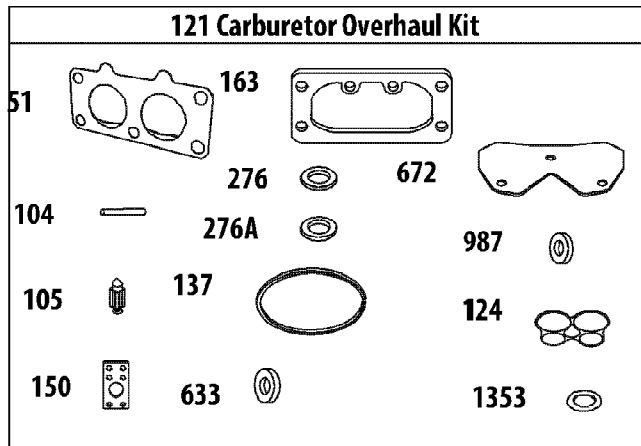

SLTX1054VT Tractor
Engine 44P777-0765-B1 7

Page 36 of 63

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Seal-Oil (Magneto Side)
4	BS-796307	1	/P	Sump-Engine
5	BS-796270	1		Head-Cylinder (Cylinder #1)
5A	BS-796271	1		Head-Cylinder (Cylinder #2)
7	BS-693997	1	/P	Gasket-Cylinder Head
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Gasket-Breather
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Tube-Breather
12	BS-697227	1	/P	Gasket-Crankcase
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Plug-Oil Drain
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Seal-Oil (PTO Side)
22	BS-694966	1	/P	Screw (Crankcase Cover/Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Key-Flywheel
25	BS-793560	1		Piston Assembly (Standard)
25	BS-793563	1		Piston Assembly (.020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-696581	1		Pin-Piston
29	BS-796209	1	/P	Rod-Connecting
32	BS-690976	1		Screw (Connecting Rod)
33	BS-793557	1		Valve-Exhaust
34	BS-793556	1		Valve-Intake
35	BS-694865	1		Spring-Valve (Intake)
36	BS-694865	1		Spring-Valve (Exhaust)
40	BS-690964	1	S	Retainer-Valve
42	BS-499586	1	/P	Keeper-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-792555	1		Gear-Cam
48	BS-698172	1	/P	Short Block
50	BS-695241	1	/P	Manifold-Intake
51	BS-795123	1		Gasket-Intake
51A	BS-690950	1		Gasket-Intake
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Screen-Rotating
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Kit-Idle Speed
104	BS-694918	1		Pin-Float Hinge
105	BS-698537	1		Valve-Float Needle
108	BS-699723	1		Valve-Choke
117	BS-792296	1		Jet-Main (Standard) (Left Jet)
117A	BS-842627	1		Jet-Main (Standard) (Right Jet)
118	BS-699457	1		Jet-Main (High Altitude) (Left Jet)
118A	BS-699733	1		Jet-Main (High Altitude) (Right Jet)

SLTX1054VT Tractor
Engine 44P777-0765-B1 7

Page 37 of 63

Ref #	Part Number	Qty	S/P/F	Description
121	BS-792455	1	S	Kit-Carburetor Overhaul
125	BS-796227	1		Carburetor (Primer System)
130	BS-690993	1		Valve-Throttle
131	BS-499805	1		Kit-Throttle Shaft
133	BS-699724	1		Float-Carburetor
135	BS-699729	1		Tube-Fuel Transfer
137	BS-690994	1		Gasket-Float Bowl
141	BS-796228	1		Kit-Choke Shaft
142	BS-699726	1		Nozzle-Carburetor
146	BS-690979	1	/P	Key-Timing
150	BS-690995	1		Gasket-Nozzle
163	BS-691001	1		Gasket-Air Cleaner
177	BS-691031	1	/P	Seal-O Ring (Dipstick)
186	BS-795985	1		Connector-Hose (Intake Manifold)
187	751-10349-16	1	/P	Line-Fuel (Cut to Required Length)
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Adjuster-Rocker Arm
197	BS-697820	1		Screw (Back Plate)
209	BS-796224	1		Spring-Governor (Yellow/ Black)
211	BS-796225	1		Spring-Governed Idle
212	BS-695238	1		Link-Throttle
216	BS-796229	1		Link-Choke
217	BS-695409	1		Spring-Choke Return
219	BS-793338	1	/P	Gear-Governor
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Cup-Governor
222	BS-796226	1		Bracket-Control
227	BS-796223	1		Lever-Governor Control
239	BS-792028	1		Switch-Oil Pressure
240	BS-691035	1	/P	Filter-Fuel
250	BS-690957	1		Retainer-Breather
252	BS-794389	1		Collector-Oil
265	BS-691024	1	/P	Clamp-Casing
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Washer-Sealing
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-691108	1	/P	Screw (Dipstick Tube)
304	BS-796678	1	S	Housing-Blower
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Shield-Cylinder (Cylinder #2)
307	BS-691003	1	/P	Screw (Cylinder Shield) (Short)
307A	BS-697551	1		Screw (Cylinder Shield) (Long)
309	BS-497595	1	/P	Motor-Starter
310	BS-690323	1		Screw (Starter Motor)
311	BS-497608	1	/P	Brush Set
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Armature-Magneto
334	BS-691061	1		Screw (Magneto Armature)
337	759-3336	1	/P	Plug-Spark
358	BS-694012	1	/P	Gasket Set-Engine
385	BS-697551	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Pump-Fuel


SLTX1054VT Tractor
Engine 44P777-0765-B1 7

Page 38 of 63


Ref #	Part Number	Qty	S/P/F	Description
404	BS-690442	1		Washer (Governor Crank)
415	BS-690283	1		Plug (Oil Pressure Switch Hole)
418	BS-795912	1		Plate-Carburetor
431	BS-792297	1		Elbow-Intake
445	BS-792105	1	/P	Filter-Air Cleaner Cartridge
447	BS-691003	1	/P	Screw (Air Guide Cover) (Short)
447A	BS-697551	1		Screw (Air Guide Cover) (Long)
467	BS-790697	1		Knob-Air Cleaner
474	BS-696457	1	/P	Alternator
501	BS-794360	1	/P	Regulator
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Drive-Starter
513	BS-692024	1	/P	Clutch-Drive
523	BS-691036	1		Dipstick
524	BS-691032	1		Seal-Dipstick Tube
525	BS-691037	1		Tube-Dipstick
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Armature-Starter (Service with Starter Motor 497595, Reference 309)
552	BS-690552	1		Bushing-Governor Crank
552A	BS-690553	1		Bushing-Governor Crank
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Plate-Back
579	BS-691029	1		Nut (Starter Cable)
601	BS-791850	1	/P	Clamp-Hose (Green)
601A	BS-691038	1		Clamp-Hose (Black)
615	BS-698290	1	/P	Retainer-Governor Shaft
616	BS-691045	1		Crank-Governor
617	BS-697891	1		Seal-O Ring (Intake Manifold) Red)
628	BS-697551	1		Screw (Fuel Pump Bracket)
633	BS-699813	1		Seal-Choke/Throttle Shaft Choke Shaft)
635	BS-66538s	1	/P	Boot-Spark Plug
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen)
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Gasket-Carburetor Plate
691	BS-790574	1		Seal-Governor Shaft
697	BS-791680	1	/P	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Pin-Locating
729	BS-694123	1		Clip-Wire
741	BS-690980	1		Gear-Timing
742	BS-690328	1	/P	Retainer-E Ring (Governor Crank)
750	BS-796208	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Gear-Pinion
788	BS-793145	1		Bracket-Fuel Pump
789	BS-696576	1		Harness-Wiring
797	BS-693167	1		Nut (Brush Retainer)
798	BS-697890	1		Screw (Rocker Arm)
801	BS-691283	1		Cap-Drive
802	BS-691286	1	/P	Cap-End

SLTX1054VT Tractor
 Engine 44P777-0765-B1 7

Ref #	Part Number	Qty	S/P/F	Description
803	N/A	1		Housing-Starter (Service with Starter Motor 497595, Reference 309)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
865	BS-691012	1		Cover-Air Guide (Cylinder #1)
865A	BS-792286	1		Cover-Air Guide (Valley)
868	BS-690968	1	/P	Seal-Valve
877	BS-790544	1		Wire/Connector-Alternator
883	BS-690970	1	/P	Gasket-Exhaust
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-793147	1		Hose-Vacuum
943	BS-796222	1		Seal-O Ring (Oil Pump Cover)
947	BS-841546	1		Solenoid-Fuel
965	BS-796221	1		Cover-Oil Pump
968	BS-795120	1	/P	Cover-Air Cleaner
975	BS-793592	1		Bowl-Float
987	BS-691000	1		Seal-Throttle Shaft
1005	BS-791236	1		Fan-Flywheel
1013	BS-690954	1	/P	Nipple-Oil Filter
1017	BS-690770	1		Screen-Oil Pump
1022	BS-690971	1	/P	Gasket-Rocker Cover
1023	BS-793146	1		Cover-Rocker (Cylinder #1)
1023A	BS-499600	1		Cover-Rocker (Cylinder #2)
1024	BS-796220	1		Pump-Oil
1026	BS-690981	1	/P	Rod-Push (Steel)
1026A	BS-690982	1	/P	Rod-Push (Aluminum)
1027	BS-696854	1	/P	Filter-Oil
1029	BS-690972	1		Arm-Rocker
1036	N/A	1		Label-Emissions (Available
1040	BS-791237	1		WHEEL-4.80/4.00
1051	BS-691265	1	/P	Plate-Trim
1054	BS-280275	1		Ring-Retaining (Starter Drive)
1059	BS-698516	1		Tie-Cable
1070	BS-791680	1	/P	Kit-Screw/Washer (Alternator)
1090	BS-691293	1	/P	Screw (Flywheel Fan)
1095	BS-694013	1	/P	Retainer-Brush
1100	BS-791959	1		Gasket Set-Valve
1119	BS-93621	1	/P	Pivot-Rocker Arm
1123	BS-841653	1		Screw (Alternator)
1124	BS-841653	1		Seal-O Ring (Solenoid Retainer)
1126	BS-690991	1		Seal-O Ring (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Transfer Tube)
1128	BS-690990	1		Screw (Fuel Bowl)
1169	BS-690990	1		Screw (Carburetor Nozzle)
1329	BS-44Q777-0037	1	S	Screw (Carburetor Cover Plate)
				Replacement Engine

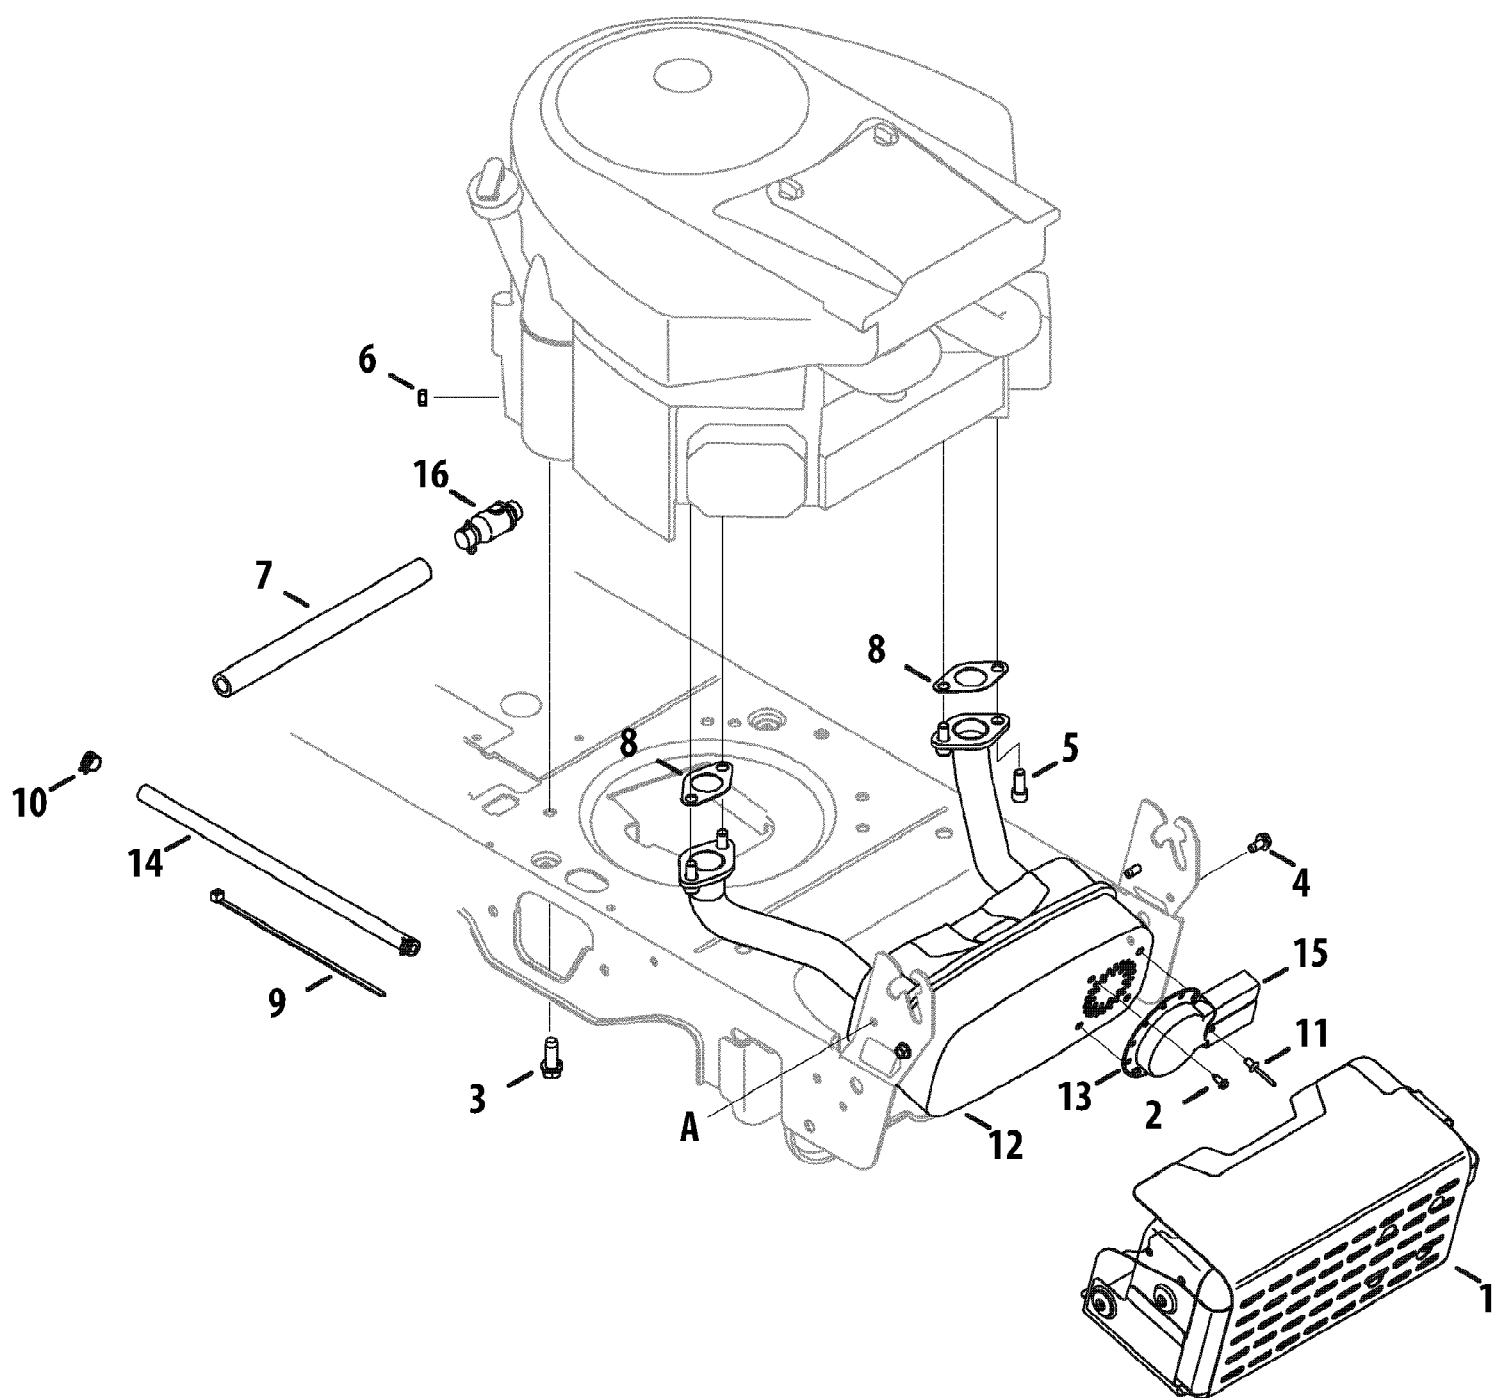


Ref #	Part Number	Qty	S/P/F	Description
1	683-04549-0637	1	/P	Shield Ass'y, Muffler
2	710-0227	1	/P	Screw, Ab, #8-18, 0.500,
3	710-04683	1		Screw, Self-tapping, 3/8-16, 1.000,
4	710-0599	1	/P	Screw, Self-tapping, 1/4-20, 0.500,
5	710-1314A	1	/P	Screw, Socket Head, 5/16-18, .750
6	712-0271	1	/P	Nut, Sems, 1/4-20
7	751-3141-14	1	/P	Hose, Extension, Oil Drain
8	721-0460	1		Gasket, Exhaust
9	725-0157	1	/P	Cable, Tie, 3/16 x .05 x 7.4
10	726-0205	1	/P	Clamp, Hose, .490 Dia.
11	728-04000	1		Rivet, Pop, .188 Dia x .300
12	751-10542A	1		Muffler, Intek Twin
13	751-0564B	1	/P	Deflector, Muffler
14	751-10349	1		Hose, Fuel, Low Permeation, 1/4
15	751-10353	1		Deflector, Muffler, Long
16	951-10517A	1	/P	Drain, Oil

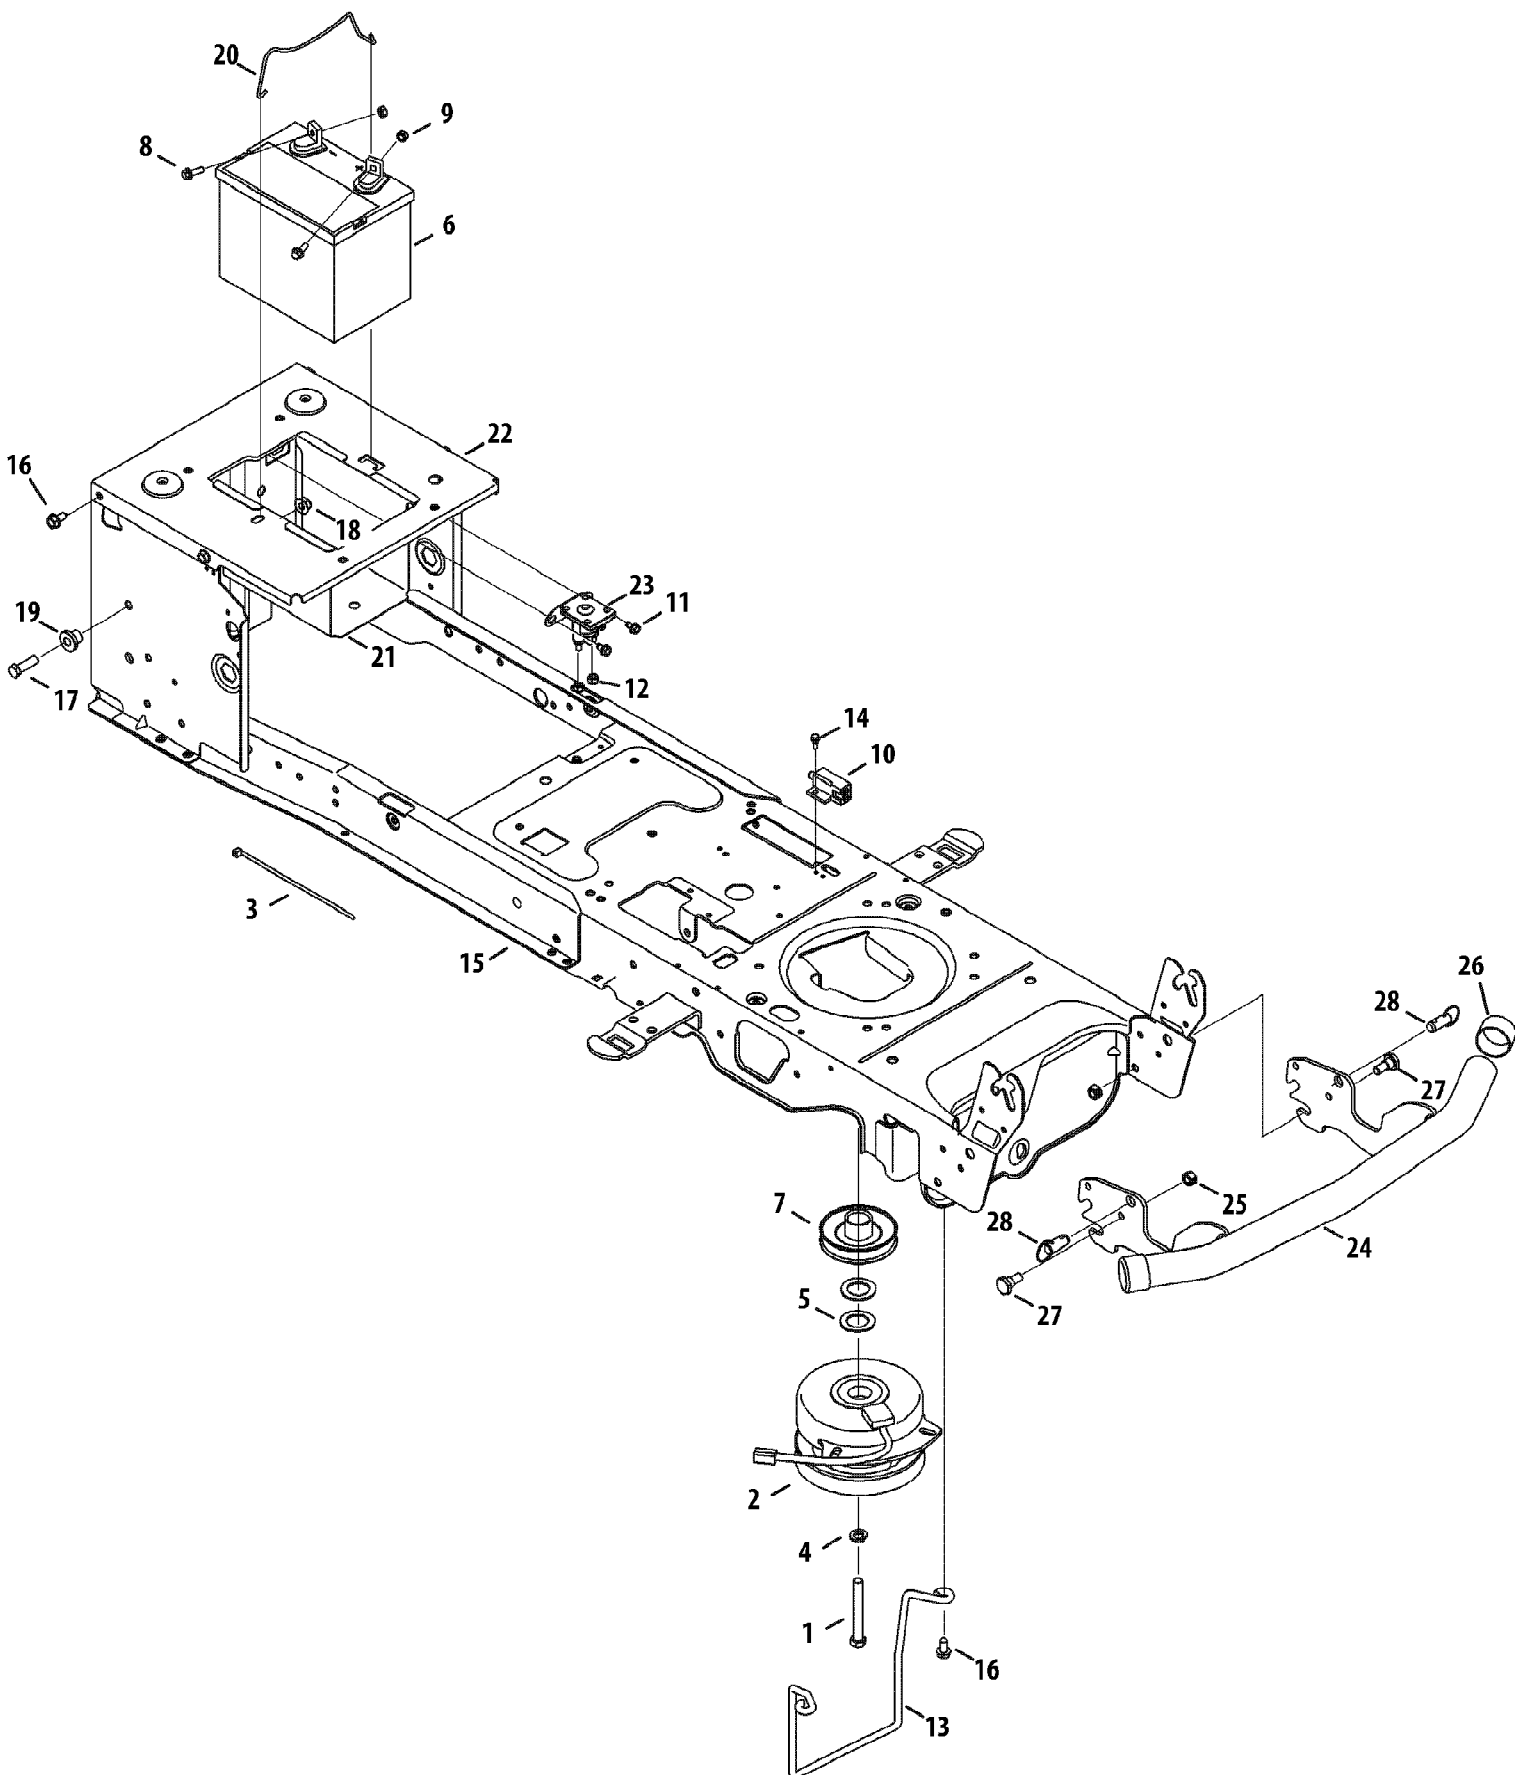

SLTX1054VT Tractor
Frame, Electrical & PTO

Page 43 of 63

Ref #	Part Number	Qty	S/P/F	Description
1	710-04379A	1		Hex Screw, 7/16-20, 3.50, Gr5, Lock
2	917-1774C	1	/P	Clutch, Electric PTO
3	725-0157	1	/P	Cable, Tie, 3/16 X .05 X 7.4
4	936-0171	1	/P	Washer, Lock, 7/16 , Regular Duty
5	736-0277	1		Washer, Flat, 1.031 X1.620 X.095
6	925-1707D	1	/P	Battery
7	756-0978B	1	/P	Engine Pulley, Electric PTO
8	710-04666	1		Hex Flange Screw, 1/4-20, .75, Gr5
9	712-0271	1	/P	Nut, Sems, 1/4-20
10	725-04363	1		Switch, Interlock
11	710-0653	1	/P	Screw, Self-tapping, 1/4-20, 0.375
12	712-04064	1	/P	Nut, Flange Lock, 1/4-20, Nylon
13	747-05195	1		Rod, Keeper
14	738-04237A	1		Screw, Shoulder, #10-32, .50
15	683-04469A-0637	1		Frame Assembly, Lower
16	710-04484	1		Screw, Self-tapping, 5/16-18, .750
17	710-3005	1	/P	Hex Screw, 3/8-16, 1.25, Gr5, Std
18	712-04065	1	/P	Nut, Flange Lock, 3/8-16, Nylon
19	738-04058	1		Spacer, Shoulder, .38 X 1.0 X .70
20	747-04121A	1		Rod, Battery
21	783-0349-0637	1		Tray, Battery
22	783-06089-0637	1		Bracket, Frame, Seat
23	725-04439	1		Solenoid, 12V, 100 Amp, 4 term
24	683-04219B-0637	1	/P	Bumper Assembly, Universal
25	912-3000	1	/P	Nut, Hex Lock, 3/8-16, GrB
26	731-05674	1	/P	Cap, Bumper
27	738-0143	1	/P	Bolt, Shoulder, .496 x .336, 3/8-16
28	714-04061	1		Pin, Quick Release, 1/2 Dia x .50
	925-04093	1	/P	Harness Assembly, Main Not Shown

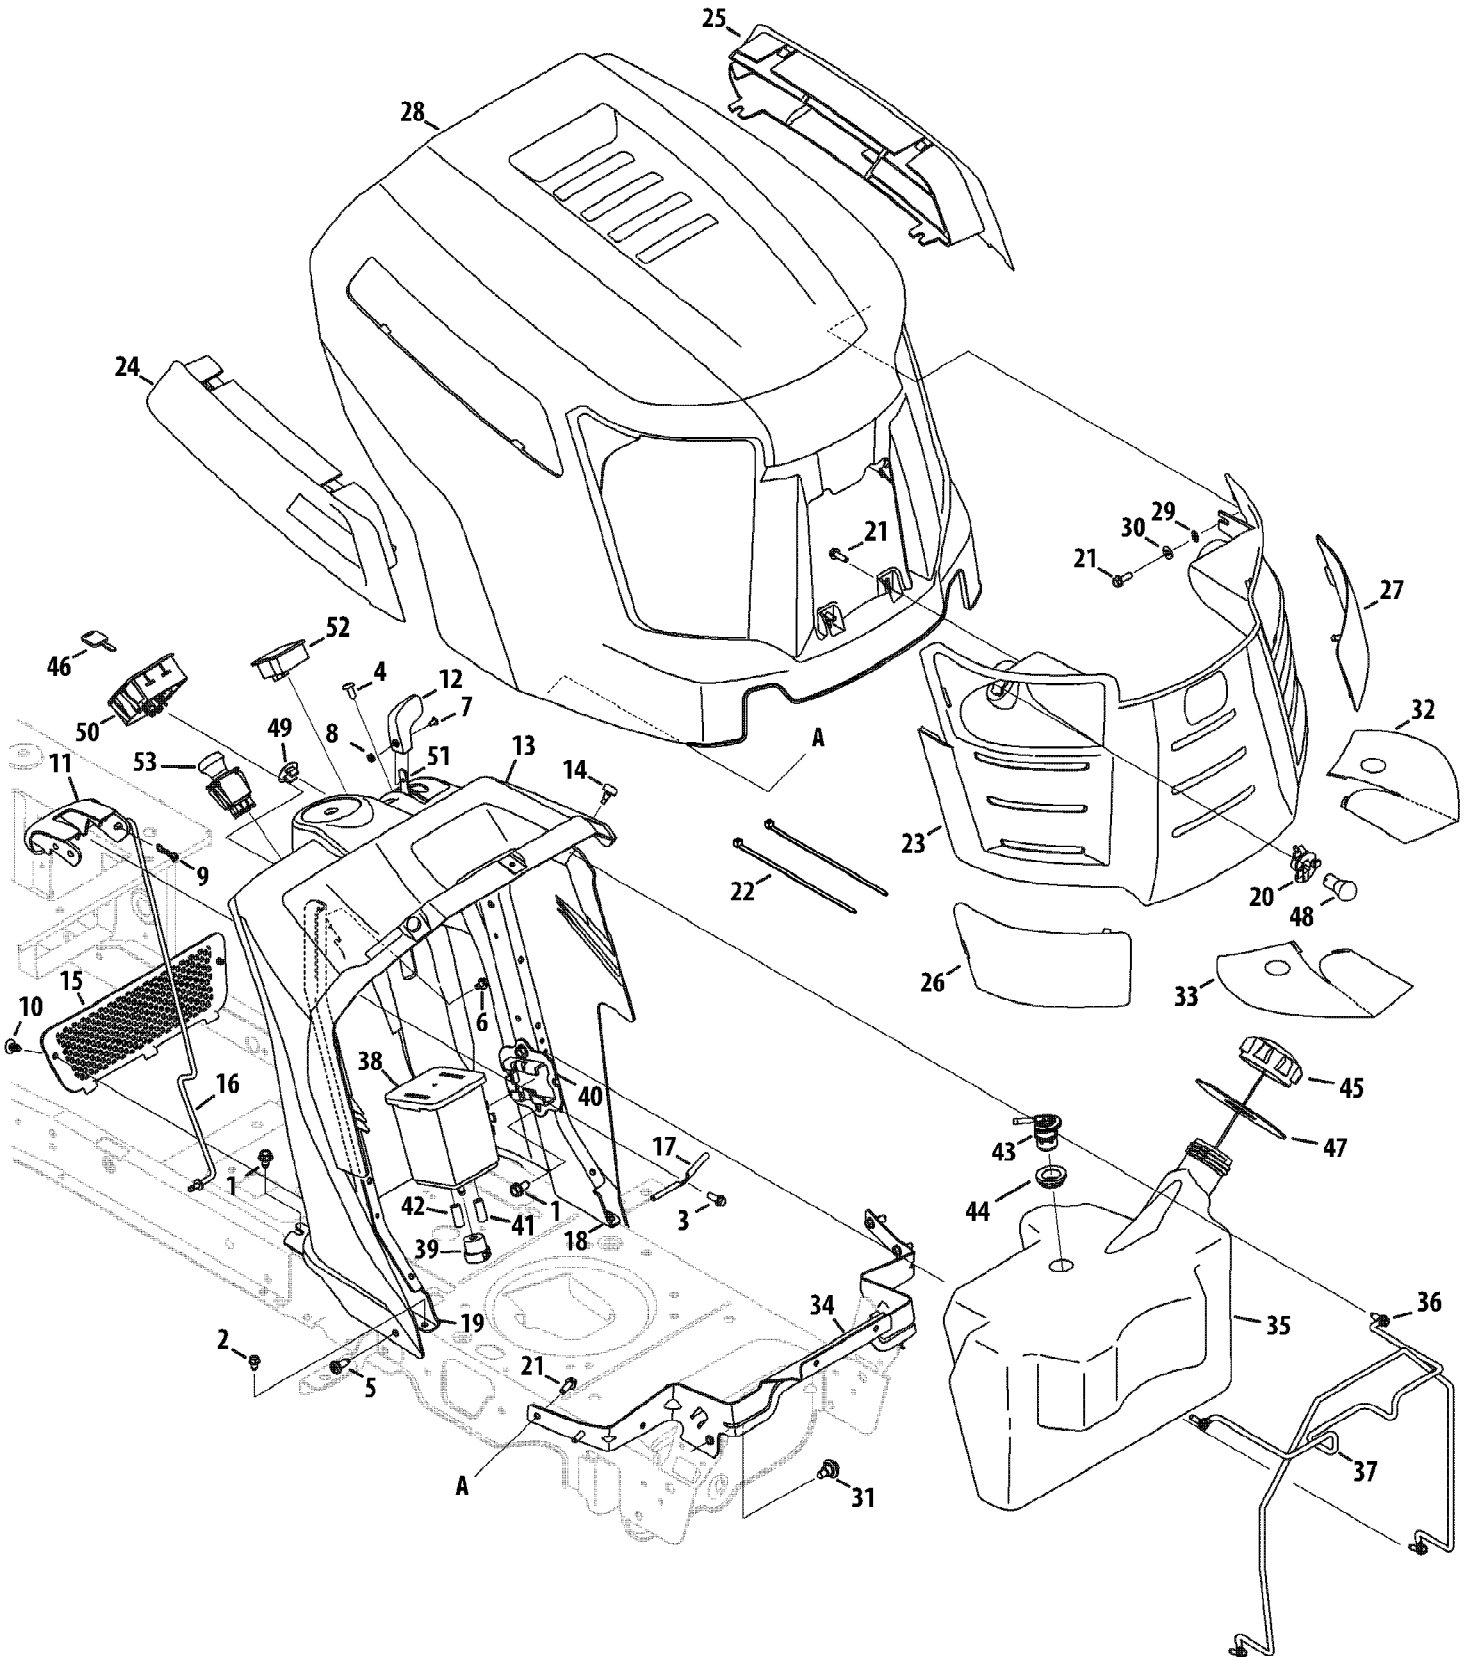

SLTX1054VT Tractor
Fuel Tank, Hood & Dash

Page 45 of 63


Ref #	Part Number	Qty	S/P/F	Description
1	710-04484	1		Screw, Self-tapping, 5/16-18, .750
2	710-0599	1	/P	Screw, Self-tapping, 1/4-20, 0.500
3	710-0895	1		Screw, HL, 1/4-15, 0.750
4	710-1017	1	/P	Screw, Ab, 1/4-14, 0.625,
5	710-1611B	1	/P	Screw, Self-tapping, 5/16-18, 0.750,
6	710-1652	1	/P	Screw, Self-tapping, 1/4-20 x .625
7	710-3217	1	/P	Screw, Mach, #8-32, 0.375
8	712-0142	1	/P	Nut, Hex, #8-32
9	714-04040	1	/P	Pin, Cotter, Bow-Tie 72
10	726-3046	1	/P	Clip, Ratchet, .250 Dia
11	731-05447A	1		Lever, Dash, Cruise/Brake
12	731-06593	1		Knob, Throttle
13	931-06666	1	/P	Dash Panel, A-Style, Man PTO
14	735-0271A	1	/P	Bumper, .62 Dia X .3
15	735-04076	1		Net
16	747-05009A	1		Rod, Control, Latch
17	747-1196	1		Rod, Lever, Bent
18	783-06098-0637	1		Support, Dash, Plate LH
19	783-06099-0637	1		Support, Dash, Plate RH
20	925-1649	1	/P	Socket, Lamp
21	710-05108	1		Screw, 1/4 Dia, .750
22	926-0154	1	/P	Tie, Cable, Push Mount 7.5 Lg
23	931-04322	1	/P	Grille Ass'y (Incl. 26, 27, 32 & 33)
24	931-06542	1	/P	Scoop, Hood, RH A-Style
25	931-06543	1	/P	Scoop, Hood, LH A-Style
26	931-06558	1	/P	Lens, Hood, RH A-Style
27	931-06559	1	/P	Lens, Hood, LH A-Style
28	931-06634	1	/P	Hood, A-Style
29	936-0222	1	/P	Washer, Lock, 1/4, External
30	936-3020	1	/P	Washer, Flat, .271, .630, .065
31	738-04091A	1	/P	Screw, Shoulder, .43x.29, 5/16-18
32	777X44055	1		Reflector, Cub A Style, LH
33	777X44056	1		Reflector, Cub A Style, RH
34	783-06114-0637	1		Bracket, Pivot, Hood A-Style
35	751-10879	1		Tank, Fuel, 3.75 Gal.
35	751-10906	1		Tank, Fuel, 3.30 Gal. (CA) California
36	710-1652	1	/P	Screw, Self-tapping, 1/4-20, .625
36	710-0642	1	/P	Screw, Self-tapping, 1/4-20, .75 (CA)
37	747-05040A	1	/P	Rod, Support, Fuel Tank
38	951-10589	1	/P	Canister, Carbon, 5 Gallon (CA)
39	951-10590	1	/P	Filter, Vent, Canister (CA)
40	951-10610	1	/P	Bracket, Adapter, Canister (CA)
41	751-10749	1		Hose, Fuel, Low Perm, 3/16 Wht (CA)
42	751-10750-28	1		Hose, Fuel, Low Perm, 7/32 Yel (CA)
43	751-10441	1		Valve, Rollover Grommet (CA)
44	735-04081	1		Grommet, Rubber, 23.0 ID (CA)
45	751-0603A	1	/P	Cap, Fuel
45	951-10947	1	/P	Cap, Fuel (CA)
46	925-2054A	1	/P	Key, Ignition
47	735-04170	1		Gasket, Fuel Tank
48	925-0963	1	/P	Lamp, 12v
49	731-1999	1		Plug, Choke
50	925-04227B	1	/P	Module Switch, Ignition

SLTX1054VT Tractor
Fuel Tank, Hood & Dash


Page 46 of 63

Ref #	Part Number	Qty	S/P/F	Description
51	946-04556	1	/P	Cable, Throttle/Choke, 38"
52	925-04022B	1	/P	Meter, Indicator
53	725-04258	1	/P	Switch, Electric PTO, Yellow

 777D14329




777D14330

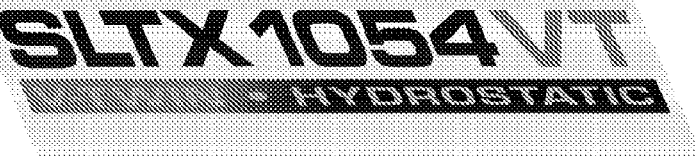

777123293



 777D12928



777S33233

▲ DANGER
ROTATING BLADES CAUSE SERIOUS INJURY OR DEATH

- DO NOT MOW WHEN CHILDREN OR OTHERS ARE AROUND
- NEVER CARRY CHILDREN EVEN WITH BLADE(S) OFF.
- LOOK DOWN AND BEHIND BEFORE AND WHILE BACKING.
- MOWING IN REVERSE IS NOT RECOMMENDED.

▲ WARNING
TO AVOID SERIOUS INJURY OR DEATH

- GO UP AND DOWN SLOPES, NOT ACROSS.
- AVOID SUDDEN TURNS.
- DO NOT OPERATE THE UNIT WHERE IT COULD SLIP OR TIP.
- IF MACHINE STOPS GOING UPHILL, STOP BLADE(S) AND BACK DOWNHILL SLOWLY.
- KEEP SAFETY DEVICES (GUARDS, SHIELDS, AND SWITCHES, ETC.) IN PLACE AND WORKING.
- REMOVE OBJECTS THAT COULD BE THROWN BY THE BLADE(S).
- KNOW LOCATION AND FUNCTION OF ALL CONTROLS.
- BE SURE BLADE(S) AND ENGINE ARE STOPPED BEFORE PLACING HANDS OR FEET NEAR BLADE(S).
- BEFORE LEAVING OPERATOR'S POSITION, DISENGAGE BLADE(S), ENGAGE PARKING BRAKE, SHUT OFF AND REMOVE KEY.

READ OPERATOR'S MANUAL.

WARNING
Operation of This Equipment May Create Sparks That Can Start Fires Around Dry Vegetation. A Spark Arrestor May Be Required. The Operator Should Contact Local Fire Agencies For Laws Or Regulations, To Fire Prevention Requirements.

TO START

1. ENGAGE BLADE(S) (POWER TAKE OFF)
2. ENGAGE THE TRACTOR'S PARKING BRAKE.
3. ACTIVATE THE CHOKE CONTROL.
4. TURN KEY TO START ENGINE. AFTER START RELEASE KEY & DEACTIVATE CHOKE BY PULLING THROTTLE TO EASY "START" POSITION.

OPERATING MODES

NORMAL MOWING
YOU MUST DISENGAGE BLADE(S) (POWER TAKE OFF) BEFORE TRAVELING IN REVERSE.

CAUTION MODE

1. TURN KEY TO REVERSE CAUTION MODE POSITION.
2. DEPRESS REVERSE PLAIN BUTTON. (RED INDICATOR LIGHT "OFF" WHEN RED LIGHT IS "OFF" MACHINES CAN BE OPERATED IN REVERSE WITH MOWER BLADES ENGAAGED.)

IMPORTANT: MOWING IN REVERSE IS NOT RECOMMENDED.

1. AFTER RESUMING FORWARD OPERATION, RETURN KEY TO "NORMAL MOWING" POSITION.
2. AFTER RESUMING FORWARD OPERATION, RETURN KEY TO "NORMAL MOWING" POSITION.

NOTE: IN BOTH MODES, WHEN OPERATOR LEAVES SEAT, ENGINE WILL STOP UNLESS PARKING BRAKE IS SET AND BLADES ARE DISENGAGED.

LOWER DASH

PARKING BRAKE DEPRESS BRAKE PEDAL PUSH PARKING BRAKE LEVER DOWN AND RELEASE PEDAL TO LOCK

CHOKE CONTROL

DEPRESS SPEED CONTROL PEDAL TO DEPRESS SPEED. PUSH CHOKE CONTROL LEVER DOWN AND RELEASE PEDAL. PUSHS BRAKE OR CHOKE CONTROL TO RELEASE.


FORWARD

REVERSE


SEATED ON DRIVER'S RIGHT. DIRECTION INDICATED BY CONTROL. PICTORIAL.

For A List Of Optional Attachments, Please Refer To Your Operators Manual.


777D13983

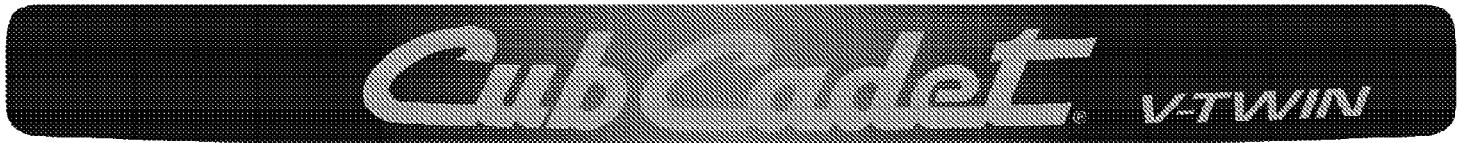

777123292

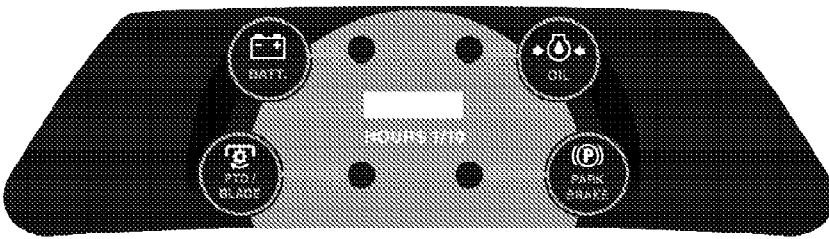

777123294

 

777122679



777D12864




777S33183

▲ DANGER
AVOID SERIOUS INJURY OR DEATH

- KEEP HANDS AND FEET AWAY FROM ROTATING PARTS.
- REMOVE OBJECTS THAT CAN BE THROWN BY THE BLADE IN ANY DIRECTION. WEAR SAFETY GLASSES.
- DO NOT MOW WHEN CHILDREN OR OTHERS ARE AROUND. NEVER CARRY CHILDREN EVEN WITH BLADE(S) OFF.
- USE EXTRA CAUTION ON SLOPES. DO NOT MOW SLOPES GREATER THAN 15°. MOW ACROSS NOT UP AND DOWN. AVOID SUDDEN TURNS. USE LOW SPEED.

MAX 15°

777122265

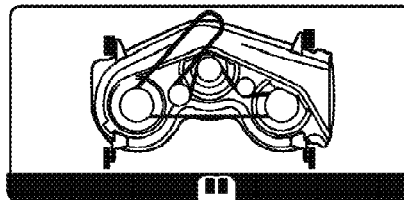

777S23132

TRANSMISSION RELEASE

ENGAGED

RELEASED

LIFT ROD UP AND DOWN TO RELEASE TRANSMISSION.

LIFT ROD UP TO ENGAGE TRANSMISSION.

777123133



777S30503

▲ DANGER
KEEP HANDS AND FEET AWAY. DO NOT OPERATE MOWER UNLESS CHUTE DEFLECTOR OR ENTIRE GRASS CATCHER IS IN ITS PROPER PLACE.

S30503

ASSEMBLE CHUTE DEFLECTOR TO THIS UNIT BEFORE OPERATING.

777X44333


MODEL SLTX 1054 VT REPLACEMENT PARTS

Use only Cub Cadet genuine factory parts


Blades	942-06778 (8)	Oil Filter	85-588684
Lower Drive Belt	952-84207	Air Filter	85-792165
Engine To Deck Belt	954-8647	Pre-Cleaner	85-792309
Deck Spindles	018-041298	Spark Plug	748-2236
Ignition Key	925-20544	Fuel Filter	85-091803
Selenoid	725-04493	Oil Capacity	63.0 oz

www.cubcadet.com

777D13924

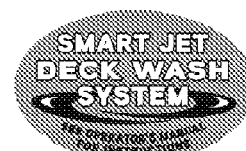

Ref #	Part Number	Qty	S/P/F	Description
777I22265	777I22265	1		LABEL-BELT ROUTE
777X44333	777X44333	1		LABEL-PARTS LIST SLTX 1054 V
777I23133	777I23133	1		LABEL-FUEL LEVEL
777I23294	777I23294	1		LABEL-THROTTLE/CHOKE
777D13924	777D13924	1		LABEL-DECK WASH SYSTEM
777S33183	777S33183	1		LABEL-DECK SAFETY
777S30503	777S30503	1	/P	LABEL-DANGER CHUTE
777I22679	777I22679	1		LABEL-CHECK ENG OI
777I23293	777I23293	1		LABEL-DECK HEIGHT
777D14330	777D14330	1		LABEL-SLTX 1054VT HYDRO V-TWN RH
777D14329	777D14329	1		LABEL-SLTX 1054VT HYDRO V-TWN LH
777D13983	777D13983	1		LABEL-FENDER REAR V-TWN C CADET
777D12864	777D12864	1		LABEL-C LOGO GRILLE C CADET
777D12928	777D12928	1		LABEL-LFT SIDE HOOD SCOOP
777S33233	777S33233	1		LABEL-FLOORBRD SAFETY HYDRO
777D12929	777D12929	1		LABEL-RGT SIDE HOOD SCOOP
777S23132	777I23132	1		LABELRDR:ASTYLE TRANS REL
777I23292	777I23292	1		LABEL-A STY DASH PNL

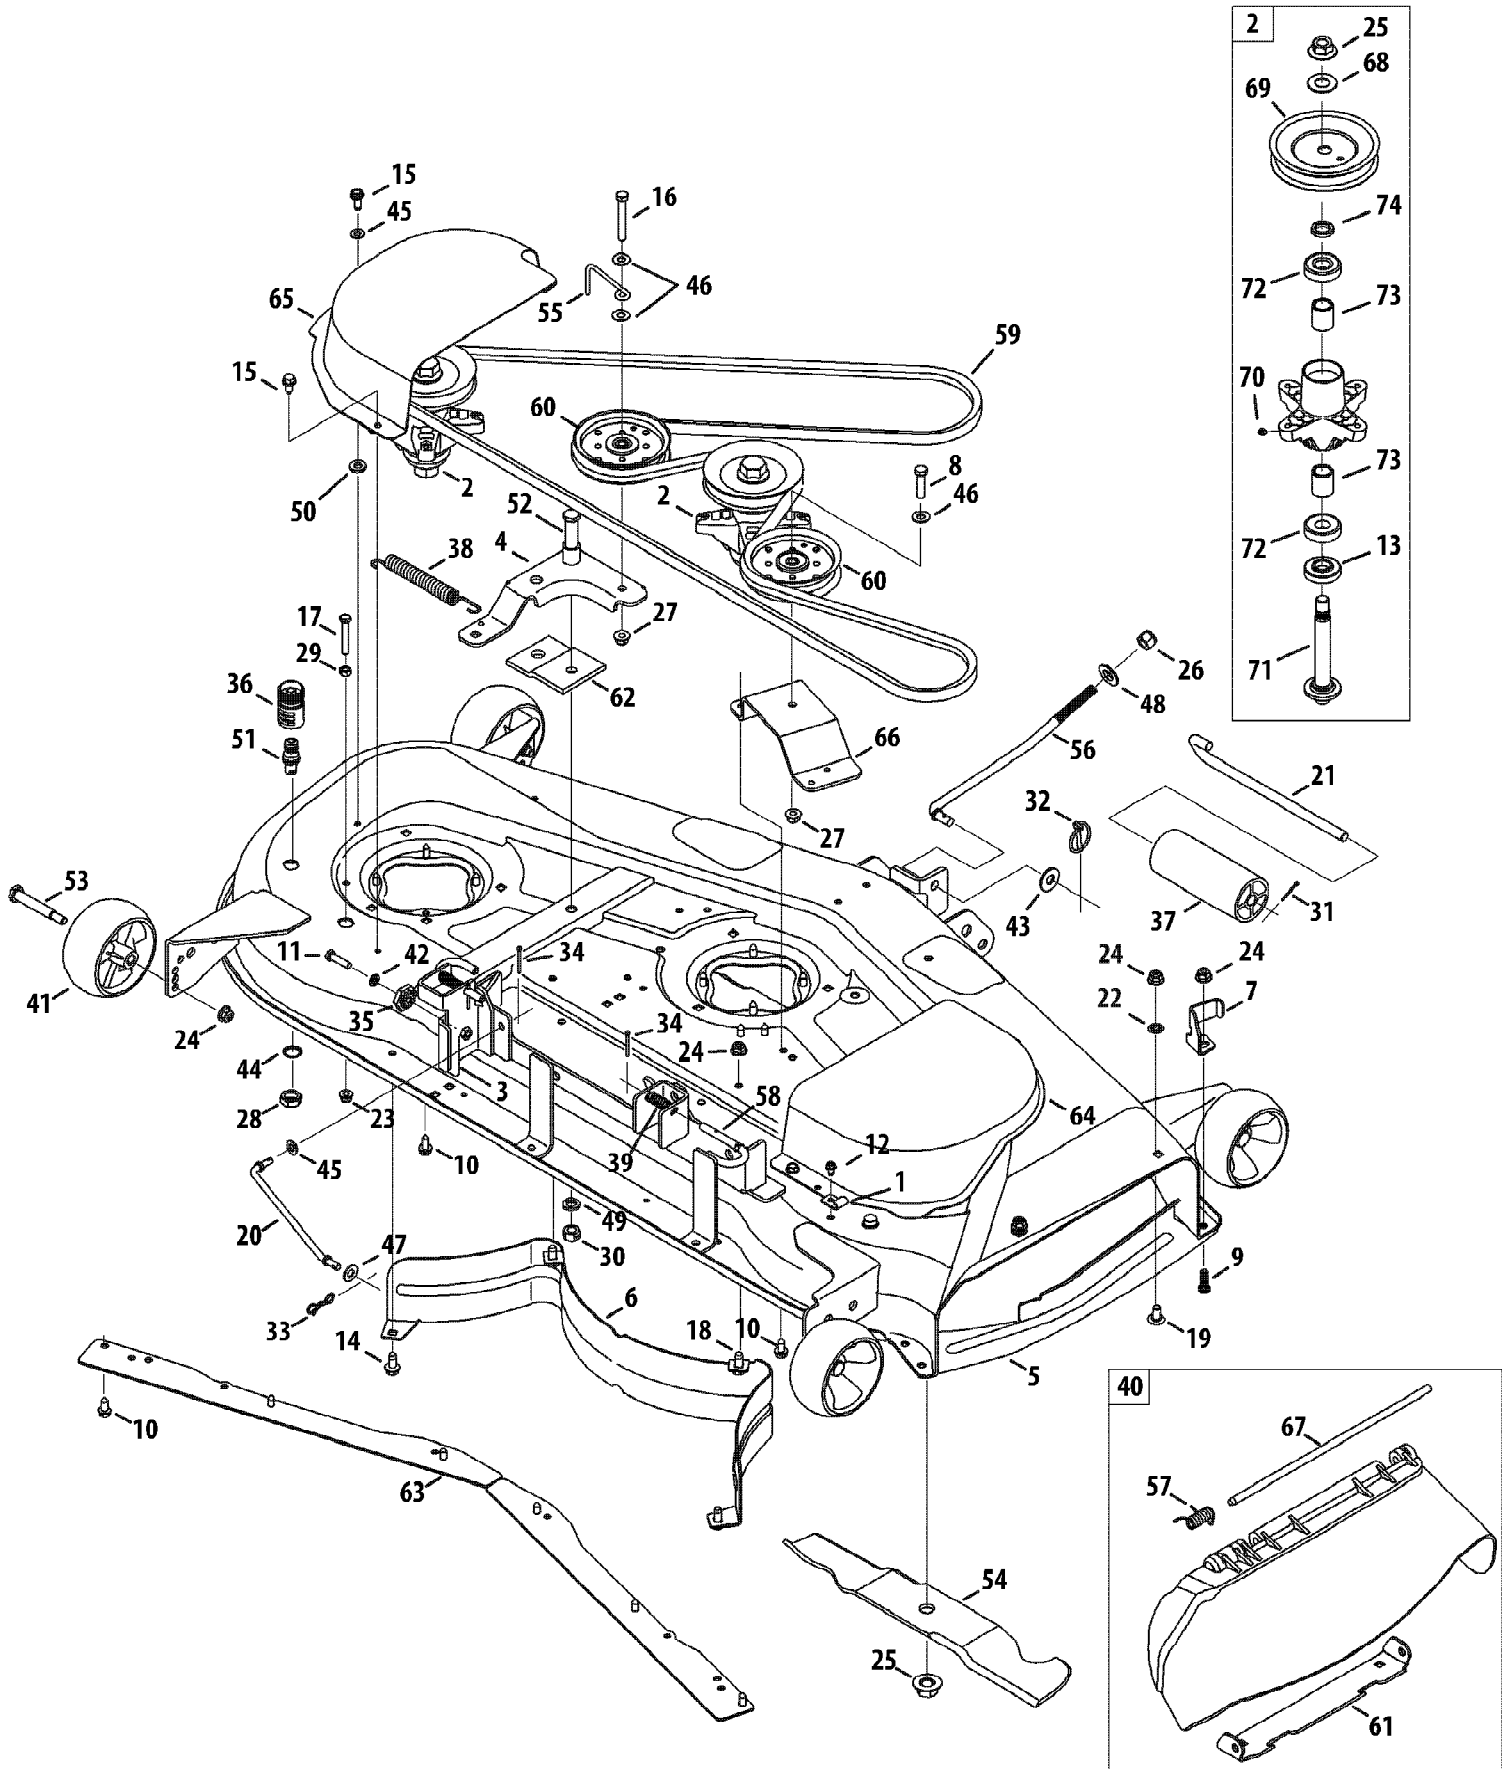

SLTX1054VT Tractor
Mower Deck


Page 50 of 63

Ref #	Part Number	Qty	S/P/F	Description
1	96606	1	/P	Bracket, Hook, Retainer
2	918-04126B	1	/P	Spindle Assembly, Pulley, 5.39 Dia.
3	683-0254B-4021	1		Bracket Assembly, Deck, Hanger LH
4	683-04182-0637	1	/P	Idler Assembly, Arm, 54"
5	983-04510-4021	1	/P	Deck Assembly, 54"
6	703-2093-0637	1	/P	Baffle, Rear
7	703-3279-4021	1		Stop, Chute, Deflector
8	710-0347	1	/P	Hex Screw, 3/8-16, 1.75, Gr5
9	710-04095	1		Hex Screw, 3/8-16, 1.00, Gr5, Spec
10	710-04484	1		Screw, Self-tapping, 5/16-18, .750
11	710-0528	1	/P	Hex Screw, 5/16-18, 1.25, Gr5, Std
12	710-0599	1	/P	Screw, Self-tapping, 1/4-20, 0.500
13	710-0604A	1	/P	Screw, Self-tapping, 5/16-18, 0.625
14	710-0623	1	/P	Screw, Self-tapping, 3/8-16, 0.750
15	710-0650	1	/P	Screw, Self-tapping, 5/16-18, 0.875
16	710-0859	1	/P	Hex Screw, 3/8-16, 2.50, Gr5, Std
17	710-3103	1	/P	Hex Screw, 5/16-18, 2.00, Gr5, Std
18	710-3168	1	/P	Bolt, Carriage, 3/8-16, 1.00, Gr5
19	710-3178	1	/P	Bolt, Carriage, 3/8-16, 0.75, Gr1
20	711-05078	1		Rod, Support, Deck
21	911-3314	1	/P	Roller Pin-1/2 Dia. x 7.31
22	712-0229	1		Nut, Push, 3/8
23	712-04063	1	/P	Nut, Flange Lock, 5/16-18, Nylon
24	712-04065	1	/P	Nut, Flange Lock, 3/8-16, Nylon
25	712-0417A	1	/P	Nut, Flange, 5/8-18
26	712-04243	1		Nut, 1/2-13
27	912-0431	1	/P	Nut, Flange Lock, 3/8-16, GrF
28	912-0641	1	/P	Nut, Hex, M16-1.5
29	912-3010	1	/P	Nut, Hex, 5/16-18, Gr5
30	712-3022	1	/P	Nut, Hex Lock, 1/2-13, GrB
31	914-0111	1	/P	Pin, Cotter, 3/32, 1.0
32	753-04070	1	/P	Pin, Lynch, .1875
33	714-04043	1		Pin, Cotter, Bow-Tie
34	914-0470	1	/P	Pin, Cotter, 1/8 x 1.25
35	917-04074	1	/P	Gear, Deck, Adjustment
36	921-04041	1	/P	Coupler, Water
37	731-05679	1		Roller, Front
38	732-04247	1		Spring, Extension, .85 OD x 6.415
39	732-04652	1		Spring, Compr', .53 OD x 1.75
40	631-04070A	1	/P	Chute Assembly
41	734-04155	1		Wheel, Deck, 5.0 Dia. Ball
42	936-0119	1	/P	Washer, Lock, 5/16, Regular Duty
43	936-0179	1	/P	Washer, Flat, .531 x 1.25 x .100
44	736-0225	1	/P	Washer, Lock, 5/8, Int Tooth
45	936-0275	1	/P	Washer, Flat, .344 X .688 X .065
46	936-0300	1	/P	Washer, Flat, .406 x .875 x .059
47	936-0314	1	/P	Wash, Thrust, .375x.70x.030
48	736-0317	1	/P	Washer, Bell, .63 x 1.25 x .18
49	936-0921	1	/P	Washer, Lock, 1/2, Regular Duty
50	736-3010	1	/P	Washer, Flat, .407x.812x.135
51	737-04003D	1	/P	Port, Water
52	738-1229A	1	/P	Bolt, Shoulder, .625 x 2.50, 1/2-13
53	938-3056	1	/P	Bolt, Shoulder, .496 x 2.50, 3/8-16


SLTX1054VT Tractor
Mower Deck

Page 51 of 63

Ref #	Part Number	Qty	S/P/F	Description
54	942-0677B	1	/P	Blade, 18.50 Star 2 In 1
55	747-04530	1		Rod, Keeper
56	747-05067A	1	/P	Deck Lift Rod, Front, 11.7
57	732-04372	1		Spring, Torsion, .44 I.D. x 2.0,
58	747-1116	1	/P	Rod, Deck Release
59	954-0642	1	/P	Belt, V-Type
60	756-04129B	1	/P	Pulley, Idler, 4.25"Dia.
61	783-05030	1		Bracket, Chute 50/54"
62	783-04013A-0637	1	/P	Bracket, Stabilizer, Pulley
63	783-04690B-0637	1	/P	Skirt, Deck, 54"
64	783-04691-4021	1		Cover, Belt, RH 54"
65	783-04692-4021	1		Cover, Belt, LH 54"
66	783-04726-0637	1		Bracket, Idler, Stationary
67	711-04565	1		Pin, Hinge, .3175 Dia. x 14.06 ,1
68	736-0315	1	/P	Washer, Flat, .760 X 1.50 X .120
69	756-04216	1		Pulley, Deck, 5.39 Dia.
70	937-3000	1	/P	Lube Fitting, 3/16
71	738-1010A	1	/P	Shaft, Spindle, 5.75 Lg.
72	941-0919	1	/P	Bearing, Ball, .787id x 1.85 Od x .551
73	750-1000	1		Spacer, .80 x 1.10 x 1.322
74	748-0160A	1		Spacer, .790 x 1.25 x .175
75	750-1349A	1	/P	Spacer, .79 x 1.82 x .55lg.

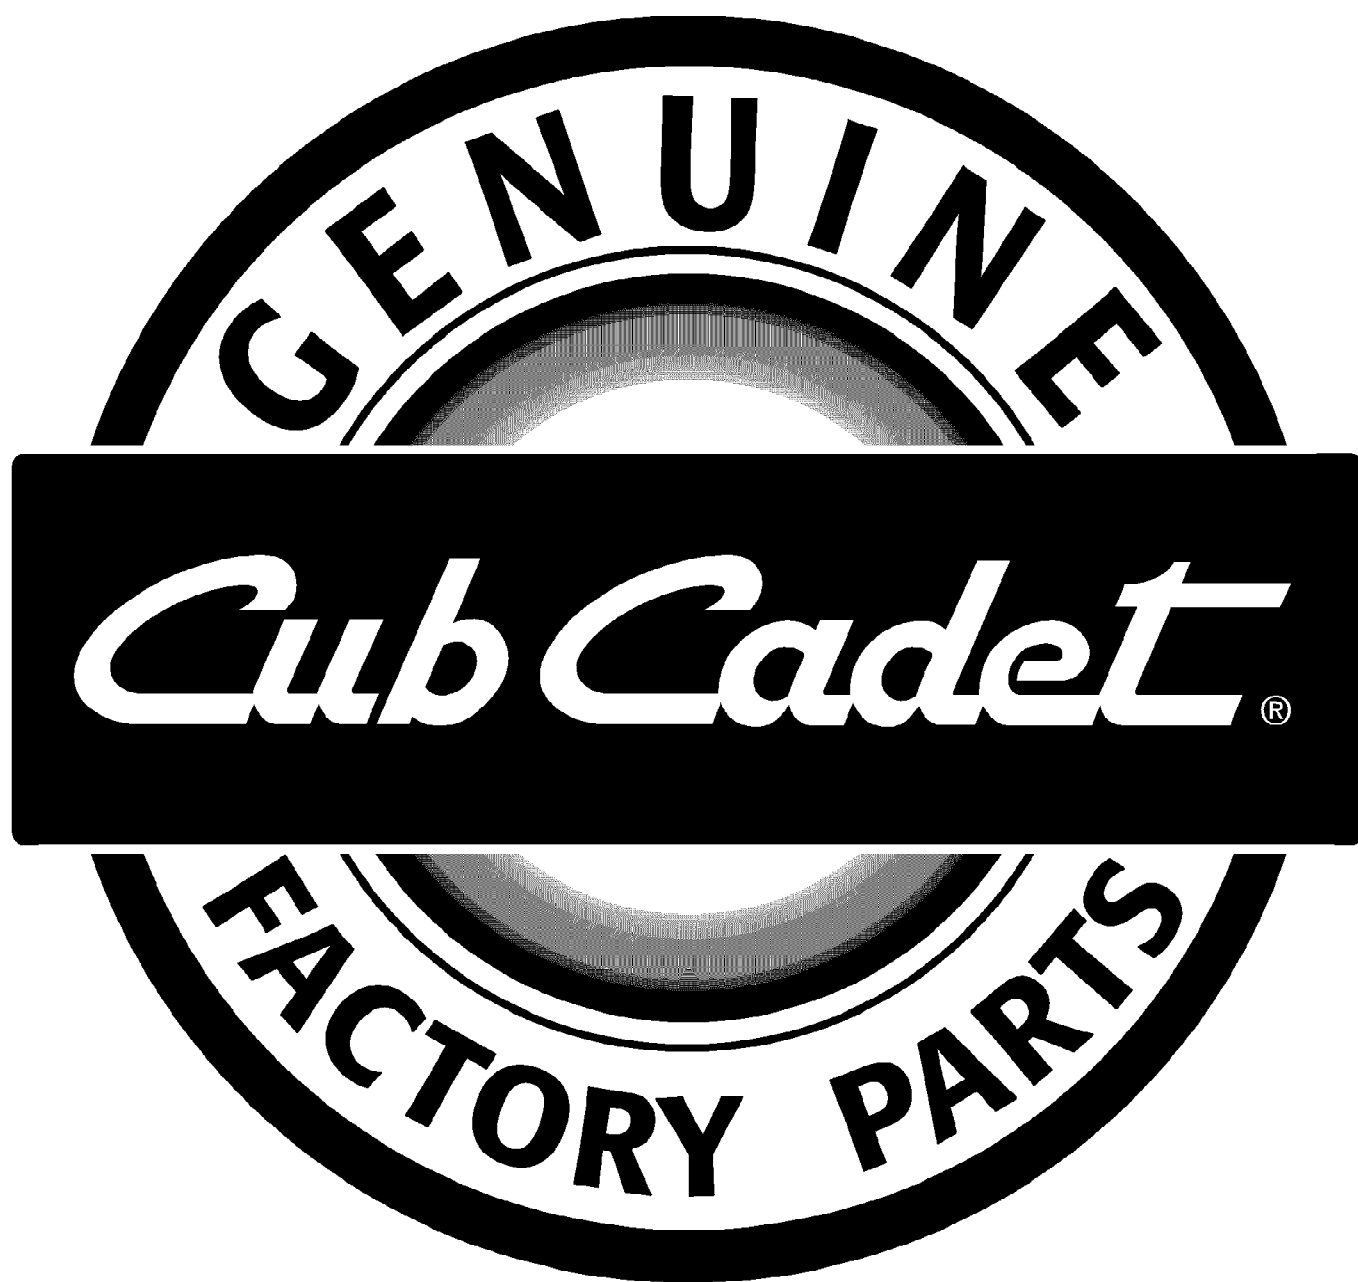


Ref #	Part Number	Qty	S/P/F	Description
	759-3336	1	/P	Spark Plug
	BS-792105	1	/P	Air Filter
	BS-792303	1	/P	Pre-Cleaner
	BS-492932S	1	/P	Oil Filter
	BS-691035	1	/P	Fuel Filter
	BS-691060	1	/P	Ignition Module
	BS-794360	1	/P	Voltage Regulator
	BS-808656	1	/P	Fuel Pump
	BS-792455	1	S	Carb Repair Kit
	BS-841546	1		Carburetor Solenoid
	754-04207	1	S	Drive Belt (Trans)
	954-0642	1	/P	PTO/Deck Belt
	942-0677B	1	/P	Blades
	712-0417A	1	/P	Blade Nut
	918-04126B	1	/P	Spindle Assy. w/Pulley
	734-04155	1		Deck Wheels (Front)
	734-04155	1		Deck Wheels (Back)
	921-04041	1	/P	Water Nozzle Adapter
	923-0448A	1	/P	Ball Joints
	725-04363	1		Brake Switch
	751-0603A	1	/P	Fuel Cap
	725-04439	1		Solenoid
	925-2054A	1	/P	Ignition Keys
	925-04227B	1	/P	Ignition Switch Module
	725-04258	1	/P	P.T.O. Switch
	917-1774C	1	/P	P.T.O. Clutch
	19A40002100	1	/P	Bagger Attachment
	190-841-190	1		Mulch Attachment

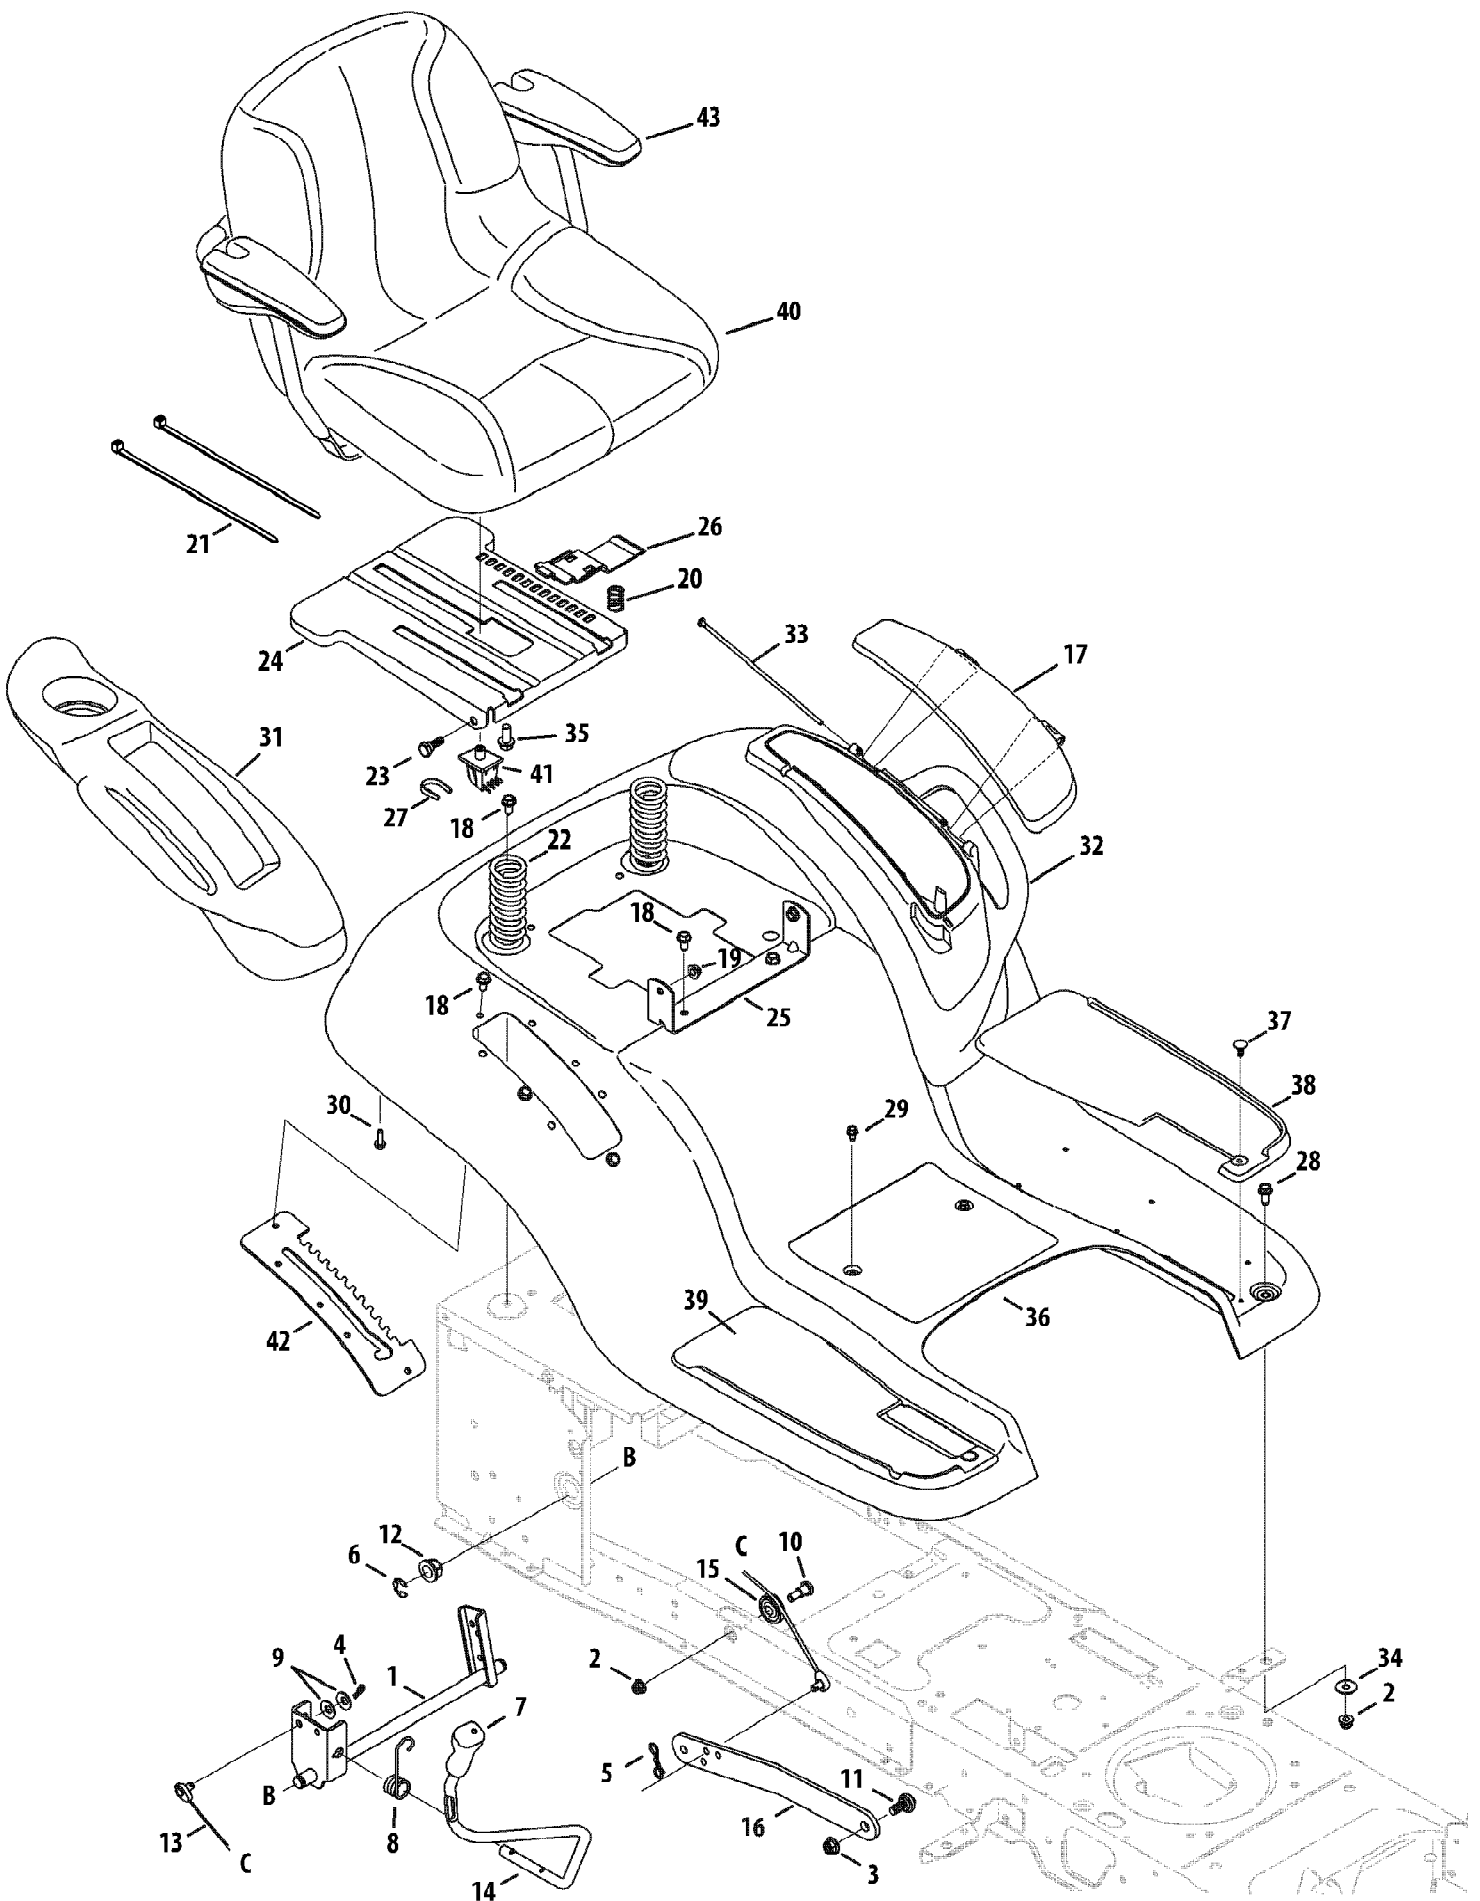

SLTX1054VT Tractor
Seat, Fender & Lift

Page 55 of 63


Ref #	Part Number	Qty	S/P/F	Description
1	683-04301-0637	1	/P	Shaft Ass'y, Lift, 54"
2	712-04063	1	/P	Nut, Flange Lock, 5/16-18, Grf
3	712-04065	1	/P	Nut, Flange Lock, 3/8-16, Grf
4	914-0104	1	/P	Pin, Cotter, .072 Dia. x 1.13
5	714-04040	1	/P	Pin, Cotter, Bow-Tie 72
6	716-0106A	1		Ring, E Type, .625 Dia. Shaft
7	720-04139	1		Grip, Handle, Cub, .50 ID
8	732-0874	1	/P	Spring, Torsion
9	736-0105	1	/P	Washer, Spring, .401 x .870 x .063
10	738-0138A	1	/P	Screw, Shoulder, .437 x .470, 5/16-18
11	938-0380	1	/P	Bolt, Shoulder, .50, 3/8-16
12	941-0225	1	/P	Bearing, Hex Flange
13	746-0968	1		Cable, Lift, 16.16
14	747-04962A	1	/P	Handle, Lift,
15	756-04331	1		Pulley, Roller, Cable
16	783-05546A-0637	1	/P	Link, Lift
17	731-06584	1		Door, Cover, Fender
18	710-04484	1		Screw, Self-tapping, 5/16-18, .750,
19	712-3004A	1	/P	Nut, Flange Lock, 5/16-18, Gr5, Sd Lk
20	732-04563	1		Spring, Compr', .68 x 1.065 x .055
21	725-0157	1	/P	Cable, Tie, 3/16 x .05 x 7.4
22	732-04561	1		Spring, Compr, 1.71 x 3.735 x .238
23	938-0296	1	/P	Screw, Shoulder, .437 x .268, 5/16-18
24	783-06049-0637	1		Bracket, Mounting, Seat
25	783-06088-0637	1		Bracket, Pivot, Seat
26	783-06050	1		Lever, Seat Adjustment
27	783-06448	1		Clip, Retaining, Switch
28	710-1260A	1	/P	Hex Screw, 5/16-18, .75, Gr5, Std
29	710-0599	1	/P	Screw, Self-tapping, 1/4-20, 0.500,
30	710-0895	1		Screw, HL, 1/4-15, 0.750,
31	731-06700	1		Cover, Fender, RH
32	731-06676	1		Cover, Fender, LH
33	747-05039	1		Pin, Door
34	736-3078	1	/P	Washer, Flat .344 x 1.00 x .063
35	710-04482	1		Hex Flange Screw, 3/8/16, .875, Gr5 Seat stop bolt, one used
36	783-06118-4021	1		Fender, Cub Hydro
37	726-3046	1	/P	Clip, Ratchet, .250 Dia
38	735-04137	1		Pad, Foot, LH
39	735-04139	1		Pad, Foot, RH
40	757-04132	1		Seat, High Back Cloth w/o Arm Rest
41	925-05013	1	/P	Switch, Seat
42	783-06181-0637	1		Bracket, Lift
43	757-04073	1		Arm Rest Kit

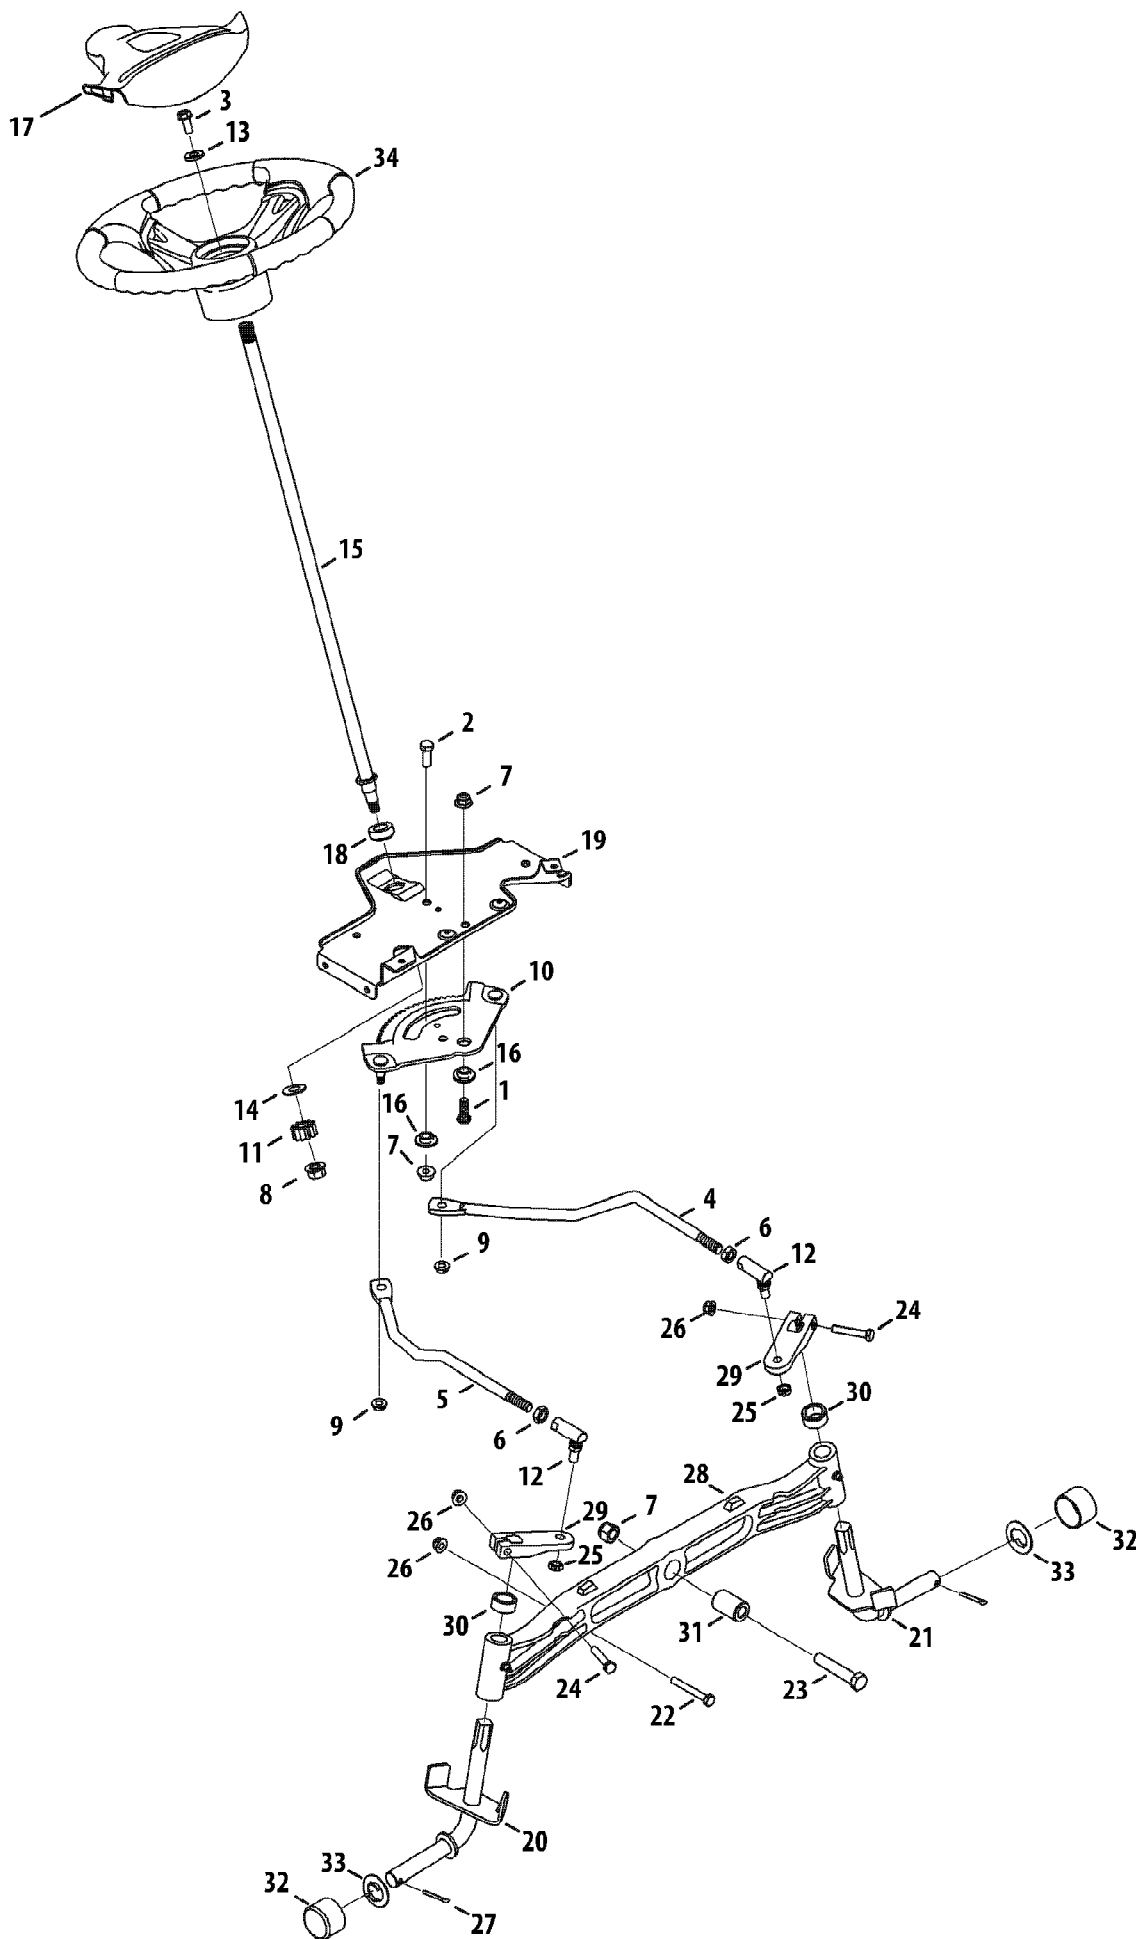

SLTX1054VT Tractor
Steering

Page 57 of 63

Ref #	Part Number	Qty	S/P/F	Description
1	710-04095	1		Hex Screw, 3/8-16, 1.00, Gr5, Spec
2	710-0514	1	/P	Hex Screw, 3/8-16, 1.00, Gr5, Std
3	710-0650	1	/P	Hex Screw, 5/16-18, .875, Gr5, Lock
4	711-04998	1		Link, Drag LH
5	711-04999	1		Link, Drag RH
6	912-0240	1	/P	Nut, Jam, 7/16-20, Gr2
7	712-04065	1	/P	Nut, Flange Lock, 3/8-16, Grf,
8	712-0459	1	/P	Nut, Flange Lock, 7/16-20, Grb, Lock
9	712-3004A	1	/P	Nut, Flange Lock, 5/16-18, Gr5, Sd Lk
10	717-1550F	1	/P	Gear, Steering, 11/90 Ratio
11	717-1554	1		Gear, Pinion, Steering
12	923-0448A	1	/P	Ball Joint, 7/16-20, Lock
13	936-3004	1	/P	Washer, Flat, .406 x .875 x .105
14	736-3084	1	/P	Washer, Flat, .51 x 1.12 x .06
15	738-04262	1		Shaft, Steering, .625 OD x 25
16	738-04363	1		Spacer, Shoulder, .385x 1.25 x .3025
17	731-04532B	1		Cover, Steering Wheel, Cub Cadet
18	741-04237B	1	/P	Bearing, Flange, Hex 5/8 Pm
19	783-06043-0637	1		Bracket, Support, Steering
20	638-04029-0637	1		Axle Ass'y, RH .750 Dia.
21	638-04030-0637	1		Axle Ass'y, LH .750 Dia.
22	710-0395	1	/P	Hex Screw, 5/16-18, 2.25, Gr5, Std
23	710-0859	1	/P	Hex Screw, 3/8-16, 2.50, Gr5, Std
24	710-3180	1	/P	Hex Screw, 5/16-18, 1.75, Gr5, Std
25	912-0214	1	/P	Nut, Hex Lock, 3/8-24, Grb
26	712-04063	1	/P	Nut, Flange Lock, 5/16-18, Grf
27	714-0162	1	/P	Pin, Cotter, 5/32, 1.25
28	719-04413A	1		Axle, Pivot Bar, Cast
29	748-04065-0637	1	/P	Steering, Block
30	748-04068	1		Spacer, .71 ID x .125 OD x .56
31	750-05280	1		Spacer, .385 x 1.00 x 1.5075
32	731-05674	1	/P	Cap, Bumper
33	736-04228A	1		Washer, Flat, .350 x 1.559 x .062
34	631-04008A	1	/P	Wheel, Steering, 3 Spoke, Softgrip

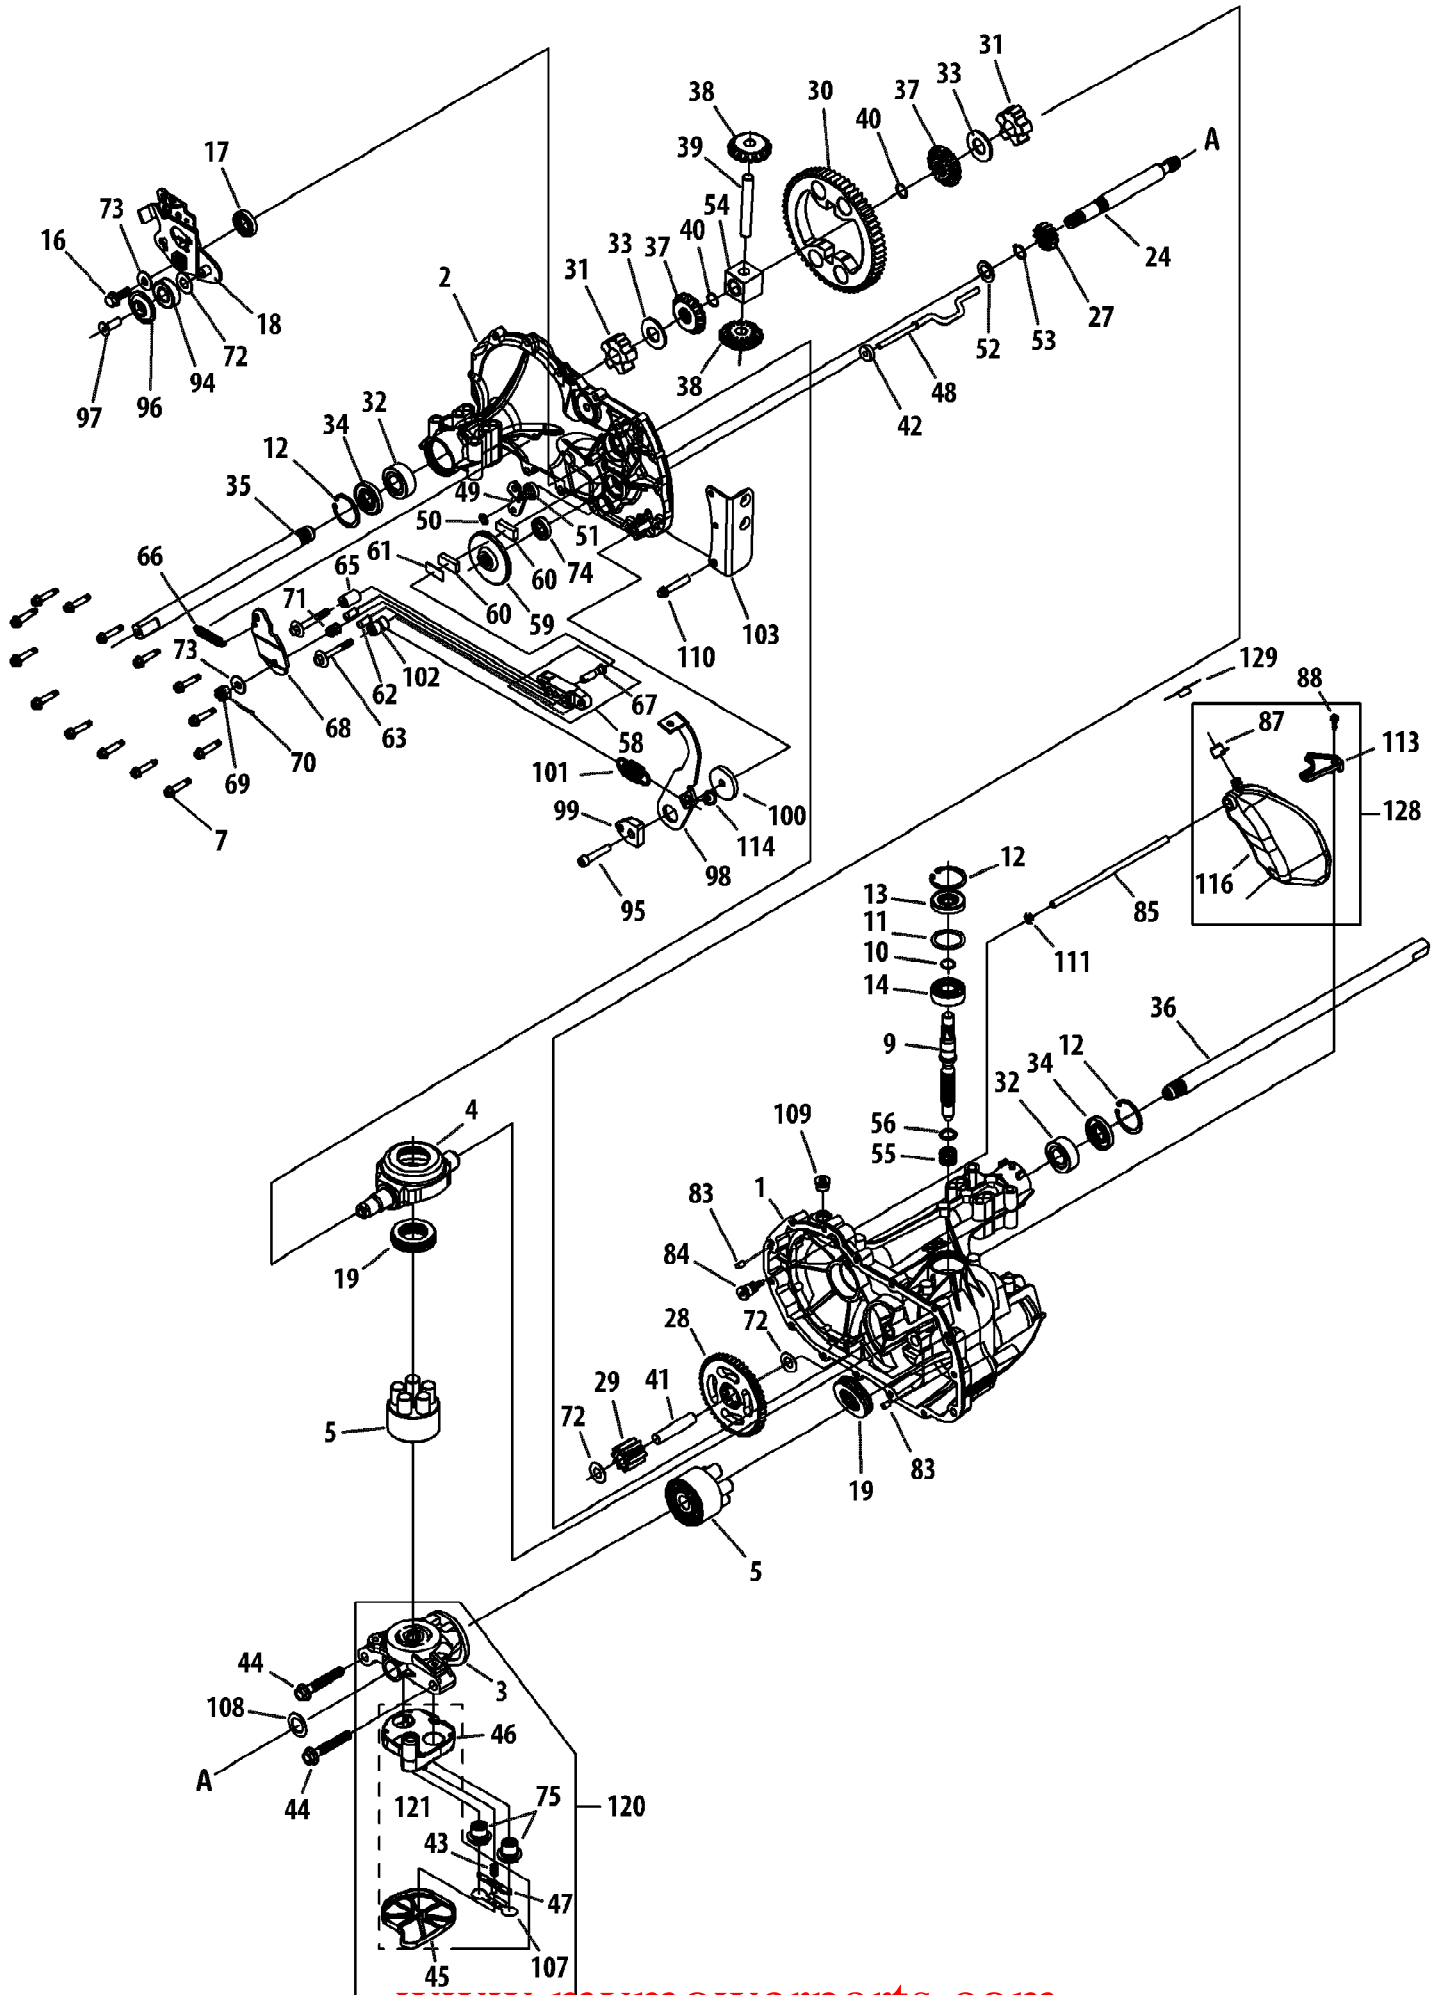

SLTX1054VT Tractor
Transmission

Page 59 of 63

Ref #	Part Number	Qty	S/P/F	Description
1	HG-70467	1		Main Housing Assembly
1	N/A	1		Main Housing, Machined
1	N/A	1		Bushing ,865 x 985 x .790
2	HG-70483	1	/P	Main Housing Assembly
2	N/A	1		Main Housing, Machined
2	N/A	1		Bushing ,865 x 985 x .790
2	N/A	1		Bushing 624 x 719 x .562
3	HG-70477	1		Center Section Assembly
3	N/A	1		Center Section Machined
3	N/A	1		Bushing. 707 x .788 x .591
4	HG-51048	1	/P	Swashplate, Trunnion Machined
5	HG-70331	1	/P	Block - Assembly
5	N/A	1		Block - Cylinder
5	N/A	1		Piston
5	N/A	1		Spring, Compression
5	N/A	1		Washer - Thrust
7	HG-51190	1	/P	Hex Flange Screw 1/4-20 x-1,25
9	HG-51062	1	/P	Shaft, Input
10	HG-2000022	1	/P	Ring - Retaining
11	HG-50951	1	/P	Spacer
12	HG-50329	1	/P	Ring - Retaining
13	HG-51161	1	/P	SeaL Lip .67 x 1.58 x .276
14	HG-50315	1		Ball Bearing 17mm Id x 40mm Od
16	HG-51064	1		Bolt. Flange 5/16-24 x .94 (Patch)
17	HG-51140	1	/P	Lip Seal 18 x 32 x 7
18	HG-51119	1	/P	Arm Control
19	HG-50551	1	S	Bearing 30x52 x 13 Thrust
24	HG-50966	1		Shaft Motor
27	HG-51767	1		Gear - Pinnion 12t
28	HG-51766	1		10t/49t Gear
29	HG-51043	1	/P	Gear Jot Jackshaft
30	HG-51044	1		60t Bull Gear
31	HG-51088	1	/P	Sleeve Bearing .75 x 1.750 x .625
32	HG-51089	1	/P	Sleeve Bearing .75 x 1.575 x .625
33	HG-44875	1	/P	Washer 3/4 Id x 1-1/2 Od x .13 Thk
34	HG-51066	1	/P	Lip Seal Axle Seal
35	HG-51079	1	/P	Shaft Axle .75 x 11.39 (Dd R. H.)
36	HG-51078	1	/P	Shaft Axle .75 x 17.99 (Dd, L, H.)
37	HG-51769	1	/P	Miter Gear (Splined)
38	HG-51768	1		Miter Gear 15t (0.5 Id)
39	HG-50146	1		Shaft
40	HG-44871	1	/P	Ring, Spiral Retaining
41	HG-51083	1		Pin, Jackshaft
42	HG-51100	1		Magnet, Ring
43	HG-51136	1		Spring, Bypass
44	HG-50016	1		Hydro Mtg Screw 3/8-24 x 2.5
45	HG-51581	1		Bottom, Filter
46	HG-51580	1		Base Filter W/ Poppet
47	HG-51091	1		Actuator Bypass
48	HG-51098	1		Rod Bypass Actuator
49	HG-51135	1		Arm, Bypass
50	HG-51116	1	/P	Retaining Ring 0.250 External
51	HG-51081	1	/P	Seal Lip .741 x .250 x .250 Tc


SLTX1054VT Tractor
Transmission

Page 60 of 63

Ref #	Part Number	Qty	S/P/F	Description
52	HG-44371	1	/P	Flat Washer 5/8 Id x 1.0 Od x .05
53	HG-44145	1		Retaining Ring
54	HG-51071	1		Bearing, Center Block
55	HG-2003014	1	/P	Spring - Helical Compression
56	HG-2003017	1	/P	Washer
58	HG-62589	1	/P	Kit, Brake Yoke
58	N/A	1		Brake Yoke
58	N/A	1		Sq. Hd, Bolt 5/16-24 Ribbed
59	HG-51072	1	/P	Rotor, Brake
60	917-0678	1	/P	Brake Puck
61	917-0682	1	/P	Puck Plate
62	941-0343	1	/P	Brake Actuating Pin
63	HG-51146	1		Hex Screw 1/4-20 x 2 w/ Patch
65	HG-23711	1		Spacer
66	HG-51607	1		Kit, Spring
67	HG-44138	1		So. Hd, Bolt 5/16-24- Ribbed
68	HG-44094	1	/P	Arm, Brake
69	912-0273	1	/P	Slotted Hex Nut 5/16-24
70	914-0507	1	/P	Cotter Pin 3/32 x 3/4
71	HG-50919	1	/P	Comp. Spring Brake Anti-Drag
72	HG-50132	1	/P	Washer, Ht .5 I. D. x 1 OD, x .032
73	736-0371	1	/P	Flat Washer, 1 1/32 ID x 7/8 OD
74	HG-70719	1	/P	Kit, Seal
74	N/A	1		Oil, Seal 625 x Lo x .25
74	N/A	1		Ring, Ret-Star Washer
74	N/A	1		Bulletin, Shaft Seal
75	HG-51084	1	/P	Check Plug Assem, .027 Washer
83	HG-9004800-2506	1	/P	Pin, Standard Headless
84	HG-51143	1	/P	Fitting, 5/16 Sae 5/32 Tube
85	HG-51147	1		Hose, Expansion Tank
87	HG-51251	1		Cap,. Vent
88	HG-50653	1	/P	Bolt, Self Tapping 10-32 x 112
94	HG-44147	1		Ball Bearing .62 Id x 1,38 x 44
95	HG-50837	1		Cap Screw, 5/16-24 x 1-112
96	HG-51200	1		Spacer, Locating
97	HG-50870	1		Screw, Sfhcs
98	HG-51120	1		Arm, Return
99	HG-51097	1		Puck, Adjusting
100	HG-52493	1		Washer, .32 OD x 1.6 ID x .24
101	HG-51131	1	/P	Spring, Extension
102	HG-51123	1		Spacer, .56 x .26 x .87
103	HG-51223	1		Bracket, Torque
107	HG-51134	1		Deflector
108	HG-51069	1		Washer, Motor Shaft .71 Id 1.15 Od
109	HG-9005110-5600	1	/P	Plug, SAE #6
110	HG-50868	1		Torx Head Screw, 5/16-18
111	HG-51144	1		O-Ring, .07 x .301 ID
113	HG-51179	1		Bracket, Support Expansion Tank
114	HG-51184	1	/P	Spring Guide
116	HG-51196	1		Silicon Sponge
120	HG-71315	1		Center Section - Bypass Assm
120	N/A	1		Center Section Machined
120	N/A	1		Base Filter w/ Poppet

SLTX1054VT Tractor
Transmission

Ref #	Part Number	Qty	S/P/F	Description
120	N/A	1		Check Plug Assembly
120	N/A	1		Spring Bypass
120	N/A	1		Actuator Bypass
120	N/A	1		Deflector
120	N/A	1		Bottom, Filter
120	N/A	1		Bushing, .707 x .788 x .591
121	HG-70756	1	/P	Filter Assembly
121	N/A	1		Bottom Filter
121	N/A	1		Base Filter w/ Poppet
121	N/A	1		Spring Bypass
121	N/A	1		Actuator Bypass
121	N/A	1		Deflector
128	HG-70503	1	/P	Kit, Expansion Tank
128	N/A	1		Tank, Expansion
128	N/A	1		Cap, Vent
128	N/A	1		Bolt, Self Tapping 10-32 x 1/2
128	N/A	1		Bracket, Support Expansion Tank
128	N/A	1		Silicon-Sponge 112 x 1/2 x 3/16
129	HG-51252	1		Cap, Expansion Tank Shipping
	HG-50928	1	/P	Sealant Not Shown
	HG-70463	1	/P	Seal, O-Ring Kit Not Shown
		1		20w-50 Oil (78.8 oz) Not Shown
		1		Note: Transmission sealed and maintenance free

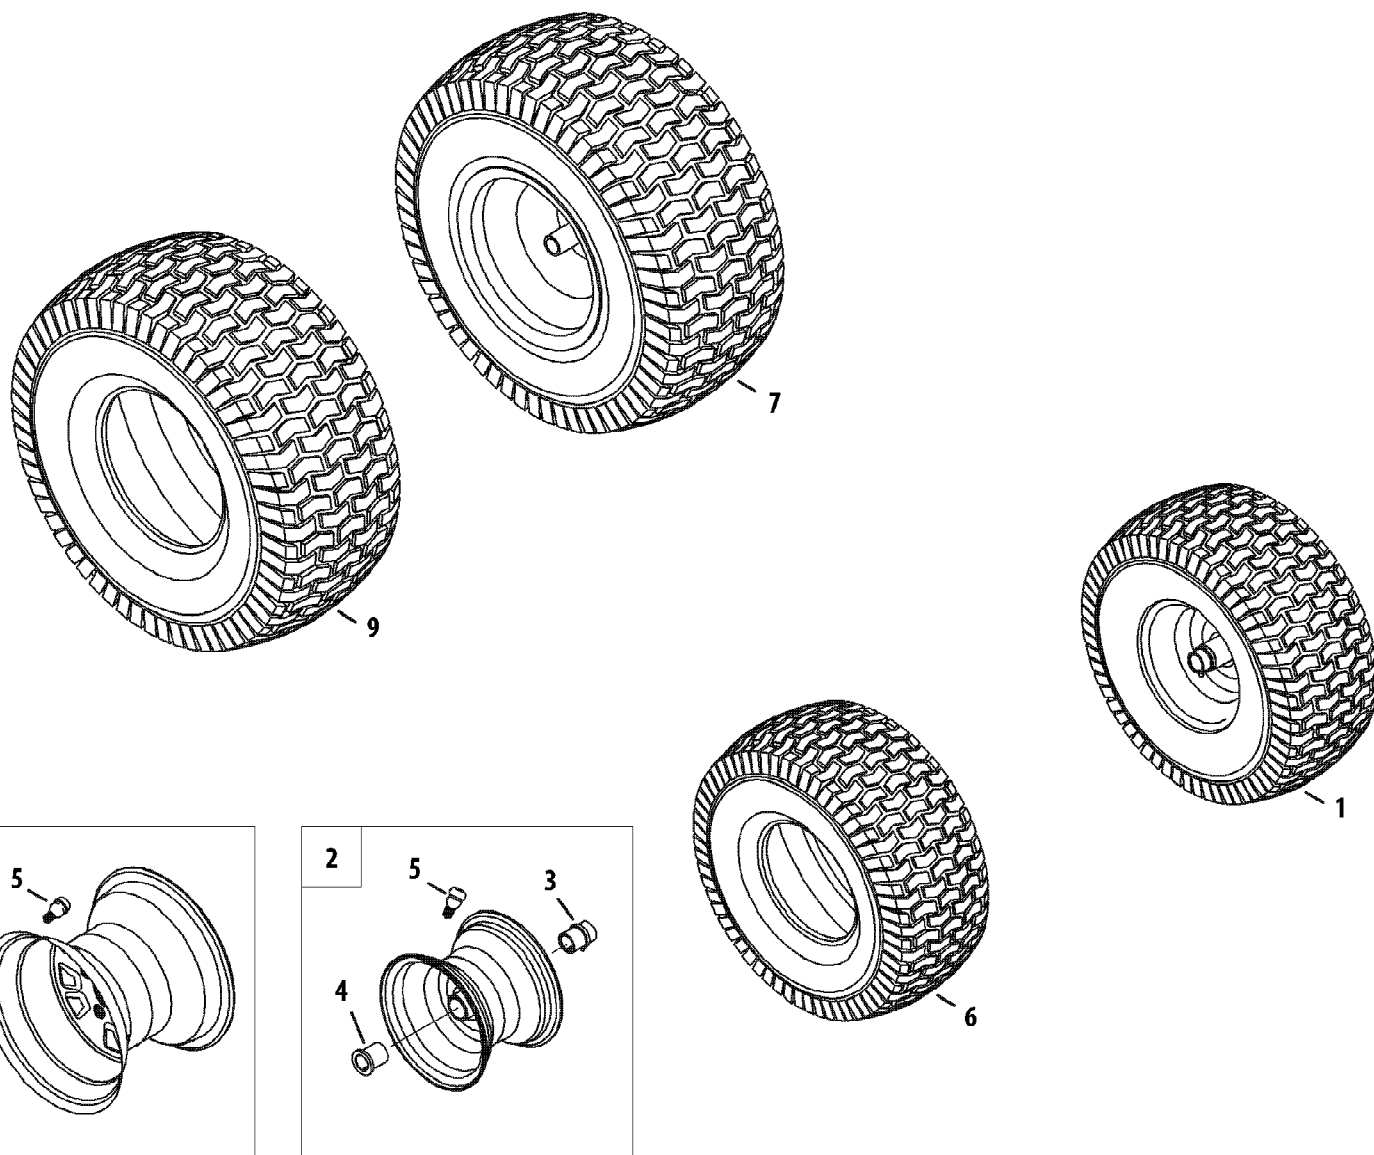

SLTX1054VT Tractor
Wheels

Ref #	Part Number	Qty	S/P/F	Description
1	N/A	1		Wheel Ass'y, Complete, 16 x 6 x 5.8
2	934-04082-0499	1	/P	Rim Ass'y, 8.0 x 5.3, Plastic Bearings
3	741-0990B	1	/P	Bearing, Flange, .760 ID w/ Fitting
4	741-0516B	1	/P	Bearing, Flange, .760 x 1.00 x 1.20
5	934-0255	1	/P	Valve, Tubeless Air
6	734-1727	1	/P	Tire, 15 x 6.5 x 8 Sq Shoulder
7	634-04210-0931	1		Wheel, Complete, 22 x 9.5 x 12
8	634-04238-0499	1	/P	Rim Ass'y, 12.0 x 7.0
9	734-04174	1		Tire, 22 x 9.5 x 12 Sq Shoulder