


3204 Tractor
Air Intake Aluminum

Page 1 of 64

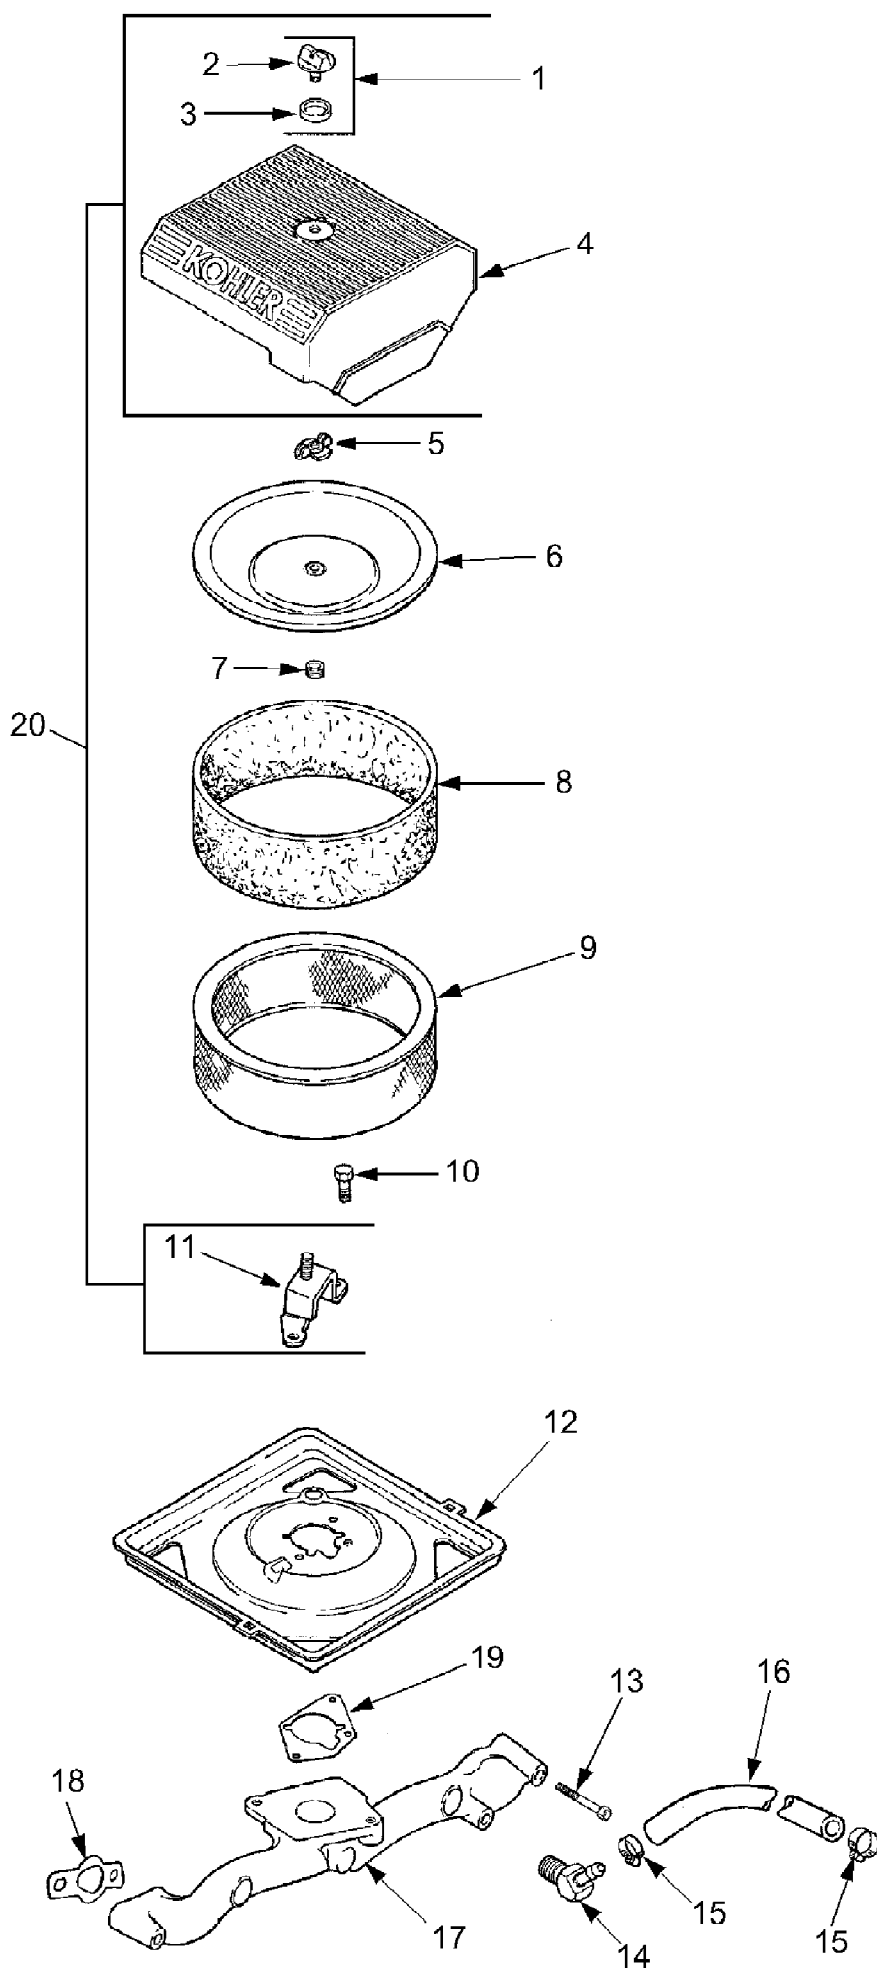


3204 Tractor
Air Intake Aluminum

Page 2 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	KH-54-755-01	1	S	Kit, Knob w/Seal (Includes 2,3)
2	KH-25-341-03	1	/P	Knob, Cover
3	KH-24-153-20-S	1		Seal, Air Cleaner Cover Knob
4	KH-24-096-69-S	1	/P	Cover, Air Cleaner
5	KH-12-100-01	1	/P	Wing Nut
6	KH-24-096-01	1	/P	Cover, Inner Air Cleaner
7	KH-24-032-03	1	/P	Seal, Inner Air Cleaner
8	KH-24-083-02	1	S	Precleaner, Element
9	KH-47-083-03	1	S	Element, Air Cleaner
10	KH-M-0639016	3	S	Screw, Hex Flange M6 x 1.0 x 16
11	KH-24-126-21	1		Bracket, Air Cleaner Base
12	KH-24-094-03	1	S	Base, Air Cleaner
13	KH-M-0651055	4		Screw, Hex Flange M6 x 1.0 x 55
14	KH-25-155-11	1		Connector, Hose 45°.
15	KH-25-237-14-S	2	/P	Clamp, Hose
16	KH-15-353-02-S	1		Line, Fuel 17"
17	KH-24-164-29	1		Manifold, Intake
18	KH-24-041-01	2	/P	Gasket, Intake Manifold
19	KH-24-041-06	1	/P	Gasket, Air Cleaner Base
20	KH-24-743-08	1		Kit, Air Cleaner Cover (Includes 1-4, 11)

3204 Tractor
Air Intake Plastic

Page 3 of 64

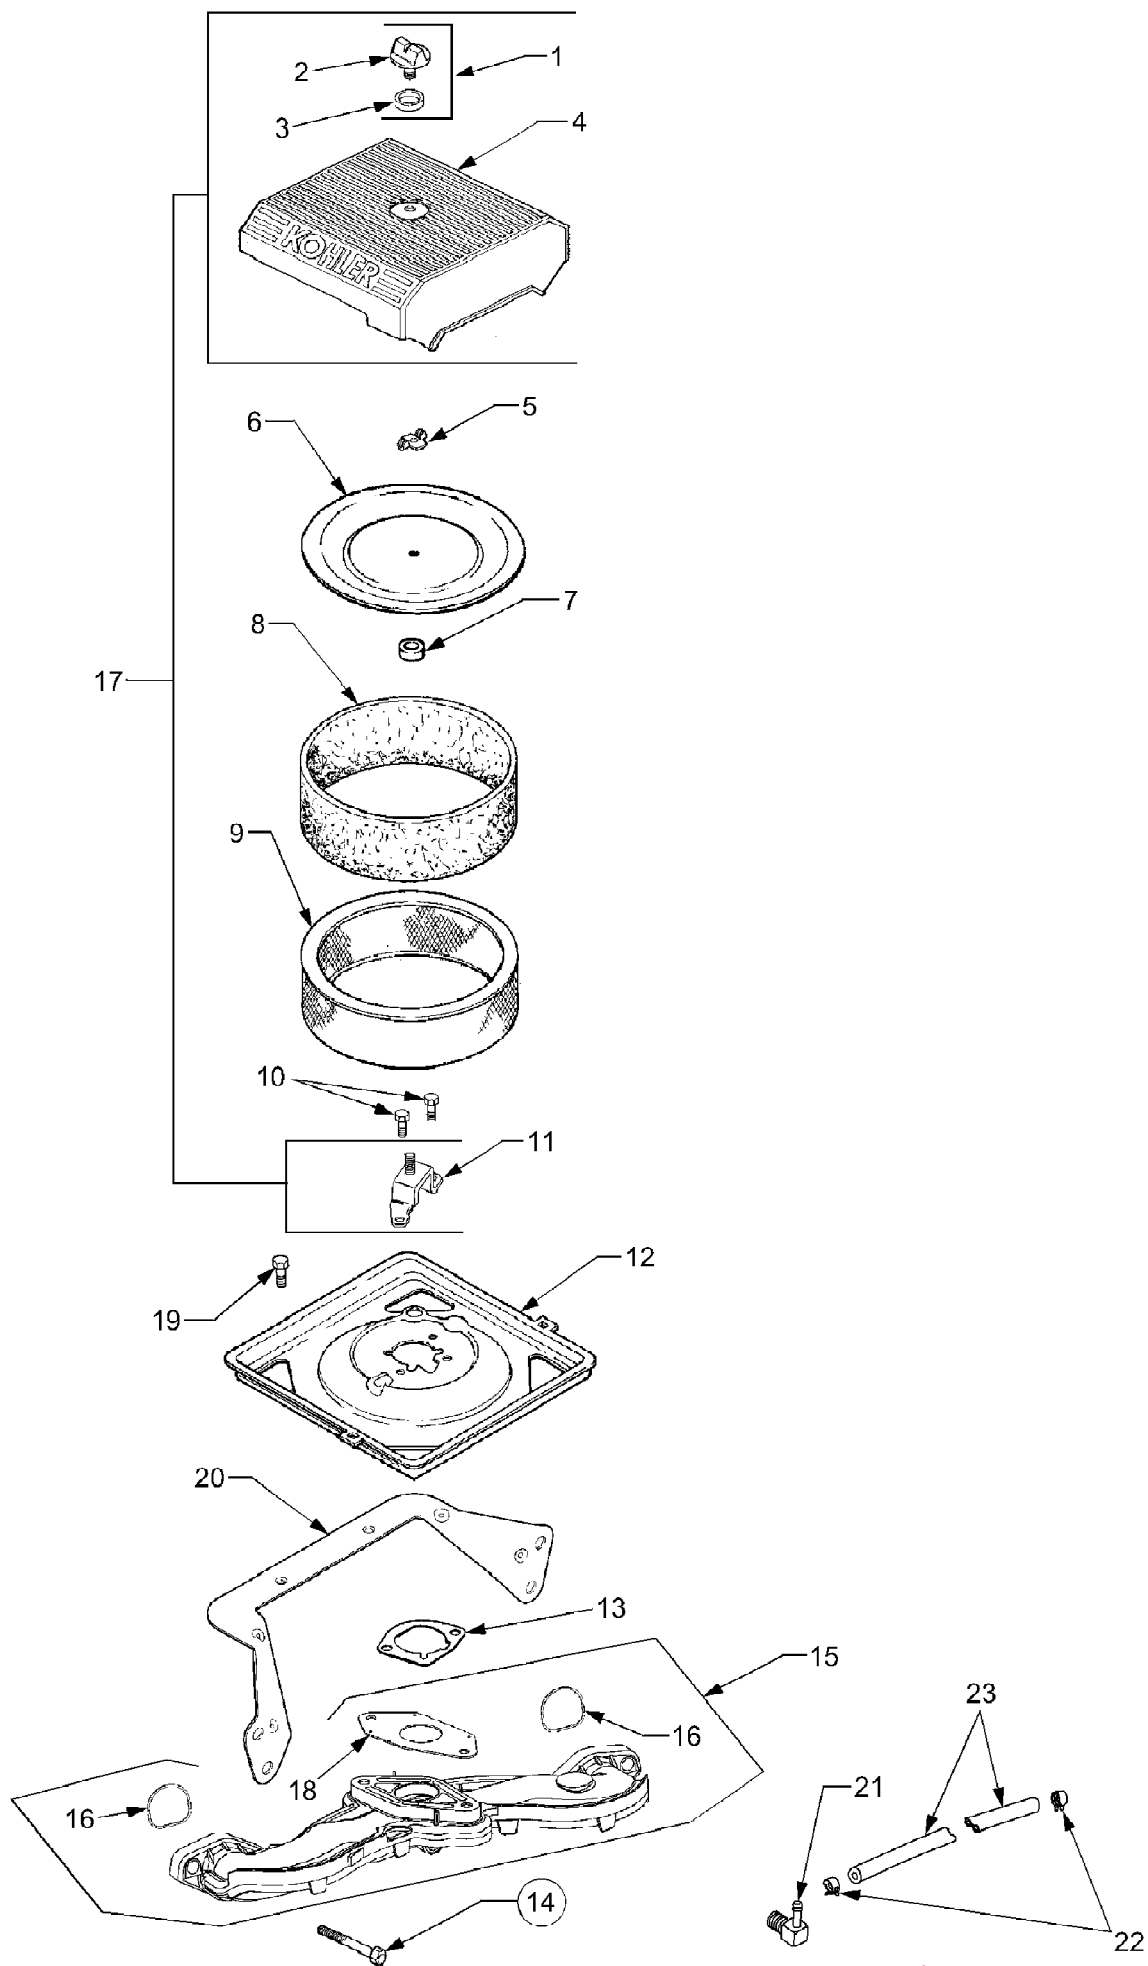


3204 Tractor
Air Intake Plastic

Page 4 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	KH-54-755-01	1	S	Kit, Knob w/Seal (Incl. Ref #2,3)
2	KH-25-341-03	1	/P	Knob, Cover
3	KH-24-153-20-S	1		Seal, Air Cleaner Cover Knob
4	KH-24-096-69-S	1	/P	Cover, Air Cleaner
5	KH-12-100-01	1	/P	Wing Nut
6	KH-24-096-01	1	/P	Cover, Inner Air Cleaner
7	KH-24-032-03	1	/P	Seal, Inner Air Cleaner
8	KH-24-083-02	1	S	Precleaner, Element
9	KH-47-083-03	1	S	Element, Air Cleaner
10	KH-M-0639016	3	S	Screw, Hex Flange, M6 x 1.0 x16
11	KH-24-126-21	1		Bracket, Air Cleaner Base
12	KH-24-094-24-S	1	S	Base, Air Cleaner
13	KH-24-041-06	1	/P	Gasket, Air Cleaner Base
14	KH-M-0651040-S	4		Screw, Hex Flange, M6 x 1.0 x 40
15	KH-24-164-55-S	1	S	Manifold, Intake (Includes Carb Gasket KH-24-041-53-S and (2) O-Rings KH-24-153-27-S)
16	KH-24-153-27-S	2	/P	O-Ring, Intake Manifold
17	KH-24-743-08	1		Kit, Air Cleaner Cover (Incl 1-4, 11)
18	KH-24-041-53-S	1		Gasket, Carburetor
19	KH-M-0545010	2	/P	Screw, Hex Flng, M5 x 0.8 x 10
20	KH-24-126-130-S	1		Bracket, Air Cleaner Base
21	KH-25-155-02	1	/P	Connector, Hose 90°.
22	KH-25-237-14-S	2	/P	Clamp, Hose
23	KH-15-353-02-S	1		Line, Fuel 17"

3204 Tractor
Blower Housing And Baffles

Page 5 of 64

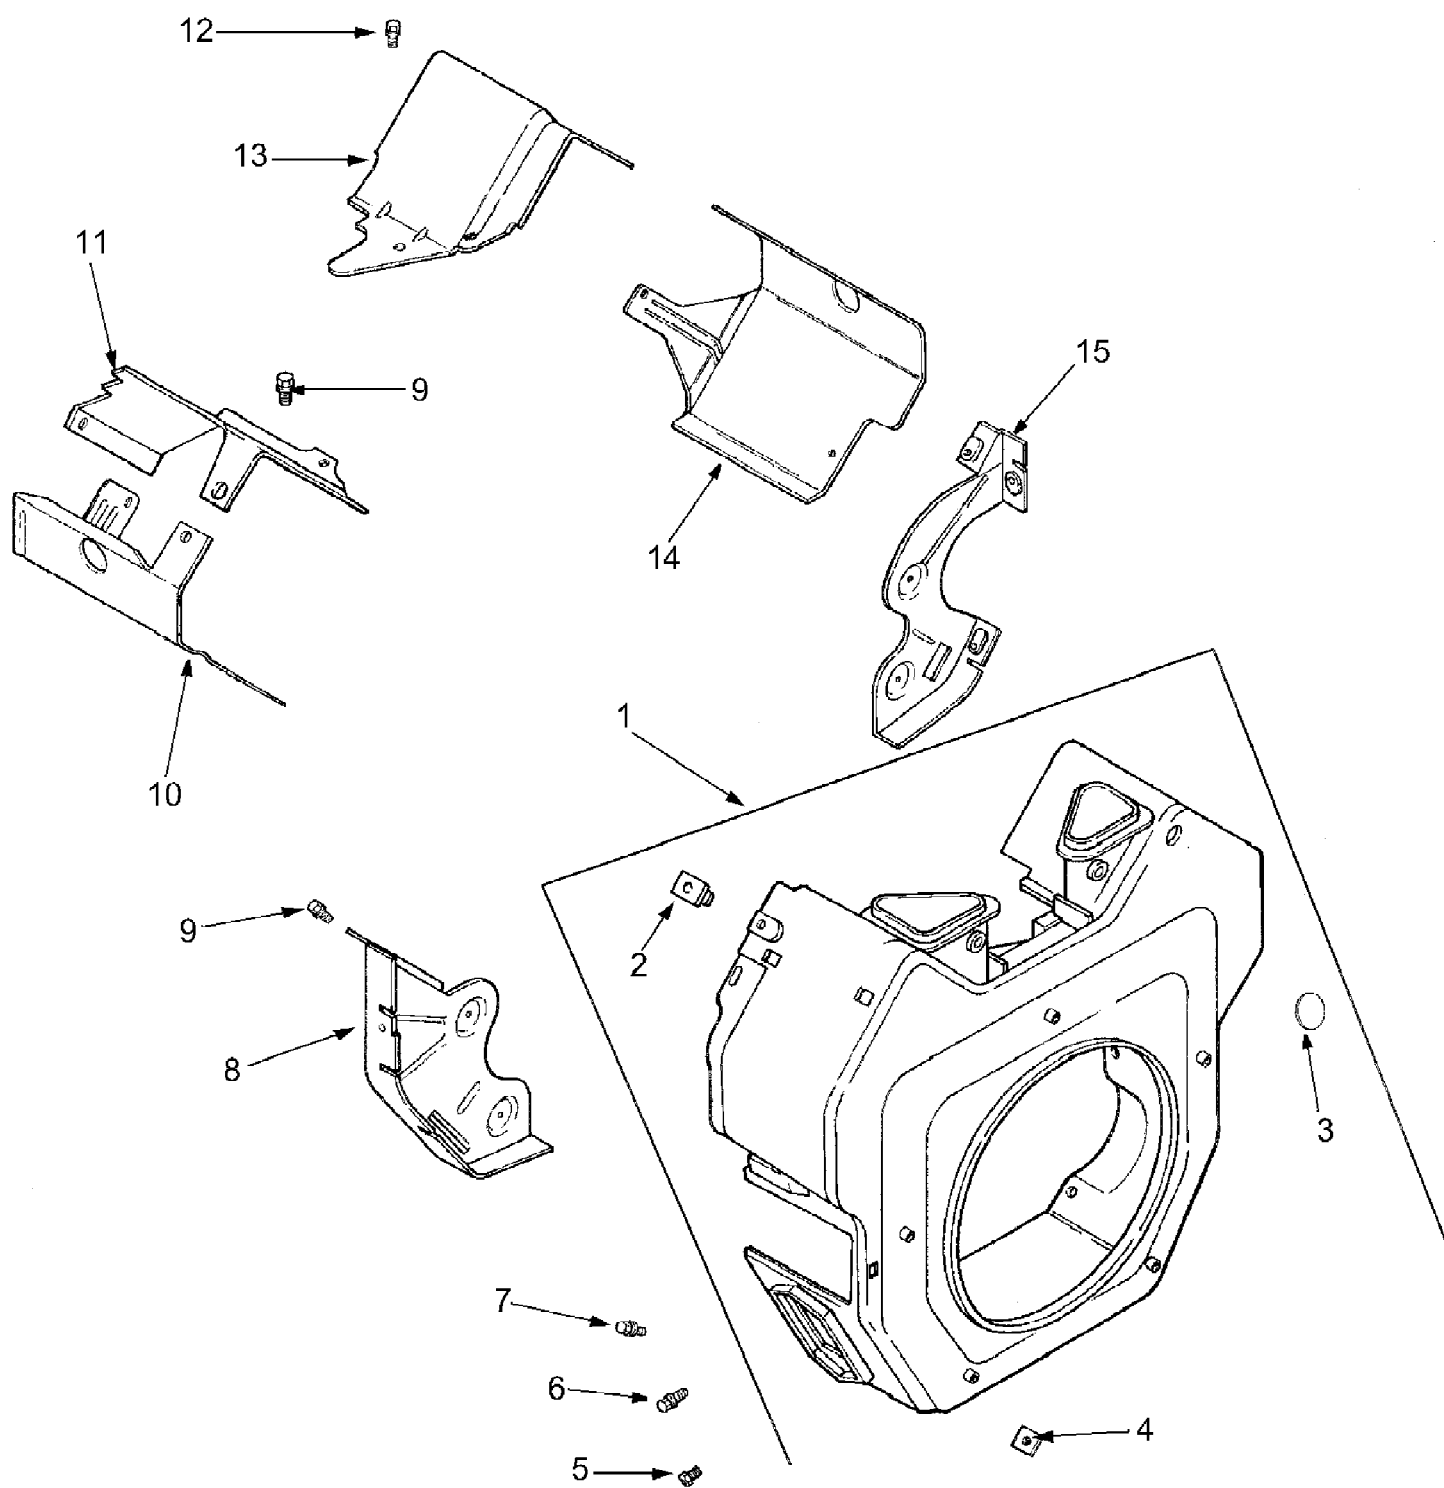


3204 Tractor
Blower Housing And Baffles

Page 6 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-027-163-S	1		Housing, Blower (Includes Grommet KH-25-313-06-S)
2	KH-24-100-02	2		Nut, Plastic
3	KH-25-139-16	1		Plug, Button 9/16"
4	KH-24-100-01	3		Nut, Plastic
5	KH-M-0551016	1		Screw, Hex Flange M5 x 0.8 x 16
6	KH-M-0545016	3	S	Screw, Hex Flange M5 x 0.8 x 16
7	KH-M-0545020	4	/P	Screw, Hex Flange M5 x 0.8 x 20
8	KH-24-146-16	1	S	Plate, Backing #2 Side
9	KH-M-0645016	6	S	Screw, Hex Flange M6 x 1.0 x 16
10	KH-24-063-20	1	/P	Baffle, Cyl. Barrel #2 Side
11	KH-24-063-17	1	/P	Baffle, Valley #2 Side
12	KH-M-0545010	2	/P	Screw, Hex Flange M5 x 0.8 x 10
13	KH-24-063-24	1	S	Baffle, Valley #1 Side
14	KH-24-063-58-S	1	S	Baffle, Cyl. Barrel #1 Side
15	KH-24-146-20	1	S	Plate, Backing #1 Side

3204 Tractor
Brake And Control Pedals

Page 7 of 64

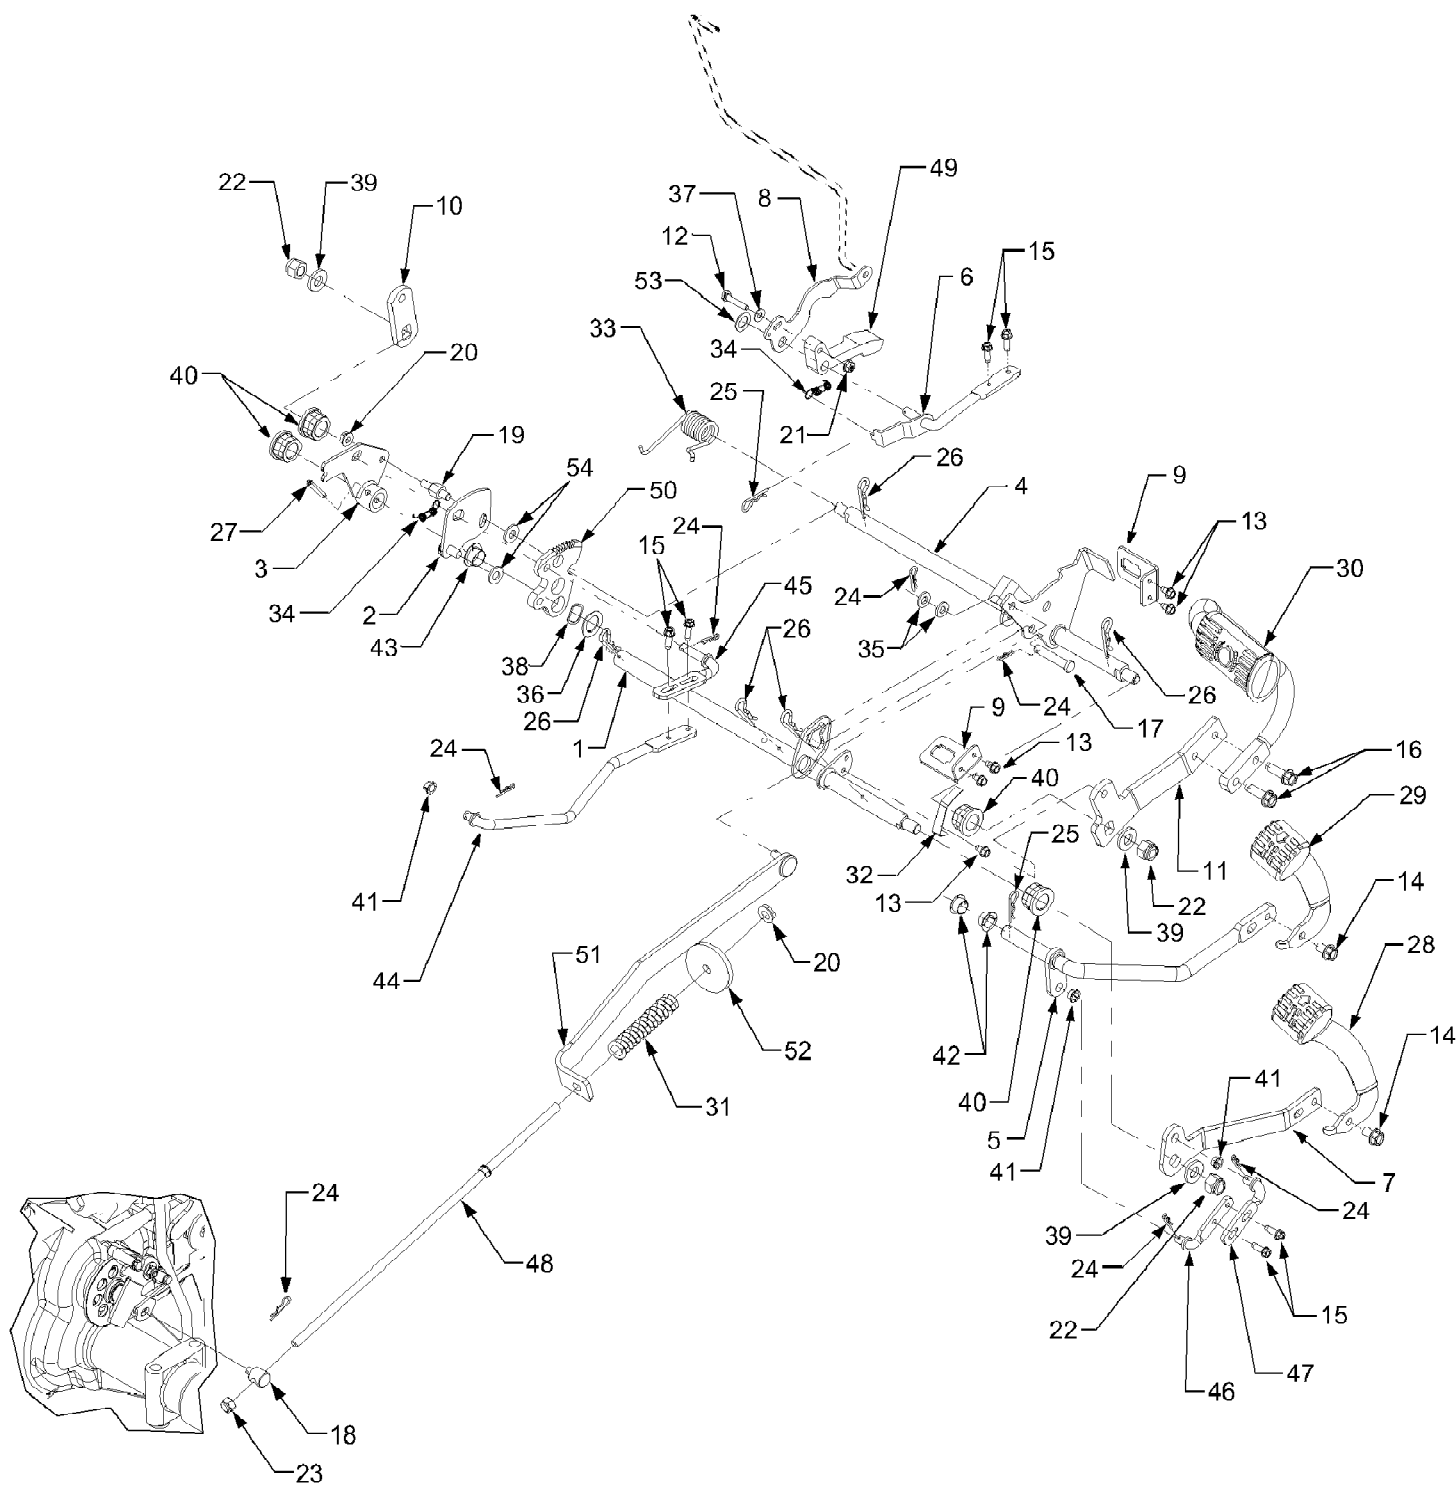

3204 Tractor
Brake And Control Pedals

Page 8 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	603-0379	1		Shaft Assembly, Pedal
2	603-0421A	1	/P	Plate, Disengagement
3	603-0437-0637	1	/P	Cam, Clutch
4	603-0445A	1		Shaft Assembly, Brake
5	603-0449A	1	S	Shaft Assembly, Reverse
6	603-0634	1		Rod Assembly, Cruise
7	703-3012-0716	1		Link, Pedal Mounting
8	703-3020-0637	1		Bracket, Rod Adjust
9	703-3152-0637	2		Bracket, Switch
10	703-3155-0716	1		Lever, Brake
11	703-3156-0716	1	S	Link, Brake Pedal
12	710-0106	1	/P	Screw, Hex Cap, 1/4-20 x 1.25 GR5
13	710-0599	5	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5
14	710-0623	2	/P	Screw, Hex Wash. Hd. Tapp 3/8-16 x .75
15	710-0642	6	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .75
16	710-1315	2	/P	Screw, Hex Wash. Hd. Tapp 3/8-16 x 1.25
17	711-0679A	1	/P	Pin, Clevis, 3/8 x 2.015
18	711-1530	1		Ferrule, Adjust.
19	711-1138	1		Stud, Actuator Mfg. Code 1B262G20103 & Before
	711-04035	1		Stud, Actuator Mfg. Code 1B262G20104 & After. Replaces P/N 711-1138
20	712-3004A	2	/P	Nut, Hex Flange Lock, 5/16-18
21	712-3027	1	S	Nut, Hex Flange Lock, 1/4-20
22	712-3058	3	S	Nut, Hex Insert Lock, 1/2-20
23	712-0429	1	S	Nut, Hex Insert Lock, 5/16-18
24	714-0104	7	S	Pin, Internal Cotter
25	714-0145	2	S	Pin, Internal Cotter
26	714-0147	5	/P	Pin, Internal Cotter
27	715-0114	1	S	Pin, Spiral Spring, .25 x 1.5
28	731-3247	1		Pedal, Forward
29	731-3248	1		Pedal, Reverse
30	731-3249	1	S	Pedal, Brake
31	732-0324	1		Spring, Compression
32	732-0859	1	S	Spring, No Cut Reverse
33	732-0871	1		Spring, Torsion
34	732-3118	2		Spring, Extension, .380 OD x 1.44
35	736-0275	2	S	Washer, Flat, .344 x .688 x .065
36	736-0287	1	S	Washer, Flat, .79 x 1.24 x .060
37	736-0463	1	S	Washer, Flat, .25 x .62
38	736-0621	1		Washer, Wave, .785 x 1.0 x .012
39	736-3019	3		Washer, Flat, .531 x 1.06 x .134
40	741-0598	4	S	Bearing, Hex Flange
41	741-3073	3	S	Bearing, Flange
42	741-3074	2		Bearing, Flange
43	741-3084	1		Bearing, Flange
44	747-3319	1		Rod, Rear Control
45	747-3320	1		Rod, Front Control
46	747-3324	1		Rod, Rear Connecting
47	747-3353	1		Rod, Front Connecting
48	747-3422	1		Rod, Brake
49	748-04001	1		Cruise Latch


3204 Tractor
Brake And Control Pedals

Page 9 of 64

Ref #	Part Number	Qty	S/P/F	Description
50	748-3080A	1	/P	Plate, Cruise
51	603-0738	1	S	Link Assembly, Brake
52	736-0418A	1	/P	Washer, Flat, .341 x 2.25 x .10
53	736-0160	1	S	Washer, Flat, .53 x .93 x .050
54	736-0262	2	/P	Washer, Flat, .385 x .87 x .092

3204 Tractor
Center Hydraulic Lift Linkage

Page 10 of 64

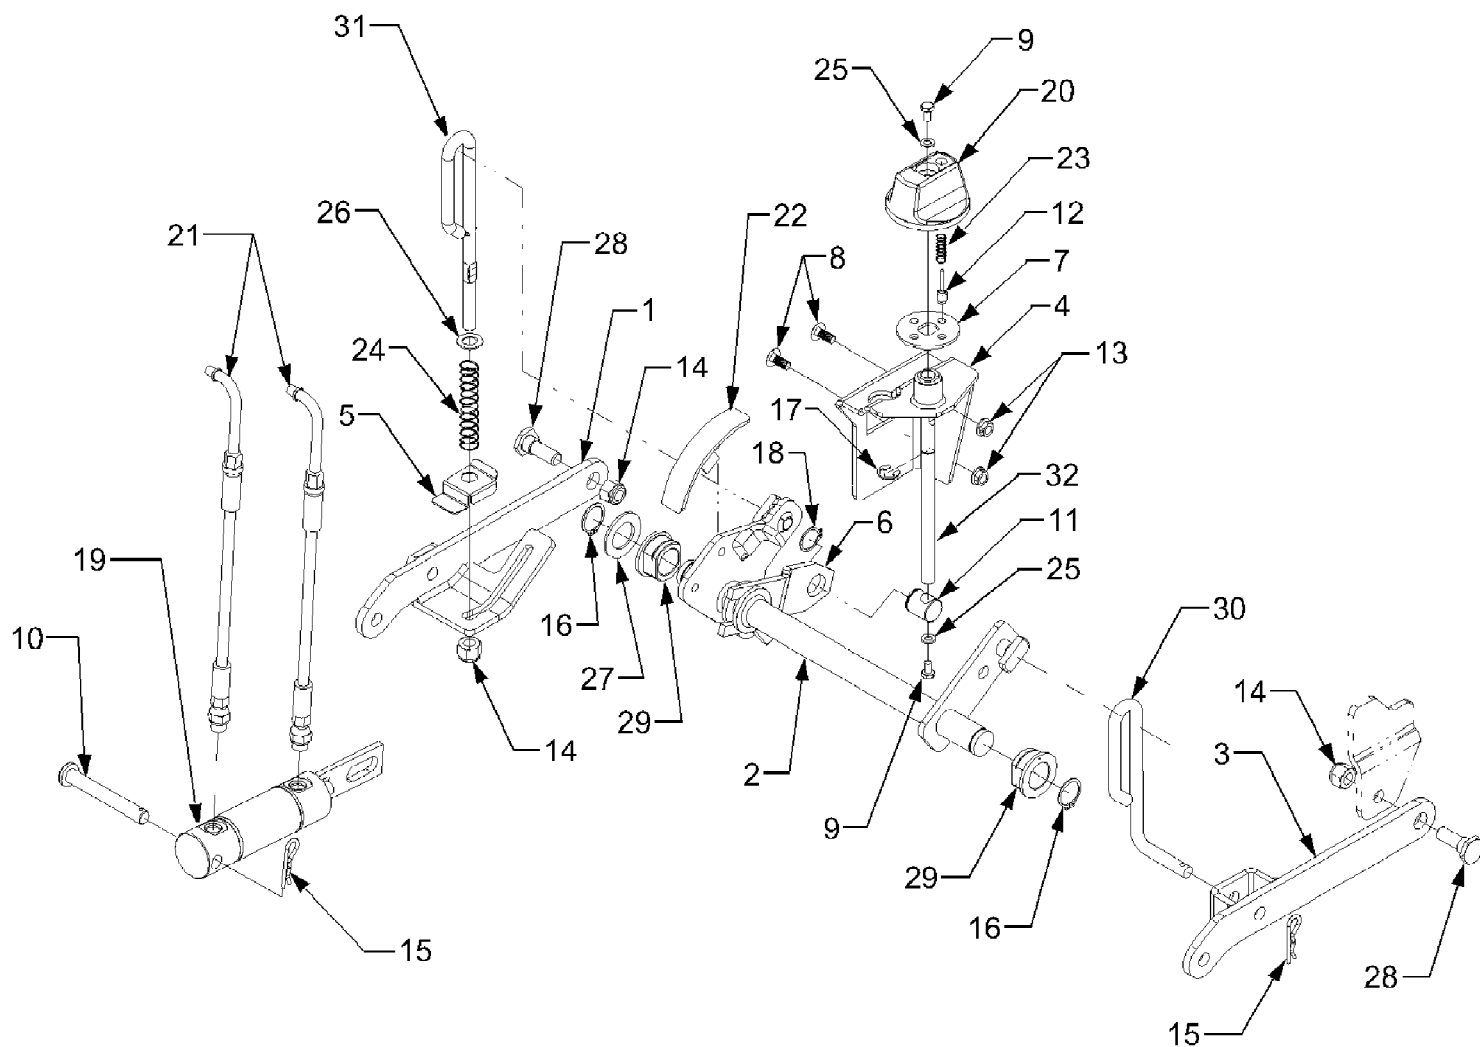


3204 Tractor
Center Hydraulic Lift Linkage

Page 11 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	603-0434-0716	1	/P	Link, LH Lift
2	603-0435A	1	/P	Shaft Assembly, Lift
3	603-0456-0716	1		Link, RH Lift
4	603-0803	1		Bracket, Downstop
5	703-3426	1		Stop Bracket, Lift Rod
6	703-3797	1		Arm, Downstop
7	748-3103	1		Disk, Detent
8	710-3178	2	/P	Bolt, Carriage, 3/8-16 x .75
9	710-3013	2	/P	Screw, Hex Cap, 1/4-20 x .5 GR5
10	711-1206	1		Pin, Clevis, .5 x 3.75
11	711-1553	1		Ferrule, Adjustment
12	711-1561	1		Pin, Detent Plunger
13	712-0431	2	S	Nut, Flange Lock, 3/8-16 GR5
14	712-3083	3	/P	Nut, Hex Lock, 1/2-13
15	714-0147	2	/P	Pin, Internal Cotter
16	716-0102	2	S	Snap Ring, 1.0 Dia. Shaft
17	716-0104	1	S	Ring, 'E' Retaining, .5 Dia.
18	716-0111	1	/P	Snap Ring, .875 Dia. Shaft
19	717-3518	1		Cylinder, Center Lift
20	720-0236	1	S	Knob
	777I20243	1		Graphic, Height Adjust
21	727-3135	2		Hose, Lift
	725-0157	1	/P	Tie, Cable
22	731-3215A	1	S	Indicator, Lift Position
23	732-0437	1		Spring, Compression
24	732-0870A	1	/P	Spring, Compression
25	736-0142	2	S	Washer, Flat, .281 x .5 x .063
26	736-0160	1	S	Washer, Flat, .536 x .93 x .050
27	736-0250	1	/P	Washer, Flat, 1.0 x 1.7 x .10
28	738-0744A	2	S	Shoulder Screw
29	741-0170	2	S	Bearing, Flange w/Flats
30	747-3330	1		Rod, RH Lift
31	747-3331A	1		Rod, LH Lift
32	747-3437	1		Screw, Adjustment

3204 Tractor
Crankcase And Crankshaft

Page 12 of 64

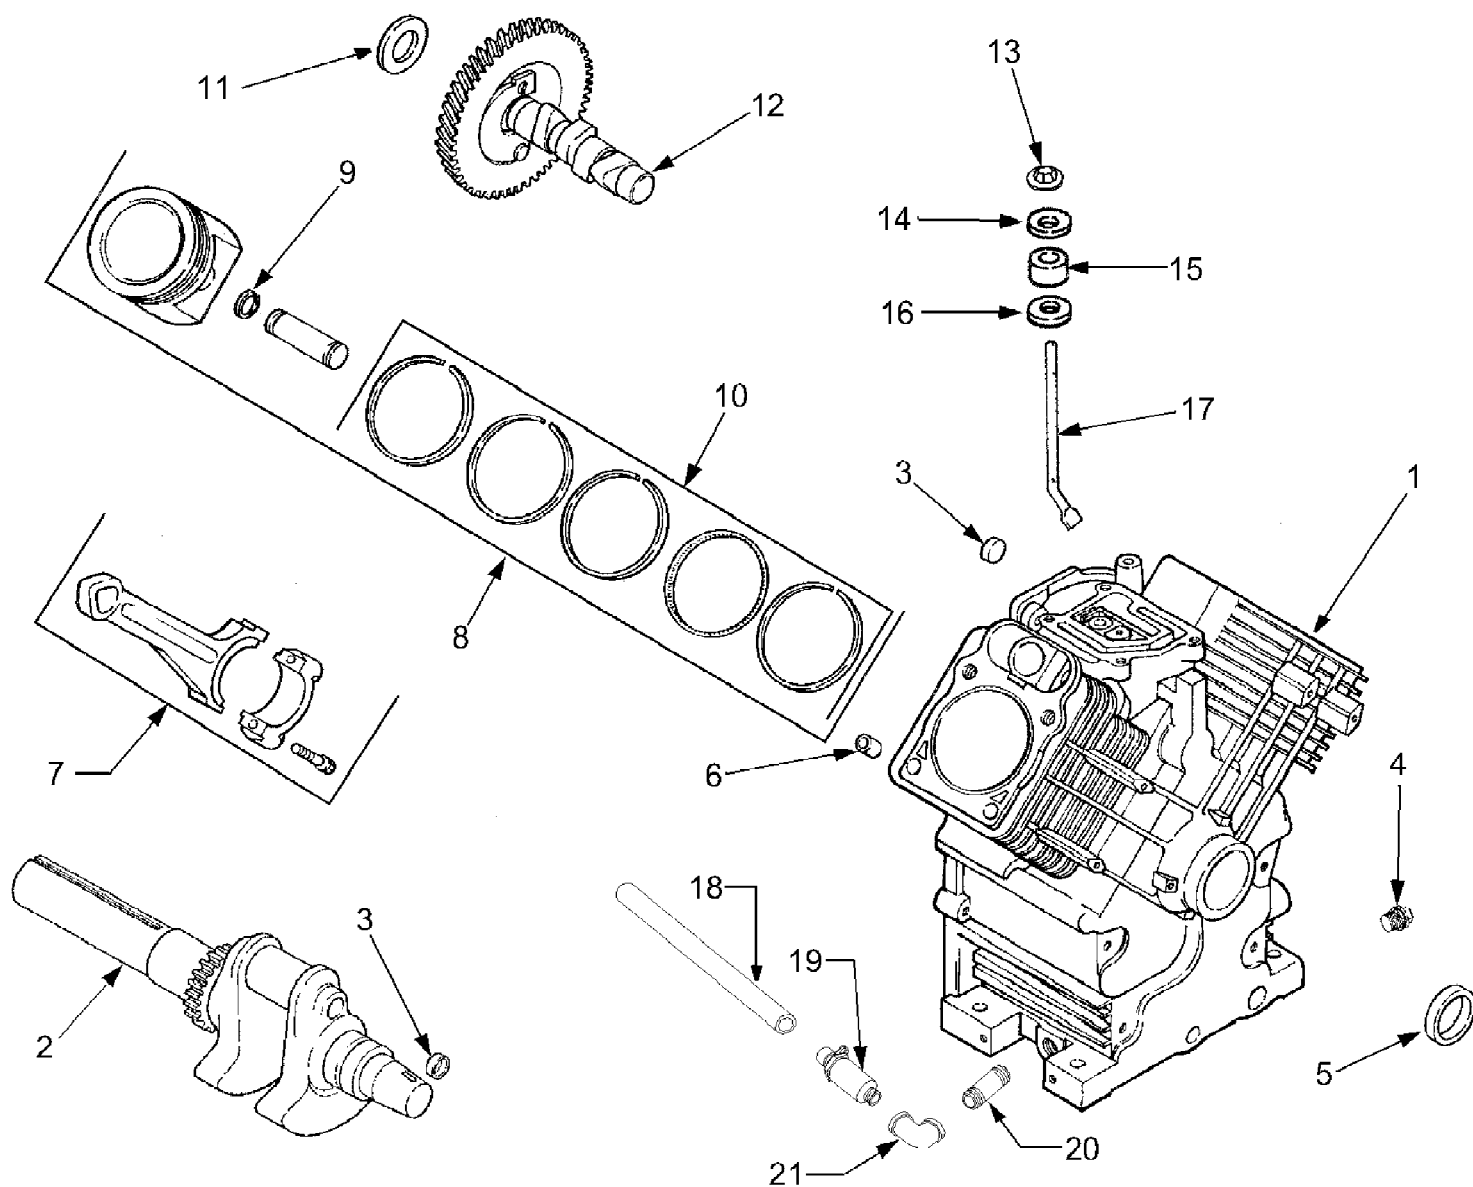


3204 Tractor
Crankcase And Crankshaft

Page 13 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	KH-64631	1	S	Engine, Complete
	KH-24-522-180	1	/P	Short Block
	KH-24-782-15	1	/P	Miniblock
2	KH-24-014-06	1	S	Crankshaft (Includes 3)
3	KH-52-139-09	2	S	Plug, Cup
4	KH-25-139-57-S	2	/P	Plug, Hex Head, 3/8 NPTF
5	KH-24-032-01	1	S	Seal, Oil
6	KH-24-380-13-S	6	S	Pin, Dowel Locating
7	KH-24-067-13	2	S	Rod, Connecting, Std
	KH-24-067-14	2		Rod, Connecting, .010
8	KH-24-874-17-S	2	S	Piston w/Ring Set, Std
	KH-24-874-18-S	2	/P	Piston w/Ring Set, .010
	KH-24-874-19-S	2	S	Piston w/Ring Set, .020
	KH-24-874-14	2		Piston w/Ring Set, .003
9	KH-24-018-01	4	S	Retainer, Piston Pin
10	KH-24-108-11-S	1	S	Ring Set, Std
	KH-24-108-12-S	1	S	Ring Set, .010
	KH-24-108-13-S	1		Ring Set, .020
11	KH-12-422-09	AR	S	Shim, Camshaft, .0320
	KH-12-422-13	AR	S	Shim, Camshaft, .0400
	KH-12-422-07	AR	S	Shim, Camshaft, .0280
	KH-12-422-08	AR	S	Shim, Camshaft, .0300
	KH-12-422-10	1	S	Shim, Camshaft, .0340
	KH-12-422-11	AR	S	Shim, Camshaft, .0360
	KH-12-422-12	AR	S	Shim, Camshaft, .0380
12	KH-24-012-10	1	S	Camshaft
13	KH-24-018-09-S	1		Ring, Retainer
14	KH-M-931010-S	1		Washer, Nylon
15	KH-28-032-09-S	1		Seal, Governor Cross Shaft
16	KH-24-468-15-S	1		Washer, Plain
17	KH-24-144-38-S	1	/P	Shaft, Governor Cross
18	751-3141-12	12 in.	S	Hose, Oil Drain
19	751-3140	1	S	Drain, Oil
	751-3142	1		Cap, Oil Drain
20	737-0199	1	S	Pipe, Straight
21	737-0272	1		Elbow, 90°.
	KH-24-755-107-S	1	/P	Gasket Set

3204 Tractor
Cylinder Head, Valves And Breather

Page 14 of 64

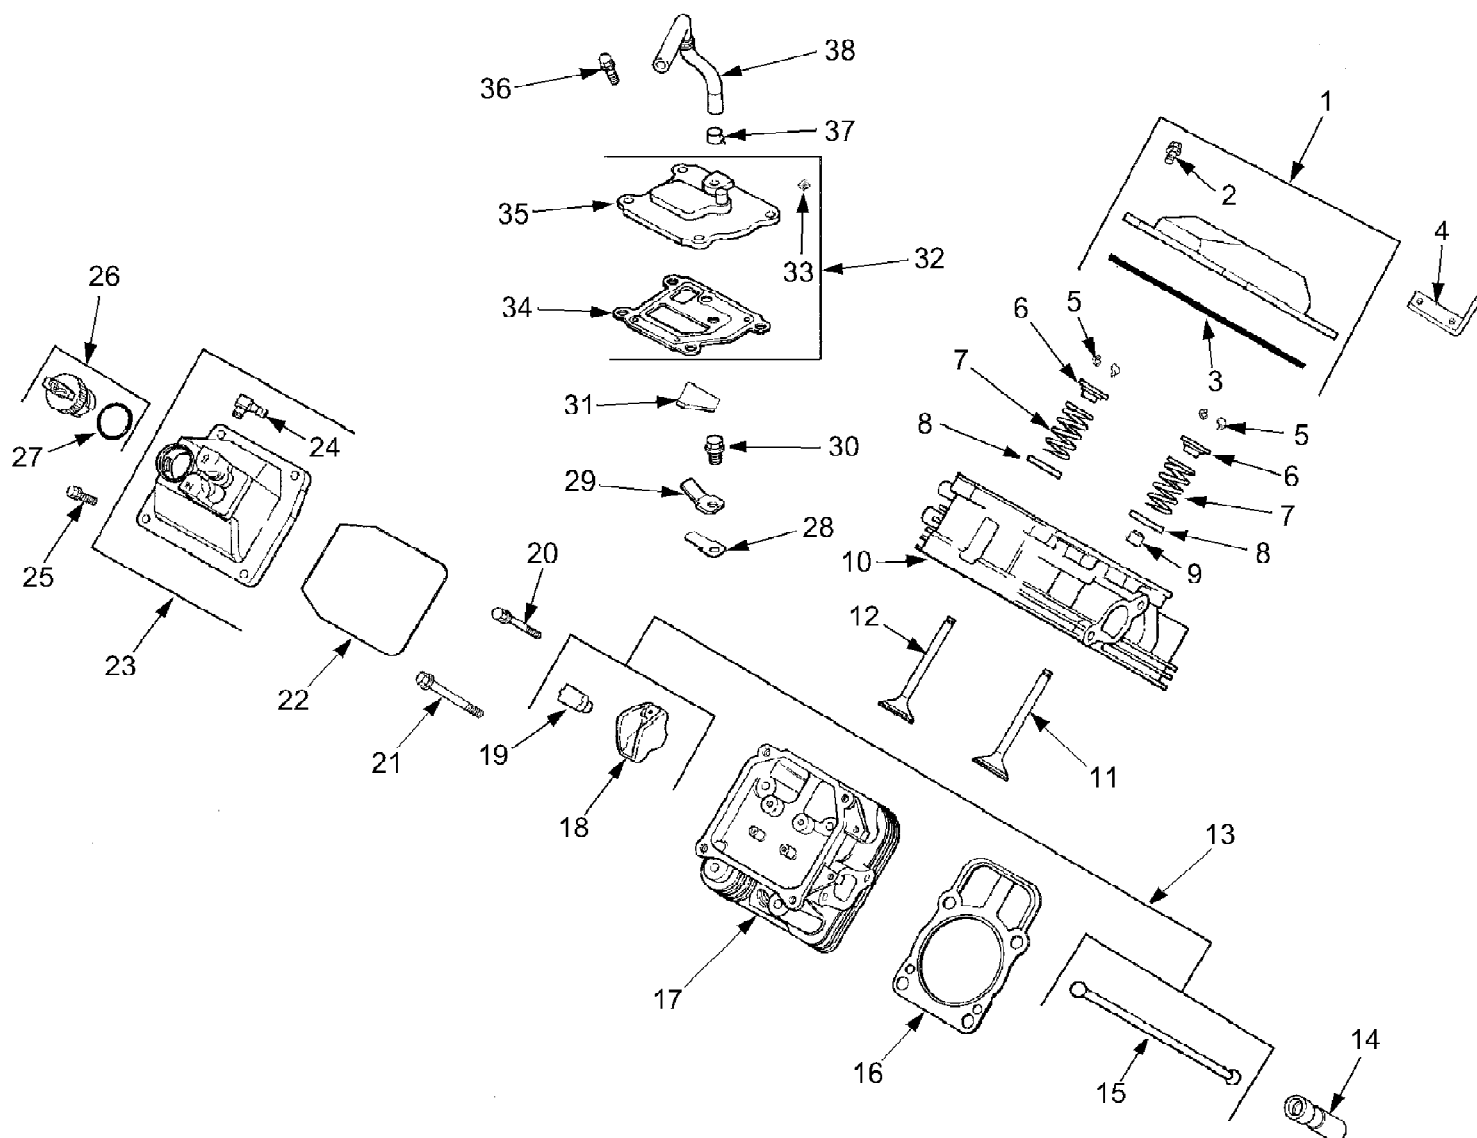


3204 Tractor
Cylinder Head, Valves And Breather

Page 15 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-755-74	1	S	Kit, Valve Cover (Includes 2-3)
2	KH-24-086-32	4		Screw, Shoulder
3	KH-24-153-23-S	1	/P	O-Ring, Valve Cover
4	KH-24-445-01	1	S	Strap, Lifting
5	KH-12-755-03	4	/P	Kit, Retainer
6	KH-12-173-01	4	/P	Cap, Valve Spring
7	KH-24-089-02	4	/P	Spring, Valve
8	KH-235011	4	S	Retainer, Spring
9	KH-66-032-05	2		Seal, Valve Stem
10	KH-24-318-09	1	S	Head Assembly, #1 Cylinder
11	KH-24-017-01	2	/P	Valve, Intake (Std.)
	KH-24-017-02	2		Valve, Intake (.25mm)
12	KH-24-016-01	2	/P	Valve, Exhaust (Std.)
	KH-24-016-02	2		Valve, Exhaust (.25mm)
13	KH-24-755-66	1	/P	Kit, Valve Train (Includes 15,18,19)
14	KH-25-351-01	4	S	Lifter, Valve
15	KH-24-411-05	4	/P	Rod, Push
16	KH-24-041-08	2	S	Gasket, Cylinder Head
17	KH-24-318-10	1	S	Head Assembly, #2 Cylinder
18	KH-25-186-01	4	/P	Arm, Rocker
19	KH-24-599-01	4	S	Pivot, Rocker Arm
20	KH-M-0640034	4	/P	Screw, Hex Flange M6 x 1 x 34
21	KH-12-086-16	8	S	Screw, Hex Flange M10 x 1.5 x 90
22	KH-24-153-23-S	1	/P	O-Ring, Valve Cover
23	KH-24-393-14	1	S	Cover, Fuel Pump Valve (Includes 24)
24	KH-25-155-02	2	/P	Connector 90°.
25	KH-24-086-34	4	/P	Screw, Shoulder
26	KH-24-227-02	1	S	Cap Assembly, Oil Fill (Includes 27)
27	KH-24-153-09	1	S	O-Ring
28	KH-24-402-03	1	/P	Reed, Breather
29	KH-12-018-01	1	S	Retainer, Breather Reed
30	KH-M-0545010	1	/P	Screw, Hex Flange M5 x 0.8 x 10
31	KH-24-050-01	1	S	Filter, Breather
32	KH-24-033-01	1	/P	Kit, Breather (Includes 31-33)
33	KH-25-139-60-S	1	/P	Plug, Allen Head 1/8 NPTF
34	KH-24-041-23	1	S	Gasket, Breather
35	KH-24-096-86-S	1	S	Cover, Breather
36	KH-M0645020	4		Screw, Hex Flange M6 x 1.0 x 20
37	KH-25-237-14-S	1	/P	Clamp, Breather
38	KH-24-326-26	1	S	Hose, Breather

3204 Tractor
Dash Panel

Page 16 of 64

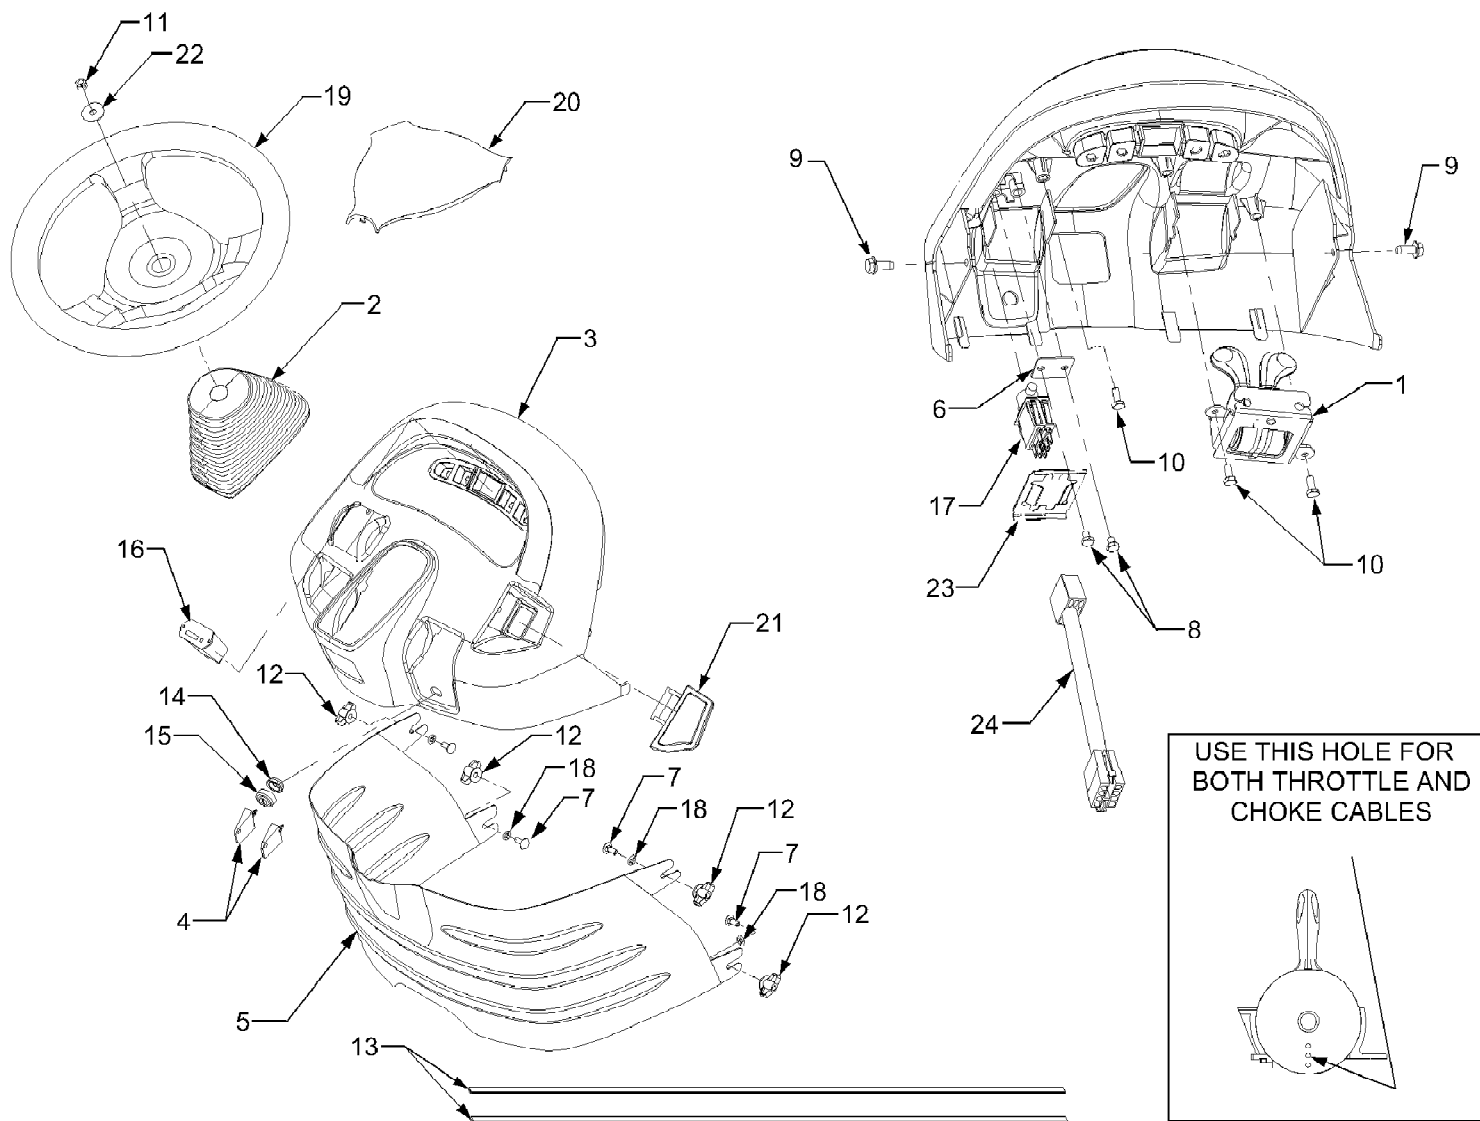


3204 Tractor
Dash Panel

Page 17 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	603-0586	1		Control Assembly, Throttle/Choke
2	631-0076	1		Boot, Tilt Steer
3	631-3014A	1	/P	Dash Panel
	777I20183	1		Graphic, Monitor Light Cover
4	759-3476A	1	S	Key, Ignition (Set of 2)
5	703-3072	1	/P	Screen, Dash
6	703-3162	1		Plate, PTO Handle
7	710-0134	4	/P	Carriage Bolt, 1/4-20 x .62
8	710-0294	2		Screw, Hex Cap 1/4-20 x .375 GR5
9	710-1260A	2	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
10	710-3013	3	/P	Screw, Hex Cap 1/4-20 x .50 GR5
11	712-0237	1	S	Nut, Hex Lock, 5/16-24
12	712-0397	4	S	Wing Nut, 1/4-20 w/Bell Washer
13	731-0511-37	2	/P	Seal, Screen Cut to fit screen
14	725-1346	1	S	Nut, Ignition Switch, 5/8-32
15	725-1347	1	/P	Cap, Ignition Switch
16	725-3159	1	S	Hour Meter
17	725-3256	1	S	Switch, PTO
18	726-0233	4	/P	Nut, Push
19	731-3209	1		Steering Wheel
20	731-3210	1		Cover, Steering Wheel
21	731-3241	1		Handle, PTO Switch
22	736-04062	1	S	Washer, Flat, .34 x 1.5 x .10
23	783-0462	1	/P	Bracket, PTO Switch Retainer
24	629-3079	1	S	Harness, PTO Adapter

3204 Tractor
Driveshaft And Engine Connections


Page 18 of 64

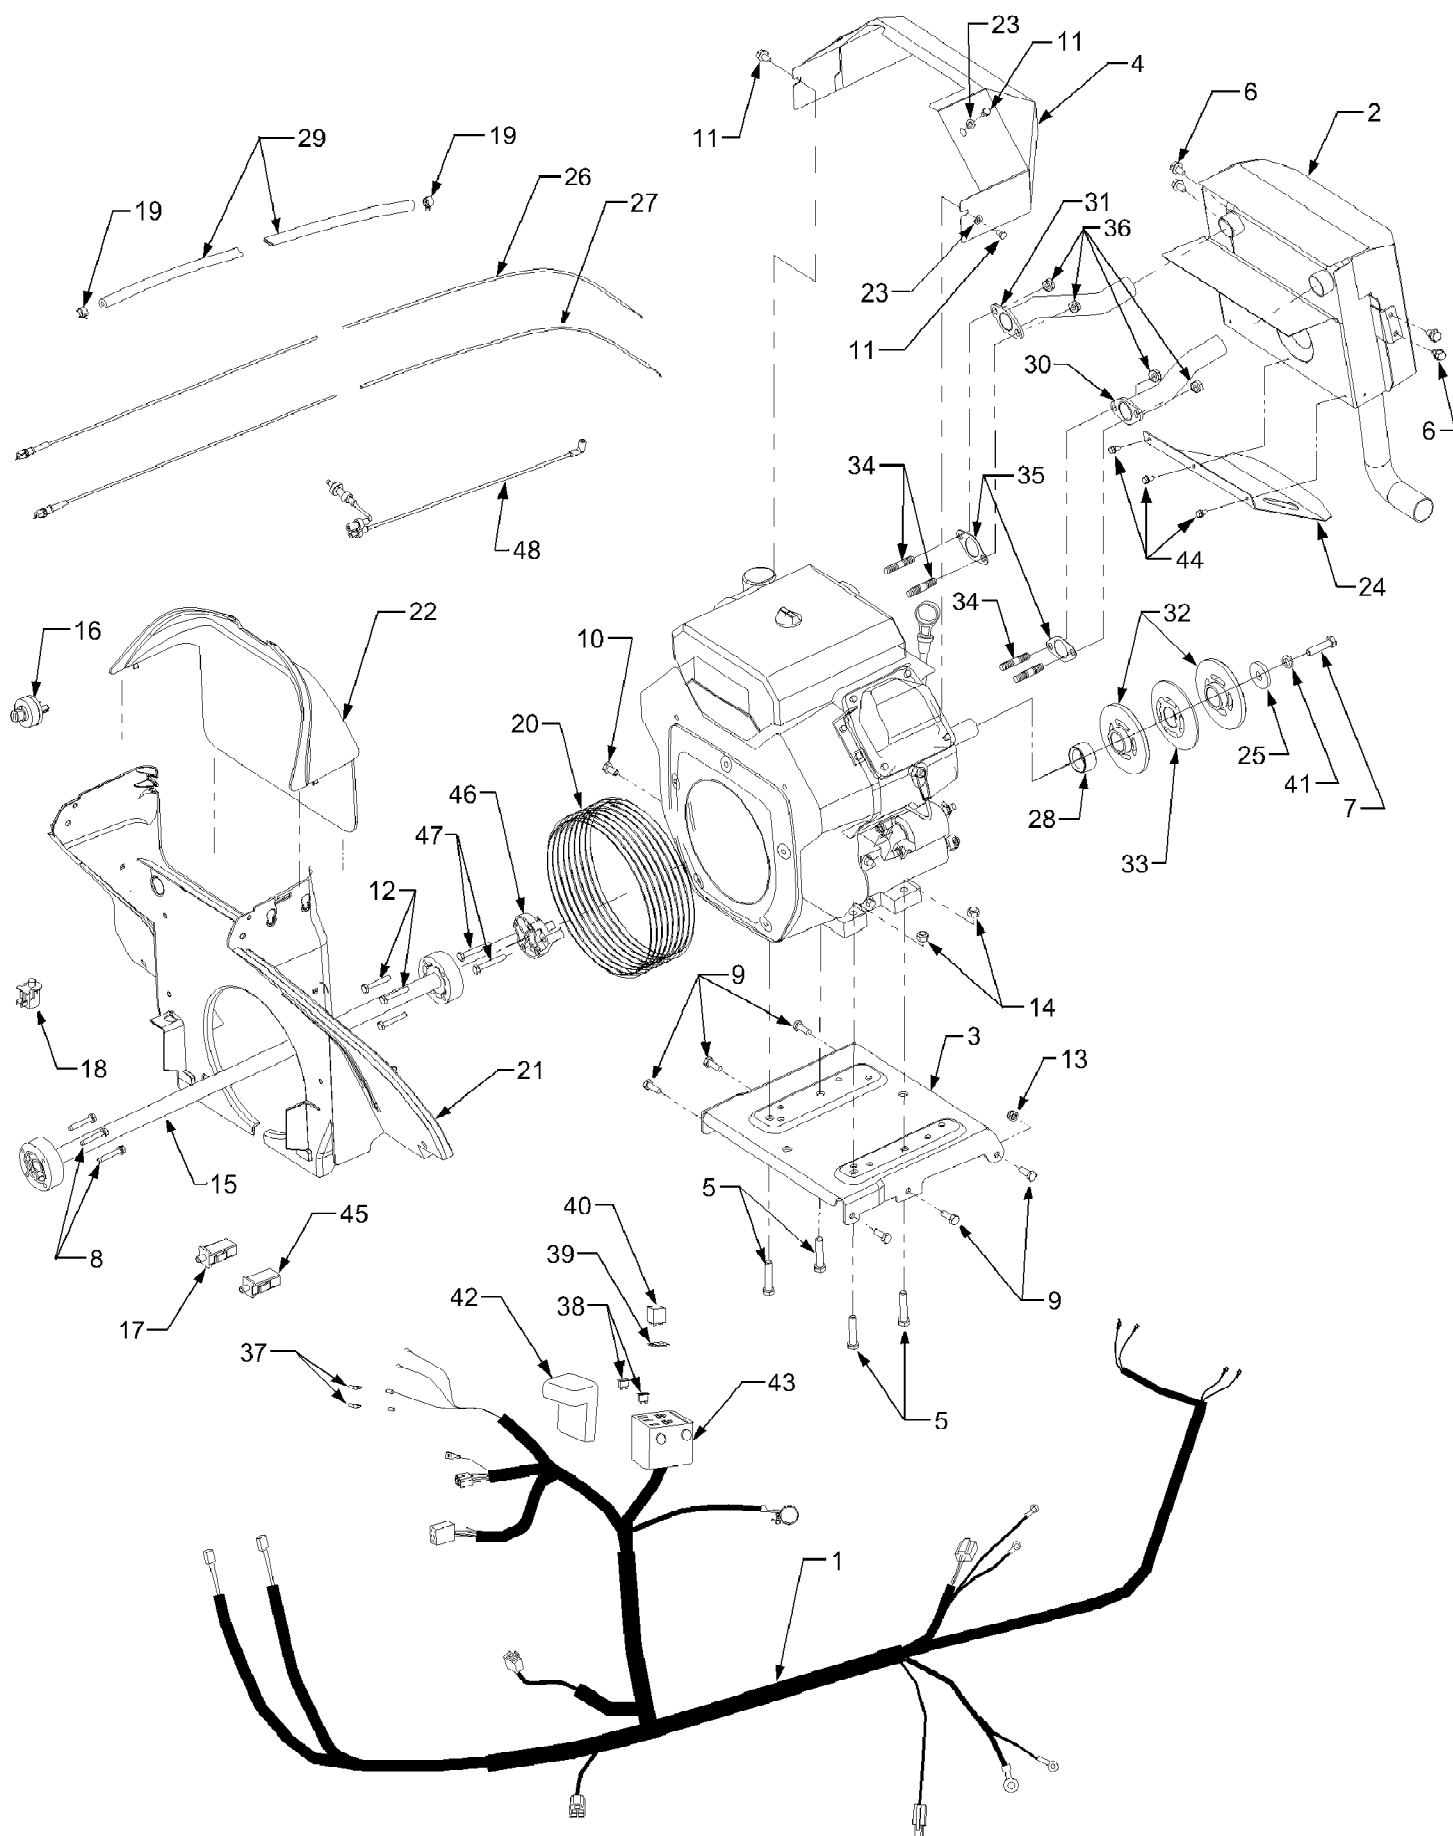

3204 Tractor
Driveshaft And Engine Connections

Page 19 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	629-3077A	1	S	Harness, Wire
1	726-0154	4	S	Tie, Pushmount
1	726-3055	2		Clip, Cable
2	651-3003	1		Muffler Assembly
3	703-2909-0716	1	/P	Plate, Engine Mounting
4	703-2999	1		Shield, Muffler Heat
5	710-0539	4	/P	Screw, Hex Cap, 3/8-24 x 1.75 GR5
6	710-0607	4	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .5
7	710-0757	1	/P	Screw, Hex Cap, 7/16-20 x 1.5 GR5
8	710-1062	4		Screw, Hex Cap Lock 1/4-20 x 1.25 GR5
9	710-3038	6	/P	Screw, Hex Cap, 5/16-18 x .875 GR5
10	710-0237	1	/P	Screw, Hex Cap, 5/16-24 x .625 GR5
11	710-3209	4		Screw, Hex Cap, M6 - 1.0 x 10MM
12	710-3288	4		Screw, Hex Cap, Lock 1/4-20 x 1.62 GR5
13	712-0429	6	S	Nut, Hex Insert Lock, 5/16-18
14	712-3054	4	/P	Nut, Hex Lock, 3/8-24
15	718-3093	1	S	Shaft, Drive, 27.125 Long
15	759-3764	2	/P	Drive Barrels Kit Not shown (2 used per tractor)
16	725-3163	1	S	Switch, Key, w/Ground
17	725-3164A	1	S	Switch, Plunger (Reverse)
18	725-3166	1	S	Switch, Snap Mount (Seat)
19	726-0205	2	/P	Clamp, Hose
20	731-3166	1		Boot, Intake
21	731-3221A	1	/P	Baffle, Lower Air
22	731-3231A	1	/P	Baffle, Upper Air
23	736-0142	4	S	Washer, Flat, .281 x .50 x .06
24	703-3398	1		Shield, Lower Exhaust
25	736-3017	1	/P	Washer, Flat, .417 x 1.5 x .225
26	746-3075	1		Cable, Throttle Control
27	746-3077	1		Cable, Choke Control
28	750-3357	1		Spacer, Crankshaft
29	751-0535-60	1	S	Hose, Fuel Line 60in.
30	751-3154	1		Pipe, Exhaust RH
31	751-3155	1		Pipe, Exhaust LH
32	756-3091A	2	/P	Pulley Half
33	756-3099	1		Pulley, Center
34	KH-25-072-04	4	/P	Stud, M8 - 1.25 x 33MM
35	KH-24-041-02	2	S	Gasket, Exhaust
36	712-3086	4	/P	Nut, Hex, M8 x 1.25
37	725-1365	2	S	Bulb, Indicator
38	725-3243	2		Fuse, 25 Amp
39	721-0342	1	S	Gasket, Silicone
40	725-1648	1	S	Relay
41	736-0171	1	S	Washer, Lock, 7/16
42	759-3868	1	S	Cover, Fuse Box
43	759-3869	1	S	Box, Fuse
44	710-3007	3	/P	Screw, Hex Wash. Hd. Tapp, #12-24 x .38
45	725-3191A	1	S	Switch, Plunger (Brake)
46	719-3096	1	/P	Adapter, Drive Shaft
47	KH-24-086-16	2	S	Screw, Hex Flange, M10 x 1.5 x 90
48	751-3199	1		Hose, Vacuum

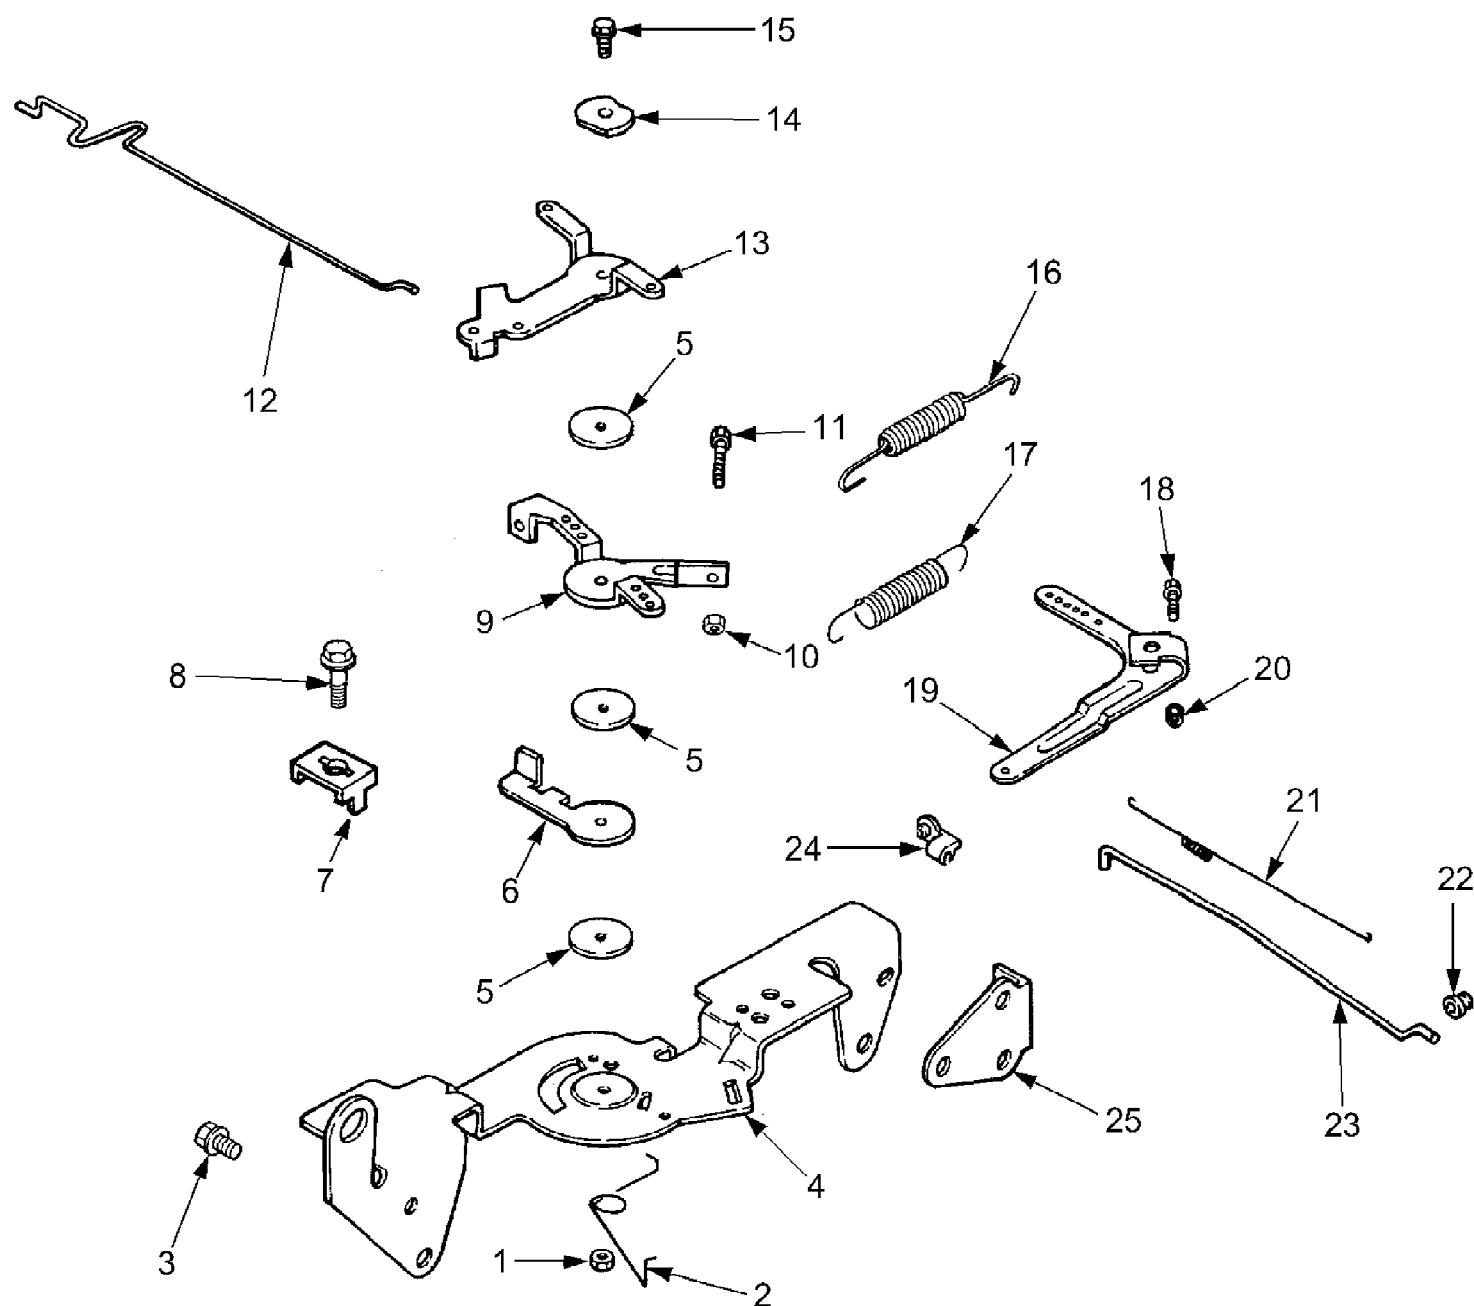


3204 Tractor
Engine Controls

Page 21 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	KH-M-0547050	1	/P	Nut, Hex Lock M5 x 0.8
2	KH-24-089-03	1		Spring, Choke Return
3	KH-M-645016-S	4	/P	Screw, Hex Flange M6 x 1.0 x 16
4	KH-24-126-56	1	S	Bracket, Control
5	KH-24-468-01	3		Washer, Plain 5.5 mm
6	KH-24-090-07	1	/P	Lever, Throttle Actuator
7	KH-12-237-01	2		Clamp,Cable,
8	KH-M-545016-S	3	/P	Screw, Hex Flange M5 x 0.8 x 16
9	KH-24-090-13	1		Lever, Throttle Control
10	KH-M-446030-S	1	/P	Nut, Hex M4 x 0.7
11	KH-M-401030-S	1		Screw, Hex Cap M4 x 0.7 x 30
12	KH-24-079-21-S	1	/P	Linkage,Choke
13	KH-24-090-05	1		Lever, Choke
14	KH-41-468-03	1		Washer, Spring 1/4"
15	KH-M-0545020	1	/P	Screw, Hex Flange M5 x 0.8 x 20
16	KH-24-089-51-S	1	/P	Spring, Throttle Limiter
17	KH-24-089-48-S	1		Spring, Governor
18	KH-24-211-03-S	1		Screw, Carriage
19	KH-24-090-33-S	1	S	Lever, Governor
20	KH-M-0641060	1	S	Nut, Hex Flange M6 x 1.0"
21	KH-24-089-01	1		Spring, Linkage
22	KH-25-158-08	1	/P	Bushing, Linkage Retaining
23	KH-24-079-01	1		Linkage, Throttle
24	KH-25-158-11	1	/P	Bushing, Linkage Retaining
25	KH-24-126-04	2	S	Bracket Support
26	KH-X-20-1-S	1		Washer
27	KH-M-541050-S	1		Nut, Hex

3204 Tractor
Fender And Running Board

Page 22 of 64

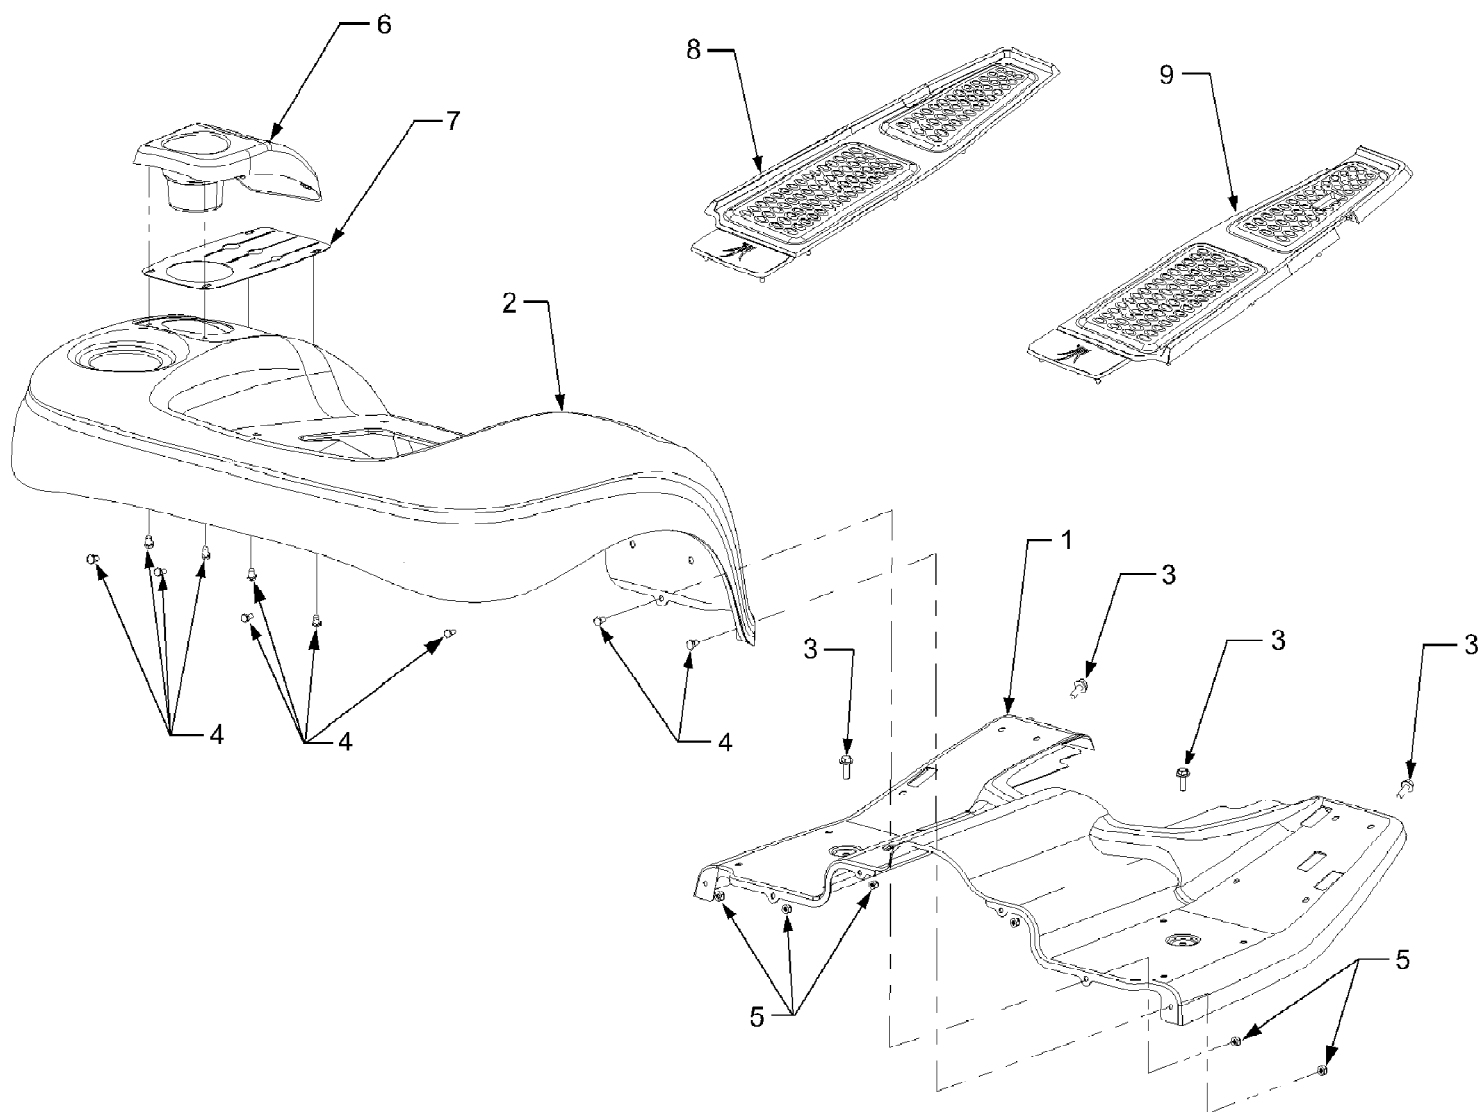


3204 Tractor
Fender And Running Board

Page 23 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	703-3622-0716	1		Running Board
	777D04383	2		Graphic, All Shaft Drive
	777I20860	1		Graphic, Starting Instructions
	777I20859	1		Graphic, Height Adjustment
	777S30017	1		Graphic, Warning
2	703-3512-0716	1	S	Fender
	777D06085	1		Graphic, 3000 Series
3	710-0602	4	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x 1.0
4	710-3013	10	/P	Screw, Hex Cap, 1/4-20 x .5 GR5
5	712-0324	6	/P	Nut, Hex Lock, 1/4-20
6	731-3239	1		Cover, Lift Lever
7	731-3253	1		Flap, Lift Lever
8	735-0275	1		Pad. Floor LH
9	735-0276	1		Pad. Floor RH

3204 Tractor
Frame And Hitch Plate


Page 24 of 64

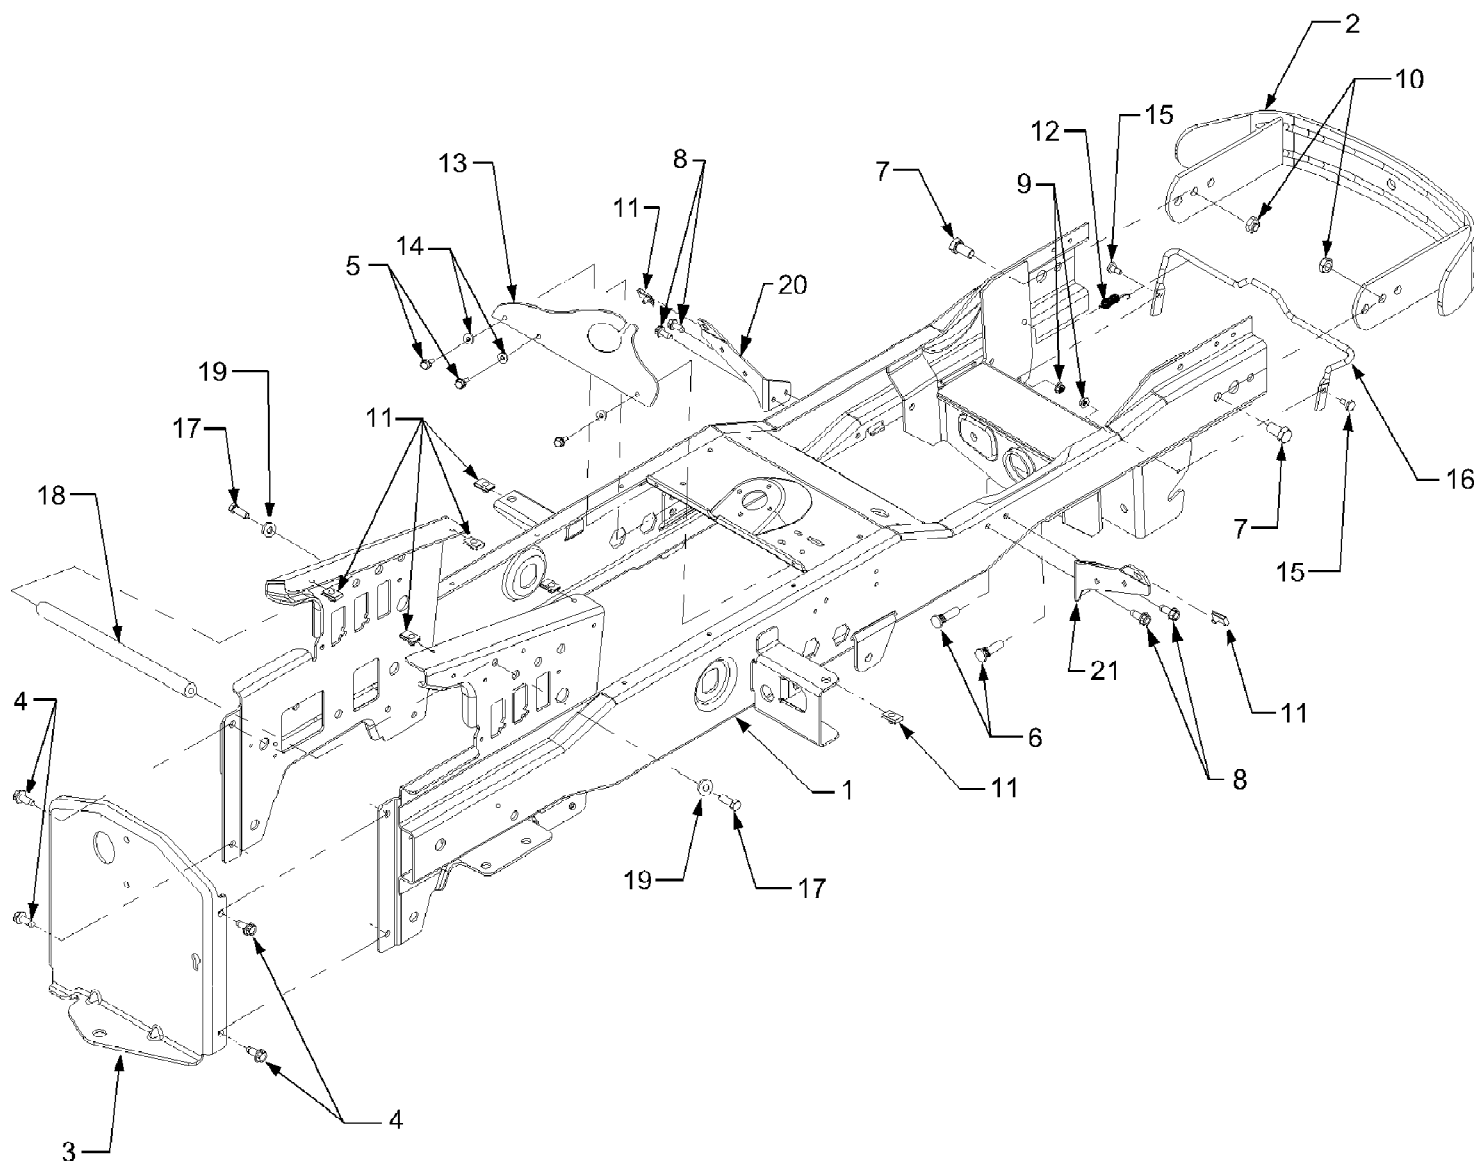

3204 Tractor
Frame And Hitch Plate

Page 25 of 64


Ref #	Part Number	Qty	S/P/F	Description
1	603-0446B-0716	1	/P	Frame Assembly
2	603-0463A-0716	1	S	Bumper, Front
	777D06086	1	/P	Graphic
3	703-3546-0716	1		Hitch Plate
	777I20773	1		Graphic, Trans. Release
	777S30265	1		Graphic, Trans. Oil
4	710-0623	4	/P	Screw, Hex Wash. Hd. Tapp 3/8-16 x .75
5	710-0599	3	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5
6	710-0617	2		Screw, Round Hd., 3/8-24
7	710-3131	2	/P	Screw, Hex Cap 1/2-13 x 1.0 GR5
8	710-1260A	4	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
9	712-3027	2	S	Nut, Hex Flange Lock, 1/4-20
10	712-3083	2	/P	Nut, Hex Lock, 1/2-13
11	726-0211	8	S	Speed Nut, U-Type, 5/16-18
12	732-3002	1	S	Spring, Extension
13	735-0653	1		Flap, Intk.
14	736-0342	3		Washer, Flat, .283 x .75 x .030
15	738-0704	2	S	Shoulder Screw, .312 x .18
16	747-3336	1		Rod, Front Latch
17	710-3038	2	/P	Screw, Hex Cap, 5/16-18 x .875 August 25, 2002 & prior
	710-3015	2	/P	Screw, Hex Cap, 1/4-20 x .75 GR5 August 26, 2002 & after
18	711-1333	1		Shaft, Frame Brace August 25, 2002 & prior
	647-04010	1		Shaft, Tank Constraint August 26, 2002 & after
19	736-3008	2	S	Washer, Flat, .344 x .75 x .12 August 25, 2002 & prior
	736-0329	2	S	Washer, Lock, 1/4 August 26, 2002 & after
20	703-3417-0716	1		Bracket, Running Board LH
21	703-3418-0716	1		Bracket, Running Board RH

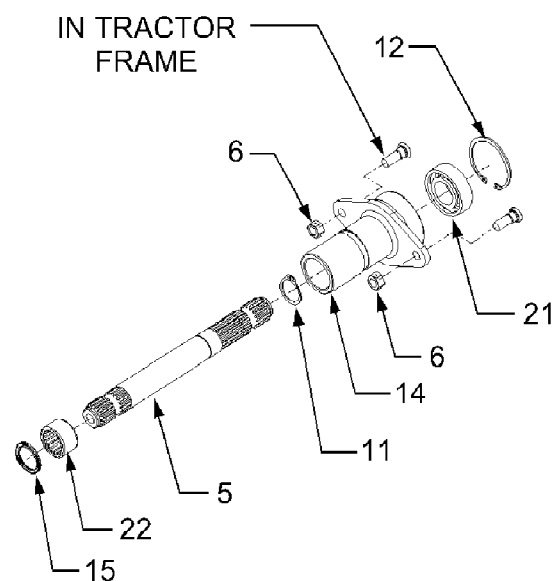

3204 Tractor
Front Axle

Page 27 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	603-0426-0637	1	S	Axle, RH Steering
2	603-0427-0637	1	S	Axle, LH Steering
3	710-1039	1	/P	Screw, Hex Cap 3/8-24 x 1.0 GR8
4	710-3085	1	/P	Screw, Hex Cap 3/8-16 x 3.5 GR5
5	711-1141	1		Shaft, Splined
6	712-0355	2	S	Nut, Hex Center Lock, 3/8-24
7	712-0431	1	S	Nut, Hex Flange Lock, 3/8-16
8	712-3103	2		Nut, Hex Flange Lock, M12 x 1.75
9	712-3104	1		Nut, Hex - RH, M12 x 1.75
10	712-3105	1		Nut, Hex - LH, M12 x 1.75
11	716-0102	2	S	Snap Ring, 1.0 Dia. Shaft
12	716-0188	1	/P	Retaining Ring, Internal, 2.0
13	719-3119A	1	/P	Pivot Axle
14	719-3120	1		Axle Carrier
15	721-0462	1	/P	Seal, Grease, 1.31 x 1.0
16	723-0462	1		Ball Joint, 12MM x 1.75 RH
17	723-0463	1		Ball Joint, 12MM x 1.75 LH
18	736-0163	2	S	Washer, Flat, 1.03 x 1.62 x .030
19	736-0247	1	/P	Washer, Flat, .406 x 1.25
20	737-3000	3	S	Fitting, Lube, 3/16 Drive
21	741-0131	1	S	Bearing, Ball
22	741-0363	1	S	Bearing, Needle
23	741-0558	4	S	Bearing, Flange
24	747-3348A	1	/P	Tie Rod, M12 x1.75 RH & LH
25	748-3074	1		Steering Arm

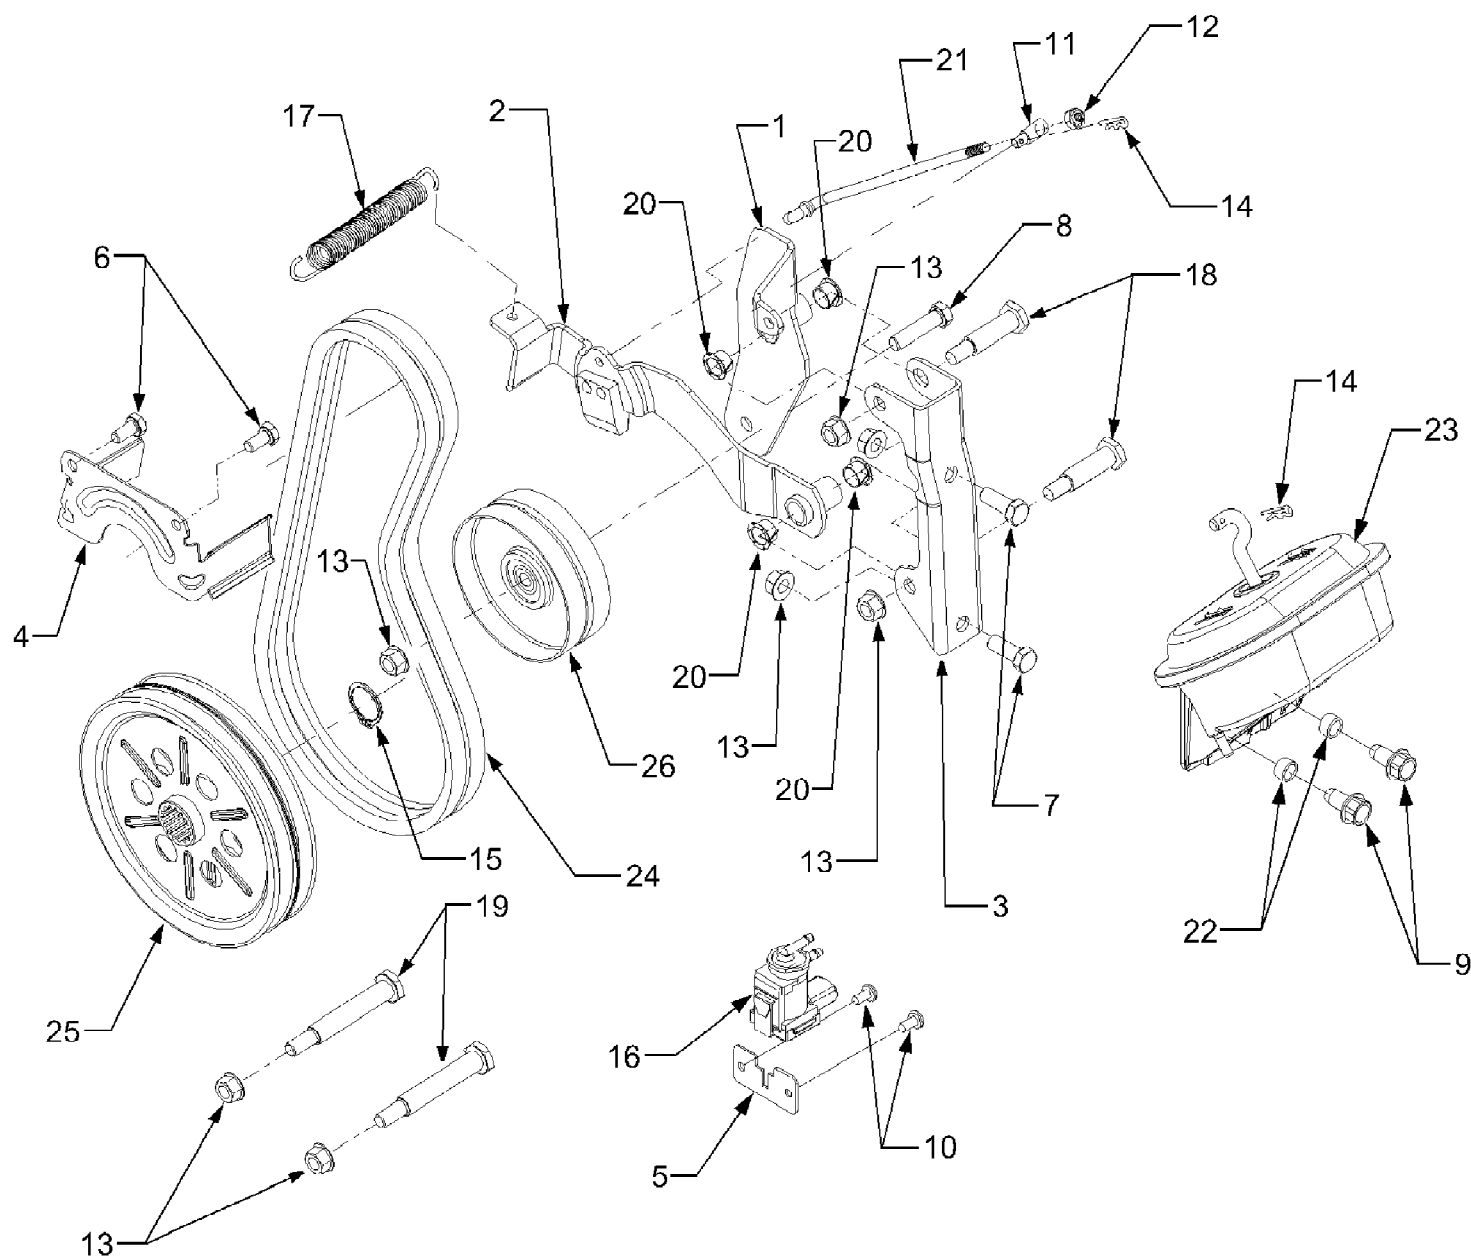


3204 Tractor
Front PTO

Page 29 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	603-0442-0637	1	/P	Bracket, Idler
2	759-3867	1	/P	Bracket Assembly, Brake
3	703-3009-0637	1	/P	Bracket, PTO Mounting
4	703-3165-0637	1	/P	Belt Guide
5	703-3812-0716	1		Bracket, Solenoid Mounting
6	710-0237	2	/P	Screw, Hex Cap 5/16-24 x .625 GR5
7	710-0514	2	/P	Screw, Hex Cap 3/8-16 x 1.0 GR5
8	710-0520	1	/P	Screw, Hex Cap 3/8-16 x 1.5 GR5
9	710-0623	2	/P	Screw, Hex Wash. Hd. Tapp 3/8-16 x .75
10	710-0748	2	/P	Screw, Phil. Hd. Tapp #12-14 x .5
11	711-1196	1		Ferrule, Brake Adjustment
12	712-0324	1	/P	Nut, Hex Insert Lock, 1/4-20
13	712-0431	7	S	Nut, Flange Lock, 3/8-16
14	714-0104	2	S	Pin, Internal Cotter
15	716-0102	1	S	Snap Ring, 1.0 Dia Shaft
16	759-04258	1	/P	Solenoid, Kit Vacuum Actuator Replaces 725-3278
17	732-0470A	1	S	Spring, Extension, .530 x 4.74
18	738-0213	2	/P	Shoulder Screw, .498 x 1.45
19	738-3056	2	S	Shoulder Screw
20	741-0491	4		Bearing, Nylon Flange
21	747-3322	1		Rod, PTO Brake
22	750-0526	2		Spacer, .380 x .5 x .265
23	751-3173	1	S	Vacuum Actuator
24	754-3084	1	S	V-Belt, A-Section x 37.63 (Set of two belts)
25	756-3092	1		Pulley, PTO Drive. 6.75-Double
26	756-3094	1		Pulley, Flat Idler, 4.0

3204 Tractor
Front Wheels


Page 30 of 64

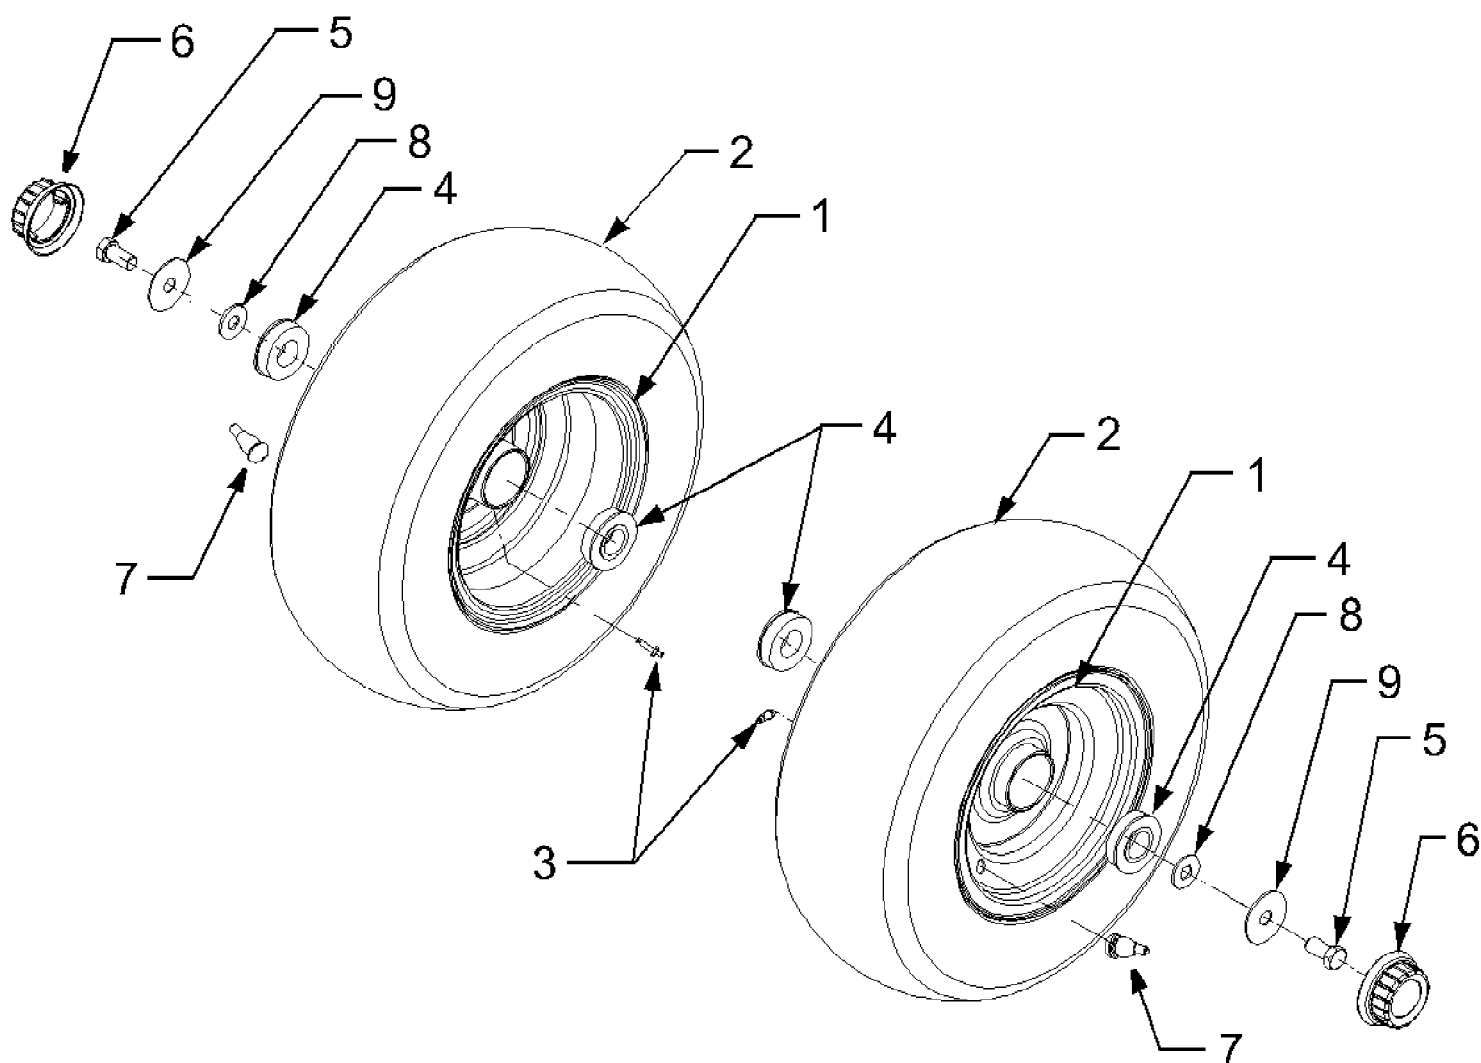

3204 Tractor
Front Wheels

Page 31 of 64


Ref #	Part Number	Qty	S/P/F	Description
1	734-3053-0499	2	S	Rim Assembly, Wheel
2	734-3187	2	S	Tire, Turf, 16 x 6.5 x 8.0
3	737-0224	2		Lube Fitting
4	741-3002	4	S	Bearing, Ball
5	710-3126	2	/P	Screw, Hex Cap, 1/2-13 x 1.0 GR5
6	731-3020	2	S	Hubcap
7	734-0255	2	S	Valve, Tubeless Air
8	736-0179	2	S	Washer, Flat, .531 x 1.25 x .1
9	736-3095	2	S	Washer, Flat, .535 x 1.92 x .060

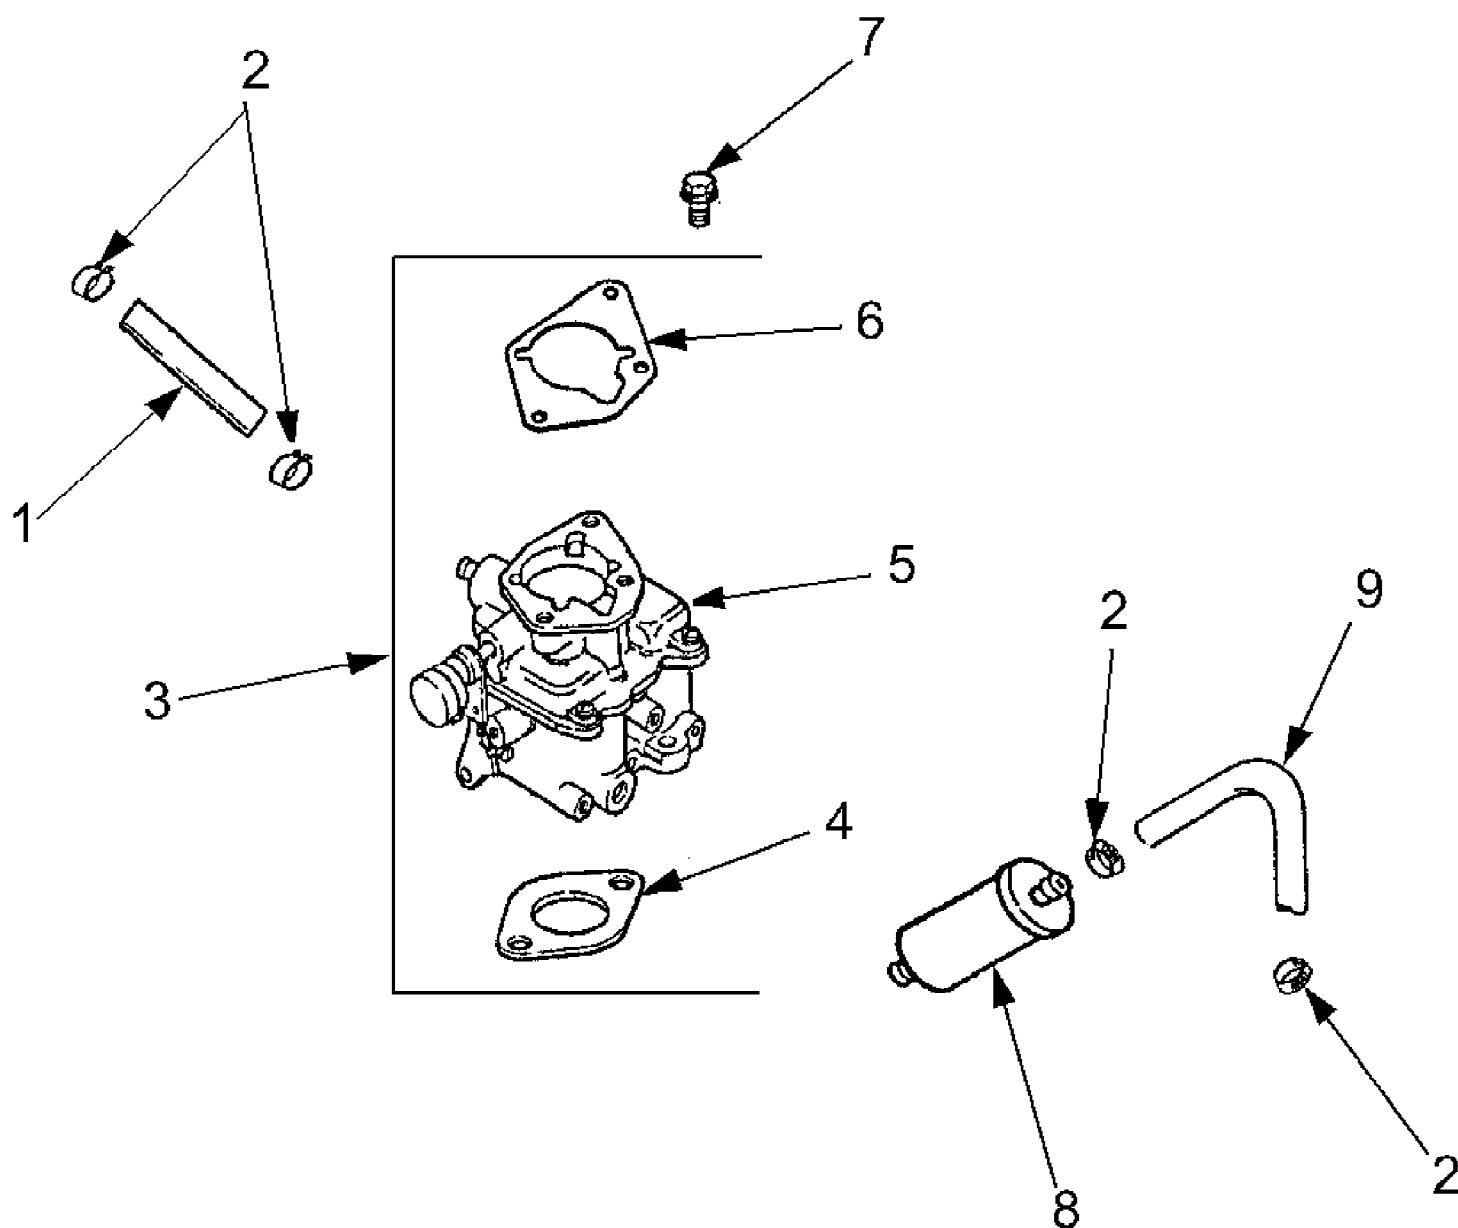

3204 Tractor
Fuel System

Page 33 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	KH-52-353-20	2	S	Line, Fuel 10"
2	KH-25-237-14-S	4	/P	Clamp, Hose
3	KH-24-853-32	1	/P	Kit, Carburetor w/Gasket (Includes 4-6)
4	KH-24-041-53-S	1		Gasket, Carburetor
5		1		Carburetor Assembly Not available separately
6	KH-24-041-06	1	/P	Gasket, Air Cleaner Base
7	KH-M-651025-S	2		Screw, Hex Flange, M6 x 1.0 x 25
8	KH-24-050-02	1	S	Filter, Fuel
9	KH-24-353-12	1		Line, Fuel 11"
		1		Not Illustrated
	KH-24-518-24-S	1		Lead, Ground
	KH-24-757-01	1	/P	Kit, Solenoid Includes Solenoid Screw (qty. 2), O-Ring, O-Ring, O-Ring , Solenoid Assembly & Solenoid Seat.
	KH-24-757-02	1	S	Kit, Float Repair Includes Carburetor Body Gasket, Float Screw, Float Assembly and Float Shaft.
	KH-24-757-03	1	S	Kit, Carburetor Repair Includes Carburetor Gasket; Carburetor Body Screw; Idle Needle Spring; U-Ring; Slow Jet O-Ring; Main Jet Screw O-Ring; Solenoid O-Rings; Inlet Needle Valve Clip; Idle Needle and Inlet Needle Valve.
	KH-24-757-07	1		Kit, Choke Repair Includes Choke Plate Screws; Choke Spring; Choke Lever; Choke Shaft; Choke Plate; Choke Bushings; and Choke Lever Cap.
	KH-24-755-125-S	1		Kit, High Altitude

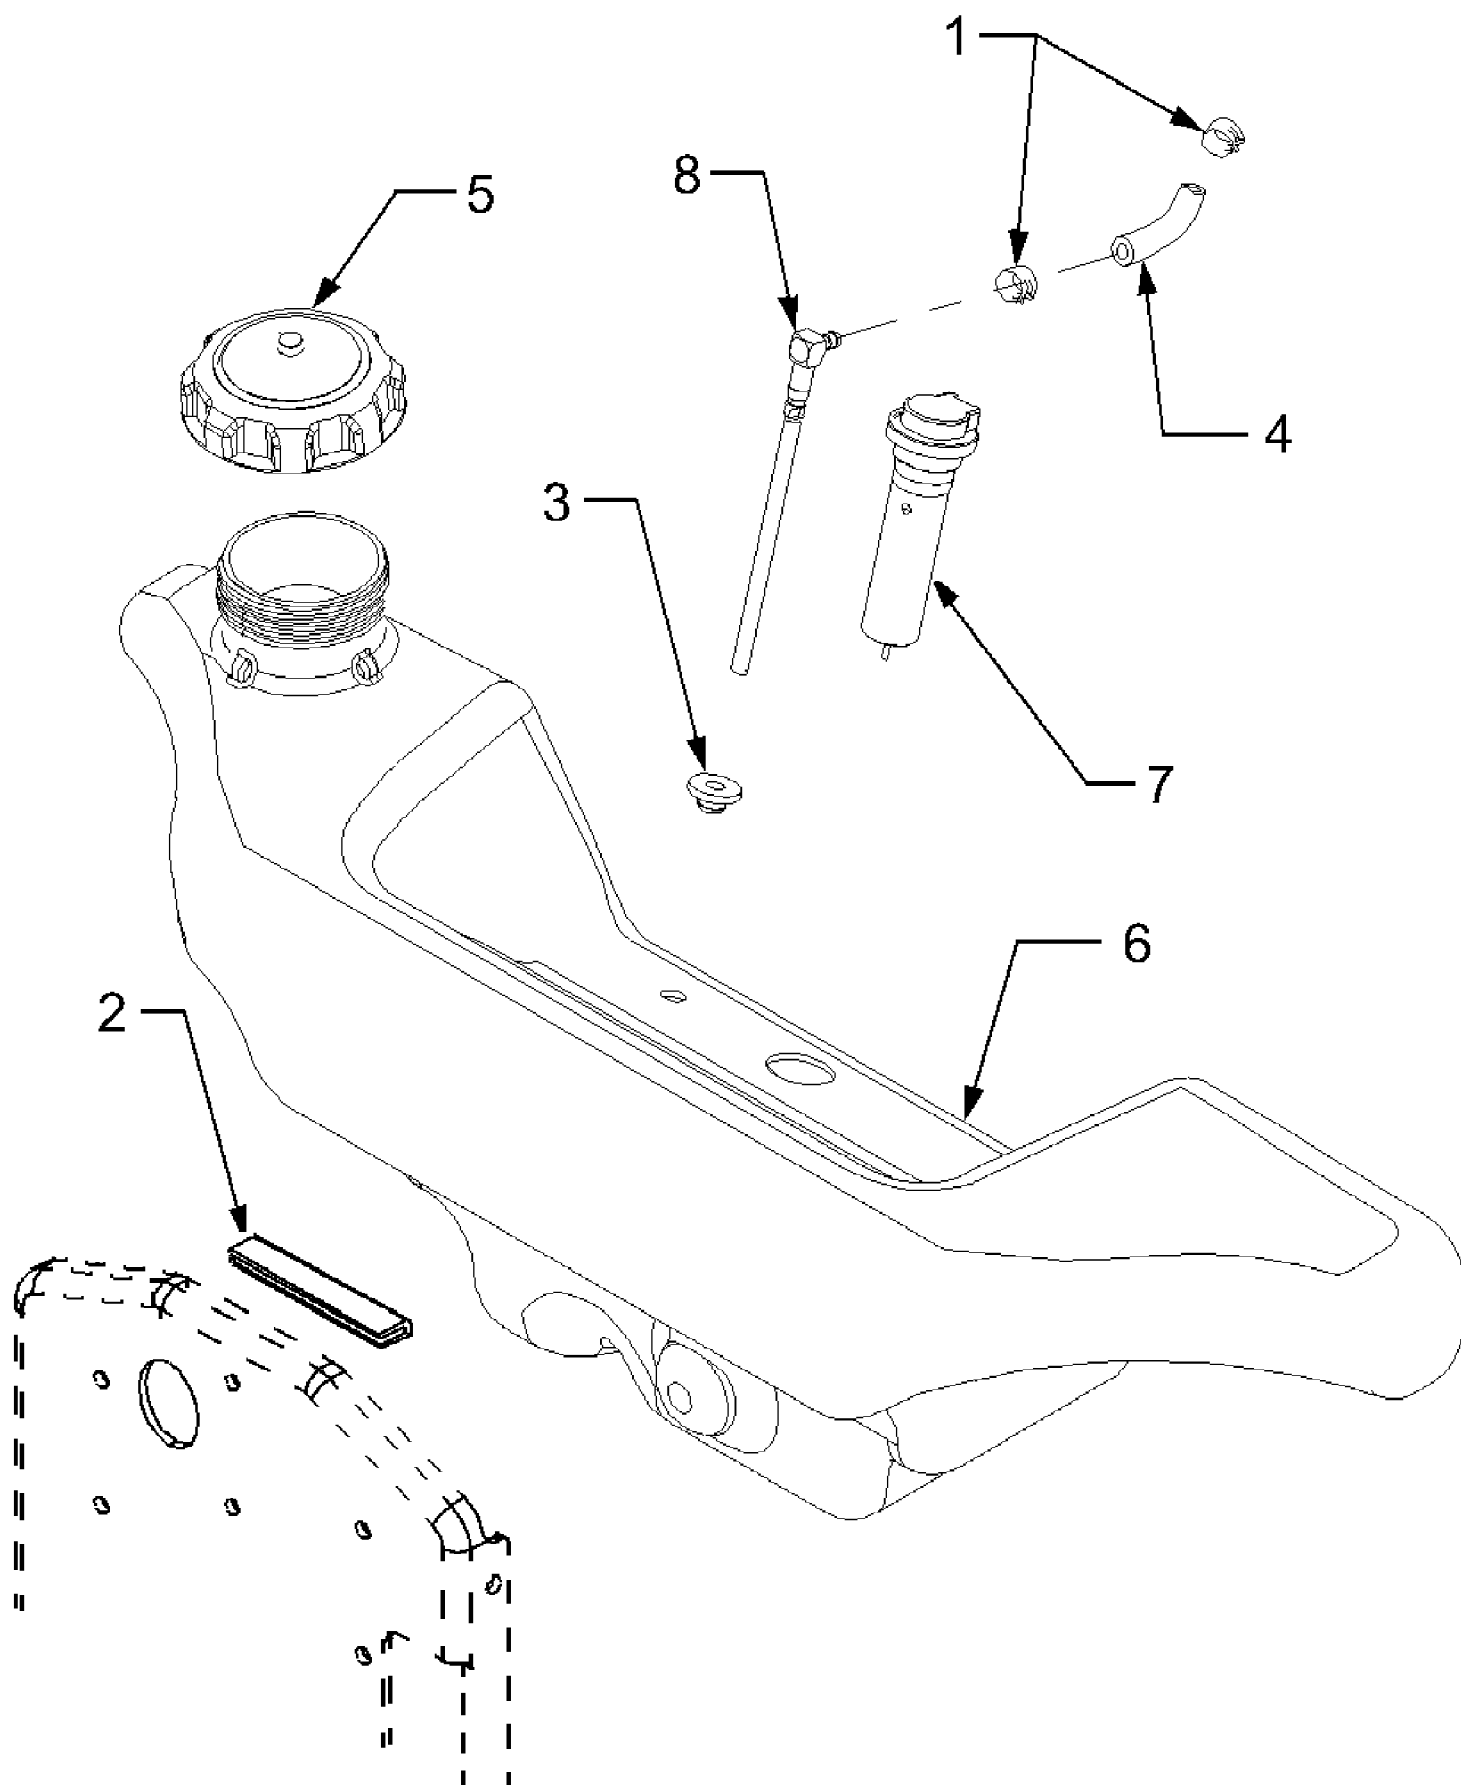

3204 Tractor
Fuel Tank


Page 35 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	726-0205	2	/P	Clamp, Hose
2	731-3268	1		Trim, Tank Protector
3	735-0149	1	S	Bushing, Rubber
4	751-0535-60	1	S	Fuel Line
5	751-3124B	1	S	Cap, Fuel
6	751-3144B	1	S	Tank, Fuel, 4.5 Gallon
7	751-3161	1		Sensor, Low Fuel
	751-3146	1	S	Grommet
8	751-3162A	1	/P	Fitting, Fuel Pickup

3204 Tractor
Hood, Grille And Side Panels

Page 37 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	625-04001	1	S	Headlight Assembly
	725-0963	2	S	Bulb, Headlight
	725-1649	2	S	Socket Assembly, Headlight
2	703-05000A-0499	1	/P	Hood
3	703-2946-0499	1		Side Panel, RH
4	703-2947-0499	1		Side Panel, LH
5	703-2950-0499	1		Grille, Series 3000
	777I20314	1	/P	Graphic, Warning
6	703-2984-0716	1		Support, Grille - RH
7	703-2985-0716	1		Support, Grille - LH
8	703-3070B-0499	1	/P	Bracket, Upper Hood
	777S30538	1		Graphic, Hot Surface
9	703-3071	2		Bracket, Rod Retainer
10	703-3101B-0716	1	/P	Support, Hood
11	710-0351	8	/P	Screw, Truss Hd, Tapp, #10-16 x .5
12	710-0607	10	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .5
13	710-0924	4	/P	Screw, Phil. Pan Hd 1/4-20 x .75
14	726-3054	4		Nut, U Type Speed, 1/4-20
15	726-0139	2	/P	Nut, U-type Speed, #10
16	726-3056	4		Latch, 1/4 Turn
17	731-3227	1		Mount, Side Panel/Grille RH
18	731-3228	1		Mount, Side Panel/Grille LH
19	732-0936	4		Clip, Spring
20	732-0937	4		Spring, Compression
21	732-1178	1		Spring, Hood Latch
22	736-0400	2	S	Washer, Flat, .194 x .62 x .063
23	747-3478	1		Rod, Upper Hood
24	747-3338	1		Rod, Lower Hood
25	777D03265	1	/P	Graphic, Hood - RH
	777D03266	1	/P	Graphic, Hood - LH
26	777D05577	2		Graphic, 3204
27	703-4088-0716	2		Bracket, Hood Latch Support
28	710-0136	1	/P	Screw, Hex Cap, 1/4-20 x 1.75 GR5
29	710-0599	2	/P	Screw, Hex Wash Hd Tapp, 1/4-20 x .5
30	710-1005	4	S	Screw, Hex Wash Hd Tapp, 1/4-14 x .5
31	712-3051	1	/P	Nut, Hex Top Lock, 1/4-20
32	731-3232	1		Roller, Hood Latch
33	736-0342	1		Washer, Flat, .283 x .75 x .030
34	747-04085	1		Rod, Hook Support
35	728-0117	4		Rivet, Pop, .125 OD

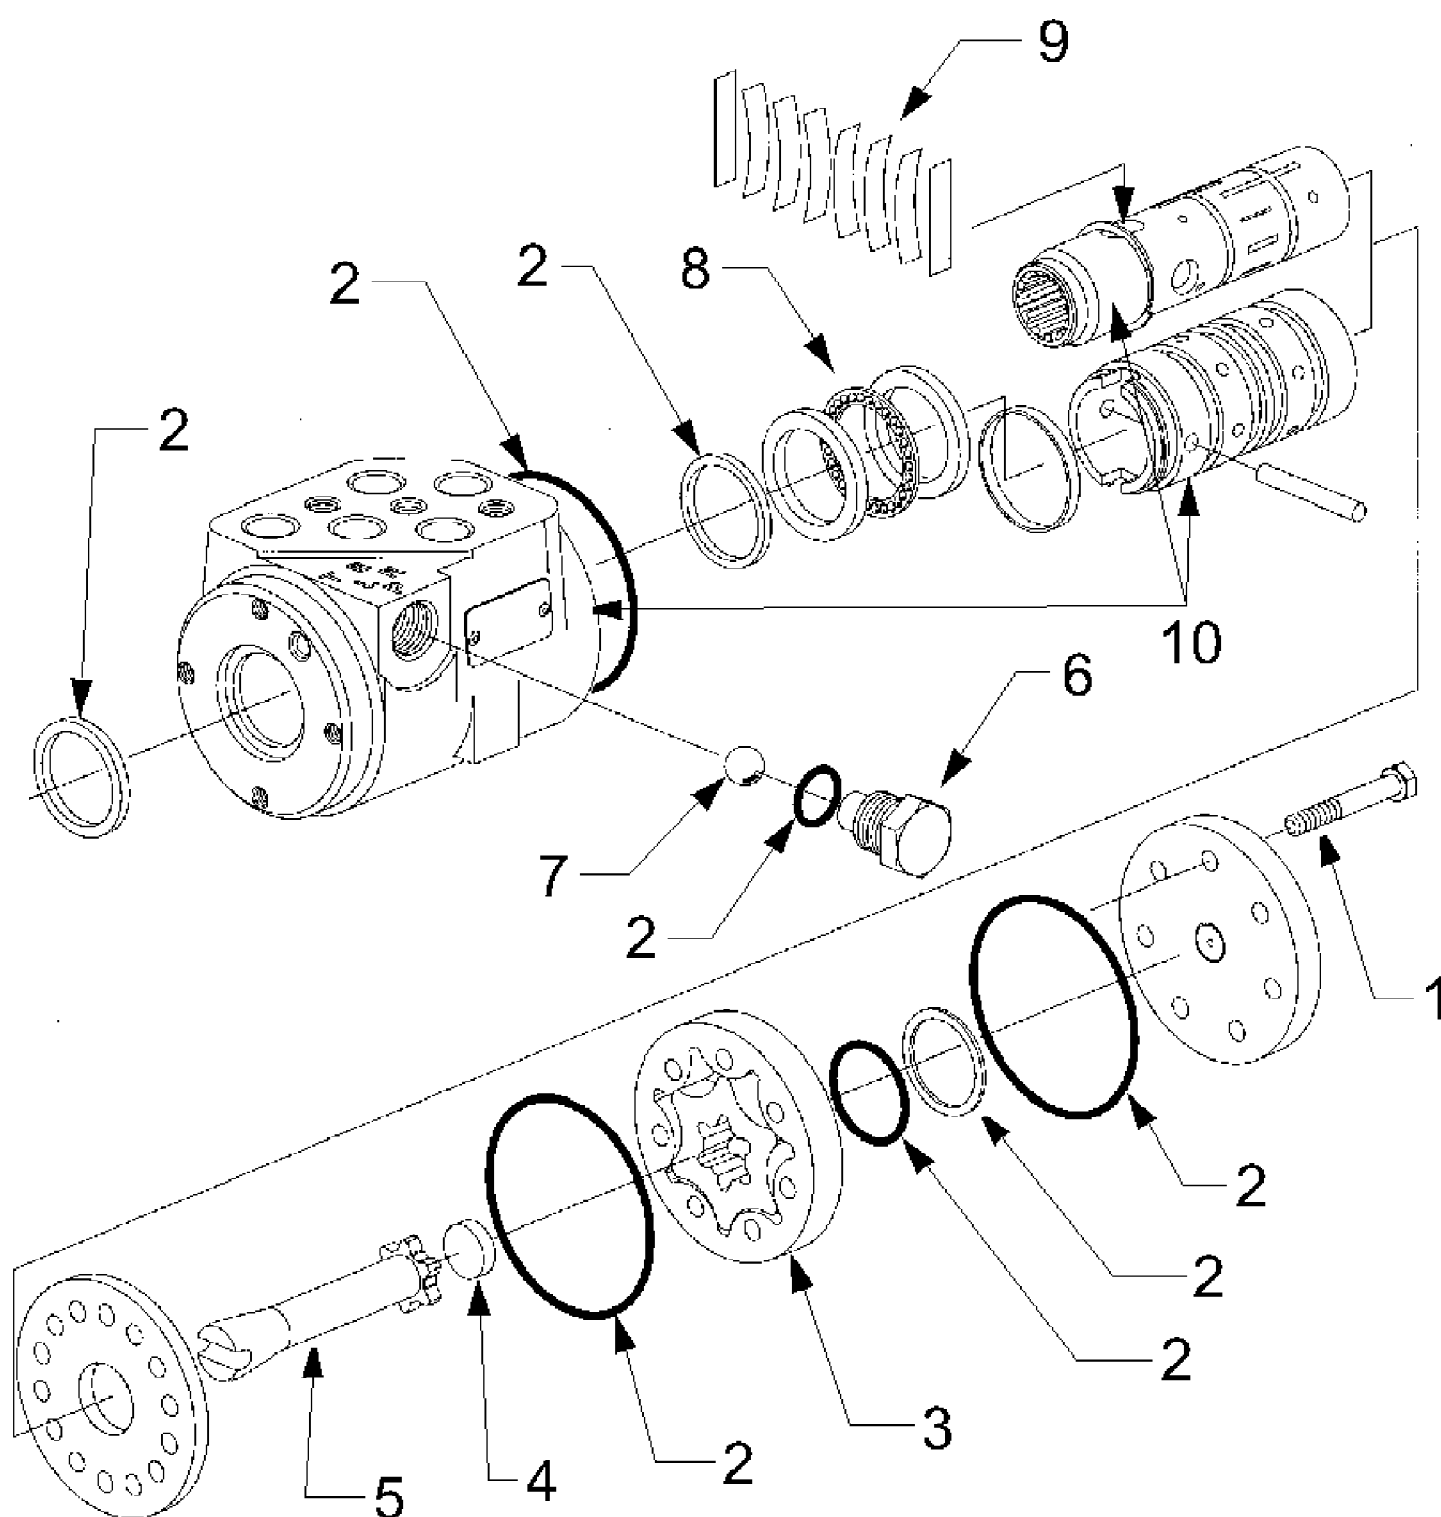


3204 Tractor
Hydraulic Steering Pump

Page 39 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	ET-14543-002	1		Screw, Hex Cap, 1.57" Lg.
2	ET-64455-000	1		Seal Kit (Includes All Parts Marked Ref. 2)
3	ET-22991-003	1	S	Gerotor Assembly
4	ET-22919-005	1		Spacer, .240 Lg
5	ET-22918-000	1		Drive
6	ET-9199-000	1		Plug, Manual Check
7	ET-285020-140	1		Ball, Manual Check
8	ET-64457-000	1		Bearing Kit
9	ET-64456-000	1		Spring Kit, Centering
10	~N/A	1		Spool, Sleeve and Housing Not Available as Replacement Parts. Order Complete Steering Pump

3204 Tractor
Hydraulic Valve And Lines

Page 40 of 64

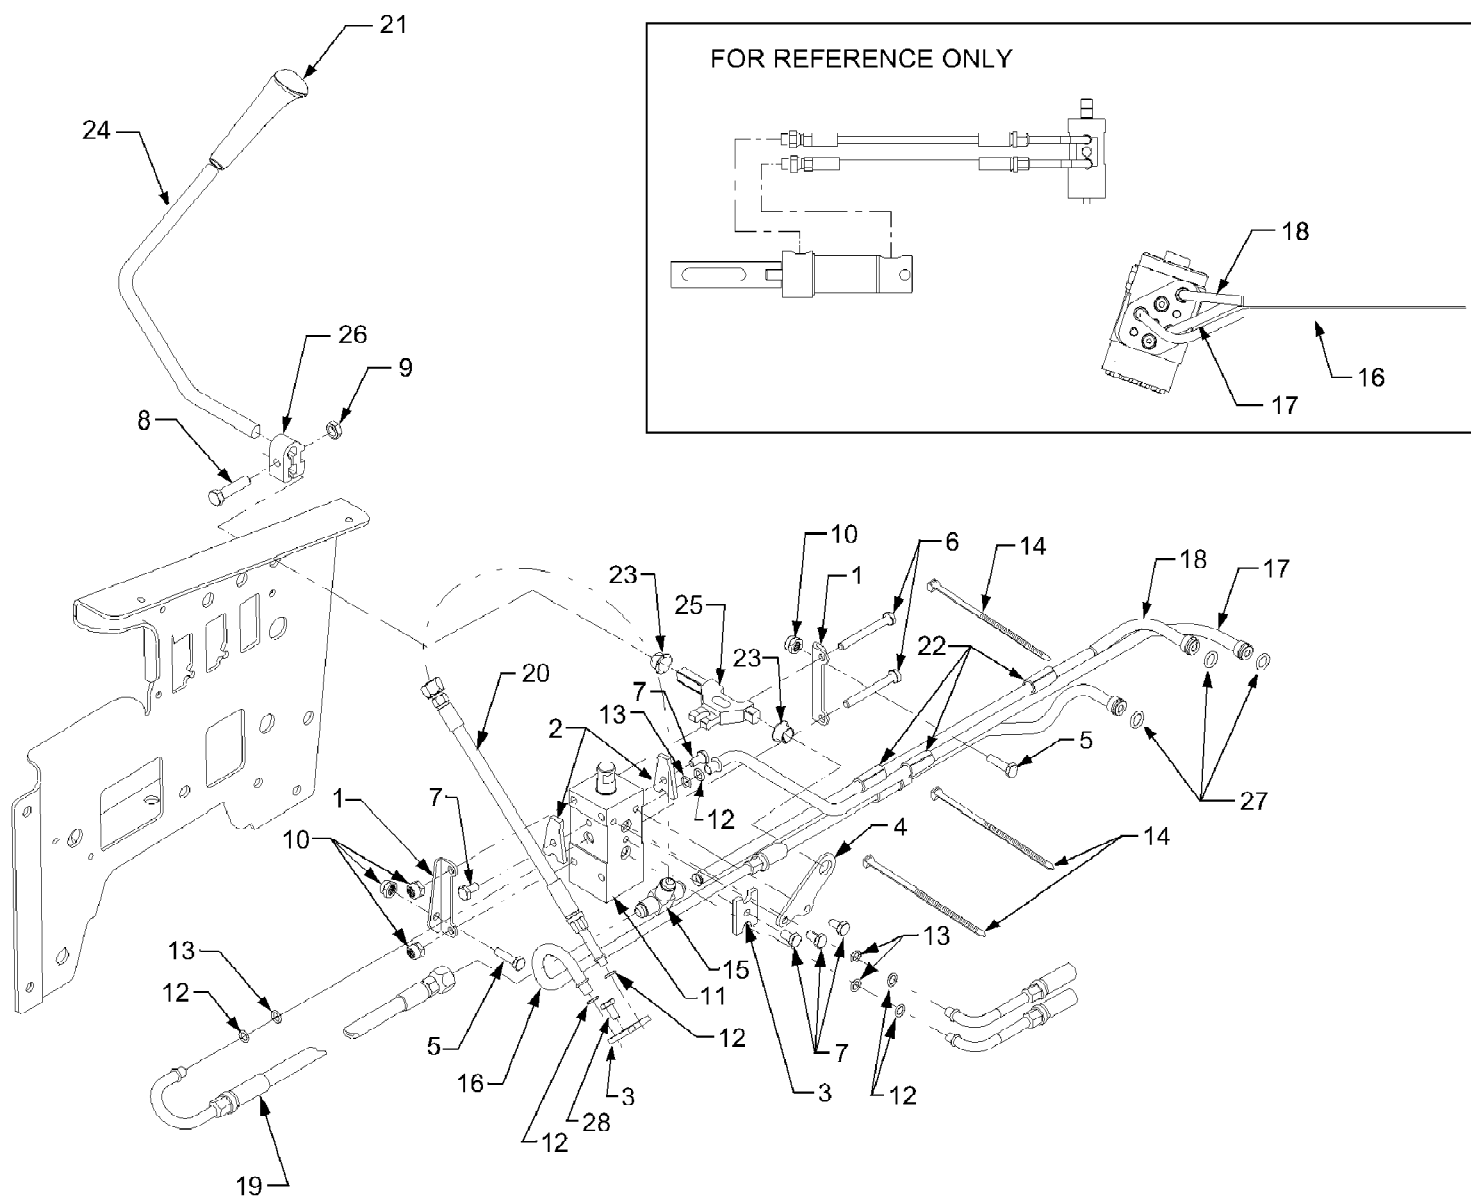


3204 Tractor
Hydraulic Valve And Lines

Page 41 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	703-1801	2		Bracket, Valve Mounting
2	703-1802	2		Clamp, Side Valve
3	703-1803	2	S	Clamp, Double Valve
4	703-3154	1	S	Bracket, Lift Valve
5	710-0597	2	/P	Screw, Hex Cap 1/4-20 x 1.0 GR5
6	710-0641	2	/P	Screw, Hex Cap 1/4-20 x 2.25 GR5
7	710-3013	5	/P	Screw, Hex Cap 1/4-20 x .50 GR5
8	710-3083	1	/P	Screw, Hex Cap 5/16-18 x 1.375 GR5
9	712-0429	1	S	Nut, Hex Insert Lock, 5/16-18
10	712-3027	4	S	Nut, Hex Flange Lock, 1/4-20
11	717-3452	1		Valve, Hydraulic
12	721-0492	4		O-Ring, Backup
13	721-3021	6	S	O-Ring
14	726-0197	3		Cable Tie
15	727-3056	1		T-Fitting, 9/16-18 Thrd
16	727-3130	1		Tube, Hydraulic (Pump to Strng)
17	727-3131	1		Tube, Hydraulic (Aux. from Strng)
18	727-3162	1		Tube, Hydraulic (Strng Return)
19	727-3160	1		Tube, Hydraulic (Aux Return)
20	727-3161	1	/P	Tube, Hydraulic (Return to Pump)
21	731-3259	1		Knob, Lift
22	735-3007	3	S	Rubber Spacer
23	741-0491	2		Bearing, Nylon Flange
24	747-3349A	1	/P	Handle, Center Lift Valve
25	748-3081A	1	/P	Link, Lift
26	748-3082	1		Clamp, Handle
27	721-0493	3		O-Ring, .426 x .566 x .070
28	710-0751	1	/P	Screw, Hex Cap 1/4-20 x .62 GR5

3204 Tractor
Hydrostatic Transmission

Page 42 of 64

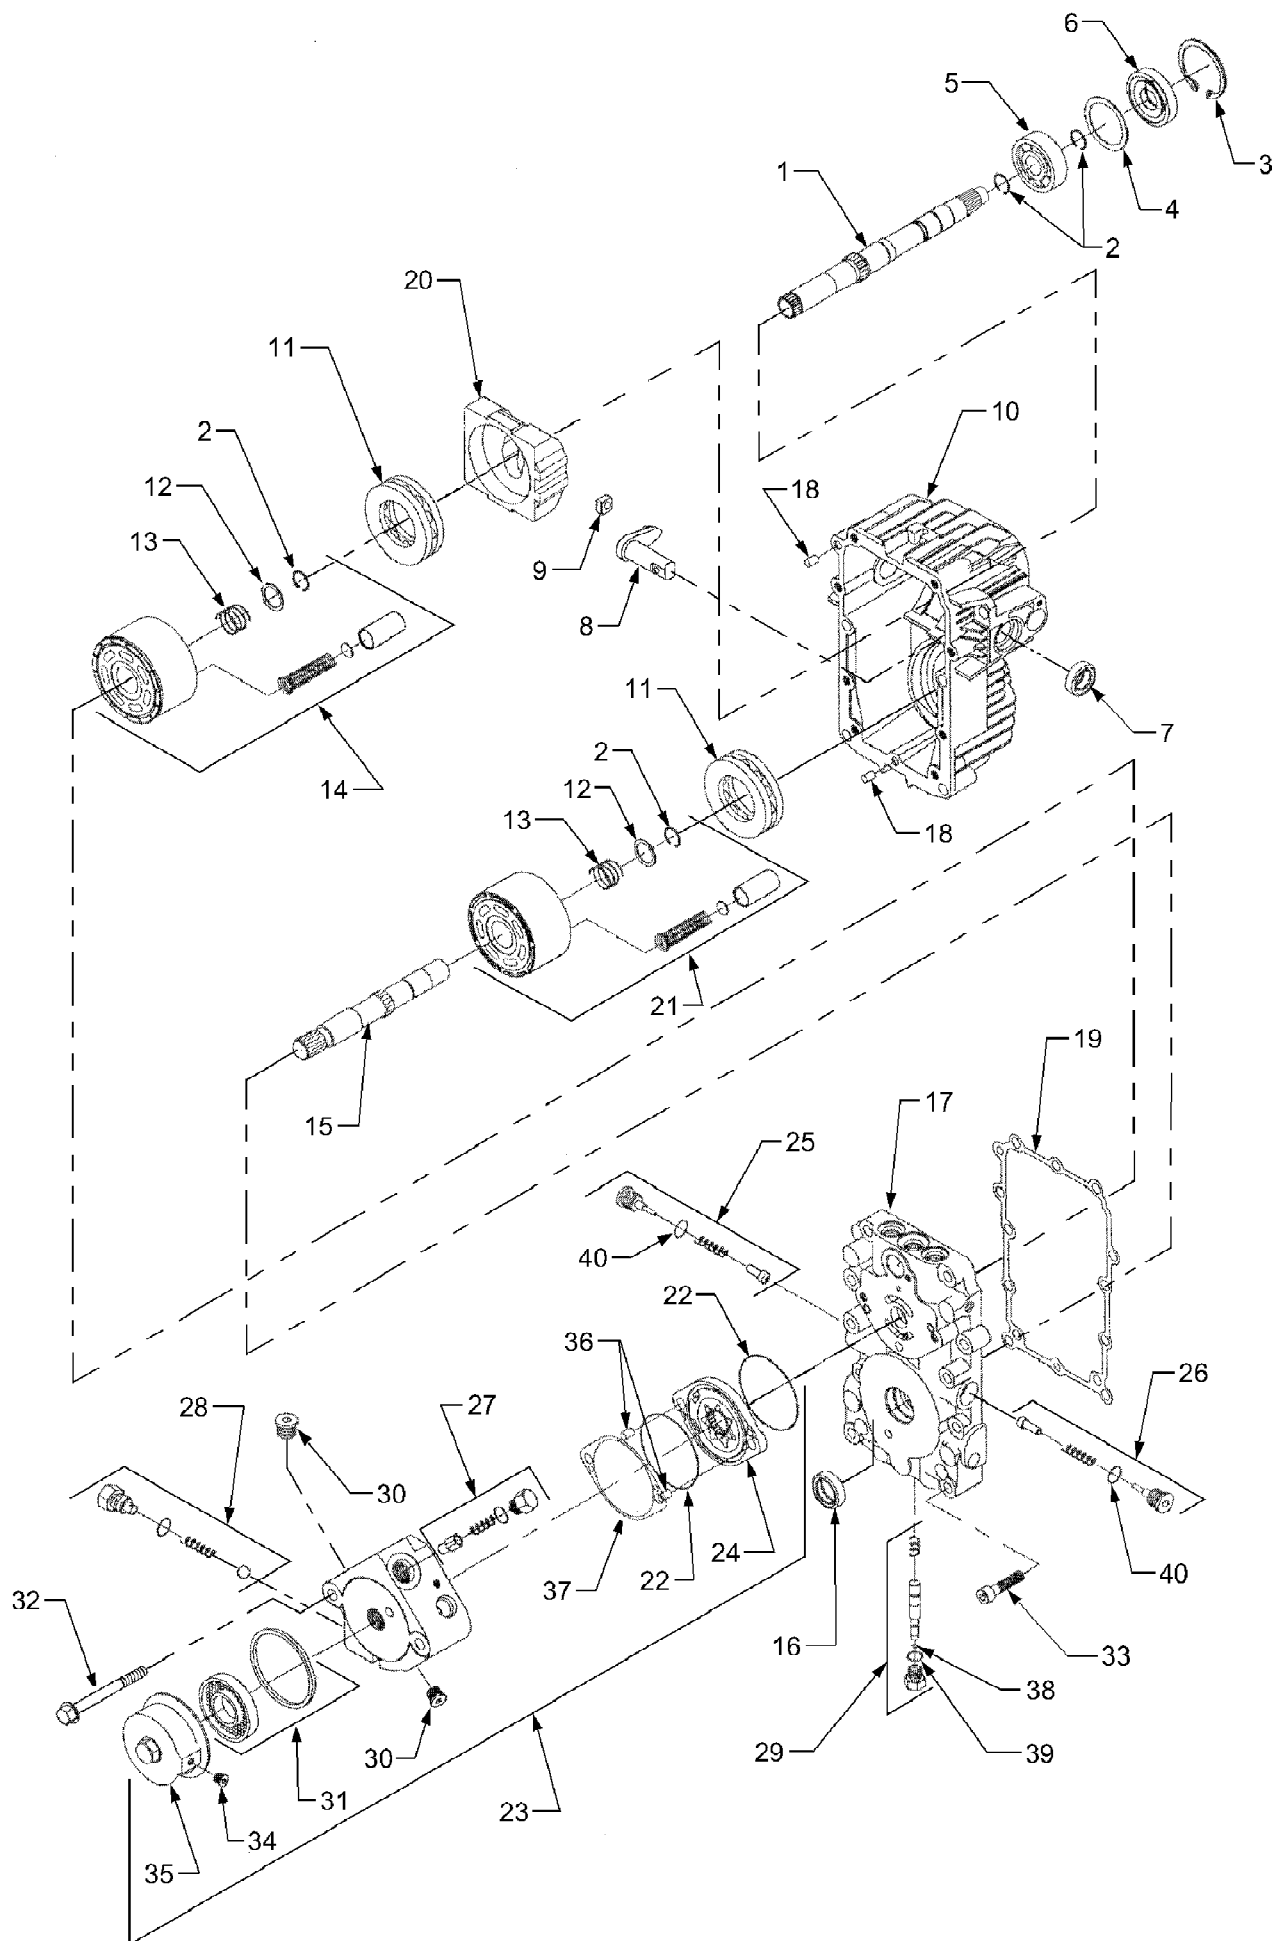


3204 Tractor
Hydrostatic Transmission

Page 43 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	HG-51206	1	/P	Shaft, Pump
2	HG-2000022	4	/P	Ring, Wire Retaining
3	HG-2000038	1	/P	Ring, Retaining
4	HG-2000023	1	/P	Spacer
5	HG-2000032	1	/P	Bearing, Ball
6	HG-2000036	1	S	Seal, Lip
7	HG-2000037	1	/P	Seal, Lip
8	HG-2000014	1	/P	Arm, Trunnion
9	HG-2000015	1	/P	Guide, Slot
10	HG-2510097	1		Housing Assembly
11	HG-50552	2	/P	Bearing Assembly, Thrust Ball
12	HG-2000024	2	/P	Washer, Block Thrust
13	HG-2000025	2	/P	Spring, Block
14	HG-2510014	1	/P	Kit, Pump Cylinder Block
15	HG-2000007	1	/P	Shaft, Motor
16	~N/A	1		Not Used In This Application
17	HG-2510098	1	/P	Kit, Center Section
18	HG-50641	2		Pin
19	HG-2000061	1	/P	Gasket, Center Section
20	HG-50203	1		Swashplate, Variable
21	HG-2510013	1	/P	Kit, Motor Cylinder Block
22	HG-9004100-1430	2	/P	O-Ring
23	HG-2510083	1	S	Kit, Auxiliary Charge Pump
24	HG-50761	1	/P	Gerotor & Housing Assembly
25	HG-2510050	1	/P	Kit, Check Valve
26	HG-2510034	1	/P	Kit, Check Valve w/ .044 Orifice
27	HG-2510081	1		Kit, Check Relief
28	HG-2510082	1		Kit, Auxiliary Relief Valve
29	HG-2510012	1	/P	Kit, Bypass Valve
30	HG-9005110-4400	2		Plug, 7/16-20
31	HG-2510090	1	/P	Kit, Auxiliary Filter
32	HG-50969	2		Screw, Flange Head Cap, M8 x 60
33	HG-9007314-0808	8	/P	Screw, Socket Head Cap
34	HG-9005110-3100	1		Plug, 5/16-24
35	HG-50994	1	S	Cover, Filter
36	HG-50408	2	/P	Pin
37	HG-2000044	1	/P	Shim, Charge Pump
38	~N/A	1		O-Ring-Order Seal Kit HG-2510010
39	~N/A	1		O-Ring-Order Seal Kit HG-2510010
40	~N/A	1		O-Ring-Order Seal Kit HG-2510010
	HG-2510010	1	/P	Kit, Overhaul Seal (Includes Ref. Nos. 2, 3, 4, 6, 7, 19, 22, 38, 39 & 40)

3204 Tractor
Ignition/Electrical

Page 44 of 64

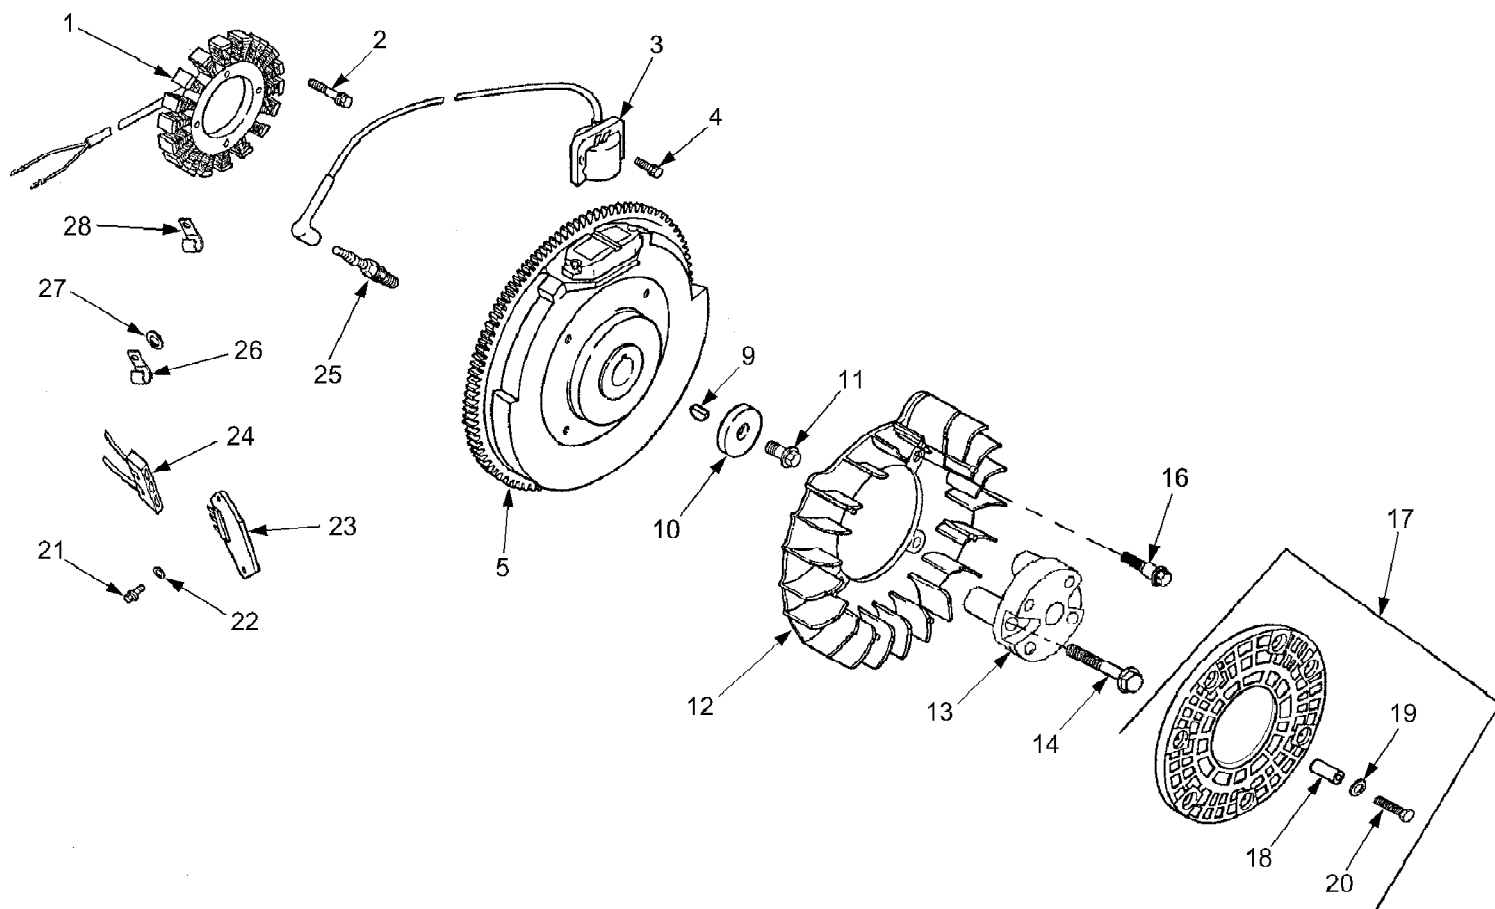


3204 Tractor
Ignition/Electrical

Page 45 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	KH-54-755-09	1	S	Kit, 15 Amp Stator (Incl. KH-24-126-71 Stator Bracket, Not Shown)
2	KH-M-0548025	2		Screw, Hex Cap M5 x 0.8 x 25
3	KH-24-584-01	2	S	Module, Ignition
4	KH-M-0545020	4	/P	Screw, Hex Socket Hd. M5 x 0.8 x
5	KH-24-025-04	1	S	Flywheel
9	KH-X-42-15	1	/P	Key
10	KH-12-468-03	1	/P	Washer, Plain 3/8"
11	KH-12-086-14	1		Screw, Hex Flange M10 x 1.5 x 46
12	KH-24-157-07-S	1	S	Fan
13	719-3096	1	/P	Adapter, Drive Shaft
14	KH-24-086-16	2	S	Screw, Hex Flange M10 x 1.5 x 90
16	KH-25-086-47	4	/P	Bolt, Shoulder, M6 x 1.0 x 16
17	KH-54-755-15	1	/P	Kit, Grass Screen (Incl. 18-20 and KH-24-113-18)
18	KH-24-112-04	4		Spacer
19	KH-X-25-92	4		Washer, Plain 3/16"
20	KH-M-0403025	4		Screw, Hex Cap M4 x 0.7 x 25
21	KH-24-086-18	2		Screw, Phillips Hd. 11-16 x 7/8"
22	KH-X-25-92	2		Washer, Plain 3/16"
23	KH-25-403-03	1	S	Rectifier-regulator 15 Amp
24	KH-236602	1	S	Connector (3 Contact)
25	759-3336	2	/P	Spark Plug
26	KH-235173	2		Clip, Cable
27	KH-X-25-63	1	/P	Washer, Plain 1/4"
28	KH-48-154-02	1		Clip, Cable
	KH-24-176-08	1	S	Harness, Wire
	KH-24-518-12-S	1	/P	Lead
	KH-X-22-11	1		Washer, Lock, 1/4
	KH-25-086-91-S	2	/P	Screw, Tapping, #10-16 x .5
	KH-47-154-01-S	1	/P	Clip, Cable

3204 Tractor Lower Power Steering


Page 46 of 64

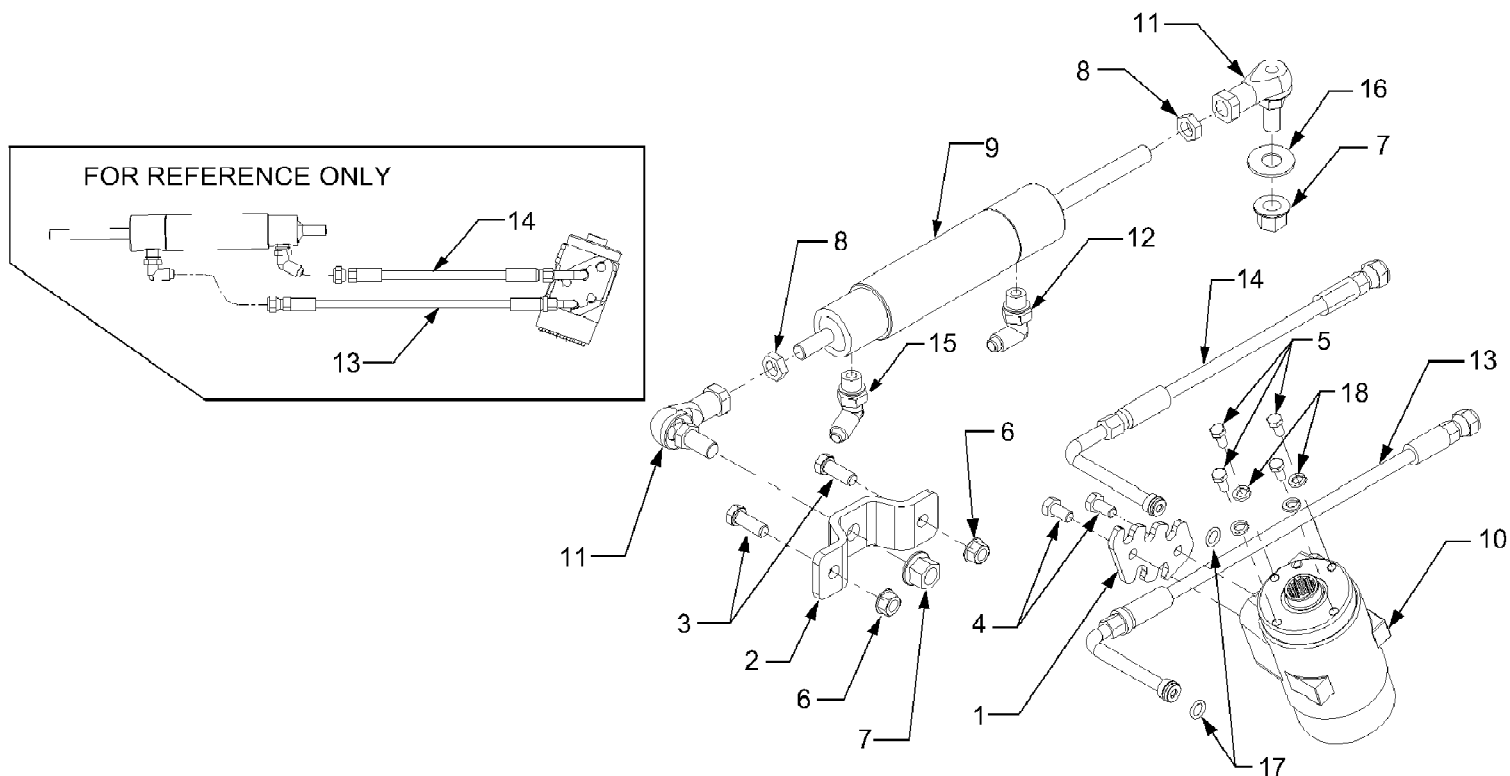

3204 Tractor
Lower Power Steering

Page 47 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	703-3015-0716	1		Plate, Steering Pump Port
2	703-3189-0716	1	/P	Bracket, Cylinder Mounting
3	710-0514	2	/P	Screw, Hex Cap 3/8-16 x 1.0 GR5
4	710-3138	2	/P	Screw, Hex Cap M8-1.25 x 16MM GR5
5	710-3140	4		Screw, Hex Cap, M6 x 14MM
6	712-0431	2	S	Nut, Hex Flange Lock, 3/8-16
7	712-3103	2		Nut, Hex Flange Lock, M12 x 1.75
8	712-3104	2		Nut, Hex, M12 x 1.75 RH
9	717-3424	1		Cylinder, Steering
10	717-3442	1	S	Pump, Hydraulic Steering
11	723-0462	2		Ball Joint, 12MM x 1.75 RH
12	727-3012	1	/P	Fitting, 90 Degree Elbow
13	727-3126	1		Hose, Front Steering
14	727-3127	1		Hose, Rear Steering
15	727-3159	1		Fitting, 45 Degree
16	736-3084	1	/P	Washer, Flat, .51 x 1.12 x .060
17	721-0493	2		O-Ring, .426 x .566 x .070
18	736-0329	4	S	Washer, Lock, 1/4"

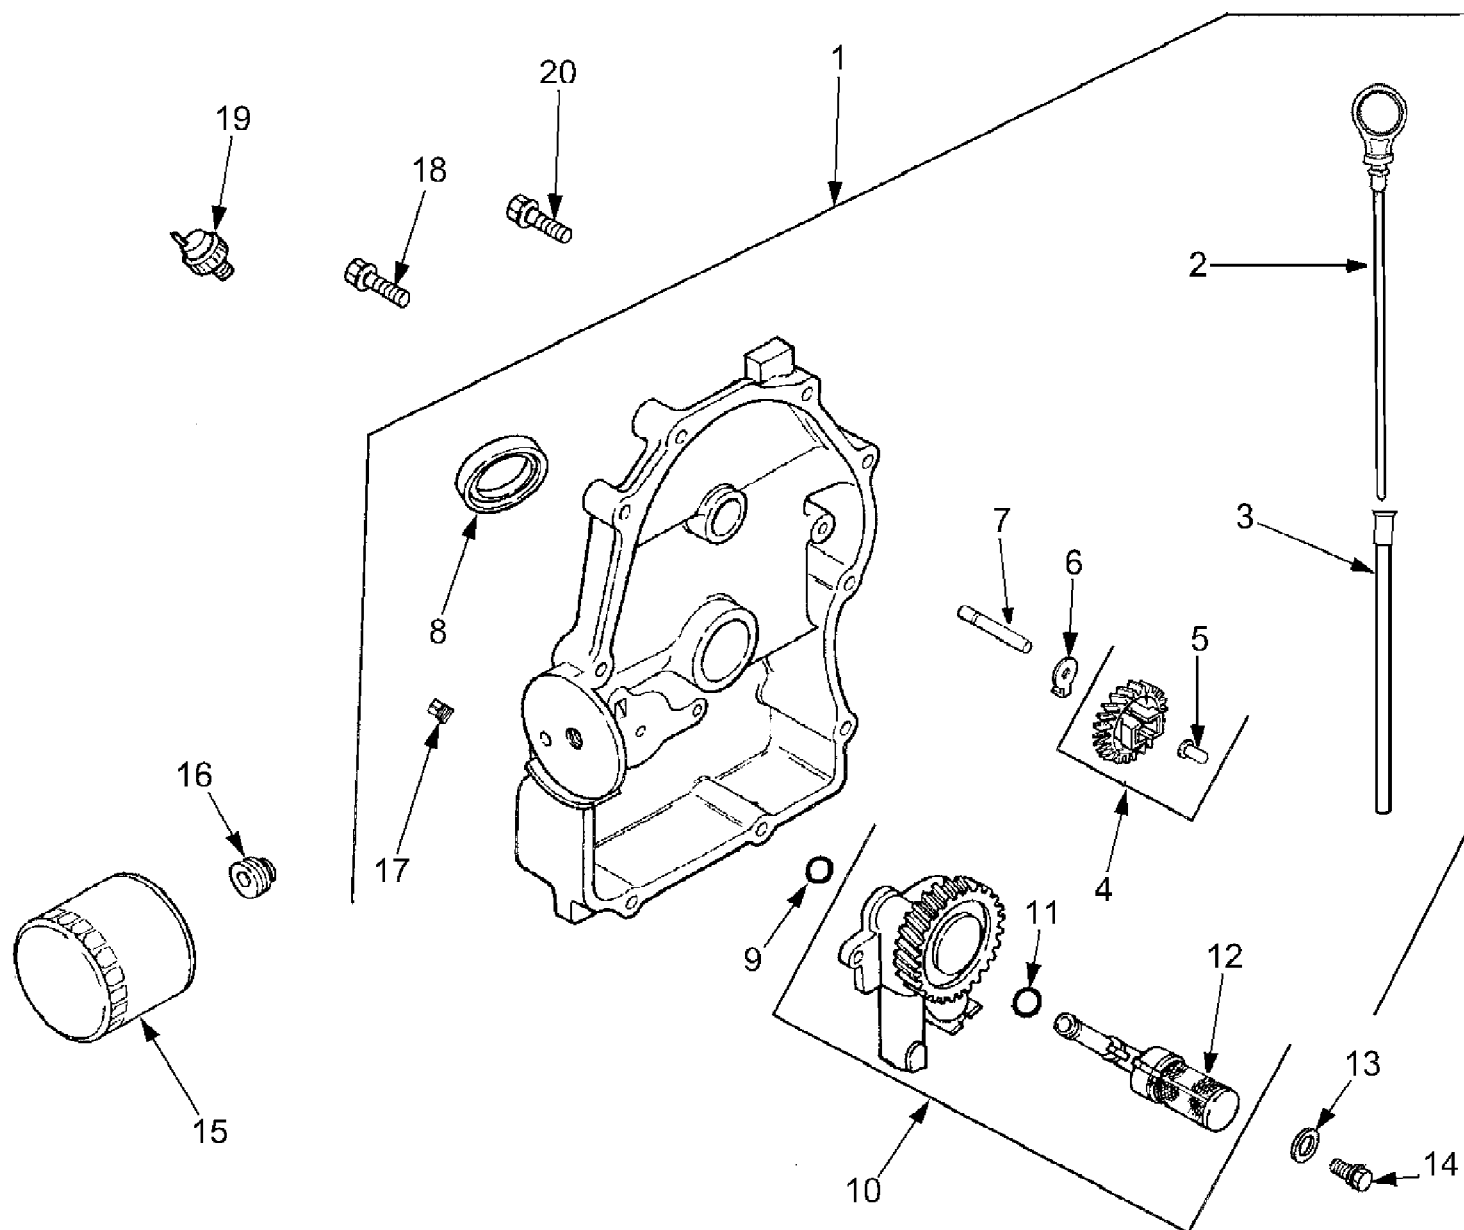


3204 Tractor
Oil Pan/Lubrication

Page 49 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	KH-54-009-07	1		Plate, Closure Assembly (Includes 2-12, 17)
2	KH-24-038-10-S	1	/P	Dipstick
3	KH-24-755-121-S	1	/P	Tube, Dipstick (Includes 2)
4	KH-24-043-12	1	/P	Kit, Governor Gear (Includes 5)
5	KH-12-380-01	1	/P	Pin, Governor Regulating
6	KH-52-448-02	1	S	Tab, Locking
7	KH-12-144-02	1		Shaft, Governor Gear
8	KH-52-032-08	1	S	Seal, Oil (PTO End)
9	KH-24-153-08	1		O-Ring
10	KH-24-393-10	1	S	Oil Pump Assembly (Includes 11,12)
11	KH-24-153-01	1	/P	O-Ring, Oil Pick-Up
12	KH-24-381-04	1		Pick-Up, Oil
13	KH-M-0631005	2	S	Washer, Plain
14	KH-M-0645025	2	S	Screw, Hex Flange M6 x 1 x 25
15	KH-12-050-08	1	S	Filter, Oil
16	KH-24-136-01	1		Nipple, Oil Filter
17	KH-25-139-60-S	2	/P	Plug, Pipe 1/8"
18	KH-24-086-16	9	S	Screw, Hex Flange M8 x 1.25 x 45
19	KH-25-099-24	1	S	Switch, Pressure
20	KH-24-086-17	1	S	Screw, Hex Flange M8 x 1.25 x 45

3204 Tractor
Pedestal And Connections


Page 50 of 64

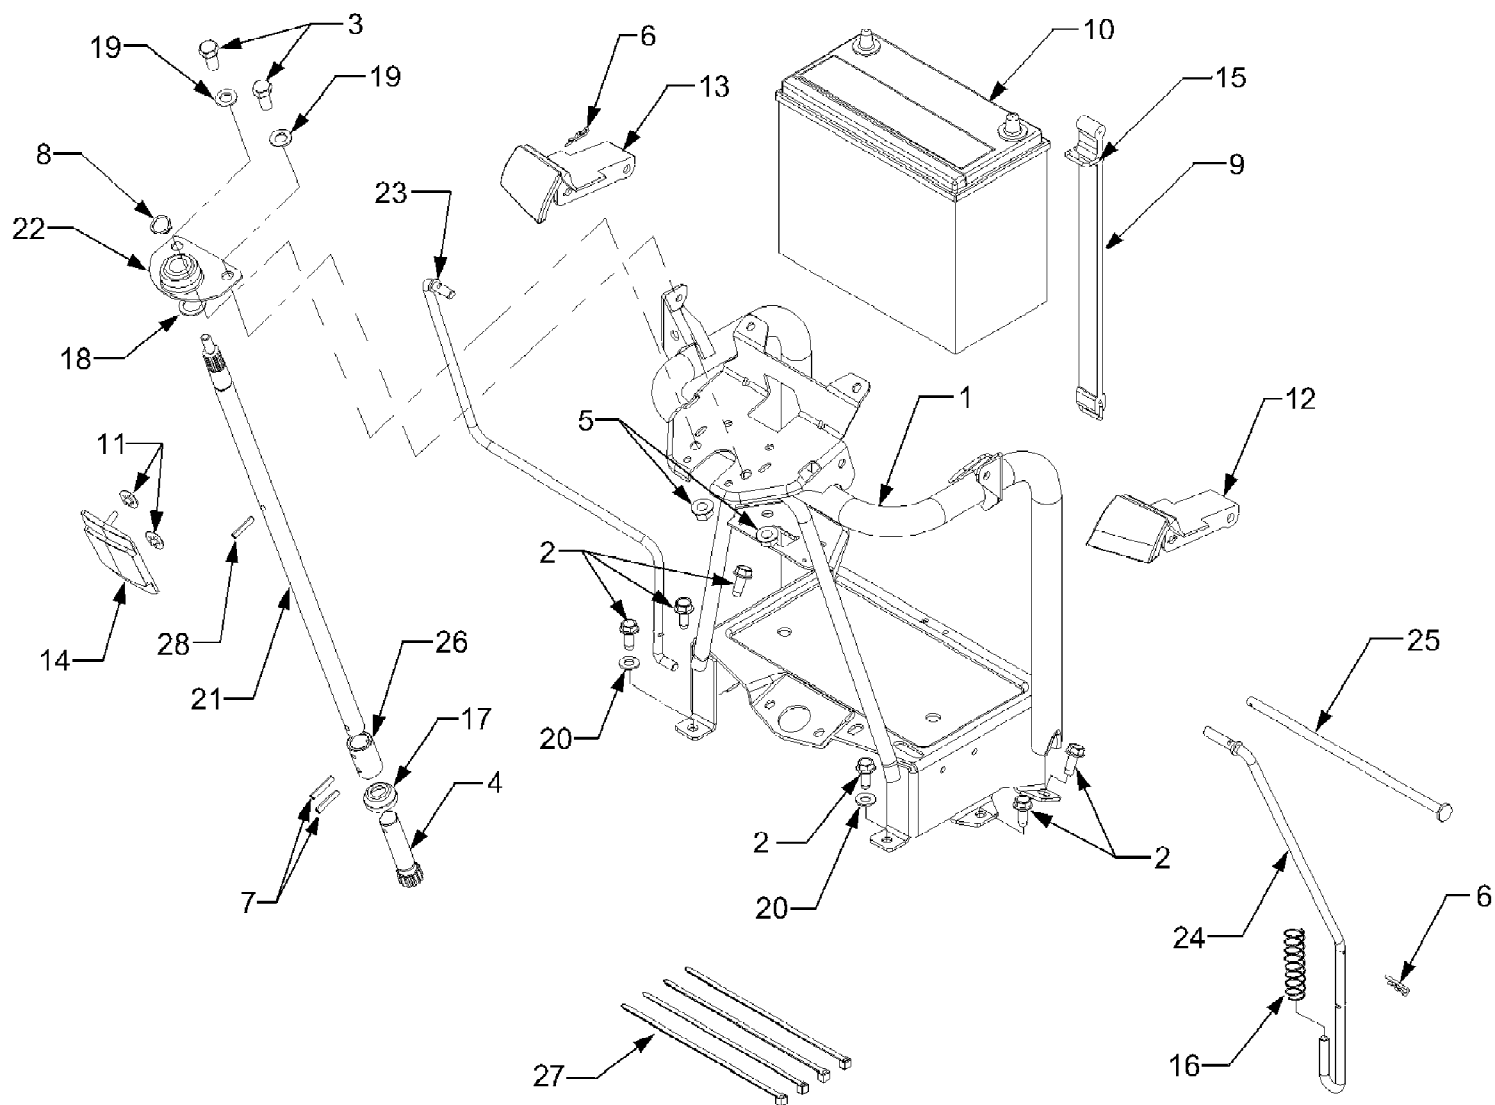

3204 Tractor
Pedestal And Connections

Page 51 of 64


Ref #	Part Number	Qty	S/P/F	Description
1	603-0386A-0637	1	/P	Pedestal Assembly
2	710-1260A	6	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
3	710-0216	2	/P	Screw, Hex Cap 3/8-16 x .75 GR5
4	711-1423	1		Shaft, Lower Steering
5	712-0431	2	S	Nut, Hex Flange Lock, 3/8-16
6	714-0104	2	S	Pin, Internal Cotter
7	715-0120	2	S	Pin, Spirol, 3/16 x 1.0
8	716-0115	1	S	Ring, Retaining, .56 Dia Shaft
9	723-0467	1		Strap, Battery (Incl. Ref No. 15)
10	725-3255	1	S	Battery
11	726-3047	2	S	Push Nut, .188 Dia.
12	731-3225	1		Lever, Park Brake
13	731-3226	1		Lever, Cruise
14	731-3323	1		Cover, Fixed Steering
15	732-0696	2		Hook, Wire Rectangular
16	732-0870	1	S	Spring, Compression, .676 x 2.57
17	735-0269	1		Boot, Shaft Cover
18	736-0116	1	S	Washer, Flat, .635 x .93 x .06
19	736-0185	2	S	Washer, Flat, .375 x .738 x .063
20	736-0275	2	S	Washer, Flat, .344 x .688 x .065
21	738-3177	1		Shaft, Upper Steering
22	741-3111	1		Bearing, Steering Support
23	747-3327	1		Rod, Cruise Control
24	747-3328	1		Rod, Parking Brake
25	747-3354	1		Rod, Cruise/Brake Pivot
26	750-1229	1		Sleeve, Fixed Steering
27	725-0157	4	/P	Cable Tie, Harness
28	715-0129	1	/P	Pin, Spirol, 1/8 x .812

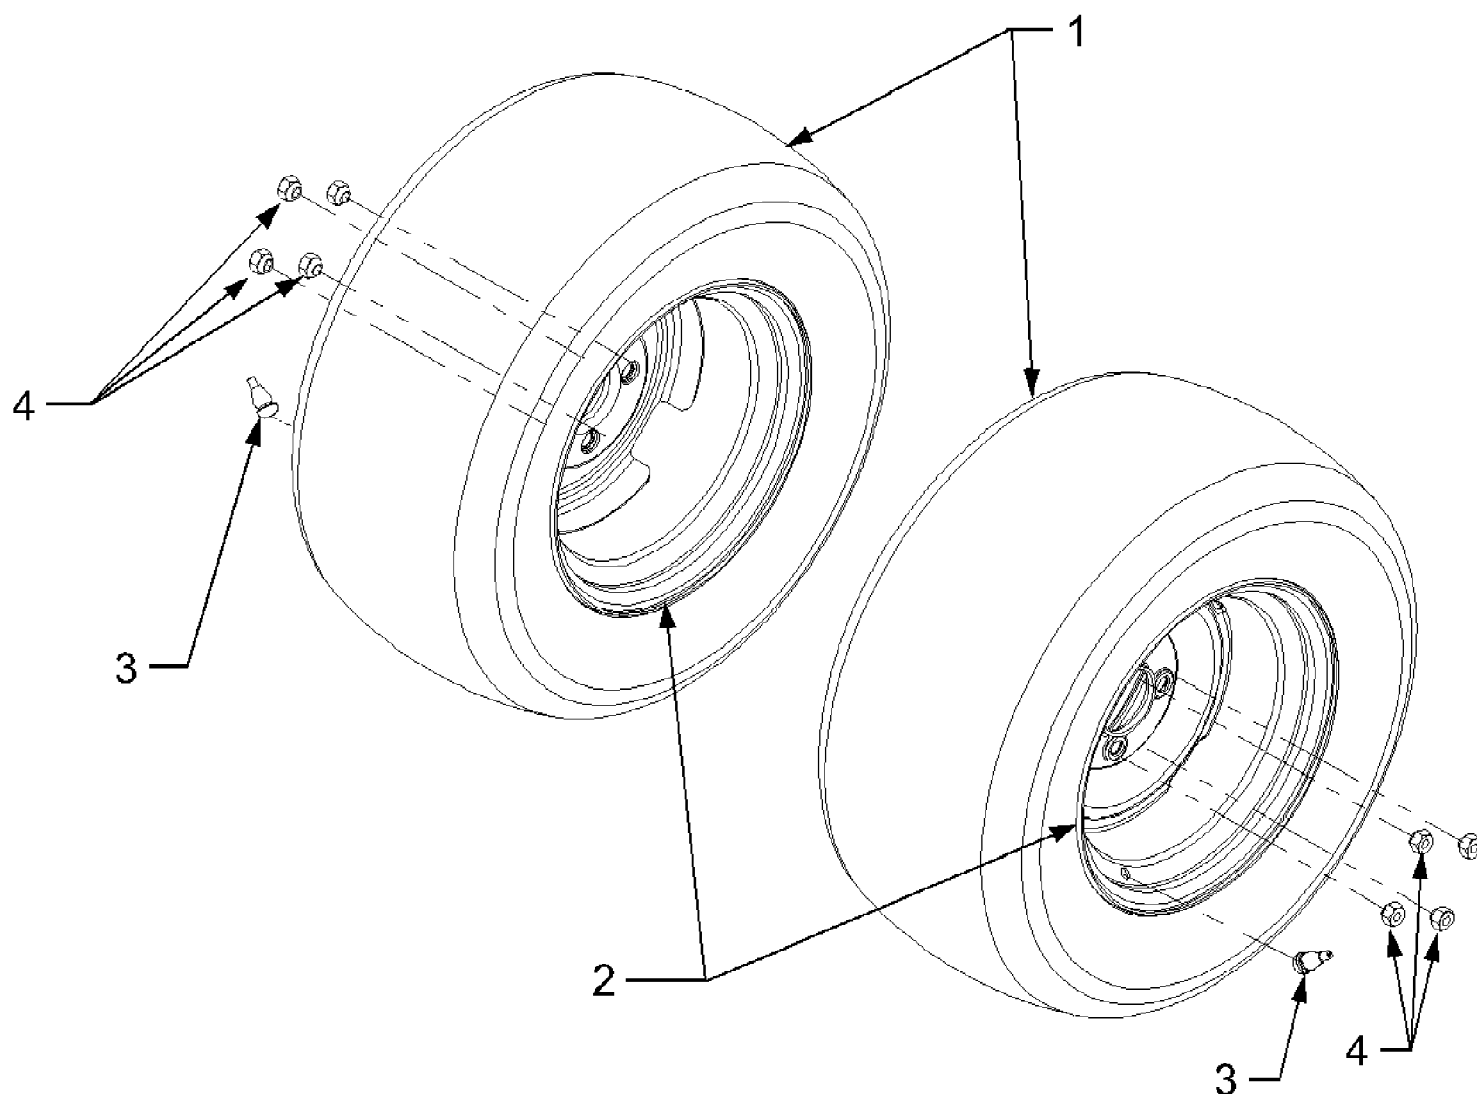

3204 Tractor
Rear Wheels

Page 53 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	734-3190	2	S	Tire, Turf, 23 x 9.5 - 12
2	634-3189-0499	2		Rim Assembly, Wheel
3	734-0255	2	S	Valve, Tubeless Air
4	712-3050	8	/P	Lug Nut, 7/16-14

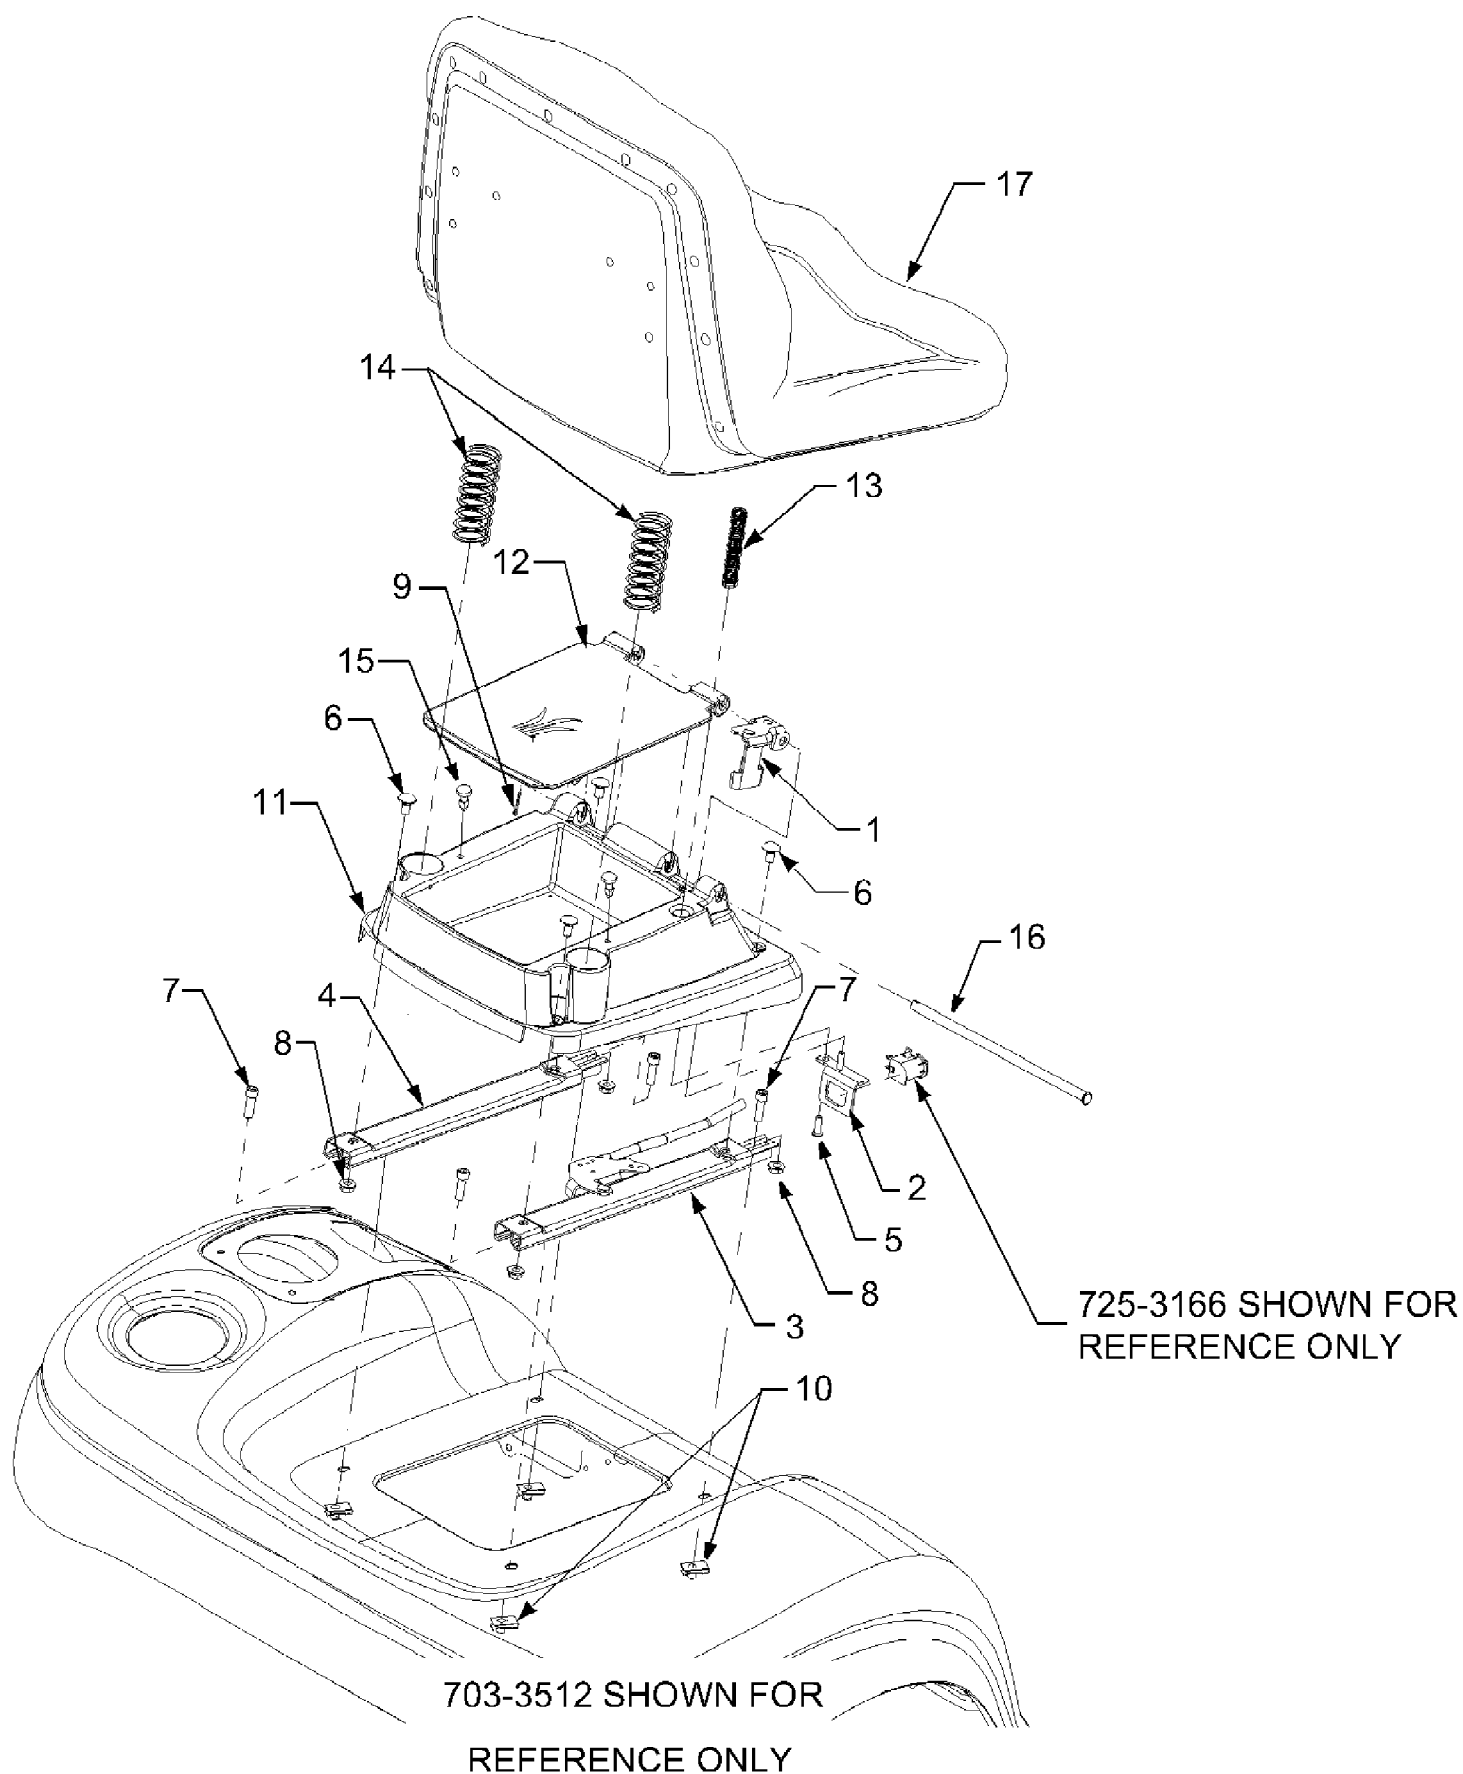


3204 Tractor
Seat Assembly

Page 55 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	703-3166A-0637	1	/P	Bracket, Seat Switch
2	703-3173-0637	1	/P	Bracket, Switch Mounting
3	703-3431	1	/P	Track, Seat, w/Latch
4	703-3208	1		Track, Seat, w/o Latch
5	710-0748	2	/P	Screw, Pan Torx Hd., #12-14 x .5
6	710-1636	4		Carriage Bolt, 5/16-18 x .62
7	710-1669	4		Screw, Pan Torx Hd 5/16-18 x 1.0
8	712-3004A	4	/P	Nut, Hex Flange Lock, 5/16-18
9	714-0507	1	S	Pin, Cotter, 3/32 x .75
10	726-0211	4	S	Speed Nut, U-Type, 5/16-18
11	731-3240A	1	S	Base, Seat
12	731-3244	1		Lid, Tlbox
13	732-1001	1		Spring, Compression
14	732-0869A	2	/P	Spring, Compression
15	735-0271	2	S	Bumper
16	747-3357A	1	/P	Rod, Seat Pivot
17	957-04017	1	/P	Seat, High Back
	777D06883	1	/P	Graphic, Cub Cadet
	777D01782	1	/P	Graphic, USA
18	703-05121-0637	1		Bracket, Seat Spring Support
19	710-0971	2		Screw, Pan Hd., 5/16-18 x 1.0

3204 Tractor
Starting System KH-25-098-08-S

Page 56 of 64

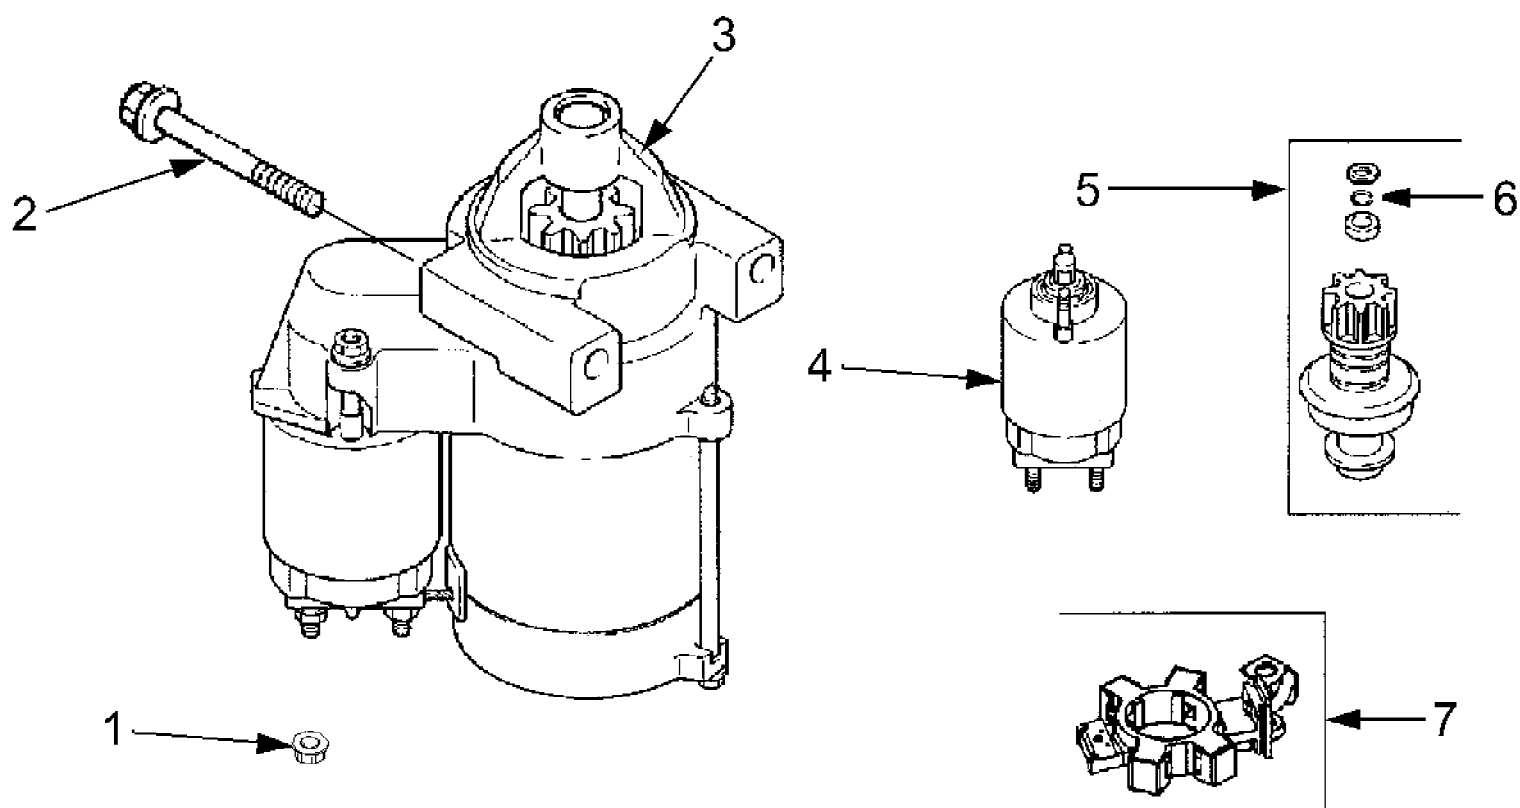

3204 Tractor
Starting System KH-25-098-08-S


Page 57 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	KH-M-0841080	1	S	Nut, Hex Flange M8 x 1.25"
2	KH-M-0839080	2		Screw, Hex Flange M8 x 1.25 x 80
3	KH-25-098-08-S	1	S	Starter, Solenoid Shift Assembly (Includes 4-7)
4	KH-25-435-04-S	1	/P	Kit, Solenoid
5	KH-25-755-33-S	1		Kit, Pinion Drive (Includes 6)
6	KH-25-141-05-S	1		Ring, Retainer
7	KH-25-221-01-S	1		Kit, Brush

3204 Tractor
Starting System KH-25-098-09-S

Page 59 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	KH-M-0841080	1	S	Nut, Hex Flange M8 x 1.25"
2	KH-M-839080	2	S	Screw, Hex Flange M8 x 1.25 x 80
3	KH-25-098-09-S	1	S	Starter, Solenoid Shift Assembly (Includes 4-6)
4	KH-25-435-04-S	1	/P	Kit, Solenoid
5	KH-25-755-33-S	1		Kit, Pinion Drive (Includes 6)
6	KH-25-221-01-S	1		Kit, Brush
7	KH-25-141-05-S	1		Ring, Retainer
8	KH-25-086-113-S	3		Screw, External Torx Hd.

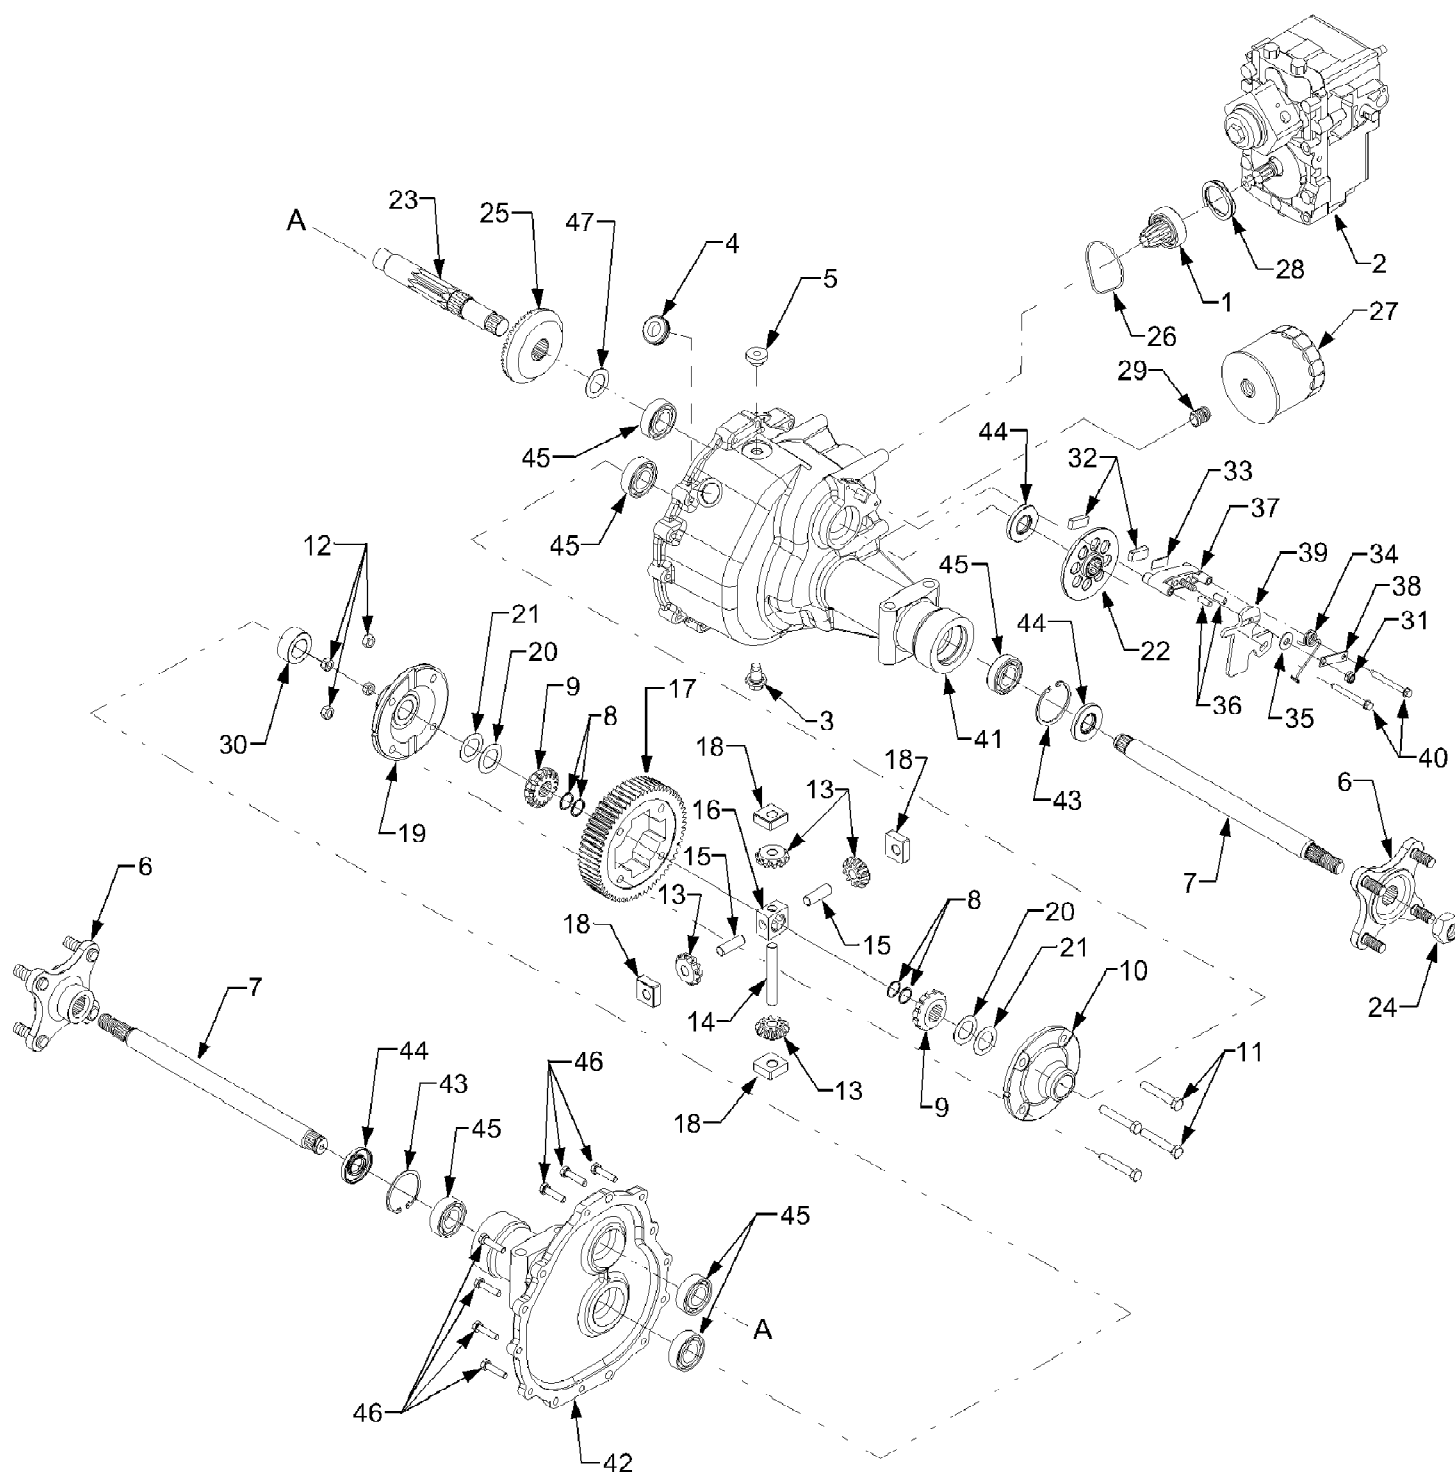

3204 Tractor
Transmission - Differential

Page 61 of 64

Ref #	Part Number	Qty	S/P/F	Description
	618-3236	1	S	Transmission Assembly Complete DOES NOT include Ref. Nos. 1, 2, 6, 24, 26, 27, 28 and 29.
1	617-3001	1		Gear Assembly, Pinion 13T
	741-3037	1	S	Bearing, Ball
2	618-3214	1	S	Hydrostatic Transmission Assy. NOTE: For components see separate parts breakdown.
3	710-1633	1		Plug, Drain, M14 x 1.5 x .827
4	735-0277	1		Grommet, Rubber
5	735-0279	1		Grommet
6	618-0579A	2	/P	Hub Assembly, Wheel
7	711-1386	2		Axle Shaft,
8	716-0172	4	S	Retaining Ring
9	717-1119	2		Gear, Spur, 14T
10	719-3165	1		Housing, Diff. Cover RH
11	710-0331	4	/P	Hex Cap Screw, 3/8-24 x 2.25 GR5
12	712-3054	4	/P	Nut, Hex Lock, 3/8-24
13	717-1120	4		Gear, Differential 10T
14	717-1173	1		Shaft, Cross, .5 x 3.485
15	717-1178	2		Shaft, Cross, Special
16	717-1180	1		Differential Pinion Block
17	717-3466	1		Gear, Spur 60T
18	718-3101	4		Block, Thrust Miter
19	719-3164	1		Housing, Differential Cover LH
20	736-0420	2	S	Washer, Flat, 1.0 x 1.56 x .040
21	736-0424	2	S	Washer, Flat, 1.0 x 1.56 x .020
22	761-0215	1		Disc, Brake
23	711-1385A	1	/P	Shaft, Output 9T
24	712-1329	2	/P	Nut, Lock, 3/4-16
25	717-3449	1		Gear, Bevel 54T
26	721-0519	1		Seal, Gland O-Ring
27	723-3014	1	S	Filter, Oil
28	736-0619	1		Washer, Spring
29	737-3022	1	S	Fitting, Filter Nipple
30	750-3254	1		Spacer, Axle, 1.0 x 1.665 x .71
31	712-0273	1	S	Nut, Hex Insert Lock, 5/16-24
32	717-0678	2	S	Pad, Brake
33	717-0682	1	S	Plate, Puck
34	732-0925	1		Spring, Torsion
35	736-0371	1	/P	Washer, Flat, .343 x .88 x .062
36	741-0343	2	S	Pin, Brake Actuator
37	761-0207A	1	/P	Yoke, Brake
38	761-0208	1		Bracket, Brake Anti-Rotation
39	761-3074	1		Arm, Brake Actuator
40	710-1206	2	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x 2.375
41	619-3071	1		Housing, RH
42	619-3072	1		Housing, LH
43	716-0204	2		Retaining, Ring
44	721-0523	3		Seal, Oil, 1.0 ID
45	741-3114	6		Bearing, Ball
46	710-0573	14		Screw, Hex Cap Locking 5/16-18 x 1.25 GR5
47	736-0615	1		Washer, Flat, 1.0 x 1.56 x .030


3204 Tractor
Transmission - Differential

Page 62 of 64

Ref #	Part Number	Qty	S/P/F	Description
	759-3958	1		Sealant, Loctite Black, 5.3 oz. Tube
	737-3120	5.5	/P	Drive System Fluid Plus - Quart
	737-3121	AR	/P	Drive System Fluid Plus - Gallon

3204 Tractor
Transmission Mounting And Neutral Linkage

Page 63 of 64

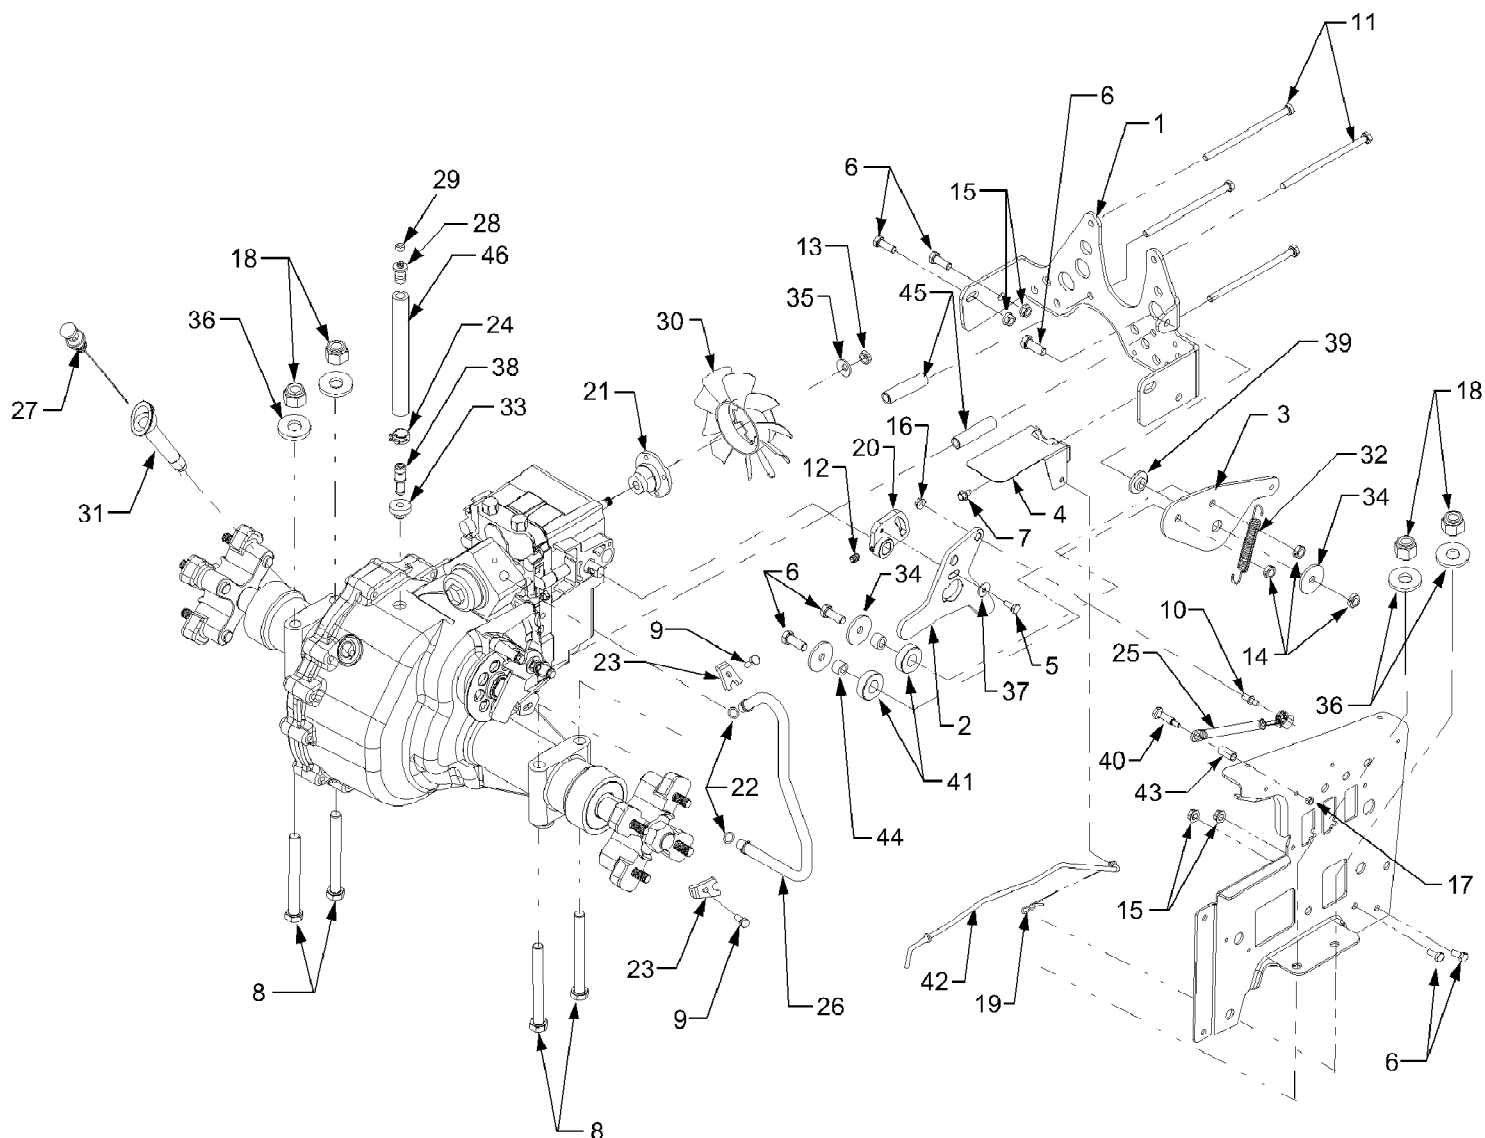

3204 Tractor
Transmission Mounting And Neutral Linkage

Page 64 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	603-0698	1		Bracket, Torque
2	703-3478	1		Plate, Hydro Neutral Return
3	703-3477	1		Link, Neutral Return Bearing
4	703-3187A	1	S	Spring Plate, Hydro Bypass
5	710-0433	1	/P	Screw, Hex Cap, 1/4-20 x .625 GR5 Lock
6	710-0514	7	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
7	710-0599	1	/P	Screw, Hex Wash. Hd. Tapp, 1/4-20 x .5
8	710-0465	4		Screw, Hex Cap, 1/2-20 x 4.5 GR5
9	710-3015	2	/P	Screw, Hex Cap, 1/4-20 x .75 GR5
10	710-3170	1		Ball Screw, 5/16-18 x .56
11	710-1506	4		Screw, Hex Wash. Hd. Tapp, 5/16-18 x 5.5 GR5
12	710-3242	1		Screw, Set, 5/16 x .5
13	712-3059	1	/P	Nut, Hex Top Lock Jam, 1/2-20
14	712-0266	3	S	Nut, Hex Ctr. Lock Jam, 3/8-16
15	712-0431	4	S	Nut, Hex Flange Lock, 3/8-16
16	712-3004A	1	/P	Nut, Hex Flange Lock, 5/16-18
17	712-3006	1	/P	Nut, Hex, 1/4-20
18	712-3058	4	S	Nut, Hex Insert Lock, 1/2-20
19	714-0104	1	S	Pin, Internal Cotter
20	718-3097	1		Arm, Hydro
21	748-3093	1		Adapter, Pump
22	721-0459	2		O-Ring, .426 ID x .566 OD x .070
23	726-0295	2		Clamp, Tube
24	726-0324	1	S	Clamp, Hose
25	727-3090	1	/P	Cylinder, Damper
26	727-3139	1		Tube, Hydro Pickup
27	727-3148	1		Dipstick, Transmission
28	731-1480	1	/P	Plastic Vent
29	731-1481	1		Vent Cap
30	731-3297	1		Fan, Pump
31	731-3245	1		Holder, Dipstick
32	732-0429A	1	S	Spring, Extension
33	735-0279	1		Grommet
34	736-0227	3	S	Washer, Flat, .390 x 1.5 x .1
35	736-0253	1	S	Washer, Bell, .5 x 1.0 x .05
36	736-3019	4		Washer, Flat, .531 x 1.062 x .134
37	736-3090	1	/P	Washer, Flat, .26 x .72 x .06
38	737-3092	1		Fitting, Tube
39	738-0347	1	S	Spacer, Shoulder
40	738-0572	1	S	Shoulder Bolt
41	741-0155	2	S	Bearing, Ball
42	747-3424	1		Rod, Pump Bypass
43	750-0434	1	/P	Spacer, .375 x .5 x 1.02
44	750-0497	2		Spacer, .375 x .624 x .445
45	750-3212	2		Spacer, Hydro, .3223 x .60 x 2.44
46	751-0588-8	8 in.		Fuel Line