


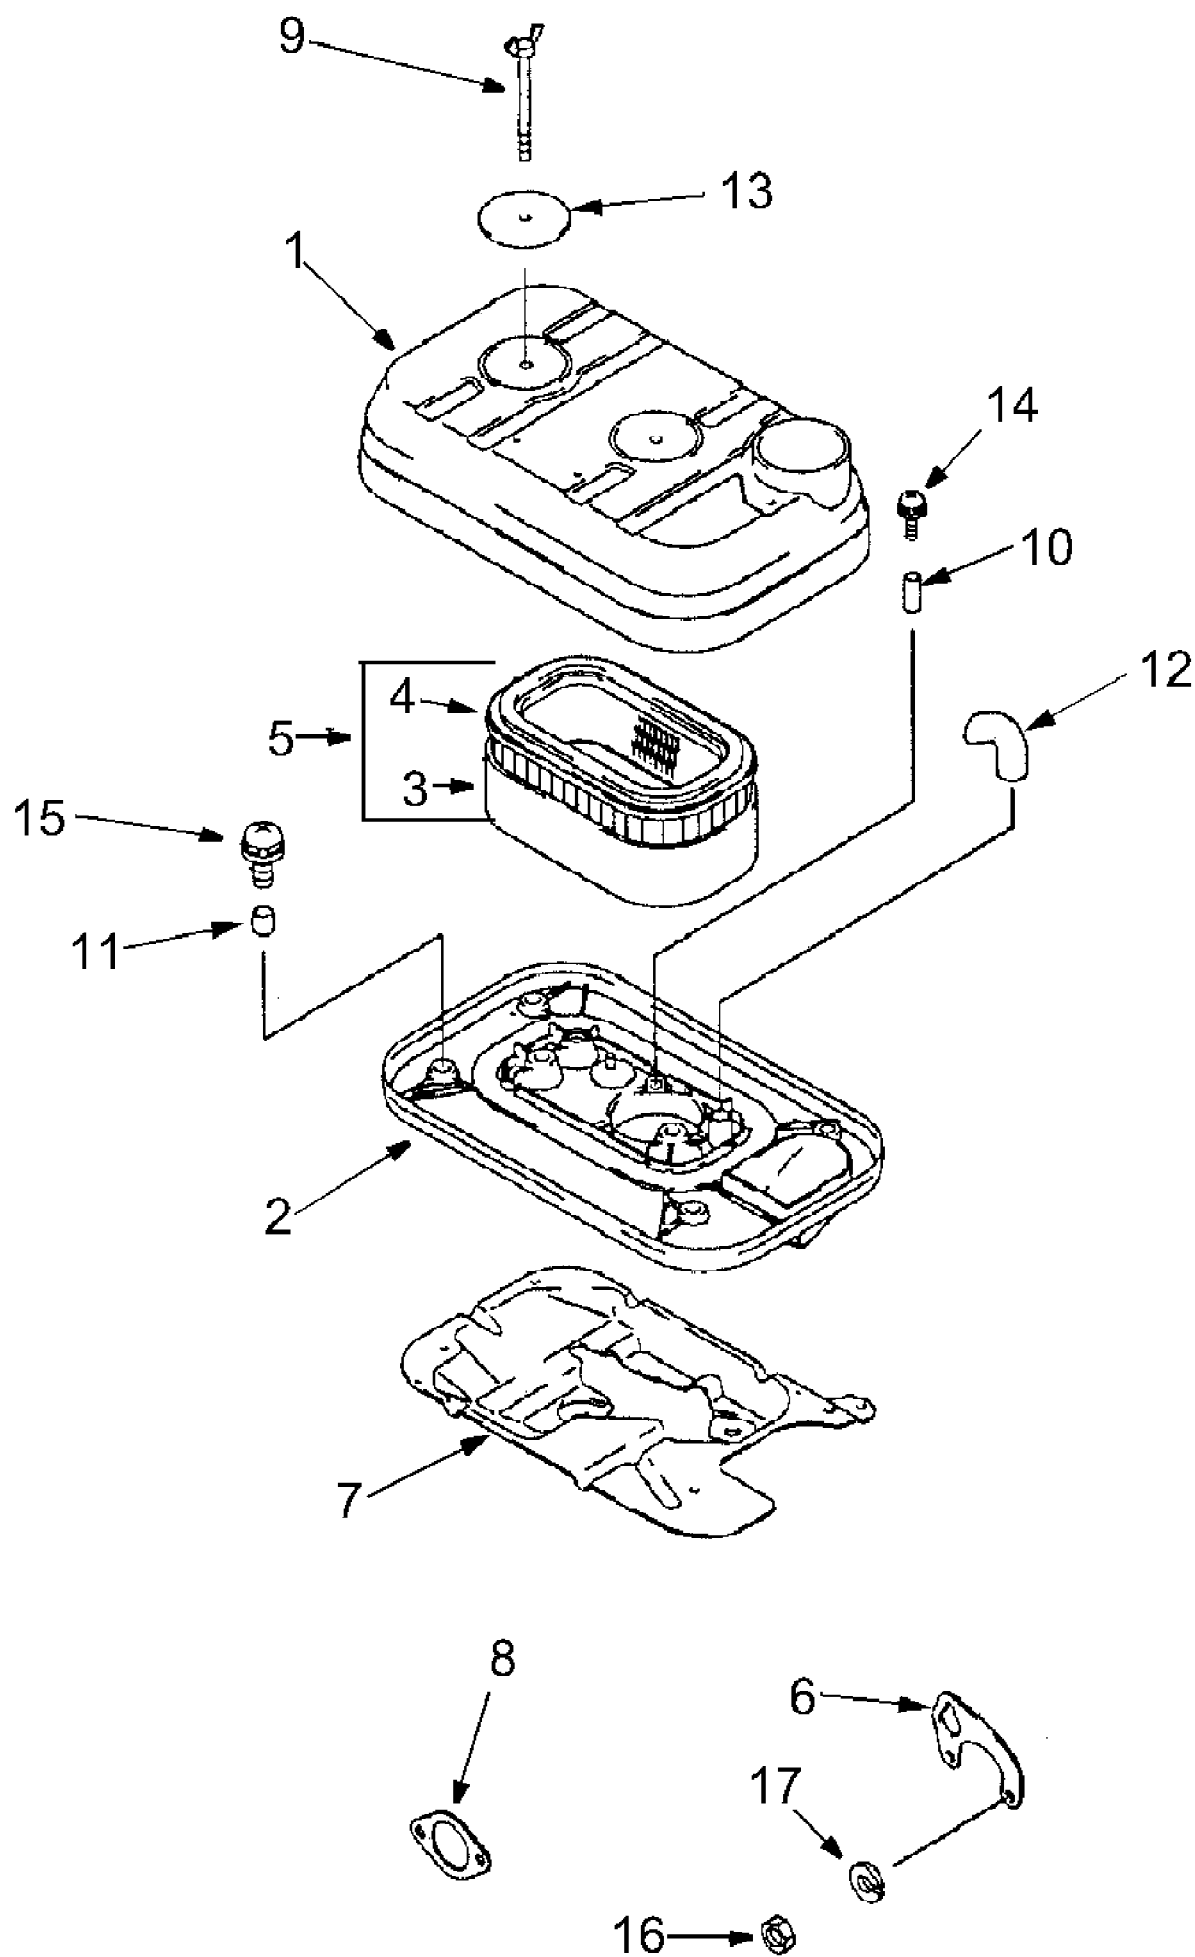


3208 Tractor S/N 1K010G & After
Air-Filter/Muffler

Page 2 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	KM-11011-2239	1	S	Case, Air Filter
2	KM-11011-2259	1	/P	Base, Air Filter
3	KM-11013-2114	1		Element, Foam
4	KM-11013-2139	1	S	Element, Air Filter
5	KM-11029-2005	1	S	Air Filter Ass'y (Incl. Ref. 3 & 4)
6	KM-11047-20579H	1		Bracket
7	KM-11047-21119H	1		Bracket, Air Filter
8	KM-11060-2079	2		Gasket, Muffler
9	KM-92002-2230	2		Bolt
10	KM-92143-2178	3		Collar, 5.1 x 6.3 x 14
11	KM-92143-2189	4		Collar, 6.2 x 7.8 x 7.5
12	KM-92191-2010	1	/P	Tube
13	KM-92200-20599H	2		Washer
14	KM-234B0525	3		Screw, Pan, WSP
15	KM-242B0516	4		Screw, Pan
16	KM-311G0600	4		Nut, Hex
17	KM-461F0600	4		Washer, Spring

3208 Tractor S/N 1K010G & After Brake And Control Pedals

Page 3 of 64

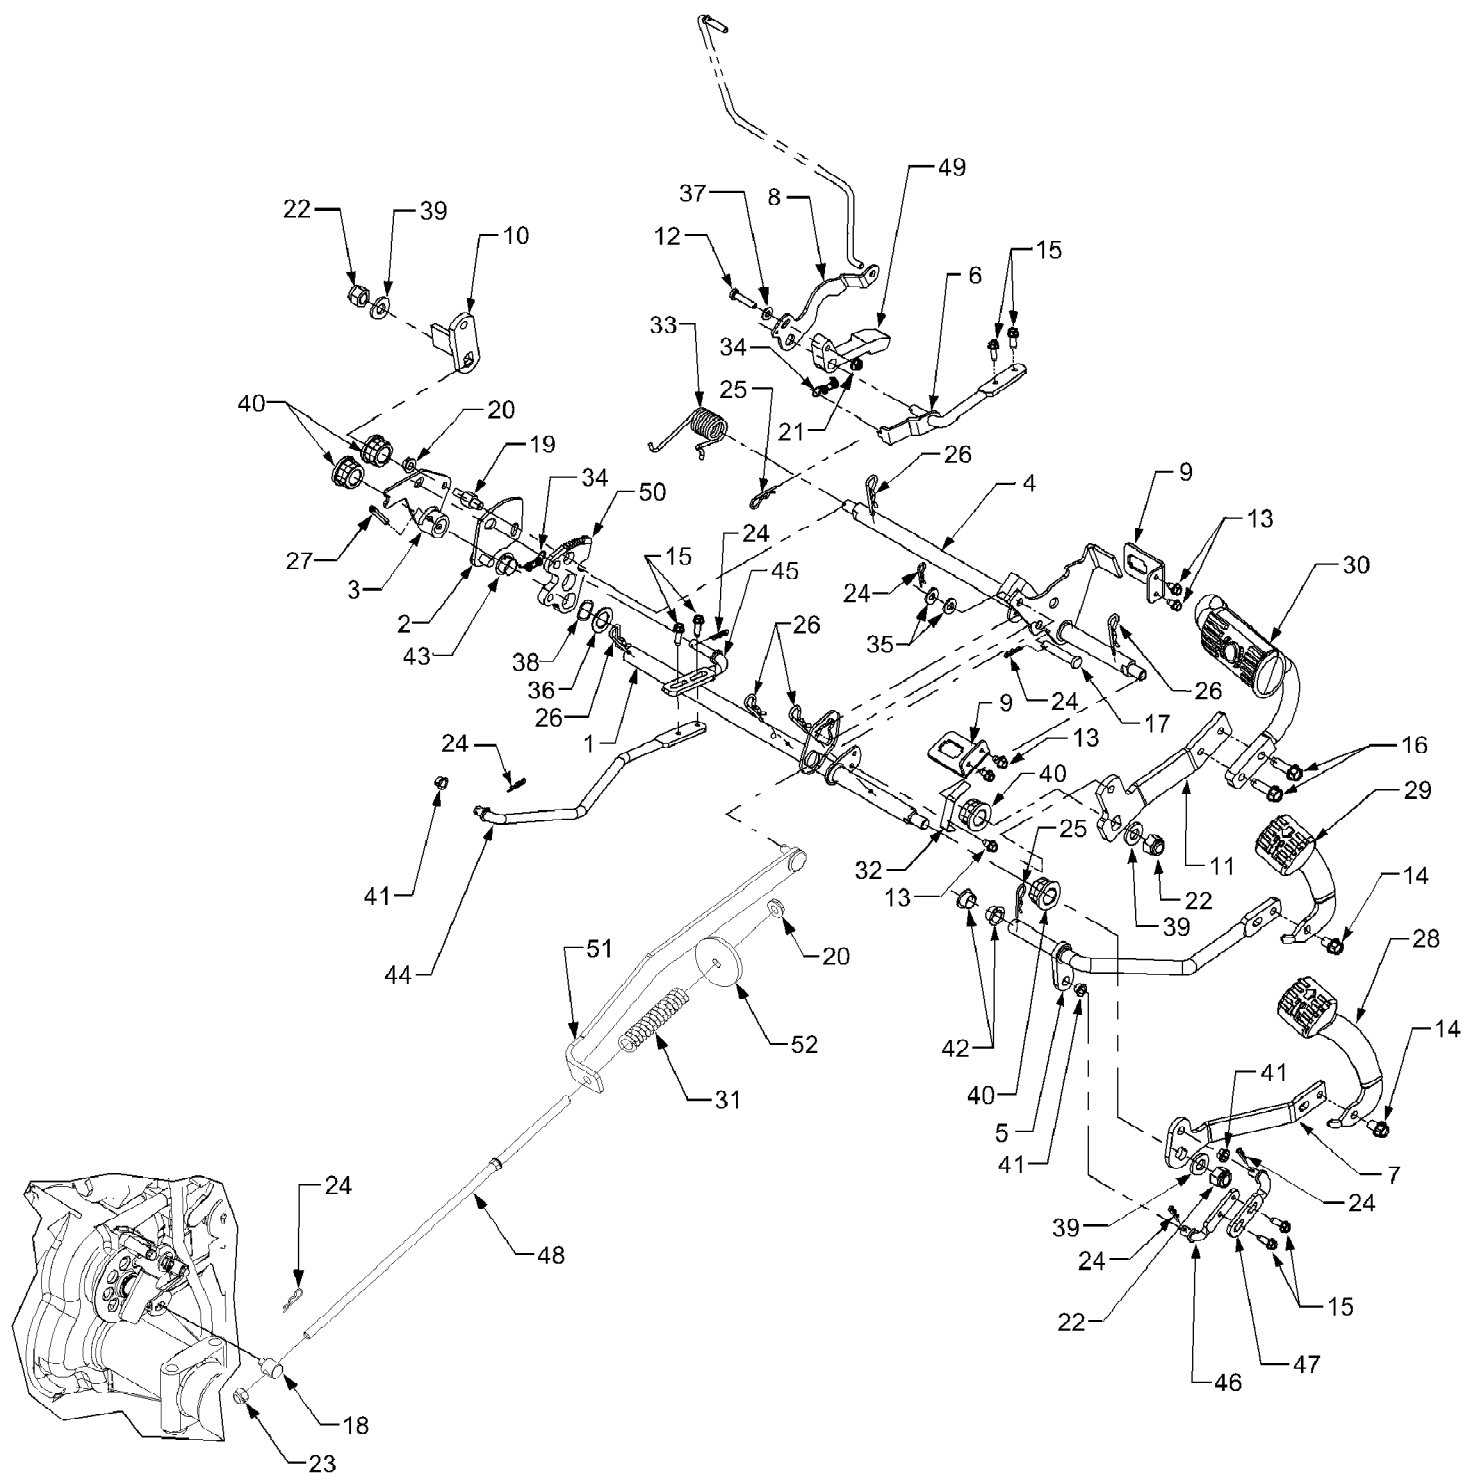




3208 Tractor S/N 1K010G & After
Brake And Control Pedals

Page 4 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	603-0379	1		Shaft Assembly, Pedal
2	603-0421A	1	/P	Plate, Disengagement
3	603-0437-0637	1	/P	Cam, Clutch
4	603-0445A	1		Shaft Assembly, Brake
5	603-0449	1		Shaft Assembly, Reverse
6	603-0634	1		Rod Assembly, Cruise
7	703-3012-0716	1		Link, Pedal Mounting
8	703-3020-0637	1		Bracket, Rod Adjust
9	703-3152-0637	2		Bracket, Switch
10	603-0733-0716	1		Lever, Brake Diff Lock
11	703-3156-0716	1	S	Link, Brake Pedal
12	710-0106	1	/P	Screw, Hex Cap, 1/4-20 x 1.25 GR5
13	710-0599	5	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5
14	710-0623	2	/P	Screw, Hex Wash. Hd. Tapp 3/8-16 x .75
15	710-0642	6	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .75
16	710-1315	2	/P	Screw, Hex Wash. Hd. Tapp 3/8-16 x 1.25
17	711-0679A	1	/P	Pin, Clevis, 3/8 x 2.015
18	711-1530	1		Ferrule, Adjust
19	711-1138	1		Stud, Actuator
20	712-3004A	2	/P	Nut, Hex Flange Lock, 5/16-18
21	712-3027	1	S	Nut, Hex Flange Lock, 1/4-20
22	712-3058	3	S	Nut, Hex Insert Lock, 1/2-20
23	712-0429	1	S	Nut, Hex Insert Lock, 5/16-18
24	714-0104	7	S	Pin, Internal Cotter
25	714-0145	2	S	Pin, Internal Cotter
26	714-0147	5	/P	Pin, Internal Cotter
27	715-0114	1	S	Pin, Spiral Spring, .25 x 1.5
28	731-3247	1		Pedal, Forward
29	731-3248	1		Pedal, Reverse
30	731-3249	1	S	Pedal, Brake
31	732-0324	1		Spring, Compression
32	732-0859	1	S	Spring, No Cut Reverse
33	732-0871	1		Spring, Torsion.
34	732-3118	2		Spring, Extension, .380 OD x 1.44
35	736-0275	2	S	Washer, Flat, .344 x .688 x .065
36	736-0287	1	S	Washer, Flat, .79 x 1.24 x .060
37	736-0463	1	S	Washer, Flat, .25 x .62
38	736-0621	1		Washer, Wave, .785 x 1.0 x .012
39	736-3019	3		Washer, Flat, .531 x 1.06 x .134
40	741-0598	4	S	Bearing, Hex Flange
41	741-3073	3	S	Bearing, Flange
42	741-3074	2		Bearing, Flange
43	741-3084	1		Bearing, Flange
44	747-3319	1		Rod, Rear Control
45	747-3320	1		Rod, Front Control
46	747-3324	1		Rod, Rear Connecting
47	747-3353	1		Rod, Front Connecting
48	747-3422	1		Rod, Brake
49	748-3060	1		Cruise Latch
50	748-3080	1	S	Plate, Cruise
51	603-0738	1	S	Link Assembly, Brake
52	736-0418A	1	/P	Washer, Flat, .341 x 2.25 x .10

3208 Tractor S/N 1K010G & After
Carburetor, Fuel Filter & Pump


Page 5 of 64

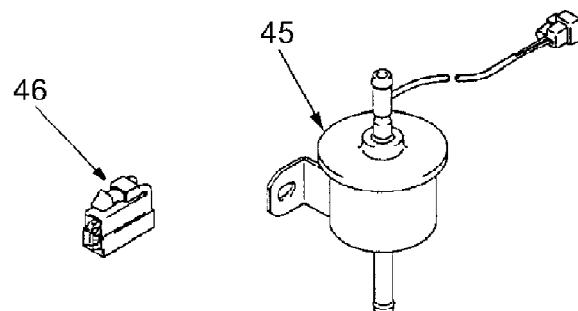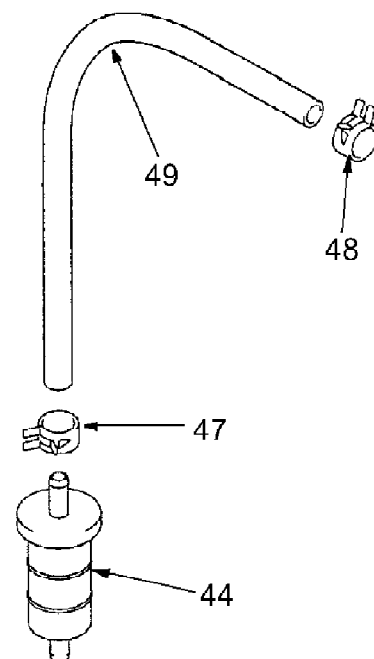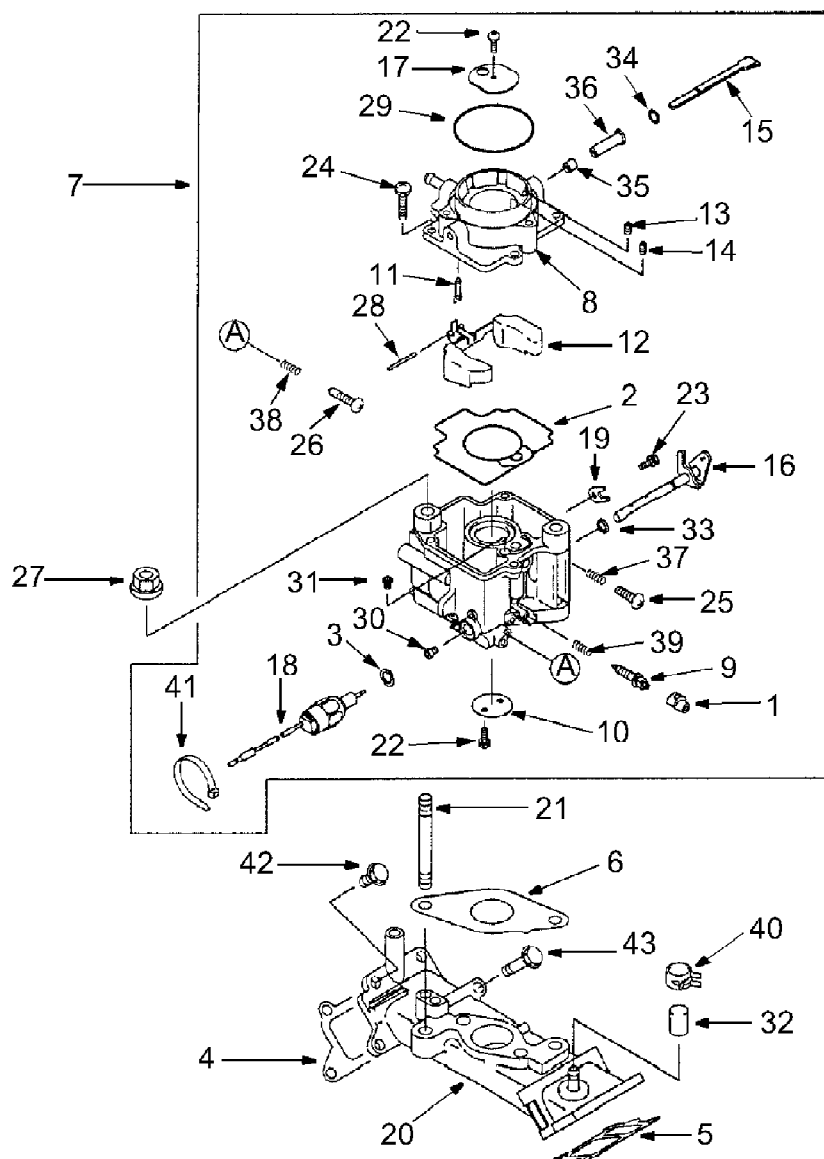

3208 Tractor S/N 1K010G & After
Carburetor, Fuel Filter & Pump

Page 6 of 64


Ref #	Part Number	Qty	S/P/F	Description
1	KM-11012-2381	1		Cap
2	KM-11060-2072	1		Gasket
3	KM-11060-2073	1		Gasket
4	KM-11060-2087	1		Gasket, Intake Manifold
5	KM-11060-2088	1		Gasket, Intake Manifold
6	KM-11060-2090	1	S	Gasket, Carburetor
7	KM-15003-2481	1	S	Carburetor Ass'y
8	KM-16004-2051	1		Cap, Chamber
9	KM-16014-2077	1		Screw, Pilot Air
10	KM-16025-2163	1		Valve, Throttle
11	KM-16030-2089	1		Valve, Float
12	KM-16031-2071	1		Float
13	KM-16035-2073	1		Jet, Air, #1.8
14	KM-16035-2074	1		Jet, Air #0.9
15	KM-16041-2218	1		Shaft, Choke
16	KM-16041-2219	1		Shaft, Throttle
17	KM-16126-2185	1		Valve, Choke
18	KM-21188-2006	1	S	Solenoid, Fuel
19	KM-32085-2089	1		Stopper
20	KM-59076-6001	1		Manifold, Intake
21	KM-92009-2143	2		Stud
22	KM-92009-2330	3		Screw, 3 x 5.5
23	KM-92009-2331	1		Screw
24	KM-92009-2332	4		Screw
25	KM-92009-2333	1		Screw
26	KM-92009-2334	1		Screw
27	KM-92015-1143	2		Nut 8 MM
28	KM-92043-2196	1		Pin
29	KM-92055-2175	1		O-Ring, 49.4MM
30	KM-92063-2241	1		Jet, Main #112
31	KM-92064-2093	1		Jet, Pilot, #58
32	KM-92066-2096	1		Plug
33	KM-92093-2092	1		Seal, Throttle Shaft
34	KM-92093-2093	1		Seal, Choke Shaft
35	KM-92143-2191	1		Collar
36	KM-92143-2192	1		Collar
37	KM-92144-2306	1		Spring
38	KM-92144-2307	1		Spring
39	KM-92144-2397	1		Spring
40	KM-92170-2043	1		Clamp
41	KM-92170-2098	1		Clamp
42	KM-130B0620	5	S	Bolt, Flanged 6 x 20
43	KM-130B0645	3		Bolt, Flanged 6 x 45
44	KM-49019-1055	1	/P	Filter, Fuel
45	KM-49040-2065	1		Pump, Fuel
46	KM-59221-2156	1		Connector, Cord
47	KM-92037-2065	1	/P	Clamp
48	KM-92170-2082	1		Clamp
49	KM-705A061000	1		Tube, Braid

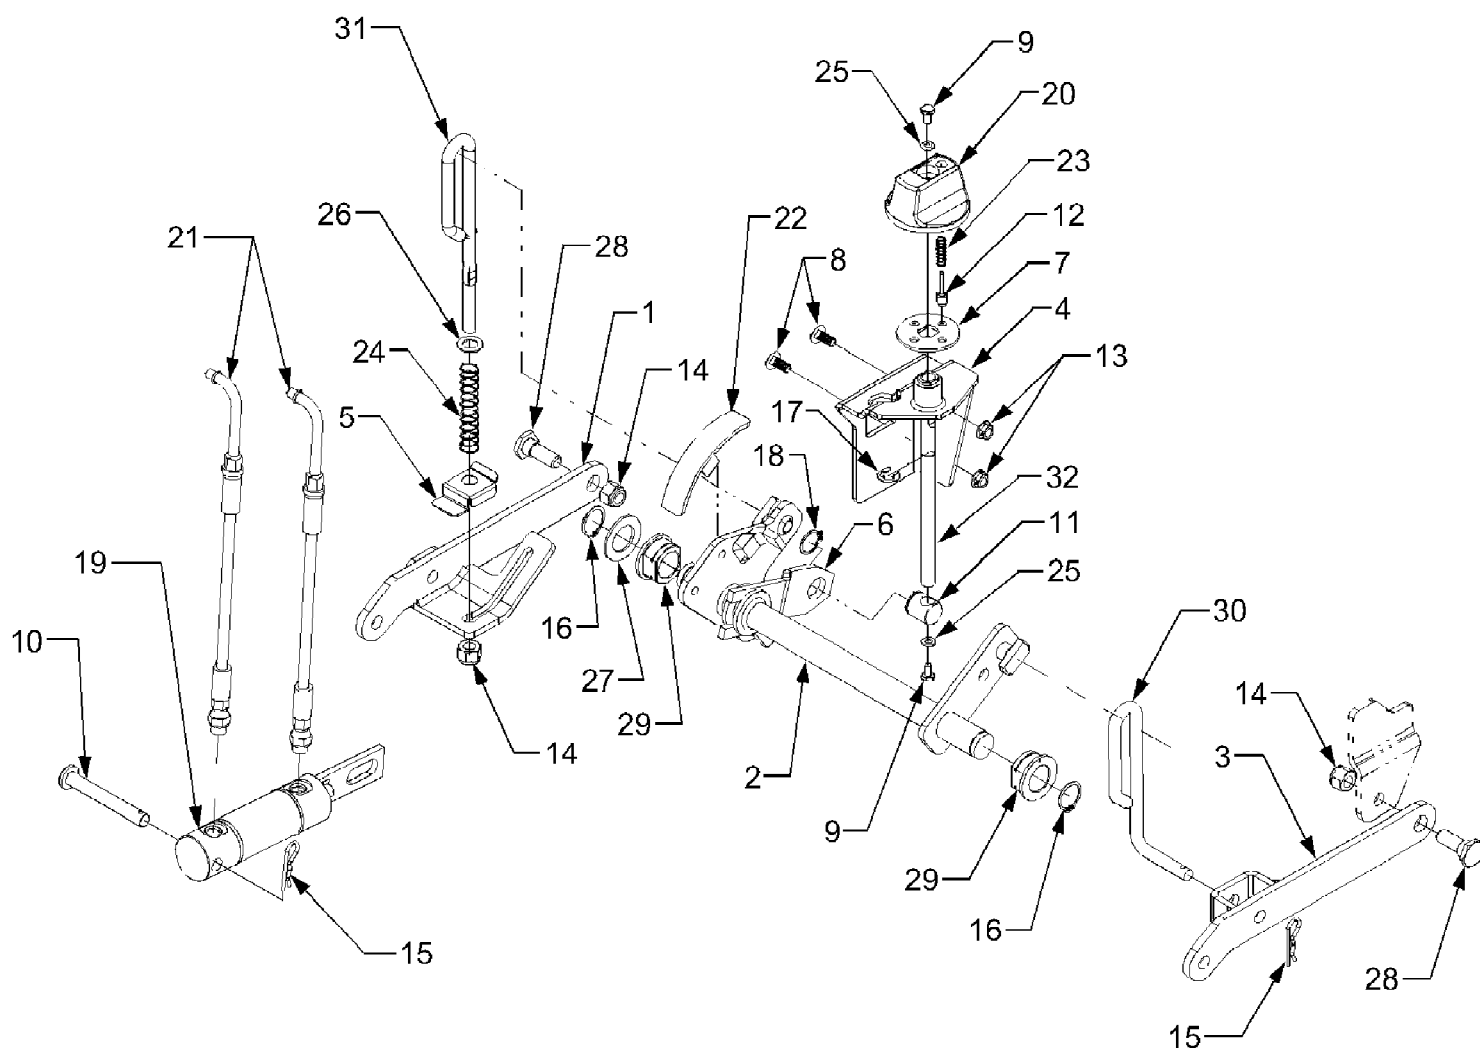

3208 Tractor S/N 1K010G & After
Center Hydraulic Lift Linkage

Page 8 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	603-0434-0716	1	/P	Link, LH Lift
2	603-0435A	1	/P	Shaft Assembly, Lift
3	603-0456-0716	1		Link, RH Lift
4	603-0803	1		Bracket, Downstop
5	703-3426	1		Stop Bracket, Lift Rod
6	703-3797	1		Arm, Downstop
7	748-3103	1		Disk, Detent
8	710-3178	2	/P	Bolt, Carriage, 3/8-16 x .75
9	710-3013	2	/P	Screw, Hex Cap, 1/4-20 x .5 GR5
10	711-1206	1		Pin, Clevis, .5 x 3.75
11	711-1553	1		Ferrule, Adjustment
12	711-1561	1		Pin, Detent Plunger
13	712-0431	2	S	Nut, Flange Lock, 3/8-16 GR5
14	712-3083	3	/P	Nut, Hex Lock, 1/2-13
15	714-0147	2	/P	Pin, Internal Cotter
16	716-0102	2	S	Snap Ring, 1.0 Dia. Shaft
17	716-0104	1	S	Ring, 'E' Retaining, .5 Dia
18	716-0111	1	/P	Snap Ring, .875 Dia. Shaft
19	717-3518	1		Cylinder, Center Lift
20	720-0236	1	S	Knob
	777I20466	1		Graphic, Height Adjust
21	727-3135	2		Hose, Lift
	725-0157	1	/P	Tie, Cable
22	731-3215A	1	S	Indicator, Lift Position
23	732-0437	1		Spring, Compression
24	732-0870A	1	/P	Spring, Compression
25	736-0142	2	S	Washer, Flat, .281 x .5 x .063
26	736-0160	1	S	Washer, Flat, .536 x .93 x .050
27	736-0250	1	/P	Washer. Flat, 1.0 x 1.7 x .10
28	738-0744A	2	S	Shoulder Screw
29	741-0170	2	S	Bearing, Flange w/Flats
30	747-3330	1		Rod, RH Lift
31	747-3331A	1		Rod, LH Lift
32	747-3437	1		Screw, Adjustment

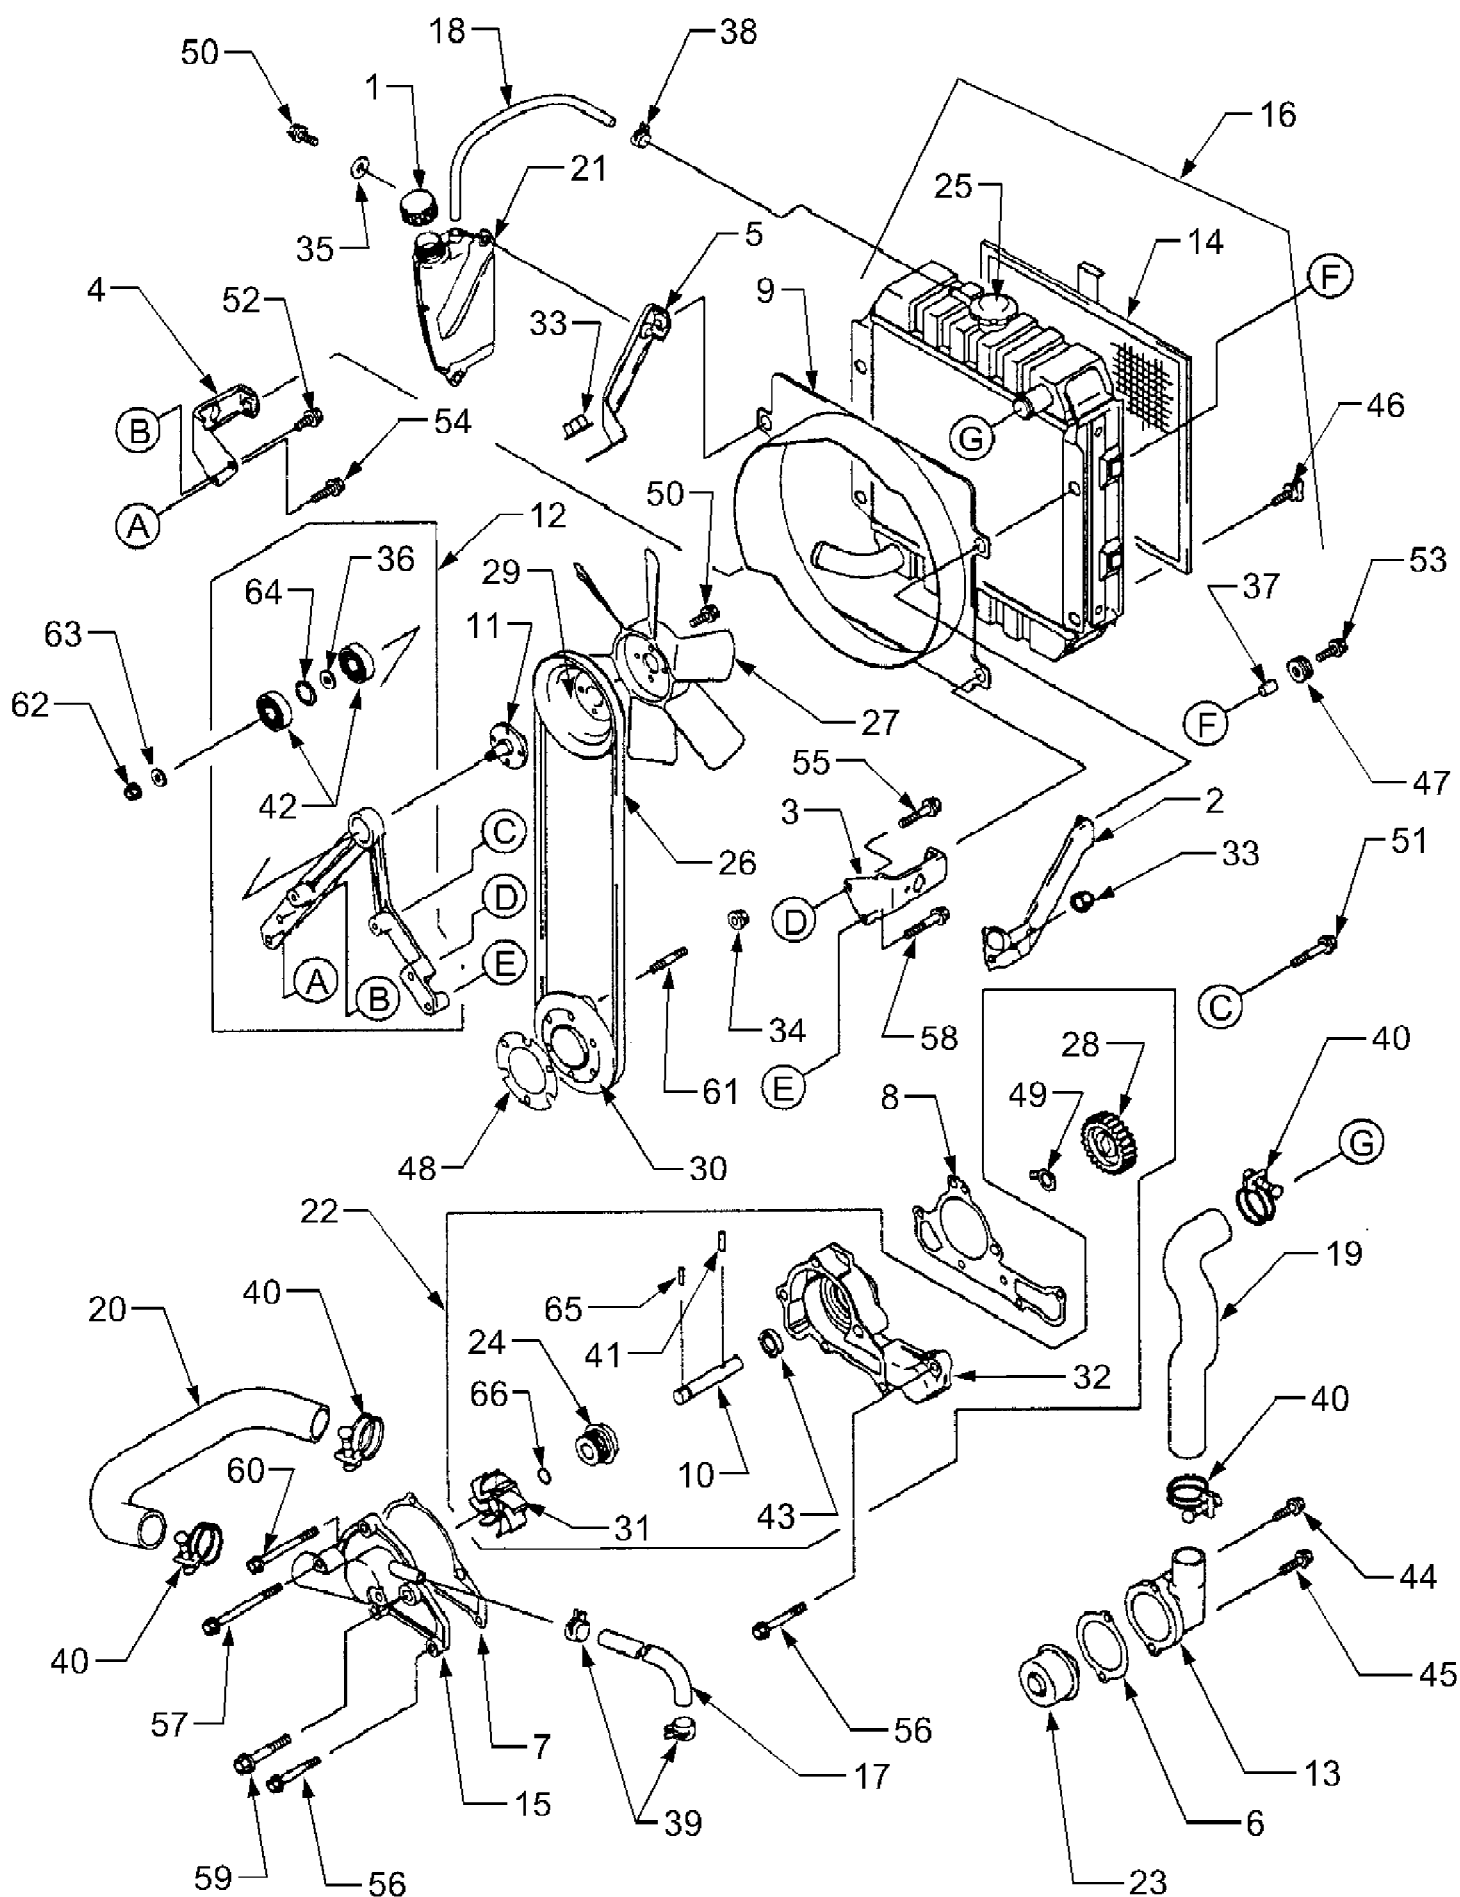

3208 Tractor S/N 1K010G & After
Cooling


Page 10 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	KM-11012-1084	1		Cap, Reservoir
2	KM-11048-20379H	1		Bracket
3	KM-11049-20259H	1		Bracket
4	KM-11049-20269H	1		Bracket
5	KM-11049-20279H	1		Bracket
6	KM-11060-2084	1		Gasket, Thermostat Cover
7	KM-11060-2288	1	S	Gasket, Pump Cover
8	KM-11060-2289	1	S	Gasket, Pump Case
9	KM-13070-2093	1		Guide
10	KM-13107-2097	1		Shaft, Impeller
11	KM-13107-2246	1		Shaft, Pulley
12	KM-13304-6007	1	/P	Housing Assembly
13	KM-14024-2293	1		Cover, Thermostat
14	KM-14037-2128	1		Screen
15	KM-16142-2069	1	/P	Cover, Pump
16	KM-39061-2056	1		Radiator Assembly
17	KM-39062-2051	1		Hose, Cooling, 7.5 x 13.5 x 30.5
18	KM-39062-2054	1		Hose, Cooling, 7.5 x 10.5 x 46
19	KM-39062-2062	1		Hose, Cooling
20	KM-39062-2063	1		Hose, Cooling
21	KM-43078-2055	1		Reservoir
22	KM-49044-2058	1	S	Pump, Water
23	KM-49054-2056	1	/P	Thermostat
24	KM-49063-2056	1	S	Seal, Mechanical
25	KM-49085-2052	1		Cap Assembly, Pressure
26	KM-59011-2056	1		Belt, Fan
27	KM-59041-2063	1		Fan, Cooling
28	KM-59051-2113	1		Gear, Spur
29	KM-59091-20529H	1		Pulley
30	KM-59091-2053	1	/P	Pulley
31	KM-59256-2057	1	/P	Impeller
32	KM-59336-2052	1		Case, Pump
33	KM-92015-1014	2		Nut
34	KM-92015-1143	3		Nut
35	KM-92022-2247	2		Washer
36	KM-92026-2311	1		Spacer, 12 x 18 x 1.4
37	KM-92027-217	4		Collar
38	KM-92037-2001	1		Clamp
39	KM-92037-2065	2	/P	Clamp
40	KM-92037-2210	4		Clamp
41	KM-92042-014	1		Pin
42	KM-92045-2191	2		Bearing, Ball
43	KM-92049-2111	1		Seal, Oil
44	KM-92150-2230	1		Bolt, .6 x 40
45	KM-92150-2231	1		Bolt, .6 x 20
46	KM-92150-2255	1		Bolt
47	KM-92160-2034	4		Damper
48	KM-92180-2013	AR		Shim, 0.6 Thk
	KM-92180-2014	AR		Shim, 1.2 Thk
49	KM-92200-2044	1		Washer
50	KM-130B0616	6	S	Bolt, Flanged, 6 x 16
51	KM-130B0635	2	S	Bolt, Flanged, 6 x 35
52	KM-130B0820	1		Bolt, Flanged, 8 x 20

3208 Tractor S/N 1K010G & After
Cooling

Page 11 of 64


Ref #	Part Number	Qty	S/P/F	Description
53	KM-130B0825	4		Bolt, Flanged, 8 x 25
54	KM-130B0830	1		Bolt, Flanged, 8 x 30
55	KM-130B0840	1		Bolt, Flanged, 8x 40
56	KM-130G0645	3	S	Bolt, Flanged, 6 x 45
57	KM-130G0675	1	S	Bolt, Flanged, 6 x 75
58	KM-130G0845	1		Bolt, Flanged, 8 x 45
59	KM-130G0870	1		Bolt, Flanged, 8 x 70
60	KM-130H0665	1		Bolt, Flanged, 6 x 65
61	KM-171G0818	3		Bolt, Stud
62	KM-315B1000	1		Nut, Hex Fine
63	KM-410B1000	1		Washer, Plain
64	KM-481J2800	1		Circlip
65	KM-551A0314	1		Pin, Dowel
66	KM-670B1507	1		O-Ring

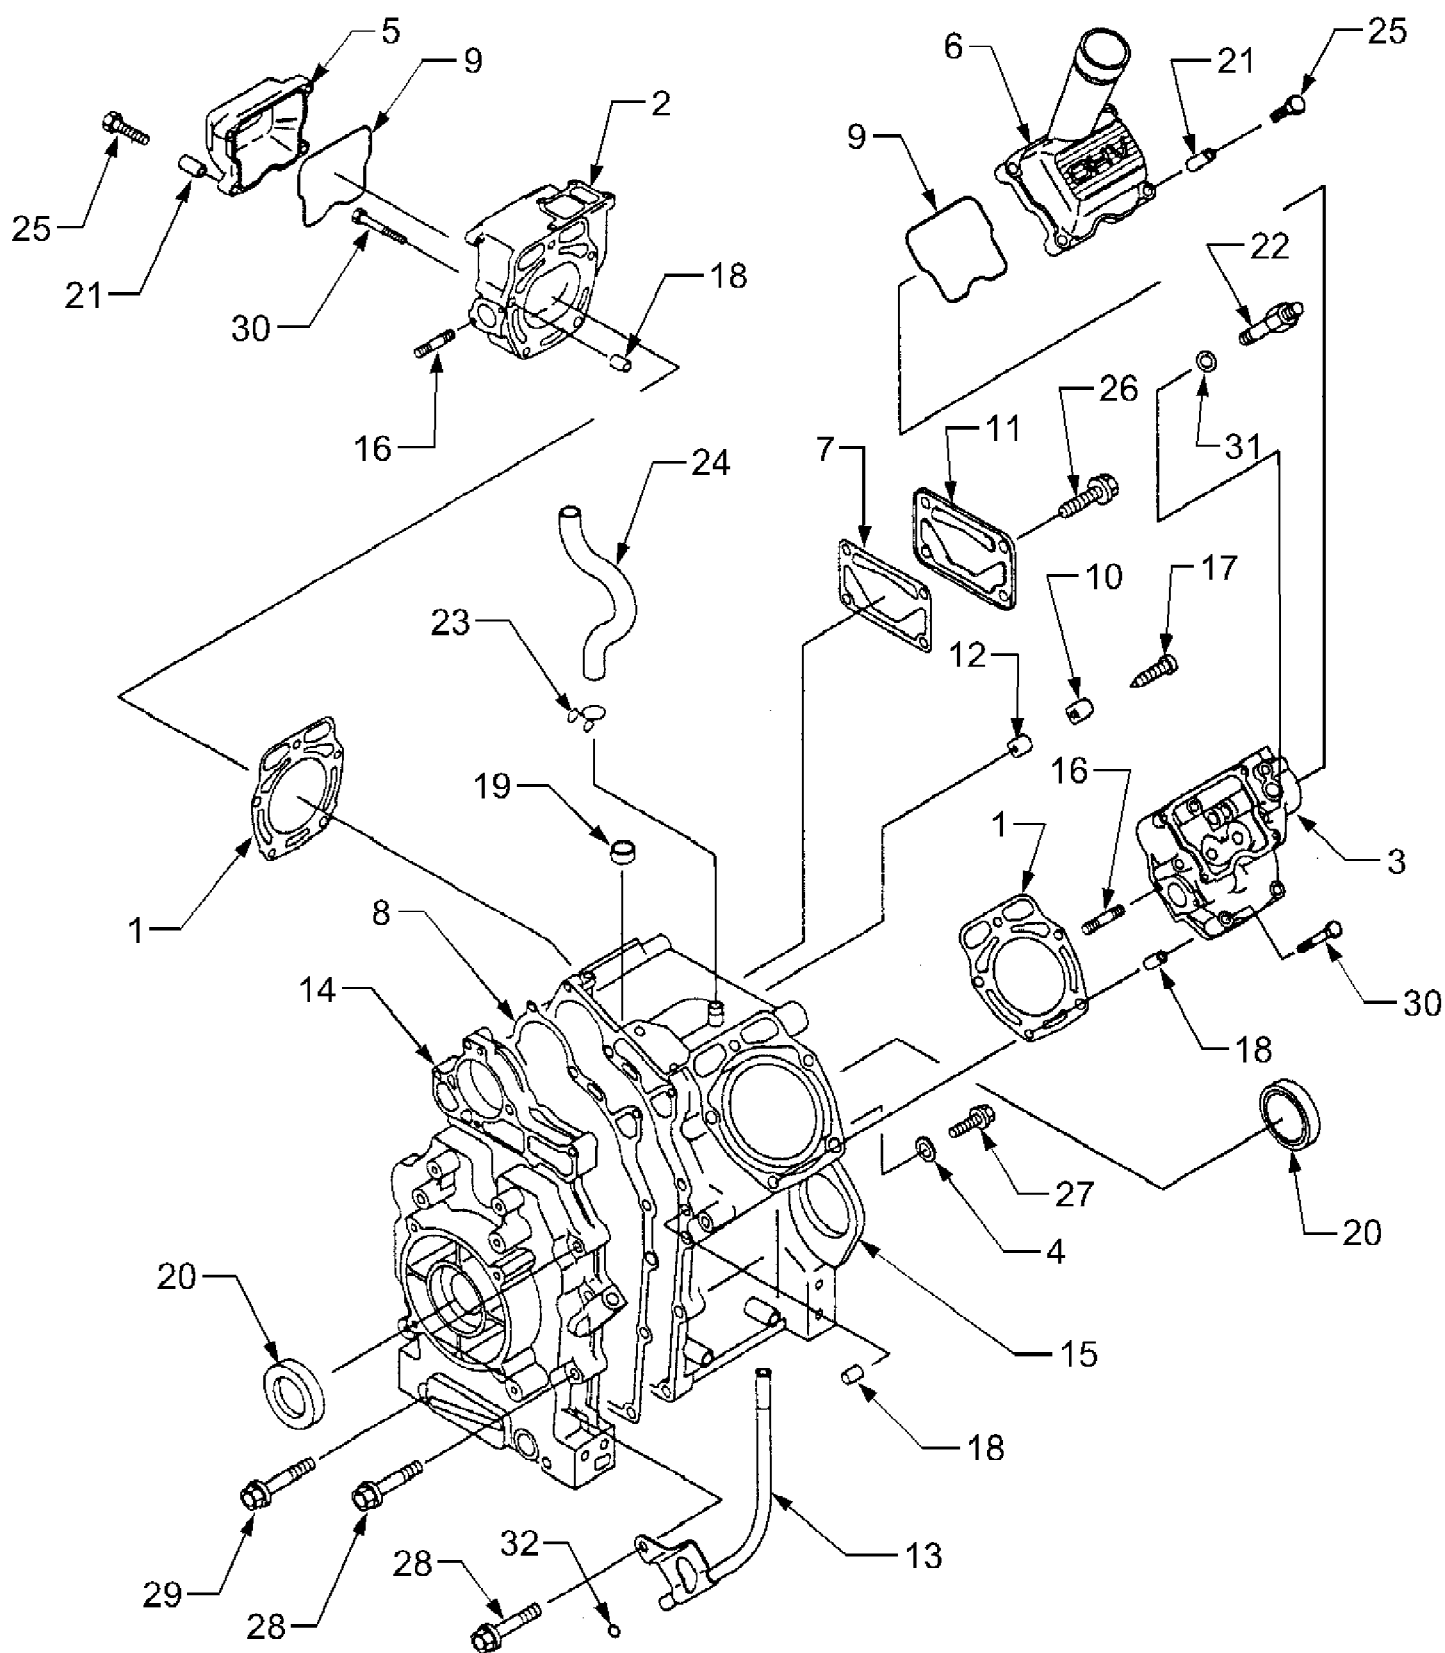

3208 Tractor S/N 1K010G & After
Cylinder And Crankcase

Page 13 of 64

Ref #	Part Number	Qty	S/P/F	Description
	KM-FD620D-AS21	1	S	Engine, Complete
1	KM-11004-2107	2		Gasket, Head
2	KM-11008-2087	1	S	Head, Complete Cylinder
3	KM-11008-6015	1	S	Head, Complete Cylinder
4	KM-11009-3028	2		Gasket
5	KM-11022-2056	1		Cover, Valve
6	KM-11022-2063	1		Cover, Valve w/Oil Fill
7	KM-11060-2089	1		Gasket, Cover
8	KM-11060-2284	1	S	Gasket, Crankcase Cover
9	KM-11060-2332	2	S	Gasket, Valve Cover
10	KM-13183-2120	1		Plate
11	KM-14024-2292	1		Cover
12	KM-16126-2146	1		Valve
13	KM-32151-20319H	1		Pipe, Oil Gauge
14	KM-49015-6130	1		Cover, Crankcase
15	KM-49120-6115	1		Crankcase Complete
16	KM-92004-2142	4		Stud
17	KM-92009-2308	1		Screw
18	KM-92043-1037	6		Pin, Dowel, M10 x 8.2 x 14
19	KM-92049-2097	1		Seal, Oil
20	KM-92049-2110	2	S	Seal, Oil
21	KM-92143-2010	8		Collar
22	KM-92151-2070	2		Bolt
23	KM-92170-2002	1		Clamp
24	KM-92190-2147	1	/P	Tube
25	KM-130B0625	8		Bolt, Flanged, M6 x 25
26	KM-130B0816	4	S	Bolt, Flanged, M8 x 16
27	KM-130C0812	2		Bolt, Flanged, M8 x 12
28	KM-130G0845	6		Bolt, Flanged, M8 x 45
29	KM-130G0860	2		Bolt, Flanged, M8 x 60
30	KM-130G0865	8		Bolt, Flanged, M8 x 65
31	KM-410B0800	2		Washer, Plain, 8MM
32	KM-670B2010	1		O-Ring, 10MM

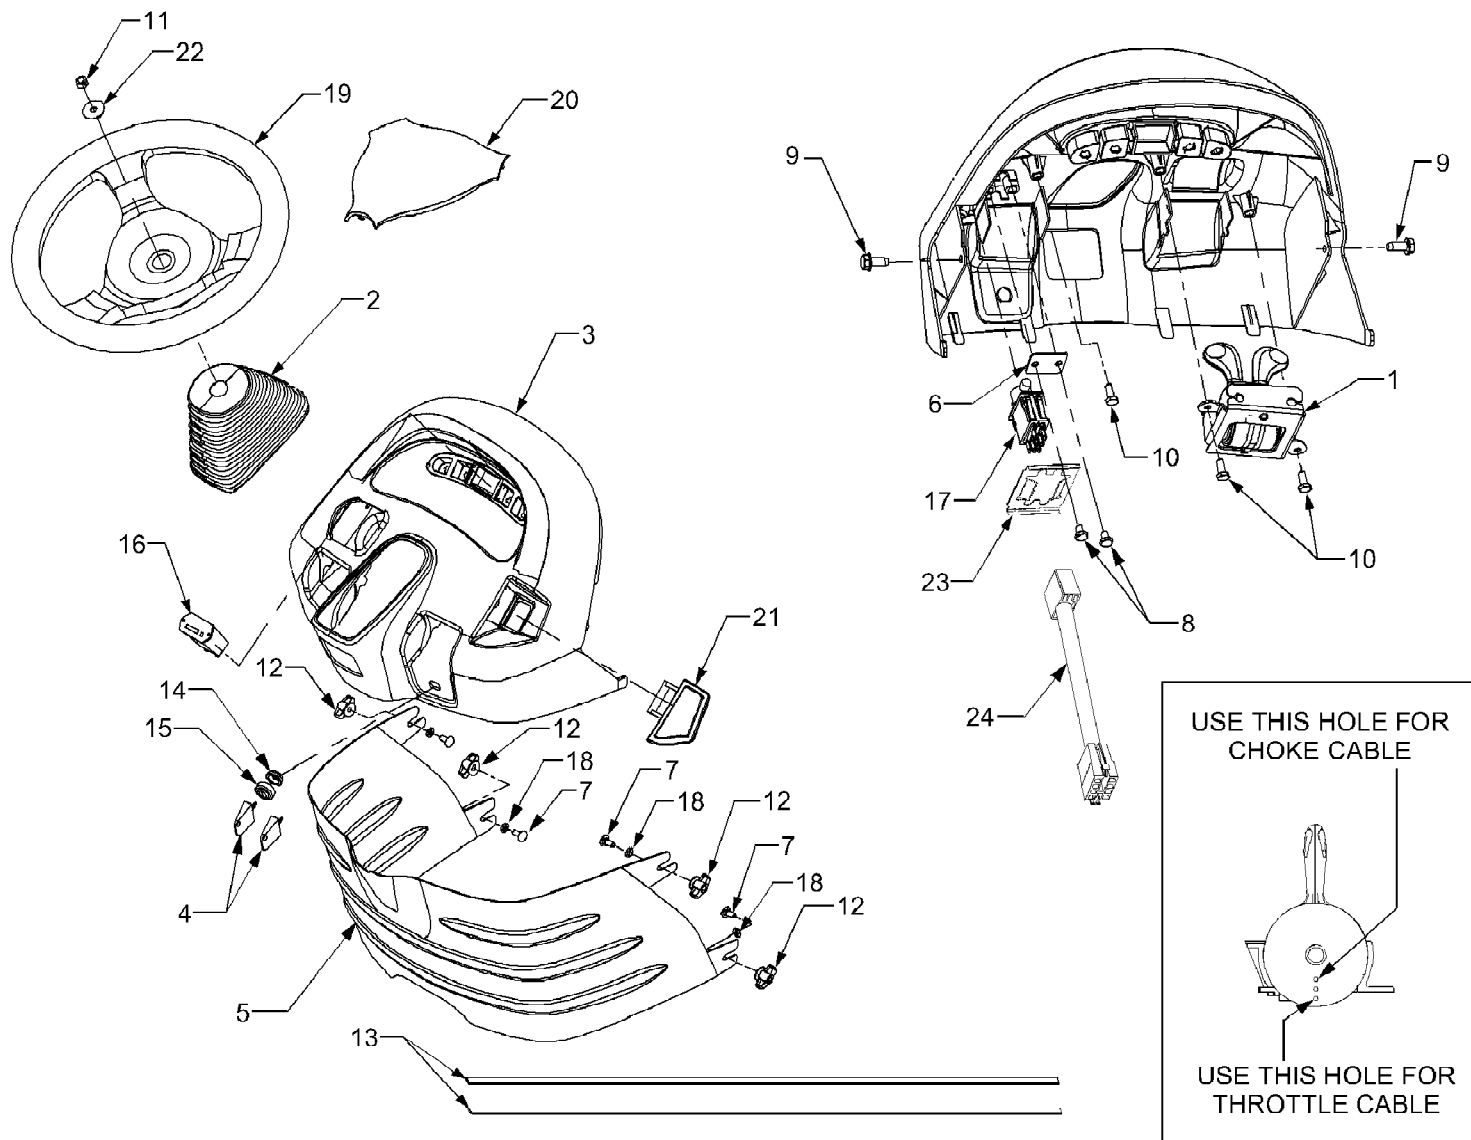


3208 Tractor S/N 1K010G & After
Dash Panel

Page 15 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	603-0586	1		Control Assembly, Throttle/Choke
2	631-0076	1		Boot, Tilt Steer
3	631-3014	1	S	Dash Panel
	777I20183	1		Graphic, Monitor Light Cover
4	759-3476A	1	S	Key, Ignition (Set of 2)
5	703-3072	1	/P	Screen, Dash
6	703-3162	1		Plate, PTO Handle
7	710-0134	4	/P	Carriage Bolt, 1/4-20 x .62
8	710-0294	2		Screw, Hex Cap 1/4-20 x .375 GR5
9	710-1260A	2	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
10	710-3013	3	/P	Screw, Hex Cap 1/4-20 x .50 GR5
11	712-0237	1	S	Nut, Hex Lock, 5/16-24
12	712-0397	4	S	Wing Nut, 1/4-20 w/Bell Washer
13	723-0511-37	2		Seal, Screen Cut to fit screen
14	725-1346	1	S	Nut, Ignition Switch, 5/8-32
15	725-1347	1	/P	Cap, Ignition Switch
16	725-3159	1	S	Hour Meter
17	725-3256	1	S	Switch, PTO
18	726-0233	4	/P	Nut, Push
19	731-3209	1		Steering Wheel
20	731-3210	1		Cover, Steering Wheel
21	731-3241	1		Handle, PTO Switch
22	736-3070	1	/P	Washer, Flat, .34 x 1.5 x .10
23	783-0462	1	/P	Bracket, PTO Switch Retainer
24	629-3069	1	S	Harness, PTO Adapter

3208 Tractor S/N 1K010G & After Driveshaft And Engine Connections

Page 16 of 64

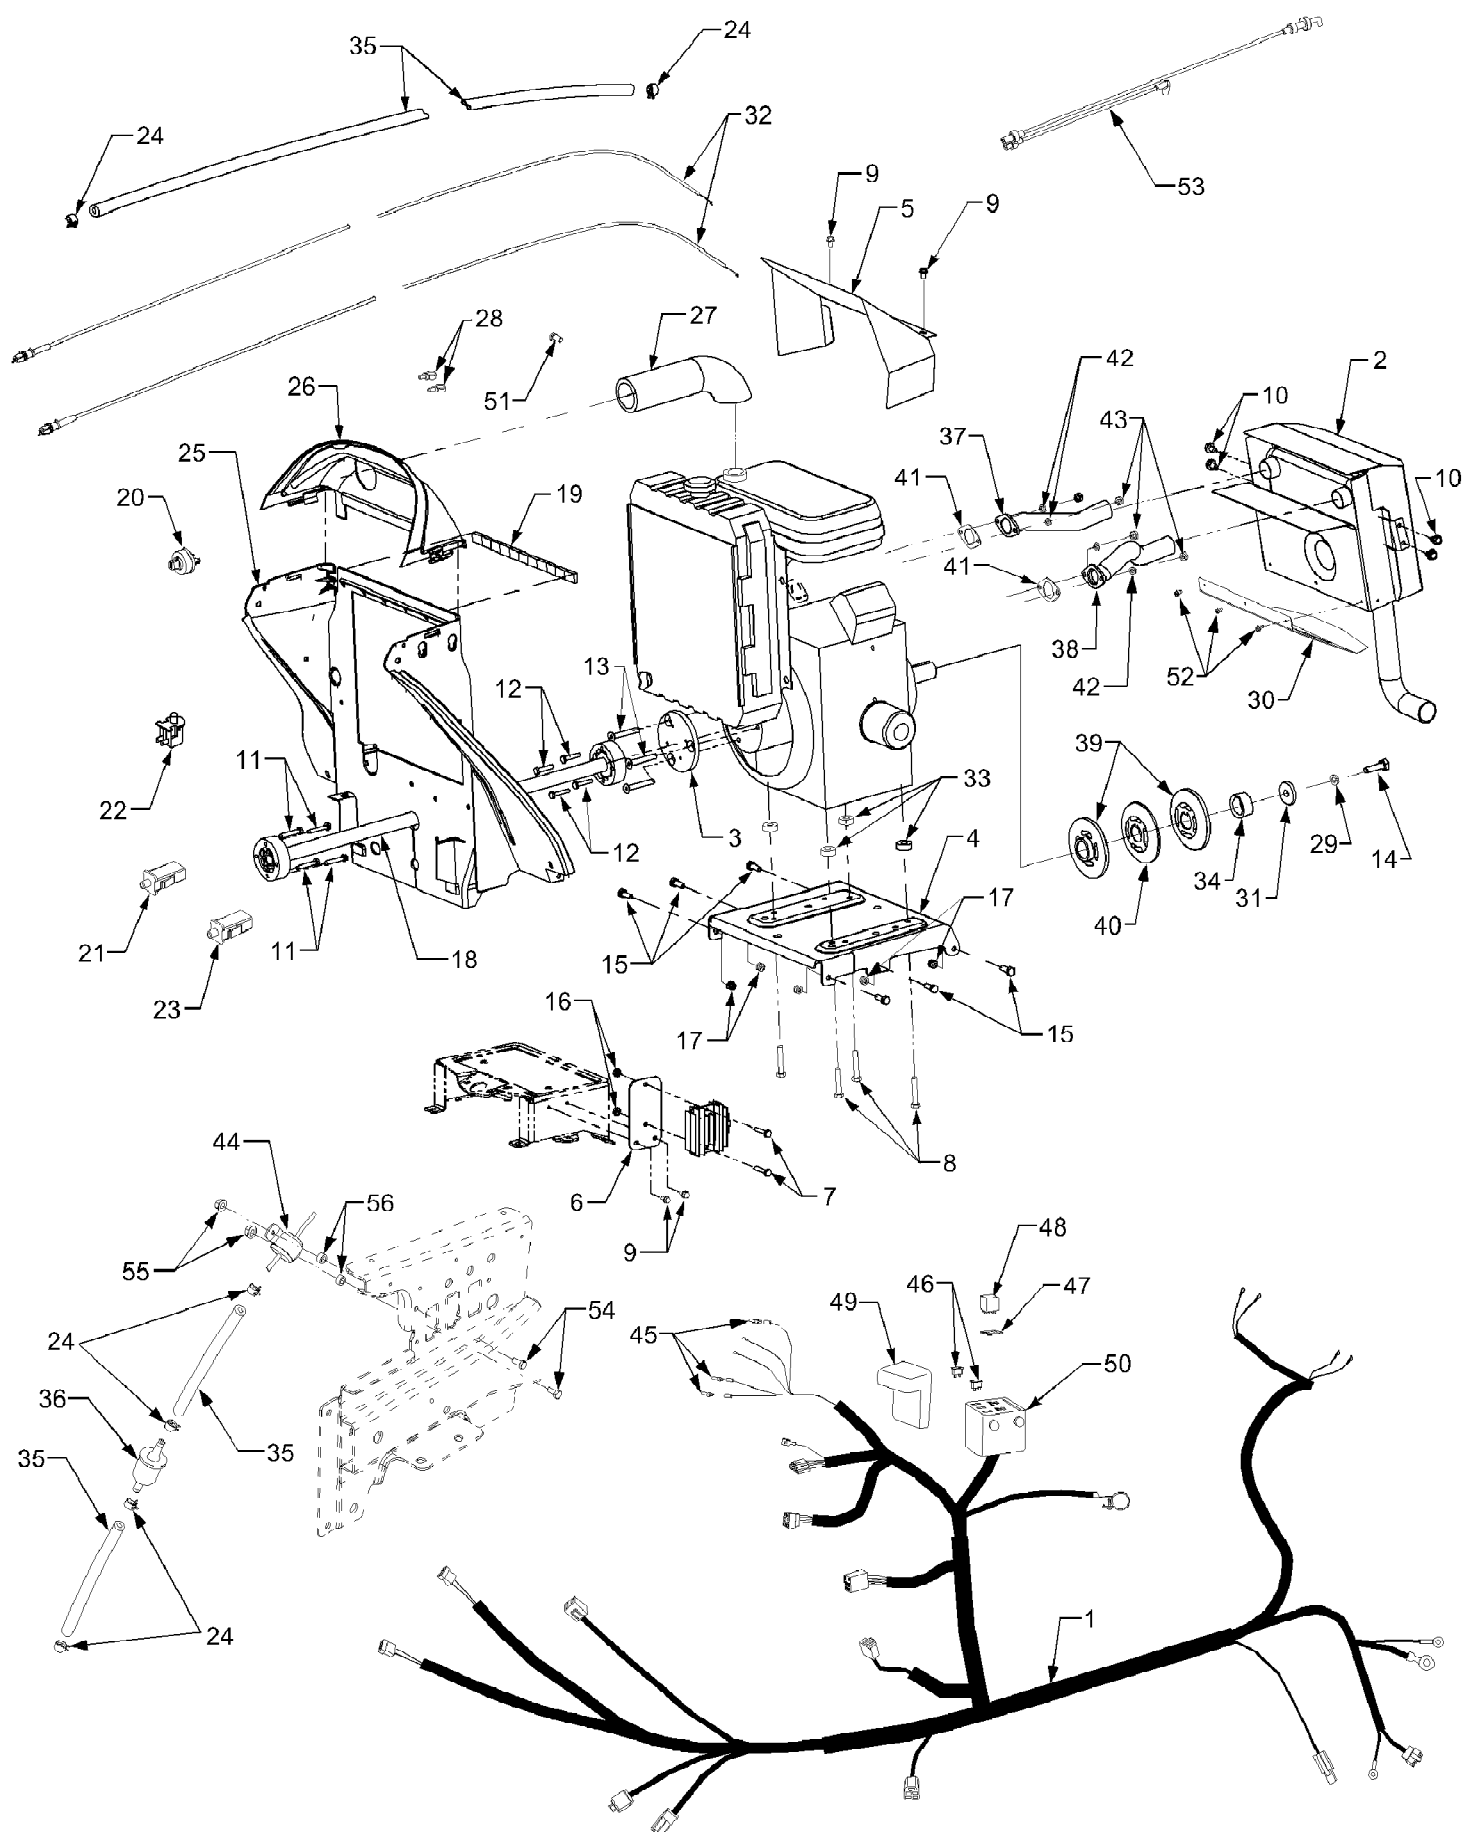


Ref #	Part Number	Qty	S/P/F	Description
1	629-3075	1	S	Harness, Wire
1	726-0154	4	S	Tie, Pushmount Not shown
2	651-3003	1		Muffler Assembly
3	703-2823	1		Plate, Coupling Adapter
4	703-2909-0716	1	/P	Plate, Engine Mounting
5	703-3080	1		Shield, Muffler Heat
6	703-3206	1		Plate, Regulator Mounting
7	710-0106	2	/P	Screw, Hex Cap 1/4-20 x 1.25 GR5
8	710-3206A	4	/P	Screw, Hex Cap M8-1.25 x 25 GR8.8
9	710-0599	4	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5
10	710-0607	4	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .5
11	710-1062	4		Screw, Hex Cap, Lock 1/4-20 x 1.25 GR5
12	710-1062	4		Screw, Hex Cap, Lock 1/4-20 x 1.25 GR5
13	710-1304	3		Screw, Cntrsnc Machine M8-1.25 x 55MM
14	710-1313	1	/P	Screw, Hex Cap M10-1.5 x 35MM
15	710-3038	6	/P	Screw, Hex Cap 5/16-18 x .875 GR5
16	712-0271	2	/P	Nut, Hex Sems, 1/4-20
17	712-0429	6	S	Nut, Hex Insert Lock 5/16-18
18	718-3094	1		Shaft, Drive, 27.75 Long
18	759-3765	1		Drive Barrels Kit Not shown (2 used per tractor)
19	722-3022	1	S	Foam Tape
20	725-1717	1	S	Switch, Key,
21	725-3164A	1	S	Switch, Plunger
22	725-3166	1	S	Switch, Snap Mount
23	725-3191A	1	S	Switch, Plunger
24	726-0205	6	/P	Clamp, Hose
25	731-3220A	1	/P	Baffle, Lower Air
26	731-3230	1		Baffle, Upper Air
27	735-0650	1		Hose, Intake
28	726-3055	2		Clip, Fuel Line Retainer
29	736-0171	1	S	Washer, Lock, 7/16
30	703-3398	1		Shield, Lower Exhaust
31	736-3017	1	/P	Washer, Flat .417 x 1.5 x .225
32	746-3079	2	S	Cable, Choke and Throttle Control
33	750-3198	4		Spacer, Engine 1.0 O.D, x .34 Lg
34	750-3201	1		Spacer, Crankshaft
35	751-0535-12	2	S	Fuel Line, 12 inches (Fuel Tank to Filter & Filter to Pump)
35	751-0535-68	1	S	Fuel Line, (Fuel Pump to Engine) 68in.
36	KH-24-050-02	1	S	Filter, Fuel
37	751-3149	1		Pipe, Exhaust
38	751-3150	1		Pipe, Exhaust
39	756-3091A	2	/P	Pulley Half
40	756-3099	1		Pulley, Center
41	KM-11060-2079	2		Gasket, Exhaust
42	KM-461F0600	4		Washer, Lock, 6MM
43	KM-311G0600	4		Nut, Hex, 6MM
44	KM-49040-2065	1		Pump, Fuel
45	725-1365	3	S	Bulb, Indicator
46	725-3243	2		Fuse, 25 Amp
47	721-0342	1	S	Gasket, Silicone

3208 Tractor S/N 1K010G & After
Driveshaft And Engine Connections

Page 18 of 64


Ref #	Part Number	Qty	S/P/F	Description
48	725-1648	1	S	Relay
49	759-3868	1	S	Cover, Fuse Box
50	759-3869	1	S	Box, Fuse
51	710-3138	1	/P	Screw, Engine Ground M8-1.25 x 16
52	710-3007	3	/P	Screw, Hex Wash. Hd. Tapp #12-24 x .375
53	751-3182	1		Hose, Vacuum
54	710-0206	2	/P	Screw, Hex Cap 1/4-20 x .88
55	712-3027	2	S	Nut, Hex Flange Lock 1/4-20
56	750-0808	2	/P	Spacer, .320 x .56 x .36

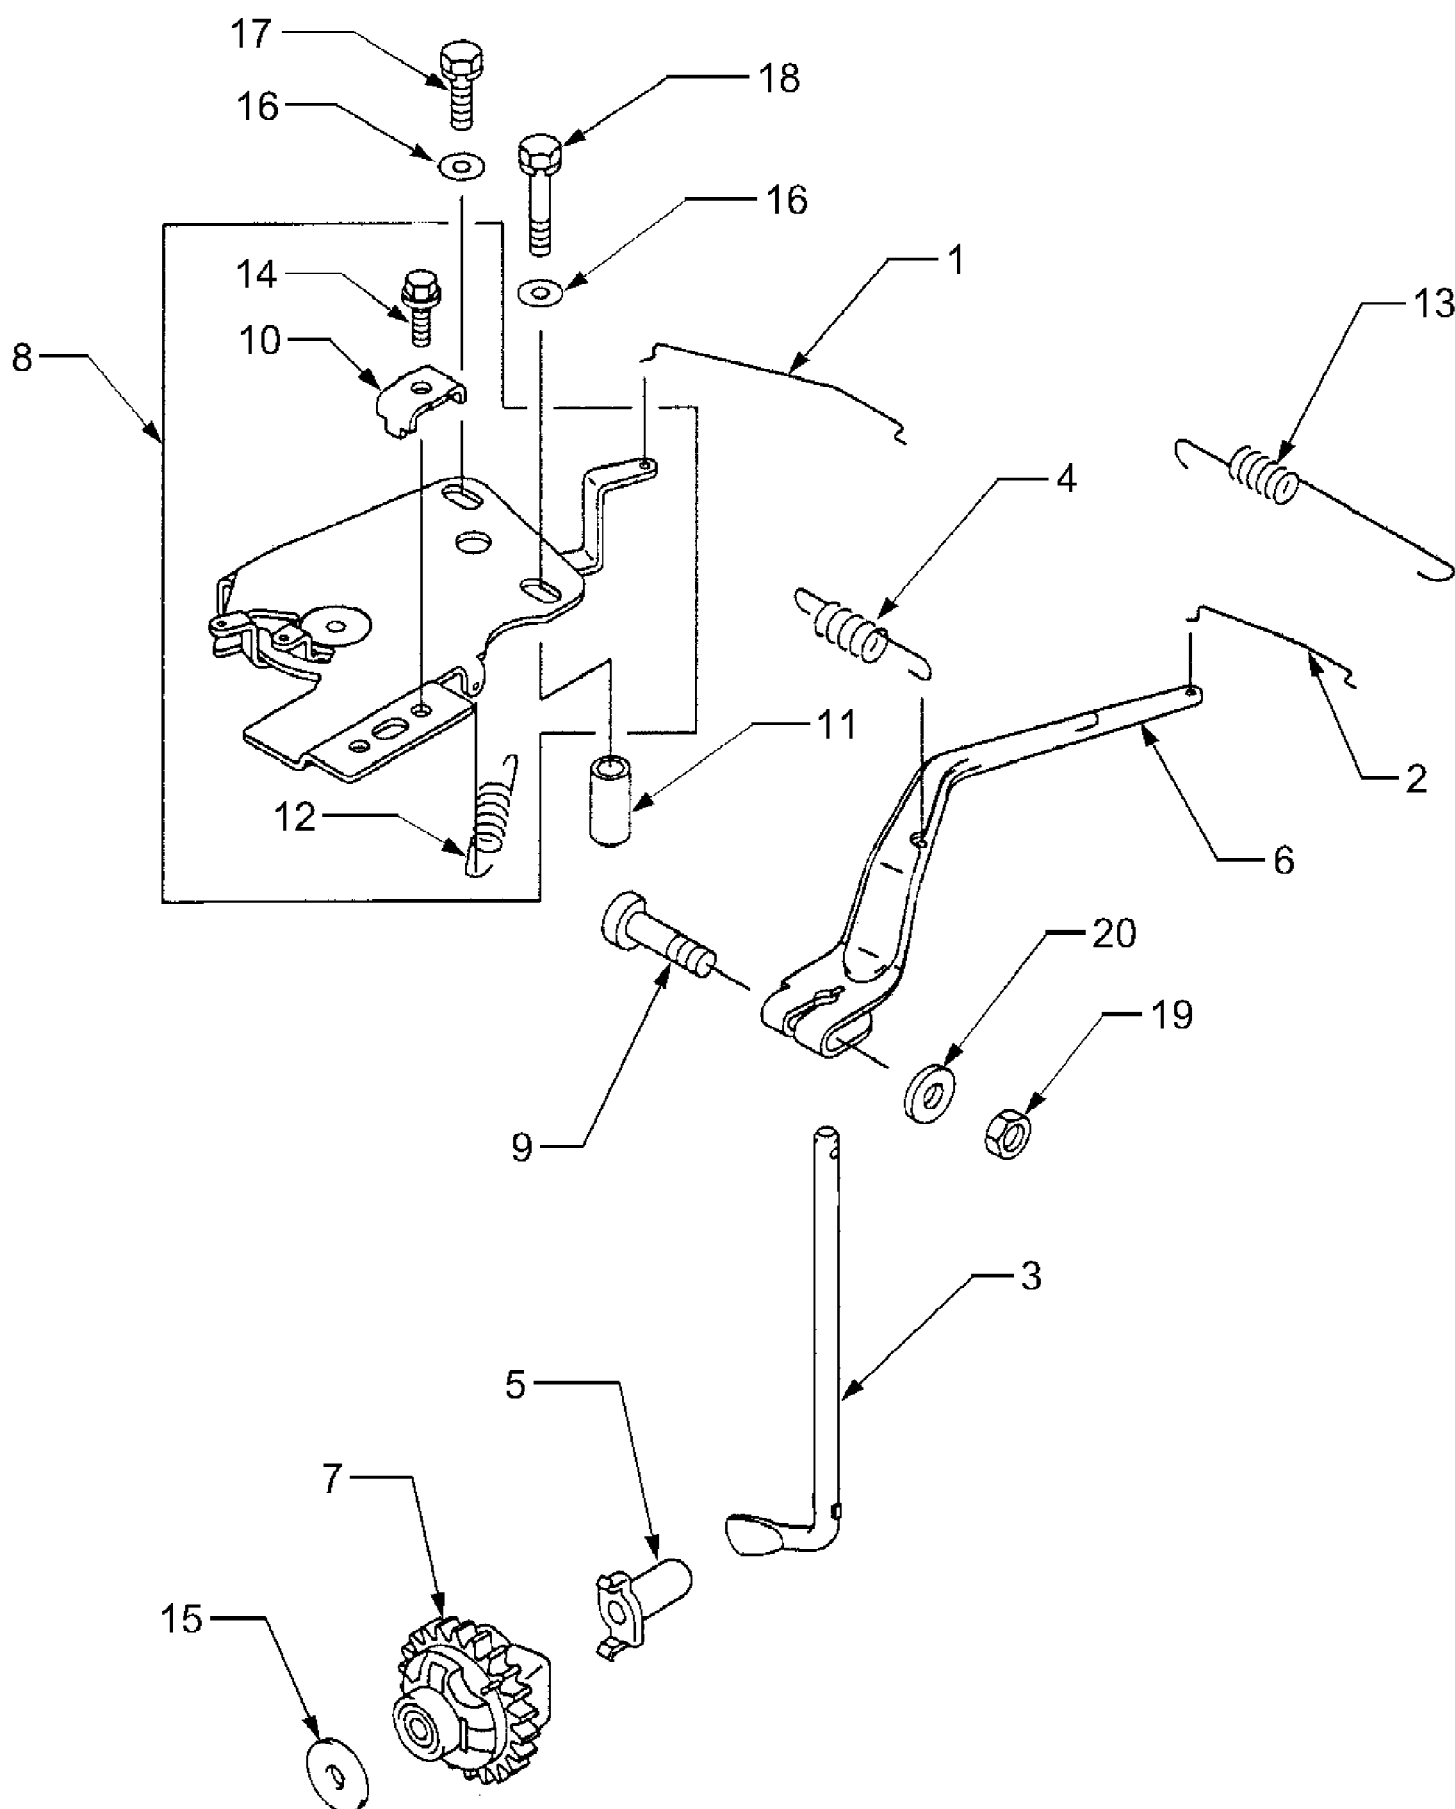

3208 Tractor S/N 1K010G & After
Engine And Governor Control

Page 20 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	KM-16169-2092	1		Link, Choke
2	KM-16171-2065	1		Link
3	KM-39003-2064	1		Arm, Pivot
4	KM-39129-2043	1		Spring, Governor
5	KM-42036-2051	1	S	Sleeve
6	KM-49103-2123	1		Arm, Governor
7	KM-49110-2073	1		Governor Assembly
8	KM-49113-2102	1		Panel, Control
9	KM-92002-2269	1		Bolt
10	KM-92037-2209	2		Clamp
11	KM-92143-2200	1		Collar, 6.8 x 10 x 20.5
12	KM-92144-2052	1		Spring
13	KM-92144-2287	1		Spring
14	KM-92150-2182	2	/P	Bolt, 5 x 18
15	KM-92200-2036	1	/P	Washer
16	KM-92200-2070	2		Washer
17	KM-180B0616	1		Bolt, 6 x 16
18	KM-180B0635	1		Bolt, 6 x 35
19	KM-311B0600	1	S	Nut, Hex
20	KM-411B0600	1		Washer, Plain

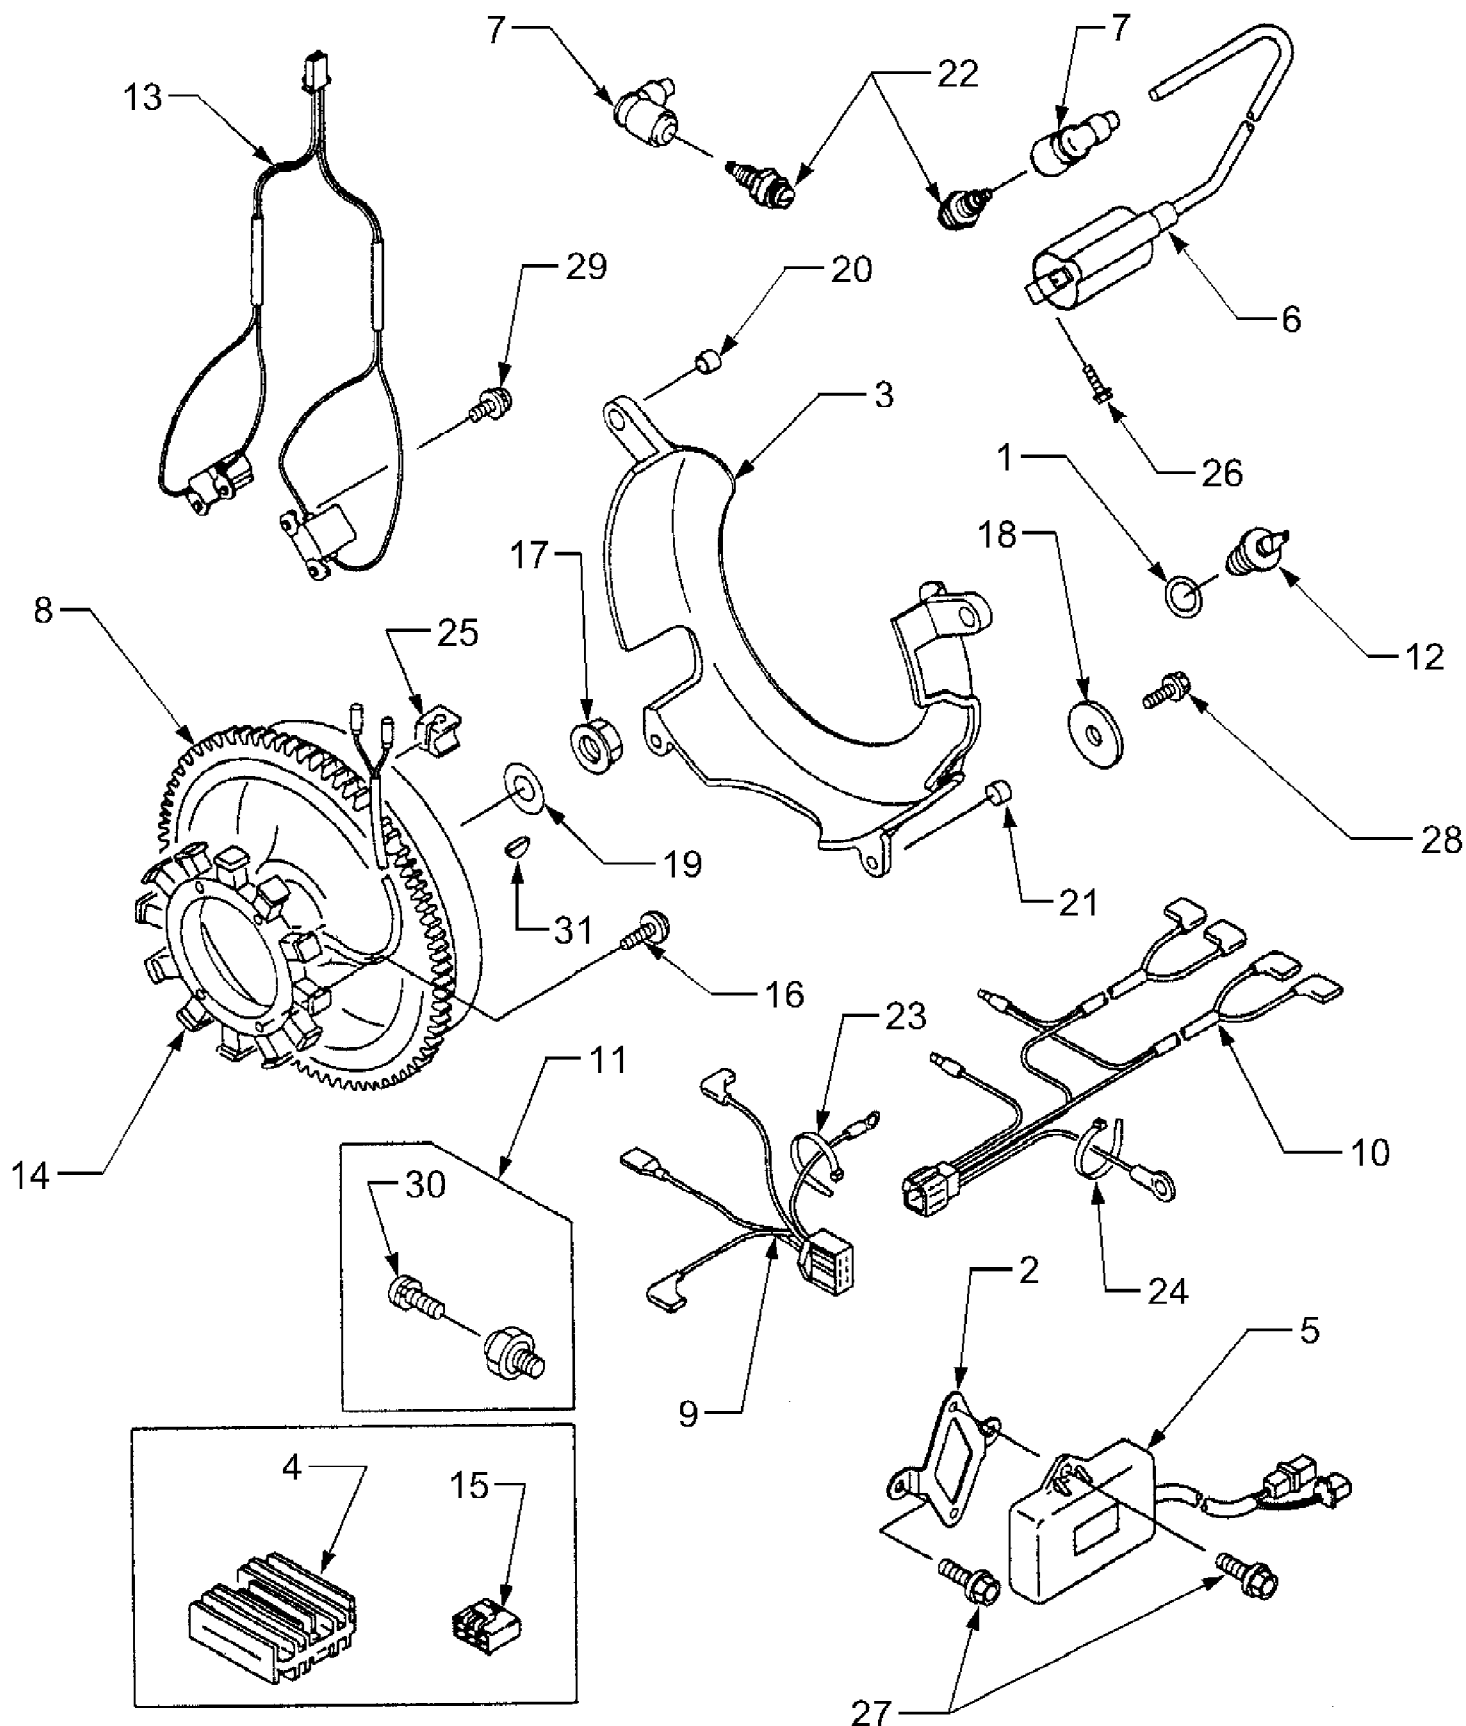


3208 Tractor S/N 1K010G & After
Engine Electrical

Page 22 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	KM-11009-2766	1		Gasket, Temp. Switch
2	KM-11047-20369H	1		Bracket
3	KM-14083-2051	1		Cover, Flywheel
4	KM-21066-2070	1		Regulator, Voltage
5	KM-21119-2157	1	/P	Igniter
6	KM-21121-2083	2		Coil, Ignition
7	KM-21130-2060	2		Cap, Spark Plug
8	KM-21193-2149	1		Flywheel Assembly
9	KM-26030-2073	1		Harness
10	KM-26030-2167	1		Harness
11	KM-27010-2170	1	S	Switch
12	KM-27010-2182	1		Switch
13	KM-59026-2054	1		Coil, Pulsing
14	KM-59031-2096	1	S	Coil, Charging
15	KM-59221-2099	1		Connector
16	KM-92009-2273	4		Screw
17	KM-92015-2167	1		Nut
18	KM-92022-1517	2		Washer
19	KM-92022-2245	1		Washer
20	KM-92027-1568	2		Collar, 8.3 x 11.5 x 9
21	KM-92027-2096	2		Collar, 6.2 x 7.8 x 5
22	KM-92070-2072	2	S	Plug, Spark
23	KM-92072-1195	2		Band
24	KM-92072-2003	2		Band
25	KM-92170-2056	1		Clamp
26	KM-130B0520	4		Bolt, Flanged, 5 x 20
27	KM-130B0614	4		Bolt, Flanged, 6 x 14
28	KM-130B0616	2	S	Bolt, Flanged, 6 x 16
29	KM-225B0414	4		Screw, Pan, 4 x 14
30	KM-241B0406	1		Screw, Pan, 4 x 6
31	KM-510A5100	2		Key, Woodruff

3208 Tractor S/N 1K010G & After
Fender And Running Board


Page 23 of 64

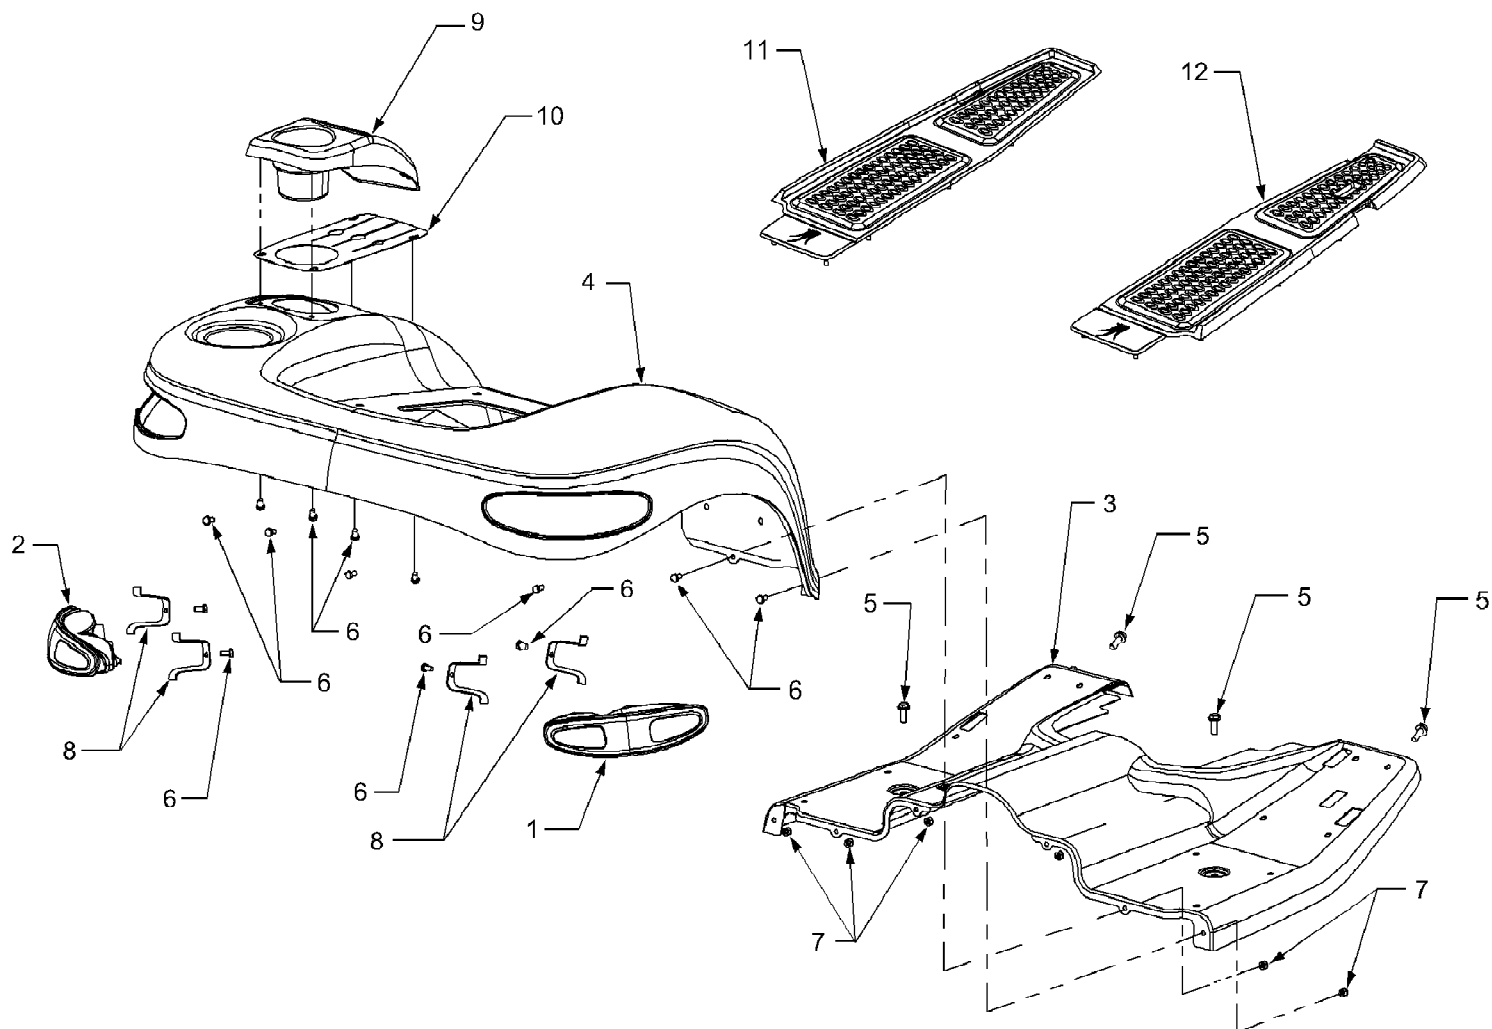

3208 Tractor S/N 1K010G & After
Fender And Running Board

Page 24 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	625-0023A	1	S	Light Assembly, Rear RH
	725-3262	1	S	Bulb Only, Tail Light
	725-3263	1	S	Bulb Only, Reverse Indicator Light
	629-3059	1		Harness, Tail Light
2	625-0024A	1	S	Light Assembly, Rear LH
	725-3262	1	S	Bulb Only, Tail Light
	725-3263	1	S	Bulb Only, Reverse Indicator Light
	629-3059	1		Harness, Tail Light
3	703-3622-0716	1		Running Board.
	777D04383	2		Graphic, All Shaft Drive
	777I20860	1		Graphic, Starting Instruction
	777I20859	1		Graphic, Height Adjustment
	777S30017	1		Graphic, Warning
4	703-2978-0716	1	/P	Fender
	777D04715	1	S	Graphic, 3000 Series
5	710-0602	4	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x 1.0
6	710-3013	14	/P	Screw, Hex Cap, 1/4-20 x .5 GR5
7	712-0324	6	/P	Nut, Hex Lock, 1/4-20
8	726-3057	4	S	Clip, Tail Light
9	731-3239	1		Cover, Lift Lever
10	731-3253	1		Flap, Lift Lever
11	735-0275	1		Pad. Floor LH
12	735-0276	1		Pad. Floor RH

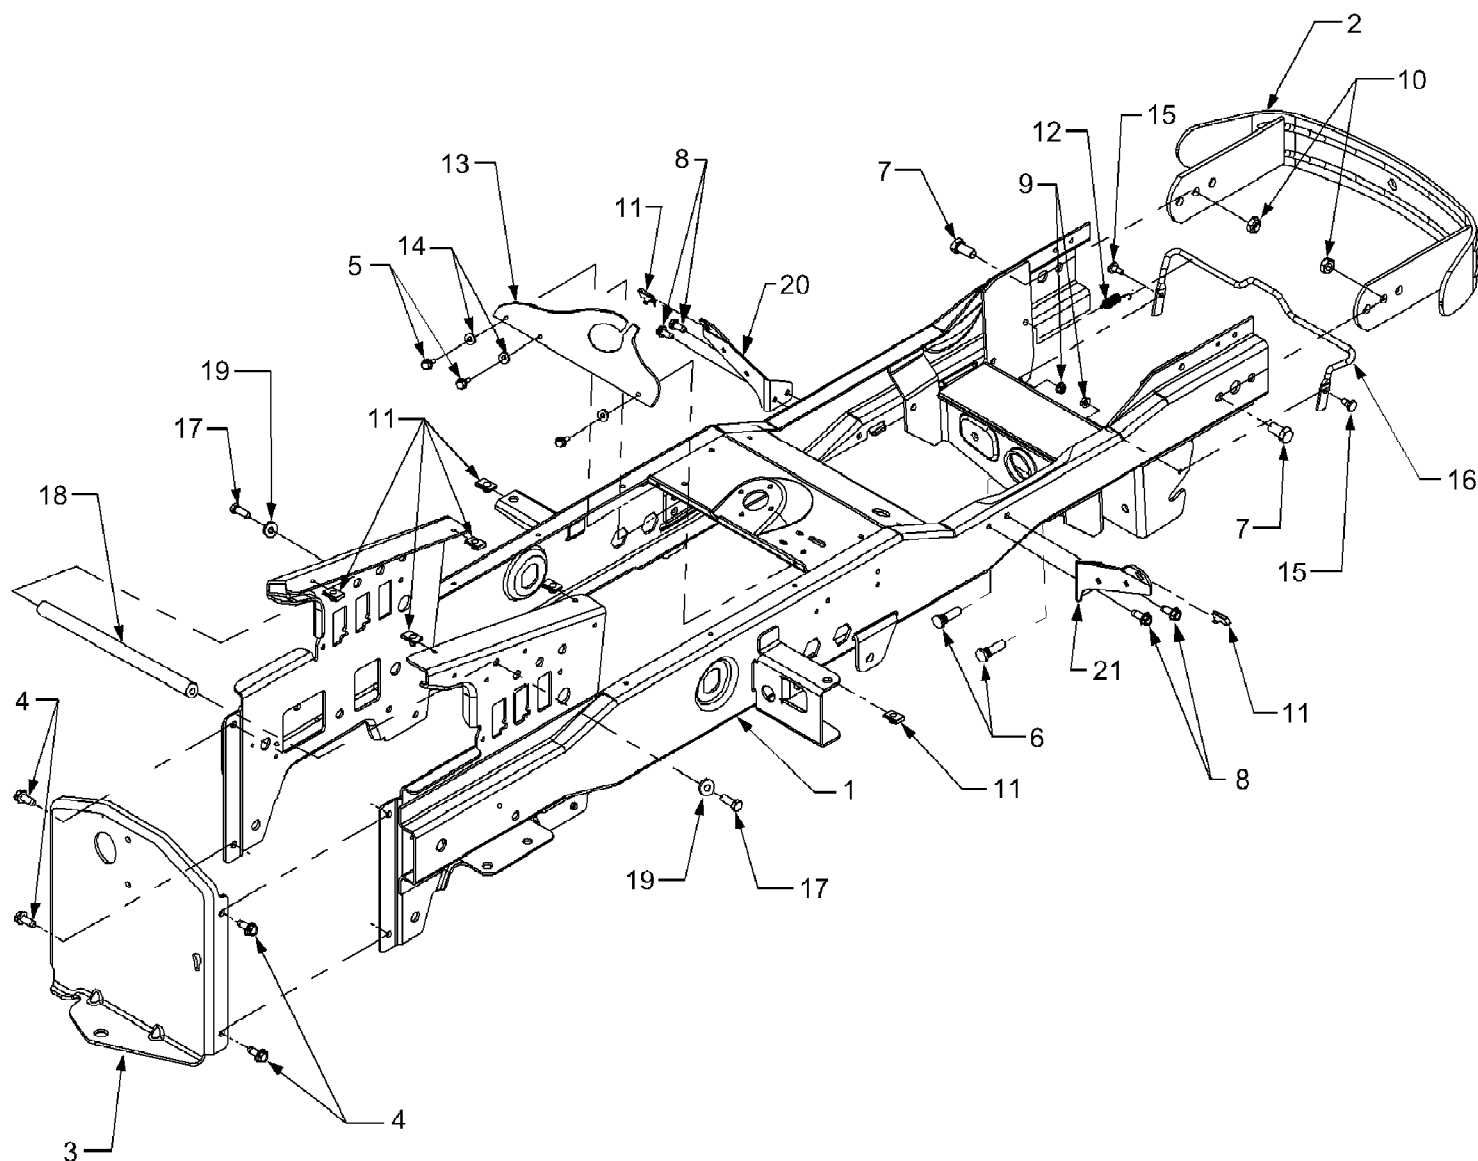



3208 Tractor S/N 1K010G & After
Frame And Hitch Plate

Page 26 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	603-0446B-0716	1	/P	Frame Assembly
2	603-0463A-0716	1	S	Bumper, Front
	777D00585	1		Graphic
3	703-3546-0716	1		Hitch Plate
	777I20773	1		Graphic, Trans. Release
	777S30265	1		Graphic, Trans. Oil
4	710-0623	4	/P	Screw, Hex Wash. Hd. Tapp 3/8-16 x .75
5	710-0599	3	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5
6	710-0617	2		Screw, Round Hd., 3/8-24
7	710-3131	2	/P	Screw, Hex Cap 1/2-13 x 1.0 GR5
8	710-1260A	4	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
9	712-3027	2	S	Nut, Hex Flange Lock, 1/4-20
10	712-3083	2	/P	Nut, Hex Lock, 1/2-13
11	726-0211	8	S	Speed Nut, U-Type, 5/16-18
12	732-3002	1	S	Spring, Extension
13	735-0653	1		Flap, Intk.
14	736-0342	3		Washer, Flat, .283 x .75 x .030
15	738-0704	2	S	Shoulder Screw, .312 x .18
16	747-3336	1		Rod, Front Latch
17	710-3038	2	/P	Screw, Hex Cap, 5/16-18 x .875
18	711-1333	1		Shaft, Frame Brace
19	736-3008	2	S	Washer, Flat, .344 x .75 x .12
20	703-3417-0716	1		Bracket, Running Board LH
21	703-3418-0716	1		Bracket, Running Board RH

3208 Tractor S/N 1K010G & After Front Axle

Page 27 of 64

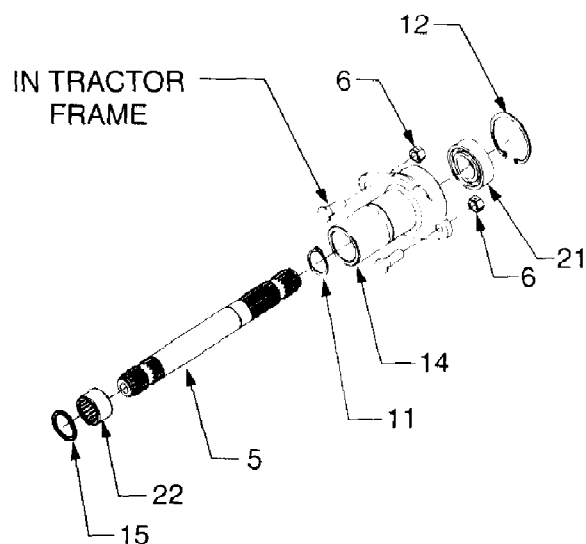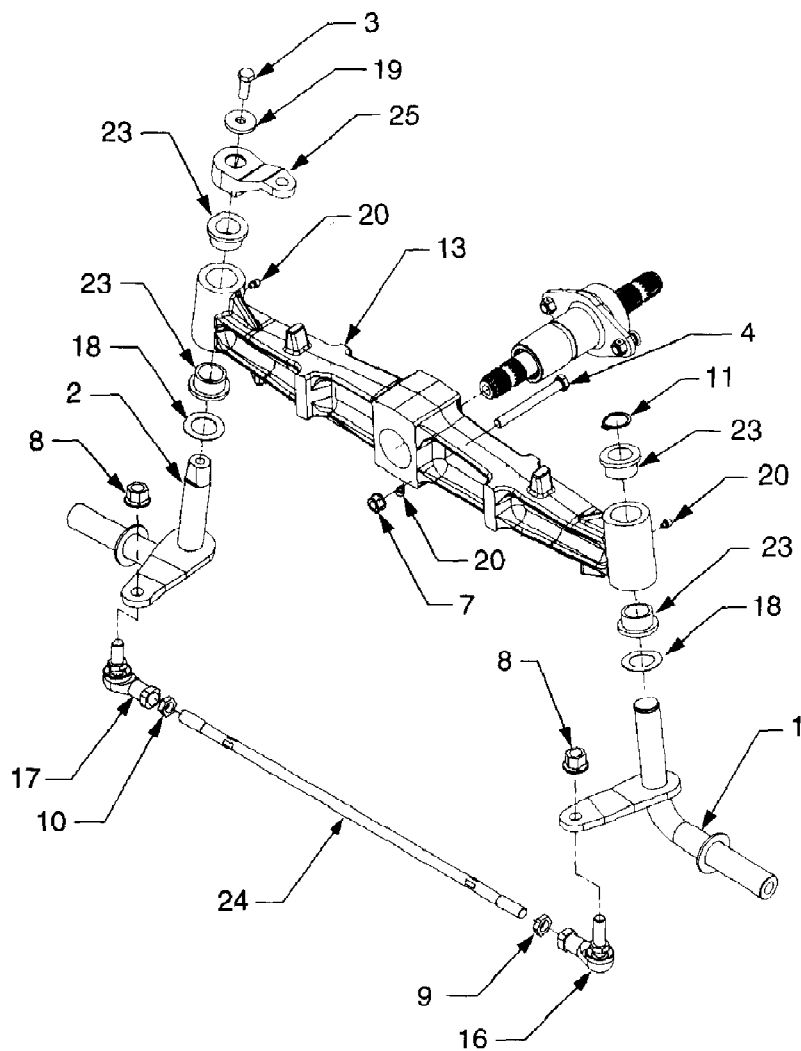


3208 Tractor S/N 1K010G & After
Front Axle

Page 28 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	603-0426	1	/P	Axle, RH Steering
2	603-0427	1	/P	Axle, LH Steering
3	710-1039	1	/P	Screw, Hex Cap 3/8-24 x 1.0 GR8
4	710-3085	1	/P	Screw, Hex Cap 3/8-16 x 3.5 GR5
5	711-1141	1		Shaft, Splined
6	712-0355	2	S	Nut, Hex Center Lock, 3/8-24
7	712-0431	1	S	Nut, Hex Flange Lock, 3/8-16
8	712-3103	2		Nut, Hex Flange Lock, M12 x 1.75
9	712-3104	1		Nut, Hex - RH, M12 x 1.75
10	712-3105	1		Nut, Hex - LH, M12 x 1.75
11	716-0102	2	S	Snap Ring, 1.0 Dia. Shaft
12	716-0188	1	/P	Retaining Ring, Internal, 2.0
13	719-3119A	1	/P	Pivot Axle
14	719-3120	1		Axle Carrier
15	721-0462	1	/P	Seal, Grease, 1.31 x 1.0
16	723-0462	1		Ball Joint, 12MM x 1.75 RH
17	723-0463	1		Ball Joint, 12MM x 1.75 LH
18	736-0163	2	S	Washer, Flat, 1.03 x 1.62 x .030
19	736-0247	1	/P	Washer, Flat, .406 x 1.25
20	737-3000	3	S	Fitting, Lube, 3/16 Drive
21	741-0131	1	S	Bearing, Ball
22	741-0363	1	S	Bearing, Needle
23	741-0558	4	S	Bearing, Flange
24	747-3348A	1	/P	Tie Rod, M12 x1.75 RH & LH
25	748-3074	1		Steering Arm

3208 Tractor S/N 1K010G & After
Front PTO

Page 29 of 64

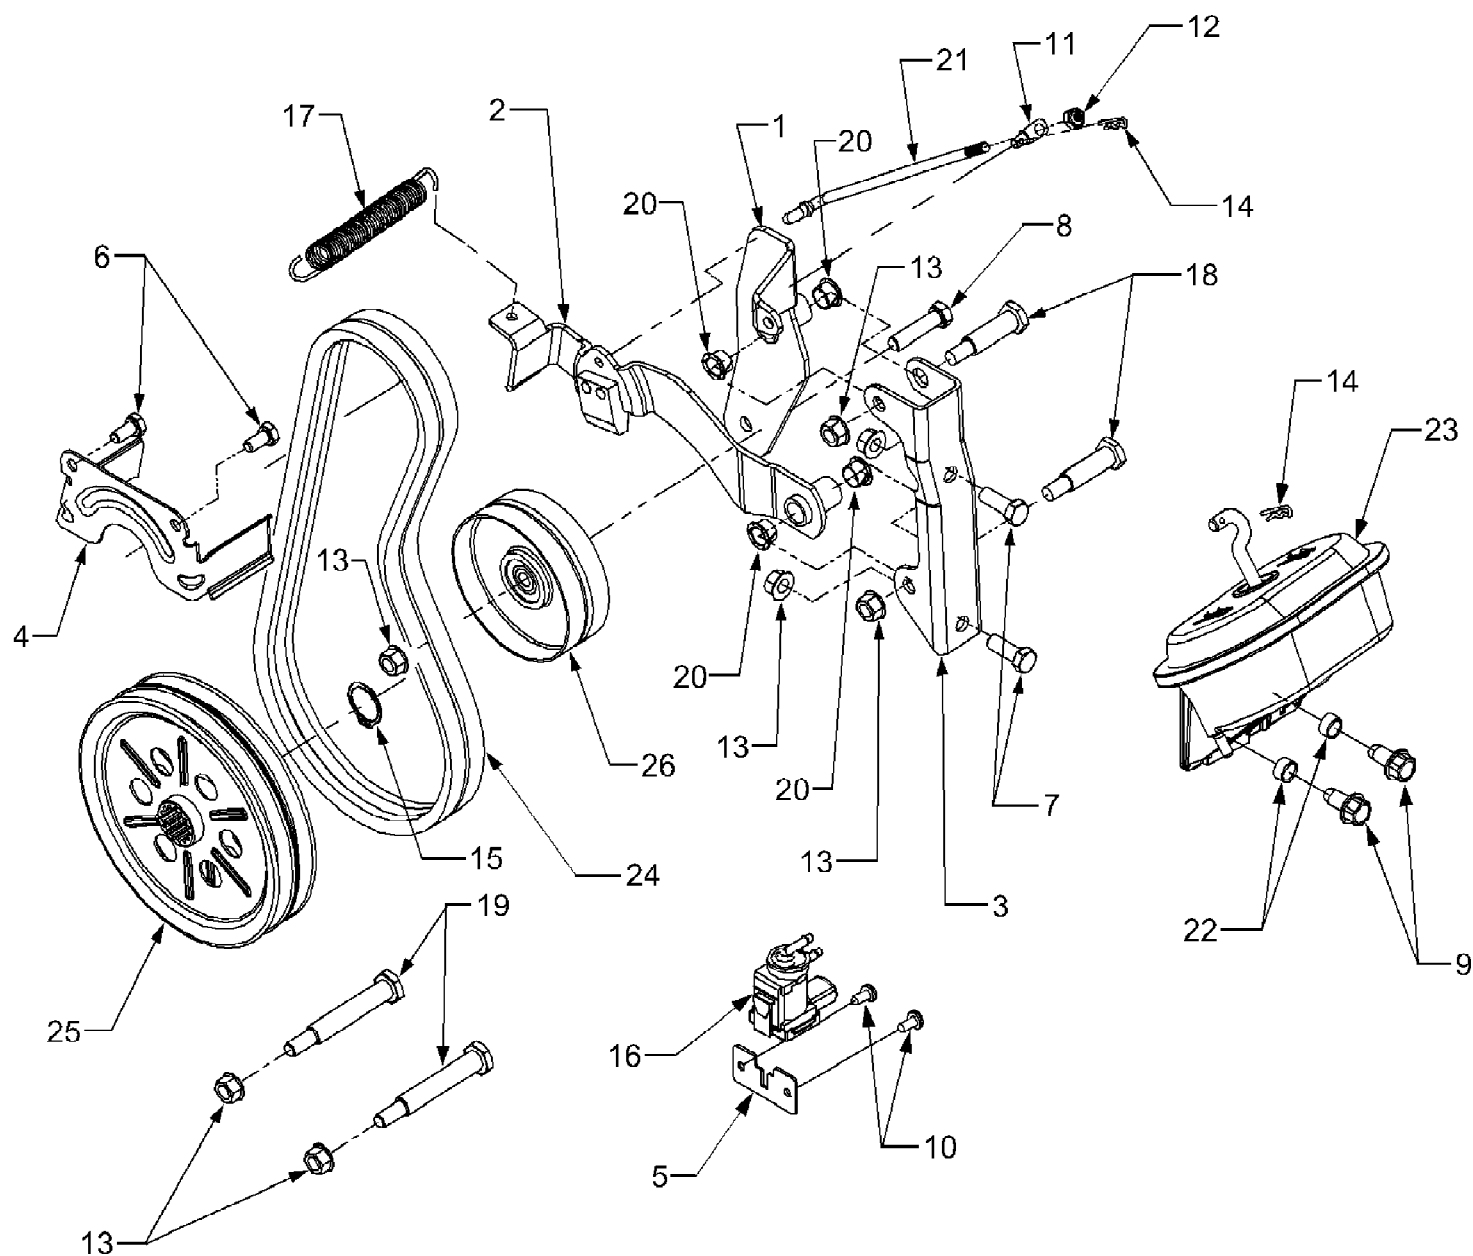


3208 Tractor S/N 1K010G & After
Front PTO

Page 30 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	603-0442-0637	1	/P	Bracket, Idler
2	759-3867	1	/P	Bracket Assembly, Brake
3	703-3009-0637	1	/P	Bracket, PTO Mounting
4	703-3165-0637	1	/P	Belt Guide
5	703-3812-0716	1		Bracket, Solenoid Mounting
6	710-0237	2	/P	Screw, Hex Cap 5/16-24 x .625 GR5
7	710-0514	2	/P	Screw, Hex Cap 3/8-16 x 1.0 GR5
8	710-0520	1	/P	Screw, Hex Cap 3/8-16 x 1.5 GR5
9	710-0623	2	/P	Screw, Hex Wash. Hd. Tapp 3/8-16 x .75
10	710-0748	2	/P	Screw, Phil. Hd. Tapp #12-14 x .5
11	711-1196	1		Ferrule, Brake Adjustment
12	712-0324	1	/P	Nut, Hex Insert Lock, 1/4-20
13	712-0431	7	S	Nut, Flange Lock, 3/8-16
14	714-0104	2	S	Pin, Internal Cotter
15	716-0102	1	S	Snap Ring, 1.0 Dia Shaft
16	759-04258	1	/P	Solenoid, Kit Vacuum Actuator Replaces 725-3278
17	732-0470A	1	S	Spring, Extension, .530 x 4.74
18	738-0213	2	/P	Shoulder Screw, .498 x 1.45
19	738-3056	2	S	Shoulder Screw
20	741-0491	4		Bearing, Nylon Flange
21	747-3322	1		Rod, PTO Brake
22	750-0526	2		Spacer, .380 x .5 x .265
23	751-3173	1	S	Vacuum Actuator
24	754-3084	1	S	V-Belt, A-Section x 37.63 (Set of two belts)
25	756-3092	1		Pulley, PTO Drive. 6.75-Double
26	756-3094	1		Pulley, Flat Idler, 4.0

3208 Tractor S/N 1K010G & After
Front Wheels


Page 31 of 64

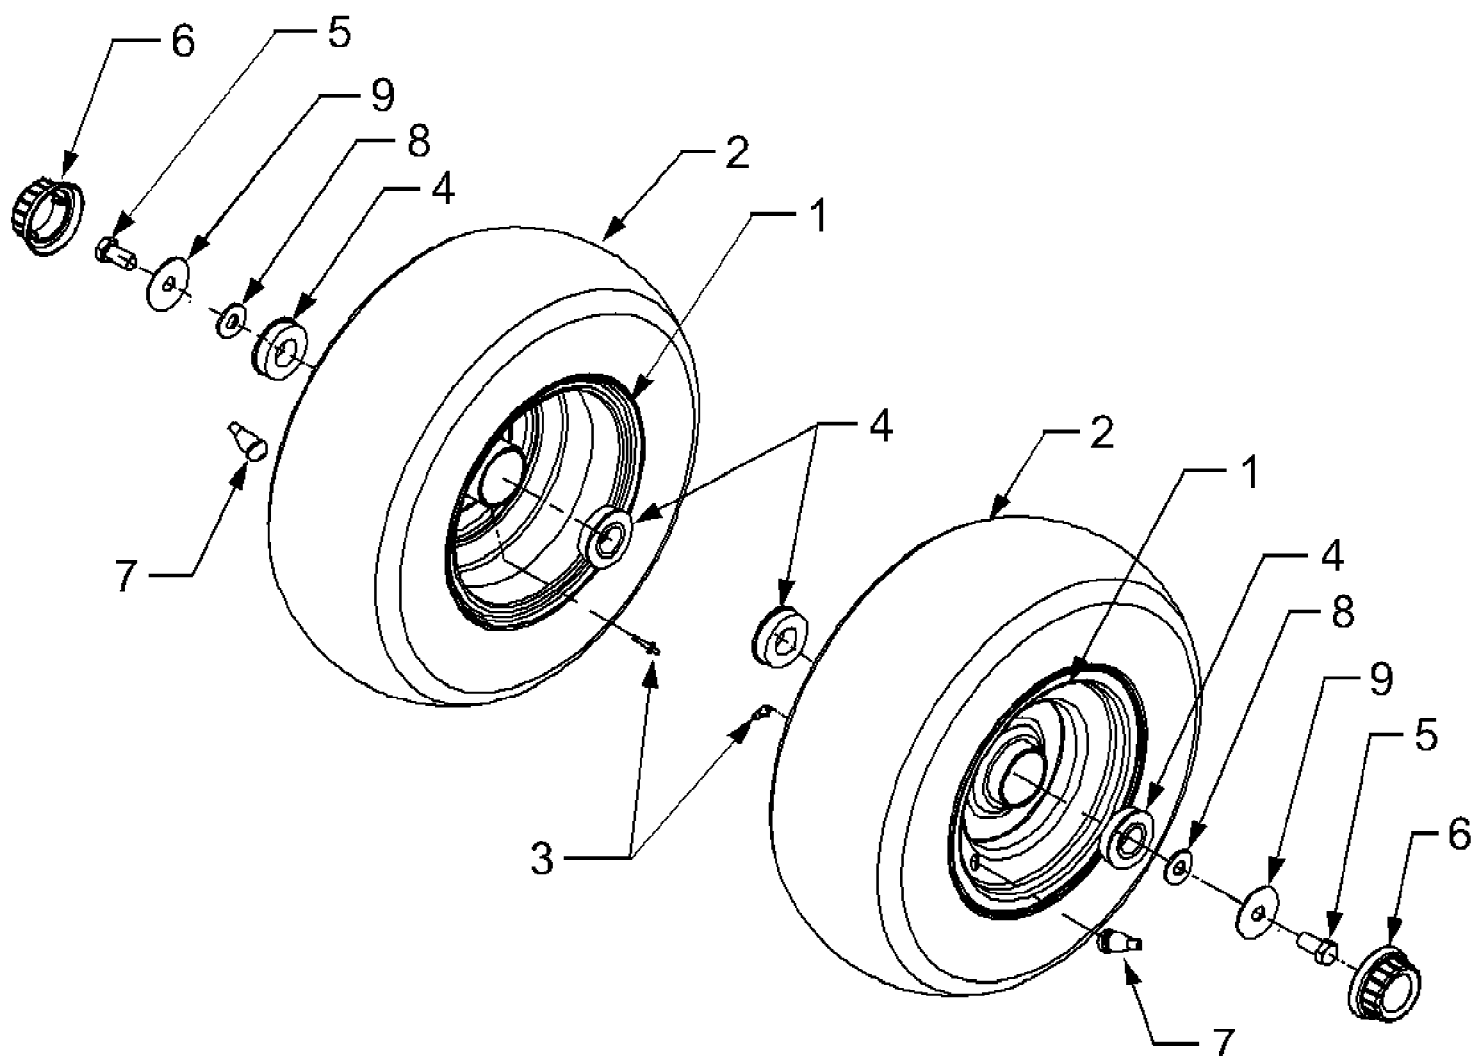

3208 Tractor S/N 1K010G & After
Front Wheels

Page 32 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	734-3053-0499	2	S	Rim Assembly, Wheel
2	734-3193	2	S	Tire, Turf, 16 x 7.5 x 8.0
3	737-0224	2		Lube Fitting
4	741-3002	4	S	Bearing, Ball
5	710-3126	2	/P	Screw, Hex Cap, 1/2-13 x 1.0 GR5
6	731-3020	2	S	Hubcap
7	734-0255	2	S	Valve, Tubeless Air
8	736-0179	2	S	Washer, Flat, .531 x 1.25 x .1
9	736-3095	2	S	Washer, Flat, .535 x 1.92 x .060

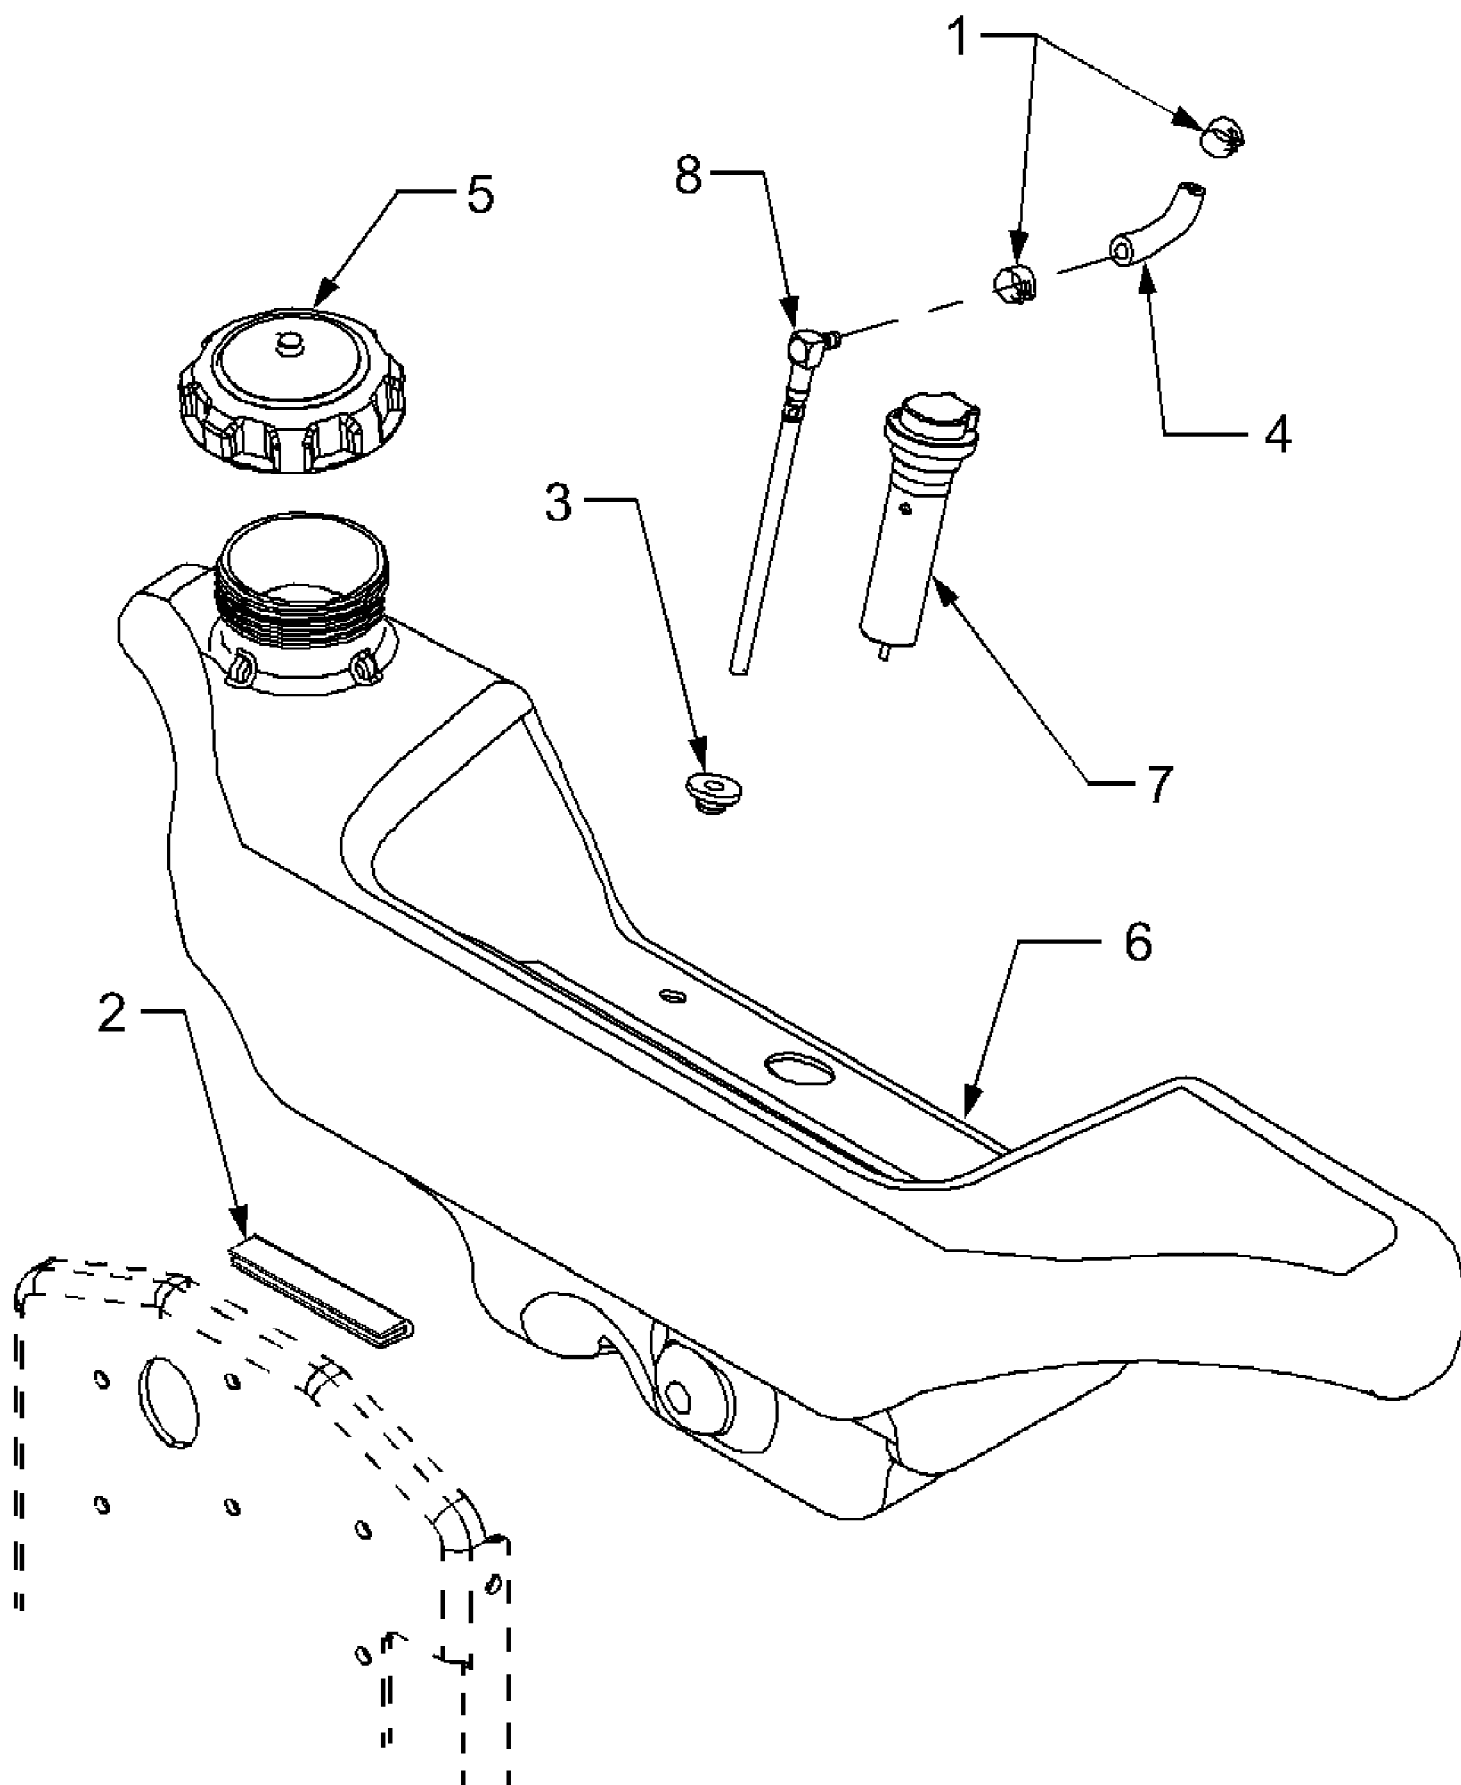

3208 Tractor S/N 1K010G & After
Fuel Tank


Page 34 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	726-0205	2	/P	Clamp, Hose
2	731-3268	1		Trim, Tank Protector
3	735-0149	1	S	Bushing, Rubber
4	751-0535-60	60in.	S	Fuel Line
5	751-3124B	1	S	Cap, Fuel
6	751-3144A	1	S	Tank, Fuel, 4.5 Gallon
7	751-3161	1		Sensor, Low Fuel
	751-3146	1	S	Grommet
8	751-3162A	1	/P	Fitting, Fuel Pickup

3208 Tractor S/N 1K010G & After
Hood, Grille And Side Panels

Page 36 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	625-0053	1	S	Headlight Assembly (Lens glued to reflector)
	725-0963	2	S	Bulb, Headlight
	725-1649	2	S	Socket Assembly, Headlight
2	759-3865-0499	1		Hood w/Support Rod Assembly
3	703-2946-0499	1		Side Panel, RH
4	703-2947-0499	1		Side Panel, LH
5	703-2950-0499	1		Grille, Series 3000
	777I20314	1	/P	Graphic, Warning
6	703-2984-0716	1		Support, Grille - RH
7	703-2985-0716	1		Support, Grille - LH
8	703-3070A-0499	1	S	Bracket, Upper Hood
	777S30538	1		Graphic, Warning Hot Surface
9	703-3071	2		Bracket, Rod Retainer
10	703-3101A-0716	1	S	Support, Hood
11	710-0351	8	/P	Screw, Truss Hd, Tapp, #10-16 x .5
12	710-0607	10	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .5
13	710-0924	4	/P	Screw, Phil. Pan Hd. 1/4-20 x .75
14	726-3054	4		Nut, U Type Speed, 1/4-20
15	726-0139	2	/P	Nut, U-type Speed, #10
16	726-3056	4		Latch, 1/4 Turn
17	731-3227	1		Mount, Side Panel/Grille RH
18	731-3228	1		Mount, Side Panel/Grille LH
19	732-0936	4		Clip, Spring
20	732-0937	4		Spring, Compression
21	732-1153	1		Spring, Extension
22	736-0400	2	S	Washer, Flat, .194 x .62 x .063
23	747-3337A	1	/P	Rod, Upper Hood
24	747-3338	1		Rod, Lower Hood
25	777D03265	1	/P	Graphic, Hood - RH
	777D03266	1	/P	Graphic, Hood - LH
26	777D03277	2		Graphic, 3208

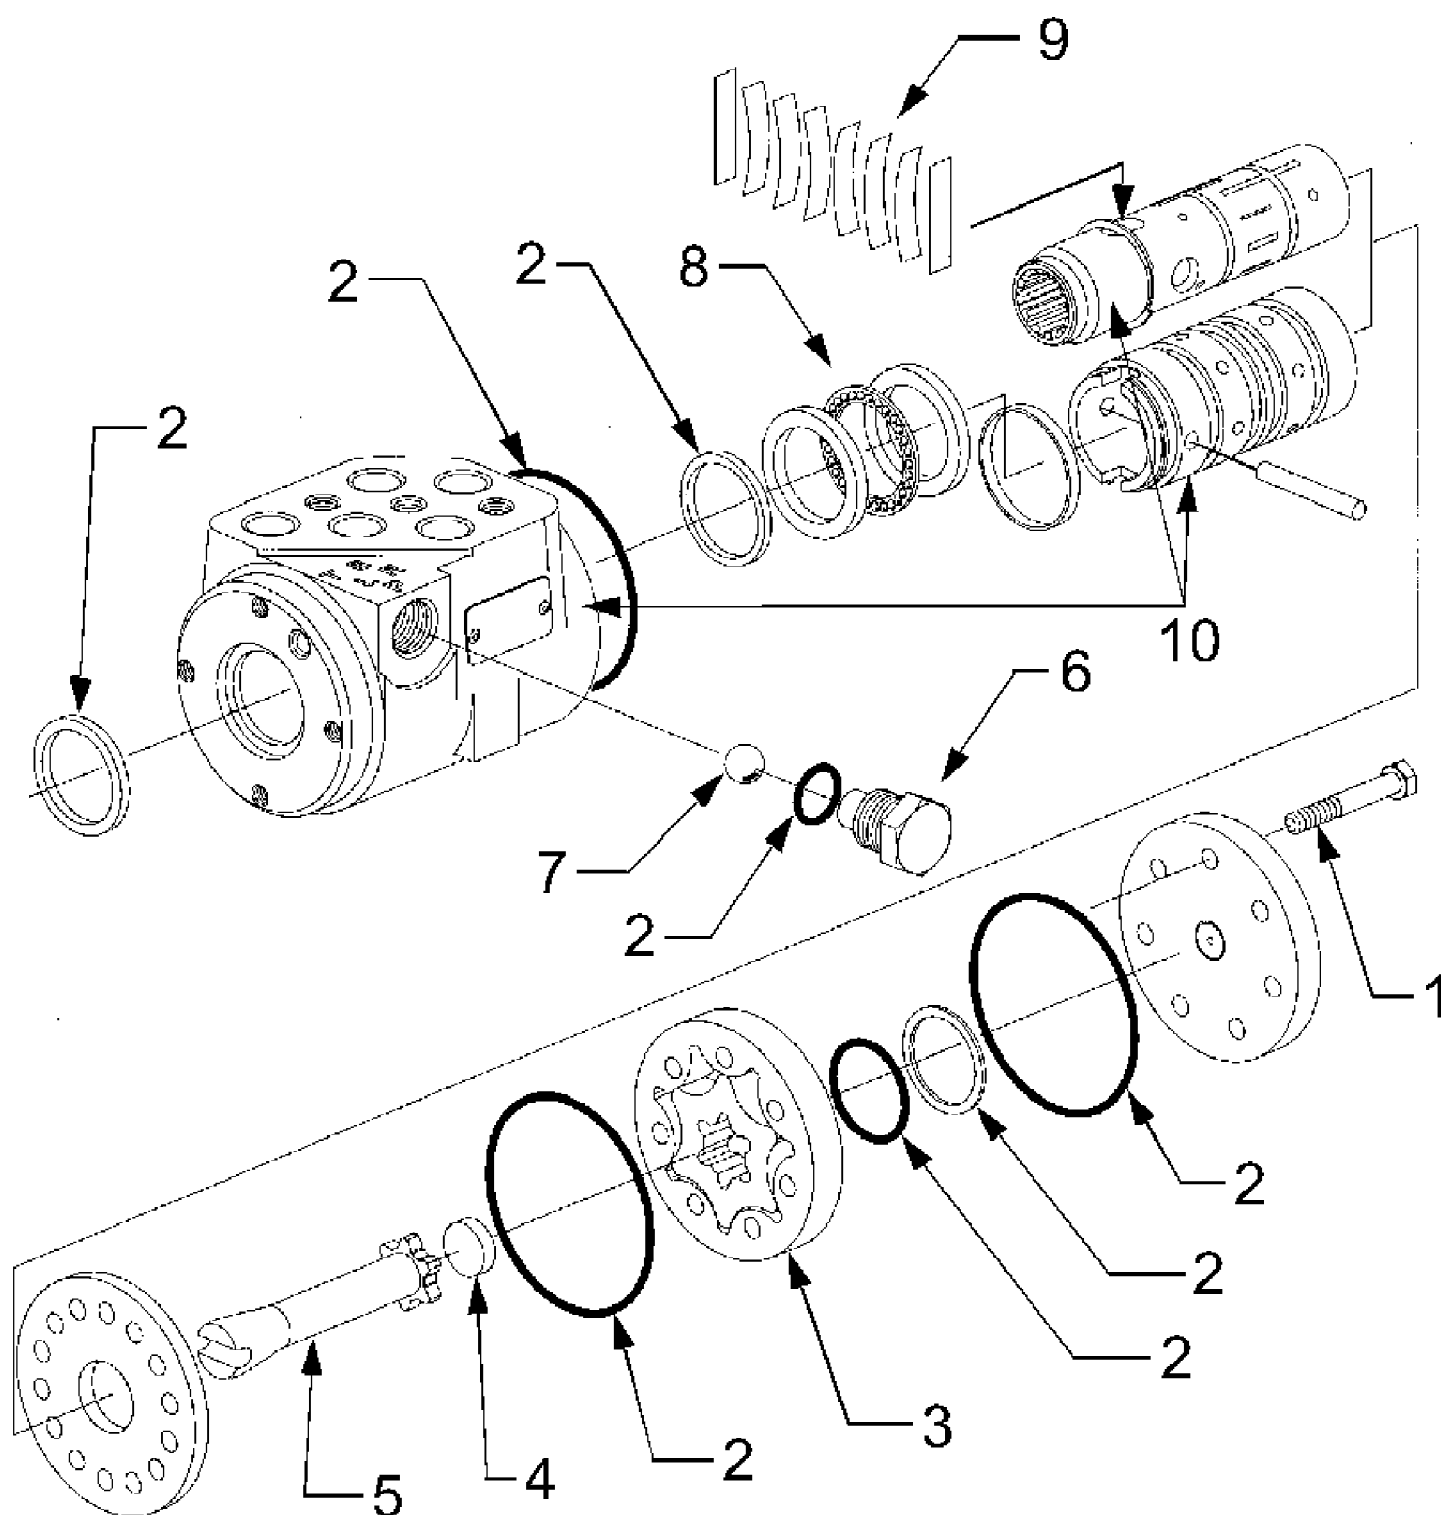


3208 Tractor S/N 1K010G & After
Hydraulic Steering Pump

Page 38 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	ET-14543-002	1		Screw, Hex Cap, 1.57" Lg.
2	ET-64455-000	1		Seal Kit (Includes All Parts Marked Ref. 2
3	ET-22991-003	1	S	Gerotor Assembly
4	ET-22919-005	1		Spacer, .240 Lg.
5	ET-22918-000	1		Drive
6	ET-9199-000	1		Plug, Manual Check
7	ET-285020-140	1		Ball, Manual Check
8	ET-64457-000	1		Bearing Kit
9	ET-64456-000	1		Spring Kit, Centering
10	~N/A	1		Spool, Sleeve and Housing Not Available as Replacement Parts. Order Complete Steering Pump

3208 Tractor S/N 1K010G & After
Hydraulic Valve And Lines


Page 39 of 64

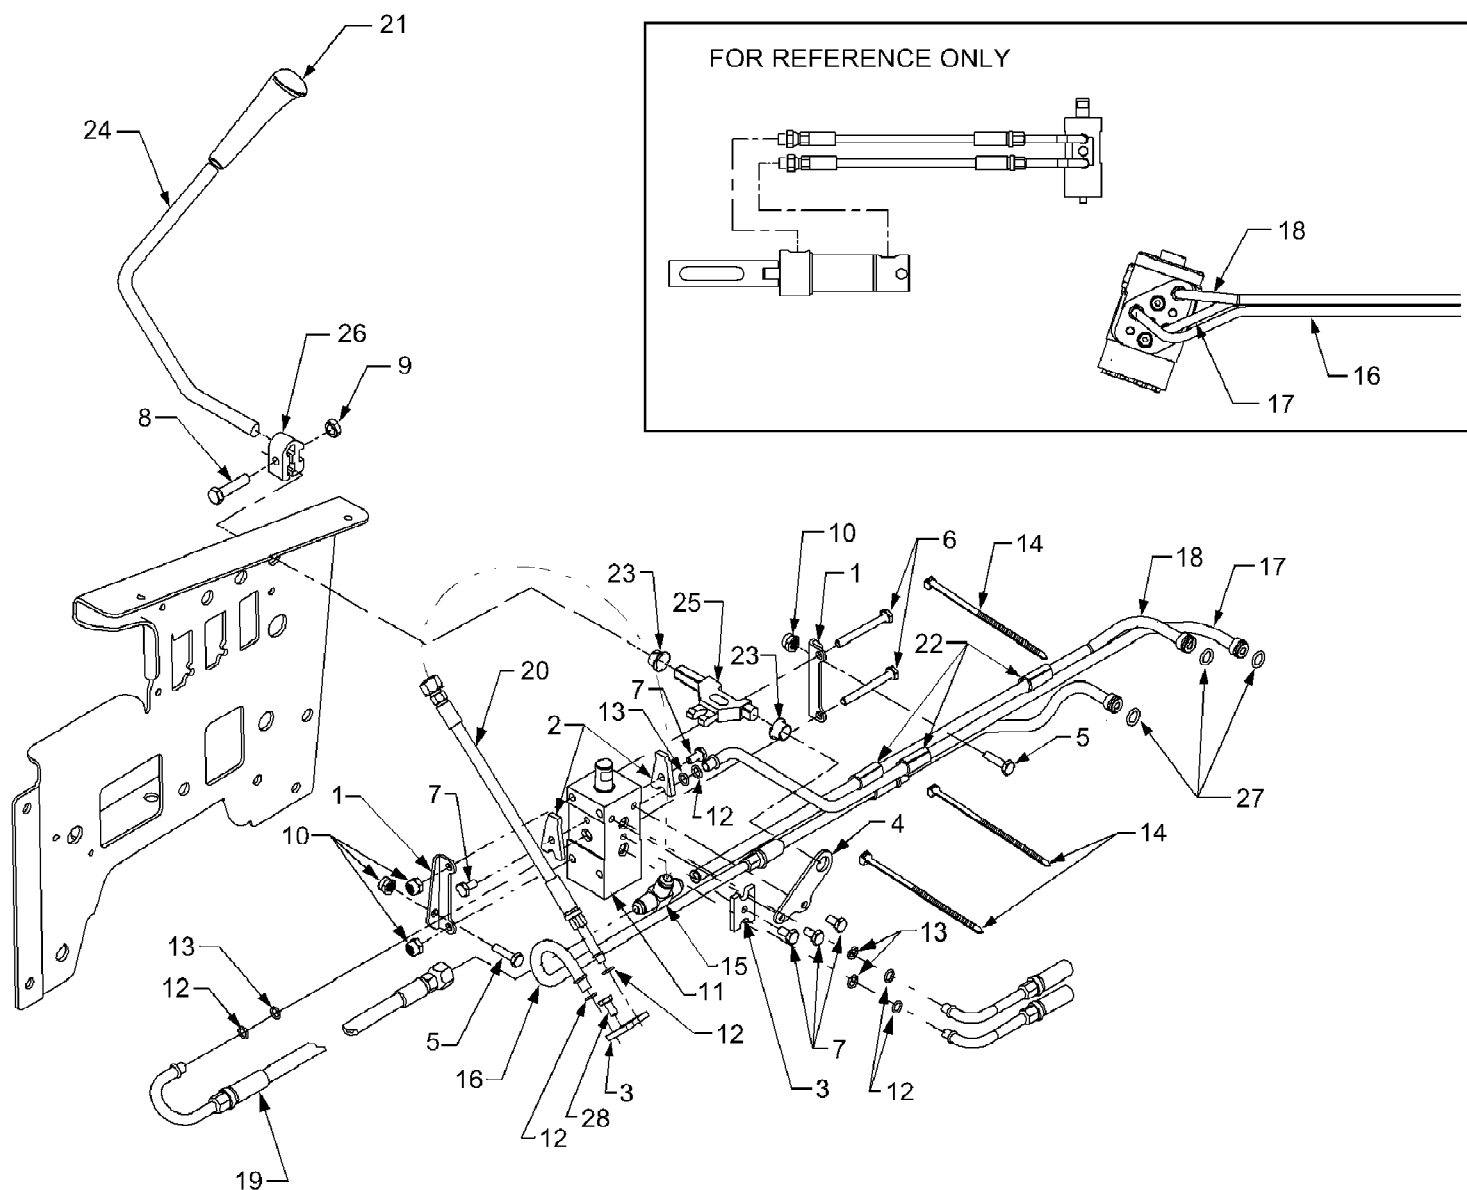

3208 Tractor S/N 1K010G & After
Hydraulic Valve And Lines

Page 40 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	703-1801	2		Bracket, Valve Mounting
2	703-1802	2		Clamp, Side Valve
3	703-1803	2	S	Clamp, Double Valve
4	703-3154	1	S	Bracket, Lift Valve
5	710-0597	2	/P	Screw, Hex Cap 1/4-20 x 1.0 GR5
6	710-0641	2	/P	Screw, Hex Cap 1/4-20 x 2.25 GR5
7	710-3013	5	/P	Screw, Hex Cap 1/4-20 x .50 GR5
8	710-3083	1	/P	Screw, Hex Cap 5/16-18 x 1.375 GR5
9	712-0429	1	S	Nut, Hex Insert Lock, 5/16-18
10	712-3027	4	S	Nut, Hex Flange Lock, 1/4-20
11	717-3452	1		Valve, Hydraulic
12	721-0492	4		O-Ring, Backup
13	721-3021	6	S	O-Ring
14	726-0197	3		Cable Tie
15	727-3056	1		T-Fitting, 9/16-18 Thrd
16	727-3130	1		Tube, Hydraulic (Pump to Strng)
17	727-3131	1		Tube, Hydraulic (Aux. from Strng)
18	727-3162	1		Tube, Hydraulic (Strng Return)
19	727-3160	1		Tube, Hydraulic (Aux Return)
20	727-3161	1	/P	Tube, Hydraulic (Return to Pump)
21	731-3259	1		Knob, Lift
22	735-3007	3	S	Rubber Spacer
23	741-0491	2		Bearing, Nylon Flange
24	747-3349A	1	/P	Handle, Center Lift Valve
25	748-3081A	1	/P	Link, Lift
26	748-3082	1		Clamp, Handle
27	721-0493	3		O-Ring, .426 x .566 x .070
28	710-0751	1	/P	Screw, Hex Cap 1/4-20 x .62 GR5

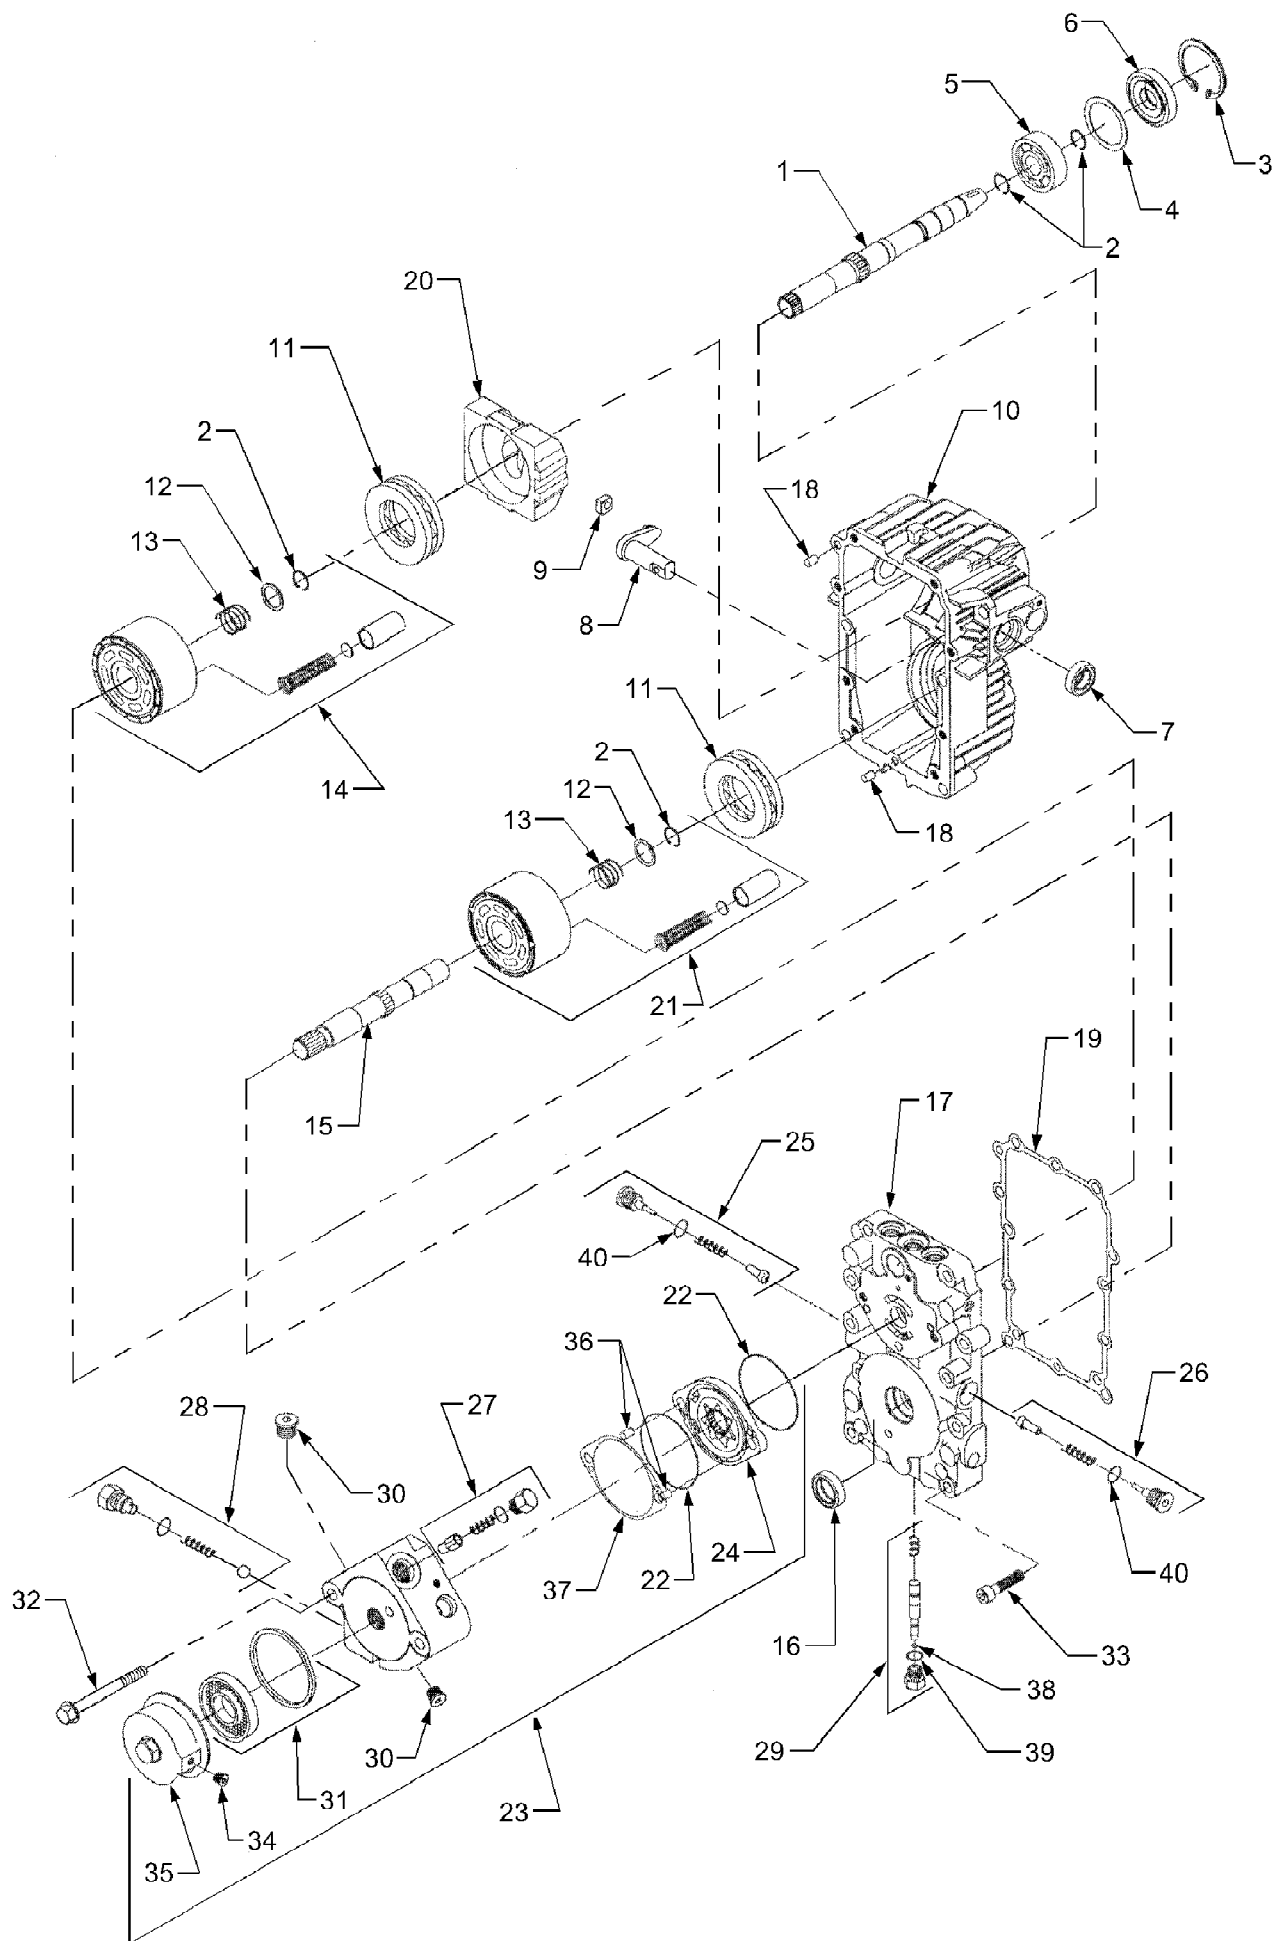


3208 Tractor S/N 1K010G & After
Hydrostatic Transmission

Page 42 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	HG-51206	1	/P	Shaft, Pump
2	HG-2000022	4	/P	Ring, Wire Retaining
3	HG-2000038	1	/P	Ring, Retaining
4	HG-2000023	1	/P	Spacer
5	HG-2000032	1	/P	Bearing, Ball
6	HG-2000036	1	S	Seal, Lip
7	HG-2000037	1	/P	Seal, Lip
8	HG-2000014	1	/P	Arm, Trunnion
9	HG-2000015	1	/P	Guide, Slot
10	HG-2510097	1		Housing Assembly
11	HG-50552	2	/P	Bearing Assembly, Thrust Ball
12	HG-2000024	2	/P	Washer, Block Thrust
13	HG-2000025	2	/P	Spring, Block
14	HG-2510014	1	/P	Kit, Pump Cylinder Block
15	HG-2000007	1	/P	Shaft, Motor
16	~N/A	1		Not Used In This Application
17	HG-2510098	1	/P	Kit, Center Section
18	HG-50641	2		Pin
19	HG-2000061	1	/P	Gasket, Center Section
20	HG-50203	1		Swashplate, Variable
21	HG-2510013	1	/P	Kit, Motor Cylinder Block
22	HG-9004100-1430	2	/P	O-Ring
23	HG-2510083	1	S	Kit, Auxiliary Charge Pump
24	HG-50761	1	/P	Gerotor & Housing Assembly
25	HG-2510050	1	/P	Kit, Check Valve
26	HG-2510034	1	/P	Kit, Check Valve w/.044 Orifice
27	HG-2510081	1		Kit, Check Relief
28	HG-2510082	1		Kit, Auxiliary Relief Valve
29	HG-2510012	1	/P	Kit, Bypass Valve
30	HG-9005110-4400	2		Plug, 7/16-20
31	HG-2510090	1	/P	Kit, Auxiliary Filter
32	HG-50969	2		Screw, Flange Head Cap, M8 x 60
33	HG-9007314-0808	8	/P	Screw, Socket Head Cap
34	HG-9005110-3100	1		Plug, 5/16-24
35	HG-50994	1	S	Cover, Filter
36	HG-50408	2	/P	Pin
37	HG-2000044	1	/P	Shim, Charge Pump
38	~N/A	1		O-Ring Order Seal Kit P/N HG-2510010
39	~N/A	1		O-Ring Order Seal Kit P/N HG-2510010
40	~N/A	1		O-Ring Order Seal Kit P/N HG-2510010
	HG-2510010	1	/P	Kit, Overhaul Seal (Includes Ref. Nos. 2, 3, 4, 6, 7, 19, 22, 38, 39 & 40)

3208 Tractor S/N 1K010G & After
Lower Power Steering


Page 43 of 64

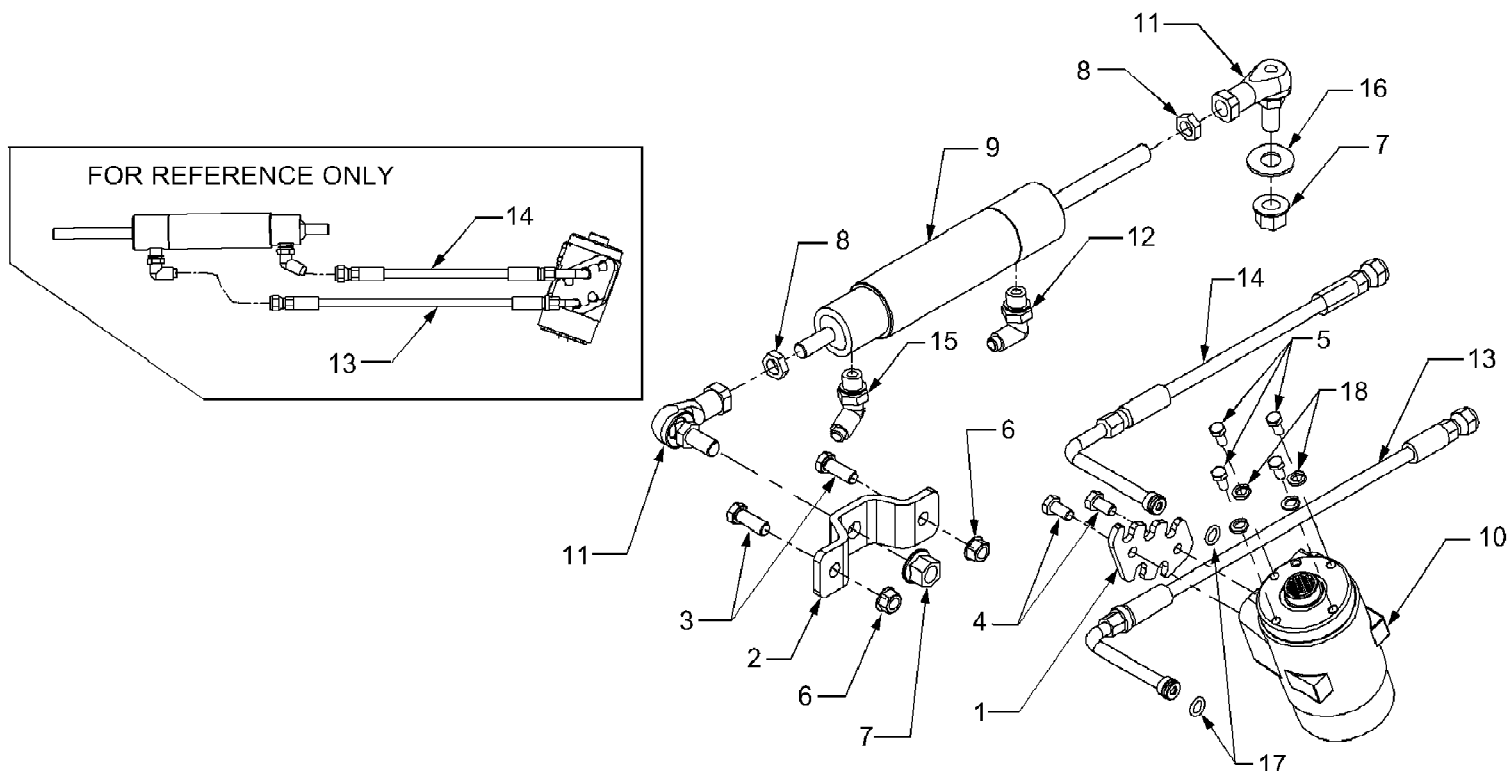

3208 Tractor S/N 1K010G & After
Lower Power Steering

Page 44 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	703-3015-0716	1		Plate, Steering Pump Port
2	703-3189-0716	1	/P	Bracket, Cylinder Mounting
3	710-0514	2	/P	Screw, Hex Cap 3/8-16 x 1.0 GR5
4	710-3138	2	/P	Screw, Hex Cap M8-1.25 x 16MM GR5
5	710-3140	4		Screw, Hex Cap, M6 x 14MM
6	712-0431	2	S	Nut, Hex Flange Lock, 3/8-16
7	712-3103	2		Nut, Hex Flange Lock, M12 x 1.75
8	712-3104	2		Nut, Hex, M12 x 1.75 RH
9	717-3424	1		Cylinder, Steering
10	717-3442	1	S	Pump, Hydraulic Steering
11	723-0462	2		Ball Joint, 12MM x 1.75 RH
12	727-3012	1	/P	Fitting, 90 Degree Elbow
13	727-3126	1		Hose, Front Steering
14	727-3127	1		Hose, Rear Steering
15	727-3159	1		Fitting, 45 Degree
16	736-3084	1	/P	Washer, Flat, .51 x 1.12 x .060
17	721-0493	2		O-Ring, .426 x .566 x .070
18	736-0329	4	S	Washer, Lock, 1/4"

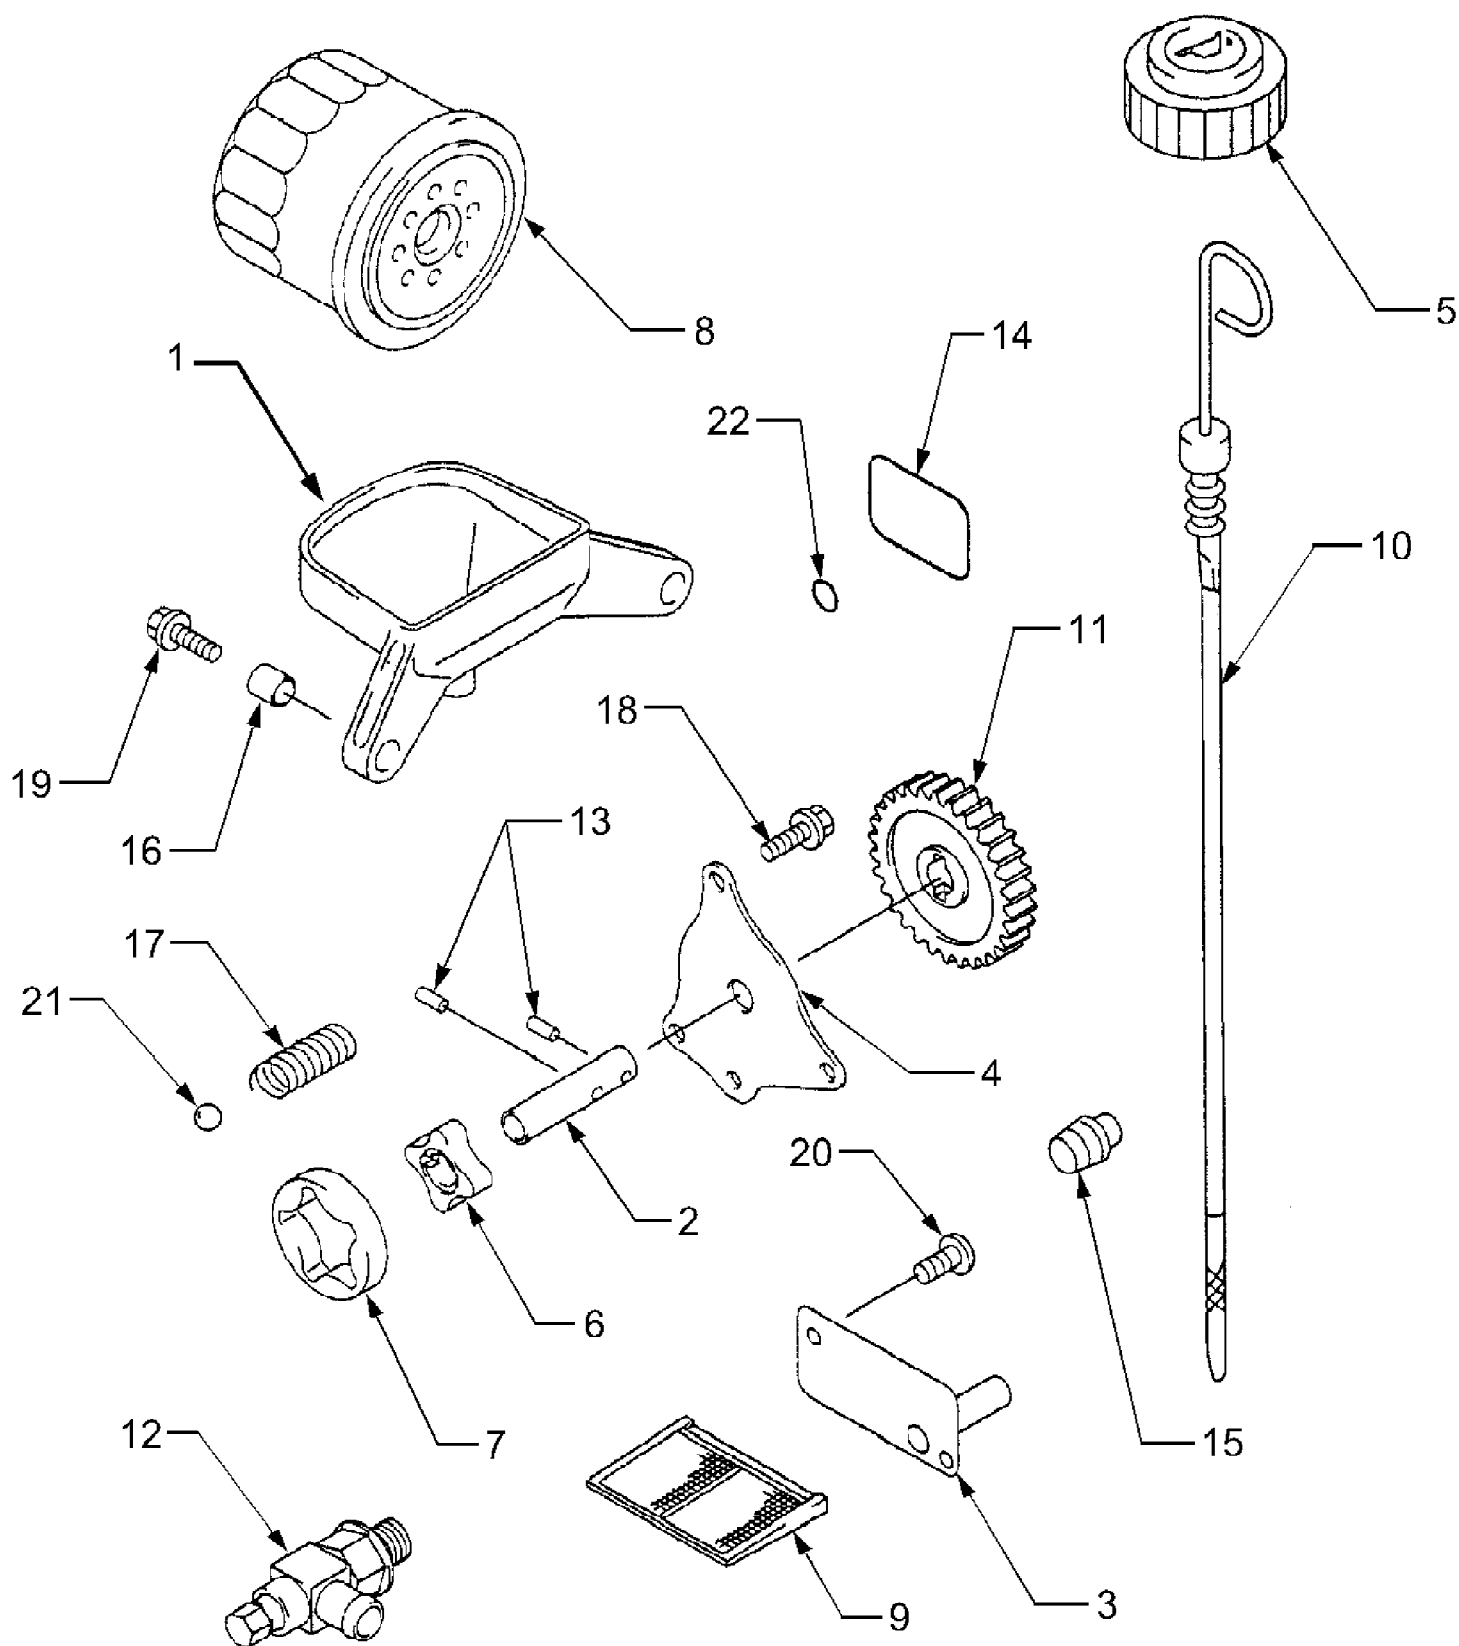


3208 Tractor S/N 1K010G & After
Lubrication

Page 46 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	KM-13045-2051	1		Receiver, Oil
2	KM-13107-2099	1		Shaft, Oil Pump
3	KM-13183-2419	1		Plate
4	KM-14024-2113	1		Cover, Oil Pump
5	KM-16115-2090	1		Cap, Oil Filler
6	KM-16154-2053	1		Rotor, Pump Inner
7	KM-16154-2054	1		Rotor, Pump Outer
8	KM-49065-2071	1	S	Filter, Oil
9	KM-49065-2072	1		Screen, Oil Filter
10	KM-52005-2120	1	/P	Dipstick, Engine Oil
11	KM-59051-2114	1		Gear, Spur
12	KM-92005-2059	1	S	Fitting, Oil Drain
13	KM-92042-014	2		Pin
14	KM-92055-2086	1		O-Ring
15	KM-92066-2235	1		Plug
16	KM-92143-2187	2		Collar, 8.2 x 10 x 10
17	KM-92144-2053	1	S	Spring, Relief Valve
18	KM-130B0614	3		Bolt, Flanged
19	KM-130B0820	2		Bolt, Flanged
20	KM-214B0512	2		Screw, Pan
21	KM-600A1300	1		Ball, Steel
22	KM-670B2011	1		O-Ring

3208 Tractor S/N 1K010G & After
Pedestal And Connections


Page 47 of 64

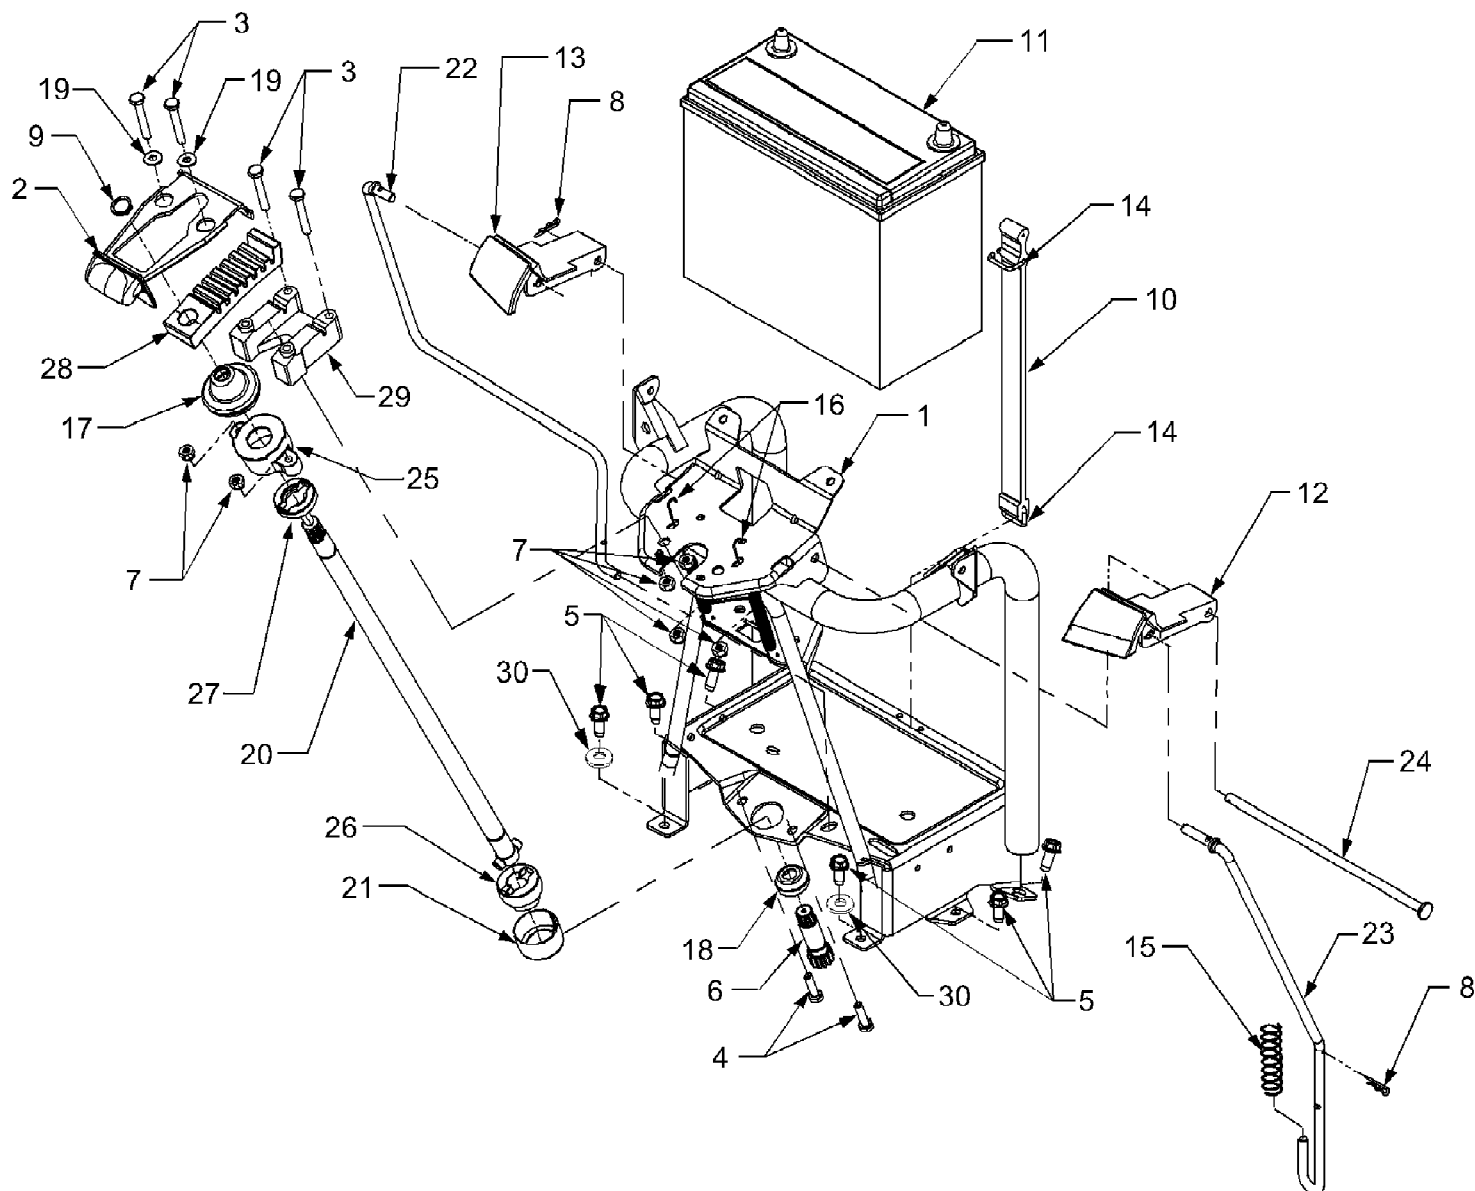

3208 Tractor S/N 1K010G & After
Pedestal And Connections

Page 48 of 64


Ref #	Part Number	Qty	S/P/F	Description
1	603-0386A-0637	1	/P	Pedestal Assembly
2	603-0587	1		Handle, Tilt
	777I20861	1		Graphic, Tilt Steering Handle
3	710-0136	4	/P	Screw, Hex Cap 1/4-20 x 1.75 GR5
4	710-0597	2	/P	Screw, Hex Cap 1/4-20 x 1.0 GR5
5	710-1260A	6	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
6	711-1180	1		Shaft, Lower Steering
7	712-0324	6	/P	Nut, Hex Insert Lock, 1/4-20
8	714-0104	2	S	Pin, Internal Cotter
9	716-0115	1	S	Ring, Retaining, .56 Dia Shaft
10	723-0467	1		Strap, Battery (Includes Ref No. 14)
11	725-3255	1	S	Battery
12	731-3225	1		Lever, Park Brake
13	731-3226	1		Lever, Cruise
14	732-0696	2		Hook, Wire Rectangular
15	732-0870	1	S	Spring, Compression, .676 x 2.57
16	732-0932	2		Spring, Extension
17	735-0258	1		Boot, Tilt Wheel Coupling
18	735-0269	1		Boot, Shaft Cover
19	736-3020	2	S	Washer, Flat, .271 x .63 x .065
20	738-3164	1		Shaft, Upper Steering
21	741-3085	1		Bearing, Sleeve, 1.44 x 1.5 x .812
22	747-3327	1		Rod, Cruise Control
23	747-3328	1		Rod, Parking Brake
24	747-3354	1		Rod, Cruise/Brake Pivot
25	748-3067	1		Housing, Tilt Wheel Coupling
26	748-3068	1		Coupling Half, Bottom
27	748-3069	1		Coupling Half, Top
28	748-3083	1		Index, Tilt Steering
29	748-3084A	1	/P	Block, Tilt Steering
30	736-0275	2	S	Washer, Flat, .344 x .688 x .065

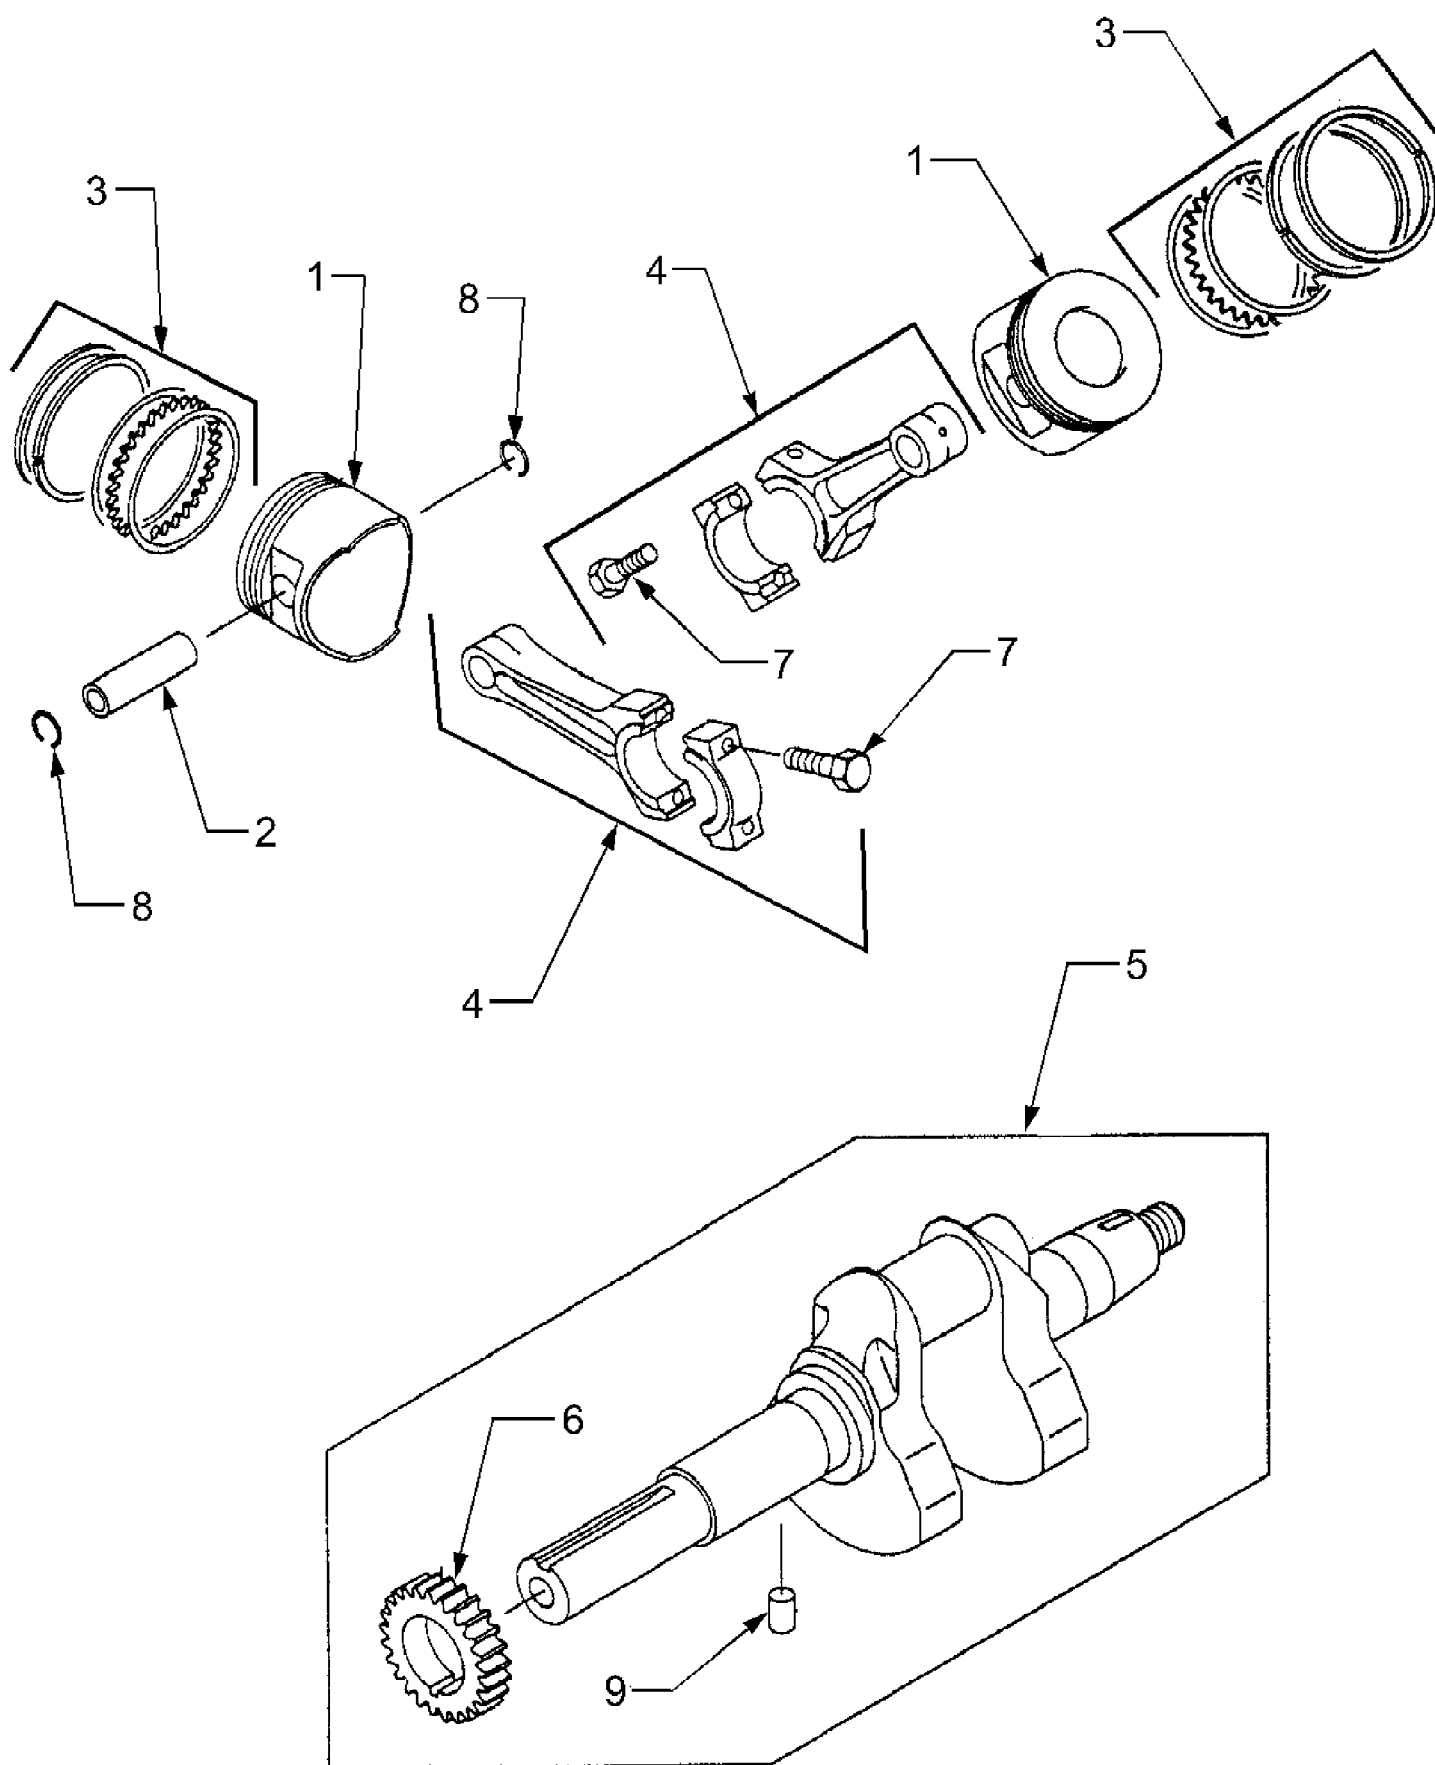

3208 Tractor S/N 1K010G & After
Piston And Crankshaft

Page 50 of 64


Ref #	Part Number	Qty	S/P/F	Description
1	KM-13001-2136	2		Piston, Std.
	KM-13029-2108	2		Piston, .25 O.S.
	KM-13029-2109	2		Piston, .50 O.S.
2	KM-13002-1013	2		Pin, Piston
3	KM-13008-6025	2		Ring Set, Std.
	KM-13025-6007	2		Ring Set, .25 O.S.
	KM-13025-6008	2		Ring Set, .50 O.S.
4	KM-13251-6022	2	S	Rod Assembly, Connecting
	KM-13251-6026	2		Rod Assembly, Connecting .50 U.S.
5	KM-49119-2130	1		Crankshaft
6	KM-59051-2112	1		Gear, Spur
7	KM-92002-2053	4		Bolt, Connecting Rod
8	KM-92036-021	4		Retaining Ring, Piston Pin
9	KM-551A0408	2		Pin, Dowel

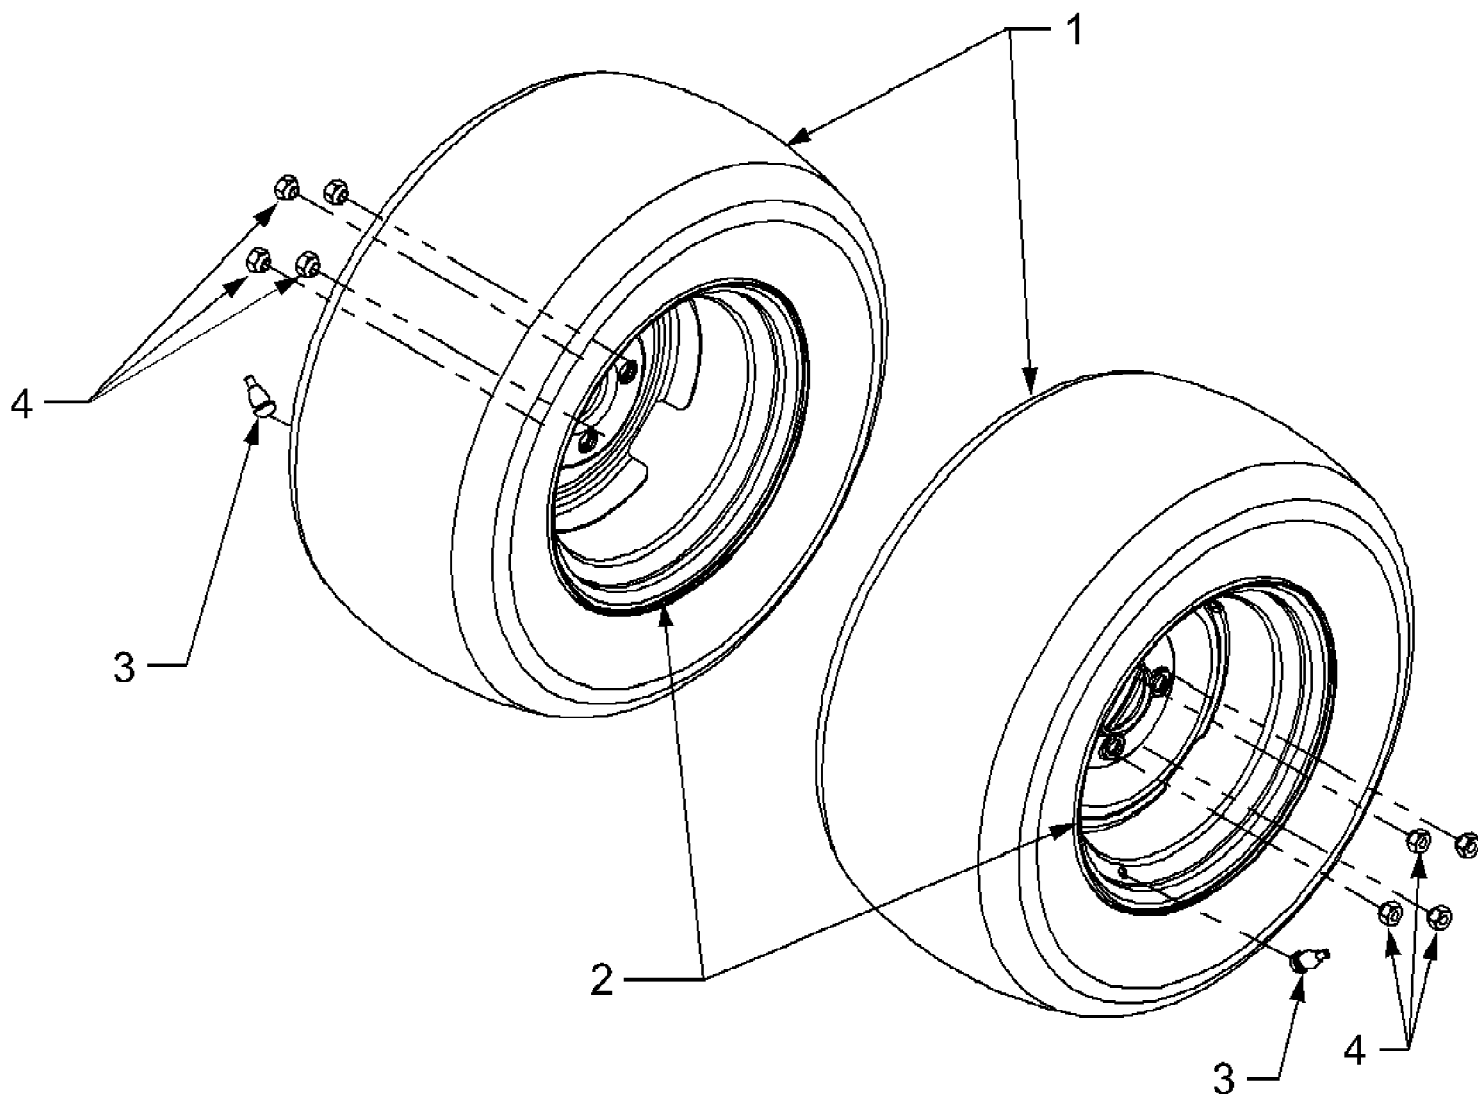

3208 Tractor S/N 1K010G & After
Rear Wheels

Page 52 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	734-3194	2	S	Tire, Turf, 24 x 10.5 - 12
2	634-3053-0499	2		Rim Assembly, Wheel
3	734-0255	2	S	Valve, Tubeless Air
4	712-3050	8	/P	Lug Nut, 7/16-14

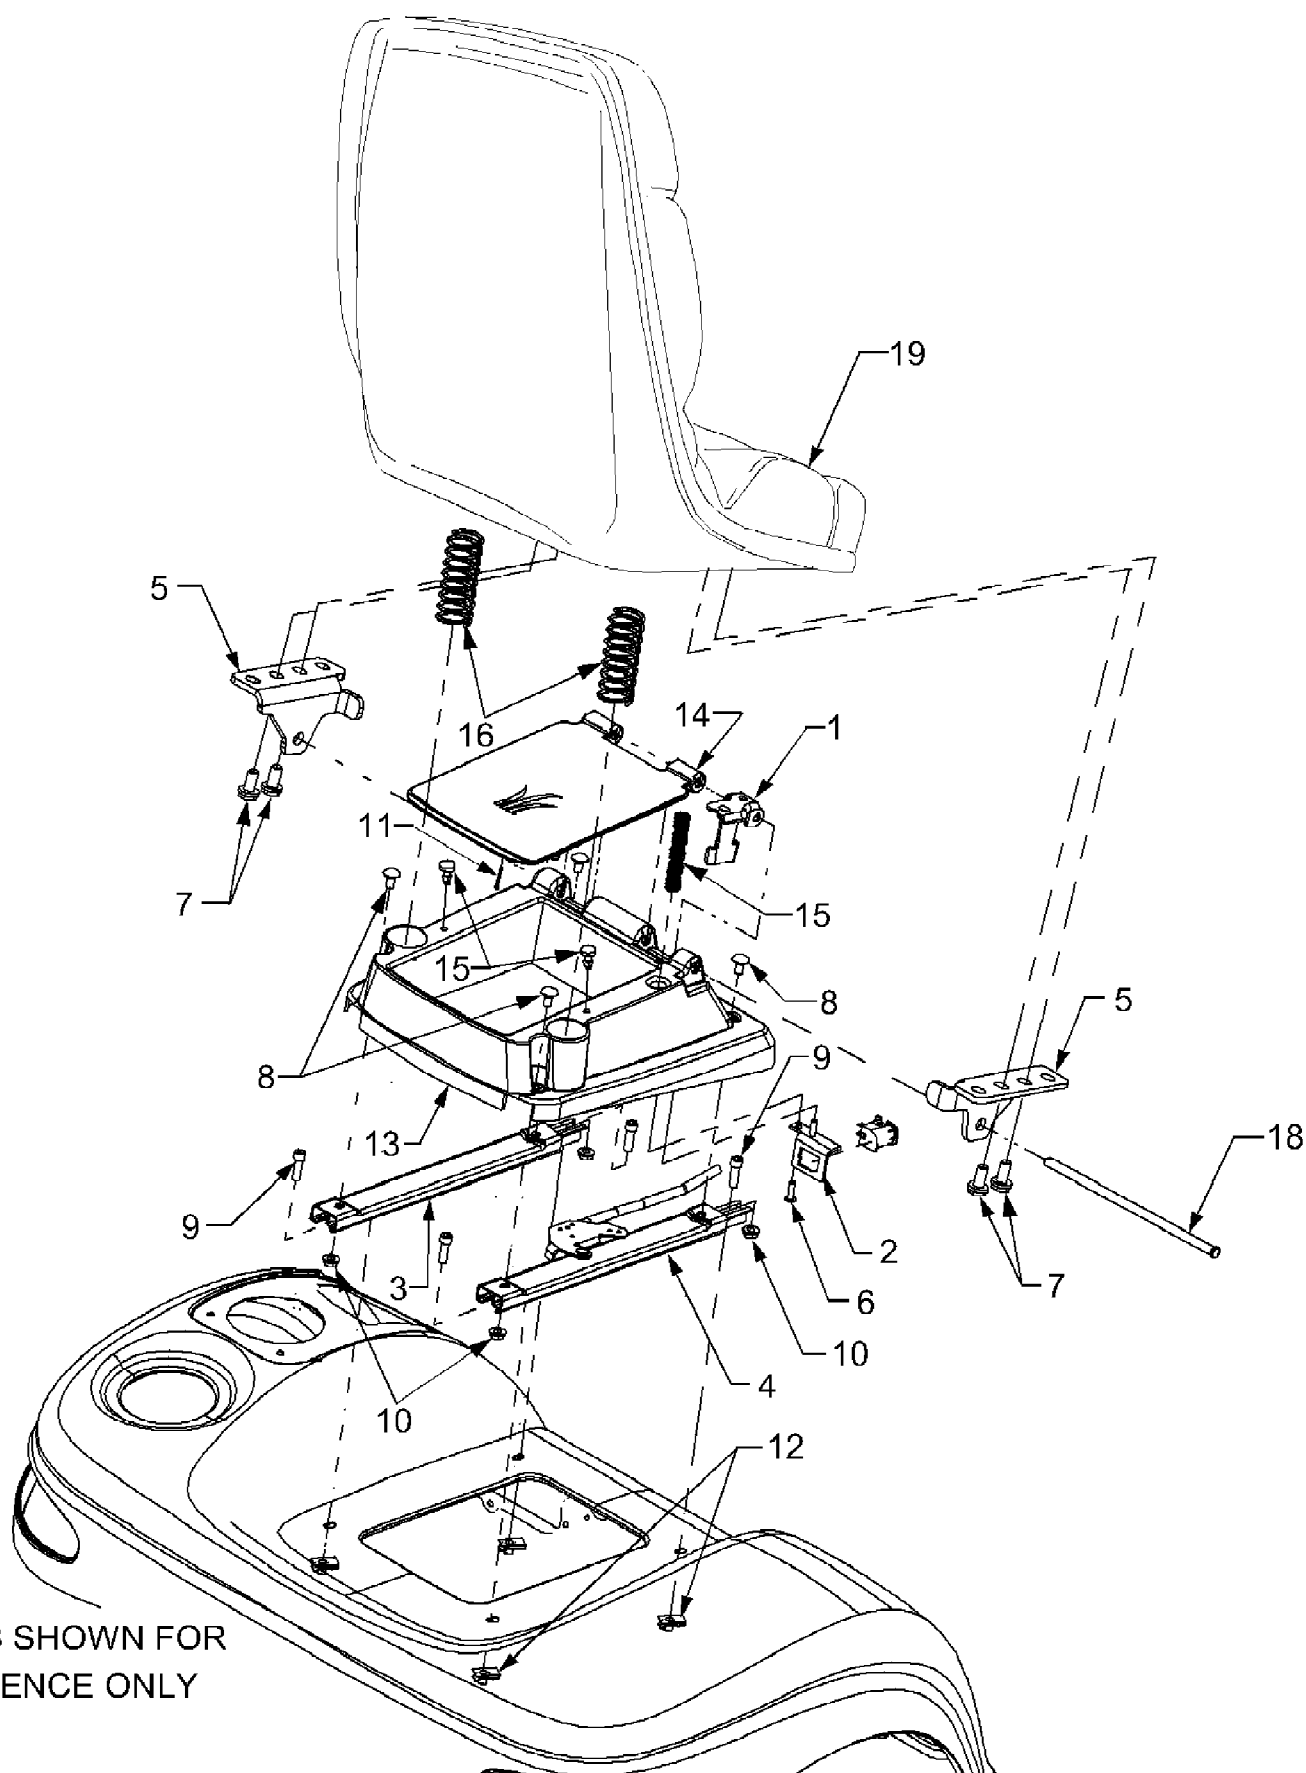


703-2978 SHOWN FOR
REFERENCE ONLY

3208 Tractor S/N 1K010G & After
Seat Assembly

Page 54 of 64


Ref #	Part Number	Qty	S/P/F	Description
1	703-3166A-0637	1	/P	Bracket, Seat Switch
2	703-3173-0637	1	/P	Bracket, Switch Mounting
3	703-3208	1		Track, Seat, w/o Latch
4	703-3431	1	/P	Track, Seat, w/Latch
5	703-3888	2	S	Bracket, Seat
6	710-0748	2	/P	Screw, Pan Torx Hd., #12-14 x .5
7	710-0759	4		Screw, Hex Wash. Hd 5/16-18 x .625
8	710-1636	4		Carriage Bolt, 5/16-18 x .62
9	710-1669	4		Screw, Pan Torx Hd 5/16-18 x 1.0
10	712-3004A	4	/P	Nut, Hex Flange Lock, 5/16-18
11	714-0507	1	S	Pin, Cotter, 3/32 x .75
12	726-0211	4	S	Speed Nut, U-Type, 5/16-18
13	731-3240A	1	S	Base, Seat
14	731-3244	1		Lid, Tlbox
15	732-1001	1		Spring, Compression
16	732-1163	2		Spring, Compression
?17	735-0271	2	S	Bumper
18	747-3357A	1	/P	Rod, Seat Pivot
19	757-3015	1		Seat, High Back
	777D04541	1		Graphic, Reflector
	777D01782	1	/P	Graphic, USA

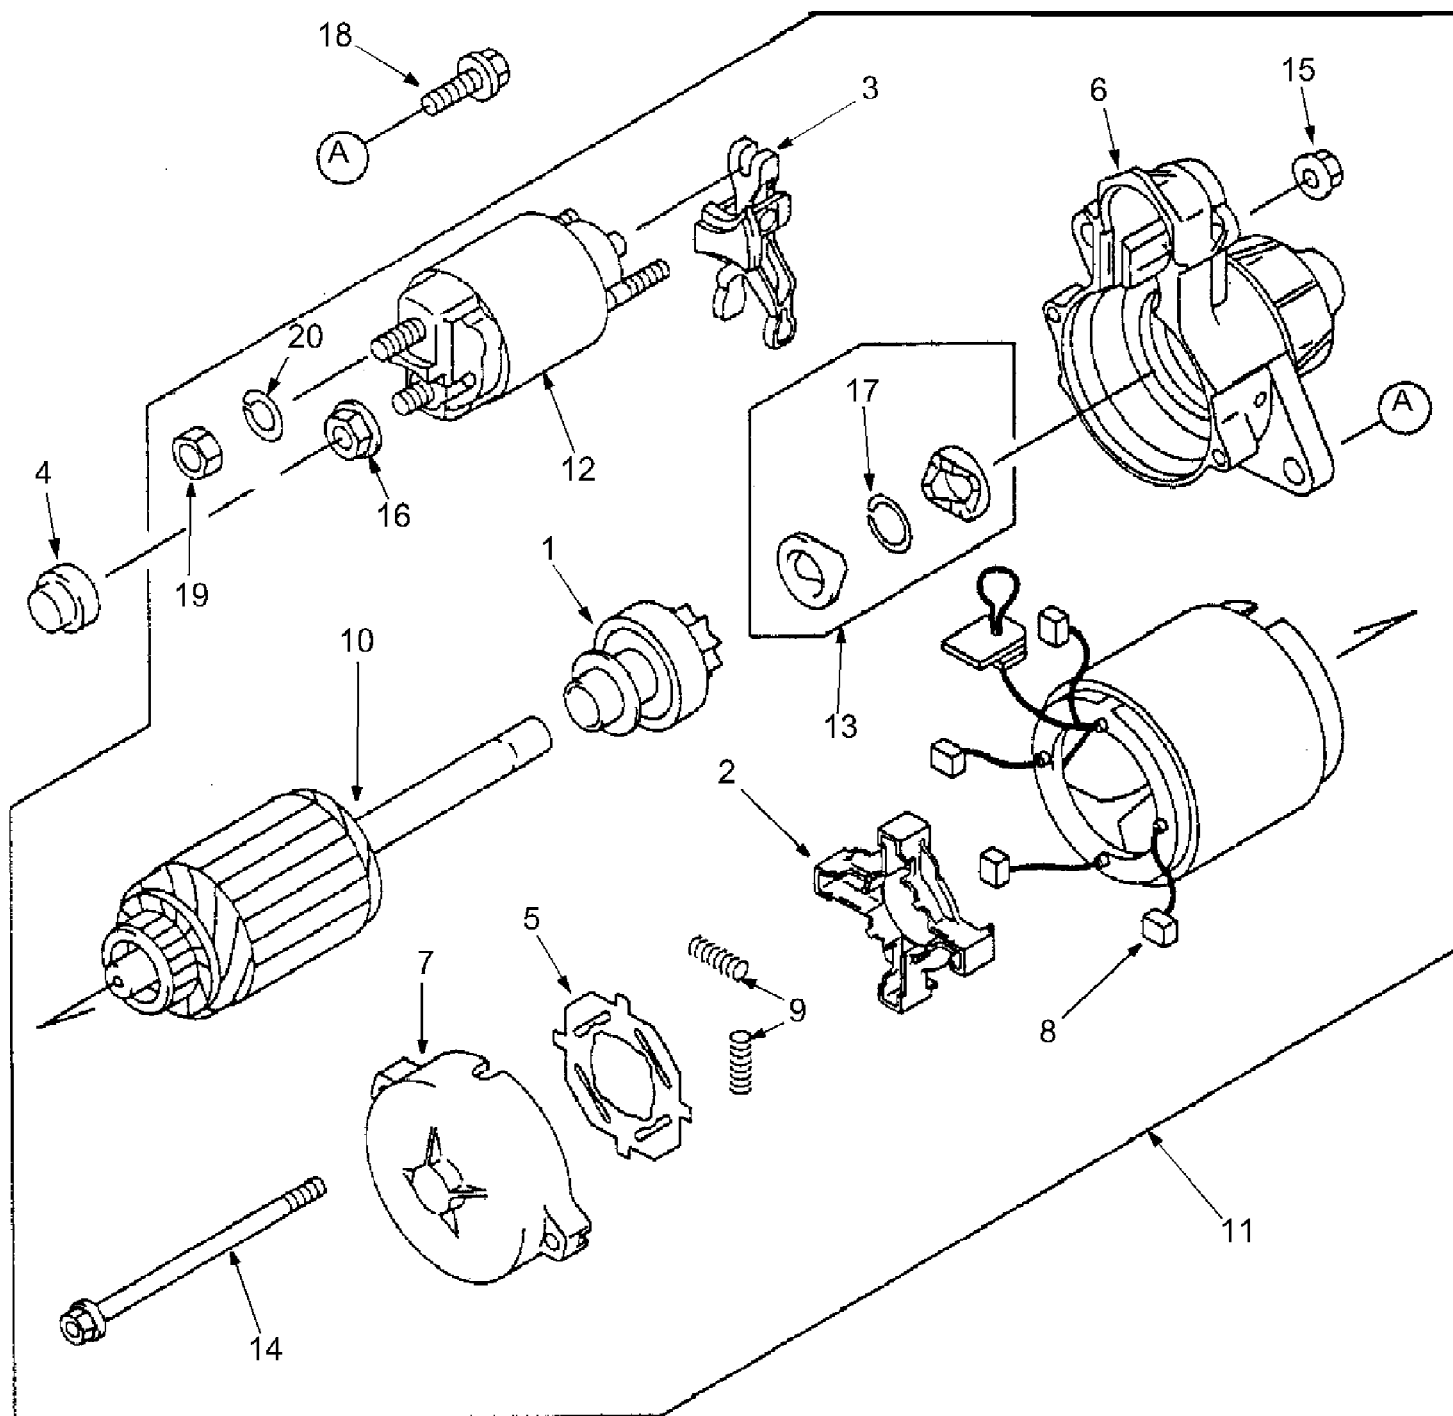

3208 Tractor S/N 1K010G & After
Starter

Page 56 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	KM-13081-2108	1		Clutch Ass'y
2	KM-13091-2068	1		Holder, Brush
3	KM-13168-2131	1		Lever, Shift
4	KM-14024-2205	1		Cover,
5	KM-16073-2098	1		Insulator
6	KM-16146-2186	1		Cone, Nose
7	KM-16146-2187	1		Cap, End
8	KM-21039-2059	4		Brush
9	KM-21040-2052	4		Spring, Brush
10	KM-21080-2054	1		Armature
11	KM-21163-2101	1	S	Starter, Complete
12	KM-27010-2122	1		Switch, Solenoid
13	KM-32085-2097	1		Stopper (Includes Ref No.17)
14	KM-92002-2277	2		Bolt, Thru
15	KM-92015-2146	2		Nut
16	KM-92015-2147	2		Nut
17	KM-92033-2081	1		Ring, Snap
18	KM-130B0830	2		Bolt, Flanged
19	KM-317B0800	2		Nut, Hex 8 MM
20	KM-461F0800	2	S	Washer, Spring, 8MM

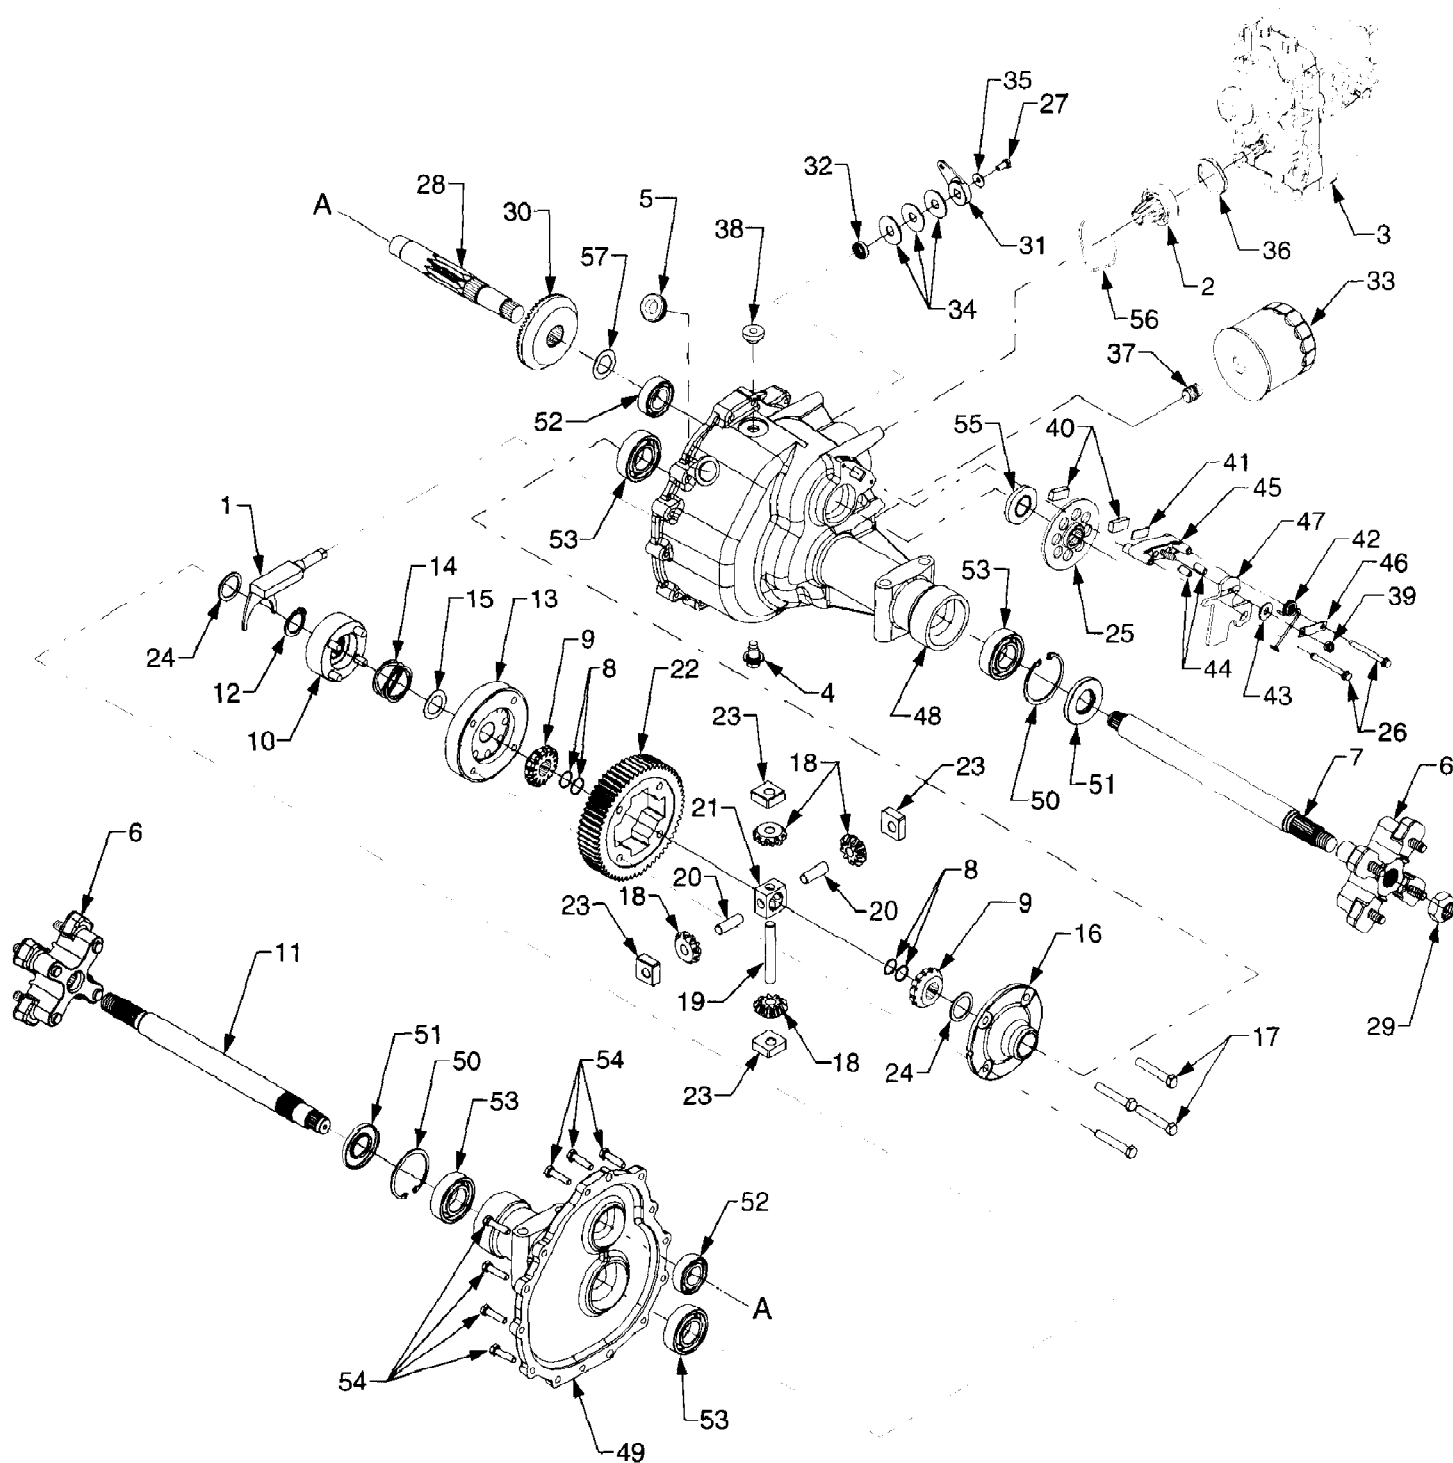

3208 Tractor S/N 1K010G & After
Transmission - Differential

Page 58 of 64

Ref #	Part Number	Qty	S/P/F	Description
	618-3235	1	S	Transmission Assembly Complete DOES NOT include Ref. Nos. 2, 3, 6, 29, 33, 36, 37 and 56.
1	611-3024	1		Shaft, Differential Actuator
2	617-3001	1		Gear Assembly, Pinion 13T
	741-3037	1	S	Bearing, Ball
3	618-3214	1	S	Hydrostatic Transmission Assy. For components see separate parts breakdown.
4	710-1633	1		Plug, Drain, M14 x 1.5 x .827
5	735-0277A	1		Grommet, Rubber
6	618-3210A	2	/P	Hub Assembly, Wheel
7	711-1308	1	S	Axle Shaft, 15.08 Long - RH
8	716-0172	4	S	Retaining Ring
9	717-1119	2		Gear, Spur, 14T
10	618-3155A	1	/P	Collar Assembly, Diff. Lock
11	711-1309	1		Axle Shaft, 15.08 Long - LH
12	716-3018	1		Retaining Ring
13	718-3099B	1	/P	Housing, Diff. Lock
14	732-0856	1		Spring, Compression
15	736-0615	1		Washer, Thrust, 1.007 x 1.542 x .03
16	619-3086	1		Housing, Diff. Cover
17	710-1254	4	/P	Hex Cap Screw, 3/8-24 x 2.25 GR8
18	717-1120	4		Gear, Differential 10T
19	717-1173	1		Shaft, Cross, .5 x 3.485
20	717-1178	2		Shaft, Cross, Special
21	717-1180	1		Differential Pinion Block
22	717-3466	1		Gear, Spur 60T
23	718-3101	4		Block, Thrust Miter
24	736-0558	2		Washer, Flat, 1.187 x 1.56 x .062
25	761-0215	1		Disc, Brake
26	710-1206	2	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x 2.375
27	710-0751	1	/P	Hex Cap Screw, 1/4-20 x .62 GR5
28	711-1385A	1	/P	Shaft, Output 9T
29	712-0682	2		Nut, Lock, 7/8-14
30	717-3449	1		Gear, Bevel 54T
31	718-3089	1		Arm, Diff. Lock Actuator
32	721-0393	1		Seal, Oil
33	723-3014	1	S	Filter, Oil
34	736-0208	3	S	Washer, Flat, .51 x 1.5 x .07
35	736-0270	1	/P	Washer, Belleville, .265 x .75 x .062
36	736-0619	1		Washer, Spring
37	737-3022	1	S	Fitting, Filter Nipple
38	735-0279	1		Grommet
39	712-0273	1	S	Nut, Hex Insert Lock, 5/16-24
40	717-0678	2	S	Pad, Brake
41	717-0682	1	S	Plate, Puck
42	732-0925	1		Spring, Torsion
43	736-0371	1	/P	Washer, Flat, .343 x .88 x .062
44	741-0343	2	S	Pin, Brake Actuator
45	761-0207A	1	/P	Yoke, Brake
46	761-0208	1		Bracket, Brake Anti-Rotation
47	761-3074	1		Arm, Brake Actuator


3208 Tractor S/N 1K010G & After
Transmission - Differential

Page 59 of 64

Ref #	Part Number	Qty	S/P/F	Description
48	619-3066	1	S	Housing, RH
49	619-3067	1		Housing LH
50	716-0180	2		Retaining Ring
51	721-3020A	2	S	Seal, Oil
52	741-3114	2		Bearing, Ball
53	741-3033A	4	S	Bearing, Ball
54	710-0573	14		Screw, Hex Cap Locking 5/16-18 x 1.25 GR5
55	721-0523	1		Seal, Oil 1.0 ID
56	721-0519	1		Seal, Gland O-Ring
57	736-0615	1		Washer, Flat, 1.0 x 1.56 x .030
	759-3958	1		Sealant, Loctite Black, 5.3 oz. Tube
	737-3120	5.5	/P	Drive System Fluid Plus - Quart
	737-3121	AR	/P	Drive System Fluid Plus - Gallon

3208 Tractor S/N 1K010G & After
Transmission Mounting And Neutral Linkage

Page 60 of 64

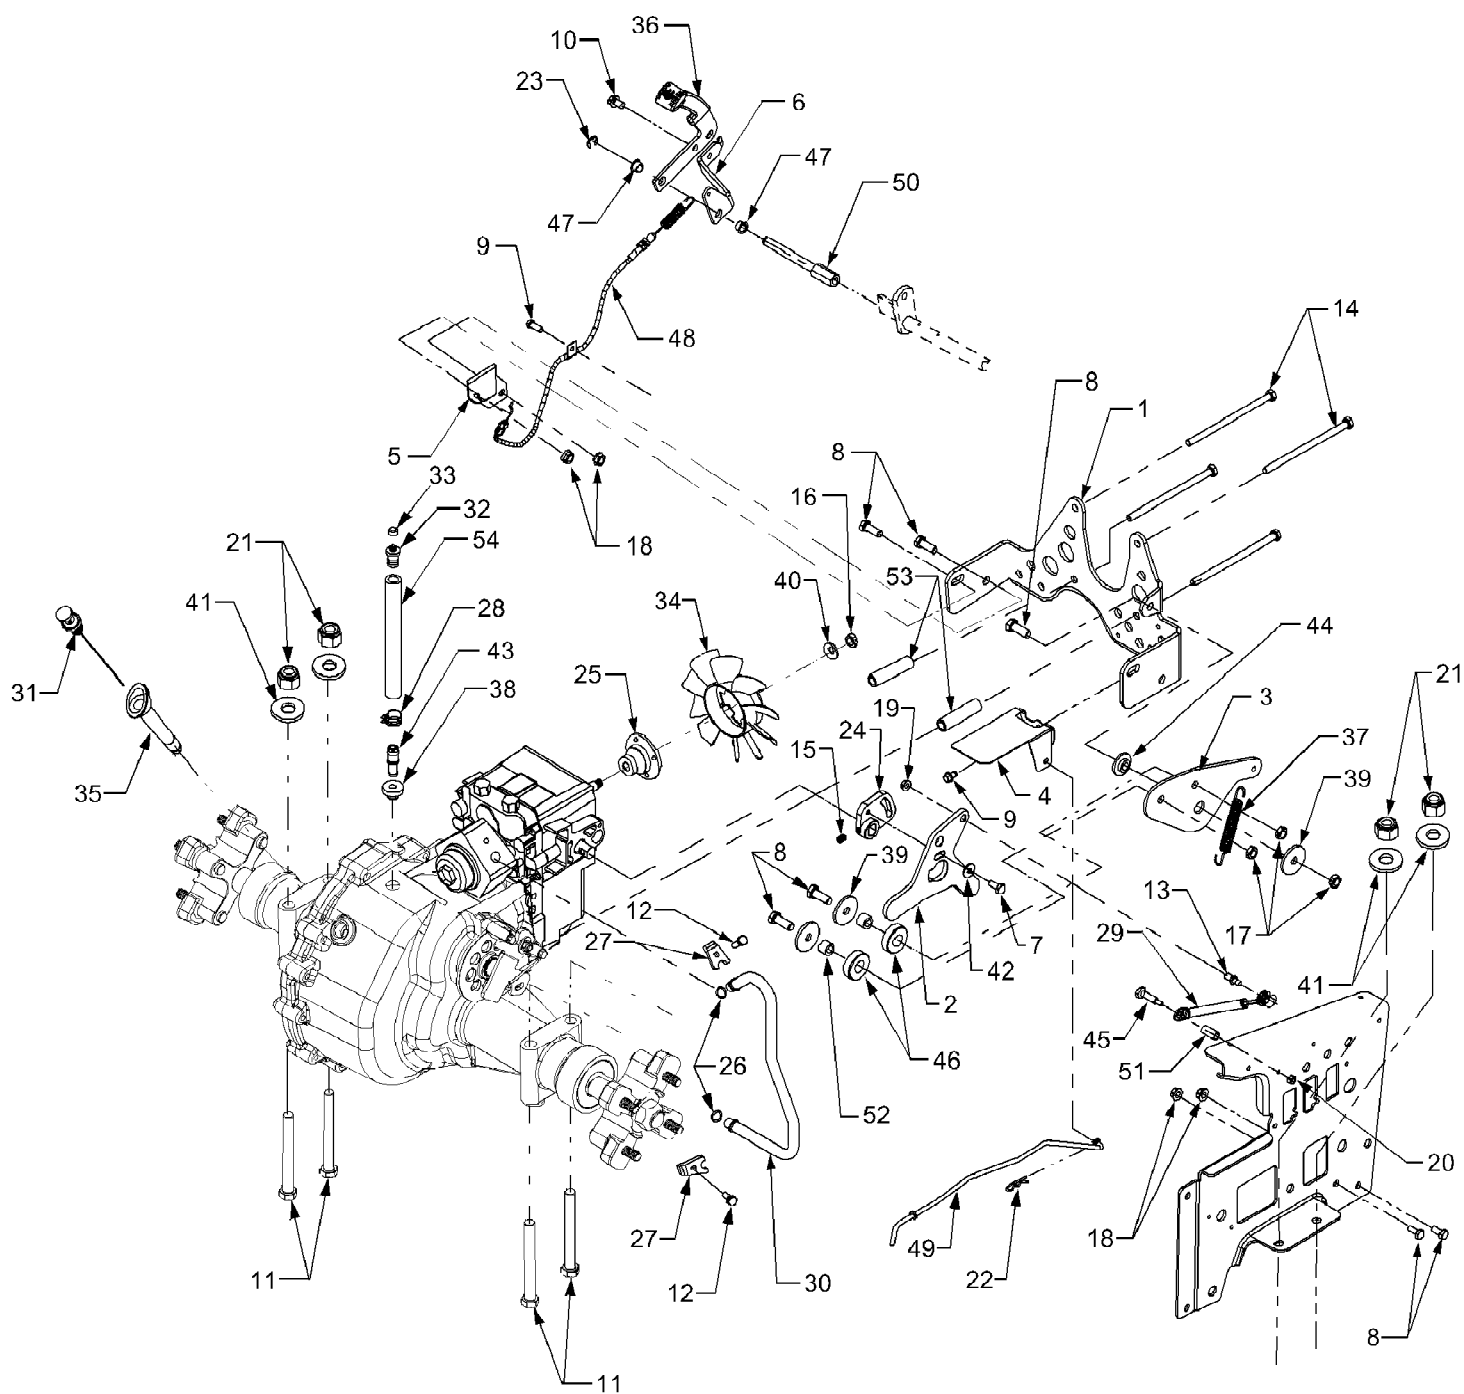

3208 Tractor S/N 1K010G & After
Transmission Mounting And Neutral Linkage


Page 61 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	603-0698	1		Bracket, Torque
2	703-3478	1		Plate, Hydro Neutral Return
3	703-3477	1		Link, Neutral Return Bearing
4	703-3187A	1	S	Spring Plate, Hydro Bypass
5	703-3175	1		Bracket, Cable Retainer
6	703-3183	1		Bracket, Pedal Brace
7	710-0433	1	/P	Screw, Hex Cap, 1/4-20 x .625 GR5 Lock
8	710-0514	7	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
9	710-0599	2	/P	Screw, Hex Wash. Hd. Tapp, 1/4-20 x .5
10	710-0623	1	/P	Screw, Hex Wash. Hd. Tapp, 3/8-16 x .75
11	710-0465	4		Screw, Hex Cap, 1/2-20 x 4.5 GR5
12	710-3015	2	/P	Screw, Hex Cap, 1/4-20 x .75 GR5
13	710-3170	1		Ball Screw, 5/16-18 x .56
14	710-1506	4		Screw, Hex Wash. Hd. Tapp 5/16-18 x 5.5 GR5
15	710-3242	1		Screw, Set, 5/16 x .5
16	712-3059	1	/P	Nut, Hex Top Lock Jam, 1/2-20
17	712-0266	3	S	Nut, Hex Ctr. Lock Jam, 3/8-16
18	712-0431	4	S	Nut, Hex Flange Lock, 3/8-16
19	712-3004A	1	/P	Nut, Hex Flange Lock, 5/16-18
20	712-3006	1	/P	Nut, Hex, 1/4-20
21	712-3058	4	S	Nut, Hex Insert Lock, 1/2-20
22	714-0104	1	S	Pin, Internal Cotter
23	716-0104	1	S	E-Ring, .5 Dia. Shaft
24	718-3097	1		Arm, Hydro
25	748-3093	1		Adapter, Pump
26	721-0459	2		O-Ring, .426 ID x .566 OD x .070
27	726-0295	2		Clamp, Tube
28	726-0324	1	S	Clamp, Hose
29	727-3090	1	/P	Cylinder, Damper
30	727-3139	1		Tube, Hydro Pickup
31	727-3148	1		Dipstick, Transmission
32	731-1480	1	/P	Plastic Vent
33	731-1481	1		Vent Cap
34	731-3297	1		Fan, Pump
35	731-3245	1		Holder, Dipstick
36	731-3250	1		Pedal, Diff Lock
37	732-0429A	1	S	Spring, Extension
38	735-0279	1		Grommet.
39	736-0227	3	S	Washer, Flat, .390 x 1.5 x .1
40	736-0253	1	S	Washer, Bell, .5 x 1.0 x .05
41	736-3019	4		Washer, Flat, .531 x 1.062 x .134
42	736-3090	1	/P	Washer, Flat, .26 x .72 x .06
43	737-3092	1		Fitting, Tube
44	738-0347	1	S	Spacer, Shoulder
45	738-0572	1	S	Shoulder Bolt
46	741-0155	2	S	Bearing, Ball
47	741-0491	2		Bearing, Nylon Flange
48	746-3081	1	S	Cable, Diff Lock
49	747-3424	1		Rod, Pump Bypass
50	747-3366	1		Shaft, Diff Lock
51	750-0434	1	/P	Spacer, .375 x .5 x 1.02

3208 Tractor S/N 1K010G & After
Transmission Mounting And Neutral Linkage

Page 62 of 64

Ref #	Part Number	Qty	S/P/F	Description
52	750-0497	2		Spacer, .375 x .624 x .445
53	750-3212	2		Spacer, Hydro, .3223 x .60 x 2.44
54	751-0588-8	8 in.		Fuel Line.

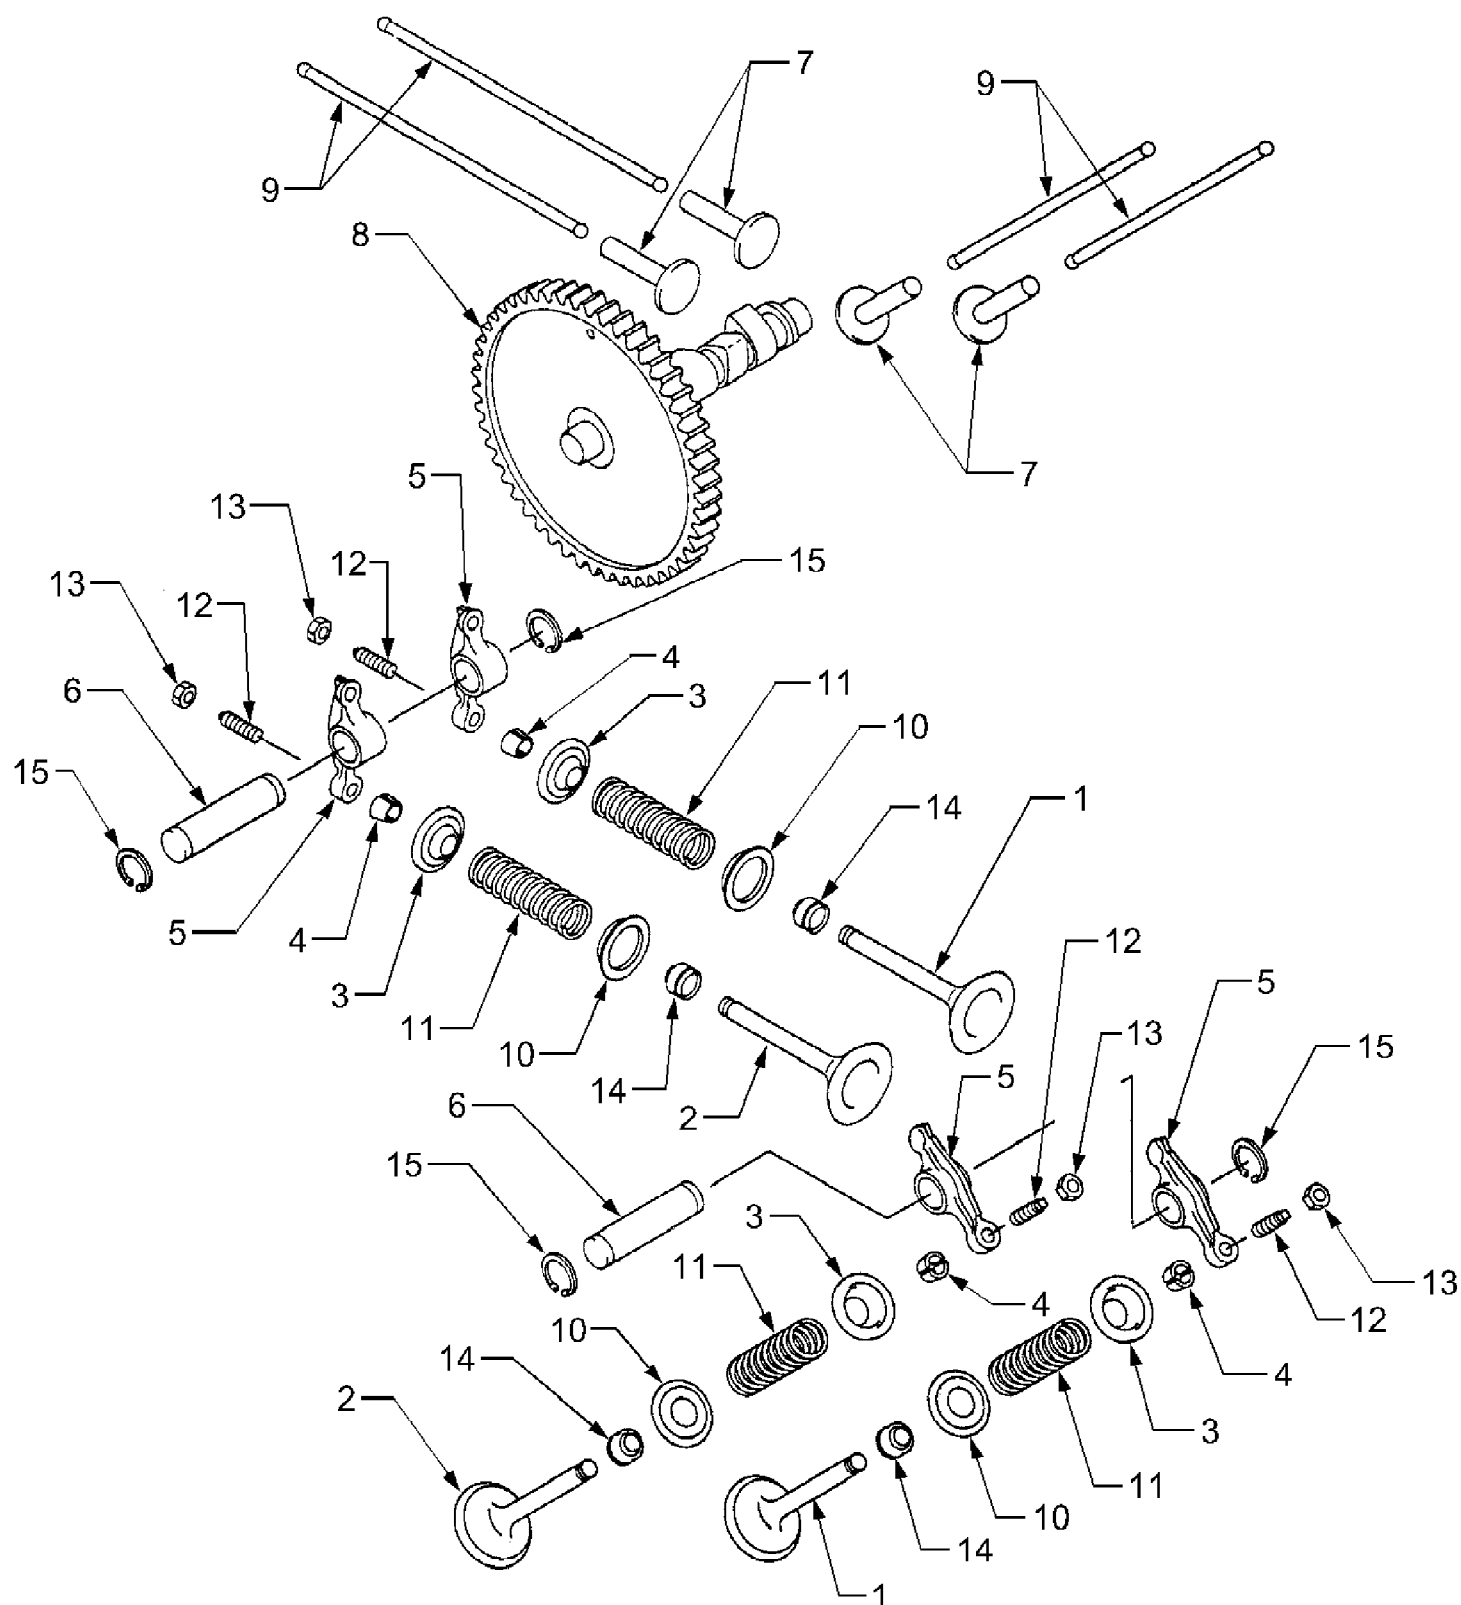

3208 Tractor S/N 1K010G & After
Valves And Camshaft

Page 64 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	KM-12004-2104	2	S	Valve, Intake
2	KM-12005-2093	2		Valve, Exhaust
3	KM-12009-2067	4		Retainer, Valve Spring
4	KM-12011-2056	8		Collet
5	KM-12016-2056	4		Arm, Rocker
6	KM-12020-2059	2		Shaft, Rocker
7	KM-12032-2064	4		Tappet
8	KM-12044-2239	1	/P	Camshaft Assembly
9	KM-13116-2057	4		Rod, Push
10	KM-39108-2057	4		Retainer, Spring
11	KM-49078-2082	4		Spring, Valve
12	KM-92009-1109	4		Screw, Valve Adjust
13	KM-92015-1137	4		Nut, Valve Adjust Lock
14	KM-92049-2109	4		Seal, Oil
15	KM-480J1200	4		Circlip