


5234DL Tractor
4WD Axle Assembly (Part 1) 1B065G & Before

Page 1 of 115

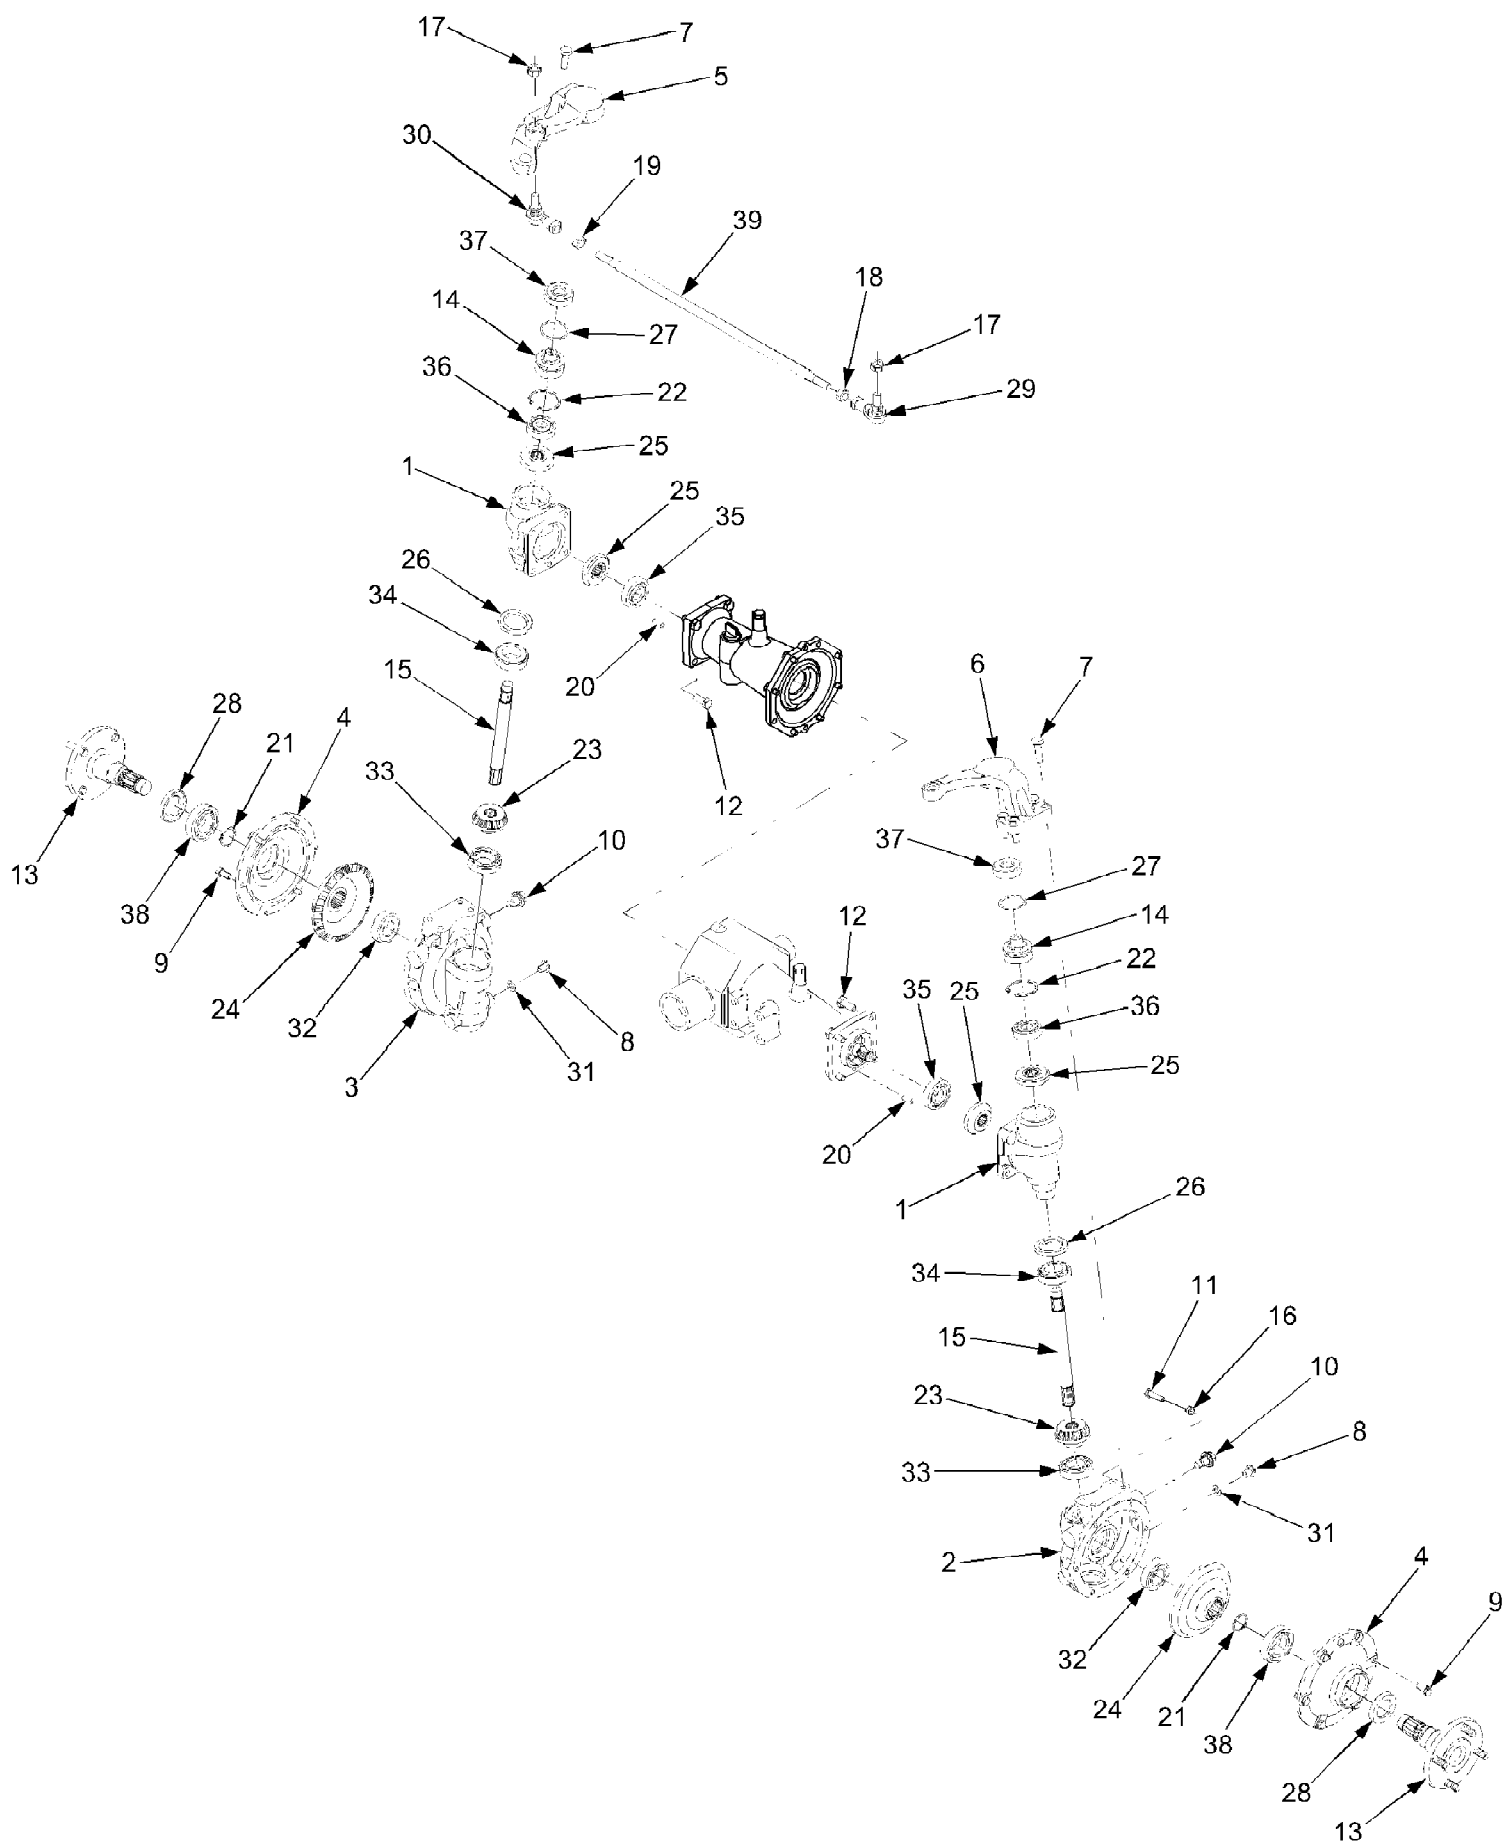


5234DL Tractor
4WD Axle Assembly (Part 1) 1B065G & Before

Page 2 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	619-04017	2	S	Housing, Kingpin
	759-3958	AR		Sealant, Loctite(R) Black, 5.3 oz.
2	619-04020	1	S	Housing, Axle Drop, RH
3	619-04021	1	S	Housing, Axle Drop, LH
4	619-04024	2	S	Cover, Axle
5	619-04027A	1	S	Arm, Steering, LH
6	619-04028	1	S	Arm, Steering, RH
7	710-1313	8	/P	Screw, Hex Cap, M10-1.5 x 35 GR8.8
8	710-1323	2		Plug, Hex, 3/8-16 x .5
9	710-1681	12	/P	Screw, Hex Cap, M8-1.25 x 20 GR8.8
10	710-1633	2		Plug, Screw, M14-1.5 x .827
11	710-1683	2	/P	Screw, Hex Cap, M8-1.25 x 30
12	710-3208	8		Screw, Hex Cap, M10-1.5 x 25
13	711-04060	2	S	Axle, Flange
	710-0852	8	/P	Stud, Rib Neck, 7/16-14 x 1.6
14	711-04104	2	S	Shaft, Stub
15	711-04106	2	S	Shaft, Kingpin
16	712-0690	2	/P	Nut, Hex, M8-1.25
17	712-3103	2		Nut, Hex Flange Lock, M12-1.75
18	712-3104	1		Nut, Hex, M12-1.75 RH Thrd.
19	712-3105	1		Nut, Hex, M12-1.75 LH Thrd
20	715-04014	2	S	Pin, Dowel, 8mm x 20mm
21	716-02001	2		Ring, Retaining
22	716-0393	2		Ring, Retaining
23	717-04040	2	S	Gear, Bevel, 13T
24	717-04041	2	S	Gear, Bevel, 34T
25	717-04045	4	S	Gear, Bevel, 14T
26	721-04057	2	S	Seal, Oil, 38mm x 55mm x 7mm
27	721-04066	2	S	O-Ring, 40mm x 3mm
28	721-0497	2		Seal, Oil, 35mm x 55mm x 8mm
29	723-0462	1		Ball Joint, 12-1.75 RH
30	723-0463	1		Ball Joint, 12-1.75 LH
31	736-0567	2	/P	Washer, Flat, .39 x .75 x .062
32	741-0301	2	S	Bearing, Ball
33	741-04034	2	S	Bearing, Ball
34	741-04043	2	S	Bearing, Tapered Roller w/ Race
35	741-04044	2	S	Bearing, Ball
36	741-04068	2	S	Bearing, Ball
37	741-0919	2	S	Bearing, Ball
38	741-3033A	2	S	Bearing, Ball
39	747-04134	1	S	Rod, Tie, M12-1.75

5234DL Tractor
4WD Axle Assembly (Part 1) 1B075G & After

Page 3 of 115

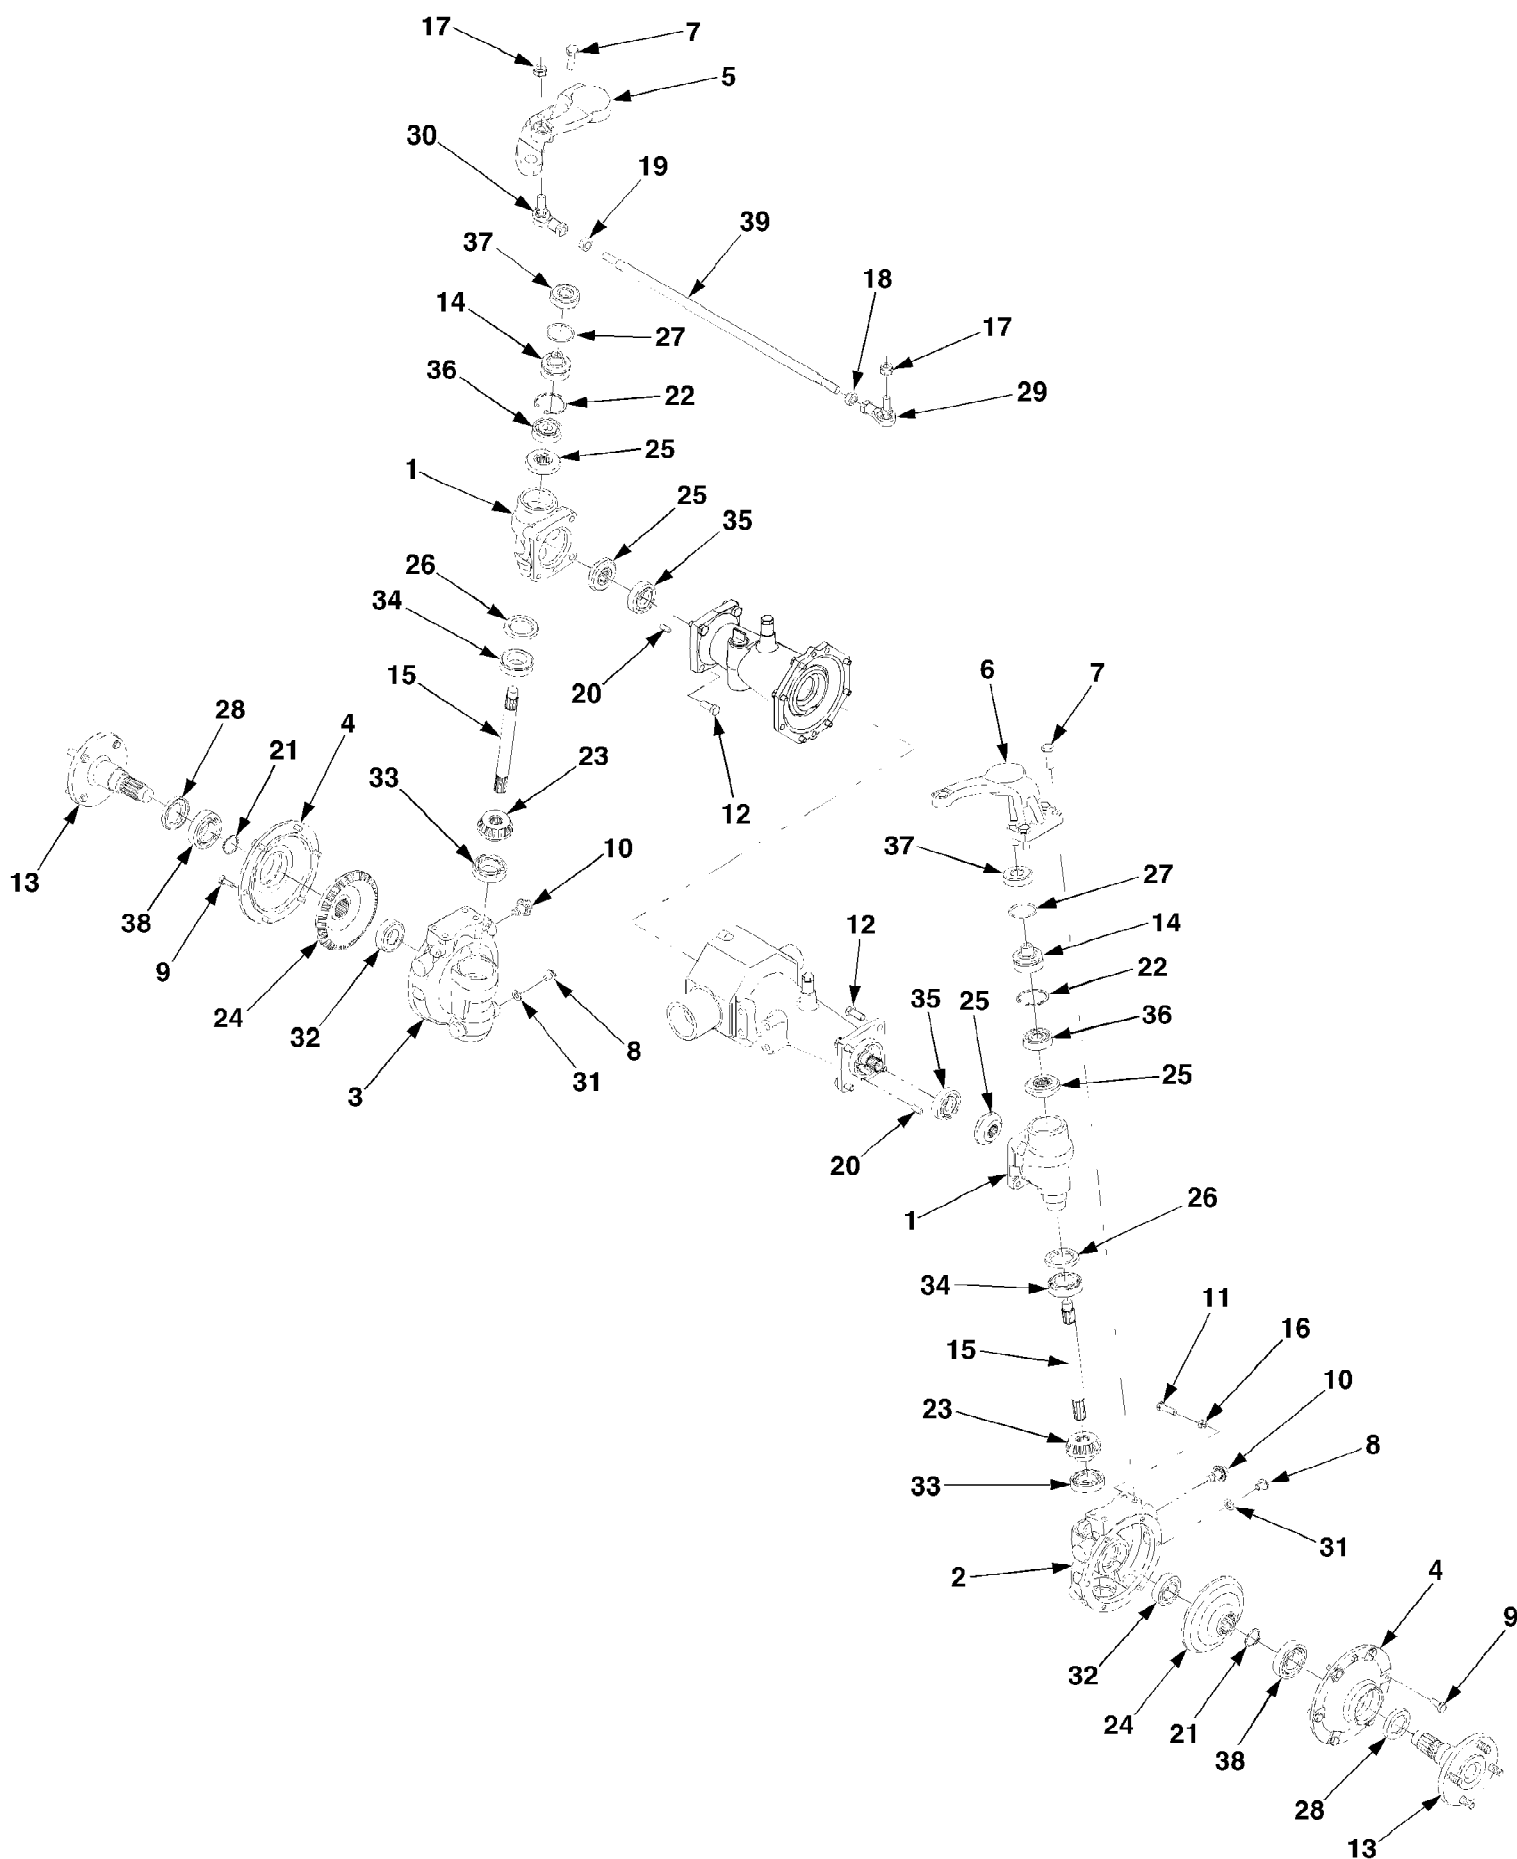

5234DL Tractor
4WD Axle Assembly (Part 1) 1B075G & After

Page 4 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	619-04017A	2	S	Housing, Kingpin
	759-3958	AR		Sealant, Loctite(®) Black, 5.3 oz.
2	619-04020A	1	S	Housing, Axle Drop, RH
3	619-04021A	1	S	Housing, Axle Drop, LH
4	619-04024A	2	S	Cover, Axle
5	619-04027A	1	S	Arm, Steering, LH
6	619-04028A	1	S	Arm, Steering, RH
7	710-1313	8	/P	Screw, Hex Cap, M10-1.5 x 35 GR8.8
8	710-1323	2		Plug, Hex, 3/8-16 x .5
9	710-1681	12	/P	Screw, Hex Cap, M8-1.25 x 20 GR8.8
10	710-1633	2		Plug, Screw, M14-1.5 x .827
11	710-1683	2	/P	Screw, Hex Cap, M8-1.25 x 30
12	710-3208	8		Screw, Hex Cap, M10-1.5 x 25
13	711-04060	2	S	Axle, Flange
	710-0852	8	/P	Stud, Rib Neck, 7/16-14 x 1.6
14	711-04104	2	S	Shaft, Stub
15	711-04106	2	S	Shaft, Kingpin
16	712-0690	2	/P	Nut, Hex, M8-1.25
17	712-3103	2		Nut, Hex Flange Lock, M12-1.75
18	712-3104	1		Nut, Hex, M12-1.75 RH Thrd.
19	712-3105	1		Nut, Hex, M12-1.75 LH Thrd.
20	715-04014	2	S	Pin, Dowel, 8mm x 20mm
21	716-0201	2		Ring, Retaining
22	716-0393	2		Ring, Retaining
23	717-04040	2	S	Gear, Bevel, 13T
24	717-04041	2	S	Gear, Bevel, 34T
25	717-04045	4	S	Gear, Bevel, 14T
26	721-04087	2		Seal, Oil, 38 x 55 x 7 w/Dirt Lip
27	721-04066	2	S	O-Ring, 40mm x 3mm
28	721-0497	2		Seal, Oil, 35mm x 55mm x 8mm
29	723-0462	1		Ball Joint, 12-1.75 RH
30	723-0463	1		Ball Joint, 12-1.75 LH
31	736-0567	2	/P	Washer, Flat, .39 x .75 x .062
32	741-0301	2	S	Bearing, Ball
33	741-04034	2	S	Bearing, Ball
34	741-04043	2	S	Bearing, Tapered Roller w/ Race
35	741-04044	2	S	Bearing, Ball
36	741-04068	2	S	Bearing, Ball
37	741-0919	2	S	Bearing, Ball
38	741-3033A	2	S	Bearing, Ball
39	747-04134	1	S	Rod, Tie, M12-1.75


5234DL Tractor
4WD Axle Assembly (Part 2) 1B065G & Before

Page 6 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	603-04050	1	S	Bracket, Front Axle Mtg. - Rear
	737-0146	1	S	Fitting, Lube, 1/4-28
	741-04036	1	S	Bearing, Sleeve
2	603-04051	1	S	Bracket, Front Axle Mtg. - Front
	737-0146	1	S	Fitting, Lube, 1/4-28
	741-04037	1	S	Bearing, Sleeve
3	619-04009	1	S	Housing, Main Axle RH
4	619-04014	1	S	Housing, Differential
5	619-04019	1	S	Housing, Axle LH
6	710-1313	2	/P	Screw, Hex Cap, M10-1.5 x 35 GR8.8
7	710-1681	8	/P	Screw, Hex Cap, M8-1.25 x 20 GR8.8
8	710-3175	6	/P	Screw, Hex Cap, M8-1.25 x 14 GR8.8
9	710-1633	1		Plug, Screw, M14-1.5 x .827
10	710-3208	8		Screw, Hex Cap, M10-1.5 x 25
11	711-04051	1	S	Shaft, Input, 11T
12	711-04105	1	S	Shaft, Cross
13	711-04107	2	S	Shaft, Axle
14	712-04043	1	/P	Nut, Special, 24mm
15	715-04011	1		Pin, Roll, 5mm x 26mm
16	715-04014	4	S	Pin, Dowel, 8mm x 20mm
17	717-04023	1	S	Gear, Bevel, 35T
18	717-04046	2	S	Gear, Miter, 10T
19	717-04047	2	S	Gear, Miter, 16T
20	721-04056	1	S	Seal, Oil, 52mm x 35mm x 10mm
21	721-04067	1	S	O-Ring, 19mm x 3mm
22	731-04336	1	S	Dipstick, Front Axle
23	736-0264	6	S	Washer, Flat, .33 x .63 x .0635
24	736-0287	1	S	Washer, Flat, .793 x 1.24 x .06 Hdn.
25	736-04098	2	S	Washer, Special Spherical
26	736-0562	AR	S	Washer, Flat, .793 x 1.37 x .005
	736-0563	AR		Washer, Flat, .793 x 1.37 x .010
	736-0564	AR		Washer, Flat, .793 x 1.37 x .015
	736-0565	AR		Washer, Flat, .793 x 1.37 x .020
	737-0566	AR		Washer, Flat, .793 x 1.37 x .025
27	741-04038	1	S	Washer, Thrust, 1.66 x 2.59 x .059
28	741-04039	1	S	Washer, Thrust, 1.03 x 1.73 x .059
29	741-04042	2	S	Bearing, Tapered Roller w/ Race
30	741-04044	2	S	Bearing, Ball
31	741-04045	1	S	Bearing, Ball
32	741-04046	1	S	Bearing, Ball
33	750-04133	2	S	Spacer, 20 x 25 x 16mm
34	750-04164	1	S	Spacer, 25 x 35 x 12mm
35	750-0750	2	S	Spacer, .5 x .75 x .86
	737-3065	2.5 qt.	/P	Oil, 85W-140

5234DL Tractor
4WD Axle Assembly (Part 2) 1B075G & After

Page 7 of 115

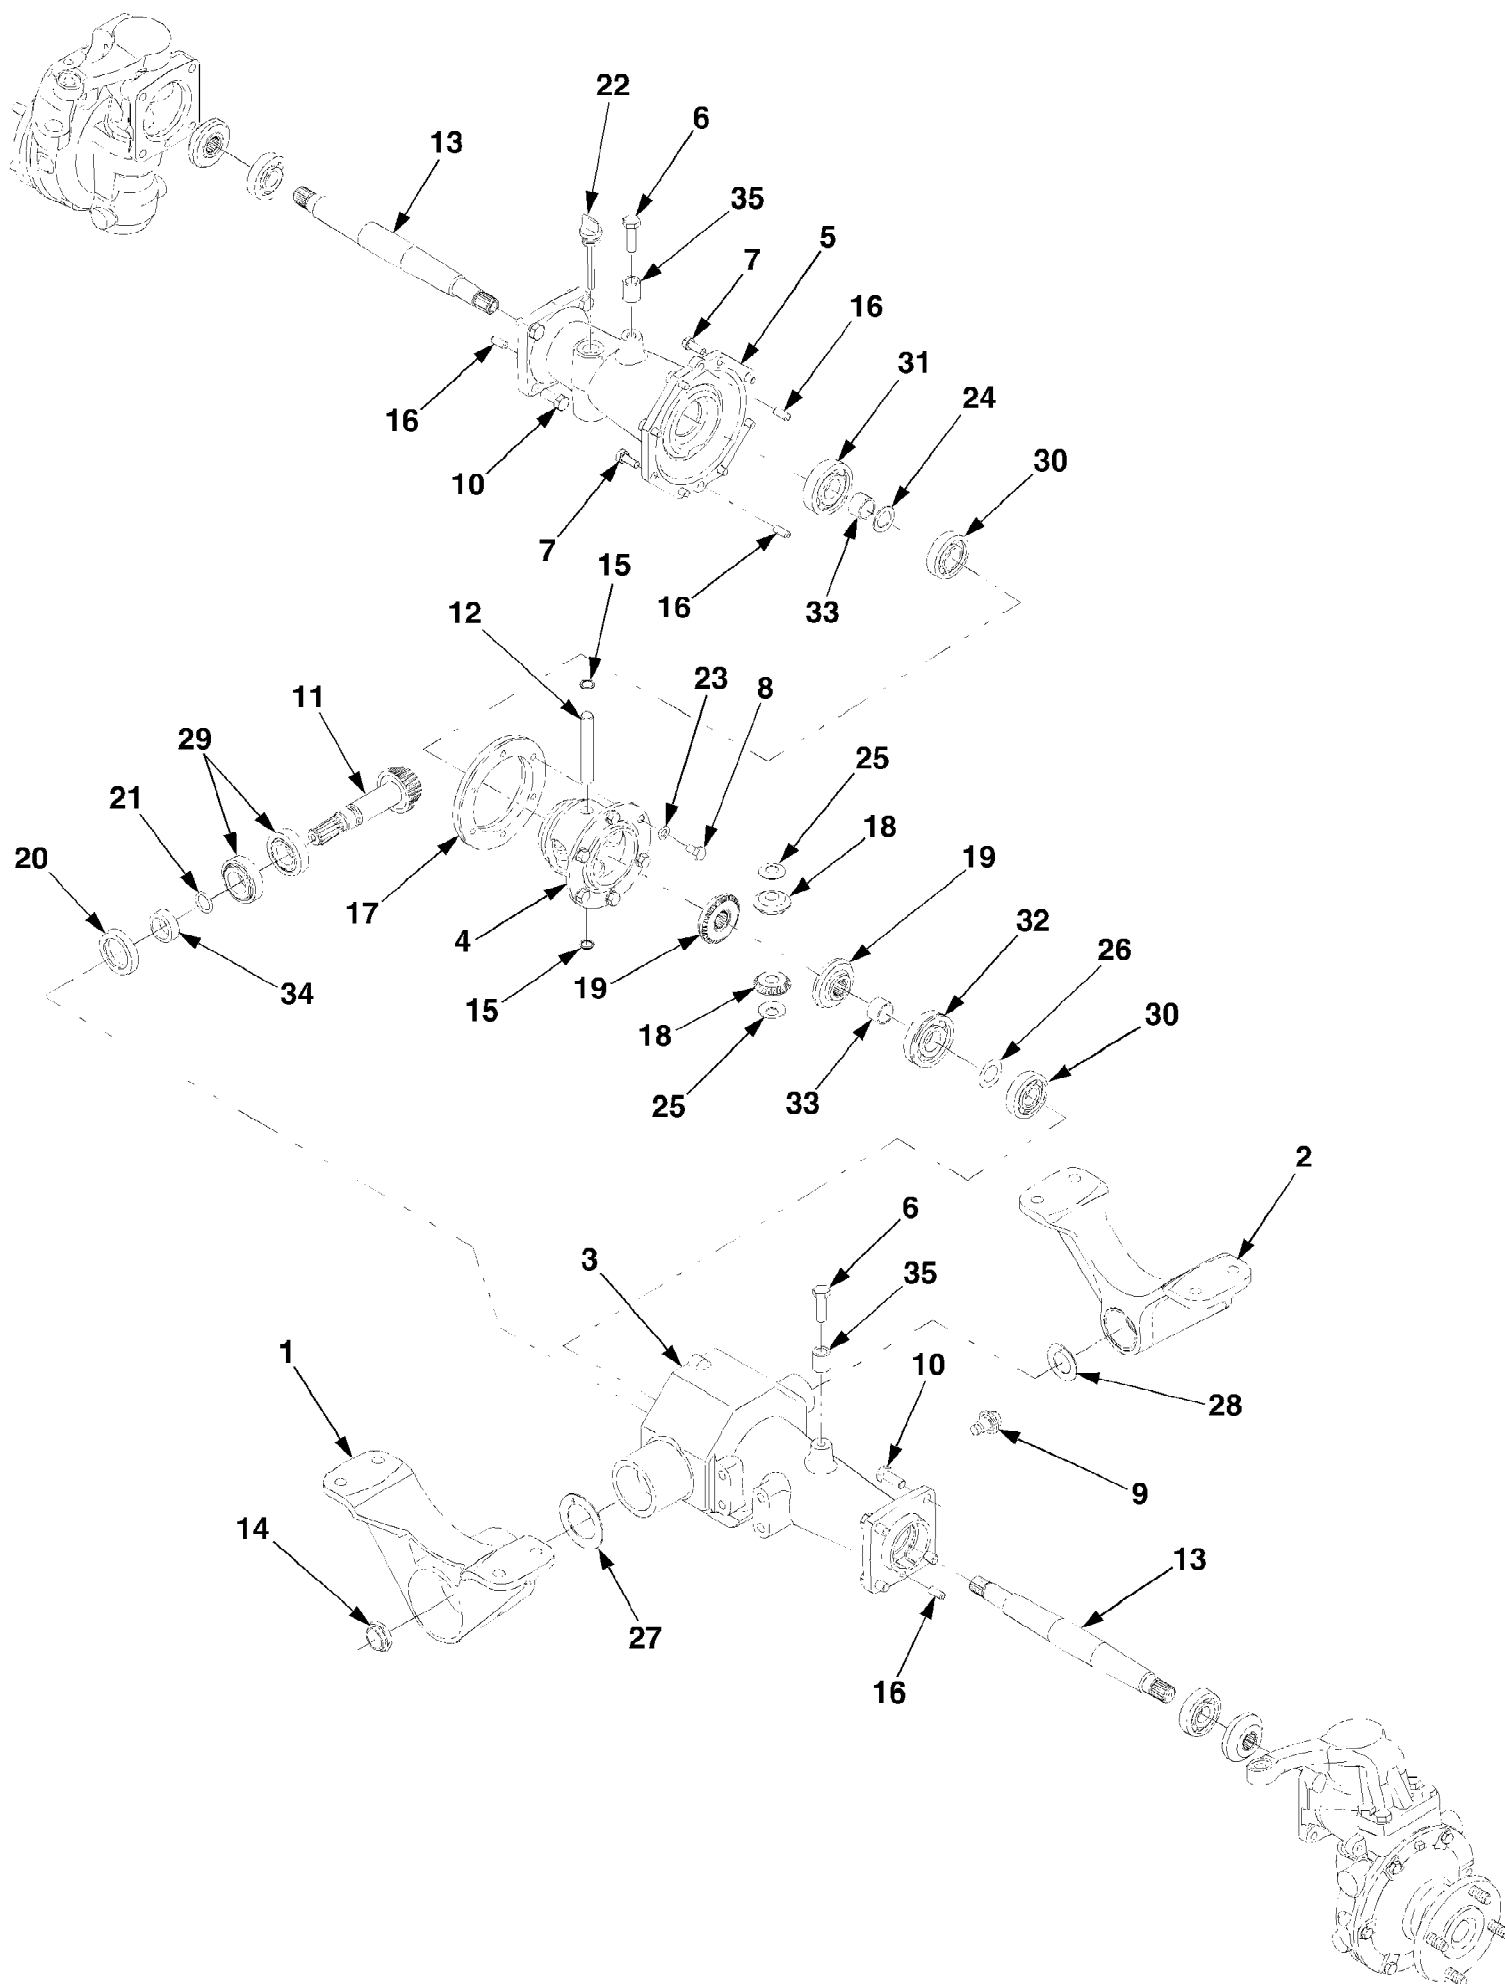


5234DL Tractor
4WD Axle Assembly (Part 2) 1B075G & After

Page 8 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	603-04050	1	S	Bracket, Front Axle Mtg. - Rear
	737-0146	1	S	Fitting, Lube, 1/4-28
	741-04036	1	S	Bearing, Sleeve
2	603-04051	1	S	Bracket, Front Axle Mtg. - Front
	737-0146	1	S	Fitting, Lube, 1/4-28
	741-04037	1	S	Bearing, Sleeve
3	619-04009A	1	S	Housing, Main Axle RH
4	619-04120	1	S	Housing, Differential
5	619-04019A	1	S	Housing, Axle LH Screw, Hex Cap,
6	710-1313	2	/P	Screw, Hex Cap, M10-1.5 x 35 GR8.8
7	710-1682	8		Screw, Hex Cap, M8-1.25 x 25 GR8.8
8	710-3175	6	/P	Screw, Hex Cap, M8-1.25 x 14 GR8.8
9	710-1633	1		Plug, Screw, M14-1.5 x .827
10	710-3208	8		Screw, Hex Cap, M10-1.5 x 25
11	711-04051	1	S	Shaft, Input, 11T
12	711-04384	1	S	Shaft, Cross
13	711-04107	2	S	Shaft, Axle
14	712-04043	1	/P	Nut, Special, 24mm
15	716-04045	2		Ring, Retaining
16	715-04014	4	S	Pin, Dowel, 8mm x 20mm
17	717-04023	1	S	Gear, Bevel, 35T
18	717-04046	2	S	Gear, Miter, 10T
19	717-04047	2	S	Gear, Miter, 16T
20	721-04056	1	S	Seal, Oil, 52mm x 35mm x 10mm ..
21	721-04067	1	S	O-Ring, 19mm x 3mm
22	731-04336	1	S	Dipstick, Front Axle
	721-04058	1		Washer, Seal
23	736-0264	6	S	Washer, Flat, .33 x .63 x .0635
24	736-0287	1	S	Washer, Flat, .793 x 1.24 x .06 Hdn.
25	736-04098	2	S	Washer, Special Spherical
26	736-0562	AR	S	Washer, Flat, .793 x 1.37 x .005
	736-0563	AR		Washer, Flat, .793 x 1.37 x .010
	736-0564	AR		Washer, Flat, .793 x 1.37 x .015
	736-0565	AR		Washer, Flat, .793 x 1.37 x .020
	737-0566	AR		Washer, Flat, .793 x 1.37 x .025
27	741-04038	1	S	Washer, Thrust, 1.66 x 2.59 x .059
28	741-04039	1	S	Washer, Thrust, 1.03 x 1.73 x .059
29	741-04042	2	S	Bearing, Tapered Roller w/ Race ...
30	741-04044	2	S	Bearing, Ball
31	741-04045	1	S	Bearing, Ball
32	741-04046	1	S	Bearing, Ball
33	750-04133	2	S	Spacer, 20 x 25 x 16mm
34	750-04164	1	S	Spacer, 25 x 35 x 12mm
35	750-0750	2	S	Spacer, .5 x .75 x .86
	737-3065	1	/P	Oil, 85W-140 2.5 qt.

5234DL Tractor
4WD Transmission Connections 1B065G & Before

Page 9 of 115

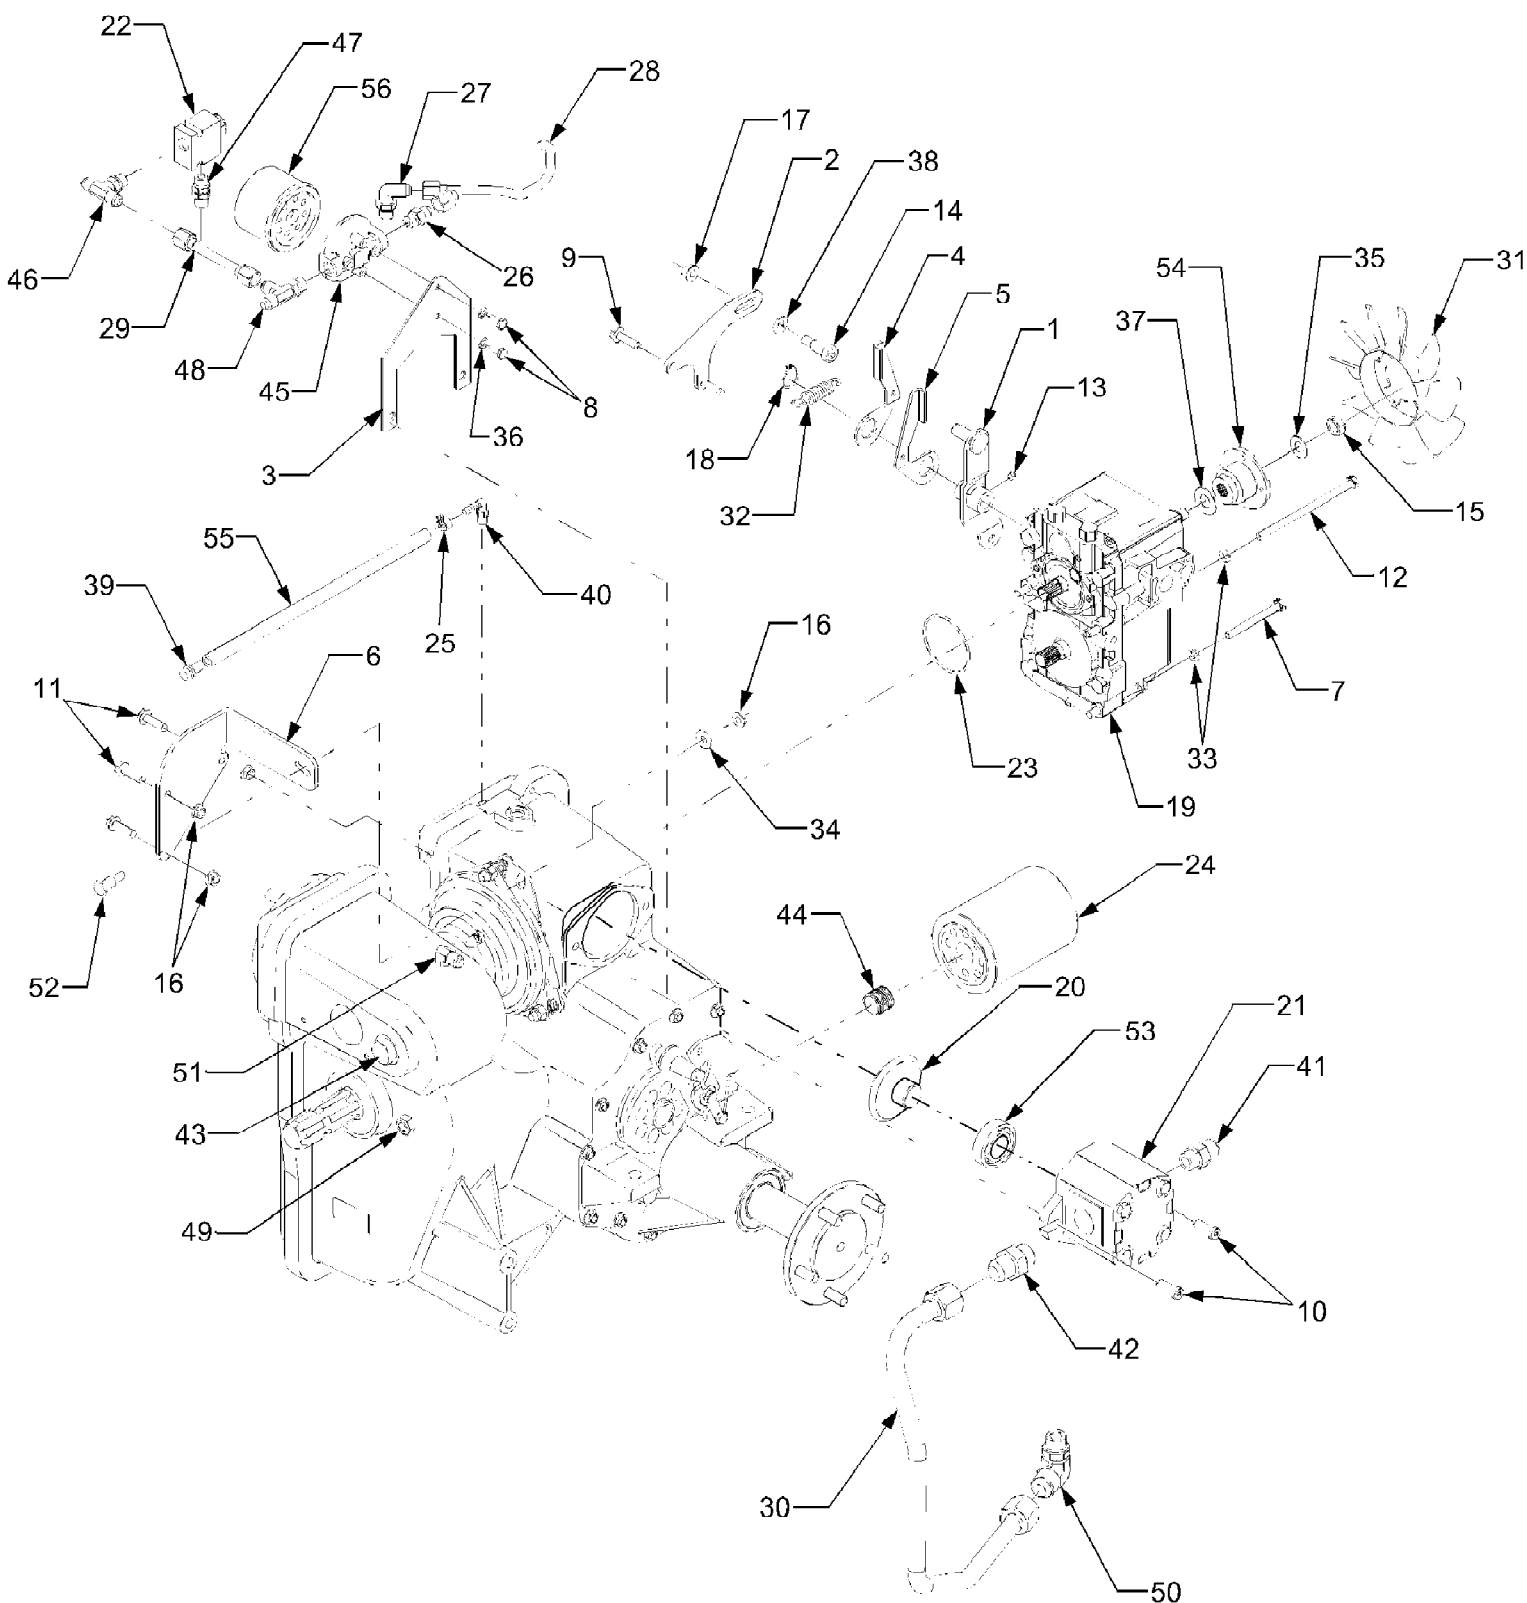

5234DL Tractor
4WD Transmission Connections 1B065G & Before


Page 10 of 115

Ref #	Part Number	Qty	S/P/F	Description
	NLA	1		Transmission Ass'y. Service
	737-3120	1	/P	Transmission Oil, 1 Qt. 5 gal
	737-3121	1	/P	Transmission Oil, 1 Gal.
	759-3958	AR		Sealant, Loctite(R) Black, 5.3 oz.
1	603-0980	1	S	Arm, Hydro
2	703-05027	1	S	Bracket, Return
3	703-05035	1	S	Bracket, Filter Mounting
4	703-05041	1		Arm, Neutral - RH
5	703-05042	1		Arm, Neutral - LH
6	703-05050	1	S	Bracket, Clutch Torque
7	710-0189	2	/P	Screw, Hex Cap, 5/16-18 x 3.0 GR5
8	710-0751	2	/P	Screw, Hex Cap, 1/4-20 x .62 GR5
9	710-0817	2		Screw, Hex Wash. Hd. Tapp, 5/16-18 x 1.25 GR5
10	710-1695	2		Screw, Socket Hd. 3/8-16 x 1.0
11	710-1882	3		Screw, Hex Flange, 5/16-18 x 1.5 GR5
12	710-3226	2		Screw, Hex Cap Lock, 5/16-18 x 5.5 GR5
13	710-3242	1		Screw, Set - Lock 5/16 x .5 GR5
14	710-04040	1	/P	Screw, Shoulder, .497 x .750: 3/8-16
15	712-0200A	1	/P	Nut, Hex Patch Lock, 1/2-20
16	712-3004A	4	/P	Nut, Hex Flange Lock, 5/16-18 GR5
17	712-3005	1	S	Nut, Hex Flange Lock, 3/8-16
18	716-0111	1	/P	Ring, Retaining
19	717-3543	1	S	Pump, Hydrostatic Transmission
20	717-04114	1	S	Gear, Bevel, 35T
21	718-3153	1	S	Pump, Auxiliary Hydraulic
22	718-04001	1	S	Valve, Check
23	721-04002	1	S	O-Ring, 2.425 ID x .103
24	723-3071	1		Filter, Oil - Hydraulic System
25	726-0205	1	/P	Clamp, Hose
26	727-3002	1	S	Fitting, Straight
27	727-3012	1	/P	Fitting, 90 Degree
28	727-04007	1	S	Tube, Hydro Inlet
29	727-04021	1	S	Tube, Filter Inlet
30	727-04054	1	S	Tube, Aux. Pump Inlet
31	731-3371	1		Fan, Transmission Cooling
32	732-3119	1	S	Spring, Extension, .50 x 1.975 x .072
33	736-0119	4	S	Washer, Lock, 5/16
34	736-0242	1	/P	Washer, Bell., .34 x .872 x .06
35	736-0253	1	S	Washer, Belleville
36	736-0329	2	S	Washer, Lock, 1/4
37	736-0355	1	/P	Washer, Flat, .56 x 1.0 x .04
38	736-0864	1	S	Washer, Thrust, .375 x .812 x .06
39	737-0296	1	/P	Vent, 3/8 Dia
40	737-0299	1		Fitting, Elbow
41	737-0336	1	/P	Fitting, Hyd. Adapter w/O-ring
42	737-0337	1		Fitting, Hyd. Adapter w/O-ring
43	737-0349	1		Fitting, Plug
44	737-3105	1		Fitting, Filter Nipple
45	737-04011	1	S	Adapter, Oil Filter
46	737-04016	1	S	Fitting, Branch Tee
47	737-04020	1	S	Fitting, Adapter

5234DL Tractor
4WD Transmission Connections 1B065G & Before

Page 11 of 115

Ref #	Part Number	Qty	S/P/F	Description
48	737-04026	1	S	Fitting, Run Tee
49	737-04032	1	S	Indicator, Oil Level Sight
50	737-04035	1	S	Fitting, Elbow
51	737-04047	1	S	Fitting, Elbow
52	738-0754	1		Screw, Shoulder, .437 x .54
53	741-3037	1	S	Bearing, Ball
54	748-3093	1		Adapter, Hydro Pump
55	751-3130	1		Hose, Vent
56	BS-492932S	1	/P	Filter, Hydro Pump

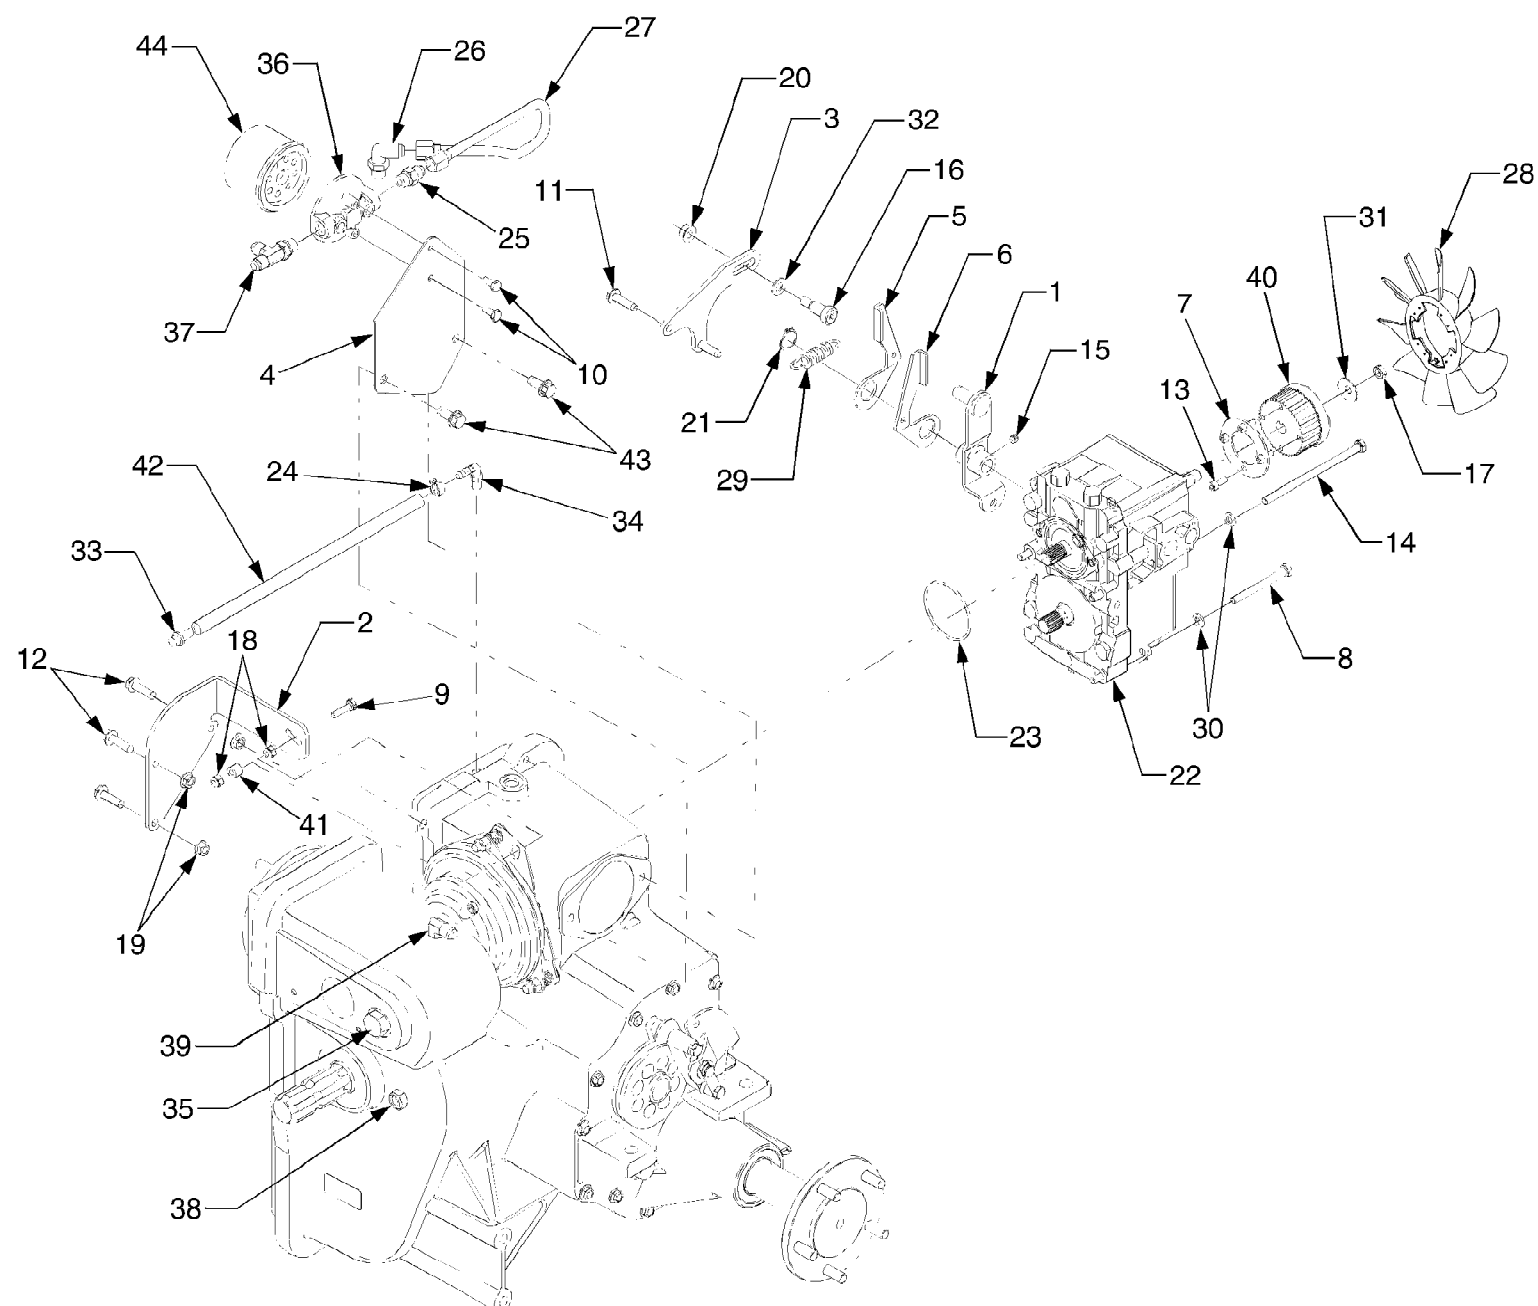


5234DL Tractor
4WD Transmission Connections 1B075G & After

Page 13 of 115

Ref #	Part Number	Qty	S/P/F	Description
	737-3120	1	/P	Transmission Oil, 1 Qt. 5 gal.
	737-3121	1	/P	Transmission Oil, 1 Gal.
	759-3958	AR		Sealant, Loctite(®) Black, 5.3 oz.
1	603-0980	1	S	Arm, Hydro
2	603-04192	1		Bracket, Clutch Torque
3	603-04195	1		Bracket, Return
4	603-04298	1		Bracket, Filter Mounting
5	703-05041	1		Arm, Neutral - RH
6	703-05042	1		Arm, Neutral - LH
7	703-05742	1		Keeper, Belt
8	710-0189	2	/P	Screw, Hex Cap, 5/16-18 x 3.0 GR5
9	710-0299	1		Screw, Hex Cap, 1/4-28 x 1.0 GR5
10	710-0751	2	/P	Screw, Hex Cap, 1/4-20 x .62 GR5
11	710-0817	2		Screw, Hex Wash. Hd. Tapp, 5/16-18 x 1.25 GR5
12	710-1882	3		Screw, Hex Flange, 5/16-18 x 1.5 GR5
13	710-3218	4		Screw, Socket Hd. Cap 1/4-20 x .62 GR8
14	710-3226	2		Screw, Hex Cap Lock, 5/16-18 x 5.5 GR5
15	710-3242	1		Screw, Set - Lock 5/16 x .5 GR5
16	710-04040	1	/P	Screw, Shoulder, .497 x .750: 3/8-16
17	712-0262	1	/P	Nut, Hex Jam Lock, 3/8-24
18	712-0896	2		Nut, Hex Nylon Lock, 1/4-28
19	712-3004A	3	/P	Nut, Hex Flange Lock, 5/16-18 GR5
20	712-3005	1	S	Nut, Hex Flange Lock, 3/8-16
21	716-0111	1	/P	Ring, Retaining
22	718-04141	1	S	Pump, Hydrostatic Transmission
23	721-04002	1	S	O-Ring, 2.425 ID x .103
24	726-0205	1	/P	Clamp, Hose
25	727-3002	1	S	Fitting, Straight
26	727-3012	1	/P	Fitting, 90 Degree
27	727-04095	1	S	Tube, Hydro Inlet
28	731-05247	1	S	Fan, Transmission Cooling
29	732-3119	1	S	Spring, Extension, .50 x 1.975 x .072
30	736-0119	4	S	Washer, Lock, 5/16
31	736-0331	1	/P	Washer, Belleville
32	736-0864	1	S	Washer, Thrust, .375 x .812 x .06
33	737-0296	1	/P	Vent, 3/8 Dia
34	737-0299	1		Fitting, Elbow
35	737-0349	2		Fitting, Plug
36	737-04011	1	S	Adapter, Oil Filter
37	737-04026	1	S	Fitting, Run Tee
38	737-04032	1	S	Indicator, Oil Level Sight
39	737-04047	1	S	Fitting, Elbow
40	748-04086	1	S	Adapter. Cog Pump
41	751-0535	1		Hose, Fuel Line .38in
42	751-3130	1		Hose, Vent 13 in.
43	GW-90064	2		Screw, Hex Wash Hd Tapp 3/8-16 x .62
44	BS-492932S	1	/P	Filter, Hydro Pump

5234DL Tractor
Alternator


Page 14 of 115

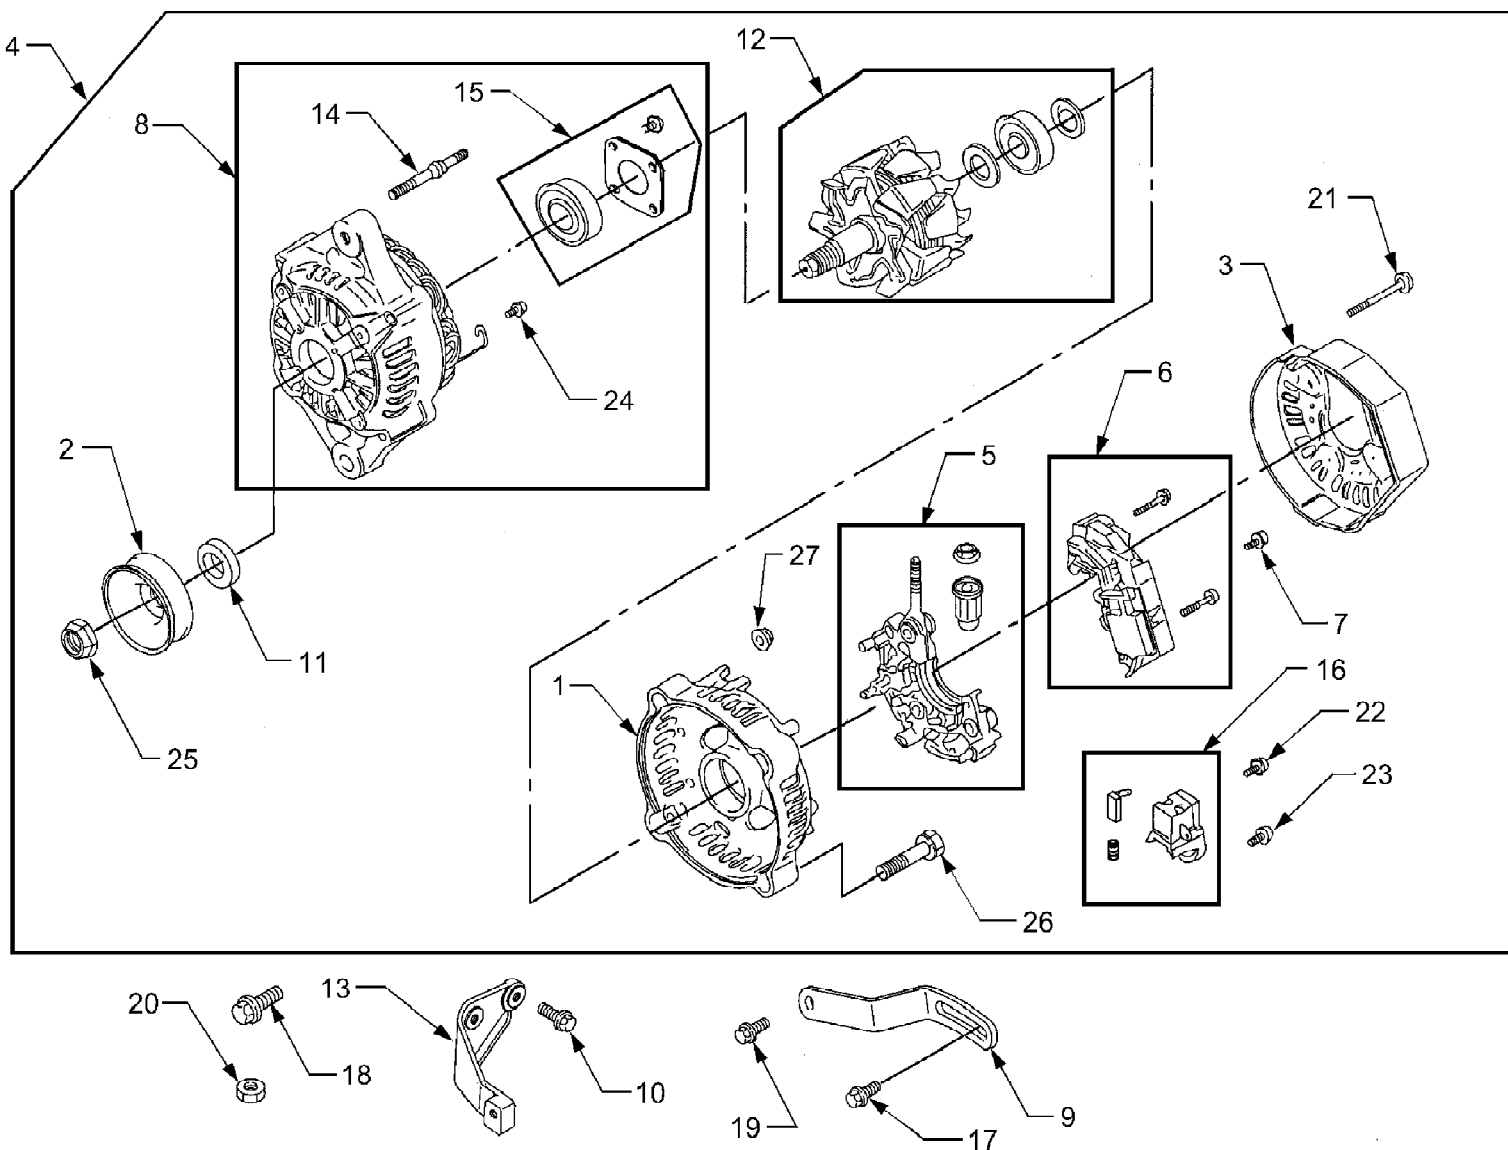

5234DL Tractor
Alternator

Page 15 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	BS-820692	1		Housing, Brush End
2	BS-820711	1		Pulley, Alternator
3	BS-820703	1		Cover, Brush
4	BS-825084	1		Alternator
5	BS-825385	1		Rectifier
6	BS-825388	1		Regulator
7	BS-820702	1		Screw, Rectifier
8	BS-825383	1		Housing, Drive End
9	BS-820819	1		Strap, Adjusting
10	BS-820275	1		Screw, Support Bracket
11	BS-820713	1		Spacer, Support Bracket
12	BS-825390	1		Rotor
13	BS-820213	1		Bracket, Support
14	BS-820690	1		Stud, Alternator
15	BS-825384	1		Retainer, Bearing
16	BS-825387	1		Retainer, Brush
17	BS-820343	1	S	Screw, Alternator
18	BS-820270	1		Screw, Alternator
19	BS-820023	1		Screw, Adjusting Strap
20	BS-820069	1		Nut, Alternator
21	BS-820715	1		Screw, Brush Cover
22	BS-820701	1		Screw, Brush Retainer
23	BS-820702	1		Screw, Brush Retainer
24	BS-820702	1		Screw, Ground Terminal
25	BS-820705	1		Nut, Alternator Pulley
26	BS-820707	1		Screw, Brush End Housing
27	BS-820709	1		Nut, Brush End Housing

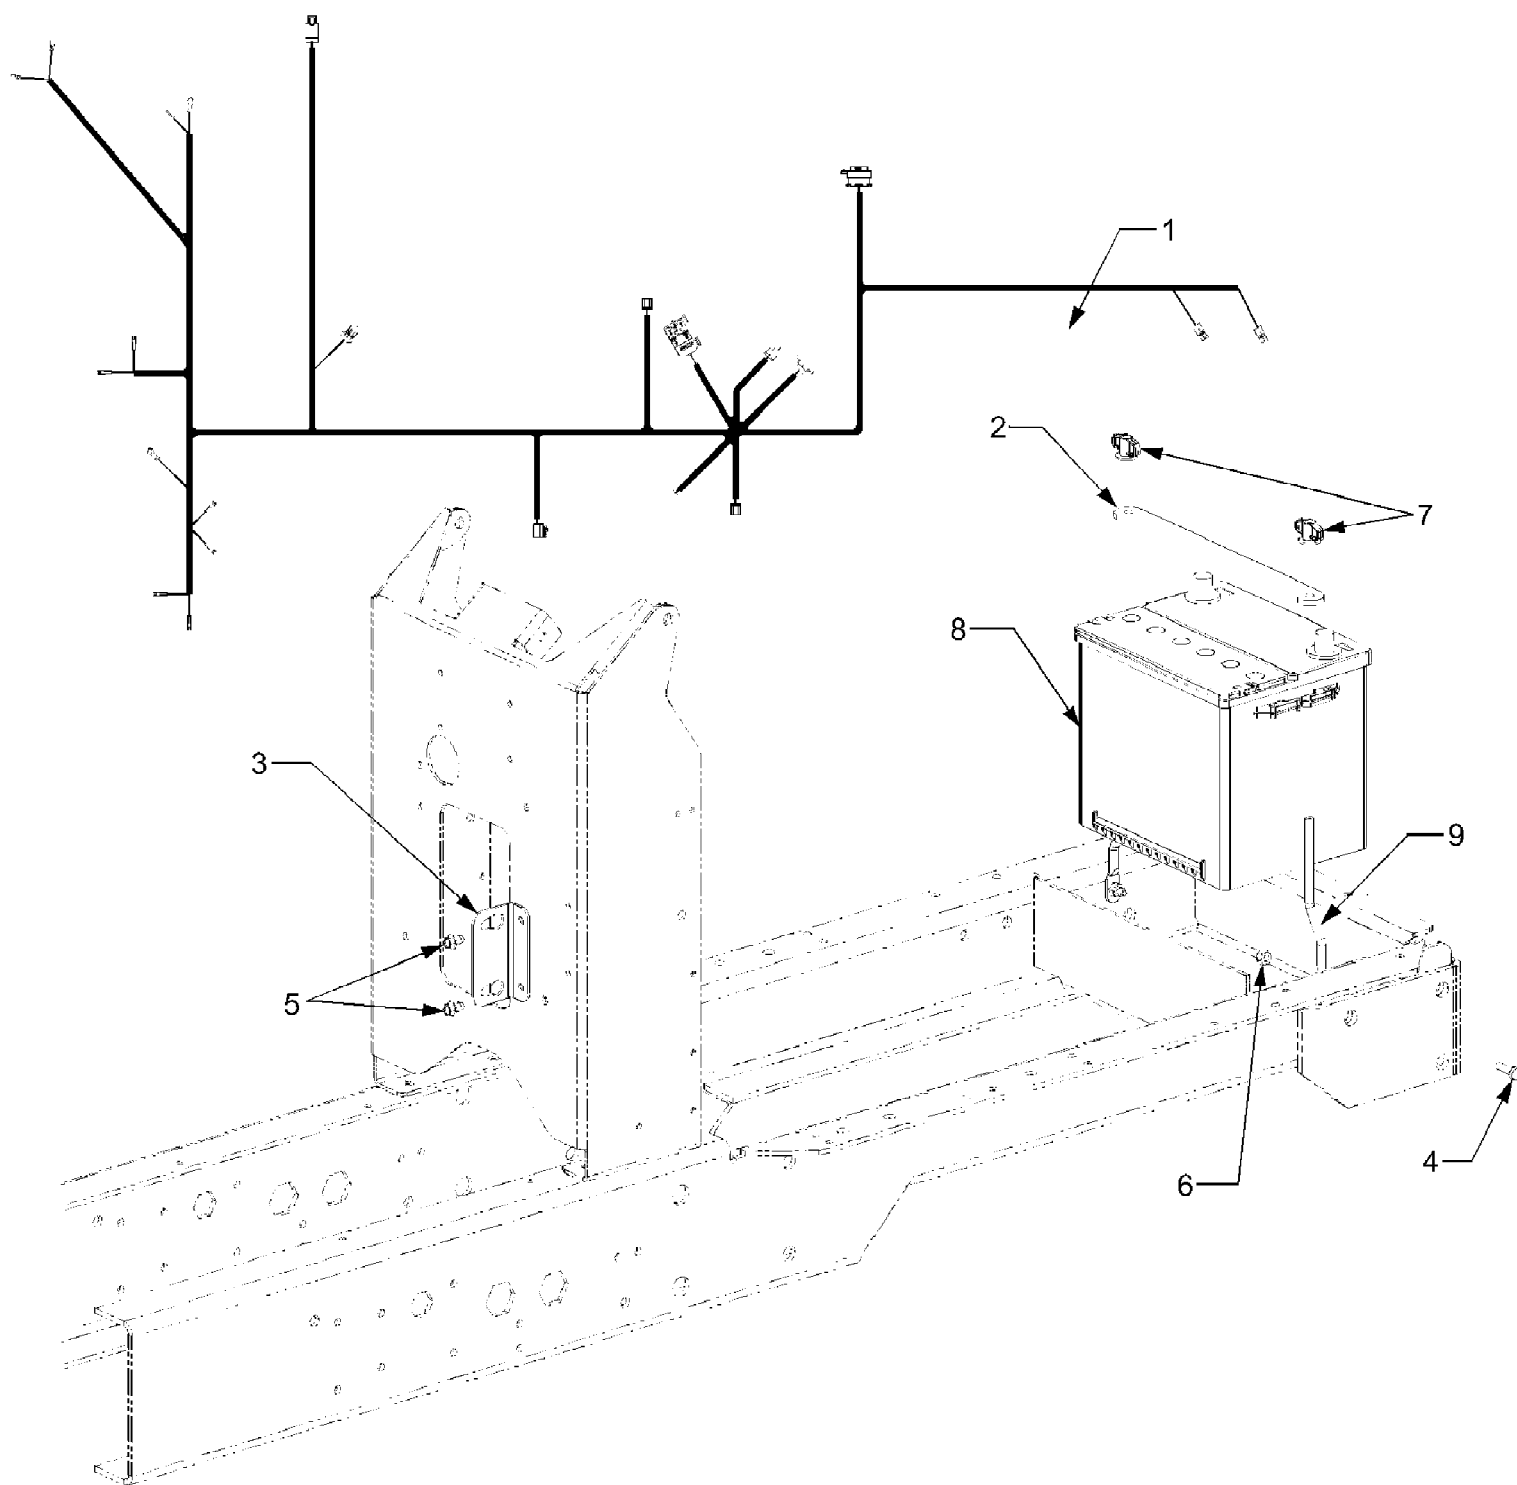


5234DL Tractor
Battery And Electrical 1B065G & Before

Page 17 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	629-3085	1	S	Harness, Main Wire
2	703-4104-0637	1	/P	Strap, Battery Holddown
3	703-4131	1	S	Bracket, Fuse Center
4	710-0206	2	/P	Screw, Hex Cap, 1/4-10 x .875 GR5
5	710-0599	2	/P	Screw, Hex Wash Hd. Tapp 1/4-20 x .5
6	712-0324	2	/P	Nut, Hex Nylon Insert Lock, 1/4-20
7	712-0421	2		Nut, Wing w/Bell Washer, 5/16-18
8	725-3174	1	S	Battery, 500 cca Dry
9	747-3433	2		Rod, Battery Holddown

5234DL Tractor
Battery And Electrical 1B075G & After

Page 18 of 115

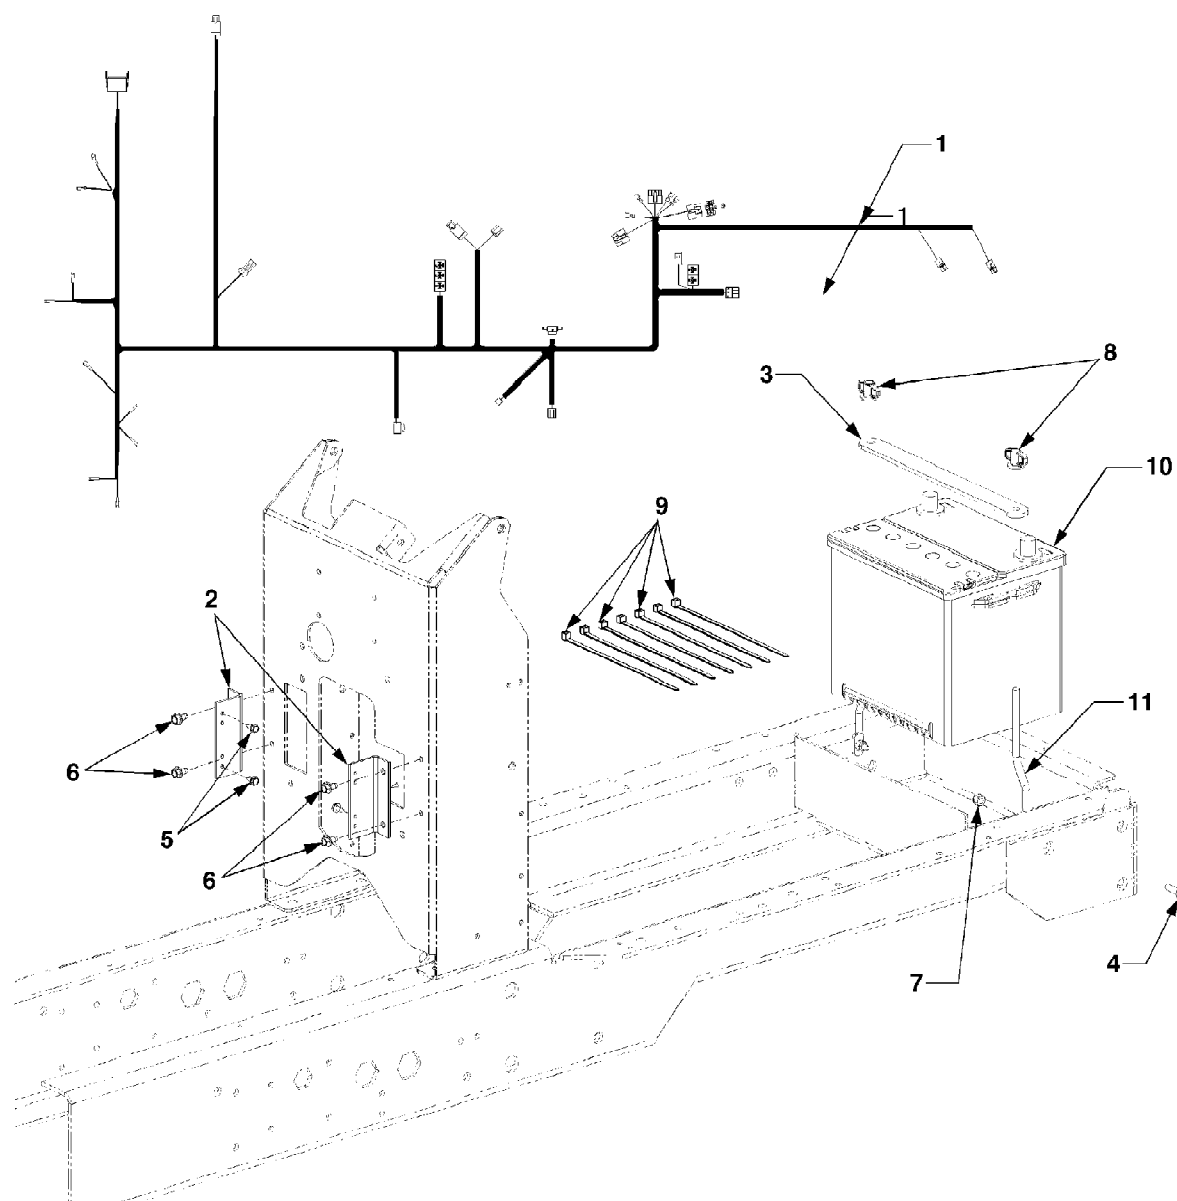


5234DL Tractor
Battery And Electrical 1B075G & After

Page 19 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	629-04128	1		Harness, Main Wire
2	703-05695-0637	2		Bracket, Relay Mtg.
3	703-4104-0637	1	/P	Strap, Battery Holddown
4	710-0206	2	/P	Screw, Hex Cap, 1/4-10 x .875 GR5
5	710-0224	3	S	Screw, Hex Wash Hd. Tapp #10-16 x .5
6	710-0599	4	/P	Screw, Hex Wash Hd. Tapp 1/4-20 x .5
7	712-0324	2	/P	Nut, Hex Nylon Insert Lock, 1/4-20
8	712-0421	2		Nut, Wing w/Bell Washer, 5/16-18
9	725-0157	7	/P	Tie, Cable
10	725-3174	1	S	Battery, 500 cca Dry
11	747-3433	2		Rod, Battery Holddown

5234DL Tractor
Camshaft And Valves

Page 20 of 115

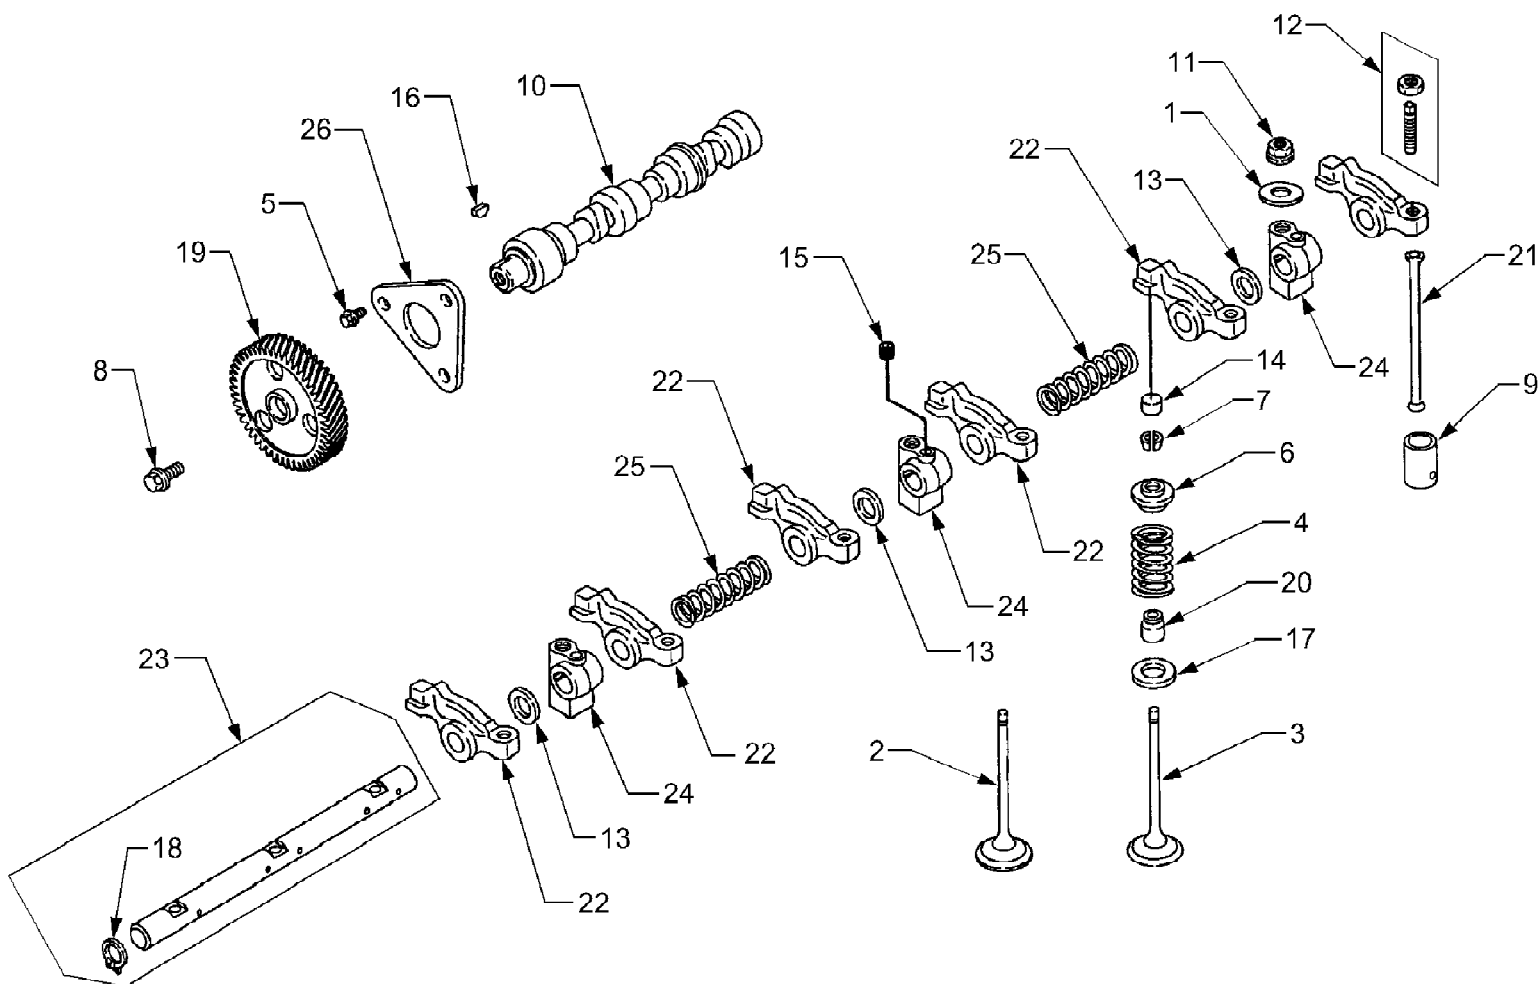


5234DL Tractor
Camshaft And Valves

Page 21 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	BS-820177	3		Washer, Flat
2	BS-820404	3		Valve, Exhaust
3	BS-820403	3		Valve, Intake
4	BS-820406	6		Spring, Valve
5	BS-820032	3		Screw, Hex, 6mm
6	BS-820111	6		Retainer, Valve
7	BS-825042	6		Keeper, Valve, Set of 2
8	BS-820075	1		Screw, Metric
9	BS-820110	6		Tappet, Valve
10	BS-820388	1		Camshaft
11	BS-820070	3		Nut, Hex Metric
12	BS-825041	6		Adjuster, Rocker Arm
13	BS-820065	3		Washer, Spacer
14	BS-820113	6		Cap, Valve
15	BS-820105	1		Screw, Metric
16	BS-691639	1		Key, Timing
17	BS-820112	6		Seat, Valve Spring
18	BS-820003	2		Retainer
19	BS-820613	1		Gear, Cam
20	BS-820405	6		Seal, Valve
21	BS-820422	6		Rod, Push
22	BS-820387	6		Arm, Rocker
23	BS-825093	1		Shaft, Rocker Arm
24	BS-820106	3		Support, Rocker Arm
25	BS-820044	2		Spring, Rocker Shaft
26	BS-820118	1		Retainer, Camshaft

5234DL Tractor
Controls 1B065G & Before

Page 22 of 115

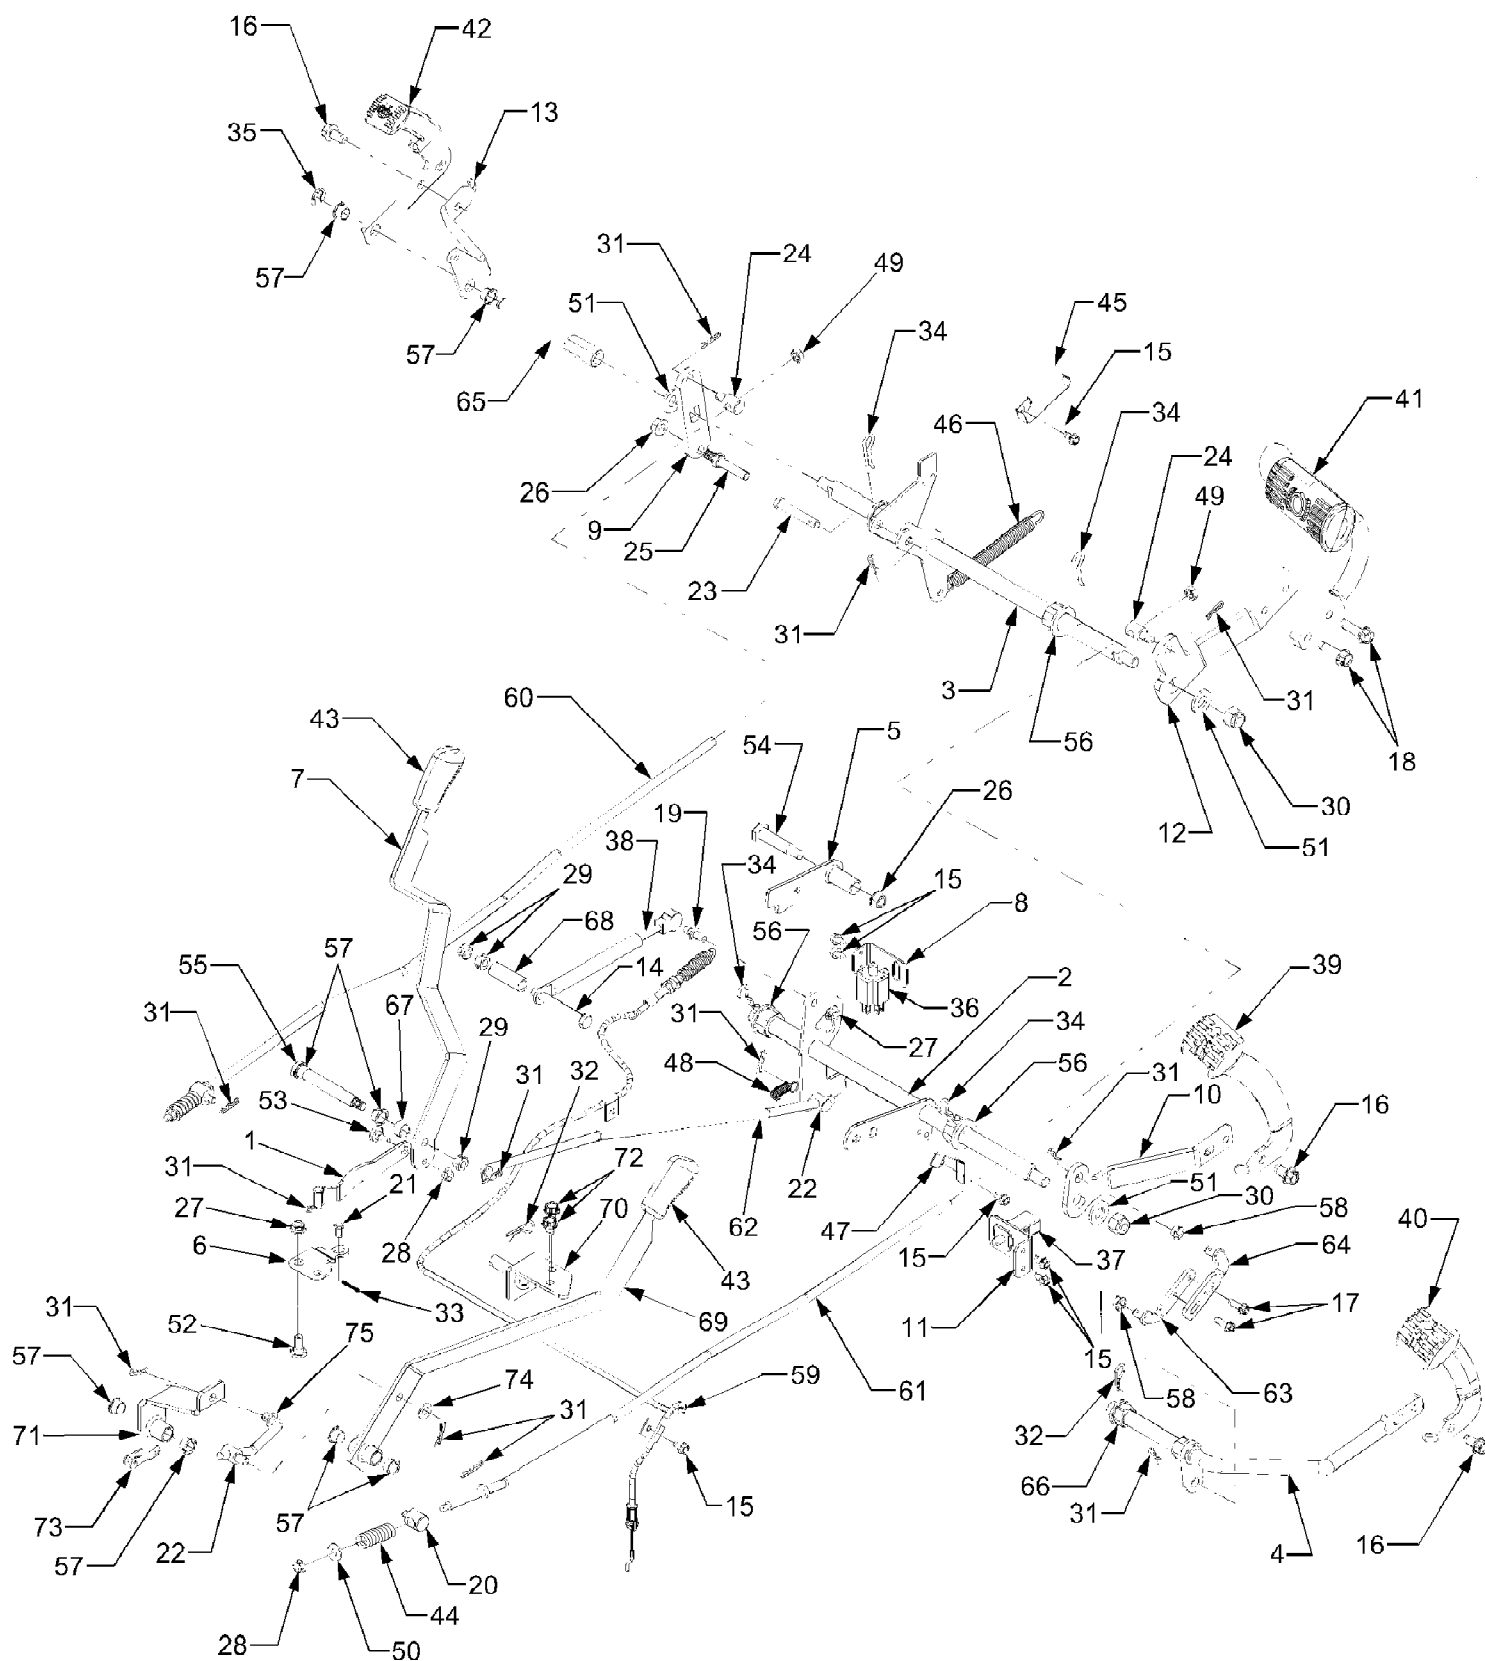

5234DL Tractor
Controls 1B065G & Before

Page 23 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	603-04018	1		Link, Hi-Lo
2	603-0945	1		Shaft Assembly, Pedal
3	603-0946	1		Shaft Assembly, Brake
4	603-0947	1		Shaft Assembly, Reverse
5	603-0948A	1		Link Assembly, Parking Brake
6	703-05039	1		Link, Hi-Lo Pivot
7	703-05043	1	S	Handle, Hi-Lo Shift
8	703-05183	1	S	Bracket, Switch
9	703-4105	1		Lever, Brake
10	703-3012	1		Link, Pedal Mounting
11	703-3152	1		Bracket, Reverse Switch
12	703-3156	1		Link, Brake Pedal
13	703-3183	1		Bracket, Pedal Brace
14	710-0521	1	/P	Screw, Hex Cap 3/8-16 x 3.0 GR8
15	710-0599	7	/P	Screw, Hex Wash Hd Tapp 1/4-20 x .5
16	710-0623	3	/P	Screw, Hex Wash Hd Tapp 3/8-16 x .75
17	710-0642	2	/P	Screw, Hex Wash Hd Tapp 1/4-20 x .75
18	710-1315	2	/P	Screw, Hex Wash Hd Tapp 3/8-16 x 1.25
19	710-3170	1		Stud, Cylinder, 5/16-18
20	711-04038	2	S	Ferrule, Brake
21	711-0701	1	S	Pin, Clevis, .25 x .5
22	711-3397	2		Ferrule, 3/8-24 x .37
23	711-0679A	1	/P	Pin, Clevis, 3/8 x 2.015
24	711-0723A	2	S	Ferrule, 3/8 - 24 x .375
25	711-1363	1		Pin, 3/8-16: 3/8 x 2.43
26	712-0431	2	S	Nut, Hex Flange Lock, 3/8-16
27	712-3004A	2	/P	Nut, Hex Flange Lock, 5/16-18
28	712-3027	3	S	Nut, Hex Flange Lock, 1/4-20
29	712-0375	3	/P	Nut, Hex Lock, 3/8-16
30	712-3058	2	S	Nut, Hex Insert Lock, 1/2-20
31	714-0104	12	S	Pin, Internal Cotter
32	714-0145	1	S	Pin, Internal Cotter
33	714-0507	1	S	Pin, Cotter, 3/32 x .750
34	714-0147	4	/P	Pin, Internal Cotter
35	716-0104	1	S	E-Ring, .5 Dia
36	725-04064	1	S	Switch, Plunger (Reverse)
37	725-3164A	1	S	Switch, Plunger (Brake)
38	727-04004	1		Cylinder, Damper
39	731-3247	1		Pedal, Forward
40	731-3248	1		Pedal, Reverse
41	731-3249	1	S	Pedal, Brake
42	731-3250	1		Pedal, Diff. Lock
43	731-3321	2		Grip, Handle
44	732-04009	2	S	Spring, Compression
45	732-3117	1		Spring, Switch Actuator
46	732-0384	1	S	Spring, Extension, .62 x 6.12
47	732-0859	1	S	Spring, Rev/No Cut
48	732-3118	1		Spring, Extension, 3/8 x 1.44
49	712-0711	2	/P	Nut, Hex Jam, 3/8-24
50	736-0173	2	/P	Washer, Flat, .28 x .74 x .063
51	736-3019	3		Washer, Flat, .53 x .1.06 x .134
52	738-0140	1	S	Screw, Shoulder, .435 x 1.78
53	738-0255	1	S	Screw, Shoulder, .375 x .181


5234DL Tractor
Controls 1B065G & Before

Page 24 of 115

Ref #	Part Number	Qty	S/P/F	Description
54	738-0533	1	S	Screw, Shoulder, .498 x 1.635
55	738-0982	1		Screw, Shoulder .498 x 3.245: 3/8-16
56	741-0598	4	S	Bearing, Hex Flange, .752 ID
57	741-0491	8		Bearing, Nylon. .50 ID x .341
58	741-3073	2	S	Bearing, Flange, .375 x .58 x .25
59	746-04017	1		Cable, Diff Lock
60	747-04021	1		Rod, Brake, LH
61	747-04022	1		Rod, Brake, RH
62	747-3486	1		Rod, Hydro Control
63	747-3324	1		Rod, Rear Connecting
64	747-3353	1		Rod, Front Connecting
65	747-3366	1		Shaft, Diff. Lock
66	748-0227A	2	S	Bearing, Hex Flange, .629 ID
67	750-0336	1	S	Spacer, .50 ID x .62 x .37
68	750-0668	1		Spacer, .39 x .625 x 1.74
69	603-04016	1		Handle, 4WD
70	603-04019	1		Bracket, 4WD Pivot
71	603-04020	1		Link, 4WD
72	710-0607	2	/P	Screw, Hex Wash. Hd. Tapp, 5/16-18 x .5
73	713-3000	1	S	Link, Chain
74	736-0185	1	S	Washer, Flat, .375 x .74 x .063
75	747-04034	1	S	Link, 4WD Handle

5234DL Tractor
Controls 1B075G & After

Page 25 of 115

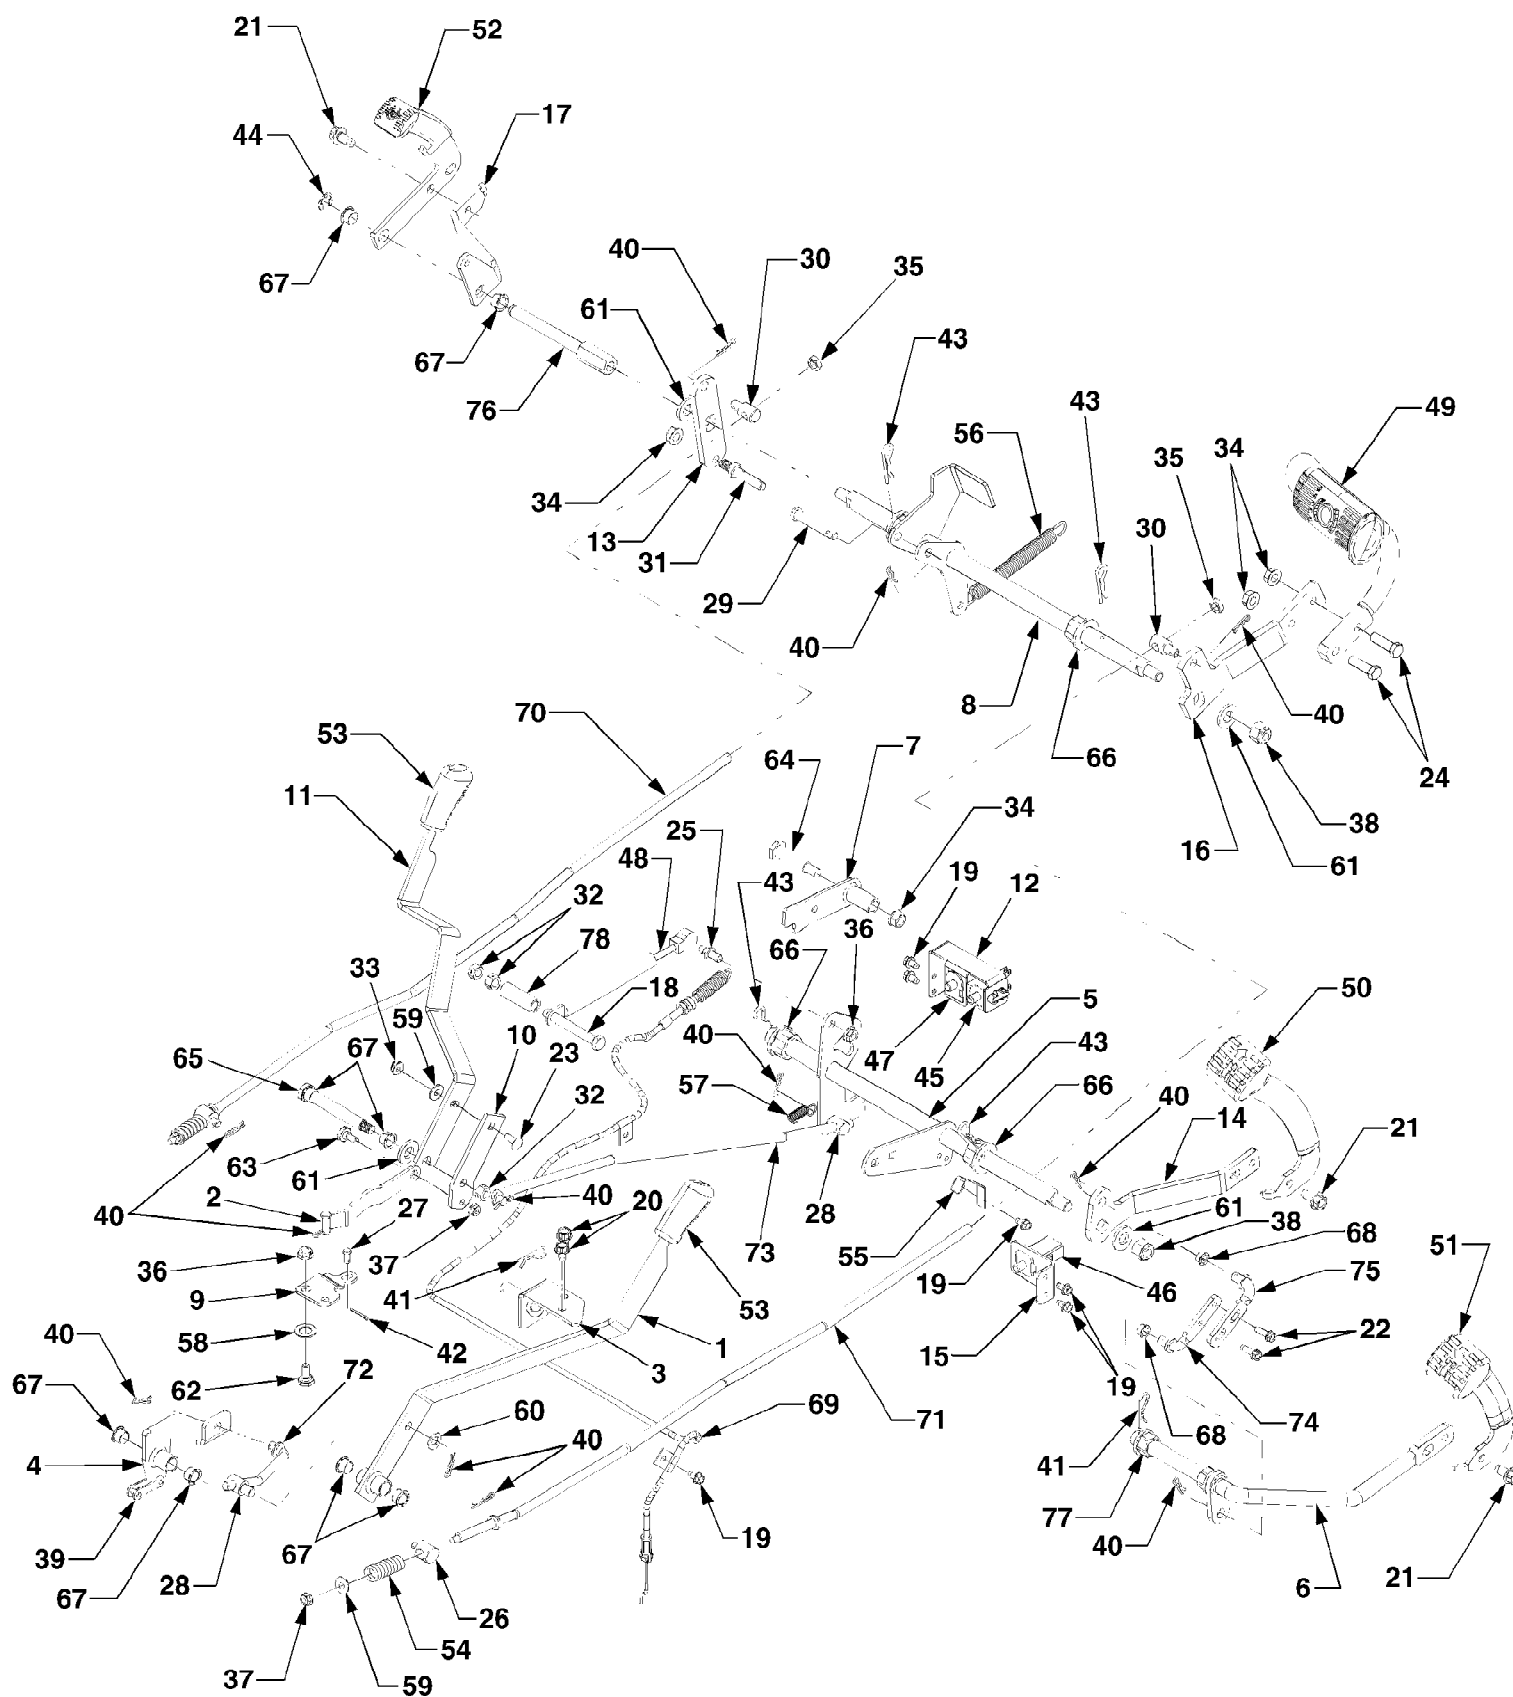

5234DL Tractor
Controls 1B075G & After

Page 26 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	603-04016	1		Handle, 4WD
2	603-04018	1		Link, Hi-Lo
3	603-04019	1		Bracket, 4WD Pivot
4	603-04020	1		Link, 4WD
5	603-0945	1		Shaft Assembly, Pedal
6	603-0947	1		Shaft Assembly, Reverse
7	603-0948A	1		Link Assembly, Parking Brake ..
8	603-04273	1		Shaft Assembly, Brake
9	703-05039	1		Link, Hi-Lo Pivot
10	703-05665	1		Bracket, Hi-Lo Shifter
11	703-05666	1		Handle, Hi-Lo Shift
12	703-05674	1	S	Bracket, Switch
13	703-4105	1		Lever, Brake
14	703-3012	1		Link, Pedal Mounting
15	703-3152	1		Bracket, Reverse Switch
16	703-3156A	1		Link, Brake Pedal
17	703-3183	1		Bracket, Pedal Brace
18	710-0521	1	/P	Screw, Hex Cap 3/8-16 x 3.0 GR8
19	710-0599	6	/P	Screw, Hex Wash Hd Tapp 1/4-20 x .5
20	710-0607	2	/P	Screw, Hex Wash. Hd. Tapp, 5/16-18 x .5
21	710-0623	3	/P	Screw, Hex Wash Hd Tapp 3/8-16 x .75
22	710-0642	2	/P	Screw, Hex Wash Hd Tapp 1/4-20 x .75
23	710-0703	1	/P	Screw.Carriage, 1/4-20 x .75 GR5
24	710-3005	2	/P	Screw, Hex Cap 3/8-16 x 1.25 GR5
25	710-3170	1		Stud, Cylinder, 5/16-18
26	711-04038	2	S	Ferrule, Brake
27	711-0701	1	S	Pin, Clevis, .25 x .5
28	711-3397	2		Ferrule, 3/8-24 x .37
29	711-0679A	1	/P	Pin, Clevis, 3/8 x 2.015
30	711-0723A	2	S	Ferrule, 3/8 - 24 x .375
31	711-1363	1		Pin, 3/8-16: 3/8 x 2.43
32	712-0375	3	/P	Nut, Hex Lock, 3/8-16
33	712-04064	1	/P	Nut, Hex Flange Nylon Lock 14-20 GRF
34	712-0431	4	S	Nut, Hex Flange Lock, 3/8-16
35	712-0711	2	/P	Nut, Hex Jam, 3/8-24
36	712-3004A	2	/P	Nut, Hex Flange Lock, 5/16-18
37	712-3027	3	S	Nut, Hex Flange Lock, 1/4-20
38	712-3058	2	S	Nut, Hex Insert Lock, 1/2-20
39	713-3000	1	S	Link, Chain
40	714-0104	12	S	Pin, Internal Cotter
41	714-0145	2	S	Pin, Internal Cotter
42	714-0507	1	S	Pin, Cotter, 3/32 x .750
43	714-0147	4	/P	Pin, Internal Cotter
44	716-0104	1	S	E-Ring, .5 Dia
45	725-04232	1		Switch, Plunger (Brake)
46	725-3164A	1	S	Switch, Plunger (Reverse)
47	725-3167	1	S	Switch, Plunger (Brake)
48	727-04004	1		Cylinder, Damper
49	731-3249A	1	/P	Pedal, Brake
50	731-3247	1		Pedal, Forward
51	731-3248	1		Pedal, Reverse
52	731-3250	1		Pedal, Diff. Lock
53	731-3321	2		Grip, Handle


5234DL Tractor
Controls 1B075G & After

Page 27 of 115

Ref #	Part Number	Qty	S/P/F	Description
54	732-04009	2	S	Spring, Compression
55	732-0859A	1	/P	Spring, Rev/No Cut
56	732-0384	1	S	Spring, Extension, .62 x 6.12
57	732-3118	1		Spring, Extension, 3/8 x 1.44
58	736-0160	1	S	Washer, Flat, .53 ID x .93 x .05 .
59	736-0173	3	/P	Washer, Flat, .28 x .74 x .063 ...
60	736-0185	1	S	Washer, Flat, .375 x .74 x .063
61	736-3019	4		Washer, Flat, .53 x .1.06 x .134
62	738-0140	1	S	Screw, Shoulder, .435 x 1.78
63	738-0255	1	S	Screw, Shoulder, ..375 x .181 ...
64	738-0533	1	S	Screw, Shoulder, .498 x 1.635
65	738-0982	1		Screw, Shoulder .498 x 3.245: 3/8-16
66	741-0598	4	S	Bearing, Hex Flange, .752 ID
67	741-0491	8		Bearing, Nylon. .50 ID x .341
68	741-3073	2	S	Bearing, Flange, .375 x .58 x .25
69	746-04017	1		Cable, Diff Lock
70	747-04021	1		Rod, Brake, LH
71	747-04022	1		Rod, Brake, RH
72	747-04034	1	S	Link, 4WD Handle
73	747-3486	1		Rod, Hydro Control
74	747-3324	1		Rod, Rear Connecting
75	747-3353	1		Rod, Front Connecting
76	747-3366	1		Shaft, Diff. Lock
77	748-0227A	2	S	Bearing, Hex Flange, .629 ID
78	750-0668	1		Spacer, .39 x .625 x 1.74

5234DL Tractor
Cooling

Page 28 of 115

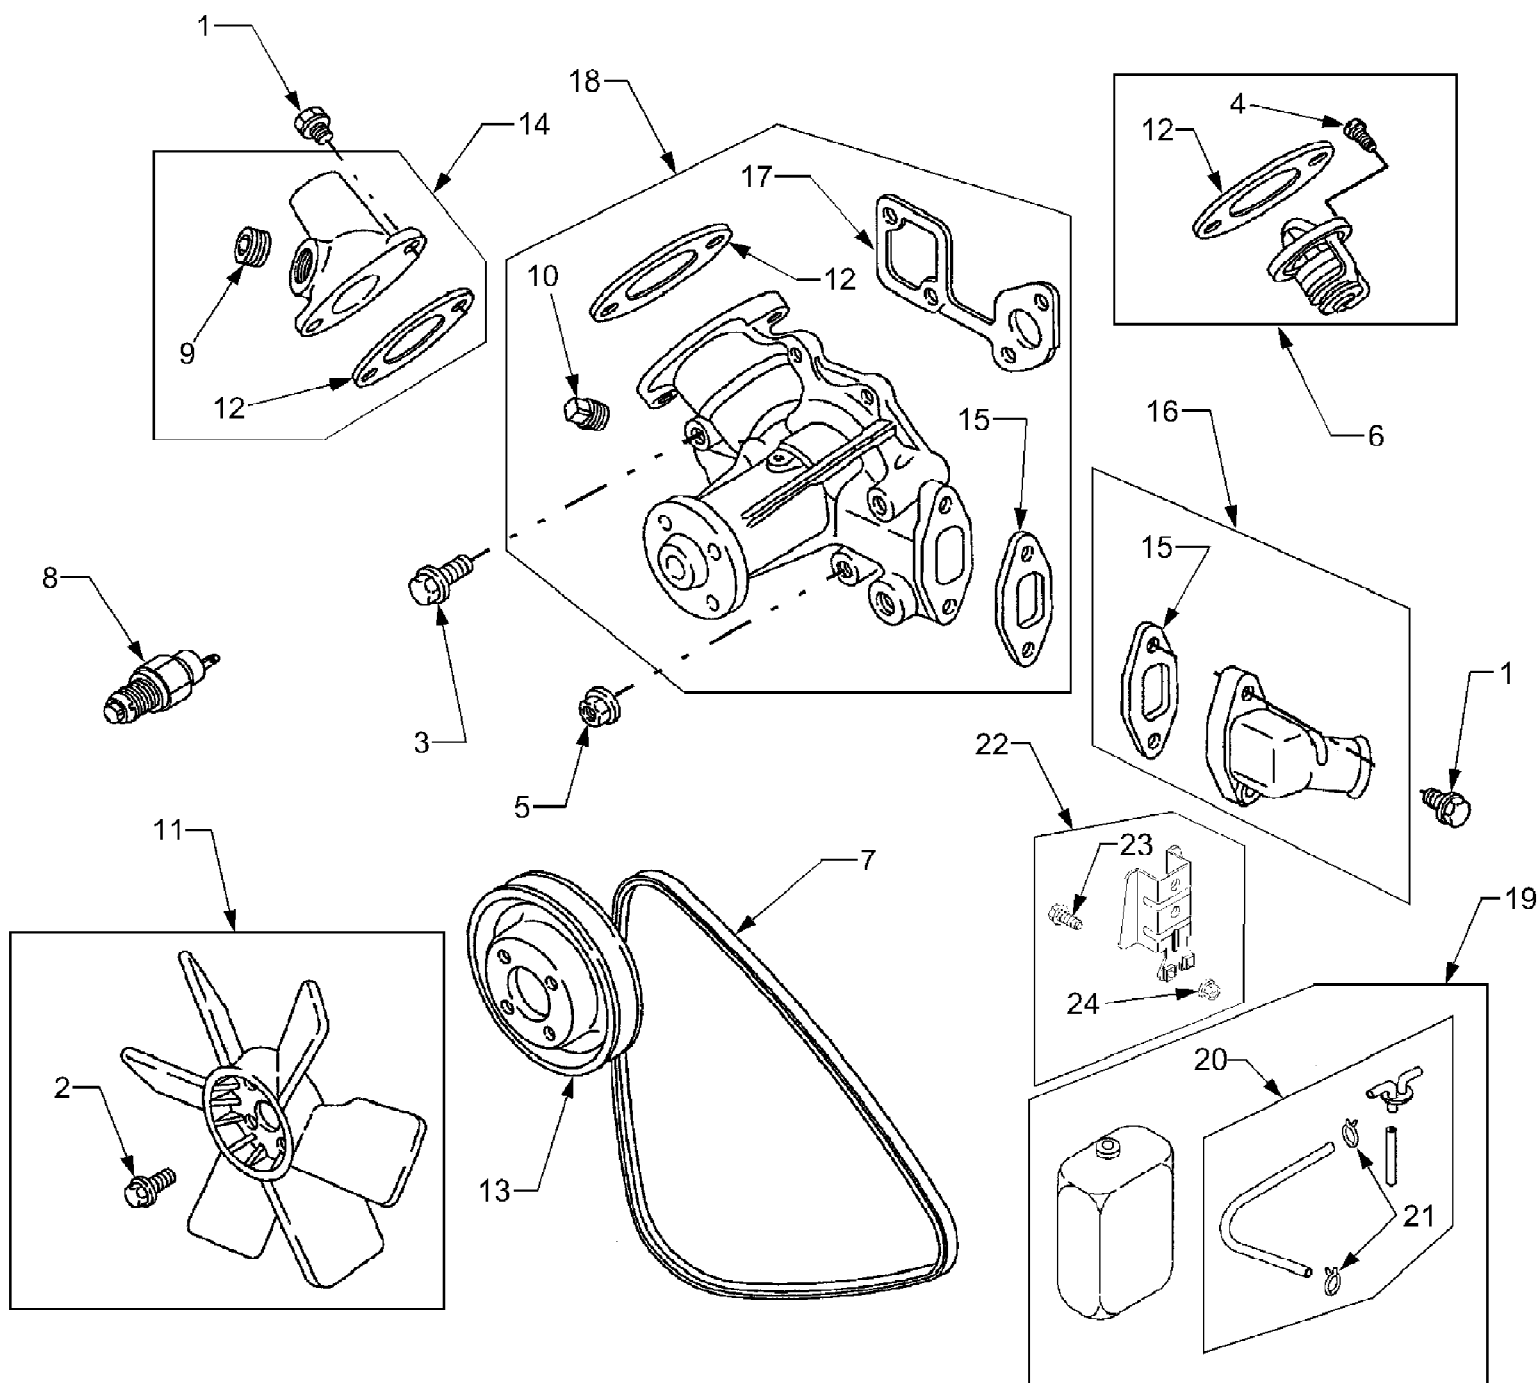


5234DL Tractor
Cooling

Page 29 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	BS-820031	4		Screw, Hex, 6mm
2	BS-820034	4		Screw, Hex,
3	BS-820022	2		Screw, Hex, 8mm
4	BS-820185	1		Screw, Metric
5	BS-820181	1		Nut, Hex Metric
6	BS-825064	1		Thermostat
7	BS-820271	1	S	Belt, V
8	BS-820208	1		Switch, Coolant Temperature
9	BS-820052	1		Plug
10	BS-820182	1		Plug
11	BS-825454	1		Fan, Radiator
12	BS-820093	1		Gasket, Outlet
13	BS-820095	1		Pulley, Pump
14	BS-825267	1		Housing, Outlet
15	BS-820098	1		Gasket, Inlet Housing
16	BS-825051	1		Housing, Inlet
17	BS-820100	1		Gasket, Water Pump
18	BS-825265	1		Pump, Water
19	BS-825462	1		Tank, Reserve
20	BS-825461	1		Cap, Reserve Tank
21	BS-820257	2		Clamp, Hose
22	BS-825314	1		Bracket, Reserve Tank Mtg
23	BS-820034	1		Screw, Mtg. Bracket
24	BS-820011	1		Nut, Mtg. Bracket

5234DL Tractor
Crankcase Cover

Page 30 of 115

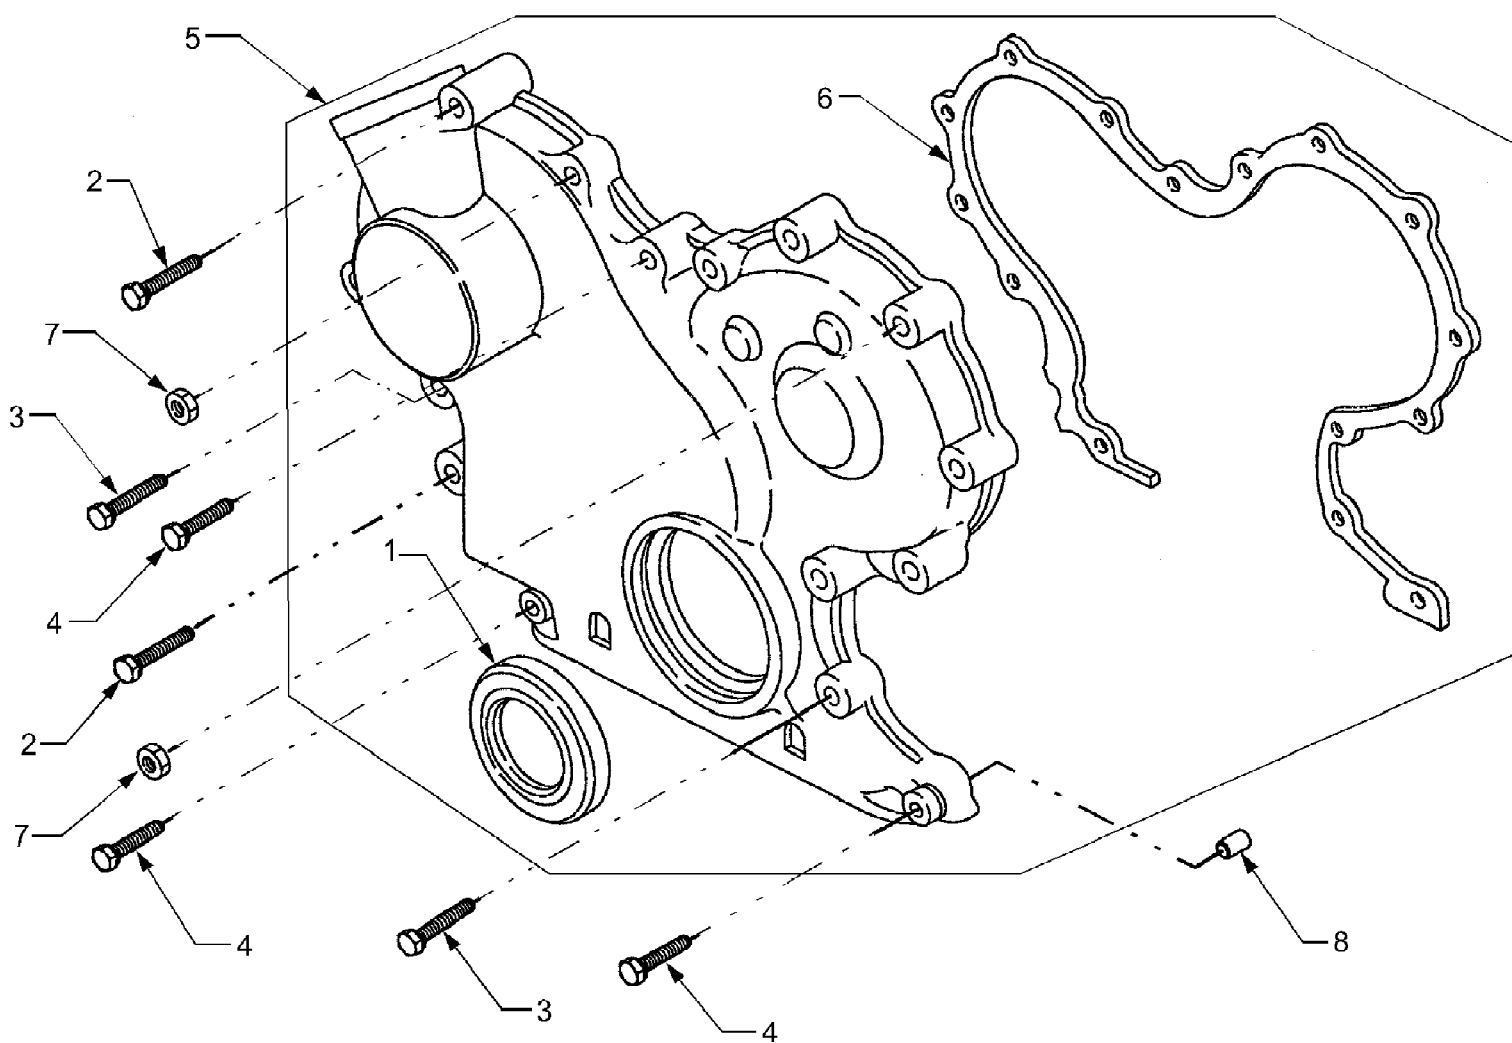


5234DL Tractor
Crankcase Cover

Page 31 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	BS-820055	1	S	Seal, Oil
2	BS-820425	2		Screw, Hex, 6mm
3	BS-820029	9		Screw, Hex, 6mm
4	BS-820027	3		Screw, Hex, 6mm
5	BS-825185	1		Cover Assembly, Gear
6	BS-820377	1		Gasket, Gear Cover
7	BS-820069	2		Nut, Hex Metric
8	BS-820061	2		Pin, Locating

5234DL Tractor
Crankshaft, Pistons & Flywheel

Page 32 of 115

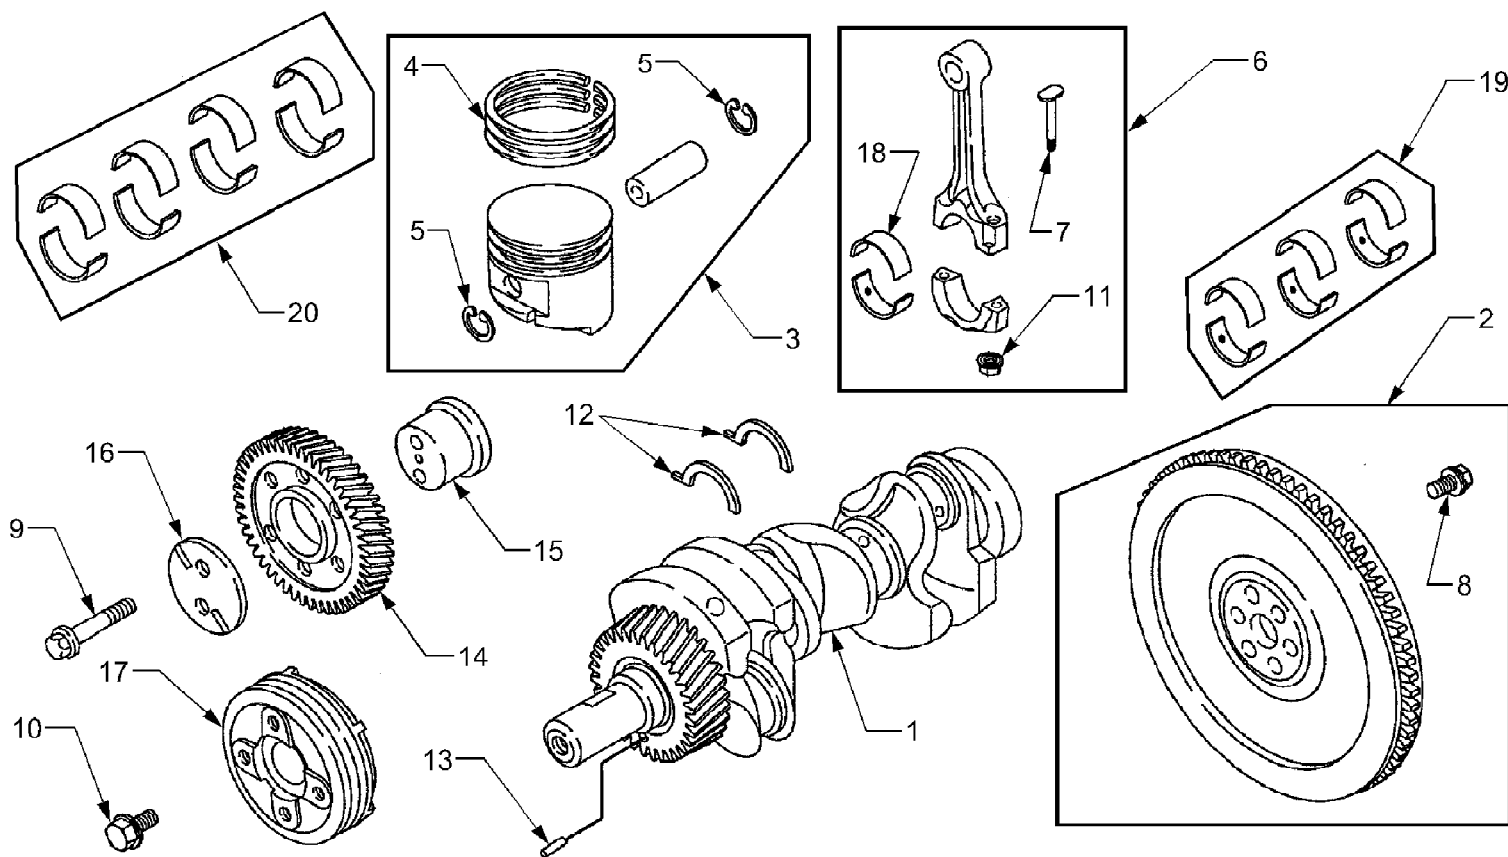


5234DL Tractor
Crankshaft, Pistons & Flywheel

Page 33 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	BS-825552	1		Crankshaft
2	BS-825303	1		Flywheel
3	BS-825354	3		Piston Assembly, Standard
	BS-825355	3		Piston Assembly, .010 Oversize
4	BS-825187	3		Ring Set, Standard
	BS-825188	3		Ring Set, .010 Oversize
5	BS-820402	6		Lock Ring, Piston Pin
6	BS-825171	3		Rod, Connecting
7	BS-820128	6		Screw, Connecting Rod
8	BS-820080	6		Screw, Hex, 10mm
9	BS-820081	2		Screw, Hex, 8mm
10	BS-820079	1		Screw, Hex
11	BS-820073	6		Nut, Hex
12	BS-820140	1	S	Washer, Thrust, Standard
	BS-820139	1		Washer, Thrust, .005 Oversize
13	BS-820059	1		Pin, Locating
14	BS-820611	1		Gear, Drive
15	BS-820116	1		Shaft, Gear
16	BS-820117	1		Plate, Idler Gear
17	BS-820236	1		Pulley, Crankshaft
18	BS-820142	3	S	Bearing, Rod Standard
19	BS-825019	3	S	Bearing Set, Rod Standard
	BS-825060	3		Bearing Set, Rod, .010 Undersize
20	BS-825040	1	S	Bearing Set, Main Standard
	BS-825039	1		Bearing Set, Main, .010 Undersize

5234DL Tractor
Cylinder Assembly

Page 34 of 115

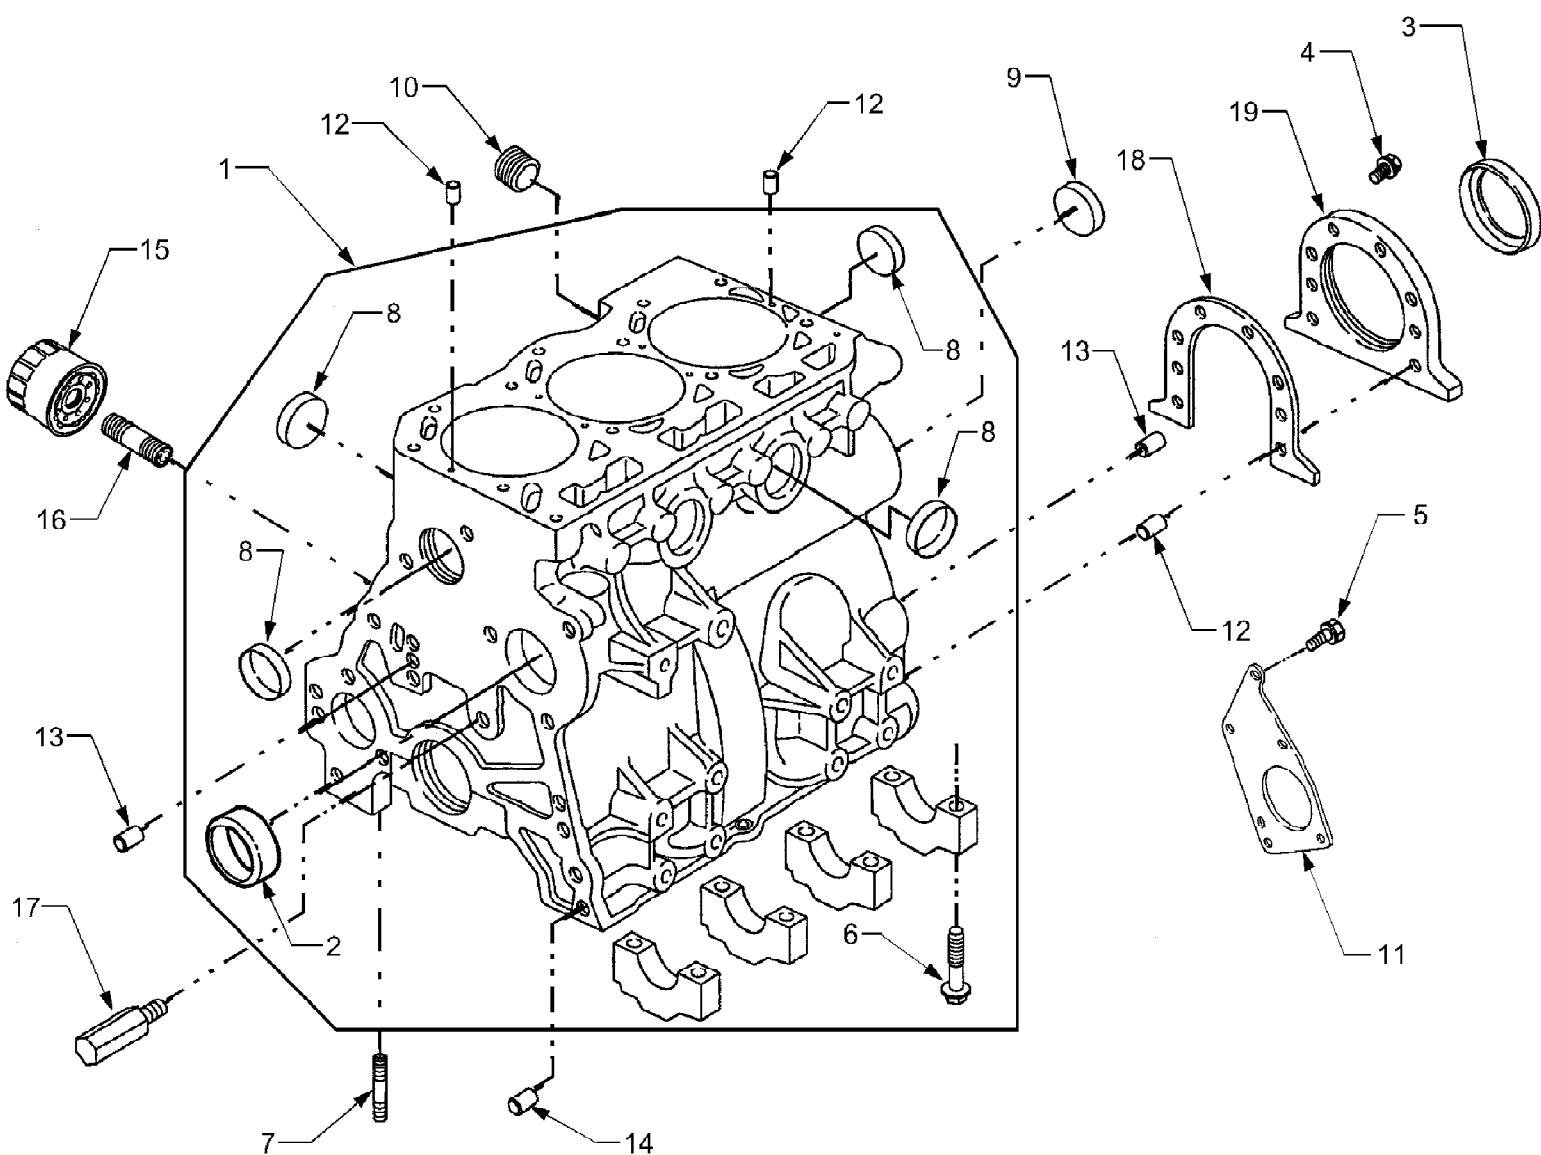


5234DL Tractor
Cylinder Assembly

Page 35 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	BS-825341	1		Cylinder Assembly (Includes 2, 6 & 8)
2	BS-820129	1	S	Bushing
3	BS-820056	1	S	Seal, Oil
4	BS-820031	6		Screw, Hex, 6mm
5	BS-820176	5		Screw, Hex, 10mm
6	BS-820042	8		Screw, Hex, 10mm
7	BS-820016	1		Stud, Metric
8	BS-820004	7		Plug, Welch
9	BS-820151	1		Plug, Welch Camshaft
10	BS-820375	1		Plug, Cylinder Block
11	BS-820147	1		Bracket, Mounting
12	BS-820063	4		Pin, Locating
13	BS-820062	3		Pin, Locating
14	BS-820061	2		Pin, Locating
15	BS-820314	1	/P	Filter, Oil
16	BS-820851	1		Adapter, Oil Filter
17	BS-820102	1		Nozzle, Oil
18	BS-820145	1		Gasket, Retainer
19	BS-820146	1		Seal, Retainer

5234DL Tractor
Cylinder Head And Manifolds

Page 36 of 115

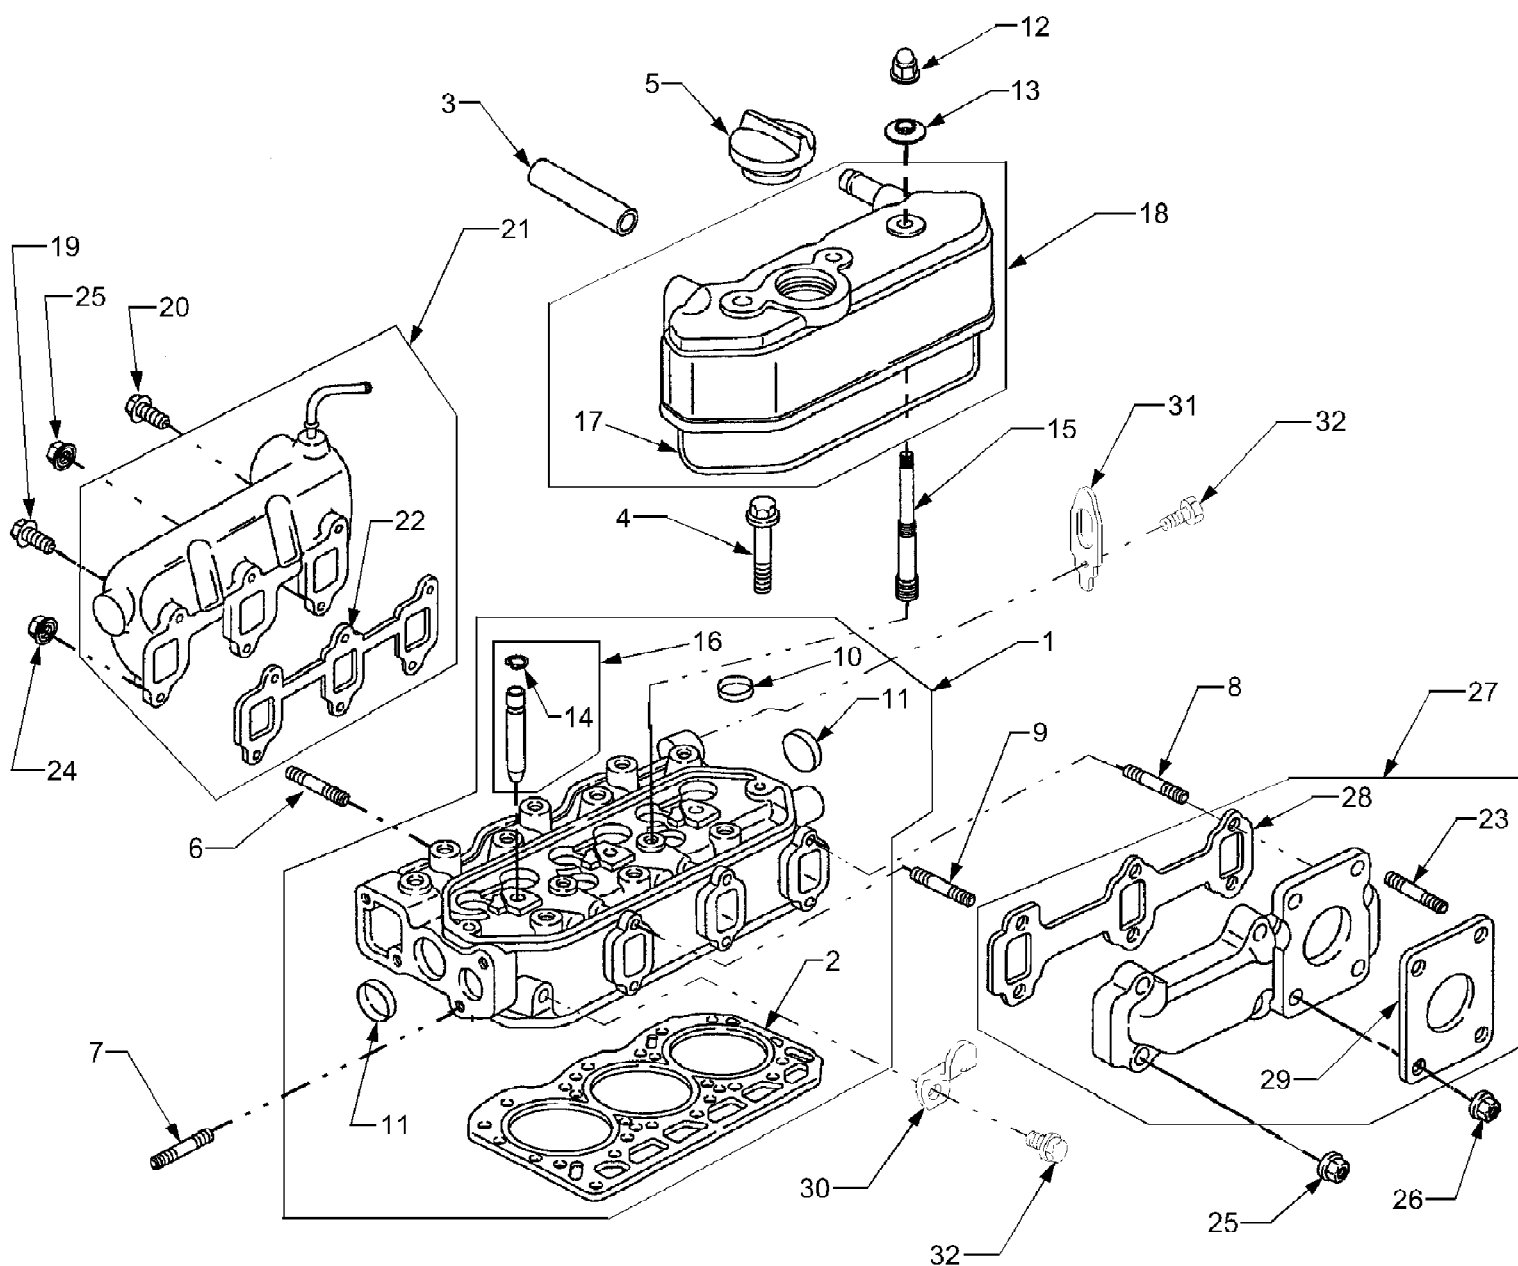


5234DL Tractor
Cylinder Head And Manifolds

Page 37 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	BS-825347	1	S	Head, Cylinder
2	BS-820621	1		Gasket, Cylinder Head
3	BS-821003	1		Tube, Breather
4	BS-820623	14		Screw, Metric
5	BS-825024	1		Cap, Oil Fill
6	BS-820015	2		Stud, Metric
7	BS-820078	2		Stud, Metric
8	BS-820014	5		Stud, Metric
9	BS-820466	1		Stud, Metric
10	BS-820004	2		Plug, Welch
11	BS-820005	2		Plug, Welch
12	BS-820071	3		Nut, Hex Metric
13	BS-820064	3		Washer, Sealing
14	BS-820130	6		Ring, Retainer
15	BS-820076	3		Stud, Rocker Arm
16	BS-825030	6		Bushing, Guide
17	BS-820150	1		Gasket, Rocker Cover
18	BS-825088	1		Cover, Rocker
19	BS-820031	1		Screw, Hex, 6mm
20	BS-820408	3		Screw, Hex, 6mm
21	BS-825175	1		Manifold, Intake
22	BS-820407	1		Gasket, Intake Manifold
23	BS-820584	4		Stud, Exhaust Manifold
24	BS-820069	2		Nut, Hex Metric
25	BS-820010	6		Nut, Hex Metric
26	BS-820178	4		Nut, Hex Metric
27	BS-825055	1		Manifold, Exhaust
28	BS-820088	1		Gasket, Exhaust Manifold
29	BS-820670	1	S	Gasket, Muffler
30	BS-820260	1		Bracket, Lift
31	BS-820254	1		Bracket, Lift
32	BS-820212	2		Screw

5234DL Tractor
Dash Panel And Steering Wheel 1B065G & Before

Page 38 of 115

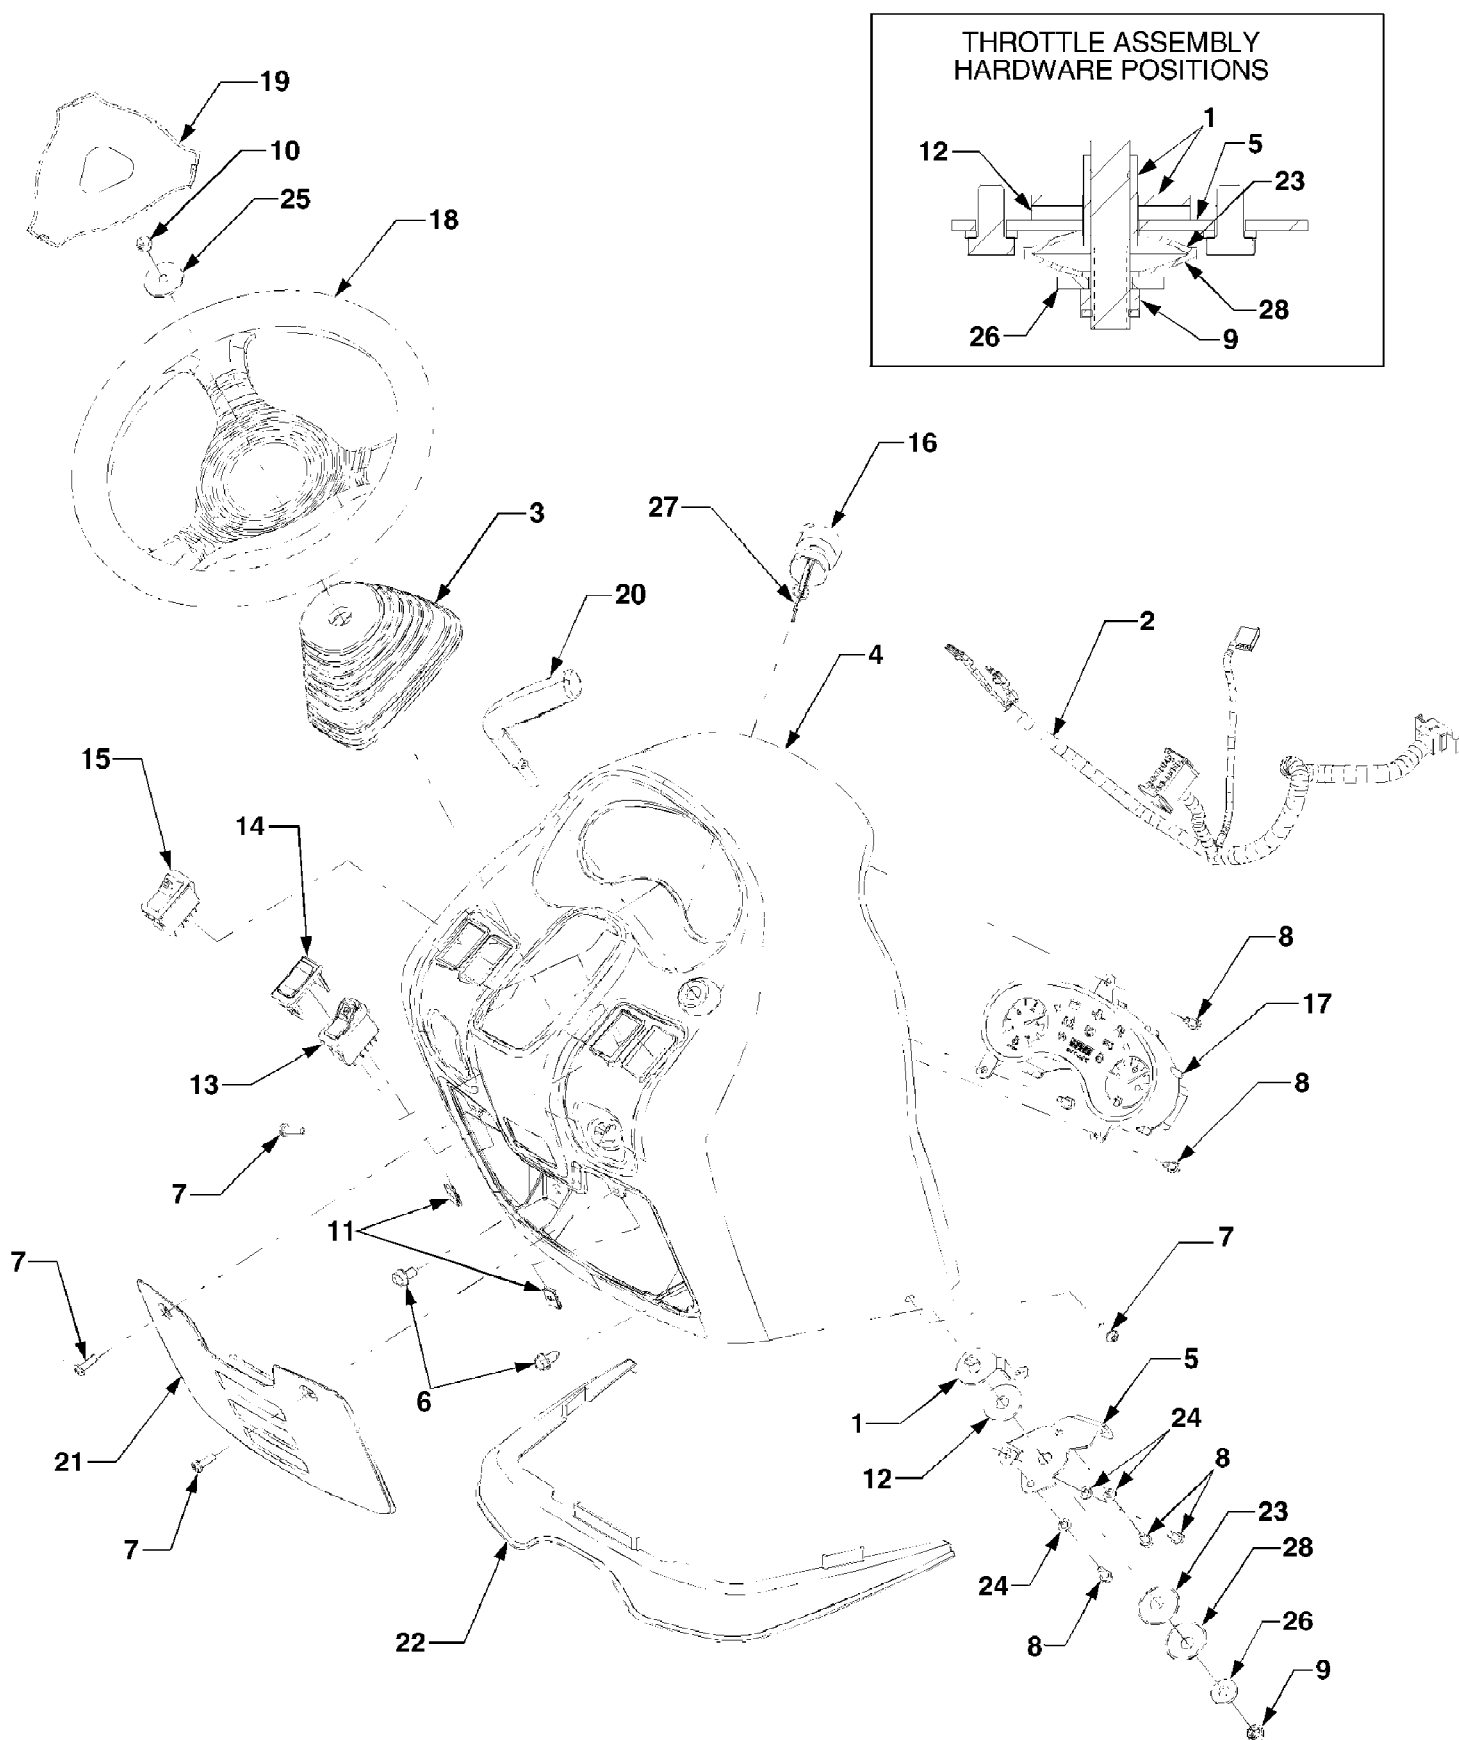


5234DL Tractor
Dash Panel And Steering Wheel 1B065G & Before

Page 39 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	603-0711A	1	S	Tab Assembly, Throttle
2	629-04058	1	S	Wire Harness, Dash
3	631-0076	1		Boot, Steering Shaft
4	631-04007B	1	S	Dash
5	703-05132	1	S	Bracket, Throttle Mtg.
6	710-0604A	2	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .625
7	710-0924	4	/P	Screw, Pan Hd., 1/4-20 x .75
8	710-3013	6	/P	Screw, Hex Cap, 1/4-20 x .5 GR5
9	712-0116	1	S	Nut, Hex Insert Jam Lock, 3/8-24
10	712-0237	1	S	Nut, Hex Lock, 5/16-24
11	712-0292	2	/P	Nut, Speed, 1/4-20
12	723-3013	1	S	Washer, Friction, .515 x 1.5 x .12
13	725-04076	1	S	Switch, PTO
14	725-2017	1		Plug
15	725-3274	1		Switch, Headlight
16	725-3277	1	S	Switch, Ignition
17	725-3288	1	S	Panel, Instrument
18	731-3209	1		Steering Wheel, Soft Grip
19	731-3210	1		Cover, Steering Wheel
20	731-3298	1		Handle, Throttle
21	731-3344	1		Panel, Dash Insert
22	731-3372	1	S	Extension, Dash
23	736-0112	1	/P	Washer, Belleville, .531 x 1.62 x .045
24	736-0329	3	S	Washer, Lock, 1/4
25	736-04062	1	S	Washer, Flat, .344 x 1.5 x .1
26	736-3052	1	/P	Washer, Flat, .406 x 1.0 x .105
27	759-3950	1	S	Key Set, Ignition
28	736-04164	1		Washer, Spher., .39 x 1.62 x .045
	725-1648	1	S	P.T.O. Relay Not Shown
	721-0342	1	S	Gasket Not Shown

5234DL Tractor Dash Panel And Steering Wheel 1B075G & After


Page 40 of 115

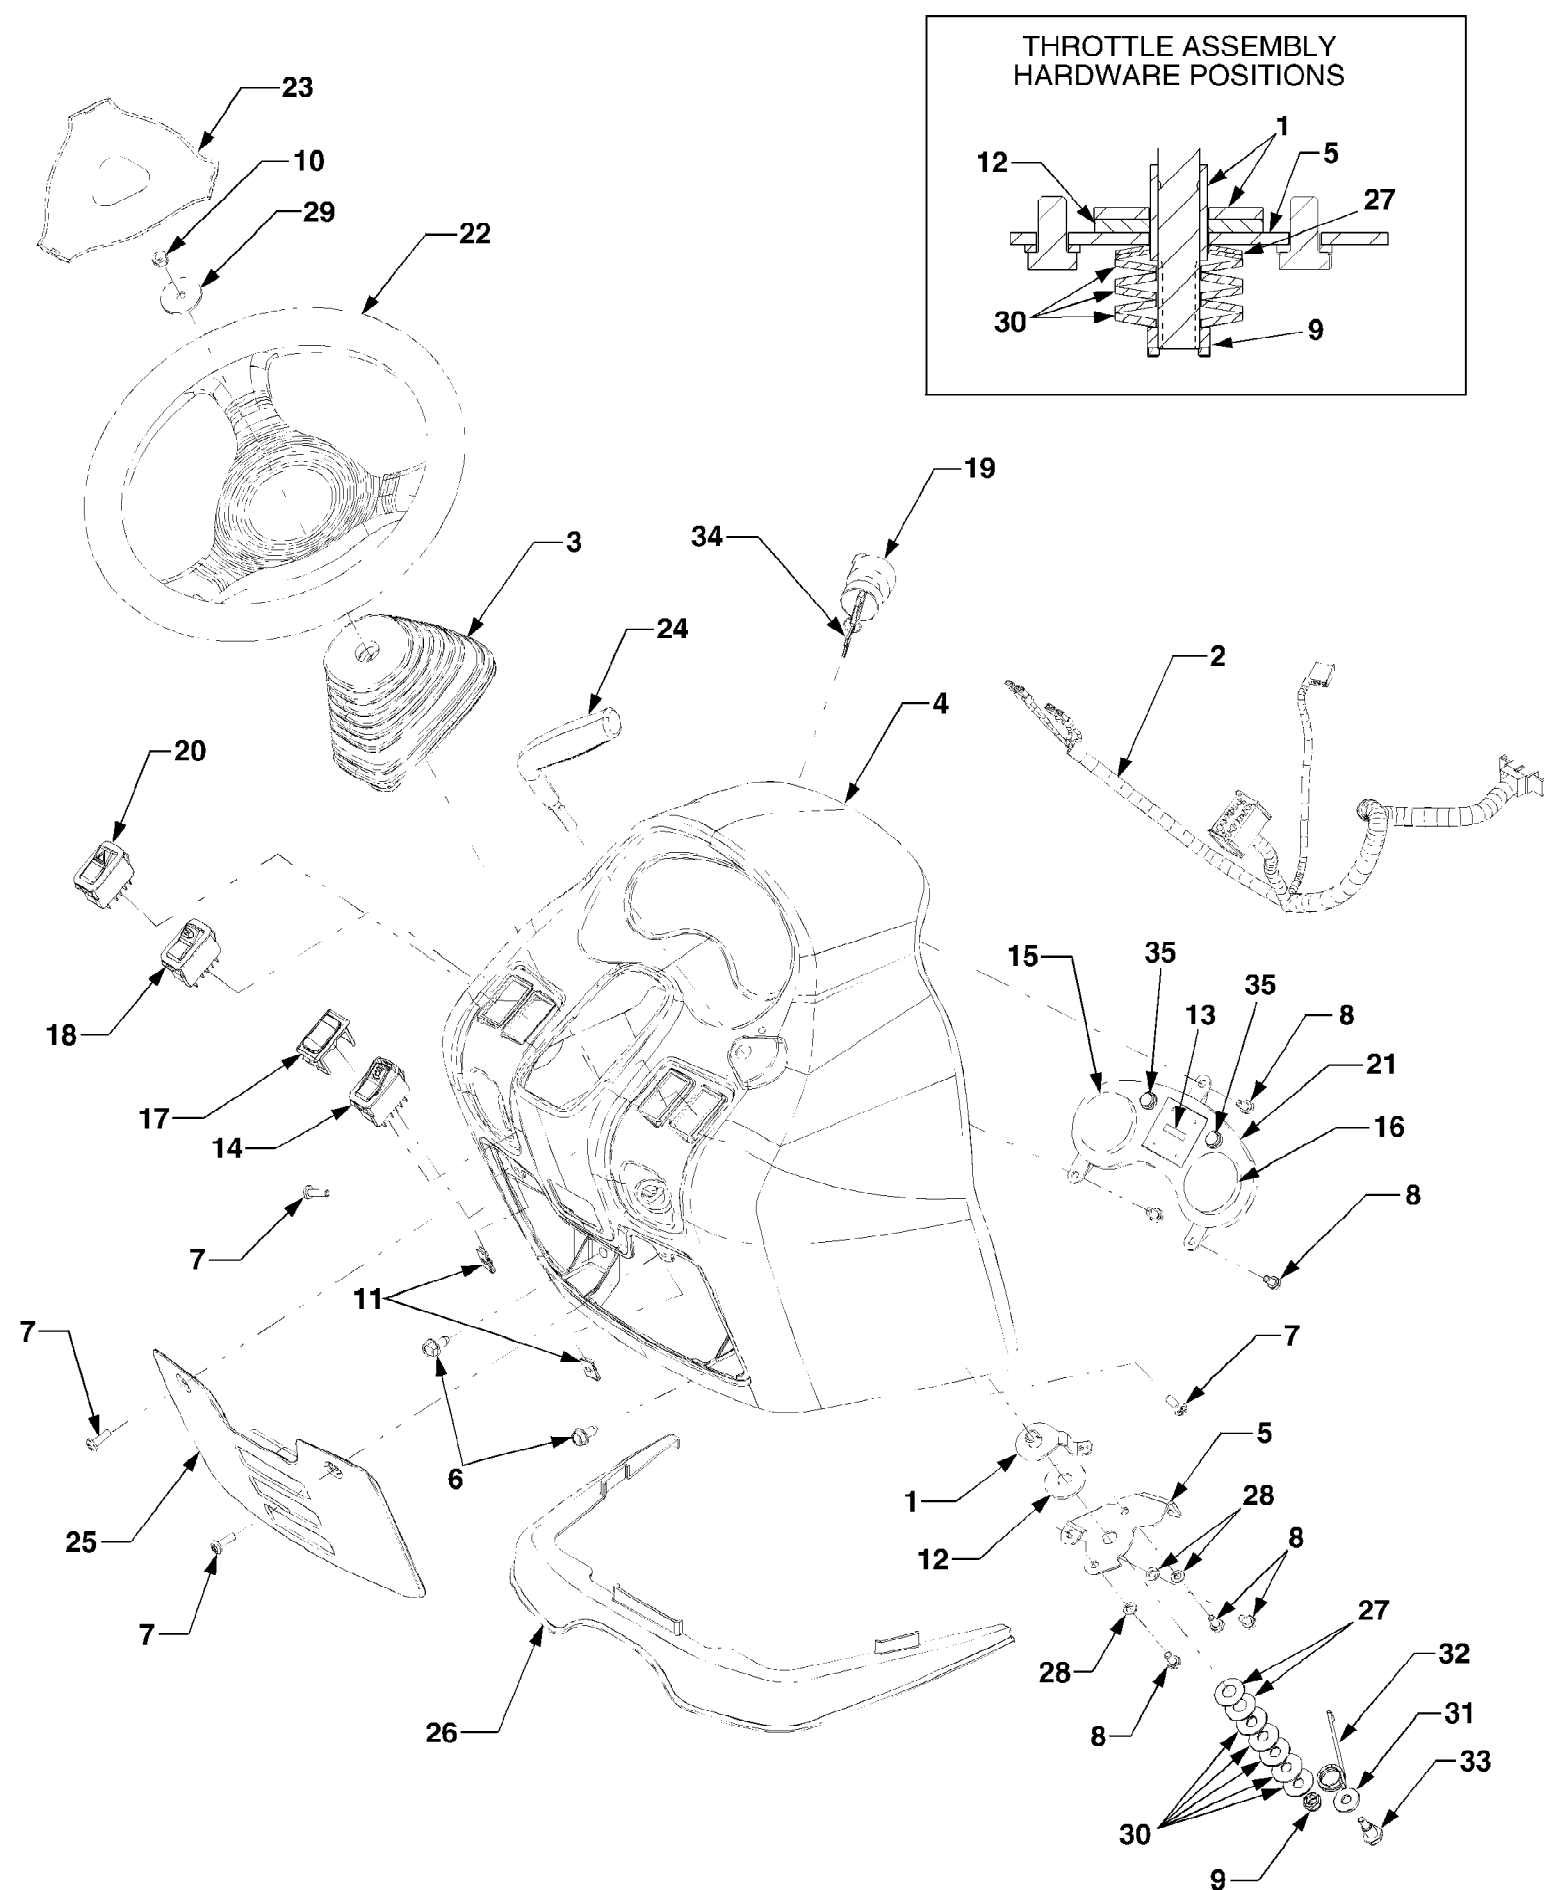

5234DL Tractor
Dash Panel And Steering Wheel 1B075G & After

Page 41 of 115


Ref #	Part Number	Qty	S/P/F	Description
1	603-04305	1	/P	Bracket, Throttle Cable
2	629-04112	1		Wire Harness, Dash
3	631-0076	1		Boot, Steering Shaft
4	631-04007B	1	S	Dash
5	703-05132A	1	/P	Bracket, Throttle Mtg.
6	710-0604A	2	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .625
7	710-0924	4	/P	Screw, Pan Hd., 1/4-20 x .75
8	710-3013	5	/P	Screw, Hex Cap, 1/4-20 x .5 GR5
9	712-0116	1	S	Nut, Hex Insert Jam Lock, 3/8-24 ..
10	712-0237	1	S	Nut, Hex Lock, 5/16-24
11	712-0292	2	/P	Nut, Speed, 1/4-20
12	723-3013	1	S	Washer, Friction, .515 x 1.5 x .12 ..
13	725-04022	1	S	Meter, Hour/Indicator
14	725-04076	1	S	Switch, PTO
15	725-04241	1		Gauge, Fuel
16	725-04242	1		Gauge, RPM
17	725-2017	1		Plug
18	725-3274	1		Switch, Headlight
19	725-3277	1	S	Switch, Ignition
20	725-3279B	1	/P	Switch, Hazard
21	731-05066	1		Panel, Meter
22	731-3209	1		Steering Wheel, Soft Grip
23	731-3210	1		Cover, Steering Wheel
24	731-3298	1		Handle, Throttle
25	731-3344	1		Panel, Dash Insert
26	731-3372	1	S	Extension, Dash
27	736-0255	2	S	Washer, Belleville, .51 x 1.14 x .04
28	736-0329	2	S	Washer, Lock, 1/4
29	736-04062	1	S	Washer, Flat, .344 x 1.5 x .1
30	736-0331	5	/P	Washer, Belleville, .39 x 1.13 x .062
31	736-3072	1	/P	Washer, Flat, .38 x .93 x .110 Hdn
32	732-04288	1		Spring, Torsion
33	738-04170	1		Screw, Shoulder, .374 x .56
34	759-3950	1	S	Key Set, Ingition
35	725-04243	2	S	Lamp, Yellow Panel
	725-1648	1	S	P.T.O. Relay Not Shown
	721-0342	1	S	Gasket Not Shown

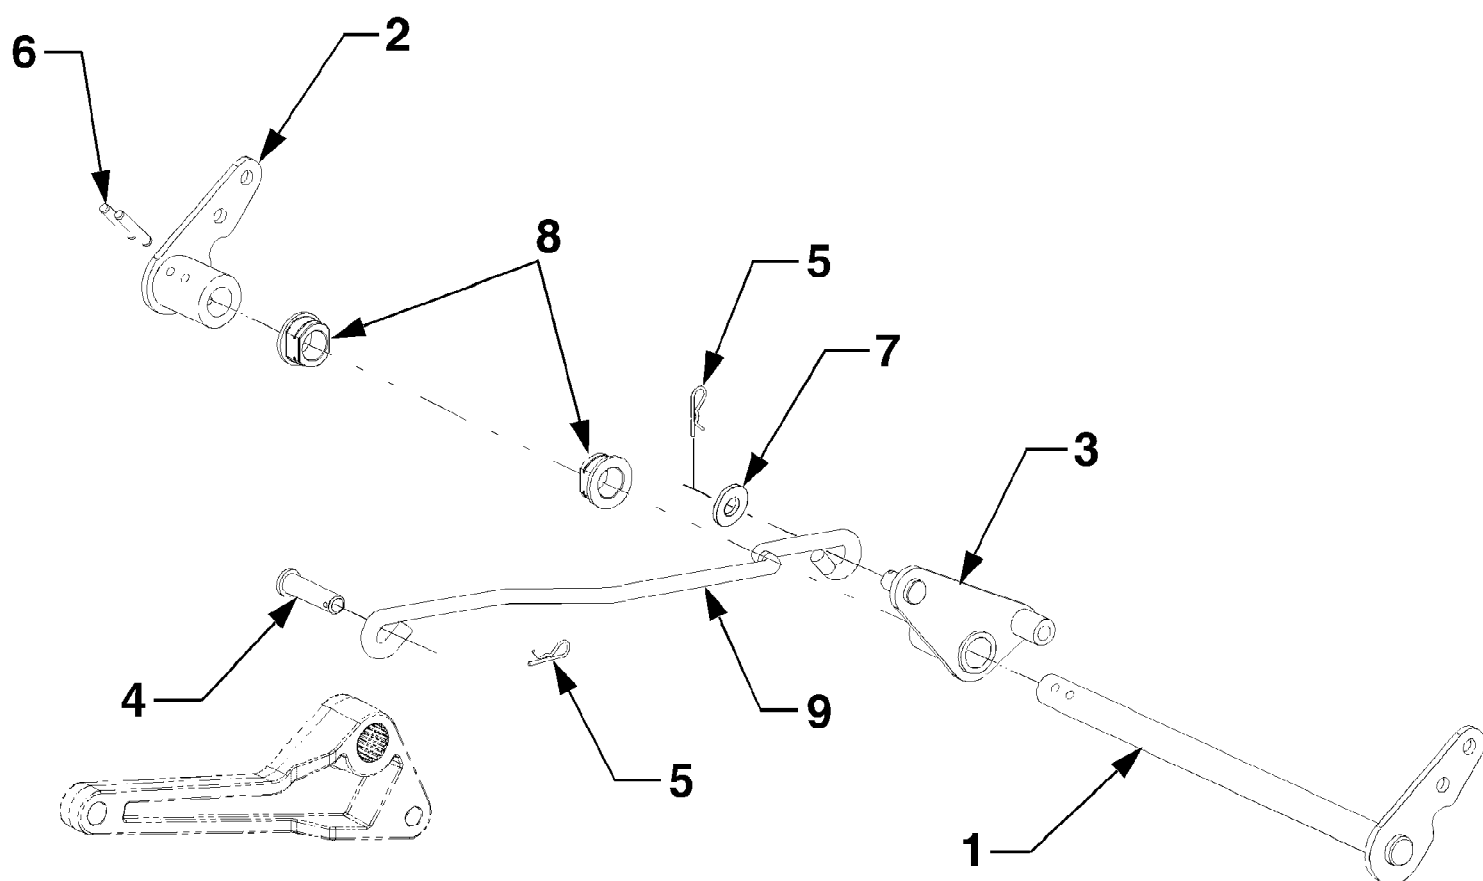

5234DL Tractor
Deck Lift

Page 43 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	603-0959	1	S	Shaft. Lift
2	603-0960-0637	1	/P	Arm, Lift
3	603-0979-0637	1		Plate, Lift Crank
4	711-04343	1		Pin, Clevis, .625 x 2.18
5	714-0145	2	S	Pin, Internal Cotter
6	715-0118	2	S	Pin, Spirol, 5/16 x 1.75
7	736-0531	1	S	Washer, Flat, .635 x 1.24 x .181
8	741-0170	2	S	Bearing, Flange w/Flats
9	747-3484A	1	/P	Rod, Crank Lift

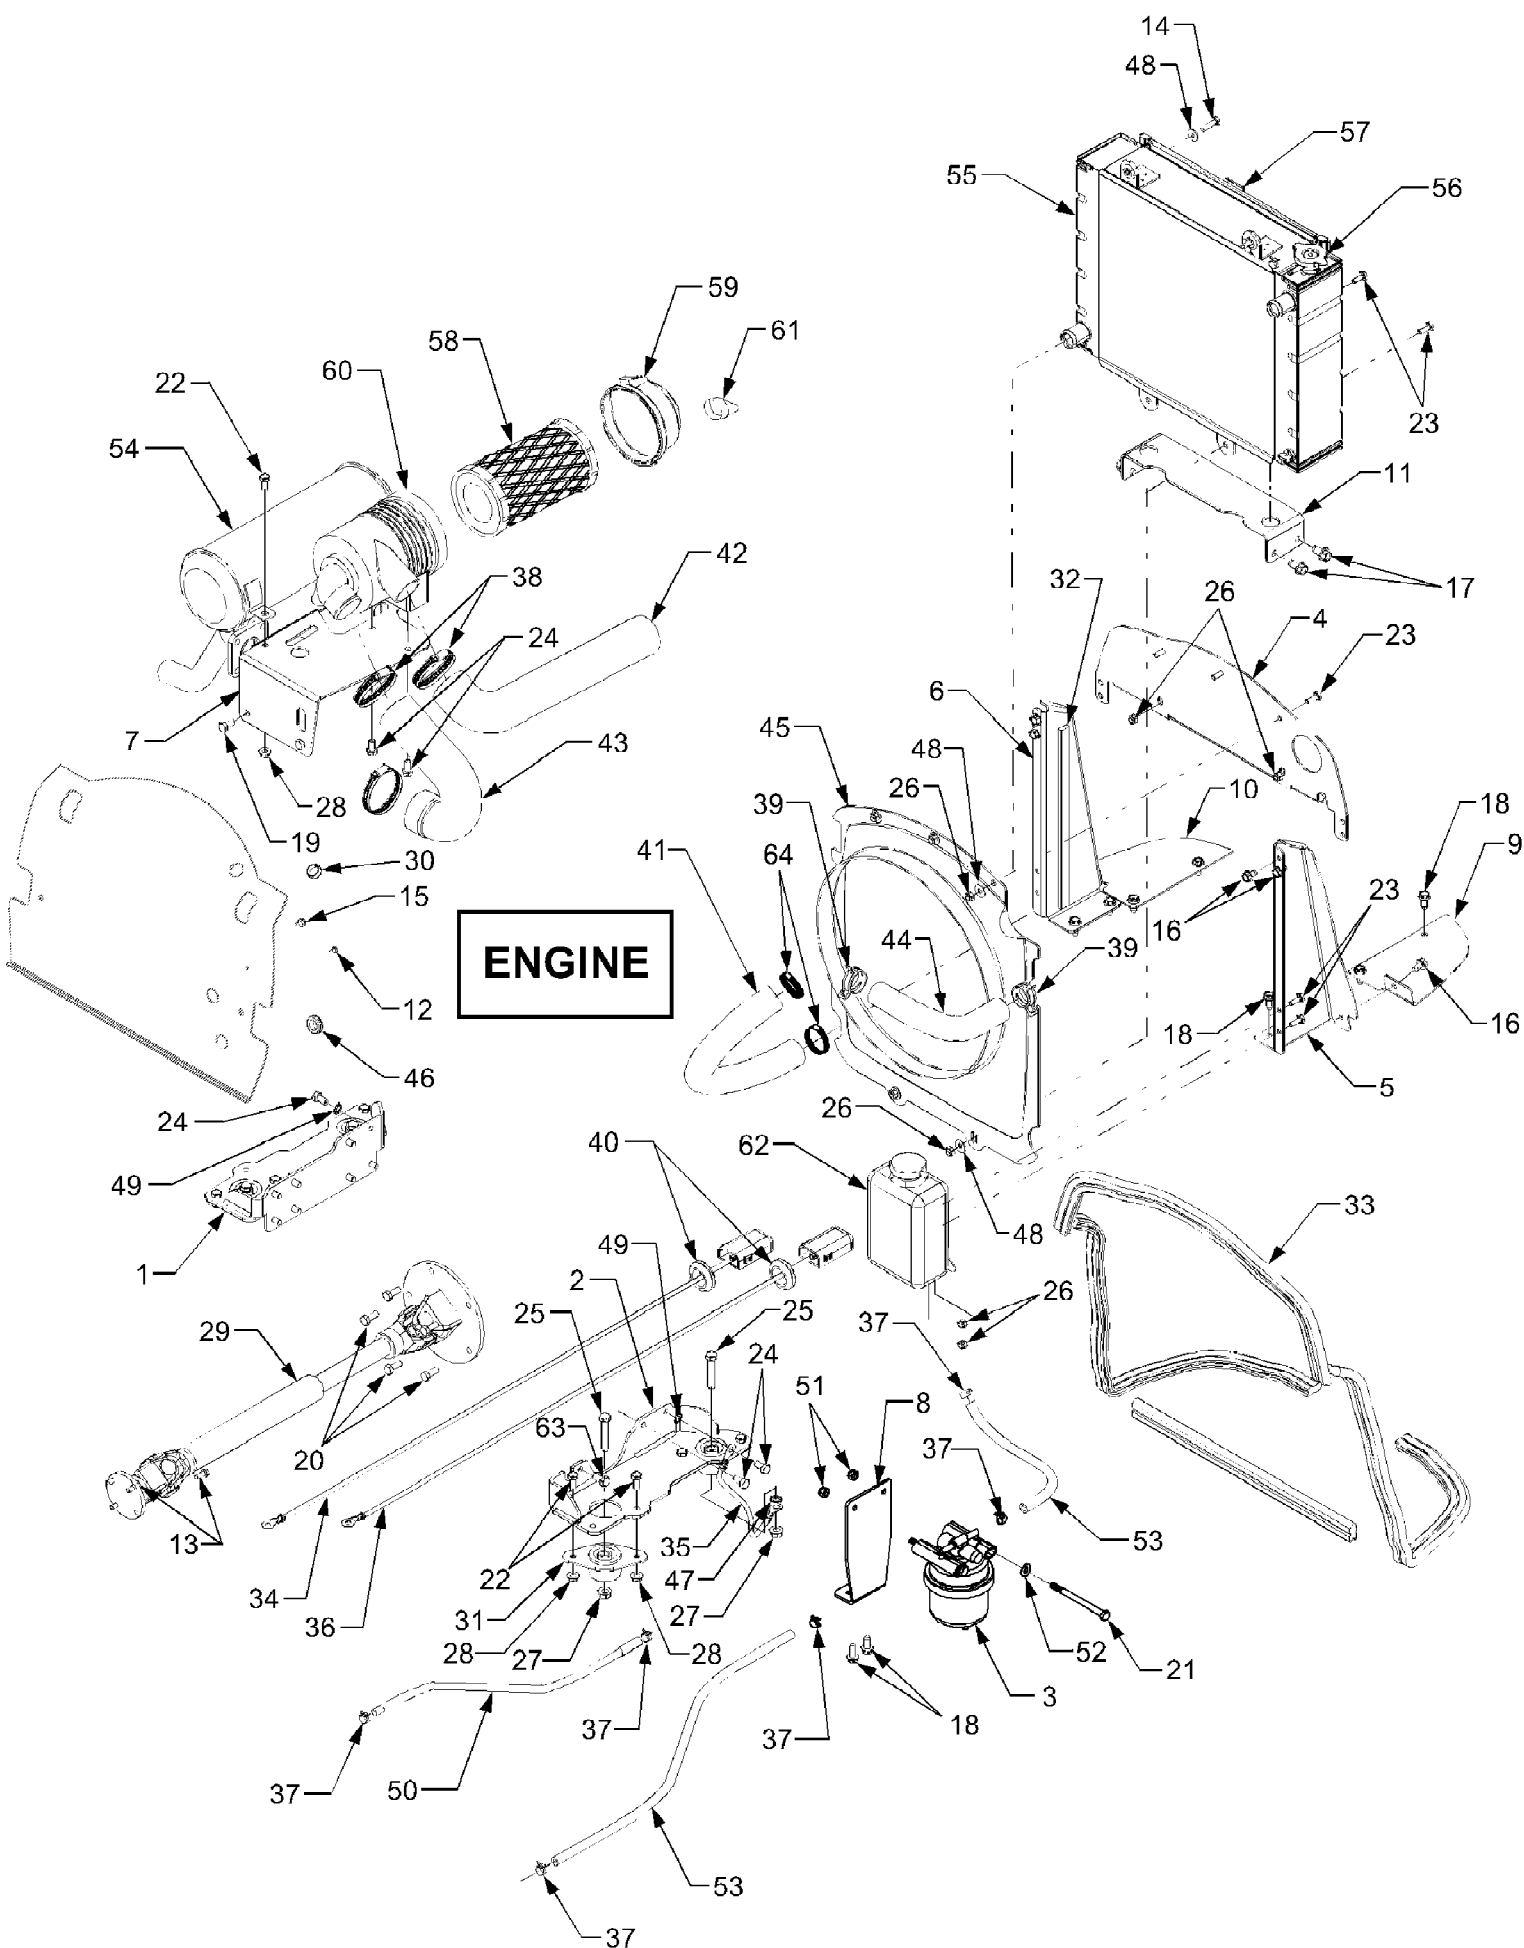

5234DL Tractor
Engine And Drive Shaft 1B065G & Before

Page 45 of 115

Ref #	Part Number	Qty	S/P/F	Description
	629-3062B	1	S	Harness, Engine Wire Not Shown
1	603-0744-0637	1	/P	Bracket, Engine LH
2	603-0745-0637	1	/P	Bracket, Engine RH
3	651-04044	1	S	Filter Assembly, Fuel
	759-04027	1		Filter Element
4	703-3483	1		Plate, Radiator Baffle
	777S30631	1		Graphic, Fan Warning
	777S30633	1		Graphic, Warning
5	703-3484	1		Bracket, Radiator Mtg. RH
	777S30632	1		Graphic, Warning
6	703-3485	1		Bracket, Radiator Mtg. LH
	777S30632	1		Graphic, Warning
7	703-3486	1		Bracket, Muffler Mtg
8	703-05280	1	S	Bracket, Fuel Filter Mtg
9	703-05141	1	S	Plate, Baffle RH
10	703-05140	1	S	Plate, Baffle, LH
11	703-3741	1		Bracket, Radiator Mtg
12	710-0224	1	S	Screw, Hex Wash Hd Tapp 10-16 x .5
13	710-0751	4	/P	Screw, Hex Cap, 1/4-20 x .62 GR5
14	710-0597	2	/P	Screw, Hex Cap 1/4-20 x 1.0 GR5
15	710-0599	1	/P	Screw, Hex Wash Hd Tapp 1/4-20 x .5
16	710-0607	6	/P	Screw, Hex Wash Hd Tapp 5/16-18 x .5
17	710-0623	4	/P	Screw, Hex Wash Hd Tapp 3/8-16 x .75
18	710-1260A	10	/P	Screw, Hex Wash Hd Tapp 5/16-18 x .75
19	710-1376	3	/P	Screw, Hex Cap, M8-1.25 x 16
20	710-1681	5	/P	Screw, Hex Cap, M8-1.25 x 20
21	710-0190	2	/P	Screw, Hex Cap, 5/16-18 x 4.0 GR5
22	710-3008	10	/P	Screw, Hex Cap 5/16-18 x .75 GR5
23	710-3015	7	/P	Screw, Hex Cap 1/4-20 x .75 GR5
24	710-3138	17	/P	Screw, Hex Cap, M8-1.25 x 16
25	710-3144	4	/P	Screw, Hex Cap 3/8-16 x 2/0 GR5
26	712-0324	9	/P	Nut, Hex Insert Lock, 1/4-20
27	712-0431	4	S	Nut, Hex Flange Lock, 3/8-16
28	712-3004A	10	/P	Nut, Hex Flange Lock, 5/16-18
29	717-3548A	1	S	Shaft, Drive
30	720-0425	1		Plug, Cap
31	722-0262	4		Mount, Neoprene Engine
32	722-3022	42in.	S	Tape, Foam, .625 wide
33	723-3061	96in.		Seal, Heat Baffle
34	725-3281	1		Wire, Battery Pos
35	725-3283	1		Wire, Ground
36	725-3287	1		Wire, Battery Neg.
37	726-0205	7	/P	Clamp, Hose
38	726-0476	3		Clamp, Adjustable Hose
39	726-04026	2		Clamp, Hose
40	731-04018	2		Grommet, Hose Guard
41	731-3304A	1		Hose, Radiator to Engine
42	731-3348	1		Hose, Air Filter
43	731-3349	1		Hose, Air Inlet
44	731-3350	1		Hose, Engine to Radiator
45	731-3363	1		Shroud, Fan
46	735-0226	1		Grommet, Rubber
47	736-0148	1	/P	Washer, External Lock, 3/8


5234DL Tractor
Engine And Drive Shaft 1B065G & Before

Page 46 of 115

Ref #	Part Number	Qty	S/P/F	Description
48	736-0173	7	/P	Washer, Flat, .28 x .74 x .063
49	736-0607	2	/P	Washer, External Lock, 5/16
50	751-0535	77in.		Hose, Fuel Line
51	712-0429	2	S	Nut, Hex Insert Lock, 5/16-18
52	736-0275	2	S	Washer, Flat, .344 x .688 x .065
53	751-3130	92in.		Fuel Line, 5/16 ID
54	751-3163	1		Muffler, Engine
55	751-3165	1		Radiator
	722-0268	2		Grommet, Rubber Mtg
56	751-3192	1	S	Cap, Radiator, 13psi
57	751-3193	1		Screen, Debris
58	751-3194	1	/P	Element, Air Cleaner
59	751-3195	1		Cap, Air Cleaner
60	751-3196	1		Cannister, Air Cleaner
61	751-3197	1		Nozzle, Air Cleaner
62	BS-825462	1		Bottle, Overflow
63	710-3206A	1	/P	Screw, Hx Cap, M8-1.25:25 GR8
64	726-0132	2	/P	Clamp, Hose

5234DL Tractor
Engine And Drive Shaft 1B075G & After

Page 47 of 115

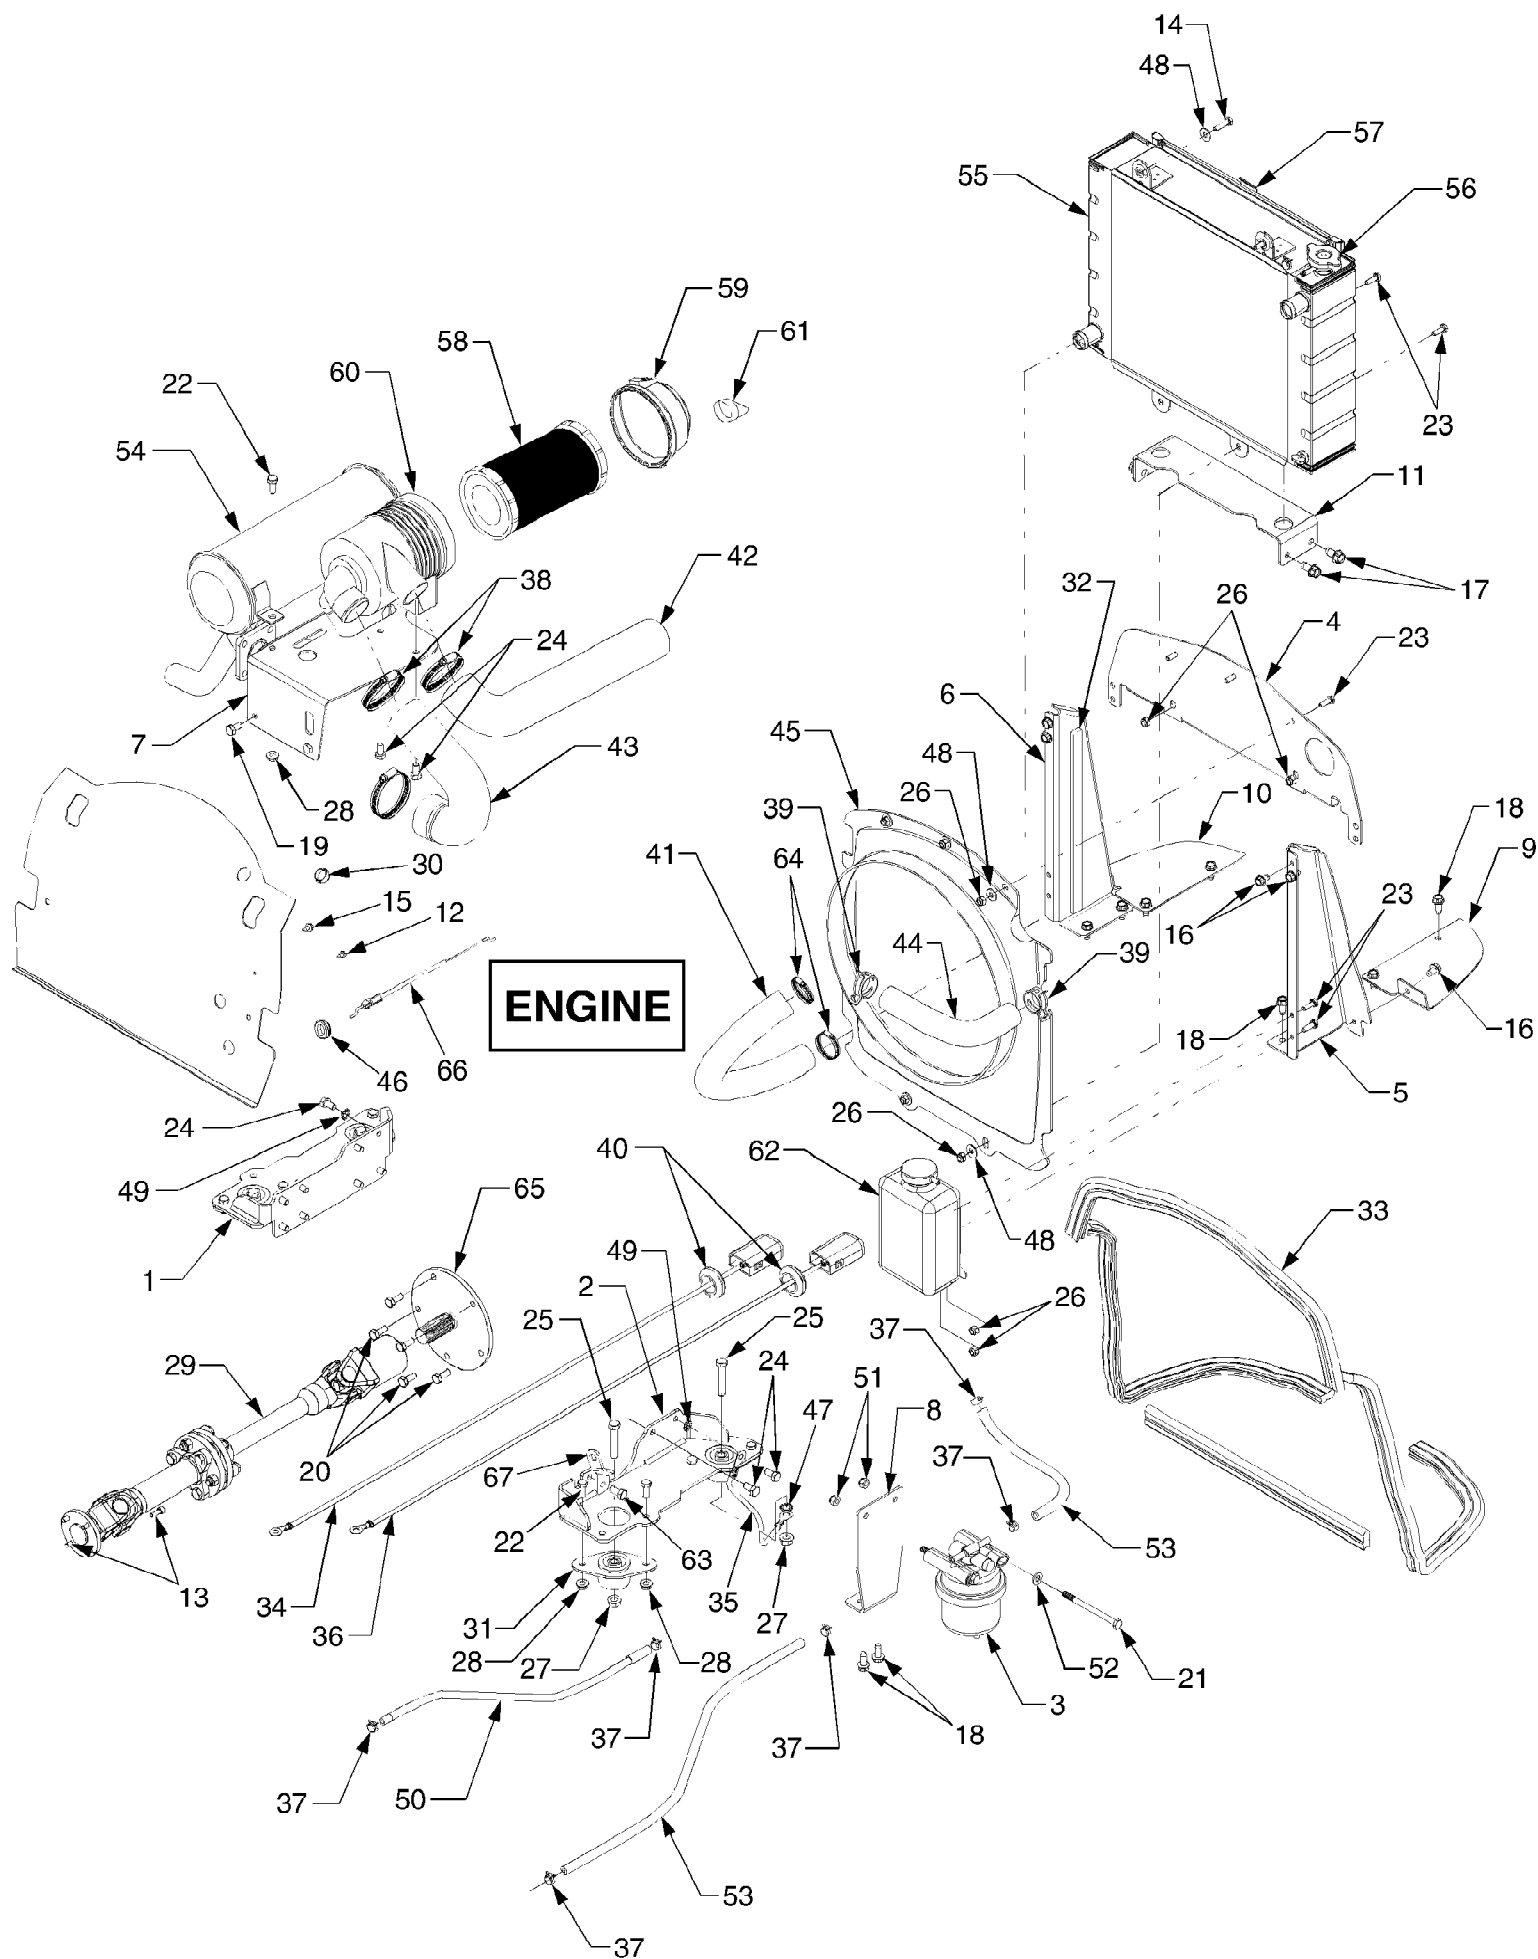

5234DL Tractor
Engine And Drive Shaft 1B075G & After

Page 48 of 115

Ref #	Part Number	Qty	S/P/F	Description
	629-3062B	1	S	Harness, Engine Wire not shown
1	603-0744-0637	1	/P	Bracket, Engine LH
2	603-0745-0637	1	/P	Bracket, Engine RH
3	651-04044	1	S	Filter Assembly, Fuel
3	759-04027	1		Filter Element
4	703-3483	1		Plate, Radiator Baffle
4	777S30631	1		Graphic, Fan Warning
4	777S30633	1		Graphic, Warning
5	703-3484	1		Bracket, Radiator Mtg. RH
5	777S30632	1		Graphic, Warning
6	703-3485	1		Bracket, Radiator Mtg. LH
6	777S30632	1		Graphic, Warning
7	703-3486	1		Bracket, Muffler Mtg.
8	703-05454	1	S	Bracket, Fuel Filter Mtg.
9	703-05141B	1		Plate, Baffle RH
10	703-05140B	1		Plate, Baffle, LH
11	703-3741	1		Bracket, Radiator Mtg.
12	710-0224	1	S	Screw, Hex Wash Hd Tapp 10-16 x .5
13	710-3218	4		Screw, Socket Hd. Cap, 1/4-20 x .62 GR8
14	710-0597	2	/P	Screw, Hex Cap 1/4-20 x 1.0 GR5
15	710-0599	1	/P	Screw, Hex Wash Hd Tapp 1/4-20 x .5
16	710-0607	6	/P	Screw, Hex Wash Hd Tapp 5/16-18 x .5
17	710-0623	4	/P	Screw, Hex Wash Hd Tapp 3/8-16 x .75
18	710-1260A	10	/P	Screw, Hex Wash Hd Tapp 5/16-18 x .75
19	710-1376	3	/P	Screw, Hex Cap, M8-1.25 x 16
20	710-1681	5	/P	Screw, Hex Cap, M8-1.25 x 20
21	710-0190	2	/P	Screw, Hex Cap, 5/16-18 x 4.0 GR5
22	710-3008	10	/P	Screw, Hex Cap 5/16-18 x .75 GR5
23	710-3015	7	/P	Screw, Hex Cap 1/4-20 x .75 GR5
24	710-3138	17	/P	Screw, Hex Cap, M8-1.25 x 16
25	710-3144	4	/P	Screw, Hex Cap 3/8-16 x 2/0 GR5
26	712-04064	9	/P	Nut, Hx Insert Flange Lk, 1/4-20
27	712-04065	4	/P	Nut, Hx Insert Flange Lk, 3/8-16
28	712-04063	10	/P	Nut, Hx Insert Flange Lk, 5/16-18
29	717-04193	1	S	Shaft, Drive
30	720-0425	1		Plug, Cap
31	722-0262	4		Mount, Neoprene Engine
32	722-3022	1	S	Tape, Foam, .625 wide 42in.
33	723-3061	1		Seal, Heat Baffle 96in.
34	725-3281	1		Wire, Battery Pos.
35	725-3283	1		Wire, Ground
36	725-3287	1		Wire, Battery Neg.
37	726-0205	7	/P	Clamp, Hose
38	726-0476	3		Clamp, Adjustable Hose
39	726-04026	2		Clamp, Hose
40	731-04018	2		Grommet, Hose Guard
41	731-3304A	1		Hose, Radiator to Engine
42	731-3348	1		Hose, Air Filter
43	731-3349	1		Hose, Air Inlet
44	731-3350	1		Hose, Engine to Radiator
45	731-3363	1		Shroud, Fan
46	735-0226	1		Grommet, Rubber
47	736-0148	1	/P	Washer, External Lock, 3/8


5234DL Tractor
Engine And Drive Shaft 1B075G & After

Page 49 of 115

Ref #	Part Number	Qty	S/P/F	Description
48	736-0173	7	/P	Washer, Flat, .28 x .74 x .063
49	736-0607	2	/P	Washer, External Lock, 5/16
50	751-0535	1		Hose, Fuel Line 77in.
51	712-04063	2	/P	Nut, Hx Insert Flange Lk, 5/16-18
52	736-0275	2	S	Washer, Flat, .344 x .688 x .065
53	751-3130	1		Fuel Line, 5/16 ID 92in.
54	751-3163	1		Muffler, Engine
55	751-3165	1		Radiator
55	722-0268	2		Grommet, Rubber Mtg.
56	751-3192	1	S	Cap, Radiator, 13psi
57	751-3193	1		Screen, Debris
58	751-3194	1	/P	Element, Air Cleaner
59	751-3195	1		Cap, Air Cleaner
60	751-3196	1		Cannister, Air Cleaner
61	751-3197	1		Nozzle, Air Cleaner
62	BS-825462	1		Bottle, Overflow
63	710-3206A	1	/P	Screw, Hx Cap, M8-1.25:25 GR8
64	726-0132	2	/P	Clamp, Hose
65	603-04294	1	S	Plate, Flywheel
66	746-3086A	1		Cable, Throttle
67	703-05200	1		Bracket, Pump Mtg.

5234DL Tractor
Fender And Running Board 1B065G & Before

Page 50 of 115

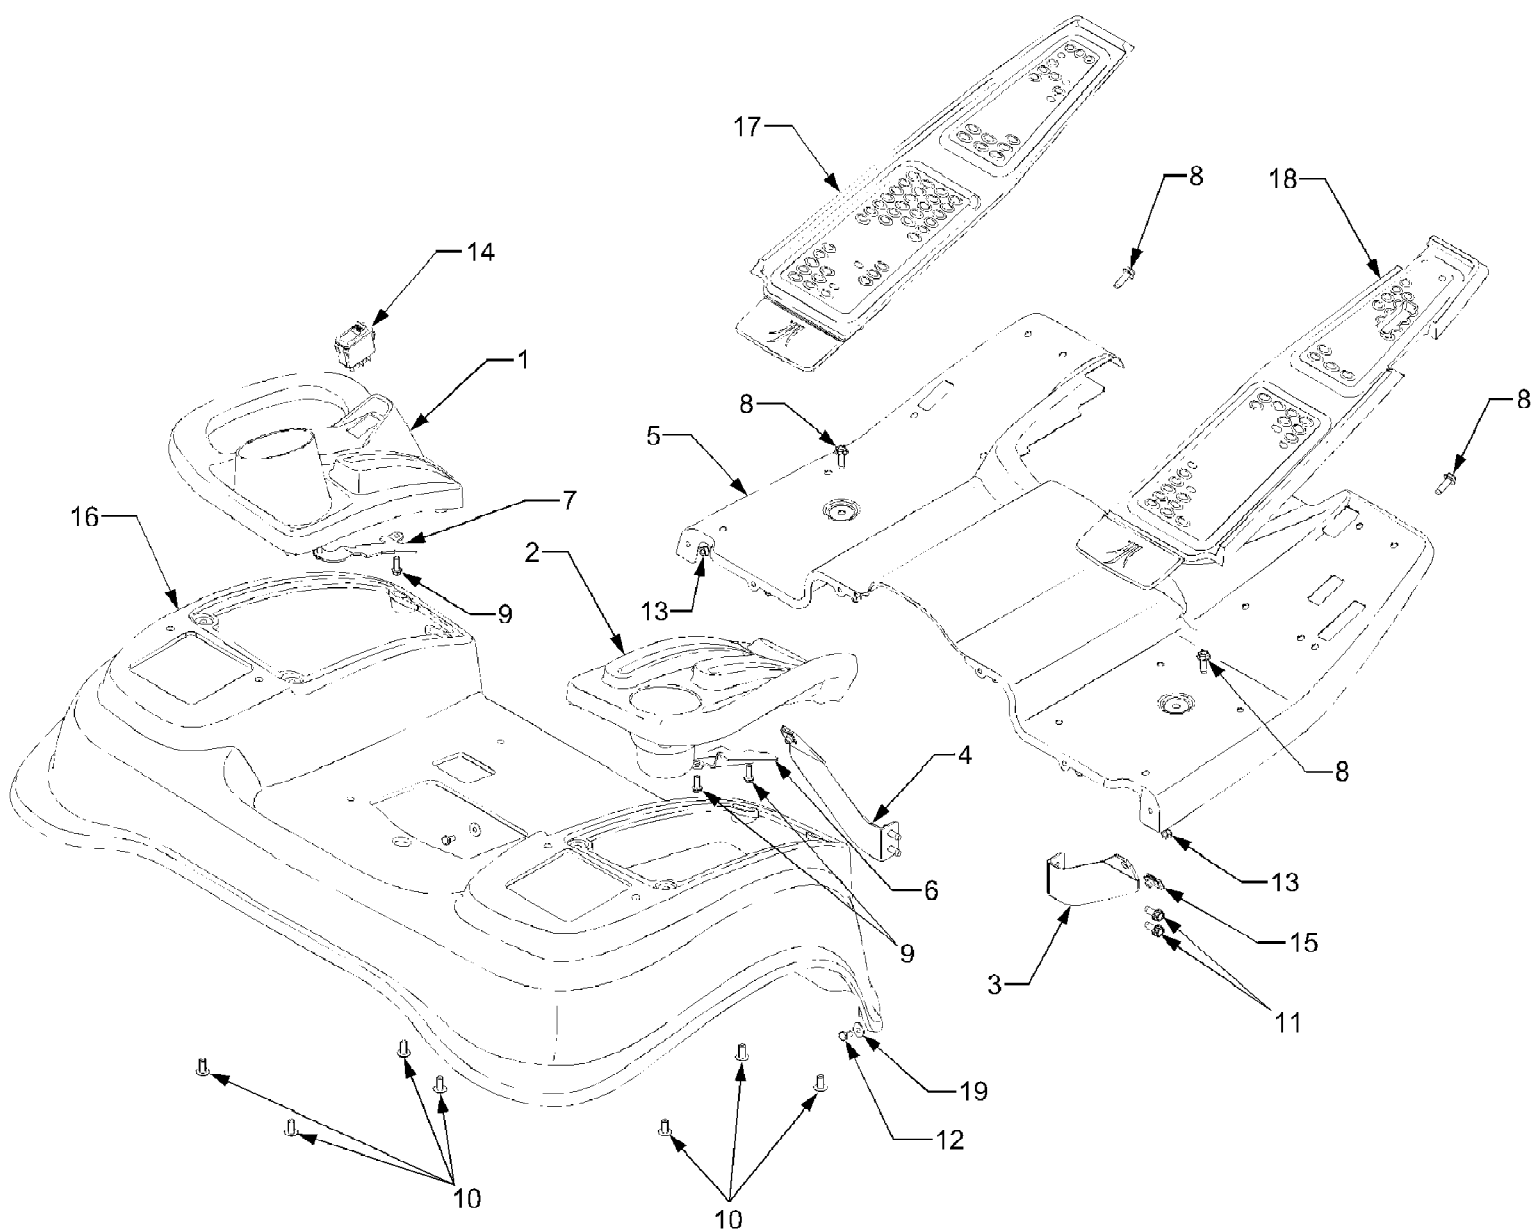


5234DL Tractor
Fender And Running Board 1B065G & Before

Page 51 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	631-04031	1	S	Cover, Fender, LH
2	631-04032	1	S	Cover, Fender, RH
3	703-05105-0637	1	/P	Bracket, Running Board Mtg. RH
4	703-05113-0637	1	/P	Bracket, Running Board Mtg. LH
5	703-05199-0716	1		Running Board
	777S32332	1		Graphic, Instruction
	777S32274	1		Graphic, Warning
6	703-05306	1	S	Bracket, Lift Float Gate
7	703-05307	1	S	Bracket, Shift Gate, Hi-Lo
8	710-0602	4	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x 1.0
9	710-0895	4		Screw, Hex Wash. Hd, Tapp 1/4-15 x .75
10	710-1242	8	/P	Screw, Truss Phillips Hd. 5/16-14 x .75
11	710-1260A	4	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
12	710-3013	6	/P	Screw, Hex Cap, 1/4-20 x .5 GR5
13	712-0324	6	/P	Nut, Hex Insert Lock, 1/4-20 GR8
14	725-04070	1	S	Switch, PTO Reverse
15	726-0211	2	S	Nut, Speed, 5/16-18
16	731-04025	1	S	Fender
	777D07564	2		Graphic, Reflector
	777D07729	1	/P	Graphic, Cub Cadet
	777S32286	1		Graphic, Warning
17	735-0275	1		Pad, Floor - LH
18	735-0276	1		Pad, Floor - RH
19	736-3090	6	/P	Washer, Flat, .26 x .72 x .06

5234DL Tractor
Fender And Running Board 1B075G & After

Page 52 of 115

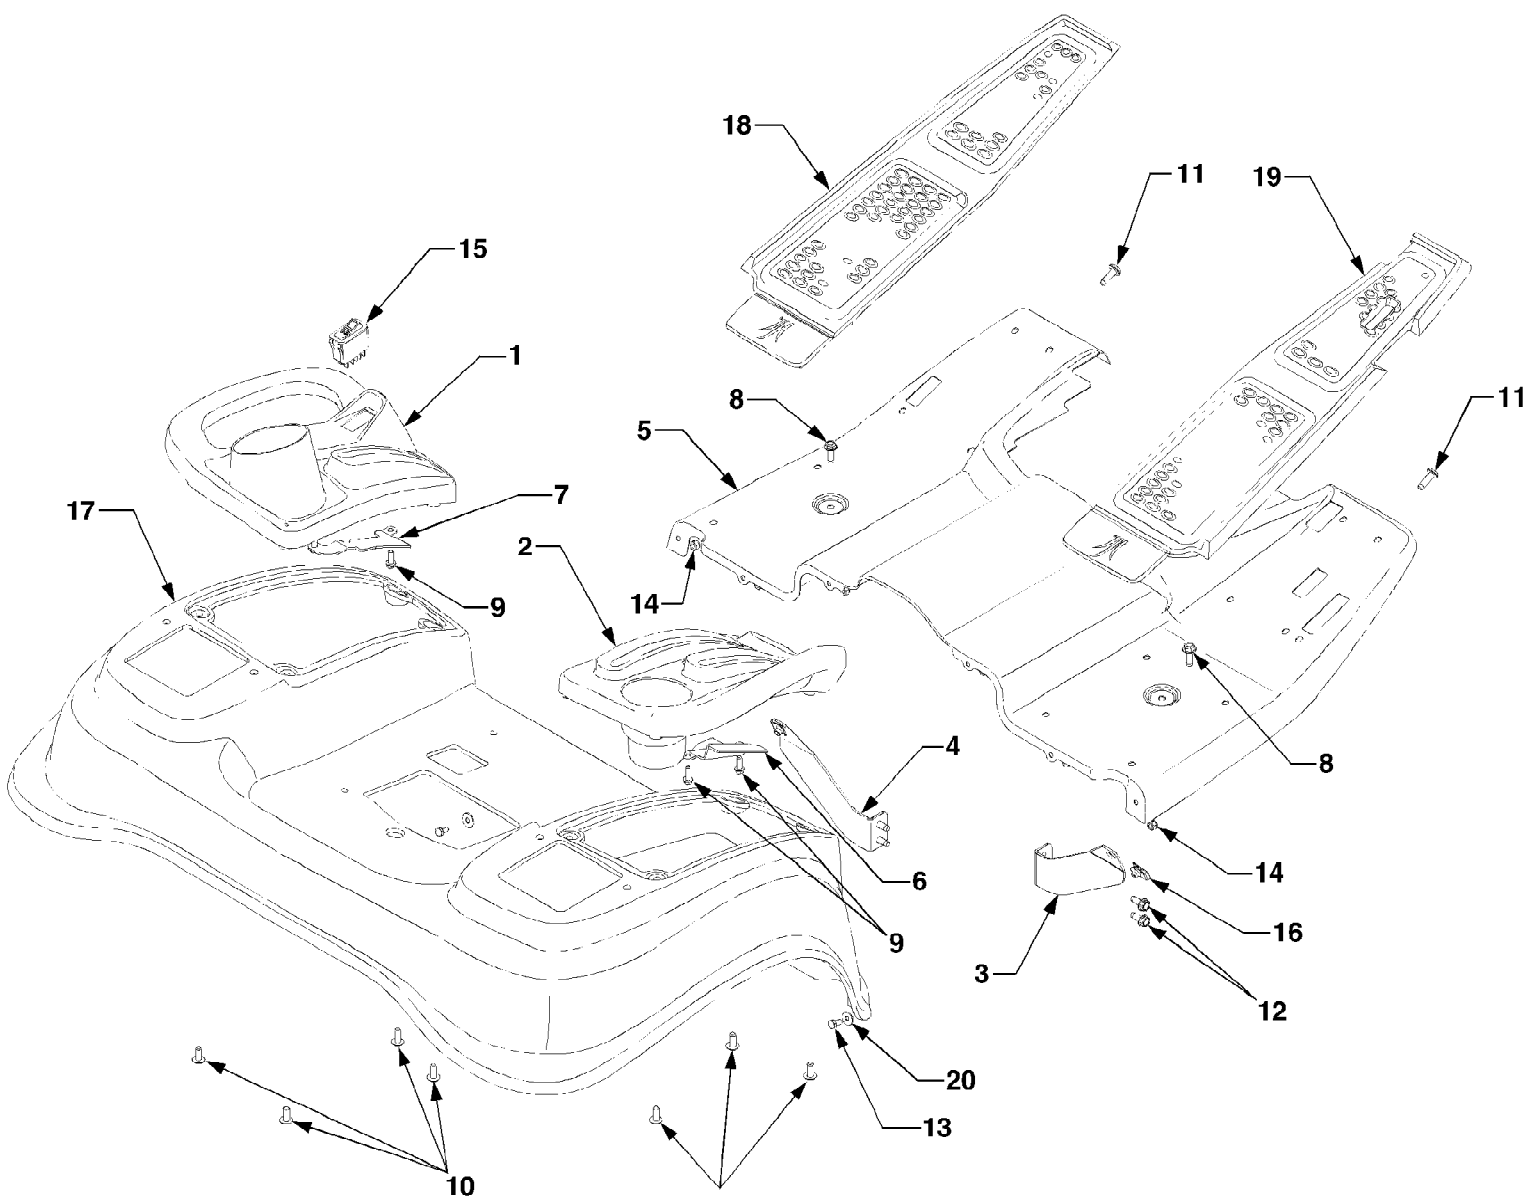



5234DL Tractor
Fender And Running Board 1B075G & After

Page 53 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	631-04031	1	S	Cover, Fender, LH
2	631-04032	1	S	Cover, Fender, RH
3	703-05105-0637	1	/P	Bracket, Running Brd Mtg. RH
4	703-05113-0637	1	/P	Bracket, Running Brd Mtg. LH
5	703-05199-0716	1		Running Board
	777S32332	1		Graphic, Instruction
	777S32274	1		Graphic, Warning
6	703-05306A	1	S	Bracket, Lift Float Gate
7	703-05307A	1		Bracket, Shift Gate, Hi-Lo
8	710-0602	2	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x 1.0
9	710-0895	4		Screw, Hex Wash. Hd, Tapp 1/4-15 x .75
10	710-1242	8	/P	Screw, Truss Phillips Hd.
11	710-0971	2		Screw, Pan Hd. 5/16-18 x 1.0
12	710-1260A	4	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
13	710-3013	6	/P	Screw, Hx. Cap, 1/4-20 x .5 GR5
14	712-0324	6	/P	Nut, Hx. Insert Lck, 1/4-20 GR8
15	725-3273	1		Switch, PTO Reverse
16	726-0211	2	S	Nut, Speed, 5/16-18
17	731-05089	1	S	Fender
	777D08643	1		Graphic, Reflector RH
	777D08642	1		Graphic, Reflector LH
	777D07729	1	/P	Graphic, Power Shaft
	777S32286	1		Graphic, Warning
	777D08753	2		Graphic, 4WD
18	735-0275	1		Pad, Floor - LH
19	735-0276	1		Pad, Floor - RH
20	736-3090	6	/P	Washer, Flat, .26 x .72 x .06

5234DL Tractor
Frame


Page 54 of 115

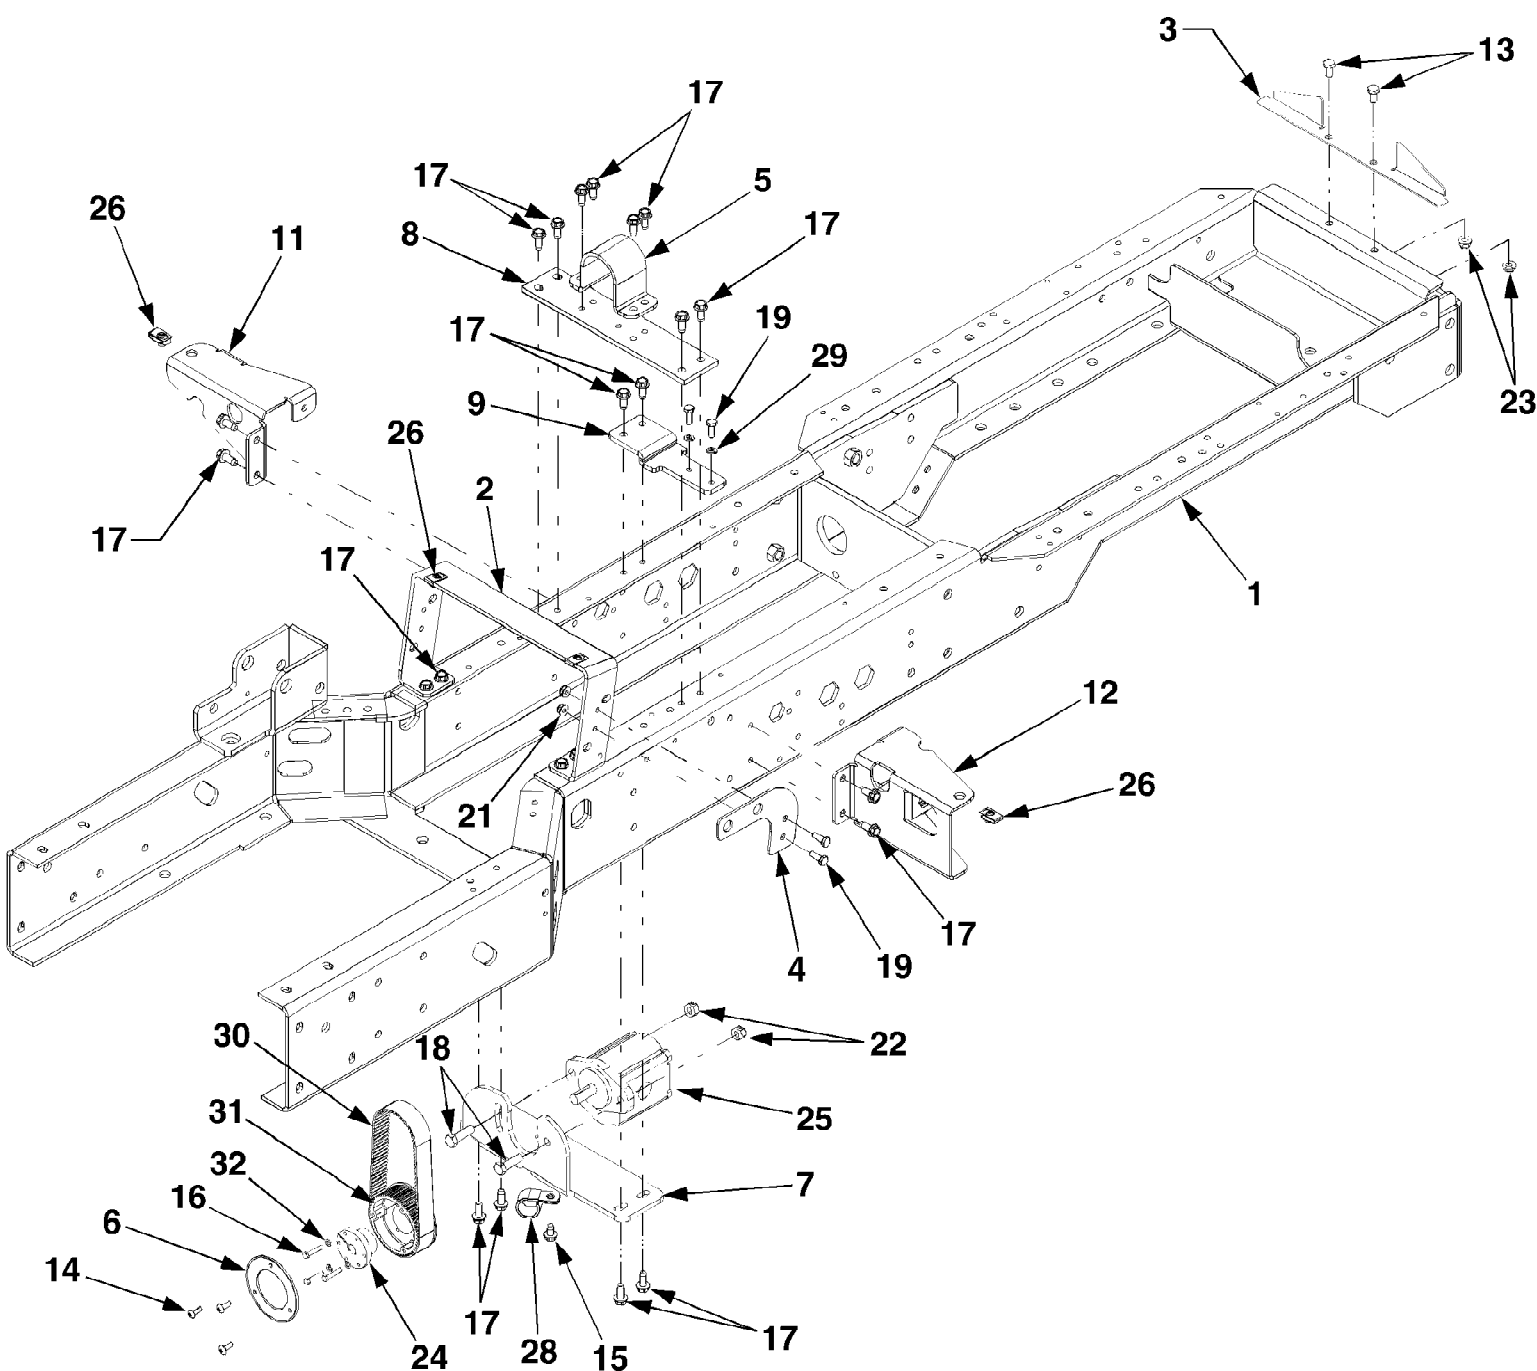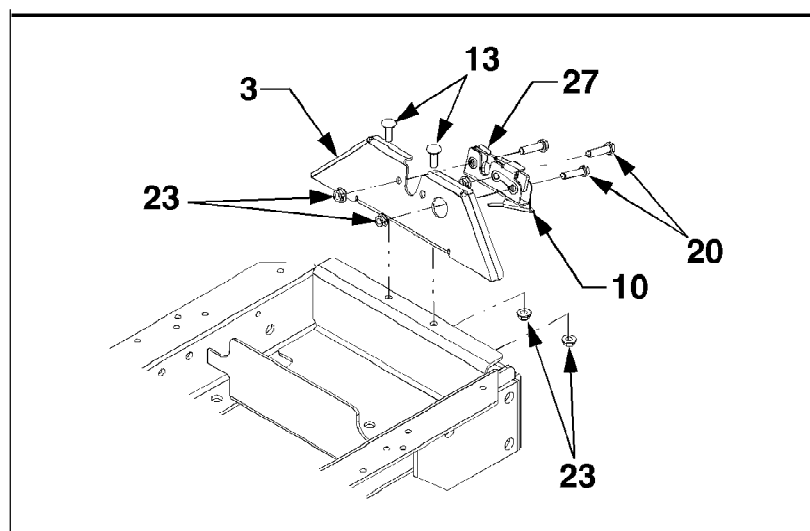

5234DL Tractor
Frame

Page 55 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	603-0961A-0637	1	/P	Frame
2	703-05031-0637	1	/P	Bracket, Front Seat Mount
3	703-05137A	1	S	Bracket, Hood Latch Mtg. - Mfg. Code 1C315G and before
3	703-05782	1	/P	Bracket, Hood Latch - Mfg. Code 1D015G and after
4	703-05714-0637	1		Bracket, Fitting Mtg.
5	703-05737-0637	1		Shield, Drive Shaft
6	703-05741	1		Keeper, Belt
7	703-05743-0637	1		Bracket, Aux. Pump Mtg.
8	703-05748-0637	1		Shield Lower Drive Shaft
9	703-05771A-0637	1	/P	Plate, Filter Mounting
10	703-3503A	1	/P	Lever, Hood Latch — Mfg. Code 1C315G and before
11	703-4124A-0637	1		Bracket, Running Board Mtg.
12	703-4125A-0637	1		Bracket, Running Board Mtg.
13	710-0276	2	/P	Screw, Carriage, 5/16-18 x 1.0 - Code 1C315G and before
13	710-3025	2	/P	Screw, Hex Cap, 5/16-18 x .625 GR5 - Mfg. Code 1D015G and after
14	710-0473	3	/P	Screw, Truss Hd. Mach. #10-24 x .5
15	710-0607	1	/P	Screw, Hex Wash. Hd Tapp 5/16-18 x .5
16	710-1194	3		Screw, Hex Mach. #10-24 x .5
17	710-1260A	25	/P	Screw, Hex Wash. Hd. Tapp, 5/16-18 x .75
18	710-3005	2	/P	Screw, Hex Cap, 3/8-16 x 1.25 GR5
19	710-3015	4	/P	Screw, Hex Cap, 1/4-20 x .75 GR5
20	710-3083	3	/P	Screw, Hex Cap, 5/16-18 x 1.375 GR5 - Mfg. Code 1C315G and before
21	712-04064	2	/P	Nut, Hex Nylon Flange Lock, 1/4-20 GRF
22	712-3000	2	S	Nut, Hex Lock, 3/8-20 GrB
23	712-04063	2	/P	Nut, Hex Flange Insert Lock, 5/16- 16 GrF (Replaces 712-3004A)
24	718-04129	1	S	Bushing, Tapered
25	718-04130	1	S	Pump, Aux. Hydraulic
26	726-0211	4	S	Nut, U Speed, 5/16-18
27	726-0455	1		Latch, Hood — Mfg. Code 1C315G and before
28	726-0475	1		Clamp
29	736-0329	2	S	Washer, Lock, 1/4
30	754-04086	1	S	Belt, HTS, 5 x 25 x 500
31	756-04176	1	S	Pulley, 52T Cog
32	736-0722	3	S	Washer, Lock, #10

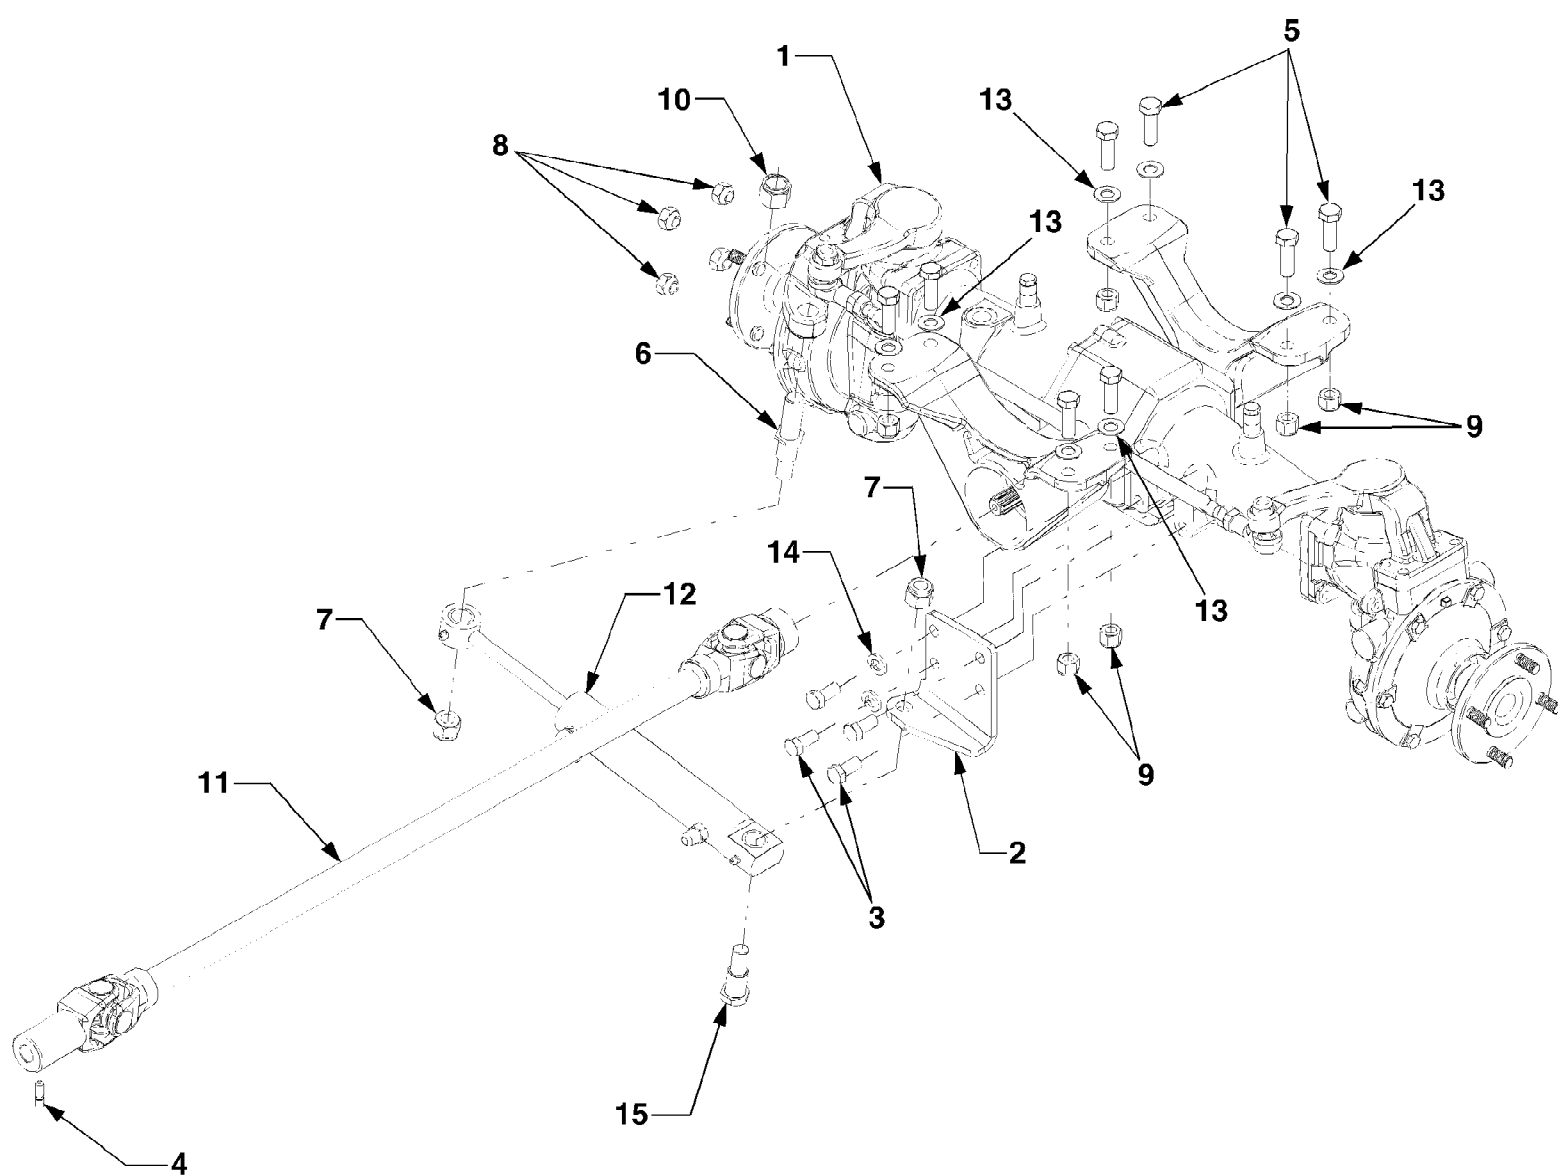

5234DL Tractor
Front Axle


Page 57 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	618-04028A	1	S	Axle, 4WD Front
2	703-05357	1	S	Bracket, Cylinder Mounting
3	710-04208	4		Screw, Hex Cap, w/Patch M12-1.75 x 25 GR8
4	710-04214	1		Screw, Sq. Hd Lock. 5/16-18
5	710-3181	8	/P	Screw, Hex Cap 1/2-13 x 1.5 GR5
6	711-1410	1		Stud, Cylinder Mounting
7	712-3016	2	/P	Nut, Hex Insert Lock 5/8-11 GR5
8	712-3050	8	/P	Nut, Lug, 7/16-14
9	712-3083	8	/P	Nut, Hex Insert Lock, 1/2-13 GR8
10	712-3107	1	/P	Nut, Hex Lock, 3/4-10 GRC
11	717-04010	1	S	Shaft, 4WD Drive
12	717-04119	1	S	Cylinder, Steering
13	736-0272	8	S	Washer, Flat, .51 x 1.0 x .06
14	736-0921	2	S	Washer, Lock, 1/2
15	738-04049	1	S	Screw, Shoulder, .75 x 1.03

5234DL Tractor
Fuel Injection System

Page 59 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	BS-820031	2		Screw, Hex, 6mm
2	BS-820414	1		Seal, O-Ring
3	BS-820417	2		Nut, Hex Metric
4	BS-820419	1		Nut, Hex Metric
5	BS-691024	1	/P	Bracket, Casing Clamp
6	BS-691024	1	/P	Clamp, Casing
7	BS-820593	1		Screw, Casing Clamp
8	BS-820593	1		Screw, Support Bracket
9	BS-820272	4		Screw, Support Bracket
10	BS-820619	1		Gear, Drive
11	BS-825197	1		Clamp
12	BS-820415	1		Bracket, Support
13	BS-820479	1		Bracket, Support
14	BS-820640	1		Screw, Casing Clamp Bracket
15	BS-820467	1		Clamp, Swivel
16	BS-825179	1		Hose/Clamp Ass'y., Fuel Return
17	BS-825176	3	S	Plug, Glow
18	BS-820409	1		Strap, Glow Plug
19	BS-825178	3		Nozzle, Injector
20	BS-820411	3		Seat, Injector
21	BS-825194	1		Pipe, Injector #1
22	BS-825195	1		Pipe, Injector #2
23	BS-825196	1		Pipe, Injector #3
24	BS-825324	1		Pump, Injection
25	BS-820412	1		Pipe, Fuel Return
26	BS-820829	3		Nut, Hex Injector Nozzle
27	BS-820831	3		Washer, Injector Nozzle

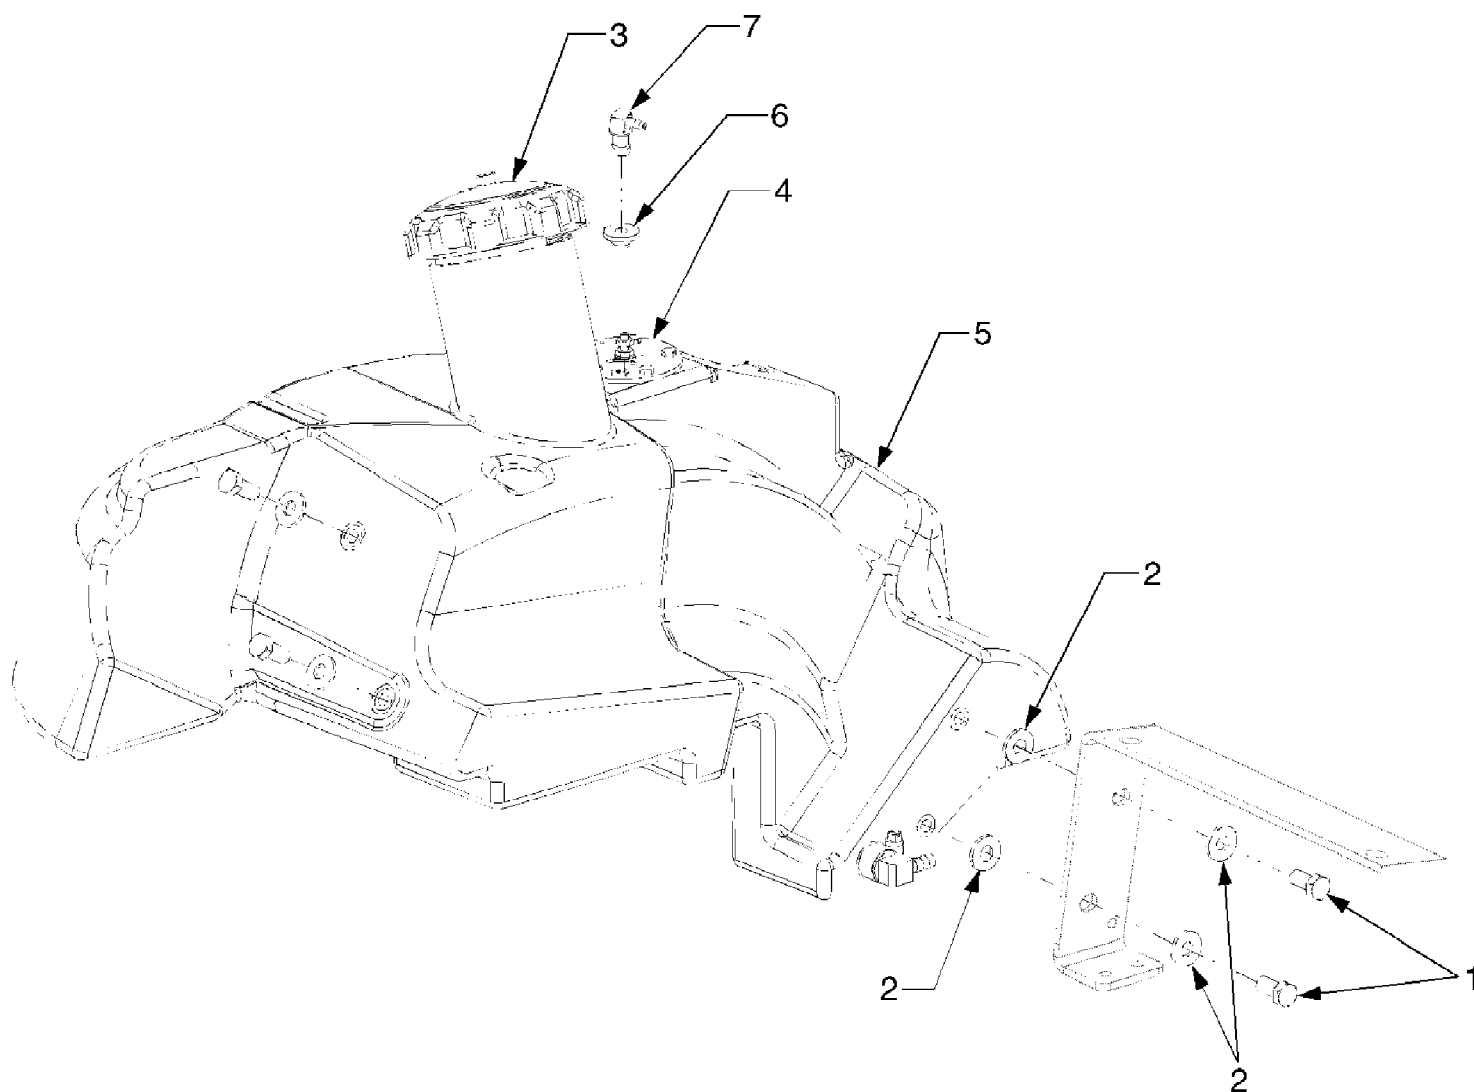



5234DL Tractor
Fuel Tank

Page 61 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	710-3119	4	/P	Screw, Hex Cap, Lock 3/8-16 x .75 GR5
2	736-0262	6	/P	Washer, Flat, .385 x .87 x .092
3	751-3124B	1	S	Cap, Fuel
4	751-10099	1	S	Sensor, Fuel Level
5	751-3211	1		Tank, Fuel
6	735-0149	1	S	Bushing, Rubber
7	751-3174	1		Fitting, Fuel Return

5234DL Tractor
Gasket Sets

Page 62 of 115

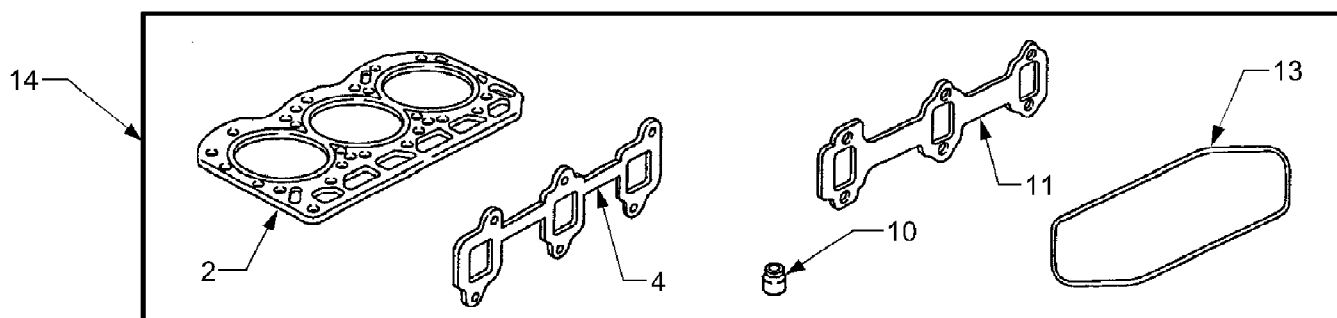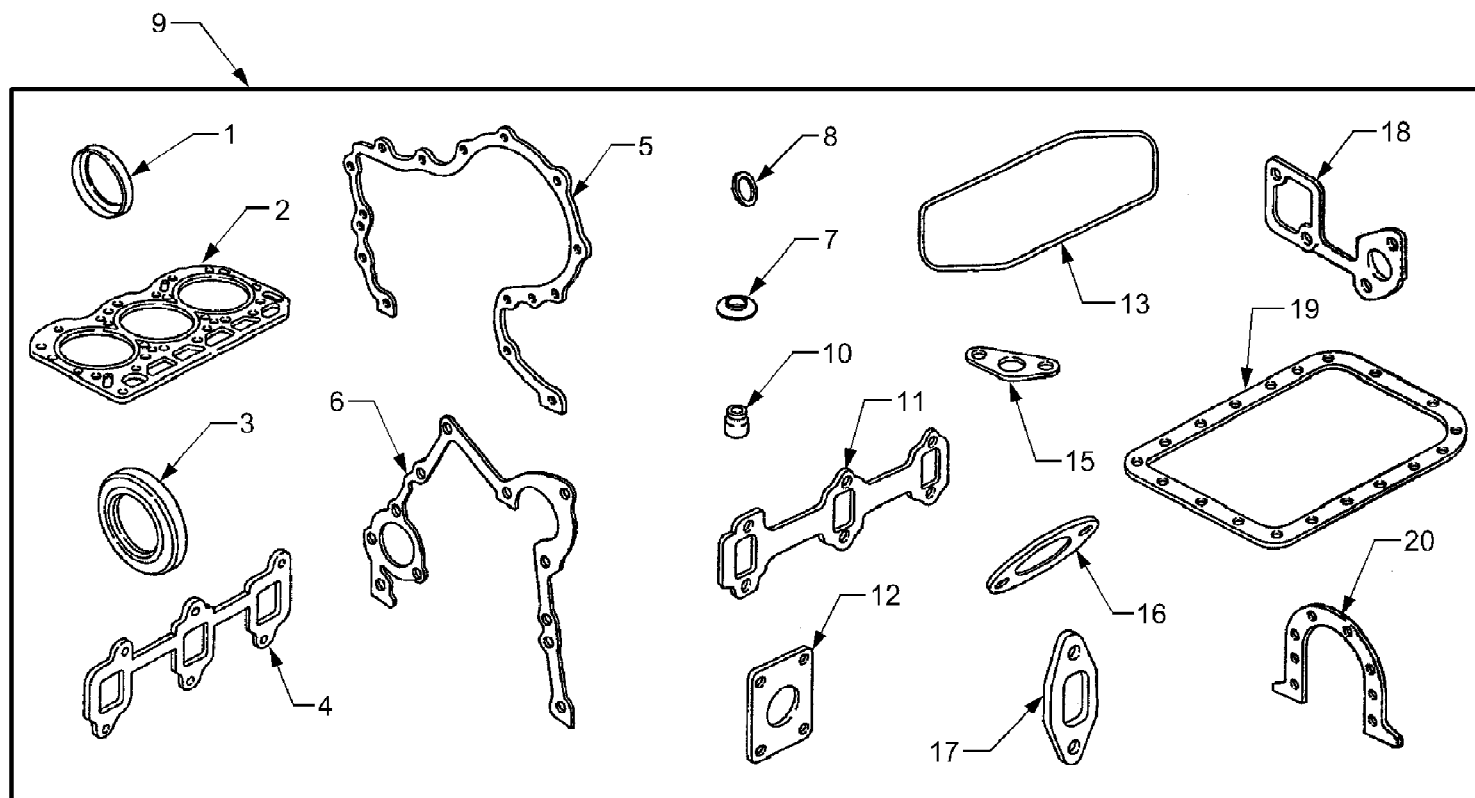


5234DL Tractor
Gasket Sets

Page 63 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	BS-820056	1	S	Seal, Oil
2	BS-820062	1		Gasket, Cylinder Head
3	BS-820055	1	S	Seal, Oil
4	BS-820407	1		Gasket, Intake
5	BS-820377	1		Gasket, Gear Cover
6	BS-820155	1		Gasket, Gear Cover
7	BS-820582	2		Washer, Sealing
8	BS-820064	3		Washer, Sealing
9	BS-825380	1		Gasket Set
10	BS-820405	1		Seal, Valve
11	BS-820088	1		Gasket, Exhaust
12	BS-820670	1	S	Gasket, Exhaust
13	BS-820150	1		Gasket, Rocker Cover
14	BS-825316	1		Kit, Valve Overhaul
15	BS-820104	1		Gasket, Oil Pump Screen
16	BS-820093	1		Gasket, Outlet
17	BS-820098	1		Gasket, Inlet Housing
18	BS-820100	1		Gasket, Water Pump
19	BS-820137	1		Gasket, Oil Pan
20	BS-820145	1		Gasket, Retainer

5234DL Tractor
Gear Housing

Page 64 of 115

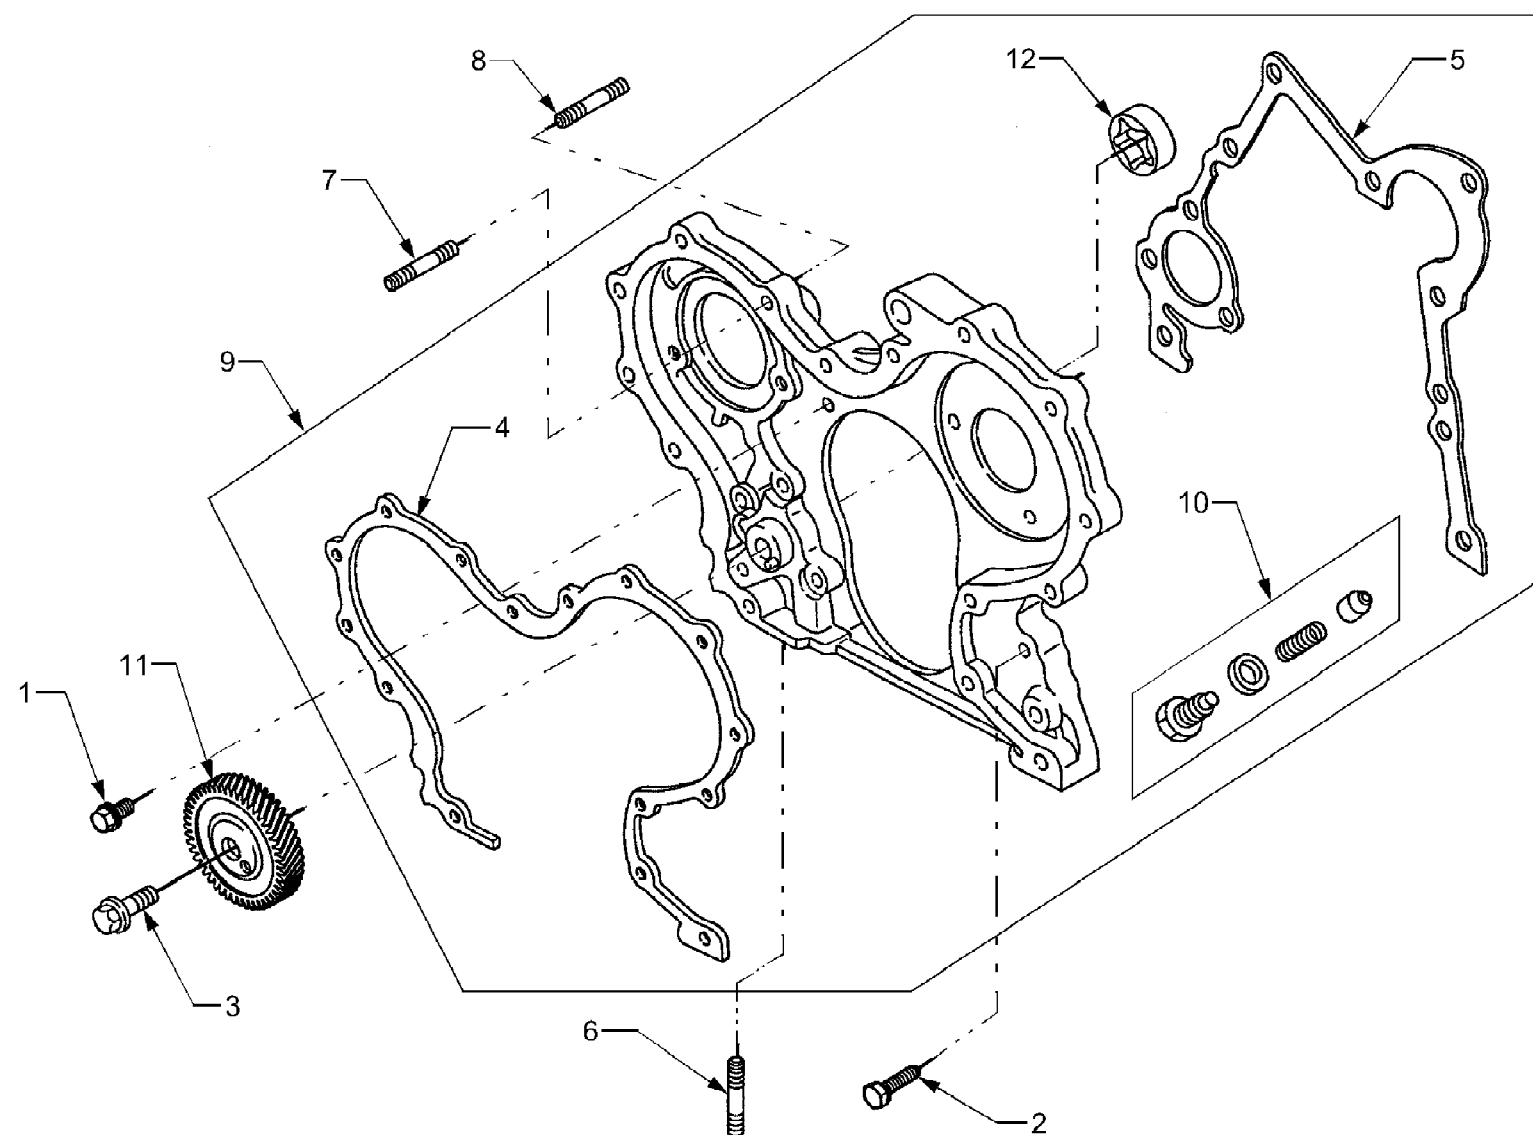


5234DL Tractor
Gear Housing

Page 65 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	BS-820033	1		Screw, Hex, 6mm
2	BS-820030	4		Screw, Hex, 6mm
3	BS-820180	1		Screw, Hex, 8mm
4	BS-820377	1		Gasket, Gear Cover
5	BS-820155	1		Gasket, Gear Cover
6	BS-820016	1		Stud, Metric
7	BS-820156	2		Stud, Metric
8	BS-820426	2		Stud, Metric
9	BS-825186	1		Housing, Gear
10	BS-825032	1		Valve, Oil Relief
11	BS-820615	1		Gear, Oil Pump Drive
12	N/A	1		Pump. Oil Sold ONLY in Gear Housing (Ref. 9)

5234DL Tractor
Hood with Louvers, Grill & Panels

Page 66 of 115

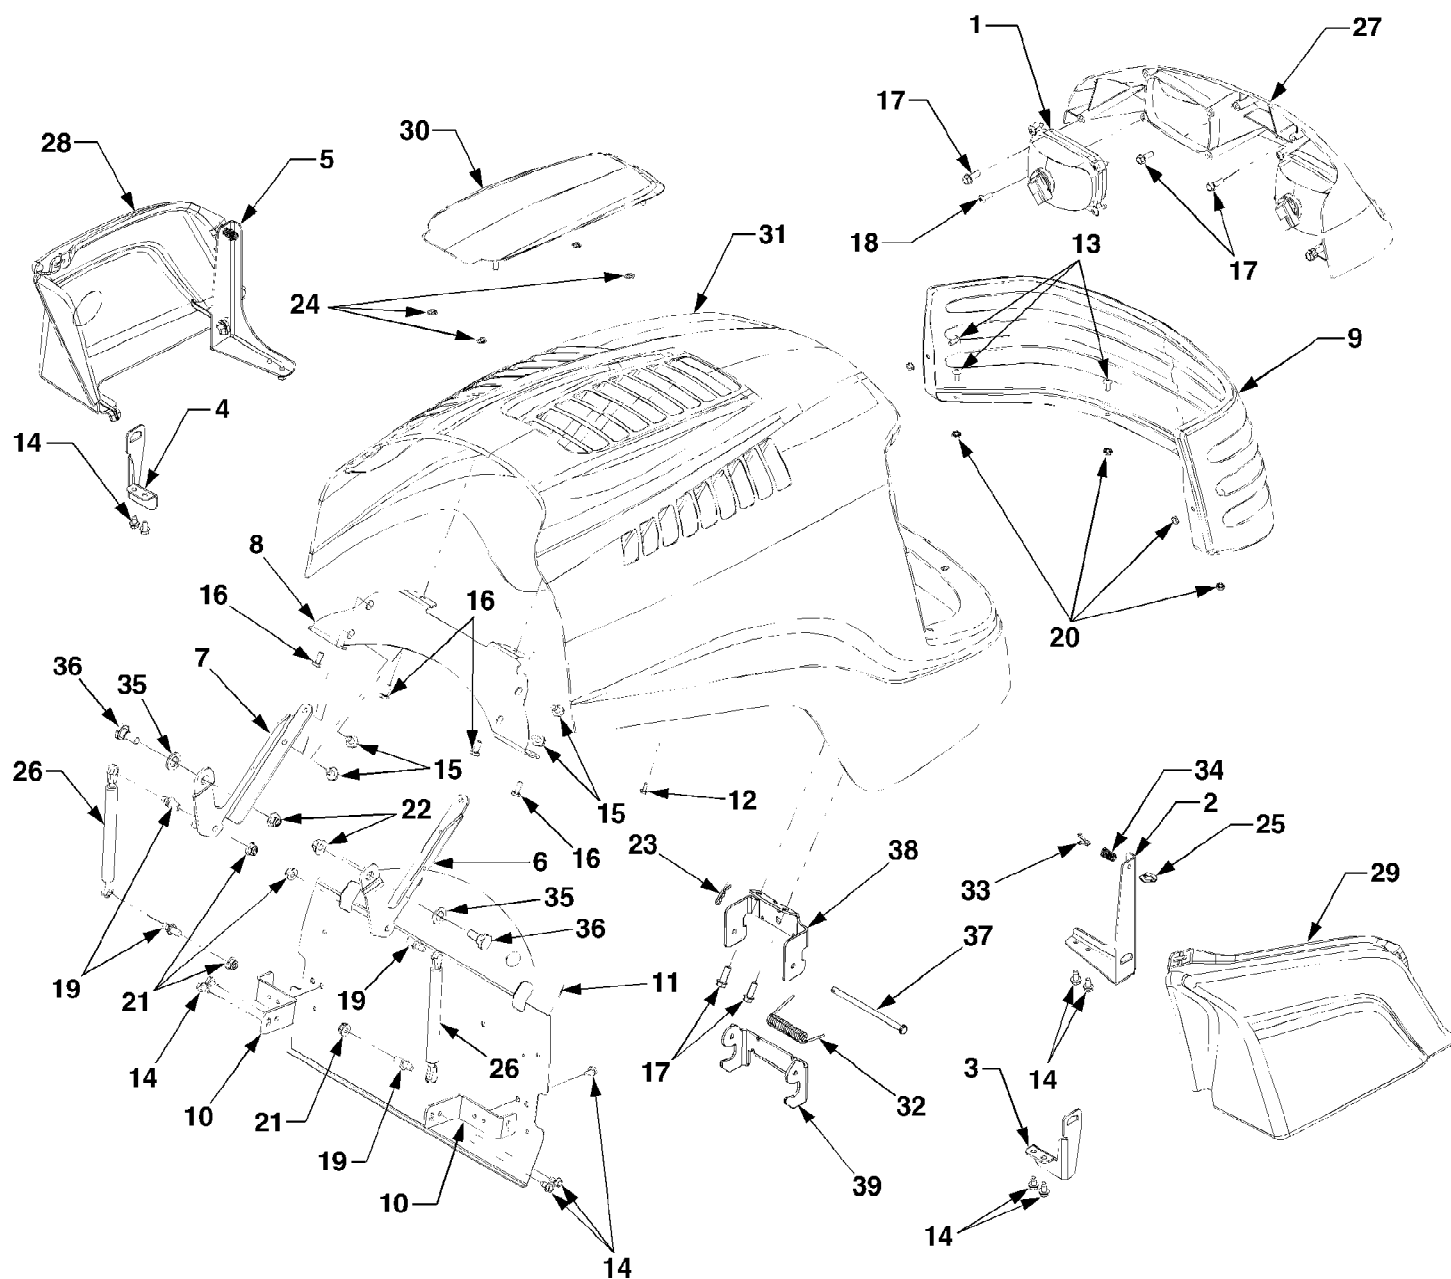


5234DL Tractor
Hood with Louvers, Grill & Panels

Page 67 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	625-04004	1	S	Headlight Assembly
1	725-04084	2	S	Bulb Assembly, Headlight not shown
2	703-05281-0637	1	/P	Brkt, Side Pnl. Mtg. RH
3	703-05284-0637	1	/P	Brkt, Side Pnl. Mtg. RH Rear
4	703-05293-0637	1	/P	Brkt, Side Pnl. Mtg. LH Rear
5	703-05295-0637	1	/P	Brkt, Side Panel Mtg. LH
6	703-05652-0637	1		Bracket, Hinge, RH
7	703-05653-0637	1		Bracket, Hinge, LH
8	703-05655-0637	1		Bracket, Hood Mounting
9	703-3394	1	S	Screen, Intake
10	703-3764-0637	2		Bracket, Panel Mtg.
11	703-3765-0637	1		Shield, Lower Heat
12	710-04164	1	/P	Screw, Hex Wash Hd, #8-18 x .375
13	710-0473	6	/P	Screw, Truss Hd, 10-24 x .5
14	710-0599	14	/P	Screw, Hex Wash Hd Tapp 1/4-20 x .5
15	710-0607	4	/P	Screw, Hex Wash Hd Tapp 5/16-18 x .5
16	710-0751	4	/P	Screw, Hex Cap 1/4-20 x .62 GR5
17	710-0895	6		Screw, Hex Wash. Hd. 1/4-20 x .75
18	710-1220	8	/P	Screw, Truss Phil. Hd. 12-16 x .75
19	710-3170	4		Stud, Cylinder, 5/16-18 Thrd
20	712-0272	6	/P	Nut, Hex Sems, 10-24
21	712-04063	4	/P	Nut, Hex Insert Flange Lock, 5/16-18
22	712-04065	2	/P	Nut, Hex Insert Flange Lock, 3/8-16
23	714-0104	1	S	Pin, Internal Cotter
24	726-0233	4	/P	Nut, Push, .25 ID
25	726-3056	4		Latch, 1/4 Turn Panel
26	727-3194	2		Cylinder, Gas Spring
27	731-04211	1	S	Bezel, Headlight
28	731-04540	1	S	Panel, Side LH
29	731-04541	1	S	Panel, Side RH
30	731-05161	1	S	Cover, Hood
31	759-04210	1	/P	Hood, Service Kit (contains 931-06889, 726-0233, 710-1242, 721-04162 and installation instructions)
31	931-06889	1		Hood Replaces 731-05301
31	726-0233	4	/P	Push Nut .25 x .50 not shown
31	710-1242	4	/P	Screw, Hi Low 5/16-14 x .75 not shown
31	721-04162	2		Foam Strip not shown
31	777D07558	1		Graphic, Hood RH not shown
31	777D07559	1		Graphic, Hood LH not shown
31	777D07732	1	/P	Graphic, Model 5254 LH not shown
31	777D07733	1	/P	Graphic, Model 5254 RH not shown
32	732-04281A	1	/P	Spring, Torsion
33	732-0936	4		Clip, Spring
34	732-0937	4		Spring, Compression
35	736-0272	2	S	Washer, Flat, .51 x 1.0 x .060
36	738-0380	2	S	Screw, Shoulder, .5 x .27 Lg 3/8-16
37	747-1323A	1		Rod, .25 x 4.55
38	783-04714	1	S	Plate, Latch
39	783-04717A	1	/P	Bracket, Latch Pivot

5234DL Tractor
Hood, Grill And Side Panels


Page 68 of 115

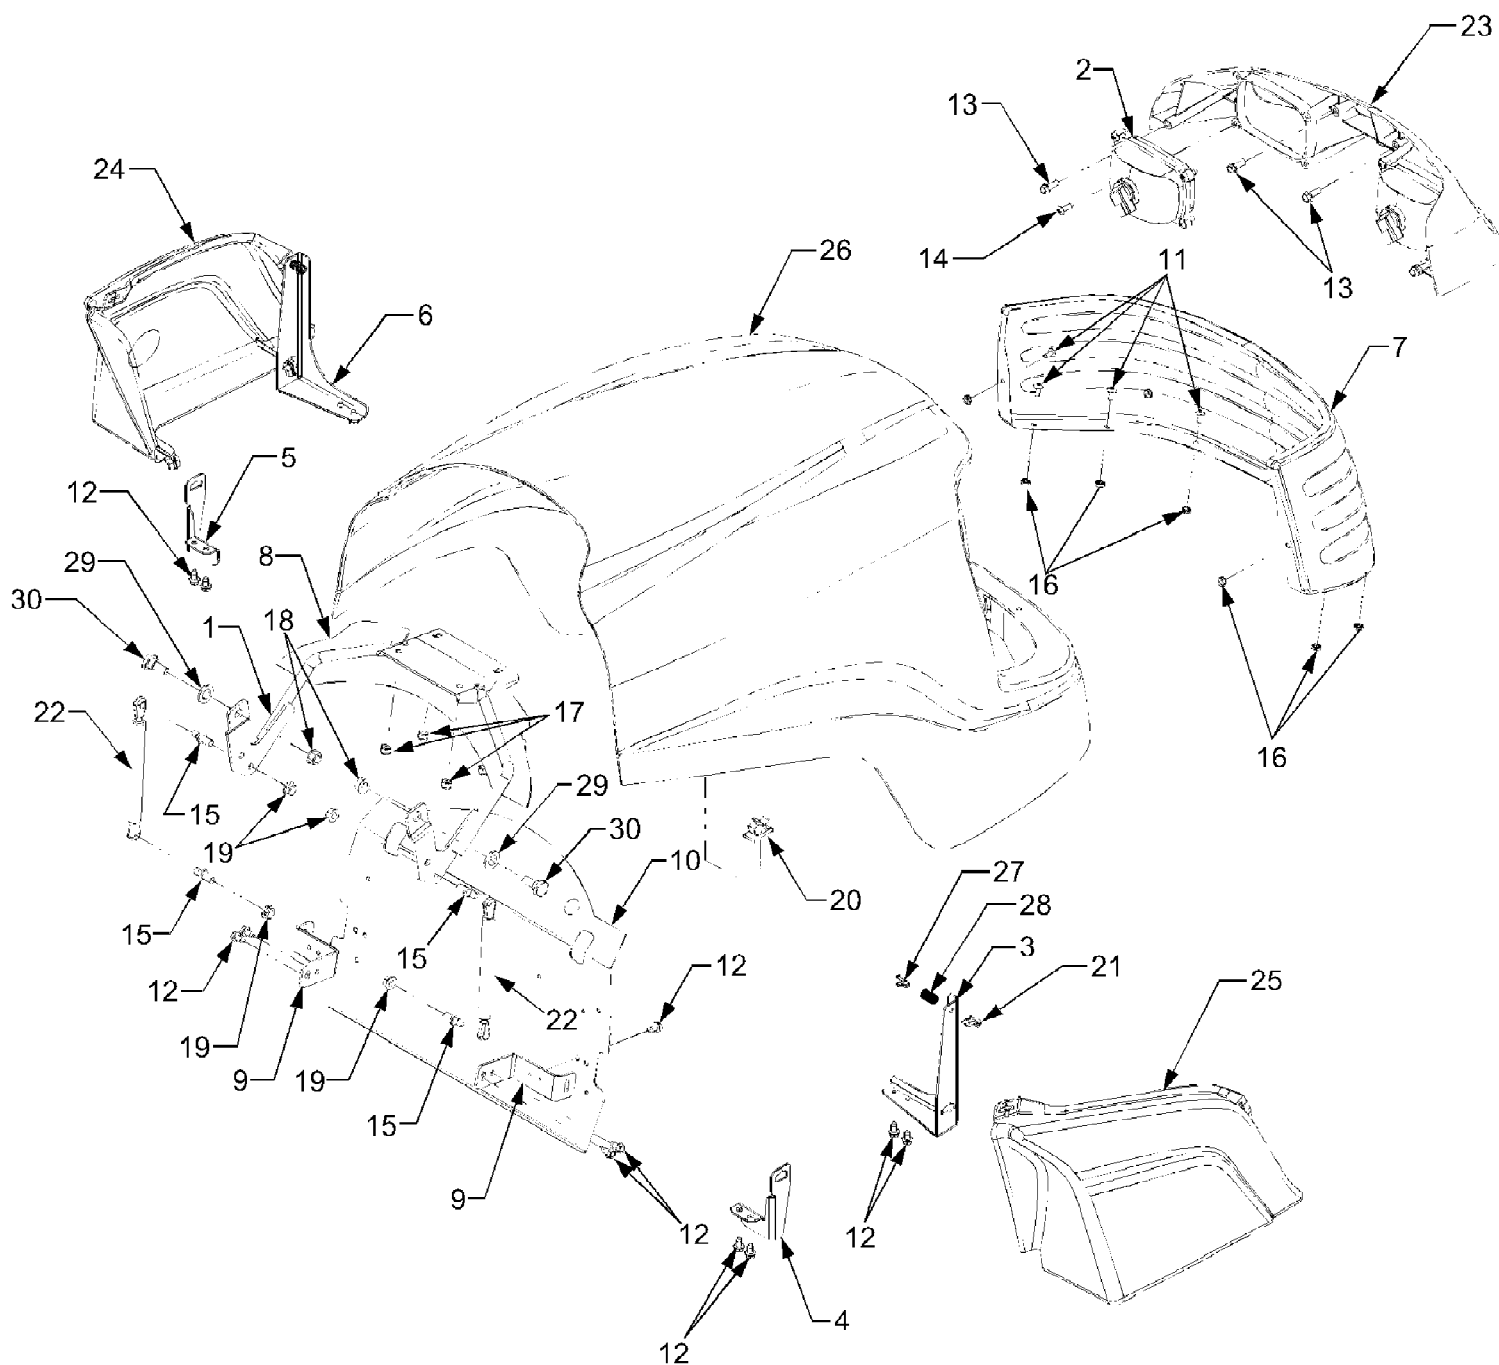

5234DL Tractor
Hood, Grill And Side Panels

Page 69 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	603-0719A-0637	1	/P	Hinge Assembly, Hood
2	625-04004	1	S	Headlight Assembly
2	725-04084	2	S	Bulb Assembly, Headlight Not shown
3	703-05281-0637	1	/P	Bracket, Side Panel Mtg. RH
4	703-05284-0637	1	/P	Bracket, Side Panel Mtg. RH Rear
5	703-05293-0637	1	/P	Bracket, Side Panel Mtg. LH Rear
6	703-05295-0637	1	/P	Bracket, Side Panel Mtg. LH
7	703-3394	1	S	Screen, Intake
8	703-3712A	1	S	Shield, Upper Heat
9	703-3764-0637	1		Bracket, Panel Mtg.
10	703-3765-0637	1		Shield, Lower Heat
11	710-0473	8	/P	Screw, Truss Hd, 10-24 x .5
12	710-0599	14	/P	Screw, Hex Wash Hd Tapp 1/4-20 x .5
13	710-0895	4		Screw, Hex Wash. Hd 1/4-20 x .75
14	710-1220	8	/P	Screw, Truss Phil. Hd. 12-16 x .75
15	710-3170	4		Stud, Cylinder, 5/16-18 Thrds
16	712-0272	8	/P	Nut, Hex Sems, 10-24
17	712-0324	4	/P	Nut, Hex Nylon Insert Lock, 1/4-20
18	712-0431	2	S	Nut, Hex Flange Lock, 3/8-16
19	712-3004A	4	/P	Nut, Hex Flange Lock, 5/16-18
20	726-04010	1		Clip, Retaining
21	726-3056	4		Latch, 1/4 Turn Panel
22	727-3194	2		Cylinder, Gas Spring
23	731-04211	1	S	Bezel, Headlight
24	731-04540	1	S	Panel, Side LH
25	731-04541	1	S	Panel, Side RH
26	759-04113A	1	/P	Hood, Service Kit Replaces 731-3277, Refer to diagram Hood 759-04113A
26	731-06889	1	S	Hood Replaces 731-3277
26	777D07558	1		Graphic, Hood RH Not shown
26	777D07559	1		Graphic, Hood LH Not shown
26	777D07730	1	/P	Graphic, Model 5234D LH Not shown
26	777D07731	1	/P	Graphic, Model 5234D RH Not shown
27	732-0936	4		Clip, Spring
28	732-0937	4		Spring, Compression
29	736-0192	2	S	Washer, Flat, .531 x .93 x .090
30	738-0380	2	S	Screw, Shoulder, .5 x .27 Lg 3/8-16

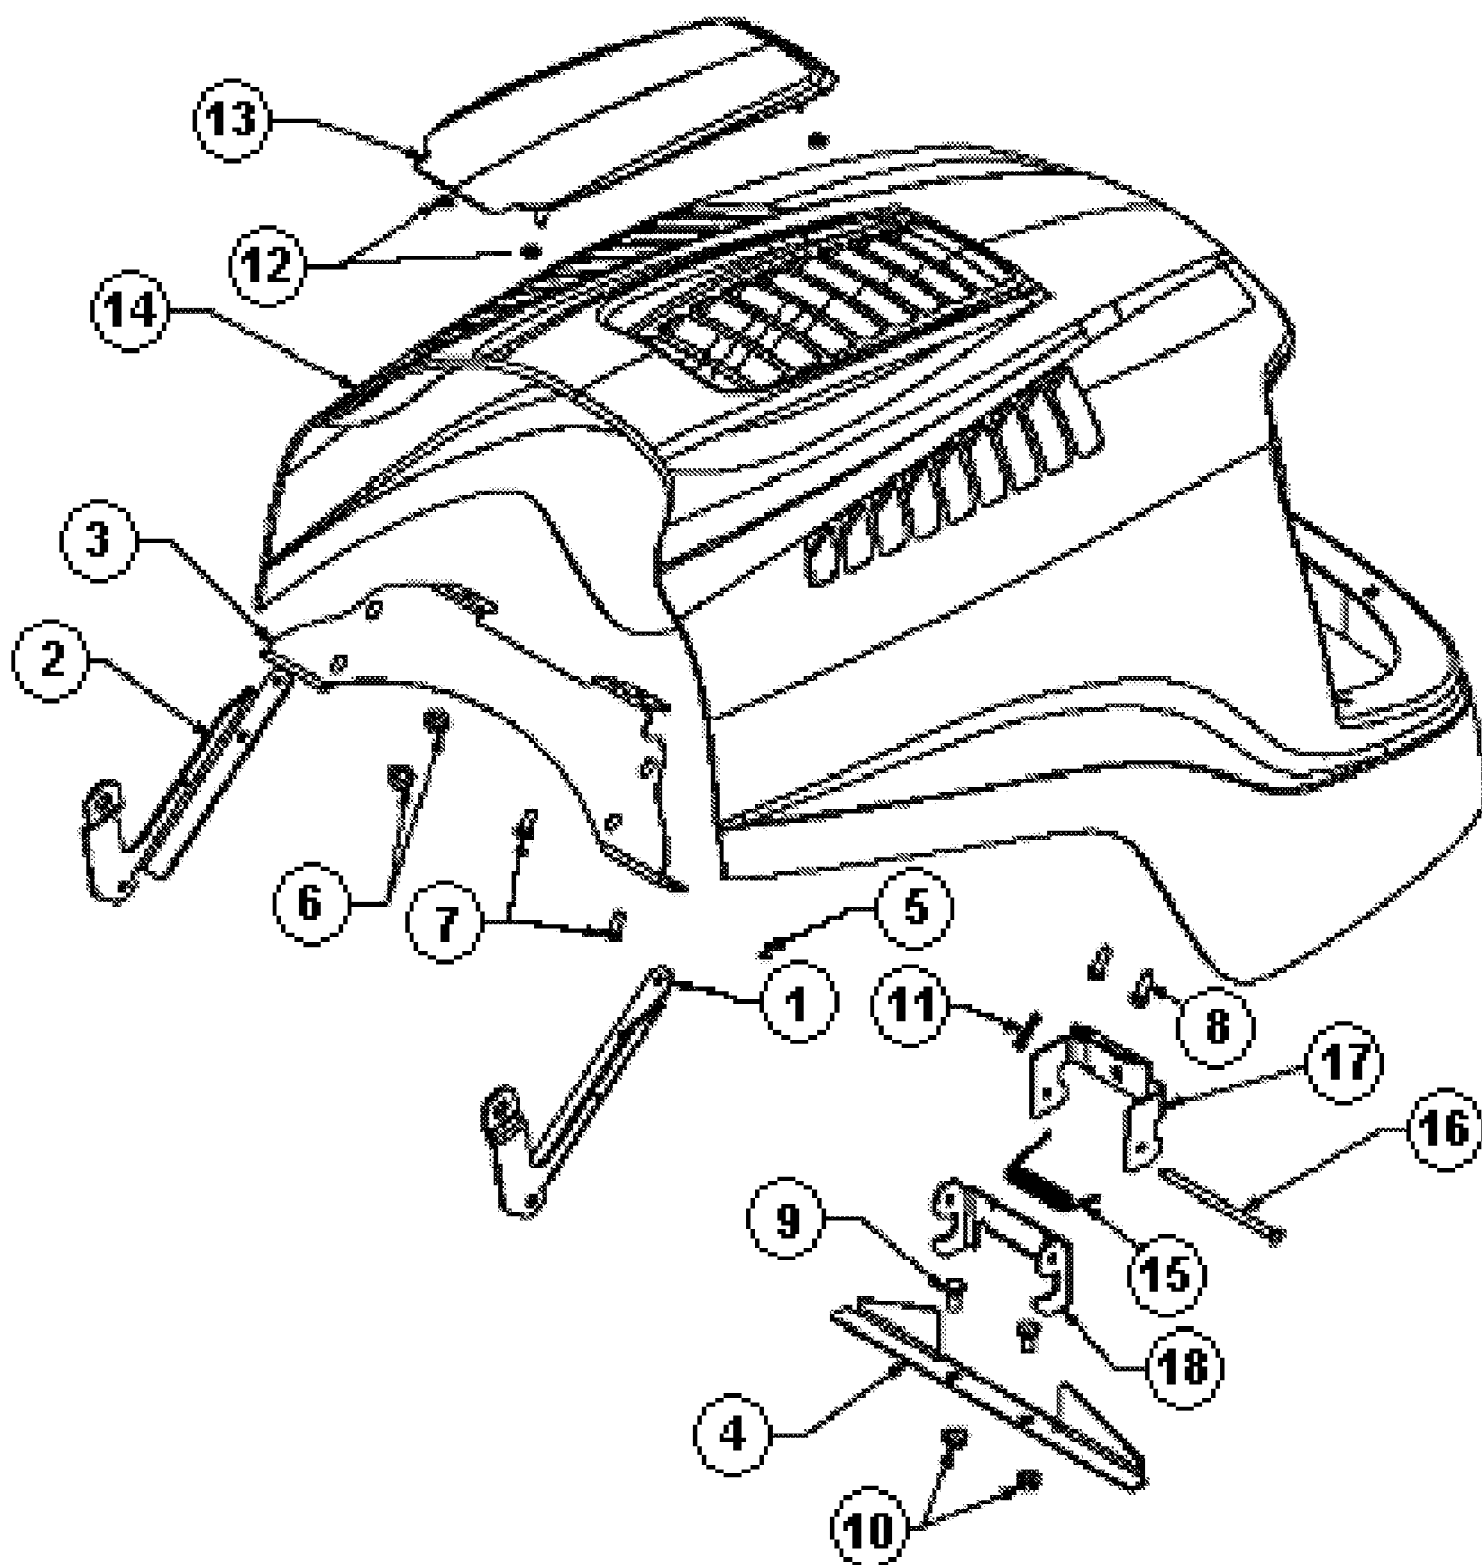


5234DL Tractor
Hood, Service Kit 759-04113A

Page 71 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	703-05652	1		RH Hinge Bracket
2	703-05653	1		LH Hinge Bracket
3	703-05655A	1		Hood Mounting Bracket
4	703-05782	1	/P	Hood Latch Bracket
5	710-0224	1	S	#10-16 x .500 Hex Screw
6	710-0607	4	/P	5/16-18 x .50 Screw
7	710-1242	4	/P	5/16-14 x .75 HiLow Screw
8	710-0895	2		1/4-20 x .750 Screw
9	710-3025	2	/P	5/16-18 x .625 Bolt
10	712-04063	2	/P	5/16-18 Nylon Flange Lock Nut
11	714-0104	1	S	Cotter Pin
12	726-0233	4	/P	Push Nut
13	731-05161	1	S	Hood Cover
14	731-06889	1	S	Hood
15	732-04281A	1	/P	Latch Spring
16	747-1323A	1		Pivot Rod
17	783-04714	1	S	Latch Plate
18	783-04717A	1	/P	Pivot Latch Bracket
	721-04162	2		Foam Strip Not shown
	736-0400	2	S	Flat washer Not shown
	726-0272	1	/P	Clamp Not shown
	759-04113A	1	/P	Service Kit Includes all parts shown on page

5234DL Tractor
Hydraulics 1B065G & Before


Page 72 of 115

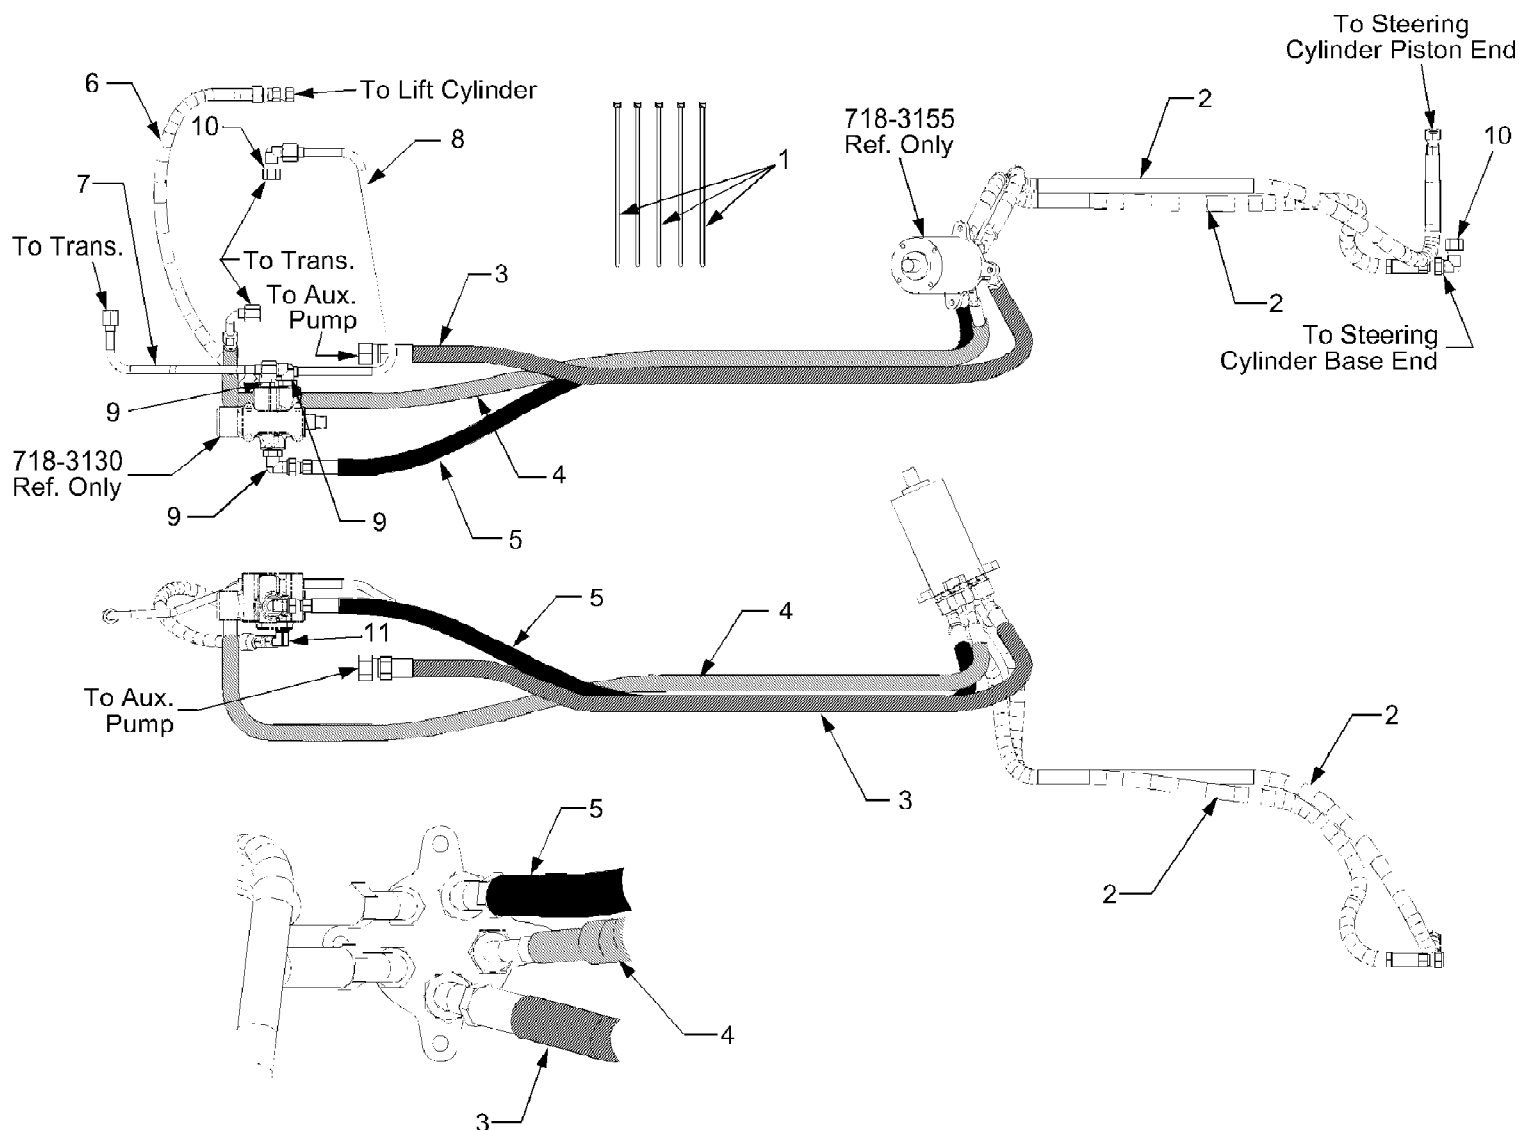

5234DL Tractor
Hydraulics 1B065G & Before

Page 73 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	725-0157	5	/P	Tie, Cable
2	727-04000	2		Hose, Steering
3	727-04001	1		Hose, Steering Pressure
4	727-04002	1		Hose, Steering - Tank
5	727-04003	1		Hose, Lift Inlet
6	727-04014	1		Hose, Lift Cylinder
7	727-04015	1		Tube, Cylinder Return
8	727-04016	1		Tube, Lift Return Line
9	727-3012	3	/P	Fitting, 90 Degree
10	737-04033	2	S	Fitting, 90 Degree Swivel
11	737-3127	1		Fitting, 90 Degree

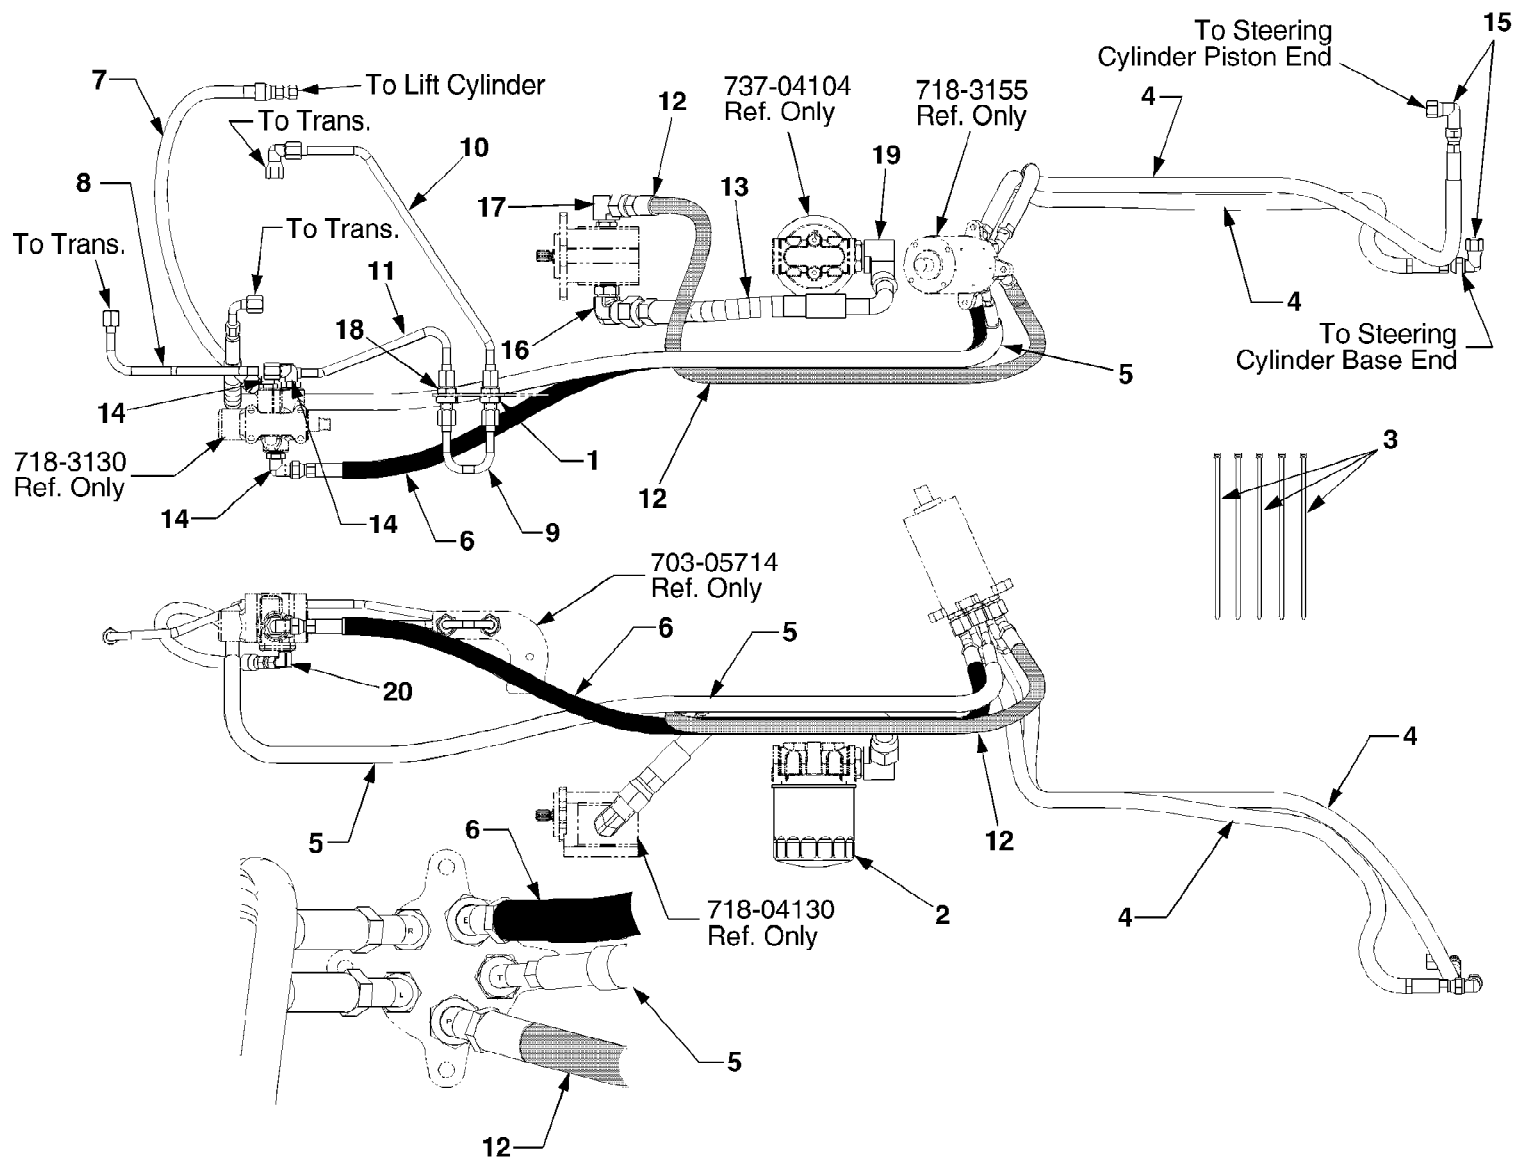


5234DL Tractor
Hydraulics 1B075G & After

Page 75 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	712-3035	2	/P	Nut, Hex Jam, 9/16-18 GR5
2	723-3014	1	S	Filter, Oil
3	725-0157	7	/P	Tie, Cable
4	727-04000	2		Hose, Steering
5	727-04002	1		Hose, Steering - Tank
6	727-04003	1		Hose, Lift Inlet
7	727-04014	1		Hose, Lift Cylinder
8	727-04015	1		Tube, Cylinder Return
9	727-04079	1		Tube, U Return
10	727-04082	1		Tube, Return Tank
11	727-04083	1		Tube, Return
12	727-04096	1	S	Hose, Steering Pressure
13	727-04097	1	S	Hose, Aux. Pump-Filter
14	727-3012	3	/P	Fitting, 90 Degree
15	737-04033	3	S	Fitting, 90 Degree Swivel
16	737-04035	1	S	Fitting, Elbow
17	737-3111	1		Fitting, 90 Degree
18	737-04087	2		Fitting, Bulkhead
19	737-04101	1		Fitting, 90 Degree
20	737-3127	1		Fitting, 90 Degree

5234DL Tractor
Hydrostatic Transmission 1B065G & Before


Page 76 of 115

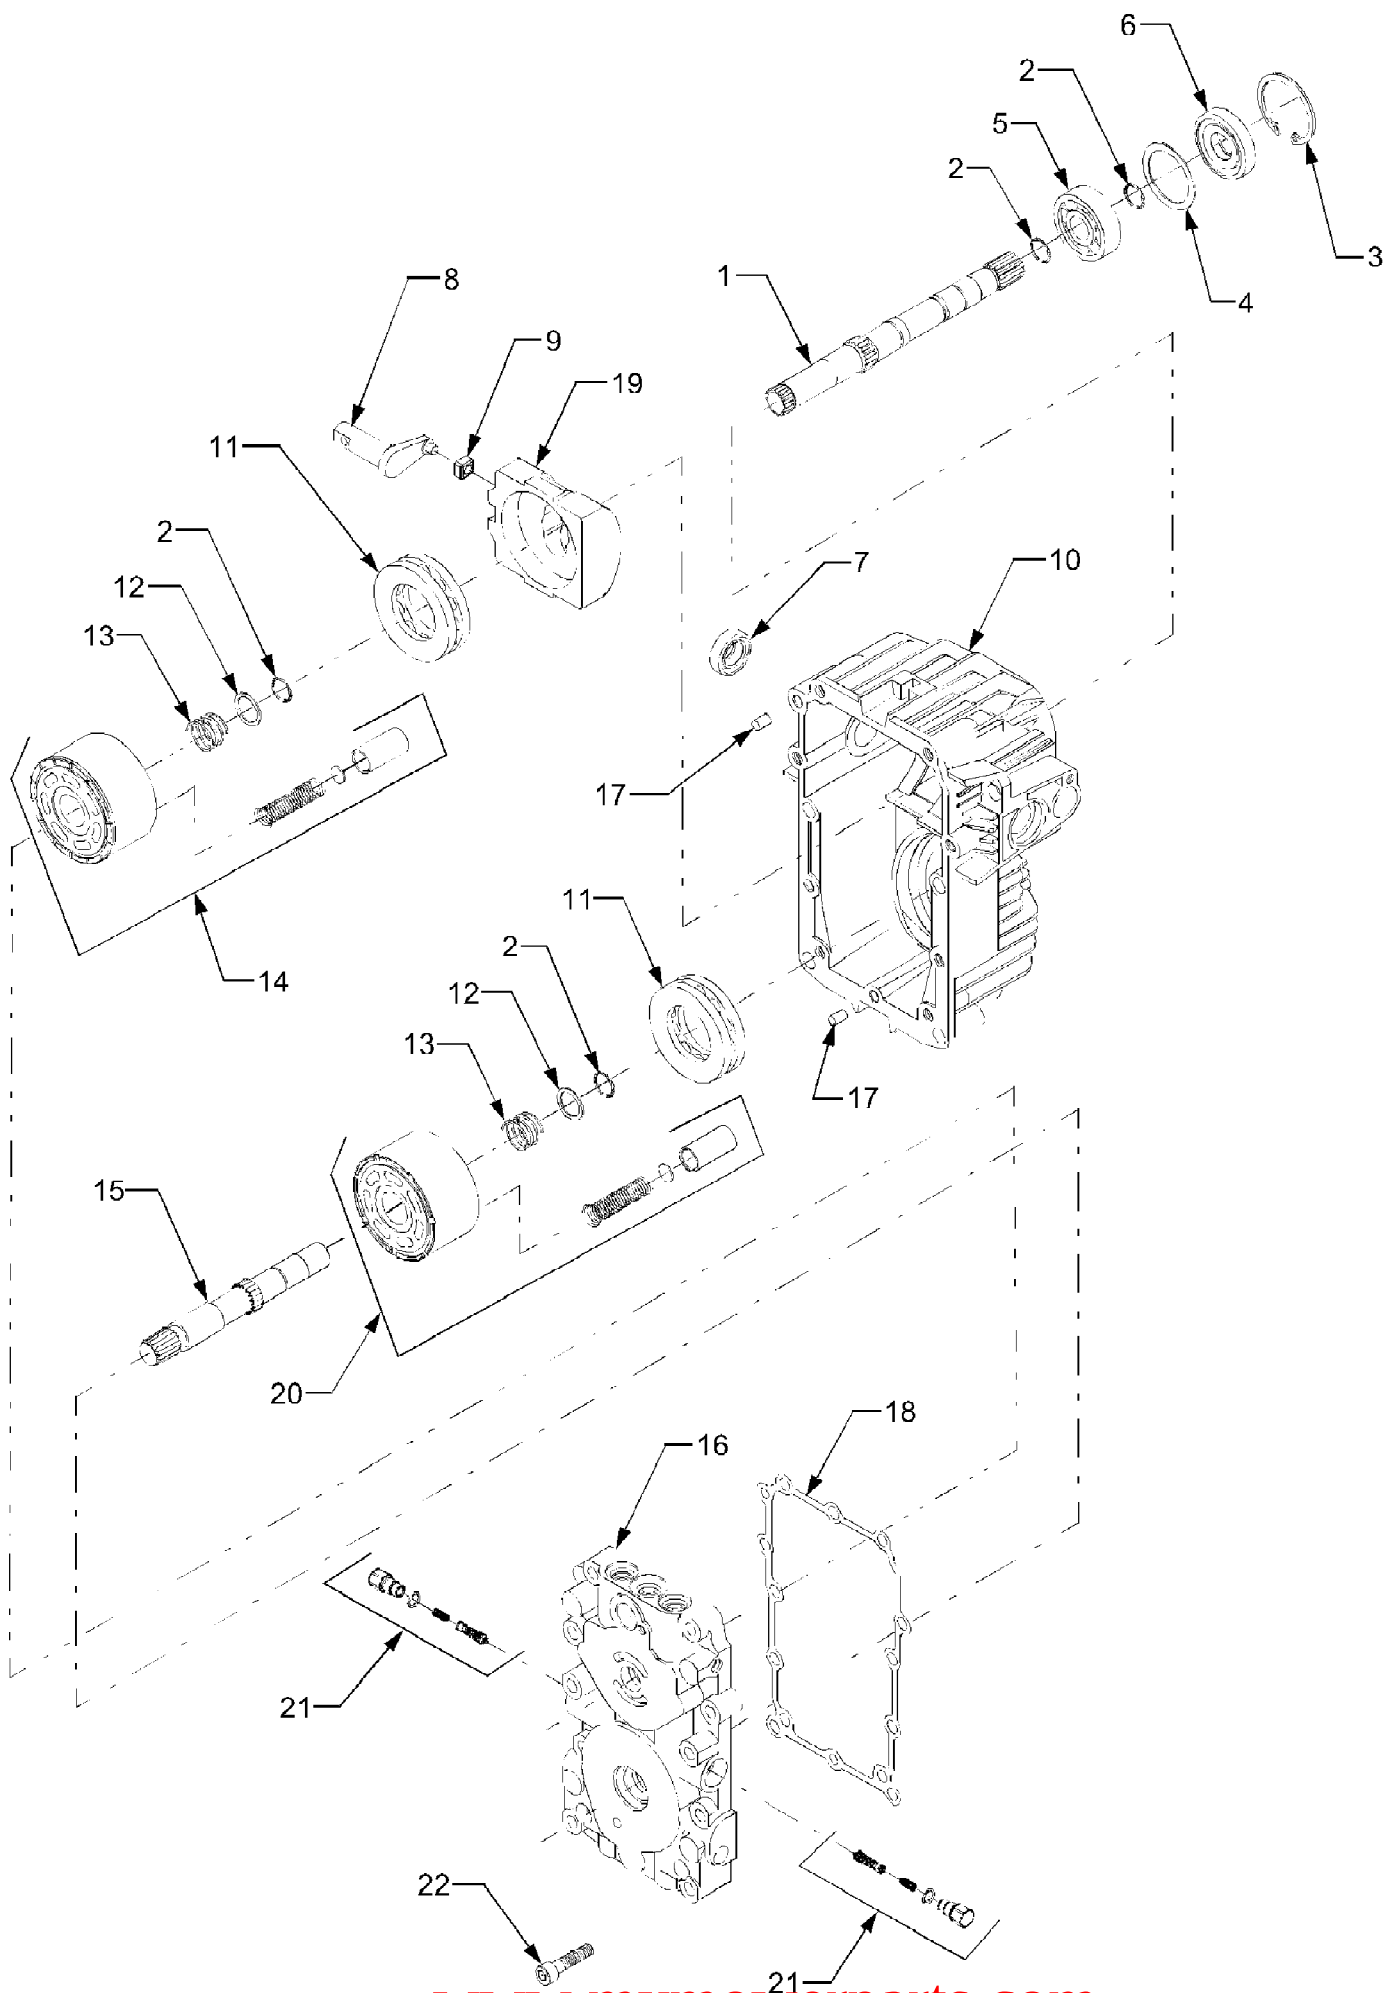

5234DL Tractor
Hydrostatic Transmission 1B065G & Before

Page 77 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	HG-51877	1	/P	Shaft, Pump
2	HG-2000022	4	/P	Ring, Wire Retaining
3	HG-2000038	1	/P	Ring, Retaining
4	HG-2000023	1	/P	Spacer
5	HG-2000032	1	/P	Bearing, Ball
6	HG-51092	1	/P	Seal, Lip
7	HG-2000037	1	/P	Seal, Lip
8	HG-2000014	1	/P	Arm, Trunnion
9	HG-2000015	1	/P	Guide, Slot
10	HG-2510096	1	/P	Housing Assembly
11	HG-50552	2	/P	Bearing Assembly, Thrust Ball
12	HG-2000024	2	/P	Washer, Block Thrust
13	HG-2000025	2	/P	Spring, Block
14	HG-2510014	1	/P	Kit, Pump Cylinder Block
15	HG-2000007	1	/P	Shaft, Motor
16	HG-70973	1		Kit, Center Section
17	HG-50641	2		Pin
18	HG-2000061	1	/P	Gasket, Center Section
19	HG-50203	1		Swashplate, Variable
20	HG-2510013	1	/P	Kit, Motor Cylinder Block
21	HG-70743	2	/P	Shock Valve
22	HG-9007314-0808	8	/P	Screw, Socket Head Cap
	HG-2510010	1	/P	Kit, Overhaul Seal

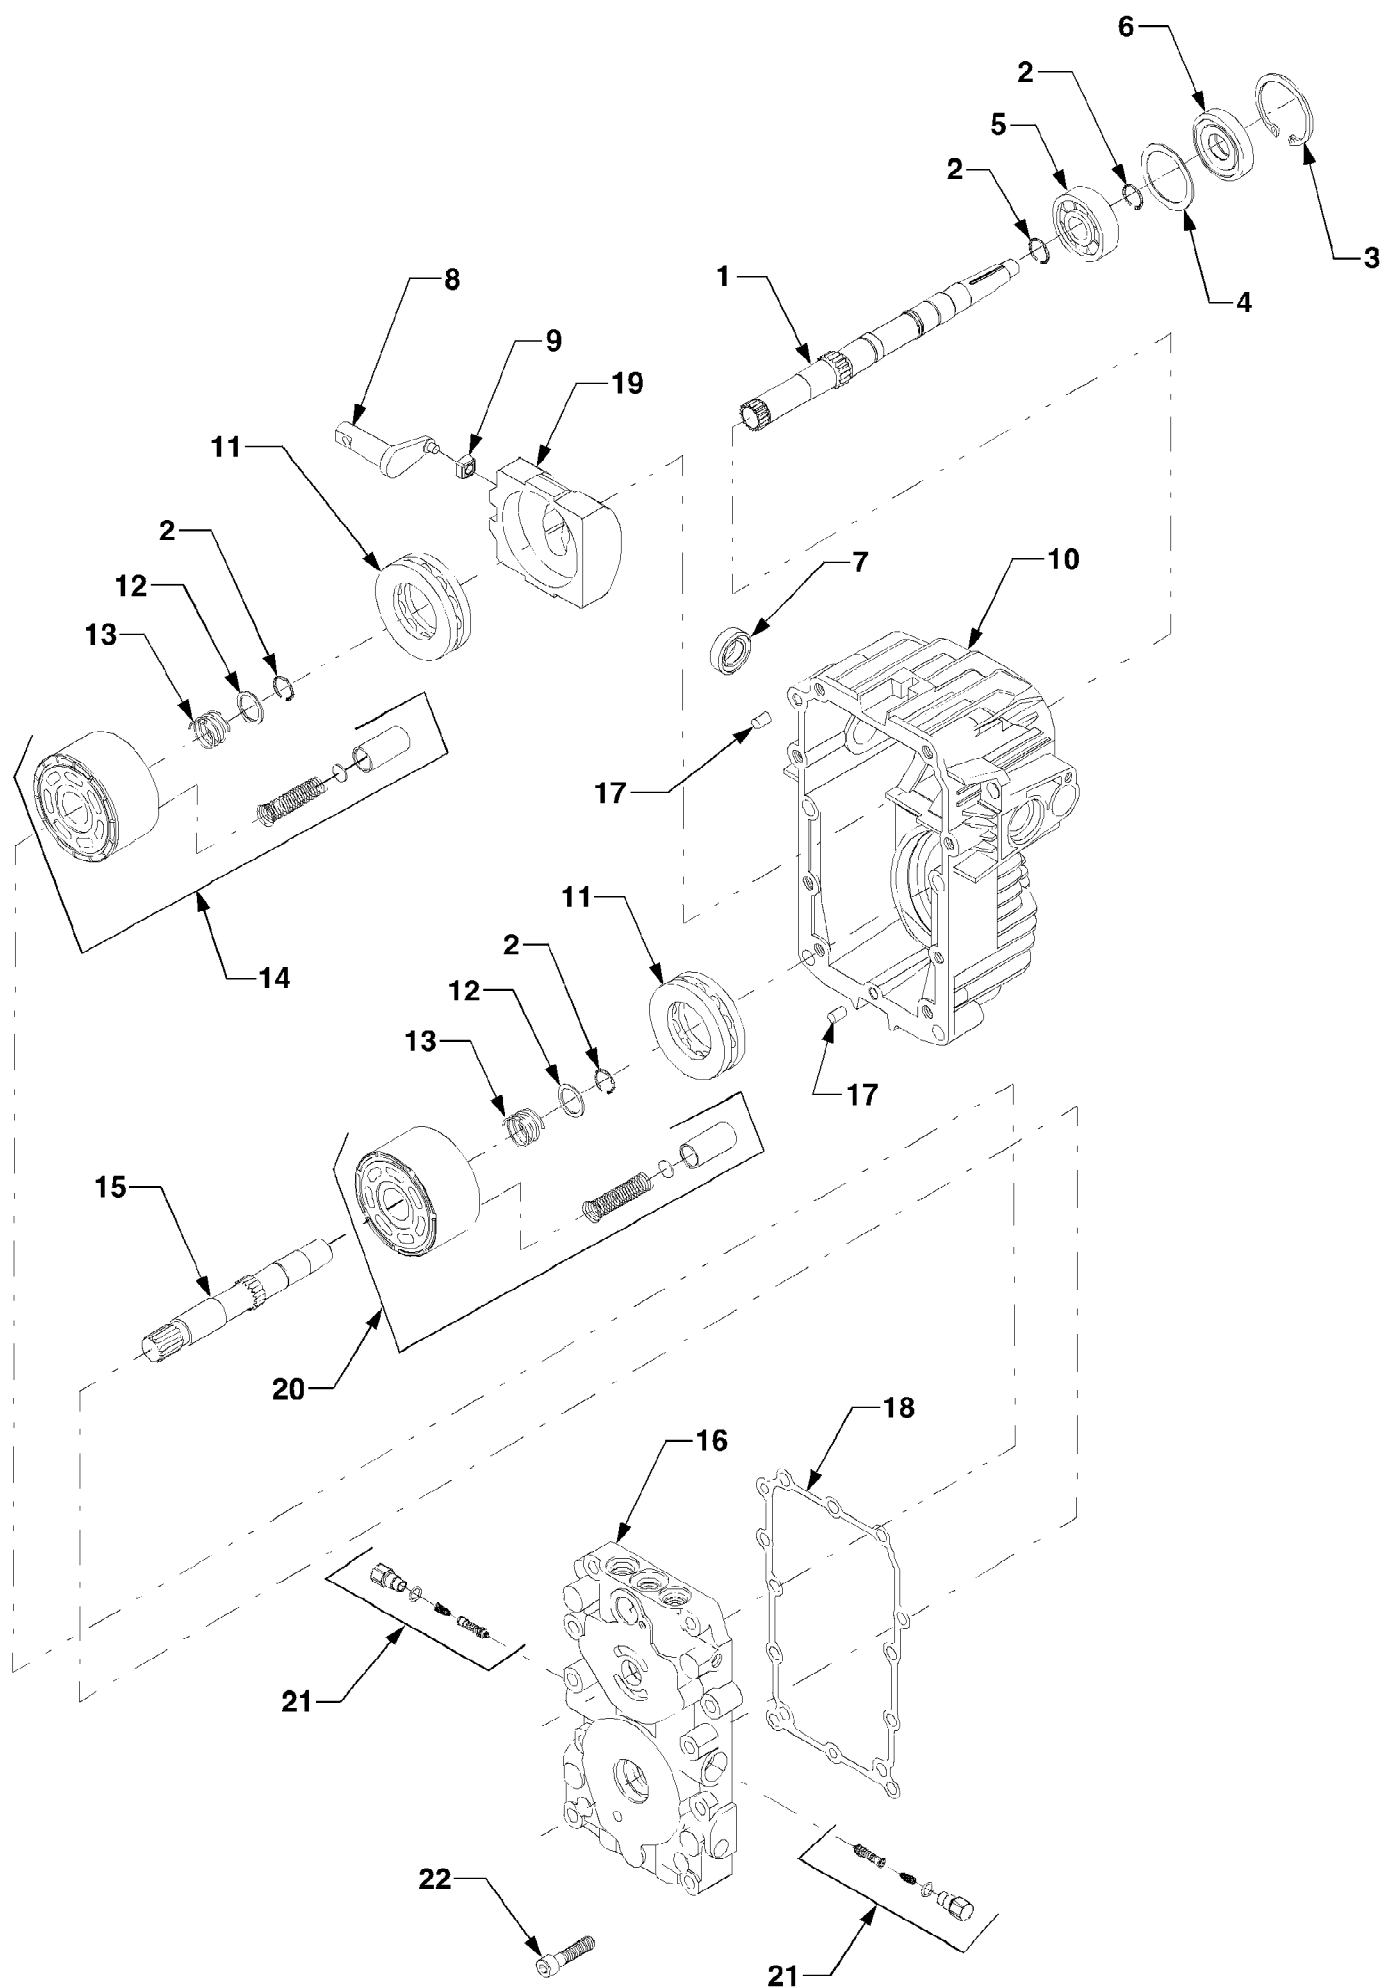


5234DL Tractor
Hydrostatic Transmission 1B075G & After

Page 79 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	HG-52224	1	/P	Shaft, Pump Input
2	HG-2000022	4	/P	Ring, Wire Retaining
3	HG-2000038	1	/P	Ring, Retaining
4	HG-2000023	1	/P	Spacer
5	HG-2000032	1	/P	Bearing, Ball
6	HG-51092	1	/P	Seal, Lip
7	HG-2000037	1	/P	Seal, Lip
8	HG-2000014	1	/P	Arm, Trunnion
9	HG-2000015	1	/P	Guide, Slot
10	HG-2510096	1	/P	Housing Assembly
11	HG-50552	2	/P	Bearing Assembly, Thrust Ball
12	HG-2000024	2	/P	Washer, Block Thrust
13	HG-2000025	2	/P	Spring, Block
14	HG-2510014	1	/P	Kit, Pump Cylinder Block
15	HG-2000007	1	/P	Shaft, Motor
16	HG-70973	1		Kit, Center Section
17	HG-50641	2		Pin
18	HG-2000061	1	/P	Gasket, Center Section
19	HG-50203	1		Swashplate, Variable
20	HG-2510013	1	/P	Kit, Motor Cylinder Block
21	HG-70743	2	/P	Shock Valve
22	HG-9007314-0808	8	/P	Screw, Socket Head Cap
	HG-2510010	1	/P	Kit, Overhaul Seal

5234DL Tractor
Lift Valve 1B065G & Before


Page 80 of 115

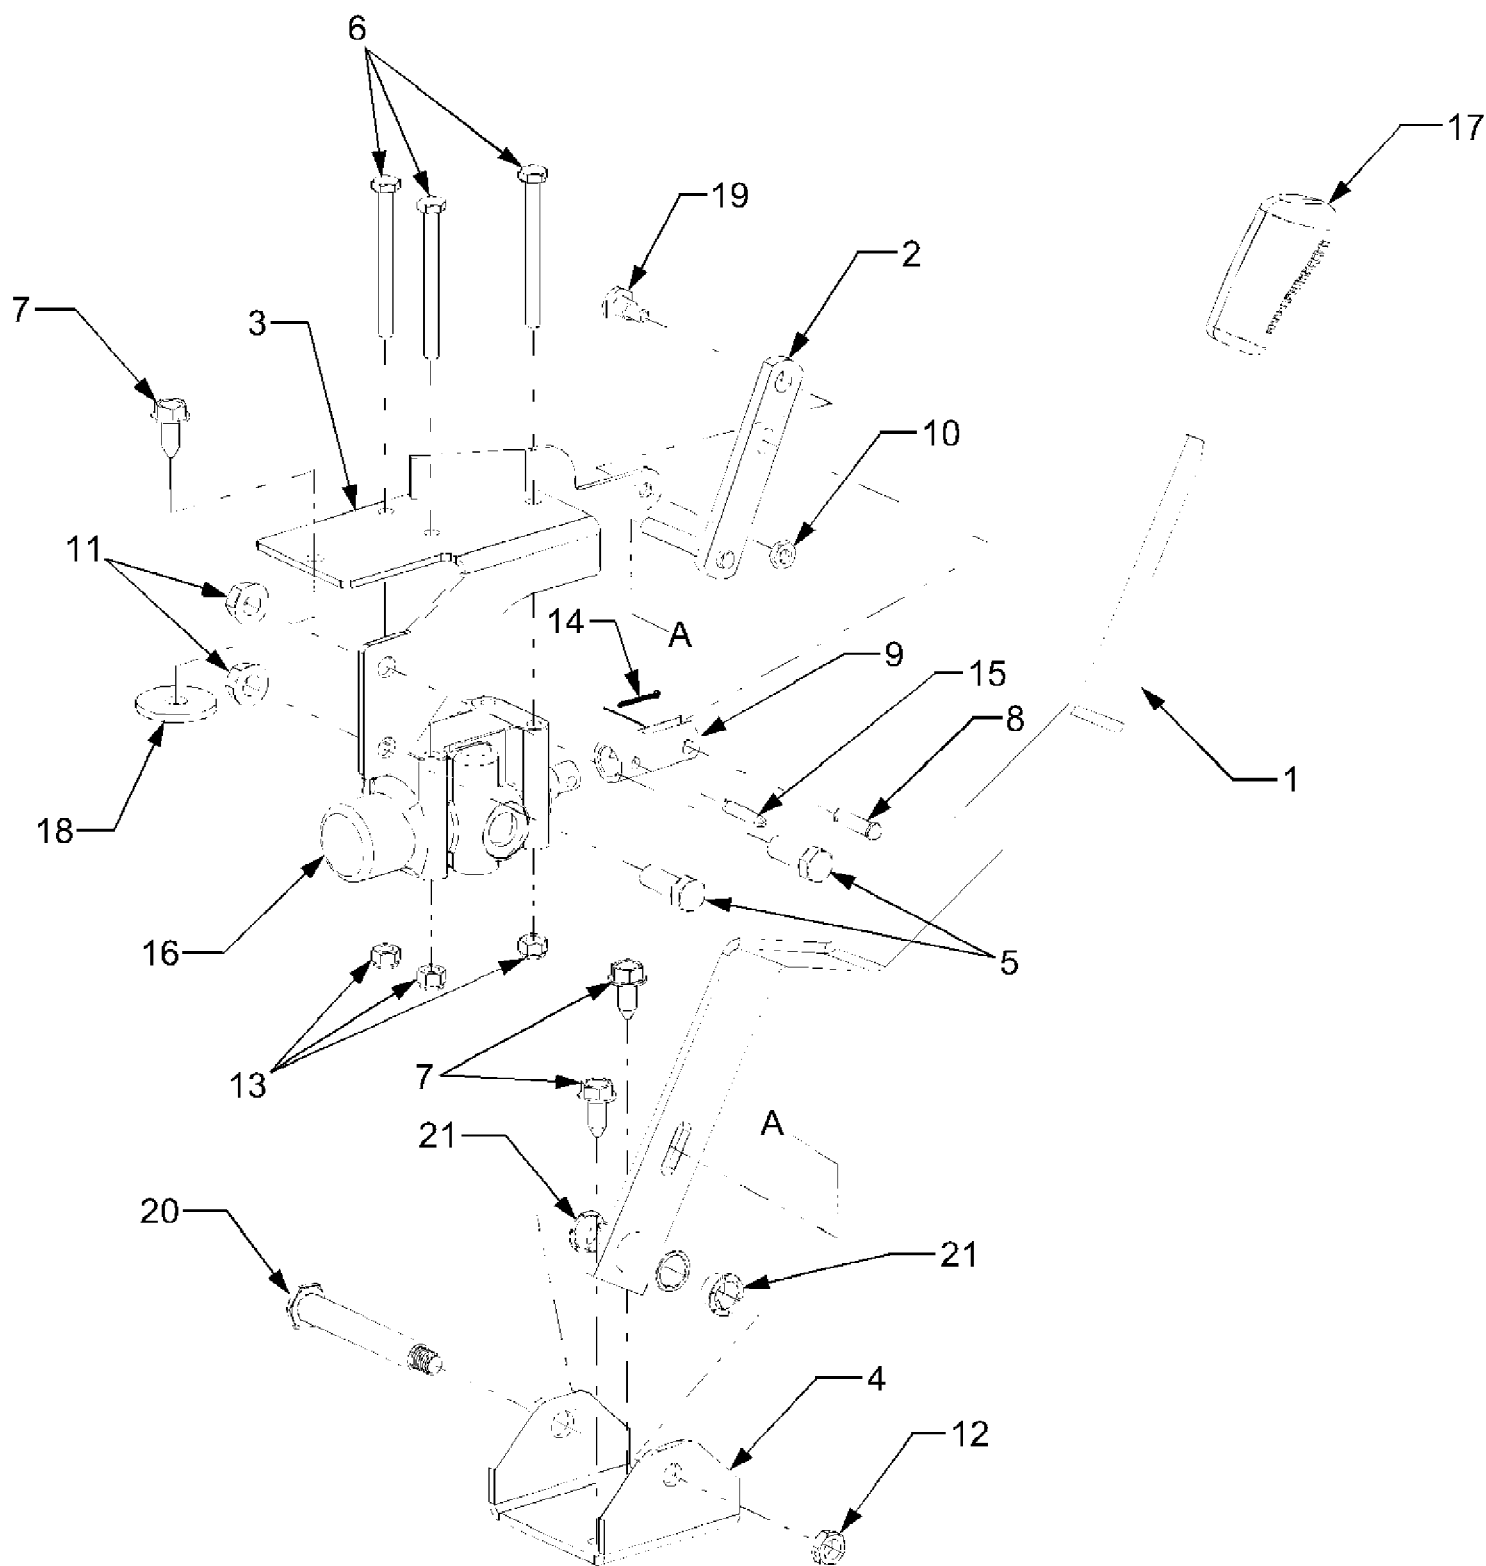

5234DL Tractor
Lift Valve 1B065G & Before

Page 81 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	603-04032	1	S	Handle, Lift
2	603-04033	1	S	Link, Valve
3	603-04035	1	S	Bracket, Lift Valve Mounting
4	703-05038	1	S	Bracket, Handle Pivot
5	710-0514	2	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
6	710-0564	3	/P	Screw, Hex Cap 1/4-20 x 2.75 GR5
7	710-1260A	3	/P	Screw, Hex Wash, Hd Tapp 5/16-18 x .75
8	711-04214	1		Pin, Clevis, .25 x .9375
9	711-1614	1		Link, Valve
10	712-0298	1	S	Nut, Hex Jam, 1/4-20
11	712-0431	2	S	Nut, Hex Flange Top Lock, 3/8-16 GRF
12	712-0266	1	S	Nut, Hex Ctr Lock Jam, 3/8-16
13	712-0324	3	/P	Nut, Hex Nylon Insert Lock 14-20 GR8
14	714-0127	1	/P	Pin, Cotter, 1/16 x .75
15	715-0120	1	S	Pin, Spirol, 3/16 x 1.0
16	718-3130	1		Valve, Hydraulic Lift
17	731-3321	1		Grip, Handle
18	736-0258	1	/P	Washer, Flat, .385 x 1.0 x .135
19	738-0137A	1	S	Screw, Shoulder, .34 x .285
20	738-0215A	1	/P	Screw, Shoulder, .498 x 2.99
21	741-0491	2		Bearing, Nylon Flange .5 ID

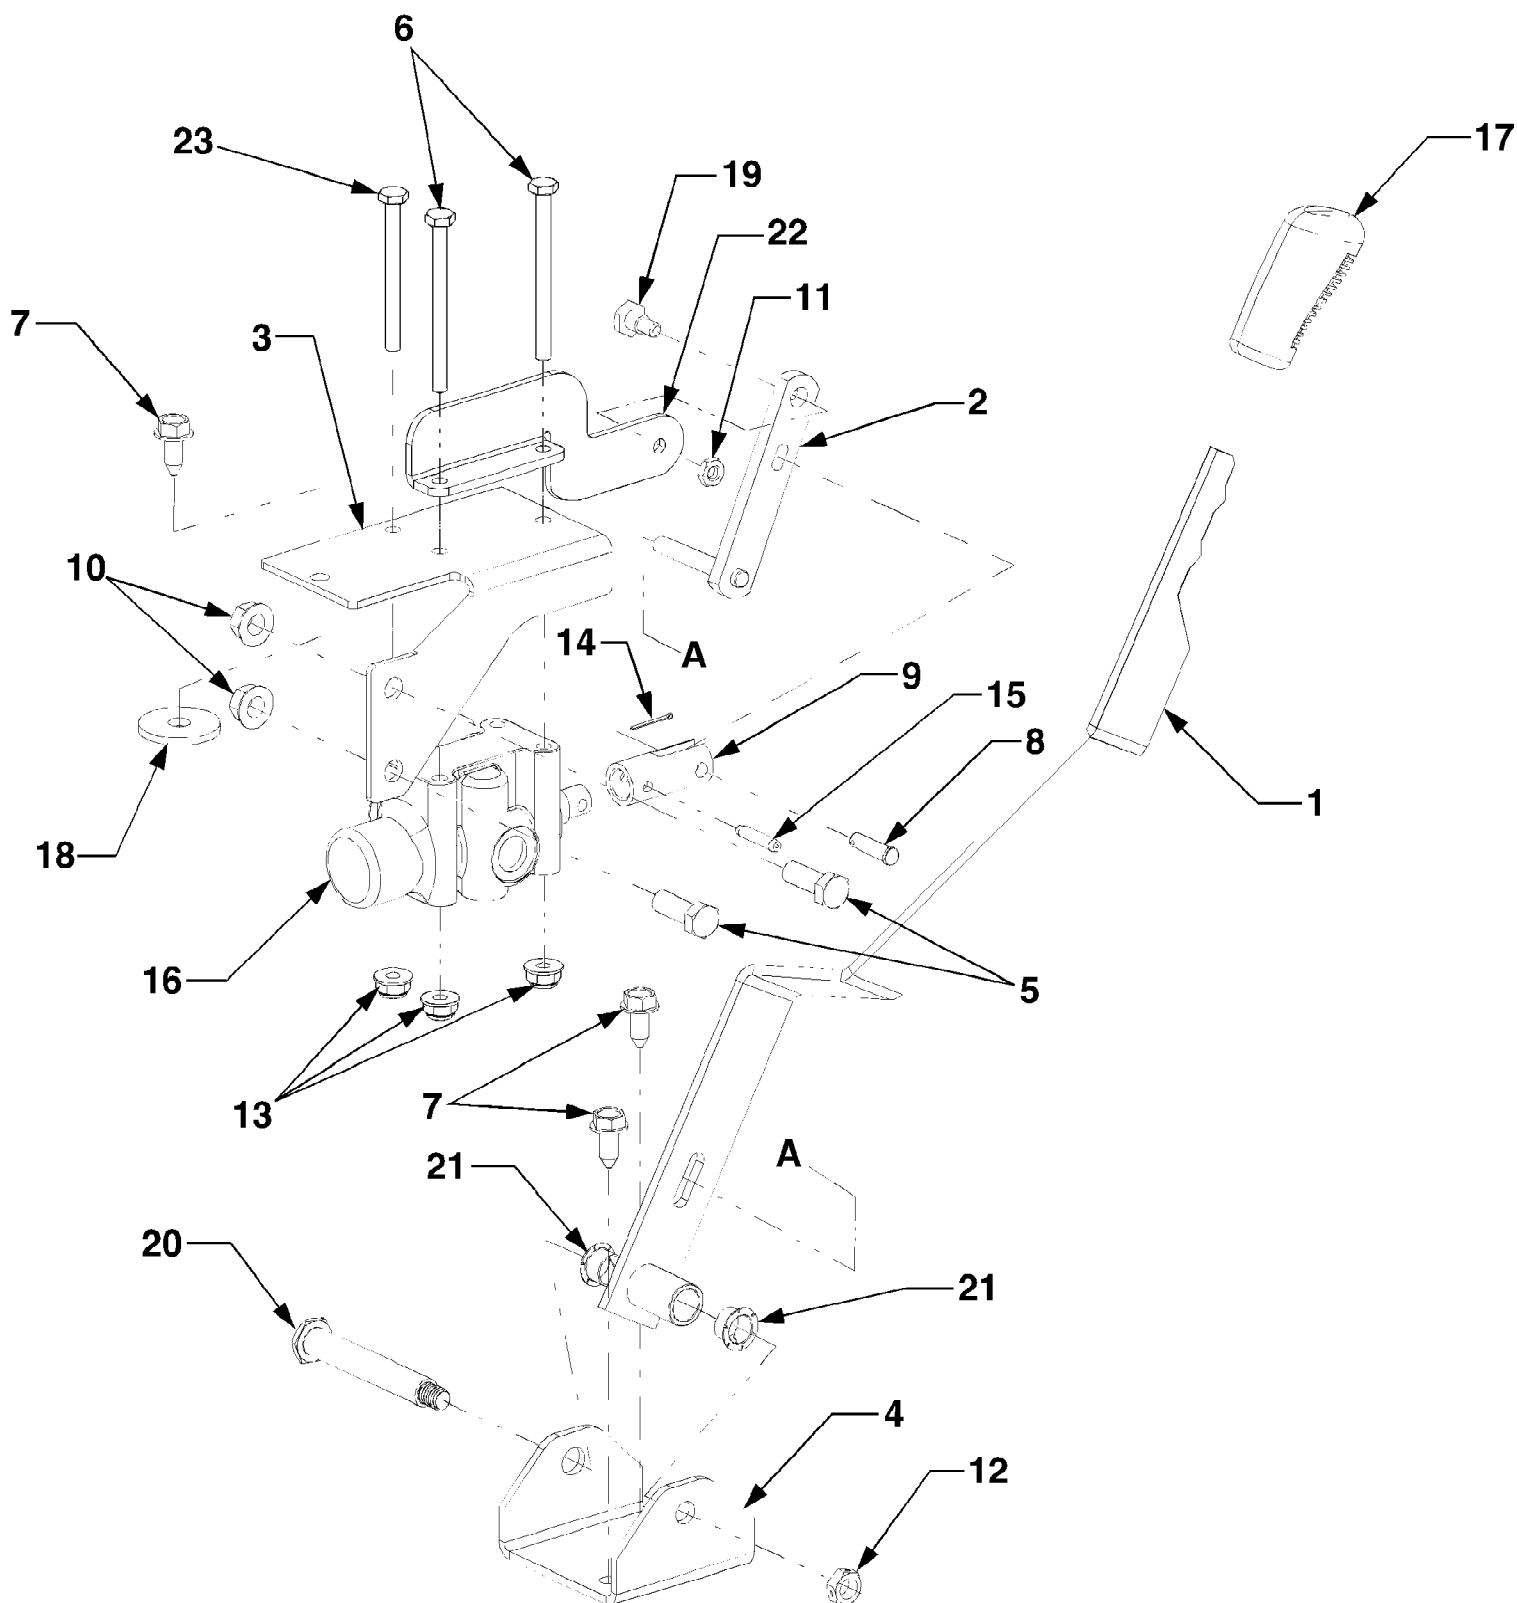


5234DL Tractor
Lift Valve 1B075G & After

Page 83 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	603-04032	1	S	Handle, Lift
2	603-04033	1	S	Link, Valve
3	703-05090-0637	1		Bracket, Lift Valve Mounting
4	703-05038	1	S	Bracket, Handle Pivot
5	710-0514	2	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
6	710-04370	2		Screw, Hex Cap 1/4-20 x 3.0 GR5
7	710-1260A	3	/P	Screw, Hex Wash, Hd Tapp 5/16-18 x.75
8	711-04214	1		Pin, Clevis, .25 x .9375
9	711-1614	1		Link, Valve
10	712-04065	2	/P	Nut, Hex Flange Nylon Lock, 3/8-16 GRF
11	712-0298	1	S	Nut, Hex Jam, 1/4-20
12	712-0266	1	S	Nut, Hex Ctr Lock Jam, 3/8-16 ..
13	712-04064	3	/P	Nut, Hex Flange Nylon Lock 14-20 GRF
14	714-0127	1	/P	Pin, Cotter, 1/16 x .75
15	715-0120	1	S	Pin, Spirol, 3/16 x 1.0
16	718-3130	1		Valve, Hydraulic Lift
17	731-3321	1		Grip, Handle
18	736-0258	1	/P	Washer, Flat, .385 x 1.0 x .135
19	738-0137A	1	S	Screw, Shoulder, .34 x .285
20	738-0215A	1	/P	Screw, Shoulder, .498 x 2.99
21	741-0491	2		Bearing, Nylon Flange .5 ID
22	703-05545-0637	1		Link, Lift Valve Mounting
23	710-0564	1	/P	Screw, Hex Cap, 1/4-20 x 2.75 GR5

5234DL Tractor
Lubrication


Page 84 of 115

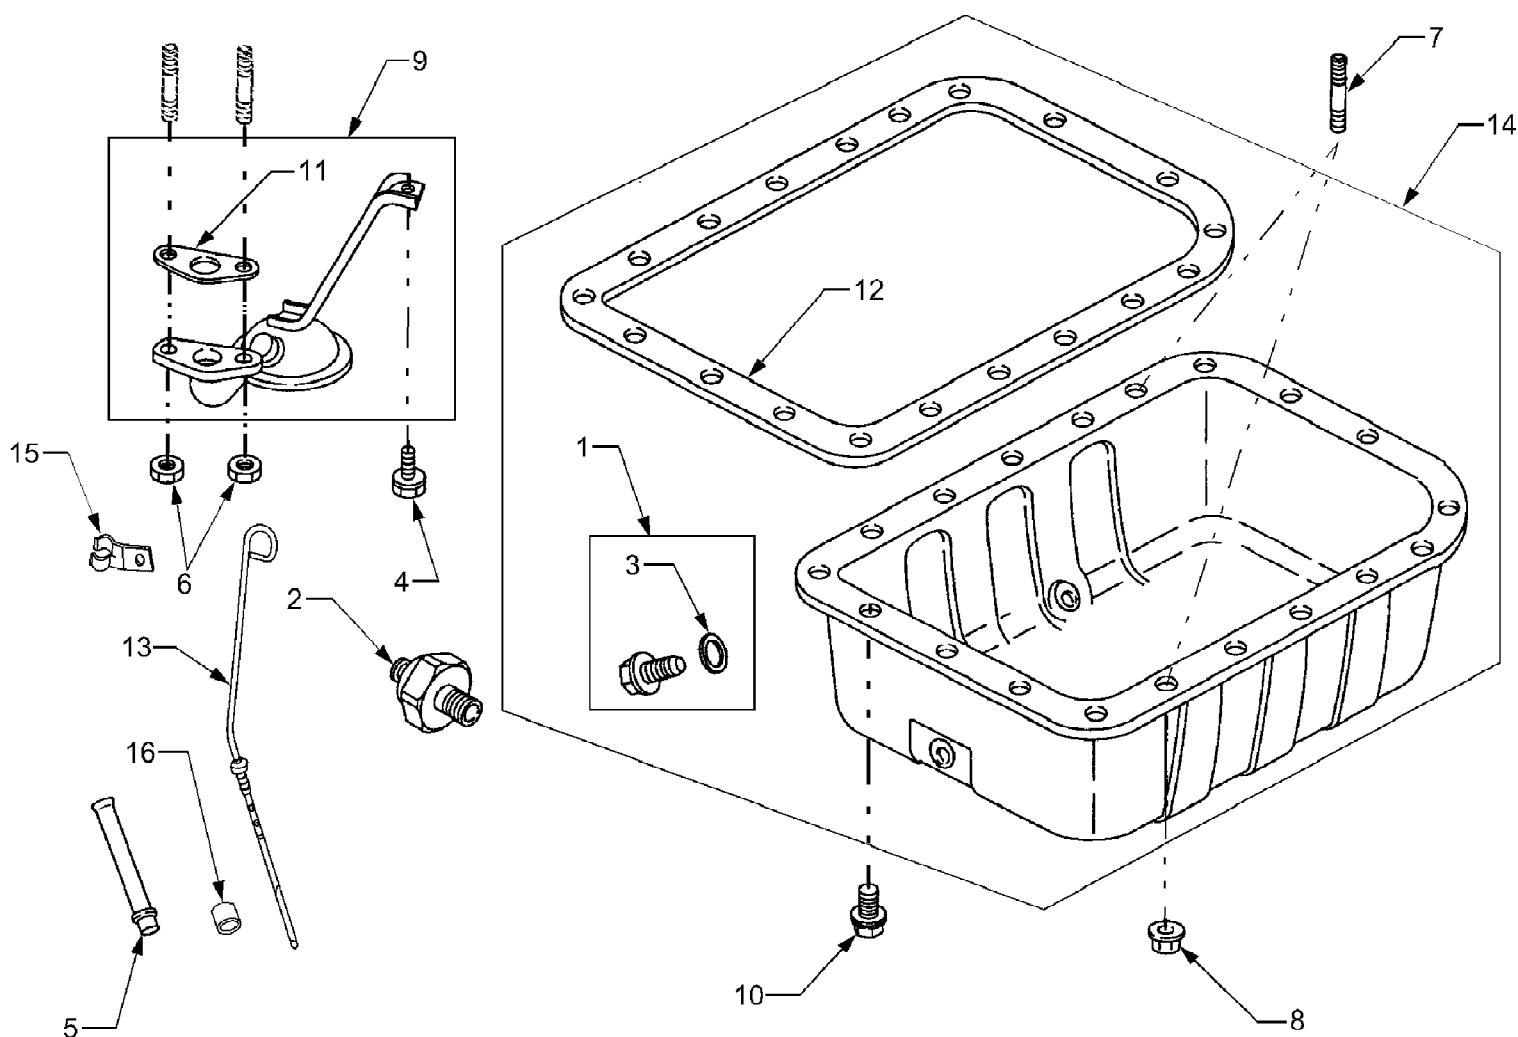

5234DL Tractor
Lubrication

Page 85 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	BS-825278	2		Plug, Oil Drain 16mm
2	BS-825000	1		Switch, Oil Pressure
3	BS-820582	2		Washer, Sealing
4	BS-820034	1		Screw, Oil Pump Screen
5	BS-820144	1		Tube, Dipstick
6	BS-820069	2		Nut, Oil Pump Screen
7	BS-820017	2		Stud, Oil Pan
8	BS-820068	2		Nut, Oil Pan
9	BS-825089	1		Oil Pump Screen
10	BS-820034	17		Screw, Oil Pan
11	BS-820104	1		Gasket, Oil Pump Screen
12	BS-820137	1		Gasket, Oil Pan
13	BS-820572	1		Dipstick
14	BS-825285	1		Pan, Oil
15	BS-820238	1		Bracket, Support
16	BS-820662	1		Collar, Dipstick Tube

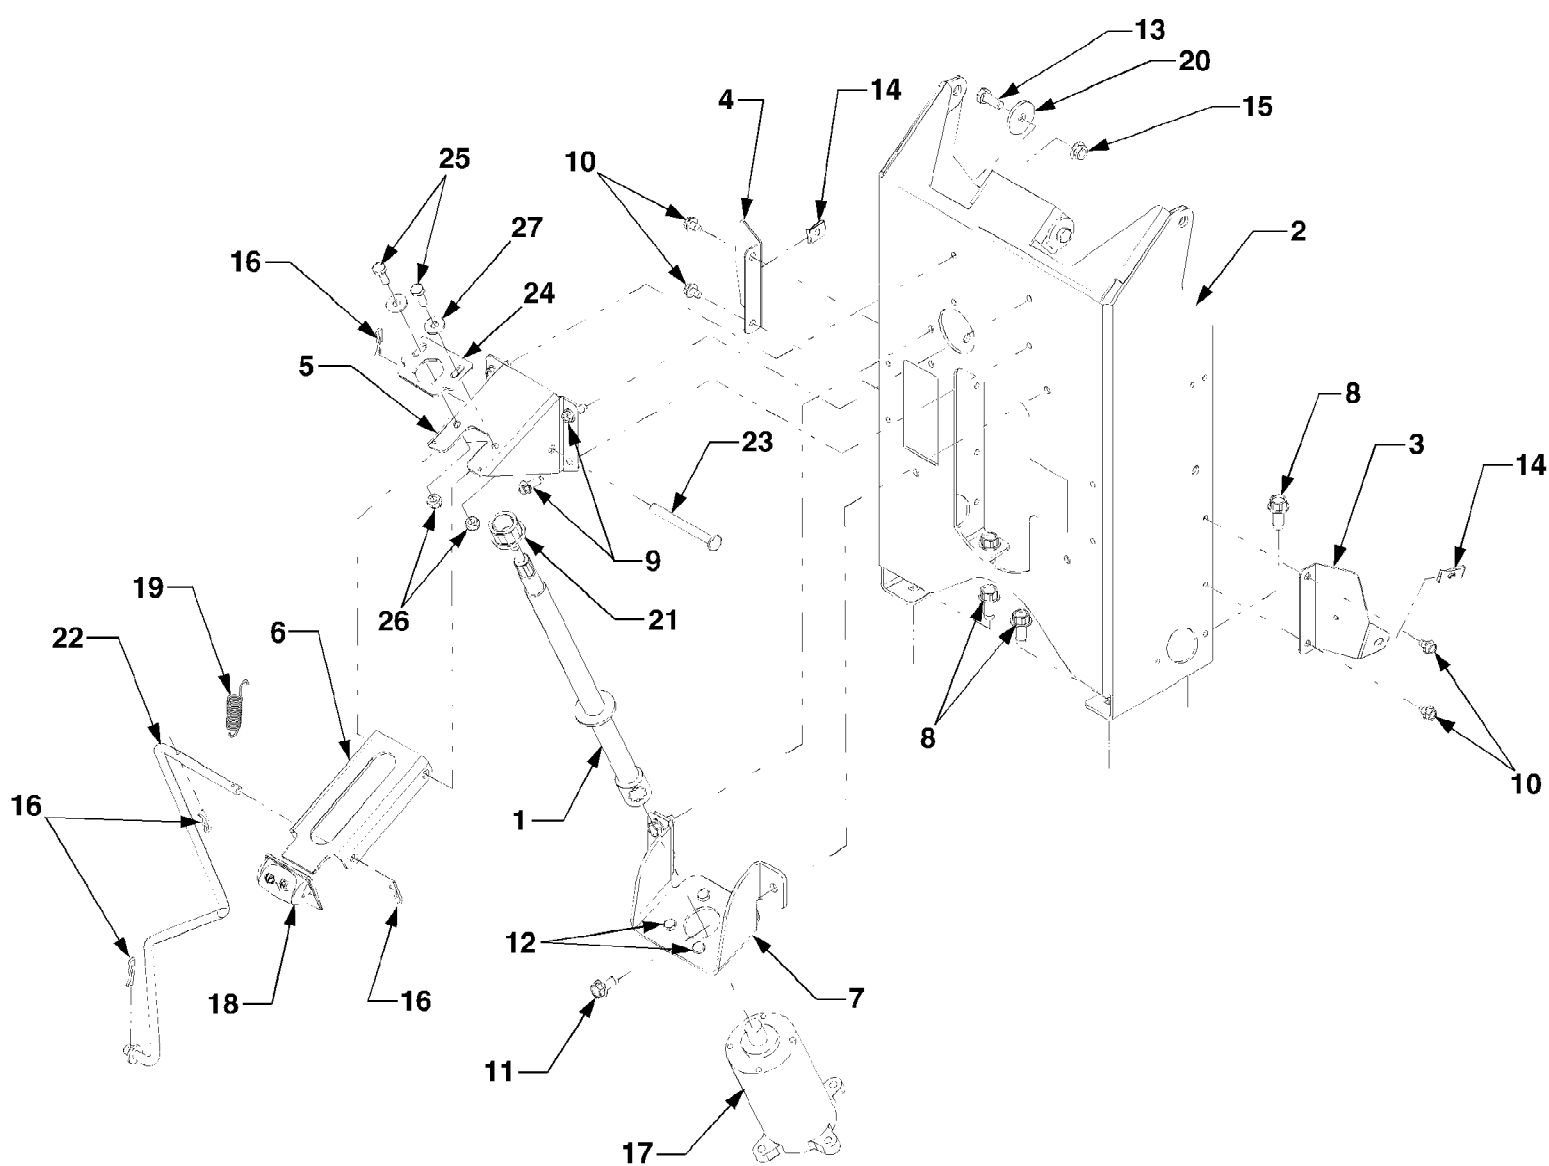


5234DL Tractor
Pedestal

Page 87 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	603-04001A	1	S	Shaft, Steering
2	703-3383D-0637	1	/P	Pedestal
3	703-3717-0637	1		Bracket, Dash Mtg. RH
4	703-3721-0637	1		Bracket, Dash Mtg. LH
5	703-05361-0637	1	/P	Bracket, Steering Column
6	703-3895	1		Bracket, Brake Lever
7	703-4154-0637	1	/P	Bracket, Pump Mtg.
8	710-0623	4	/P	Screw, Hex Wash, Hd Tapp 3/8-16 x .75
9	710-0642	4	/P	Screw, Hex Wash, Hd Tapp 1/4-20 x .75
10	710-0653	4	/P	Screw, Hex Wash, Hd Tapp 1/4-20 x .375
11	710-1260A	3	/P	Screw, Hex Wash, Hd Tapp 5/16-18 x .75
12	710-1690	4		Screw, Hex, M6-1 x 16 hardened
13	710-3008	2	/P	Screw, Hex Cap 5/16-18 x .75 GR5
14	712-0292	2	/P	Nut, Speed, 1/4-20
15	712-3004A	2	/P	Nut, Hex Flange Lock, 5/16-18
16	714-0104	4	S	Pin, Internal Cotter
17	718-3155	1	S	Pump, Hydraulic Steering
18	731-3359	1		Lever, Parking Brake
19	732-3002	1	S	Spring, Extension
20	736-0343	2	/P	Washer, Flat, .33 x 1.25 x .12
21	741-0245	1	S	Bearing, Hex Flange, .75 ID
22	747-04001	1		Rod, Parking Brake
23	747-3454	1		Pin, Parking Brake Pivot
24	703-05362	1	S	Plate, Bearing
25	710-3015	2	/P	Screw, Hex Cap, 1/4-20 x .75 GR5
26	712-0324	2	/P	Nut, Hex Insert Lock, 1/4-20
27	736-0173	2	/P	Washer, Flat, .28 x .74 x .063

5234DL Tractor
PTO Drive 1B065G & Before

Page 88 of 115

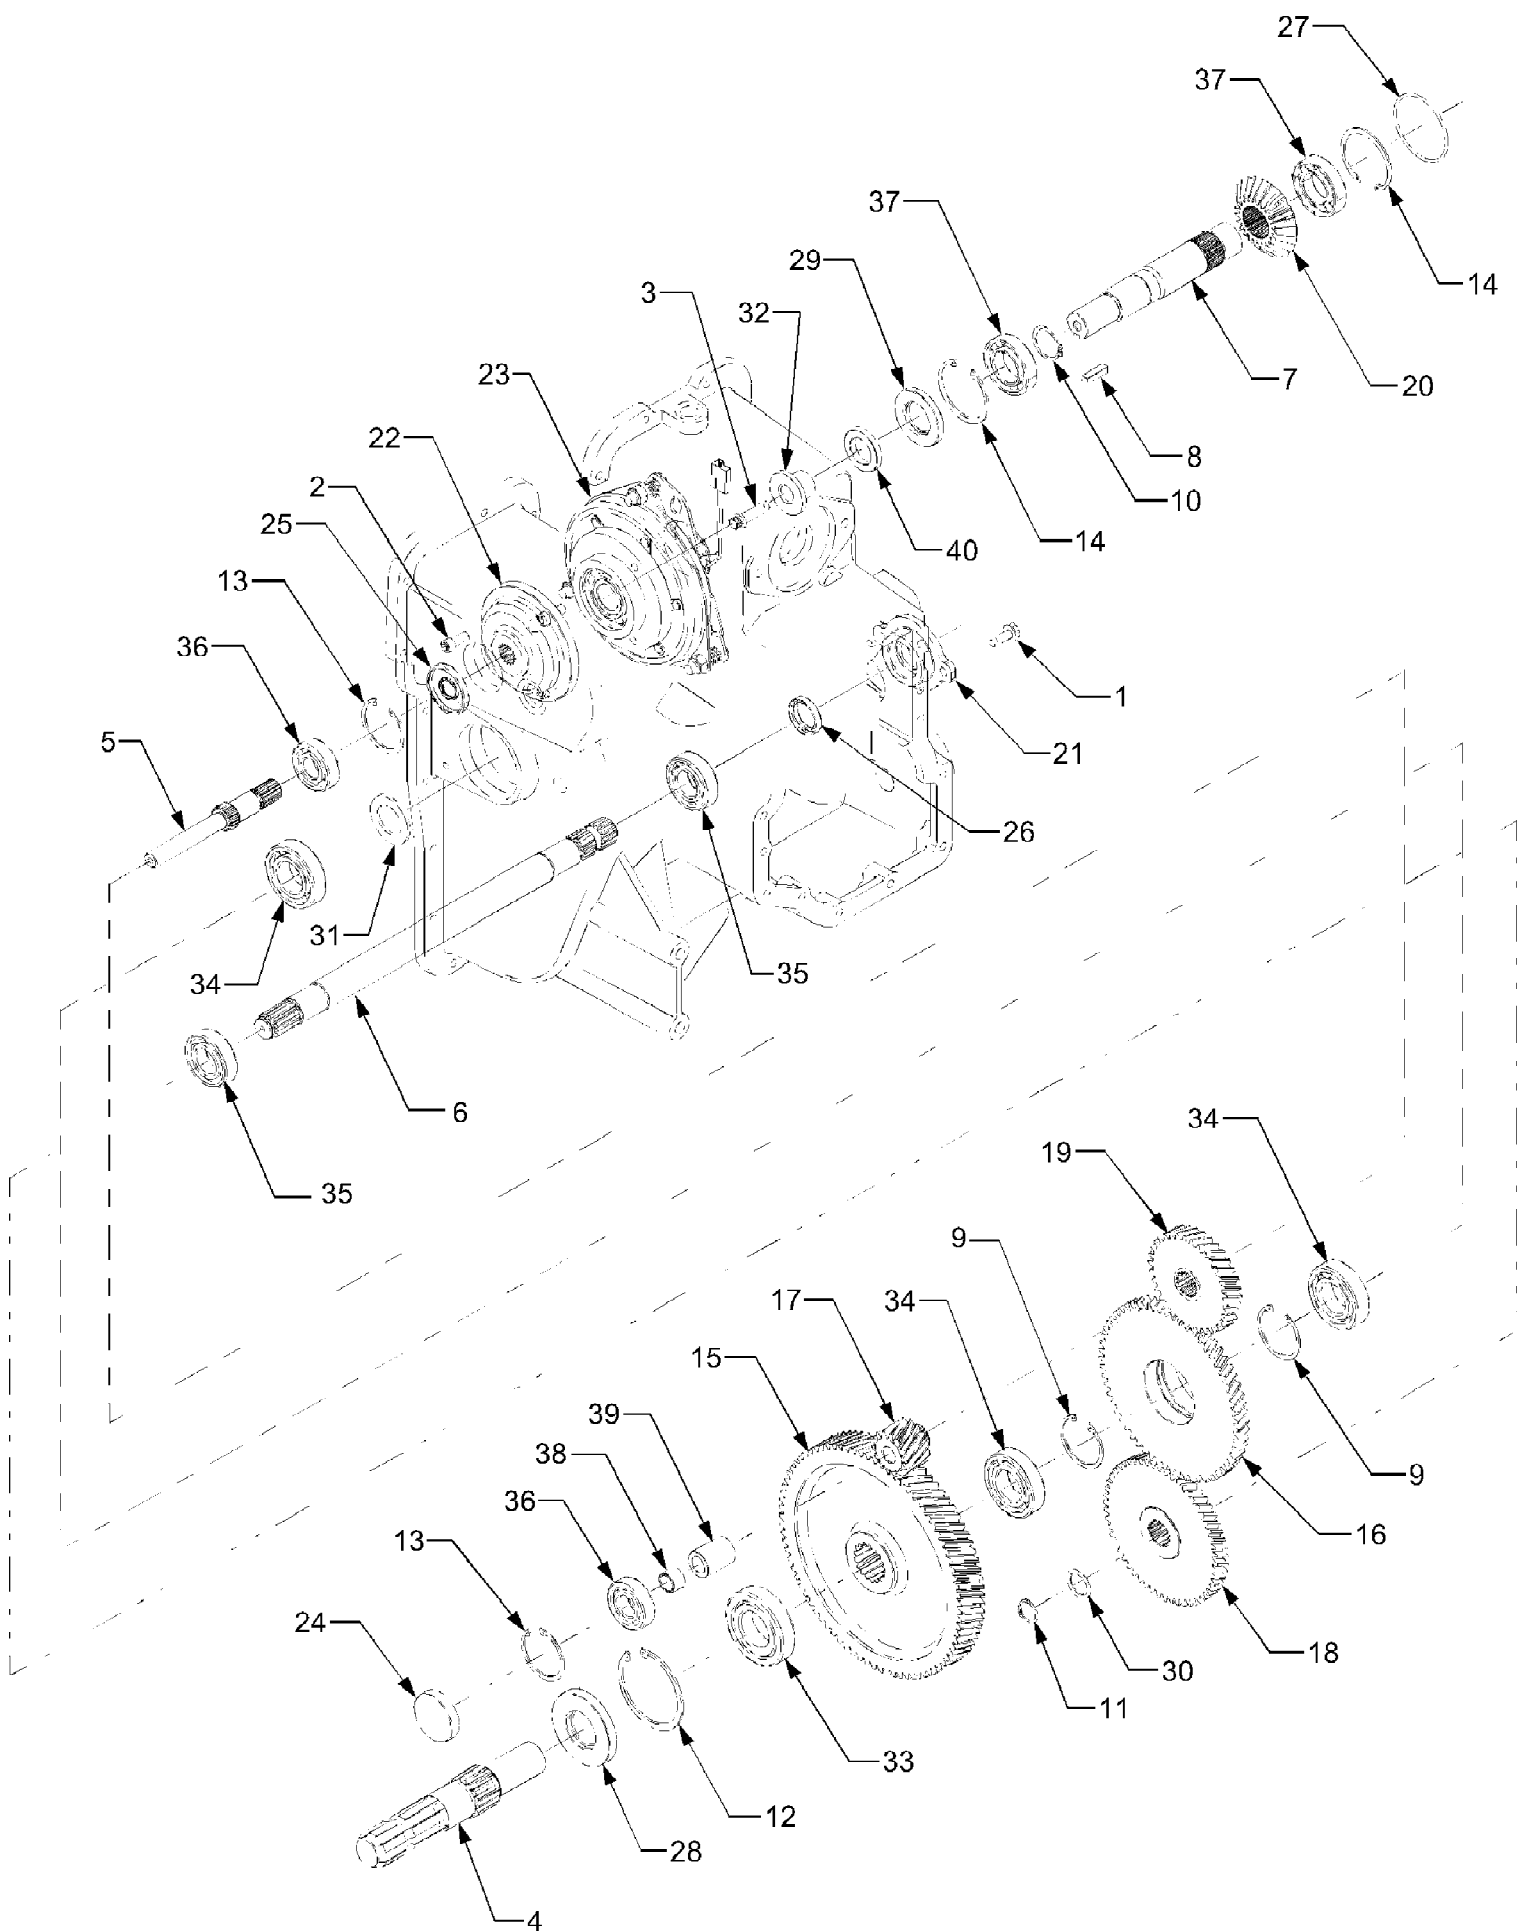


5234DL Tractor
PTO Drive 1B065G & Before

Page 89 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	710-0650	2	/P	Screw, Hex Wash. Hd. Tapp. 5/16-18 x .875
2	710-1177	3	/P	Screw, Socket Hd 5/16-18 x .75
3	710-04116	1	/P	Screw, 12 Pt. Wash. Hd. w/Patch 3/8-16 x 1.25
4	711-1325	1		Shaft, 540 PTO
5	711-1683A	1	S	Shaft, Clutch Back
6	711-1684	1	S	Shaft, 2000 PTO
7	711-1685	1	S	Shaft, Input PTO
8	714-0128	1	/P	Key, Square, 1/4 x 1. 0
9	716-0180	2		Ring, Retaining
10	716-0181	1	/P	Ring, Retaining
11	716-0384	1		Ring, Retaining
12	716-0387	1		Ring, Retaining
13	716-0393	2		Ring, Retaining
14	716-04000	2	S	Ring, Retaining
15	717-3469	1		Gear, 540 PTO, 81T
16	717-3487	1		Gear, 2000 PTO , 61T
17	717-3492	1		Gear, Pinion, 540 PTO:14T
18	717-3494C	1	/P	Gear, Pinion, 2000 PTO:54T
19	717-3551	1	S	Gear, Pinion, 2000 PTO:34T
20	717-04113	1	S	Gear, Bevel, 32T
21	718-0681	1		Cover, 2000 PTO
22	718-04000	1	S	Adapter, PTO Output
23	718-04009	1	S	Clutch Assy. PTO
24	721-0504	1		Plug, Oil, 1.875 x .375
25	721-0507	1		Seal, Oil
26	721-0509	1		Seal, Oil
27	721-04002	1	S	O-Ring, 2.425 ID x .103
28	721-04003	1	S	Seal, Oil
29	721-04005	1	S	Seal, Oil
30	736-0570	1	S	Washer, Flat, .865 x 1.145 x .030
31	736-04001	1	S	Washer, Thrust
32	738-04003	1	S	Spacer, Shoulder
33	741-1100	1		Bearing, Ball
34	741-3033A	3	S	Bearing, Ball
35	741-3037	2	S	Bearing, Ball
36	741-3057	2	S	Bearing, Ball
37	741-04034	2	S	Bearing, Ball
38	750-3365	1	S	Spacer, 15mm x 20mm x 14mm
39	750-04013	1	S	Spacer, .6 x 1.0 x 1.345
40	750-04020	1	S	Spacer, 1.004 x 1.375 x .25

5234DL Tractor
PTO Drive 1B075G & After


Page 90 of 115

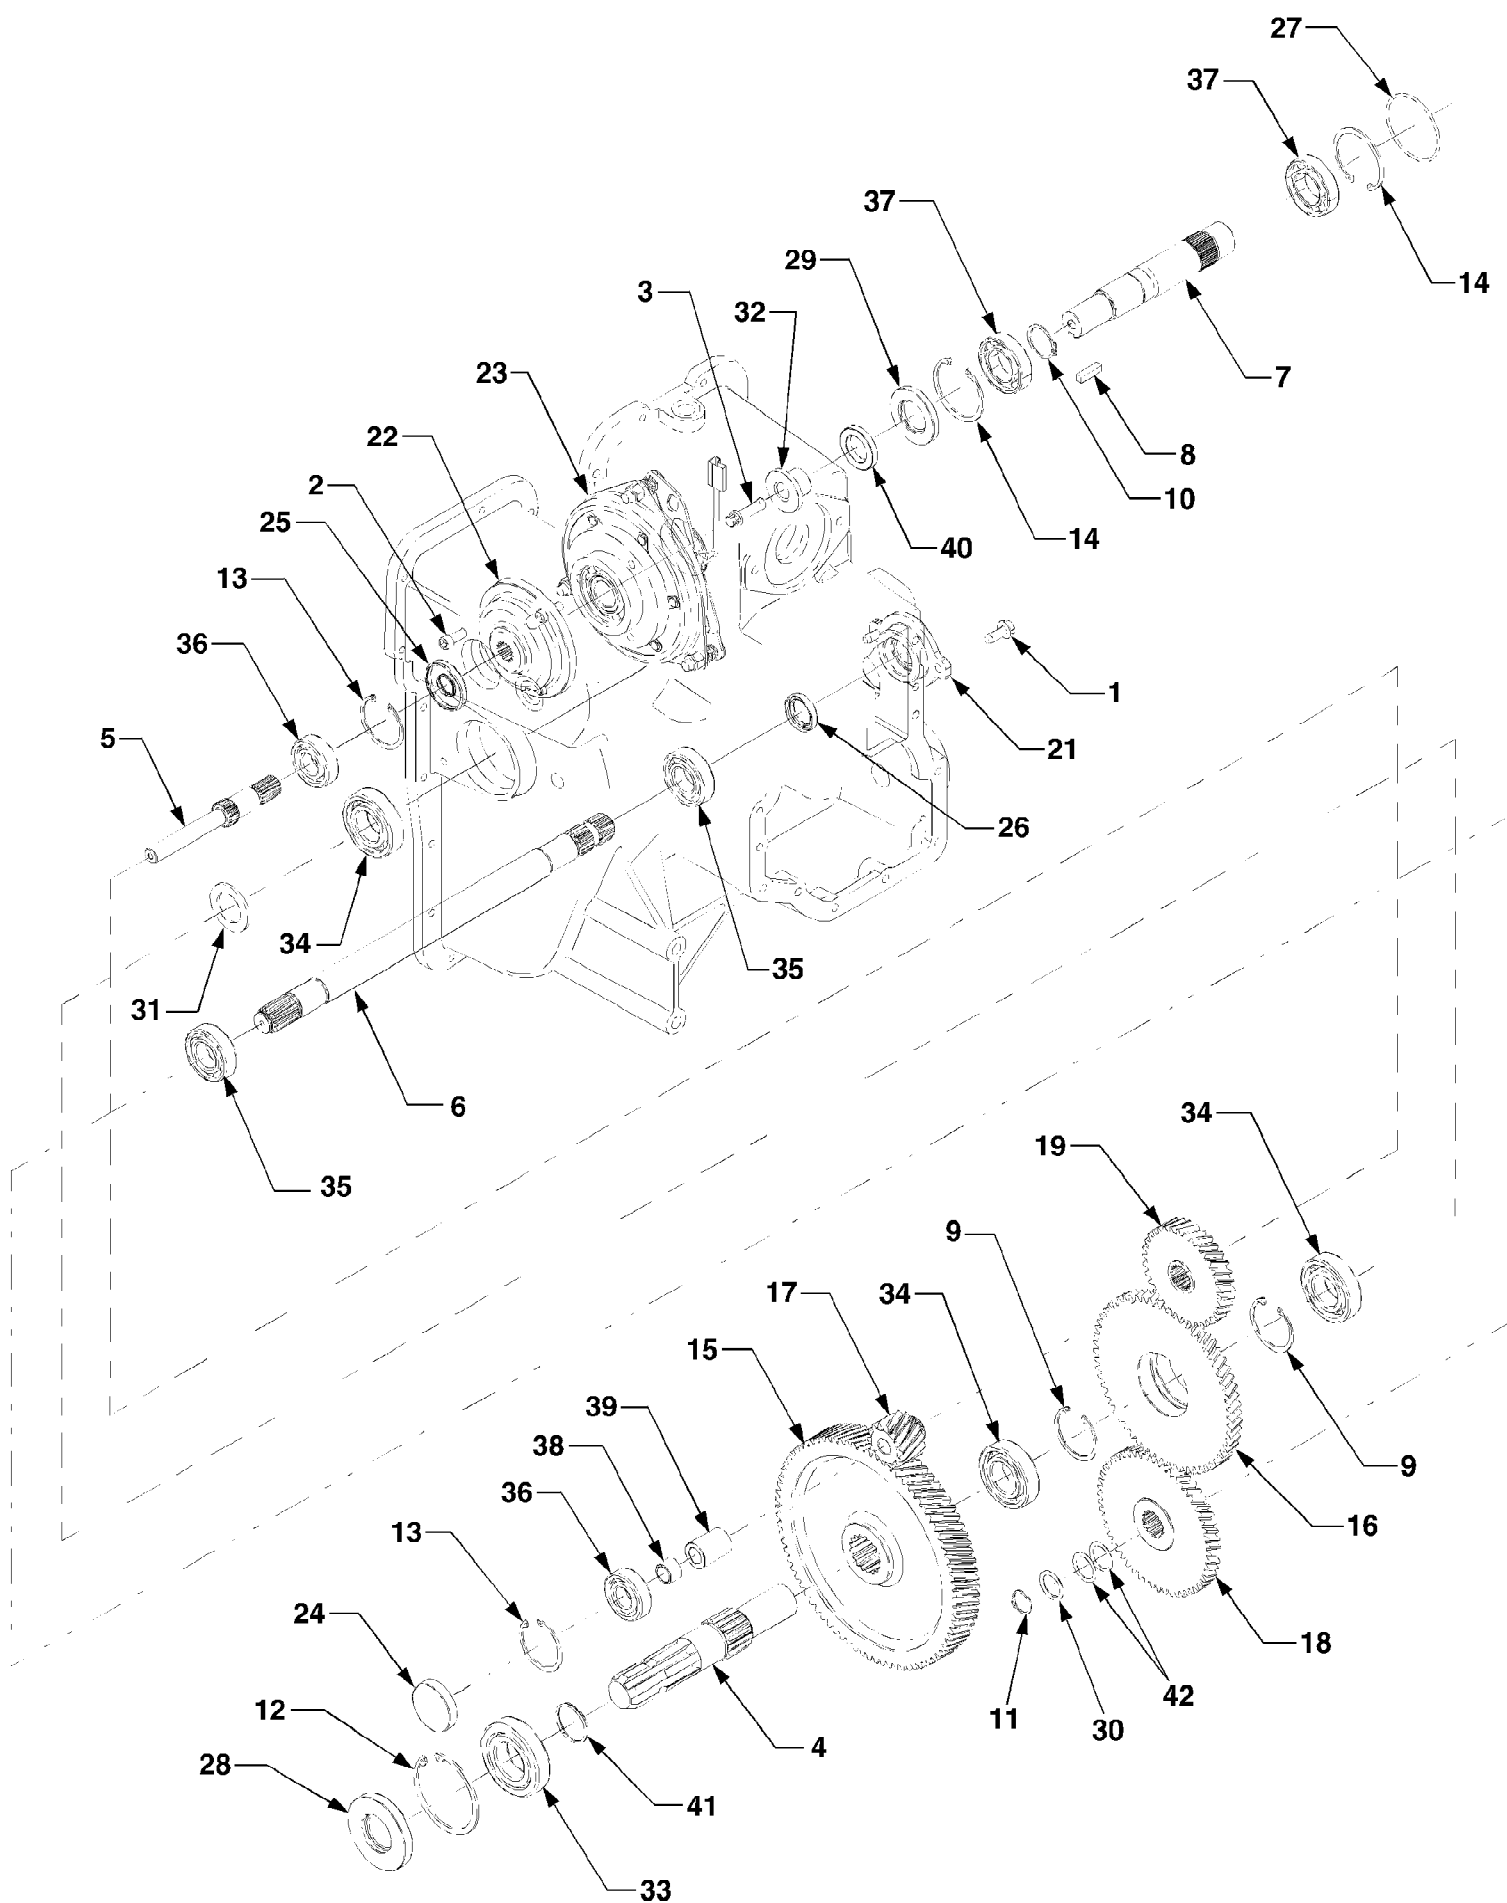

5234DL Tractor
PTO Drive 1B075G & After

Page 91 of 115


Ref #	Part Number	Qty	S/P/F	Description
1	710-0650	2	/P	Screw, Hex Wash. Hd. Tapp. 5/16-18 x .875
2	710-1177	3	/P	Screw, Socket Hd. 5/16-18 x .75
3	710-04116	1	/P	Screw, 12 Pt. Wash. Hd. w/Patch 3/8-16 x 1.25
4	711-1325A	1	S	Shaft, 540 PTO
5	711-1683A	1	S	Shaft, Clutch Back
6	711-1684	1	S	Shaft, 2000 PTO
7	711-1685	1	S	Shaft, Input PTO
8	714-0128	1	/P	Key, Square, 1/4 x 1. 0
9	716-0180	2		Ring, Retaining
10	716-0181	1	/P	Ring, Retaining
11	716-0384	1		Ring, Retaining
12	716-0387	1		Ring, Retaining
13	716-0393	2		Ring, Retaining
14	716-04000	2	S	Ring, Retaining
15	717-3469	1		Gear, 540 PTO, 81T
16	717-3487	1		Gear, 2000 PTO , 61T
17	717-3492	1		Gear, Pinion, 540 PTO:14T
18	717-3494C	1	/P	Gear, Pinion, 2000 PTO:54T
19	717-3551	1	S	Gear, Pinion, 2000 PTO:34T
21	718-0681	1		Cover, 2000 PTO
22	718-04000	1	S	Adapter, PTO Output
23	718-04009	1	S	Clutch Assy. PTO
24	721-0504	1		Plug, Oil, 1.875 x .375
25	721-04094	1		Seal, Oil
26	721-0509	1		Seal, Oil
27	721-04002	1	S	O-Ring, 2.425 ID x .103
28	721-04124	1	S	Seal, Oil
29	721-04005	1	S	Seal, Oil
30	736-0570	1	S	Washer, Flat, .865 x 1.145 x .030 ..
31	736-04001	1	S	Washer, Thrust
32	738-04003	1	S	Spacer, Shoulder
33	741-1100	1		Bearing, Ball
34	741-3033A	3	S	Bearing, Ball
35	741-3037	2	S	Bearing, Ball
36	741-3057	2	S	Bearing, Ball
37	741-04034	2	S	Bearing, Ball
38	750-3365	1	S	Spacer, 15mm x 20mm x 14mm
39	750-04013	1	S	Spacer, .6 x 1.0 x 1.345
40	750-04020	1	S	Spacer, 1.004 x 1.375 x .25
41	716-04049	1	S	Ring, Retaining
42	736-0454	2	S	Washer, Flat, .915 x 1.37 x .010

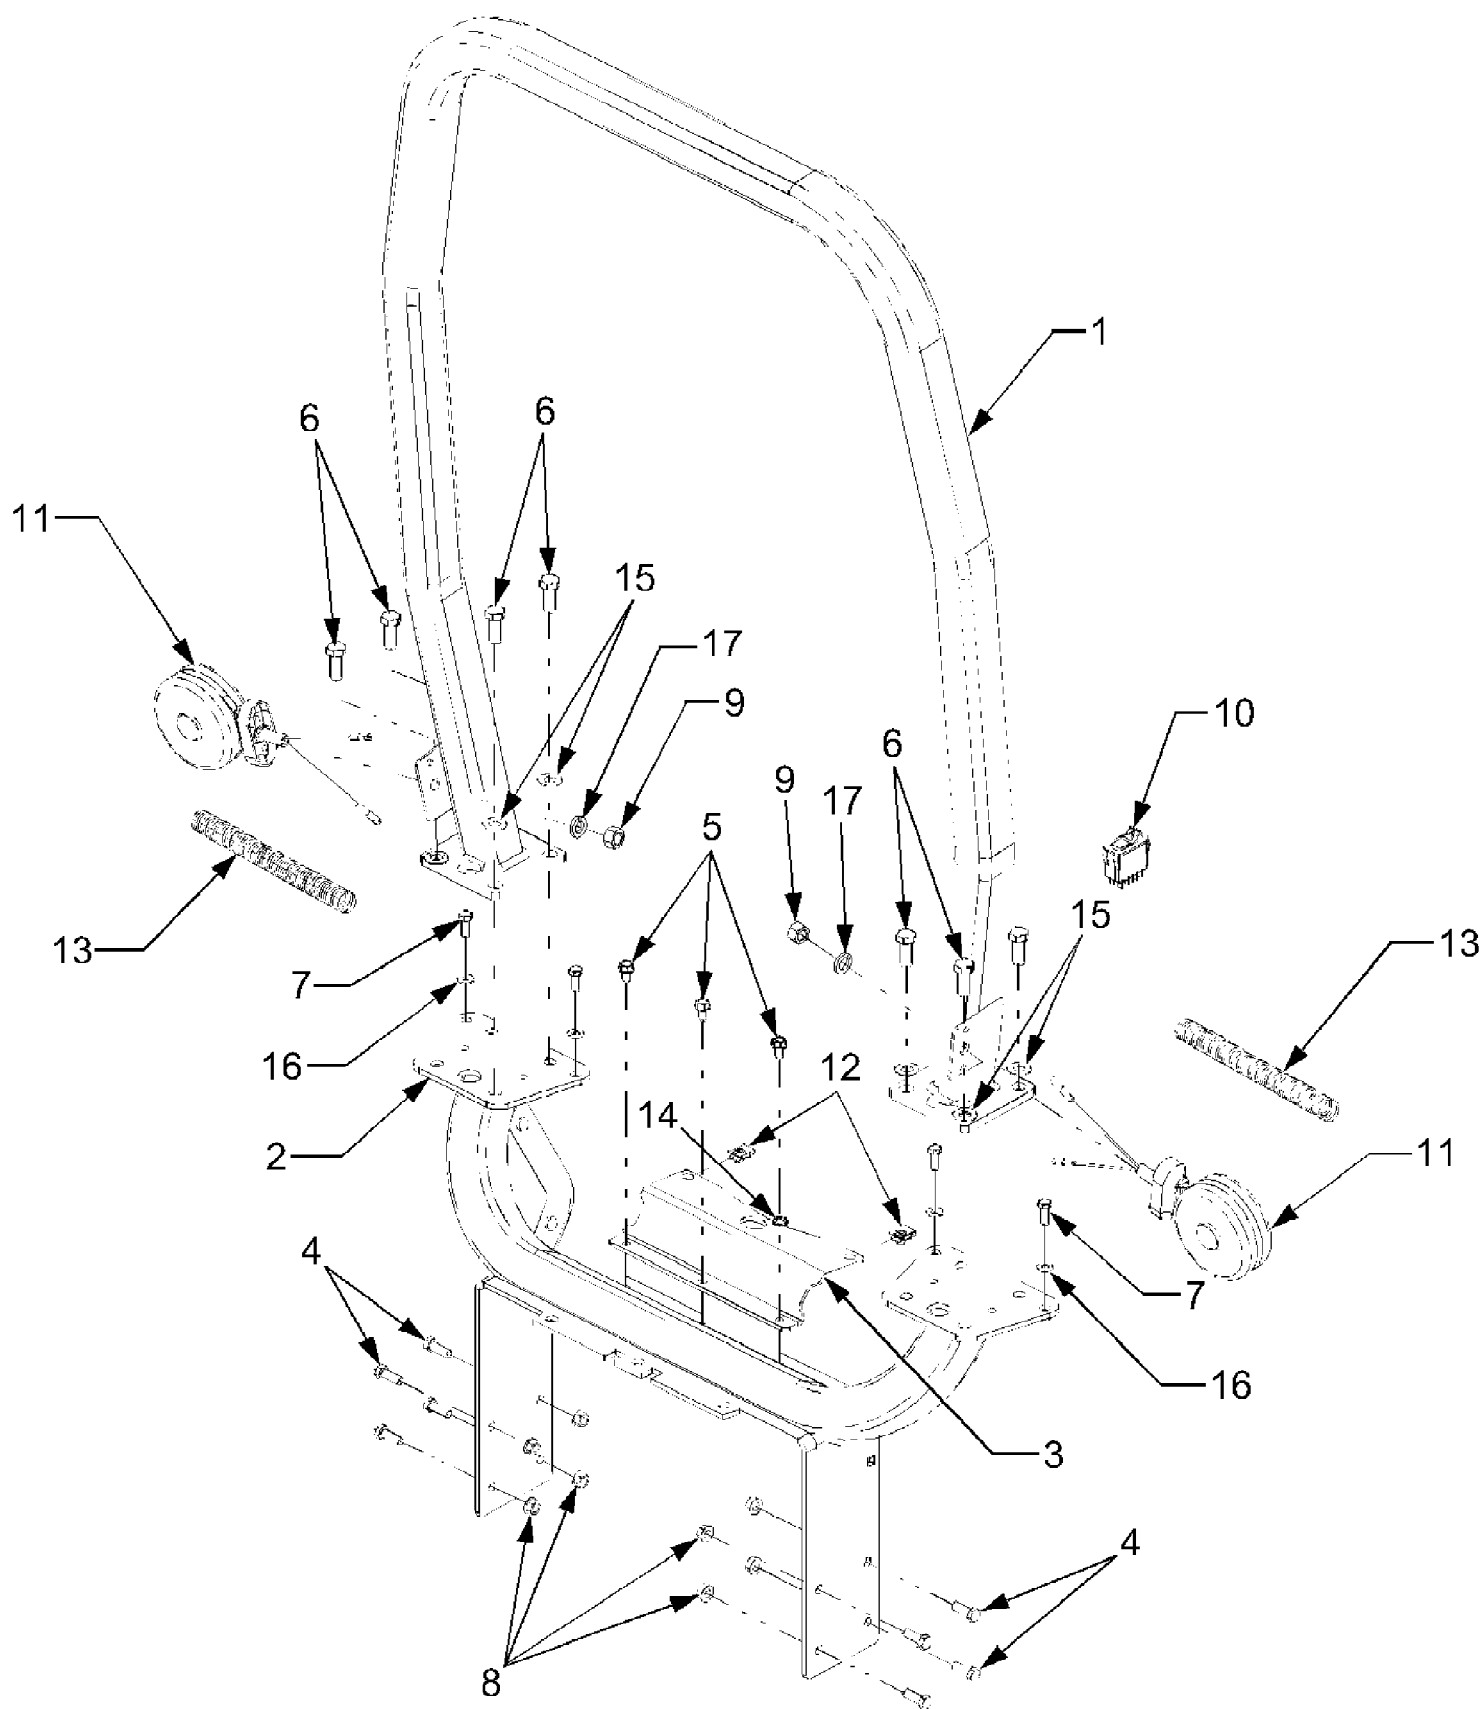

5234DL Tractor
ROPS

Page 93 of 115


Ref #	Part Number	Qty	S/P/F	Description
1	603-04011-0637	1		Rops. Upper
2	603-04012-0637	1		Rops, Lower
3	703-05032-0637	1	/P	Bracket, Rear Seat Mounting
4	710-0514	8	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
5	710-1260A	3	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
6	710-3032	8	/P	Screw, Hex Cap, 1/2-13 x 1.25 GR5
7	710-3038	4	/P	Screw, Hex Cap, 5/16-18 x .875 GR5
8	712-0431	8	S	Nut, Hex Flange Lock, 3/8-16 GRF
9	712-3066	2	S	Nut, Hex, 1/2-20 GR5
10	725-3279	1	S	Switch, Hazard
11	725-3280	2		Light, Hazard
	725-3286	2	S	Bulb, Light
12	726-0211	2	S	Nut, Speed, 5/16-18
13	731-0757-16	12in.		Conduit, 6"
14	736-0148	1	/P	Washer, Ext. Tooth Lock, 3/8
15	736-0272	8	S	Washer, Flat, .51 x 1.0 x .060
16	736-0275	4	S	Washer, Flat, .344 x .688 x .065
17	736-0921	2	S	Washer, Lock, 1/2

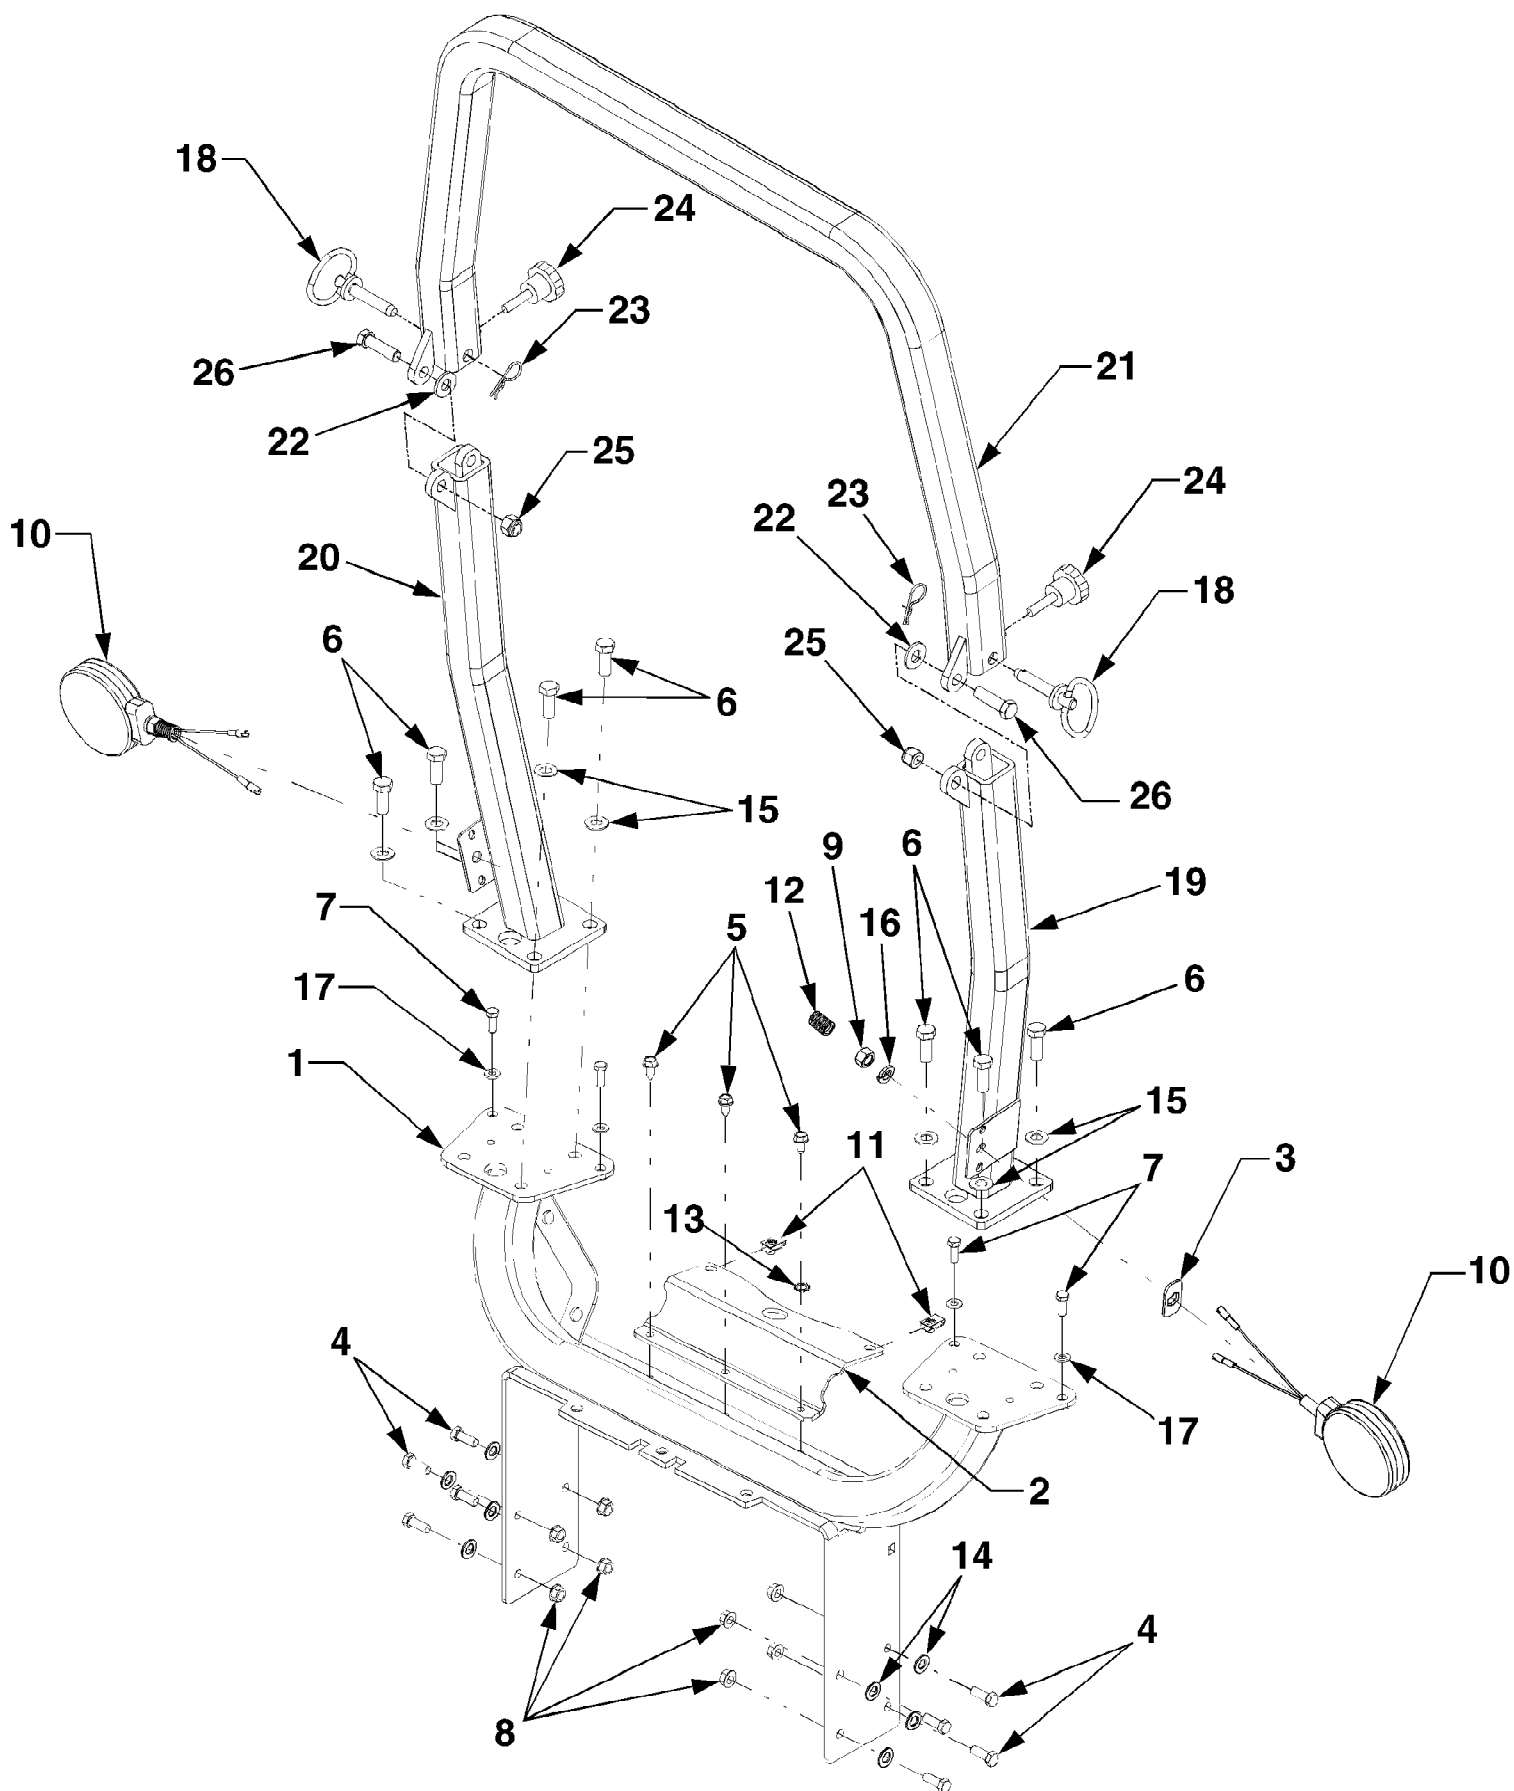

5234DL Tractor
ROPS Foldable

Page 95 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	603-04012	1		Rops, Lower
2	703-05032-0637	1	/P	Bracket, Rear Seat Mtg.
3	703-05770-0637	2		Plate, Spacer
4	710-0514	8	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
5	710-1260A	3	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
6	710-3032	8	/P	Screw, Hex Cap, 1/2-13 x 1.25 GR5
7	710-3038	4	/P	Screw, Hex Cap, 5/16-18 x .875 GR5
8	712-04065	8	/P	Nut, Hx. Insert Flange Lck, 3/8-16 GRF
9	712-3066	2	S	Nut, Hex, 1/2-20 GR5
10	725-04266	2	S	Light, Hazard
11	726-0211	2	S	Nut, Speed, 5/16-18
12	731-0757	1		Conduit, 12 inch
13	736-0148	1	/P	Washer, Ext. Tooth Lock, 3/8
14	736-0185	8	S	Washer, Flat, .375 x .74x.063
15	736-0272	8	S	Washer, Flat, .51 x 1.0 x .060
16	736-0921	2	S	Washer, Lock, 1/2
17	736-3089	4	/P	Washer, Flat, .345 x 1.0 x .10
18	711-04393	2		Pin, Pull
19	603-04275	1		Base, ROPS RH
20	603-04277	1		Base, ROPS LH
21	603-04278-0637	1		Upper Tube
22	736-0600	2		Washer, Flat
23	714-3003	2	S	Pin, Internal Cotter
24	731-05131	2		Knob Assembly
25	712-3083	2	/P	Nut, Hex Insert Lock, 1/2-13
26	710-3067	2	/P	Screw, Hex Cap, 1/2-13 x 1.75 GR5

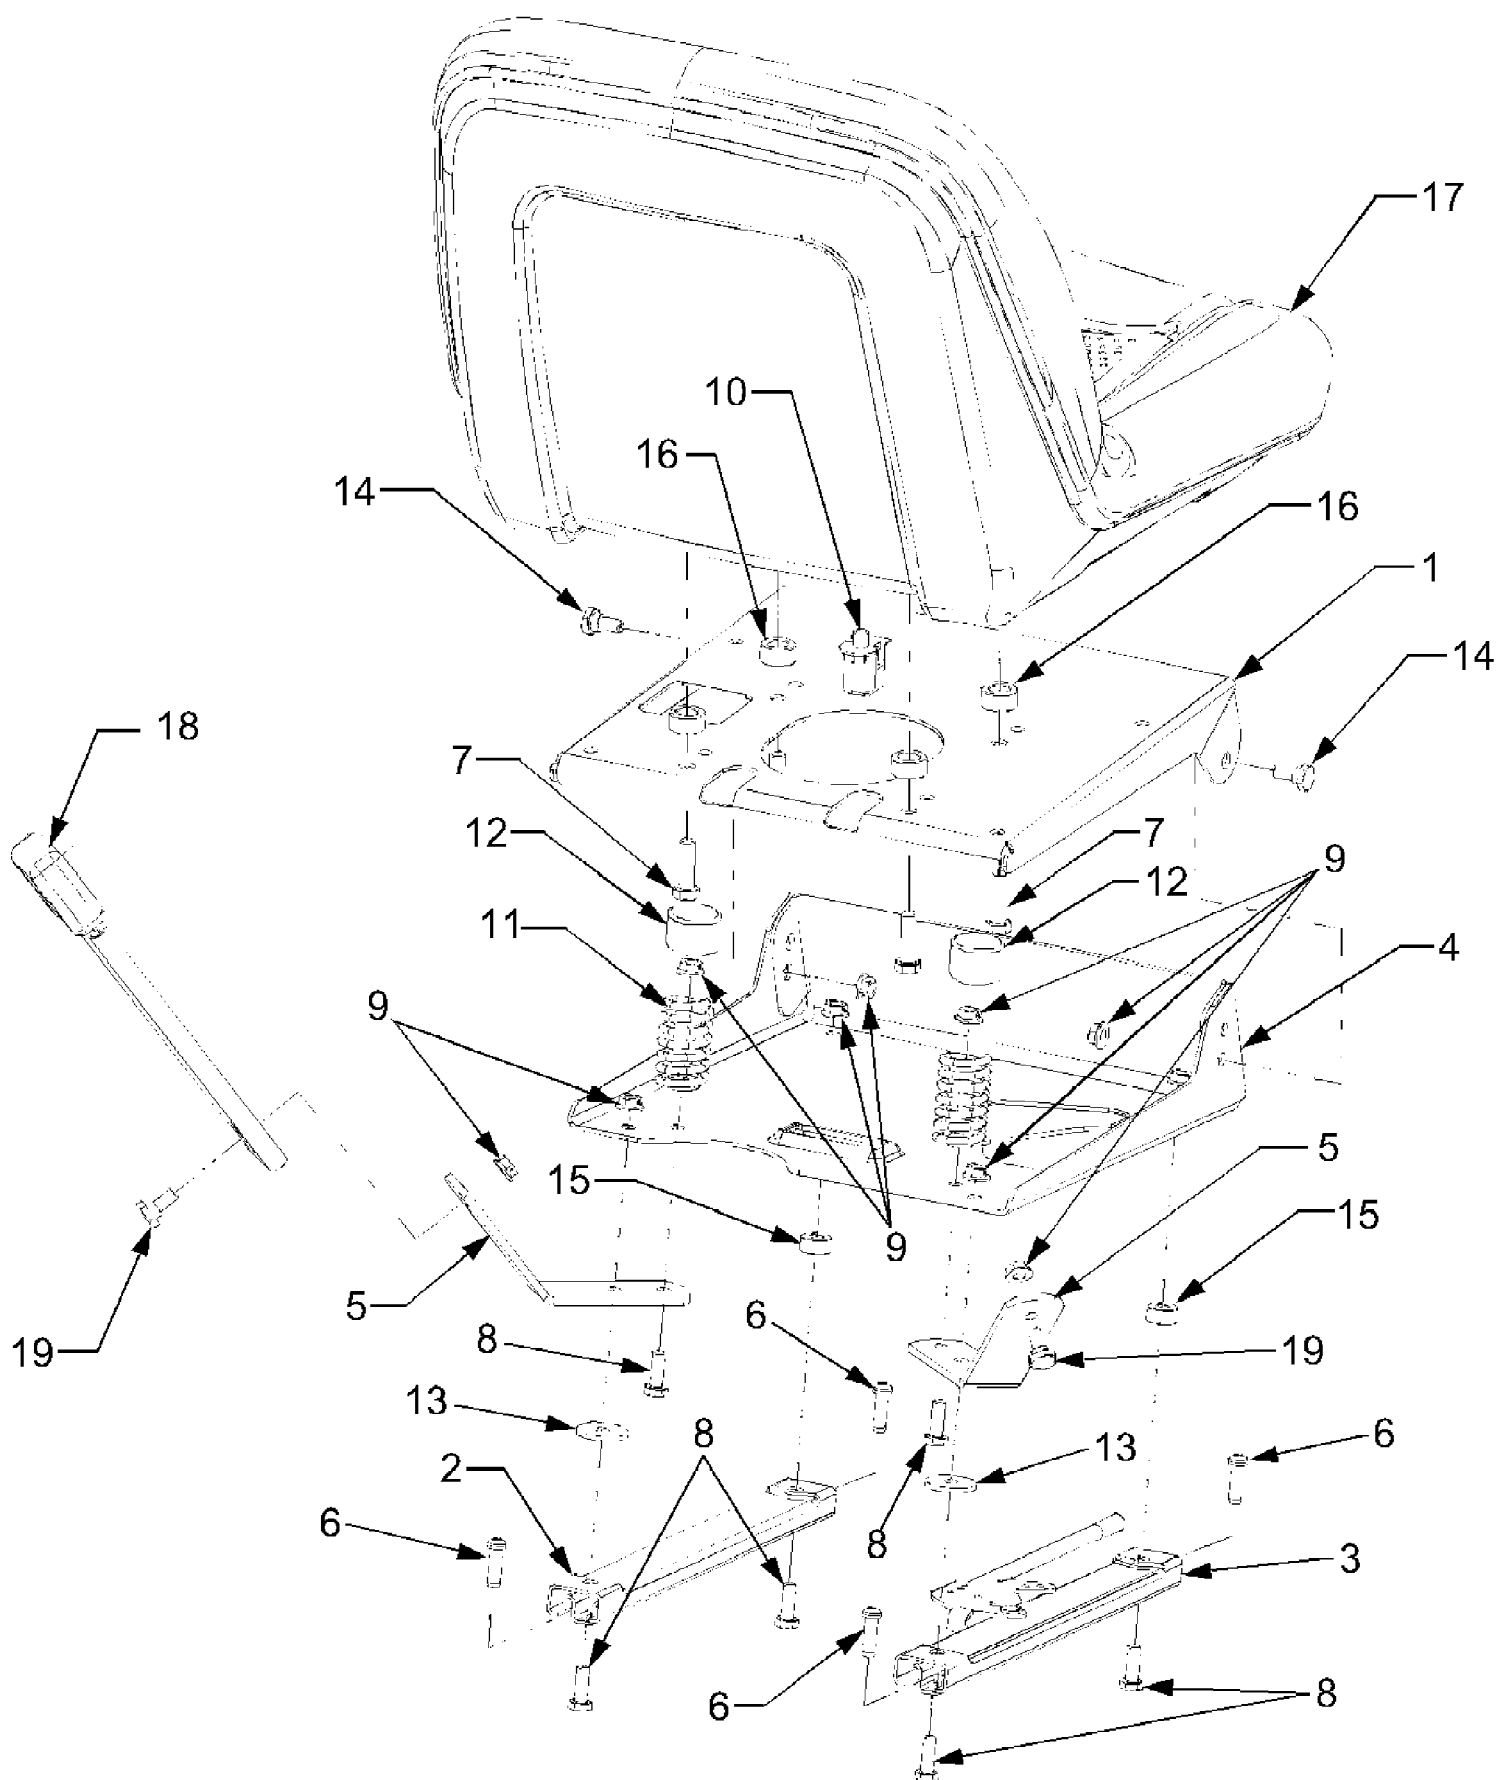


5234DL Tractor
Seat

Page 97 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	703-1812A-0716	1	/P	Bracket, Seat Pivot
2	703-3208	1		Track, Seat - w/o Latch
3	703-3431	1	/P	Track, Seat - w/Latch
4	703-4149-0716	1	/P	Bracket, Seat Support
5	703-4151-0637	2	/P	Bracket, Seat Belt
6	710-1669	4		Screw, Pan Hd. Mach. 5/16-18 x 1.0
7	710-3005	4	/P	Screw, Hex Cap, 3/8-16 x 1.25 GR5
8	710-0376	6	/P	Screw, Hex Cap, 5/16-18 x 1.0 GR5
9	712-04063	10	/P	Nut, Hex Insert Flange Lock 5/16-18 GR5
10	725-3167	1	S	Switch, Seat, N/O
11	732-0735	2	/P	Spring, Compression
12	735-04039	2		Cap, Spring
13	736-0343	2	/P	Washer, Flat, .33 x 1.25 x .12 .
14	738-0140	4	S	Screw, Shoulder, .435 x .178:5/16-18
15	750-0258	2	/P	Spacer, .315 x .75 x .375
16	750-04247	4		Spacer, .505 x .88 x .44
17	757-04005	1	S	Seat, High Back
	777D06883	1	/P	Graphic, CubCadet
	777D01782	1	/P	Graphic, USA
18	757-3013	1		Belt Assembly, Seat
19	725-0154	1		Tie, Push Mnt. Cable

5234DL Tractor
Starter

Page 98 of 115

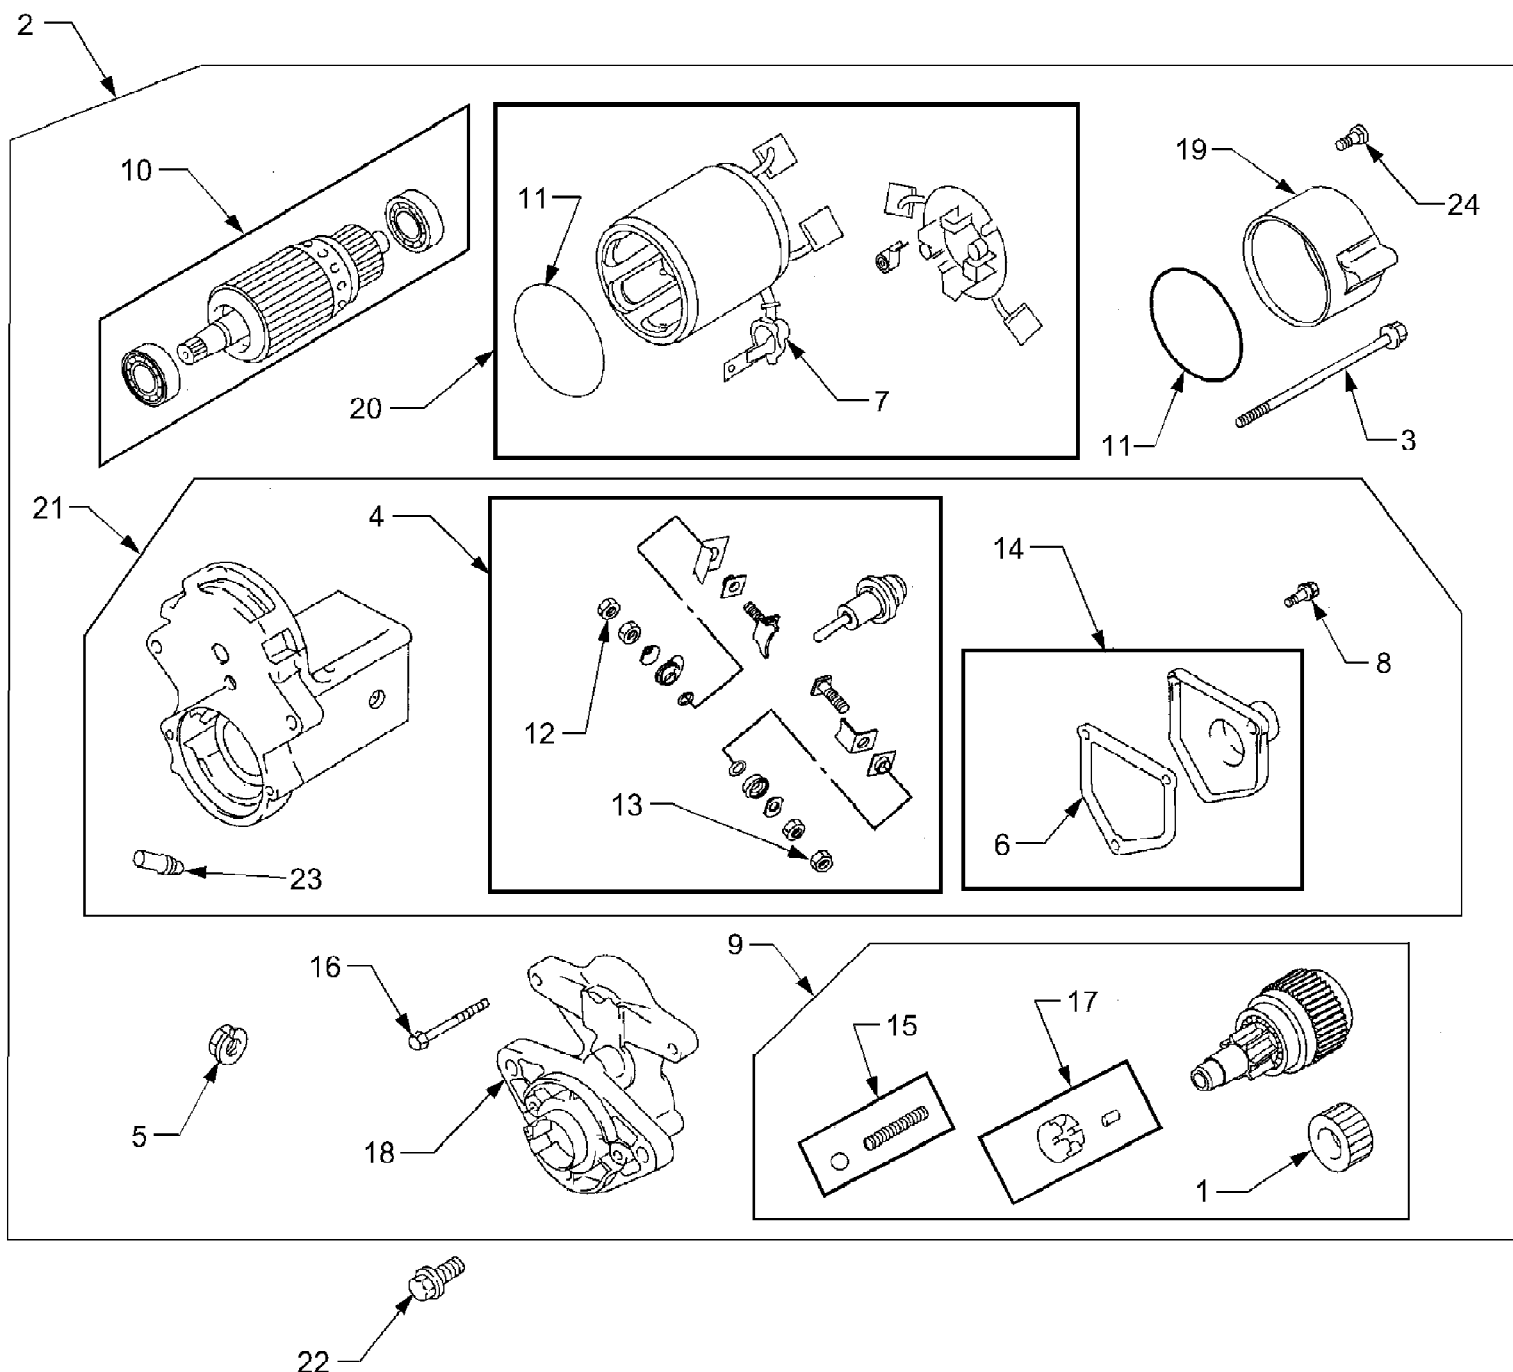


5234DL Tractor
Starter

Page 99 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	BS-820745	1		Gear, Starter Drive
2	BS-825083	1	S	Motor, Starter
3	BS-820755	2		Screw, Starter Motor
4	BS-825436	1	S	Plunger, Solenoid
5	BS-820067	1		Nut, Starter Motor Terminal
6	BS-820733	1		Gasket, Solenoid Cover
7	BS-820725	1		Boot, Terminal
8	BS-820739	1		Screw, Solenoid Cover
9	BS-825394	1		Drive, Starter
10	BS-825392	1		Armature
11	BS-820769	2		Seal, O-Ring
12	BS-820723	1		Nut, Solenoid Terminal
13	BS-820721	1		Nut, Solenoid Terminal
14	BS-825400	1		Cover, Solenoid
15	BS-825425	1		Spring, Detent
16	BS-820751	1		Screw, Drive Cap
17	BS-825424	1		Clutch Roller
18	BS-825396	1		Cap, Drive
19	BS-820743	1		Cap, End
20	BS-825399	1		Housing, Starter (Includes Brushes, Springs and Brush Retainer)
21	BS-825398	1	/P	Solenoid, Starter
22	BS-820019	1		Screw, Starter Motor
23	BS-820737	1		Plug, Vent
24	BS-820754	1		Screw, End Cap

5234DL Tractor
Three Point Hitch 1B065G & Before


Page 100 of 115

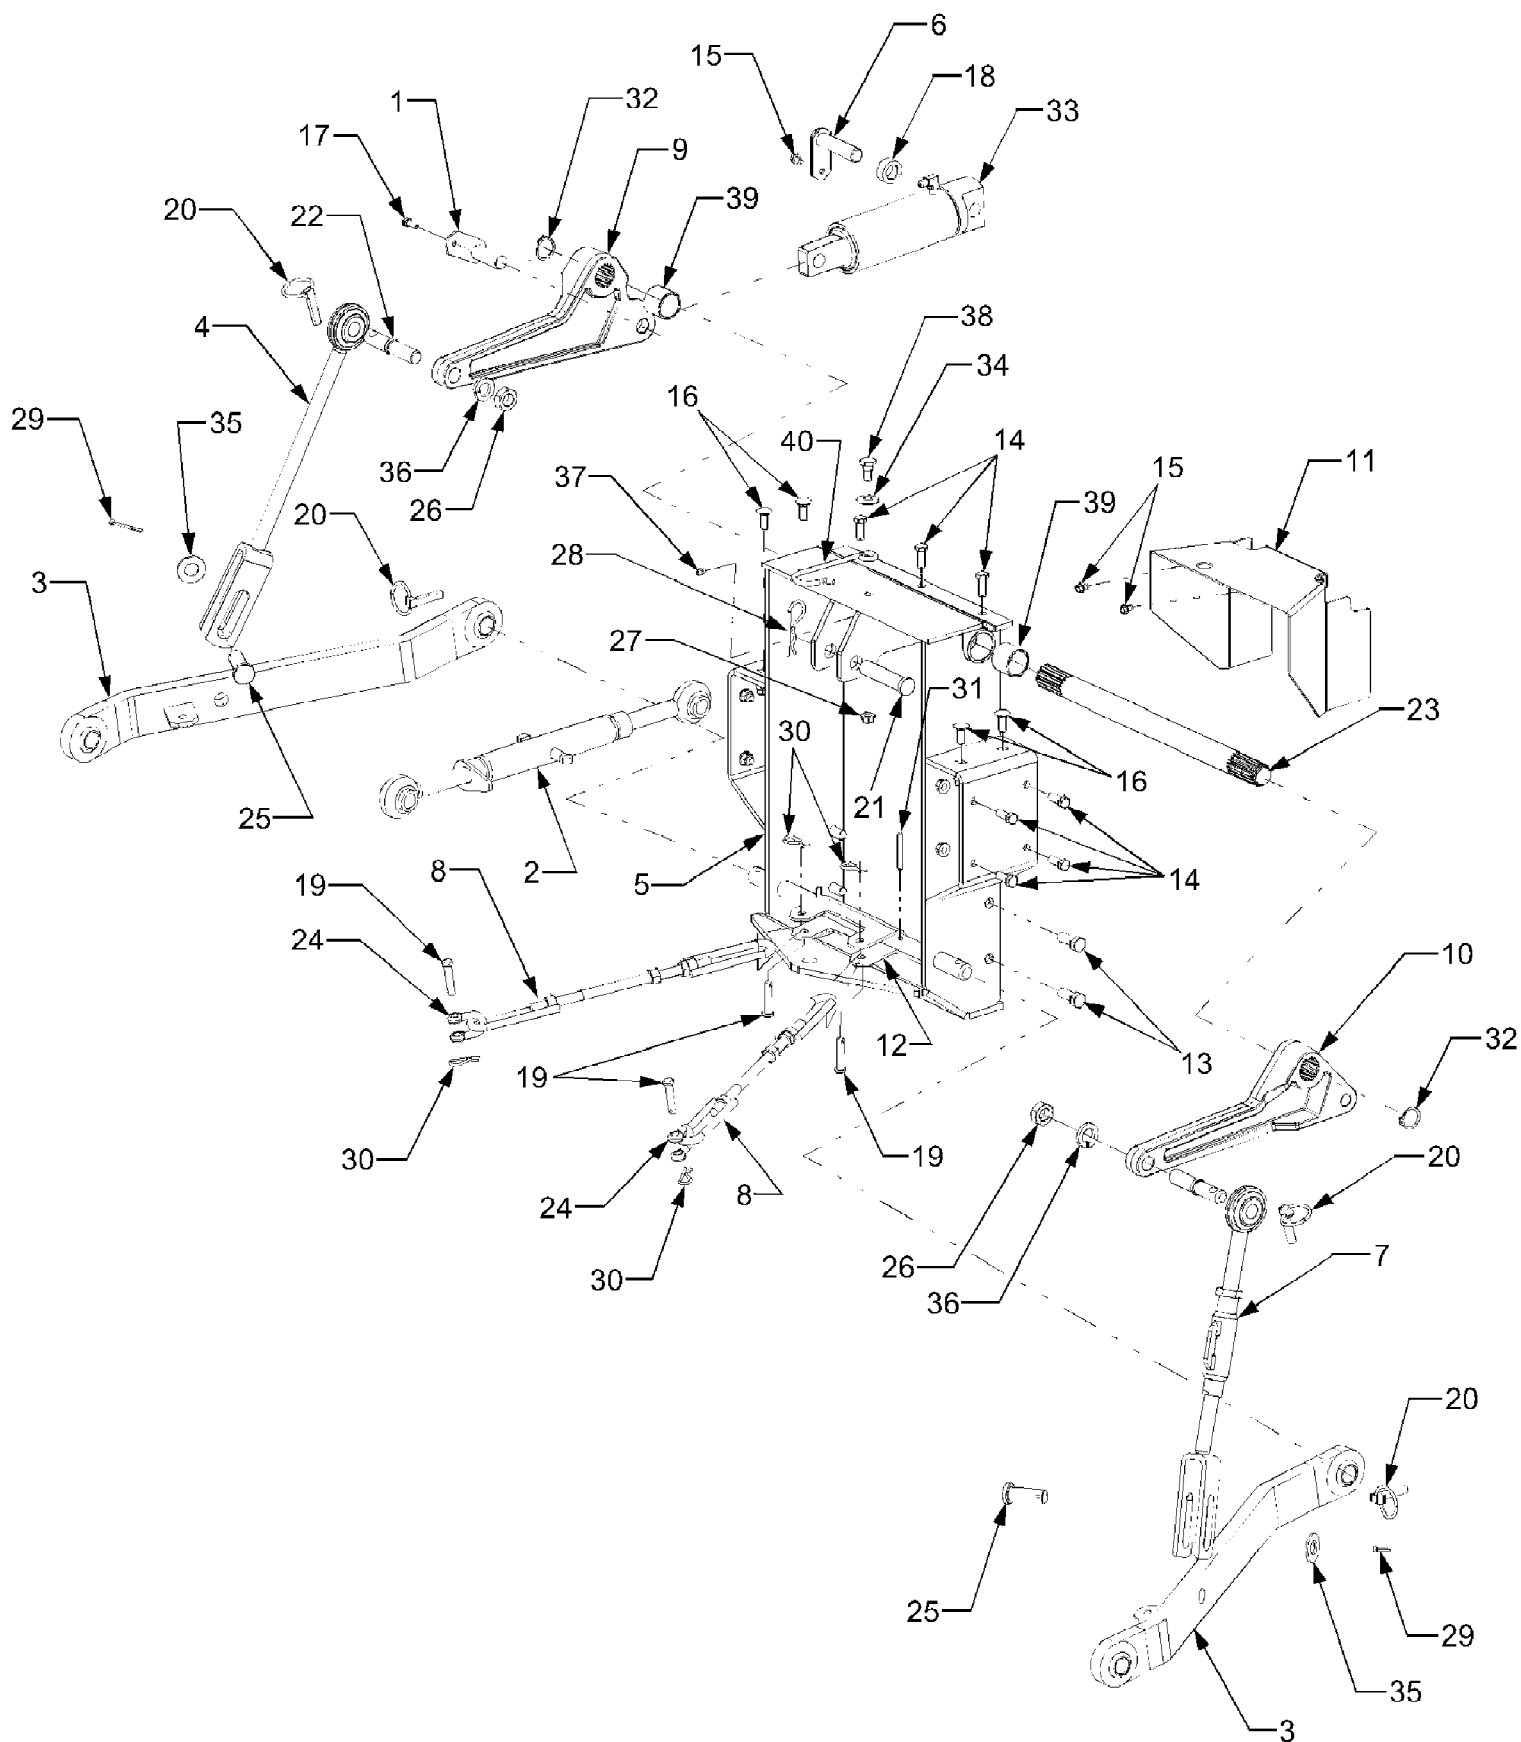

5234DL Tractor
Three Point Hitch 1B065G & Before

Page 101 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	603-04062-0637	1	/P	Plate, Cylinder Mounting
2	603-0964	1	S	Link Assembly, Upper
3	603-0965	2	S	Link, Lower
4	603-0970	1	S	Link, Fixed Lift
5	603-0971-0637	1	/P	Bracket Assembly, Rear Hitch
6	603-0972-0637	1	/P	Plate, Cylinder Mounting
7	603-0973	1	S	Link, Adjustable Lift
	603-0968	1	S	Link Rod RH Thrd.
	603-0969	1	S	Link Rod LH Thrd.
	711-1744	1		Turnbuckle
	712-04051	1		Jam Nut, M20 x 2.5 RH
8	603-0977	1		Chain Assembly, Check
	603-0974	1	S	Chain Link RH Thrd
	603-0975	1	S	Chain Link Lh Thrd
	603-0976	1	S	Chain Rod, Adjust.
9	619-3095	1	S	Arm, Hitch Lift - LH
10	619-3096	1	S	Arm, Hitch Lift - RH
11	703-4137-0637	1	/P	Shield, PTO Shaft
12	703-4143-0637	1	/P	Bracket, Chain Mounting
13	710-04186	4	/P	Screw, Hex Cap Lock, 1/2-13 x 1.25 GR5
14	710-0514	11	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
15	710-0599	3	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5
16	710-3168	4	/P	Screw, Carriage, 3/8-16 x 1.0
17	710-3296	1		Screw, Hex Cap, 1/4-20 x .75 GR5
18	711-0469	1		Spacer, .75 x 1.25 x .5
19	711-0599	4	S	Pin, Clevis, .372 x 1.79
20	711-1105	4	/P	Pin, Klik
21	711-1733	1		Pin, Clevis, 19mm x 84mm
22	711-1743	2	S	Pin, Hitch, .75 OD
23	711-1750	1	S	Shaft, Hitch Rock
24	711-1753	2	S	Clevis, Chain
25	711-1761	2	S	Pin, Clevis, .75 x 1.938
26	712-0301	2	/P	Nut, Hex Jam, 3/4-10 GR5
27	712-0431	13	S	Nut, Hex Flange Lock, 3/8-16 GRF
28	714-0117	1	/P	Pin, Internal Cotter
29	714-0142	2	/P	Pin, Cotter, 3/16 x 1.5
30	714-0149B	4	S	Pin, Internal Cotter
31	715-0121	2	/P	Pin, Spirol, 1/4 x 2.0
32	716-04004	2	S	Ring, Retaining
33	717-3532	1	S	Cylinder, Lift
34	736-0255	1	S	Washer, Belleville, .51 x 1.14 x .04
35	736-0315	2	/P	Washer, Flat, .76 x 1.5 x .12
36	736-0364	2	S	Washer, Lock, 3/4
37	737-3000	1	S	Fitting, Lube, 3/16 Drive
38	738-0143	1	/P	Screw, Shoulder, 3/8-16
39	741-04084	2	S	Bearing, Sleeve, 1.25 x 1.50 x 1.25
40	747-04122	1	S	Rod, Top Link Hanger

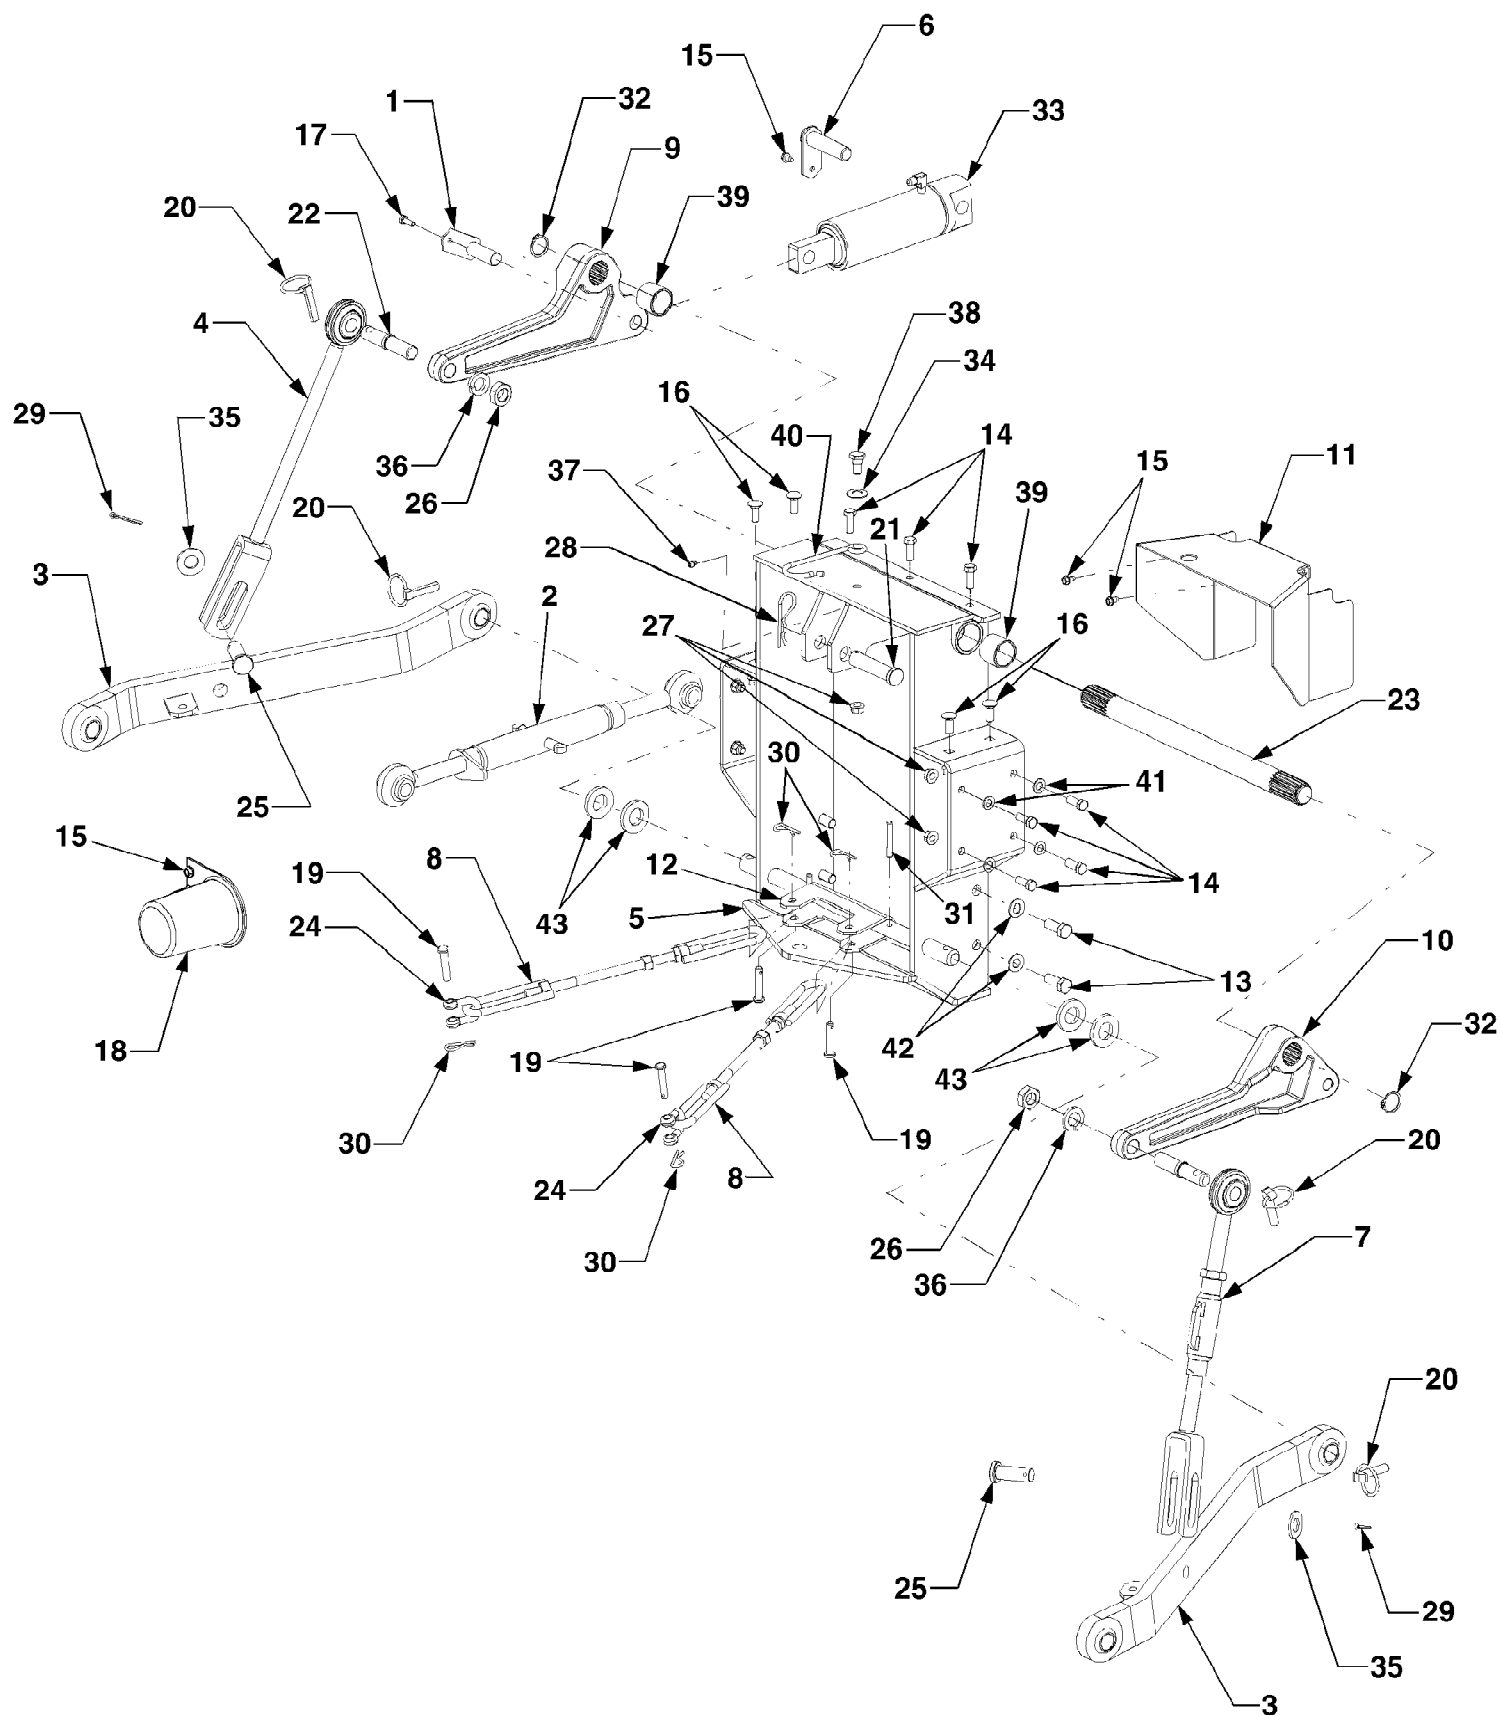


5234DL Tractor
Three Point Hitch 1B075G & After

Page 103 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	603-04062-0637	1	/P	Plate, Cylinder Mounting
2	603-0964	1	S	Link Assembly, Upper
3	603-0965	2	S	Link, Lower
4	603-0970	1	S	Link, Fixed Lift
5	603-0971A-0637	1		Bracket Assembly, Rear Hitch
6	603-0972-0637	1	/P	Plate, Cylinder Mounting
7	603-0973	1	S	Link, Adjustable Lift
		1		603-0968 Link Rod RH Thrd.
		1		603-0969 Link Rod LH Thrd.
		1		711-1744 Turnbuckle
		1		712-04051 Jam Nut, M20 x 2.5 RH
8	603-0977	1		Chain Assembly, Check
		1		603-0974 Chain Link RH Thrd. ...
		1		603-0975 Chain Link Lh Thrd.
		1		603- 0976 Chain Rod, Adjust.
9	619-3095	1	S	Arm, Hitch Lift - LH
10	619-3096	1	S	Arm, Hitch Lift - RH
11	703-4137-0637	1	/P	Shield, PTO Shaft
	777S30634	1		Graphic, Warning
12	703-4143-0637	1	/P	Bracket, Chain Mounting
13	710-04186	4	/P	Screw, Hex Cap Lock, 1/2-13 x 1.25 GR5
14	710-0514	11	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
15	710-0599	5	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5
16	710-3168	4	/P	Screw, Carriage, 3/8-16 x 1.0
17	710-3296	1		Screw, Hex Cap, 1/4-20 x .75 GR5
18	731-04114	1		Cover, PTO Shaft
19	711-0599	4	S	Pin, Clevis, .372 x 1.79
20	711-1105	4	/P	Pin, Klik
21	711-1733	1		Pin, Clevis, 19mm x 84mm
22	711-1743	2	S	Pin, Hitch, .75 OD
23	711-1750	1	S	Shaft, Hitch Rock
24	711-1753	2	S	Clevis, Chain
25	711-1761	2	S	Pin, Clevis, .75 x 1.938
26	712-0301	2	/P	Nut, Hex Jam, 3/4-10 GR5
27	712-0431	13	S	Nut, Hex Flange Lock, 3/8-16 GRF
28	714-0117	1	/P	Pin, Internal Cotter
29	714-0142	2	/P	Pin, Cotter, 3/16 x 1.5
30	714-0149B	4	S	Pin, Internal Cotter
31	715-0121	2	/P	Pin, Spirol, 1/4 x 2.0
32	716-04004	2	S	Ring, Retaining
33	717-3532	1	S	Cylinder, Lift
34	736-0255	1	S	Washer, Belleville, .51 x 1.14 x .04
35	736-0315	2	/P	Washer, Flat, .76 x 1.5 x .12
36	736-0364	2	S	Washer, Lock, 3/4
37	737-3000	1	S	Fitting, Lube, 3/16 Drive
38	738-0143	1	/P	Screw, Shoulder, 3/8-16
39	741-04084	2	S	Bearing, Sleeve, 1.25 x 1.50 x 1.25
40	747-04122	1	S	Rod, Top Link Hanger
41	736-0185	8	S	Washer, Flat, .375 x .738 x .063
42	736-0272	4	S	Washer, Flat, .51 x 1.0 x .06
43	736-04177	4		Washer, Flat, .938 x 1.75 x .235

5234DL Tractor
Transmission Drive 1B065G & Before

Page 104 of 115

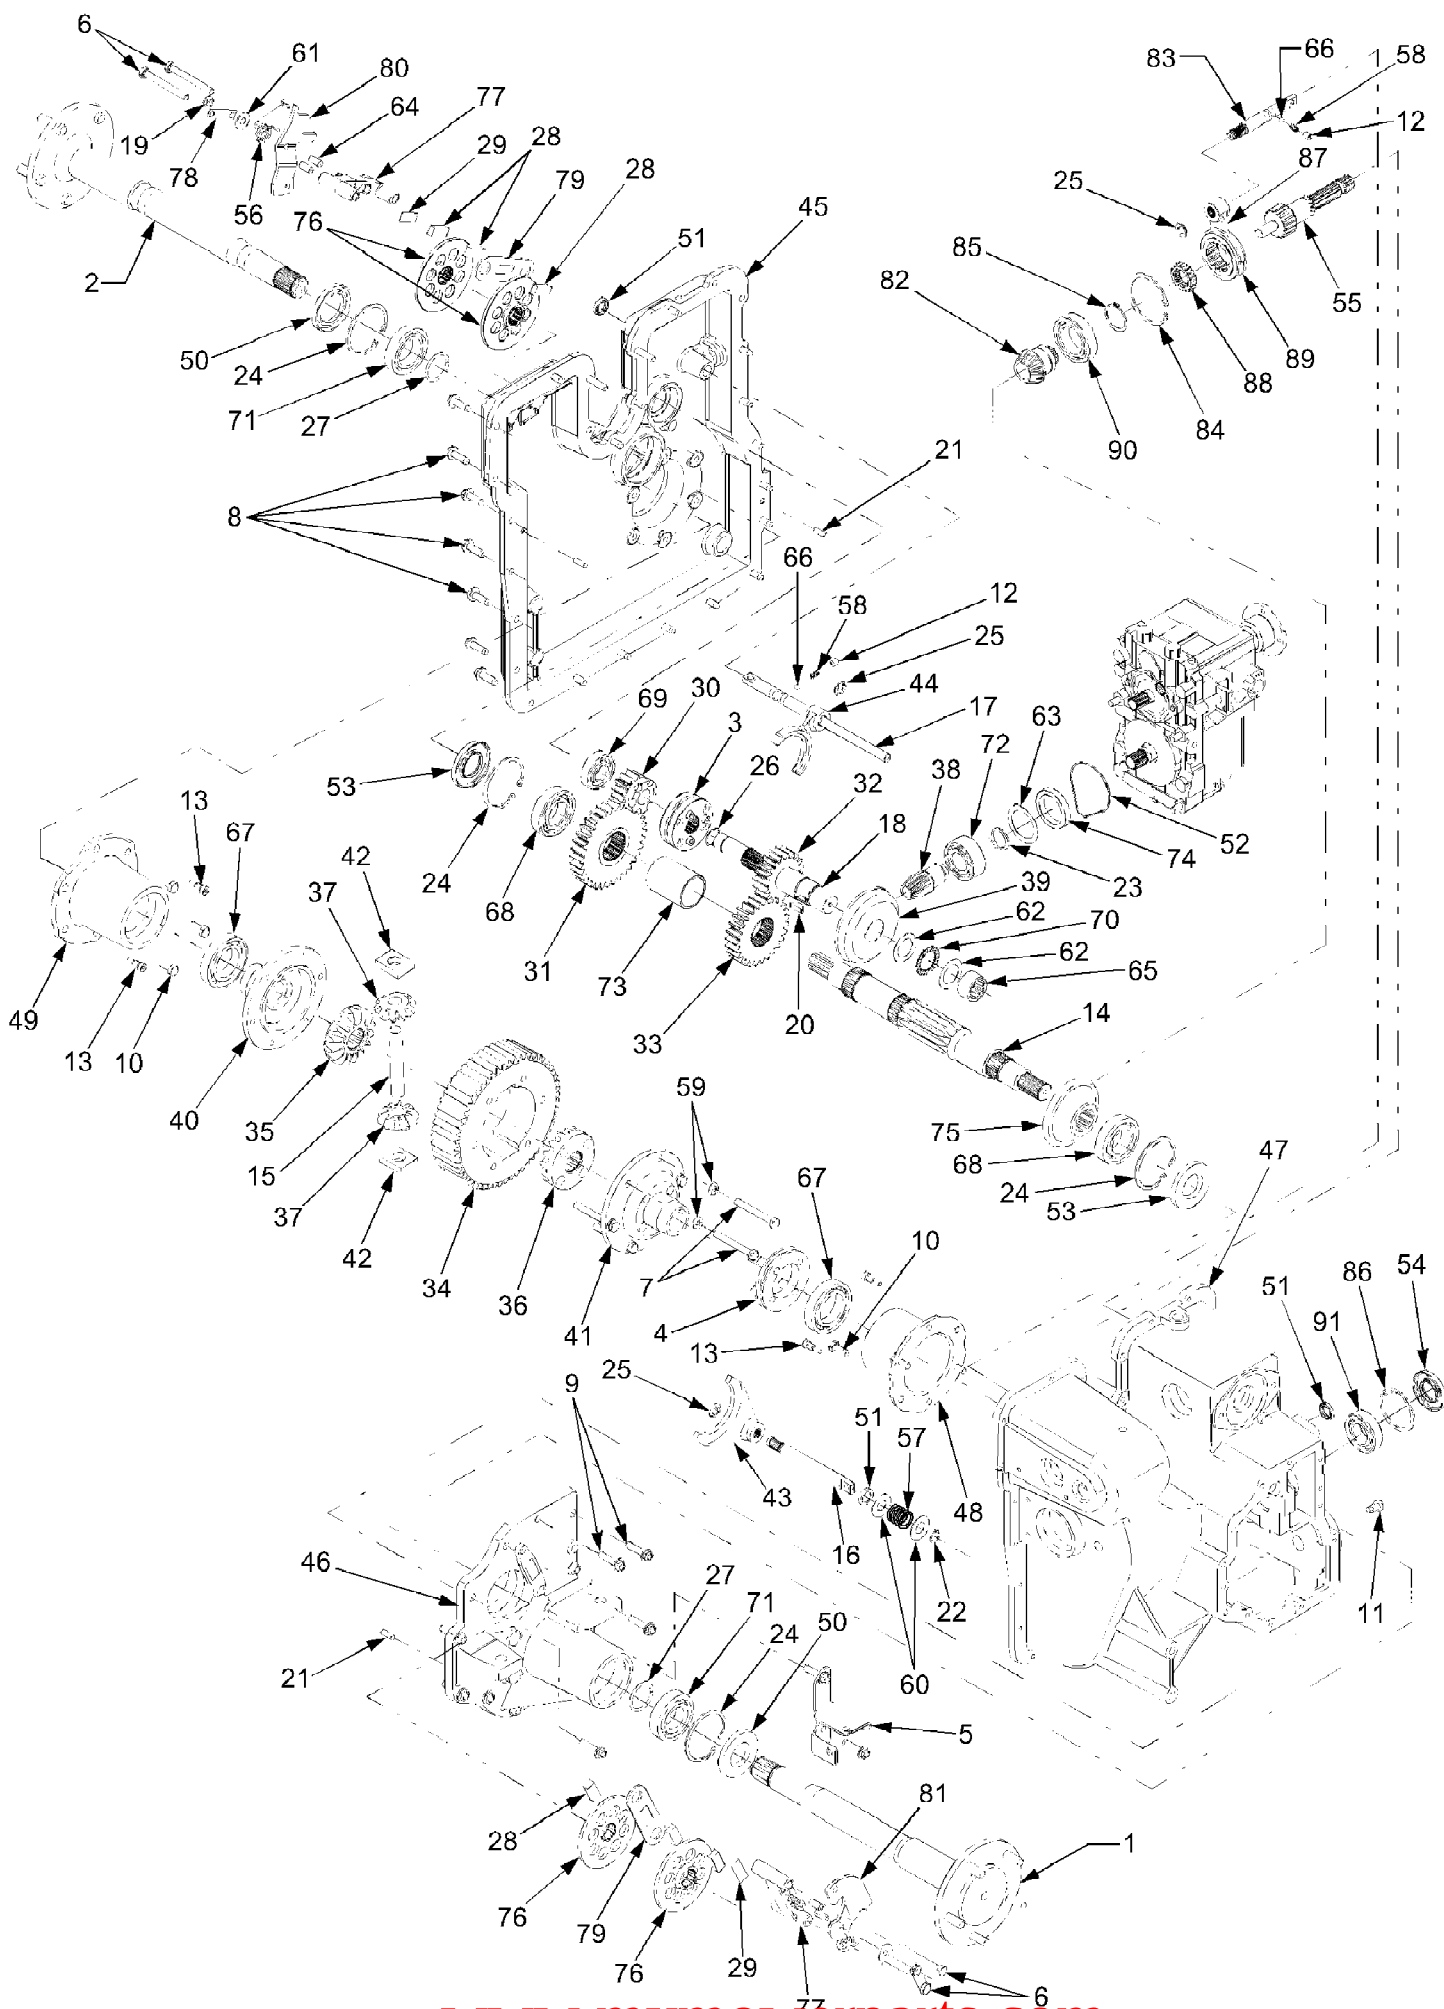

5234DL Tractor
Transmission Drive 1B065G & Before

Page 105 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	611-3033	1	S	Shaft, Axle RH
2	611-3034	1	S	Shaft, Axle LH
3	618-0226	1		Collar Assembly, Hi-Lo
4	618-3183	1	S	Collar Assembly, Diff Lock
5	703-05045	1	S	Bracket, Diff. Lock
6	710-0176	4	/P	Screw, Hex Cap, 5/16-18 x 2.75 GR5
7	710-0378	6	/P	Screw, Hex Cap, 5/16-18 x 2.5 GR5
8	710-0602	21	/P	Screw, Hex Wash. Hd. Tapp, 5/16-18 x 1.0
9	710-0817	12		Screw, Hex Wash. Hd. Tapp, 5/16-18 x 1.25
10	710-1880	8	/P	Screw, Hex Cap, w/Patch 5/16-18 x .75 GR5
11	710-1633	1		Screw, Plug, M14 x 1.5 x .827
12	710-3006	2	/P	Screw, Set, 5/16-18 x .375
13	710-04035	4	/P	Screw, Shoulder .309 x .375: 1/4-20
14	711-1675	1	S	Shaft, Output, 11T
15	711-1676	1	S	Shaft, Cross, .625 x 3.95
16	711-1677	1	S	Shaft, Diff. Lock Actuator
17	711-1688	1	S	Shaft, Hi-Lo Actuator
18	711-04137	1	S	Shaft, Drive
19	712-0273	2	S	Nut, Hex Insert Lock, 5/16-24
20	714-0135	1	S	Key, Woodruff, 1/4 x 3/4
21	715-3010	4	/P	Pin, Dowel, .25 x .75
22	716-0114	1	S	Ring, Retaining
23	716-0127	1	/P	Ring, Snap
24	716-0180	4		Ring, Retaining
25	716-0396	3		Clip, Rotor
26	716-04005	1	S	Ring, Retaining
27	716-04030	2	S	Ring, Retaining
28	717-0678	6	S	Pad, Brake
29	717-0682	2	S	Plate, Brake Puck
30	717-3534	1	S	Gear, Spur, 12T
31	717-3535	1	S	Gear, Spur, 34T
32	717-3536	1	S	Gear, Spur, 19T
33	717-3537	1	S	Gear, Spur, 27T
34	717-3538	1	S	Gear, Spur, 56T
35	717-3541	1	S	Gear, Bevel, 16T
36	717-3542	1	S	Gear, Bevel, 16T Lock
37	717-3545	2	S	Gear, Bevel, 10T Diff
38	717-04060	1	S	Gear, Spiral Bevel, 13T
39	717-04061	1	S	Gear, Spiral Bevel, 54T
40	718-3148	1	S	Cover, Differential
41	718-3149	1	S	Cover, Differential Lock
42	718-3150	2	S	Block, Thrust
43	718-3152	1	S	Actuator Arm, Diff. Lock
44	718-3154	1		Yoke, Shift, Hi-Lo
45	719-04001	1	S	Cover, Trans. Large
46	719-04002	1	S	Cover, Trans. Small
47	719-04003	1	S	Housing, Trans
48	719-04004	1	S	Housing, Axle Inner - RH
49	719-04005	1	S	Housing, Axle Inner - LH
50	721-0381	2	S	Seal, Oil
51	721-0496	3		Seal, Oil
52	721-0519	1		Seal, Gland
53	721-3020A	2	S	Seal, Oil


5234DL Tractor
Transmission Drive 1B065G & Before

Page 106 of 115

Ref #	Part Number	Qty	S/P/F	Description
54	721-04004	1	S	Seal, Oil
55	711-1680	1	S	Shaft, 4WD
56	732-04003	2	S	Spring, Torsion
57	732-04010	1	S	Spring, Compression, .845 x 1.0
58	732-04101	2	S	Spring, Compression, .24 x .563
59	736-0119	6	S	Washer, Lock, 5/16
60	736-0355	2	/P	Washer, Flat, .56 x 1.0 x .04
61	736-0371	2	/P	Washer, Flat, .343 x .88 x .062
62	736-0615	2		Washer, Thrust
63	736-0266	AR	S	Washer, Flat, 1.52 x 2.0 x .030
	736-04095	AR	S	Washer, Flat, 1.52 x 2.0 x .005
	736-04096	AR	S	Washer, Flat, 1.52 x 2.0 x .015
64	741-0343	4	S	Pin, Brake Actuating
65	741-0363	1	S	Bearing, Needle
66	741-0862	2	/P	Ball, Detent
67	741-1104	2	/P	Bearing, Ball
68	741-3033A	2	S	Bearing, Ball
69	741-3057	1	S	Bearing, Ball
70	741-3083	1		Bearing, Needle Thrust
71	741-04014	2	S	Bearing, Ball
72	741-04066	1	S	Bearing, Ball
73	750-3364	1	S	Spacer, 1.51 x 1.75 x 2.41
74	750-04024	1	S	Spacer, 1.515 x 2.039 x .335
75	717-04043	1	S	Gear, Spiral Bevel, 36T
76	761-0215	4		Disc, Brake
77	761-04000	2	S	Yoke, Brake
78	761-04001	2	S	Bracket, Brake Anti Rotation
79	761-04002	2	S	Plate, Puck Retainer
80	761-04003	1	S	Arm, Brake Actuator - LH
81	761-04004A	1	S	Arm, Brake Actuator - RH
82	617-04004	1	S	Gear Assembly w/Bearings
	741-0991	2		Bearing, Sleeve, 13 x 15 x 10
83	711-1681	1	S	Shaft, 4WD Actuator
84	716-0180	1		Ring, Retaining
85	716-0185	1		Ring, Retaining
86	716-0204	1		Ring, Retaining
87	718-04004	1	S	Yoke, 4WD
88	718-0668	1		Gear, Spline Coupling
89	718-3116	1		Collar, Shift
90	741-04014	1	S	Bearing, Ball
91	741-3037	1	S	Bearing, Ball

5234DL Tractor Transmission Drive 1B075G & After

Page 107 of 115

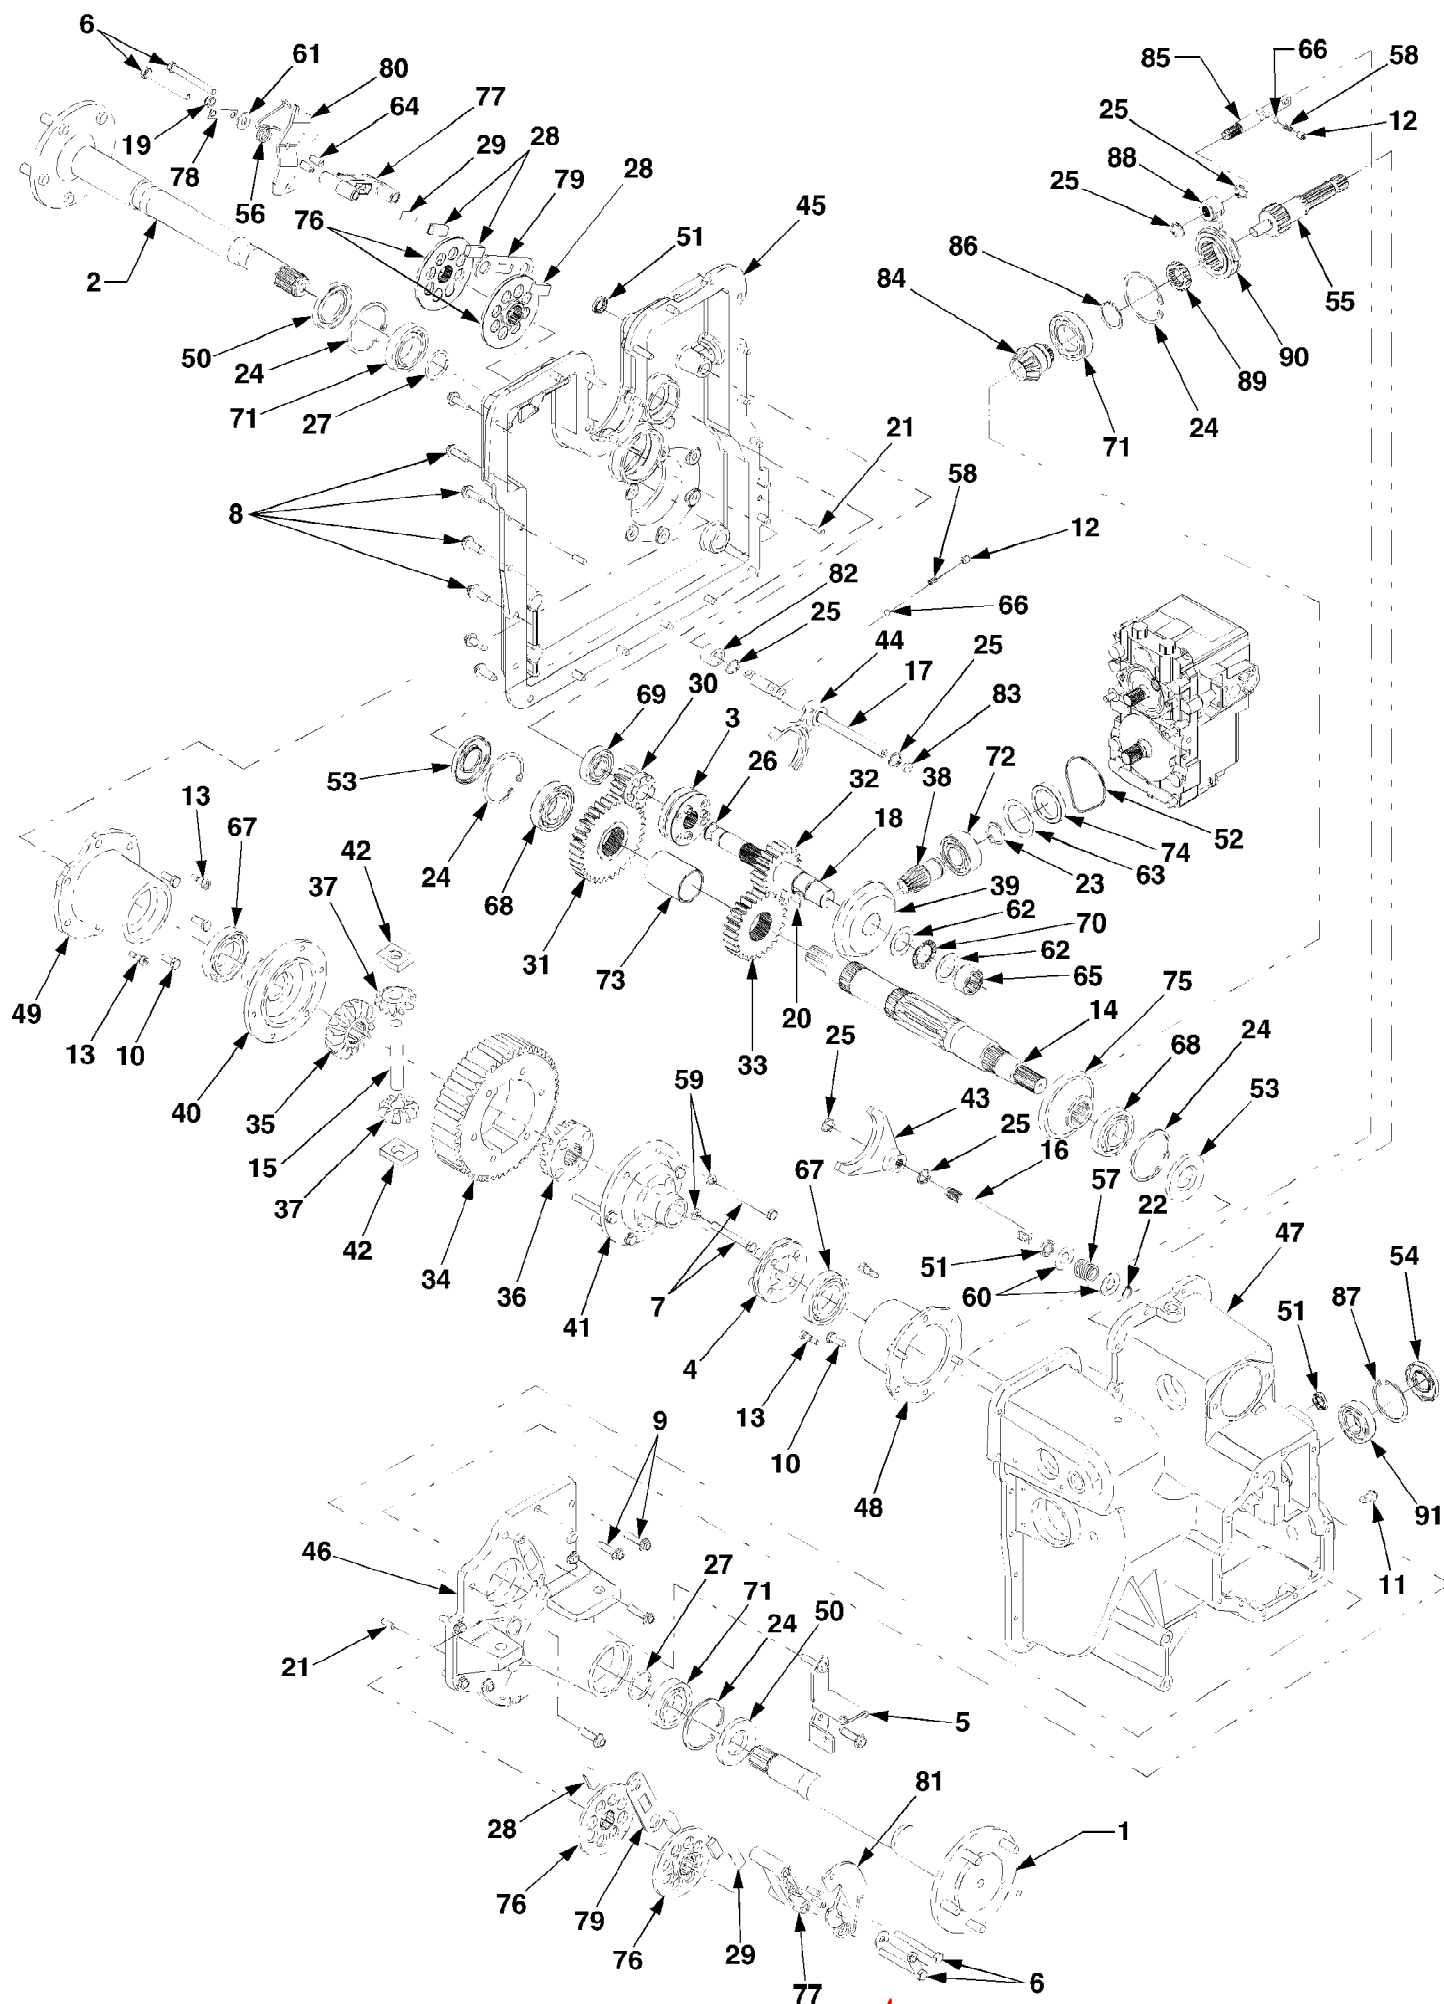

5234DL Tractor
Transmission Drive 1B075G & After

Page 108 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	611-3033	1	S	Shaft, Axle RH
2	611-3034	1	S	Shaft, Axle LH
3	618-0226	1		Collar Assembly, Hi-Lo
4	618-3183	1	S	Collar Assembly, Diff Lock
5	703-05045	1	S	Bracket, Diff. Lock
6	710-0176	4	/P	Screw, Hex Cap, 5/16-18 x 2.75 GR5
7	710-0378	6	/P	Screw, Hex Cap, 5/16-18 x 2.5 GR5
8	710-0602	21	/P	Screw, Hex Wash. Hd. Tapp, 5/16-18 x 1.0
9	710-0817	12		Screw, Hex Wash. Hd. Tapp, 5/16-18 x 1.25
10	710-1880	8	/P	Screw, Hex Cap, w/Patch 5/16-18 x .75GR5
11	710-1633	1		Screw, Plug, M14 x 1.5 x .827
12	710-3006	2	/P	Screw, Set, 5/16-18 x .375
13	710-04035	4	/P	Screw, Shoulder .309 x .375: 1/4-20
14	711-1675	1	S	Shaft, Output, 11T
15	711-1676	1	S	Shaft, Cross, .625 x 3.95
16	711-04302	1	S	Shaft, Diff. Lock Actuator
17	711-04300	1	S	Shaft, Hi-Lo Actuator
18	711-04137	1	S	Shaft, Drive
19	712-0273	2	S	Nut, Hex Insert Lock, 5/16-24
20	714-0135	1	S	Key, Woodruff, 1/4 x 3/4
21	715-3010	4	/P	Pin, Dowel, .25 x .75
22	716-0114	1	S	Ring, Retaining
23	716-0127	1	/P	Ring, Snap
24	716-0180	5		Ring, Retaining
25	716-0194	6	/P	Clip, Rotor
26	716-04005	1	S	Ring, Retaining
27	716-04030	2	S	Ring, Retaining
28	717-0678	6	S	Pad, Brake
29	717-0682	2	S	Plate, Brake Puck
30	717-3534	1	S	Gear, Spur, 12T
31	717-3535	1	S	Gear, Spur, 34T
32	717-3536	1	S	Gear, Spur, 19T
33	717-3537	1	S	Gear, Spur, 27T
34	717-3538	1	S	Gear, Spur, 56T
35	717-3541	1	S	Gear, Bevel, 16T
36	717-3542	1	S	Gear, Bevel, 16T Lock
37	717-3545	2	S	Gear, Bevel, 10T Diff.
38	717-04132	1	S	Gear, Spiral Bevel, 13T
39	717-04133	1	S	Gear, Spiral Bevel, 54T
40	718-3148A	1	S	Cover, Differential
41	718-3149A	1	S	Cover, Differential Lock
42	718-3150	2	S	Block, Thrust
43	718-04080	1	S	Yoke, Diff. Lock Actuator
44	718-04081	1	S	Yoke, Shift, Hi-Lo
45	719-04001	1	S	Cover, Trans. Large
46	719-04002	1	S	Cover, Trans. Small
47	719-04153	1		Housing, Trans.
48	719-04004	1	S	Housing, Axle Inner - RH
49	719-04005	1	S	Housing, Axle Inner - LH
50	721-0381	2	S	Seal, Oil
51	721-0496	3		Seal, Oil
52	721-0519	1		Seal, Gland
53	721-3020A	2	S	Seal, Oil


5234DL Tractor
Transmission Drive 1B075G & After

Page 109 of 115

Ref #	Part Number	Qty	S/P/F	Description
54	721-04004	1	S	Seal, Oil
55	711-1680	1	S	Shaft, 4WD
56	732-04003	2	S	Spring, Torsion
57	732-04010	1	S	Spring, Compression, .845 x 1.0
58	732-04101	2	S	Spring, Compression, .24 x .563
59	736-0119	6	S	Washer, Lock, 5/16
60	736-04126	2		Washer, Flat, .597 x 1.0 x .04
61	736-0371	2	/P	Washer, Flat, .343 x .88 x .062
62	736-0615	2		Washer, Thrust
63	736-0266	AR	S	Washer, Flat, 1.52 x 2.0 x .030
	736-04095	AR	S	Washer, Flat, 1.52 x 2.0 x .005
	736-04096	AR	S	Washer, Flat, 1.52 x 2.0 x .015
64	741-0343	4	S	Pin, Brake Actuating
65	741-0363	1	S	Bearing, Needle
66	741-0862	2	/P	Ball, Detent
67	741-1104	2	/P	Bearing, Ball
68	741-3033A	2	S	Bearing, Ball
69	741-3057	1	S	Bearing, Ball
70	741-3083	1		Bearing, Needle Thrust
71	741-04014	3	S	Bearing, Ball
72	741-04066	1	S	Bearing, Ball
73	750-3364	1	S	Spacer, 1.51 x 1.75 x 2.41
74	750-04024	1	S	Spacer, 1.515 x 2.039 x .335
75	717-04043	1	S	Gear, Spiral Bevel, 36T
76	761-0215	4		Disc, Brake
77	761-04000	2	S	Yoke, Brake
78	761-04001	2	S	Bracket, Brake Anti Rotation
79	761-04002	2	S	Plate, Puck Retainer
80	761-04003	1	S	Arm, Brake Actuator - LH
81	761-04004A	1	S	Arm, Brake Actuator - RH
82	750-04413	1		Spacer, .573 x .938 x .832
83	750-04416	1		Plug, .437 x .16
84	617-04004	1	S	Gear Assembly w/Bearings
	741-0991	2		Bearing, Sleeve, 13 x 15 x 10
85	711-04301	1	S	Shaft, 4WD Actuator
86	716-0185	1		Ring, Retaining
87	716-0204	1		Ring, Retaining
88	718-04079	1	S	Yoke, 4WD
89	718-0668	1		Gear, Spline Coupling
90	718-3116	1		Collar, Shift
91	741-3037	1	S	Bearing, Ball

5234DL Tractor
Transmission Mounting 1B065G & Before


Page 110 of 115

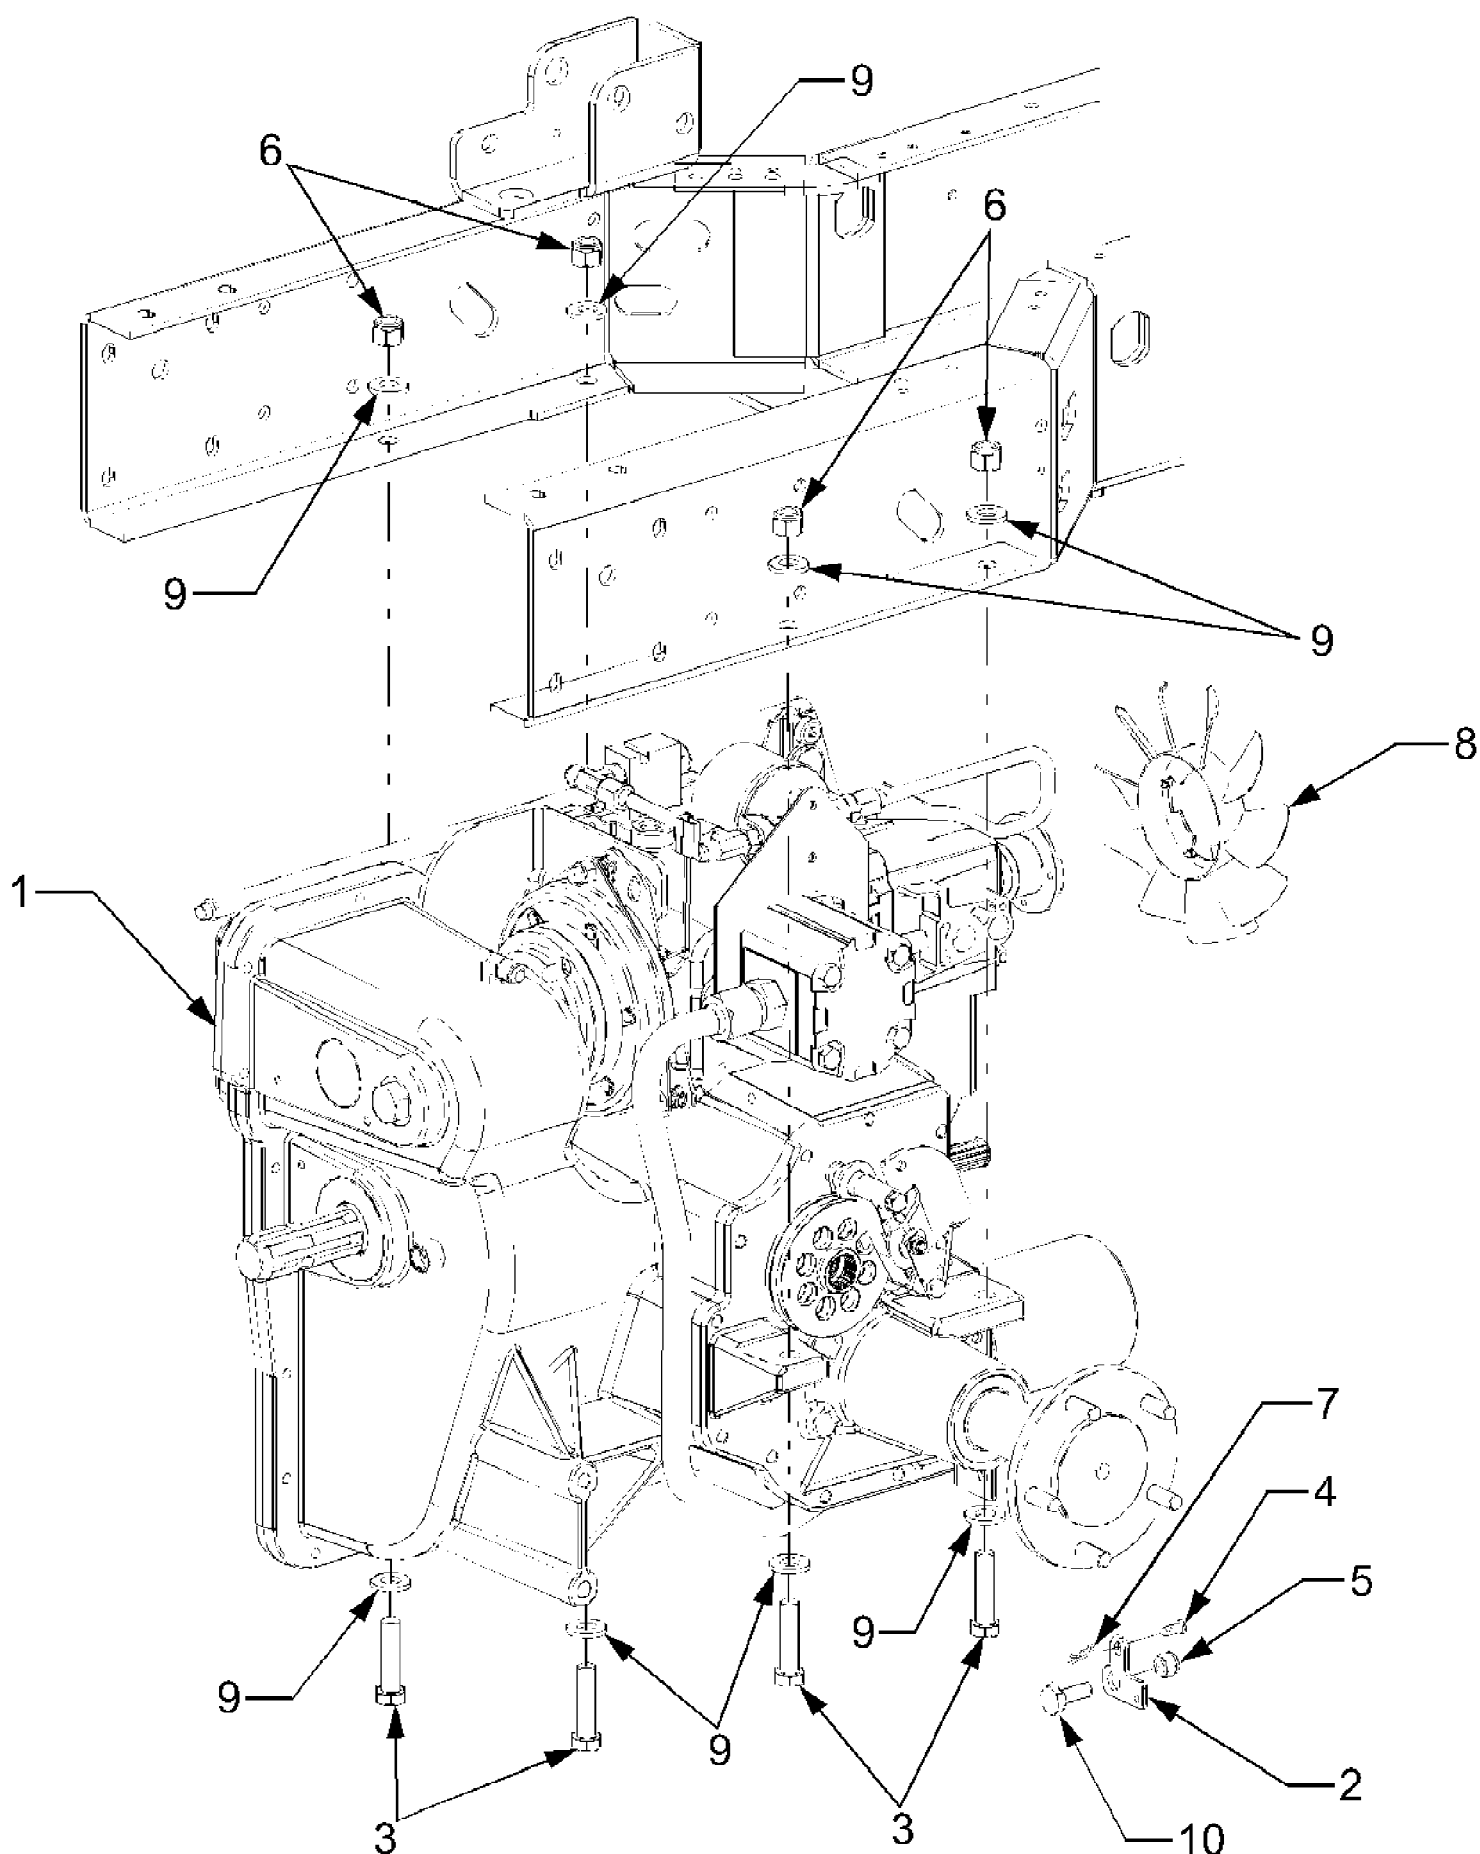

5234DL Tractor
Transmission Mounting 1B065G & Before

Page 111 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	N/A	1		Transmission Assembly
2	703-05051	1		Link, Diff Lock Actuator
3	710-3071	4		Screw, Hex Cap 1/2-13 x 2.0 GR8
4	711-0701	1	S	Pin, Clevis, .25 x .50
5	712-3061	1	S	Nut, Hex Insert Lock, 3/8-24
6	712-3083	4	/P	Nut, Hex Insert Lock, 1/2-13
7	714-0104	1	S	Pin, Internal Cotter
8	731-3371	1		Fan, Transmission Cooling
9	736-3019	8		Washer, Flat, .531 x .1062 x .134
10	738-0689	1	S	Screw, Shoulder, 1/2 Dia. x .180

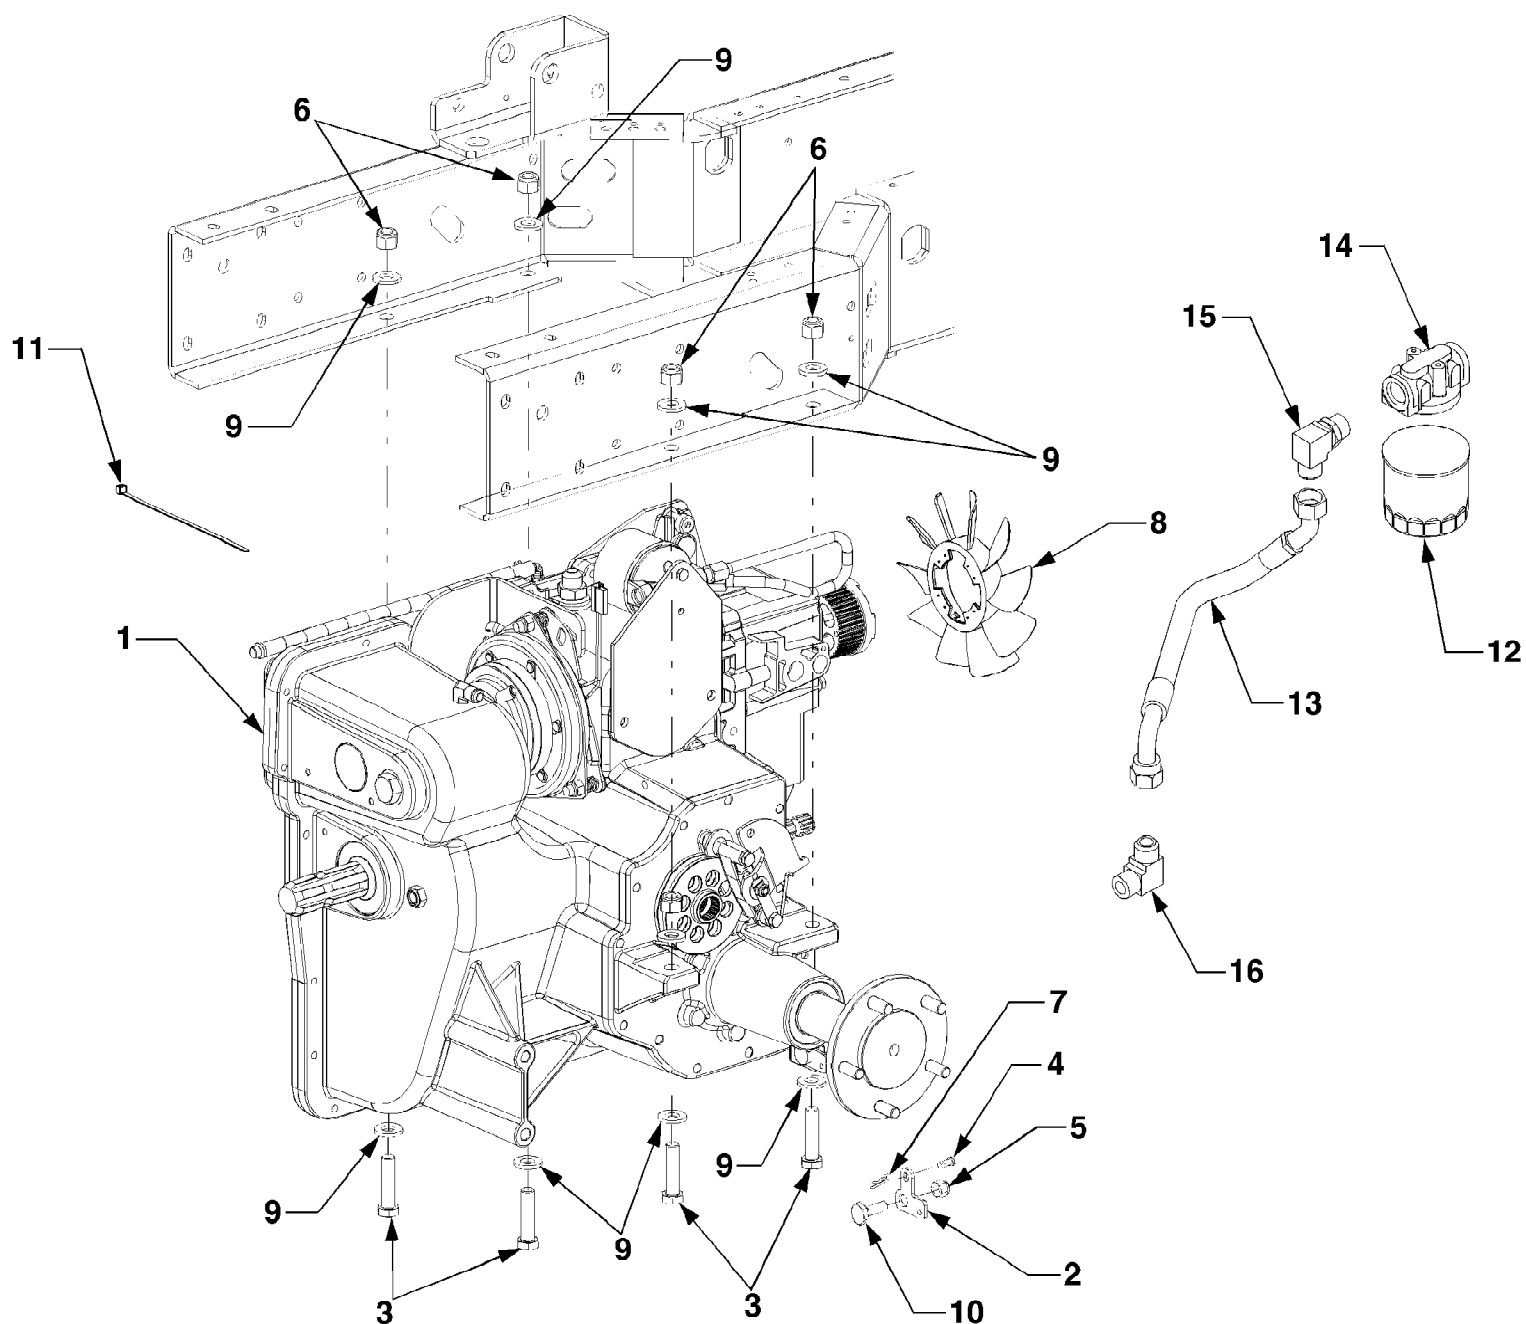


5234DL Tractor
Transmission Mounting 1B075G & After

Page 113 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	N/A	1		Transmission Assembly
2	603-04193	1		Link, Diff Lock Actuator
3	710-3071	4		Screw, Hex Cap 1/2-13 x 2.0 GR8
4	711-0701	1	S	Pin, Clevis, .25 x .50
5	712-3061	1	S	Nut, Hex Insert Lock, 3/8-24
6	712-3083	4	/P	Nut, Hex Insert Lock, 1/2-13
7	714-0104	1	S	Pin, Internal Cotter
8	731-05247	1	S	Fan, Transmission Cooling
9	736-3019	8		Washer, Flat, .531 x .1062 x .134
10	738-0689	1	S	Screw, Shoulder, 1/2 Dia. x .180
11	725-0157	1	/P	Tie, Cable
12	723-3014	1	S	Filter, Oil
13	727-04098	1	S	Hose, Filter
14	727-04104	1	S	Adapter, Oil Filter
15	737-04101	1		Fitting, 90° Elbow
16	737-04102	1		Fitting, 90° Elbow

5234DL Tractor
Wheels

Page 114 of 115

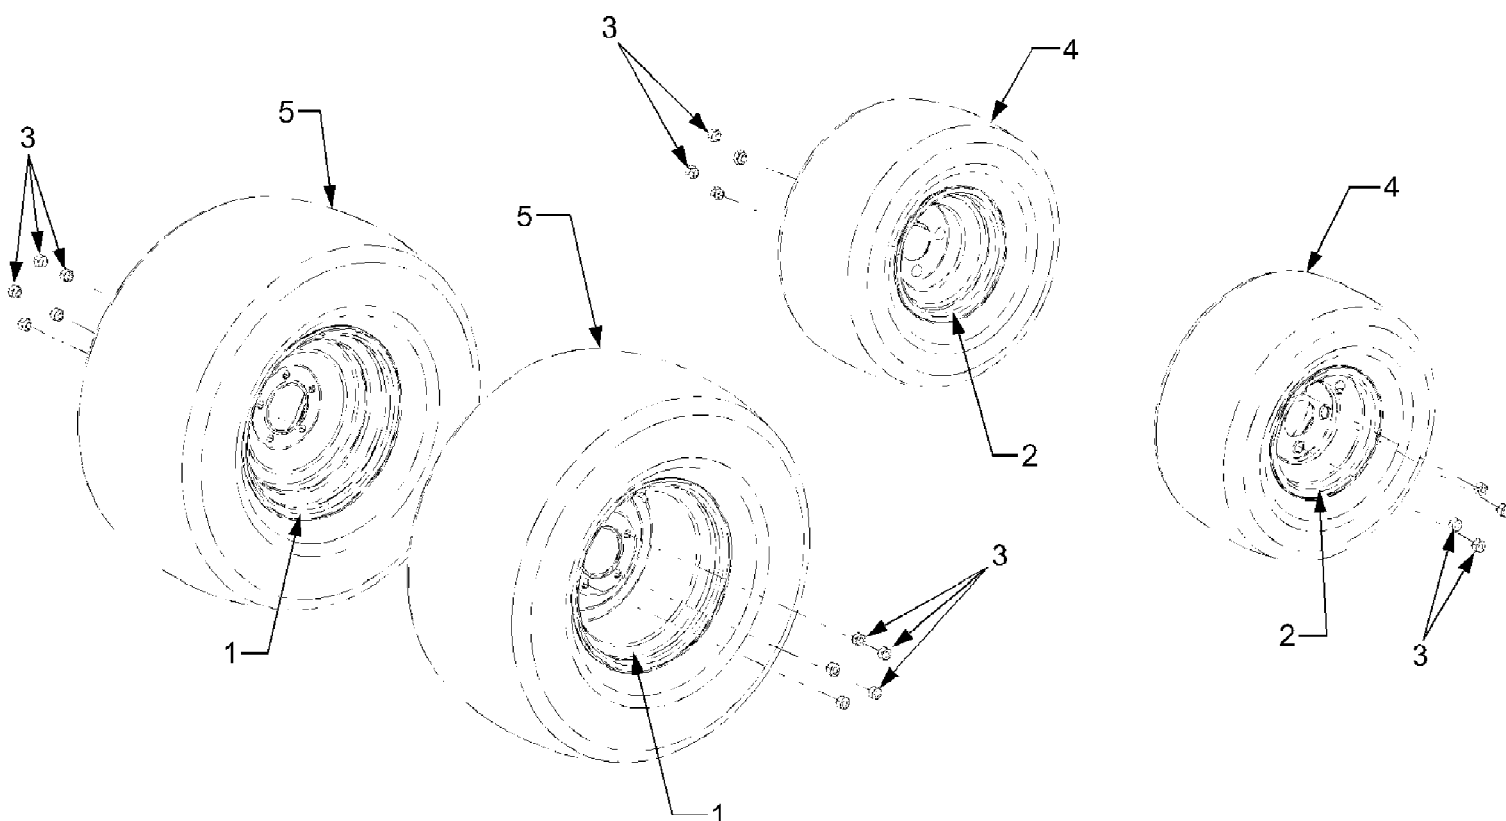

5234DL Tractor
Wheels

Page 115 of 115

Ref #	Part Number	Qty	S/P/F	Description
1	634-04004	2		Rim Assembly
	734-0255	2	S	Valve Stem
2	634-04111	2		Rim Assembly, Turf Tire
2	634-04118	2		Rim Assembly, Ag Tire
	734-0255	1	S	Valve Stem
3	712-3050	18	/P	Nut, Lug, 7/16-14
4	734-04002	2	S	Tire, Turf, 18 x 8.5 x 8
4	734-04044	2		Tire, Ag, 18 x 9.5 x 8
5	734-04080	2		Tire, Turf, 26 x 12.0 x 12
5	734-04043	2	/P	Tire, Ag, 26 x 12 x 12