 



8354 Tractor
Accelerator Group

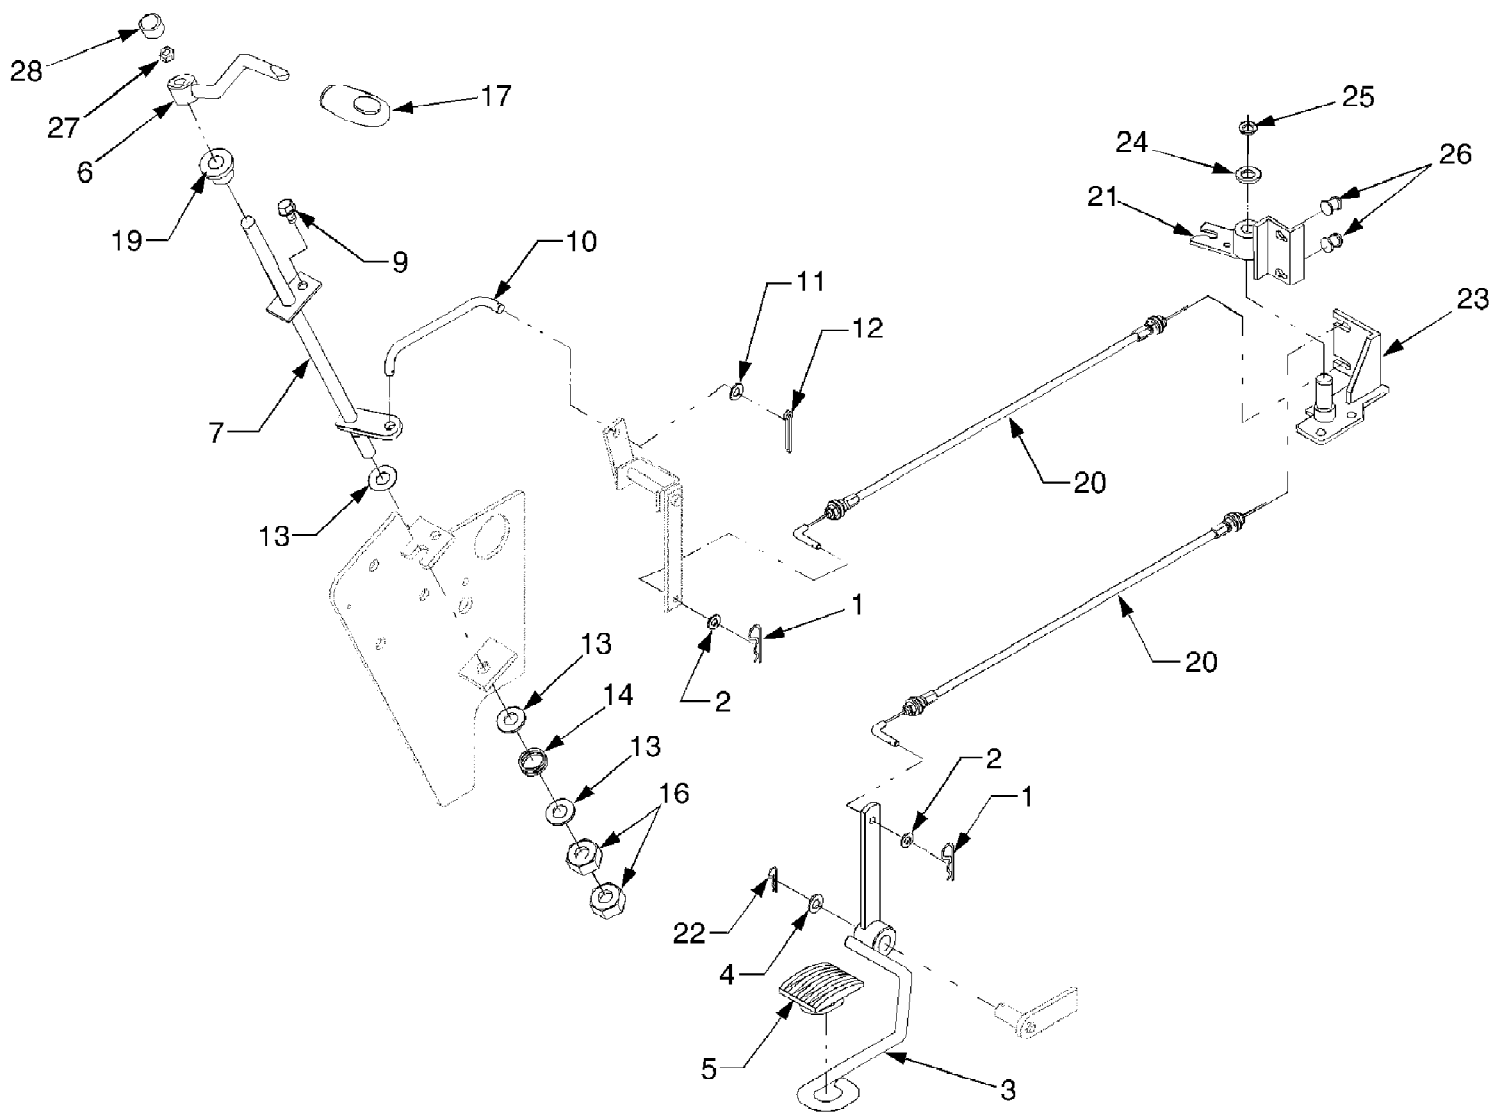

8354 Tractor
Accelerator Group

Page 2 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-05525-50600	2		Pin, Snap
2	DD-04013-50060	2	/P	Washer, Plain
3	DD-T2610-60035	1		Pedal, Accel
4	DD-04014-50140	1		Washer, Plain
5	DD-T4620-70272	1		Rubber, Accel Pedal
6	DD-T2610-60072	1		Lever 1, Hand Accel
7	DD-T4620-60103	1		Lever 2, Hand Accel
9	DD-01125-50820	1		Bolt
10	DD-T4620-60111	1		Rod, Connector
11	DD-04012-50080	2		Washer, Plain
12	DD-05511-50215	2		Pin, Split
13	DD-04013-50120	3		Washer, Plain
14	DD-T4835-17241	3		Spring
16	DD-02176-50120	2		Nut
17	DD-T2615-60142	1		Grip (Hand Accel)
19	DD-31355-29491	1		Grommet
20	DD-T4680-60021	1	S	Cable, Accelerator
21	DD-T4686-60092	1		Lever, Accel
22	DD-05515-51200	1		Pin, Snap
23	DD-T4686-60082	1		Bracket, Accel
24	DD-04011-50120	1		Washer, Plain
25	DD-04612-00120	1		Ring, Snap
26	DD-T4682-55801	2		Grommet
27	DD-02118-50100	1		Nut
28	DD-T4815-93311	1		Cap, Nut

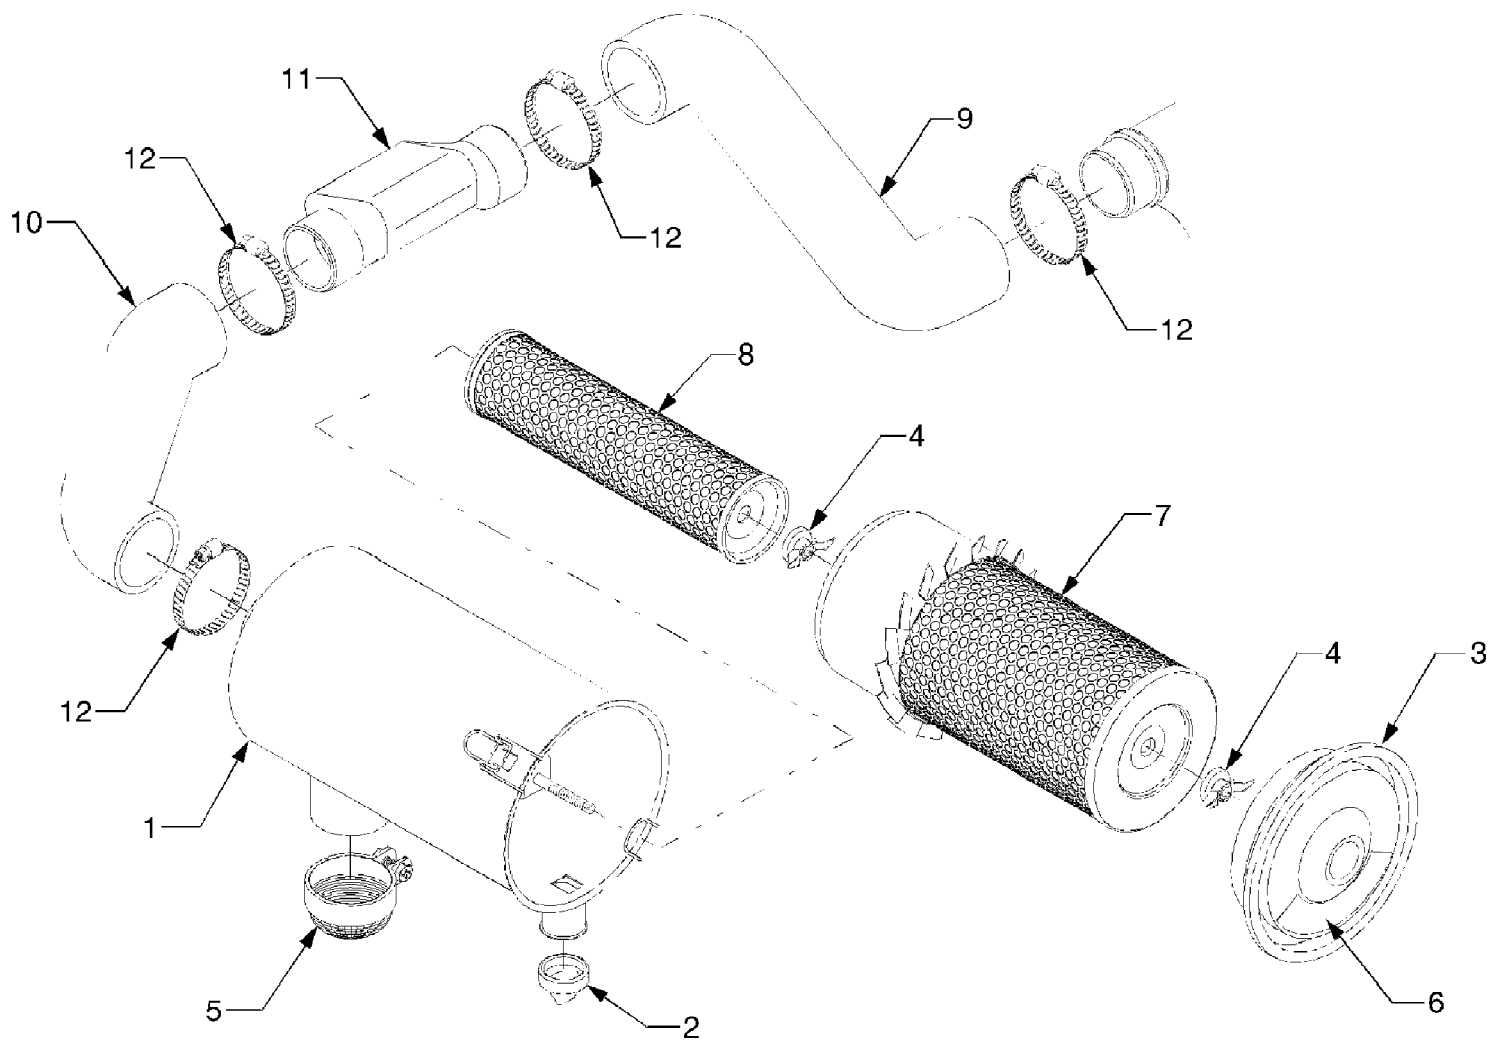 

8354 Tractor
Air Cleaner

Page 4 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-E5800-11113	1		Aircleaner Body Ass'y Includes Ref. Nos. 2 thru 8
2	DD-E7100-11471	1		Cap, Rubber
3	DD-E5800-11161	1		Cover, Aircleaner
4	DD-E6200-92620	2		Nut, Wing
5	DD-E5800-11171	1		Net
6	DD-E7100-87452	1		Label
7	DD-E6300-11081	1		Element1, Aircleaner
8	DD-E6300-11091	1		Element2, Aircleaner
9	DD-E5800-11621	1		Pipe 1, Inlet
10	DD-E5800-11632	1		Pipe 2, Inlet
11	DD-E5800-11642	1		Pipe 3, Inlet
12	DD-KX97382-S51	4		Clamp Ass'y

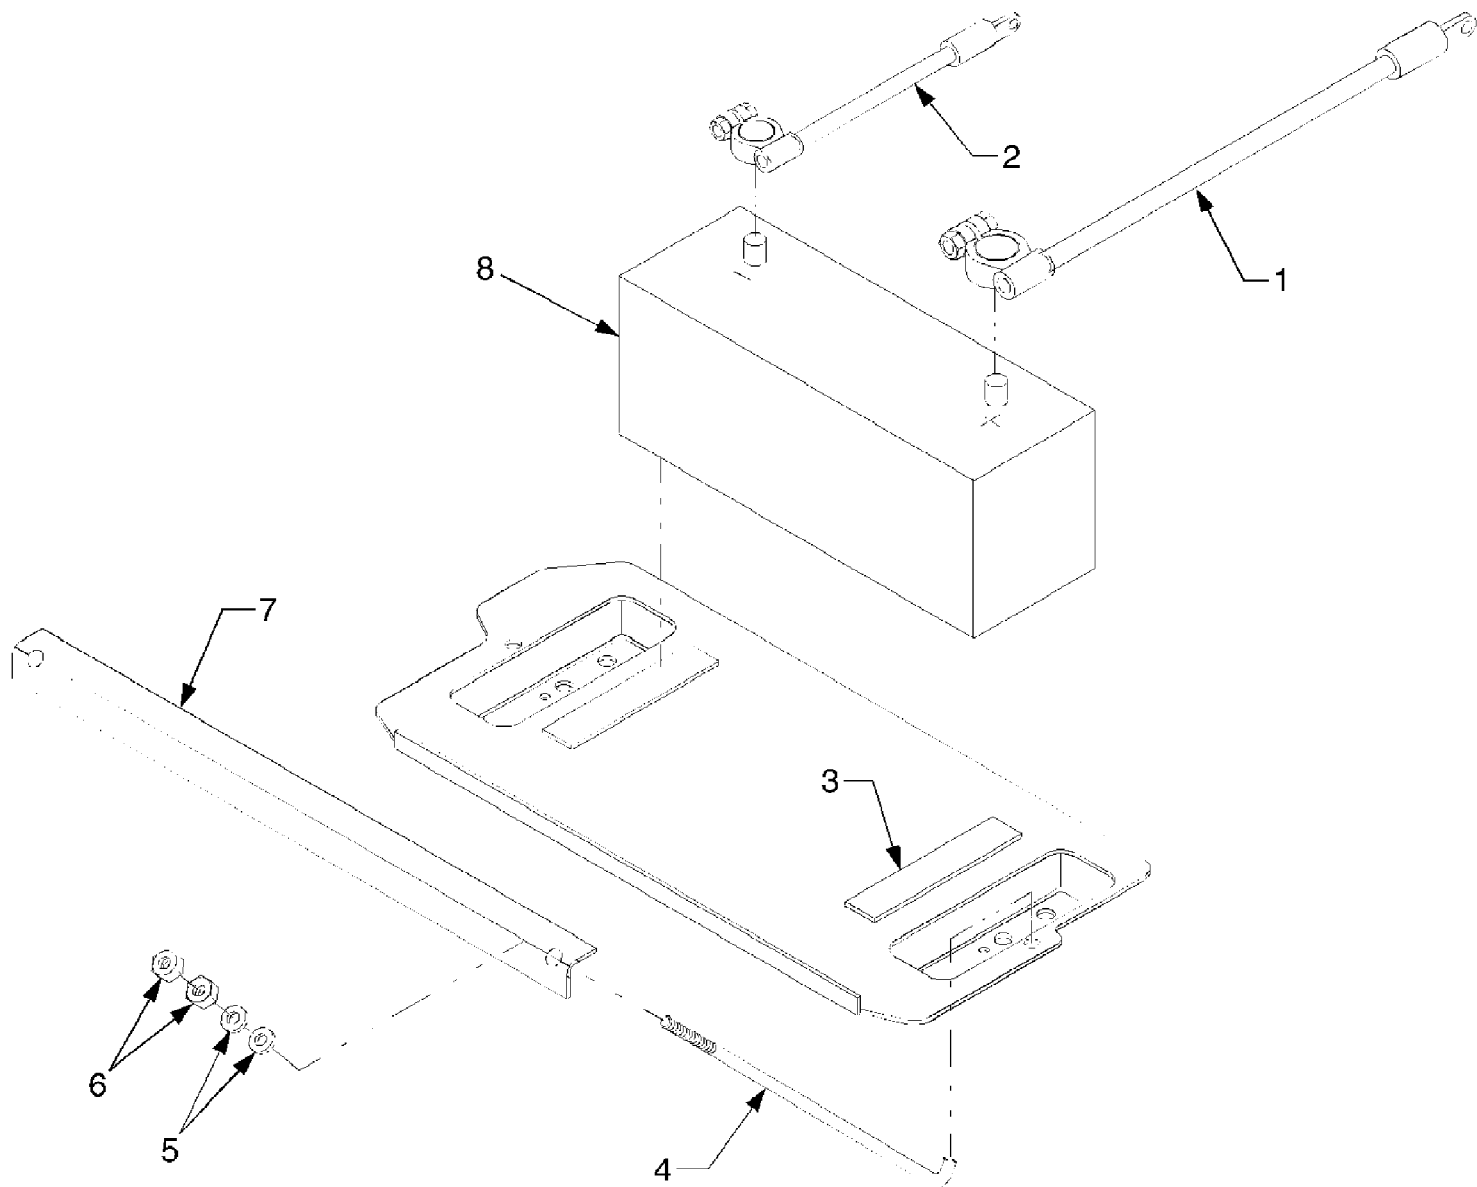 

8354 Tractor
Battery Group

Page 6 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4620-69161	1		Cable, Battery Positive
2	DD-T4620-69611	1		Cable, Battery Ground
3	DD-T2610-50271	2		Rubber, Battery
4	DD-T4620-50242	2		Bolt, Battery Hook
5	DD-04015-50060	2		Washer, Plain
6	DD-02056-50060	4		Nut
7	DD-T4620-50261	1		Plate, Battery Lock
8	925-3174	1	/P	Battery, 500 cca Dry

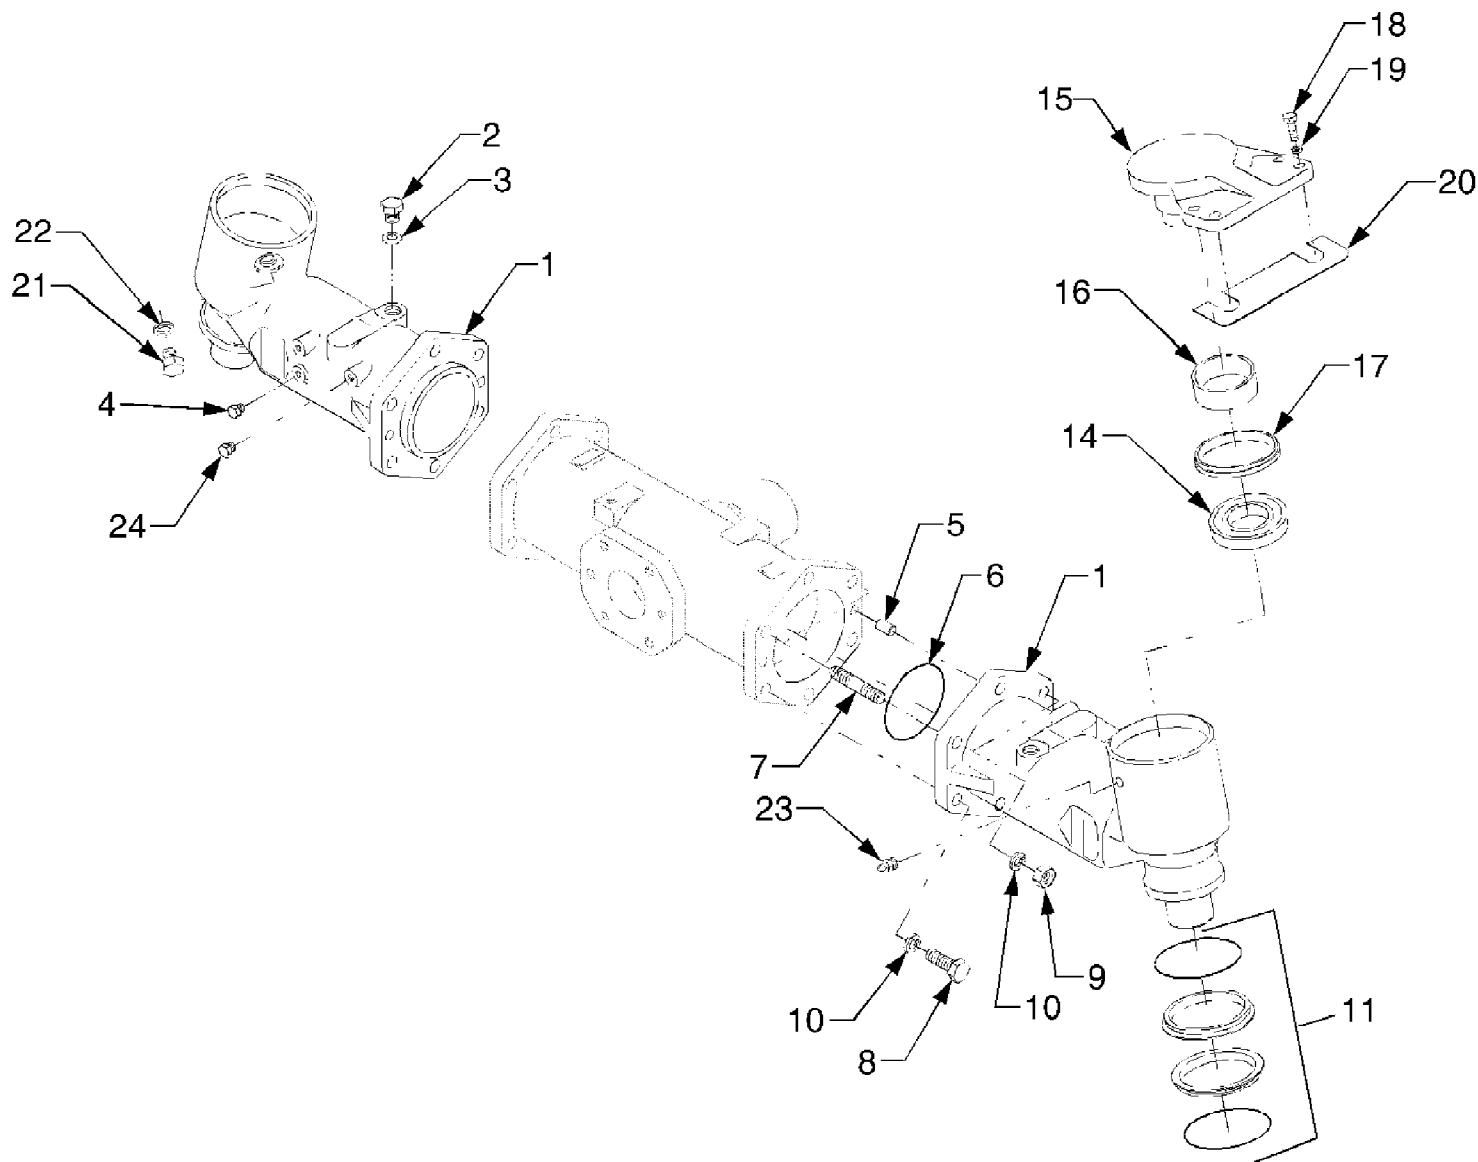 

8354 Tractor
Bevel Gear Case Group

Page 8 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2630-43314	2	/P	Case, Bevel Gear
2	DD-34150-14261	2		Plug, Drain
3	DD-04717-02150	2		Washer, Seal
4	DD-T4680-14211	2		Gauge, Oil
5	DD-37805-43501	4		Pin, Straight
6	DD-04811-51050	2		O-ring
7	DD-01517-51438	4		Stud
8	DD-01173-51445	8		Bolt
9	DD-02176-50140	4		Nut
10	DD-04512-50140	12		Washer, Spring
11	DD-T4818-43451	2	/P	Floating Seal Ass'y
14	DD-08121-06013	2		Bearing, Ball
15	DD-T2620-43341	2		Support, Axle Case
16	DD-T2630-43461	2		Ring, Inner
17	DD-T2630-43471	2		Seal, Oil
18	DD-01173-51235	8		Bolt
19	DD-04512-50120	8		Washer, Spring
20	DD-T2630-43751	2		Shim (T 0.5)
	DD-T2630-43761	2		Shim (T 0.8)
	DD-T2630-43771	2		Shim (T 1.0)
	DD-T2630-43781	2		Shim (T 1.2)
21	DD-76KP-04081	2		Plug
22	DD-04717-01800	2		Washer, Seal
23	DD-06613-10010	2		Nipple, Grease
24	DD-34150-27581	4		Plug

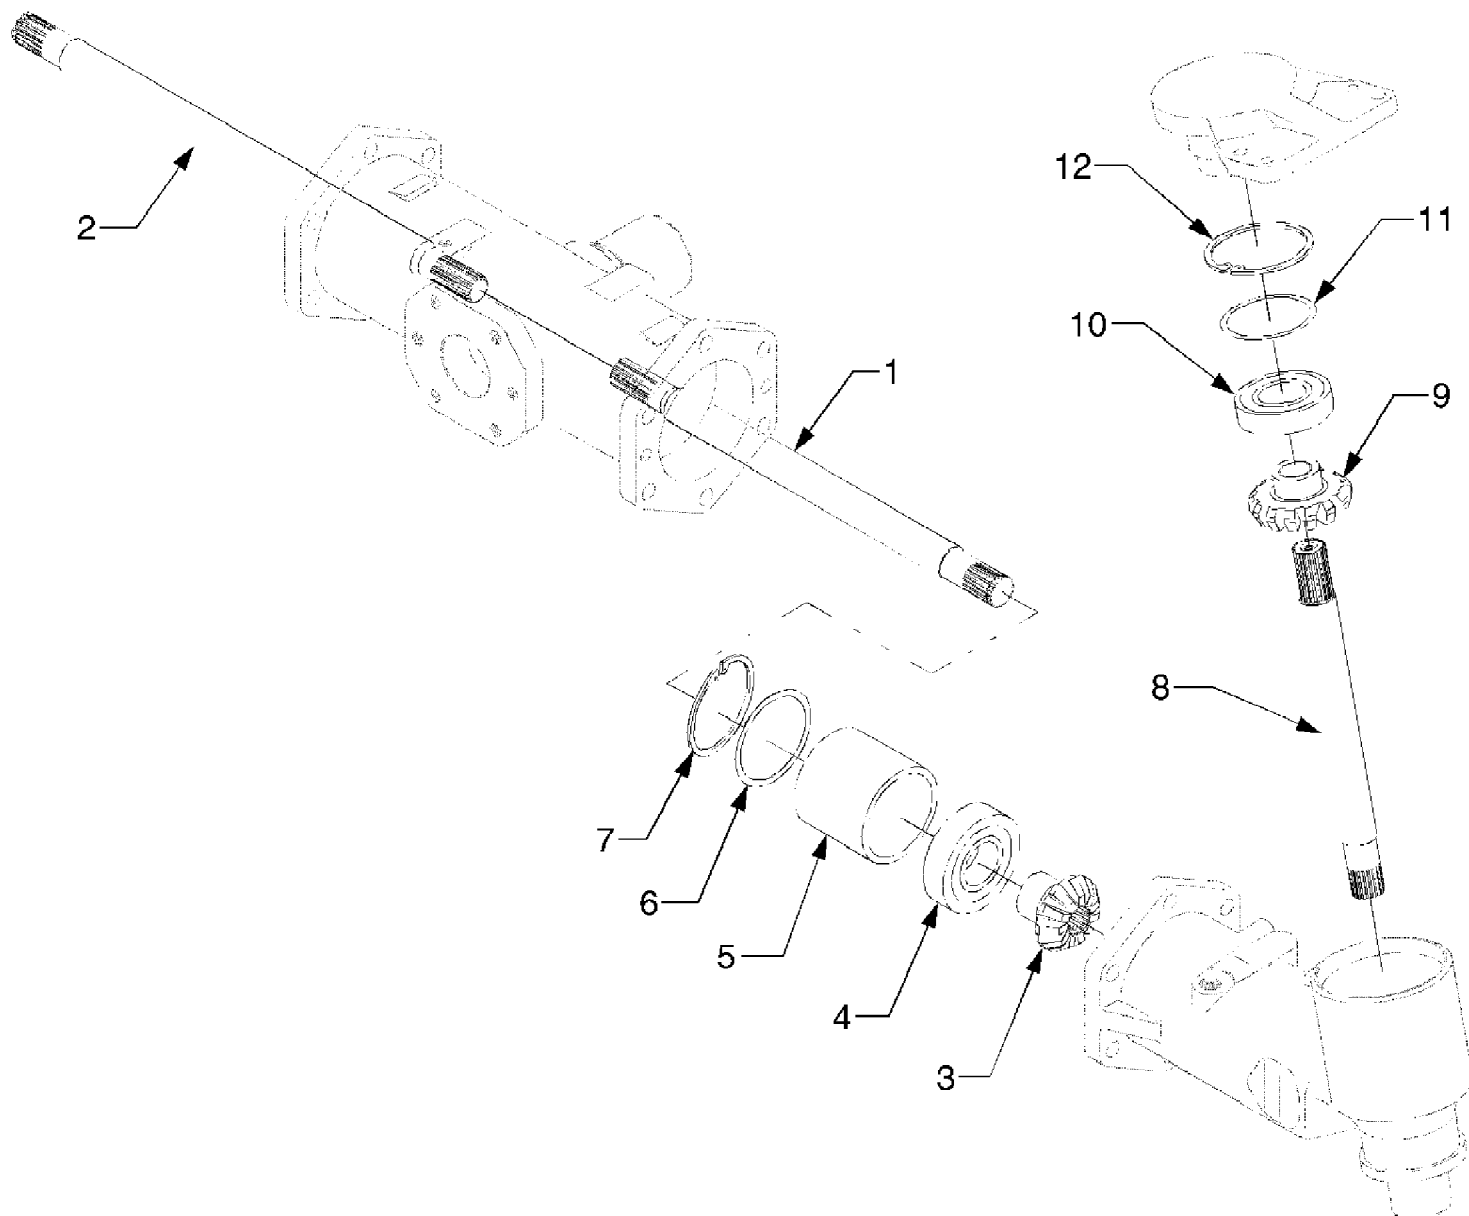 

8354 Tractor
Bevel Gear Shaft Group

Page 10 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2630-43211	1		Shaft, Differential Gear (LH)
2	DD-T2630-43221	1		Shaft, Differential Gear (RH)
3	DD-T2630-43241	2		Gear, 11 Bevel
4	DD-08101-06307	2		Bearing, Ball
5	DD-T2630-43291	2		Collar
6	DD-T4520-43031	2		Shim (T 0.4)
	DD-T4520-43041	2		Shim (T 0.8)
	DD-T4520-43051	2		Shim (T 1.0)
	DD-T4520-43061	2		Shim (T 1.2)
7	DD-04611-00800	2		Cir- Clip
8	DD-T2620-43412	2		Shaft, Bevel Gear
9	DD-T2630-43441	2		Gear, 16 Bevel
10	DD-08101-06013	2		Bearing, Ball
11	DD-T4520-44041	2		Shim (T 0.4)
	DD-T4520-44051	2		Shim (T 0.8)
	DD-T4520-44061	2		Shim (T 1.0)
	DD-T4520-44071	2		Shim (T 1.2)
12	DD-04611-01000	2		Cir- Clip

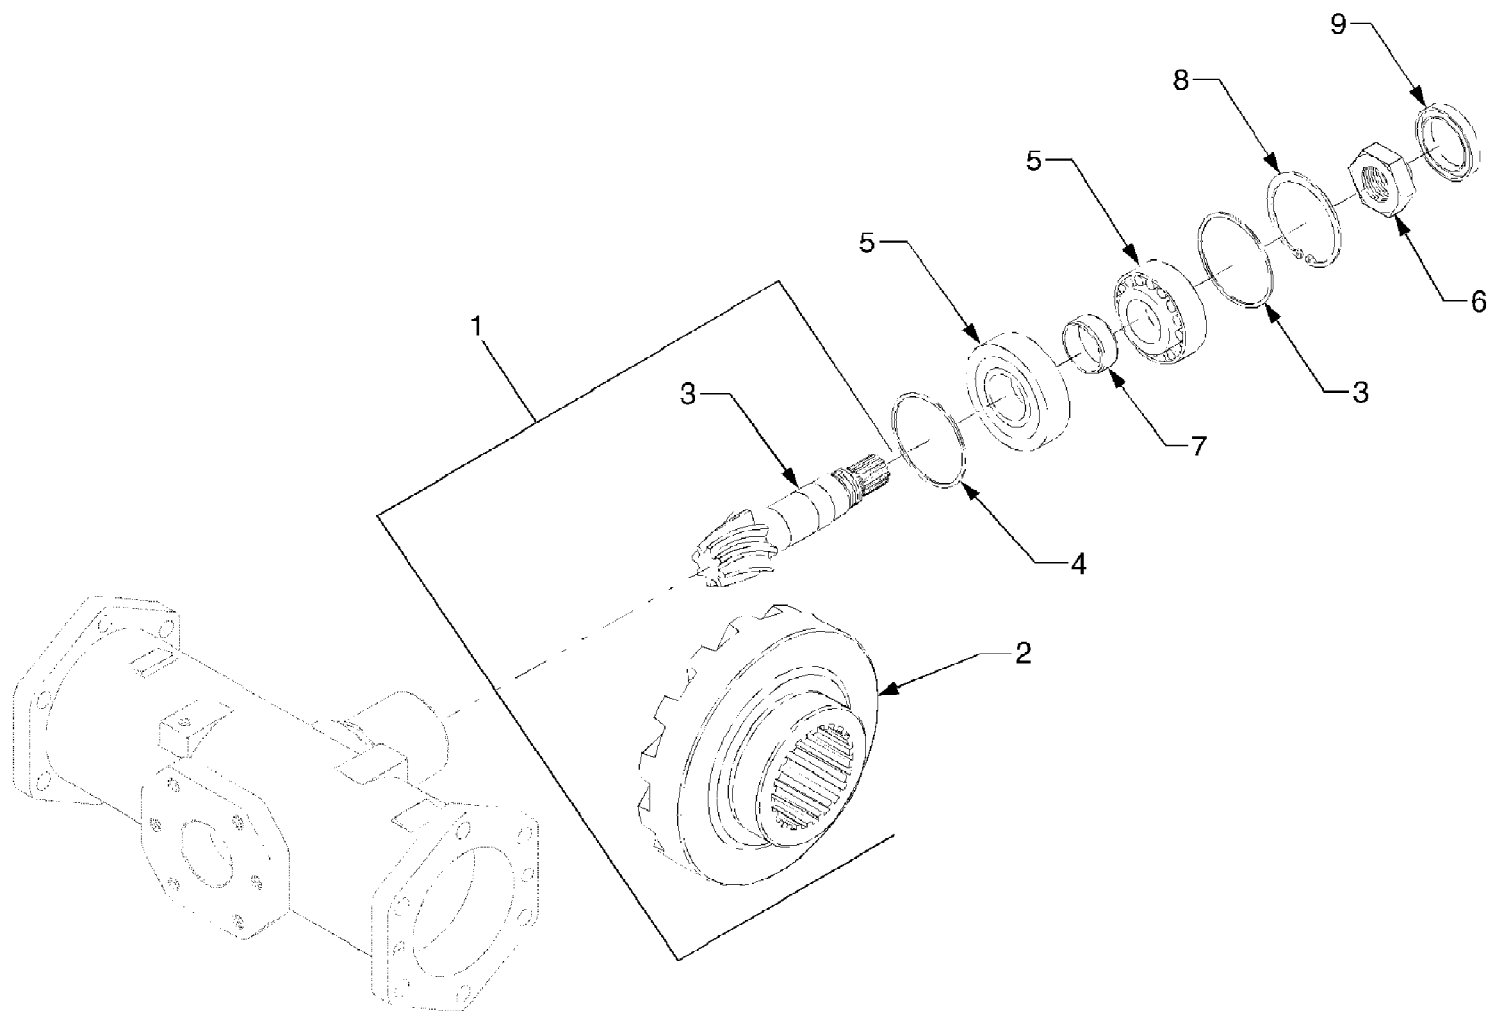 

8354 Tractor
Bevel Pinion Shaft Group

Page 12 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2630-42201	1		Spiral Bevel Gear Ass'y
2	DD-T2630-42311	1		Gear, 23 Spiral Bevel
3	DD-T2630-42261	1		Shaft, 9 Bevel Pinion
4	DD-T2630-42451	2		Collar (T 5.8)
	DD-T2630-42461	2		Collar (T 5.9)
	DD-T2630-42471	2		Collar (T 6.0)
	DD-T2630-42481	2		Collar (T 6.1)
	DD-T2630-42491	2		Collar (T 6.2)
5	DD-T2630-42271	2		Bearing, Taper Roller
6	DD-T4620-21591	1		Nut, 28
7	DD-T2630-42751	1		Collar
8	DD-04611-00580	1		Cir- Clip
9	DD-T2630-42291	1		Seal, Oil

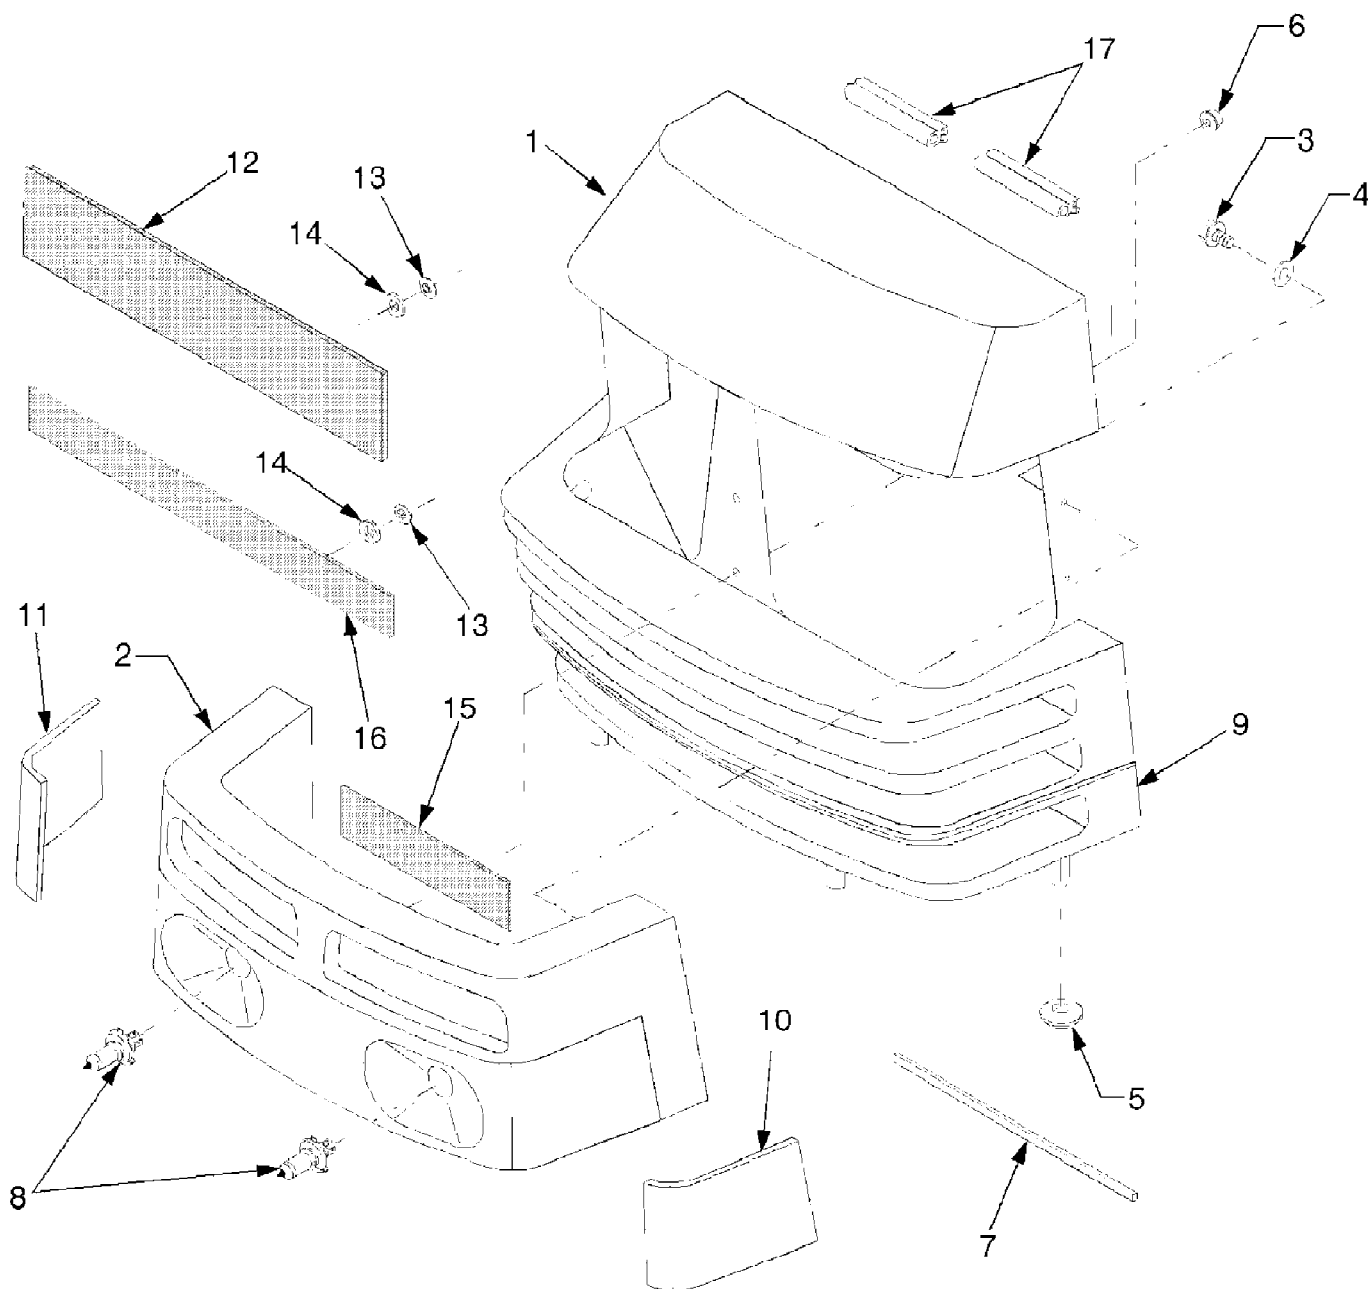 

8354 Tractor
Bonnet 1 Group

Page 14 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DDT462050505BE	1		Front Grill Ass'y Incl. Ref No. 9
2	DDT462050533BE	1	/P	Head Lamp Ass'y Replaces DD-T4620-50533, Incl. Ref 10 & 11
3	DD-01023-50614	4		Bolt
4	DD-04015-50060	4		Washer, Plain
5	DD-T4620-50592	2		Rubber, Cushion
6	DD-02751-50060	2		Nut, Flange
7	DD-T4620-50582	2		Cushion, Front Grill
8	DD-T4620-69241	2		Bulb
9	DD-T4620-50522	1	/P	Grill, Front
10	DDT462050531003	1		Cover, Head Light Side (LH)
11	DDT462050531004	1		Cover, Head Light Side (RH)
12	DD-T4620-50542	1		Screen, Front Grill (Upper)
13	DD-T4620-50701	18		Plate, Lock
14	DD-82KC-0641	18		Cushion
15	DD-T4620-50522	1	/P	Screen, Front Grill (Lower)
16	DD-T4620-50552	1		Screen, Front Grill (Lower)
17	DD-T4620-50731	2		Rubber

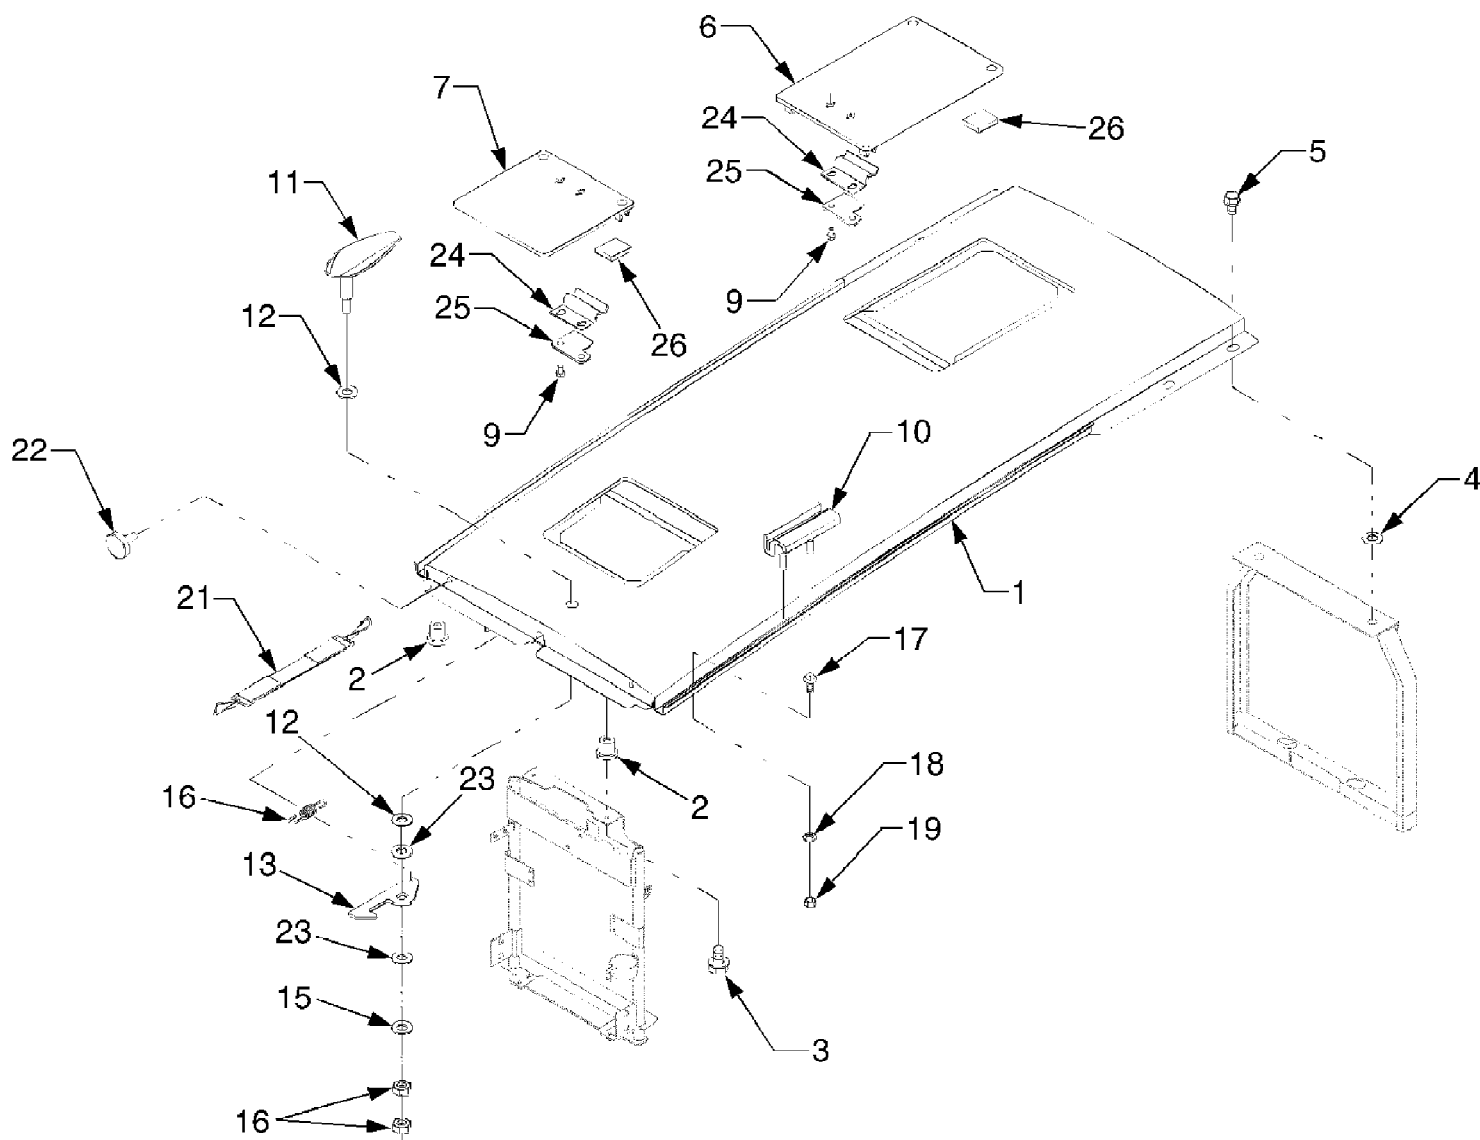 


8354 Tractor
Bonnet 2 Group

Page 16 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DDT468050604BE	1	/P	Bonnet (Upper)
2	DD-T4620-50672	2		Rubber, Cushion
3	DD-01754-50820	2		Bolt, Flange
4	DD-T4620-80691	2		Packing
5	DD-01754-50820	2		Bolt, Flange
6	DDT462550701BE	1		Cover 2 Ass'y
7	DDT426550731BE	1		Cover Ass'y
9	DD-01023-50612	4		Bolt
10	DD-T4260-19141	4		Cushion, Bonnet
11	DD-T4620-50634	1		Handle, Bonnet Lock
12	DD-32240-23951	1		Washer
13	DD-T4620-50612	1		Plate, Front Grill
14	DD-76KP-0603	1		Washer
15	DD-04015-50080	1		Washer, Plain
16	DD-02156-50080	2		Nut
17	DD-T4620-50652	1		Spring
18	DD-T4260-18031	2		Bolt, Guide
19	DD-04512-50060	2		Washer, Spring
20	DD-02056-50060	2		Nut
21	DD-T4620-50663	1	/P	Hook Ass'y
22	DD-T4810-50661	2		Cushion
23	DD-55314-37171	2		Spacer
24	DD-T4625-50711	2		Plate (A)
25	DD-T4625-50721	2		Plate (B)
26	DD-T4625-50741	4		Cushion, Bonnet

 
8354 Tractor
Bonnet 3 Group

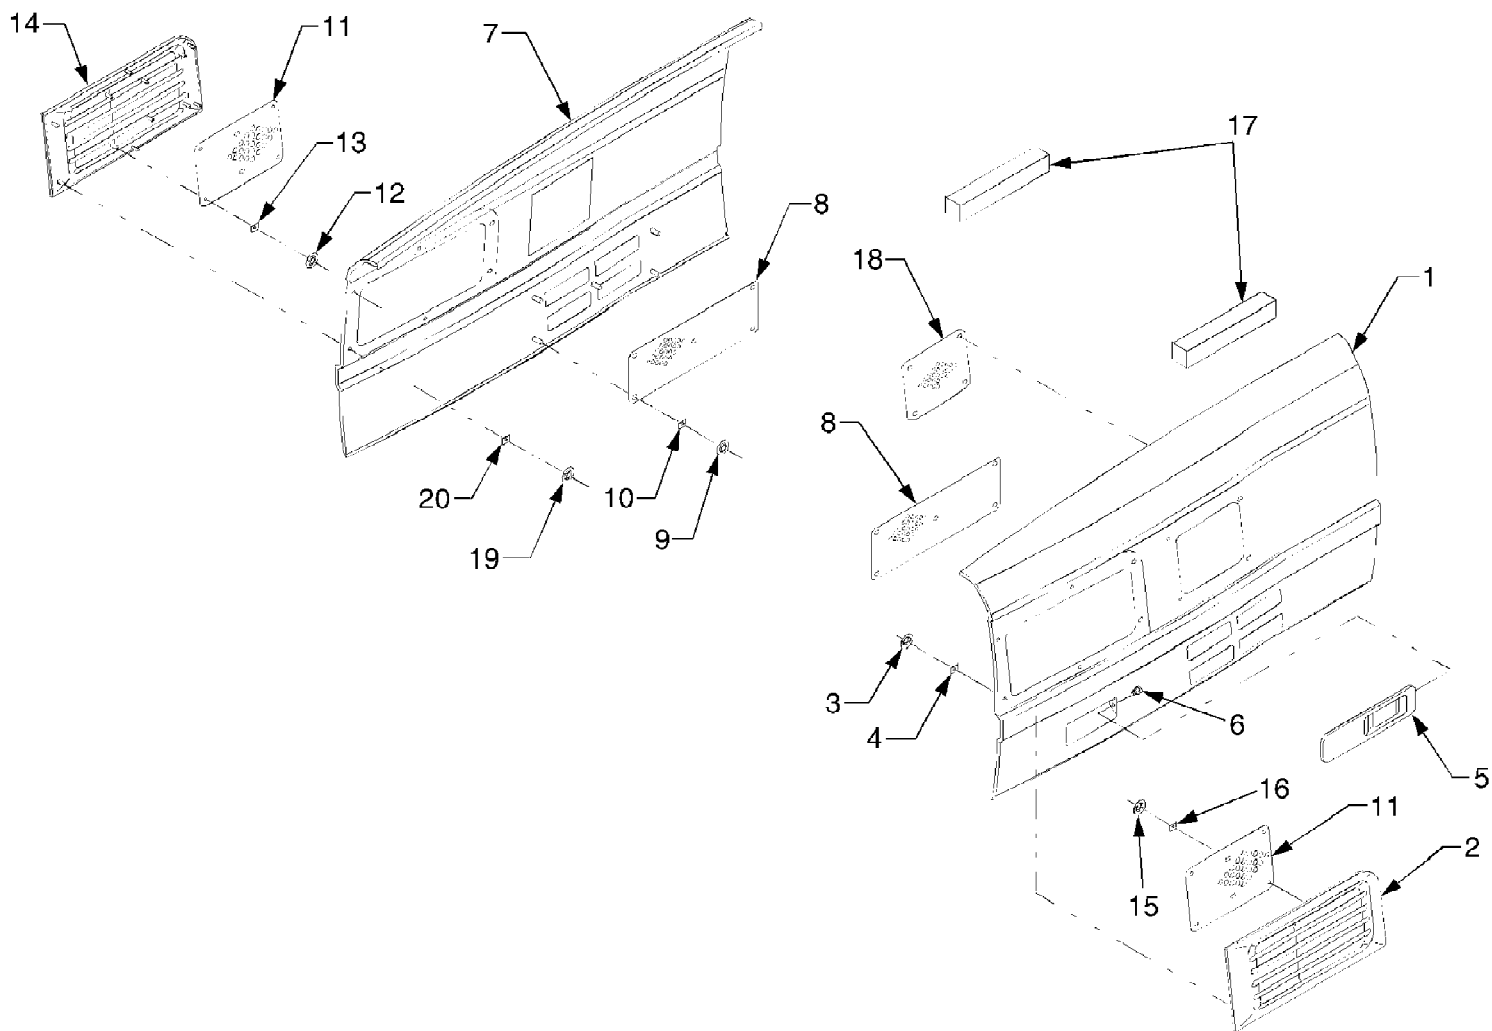

8354 Tractor
Bonnet 3 Group

Page 18 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DDT262050751BE	1		Cover, Side (LH)
2	DDT4620-50764	1		Grill, Side Cover (LH)
3	DD-T4620-50701	6		Stopper
4	DD-82KC-0641	6		Rubber, Stopper
5	DD-T4680-50771	1		Cover, Muffler
6	DD-01023-50612	2		Bolt
7	DDT262050811BE	1		Cover, Side (RH)
8	DD-T2620-50782	2		Net, Side Cover
9	DD-T4620-50701	10		Stopper
10	DD-82KC-0641	10		Rubber, Stopper
11	DD-T4620-50622	2		Net (Grill)
12	DD-T4620-50701	12		Stopper
13	DD-82KC-0641	12		Rubber, Stopper
14	DDT4620-50824	1		Grill, Side Cover (RH)
15	DD-T4620-50701	6		Stopper
16	DD-82KC-0641	6		Rubber, Stopper
17	DD-T4850-50461	2		Sponge 2
18	DD-T4680-50862	2		Net, Side Cover
19	DD-T4620-50701	14		Stopper
20	DD-82KC-0641	14		Rubber, Stopper

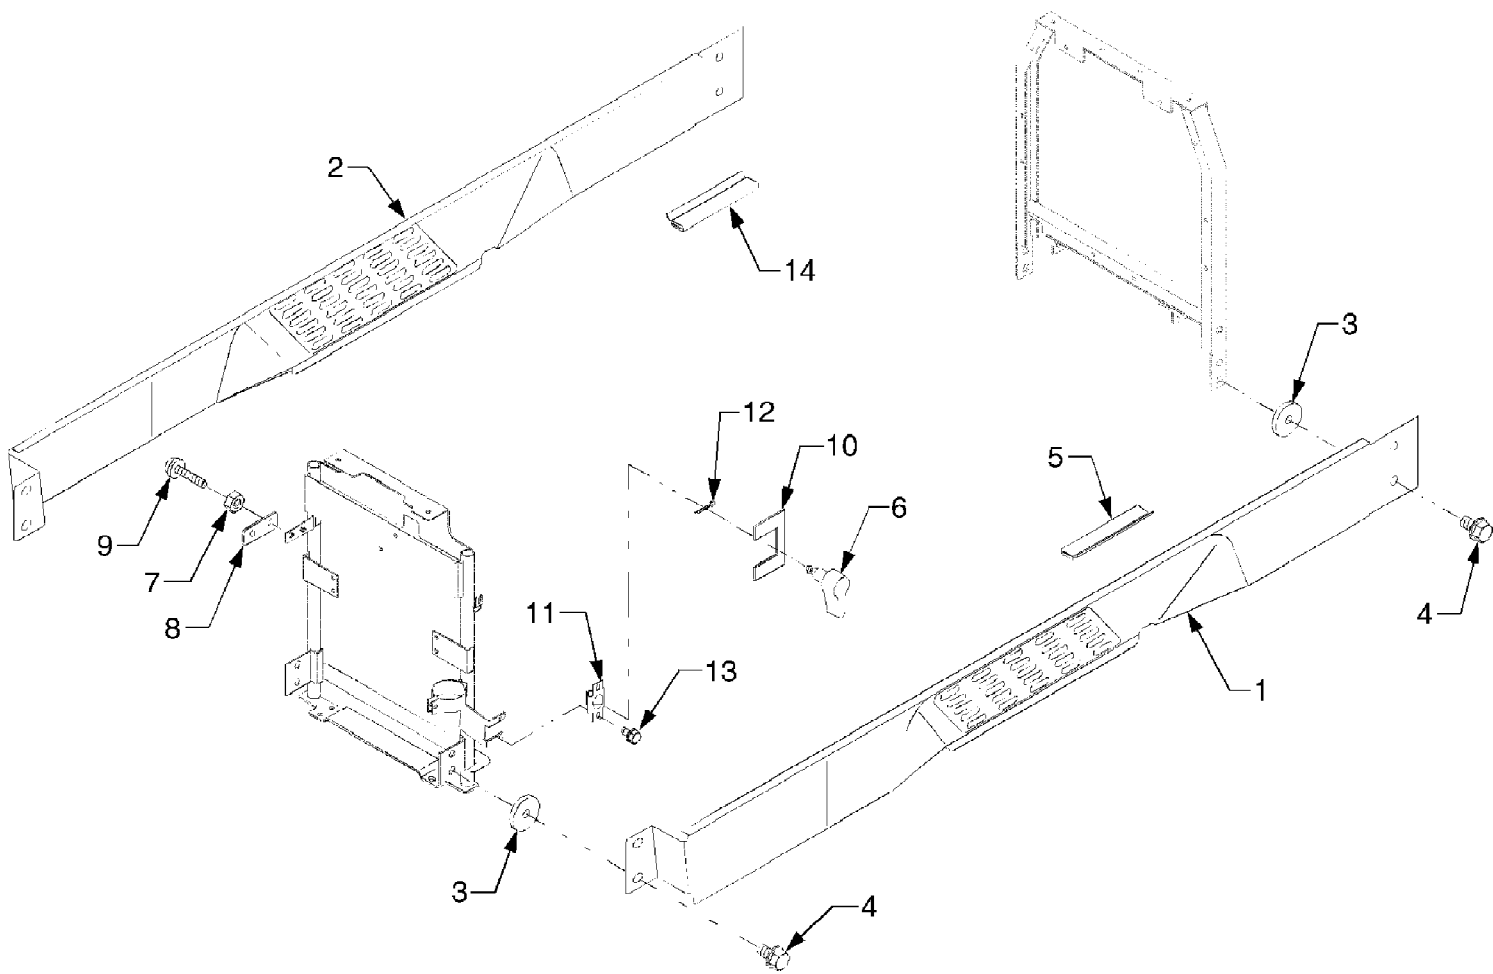 

8354 Tractor
Bonnet 4 Group

Page 20 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2620-50903	1		Cover, Low (LH)
2	DD-T2620-50911	1		Cover, Low (RH)
3	DD-T2610-80691	8		Cushion
4	DD-01754-50816	8		Bolt, Flange
5	DD-T2620-50691	1		Rubber, Cover (LH)
6	DD-T4810-50832	4		Knob, Side Cover
7	DD-02112-50080	2		Nut
8	DD-T4620-50881	2		Plate, Side Cover
9	DD-T4620-50891	2		Bolt, Cushion
10	DD-T4810-50851	4		Rubber (Bonnet-LH)
11	DD-T4681-50841	4		Bracket
12	DD-05511-50325	4		Pin, Split
13	DD-01053-50610	8		Bolt
14	DD-T2620-51691	1		Rubber, Cover (RH)

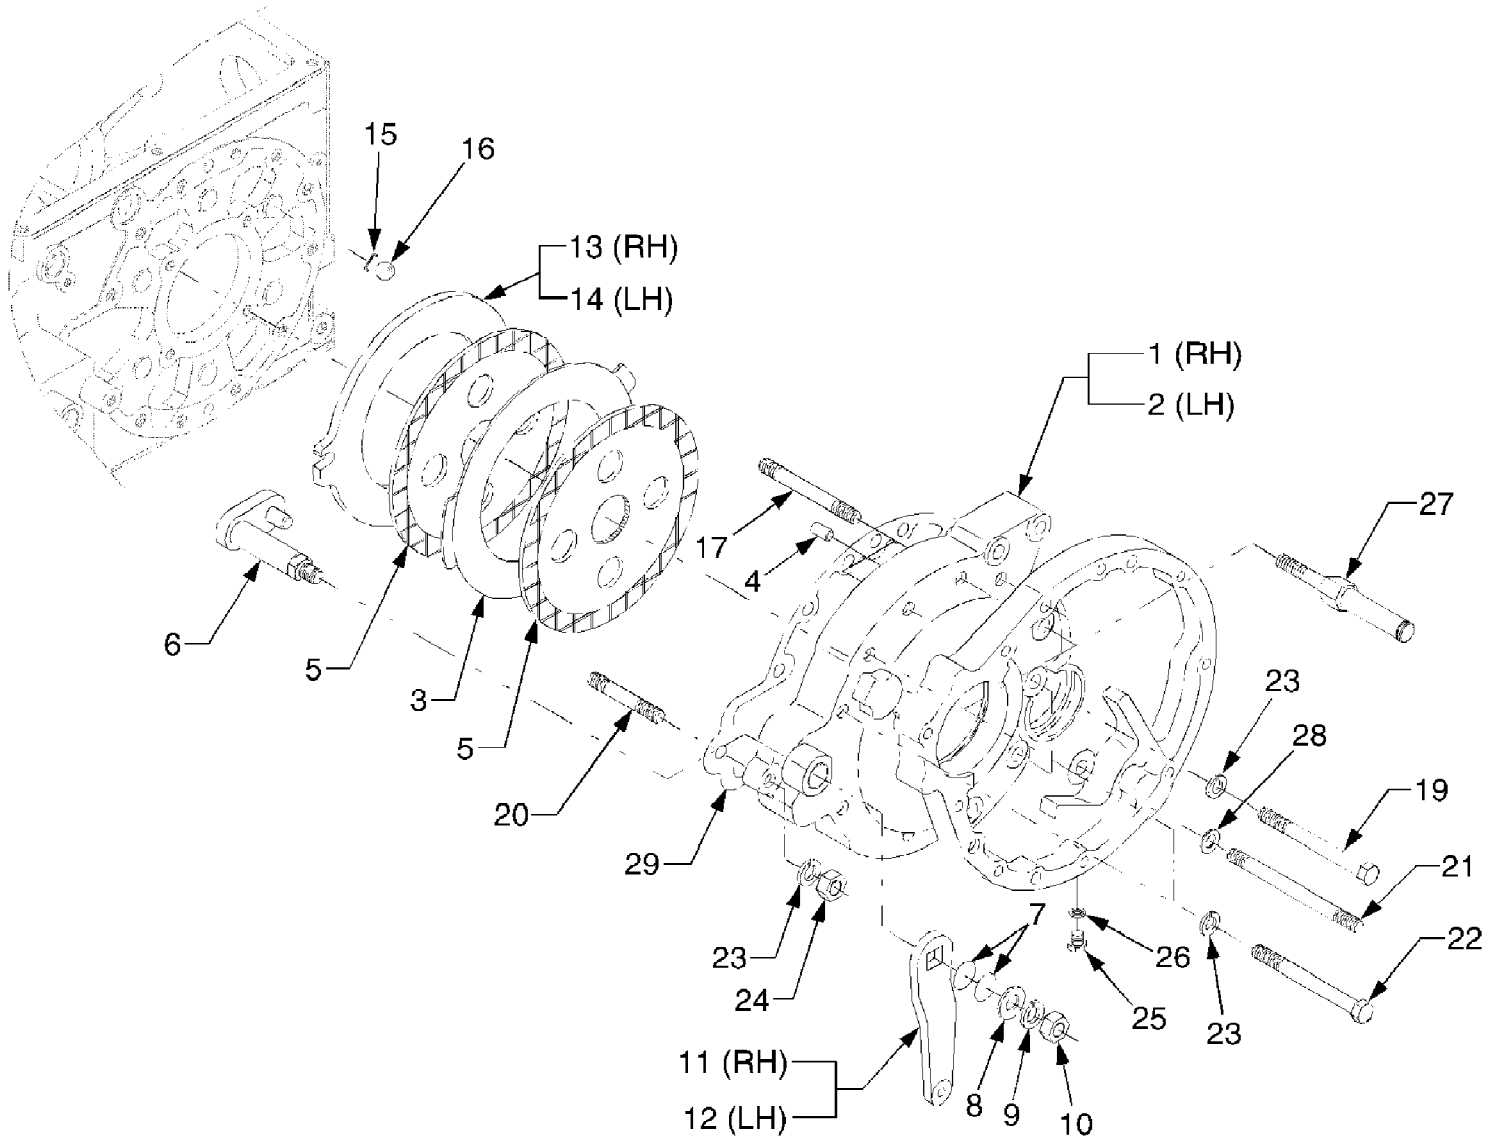 


8354 Tractor
Brake Case Group

Page 22 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2620-18132	1		Case, Brake(LH)
2	DD-T2620-28152	1		Case, Brake(RH)
3	DD-T2440-28182	2		Plate
4	DD-37305-28171	4		Pin
5	DD-T2440-28202	4		Disk, Brake
6	DD-38435-28213	2		Cam, Brake
7	DD-04811-00220	4		O-ring
8	DD-04013-50140	2		Washer, Plain
9	DD-04512-50140	2		Washer, Spring
10	DD-02176-50140	2		Nut
11	DD-T2610-28223	1		Lever, Brake Cam(RH)
12	DD-T2610-28232	1		Lever, Brake Cam(LH)
13	DD-T2240-28272	1		Plate, Cam(RH)
14	DD-T2240-28242	1		Plate, Cam(LH)
15	DD-37150-28253	12		Seat, Ball
16	DD-07715-00805	12		Ball
17	DD-37150-27352	12		Stud
19	DD-01176-51260	2		Bolt
20	DD-01574-51235	2		Stud
21	DD-01574-51285	2		Stud
22	DD-01173-51260	6		Bolt
23	DD-04512-50120	26		Washer, Spring
24	DD-02176-50120	18		Nut
25	DD-34150-14261	2		Plug, Drain
26	DD-04717-02150	2		Washer, Seal
27	DD-T2610-60562	1		Shaft, Lever (Range)
28	DD-T2440-28192	2		Packing
29	DD-37260-28162	2		Packing

 8354 Tractor
Brake Pedal Group

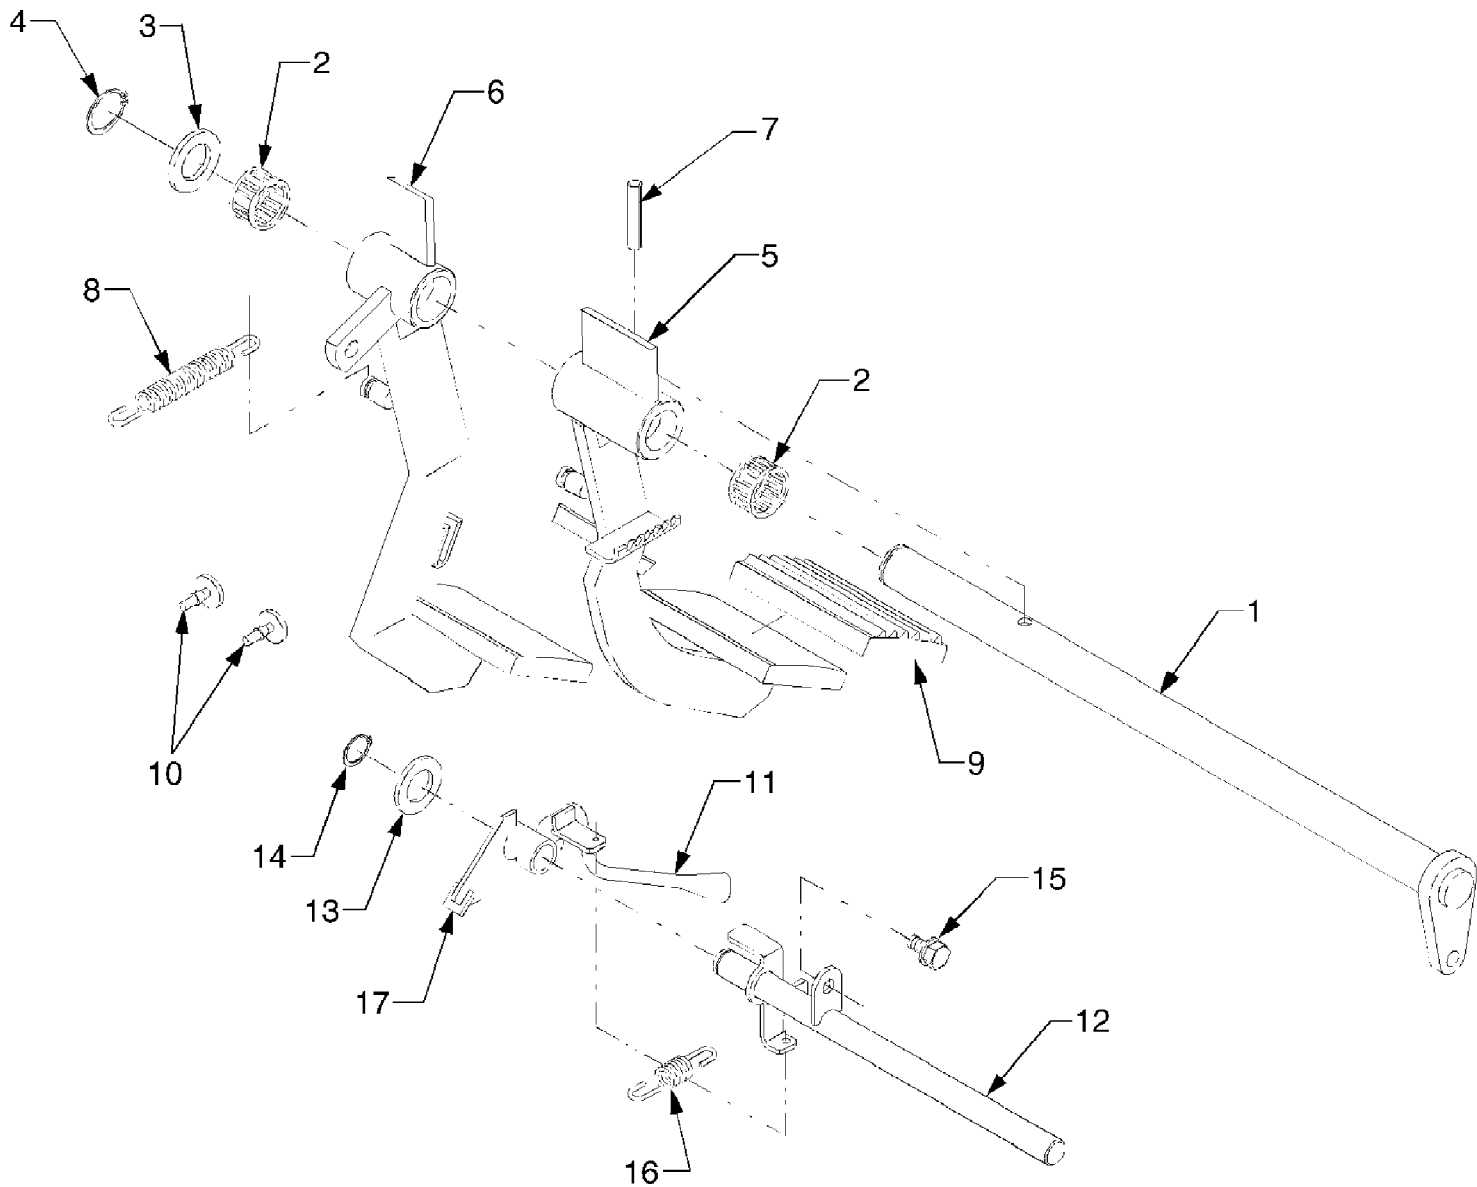


8354 Tractor
Brake Pedal Group

Page 24 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-55731	1		Shaft, Pedal
2	DD-08822-53017	2		Bearing, Needle
3	DD-84612-14450	1		Collar, Cam
4	DD-04612-00250	1		Cir-clip
5	DD-T2610-55715	1		Pedal, Brake (LH)
6	DD-T2610-55724	1		Pedal, Brake (RH)
7	DD-05411-00840	1		Pin, Spring
8	DD-T4520-26161	2		Spring, Brake
9	DD-T2670-55531	2		Cover, Pedal
10	DD-T4520-26931	2		Cushion, Pedal
11	DD-T4620-55912	1		Brake, Parking
12	DD-T4620-55922	1		Shaft, Parking Brake
13	DD-04011-50160	1		Washer, Plain
14	DD-04612-50160	1		Cir-clip
15	DD-01123-50820	1		Bolt
16	DD-57781-51211	1		Spring, Return
17	DD-31391-18561	1		Clip, Lever

 
8354 Tractor
Brake Rod Group

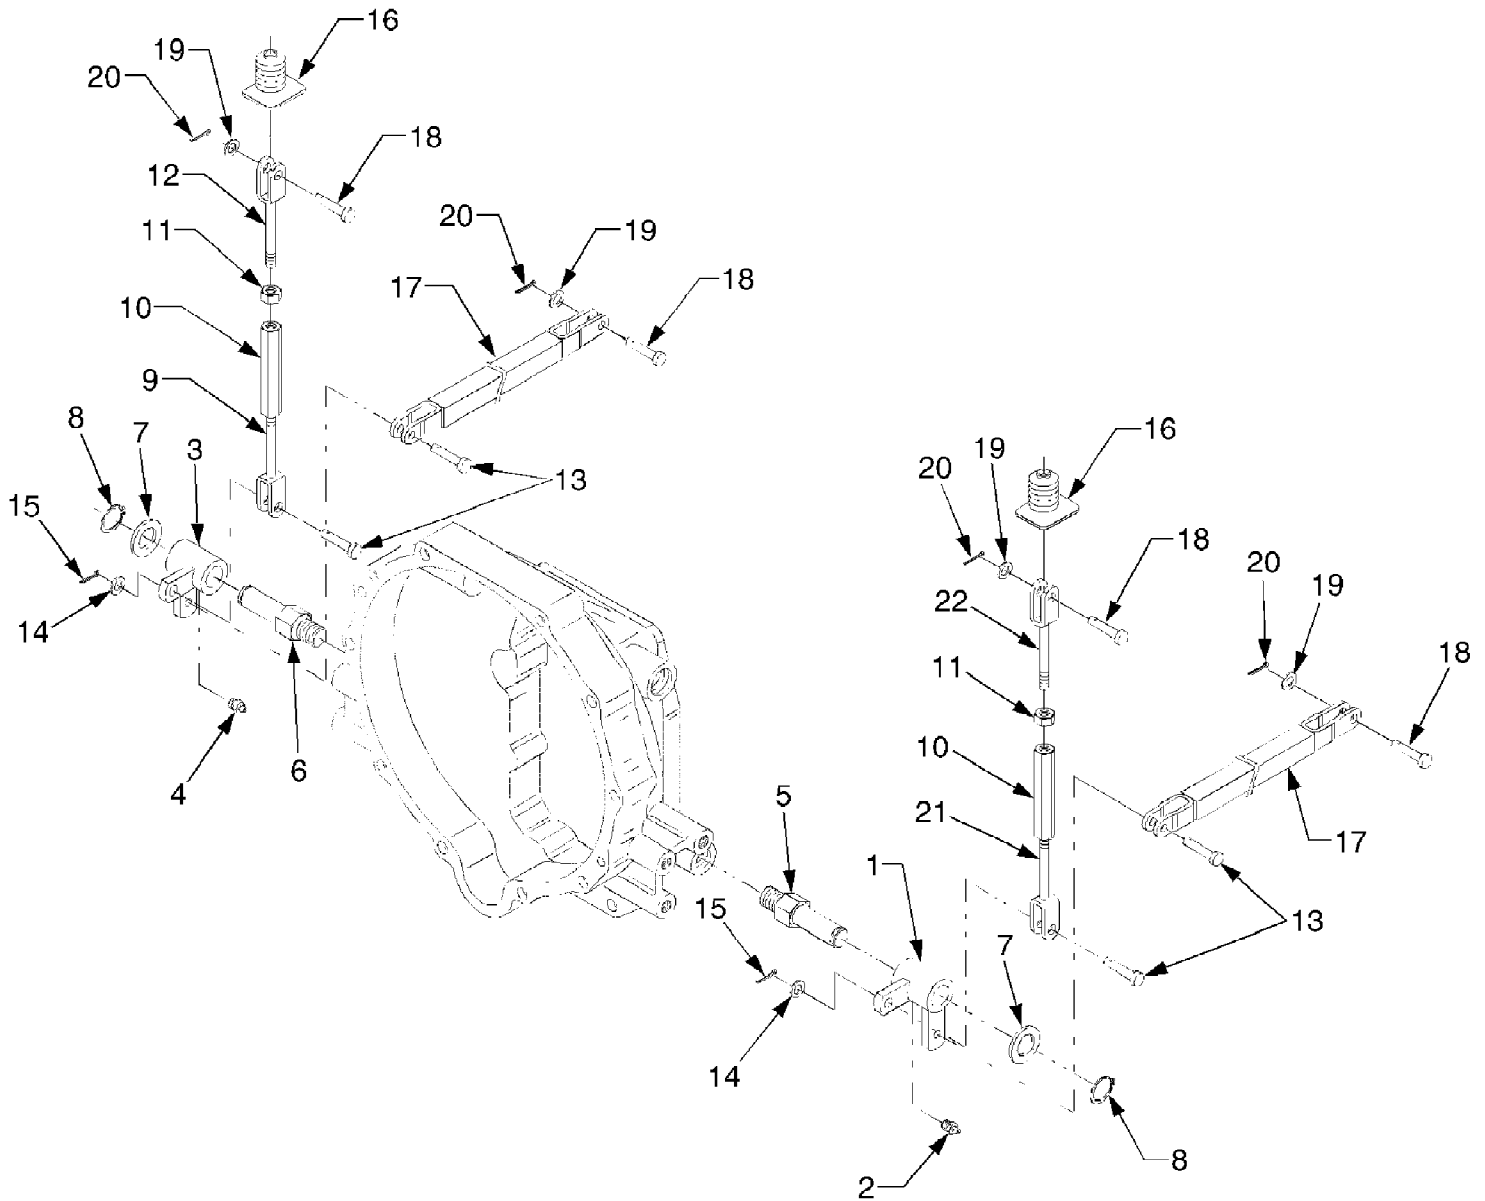

8354 Tractor
Brake Rod Group

Page 26 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-55781	1		Lever, Brake
2	DD-06611-15675	1		Nipple, Grease
3	DD-T2610-55792	1		Lever, Brake (RH)
4	DD-06611-15675	1		Nipple, Grease
5	DD-T2610-55802	1		Shaft, Brake (LH)
6	DD-T2610-55812	1		Shaft, Brake (RH)
7	DD-04011-50200	2		Washer, Plain
8	DD-04612-50200	2		Cir-clip
9	DD-T2610-55751	1		Rod 1, Brake
10	DD-32350-28984	2		Buckle, Turn
11	DD-02118-50100	2		Nut
12	DD-T4620-55762	1		Rod 2, Brake
13	DD-05122-51025	4		Pin, Joint
14	DD-04013-50100	4		Washer, Plain
15	DD-05511-50318	4		Pin, Split
16	DD-T4620-55821	2		Boot
17	DD-T2610-55772	2		Rod 3, Brake
18	DD-05122-50828	4		Pin, Joint
19	DD-04012-50080	4		Washer, Plain
20	DD-05511-50218	4		Pin, Split
21	DD-T4620-55662	1		Rod 1, Brake (LH)
22	DD-T2610-55671	1		Rod 2, Brake (LH)

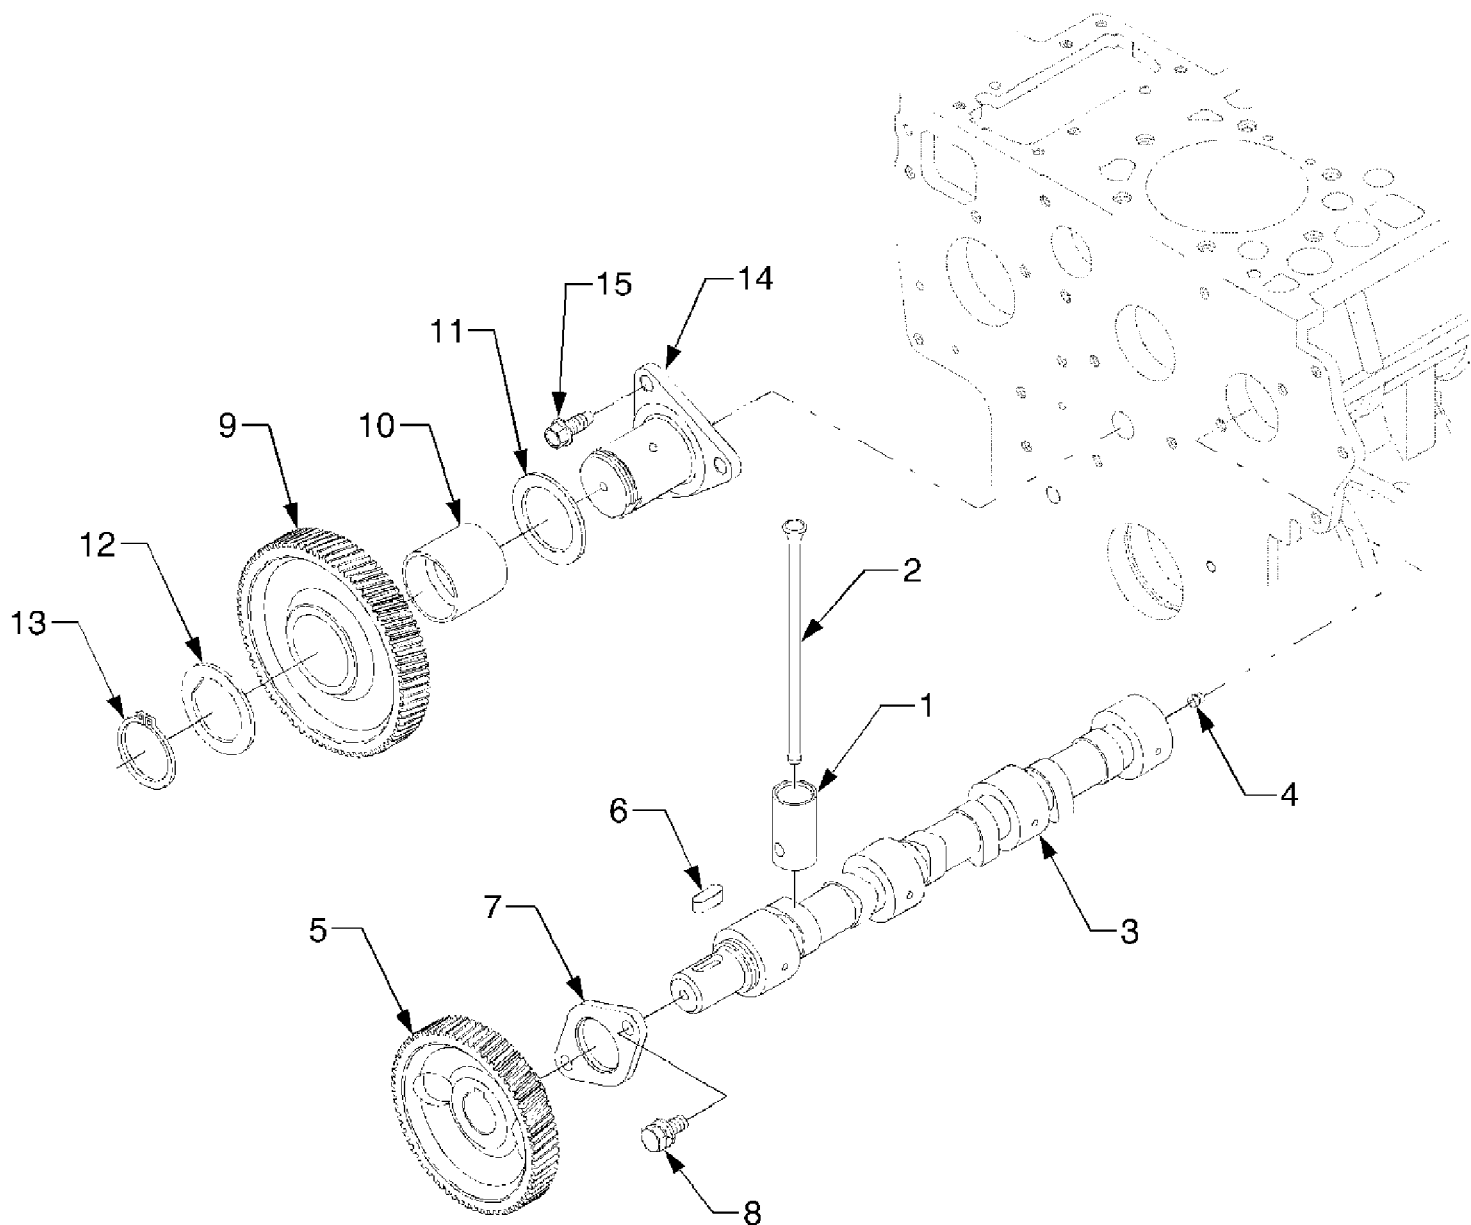 

8354 Tractor
Camshaft


Page 28 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E5500-15553	6		Tappet
2	DD-E6300-15113	6		Rod, Push
3	DD-E5600-A0032	1		Camshaft Ass'y Includes Ref. No. 4
4	DD-06350-00607	2		Plug
5	DD-15521-16511	1		Gear, Camshaft
6	DD-05712-00720	1		Key
7	DD-E5500-16272	1		Stopper, Camshaft
8	DD-01123-50818	2		Bolt
9	DD-E6300-24012	1		Idle Gear Ass'y Includes Ref. No. 10
10	DD-E6300-24281	1		Bush, Idle Gear
11	DD-E6300-24361	1		Collar 1
12	DD-E6300-24371	1		Collar 2
13	DD-E6300-24321	1		Cir-clip
14	DD-E6300-24251	1		Shaft, Idle Gear
15	DD-01654-50820	3		Bolt, Flange

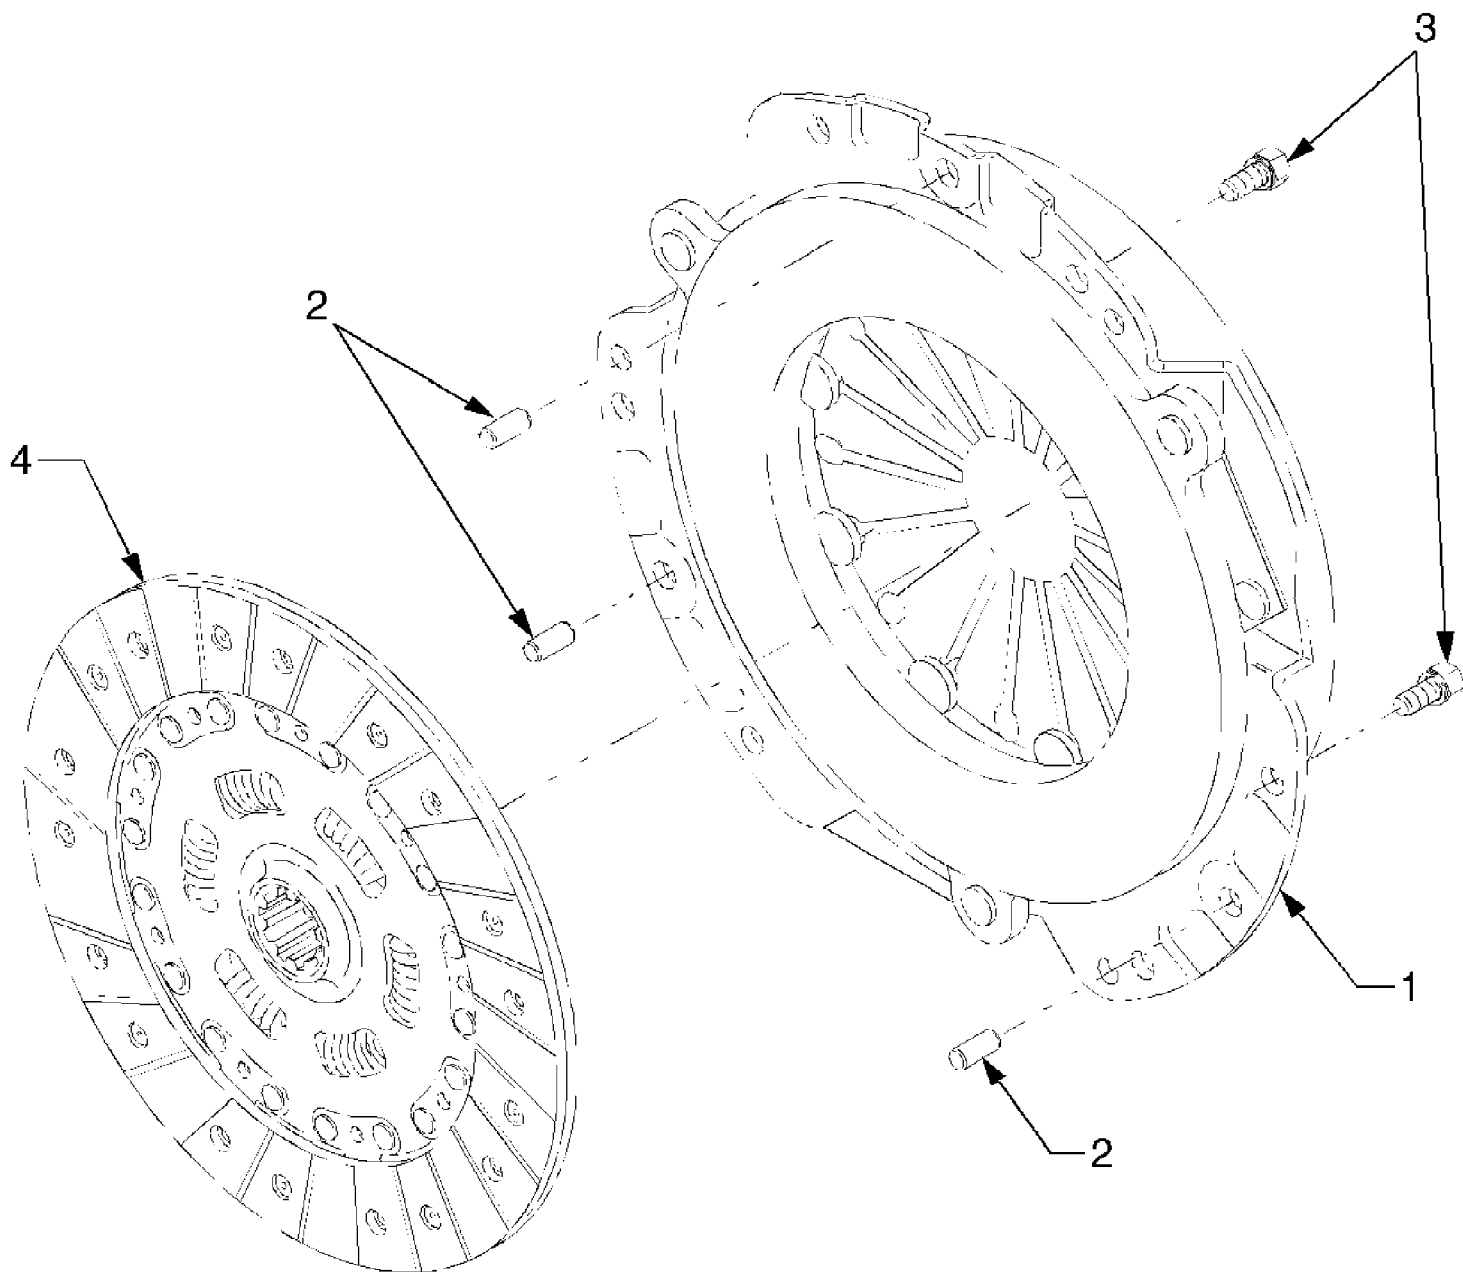 

8354 Tractor
Clutch Group

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2720-14501	1		Clutch Cover Ass'y
2	DD-05012-00822	3		Pin, Straight
3	DD-01123-50816	6		Bolt
4	DD-T2620-14302	1	/P	Clutch Disc Ass'y

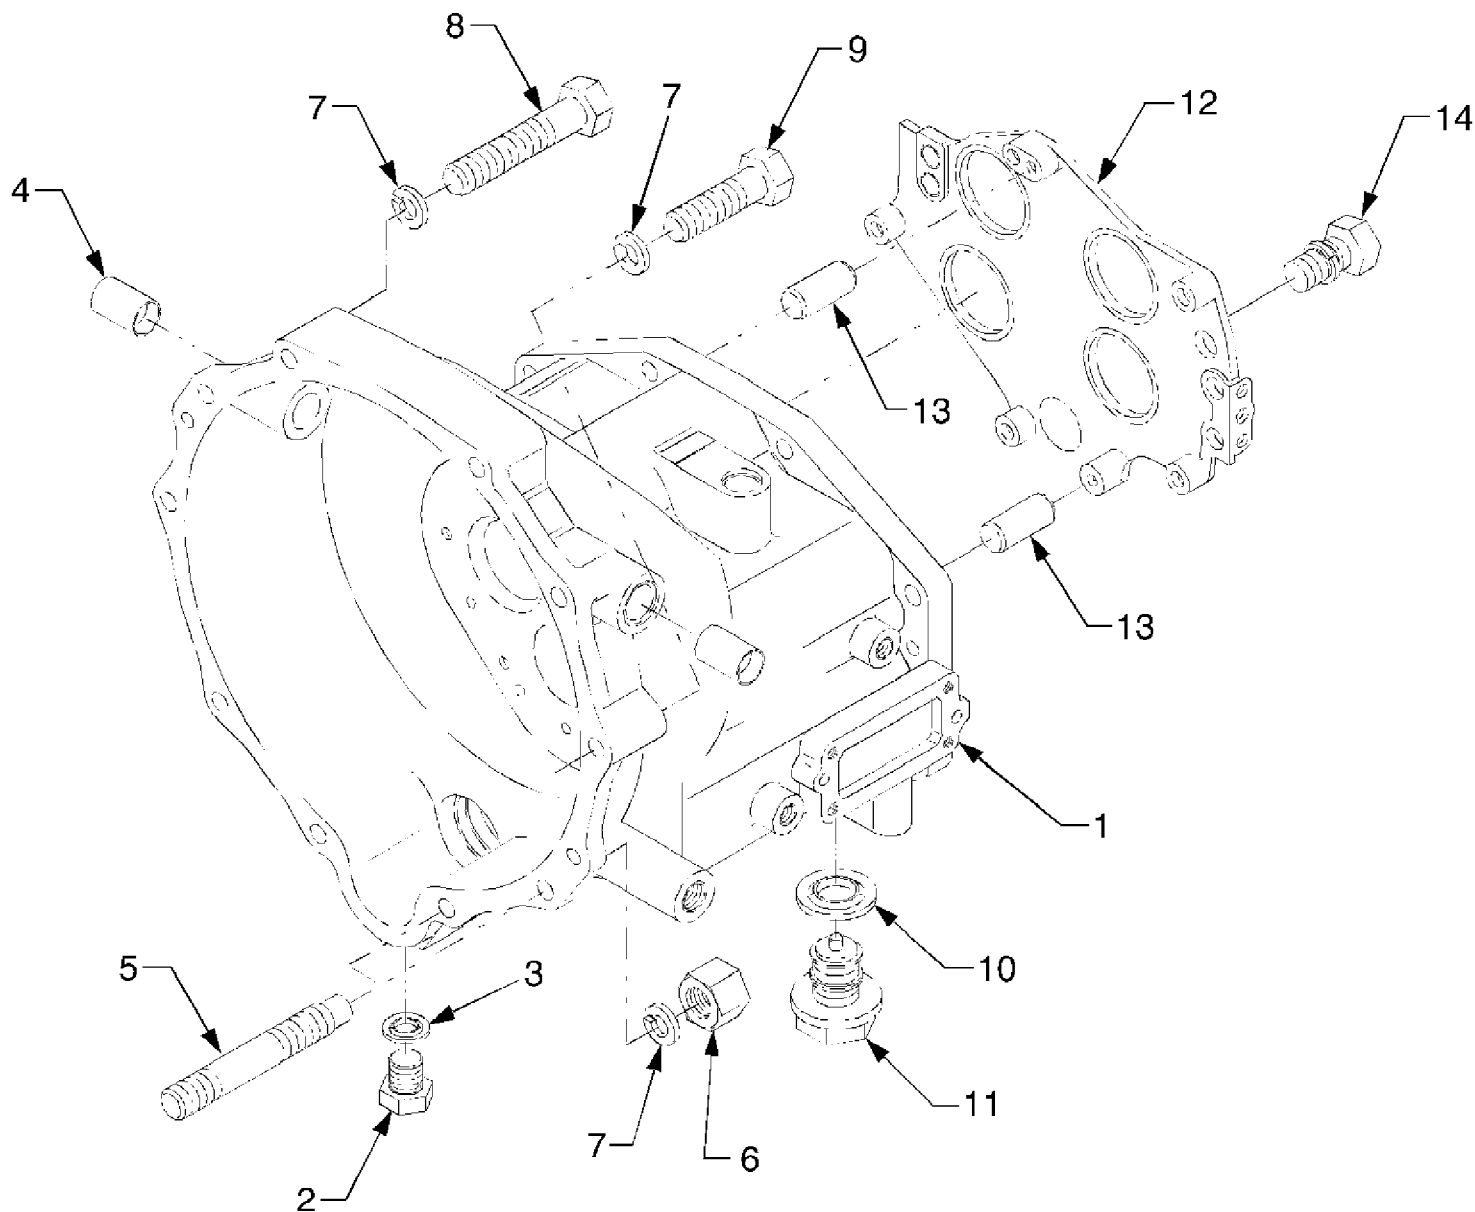 


8354 Tractor
Clutch Housing Group

Page 32 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-14114	1		Housing, Clutch
2	DD-06331-35010	1		Plug
3	DD-04717-01000	1		Washer, Seal
4	DD-T2305-14261	2		Bush
5	DD-01574-51265	4		Stud
6	DD-02176-50120	4		Nut
7	DD-04512-50120	10		Washer, Spring
8	DD-01173-51295	2		Bolt
9	DD-01176-51265	4		Bolt
10	DD-04717-02650	1		Washer, Seal
11	DD-T4260-14271	1		Plug, Drain
12	DD-T2615-21414	1		Cover, Bearing
13	DD-05012-00818	2		Pin, Straight
14	DD-01133-51035	5		Bolt

 
8354 Tractor
Clutch Lever

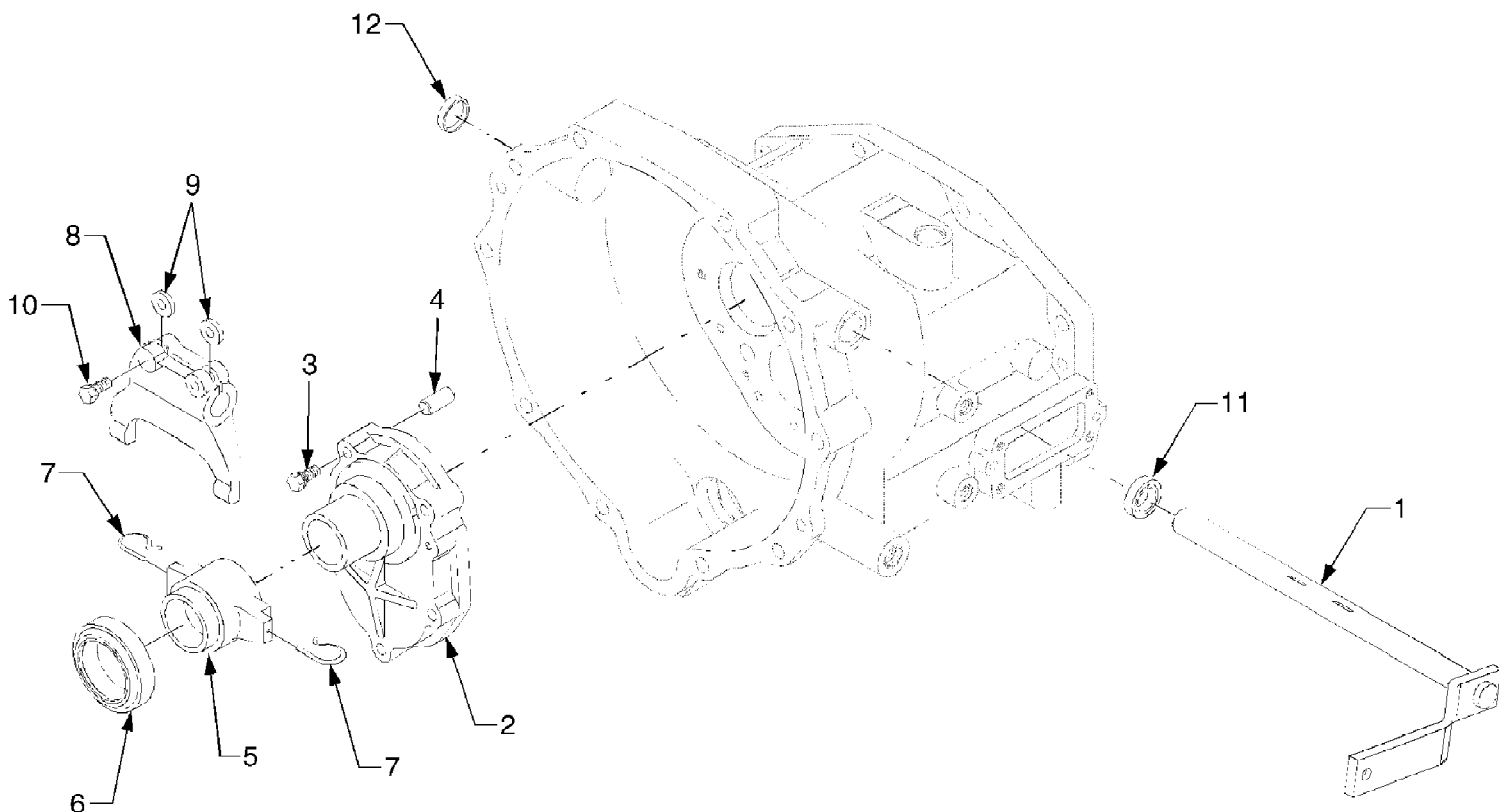

8354 Tractor
Clutch Lever

Page 34 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-14711	1		Lever, Main Clutch
2	DD-T2610-14751	1		Case, Propeller Shaft
3	DD-01123-50845	5		Bolt
4	DD-05012-00818	2		Pin, Straight
5	DD-T2610-14811	1		Hub, Clutch Release
6	DD-T2610-14831	1		Bearing, Release
7	DD-T2610-14852	2		Clamp, Fork
8	DD-T2610-14721	1		Fork, Clutch Release
9	DD-T2280-14781	2		Key, Fork
10	DD-01123-50825	2		Bolt
11	DD-09500-20328	1		Seal, Oil
12	DD-T4520-14872	1		Cap, Seal

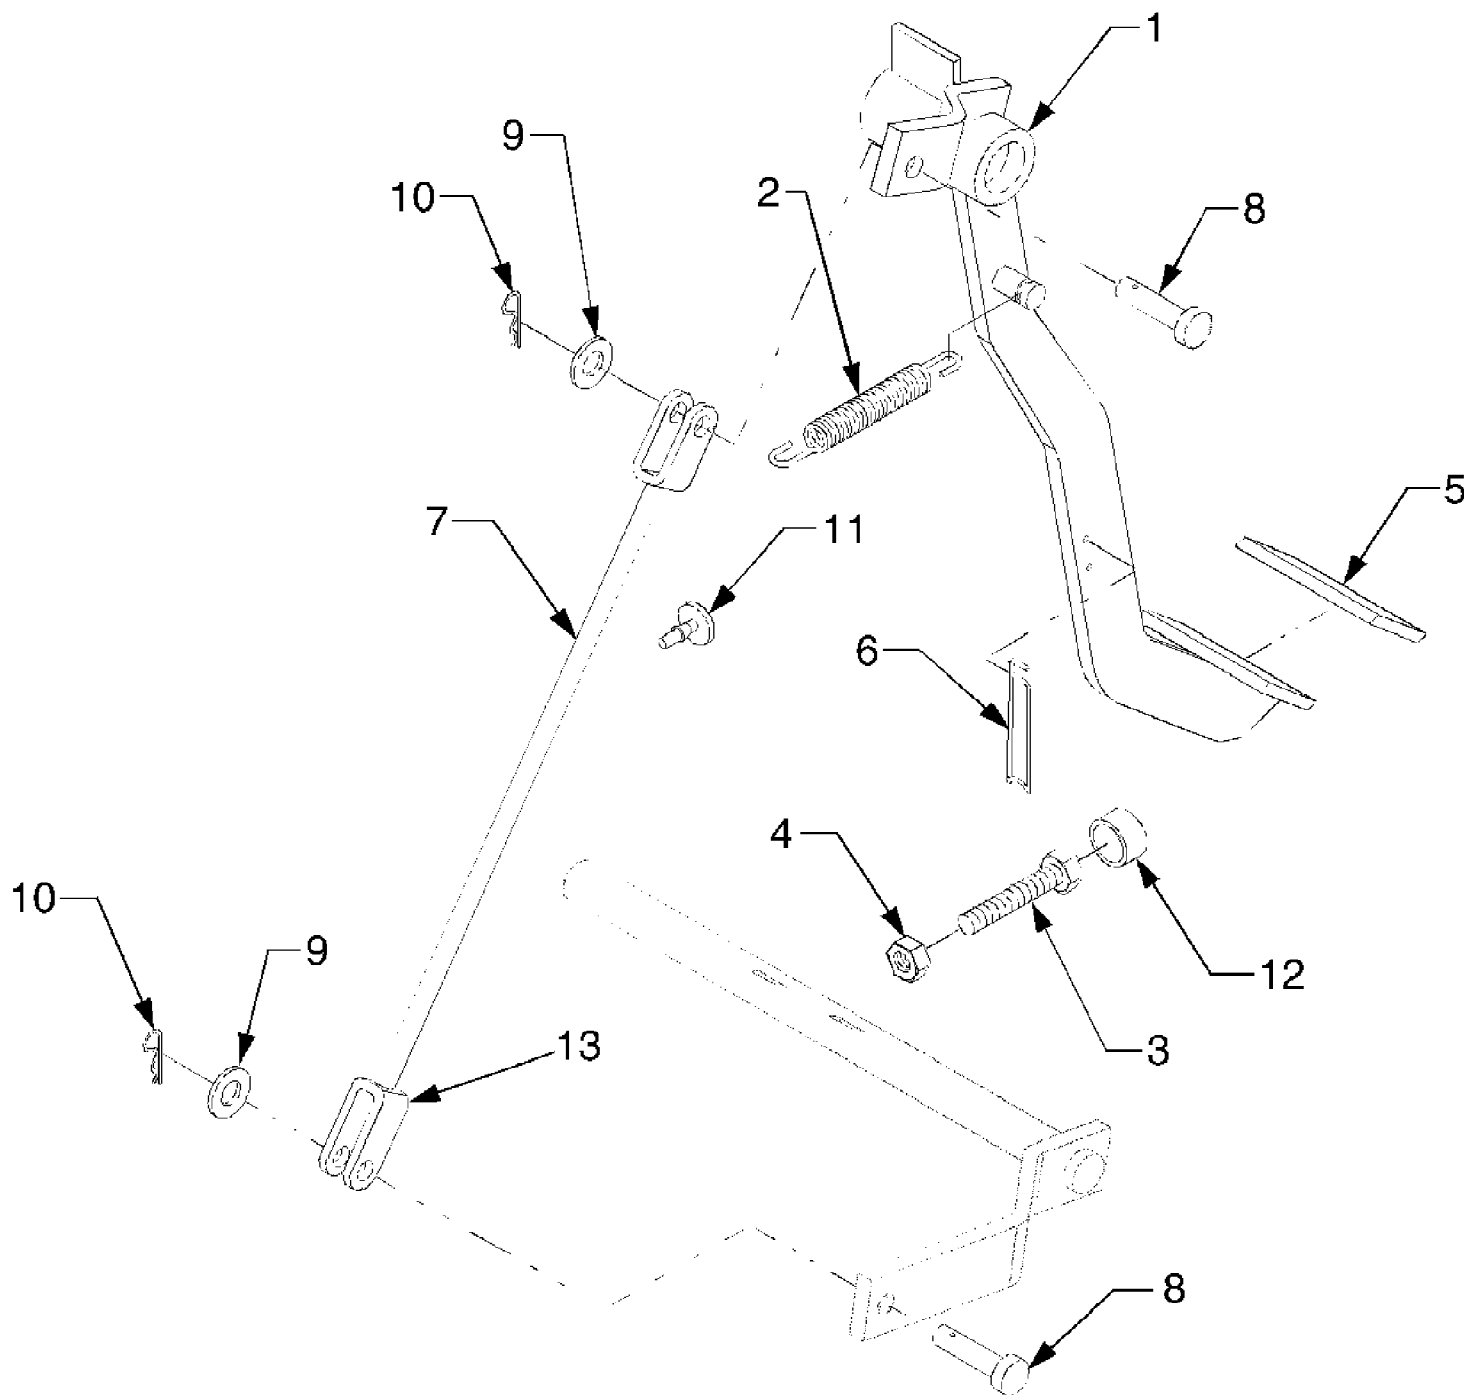 


8354 Tractor
Clutch Pedal Group

Page 36 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-55514	1		Pedal, Clutch
2	DD-T4520-26161	1		Spring, Brake
3	DD-01175-51050	1		Bolt
4	DD-02176-50100	1		Nut
5	DD-T2670-55531	1		Cover, Pedal
6	DD-T2610-55911	1		Spring
7	DD-T2610-55521	1		Rod, Clutch
8	DD-05122-51028	2		Pin, Joint
9	DD-04013-50100	2		Washer, Plain
10	DD-05515-51000	2		Pin, Snap
11	DD-T4520-26931	1		Cushion, Pedal
12	DD-T4620-55841	1		Cushion (Clutch)
13	DD-T2610-55521002	1		Bracket 2

 8354 Tractor
Counter Shaft Group

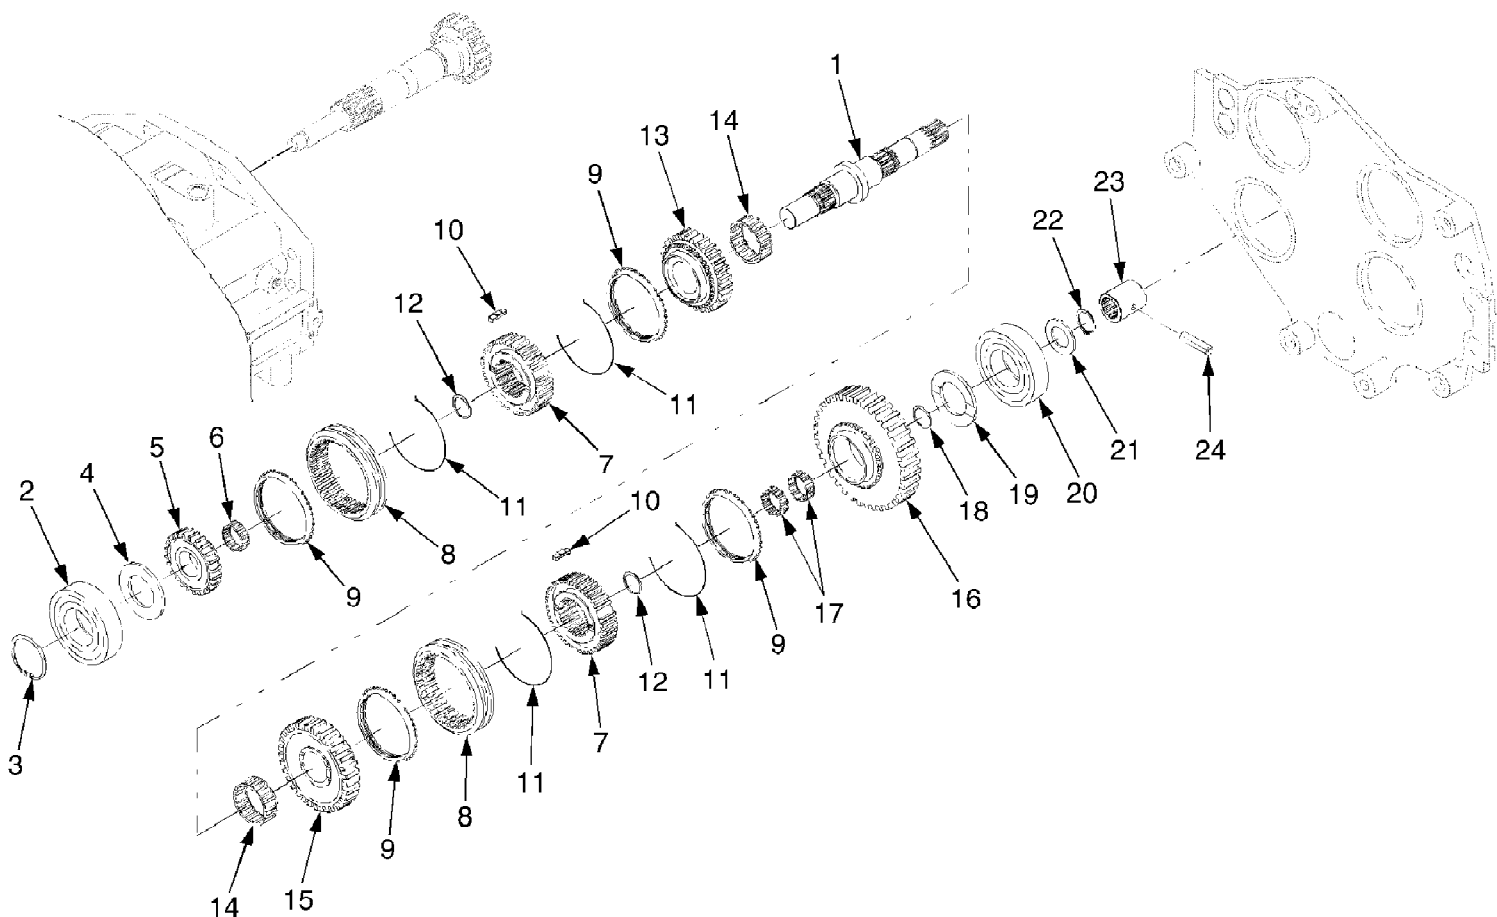


8354 Tractor
Counter Shaft Group

Page 38 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-21611	1		Shaft, Counter
2	DD-T2610-21621	1		Bearing, Ball
3	DD-04611-00250	1		Cir-clip
4	DD-T2305-21761	1		Collar, Thrust
5	DD-T2610-21713	1		Gear, 24
6	DD-08822-53020	1		Bearing, Needle
7	DD-T2610-21772	2		Hub, Synchro
8	DD-T2610-21753	2	S	Shifter
9	DD-T4240-21792	4		Ring, Synchronize
10	DD-T2610-21812	6		Key, Synchronize
11	DD-38360-21781	4		Spring
12	DD-T2610-14541	2		Cir-clip
13	DD-T2610-21722	1		Gear, 29
14	DD-08823-23727	2		Bearing, Needle
15	DD-T2610-21731	1		Gear, 33
16	DD-T2610-21742	1		Gear, 36
17	DD-08822-53013	2		Bearing, Needle
18	DD-37150-21791	1		Cir-clip
19	DD-37150-21761	1		Collar, Thrust
20	DD-08101-06305	1		Bearing, Ball
21	DD-34150-21561	1		Collar
22	DD-04612-00250	1		Cir-clip
23	DD-37805-44521	1		Coupling
24	DD-05411-00635	1		Pin, Spring

 
8354 Tractor
Crankshaft And Piston

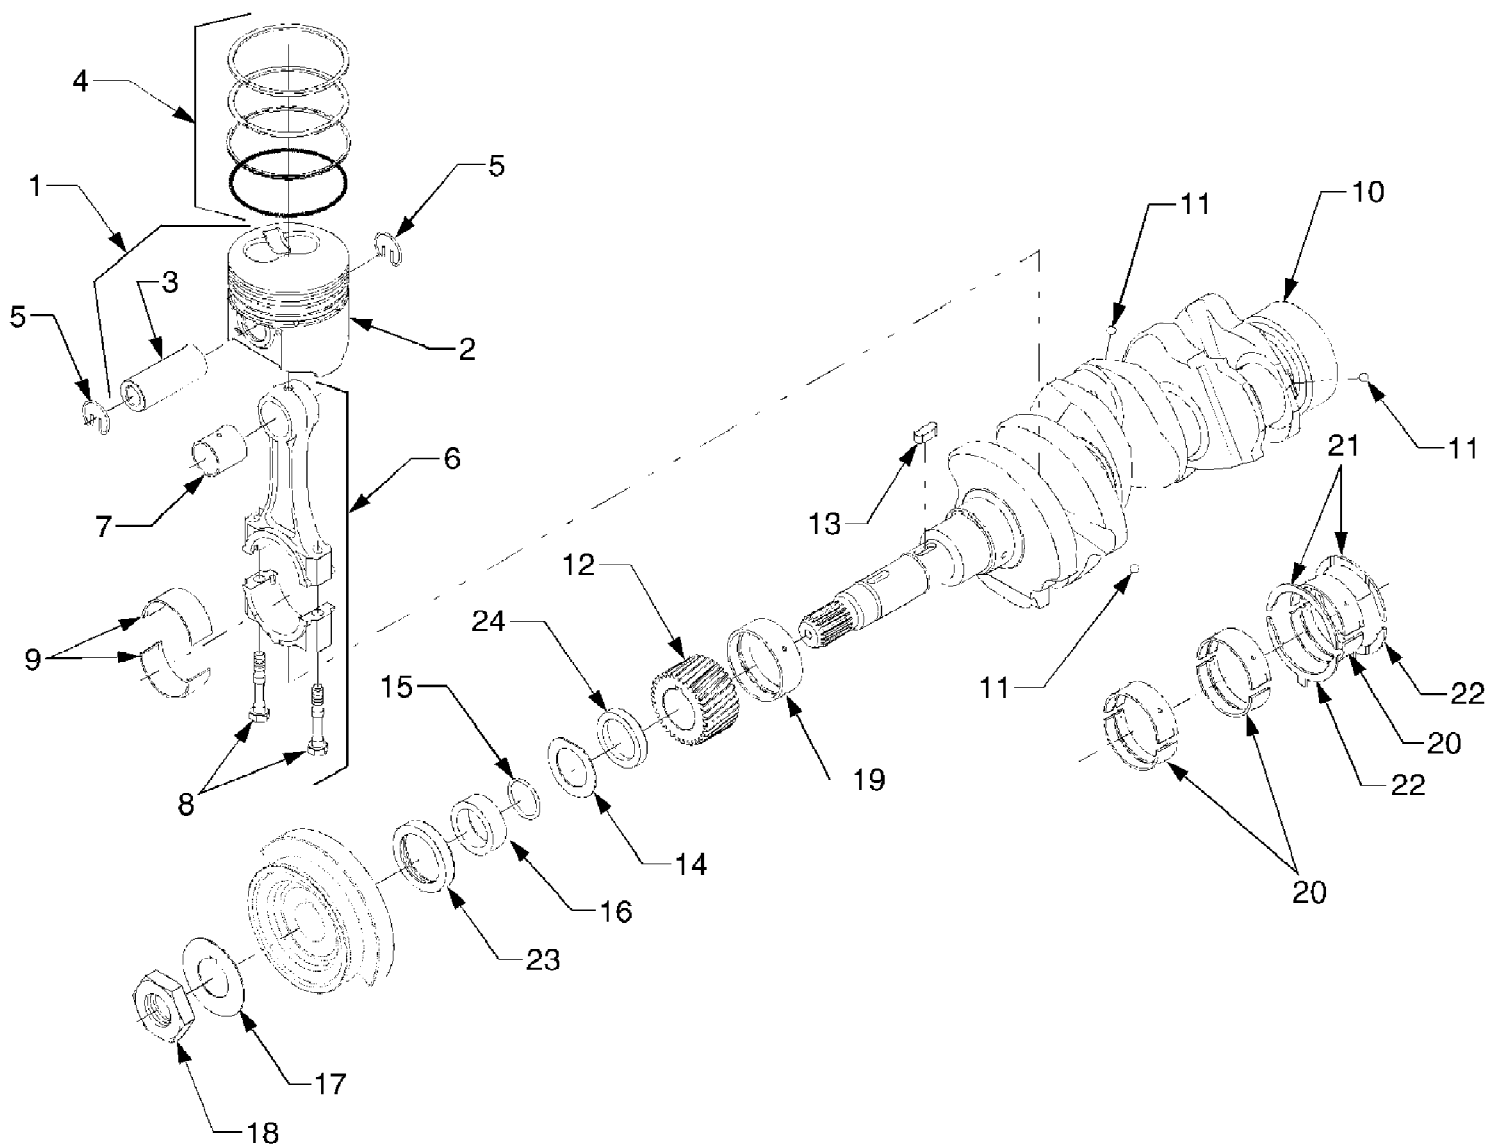

8354 Tractor
Crankshaft And Piston

Page 40 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6301-21016	3		Piston Ass'y Includes Ref. Nos. 2 & 3
2	DD-E6301-21114	3		Piston
3	DD-E6300-21313	3		Pin, Piston
4	DD-E6301-21053	3		Piston Ring Ass'y
5	DD-E6300-21332	6		Cir-clip
6	DD-E6300-22025	3		Connecting Rod Ass'y Includes Ref. Nos. 7 and 8
7	DD-E6300-21353	3		Bush, Piston Pin
8	DD-E5500-22142	6		Bolt, Connecting Rod
9	DD-E6300-22312	6		Metal, Crank Pin
10	DD-E5600-A0094	1		Crank Shaft Ass'y Includes Ref. No. 11
11	DD-07715-00401	3		Ball
12	DD-E6200-24112	1		Gear, Crankshaft
13	DD-05712-00720	1		Key
14	DD-15471-23311	1		Slinger, Oil
15	DD-04811-10300	1		O-ring
16	DD-E6510-23251	1		Collar, Crankshaft
17	DD-15221-23381	1		Washer, Crankshaft
18	DD-15221-23361	1		Nut, Crankshaft
19	DD-E6200-23472	1		Metal, Crankshaft 1
20	DD-E6200-23482	6		Metal, Crankshaft 2
21	DD-15521-23531	2		Metal, Side 1
22	DD-19202-23541	2		Metal, Side 2
23	DD-E5500-11302	1		Seal, Oil
24	DD-E5800-24132	1		Collar

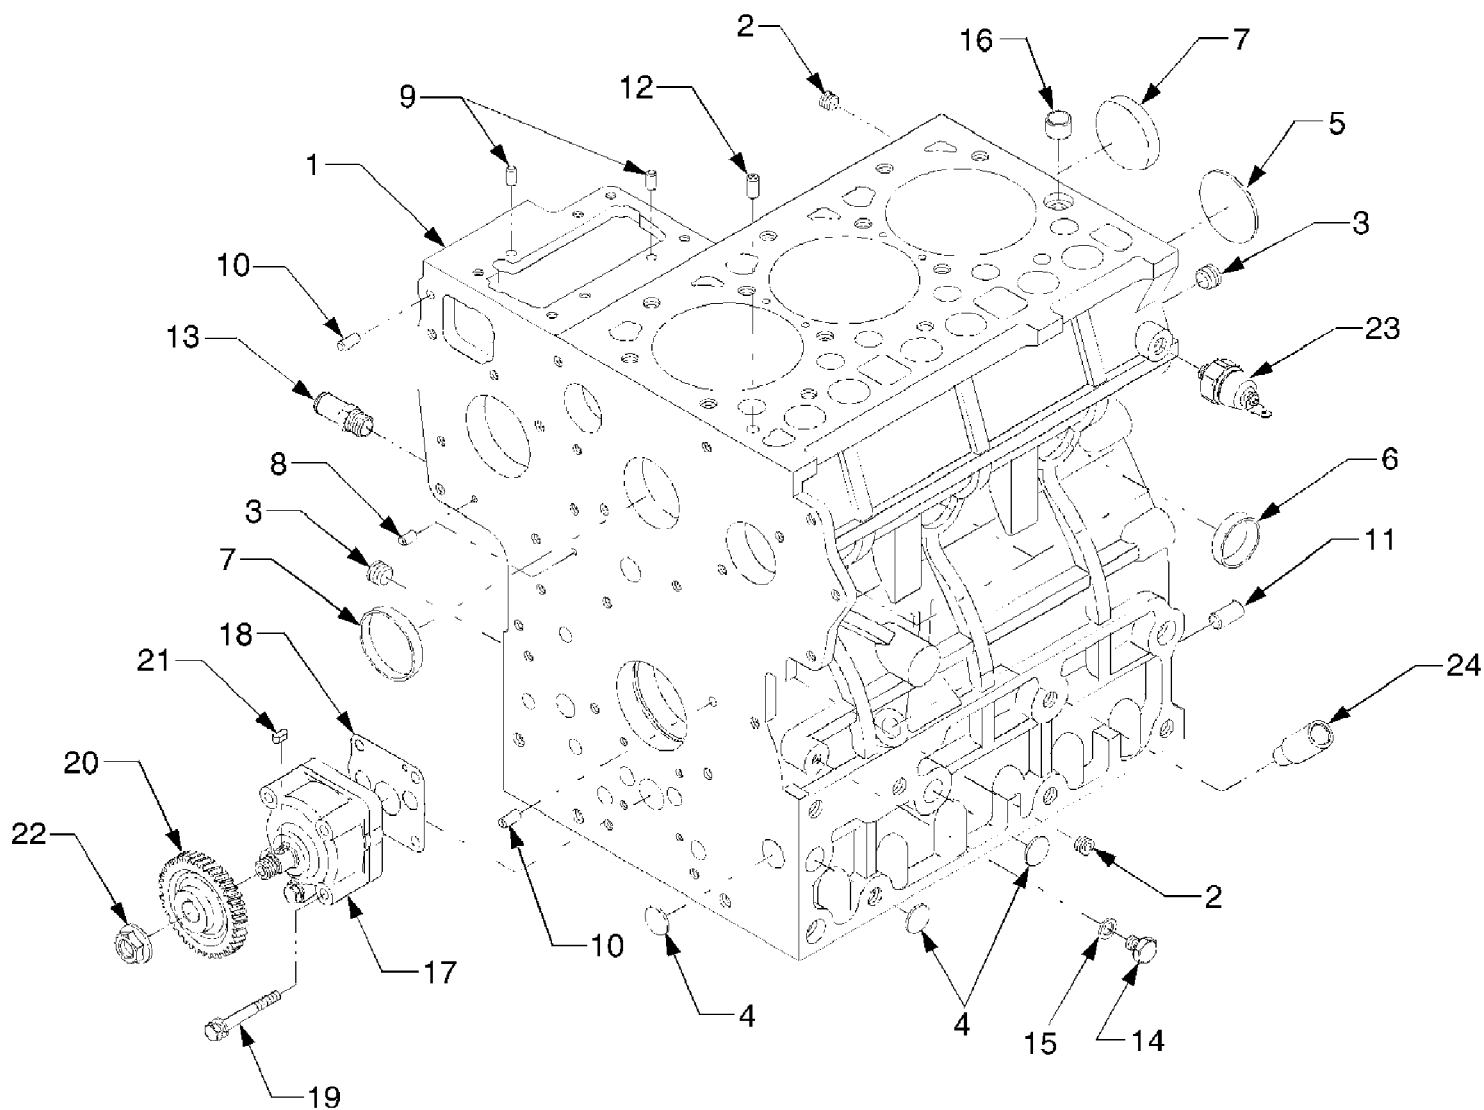 

8354 Tractor
Cylinder Block

Page 42 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E5600-A0016	1		Cylinder Block Ass'y Includes Ref Nos. 4 thru 7
2	DD-15521-96022	5		Plug
3	DD-15521-96032	2		Plug
4	DD-06311-75018	3		Plug
5	DD-06311-75045	1		Plug
6	DD-15221-03383	5		Cap, Sealing
7	DD-15221-03392	2		Cap, Sealing
8	DD-05012-00408	2		Pin, Straight
9	DD-05012-00609	2		Pin, Straight
10	DD-05012-00612	2		Pin, Straight
11	DD-05012-01018	1		Pin, Straight
12	DD-15221-33651	1		Pin, Pipe
13	DD-E5500-73342	1		Pipe, Return
14	DD-15221-33611	1		Plug
15	DD-15021-33661	1		Gasket
16	DD-E6301-33812	1		Pin, Pipe
17	DD-E6200-35012	1		Oil Pump Ass'y
18	DD-E5500-35152	1		Gasket, Oil Pump
19	DD-01023-50650	4		Bolt
20	DD-19202-35661	1		Gear, Oil Pump Drive
21	DD-05712-00410	1		Key, Feather
22	DD-E6300-35681	1		Nut, Flange
23	DD-E5500-39013	1		Switch, Oil
24	DD-E5752-35691	1		Guide, Oil Gauge

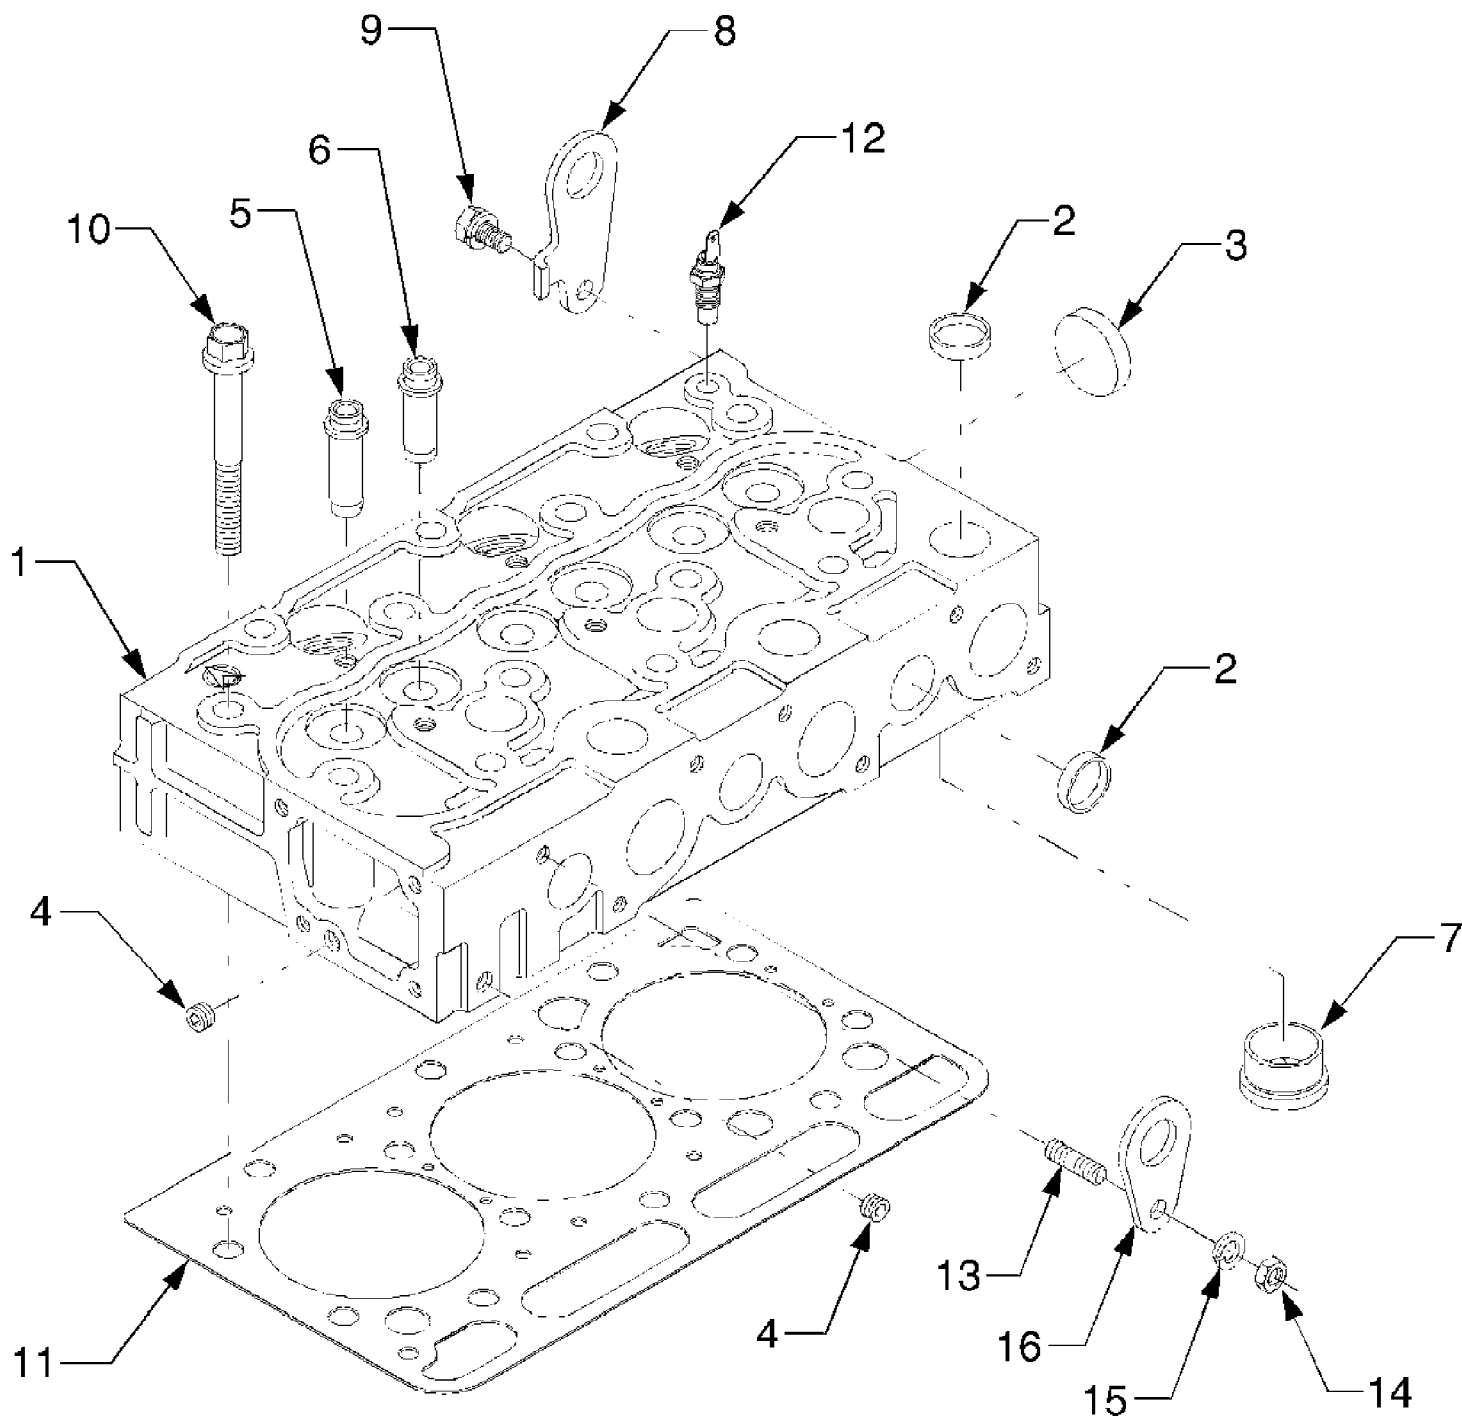 


8354 Tractor
Cylinder Head

Page 44 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E5600-03048	1		Cylinder Head Ass'y Includes Ref. Nos. 2 thru 6
2	DD-15221-03373	9		Cap, Sealing
3	DD-15221-03493	1		Cap, Sealing
4	DD-15521-96022	2		Plug
5	DD-E6301-13581	3		Guide, Inlet Valve
6	DD-E6301-13561	3		Guide, Outlet Valve
7	DD-E6301-03148	3		Plug, Hot
8	DD-E6305-01751	1		Hook, Engine
9	DD-01123-50816	1		Bolt
10	DD-E6300-03453	14		Bolt, Cylinder Head
11	DD-E5600-03315	1		Gasket, Cylinder Head
12	DD-E5800-32832	1		Switch, Thermostat
13	DD-01513-50822	1		Stud
14	DD-02156-50080	1		Nut
15	DD-04512-50080	1		Washer, Spring
16	DD-15221-01751	1		Hook, Engine

 S.N. 3185-01331 & BELOW

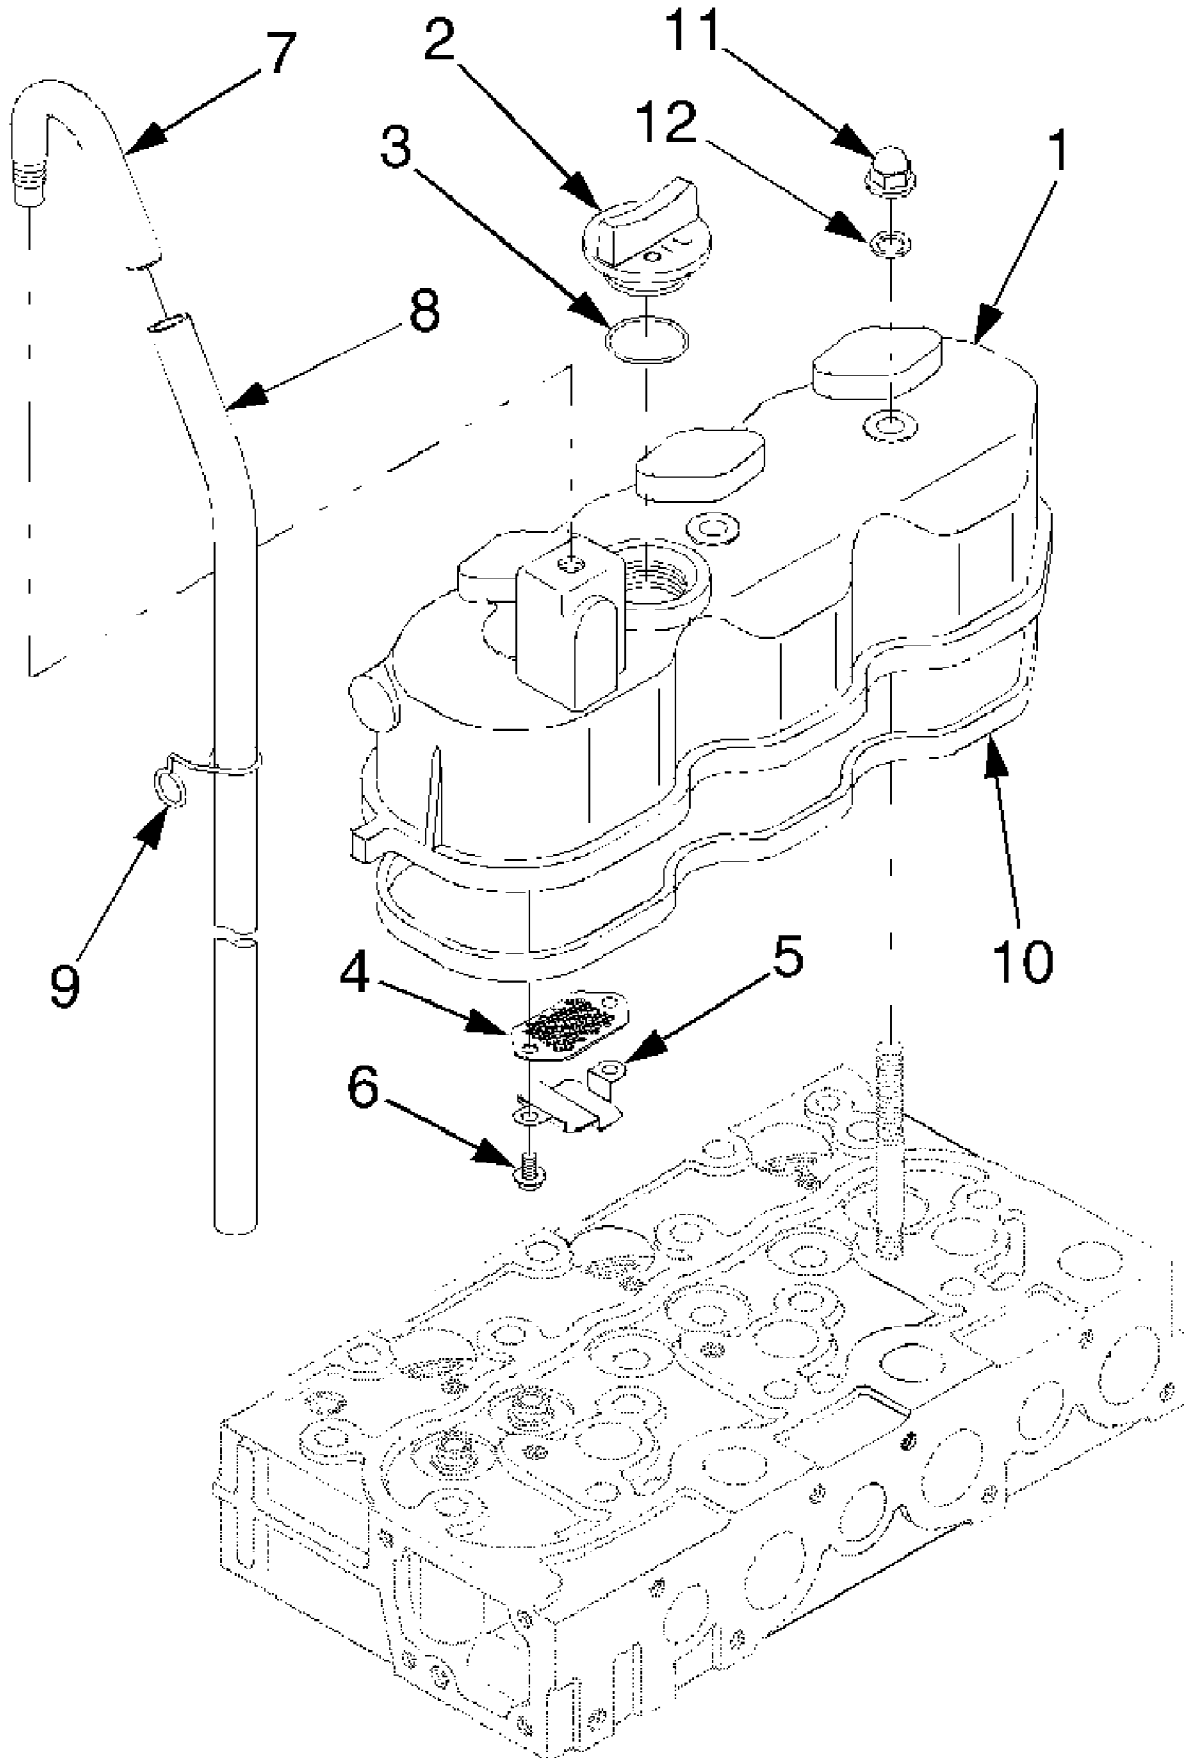


8354 Tractor
Cylinder Head Cover S.N. 3185-01331 & Below

Page 46 of 202

Ref #	Part Number	Qty	S/P/F	Description
	DD-E5600-A0022	1		Cover Head Ass'y Includes Ref. Nos. 1 thru 7 & 10
1	DD-E5800-14514	1		Cover, Cylinder Head
2	DD-E5500-33142	1		Plug, Oil Filler
3	DD-04811-50300	1		O-ring
4	DD-15521-05141	1		Plate, Element 1
5	DD-15521-05371	1		Shield, Breather Oil
6	DD-15521-93311	2		Screw
7	DD-E5205-05552	1		Joint, Breather Pipe
8	DD-15521-05511	1		Pipe, Breather
9	DD-15341-05591	1		Clamp, Pipe
10	DD-E5500-14523	1		Gasket, Head Cover
11	DD-E6301-92332	3		Nut, Cap
12	DD-E6301-33661	3		Gasket

 
S.N. 3185-01332 & ABOVE

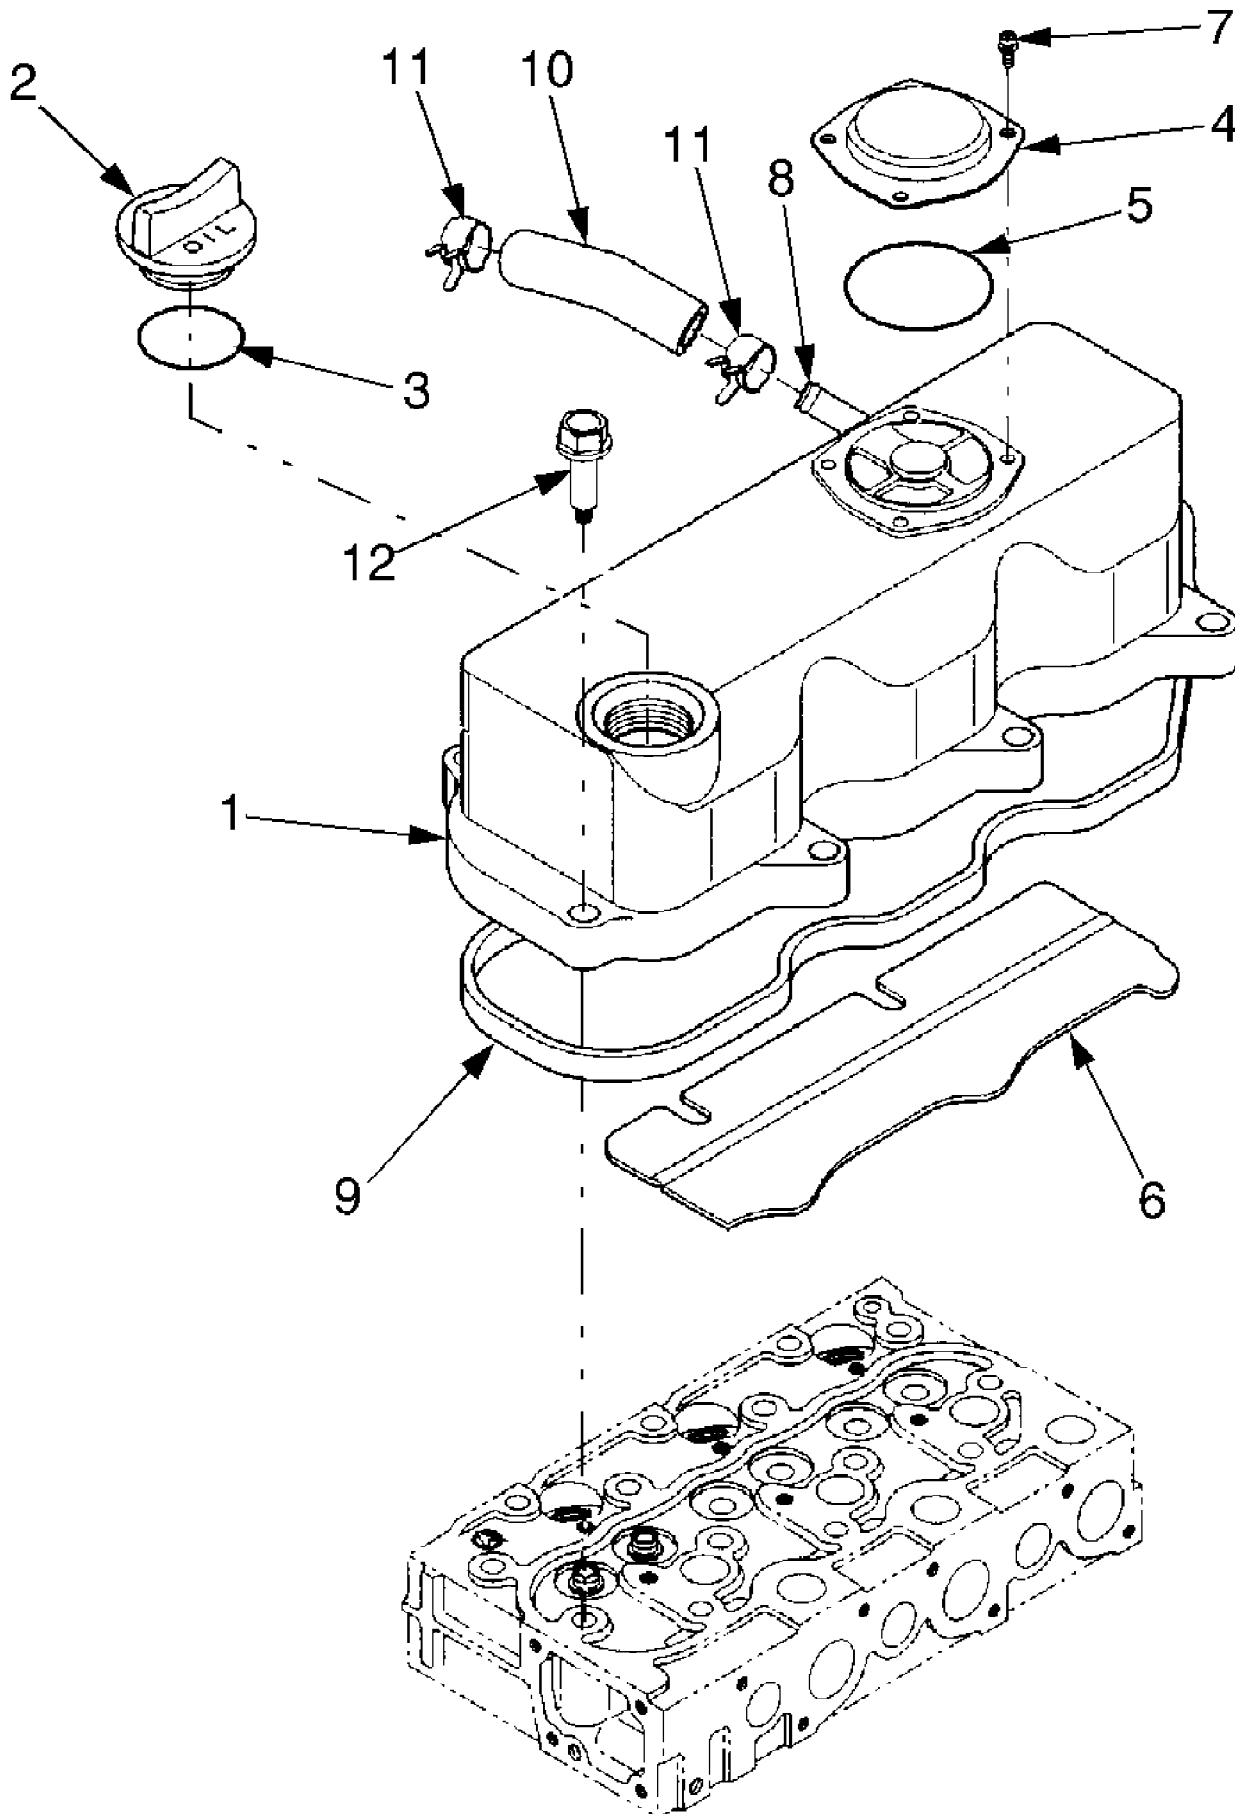

8354 Tractor
Cylinder Head Cover S.N. 3185-01332 & Above

Ref #	Part Number	Qty	S/P/F	Description
	DD-E5850-14502	1		Cover Head Ass'y Includes Ref. Nos. 1 thru 9
1	DD-E5850-14512	1		Cover, Cylinder Head
2	DD-E5500-33142	1		Plug, Oil Filler
3	DD-04811-50300	1		O-Ring
4	DD-E6510-14532	1		Cover, Valve
5	DD-E6510-14671	1		O-Ring
6	DD-E5850-14561	1		Oil Protector
7	DD-03024-50510	4		Screw
8	DD-E6510-05551	1		Connector, Airbreather
9	DD-E5850-14521	1		Gasket, Head Cover
10	DD-E5850-05511	1		Pipe, Breather
11	DD-09318-88180	2		Clamp, Hose
12	DD-E6510-33661	3		Gasket

 
8354 Tractor
Differential Lock Fork Group

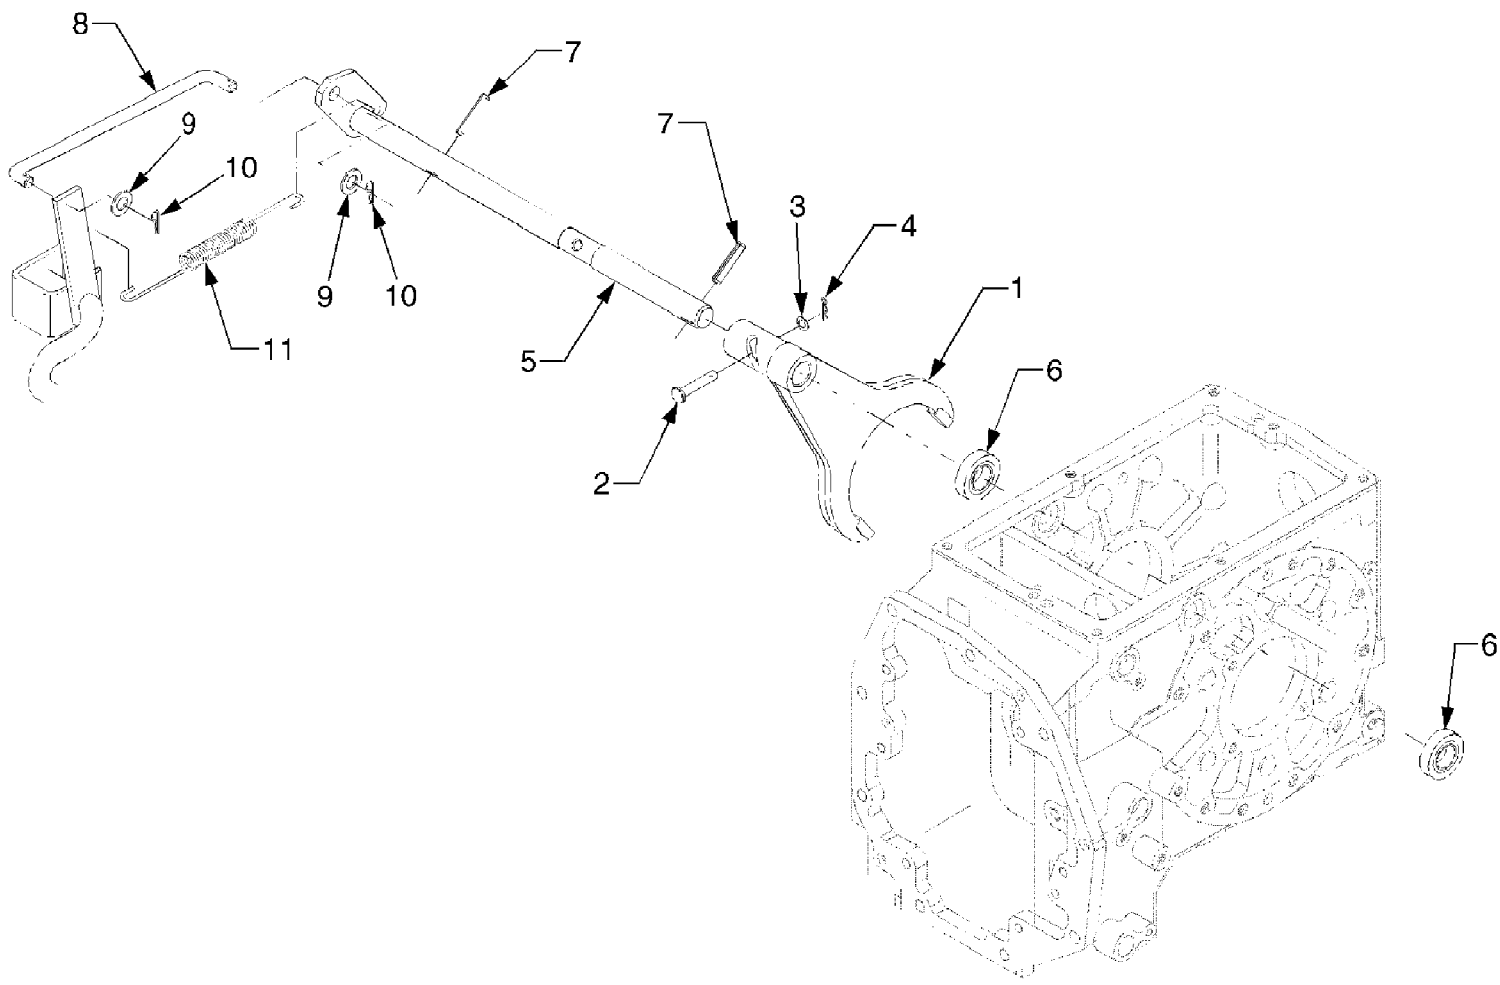

8354 Tractor
Differential Lock Fork Group

Page 50 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4240-26632	1		Fork, Differential Lock
2	DD-31355-26621	1		Pin
3	DD-04013-50060	1	/P	Washer, Plain
4	DD-52300-34111	1		Pin, Snap
5	DD-T2610-26682	1		Shaft, Differential Lock
6	DD-09500-16287	2		Seal, Oil
7	DD-05411-00635	2		Pin, Spring
8	DD-T2610-65013	1		Rod, Differential Lock
9	DD-04011-50100	2		Washer, Plain
10	DD-05525-51000	2		Pin, Snap
11	DD-T2305-26641	1		Spring

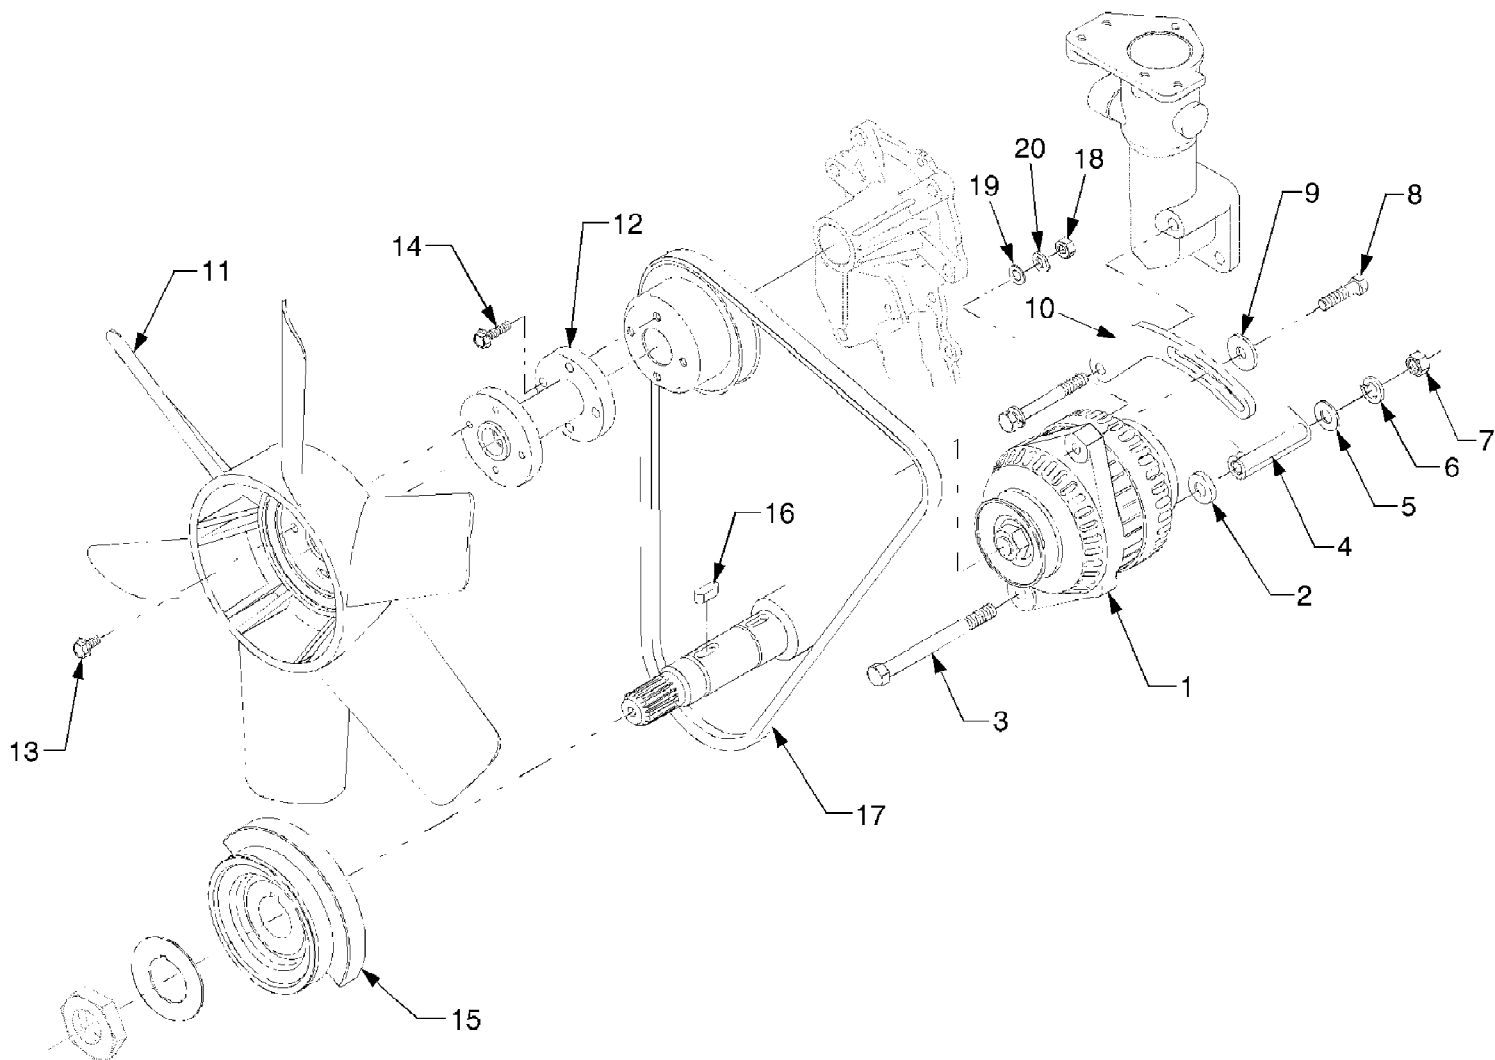 

8354 Tractor
Dynamo And Cooling Fan


Page 52 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6306-64012	1		Alternator Ass'y
2	DD-E5800-64102	1		Spacer
3	DD-01153-50804	1		Bolt
4	DD-E5620-64101	1		Spacer
5	DD-04015-50080	1		Washer, Plain
6	DD-04512-50080	1		Washer, Spring
7	DD-02114-50080	1		Nut
8	DD-01123-50832	1		Bolt
9	DD-04015-50080	1		Washer, Plain
10	DD-E5800-64422	1		Stay, Alternator
11	DD-E6500-74111	1		Fan, Cooling
12	DD-E5800-74154	1		Collar, Fan
13	DD-01754-50612	4		Bolt, Flange
14	DD-01754-50622	4		Bolt, Flange
15	DD-E5620-74285	1		Pulley, Fan Drive
16	DD-05712-00720	1		Key
17	DD-E5800-72531	1		Belt, Fan
18	DD-02054-50050	1		Nut
19	DD-04012-50050	1		Washer, Plain
20	DD-04512-50050	1		Washer, Spring

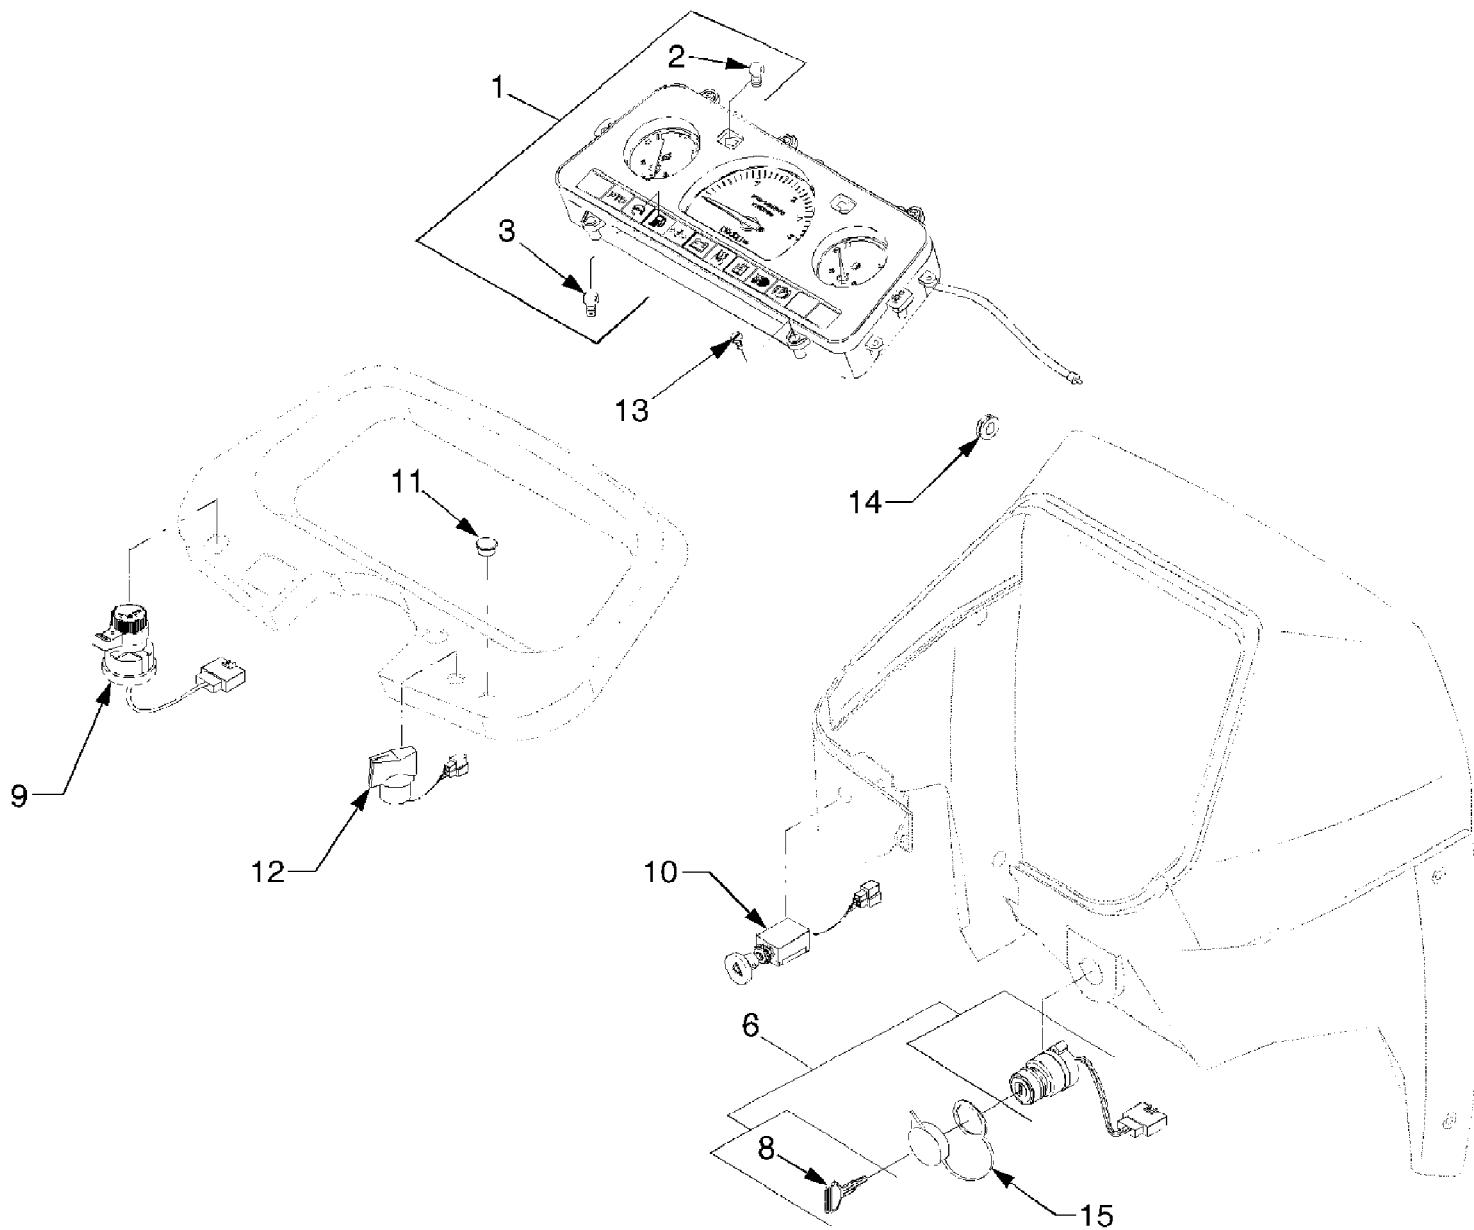 


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4624-69022	1		Instrument Meter Ass'y Includes Ref. Nos. 2 & 3
2	DD-T4620-69301	5		Bulb
3	DD-T4620-69311	13		Bulb
6	DD-T4520-75174	1		Starter Switch Ass'y Includes Ref. No. 8
8	DD-T2616-75191	2		Key
9	DD-T4620-69024	1		Combination Switch Ass'y
10	DD-T4520-76552	1		Hazard Switch Ass'y
11	DD-T4625-29291	1		Plug
12	DD-T4810-67722	1		Switch, PTO
13	DD-38240-18831	10		Screw
14	DD-31355-29491	1		Grommet
15	DD-T4837-77772	1		Cover, Starter Switch

 8354 Tractor
Electrical System 2

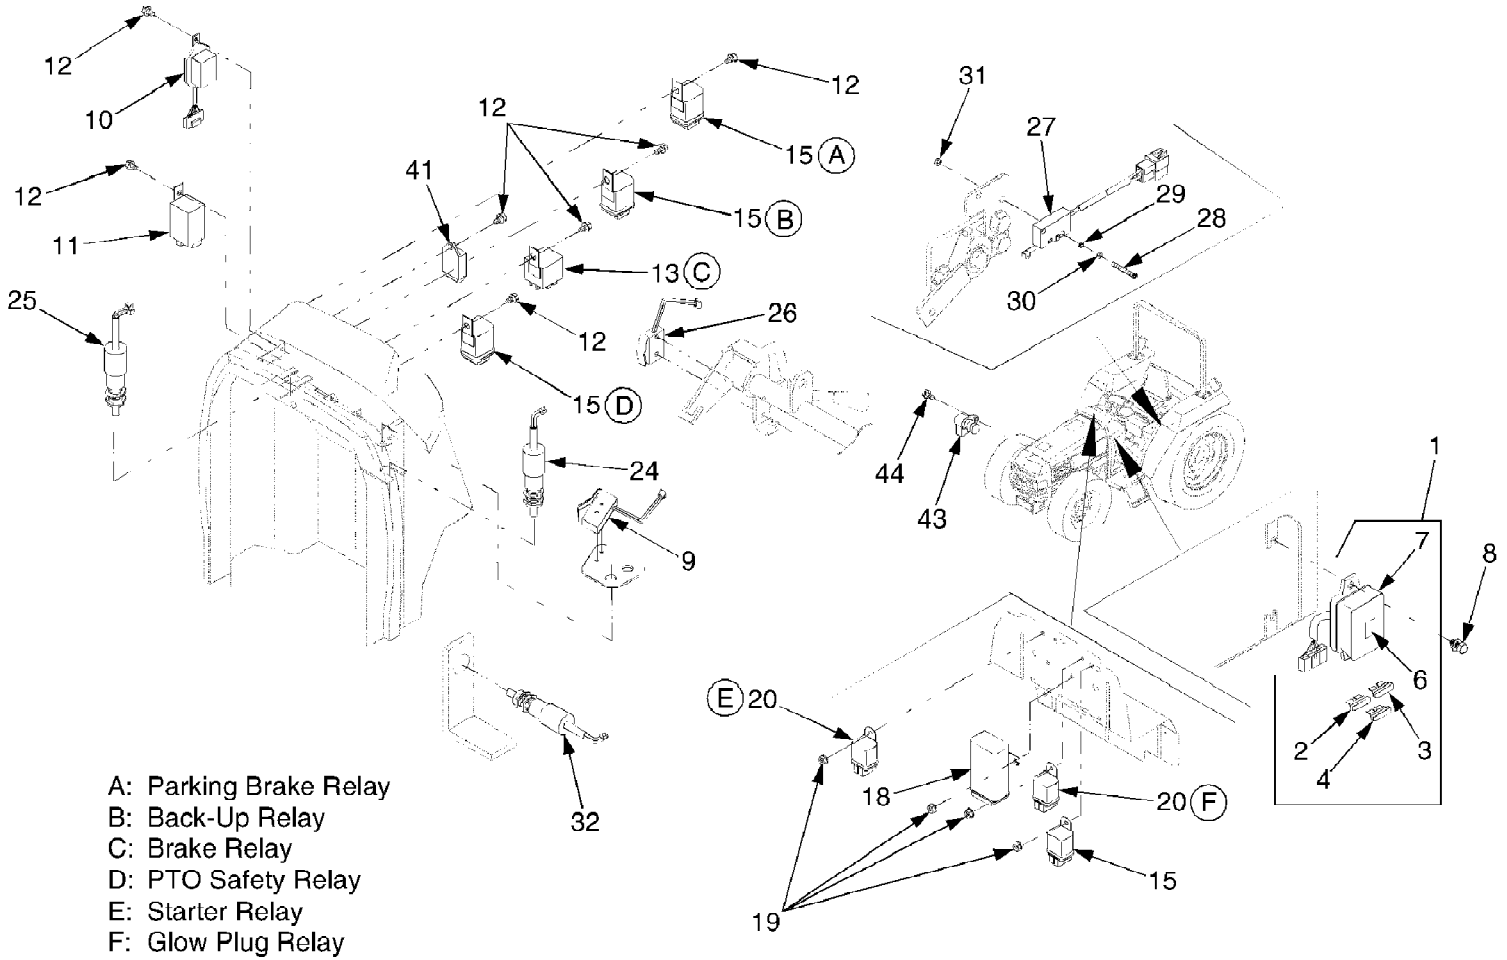

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4625-69103	1	/P	Fuse Box Ass'y Includes Ref. Nos. 2 thru 7
2	DD-36919-56661	2		Fuse (25a)
3	DD-36919-56650	3		Fuse (20a)
4	DD-T4260-33631	9		Fuse (10a)
6	DD-T4625-69281	1		Label
7	DD-52300-41664	1		Cover
8	DD-01023-50620	2		Bolt
9	DD-44512-83172	1		Switch, Micro
10	DD-T4340-60242	1		Relay, Timer
11	DD-T4240-31052	1		Unit, Flasher
12	DD-01754-50616	7		Bolt, Flange
13	DD-T4620-69041	1		Relay(5p)
15	DD-T4520-75031	4		Relay
18	DD-T4620-69054	1	/P	Controller, Preheater
19	DD-02751-50060	5		Nut, Flange
20	DD-C5510-43101	2	/P	Relay
24	DD-T4520-75481	1		Switch, Safety Starter
25	DD-T4520-41821	1		Stop Switch Ass'y
26	DD-44512-68813	1		Switch, Micro
27	DD-T4810-69251	1		Switch, Micro
28	DD-03054-50316	2		Screw
29	DD-04012-50030	2		Washer, Plain
30	DD-04512-50030	2		Washer, Spring
31	DD-02054-50030	2		Nut
32	DD-C7810-43211	1		Safety Starter Ass'y
41	DD-T4835-69262	1		FFT Controller
43	DD-E6302-04931	1		Sensor, Pick Up
44	DD-01754-50612	1		Bolt, Flange

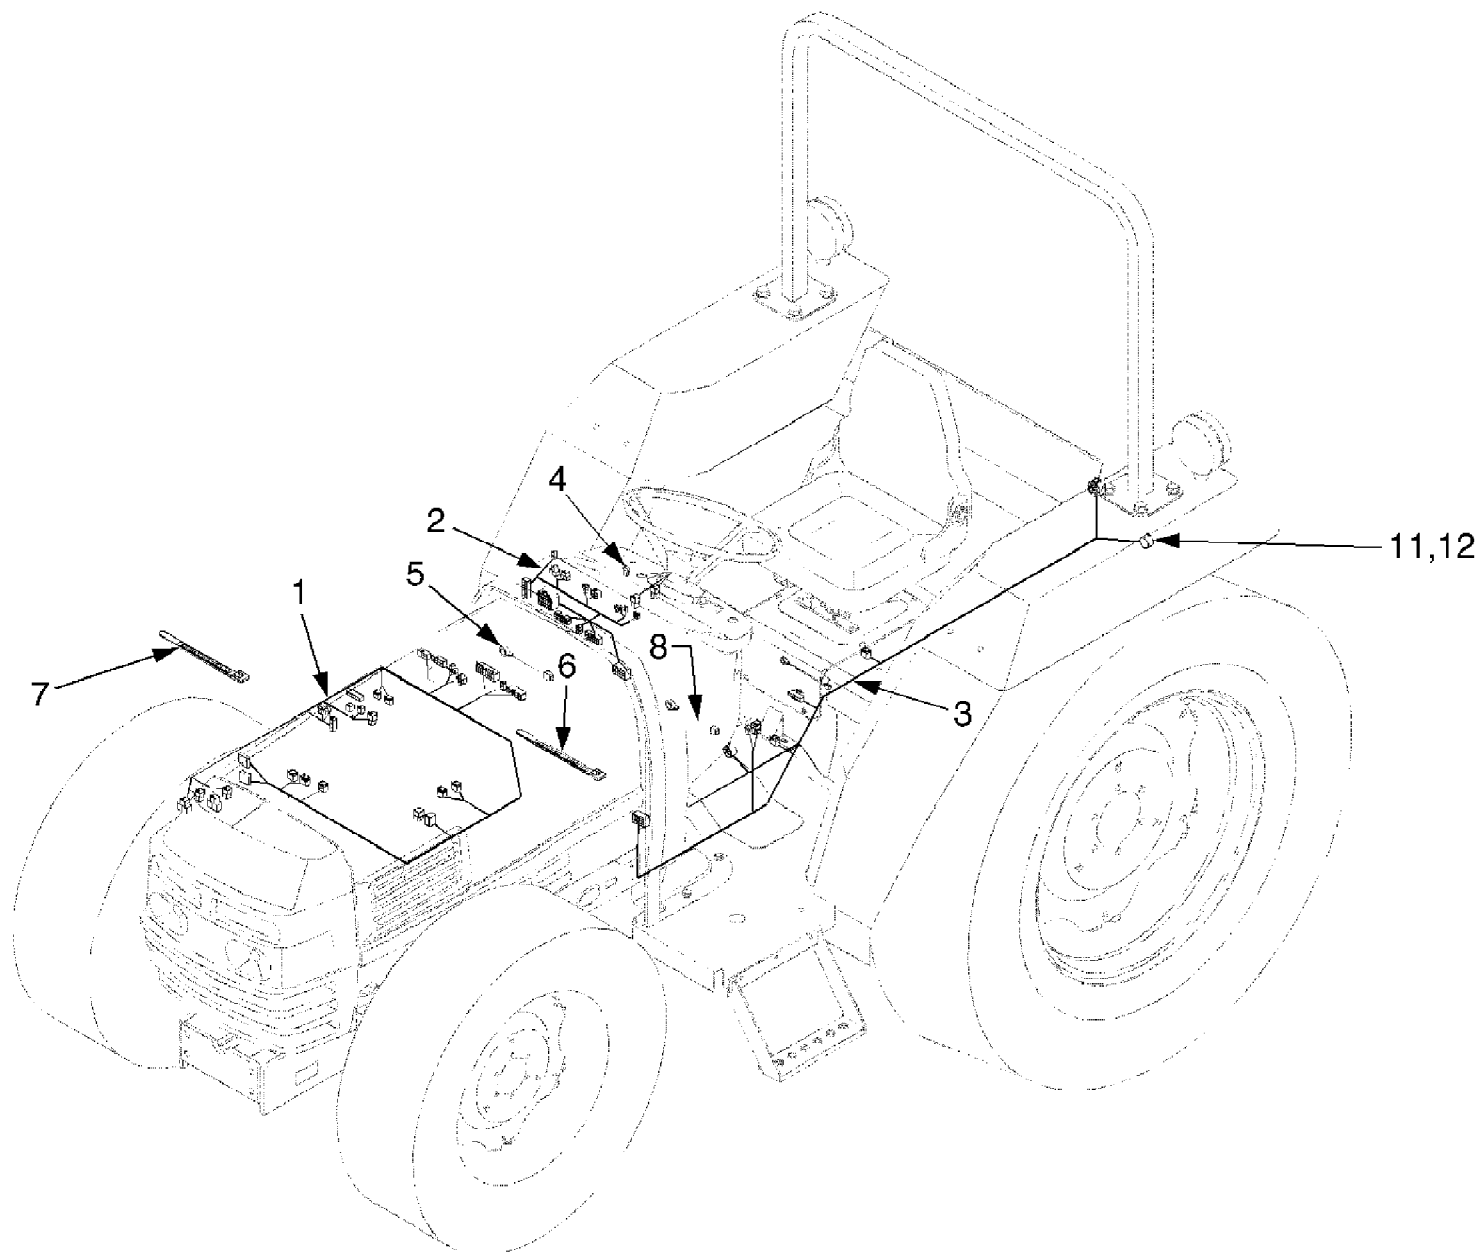 


8354 Tractor
Electrical System 3

Page 58 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-69383	1		Bonnet Wire Harness Ass'y
	DD-52794-42421	1		Fuse Slowblow
2	DD-T2615-69425	1		Panel Wire Harness Ass'y
	DD-T4620-69491	1		Diode
3	DD-T2615-69443	1		Fender Wire Harness Ass'y
	DD-T4620-69331	1		Diode
4	DD-T4620-69462	2	/P	Wire Harness 2
5	DD-T4620-69471	1		Wire Harness 3
6	DD-T4520-82561	6		Band
7	DD-T4520-82551	10		Band
8	DD-T4620-69462	2	/P	Wire Harness 2
11	DD-T2615-69471	1		Wire, Connection(LH)
12	DD-T2615-69481	1		Wire, Connection(RH)

 
8354 Tractor
Engine Stop Lever

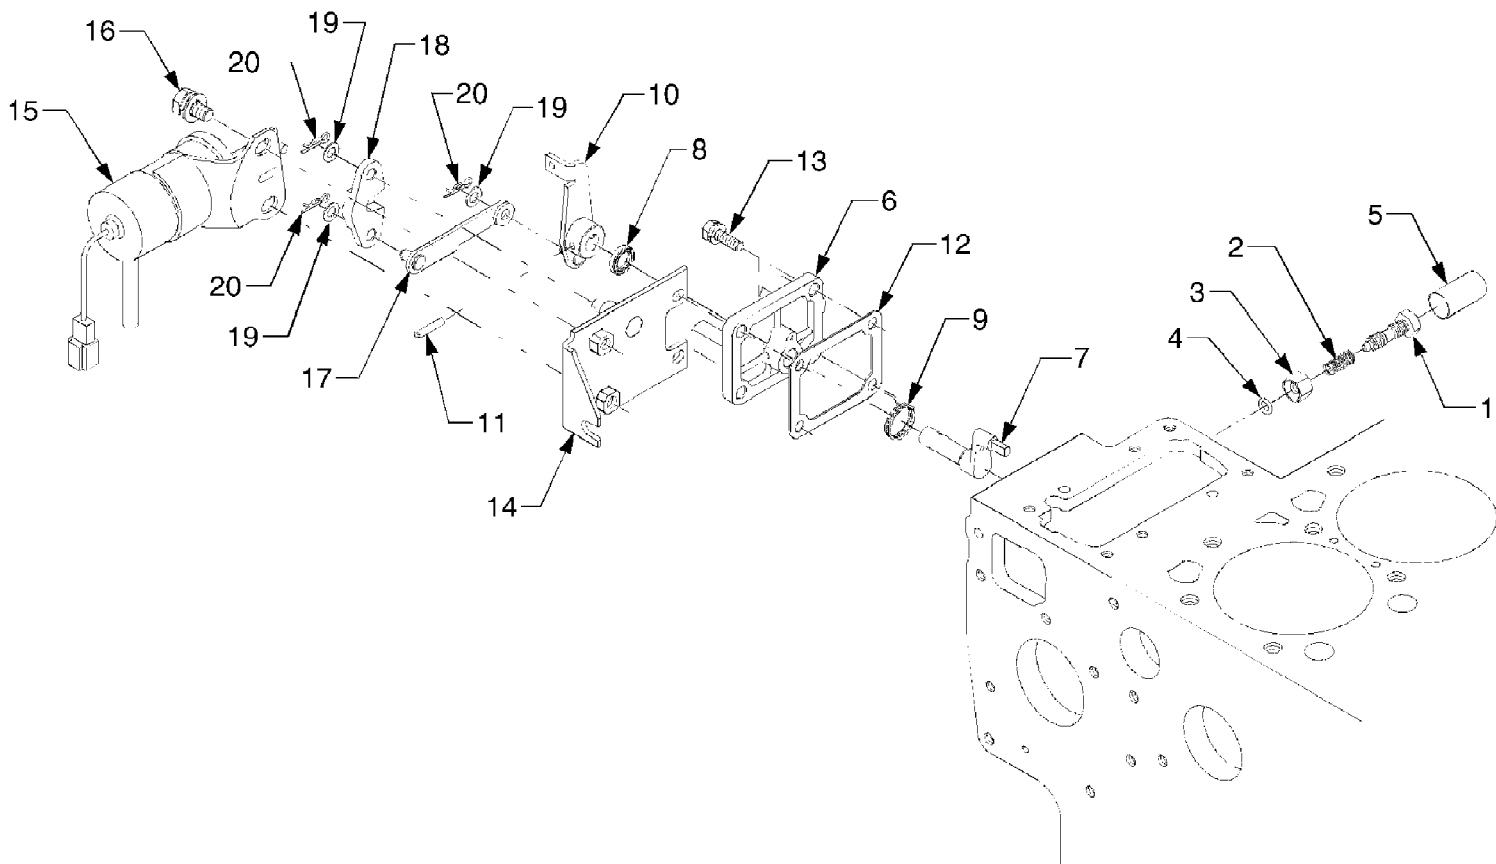

8354 Tractor
Engine Stop Lever

Page 60 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6200-54252	1		Bolt, Adjusting
2	DD-15521-54261	1		Spring
3	DD-15471-92011	1		Nut
4	DD-04811-00060	1		O-ring
5	DD-15521-54271	1		Cap
6	DD-E6200-51654	1		Cover, Injection Pump
7	DD-E6300-57743	1		Shaft, Lever
8	DD-15471-57981	1		Seal, Oil
9	DD-E6200-57922	1		Spring
10	DD-E6200-57731	1		Lever, Engine Stop
11	DD-05411-00420	1		Pin, Spring
12	DD-15221-51661	1		Gasket
13	DD-01023-50620	4		Bolt
14	DD-E5800-60111	1		Support, Solenoid
15	DD-E5753-60015	1		Solenoid, Engine Stop
16	DD-01125-50816	2		Bolt
17	DD-T4240-62642	1		Lever 1, Stop
18	DD-15471-60162	1		Lever 2, Stop
19	DD-04012-50060	3		Washer, Plain
20	DD-05525-50600	3		Pin, Snap

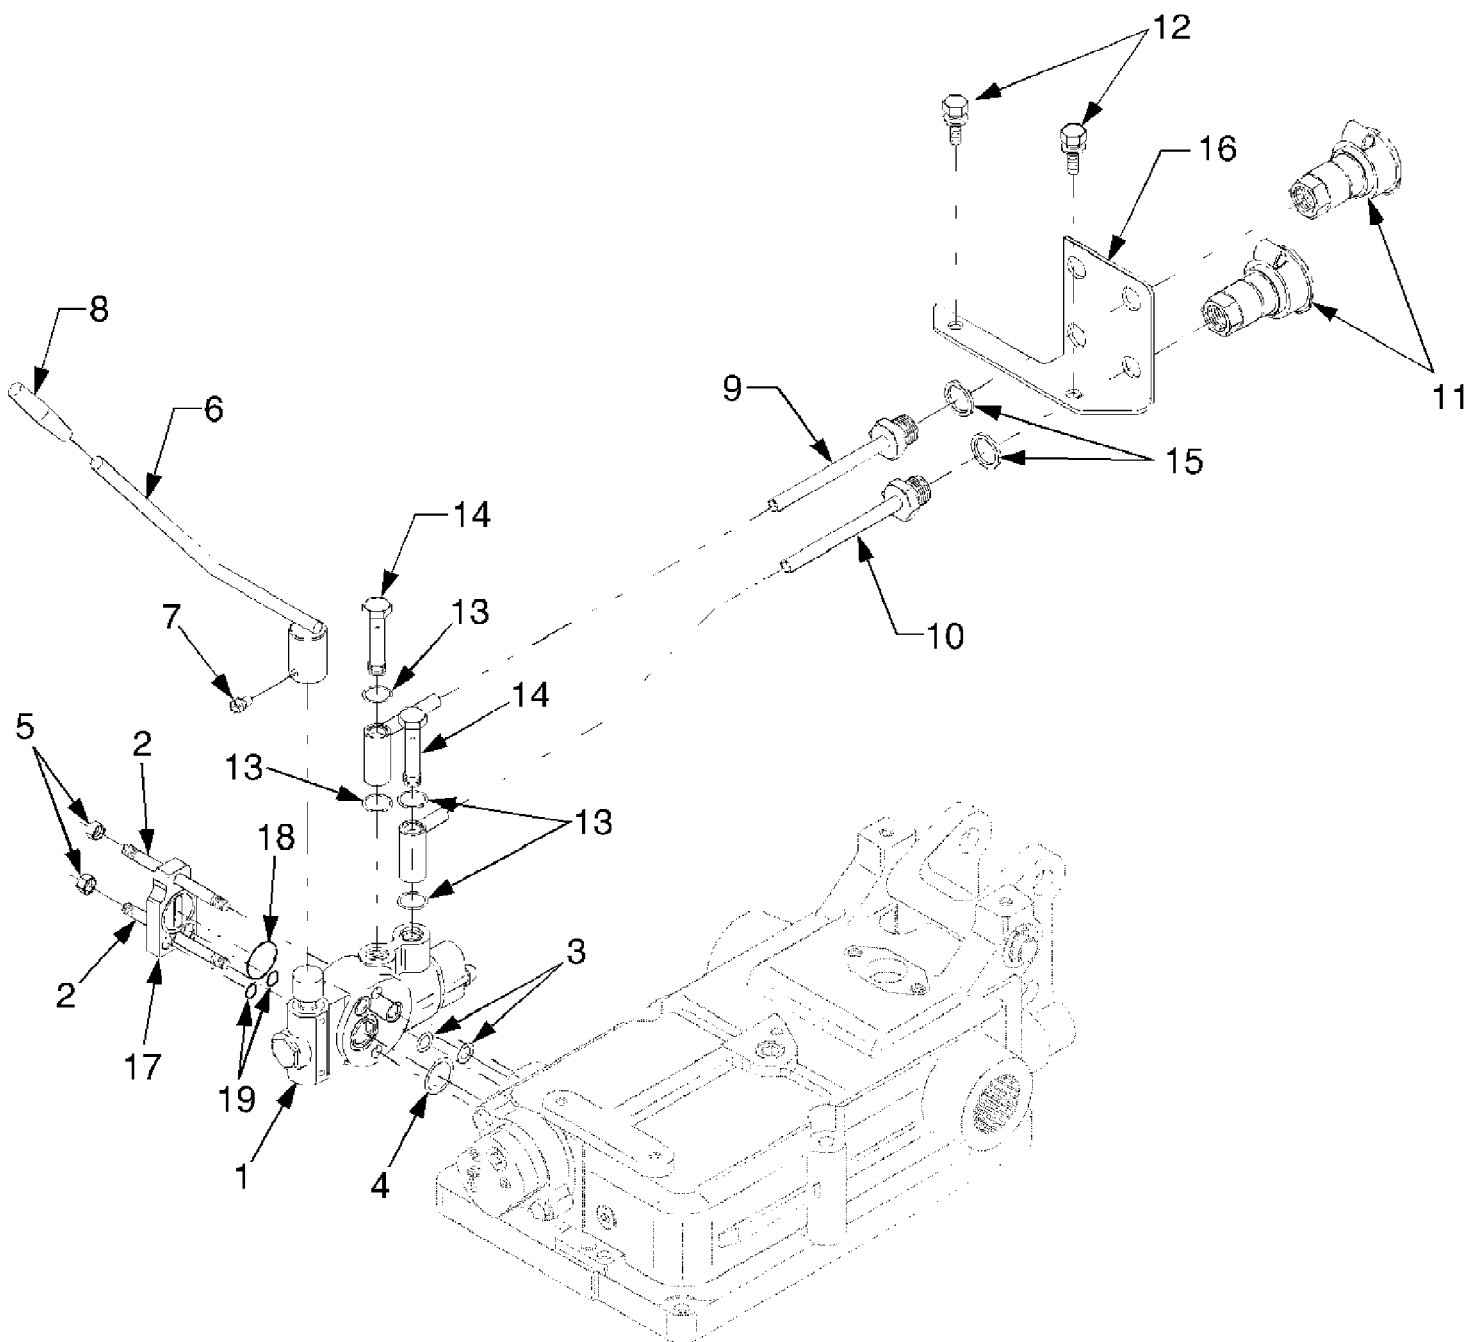 

8354 Tractor
External Hydraulic Valve 1 Group

Page 62 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-39031	1		Double Acting Valve (Detent)
2	DD-T2610-37862	2		Stud
3	DD-04810-00120	2		O-Ring
4	DD-04811-06250	1		O-Ring
5	DD-41182-51511	2		Nut
6	DD-T2630-65254	1		Lever 3, Double Acting
7	DD-T2610-39572	1		Screw, Set
8	DD-76KP-1737-1	1		Grip, Lever
9	DD-T2615-90011	1		Pipe A, Hydraulic
10	DD-T2615-90021	1		Pipe B, Hydraulic
11	DD-T4520-90093	2		Coupler Socket Ass'y
12	DD-01133-51018	2		Bolt
13	DD-04811-00200	4		O-Ring
14	DD-T4520-37372	2		Bolt 2, Joint
15	DD-04717-02150	2		Washer, Seal
16	DD-T2615-90071	1		Bracket, Socket
17	DD-T2610-37482	1		Cover
18	DD-04811-10380	1		O-Ring
19	DD-04811-00100	2		O-Ring

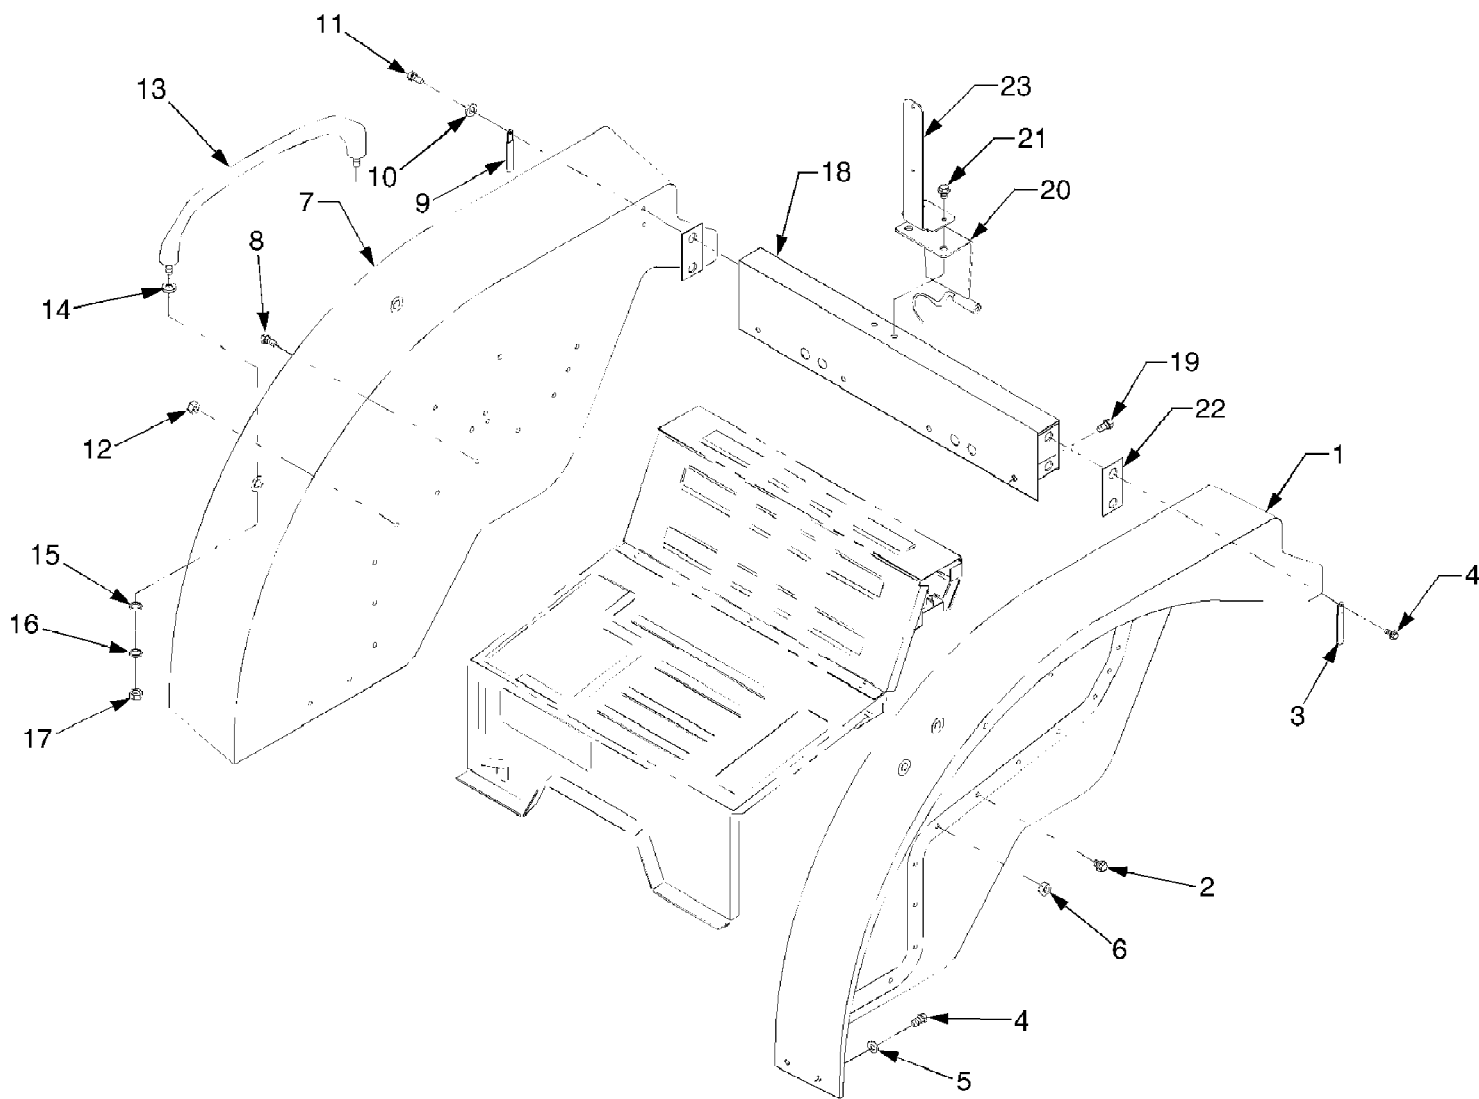 

8354 Tractor
Fender Group

Page 64 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DDT262595012YW	1		Fender (LH) Ass'y
2	DD-01125-50820	15		Bolt
3	DD-37150-34471	2		Clamp
4	DD-01123-50820	4		Bolt
5	DD-04015-50080	4		Washer, Plain
6	DD-02763-50080	2		Nut
7	DDT262595022YW	1		Fender (RH) Ass'y
8	DD-01125-50820	15		Bolt
9	DD-37150-34471	2		Clamp
10	DD-01123-50820	4		Bolt
11	DD-04015-50080	4		Washer, Plain
12	DD-02763-50080	2		Nut
13	DD-T2630-95052	2		Grip
14	DD-T2610-95081	12		Rubber
15	DD-04015-50080	4		Washer, Plain
16	DD-04512-50080	4		Washer, Spring
17	DD-02118-50080	4		Nut
18	DDT263095252YW	1	S	Support, Fender
19	DD-01754-50816	4		Bolt, Flange
20	DDT261029421YW	1		Hook, Top Link
21	DD-01754-50816	2		Bolt, Flange
22	DD-T2610-95071	2		Rubber
23	DD-T2615-95261	1		Bracket
	779-3618	1	S	Emblem, Reflective SMV

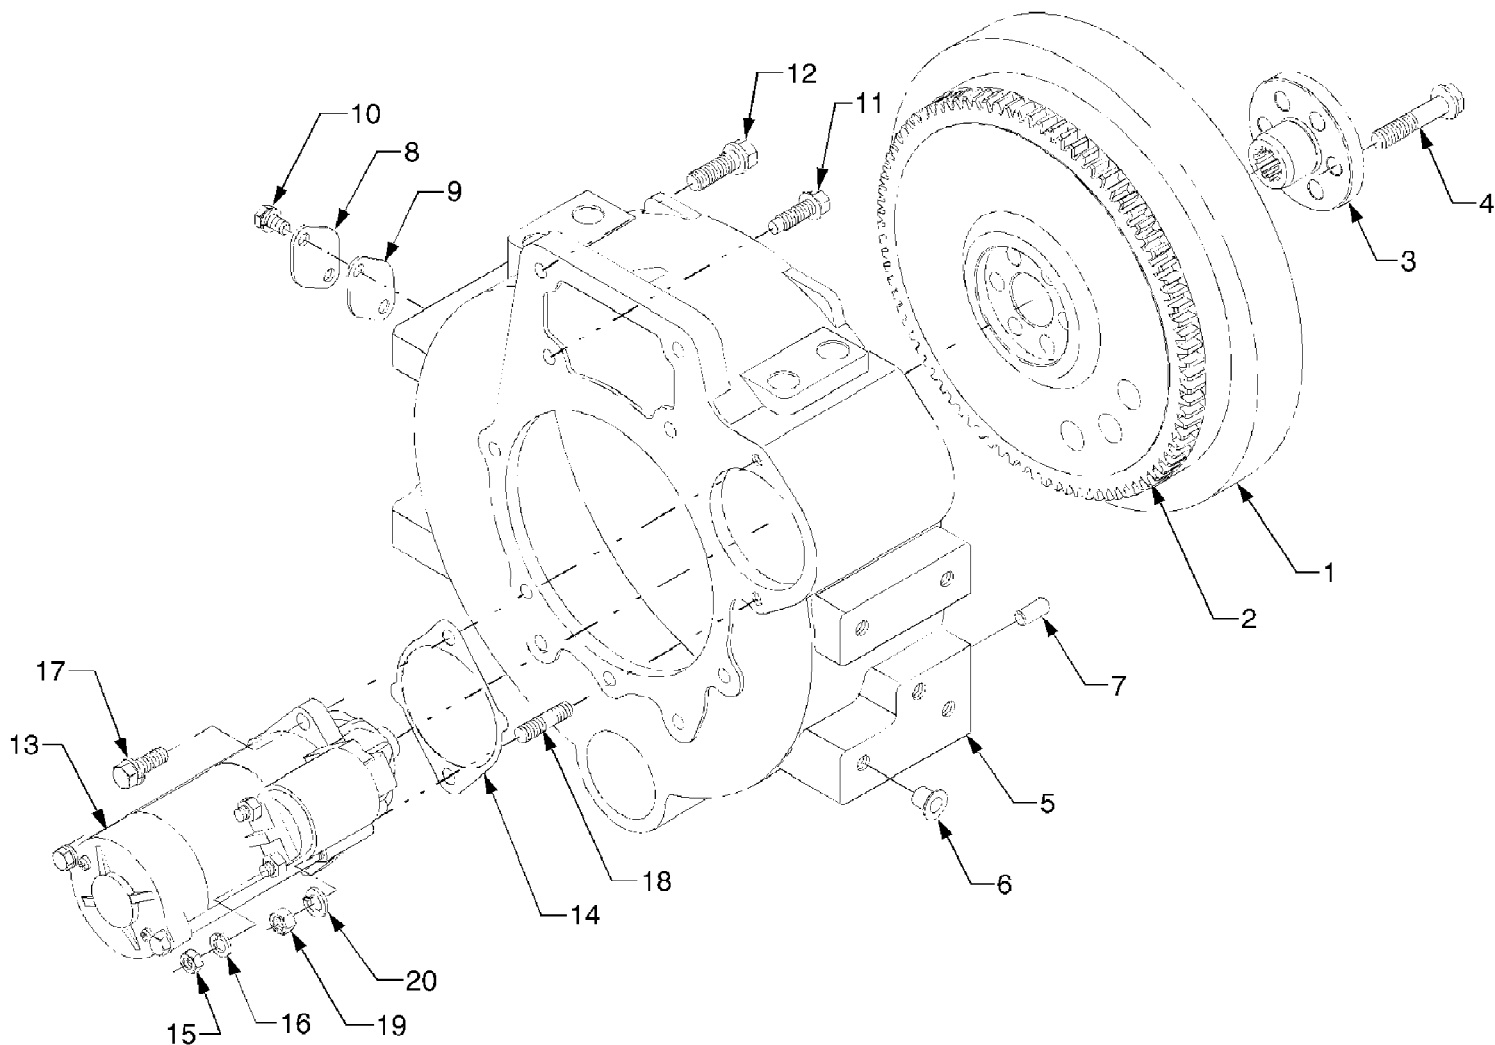 

8354 Tractor
Flywheel And Starter Motor

Page 66 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-E5621-25012	1		Flywheel Ass'y Includes Ref. No. 2
2	DD-15221-63824	1		Gear, Ring
3	DD-E5800-25182	1		Hub, Spline
4	DD-E5800-25161	6		Bolt, Flywheel
5	DD-E6305-04616	1		Housing, Flywheel
6	DD-31220-14293	10		Plug
7	DD-05012-01020	2		Pin, Straight
8	DD-15521-04682	1		Cover, Timing Mark
9	DD-15521-04792	1		Gasket, Cover
10	DD-01123-50816	2		Bolt
11	DD-01674-51032	11		Bolt, Flange
12	DD-01133-51240	2		Bolt
13	DD-E6530-63012	1		Starter Motor Ass'y
14	DD-E6200-04622	1		Gasket
15	DD-02114-50080	1		Nut
16	DD-04512-50080	1		Washer, Spring
17	DD-01133-51030	1		Bolt
18	DD-01517-51028	1		Stud
19	DD-02176-50100	1		Nut
20	DD-04512-50100	1		Washer, Spring

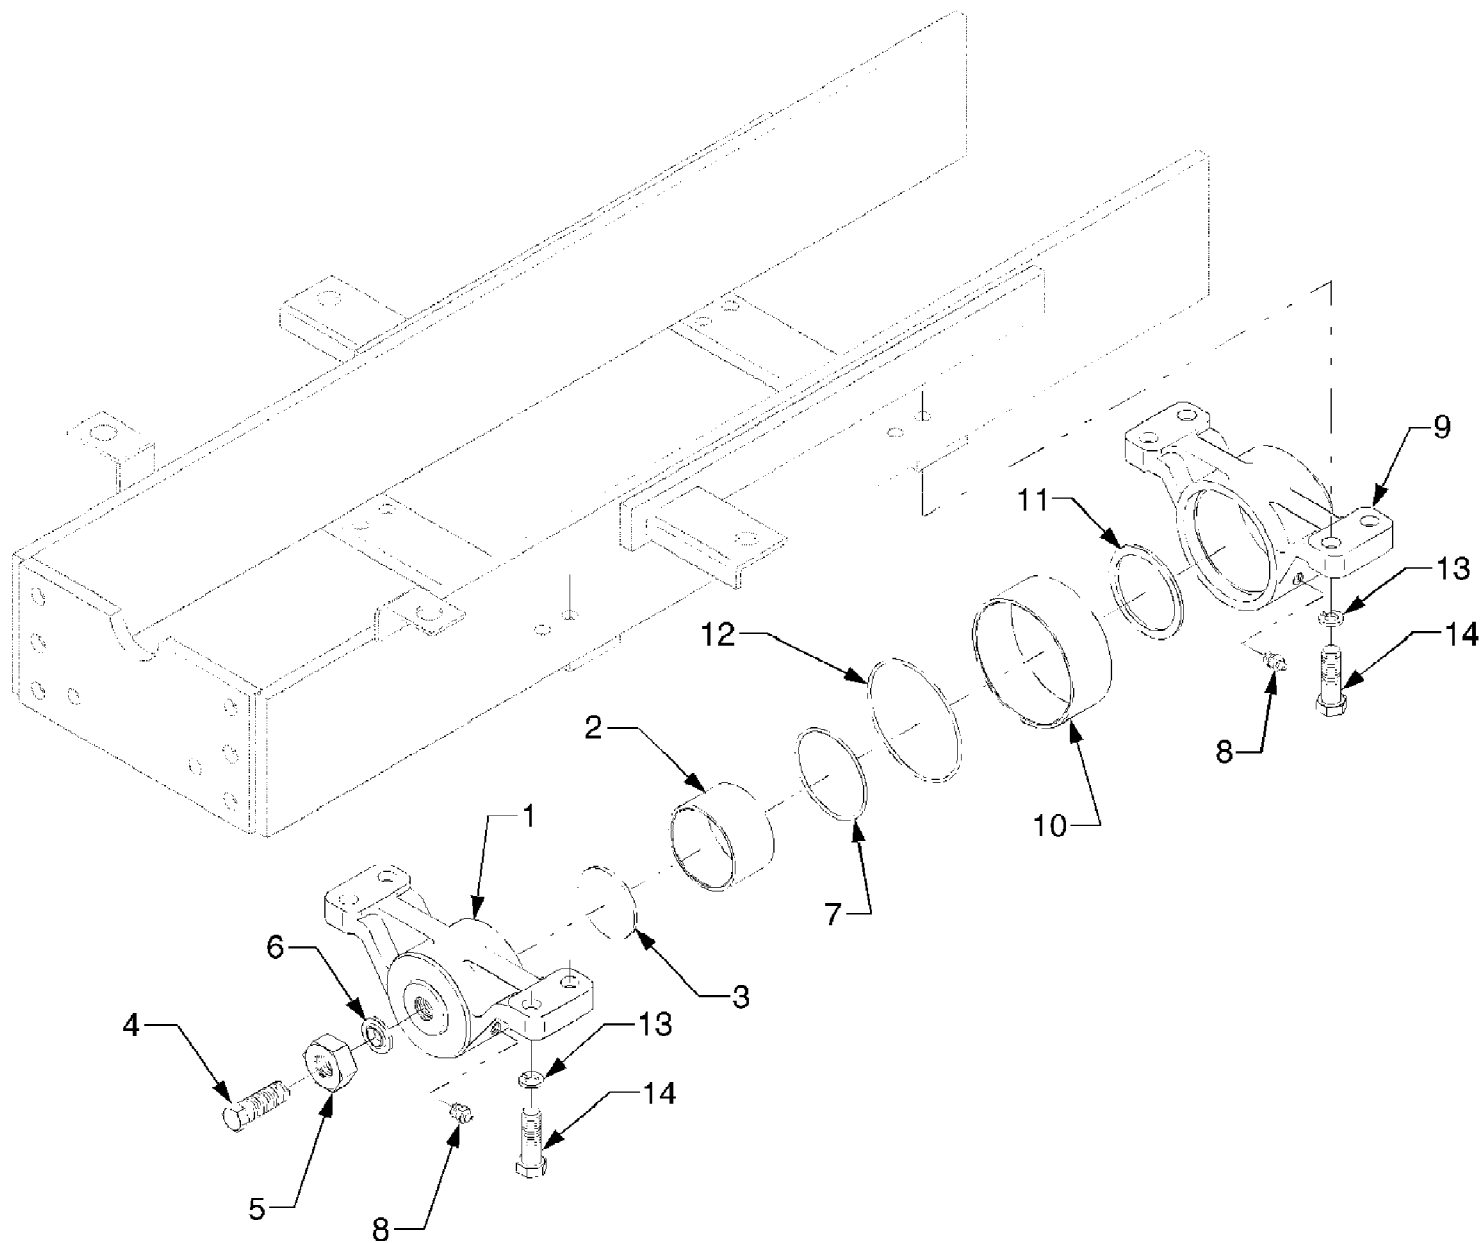 

8354 Tractor
Front Axle Bracket

Page 68 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2630-41612	1		Bracket, Front
2	DD-T4520-43601	1		Dx-Bush
3	DD-38440-44673	1		Collar
4	DD-38630-44761	1		Bolt, Adjust
5	DD-02172-50160	1		Nut
6	DD-38440-44751	1		Washer, Seal
7	DD-04811-00490	1		O-Ring
8	DD-06613-10010	2		Nipple, Grease
9	DD-T2630-41622	1		Bracket, Rear
10	DD-T2630-41691	1		Dx-Bush
11	DD-84612-44640	1		Collar, Thrust
12	DD-04811-50700	1		O-Ring
13	DD-01176-51440	8		Bolt
14	DD-04512-50140	8		Washer, Spring

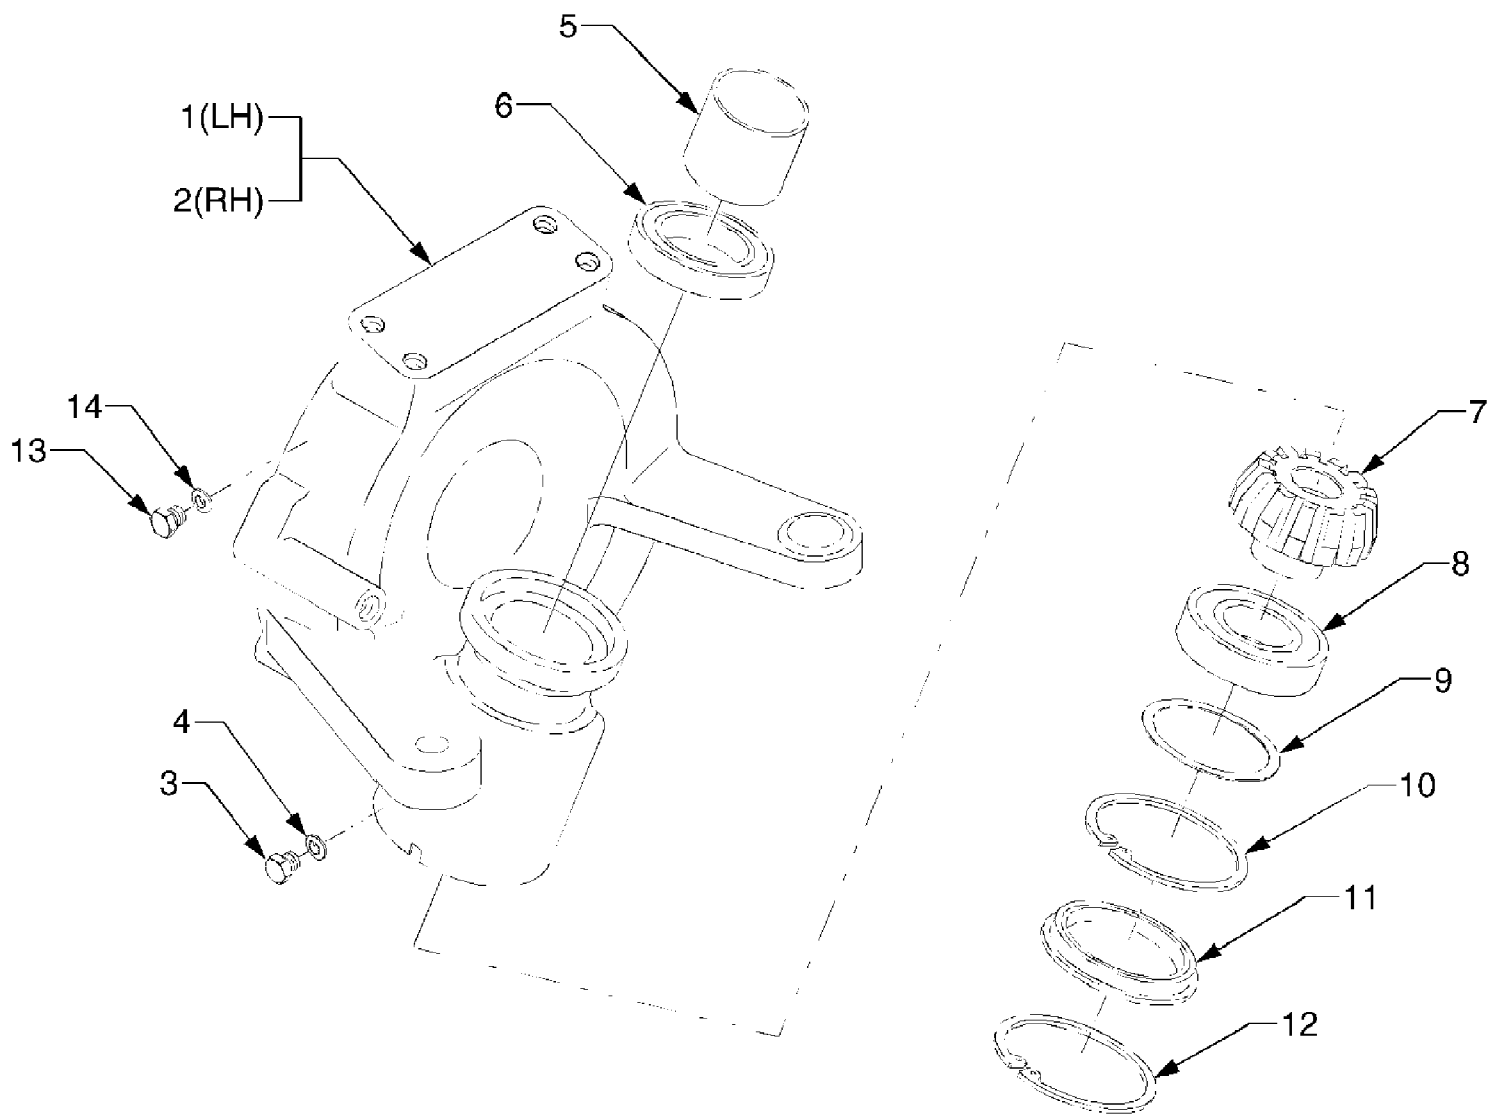 


8354 Tractor
Front Axle Case Group

Page 70 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2620-43636	1		Case, Front Axle (LH)
2	DD-T2620-43646	1		Case, Front Axle (RH)
3	DD-06331-35010	2		Plug
4	DD-04717-01000	2		Washer, Seal
5	DD-T2630-43601	2		Dx Bush
6	DD-T4520-43381	2		Bearing, Thrust
7	DD-T2620-43521	2		Gear, 11 Bevel
8	DD-08101-06208	2		Bearing, Ball
9	DD-T4520-43011	2		Shim (T 0.1)
	DD-T4520-43021	2		Shim (T 0.2)
	DD-T4520-43031	2		Shim (T 0.4)
	DD-T4520-43041	2		Shim (T 0.8)
	DD-T4520-43051	2		Shim (T 1.0)
	DD-T4520-43061	2		Shim (T 1.2)
10	DD-04611-00800	2		Cir-clip
11	DD-T4620-43541	2		Plug
12	DD-04611-00920	2		Cir-clip
13	DD-34150-14261	2		Plug, Drain
14	DD-04717-02150	2		Washer, Seal

 
8354 Tractor
Front Axle Frame Group

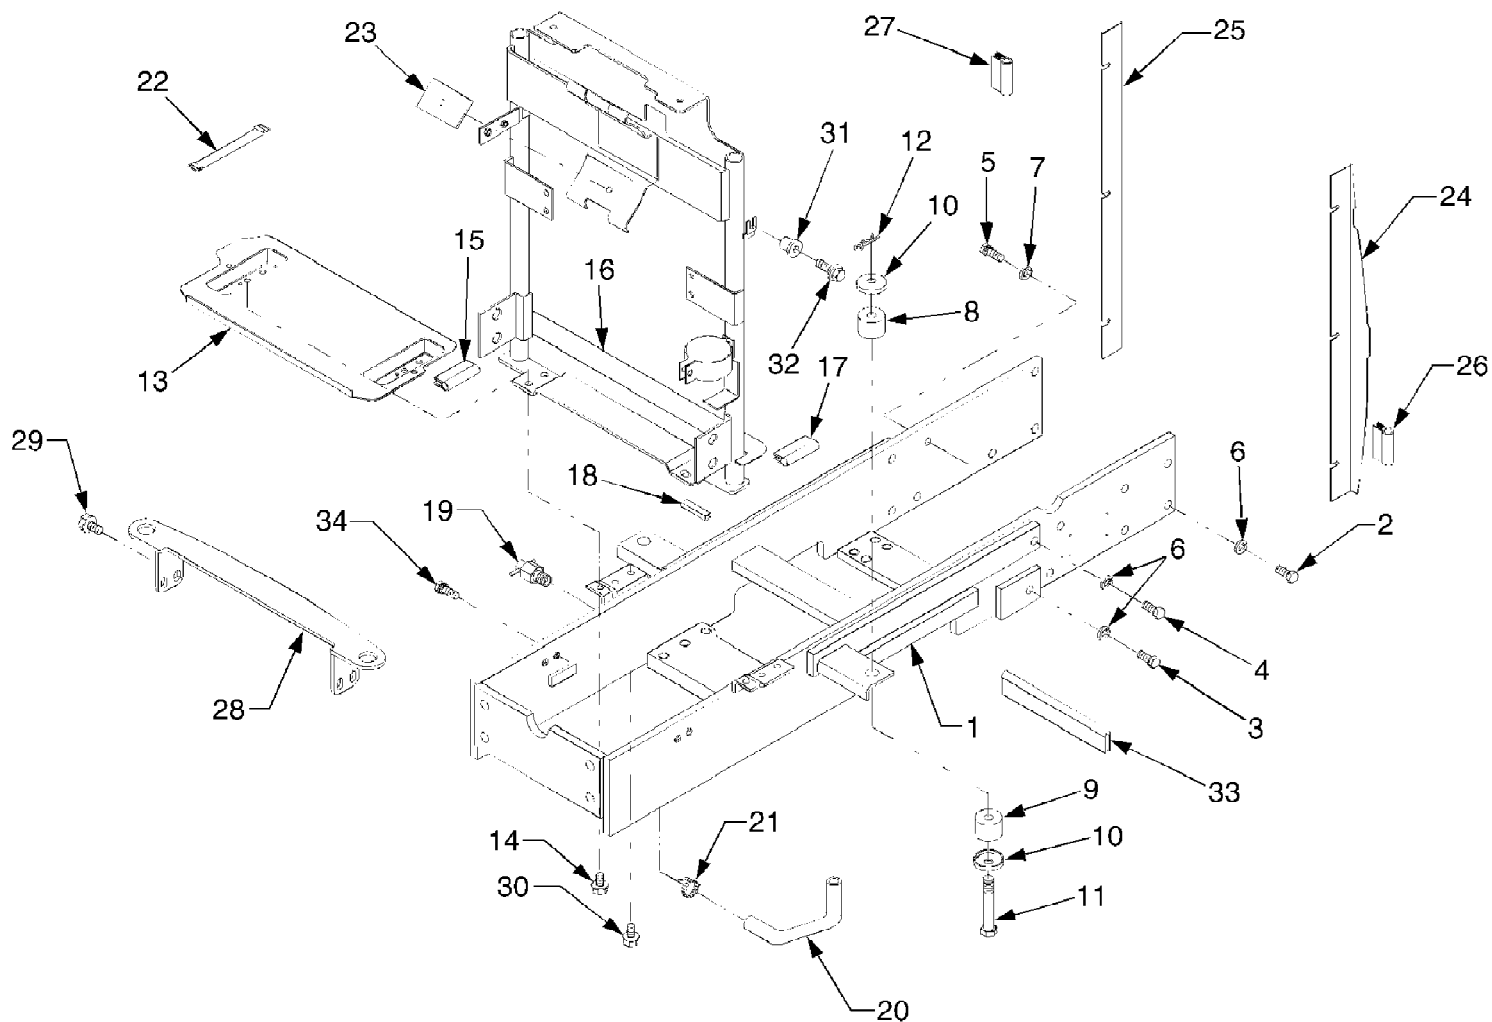

8354 Tractor
Front Axle Frame Group

Page 72 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2625-50012	1		Frame, Front Axle
2	DD-01176-51235	10		Bolt
3	DD-01176-51250	2		Bolt
4	DD-01175-51240	2		Bolt
5	DD-01176-51030	1		Bolt
6	DD-04512-50120	14		Washer, Spring
7	DD-04512-50100	1		Washer, Spring
8	DD-15111-72181	2		Cushion
9	DD-15111-72191	2		Cushion
10	DD-T2240-13202	4		Washer
11	DD-15108-72382	2		Bolt
12	DD-05515-51000	2		Pin, Snap
13	DD-T4620-50213	1		Support, Battery
14	DD-01123-50825	4		Bolt
15	DD-T4620-50273	2		Rubber
16	DD-T4680-50314	1		Support, Aircleaner
17	DD-T4620-50341	1		Rubber
18	DD-T4620-50351	2		Cushion
19	DD-76KD-0121-2	1		Cock, Drain
20	DD-T4620-50281	1		Pipe, Drain
21	DD-T4340-38241	2		Band, Pipe
22	DD-38325-13981	2		Band, Aircleaner)
23	DD-T4240-13972	2		Cushion
24	DD-T4620-50363	1		Plate (LH)
25	DD-T4620-50373	1		Plate (RH)
26	DD-T4680-50383	1	/P	Rubber
27	DD-T4680-50392	1		Rubber
28	DD-T4681-50021	1		Bracket
29	DD-01125-50825	4		Bolt
30	DD-01123-50820	2		Bolt
31	DD-T4620-50672	2		Rubber, Cushion
32	DD-01754-50820	2		Bolt, Flange
33	DD-T4680-50461	1		Rubber
34	DD-01123-50820	1		Bolt

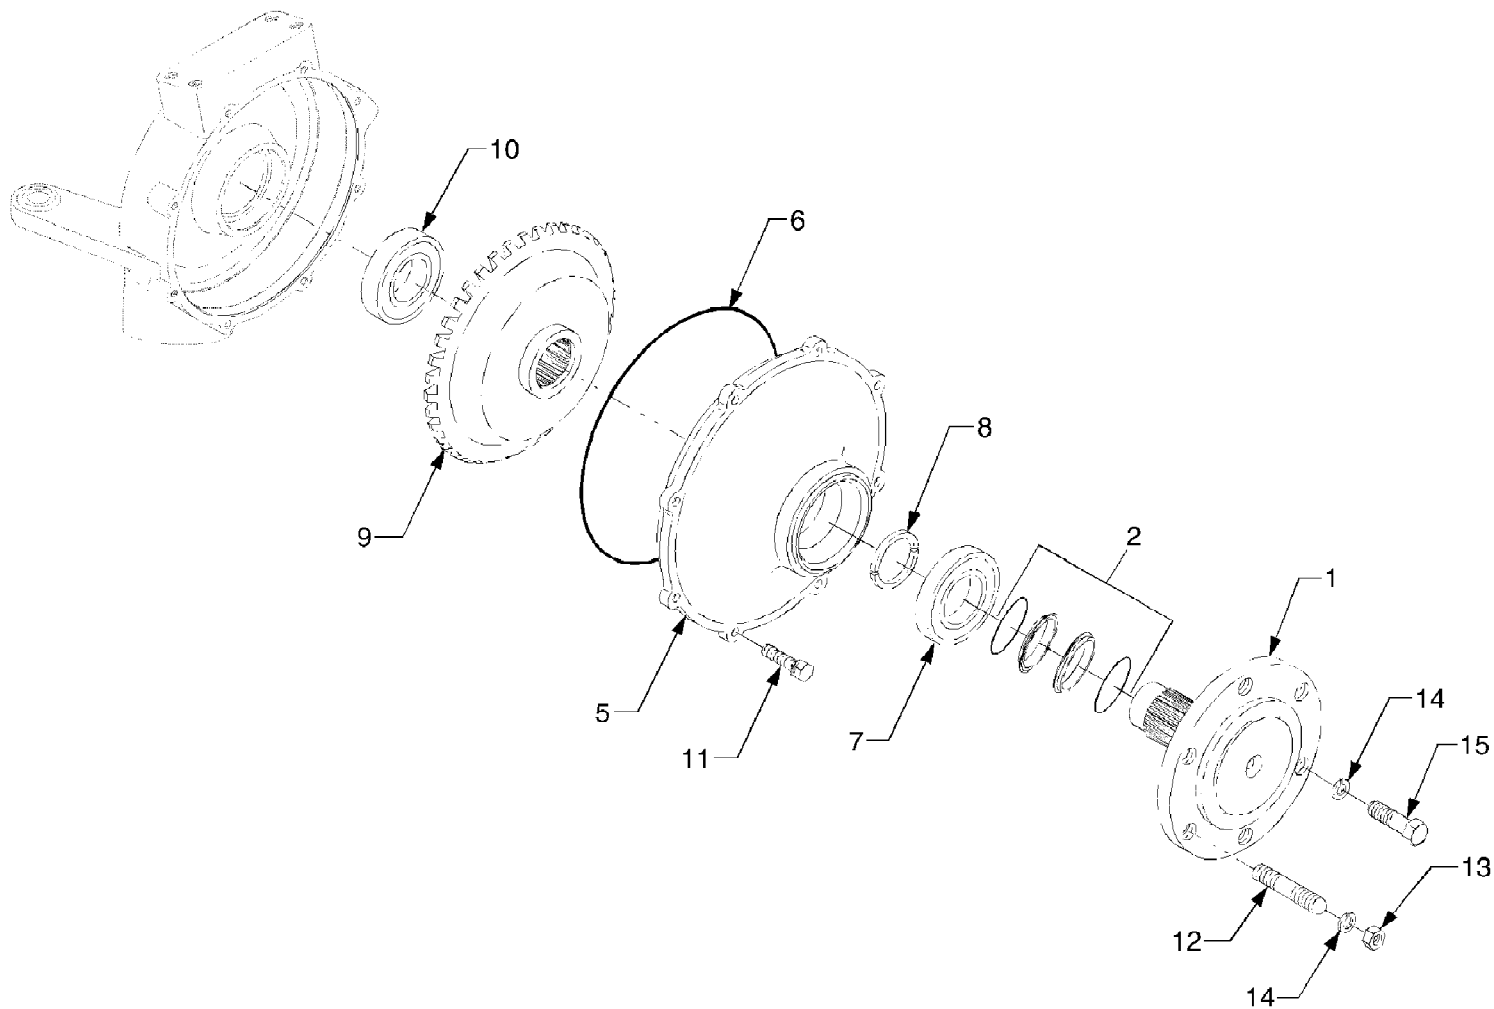 

8354 Tractor
Front Axle Group

Page 74 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4620-43712	2	/P	Axle, Front
2	DD-T4818-43451	2	/P	Floating Seal Ass'y
5	DD-T4682-43622	2	/P	Cover, Front Axle
6	DD-37805-43551	2		O-Ring
7	DD-08101-06209	2		Bearing, Ball
8	DD-T4340-43681	4		Cir-clip
9	DD-T2620-43721	2		Gear, 39 Bevel
10	DD-08101-06208	2		Bearing, Ball
11	DD-01123-50835	16		Bolt
12	DD-T4240-27712	4		Stud
13	DD-02076-50160	4		Nut
14	DD-04512-50160	12		Washer, Spring
15	DD-01173-51630	8	S	Bolt

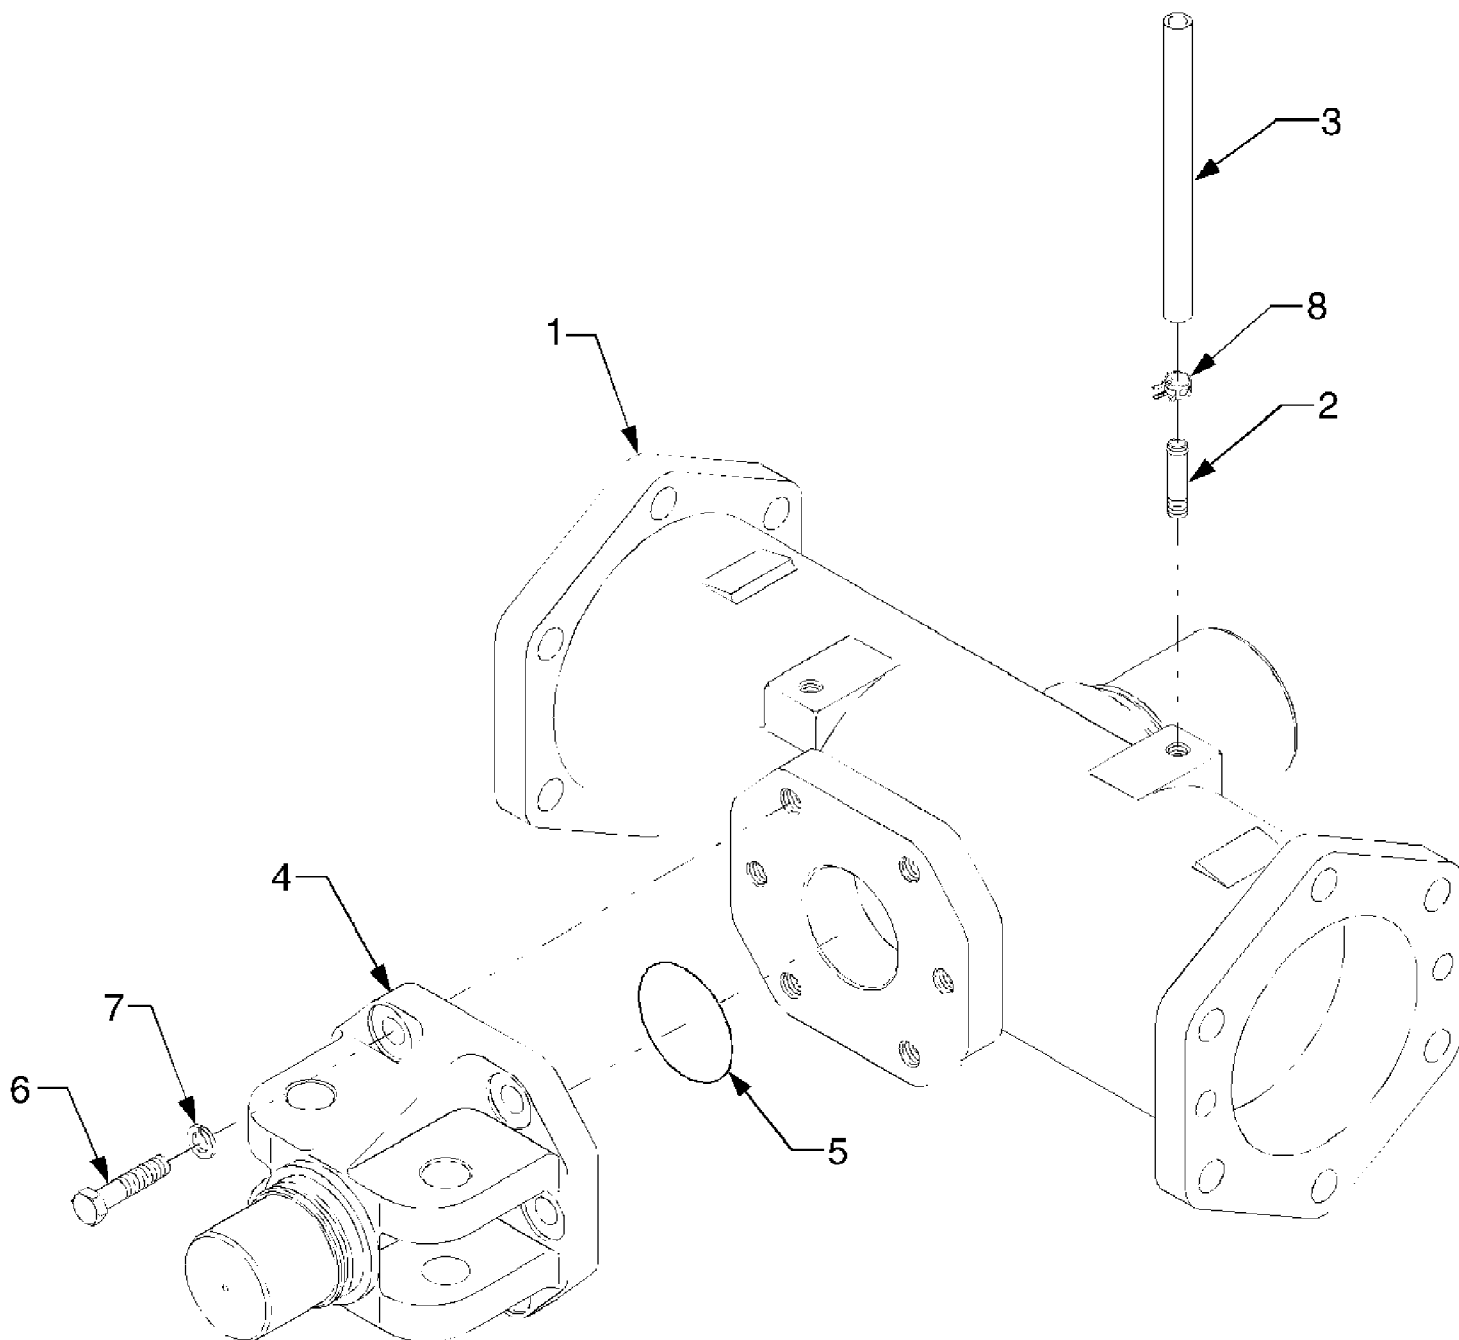 


8354 Tractor
Front Axle Support Group

Page 76 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2625-42143	1		Support, Front Axle
2	DD-T2630-42161	1		Pipe
3	DD-15301-72440	1		Pipe, Over Flow
4	DD-T2630-41653	1		Pin, Center
5	DD-04811-00490	1		O-Ring
6	DD-01173-51235	6		Bolt
7	DD-04512-50120	6		Washer, Spring
8	DD-15301-72470	1		Clip, Pipe

 
8354 Tractor
Front Differential Group

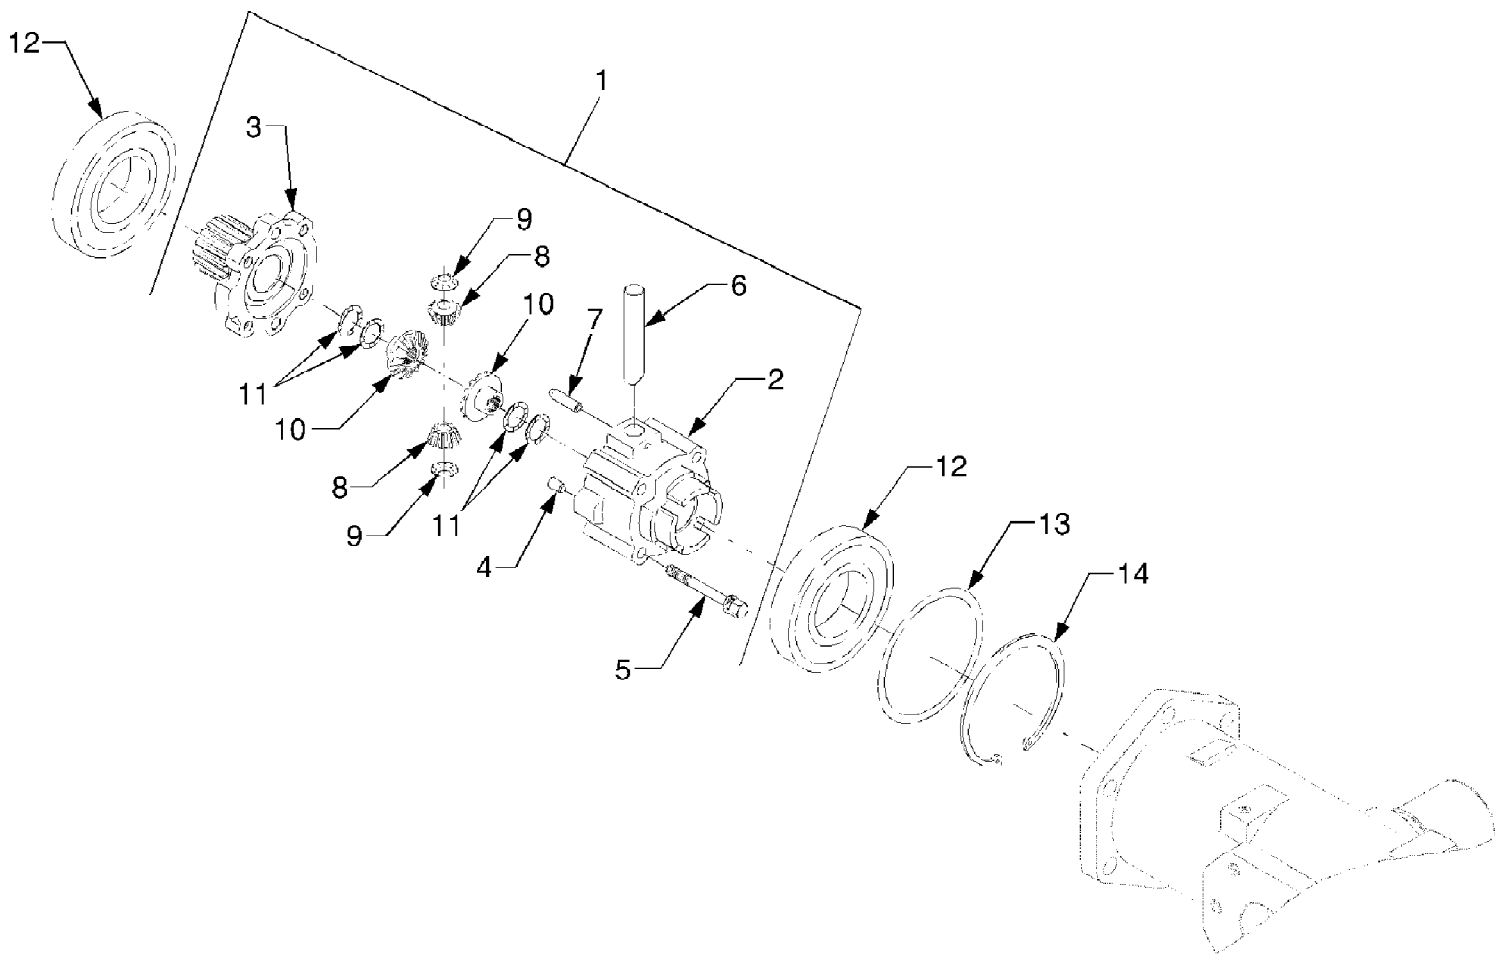

8354 Tractor
Front Differential Group

Page 78 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2630-43101	1		Front Differential Ass'y
2	DD-T2630-43121	1		Case, Front Differential
3	DD-T2630-42321	1		Cover, Differential Case
4	DD-05012-01018	2		Pin, Straight
5	DD-01133-51075	4		Bolt
6	DD-T2630-43111	1		Shaft, Differential Pinion
7	DD-T4520-43171	1		Pin, Straight
8	DD-T4520-43131	2		Pinion, Differential
9	DD-T4520-43151	2		Washer, Differential Side
10	DD-T4520-43141	2		Gear, Differential Side
11	DD-T4520-43071	2		Shim (T 0.8)
	DD-T4520-43081	2		Shim (T 1.0)
	DD-T4520-43091	2		Shim (T 1.2)
12	DD-08101-06212	2		Bearing, Ball
13	DD-T2630-43011	1		Shim (T 0.8)
	DD-T2630-43021	1		Shim (T 1.0)
	DD-T2630-43031	1		Shim (T 1.2)
	DD-T2630-43041	1		Shim (T 2.0)
	DD-T2630-43051	1		Shim (T 2.3)
14	DD-T2630-42981	1		Cir-clip

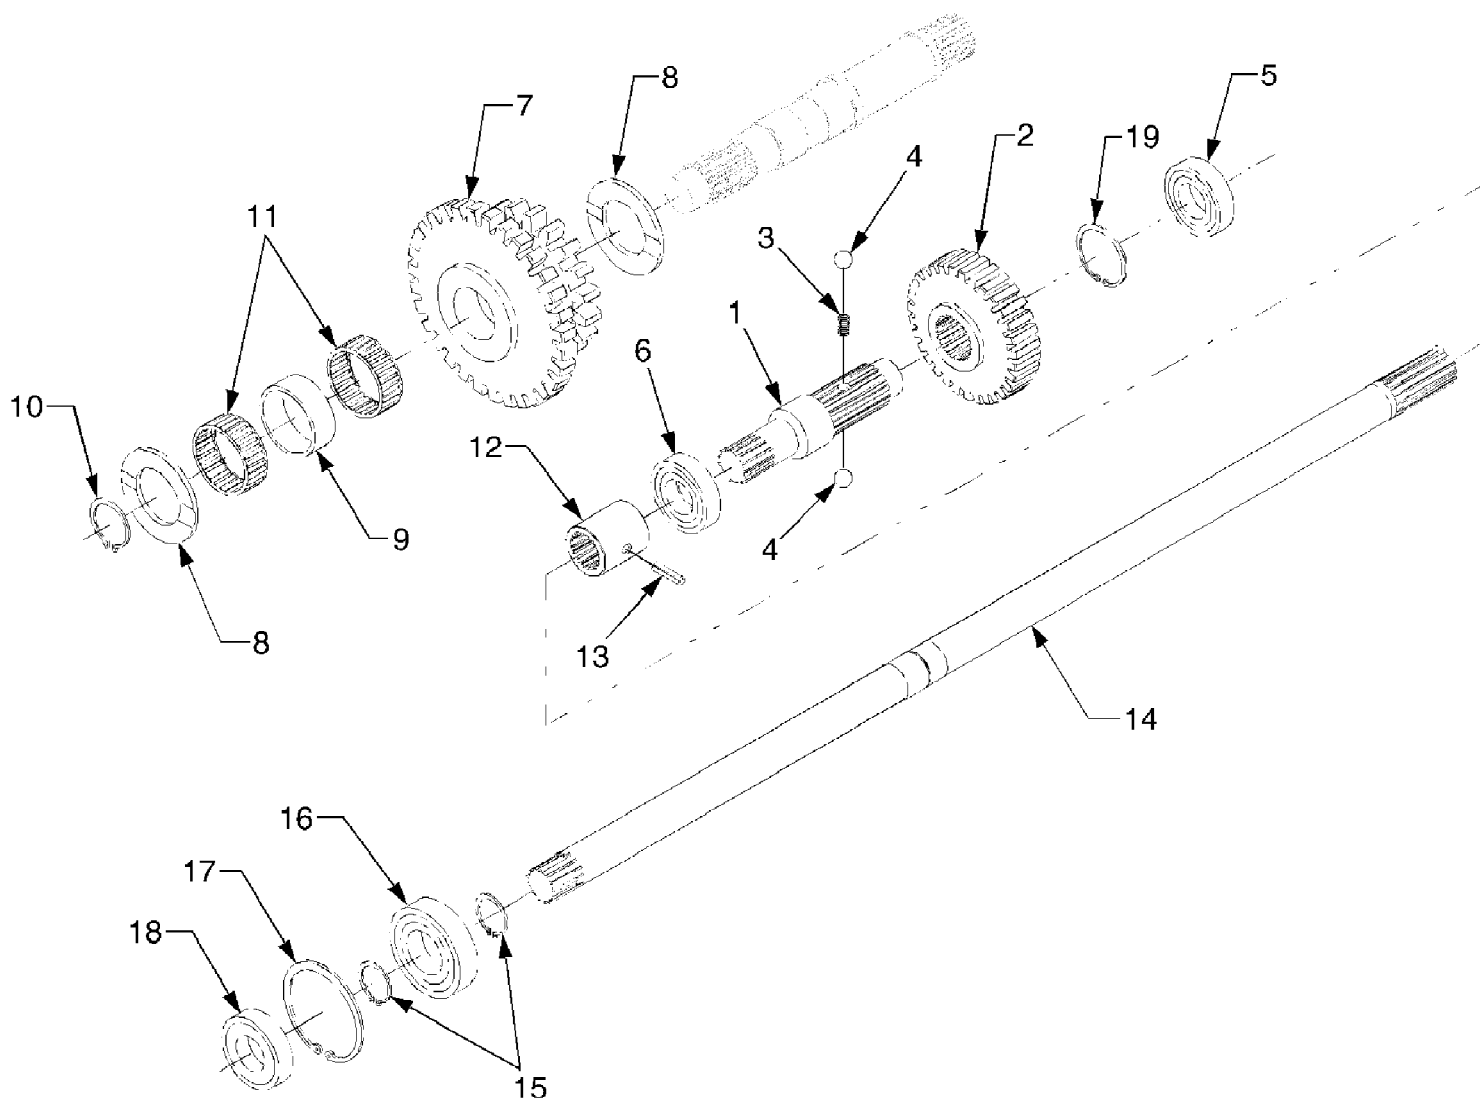 


8354 Tractor
Front Wheel Driving Group (Part 1)

Page 80 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-44512	1		Shaft, Front Wheel Driving
2	DD-T2610-44612	1		Gear, 31 Spur
3	DD-T2440-44251	1		Spring
4	DD-07715-01605	2		Ball
5	DD-08101-06205	1		Bearing, Ball
6	DD-08101-06305	1		Bearing, Ball
7	DD-T2610-44522	1		Gear, 26-20
8	DD-T2610-23621	2		Collar, Thrust
9	DD-T2610-44541	1		Spacer
10	DD-04612-00320	1		Cir-clip
11	DD-08823-23717	2		Bearing, Needle
12	DD-T4620-44592	1		Coupling
13	DD-05411-00635	1		Pin, Spring
14	DD-T2610-44573	1	/P	Shaft 1, Propeller
15	DD-04612-00250	2		Cir-clip
16	DD-08101-06005	1		Bearing, Ball
17	DD-04611-00470	1		Cir-clip
18	DD-09502-55210	1		Seal, Oil
19	DD-04612-00300	1		Cir-clip

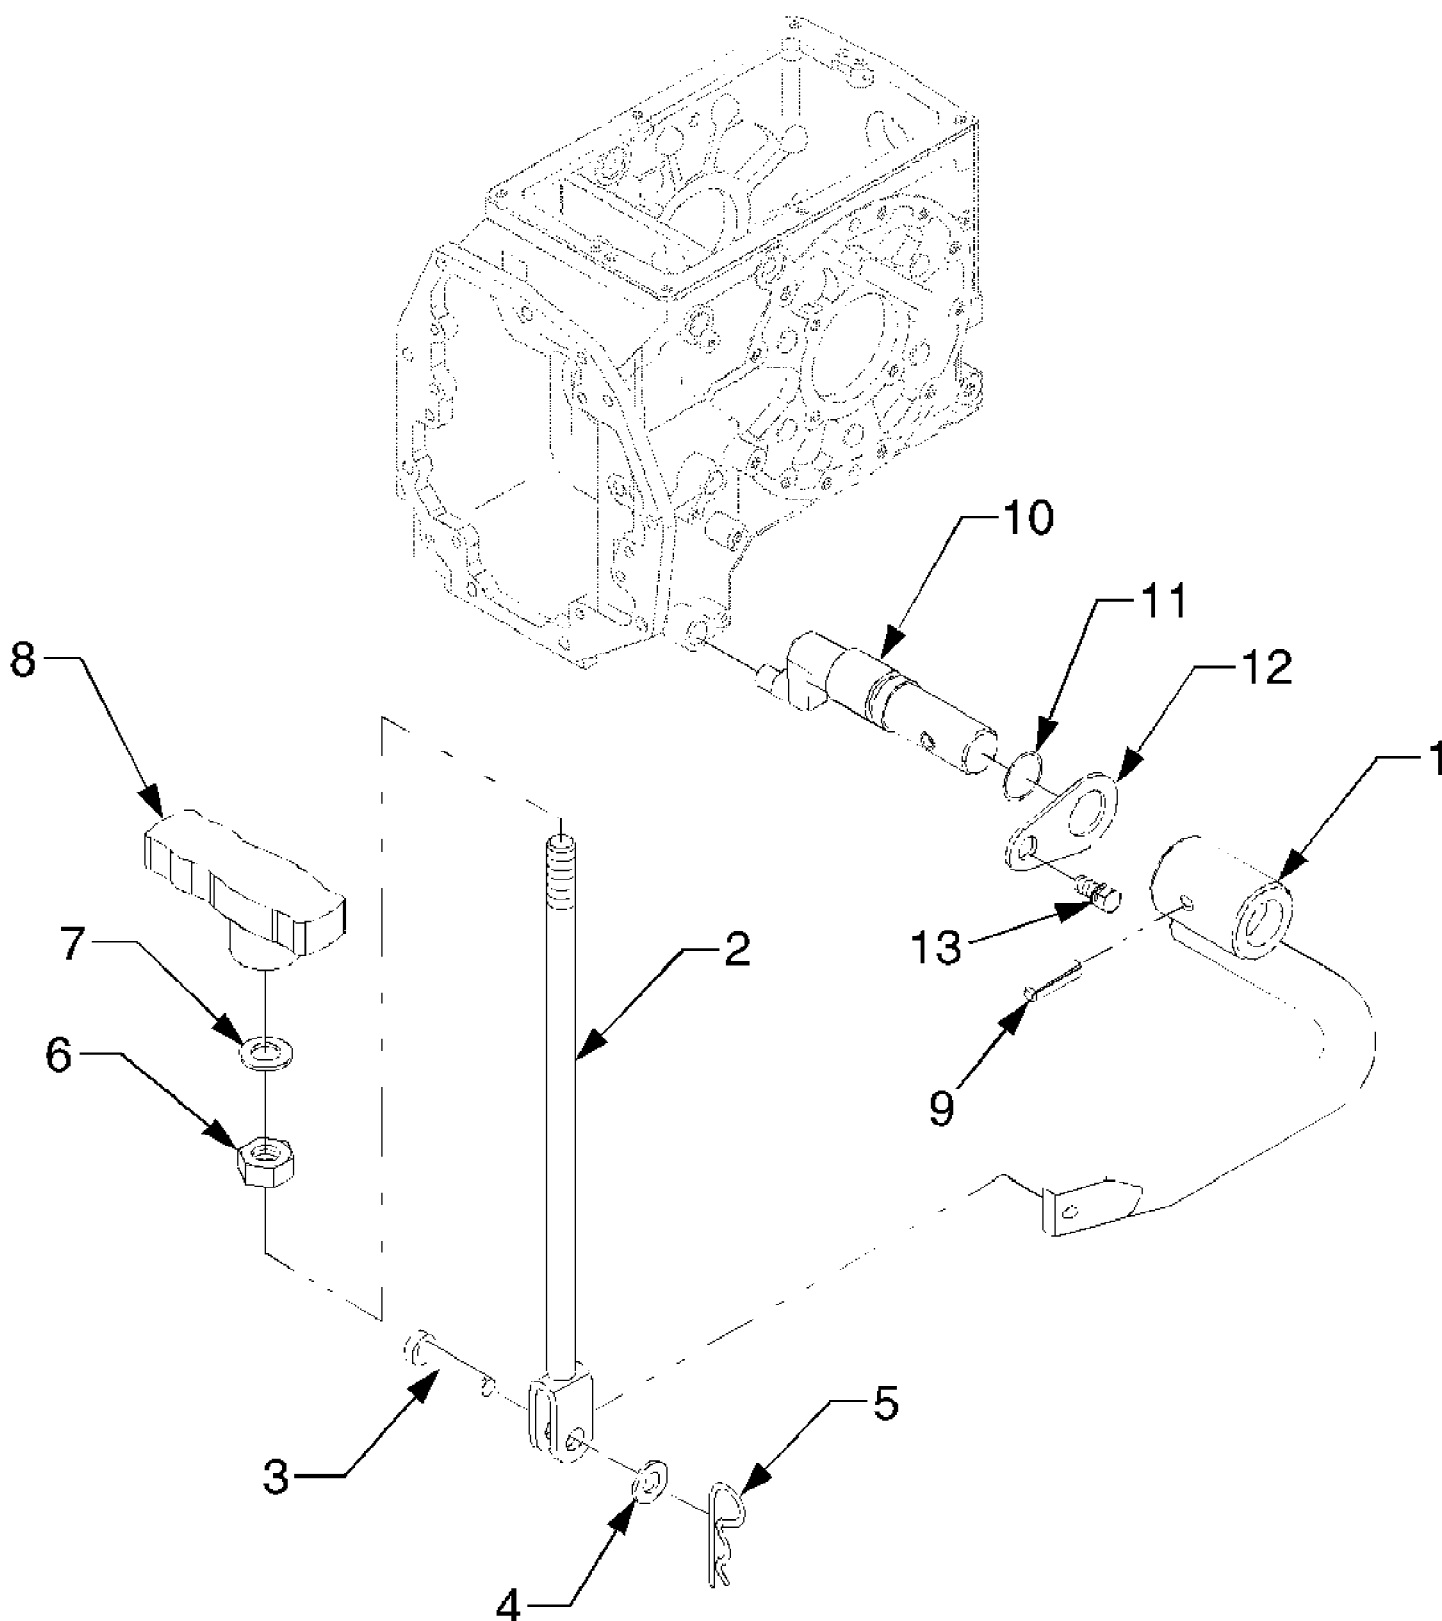 


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2630-60712	1		Lever 1, Front Wheel
2	DD-T2610-60722	1		Lever 2, Front Wheel
3	DD-05122-50820	1		Pin, Joint
4	DD-04012-50080	1		Washer, Plain
5	DD-05525-50800	1		Pin, Snap
6	DD-02176-50100	1		Nut
7	DD-04013-50100	1		Washer, Plain
8	DD-T4520-41591	1	S	Grip
9	DD-05411-00630	1		Pin, Spring
10	DD-T2610-44312	1		Arm, Shifter
11	DD-04811-00160	1		O-ring
12	DD-T4620-44331	1		Stopper
13	DD-01123-50816	1		Bolt

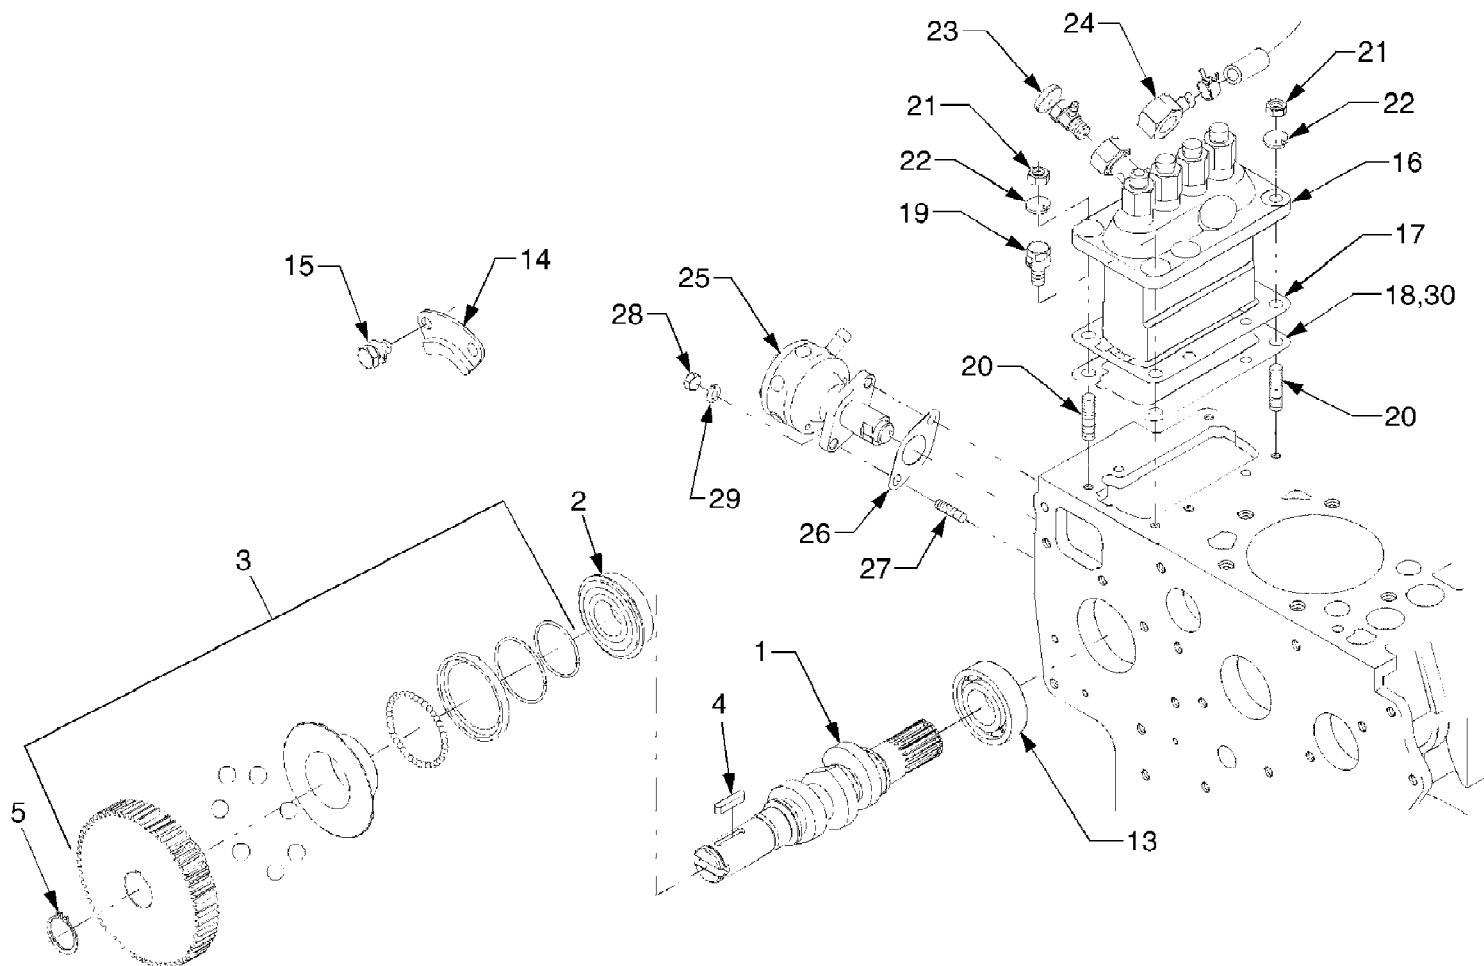 

8354 Tractor
Fuel Camshaft And Injection Pump

Page 84 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-E5610-16171	1		Fuel Camshaft
2	DD-08153-06205	1		Bearing, Ball
3	DD-E6300-A0011	1		Governor Sleeve Ass'y
4	DD-05712-00525	1		Key
5	DD-04612-00240	1		Cir-clip
13	DD-08240-00001	1		Bearing, Ball
14	DD-15221-16321	1		Stopper, Fuel Camshaft
15	DD-01123-50814	2		Bolt
16	DD-E5800-51011	1		Injection Pump Ass'y
17	DD-E5500-52112	AR		Shim, Injection Pump
18	DD-E5500-52122	AR		Shim, Injection Pump
19	DD-01123-50822	2		Bolt
20	DD-01513-50822	2		Stud
21	DD-02156-50080	2		Nut
22	DD-04512-50080	2		Washer, Spring
23	DD-84612-60500	1		Jet Start Cock Ass'y
24	DD-E5500-42412	1		Joint, Fuel Pipe
25	DD-15381-52030	1		Fuel Pump Ass'y
26	DD-15241-52141	1		Gasket, Fuel Pump
27	DD-01513-50618	2		Stud
28	DD-02056-50060	2		Nut
29	DD-04512-50060	2		Washer, Spring
30	DD-E5800-52111	AR		Shim, Injection Pump

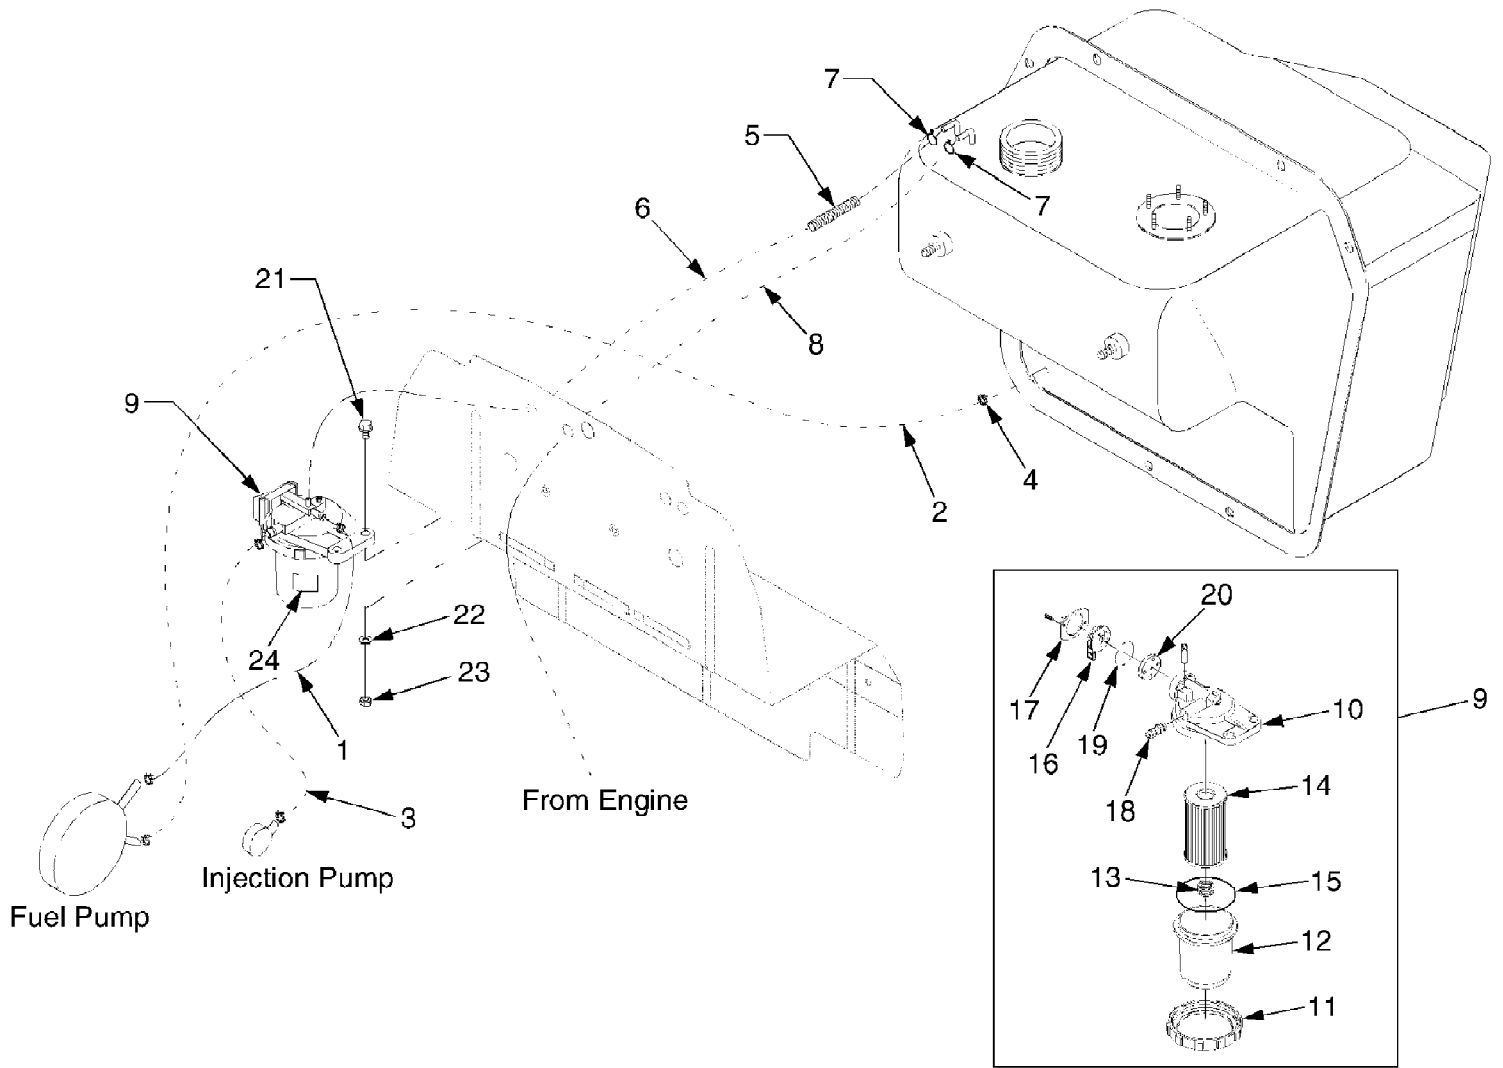 

8354 Tractor
Fuel Filter Group

Page 86 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-09661-80370	1		Hose 1, Fuel
2	DD-09661-80450	1		Hose
3	DD-09661-80450	1		Hose
4	DD-38430-45151	6		Clamp
5	DD-67111-58323	7		Spring
6	DD-38430-35561	1		Pipe 4, Fuel
7	DD-15271-42711	4		Clip
8	DD-09661-40340	1		Pipe 4, Fuel
9	DD-T4240-35015	1		Fuel Filter Ass'y
10	DD-T4240-35023	1		Body, Fuel Filter
11	DD-84612-43150	1		Nut, Stop
12	DD-T4240-43133	1		Pot, Filter
13	DD-84612-43930	1		Spring
14	DD-84612-43160	1		Element, Filter
15	DD-04811-50650	1		O-ring
16	DD-T4240-35083	1		Grip, Filter
17	DD-T4240-35092	1		Support, Handle
18	DD-84912-43170	1		Nipple
19	DD-04811-10290	1		O-ring
20	DD-T2240-35342	1		Packing
21	DD-01123-50830	2		Bolt
22	DD-04512-50080	2		Washer, Spring
22	DD-02156-50080	2		Nut
23	DD-T4240-35101	1		Label (Fuel Filter)

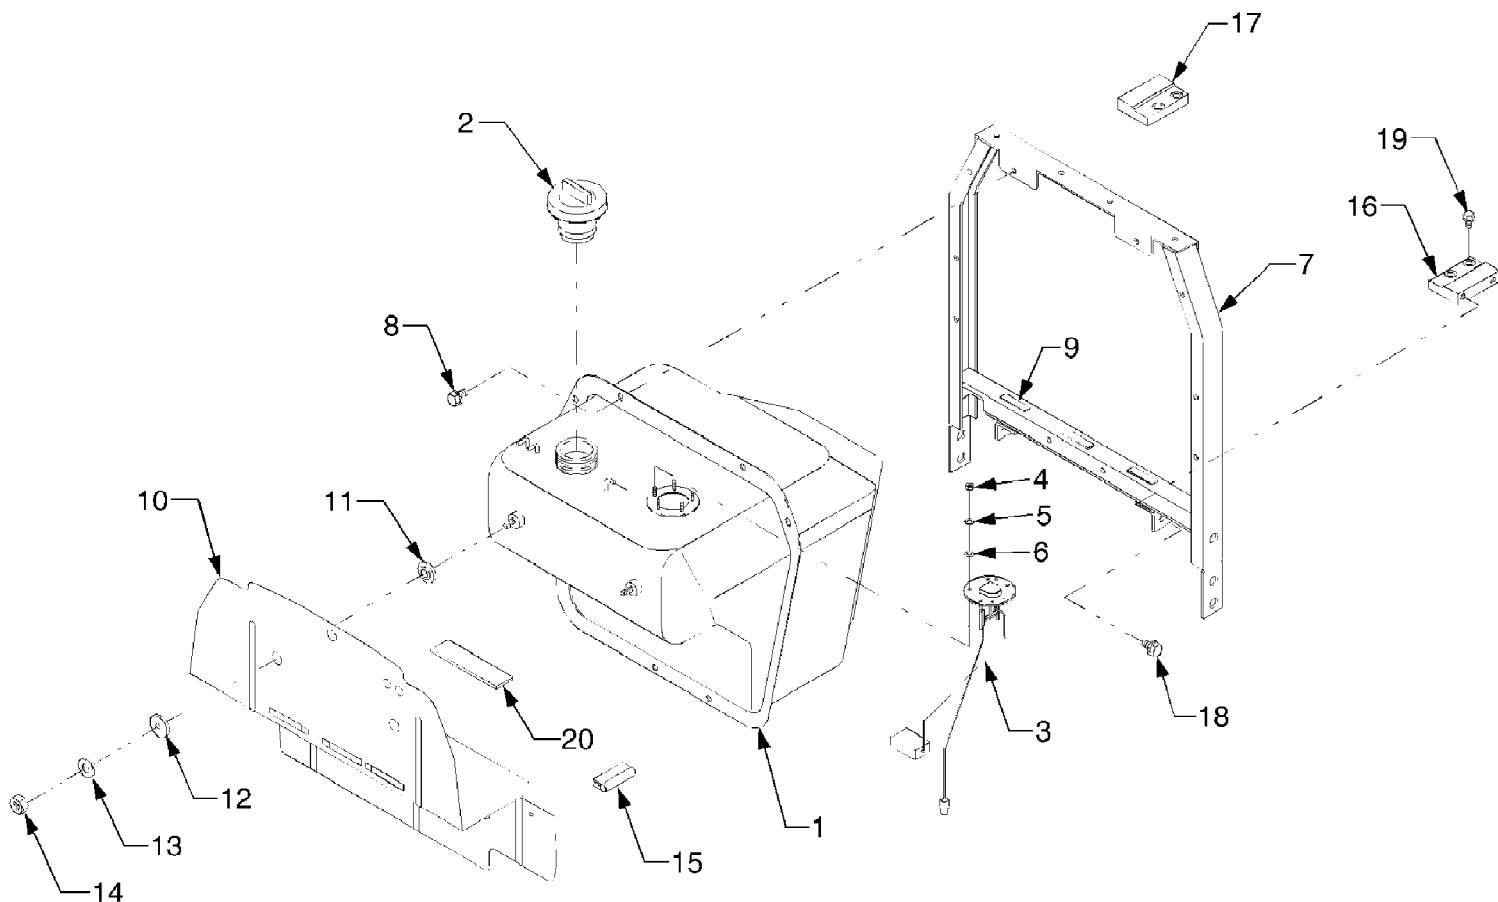 

8354 Tractor
Fuel Tank Group

Page 88 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2611-55014	1		Tank, Fuel
2	DD-T2611-54822	1		Fuel Cap Assy
3	DD-T4620-69213	1		Fuel Sensor Ass'y
4	DD-02054-50040	5		Nut
5	DD-04512-50040	5		Washer, Spring
6	DD-04012-50040	5		Washer, Plain
7	DD-T4680-55021	1		Bracket, Bonnet
8	DD-01125-50820	8		Bolt
9	DD-T2610-50271	3		Rubber, Cushion
10	DD-T2610-55031	1		Plate, Shuttle
11	DD-T4620-55041	4		Grommet
12	DD-T2610-80691	4		Cushion
13	DD-04015-50080	4		Washer, Plain
14	DD-02156-50080	4		Nut
15	DD-T4620-55093	1		Rubber
16	DD-T4620-55113	1		Bracket(LH)
17	DD-T4620-55123	1		Bracket(RH)
18	DD-01133-51030	4		Bolt
19	DD-01133-51022	4		Bolt
20	DD-T2610-50271	1		Rubber, Cushion

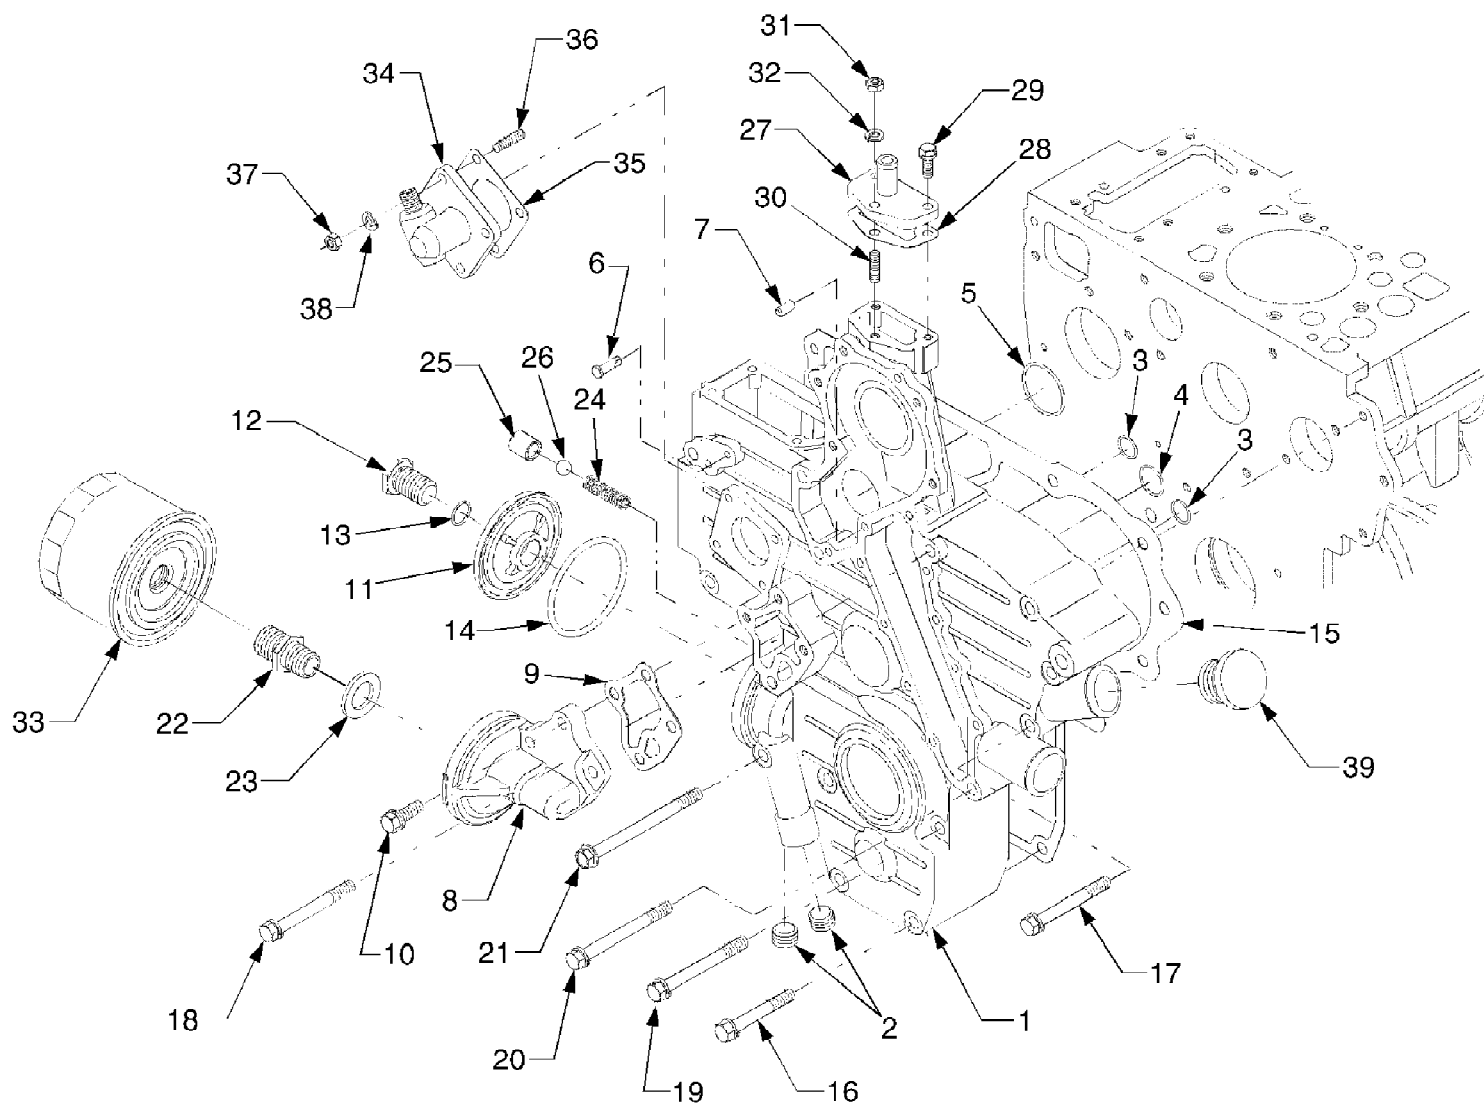 

8354 Tractor
Gear Case

Page 90 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-E5800-A0210	1		Gear Case Ass'y Includes Ref. Nos. 1,2, 6 thru 14, 24 thru 32, and 39
2	DD-E5800-96031	2		Plug
3	DD-04811-00150	2		O-ring
4	DD-04811-00200	1		O-ring
5	DD-04811-00360	1		O-ring
6	DD-15221-56282	1		Pin, Start Spring
7	DD-05012-00612	2		Pin, Straight
8	DD-E6500-32612	1		Support, Oil Filter
9	DD-E5800-32621	1		Gasket
10	DD-01123-50825	3		Bolt
11	DD-E5800-32882	1		Cover
12	DD-E5800-32912	1		Bolt, Cover
13	DD-04811-00150	1		O-ring
14	DD-E5800-96831	1		O-ring
15	DD-E5800-04133	1		Gasket, Gear Case
16	DD-01123-50860	3		Bolt
17	DD-01123-50870	3		Bolt
18	DD-01123-50875	1		Bolt
19	DD-01123-50880	3		Bolt
20	DD-01123-50885	3		Bolt
21	DD-01754-50801	2		Bolt, Flange
22	DD-15521-32291	1		Pipe, Joint
23	DD-04011-50180	1		Washer, Plain
24	DD-15241-36952	1		Spring
25	DD-E5500-36932	1		Valve Seat
26	DD-07715-03213	1		Ball
27	DD-15521-73321	1		Flange, Water Return
28	DD-15521-73331	1		Gasket
29	DD-01023-50620	2		Bolt
30	DD-01513-50616	1		Stud
31	DD-02056-50060	1		Nut
32	DD-04512-50060	1		Washer, Spring
33	DD-E6201-32443	1		Filter, Engine Oil
34	DD-E5205-58812	1		Hour Meter Ass'y Serial Number 3185-00967 and Below
35	DD-15221-88131	1		Gasket Serial Number 3185-00967 and Below
36	DD-15221-88211	4		Stud Serial Number 3185-00967 and Below
37	DD-02056-50060	4		Nut Serial Number 3185-00967 and Below
38	DD-04512-50060	4		Washer, Spring Serial Number 3185-00967 and Below
39	DD-E5800-33143	1		Plug, Oil

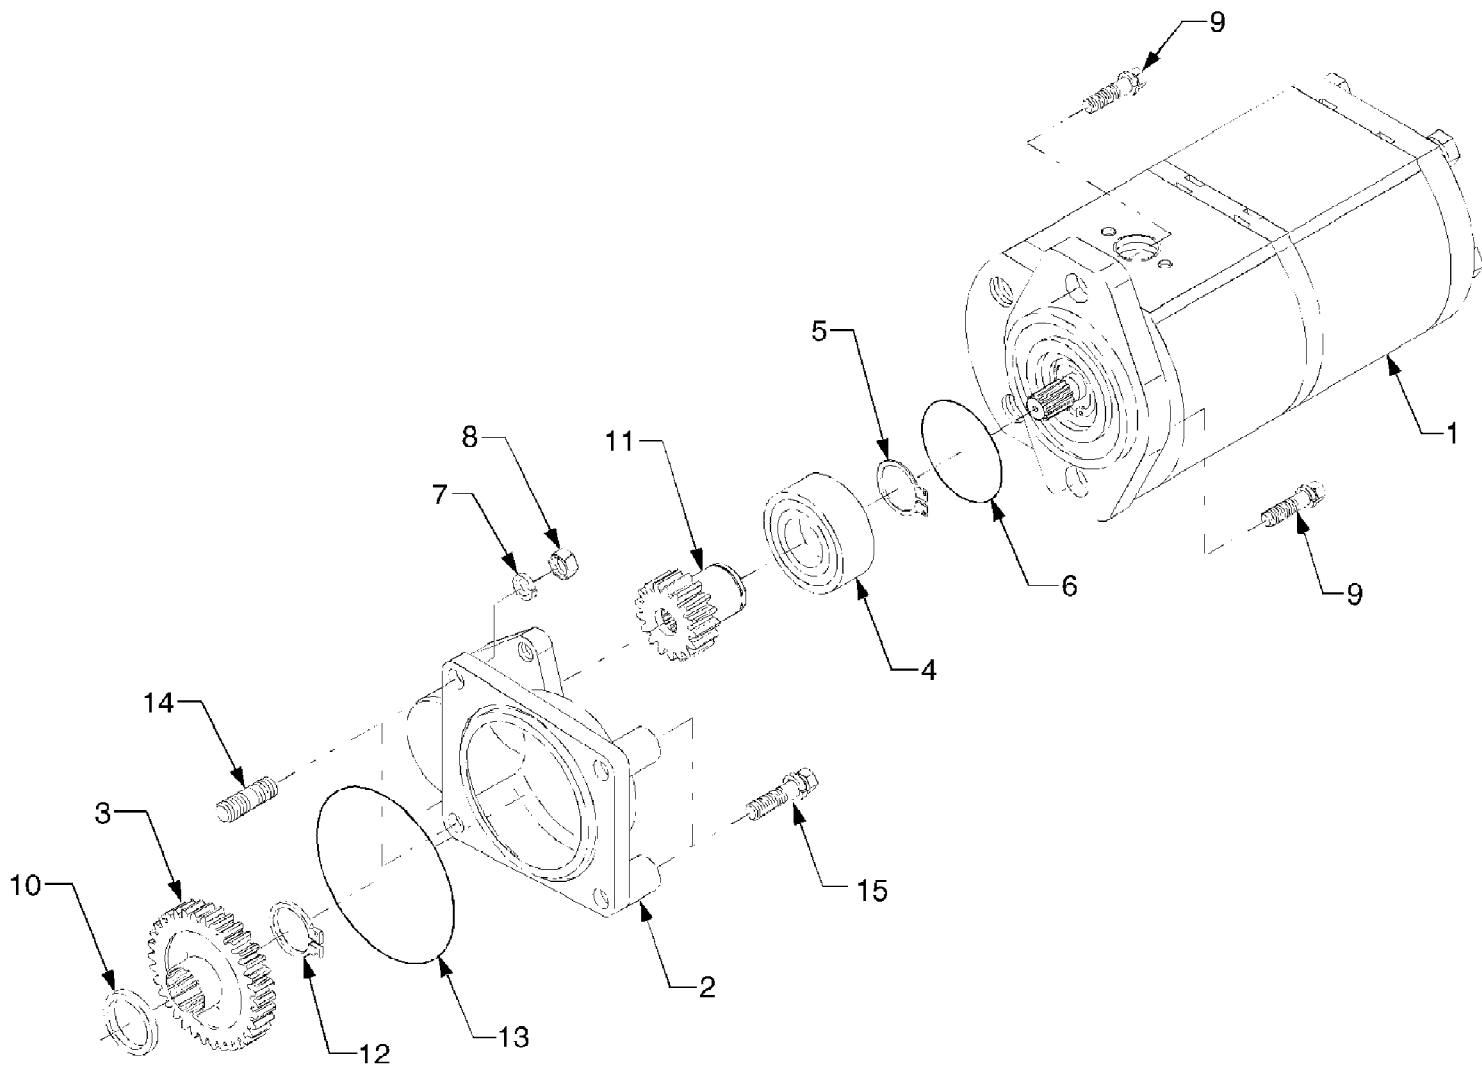 

8354 Tractor
Gear Pump Group

Page 92 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4620-76042	1	S	Pump, Gear
2	DD-T4620-76001	1		Holder, Gear Pump
3	DD-T2720-76021	1		Gear, 33
4	DD-08241-05205	1		Bearing, Ball
5	DD-04612-00250	1		Cir-clip, External
6	DD-04811-10800	1		O-Ring
7	DD-04512-50080	2		Washer, Spring
8	DD-02114-50080	2		Nut
9	DD-01133-51035	2		Bolt
10	DD-35370-37821	1		Spacer
11	DD-T2720-76031	1		Gear, 18
12	DD-15471-95361	1		Cir-clip
13	DD-04811-10850	1		O-Ring
14	DD-01513-50822	2		Stud
15	DD-01123-50845	2		Bolt

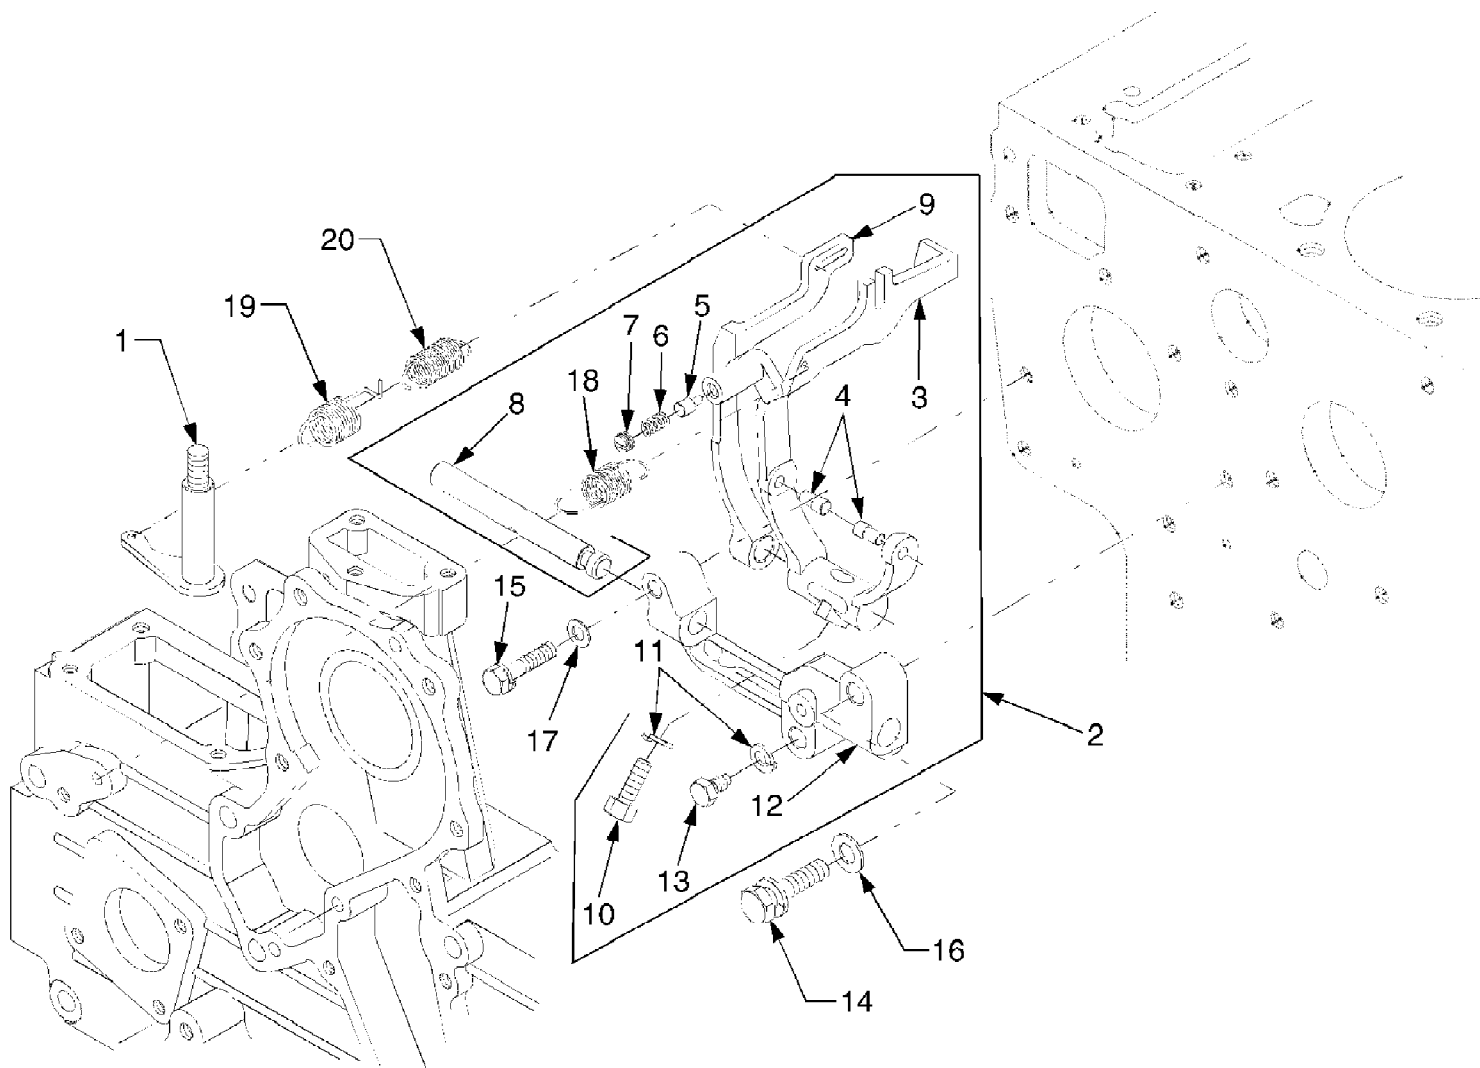 


8354 Tractor
Governor

Page 94 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-15601-56021	1		Governor Lever Ass'y
2	DD-E6300-56053	1		Fork Lever Ass'y Includes Ref Nos. 3 thru 13
3		1		Lever 1, Fork
4		2		Pin, Fork Lever
5		1		Pin
6		1		Spring
7		1		Screw, Set
8		1		Shaft, Fork Lever
9		1		Lever 2, Fork
10		1		Bolt
11		2		Washer, Spring
12		1		Holder, Fork Lever
13		1		Bolt
14	DD-01123-50832	2		Bolt
15	DD-01023-50628	1		Bolt
16	DD-04012-50080	2		Washer, Plain
17	DD-04012-50060	1		Washer, Plain
18	DD-E6300-56481	1		Spring, Start
19	DD-E6300-56414	1		Spring 1, Governor
20	DD-E6313-56421	1		Spring 2, Governor

 
8354 Tractor
Hydraulic Lift Arm Group

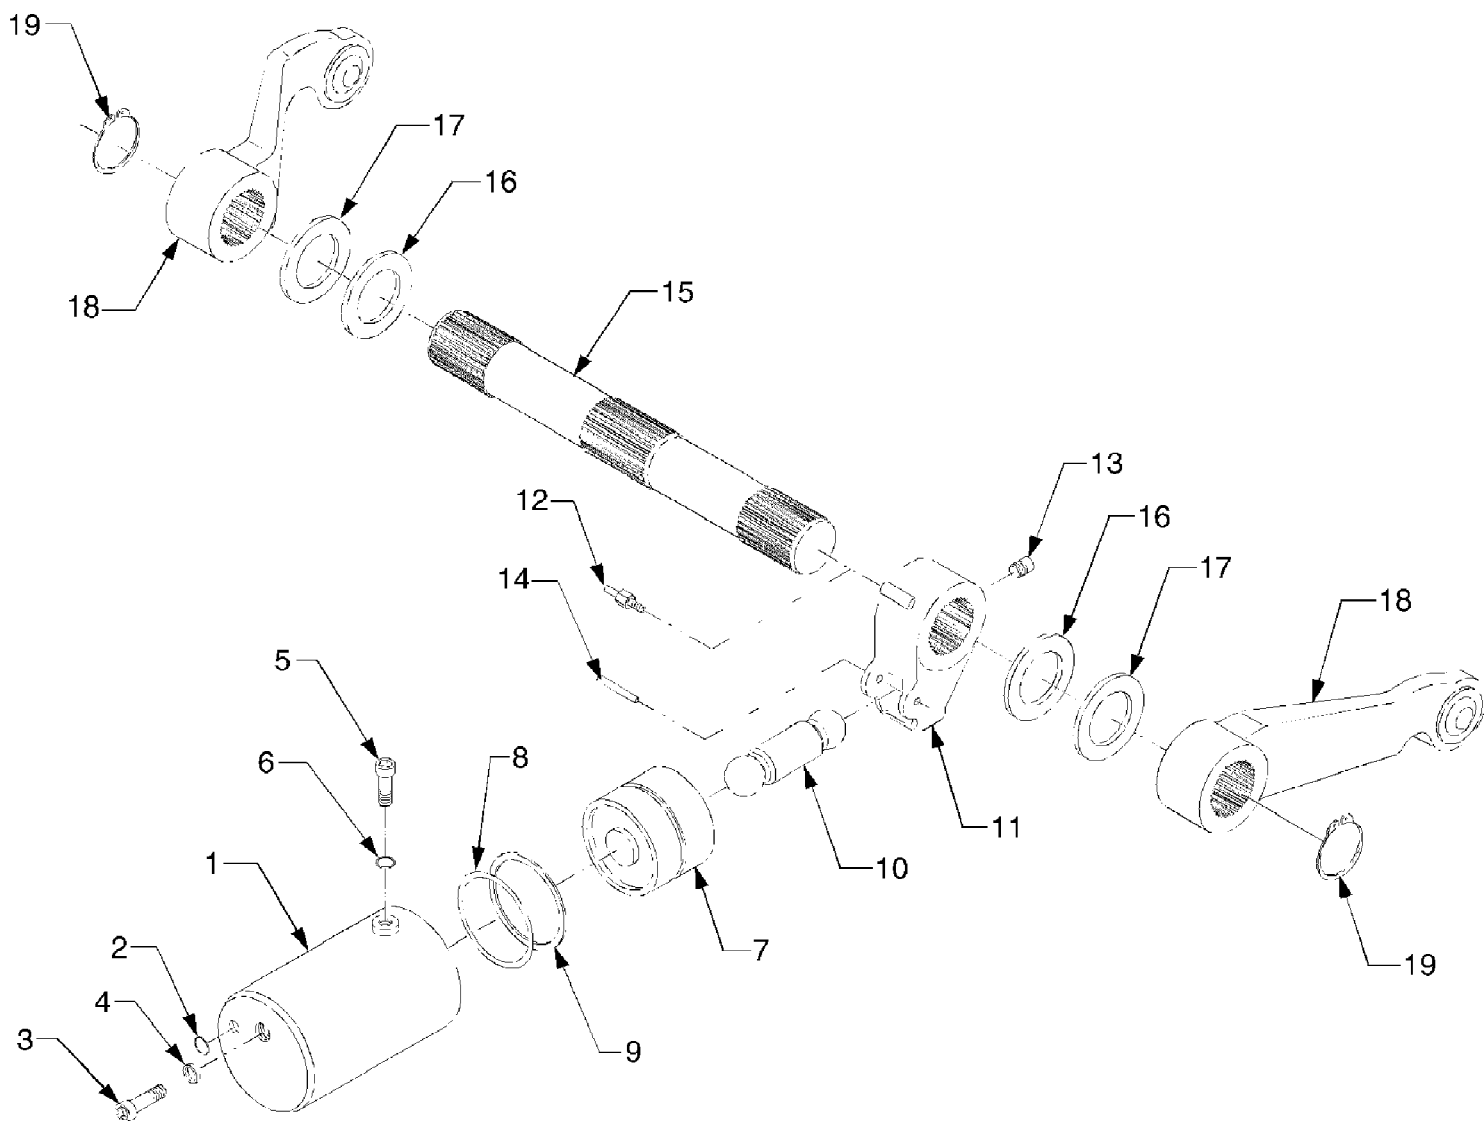


8354 Tractor
Hydraulic Lift Arm Group

Page 96 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-37303	1		Cylinder
2	DD-04810-00120	1		O-Ring
3	DD-T2610-37362	2		Bolt
4	DD-04717-01200	1		Washer, Seal
5	DD-T2610-37352	1		Bolt
6	DD-04717-01400	1		Washer, Seal
7	DD-T2610-37312	1		Piston
8	DD-04810-00800	1		O-Ring
9	DD-T2610-37331	1		Ring, Backup
10	DD-T2610-37322	1		Rod, Hydraulic
11	DD-T2610-37442	1		Arm, Hydraulic
12	DD-T2610-37421	1		Pin
13	DD-T2610-37453	1		Screw, Set
14	DD-05411-00850	1		Pin, Spring
15	DD-T2610-37434	1		Shaft, Hydraulic Arm
16	DD-09500-45609	2		Seal, Oil
17	DD-T2610-37461	2		Washer
18	DD-T2610-37202	2		Lift Arm Ass'y
19	DD-04612-00450	2		Cir-clip

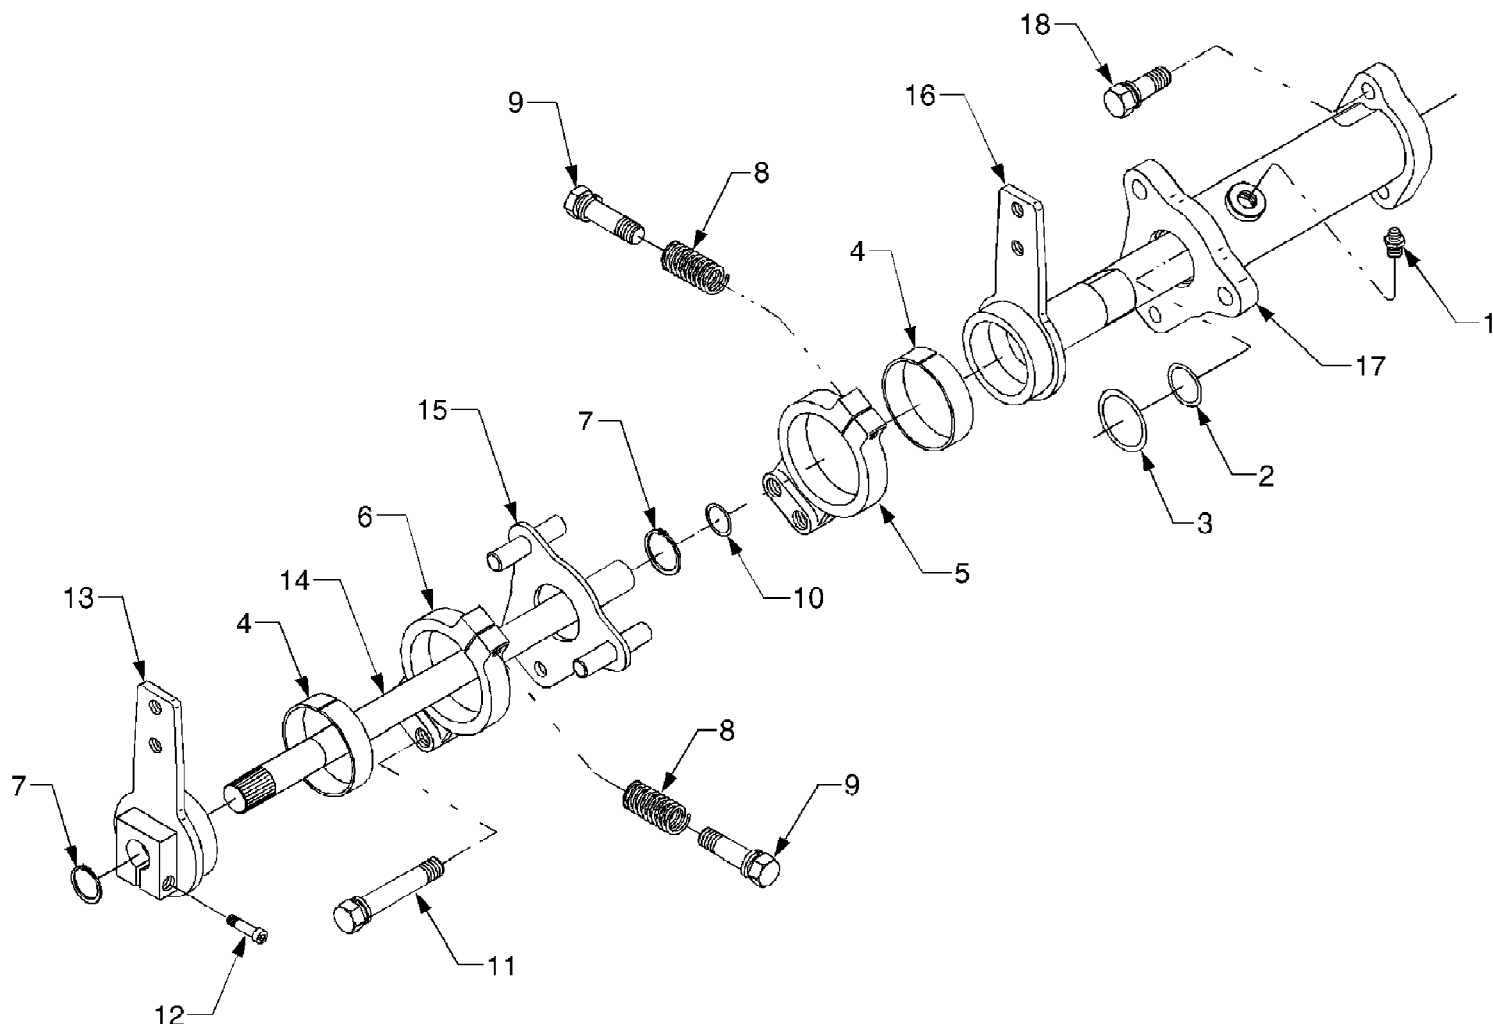 


Ref #	Part Number	Qty	S/P/F	Description
1	DD-06613-10010	1		Nipple, Grease
2	DD-04811-00210	1		O-Ring
3	DD-04811-00250	1		O-Ring
4	DD-T2610-39201	2		Clutch
5	DD-T2610-39211	1	S	Hub, 1 Clutch
6	DD-T2610-39221	1	S	Hub, 2 Clutch
7	DD-04612-00160	2		Cir-clip
8	DD-T2610-39233	2		Spring
9	DD-01053-50640	2		Bolt
10	DD-04811-00120	1		O-Ring
11	DD-01123-50855	2		Bolt
12	DD-T2610-39251	1		Bolt
13	DD-T2610-39261	1		Lever, Control
14	DD-T2610-39271	1	S	Shaft
15	DD-T2610-39281	1		Flange
16	DD-T2610-39292	1		Arm, Pitman
17	DD-T2610-39301	1		Support, Hydraulic Lever
18	DD-01123-50825	2		Bolt

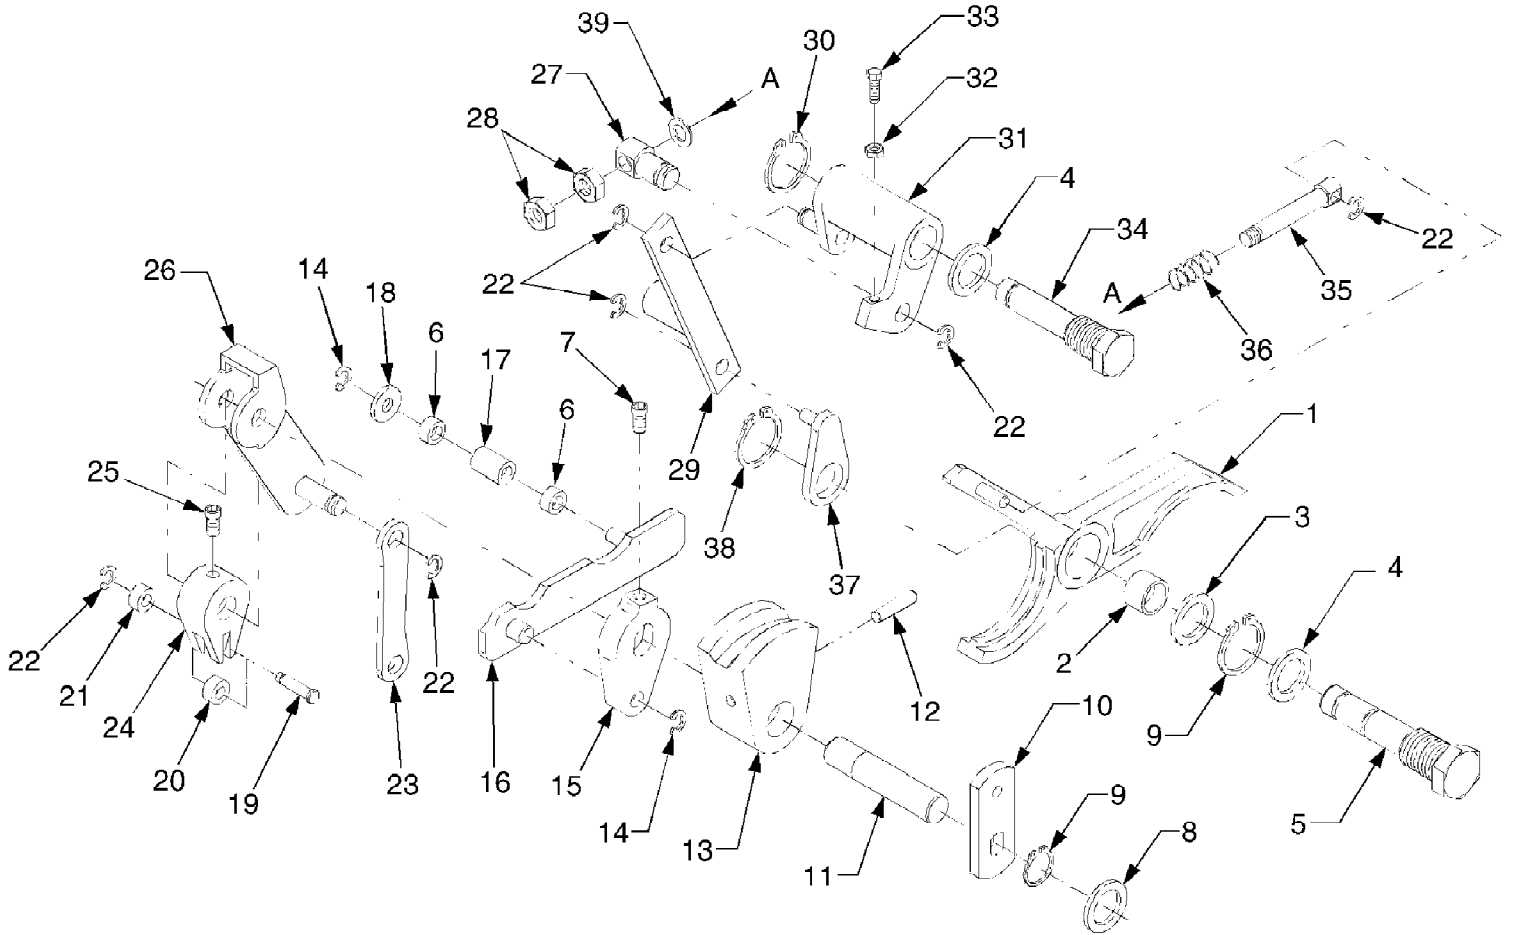 

8354 Tractor
Hydraulic Lift Inner Control Group 2

Page 100 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-39351	1		Lever
2	DD-08811-62216	1		Bearing, Needle
3	DD-T2610-39371	1		Washer
4	DD-04724-00180	1		Packing
5	DD-T2610-39402	1		Pin
6	DD-T2610-39411	2		Roller 3
7	DD-T2610-39422	1		Screw, Lock
8	DD-T2610-39431	1		Seal, Oil
9	DD-04612-00160	2		Cir-clip
10	DD-T2610-39441	1		Link 4
11	DD-T2610-39451	1		Shaft
12	DD-05411-00635	1		Pin, Spring
13	DD-T2610-39462	1		Cam
14	DD-04613-50070	5		Cir-clip
15	DD-T2610-39472	1		Link 1
16	DD-T2610-39481	1		Link 2
17	DD-T2610-39491	1		Roller 4
18	DD-04011-50100	1		Washer, Plain
19	DD-T2610-39511	1		Pin
20	DD-T2610-39521	1		Roller 1
21	DD-T2610-39531	1		Roller 2
22	DD-04613-50060	4		Cir-clip
23	DD-T2610-39611	1		Link 3
24	DD-T2610-39562	1		Arm
25	DD-T2610-39572	1		Screw, Lock
26	DD-T2610-39582	1		Cam 1
27	DD-T2610-39601	1		Pin
28	DD-02014-50060	2		Nut
29	DD-T2610-39551	1		Link
30	DD-04612-00150	1		Cir-clip
31	DD-T2610-39621	1		Arm
32	DD-02114-50080	1		Nut
33	DD-T2610-39631	1		Bolt
34	DD-T2610-39652	1		Pin
35	DD-T2610-39661	1		Pin
36	DD-T2610-39672	1		Spring
37	DD-T2610-39681	1		Link
38	DD-04612-00150	1		Cir-clip
39	DD-04014-50060	1		Washer, Plain

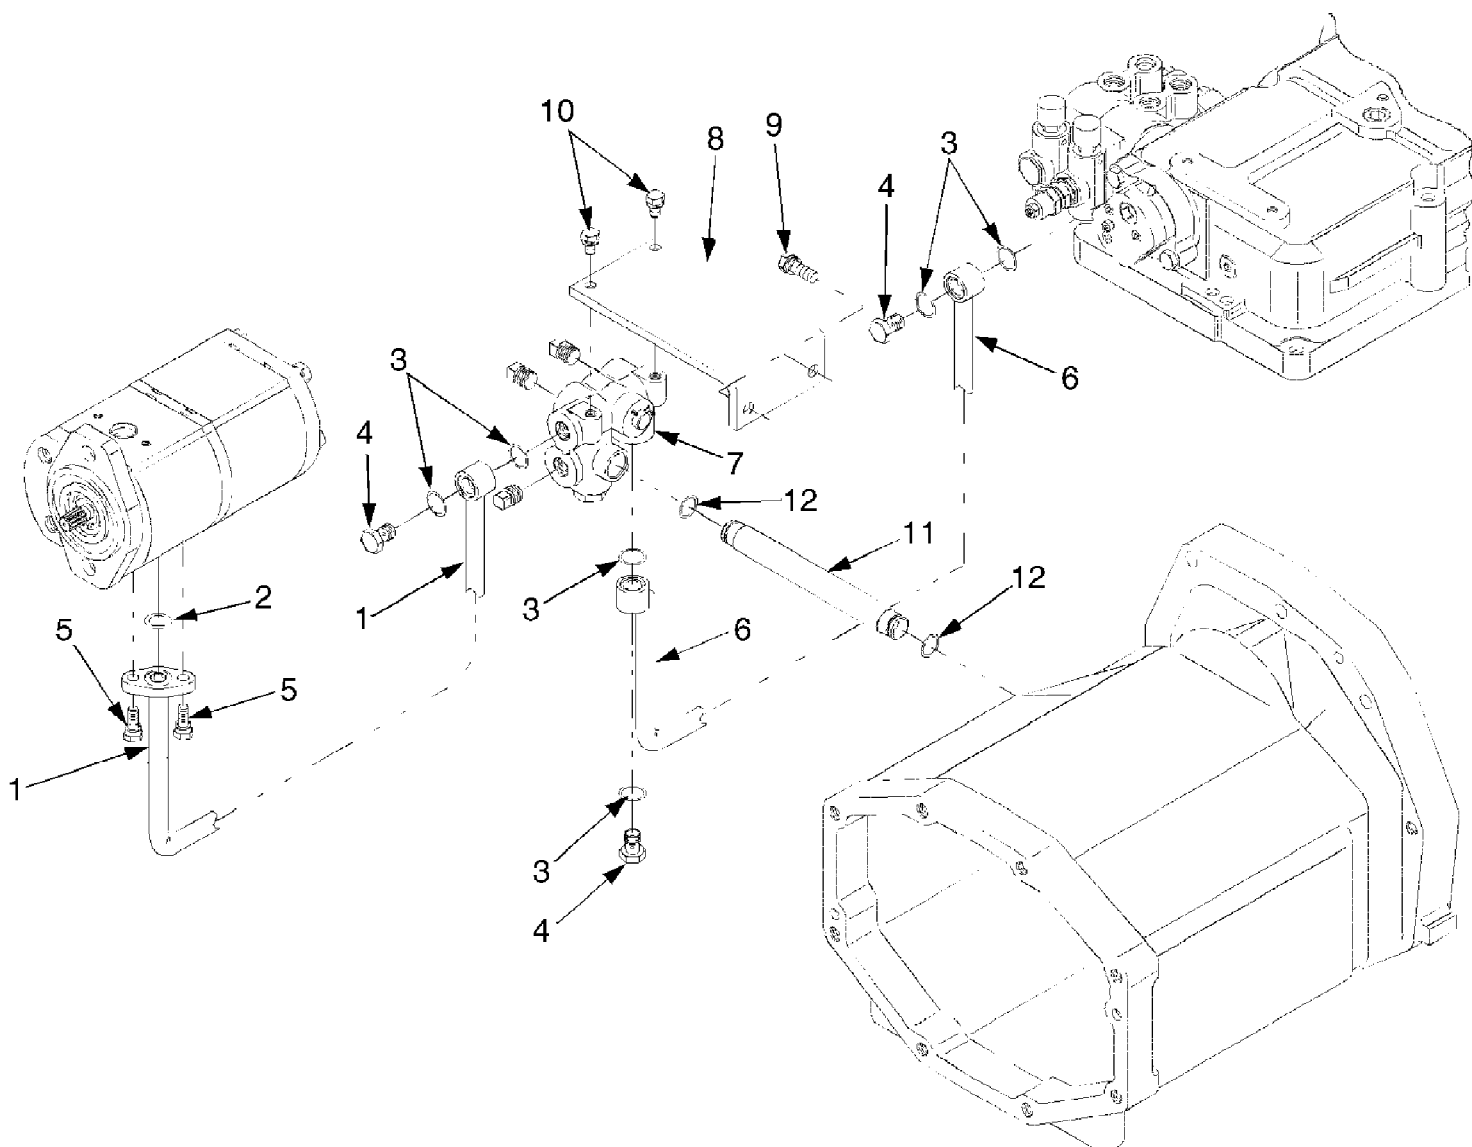 

8354 Tractor
Hydraulic Pipe Group


Page 102 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2620-37074	1		Pipe 1, Hydraulic
2	DD-04810-00180	1		O-Ring
3	DD-04810-00200	6		O-Ring
4	DD-T4620-37092	3		Bolt, Joint
5	DD-01123-50820	2		Bolt
6	DD-T2615-37136	1		Pipe 2, Hydraulic
7	DD-T4625-37013	1		Hydraulic Block Ass'y
8	DD-T2610-37042	1		Support, Hydraulic Block
9	DD-01133-51025	2		Bolt
10	DD-01123-50820	2		Bolt
11	DD-T2610-37022	1		Pipe, Return
12	DD-04811-05170	2		O-Ring

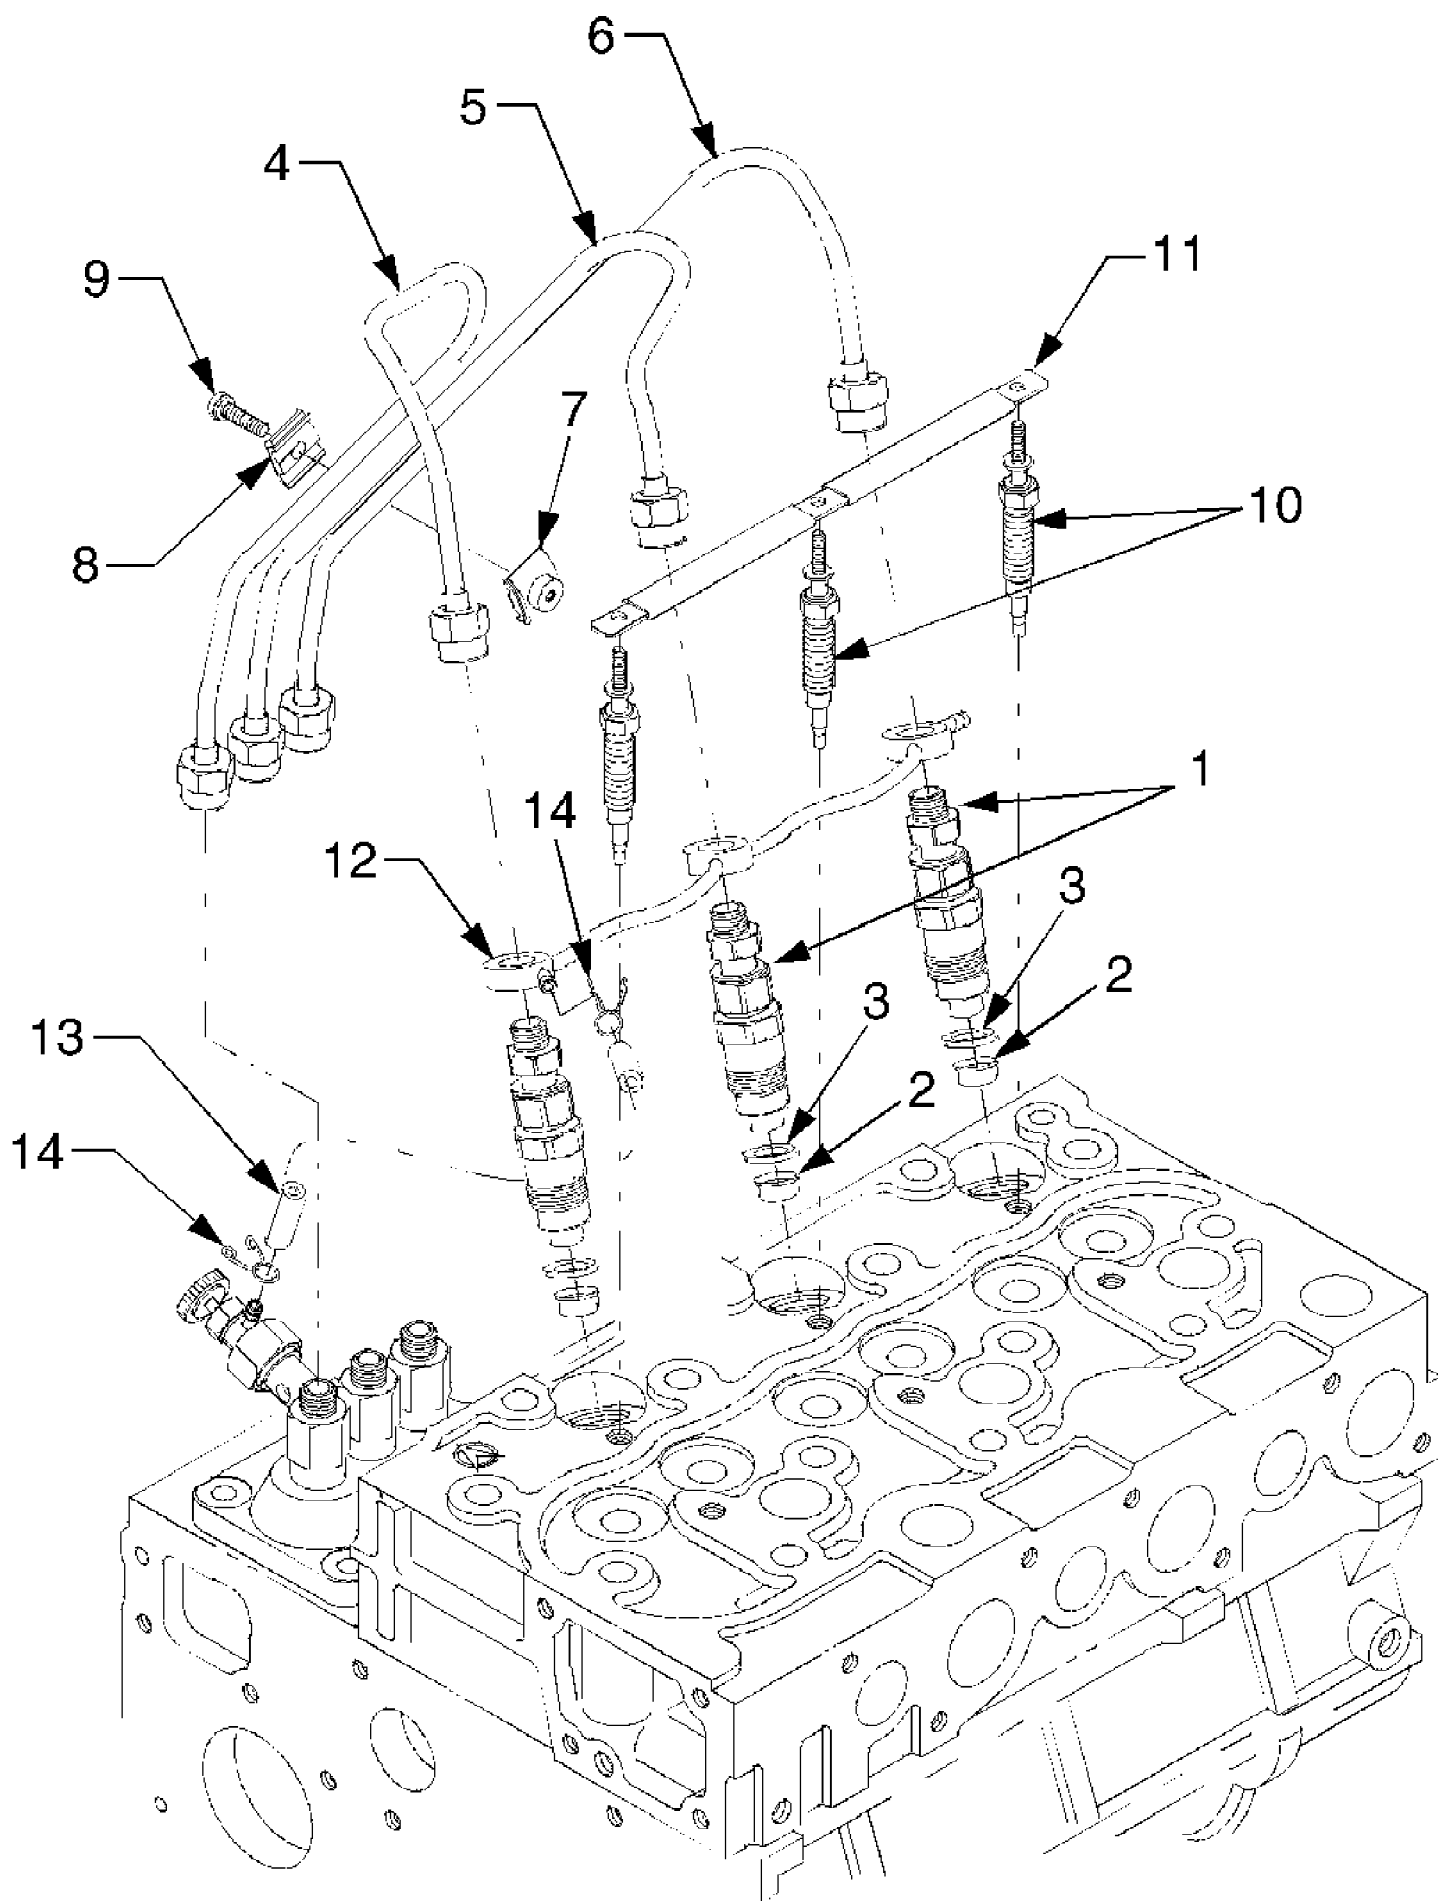 


8354 Tractor
Injection Nozzles

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6300-53004	3	/P	Nozzle Holder Ass'y
2	DD-E6300-53651	3		Seal
3	DD-E6300-53621	3		Gasket
4	DD-E5610-53714	1		Pipe 1, Injection
5	DD-E5610-53723	1		Pipe 2, Injection
6	DD-E5610-53734	1	/P	Pipe 3, Injection
7	DD-15121-53852	2		Clamp 1, Pipe
8	DD-T4815-67371	2		Clamp 2, Pipe
9	DD-03024-50520	2		Screw
10	DD-E6301-65512	3	/P	Plug, Glow
11	DD-E5800-65562	1		Cord, Glow Plug
12	DD-E5800-42501	1		Over Flow Pipe Ass'y
13	DD-09661-40300	1		Tube, Fuel
14	DD-14971-42751	2		Clamp, Pipe

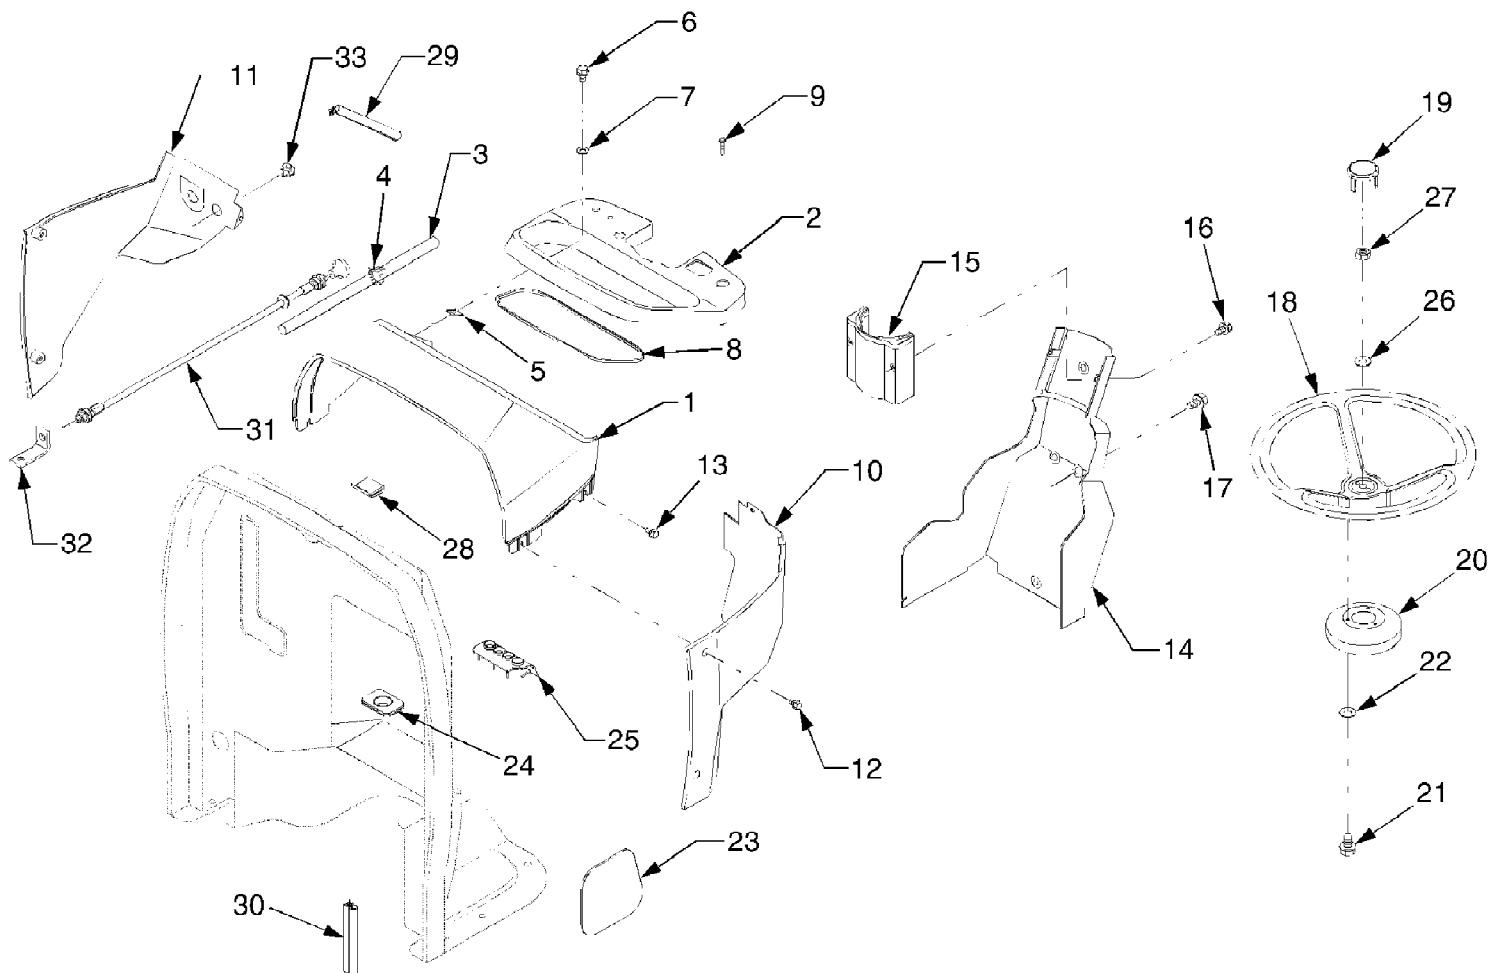 

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4620-55325	1	/P	Hood, Instrument
2	DD-T4680-55335	1	/P	Cover, Instrument
3	DD-09661-50800	1		Hose 3, Fuel
4	DD-14971-42751	1		Clamp, Pipe
5	DD-38245-29253	4		Nut, Spring
6	DD-T4625-55421	4		Screw
7	DD-04013-50060	4	/P	Washer, Plain
8	DD-T4620-55391	1		Packing
9	DD-38240-18831	10		Screw
10	DD-T4620-55346	1	/P	Cover, Instrument (LH)
11	DD-T4620-55359	1	/P	Cover, Instrument (RH)
12	DD-T4624-55431	4		Bolt, Flange
13	DD-T4624-55441	2		Bolt
14	DD-T4620-55365	1	/P	Cover 1, Steering
15	DD-T4620-55375	1	/P	Cover 2, Steering
16	DD-41122-51241	2		Bolt
17	DD-01754-50820	4		Bolt, Flange
18	DD-T4620-55451	1	S	Steering Wheel
19	DDT462055461001	1		Cap, Steering Wheel
20	DD-T4620-55471	1		Cover, Steering Wheel
21	DD-03027-50512	3		Screw
22	DD-04515-50050	3		Washer, Plain
23	DD-T4620-55383	1		Cover, Frame
24	DD-T4620-55401	1		Grommet 1
25	DD-T4620-55411	1		Grommet 2
26	DD-04512-50120	1		Washer, Spring
27	DD-02176-50120	1		Nut
28	DD-T4620-50741	1		Rubber
29	DD-T2610-55333	1		Rubber
30	DD-T4620-54381	1		Rubber
31	DD-T4625-34801	1		Wire, Engine Stop
32	DD-E5205-57482	1		Holder, Wire
33	DD-T4340-31141	1		Plug

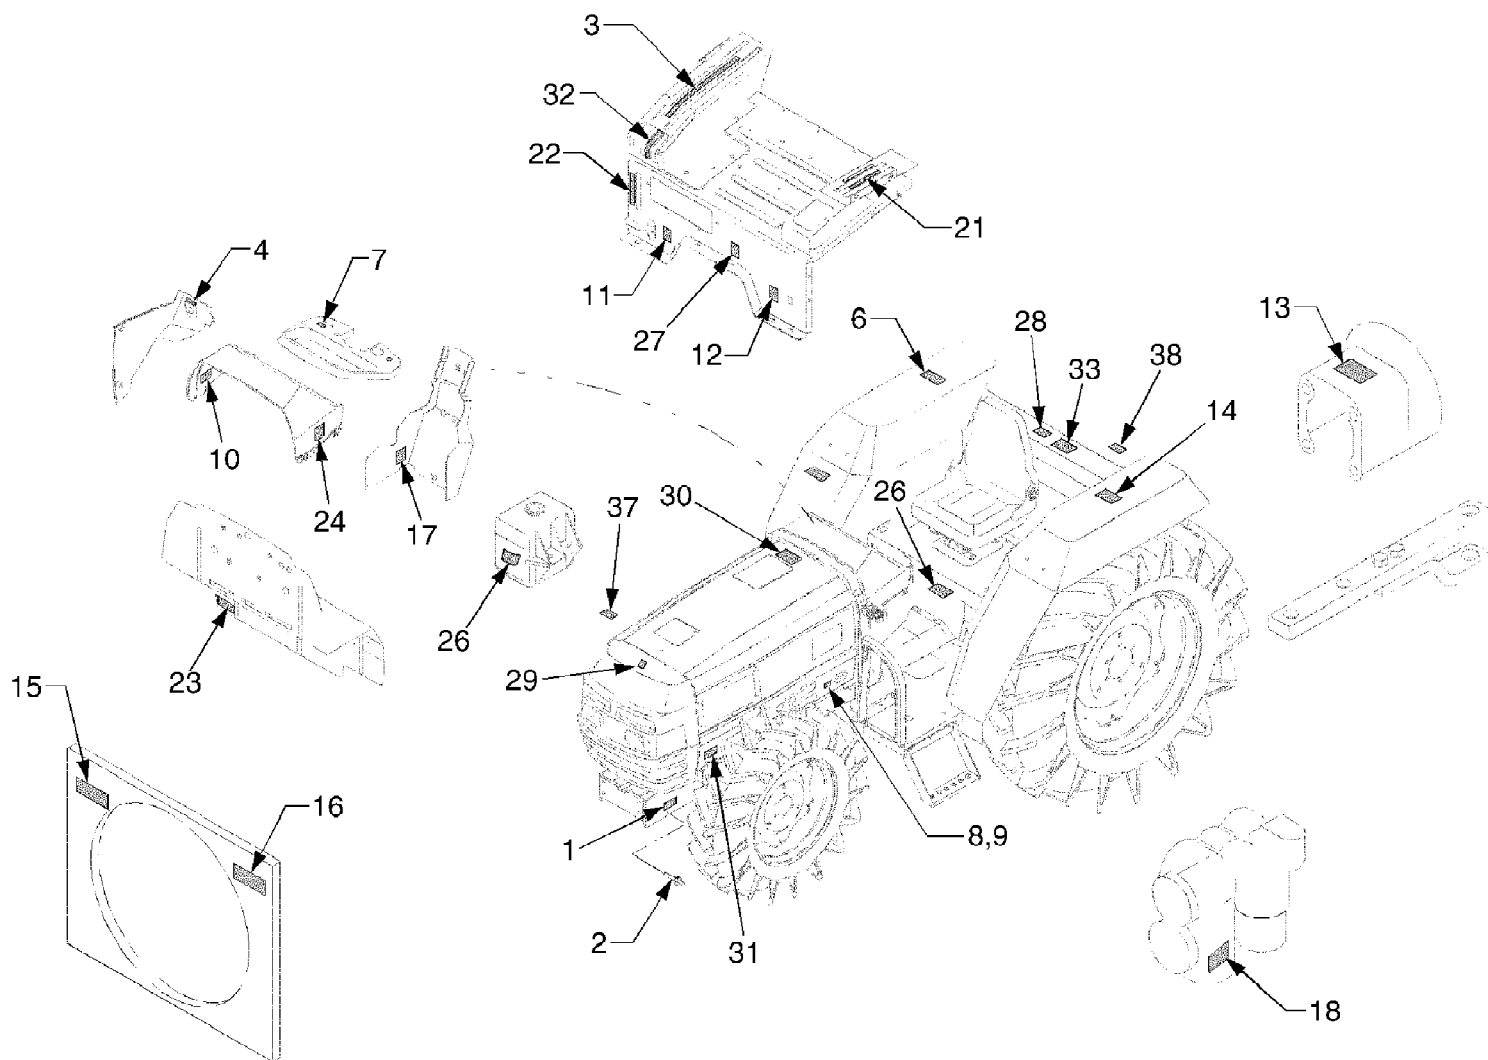 


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2626-52021	1		Label, Product
2	DD-05624-20408	4		Rivet
3	DD-T2615-52251	1		Label, Position
4	DD-T4625-52101	1		Label, Start S/W
5	DD-T2241-50112	1		Label, Cartridge
6	DD-T2325-50512	1		Label, Safety
7	DD-T4625-52162	1		Label, PTO Clutch
8	DD-T4625-52172	1		Label, Reminder (RH)
9	DD-T4625-52182	1		Label, Reminder (LH)
10	DD-T4625-52191	1		Label, Parking Brake
11	DD-T2305-26692	1	S	Label, Diff. Lock
12	DD-94612-48171	1		Label, Front Wheel
13	DD-T2325-50743	1		Label, PTO Caution
14	DD-T2445-50724	1		Label, Rops Caution
15	DD-T4625-52351	1		Label, Caution(Fan)
16	DD-T4625-52361	1		Label, Muffler
17	DD-T2241-50702	1		Label, Caution
18	DD-T4625-52281	1		Label, Hyd. Block
21	DD-T2615-52092	1		Label, Hi-Low
22	DD-T2615-53052	1		Label, Mid PTO
23	DD-T2325-50192	1		Label, Fuel Filter
24	DD-T4625-53191	1		Label, Caution
26	DD-T2541-88212	1		Label, Cooling Water
27	DD-T2610-52461	1		Label, Speed Control
28	DD-T2615-53061	1		Label, Oil Fill
29	DD-T4685-52181	1		Label, Front Grill
30	DD-T2615-54112	1		Label, Fuel Caution
31	DD-T2615-55112	1	/P	Label, Muffler Caution
32	DD-T2610-52051	1		Label, Adjusting Lever
33	DD-T2615-52131	1		Label, Coupler Socket
37	DD-T2615-53561	1		Label, Radiator
38	DD-T4685-52311	1		Label, Implement Caution
	777D07904	2		Label, Model - 8354SS
	777D07751	1	S	Label, Cub Cadet - RH
	777D07752	1	S	Label, Cub Cadet - LH
	777D06897	1		Label, Cub Cadet Steering Cap

8354 Tractor
Light Group

Page 110 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-84612-34231	2		Lamp, Hazard
2	DD-84612-34281	2		Bulb, Hazard
3	DD-84612-34240	2		Cover (LH)
4	DD-84612-34250	2		Cover (RH)
5	DD-84612-34260	2		Frame
6	DD-84612-34270	2		Packing
7	DD-84612-34300	6		Screw
8	DD-02014-50100	2		Nut
9	DD-04512-50100	2		Washer, Spring
10	DD-T2630-75891	1		Reflector Amp Ass'y (LH)
11	DD-04012-50050	4		Washer, Plain
12	DD-04512-50050	4		Washer, Spring
13	DD-02114-50050	4		Nut
14	DD-T4340-33682	3		Bulb
15	DD-T4340-33692	2		Bulb
16	DD-T2630-75881	1		Reflector Amp Ass'y (RH)
22	DDT261634501YW	1		Working Lamp Ass'y
24	DD-T4340-34511	1		Body
25	DD-T2616-34541	1		Bracket
26	DD-01754-50816	2		Bolt, Flange
27	DD-01135-51020	1		Bolt
28	DD-84612-34240	1		Cover (LH)
29	DD-84612-34250	1		Cover (RH)
30	DD-84612-34270	2		Packing

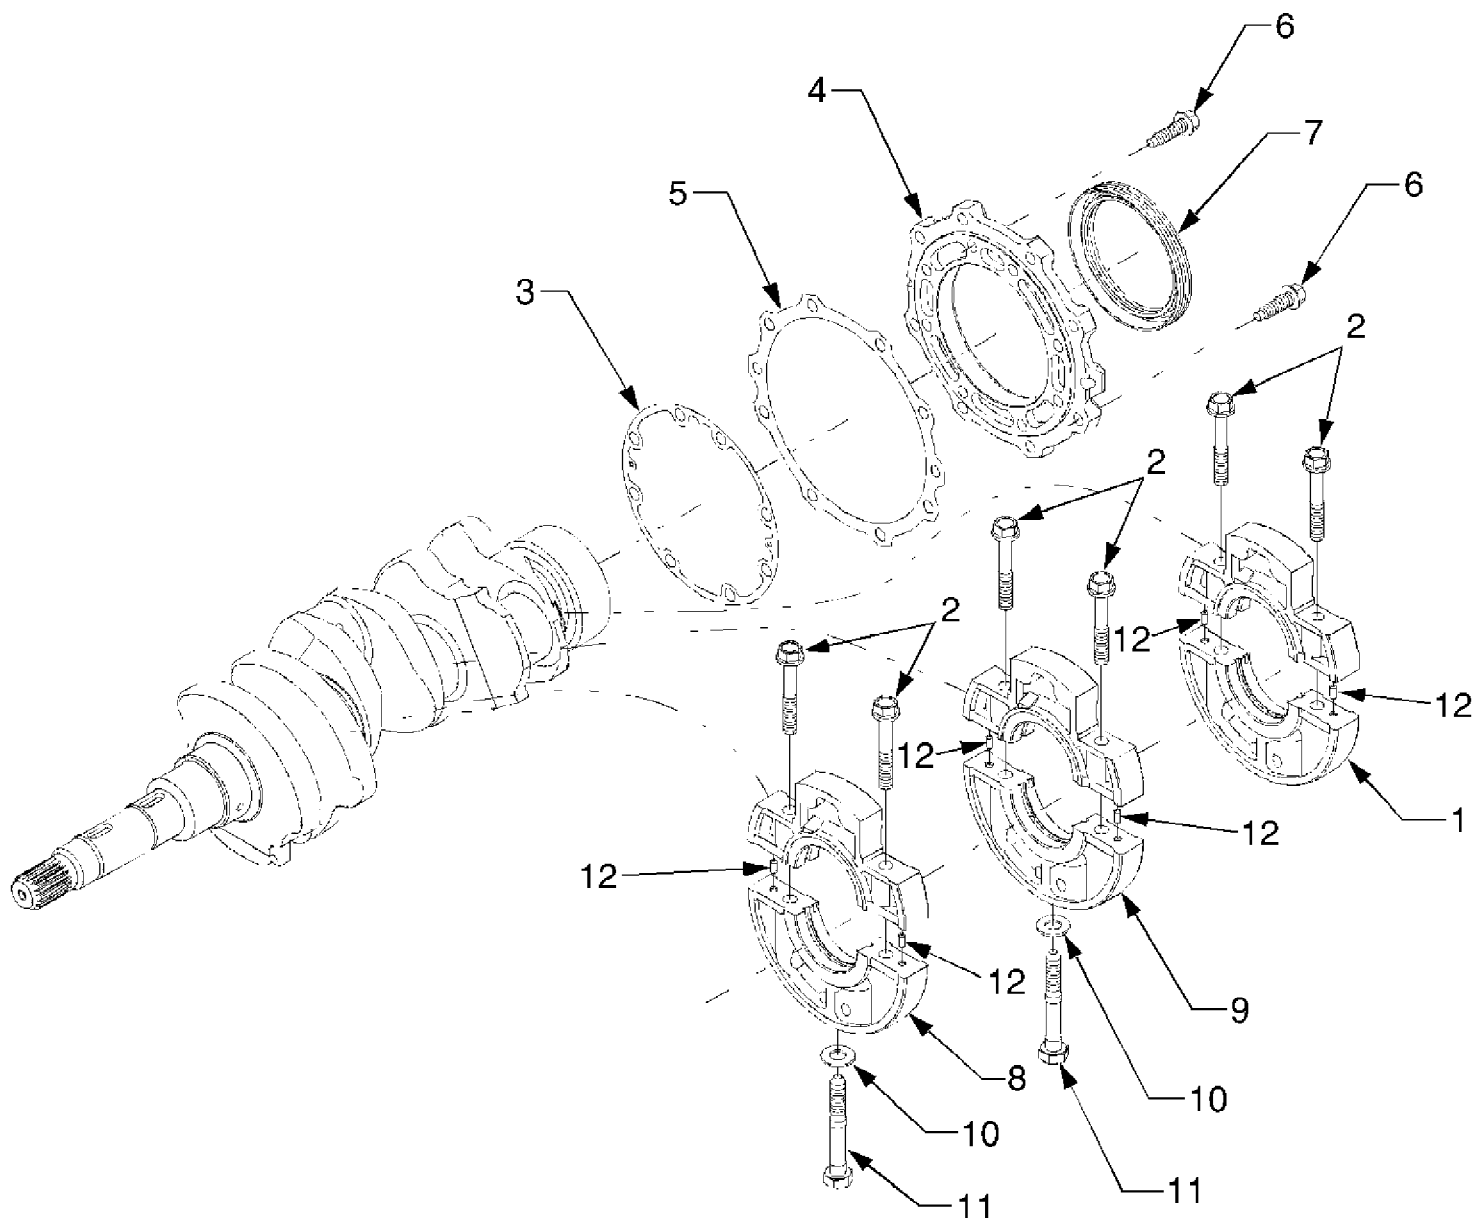 

8354 Tractor
Main Bearing Case


Page 112 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6300-A0033	1		Main Bearing Case Ass'y Includes Ref. Nos. 2 & 12
2	DD-E6300-04542	6		Bolt, Bearing Case 1
3	DD-E6300-04362	1		Gasket, Bearing Case
4	DD-E6300-04812	1		Cover, Main Bearing Case
5	DD-E6300-04821	1		Gasket, Bearing Case
6	DD-01654-50830	16		Pin, Flange Bolt
7	DD-E5500-04464	1		Seal, Oil
8	DD-E6300-A0043	1		Main Bearing Case 1 Ass'y Includes Ref. Nos. 2 & 12
9	DD-E6300-A0053	1		Main Bearing Case 2 Ass'y Includes Ref. Nos. 2 & 12
10	DD-15521-94021	2		Washer
11	DD-15291-04562	2		Bolt 2, Bearing Case
12	DD-05012-00408	6		Pin, Straight

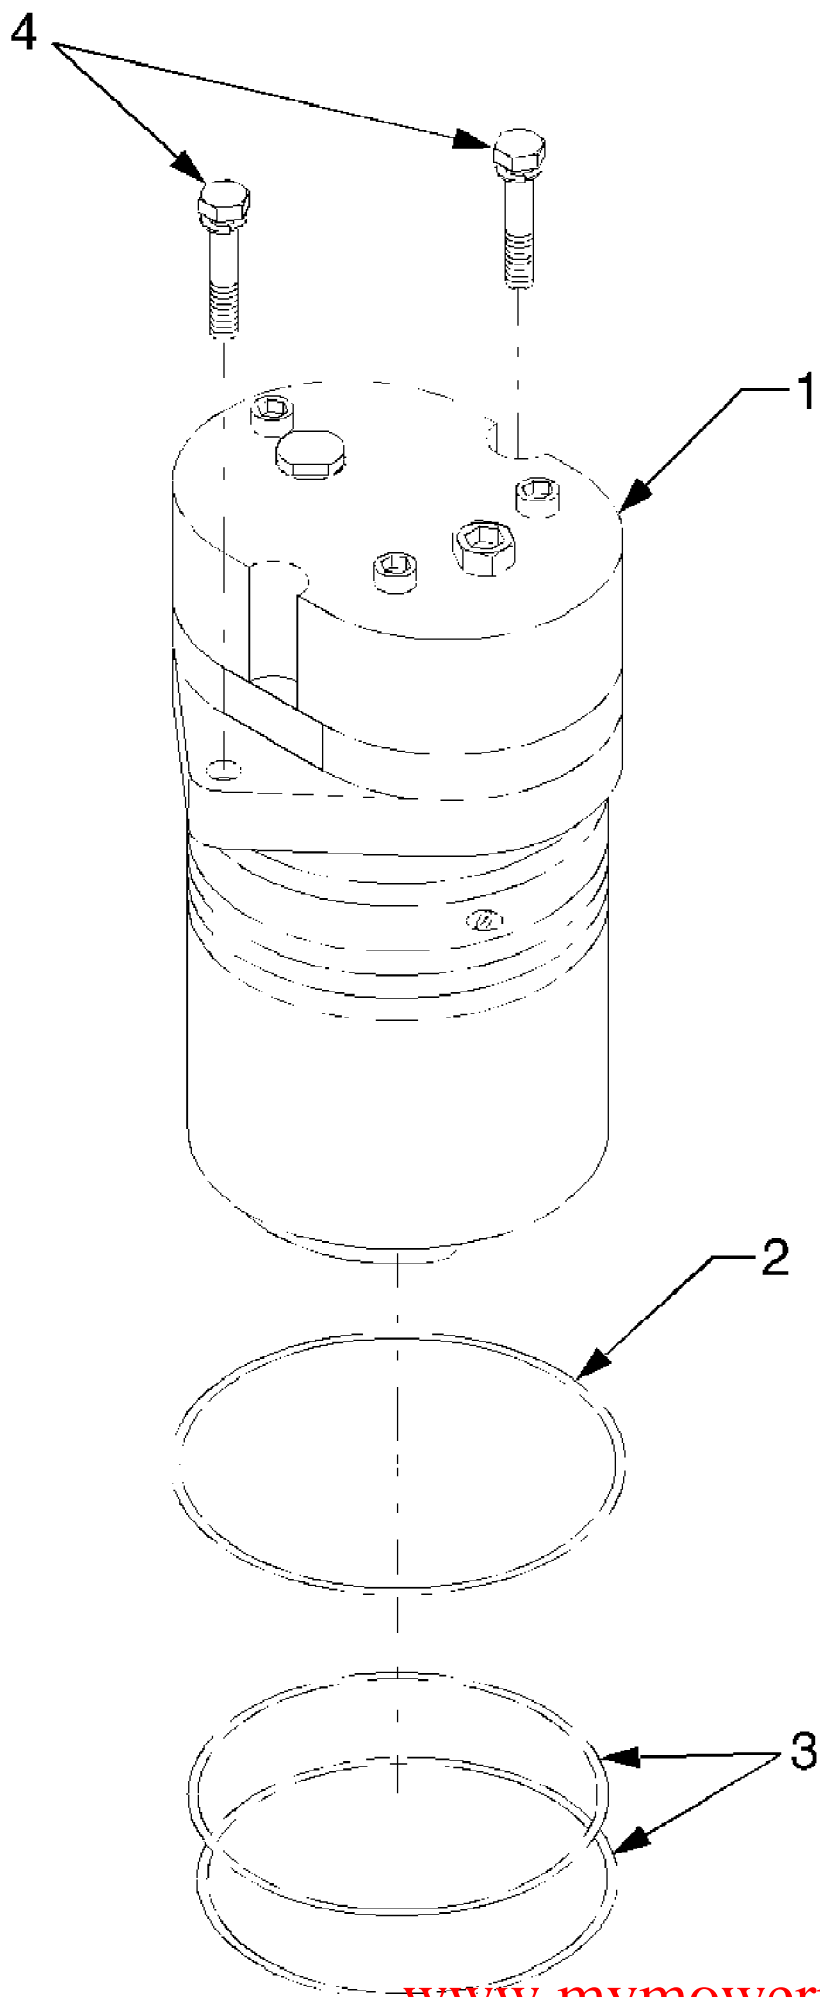 

8354 Tractor
Main Distributor Valve Group


Ref #	Part Number	Qty	S/P/F	Description
1	DD-110053004	1	/P	Control Valve Ass'y
2	DD-04810-00550	1		O-Ring
3	DD-04810-50500	2		O-Ring
4	DD-01123-50835	2		Bolt

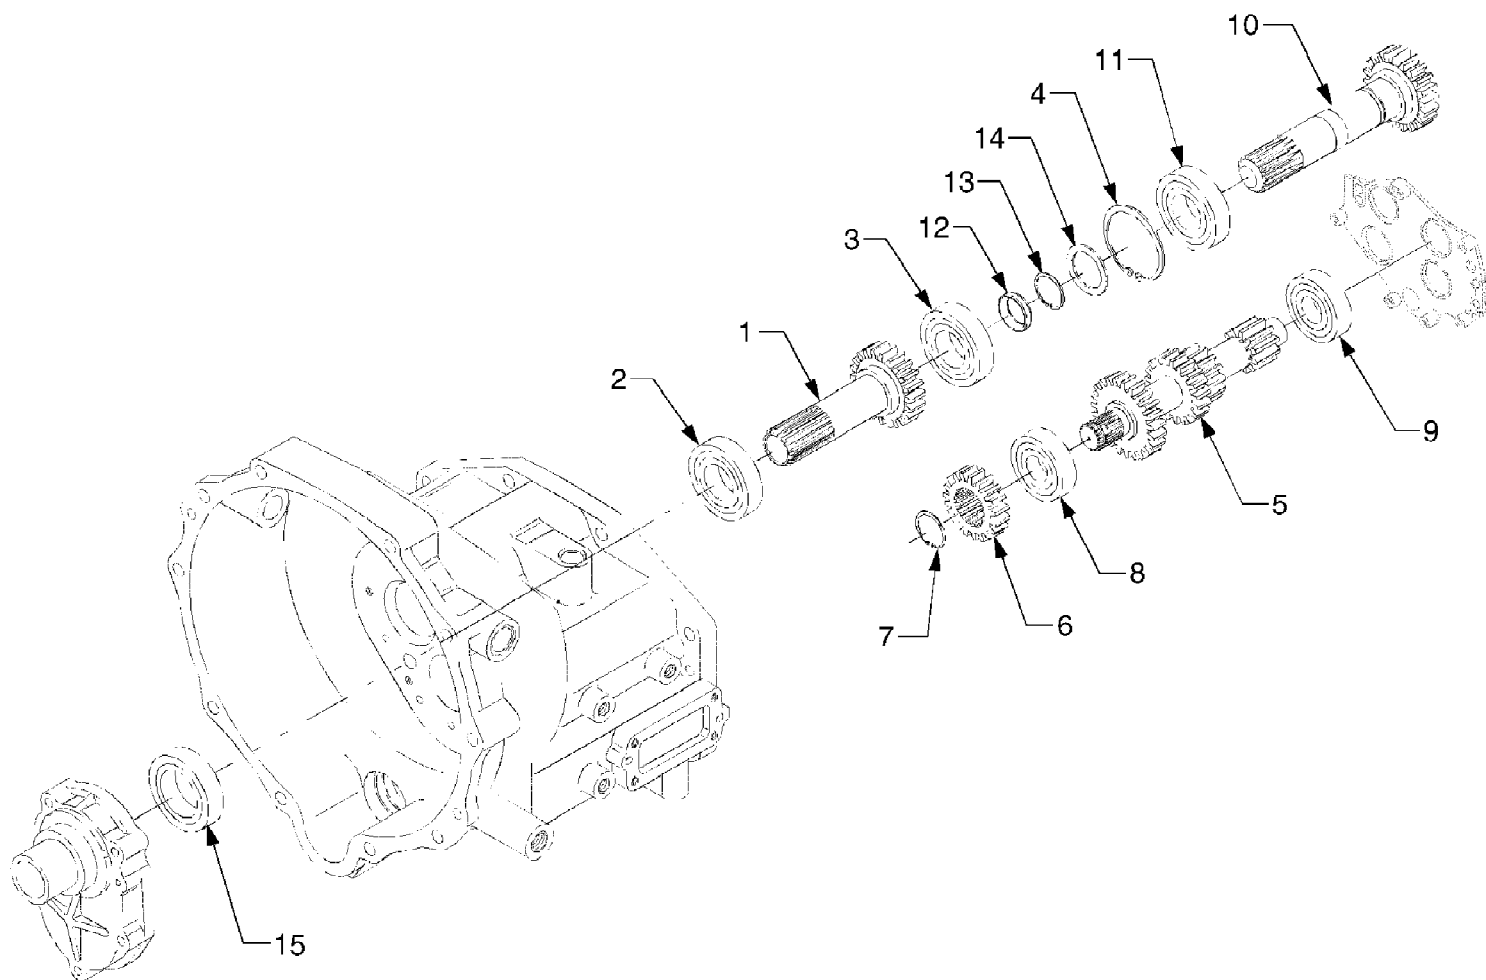 

8354 Tractor
Main Shaft

Page 116 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-21512	1		Shaft, 25 Gear
2	DD-08101-06207	1		Bearing, Ball
3	DD-08101-06908	1		Bearing, Ball
4	DD-04611-00620	1		Cir-clip
5	DD-T2615-21533	1		Gear, Main Shaft
6	DD-T2615-21521	1		Gear, 26
7	DD-04612-00250	1		Cir-clip
8	DD-08101-06305	1		Bearing, Ball
9	DD-T2610-22661	1		Bearing, Ball
10	DD-T2615-25212	1		Shaft, 22 Gear (PTO)
11	DD-T2610-22661	1		Bearing, Ball
12	DD-T2440-21361	1		Seal, Oil
13	DD-04612-00250	1		Cir-clip
14	DD-34150-21561	1		Collar
15	DD-09500-35528	1		Seal, Oil

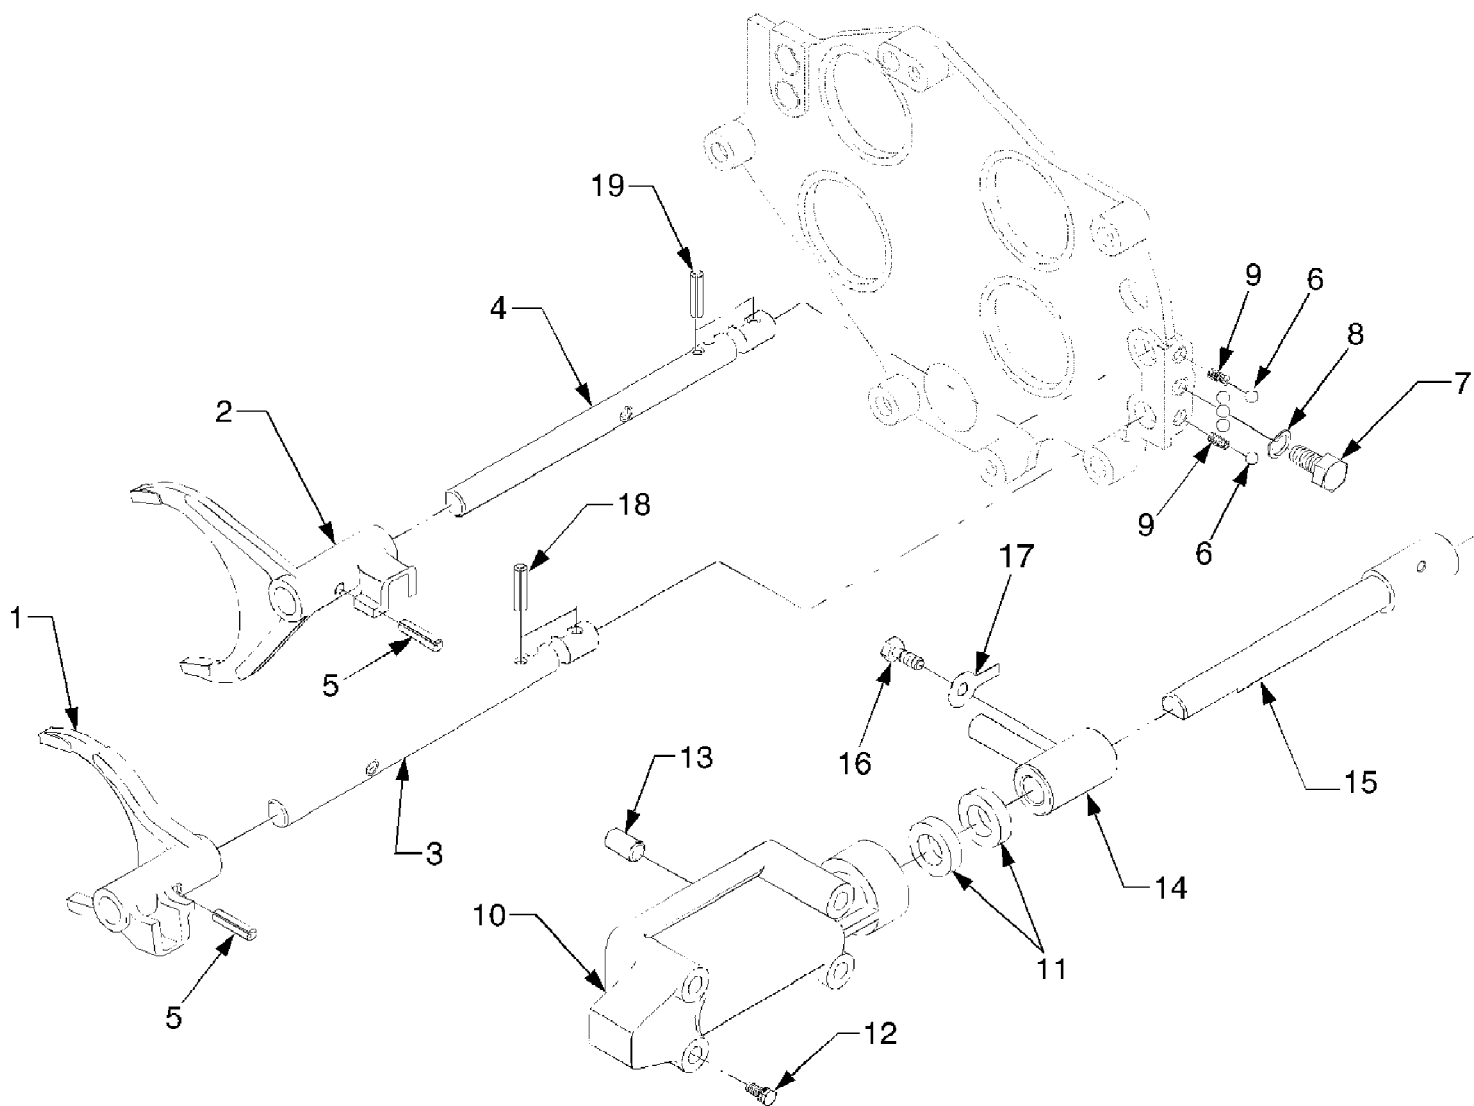 

8354 Tractor
Main Shift Fork Group

Page 118 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-21241	1		Fork, Shift (1,2)
2	DD-T2610-21251	1		Fork, Shift (3,4)
3	DD-T2610-21543	1	/P	Rod, Fork (1,2)
4	DD-T2610-21553	1	/P	Rod, Fork (3,4)
5	DD-05411-00625	2		Pin, Spring
6	DD-07715-01605	5		Ball
7	DD-T2610-21593	1		Bolt, Stopper
8	DD-04512-50100	1		Washer, Spring
9	DD-62331-18532	2		Spring
10	DD-T2610-21212	1		Cover, Shift (Main)
11	DD-09500-16287	2		Seal, Oil
12	DD-01123-50865	4		Bolt
13	DD-05012-00818	2		Pin, Straight
14	DD-T2610-21351	1		Arm, Shift
15	DD-T2610-21361	1		Rod 1, Shift
16	DD-T4620-21371	1		Bolt, Lock
17	DD-04111-50060	1		Washer
18	DD-05411-00420	2		Pin, Spring
19	DD-05411-00420	2		Pin, Spring

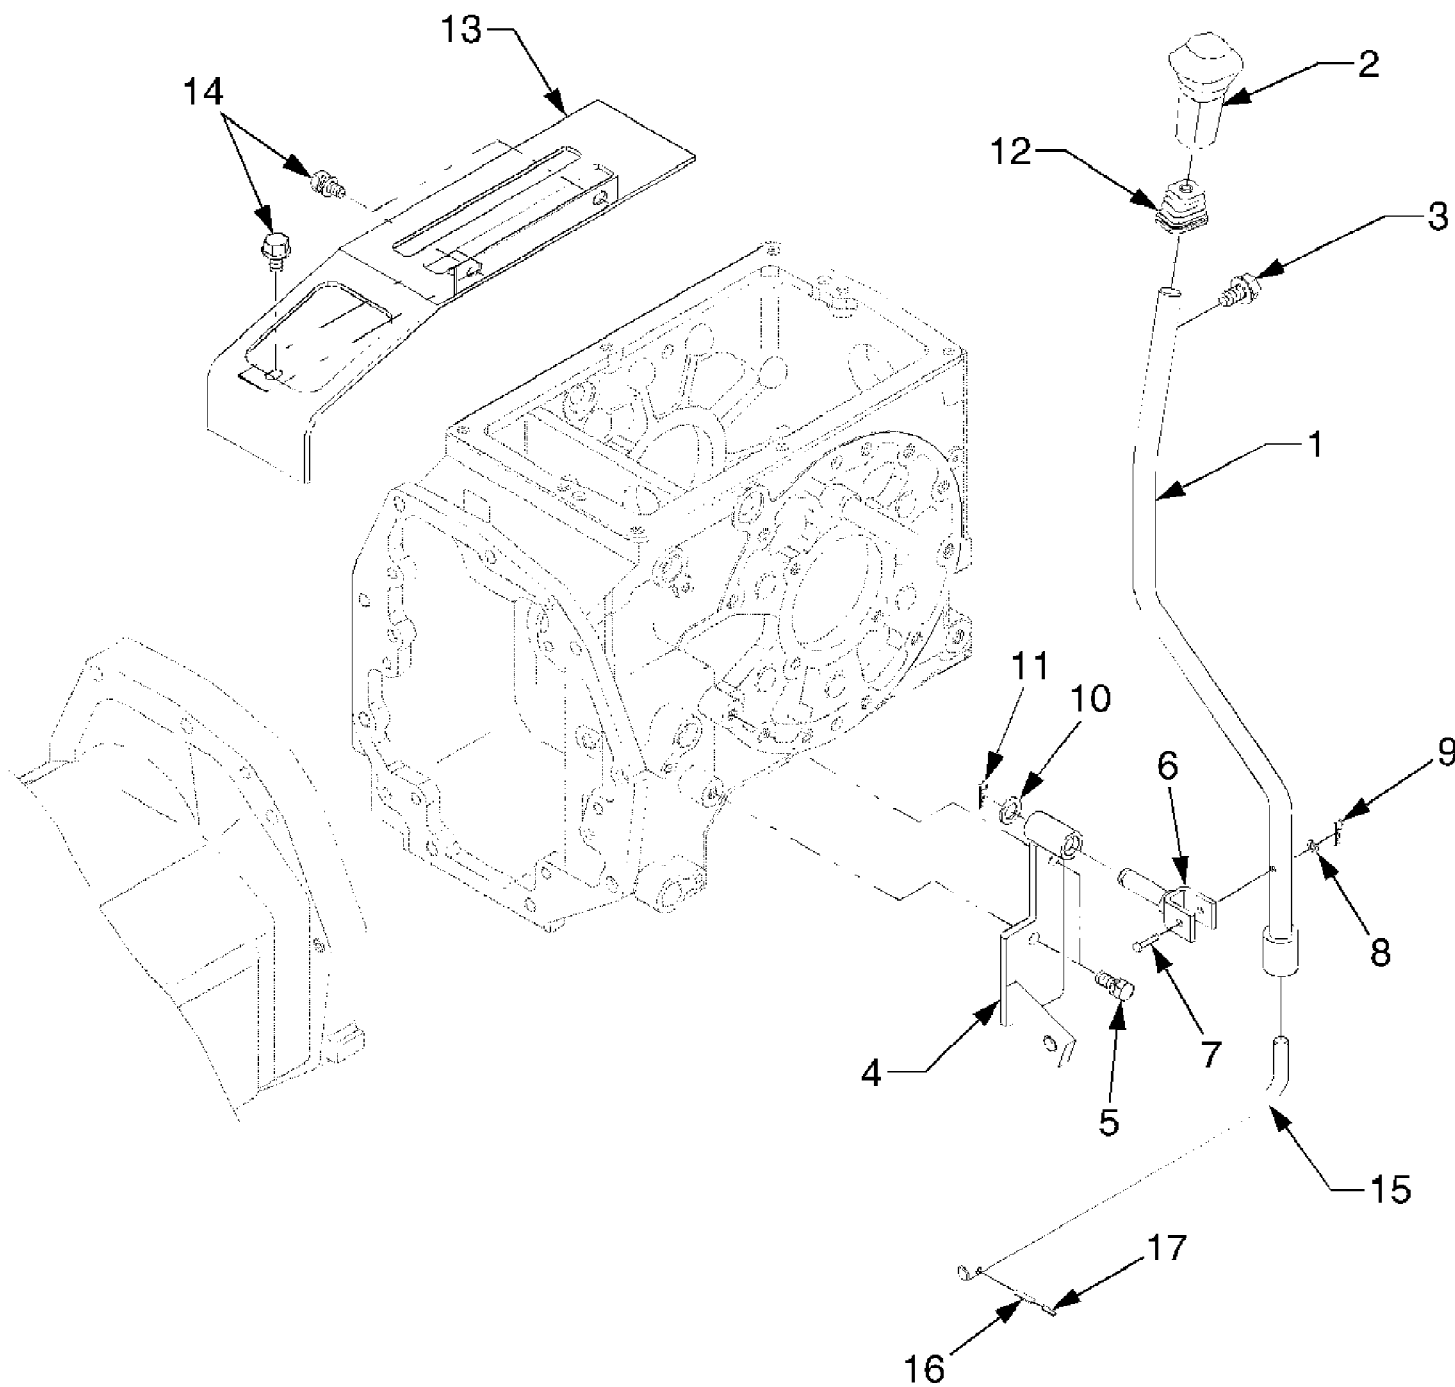 


8354 Tractor
Main Shift Lever Group

Page 120 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-60324	1		Lever, Main Shift
2	DD-T4835-66443	1	S	Grip, Main Shift
3	DD-03024-50516	1		Screw
4	DD-T2610-60341	1		Bracket, Main Shift
5	DD-01133-51020	2		Bolt
6	DD-T2610-60331	1		Pin, Main Shift
7	DD-05122-50635	1		Pin, Joint
8	DD-04013-50060	1	/P	Washer, Plain
9	DD-05525-50600	1		Pin, Snap
10	DD-04011-50140	1		Washer, Plain
11	DD-05515-51600	1		Pin, Snap
12	DD-T4620-60371	1		Boot, Main Shift
13	DDT261060362YW	1		Guide, Shift Lever
14	DD-01754-50816	4		Bolt, Flange
15	DD-T2610-21372	1		Rod 1, Main Shift
16	DD-05411-00525	1		Pin, Spring
17	DD-05411-00325	1		Pin, Spring

 8354 Tractor
Manifold Group

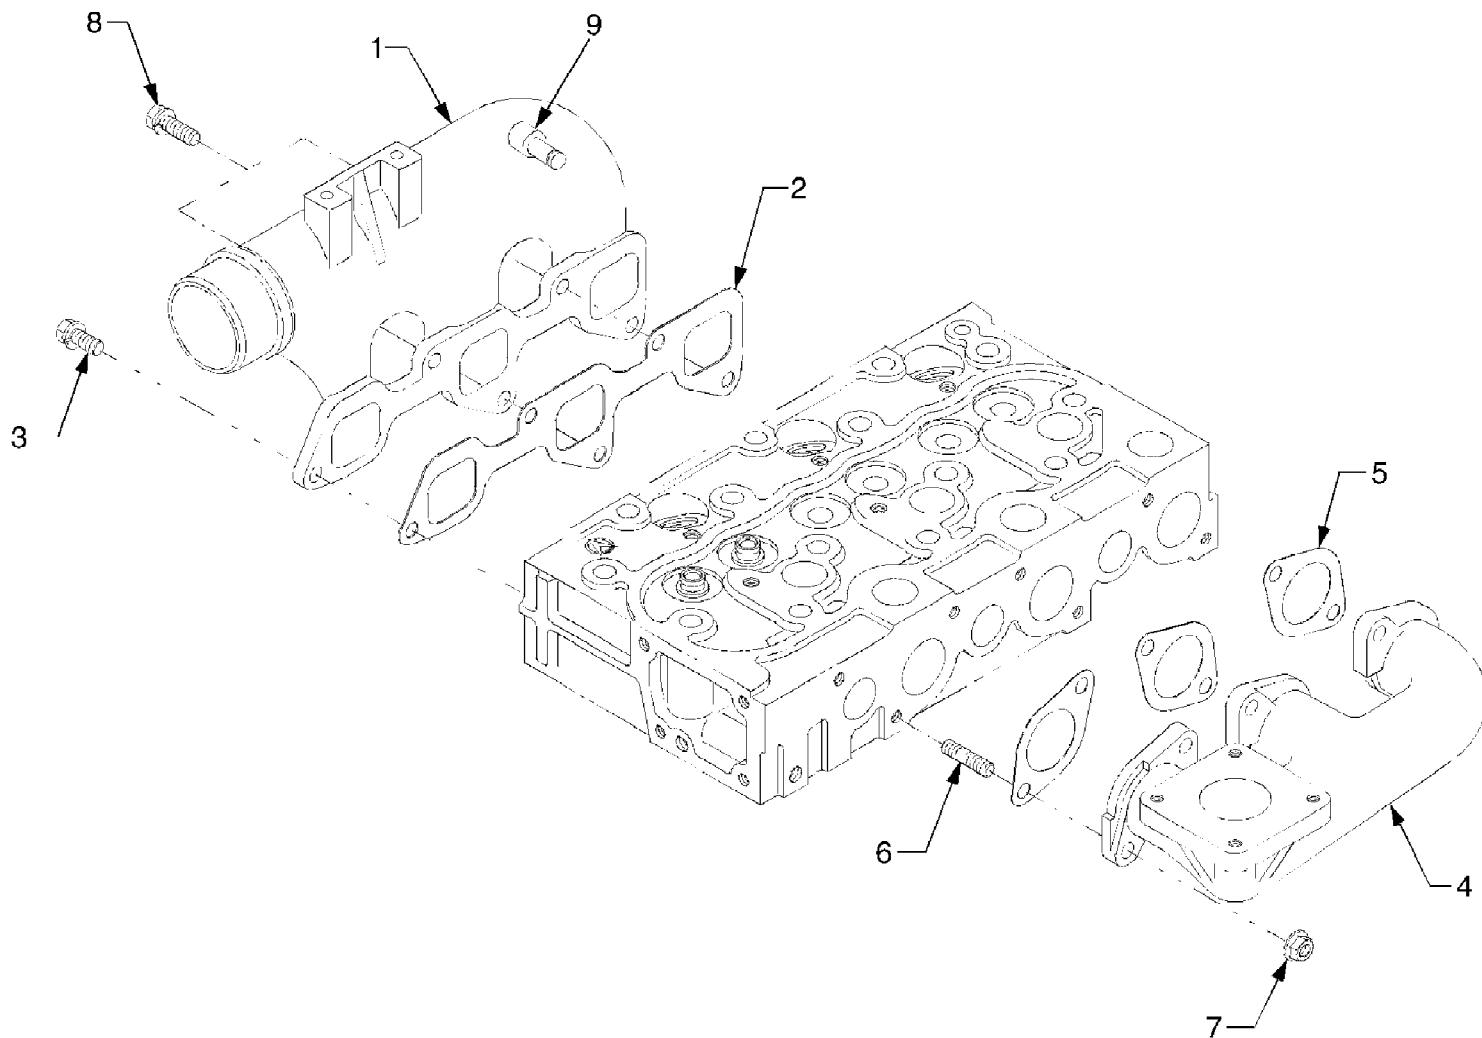


8354 Tractor
Manifold Group

Page 122 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E5800-11765	1		Manifold, Inlet (Tractors without airbreather connector [ref.9])
	DD-E5800-11766	1		Manifold, Inlet (Tractors with airbreather connector [ref.9])
2	DD-E5800-11821	1		Gasket, Inlet Manifold
3	DD-01123-50822	3		Bolt
4	DD-E5800-12313	1		Manifold, Exhaust
5	DD-E6301-12351	3	S	Gasket,Exhaust Manifold
6	DD-01513-50822	6		Stud
7	DD-02751-50080	6		Nut, Flange
8	DD-01123-50825	2		Bolt
9	DD-E6510-05551	1		Connector, Air Breather

 
8354 Tractor
Mid PTO Shaft Group

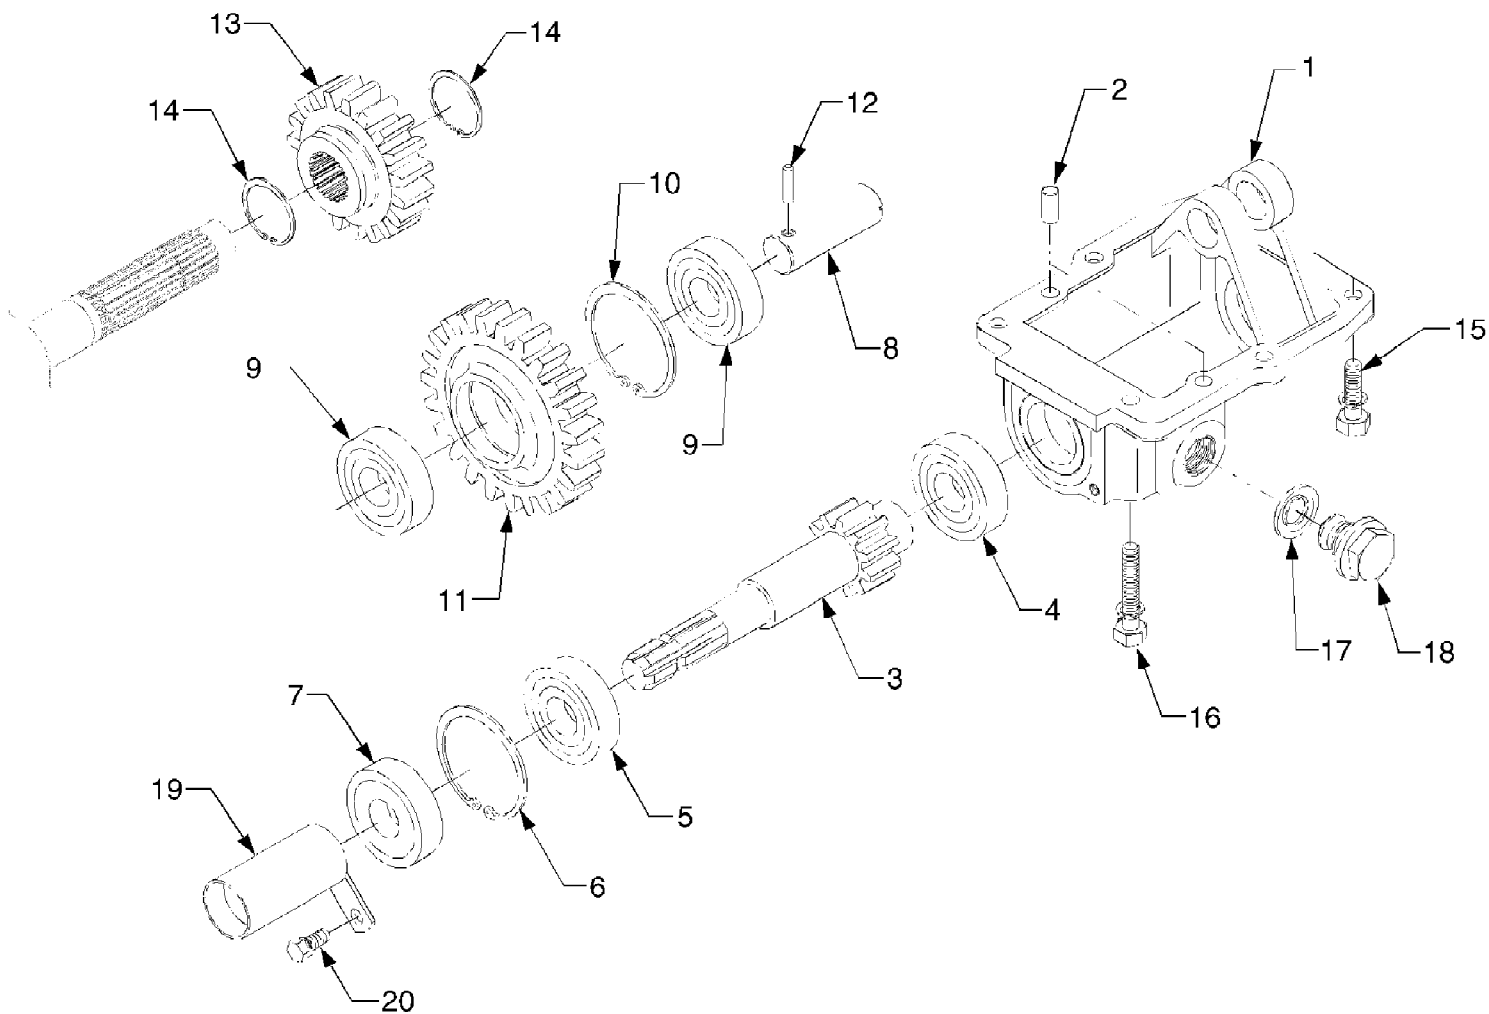

8354 Tractor
Mid PTO Shaft Group

Page 124 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-24112	1		Case, Mid PTO
2	DD-05012-01018	2		Pin, Straight
3	DD-T2615-24121	1		Shaft, 14 Gear (M. PTO)
4	DD-T2610-24131	1		Bearing, Ball
5	DD-08101-06205	1		Bearing, Ball
6	DD-04611-00520	1		Cir-clip
7	DD-09502-55210	1		Seal, Oil
8	DD-T2615-24141	1		Shaft, Counter (M. PTO)
9	DD-08101-06205	2		Bearing, Ball
10	DD-04611-00520	1		Cir-clip
11	DD-T2615-24151	1		Gear, 41 Spur
12	DD-05411-00640	1		Pin, Spring
13	DD-T2615-24161	1		Gear, 20 Spur
14	DD-04612-00300	2		Cir-clip
15	DD-01133-51030	5		Bolt
16	DD-01133-51080	1		Bolt
17	DD-04717-02650	1		Washer, Seal
18	DD-T4260-14271	1		Plug, Drain
19	DD-T2615-24171	1		Cover, Protect
20	DD-01123-50816	1		Bolt

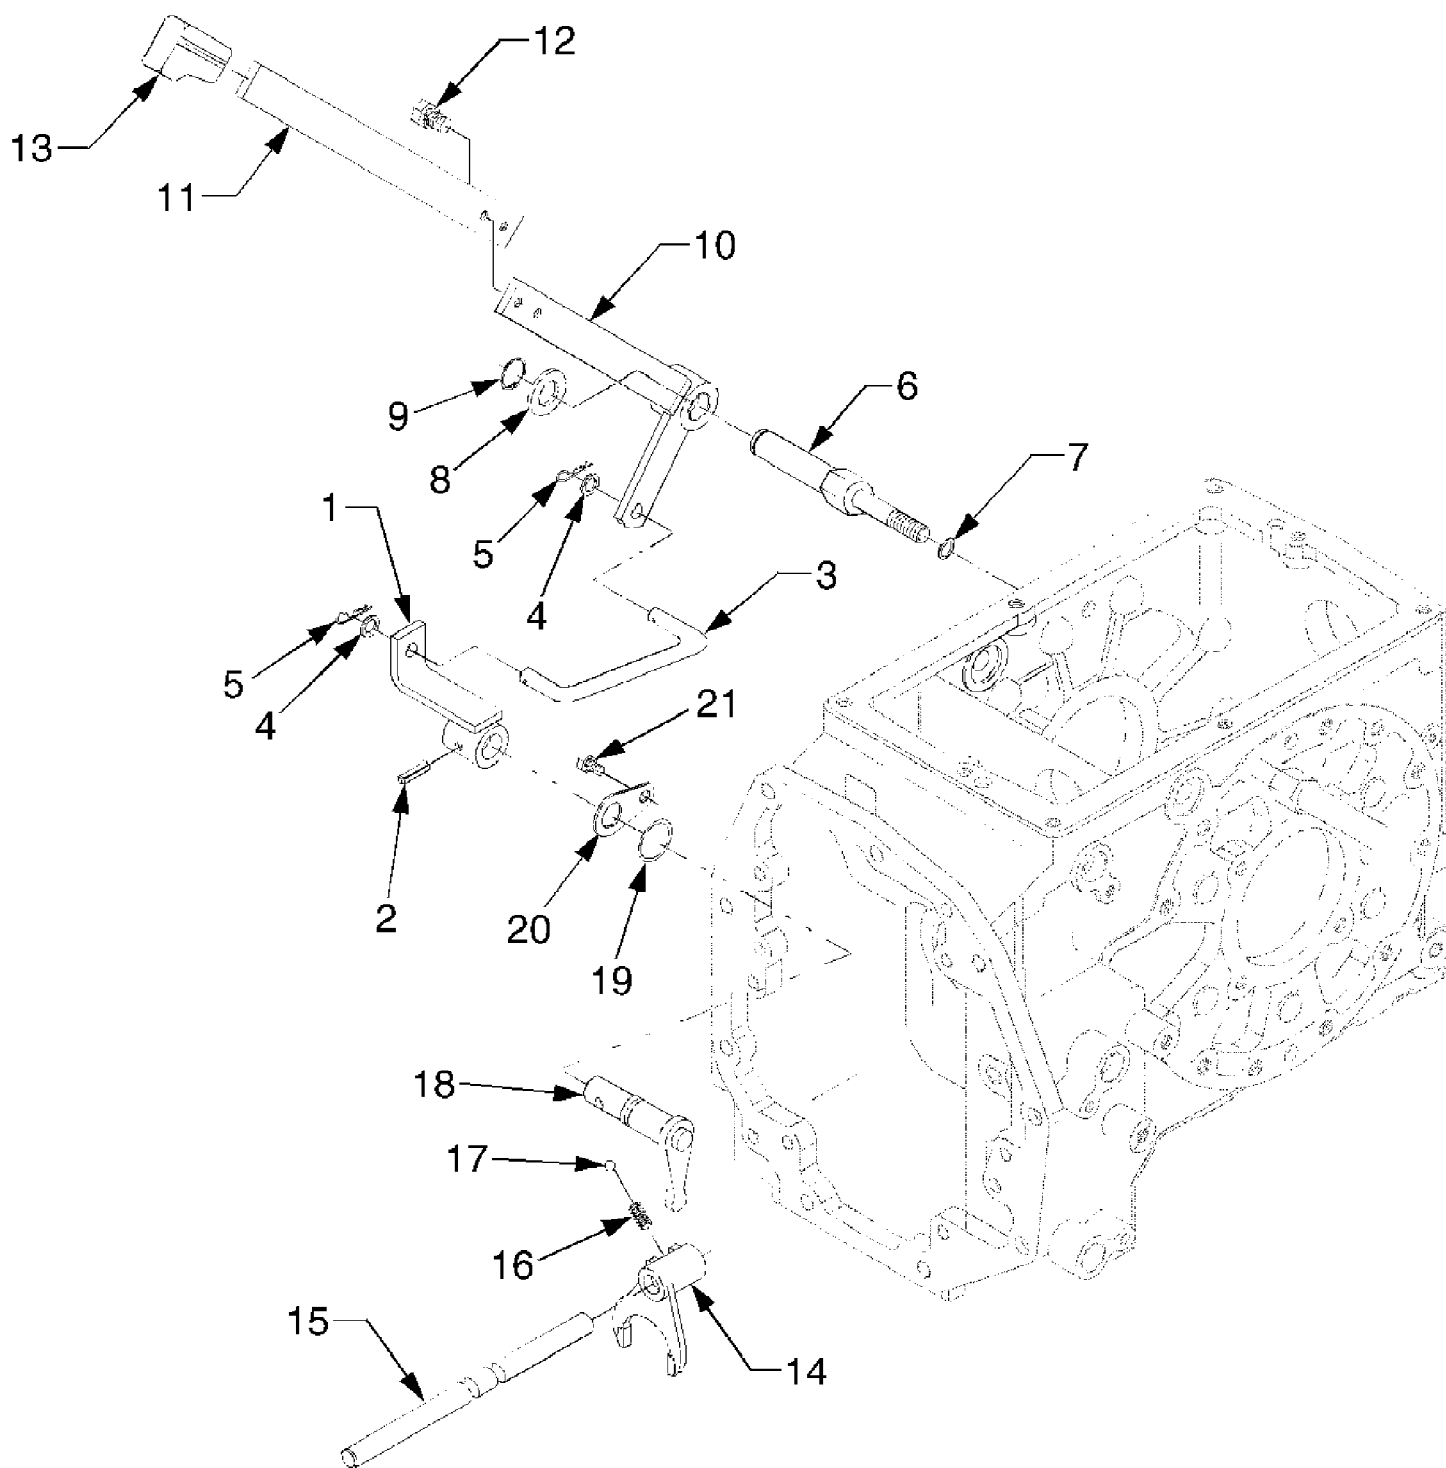 

8354 Tractor
Mid PTO Shift Lever Group

Page 126 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-24242	1		Lever 1, Mid PTO
2	DD-05411-00630	1		Pin, Spring
3	DD-T2615-24422	1		Rod (Mid PTO)
4	DD-04011-50100	2		Washer, Plain
5	DD-05525-51000	2		Pin, Snap
6	DD-T2615-24432	1		Shaft, Lever (Mid PTO)
7	DD-04512-50120	1		Washer, Spring
8	DD-04011-50180	1		Washer, Plain
9	DD-04612-00180	1		Cir-clip
10	DD-T2615-24442	1		Mid PTO Lever Ass'y
11	DD-T2615-24412	1		Lever, Mid PTO
12	DD-01123-50816	2		Bolt
13	DD-T2610-24471	1		Grip
14	DD-T2615-24221	1		Fork, Shift (Mid)
15	DD-T2615-24231	1		Rod, Fork (Mid)
16	DD-62331-18532	1		Spring
17	DD-07715-01605	1		Ball
18	DD-T2610-23271	1		Arm, Shift
19	DD-04811-00200	1		O-ring
20	DD-T4620-44331	1		Stopper
21	DD-01123-50816	1		Bolt

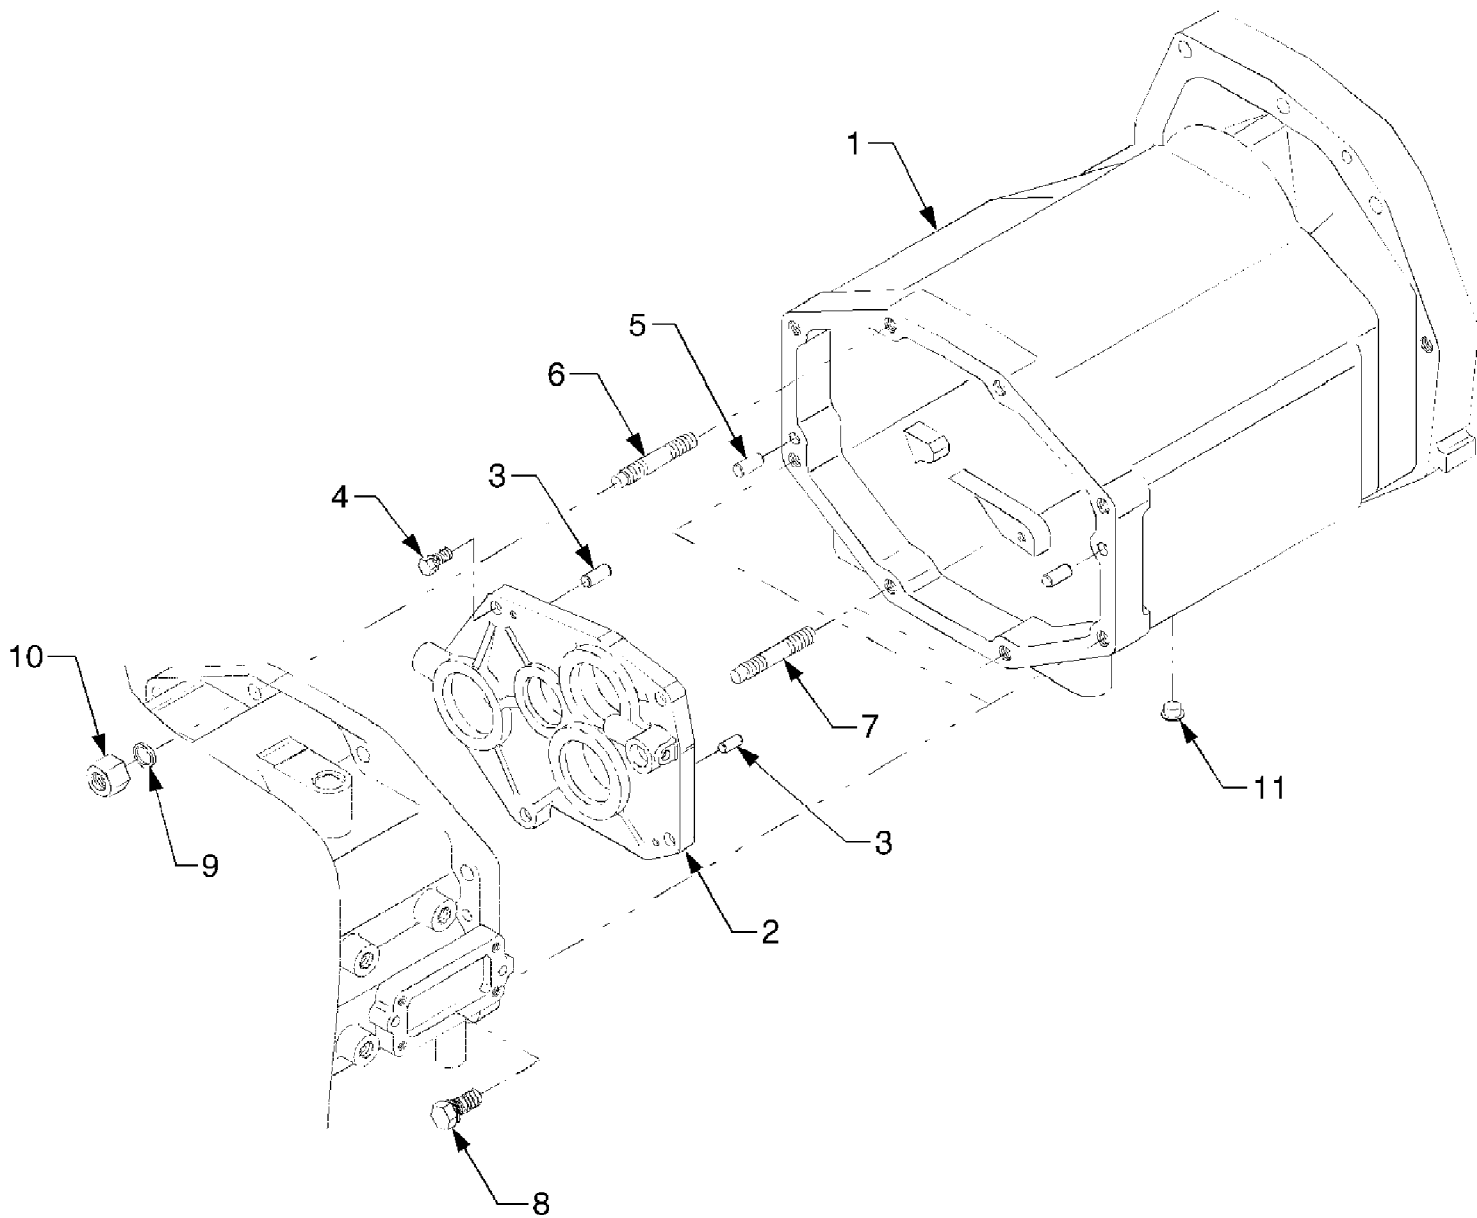 

8354 Tractor
Middle Case Group


Page 128 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-21154	1		Case, Middle
2	DD-T2610-22703	1		Cover, Bearing
3	DD-05012-00816	2		Pin, Straight
4	DD-01133-51035	4		Bolt
5	DD-05012-01018	2		Pin, Straight
6	DD-T4620-21481	4		Stud
7	DD-01574-21250	2		Stud
8	DD-01133-51240	2		Bolt
9	DD-04512-50120	6		Washer, Spring
10	DD-T4240-14081	6		Nut
11	DD-32210-27581	2		Plug

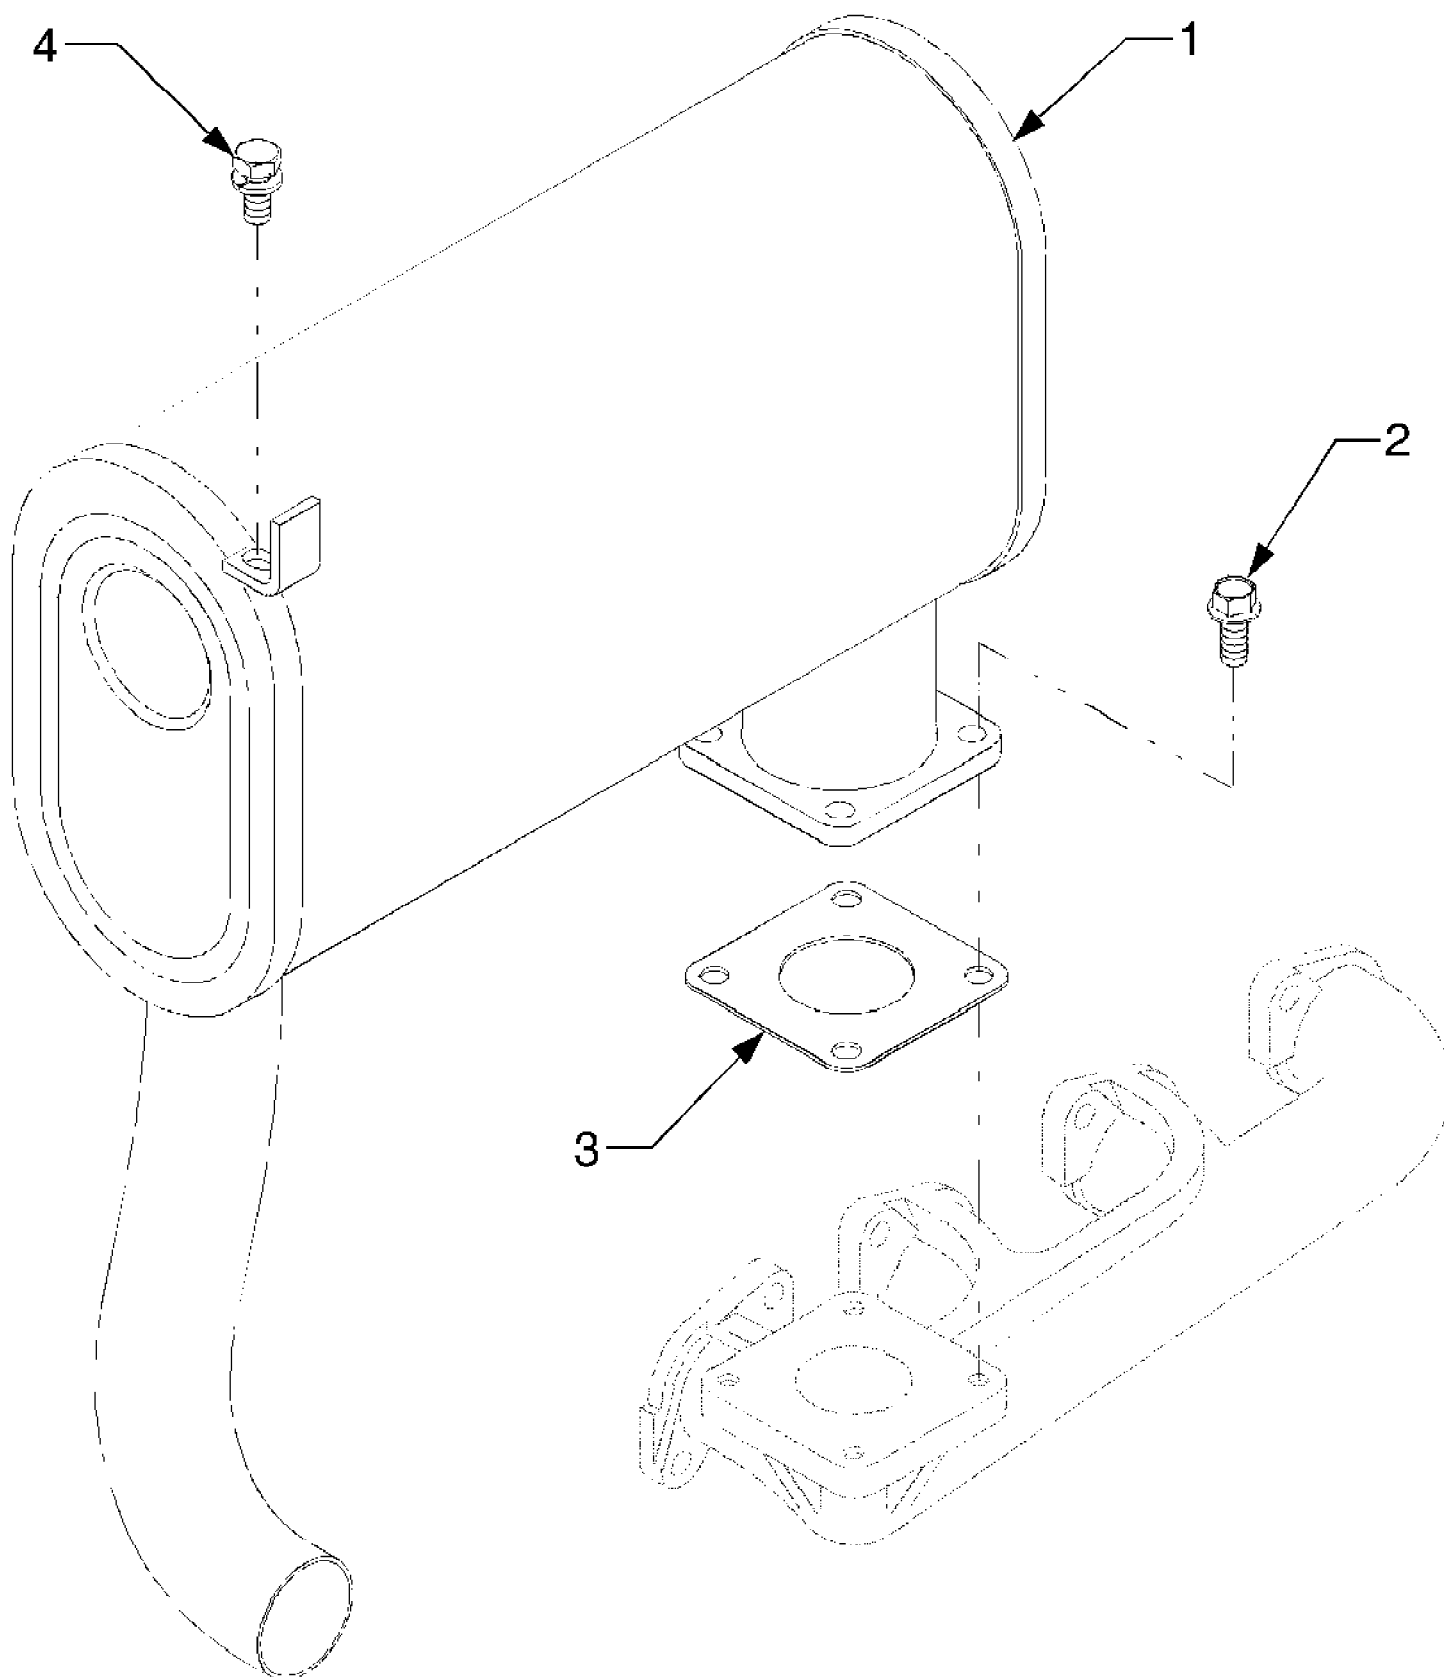 

8354 Tractor
Muffler

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E5800-12122	1	/P	Muffler
2	DD-01754-50822	4		Bolt, Flange
3	DD-E5800-12371	1		Gasket, Muffler
4	DD-01123-50820	1		Bolt

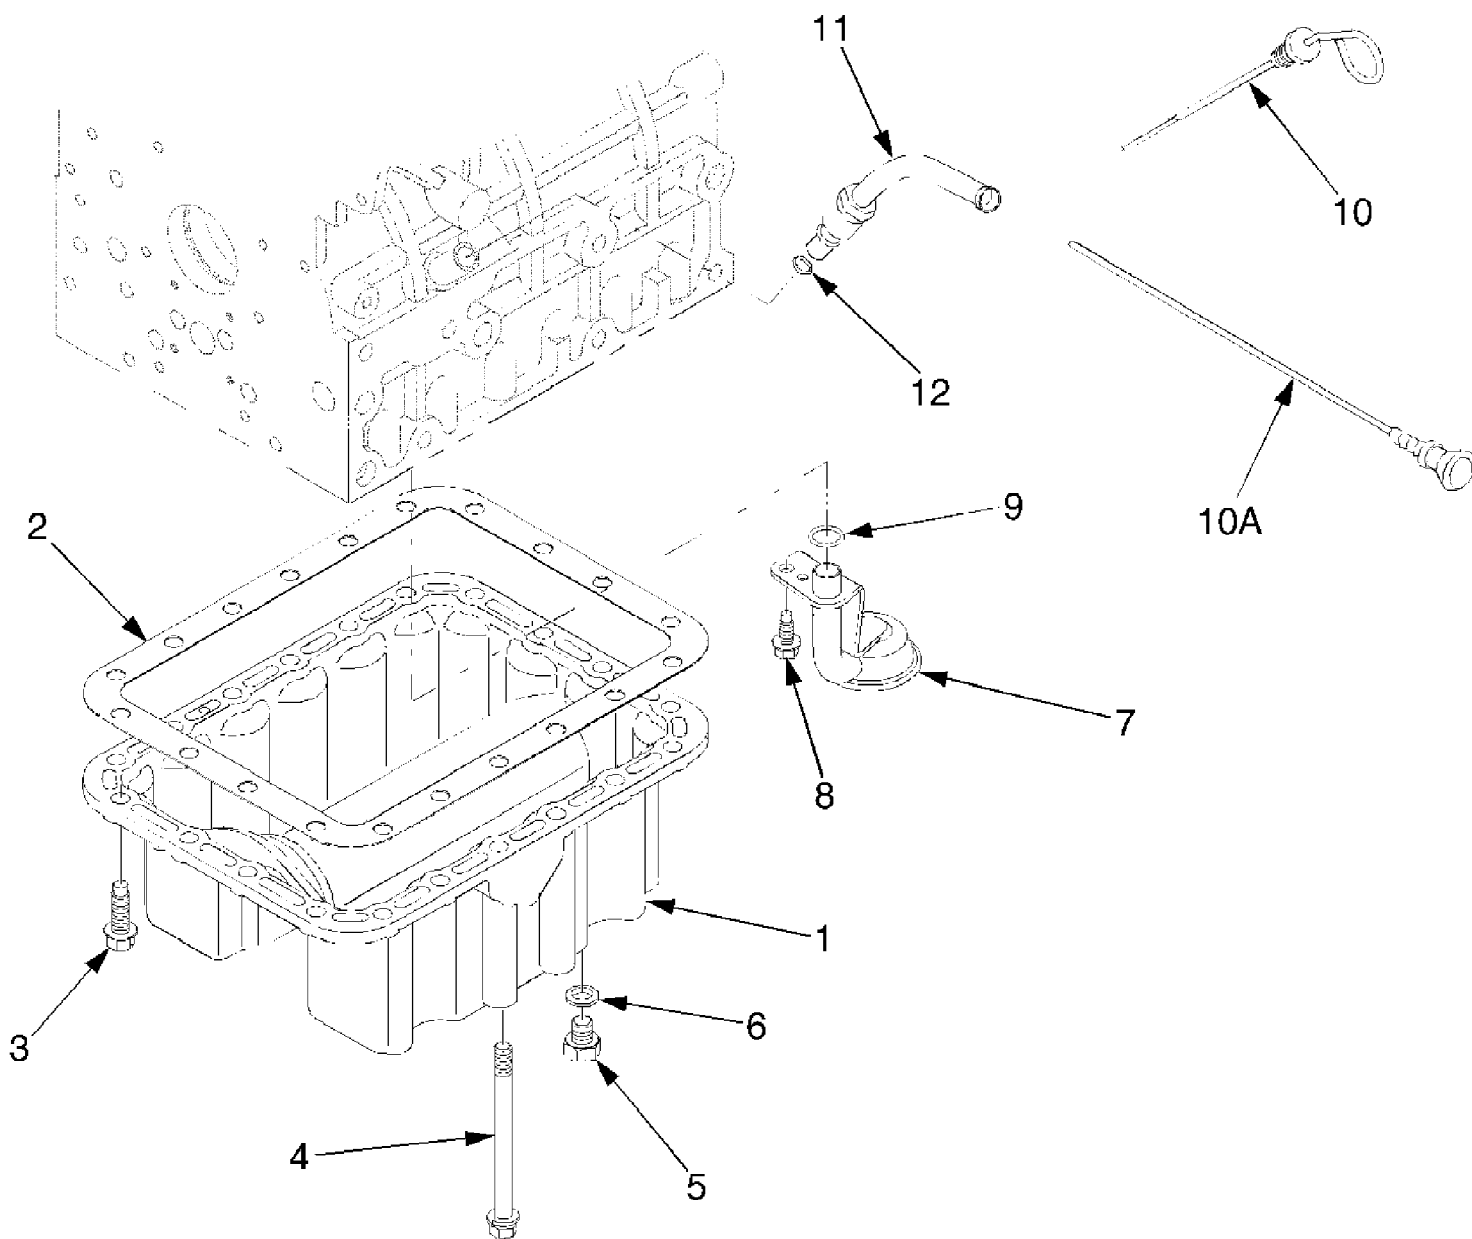 


8354 Tractor
Oil Pan

Page 132 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E5600-A0071	1		Oil Pan Ass'y Include Ref. Nos. 5 & 6
2	DD-E5500-01622	1	S	Gasket, Oil Pan
3	DD-01674-51032	18		Bolt, Flange
4	DD-E6200-91092	2		Bolt
5	DD-15221-33752	2		Plug, Drain
6	DD-04717-01200	2		Washer, Seal
7	DD-E6200-32112	1		Filter 1, Oil
8	DD-01654-50820	1		Bolt, Flange
9	DD-04811-00160	1		O-ring
10	DD-E6305-36411	1	/P	Gauge, Oil Ser. No. 3185-00452 & Below
10A	DD-E7310-36413	1		Gauge, Oil Ser. No. 3185-00453 & Above
11	DD-E6305-36421	1		Guide, Oil Gauge Pipe Ser. No. 3185-00453 & Above
12	DD-E7310-36431	1		Packing Ser. No. 3185-00453 & Above

 8354 Tractor
Panel Frame Group

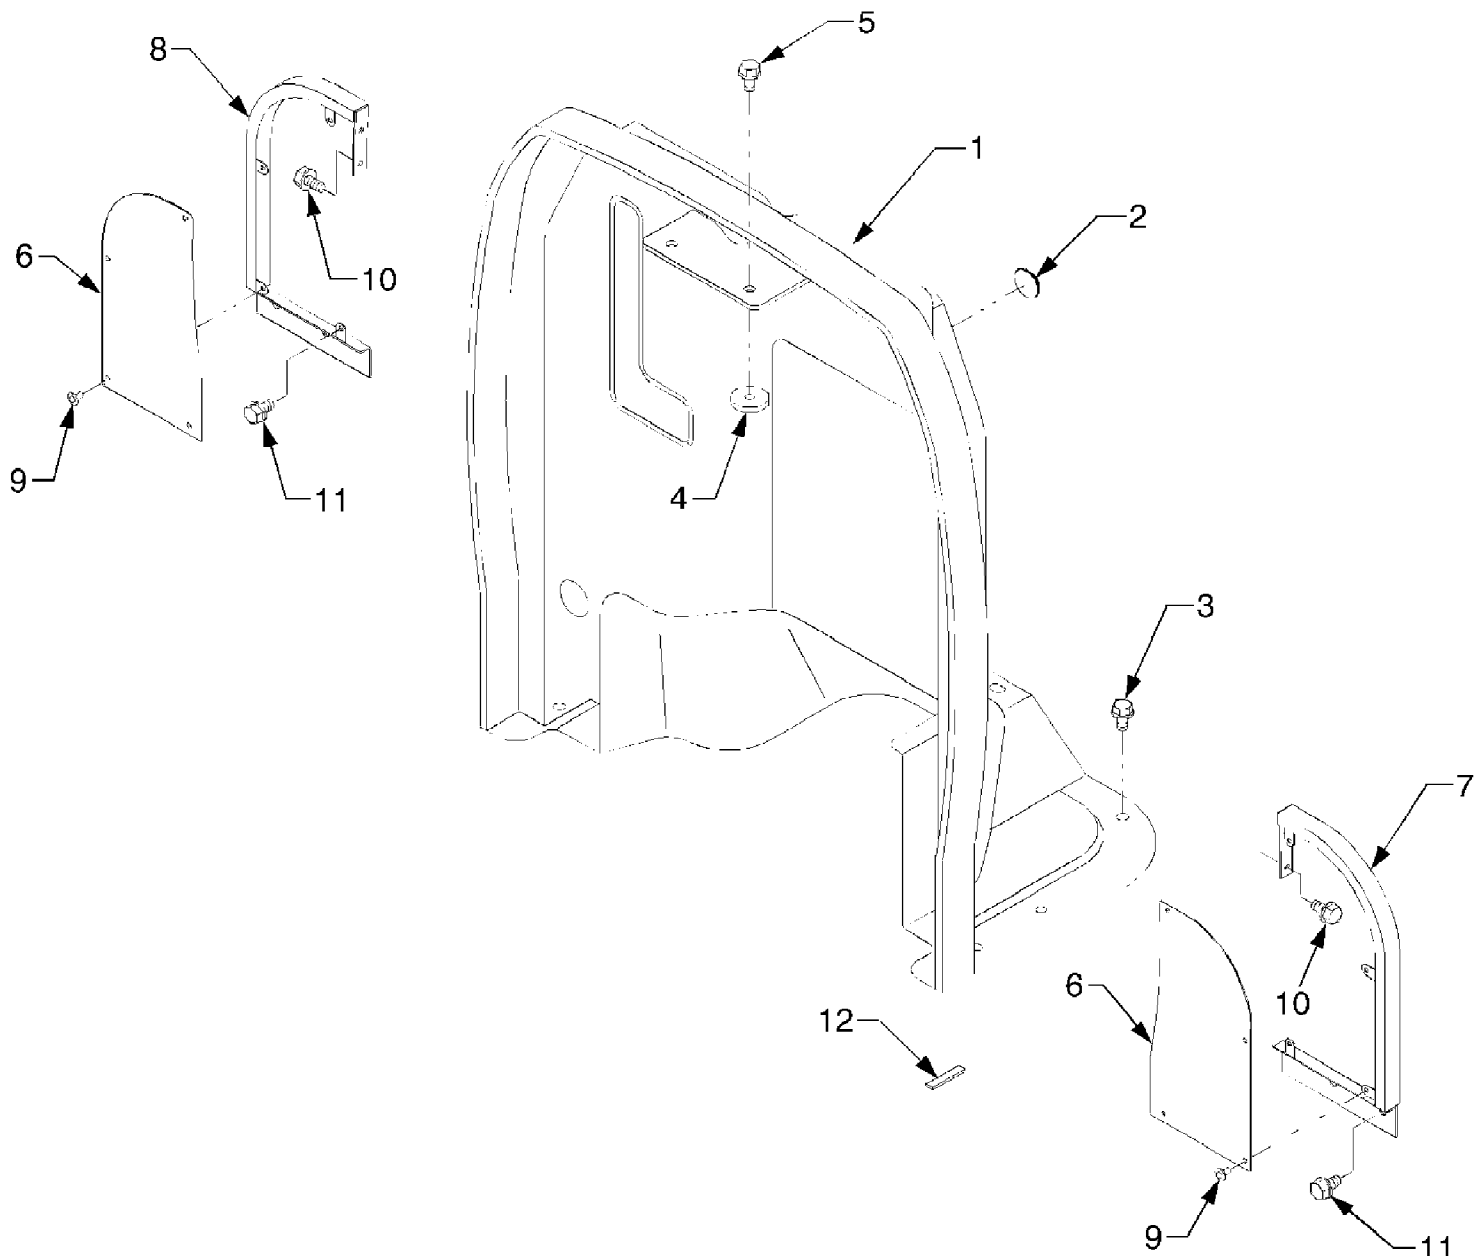

8354 Tractor
Panel Frame Group


Page 134 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-55006	1		Frame Ass'y
2	DD-T4680-54631	1		Cover
3	DD-01754-50820	8		Bolt, Flange
4	DD-T2610-80691	2		Cushion
5	DD-01125-50825	2		Bolt
6	DD-T2610-56111	2	S	Plate
7	DDT261056102YW	1		Mudguard Ass'y (LH)
8	DDT261056122YW	1		Mudguard Ass'y (RH)
9	DD-53650-61271	8		Rivet
10	DD-01754-50820	4		Bolt, Flange
11	DD-01133-51225	4		Bolt
12	DD-T2610-50271	2		Rubber, Cushion

8354 Tractor
Position (Draft) Control Lever

Page 136 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-65414	1		Lever, Draft
2	DD-01123-50816	4		Bolt
3	DD-T4260-24461	2		Grip
4	DDT261065454YW	1		Guide, Hydraulic Lever
5	DD-01754-50816	7		Bolt, Flange
6	DD-T4680-65351	1		Lever 1(Switch)
7	DD-T2630-65371	1		Rod
8	DD-T4681-65361	1		Lever 2
9	DD-T4681-65511	1		Plate
10	DD-T4681-65382	1		Bracket 2
11	DD-01754-50820	3		Bolt, Flange
12	DD-04512-50080	3		Washer, Spring
13	DD-02114-50080	3		Nut
14	DD-05122-50618	1		Pin, Joint
15	DD-04013-50060	2	/P	Washer, Plain
16	DD-05525-50600	2		Pin, Snap
17	DD-04013-50100	2		Washer, Plain
18	DD-04612-00100	1		Ring, Snap
19	DD-05122-50610	1		Pin Joint
20	DD-T4520-36911	2		Stopper 2
21	DD-01811-50815	2		Bolt, Wing
22	DD-04015-50080	2		Washer, Plain
23	DD-03024-50512	2		Screw
24	DD-04013-50050	2		Washer, Plain
25	DD-T2610-65471	2		Rubber
26	DDT261065482YW	1		Plate
27	DD-T2610-65461	1		Cap 1
28	DD-T2610-65421	1		Lever, Position Control
29	DDT261165341YW	1		Spacer (Serial No. 3224-00160 & Below)
30	DD-T4340-24921	2		Tube
31	DD-T2630-65381	2		Cushion
32	DD-T2610-65491	1		Sponge

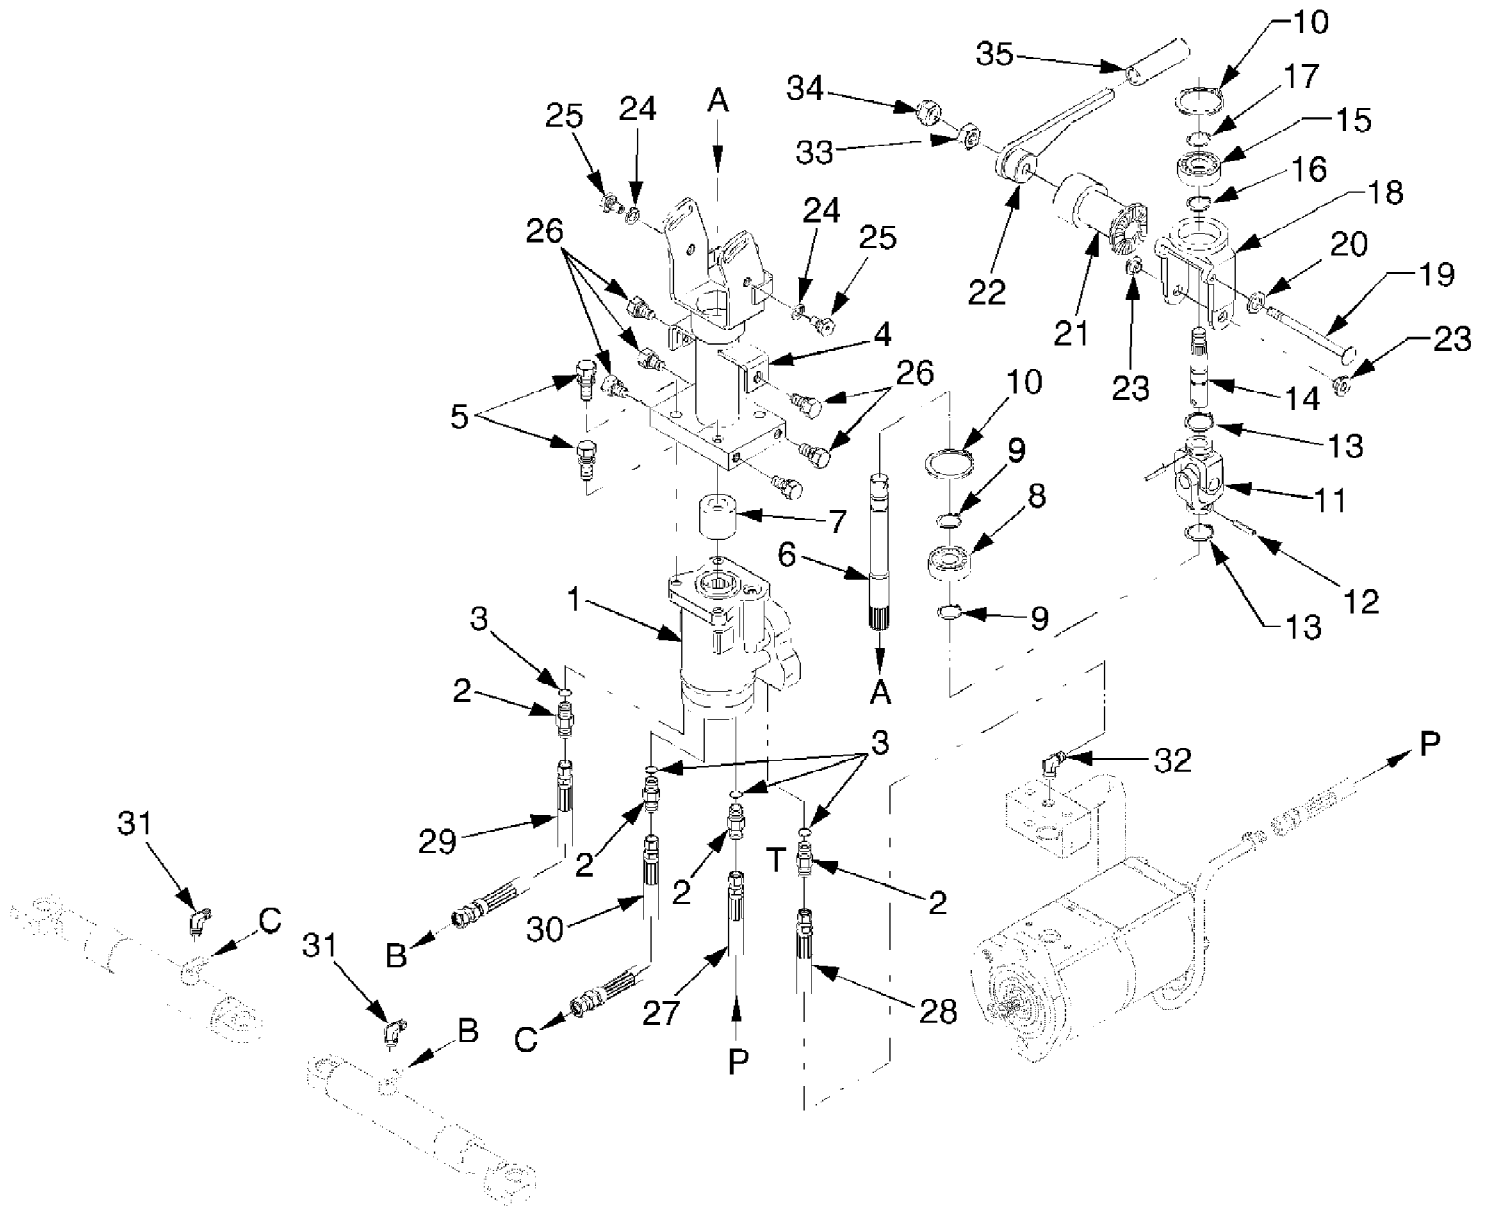 

8354 Tractor
Power Steering Unit Group

Page 138 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4625-66001	1		Unit, Power Steering
2	DD-T4620-66161	4		Connector
3	DD-04811-00110	4		O-ring
4	DD-T4624-66011	1		Column Ass'y
5	DD-01133-51035	3		Bolt
6	DD-T4620-66101	1		Shaft, Steering
7	DD-T4620-66111	1		Bush
8	DD-08141-06203	1		Bearing, Ball
9	DD-04612-00170	2		Ring, Snap
10	DD-04611-00400	1		Ring, Snap
11	DD-T4520-62251	1		Joint, Universal
12	DD-05411-00622	2		Pin, Spring
13	DD-04612-00250	2		Ring, Snap
14	DD-T4620-66092	1	/P	Shaft, Connector
15	DD-08141-06203	1		Bearing, Ball
16	DD-04612-00170	2		Ring, Snap
17	DD-04611-00400	1		Ring, Snap
18	DD-T4620-66023	1		Yoke
19	DD-T4624-66041	1		Bolt, Lock
20	DD-T4620-66061	1		Washer 1, Lock
21	DD-T4624-66071	1		Washer 2, Lock
22	DD-T4624-66031	1		Lever Ass'y
23	DD-T4620-66051	2		Bush
24	DD-04512-50080	2		Washer, Spring
25	DD-T4620-66081	2		Bolt
26	DD-01133-51020	6		Bolt
27	DD-T2720-45002	1		Steering Hose (P) Ass'y
28	DD-T4620-45014	1		Steering Hose (T) Ass'y
29	DD-T2620-45021	1		Steering Hose (L) Ass'y
30	DD-T2620-45031	1		Steering Hose (R) Ass'y
31	DD-T4520-63381	2		Elbow, 45 Serial No. 3224-00080 & Below
32	DD-56713-28131	1		Adapter 1,cylinder
33	DD-02156-50080	1		Nut
34	DD-T4815-93211	1		Cap Nut
35	DD-76KP-1737-1	1		Grip

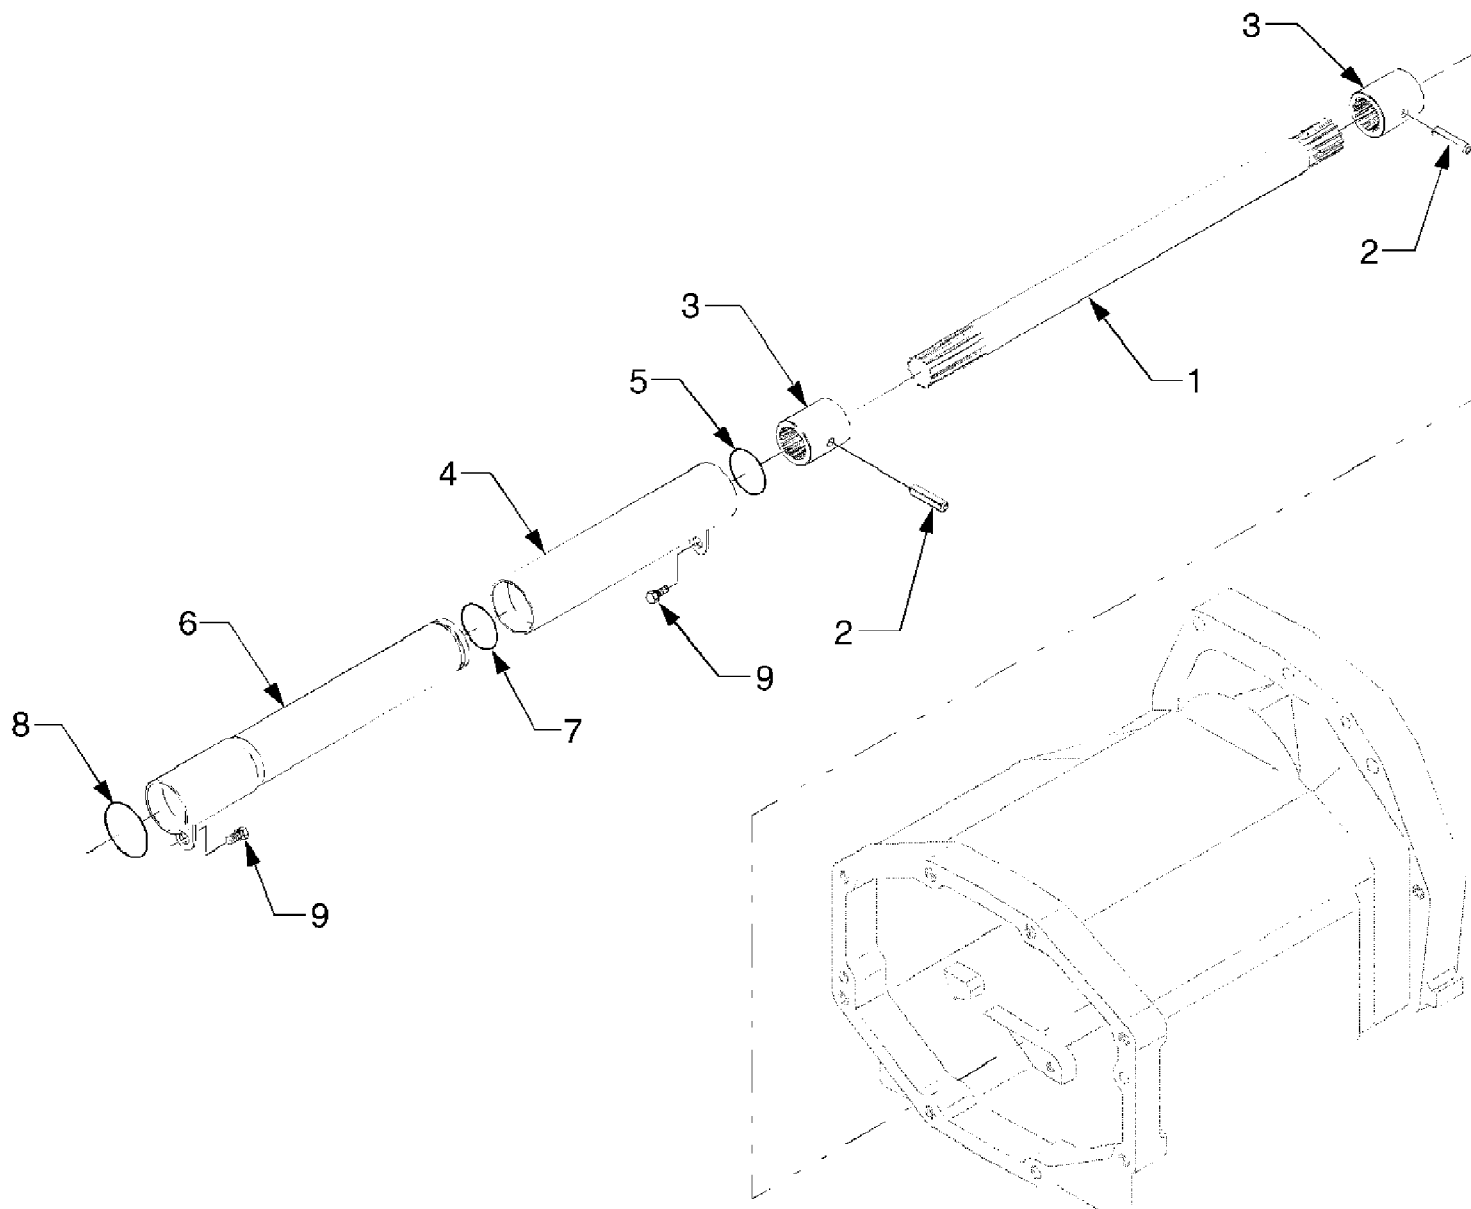 

8354 Tractor
Propeller Shaft Group

Page 140 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2620-44584	1		Shaft 2, Propeller
2	DD-05411-00636	2		Pin, Spring
3	DD-T4620-44592	2		Coupling
4	DD-T2620-44591	1		Cover, Propeller
5	DD-04811-06420	1		O Ring
6	DD-T2620-44622	1		Cover 2, Propeller
7	DD-04811-06350	1		O-Ring
8	DD-04811-00420	1		O-Ring
9	DD-01123-50816	2		Bolt

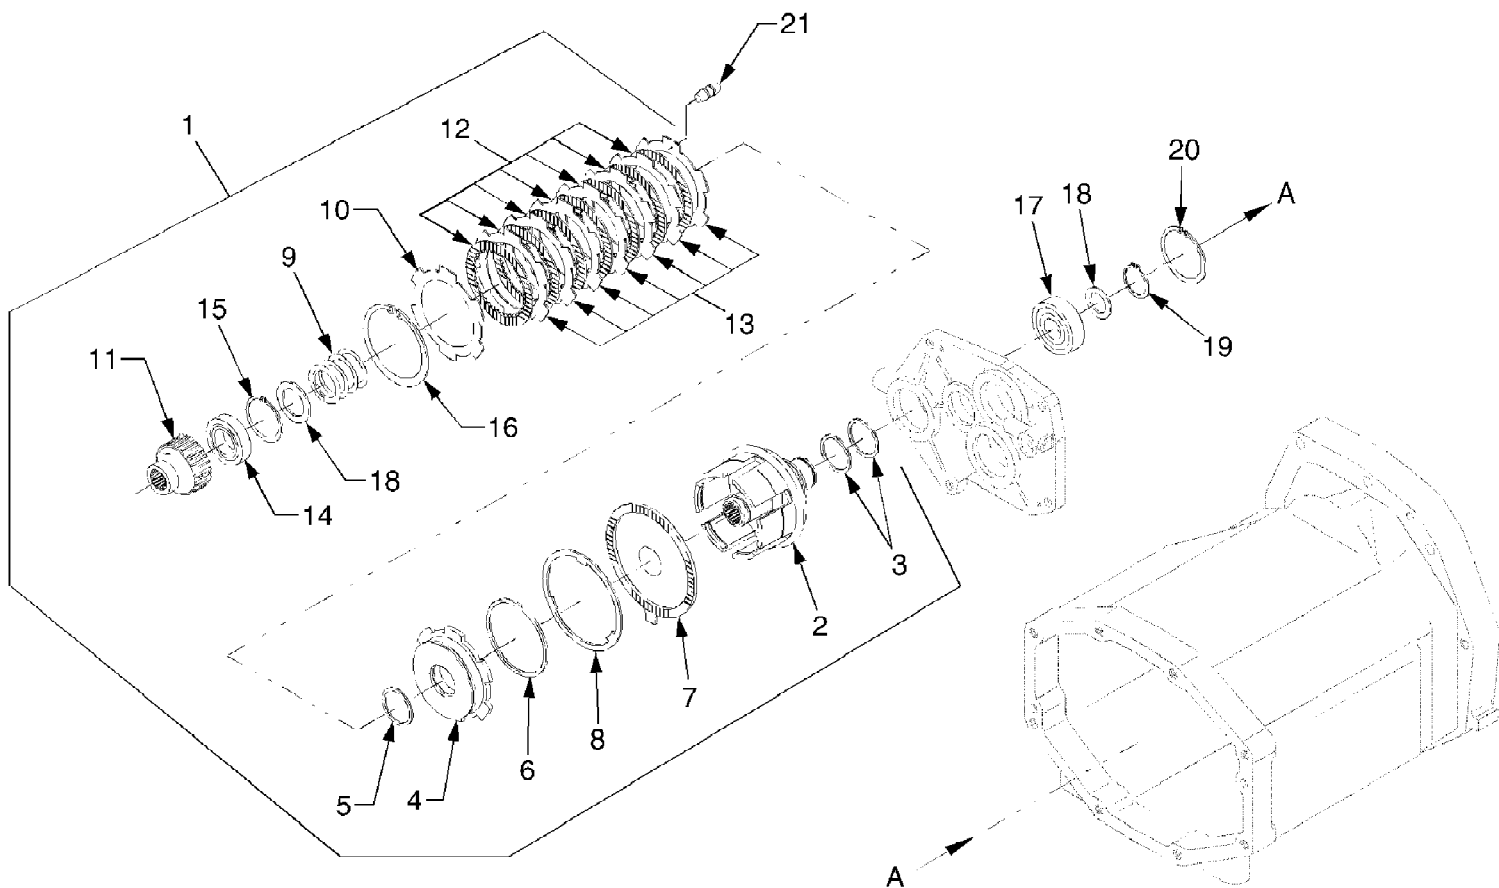 

8354 Tractor
PTO Clutch


Page 142 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-25604	1		PTO Clutch Ass'y, Includes Ref. Nos. 2 thru 16 & 18
2	DD-T2615-25614	1		Body, Clutch
3	DD-T2615-25621	2		Ring, Seal
4	DD-T2615-25651	1		Piston
5	DD-T2615-25661	1		Ring, Piston
6	DD-T2615-25671	1	S	Ring, Piston
7	DD-T2615-25711	1		Plate, Brake
8	DD-T2615-25721	1		Plate, Return
9	DD-T2615-25732	1		Spring
10	DD-T2615-25742	1		Plate, Pressure
11	DD-T2615-25761	1		Hub, Spline
12	DD-T2615-25771	7		Disc, Clutch
13	DD-T2615-25782	7		Plate, Clutch
14	DD-08101-06807	1		Bearing, Ball
15	DD-04612-00350	1		Cir-clip
16	DD-04611-00920	1		Cir-clip
17	DD-08101-06207	1		Bearing, Ball
18	DD-T2615-25681	2		Spacer
19	DD-T2615-25691	1		Cir-clip
20	DD-04611-00720	1		Cir-clip
21	DD-T2615-25791	12		Rubber

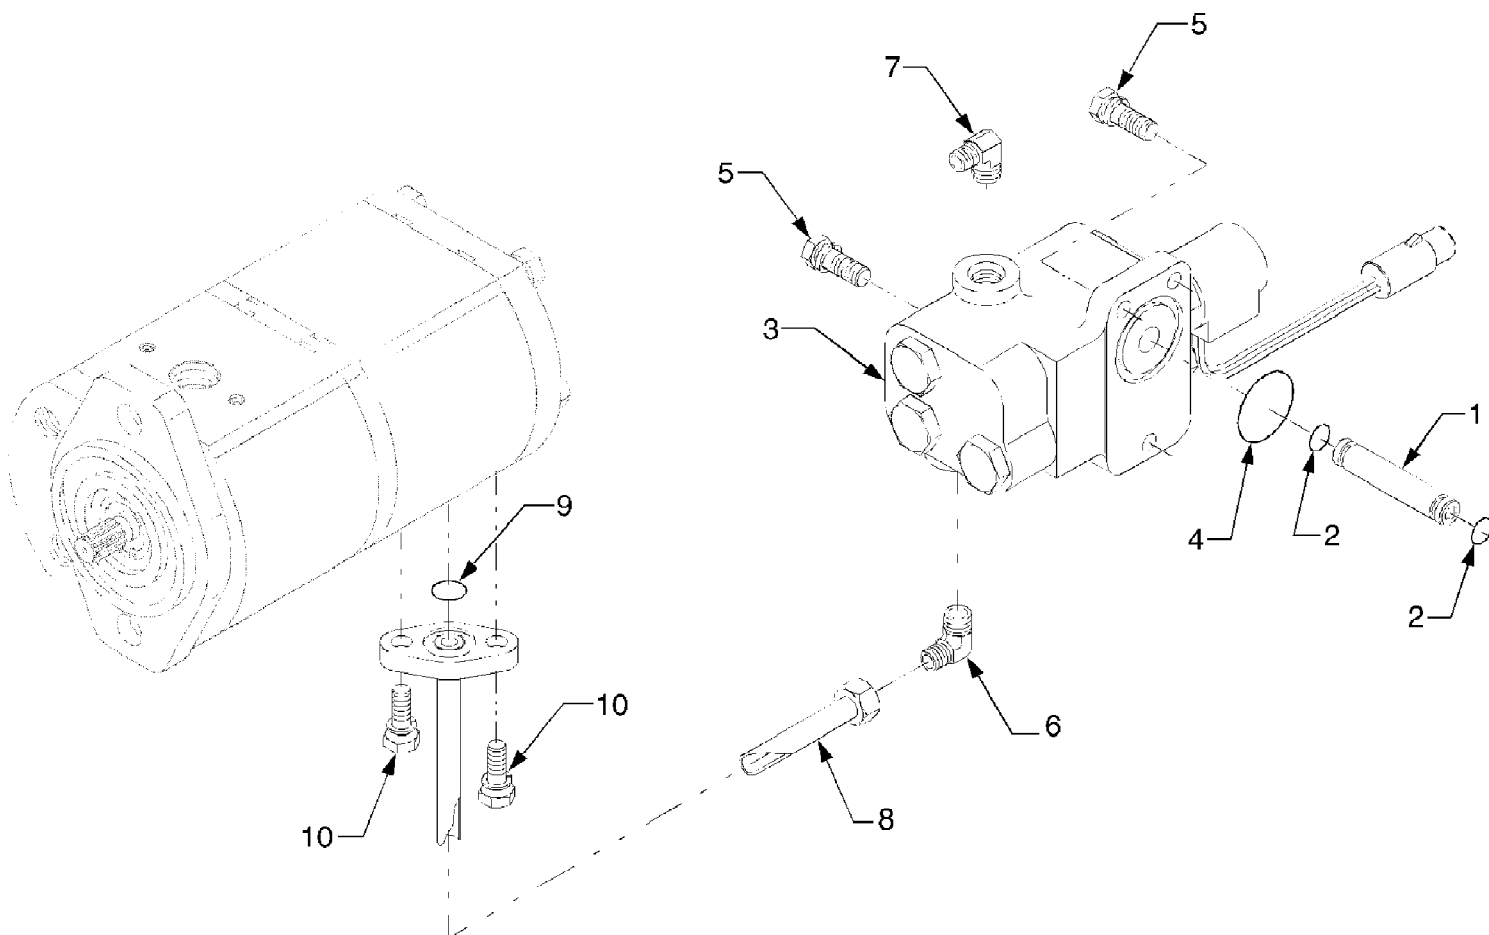 


8354 Tractor
PTO Clutch Valve Group

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-25921	1		Pipe, Connector
2	DD-04811-00090	2		O-Ring
3	DD-T2615-34042	1		Modulator Valve Ass'y
4	DD-04811-50350	1		O-Ring
5	DD-01123-50825	3		Bolt
6	DD-T2610-34111	1		Elbow
7	DD-T4620-34121	1		Elbow
8	DD-T2625-34052	1		Pipe, PTO Hydraulic
9	DD-04810-00180	1		O-Ring
10	DD-01123-50820	2		Bolt

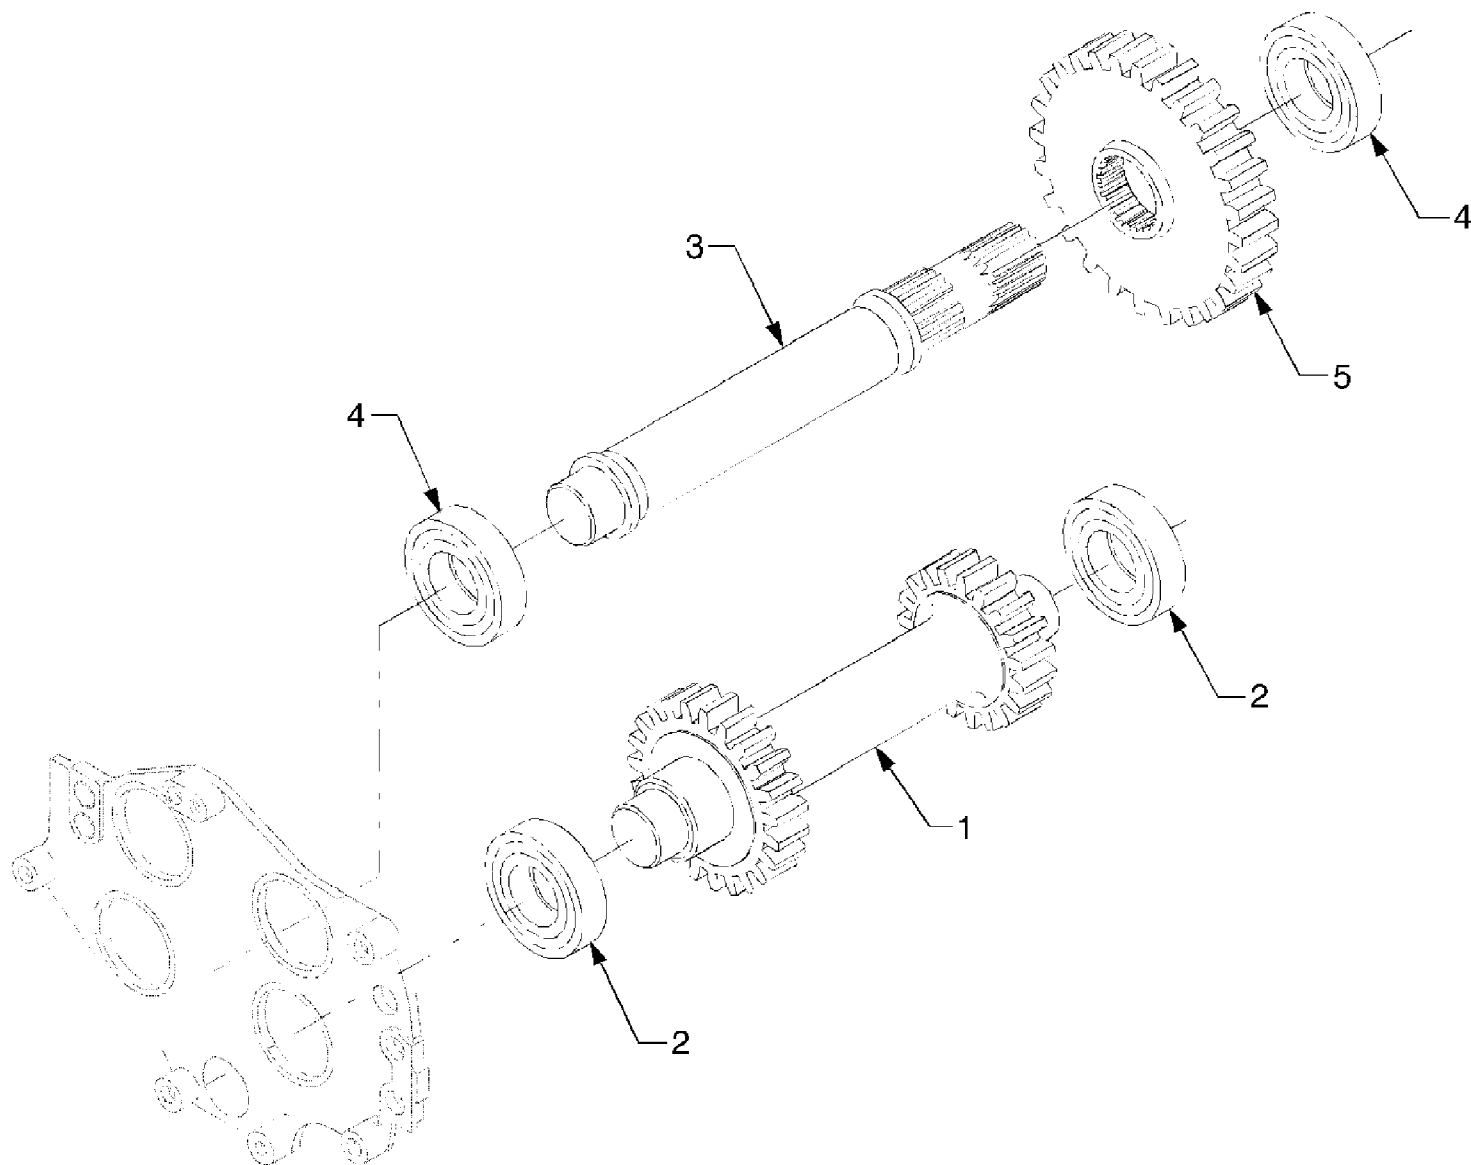 

8354 Tractor
PTO Counter Shaft Group


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-25222	1		Shaft, 23-19 Gear
2	DD-T2610-22661	2		Bearing, Ball
3	DD-T2615-25231	1		Shaft, Counter (PTO)
4	DD-08101-06305	2		Bearing, Ball
5	DD-T2615-25242	1		Gear, 33 (PTO)

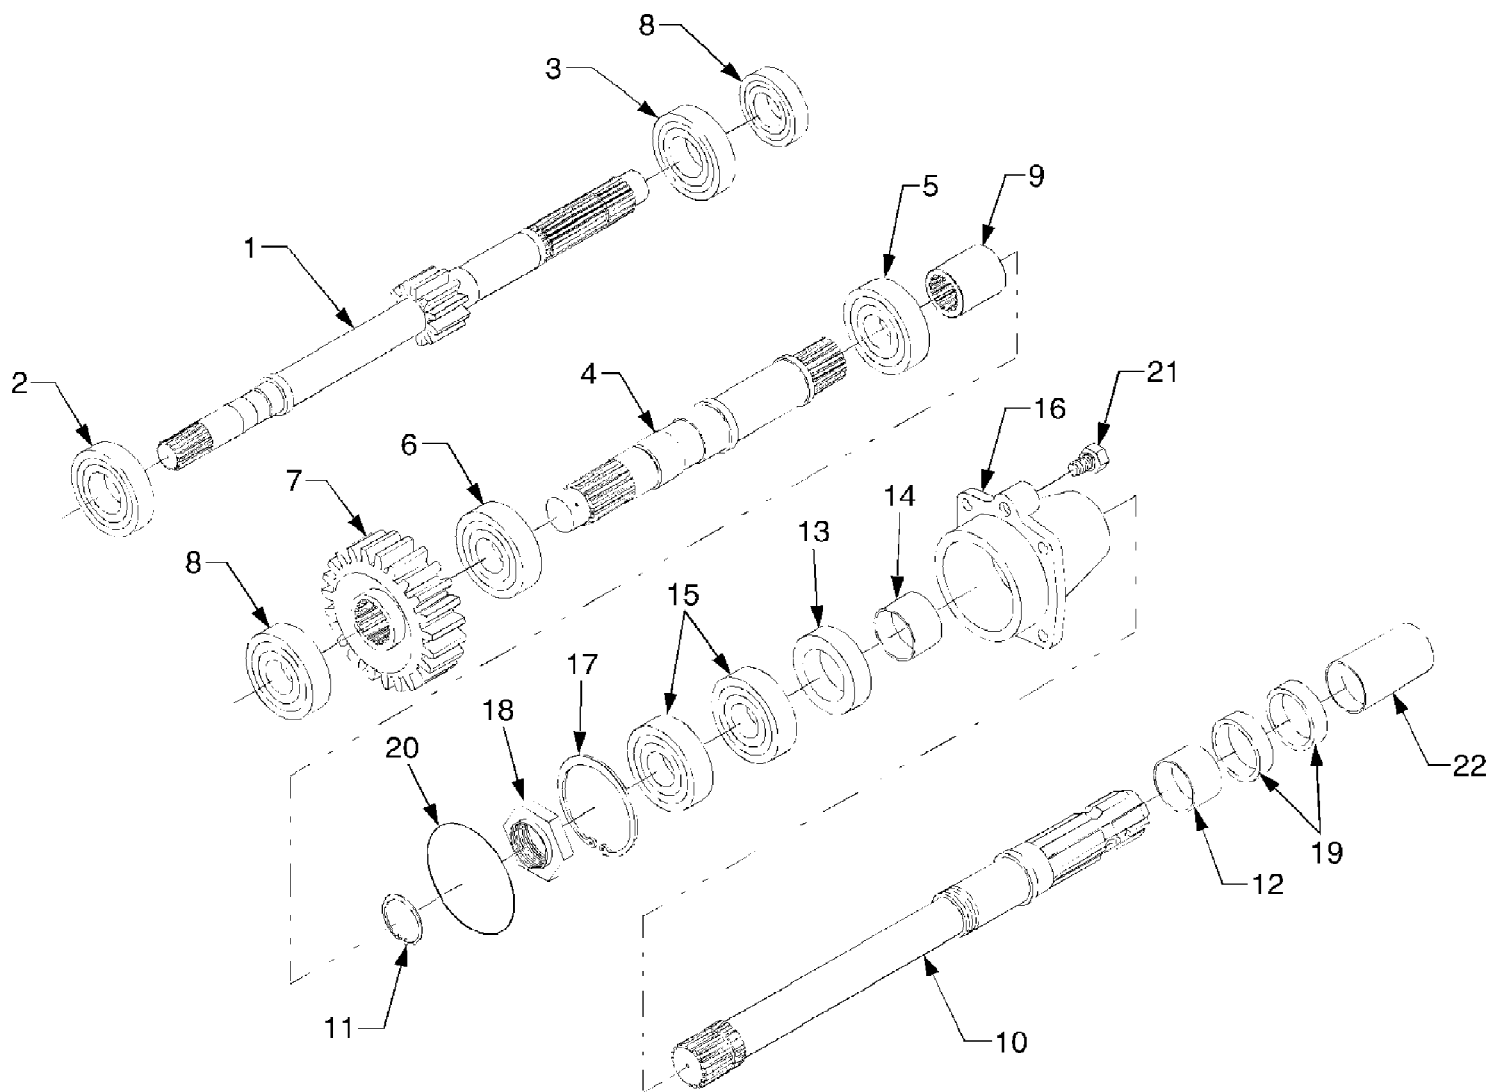 

8354 Tractor
PTO Shaft Group

Page 148 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-25251	1		Shaft, 12 Gear
2	DD-08101-06207	1		Bearing, Ball
3	DD-38260-22161	1		Bearing, Ball
4	DD-T2610-25261	1		Shaft, PTO Drive
5	DD-08101-06006	1		Bearing, Ball
6	DD-08101-06206	1		Bearing, Ball
7	DD-T2615-25271	1		Gear, 30
8	DD-08101-06305	2		Bearing, Ball
9	DD-T2610-25281	1		Coupling
10	DD-T2610-25311	1		Shaft, PTO
11	DD-04612-00300	1		Cir-clip
12	DD-T4260-25392	1		Sleeve
13	DD-T4240-25361	1	S	Seal, Oil
14	DD-T4240-25351	1	S	Collar, Oil Seal
15	DD-T4240-25331	2		Bearing, Ball
16	DD-T4260-25411	1		Case, Bearing
17	DD-04611-00650	1		Cir-clip
18	DD-35340-25321	1		Nut
19	DD-T4260-13161	2		Seal, Oil
20	DD-04811-50800	1		O-ring
21	DD-01123-50832	4		Bolt
22	DD-76706-14811	1		Cover, PTO Shaft

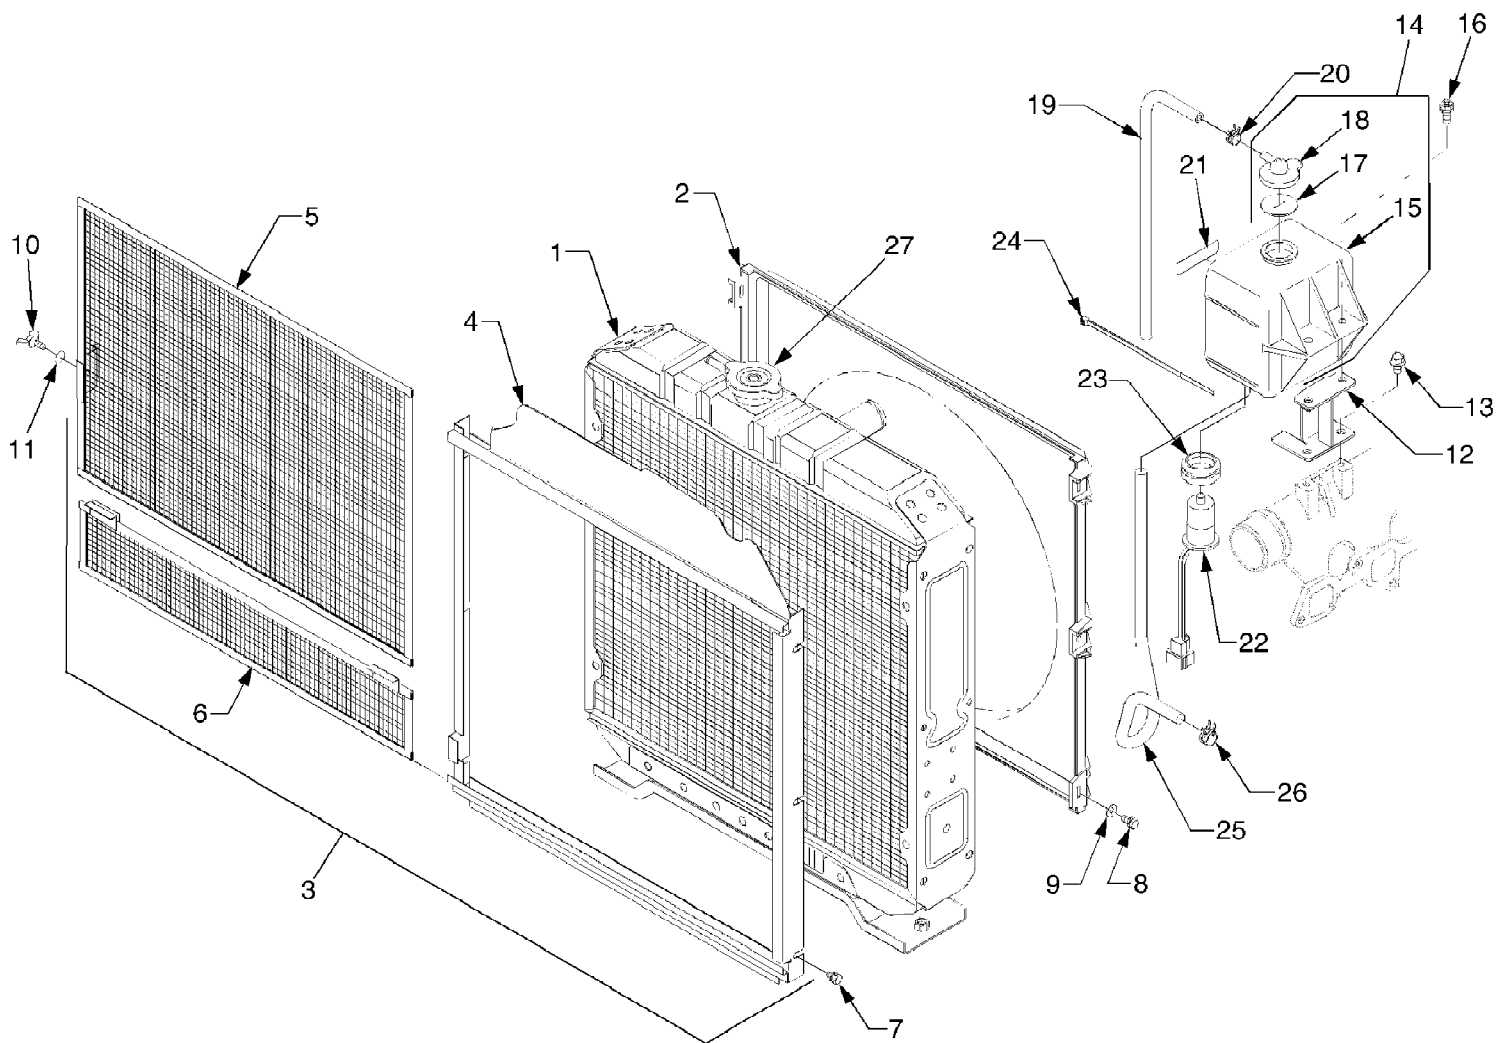 

8354 Tractor
Radiator Group


Page 150 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6500-72062	1		Radiator Ass'y
2	DD-E5800-72072	1		Shroud
3	DD-T4620-A0260	1		Screen/Guide Ass'y Includes Ref. Nos. 4 thru 6
4	DD-E5800-17711	1		Guide, Screen
5	DD-E7100-17723	1		Screen, Radiator
6	DD-E7100-17732	1		Screen, Radiator
7	DD-01025-50612	5		Bolt
8	DD-01023-50614	6		Bolt
9	DD-82EP-1665	6		Washer, Plain
10	DD-01811-50615	1		Bolt, Wing
11	DD-04013-50060	1	/P	Washer, Plain
12	DD-E6300-72462	1		Stay, Reserve Tank
13	DD-01754-50816	2		Bolt, Flange
14	DD-T4340-A0110	1	/P	Reserve Tank Ass'y Includes Ref. Nos. 16 & 17
15	DD-6200-72412	1		Body, Tank
16	DD-01202-50820	2		Bolt
17	DD-15301-72490	1		Plate, Rubber
18	DD-15301-72420	1		Cap
19	DD-15301-72440	1		Pipe, Water Over Flow
20	DD-15301-72470	2		Pipe, Clip
21	DD-85726-88210	1		Label
22	DD-15521-72992	1		Switch, Water Level
23	DD-15301-72450	1		Rubber, Holder
24	DD-T4520-82561	1		Band, Cord
25	DD-E5800-72711	1		Pipe, water Over Flow
26	DD-14911-42751	1		Clip, Pipe
27	DD-15305-72630	1		Cap, Radiator

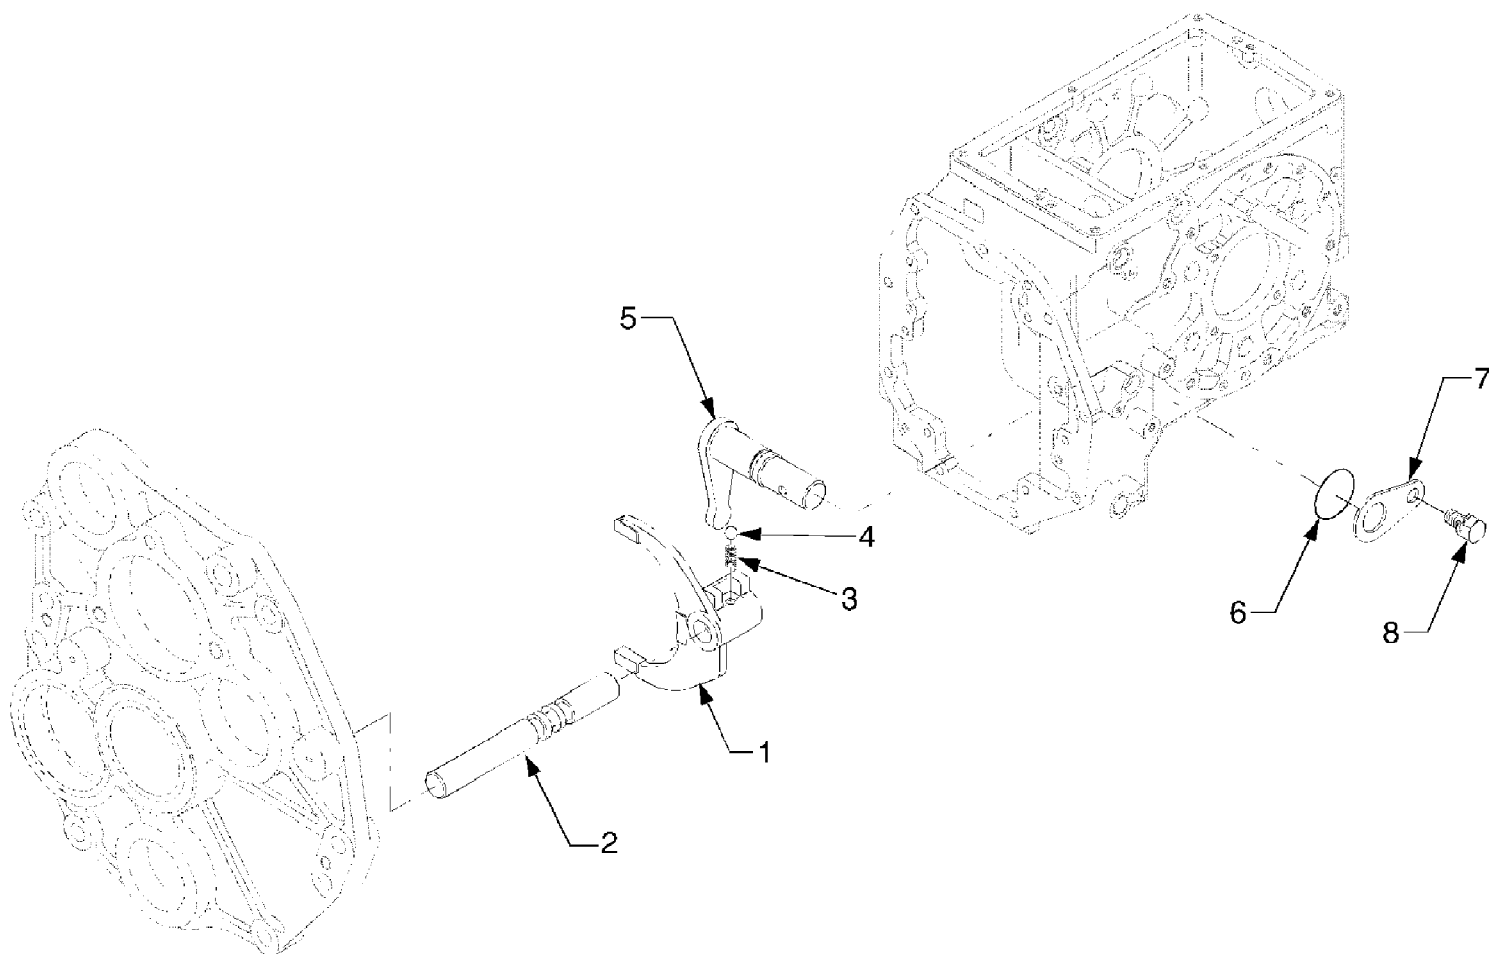 

8354 Tractor
Range Fork Group


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-23112	1		Fork, Shift (Range)
2	DD-T2610-23121	1		Rod, Range Shift
3	DD-62331-18532	1		Spring, Stopper
4	DD-07715-01605	1		Ball, Steel
5	DD-T2610-23261	1		Arm, Range Shift
6	DD-04811-00160	1		O-ring
7	DD-T4620-44331	1		Stopper
8	DD-01123-50816	1		Bolt

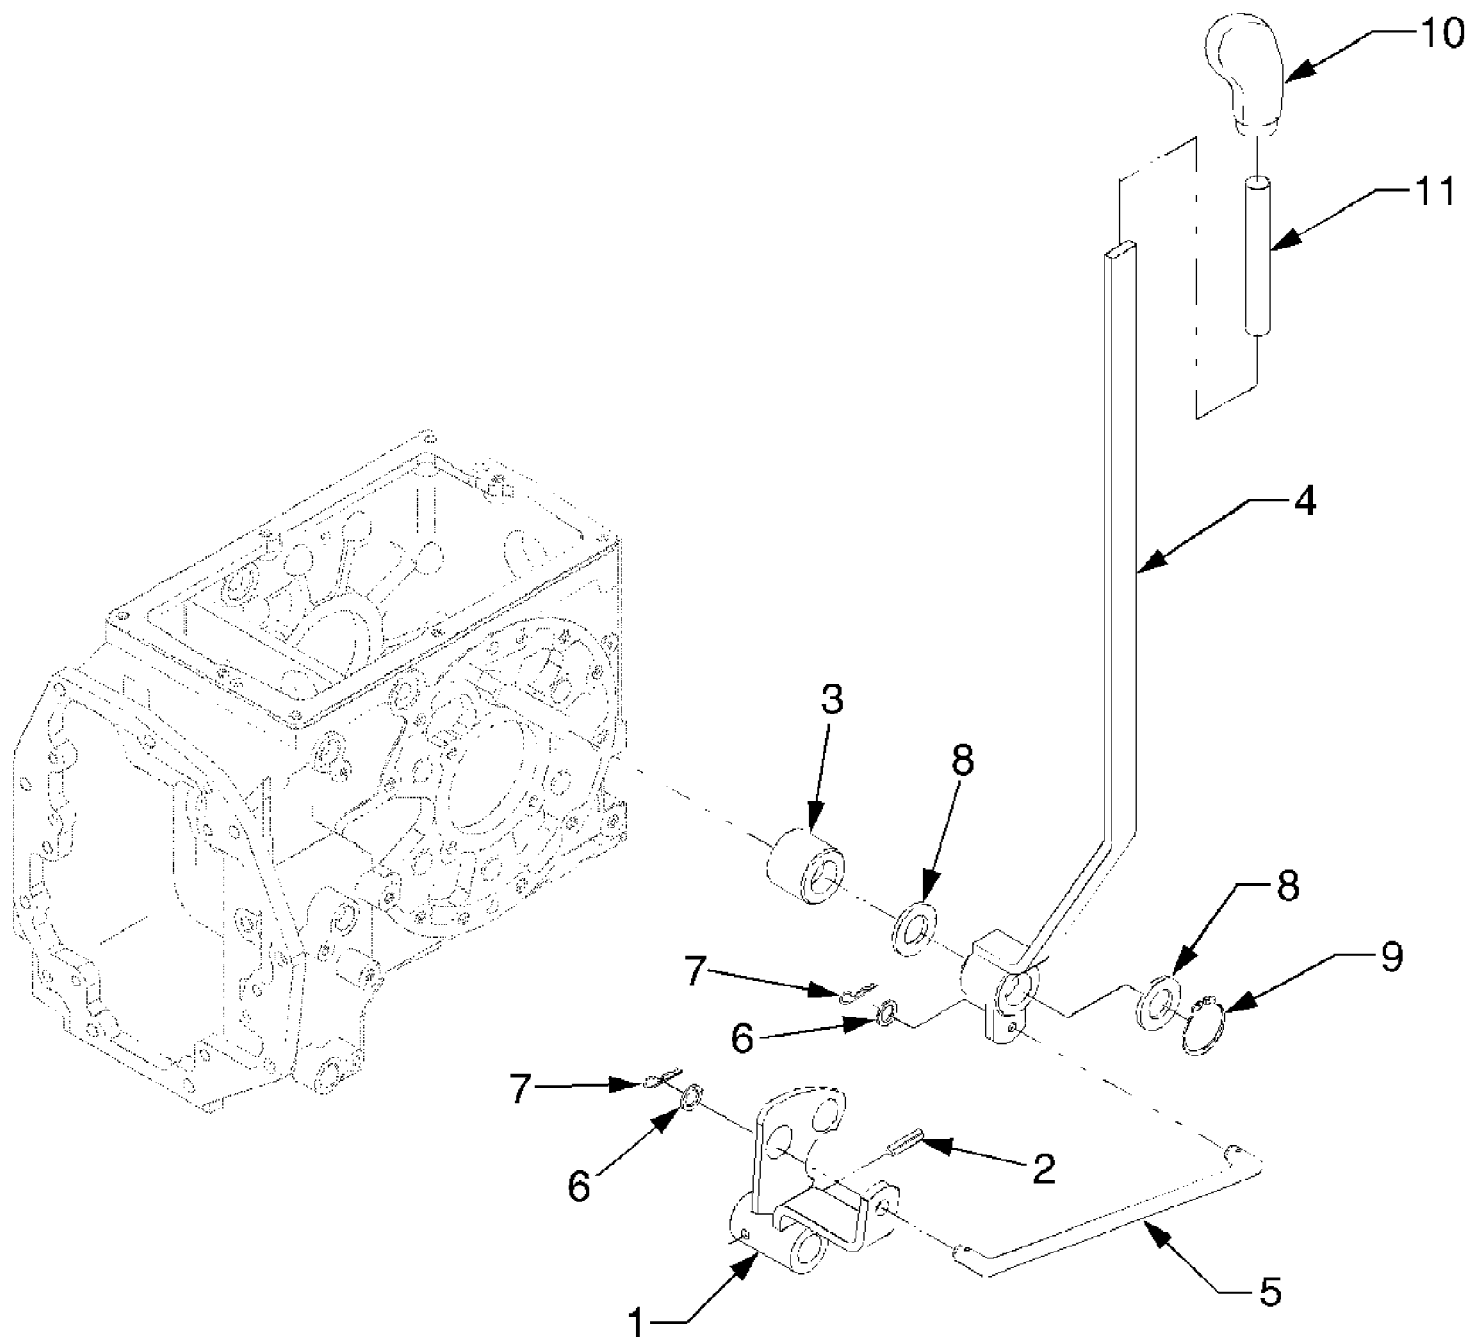 

8354 Tractor
Range Lever Group

Page 154 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2630-60513	1		Lever 1, Hi-Low
2	DD-05411-00630	1		Pin, Spring
3	DD-T2615-60652	1		Spacer
4	DD-T2630-60533	1	S	Lever, Hi-Low Shift
5	DD-T2615-24422	1		Rod(Mid PTO)
6	DD-04011-50100	2		Washer, Plain
7	DD-05525-51000	2		Pin, Snap
8	DD-04011-50180	2		Washer, Plain
9	DD-04612-00180	1		Cir-clip
10	DD-T2610-24461	1		Grip
11	DD-T4340-24921	1		Tube

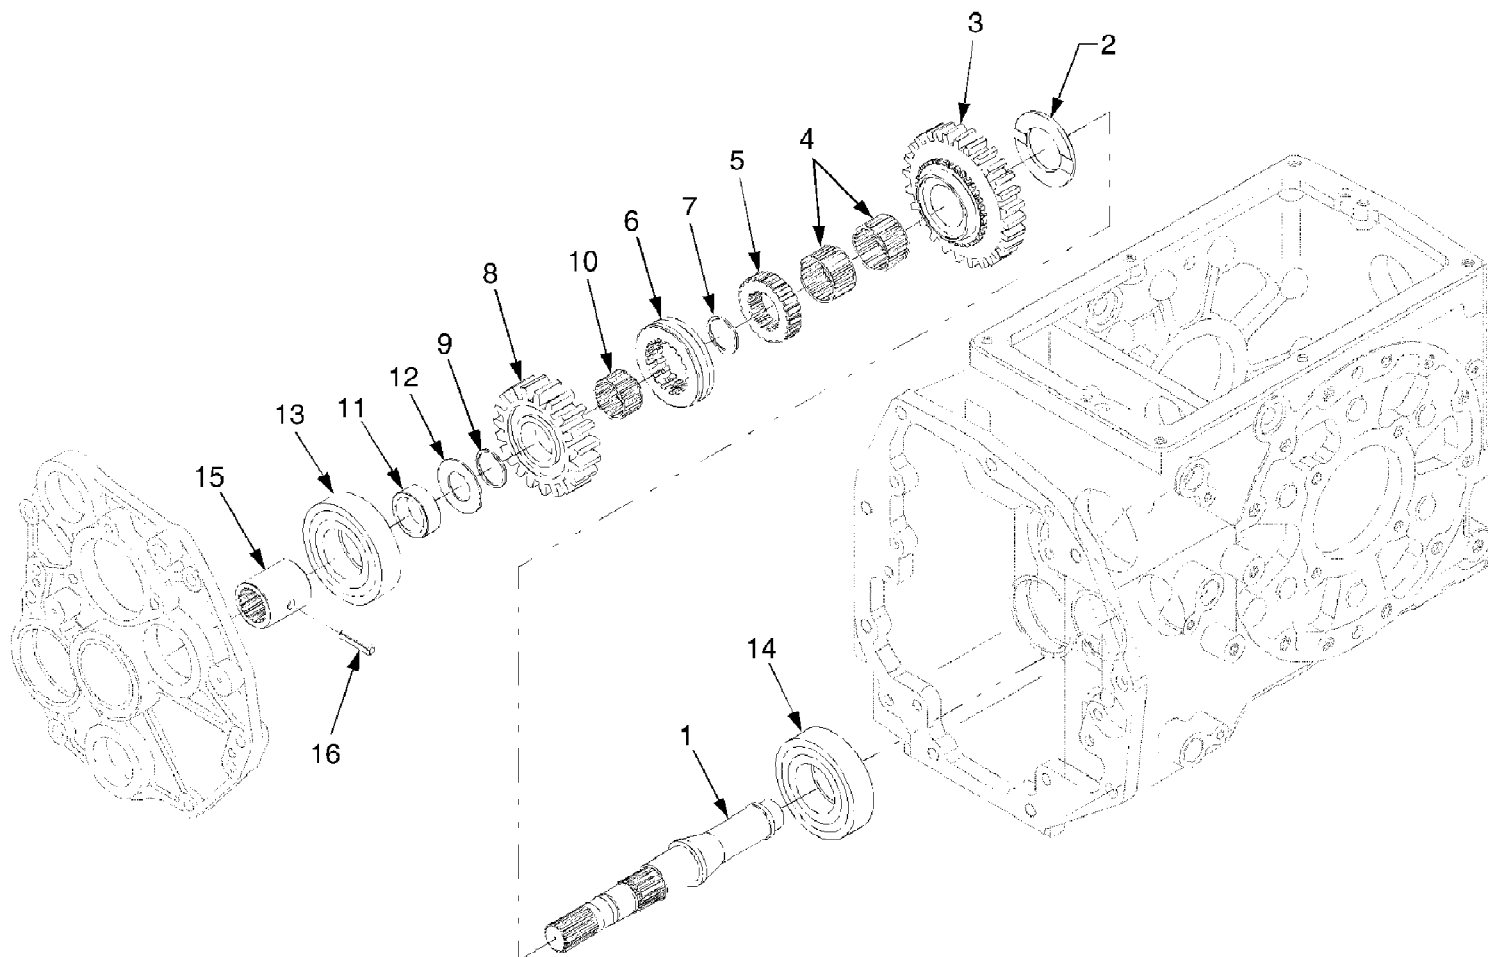 


8354 Tractor
Range Shaft Group

Page 156 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-23611	1		Shaft, Range
2	DD-T2610-23621	1		Collar, Thrust
3	DD-T2610-23632	1		Gear, 32 Spur
4	DD-08823-23717	2		Bearing, Needle
5	DD-T2610-23761	1		Boss, Spline
6	DD-T2610-23751	1		Shifter
7	DD-T2610-14541	1		Cir-clip
8	DD-T2610-23652	1		Gear, 18 Spur
9	DD-37150-21791	1		Cir-clip
10	DD-08822-53020	1		Bearing, Needle
11	DD-T2610-23781	1		Spacer
12	DD-37150-21761	1		Collar, Thrust
13	DD-08101-06305	1		Bearing, Ball
14	DD-08101-06205	1		Bearing, Ball
15	DD-37805-44521	1		Coupling
16	DD-05411-00635	1		Pin, Spring

 
8354 Tractor
Rear Axle Group

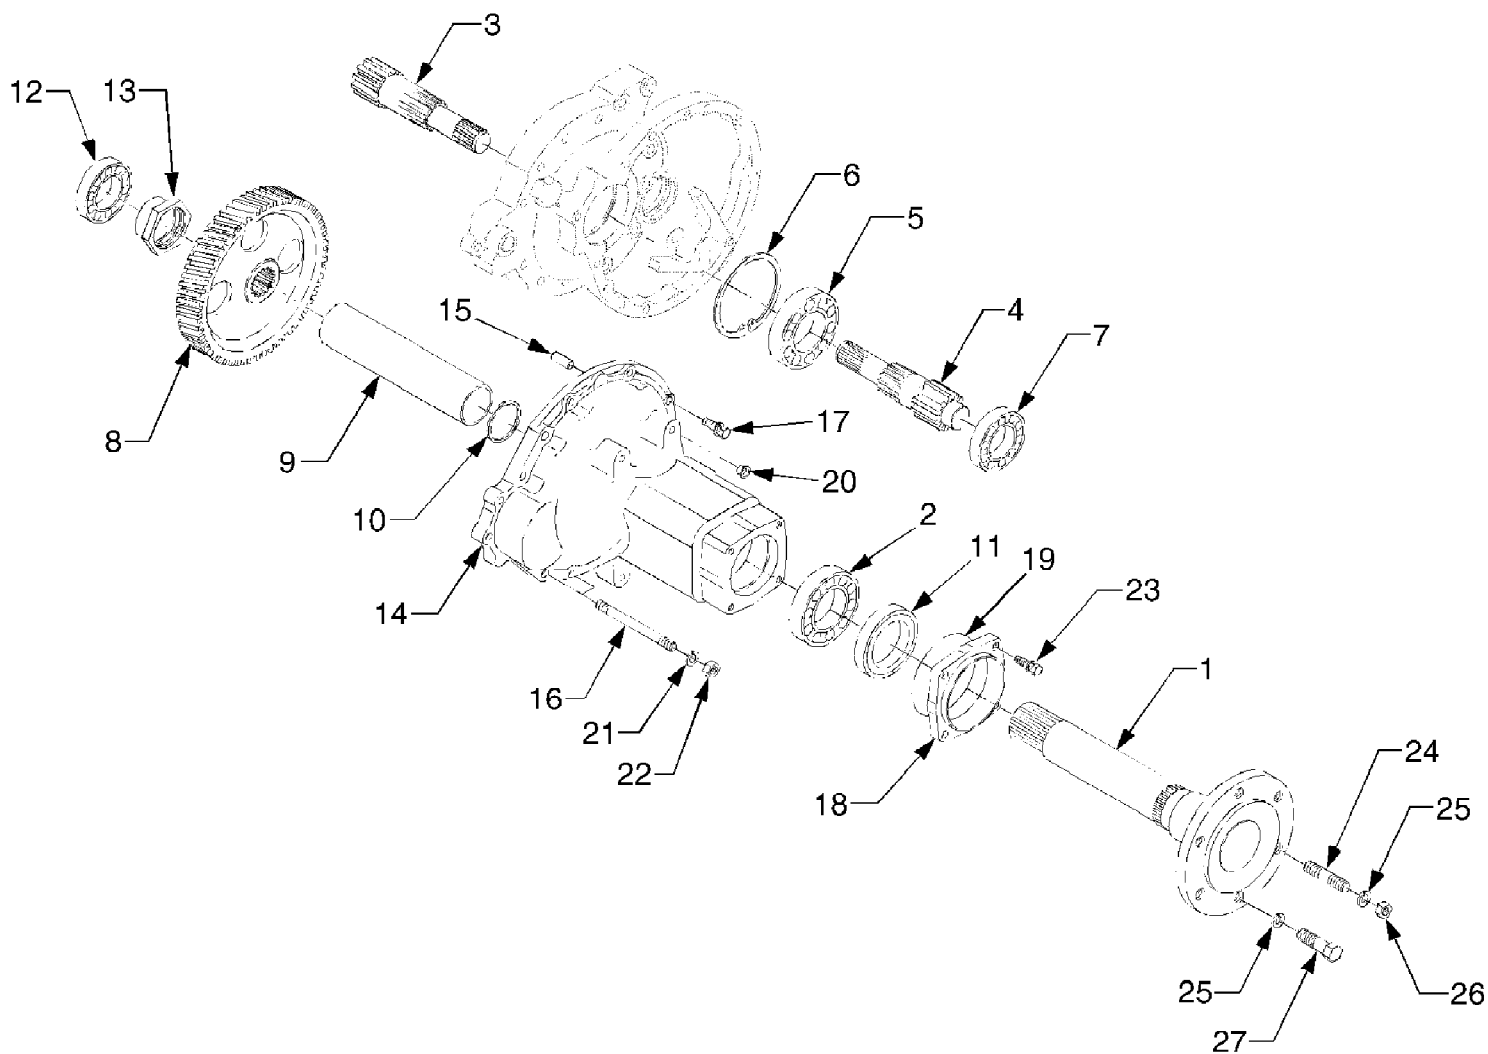

8354 Tractor
Rear Axle Group

Page 158 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2620-27114	2		Rear, Axle
2	DD-08101-06210	2		Bearing, Ball
3	DD-T2620-26712	1		Shaft, 10 Gear(RH)
4	DD-T2620-26722	1		Shaft, 10 Gear(LH)
5	DD-08101-06209	2		Bearing, Ball
6	DD-04611-00850	2		Ring, Snap
7	DD-08101-06207	2		Bearing, Ball
8	DD-T2560-26831	2		Gear 55
9	DD-T2620-27142	2		Spacer
10	DD-32155-26481	2		Washer
11	DD-36205-48252	2		Seal, Oil
12	DD-38260-22161	2		Bearing, Roller
13	DD-70565-11381	2		Nut
14	DD-T2620-27313	2	/P	Case, Rear Axle
15	DD-37305-28171	4		Pin, Straight
16	DD-T2440-14201	8		Stud
17	DD-01133-51035	10		Bolt
18	DD-38435-27161	2		Cover, Rear Axle Case
19	DD-04811-51000	2		O Ring
20	DD-32210-27581	6		Plug
21	DD-04512-50100	8		Spring Washer
22	DD-02176-50100	8		Nut
23	DD-01133-51035	8		Bolt
24	DD-T4340-27122	4		Stud
25	DD-04512-50160	12		Washer, Spring
26	DD-T4340-27131	4		Nut
27	DD-01173-51635	8		Bolt

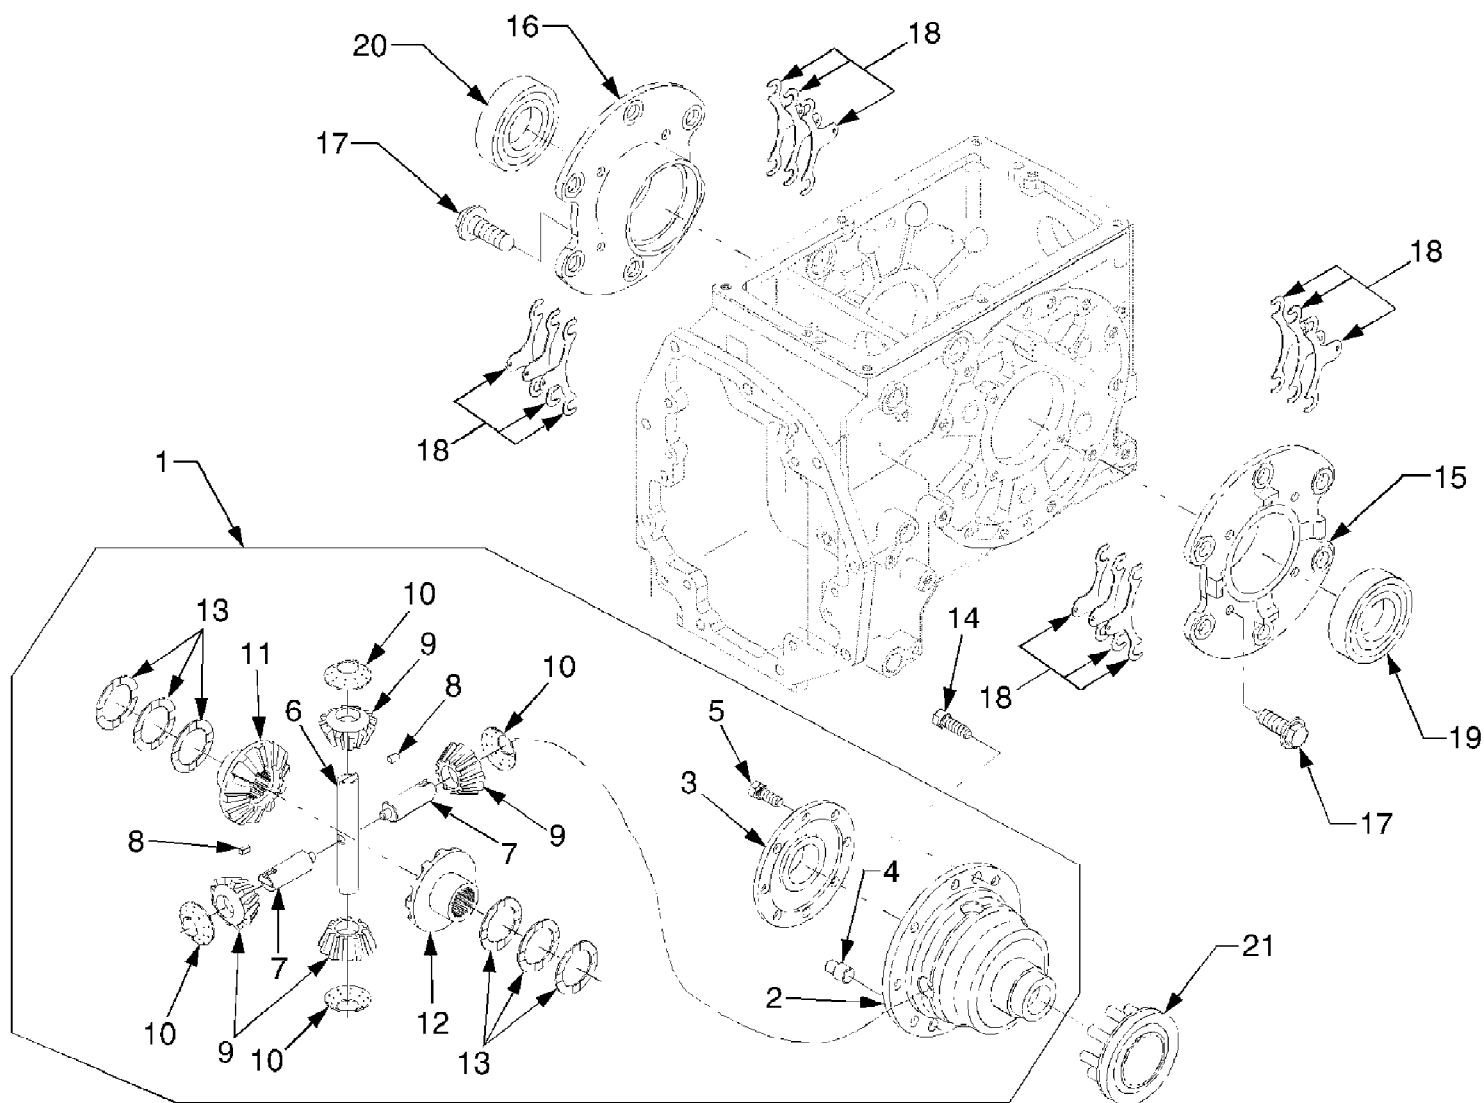 

8354 Tractor
Rear Differential System


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4620-26102	1		Differential System
2	DD-38240-26515	1		Case, Differential System
3	DD-38240-26523	1		Cap
4	DD-37300-28172	2		Pin, Straight
5	DD-01133-51025	8		Bolt
6	DD-38430-26343	1		Shaft, 1 Differential Pinion
7	DD-38430-26333	2		Shaft, 2 Differential Pinion
8	DD-31220-26281	2		Key
9	DD-T2240-26353	4		Pinion, Differential
10	DD-31220-26392	4		Washer, Differential Pinion
11	DD-37300-26432	1		Gear, Differential Side (RH)
12	DD-37300-26442	1		Gear, Differential Side (LH)
13	DD-38240-26472	2		Washer, Differential (1.7)
	DD-37300-26481	2		Washer, Differential (1.5)
	DD-37300-26491	2		Washer, Differential (1.6)
14	DD-37800-43871	8		Bolt
15	DD-T4620-26561	1		Case, Differential Bearing (LH)
16	DD-T4620-26551	1		Case, Differential Bearing (RH)
17	DD-01133-51030	8		Bolt
18	DD-37150-26161	8		Shim (T 0.2)
	DD-37150-26171	4		Shim (T 0.1)
	DD-37150-26181	4		Shim (T 0.5)
19	DD-08711-30209	1		Bearing, Taper Roller
20	DD-08711-32011	1		Bearing, Taper Roller
21	DD-37300-26614	1		Shift, Differential Lock

No
Diagram
Available

Parts List
Only

8354 Tractor
ROPS



Ref #	Part Number	Qty	S/P/F	Description
	603-04169	1		SERVICE ASSEMBLY COMPLETE
	FV-001-7283-018	1		SAFETY DECAL
	FV-001-7283-019	1		SAFETY DECAL
	FV-001-7283-024	2		FOLDING WARNING DECAL
	FV-172-110-002	2		BLOCK-LATCH
	FV-172-115-001	2		KNOB ASSEMBLY
	FV-218-022-003	2		WASHER
	FV-273-007-002	2		LYNCH PIN
	FV-368-002-002	1		ROPS DECAL

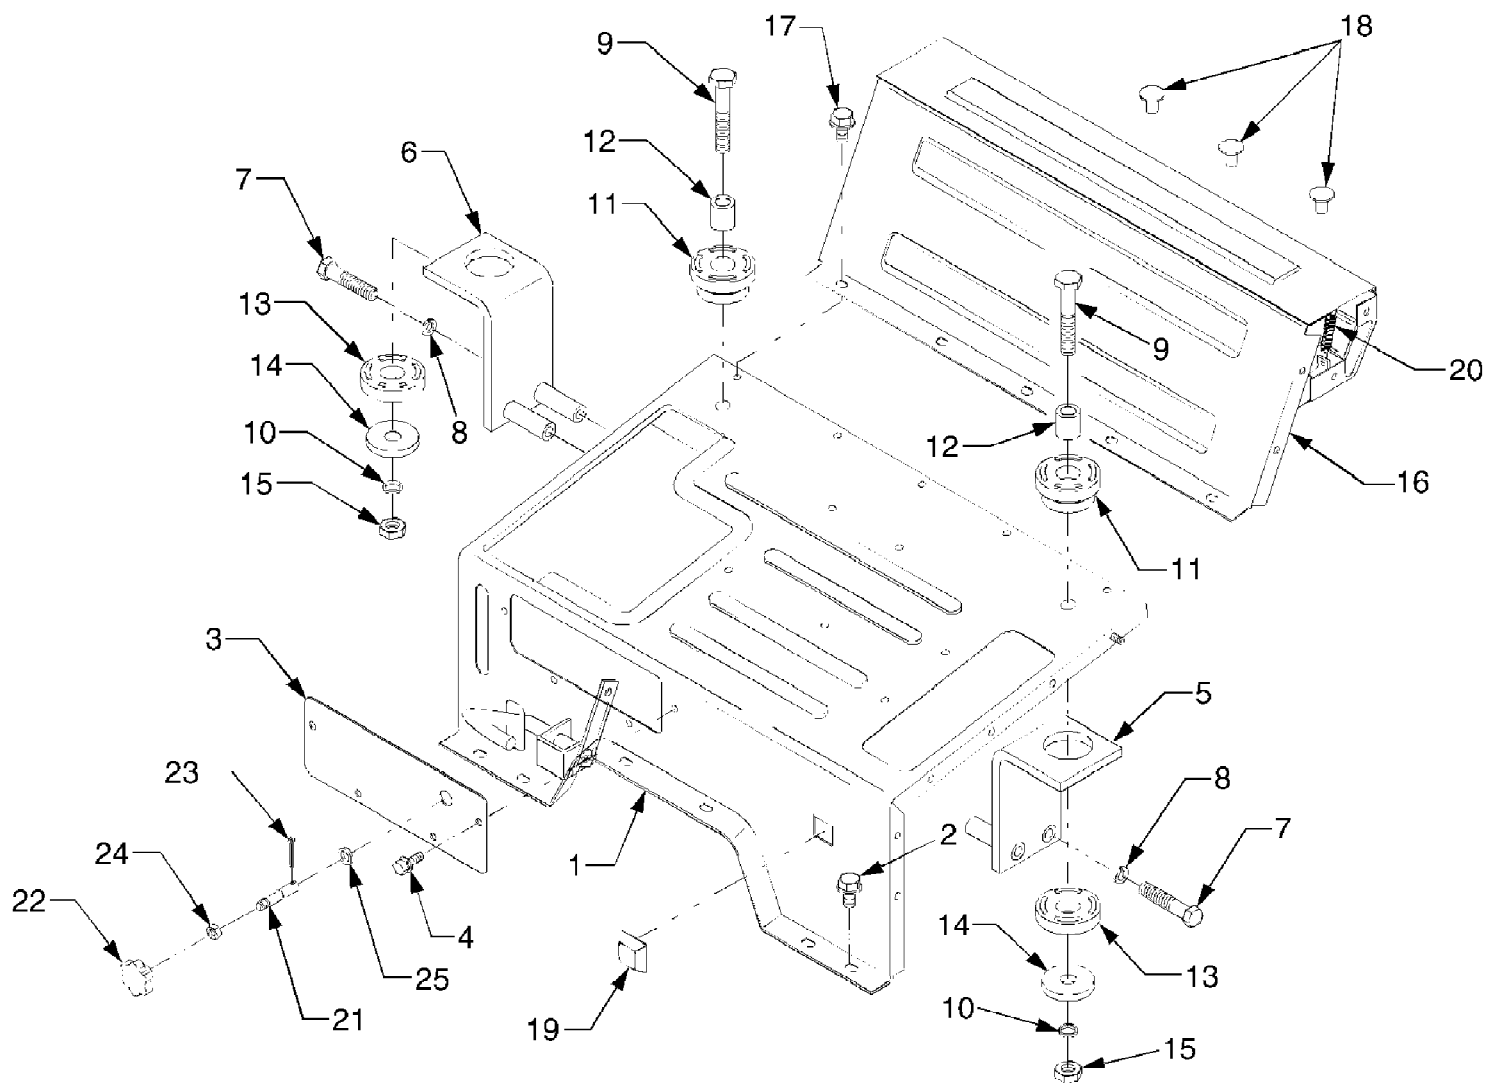 

8354 Tractor
Seat Floor Group


Page 164 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DDT261570411YW	1		Seat Floor Ass'y
2	DD-01754-50816	6		Bolt, Flange
3	DDT261065332YW	1		Cover
4	DD-01754-50816	4		Bolt, Flange
5	DD-T2610-74412	1		Support, Seat Floor (LH)
6	DD-T2610-74422	1		Support, Seat Floor (RH)
7	DD-01173-51295	4		Bolt
8	DD-04512-50120	4		Washer, Spring
9	DD-01173-51690	2		Bolt
10	DD-04512-50160	2		Washer, Spring
11	DD-T2610-70211	2		Rubber, Cabin Cushion (A)
12	DD-T4620-70042	2		Collar, Cabin Cushion (A)
13	DD-T4620-70032	2		Rubber, Cabin Cushion (B)
14	DD-T4520-87171	2		Collar
15	DD-02176-50160	2		Nut
16	DDT261092183YW	1		Seat Rear Plate Ass'y
17	DD-01754-50816	5		Bolt, Flange
18	DD-T4810-50661	3		Cushion
19	DD-T2615-70051	1		Cap, Bi-Speed
20	DD-T2305-26641	2		Spring
21	DD-T2610-39871	1		Rod, Hydraulic Control
22	DD-T2610-39881	1		Grip
23	DD-05511-50420	1		Pin, Split
24	DD-02176-50100	1		Nut
25	DD-31355-29491	1		Grommet

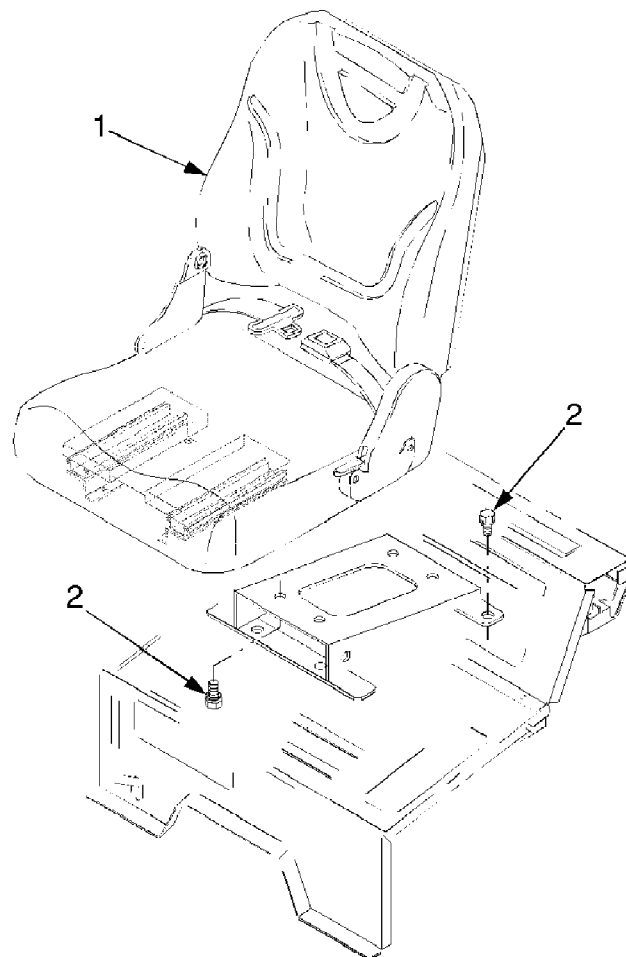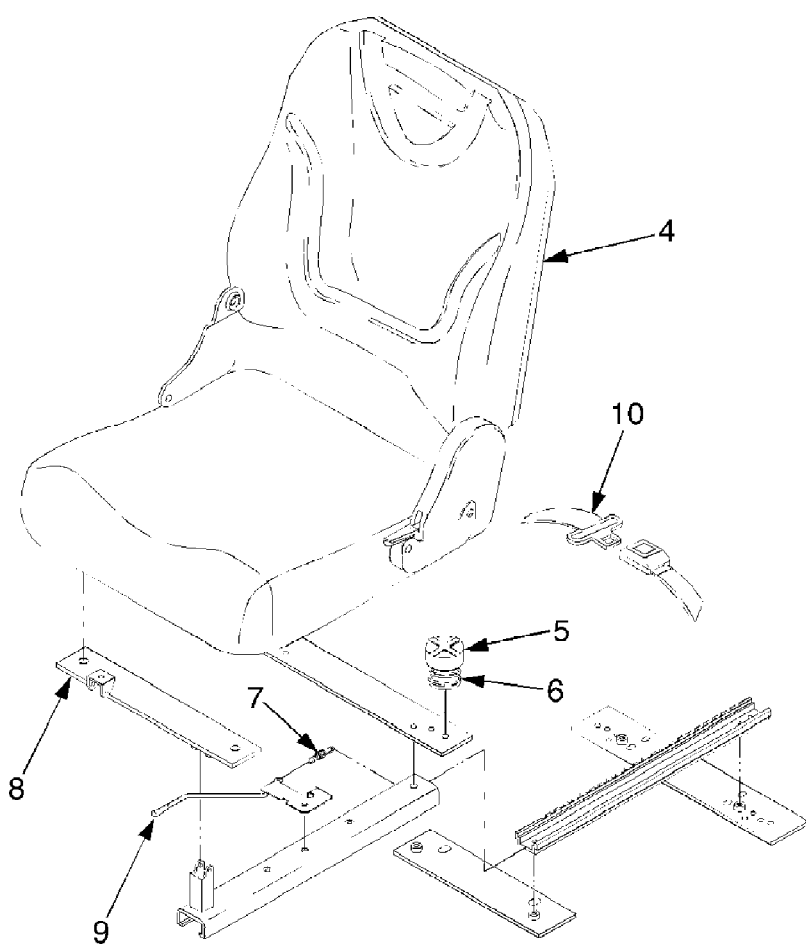  

8354 Tractor
Seat Group

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-18501	1		Seat Ass'y
2	DD-01123-50820	4		Bolt
4	DD-T2615-18521	1		Seat
5	DDT261518501023	1		Rubber, Damper
6	DDT261518501022	1		Spring, Damper
7	DDT261518501025	1		Spring
8	DDT261518501017	1		Bracket, Link
9	DDT261518501016	1		Slide

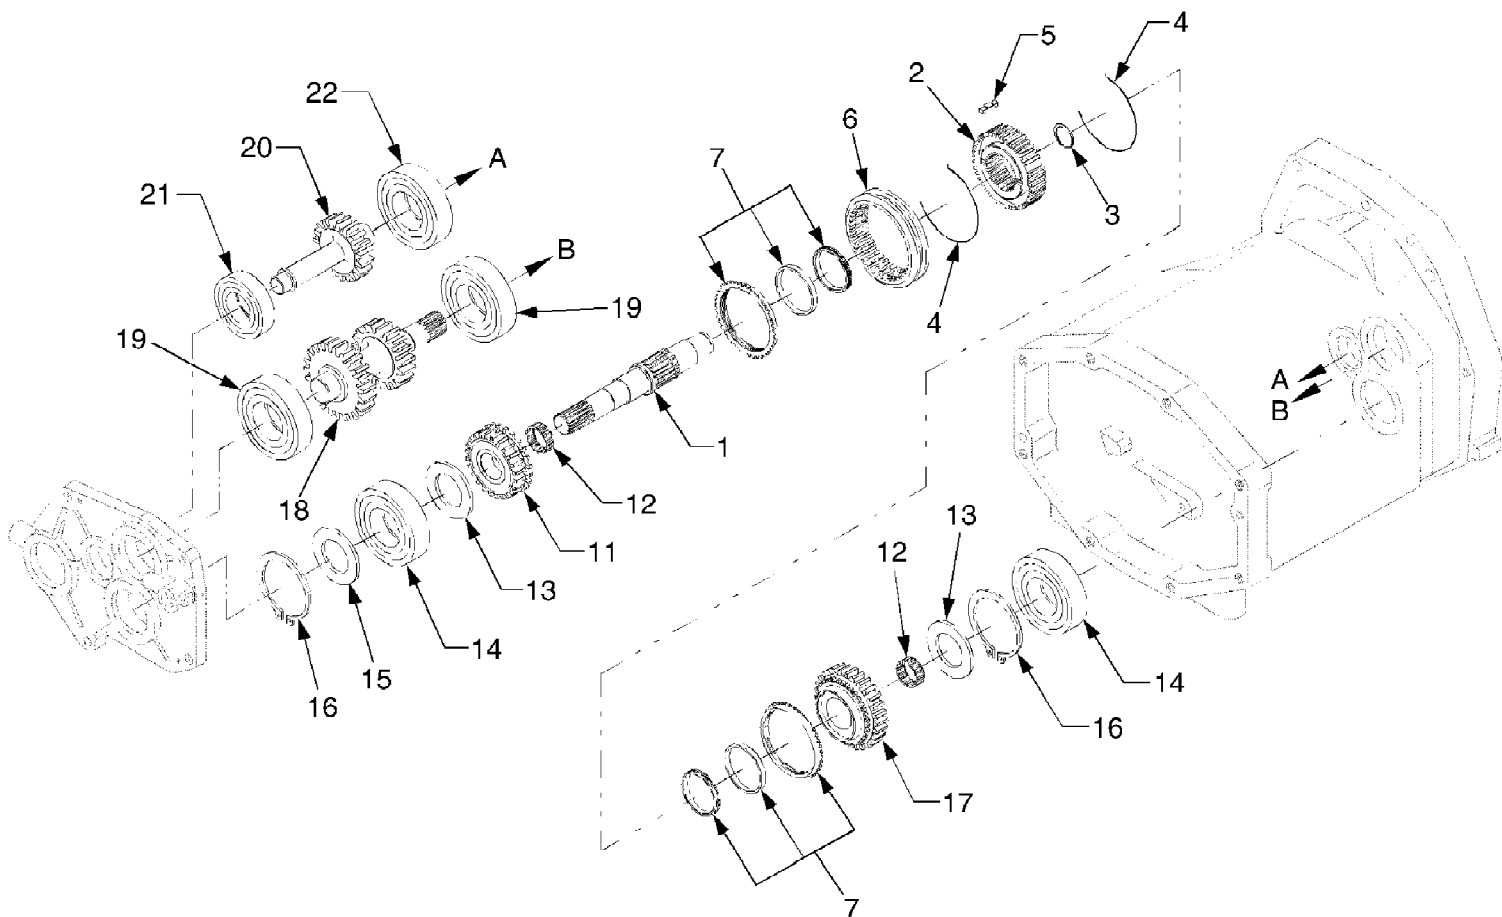 


8354 Tractor
Shuttle Shaft Group

Page 168 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-22631	1		Shaft, Shuttle
2	DD-T2610-22812	1		Hub, Spline
3	DD-T2610-22821	1		Cir-clip
4	DD-38360-21781	2		Spring
5	DD-T2610-21812	3		Key, Synchronize
6	DD-T2610-22832	1		Shifter
7	DD-T2610-22851	2		Synchronize Ass'y
11	DD-T2610-22612	1		Gear, 19
12	DD-08822-83327	2		Bearing, Needle
13	DD-38430-21762	2		Collar, Thrust
14	DD-T2610-22661	2		Bearing, Ball
15	DD-34150-21561	2		Collar
16	DD-04612-00250	2		Cir-clip
17	DD-T2610-22622	1		Gear, 16
18	DD-T2610-22643	1		Shaft, 23-21 Gear
19	DD-T2610-22661	2		Bearing, Ball
20	DD-T2610-22722	1		Shaft, 18 Gear
21	DD-08101-06204	1		Bearing, Ball
22	DD-66415-39341	1		Bearing, Ball

 
8354 Tractor
Shuttle Shift Fork Group

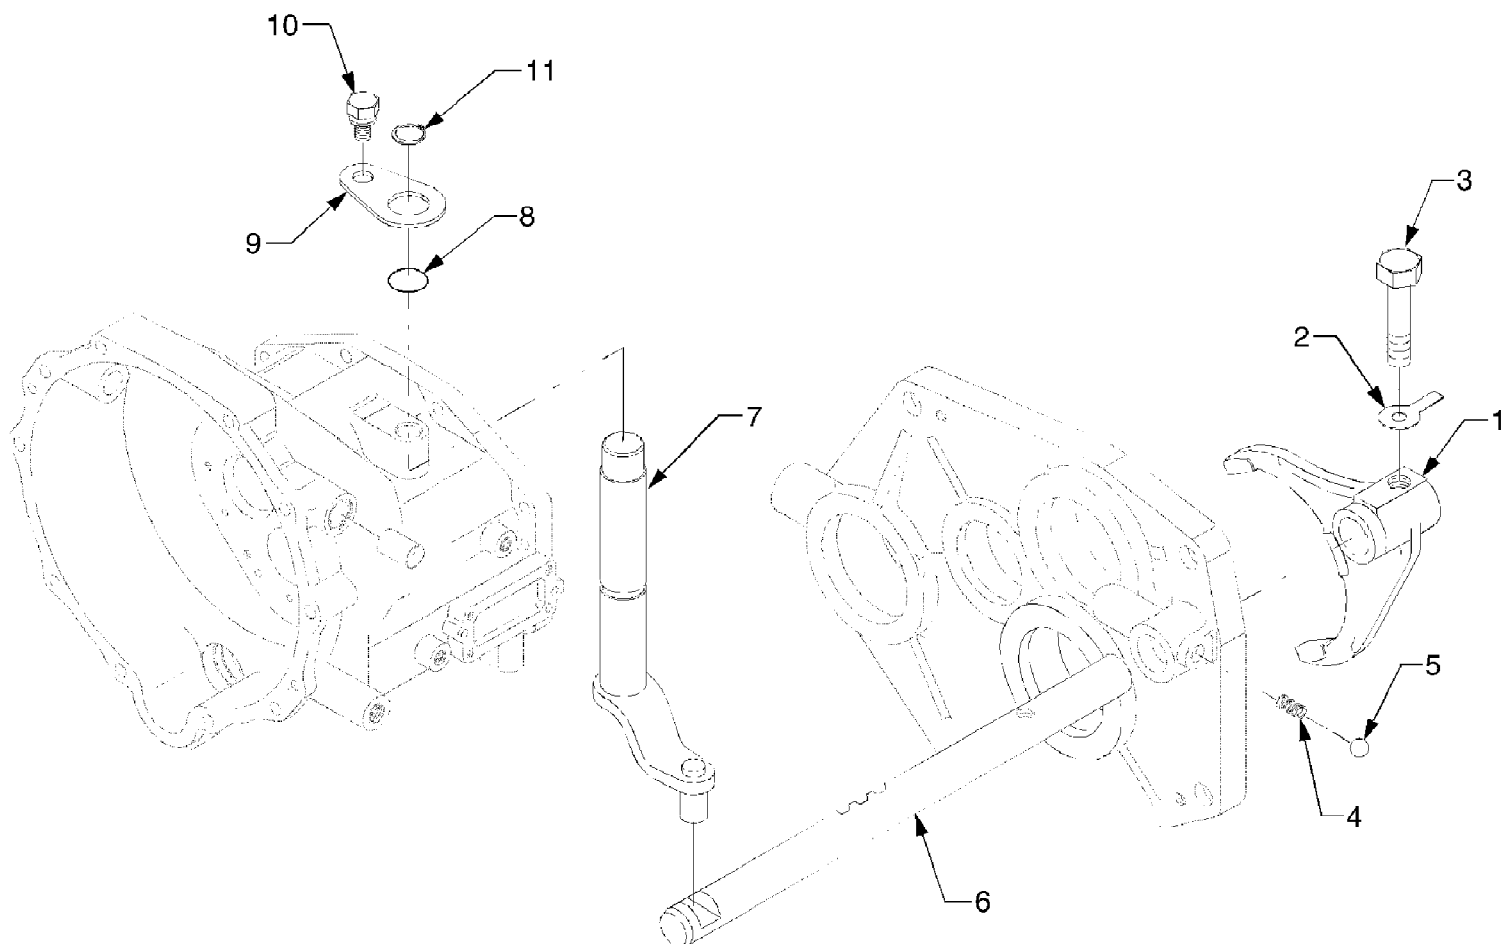

8354 Tractor
Shuttle Shift Fork Group

Page 170 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-22152	1		Fork, Shift (Shuttle)
2	DD-04111-50060	1		Washer
3	DD-T2610-22171	1		Bolt, Stopper
4	DD-62331-18532	1		Spring
5	DD-07715-01605	1		Ball
6	DD-T2610-22162	1		Rod, Fork (Shuttle)
7	DD-T2610-22122	1		Arm, Shift (Shuttle)
8	DD-04811-00200	1		O-ring
9	DD-T2610-22131	1		Plate
10	DD-01754-50812	1		Bolt, Flange
11	DD-04612-50180	1		Cir-clip

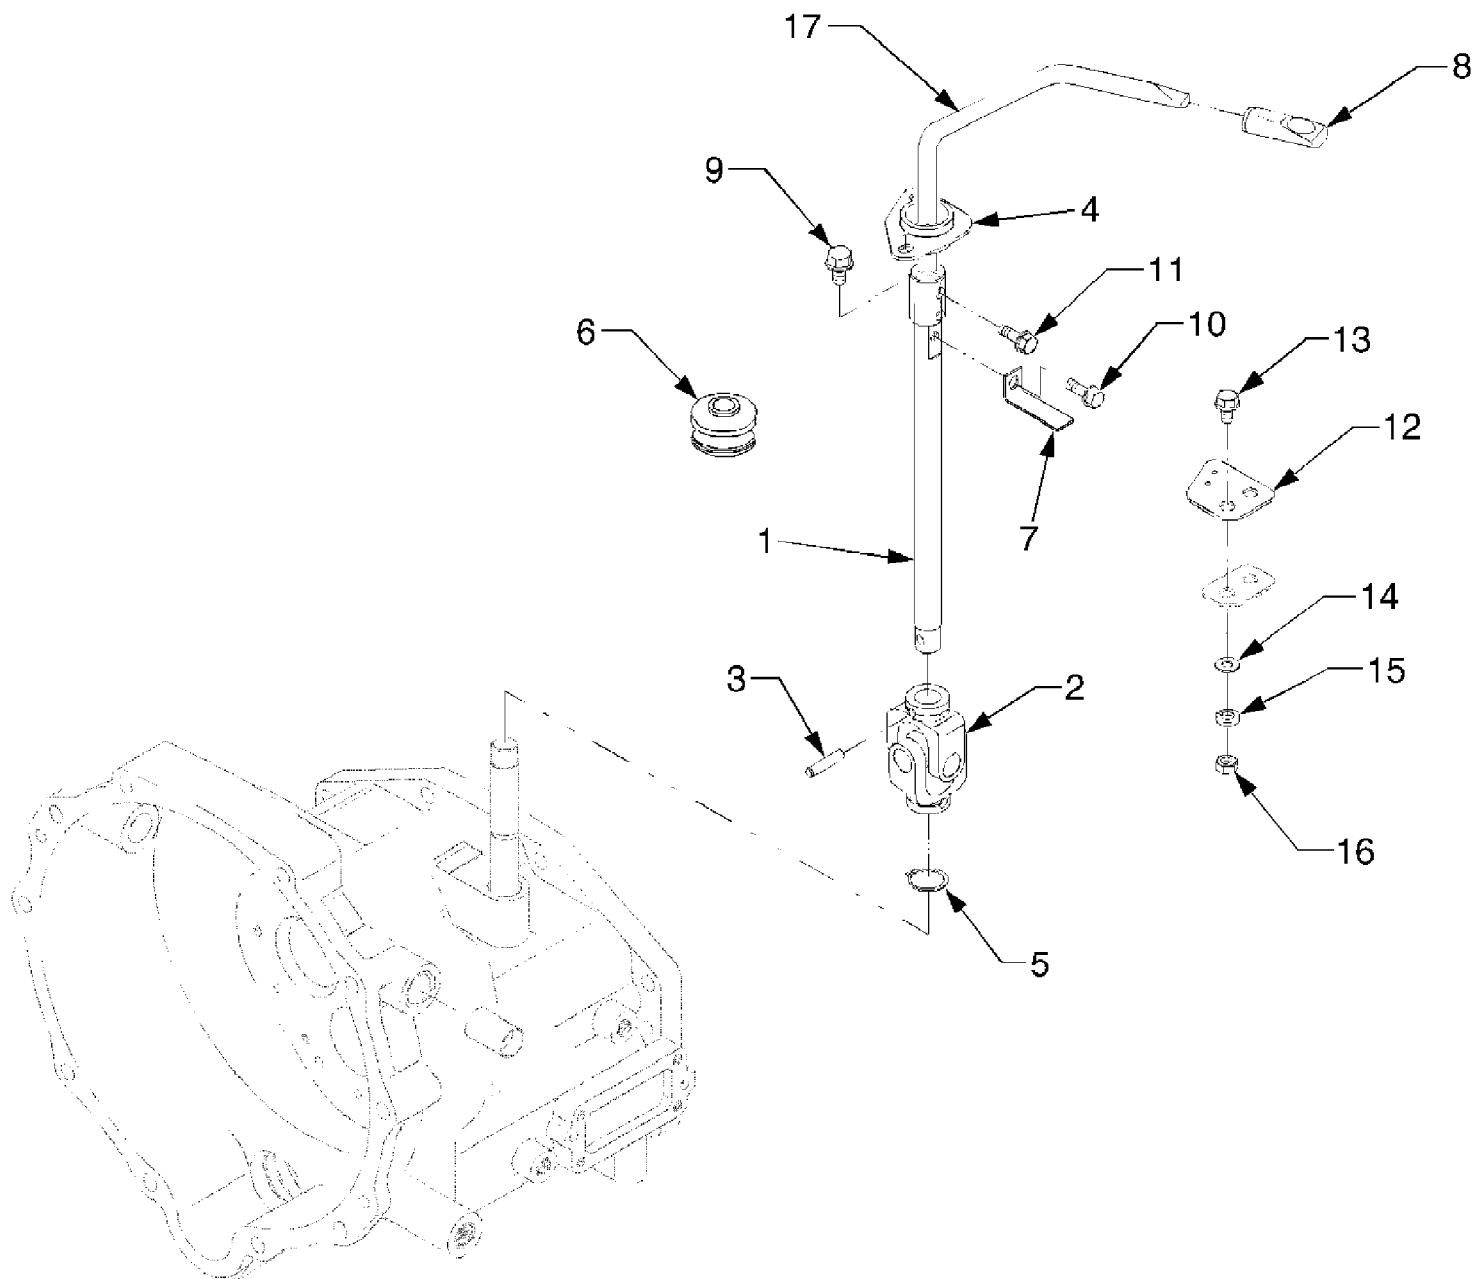 

8354 Tractor
Shuttle Shift Lever Group

Page 172 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4681-65612	1		Lever, Shuttle
2	DD-P4510-41311	1		Joint, Universal
3	DD-66116-41353	2		Pin, Straight
4	DD-T4620-65641	1		Flange, Bearing
5	DD-04612-00280	2		Cir-clip
6	DD-T4810-65571	2		Boot 1 (Shuttle Lever)
7	DD-T4680-65721	1		Bracket, Switch
8	DD-T4625-65712	1		Grip (Shuttle Lever)
9	DD-01023-50620	2		Bolt
10	DD-01023-50612	1		Bolt
11	DD-01025-50620	2		Screw
12	DD-T4620-65741	1		Plate
13	DD-01023-50620	2		Bolt
14	DD-04013-50060	2	/P	Washer, Plain
15	DD-04512-50060	2		Washer, Spring
16	DD-02056-50060	2		Nut
17	DD-4625-65612	1		Lever 2, Shuttle

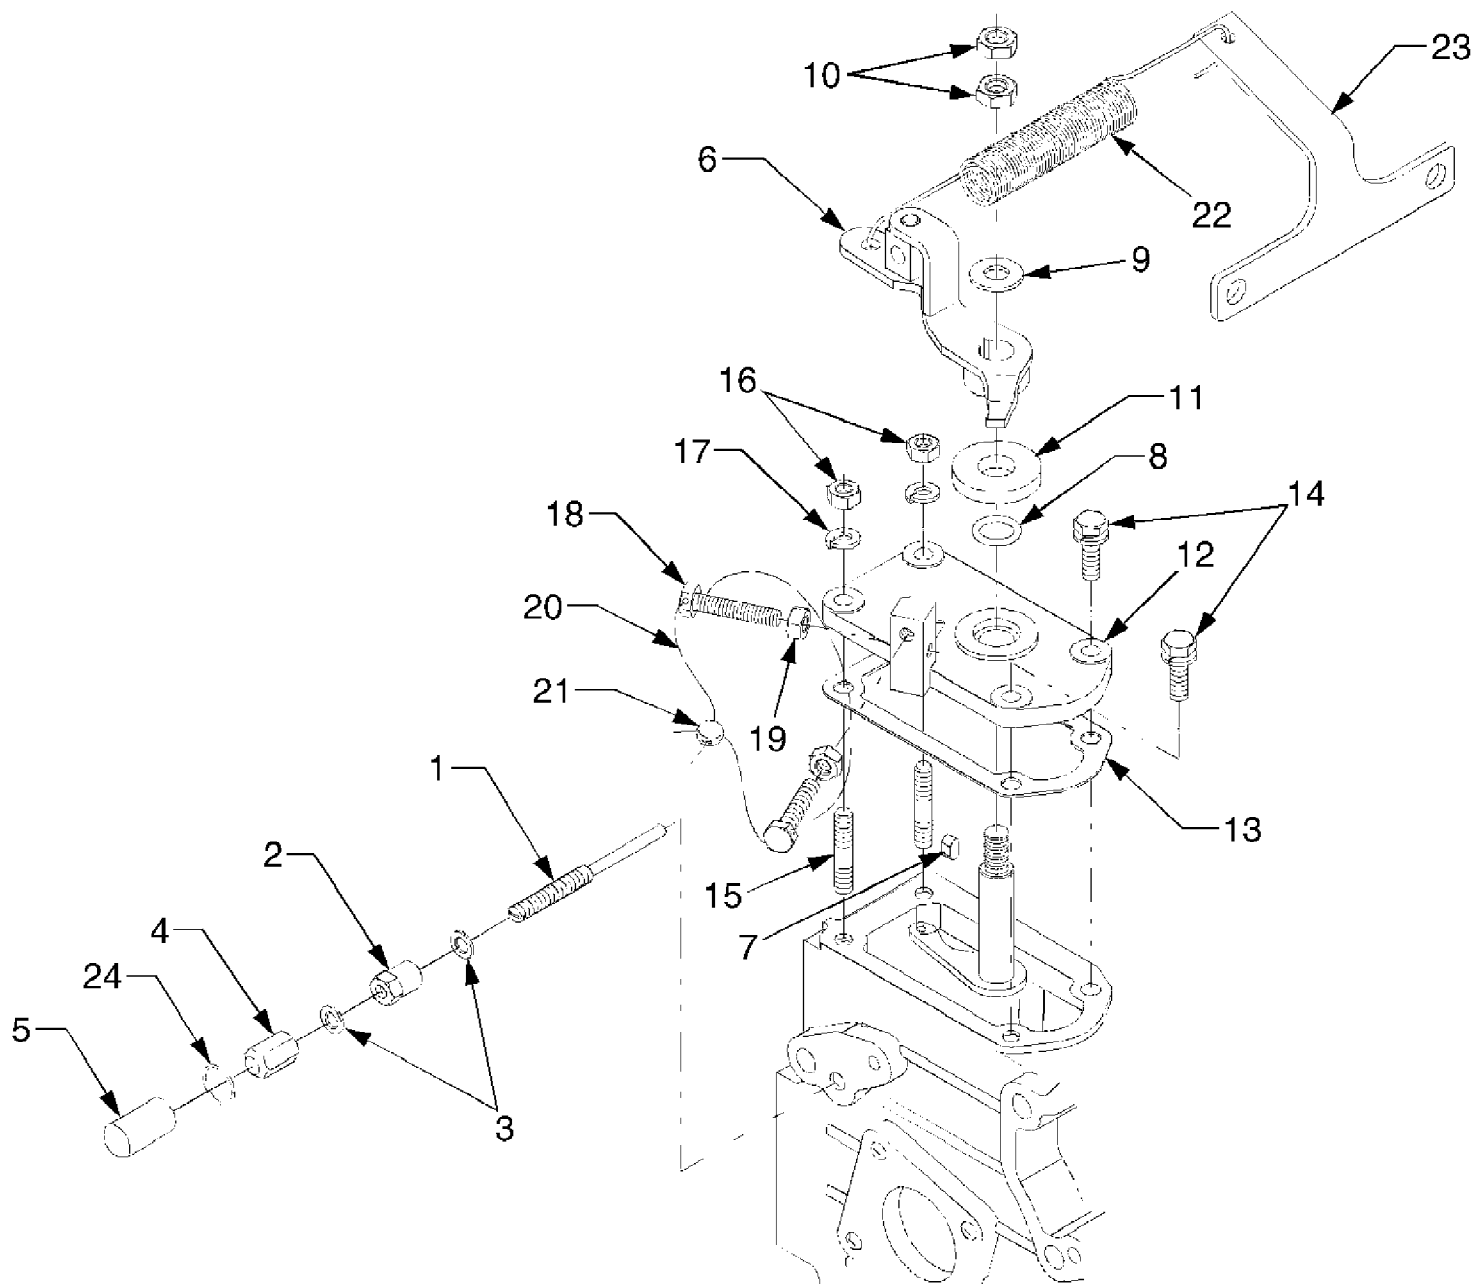 

8354 Tractor
Speed Control Plate

Page 174 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-15601-54121	1		Bolt, Adjusting
2	DD-E6305-92021	1		Nut
3	DD-E6305-96652	2		Gasket
4	DD-E6305-54221	1		Nut, Cap
5	DD-E6305-54421	1		Cap
6	DD-E5611-57152	1		Lever, Speed Control
7	DD-05712-00408	1		Key
8	DD-04811-00120	1		O-ring
9	DD-04013-50080	1		Washer, Plain
10	DD-02112-50080	2		Nut
11	DD-17011-57383	1		Plate, Friction
12	DD-E5800-57111	1		Plate, Speed Control
13	DD-E5800-57211	1		Gasket, Control Plate
14	DD-01023-50620	2		Bolt
15	DD-01518-50622	2		Stud
16	DD-02056-50060	2		Nut
17	DD-04512-50060	2		Washer, Spring
18	DD-15108-57284	2		Stopper
19	DD-02056-50060	2		Nut
20	DD-07811-11210	1		Wire
21	DD-07918-00001	1		Lead, Sealing
22	DD-52200-41921	1		Spring
23	DD-E6305-41291	1		Support, Spring
24	DD-E6305-54281	1		Ring, Snap

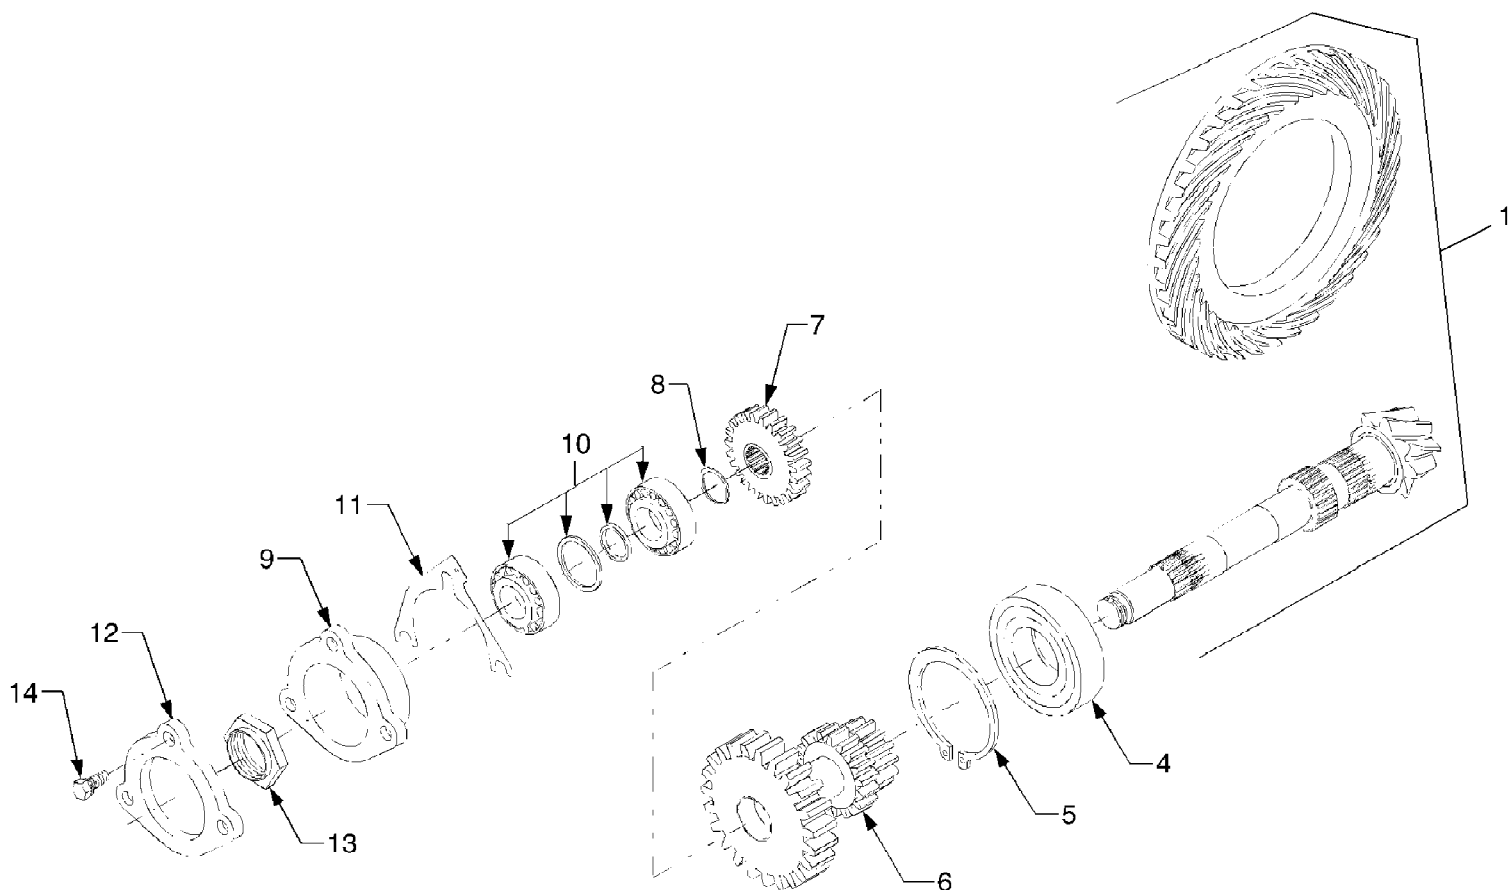 


8354 Tractor
Spiral Bevel Gear Group

Page 176 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-26111	1		Spiral Bevel Gear Ass'y
2	DD-T2610-26121	1		Gear, Spiral Bevel
3	DD-T2615-22111	1		Pinion, Spiral Bevel
4	DD-T2610-23811	1		Bearing, Roller
5	DD-04612-00350	1		Ring, Snap
6	DD-T2615-23671	1		Gear, 42-17
7	DD-T2615-44532	1		Gear, 25 Spur
8	DD-K2400-19371	1		Spacer
9	DD-T2610-23821	1		Case, Bearing
10	DD-38240-22141	1		Bearing, Taper Roller
11	DD-T2610-23831	2		Shim (T 0.1)
11	DD-T2610-23841	2		Shim (T 0.2)
11	DD-T2610-23851	2		Shim (T 0.5)
12	DD-T2610-23881	1		Cover, Bearing
13	DD-31220-22342	1		Nut
14	DD-01133-51040	3		Bolt

 
8354 Tractor
Steering Cylinder Group

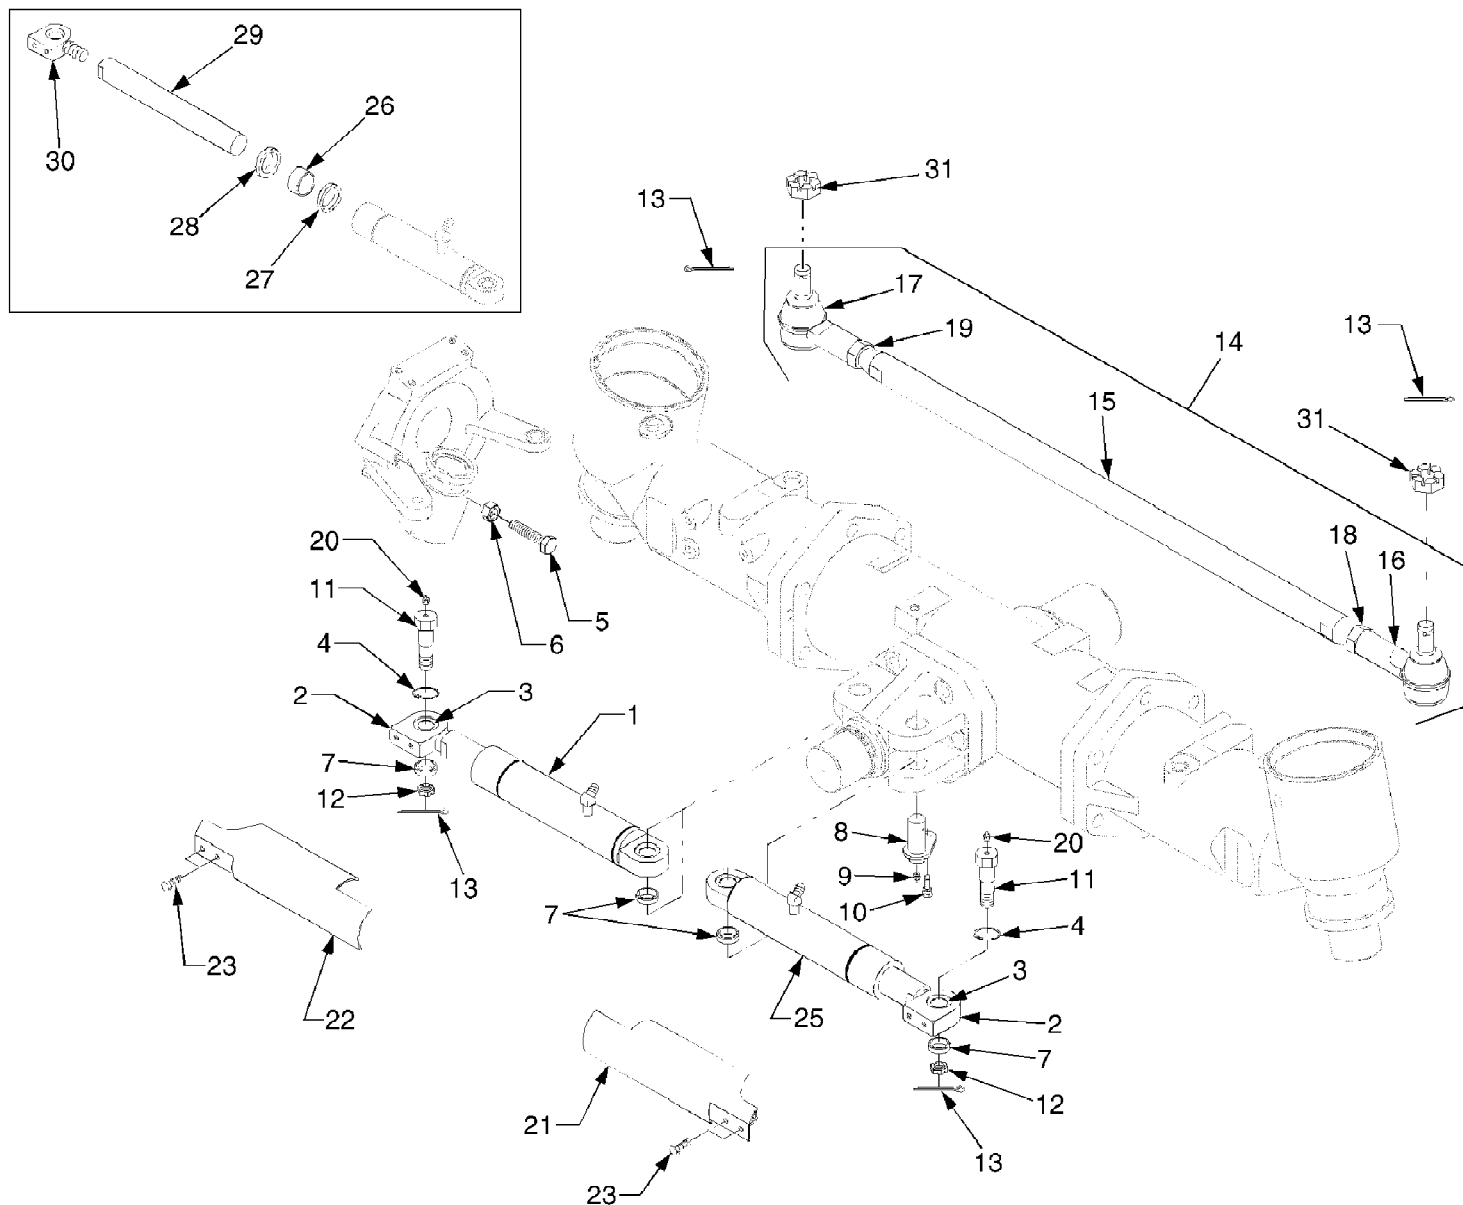

8354 Tractor
Steering Cylinder Group

Page 178 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2630-31204	1		Steering Cylinder Ass'y RH
2	DD-T2630-31322	2		Housing
3	DD-T4625-31301	2		Ball Ass'y
4	DD-T4625-31311	2		Cir-clip
5	DD-T4520-43941	2		Bolt, Set
6	DD-02076-50140	2		Nut
7	DD-T4625-31151	4		Collar
8	DD-T4625-31162	2		Pin, Cylinder Support
9	DD-06613-20010	2		Nipple
10	DD-01120-50814	2		Bolt
11	DD-T2620-31181	2		Pin, Support
12	DD-T2610-31311	2		Nut
13	DD-05511-50335	4		Pin, Split
14	DD-T2630-31131	1		Tie Rod Ass'y
15	DD-T2630-31141	1		Rod, Tie
16	DD-T4625-31191	1		Tie Rod End Ass'y (LH)
17	DD-T4625-31051	1		Tie Rod End Ass'y 2 (RH)
18	DD-T4625-63701	1		Nut (LH)
19	DD-T4520-63701	1		Nut (RH)
20	DD-06611-15675	2		Nipple
21	DD-T2630-31331	1		Cover, Cylinder (LH)
22	DD-T2630-31341	1		Cover, Cylinder (RH)
23	DD-01023-50610	4		Bolt
25	DD-T2630-31302	1		Steering Cylinder Ass'y. LH
26	DD-08511-03520	2		Bushing, DU
27	DD-T4625-31261	2		Packing
28	DD-T4625-31271	2		Seal, Dust
29	DD-T2730-31282	2		Rod
30	DD-T2630-31322	2		Housing
31	DD-02372-50180	2		Nut

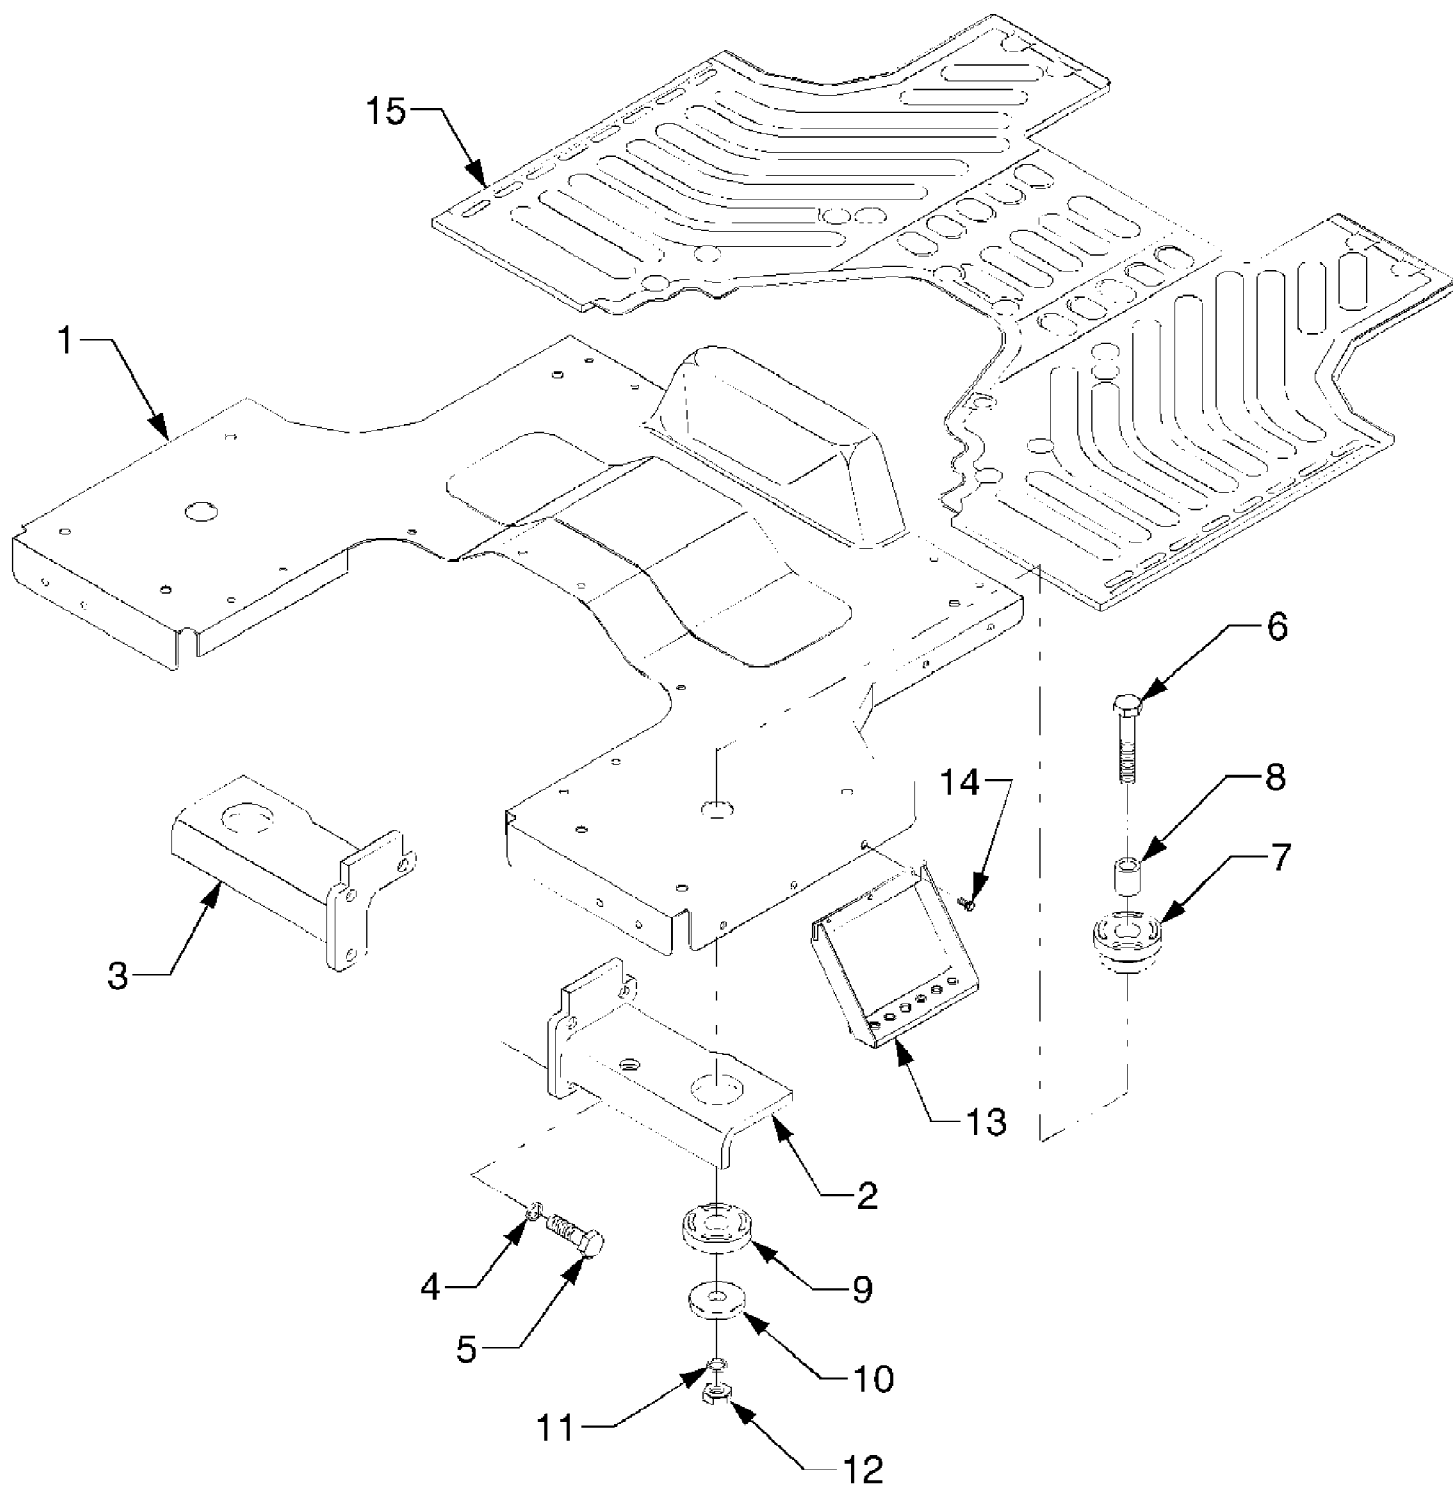 


8354 Tractor
Step Group

Page 180 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DDT263090217YW	1		Step Ass'y
2	DD-T2610-70015	1		Support, Step (LH)
3	DD-T2610-70025	1		Support, Step (RH)
4	DD-04512-50140	4		Washer, Spring
5	DD-01173-51435	4		Bolt
6	DD-01173-51690	2		Bolt
7	DD-T2610-70211	2		Rubber, Cabin Cushion (A)
8	DD-T4620-70042	2		Collar, Cabin Cushion (A)
9	DD-T4620-70032	2		Rubber, Cabin Cushion (B)
10	DD-T4620-87171	2		Collar
11	DD-04512-50160	2		Washer, Spring
12	DD-02176-50160	2		Nut
13	DDT462070221YW	2		Step
14	DD-01125-50820	6		Bolt
15	DD-T2610-70242	1		Mat

 
8354 Tractor
Suction Pipe Group

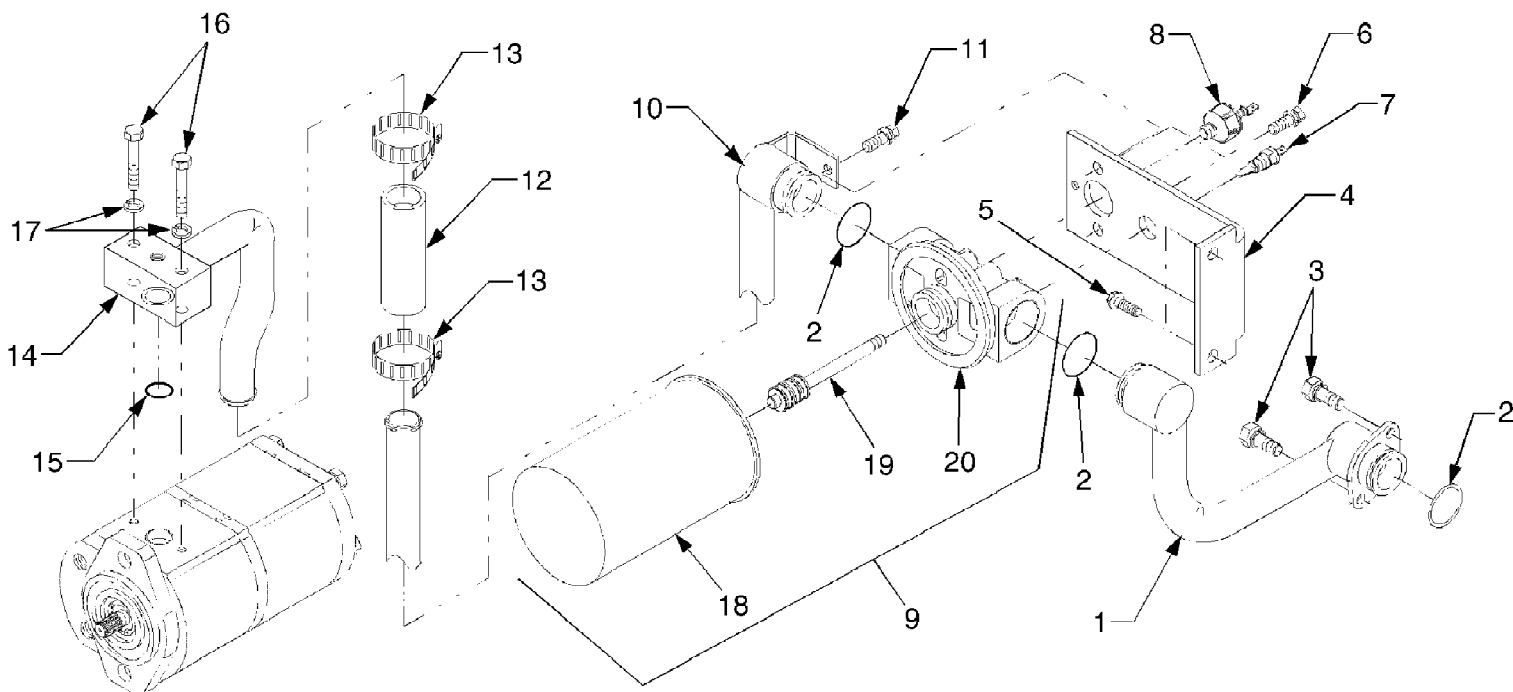

8354 Tractor
Suction Pipe Group



Page 182 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-38002	1		Pipe 1, Suction
2	DD-04810-00320	3		O-Ring
3	DD-01123-50820	2		Bolt
4	DD-T2610-38051	1		Support, Filter
5	DD-01133-51020	2		Bolt
6	DD-01133-51030	2		Bolt
7	DD-T4340-38751	1		Sensor, Thermostat
8	DD-T4340-38762	1		Sensor, Vacuum
9	DD-T4620-38021	1		Hydraulic Filter Ass'y Includes Ref. Nos. 18 thru 20
10	DD-T2610-38011	1		Pipe 2, Suction
11	DD-01125-50814	1		Bolt
12	DD-84612-37770	1		Pipe, Rubber
13	DD-31355-38191	2		Band, Pipe
14	DD-T2620-38073	1		Pipe 3, Suction
15	DD-04810-00220	1		O-Ring
16	DD-01153-50850	2		Bolt
17	DD-04512-50080	2		Washer, Spring
18	DD-T4620-38031	1	S	Filter, Hydraulic
19	DD-T4260-38841	1		Magnetic Ass'y
20	DD-T4620-38041	1		Bracket, Filter

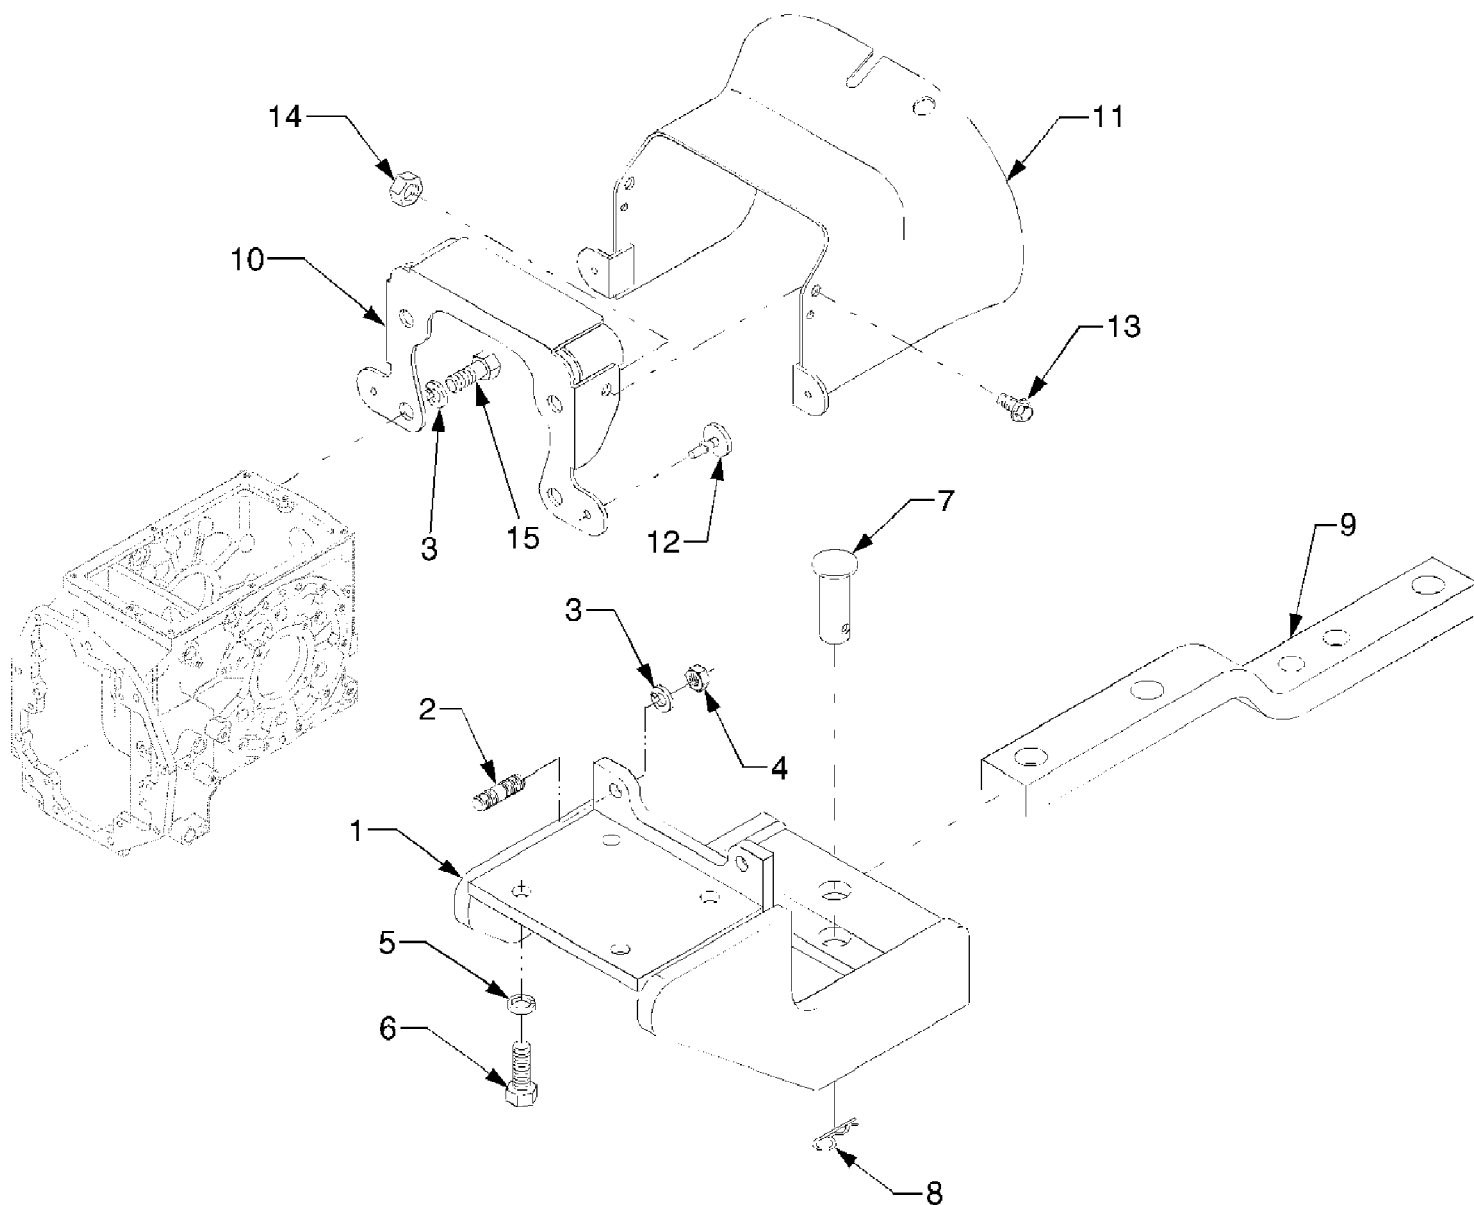 


8354 Tractor
Swing Drawbar Group

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-29811	1		Frame, Swing Drawbar
2	DD-01574-51230	2		Stud
3	DD-04512-50120	2		Washer, Spring
4	DD-02176-50120	2		Nut
5	DD-04512-50140	4		Spring Washer
6	DD-01173-51435	4		Bolt
7	DD-T2445-29781	2		Pin, Joint
8	DD-70515-16334	2		Pin, Snap
9	DD-T2615-29831	1	S	Drawbar
10	DD-T2615-57052	1		Bracket(Pto Shield)
11	DD-T2615-74051	1		Cover, PTO
12	DD-K9100-50241	2		Cushion
13	DD-01754-50816	2		Bolt, Flange
14	DD-41011-51514	2		Nut
15	DD-01133-51230	2		Bolt

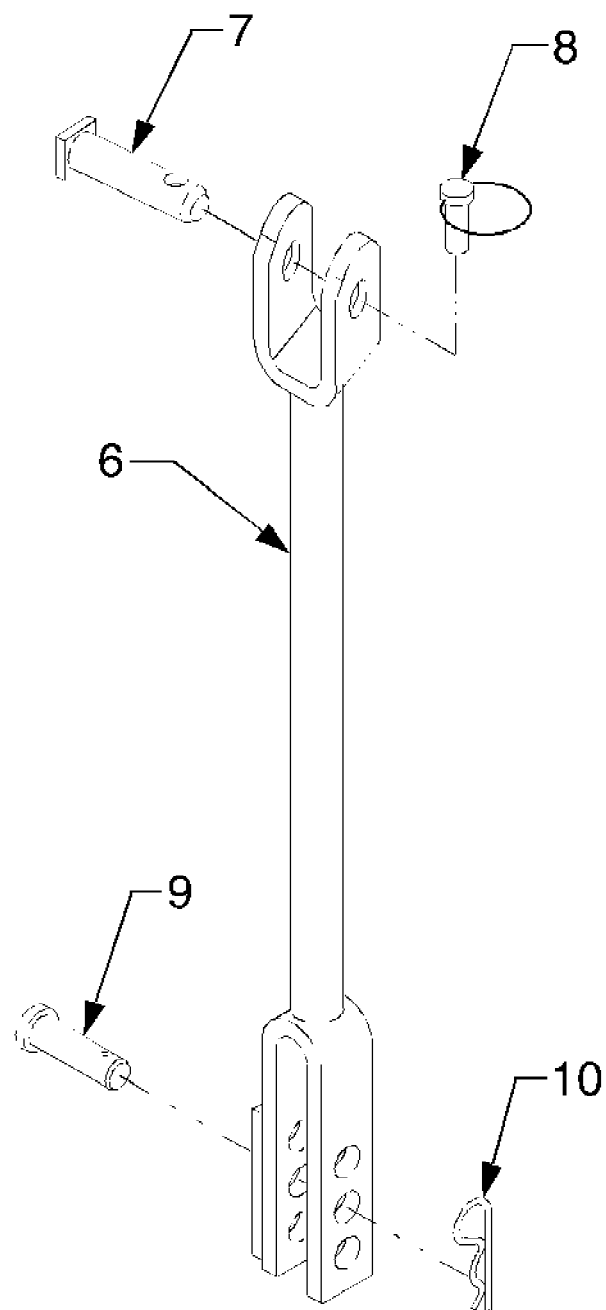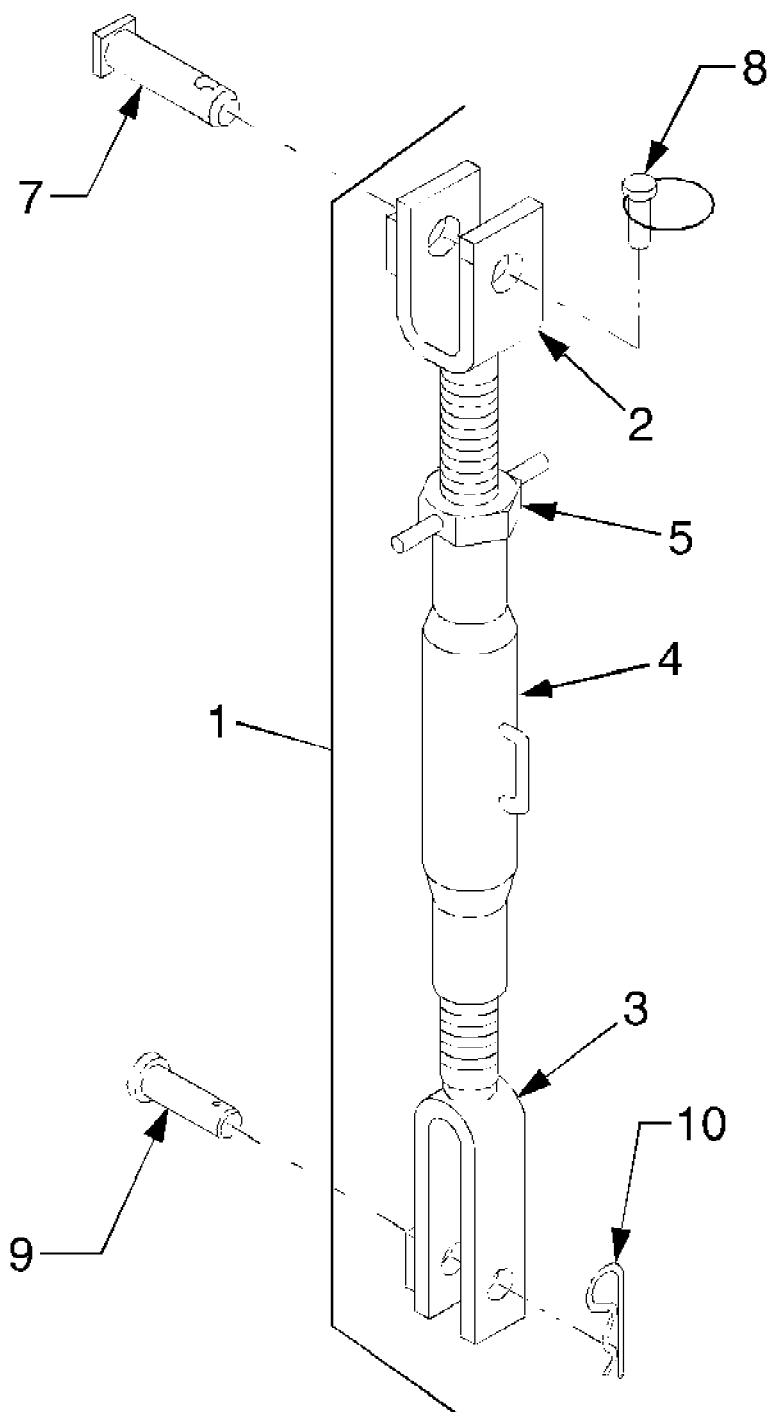  

8354 Tractor
Three Point Connection System


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4620-85412	1		Lift Rod Ass'y (RH)
2	DD-T4620-85422	1		Rod, Lift (Upper)
3	DD-T4620-85432	1		Rod, Lift (Down)
4	DD-T4620-85442	1		Body, Lift Rod
5	DD-T4620-85451	1		Nut
6	DD-T2610-85482	1		Lift Rod Ass'y (LH)
7	DD-T4620-85471	2		Pin, Lift Rod (Upper)
8	DD-34150-37644	2		Pin, Set
9	DD-34354-71583	2		Pin
10	DD-05515-51600	2		Pin, Snap

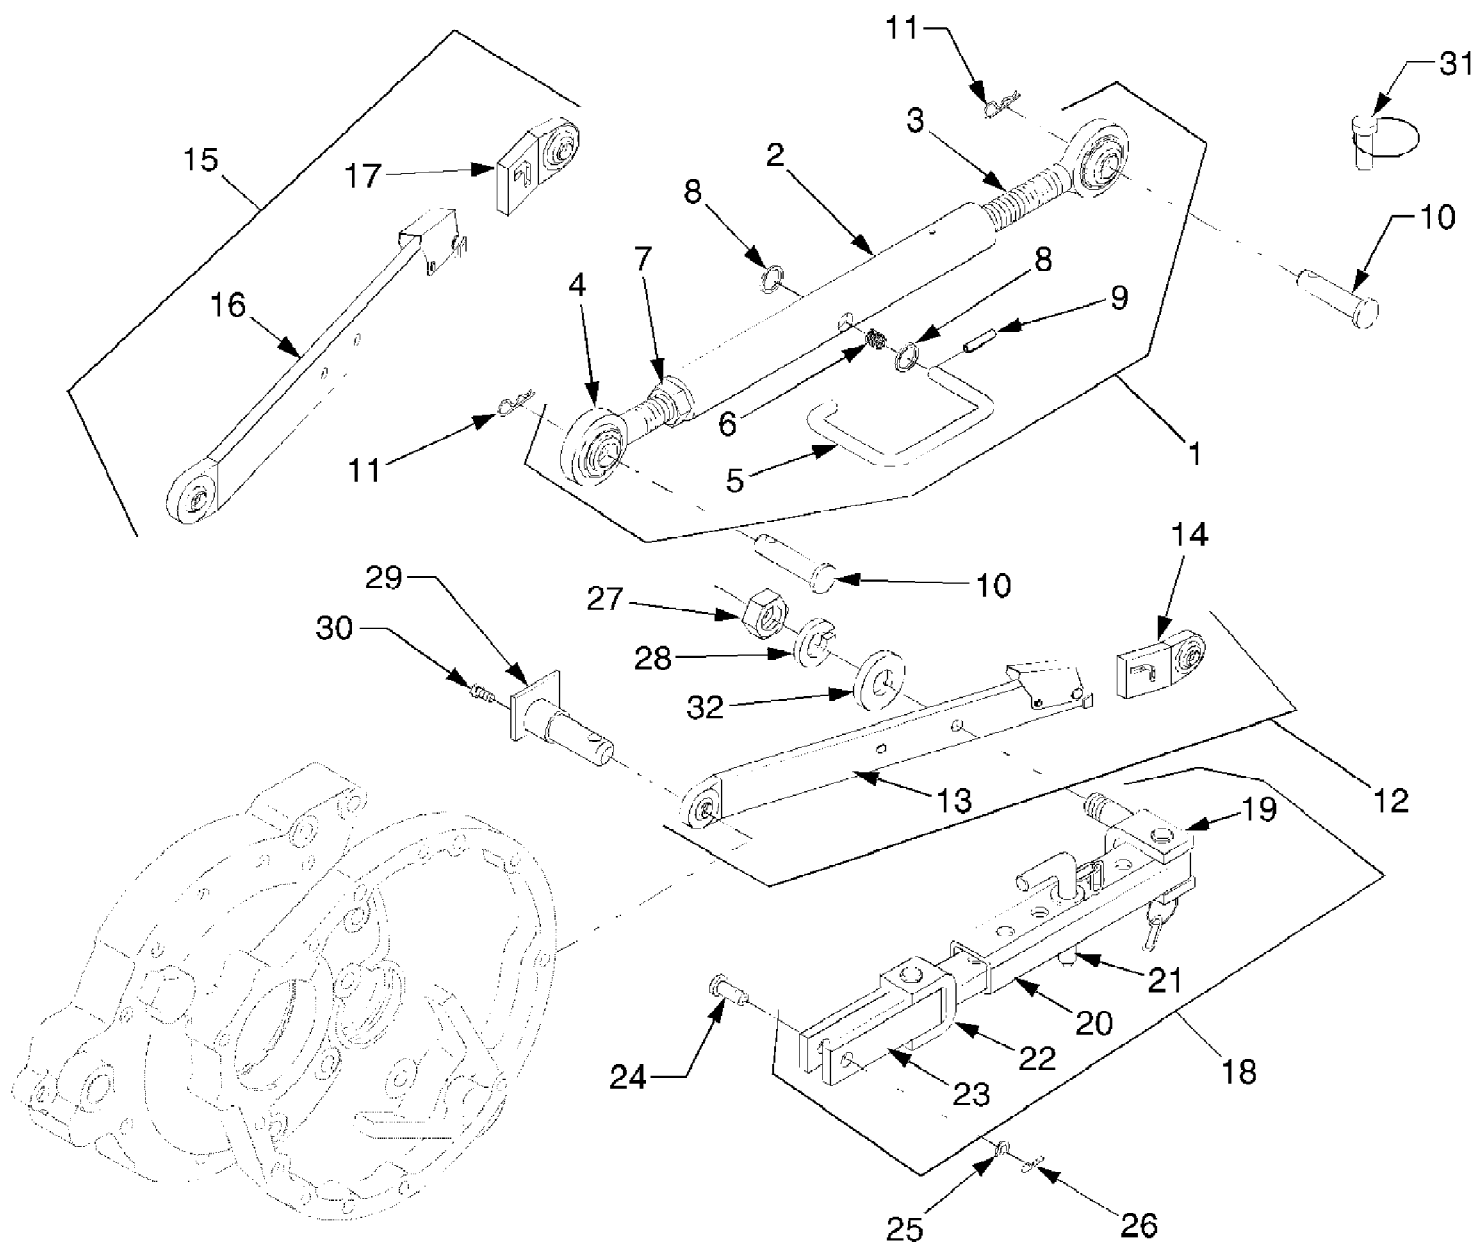 

8354 Tractor
Three Point Connectors

Page 188 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4681-85351	1		Top Link Ass'y
2	DD-T4620-85361	1		Link, Top
3	DD-32240-71224	1		Joint, Ball (LH)
4	DD-32240-71214	1		Joint, Ball (RH)
5	DD-T4620-85371	1		Support, Top Link
6	DD-T4620-85381	1		Spring
7	DD-32244-71181	1		Nut
8	DD-04011-50100	2		Washer, Plain
9	DD-05411-00425	1		Pin, Spring
10	DD-T4620-85392	2		Pin, Top Link
11	DD-05515-51600	2		Pin, Snap
12	DD-T2625-93011	1		Lower Link Ass'y (LH)
13	DD-T2625-93022	1		Body, Lower Link (LH)
14	DD-T2615-93031	1		Housing, Lower Link (LH)
15	DD-T2625-93111	1		Lower Link Ass'y (RH)
16	DD-T2625-93122	1		Body, Lower Link (RH)
17	DD-T2615-93131	1		Housing, Lower Link (RH)
18	DD-T2625-91114	2		Check Link Ass'y
19	DD-T2615-91153	2	/P	Bracket 3
20	DD-T2615-91142	2	/P	Housing
21	DD-T2615-91162	2		Hook
22	DD-T2615-91132	2	/P	Bracket 2
23	DD-T2625-91122	2		Bracket 1
24	DD-32353-71893	2		Pin
25	DD-04013-50120	2		Washer, Plain
26	DD-05515-51200	2		Pin, Snap
27	DD-02174-50180	2		Nut
28	DD-04512-50180	2		Washer, Spring
29	DD-T2445-29822	2		Pin, Lower Link
30	DD-01123-50816	2		Bolt
31	DD-34150-37644	2		Pin, Set
32	DD-04014-50180	2		Washer, Plain

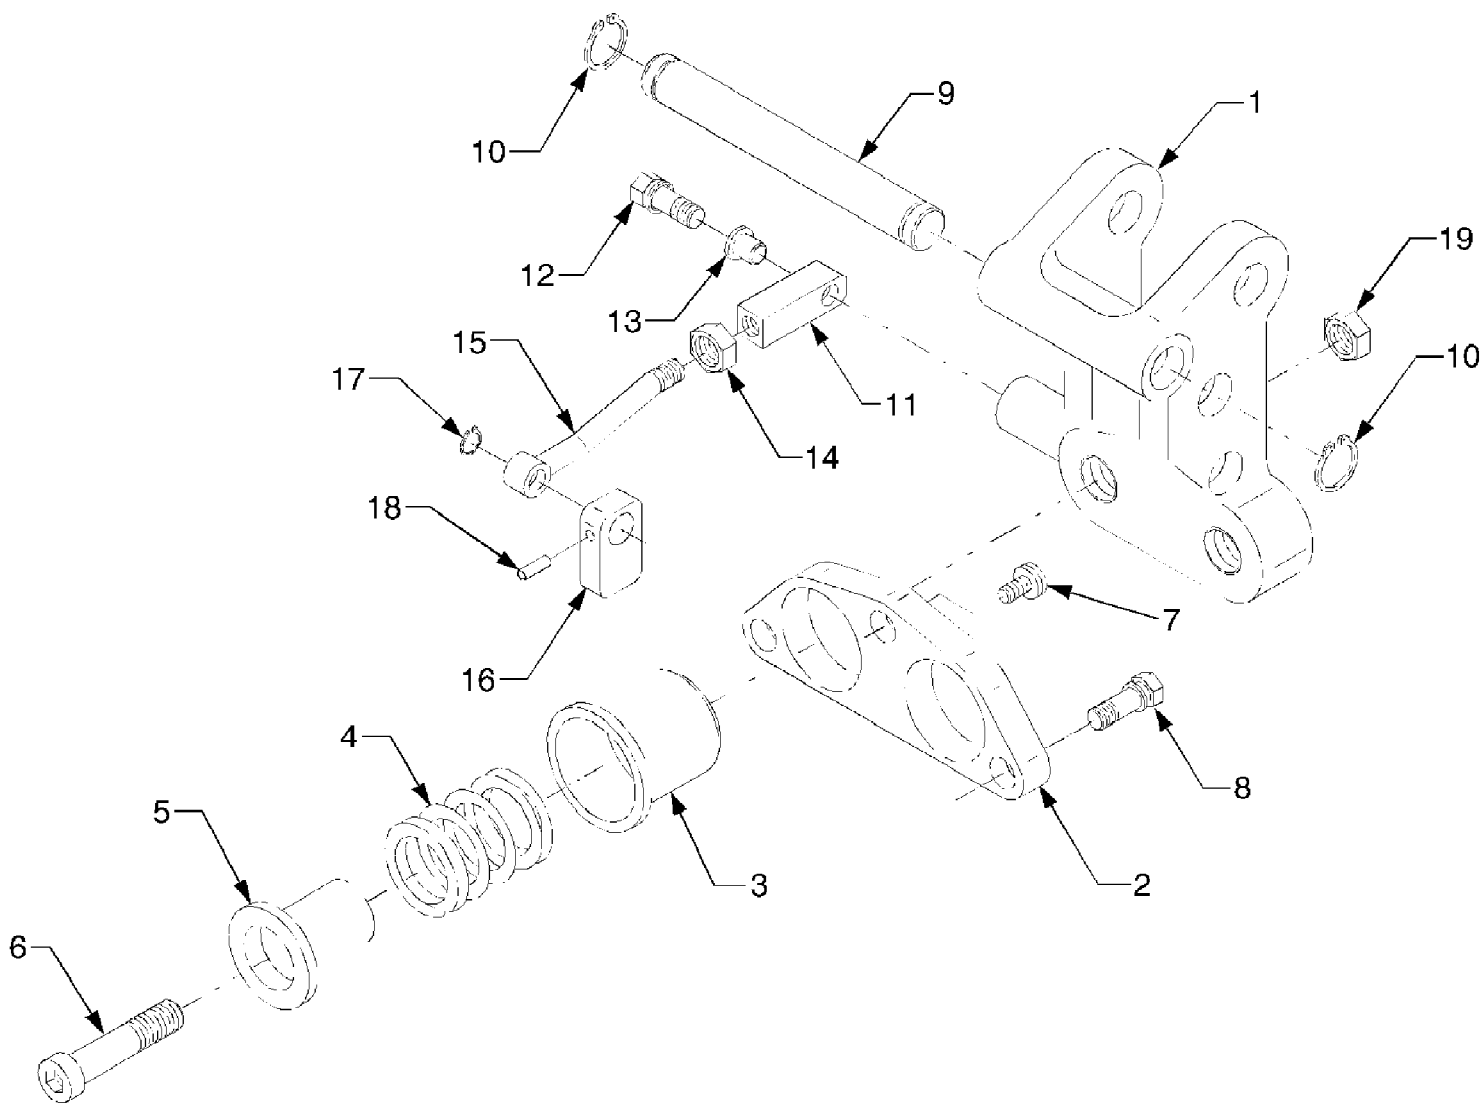 

8354 Tractor
Top Link Bracket Group

Page 190 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-39802	1		Holder, Top Link
2	DD-T2610-39811	1		Flange
3	DD-T2610-39821	1		Cover
4	DD-T2610-39832	2		Spring
5	DD-T2610-39842	2		Roller
6	DD-T2610-39852	2		Bolt
7	DD-T2610-39862	1		Bolt
8	DD-01123-51035	2		Bolt
9	DD-T2610-39901	1		Pin 4
10	DD-04612-00200	2		Cir-clip
11	DD-T2610-39911	1		Plate
12	DD-01123-50835	1		Bolt
13	DD-T2610-39921	1		Roller
14	DD-02118-50100	1		Nut
15	DD-T2610-39931	1		Rod, Tie
16	DD-T2610-39951	1		Crank
17	DD-04613-50070	1		Cir-clip
18	DD-05411-00625	1		Pin, Spring
19	DD-T2610-39961	2		Nut, Lock


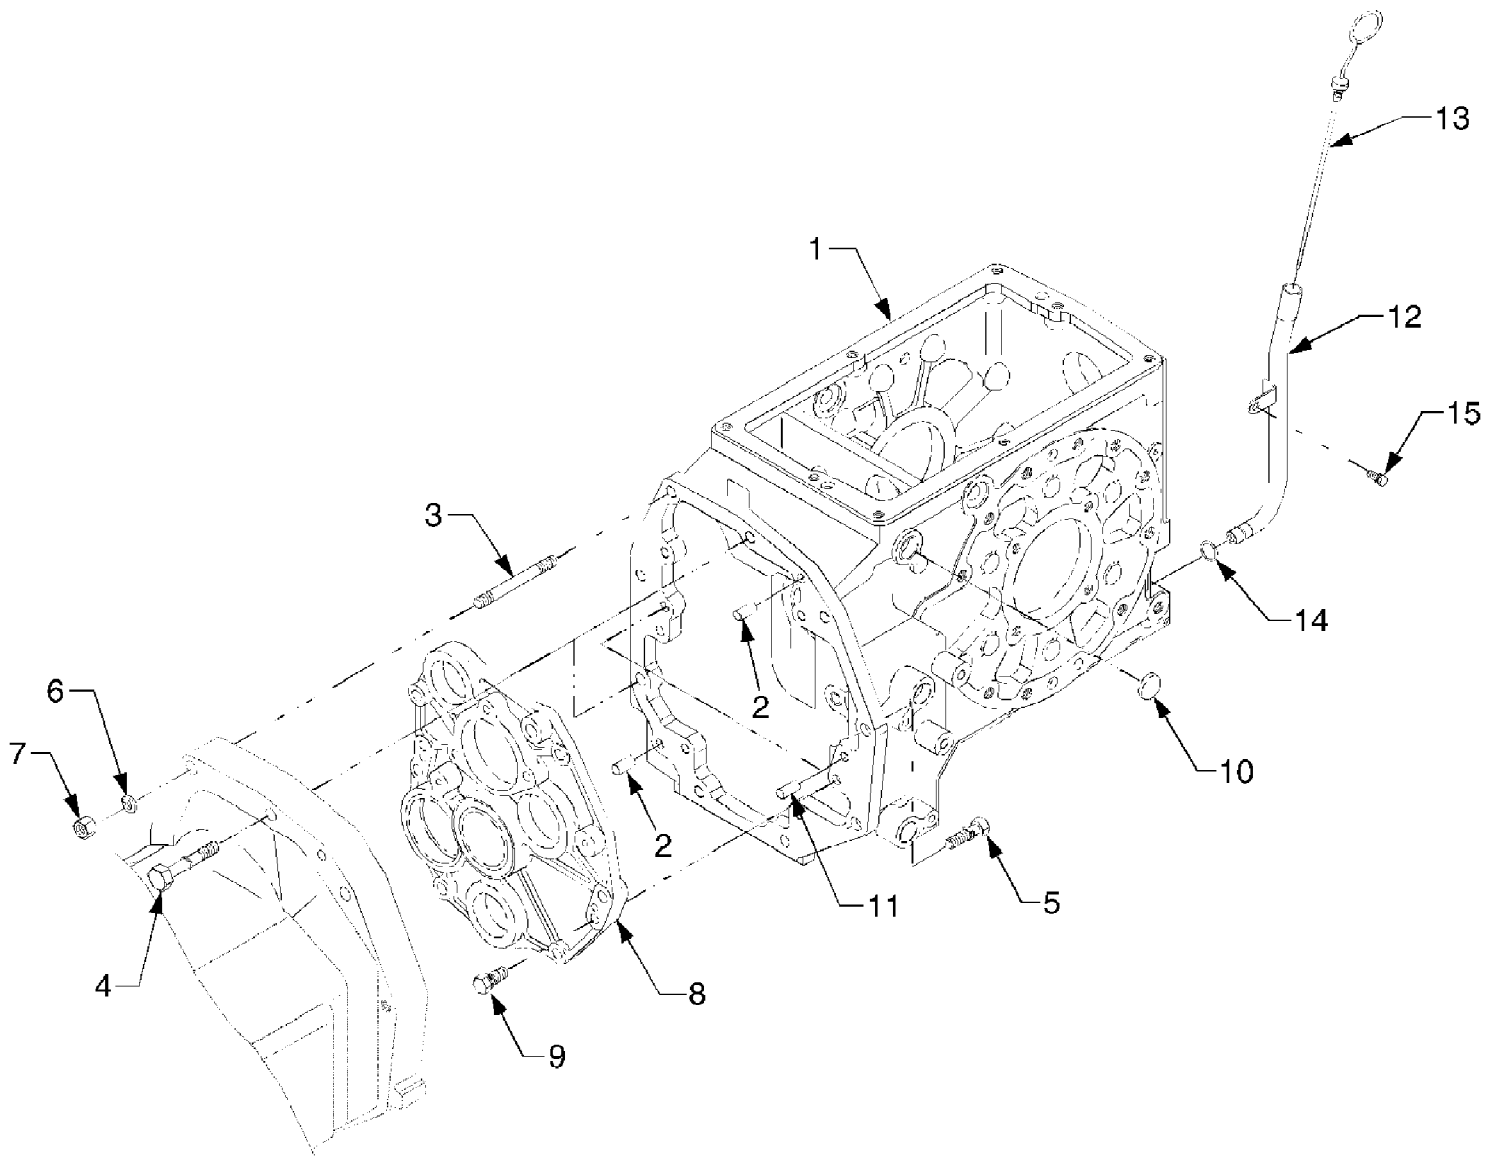 


8354 Tractor
Transmission Case

Page 192 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-21118	1		Case, Transmission
2	DD-05012-01018	2		Pin, Straight
3	DD-01574-51260	5		Stud
4	DD-01133-51260	2		Bolt
5	DD-01133-51235	2		Bolt
6	DD-04512-50120	5		Washer, Spring
7	DD-02176-50120	5		Nut
8	DD-T2610-21123	1		Cover, Bearing
9	DD-01133-51038	6		Bolt
10	DD-T2610-21911	1		Plug, Expansion
11	DD-05012-01018	2		Pin, Straight
12	DD-T2630-25451	1		Guide, Oil Gauge
13	DD-T4810-25904	1		Gauge, Oil
14	DD-04811-10110	1		O-ring
15	DD-01023-50612	1		Bolt

  
8354 Tractor
Transmission Cover Fasteners

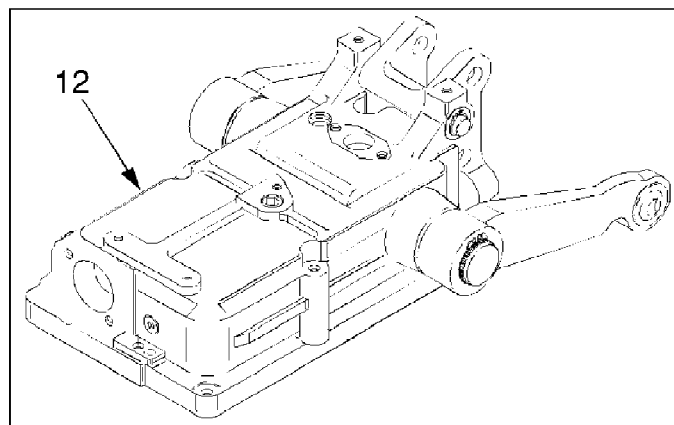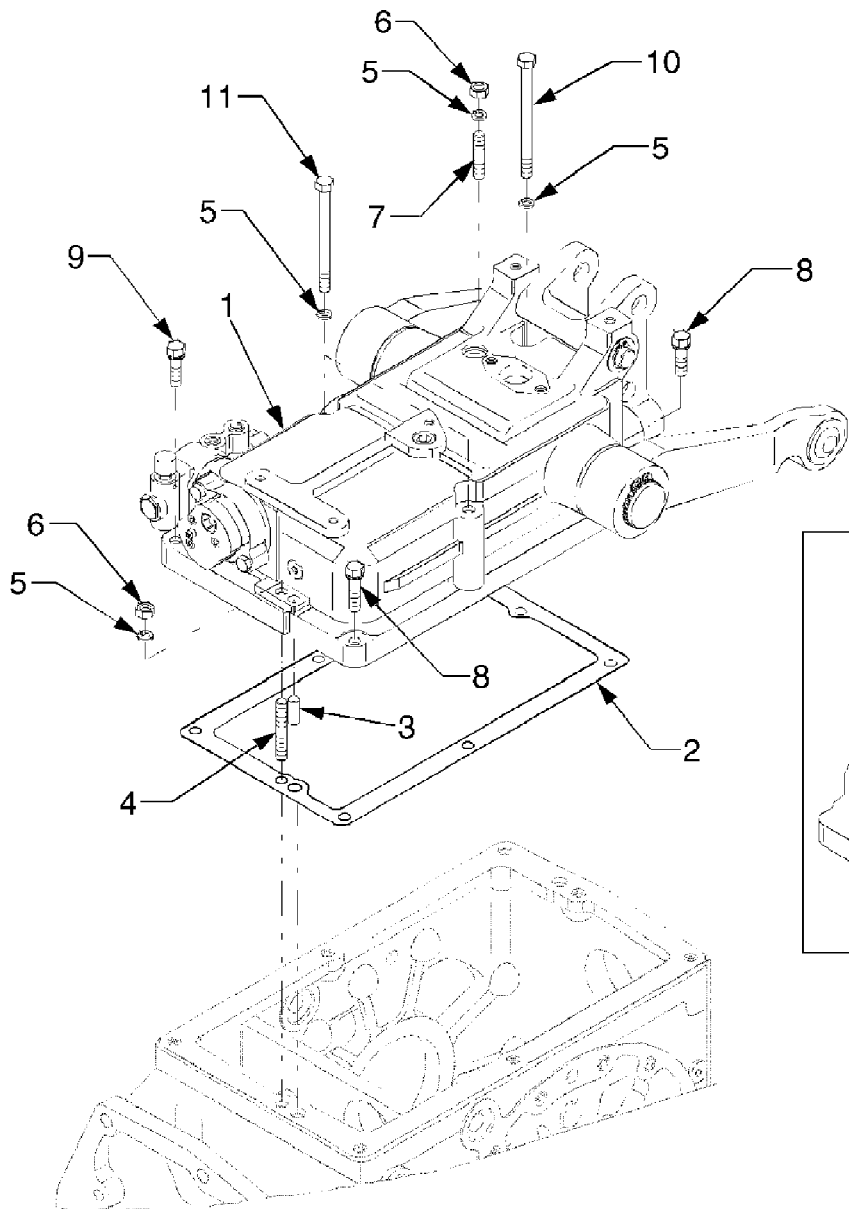

8354 Tractor
Transmission Cover Fasteners

Page 194 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2611-31102	1		Hydraulic Cylinder Ass'y
2	DD-T4620-37121	1		Packing
3	DD-37805-43501	1		Pin, Straight
4	DD-01517-51050	1		Stud
5	DD-04512-50100	5		Washer, Spring
6	DD-02176-50100	2		Nut
7	DD-01517-51035	1		Stud
8	DD-01133-51038	2		Bolt
9	DD-01133-51030	1		Bolt
10	DD-T2305-14151	1		Bolt
11	DD-01173-51003	2		Bolt
12	DD-T2610-37031	1		Cylinder, Hydraulic

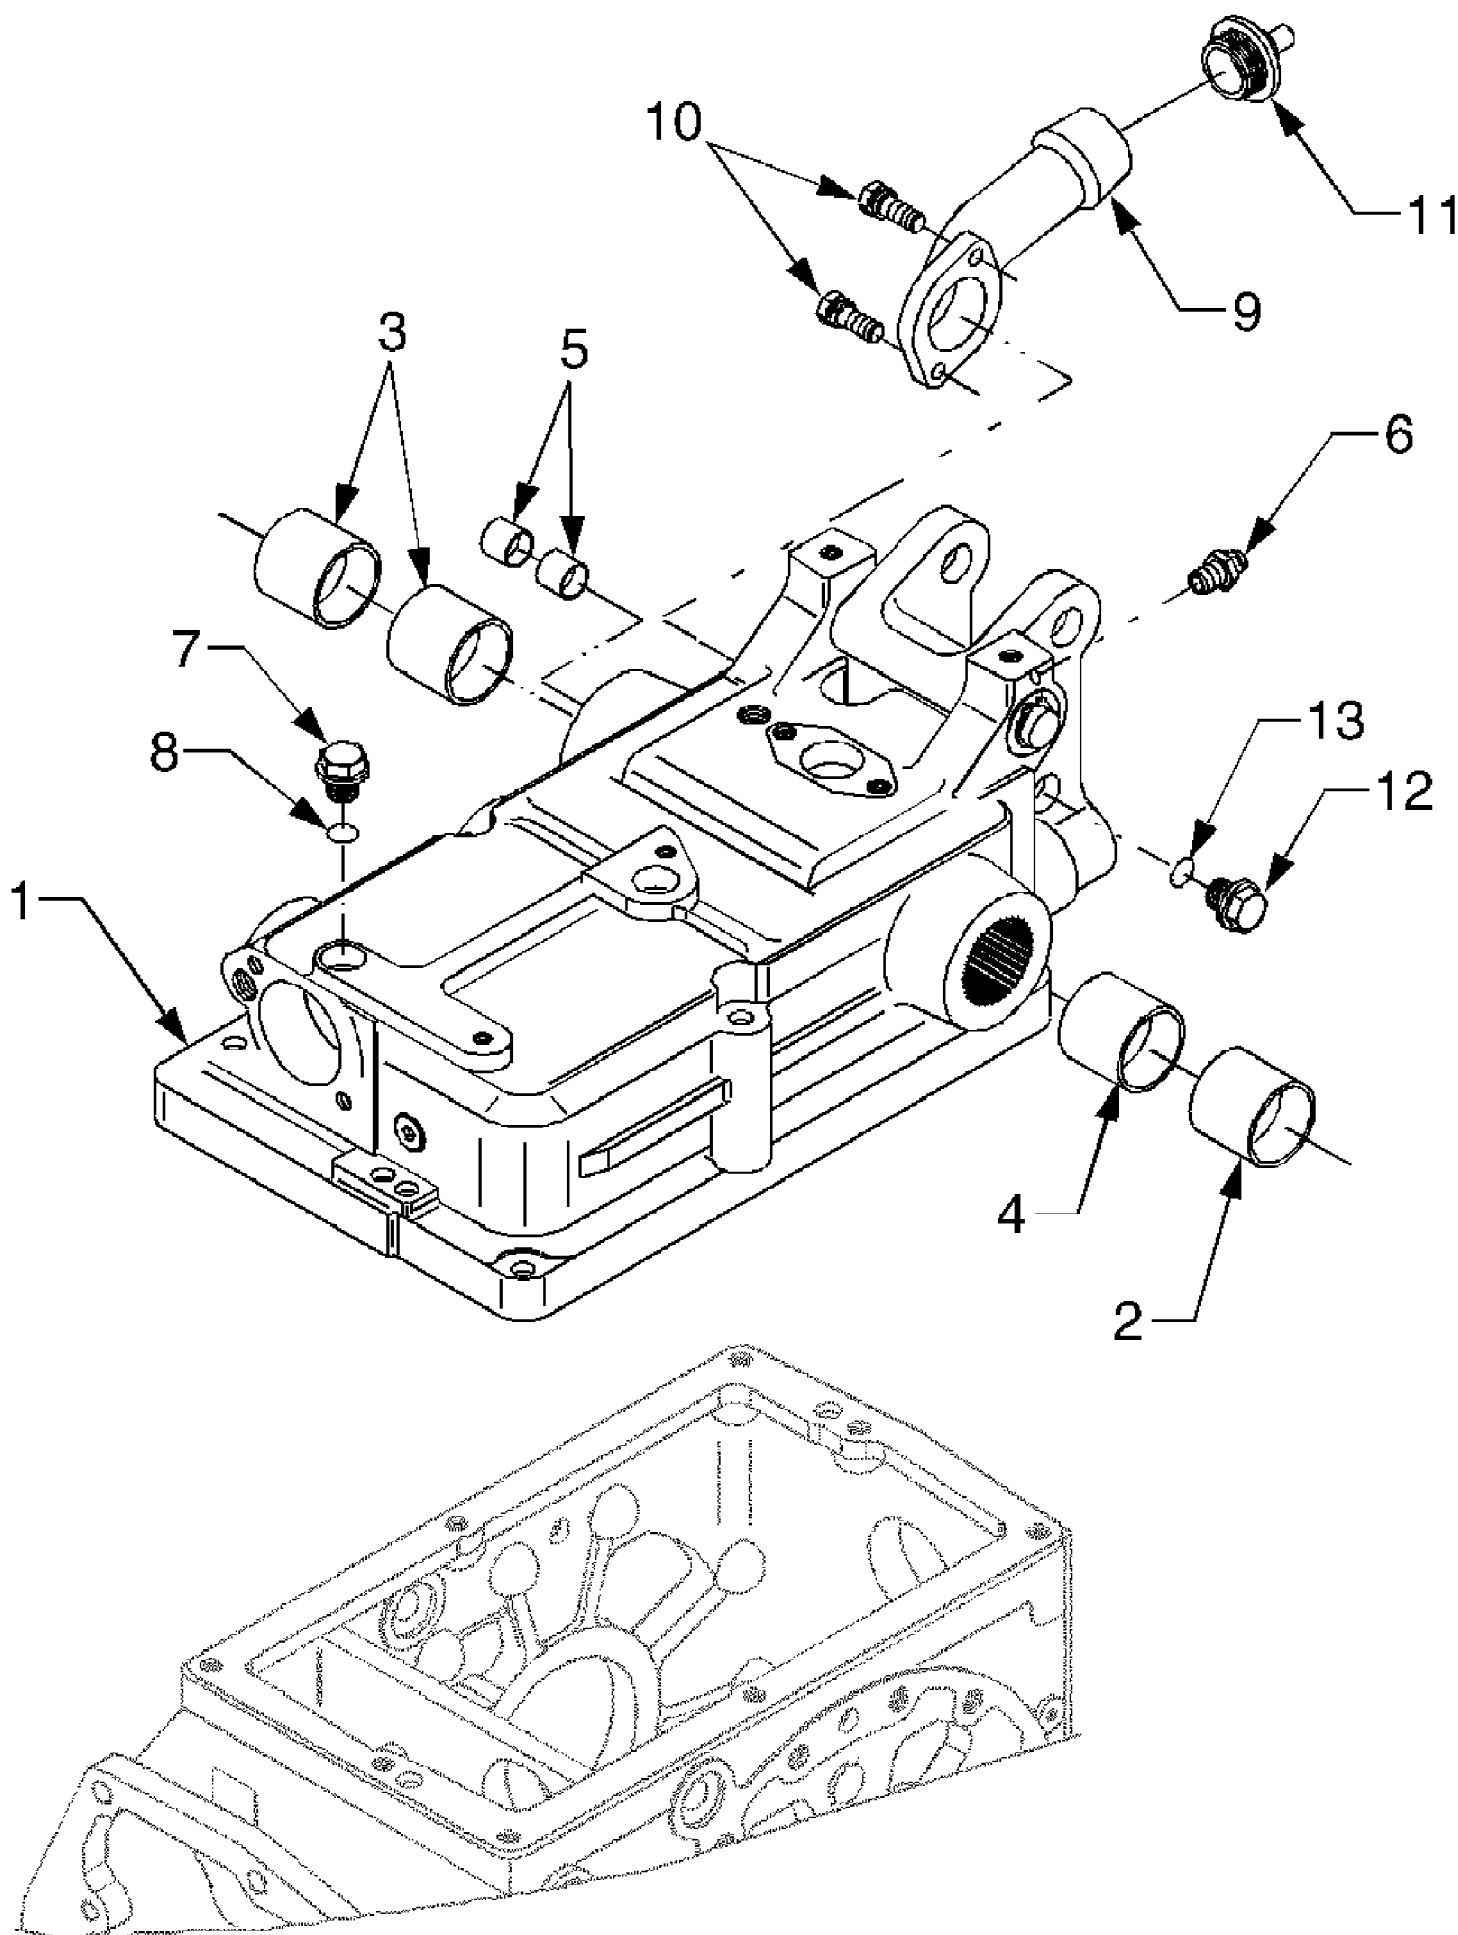 

8354 Tractor
Transmission Cover Plate

Page 196 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-37115	1	S	Transmission Cover Plate
2	DD-08511-04530	1		Bush
3	DD-08511-05040	2		Bush
4	DD-08511-04540	1		Bush
5	DD-08511-01615	2		Bush
6	DD-06613-10010	2		Nipple, Grease
7	DD-06311-55010	1		Plug
8	DD-04810-00800	1		O-Ring
9	DD-T2610-35001	1		Inlet, Oil
10	DD-01123-50820	2		Bolt
11	DD-T4680-36002	1		Breather, Air
12	DD-06331-45010	1		Plug
13	DD-04717-01000	1		Washer, Seal

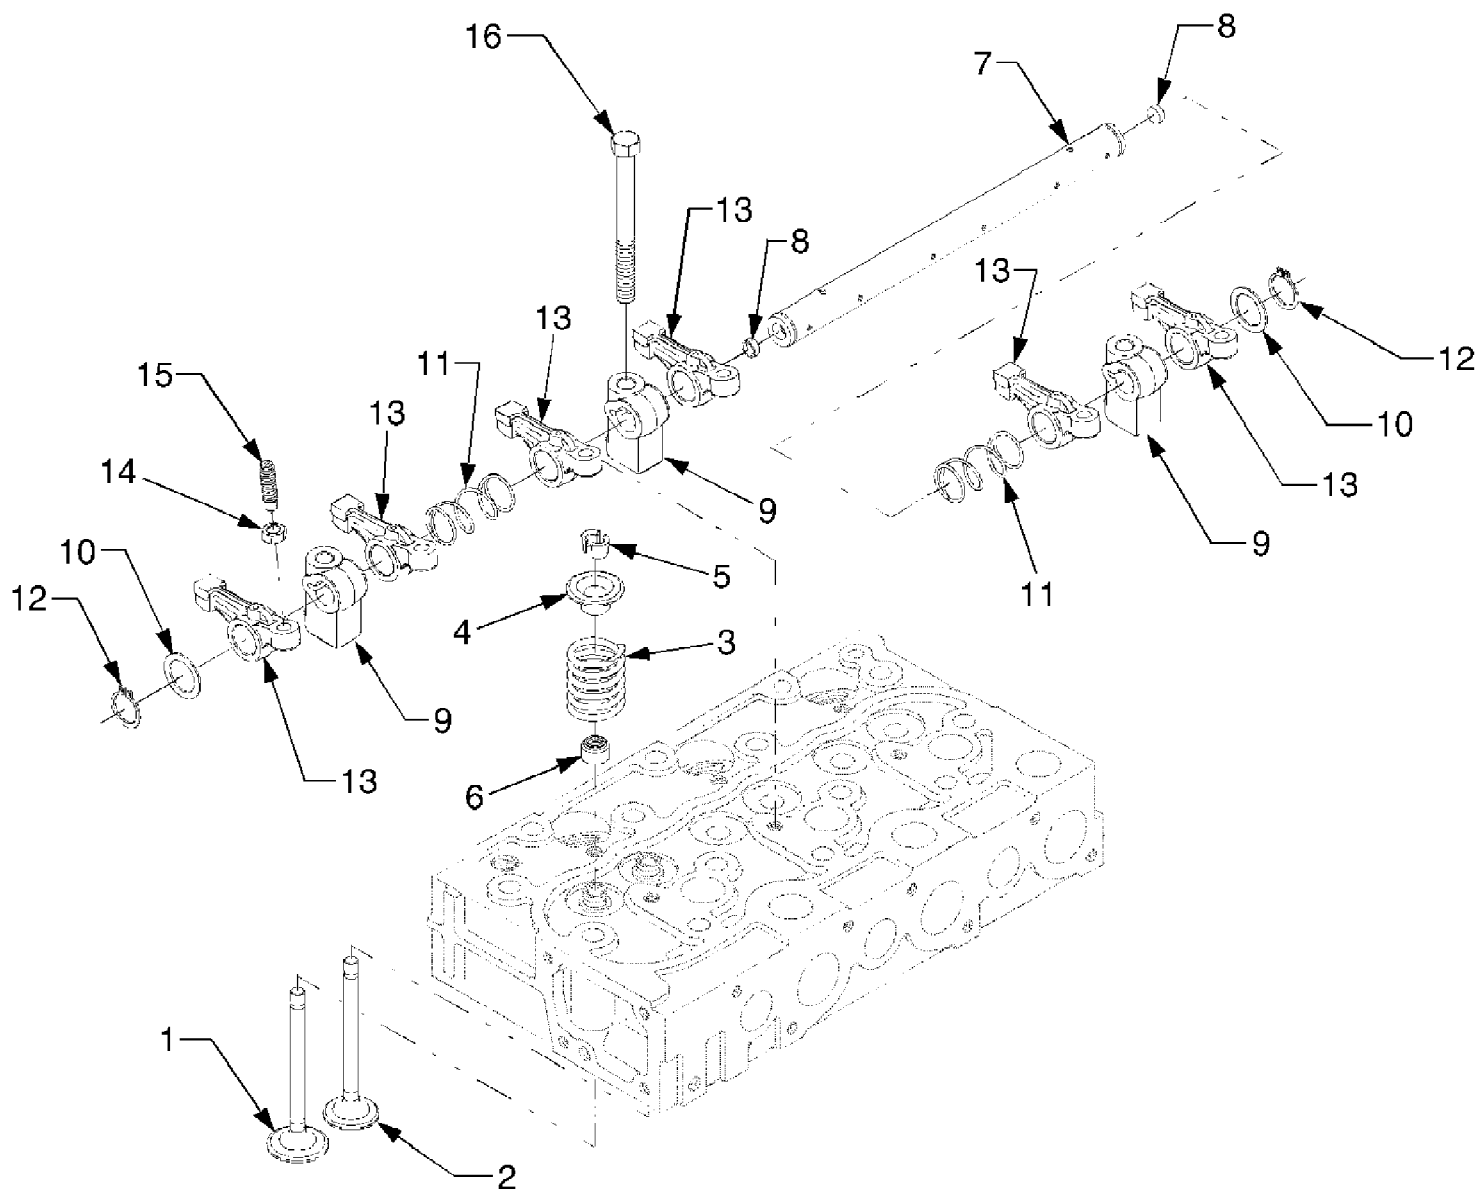 

8354 Tractor
Valves And Rocker Arm

Page 198 of 202


Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6301-13111	3		Valve, Inlet
2	DD-E6301-13121	3		Valve, Outlet
3	DD-15221-13242	6		Spring, Valve
4	DD-E5500-13332	6		Retainer, Valve Spring
5	DD-E5500-13362	12		Collet, Valve Spring
6	DD-E6301-13151	6		Seal, Valve Stem
7	DD-E5800-14051	1		Rocker Arm Shaft Ass'y Includes Ref. Nos. 8
8	DD-E6301-14331	2		Cap, Sealing
9	DD-E6301-14351	3		Bracket, Rocker Arm
10	DD-E6301-14431	2		Washer, Plain
11	DD-E6301-14311	2		Spring, Rocker Arm
12	DD-04612-00190	2		Cir-clip
13	DD-E6301-14111	6		Arm, Rocker
14	DD-15021-14241	6		Nut, Adjusting
15	DD-E5500-14232	6		Screw, Adjusting
16	DD-E6510-91501	3		Bolt, Rocker Arm

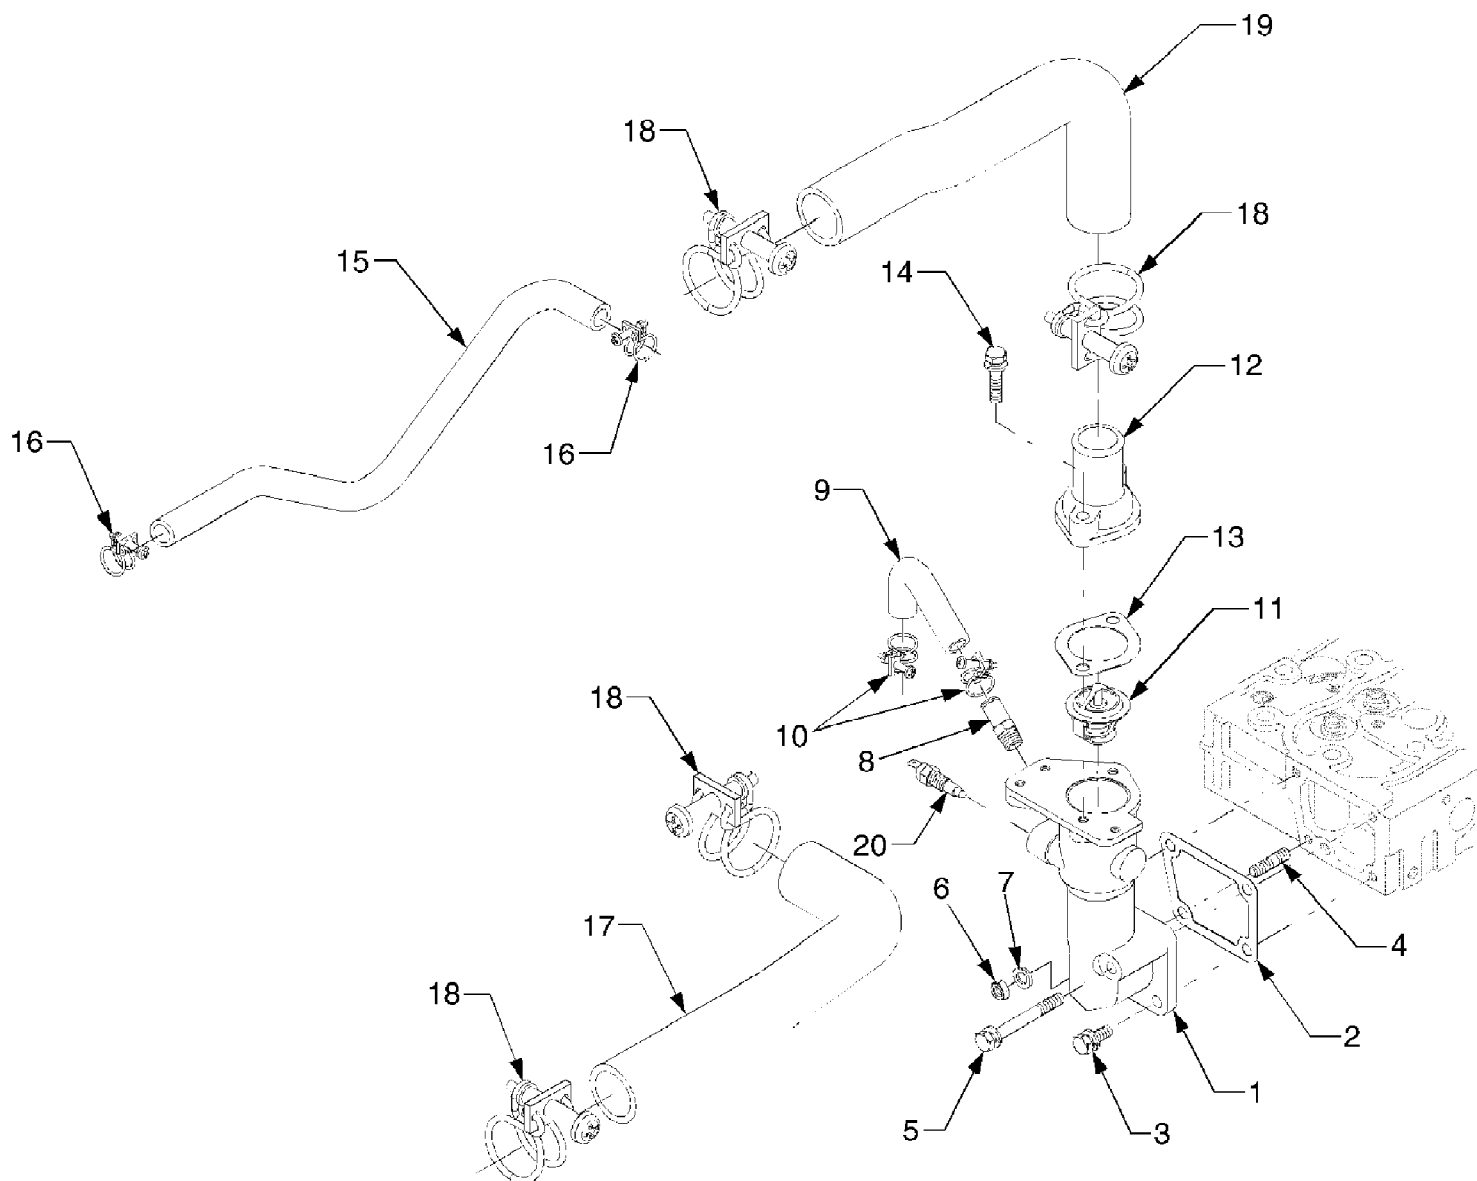 

8354 Tractor
Water Pipes

Page 200 of 202

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E5800-72914	1		Flange, Water
2	DD-15521-72921	1	S	Gasket, Flange
3	DD-01123-50822	2		Bolt
4	DD-01513-50822	1		Stud
5	DD-01123-50870	1		Bolt
6	DD-02156-50080	1		Nut
7	DD-04512-50080	1		Washer, Spring
8	DD-E5500-73342	1		Pipe, Water Return
9	DD-15521-73341	1		Pipe
10	DD-15109-73364	2		Band, Pipe
11	DD-E5800-73011	1		Thermostat Ass'y
12	DD-E5500-73263	1		Cover, Thermostat
13	DD-15321-73271	1		Gasket
14	DD-01123-50835	2		Bolt
15	DD-E5800-73341	1		Pipe, Water Return
16	DD-E5700-73361	2		Band, Pipe
17	DD-E5800-72851	1		Pipe, Water Lower
18	DD-15108-72873	4		Band
19	DD-E6500-72941	1		Pipe, Water Upper
20	DD-T4340-38751	1		Switch, Thermo Water

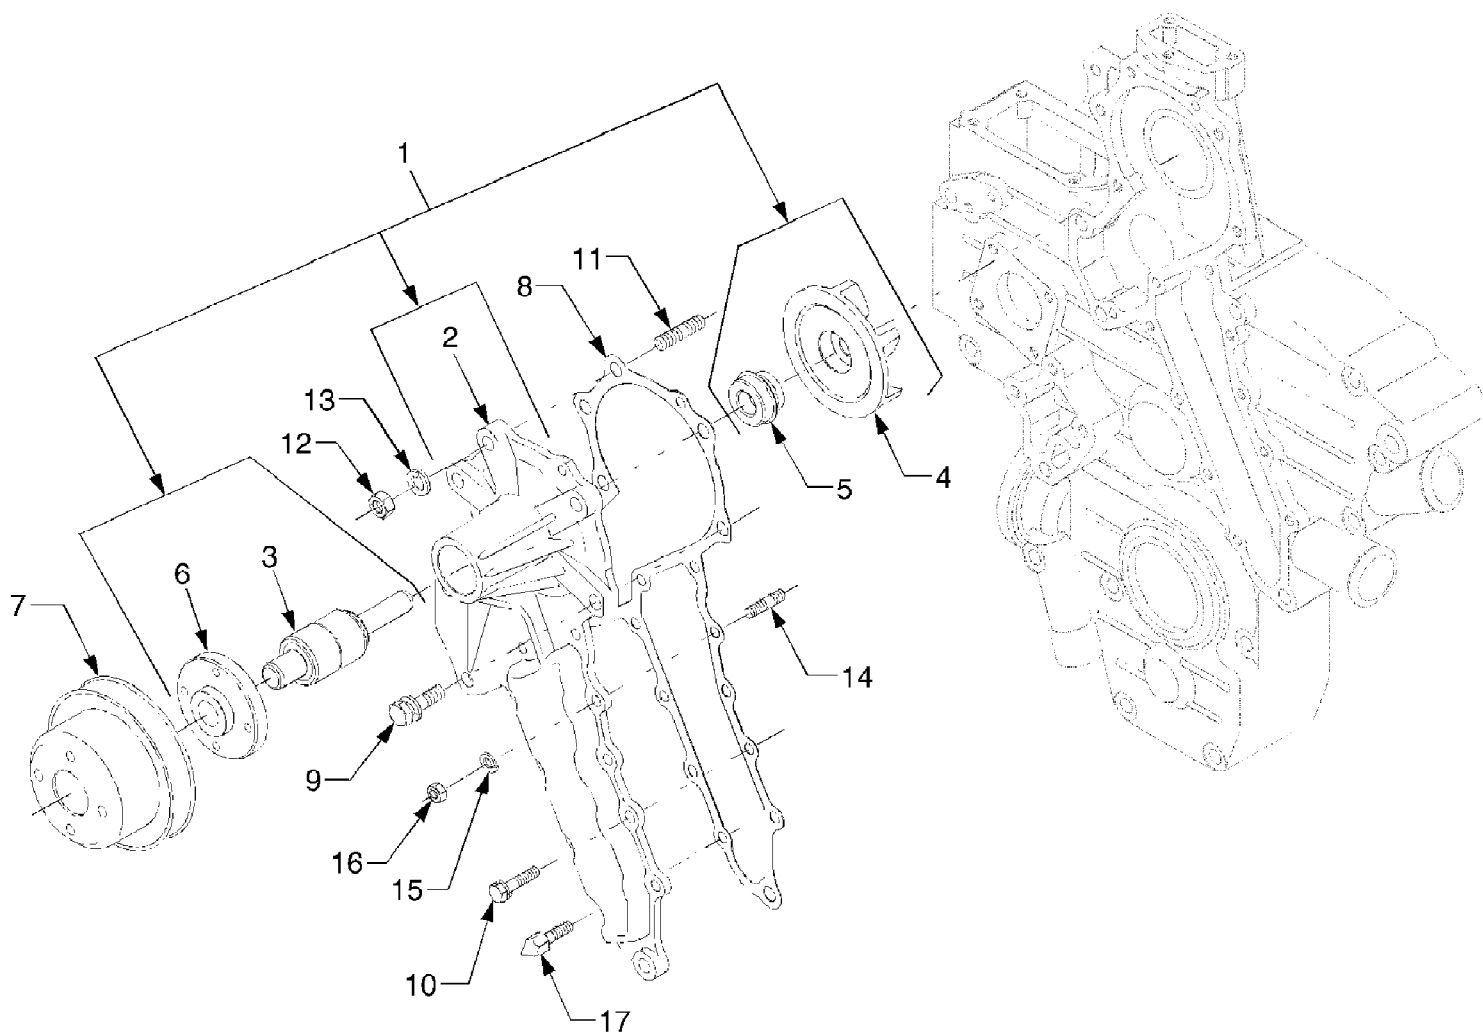 

8354 Tractor
Water Pump

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E5800-73036	1		Water Pump Ass'y Include Ref. Nos. 2 thru 6
2	DD-E5800-73415	1		Body, Water Pump
3	DD-E5800-73551	1		Bearing, Water Pump
4	DD-E5800-73513	1		Impeller, Water Pump
5	DD-E5800-73052	1	/P	Seal, Set
6	DD-E5800-73521	1		Flange
7	DD-E5616-74252	1		Pulley, Fan
8	DD-E5800-73431	1		Gasket, Pump
9	DD-01123-50828	4		Bolt
10	DD-01023-50618	7		Bolt
11	DD-01518-50822	1		Stud
12	DD-02156-50080	1		Nut
13	DD-04512-50080	1		Washer, Spring
14	DD-15221-88211	1		Stud
15	DD-04512-50060	1		Washer, Spring
16	DD-02056-50060	2		Nut
17	DD-E6201-50619	1		Bolt, Timing