 


8404 Tractor
Accelerator Group

Page 1 of 200

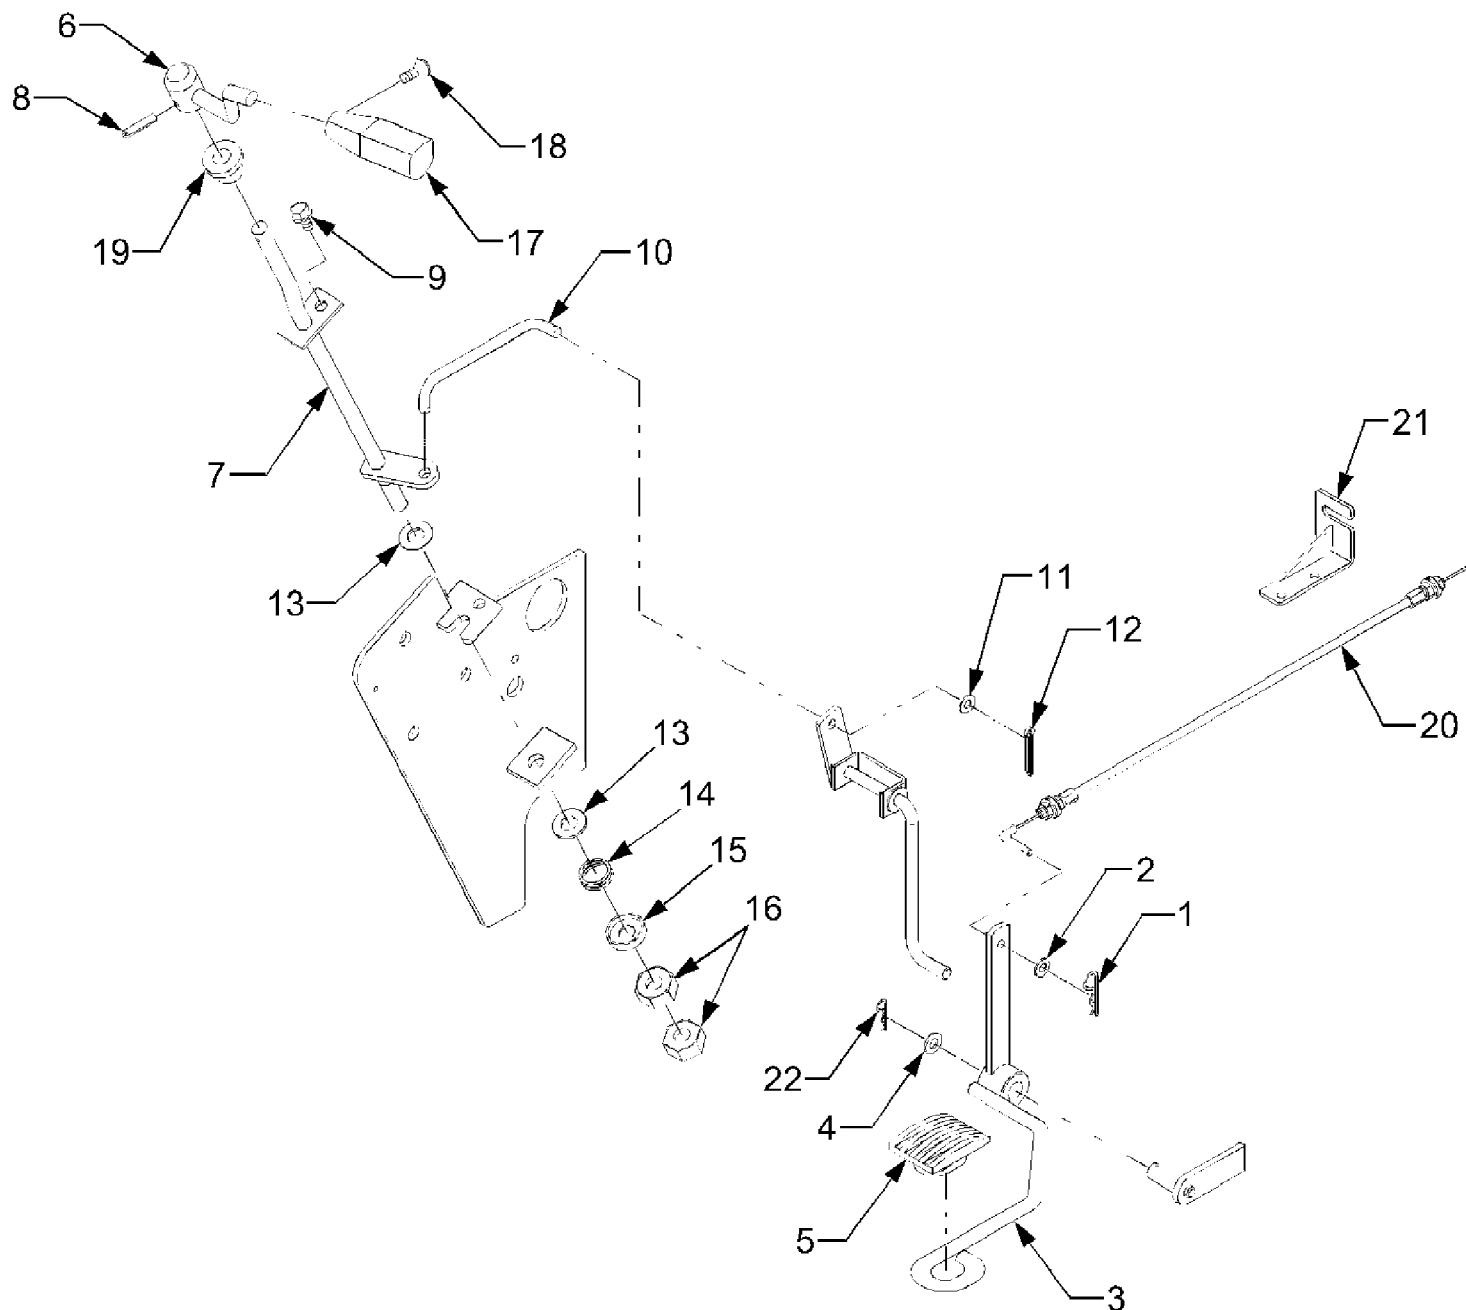


8404 Tractor
Accelerator Group

Page 2 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-05525-50600	1		Pin, Snap
2	DD-04013-50060	1	/P	Washer, Plain
3	DD-T2610-60035	1		Pedal, Accel
4	DD-04014-50140	2		Washer, Plain
5	DD-T4620-70272	2		Rubber, Accel Pedal
6	DD-T4681-60092	2		Lever 1, Hand Accel
7	DD-T4620-60102	4		Lever 2, Hand Accel
8	DD-05411-00525	1		Pin, Spring
9	DD-01125-50820	1		Bolt
10	DD-T4620-60111	1		Rod, Connector
11	DD-04012-50080	2		Washer, Plain
12	DD-05511-50215	2		Pin, Split
13	DD-04013-50120	3		Washer, Plain
14	DD-T4835-17241	3		Spring
15	DD-T4620-60131	1		Cap, Spring
16	DD-02176-50120	2		Nut
17	DD-T4681-60142	1		Grip (Hand Accel)
18	DD-03024-50514	1		Screw
19	DD-31355-29491	1		Grommet
20	DD-T4680-60021	1	S	Cable, Accelerator
21	DD-T4680-60071	1		Grip, Wire
22	DD-05515-51200	1		Pin, Snap

8404 Tractor
Air Cleaner

 
Page 3 of 200

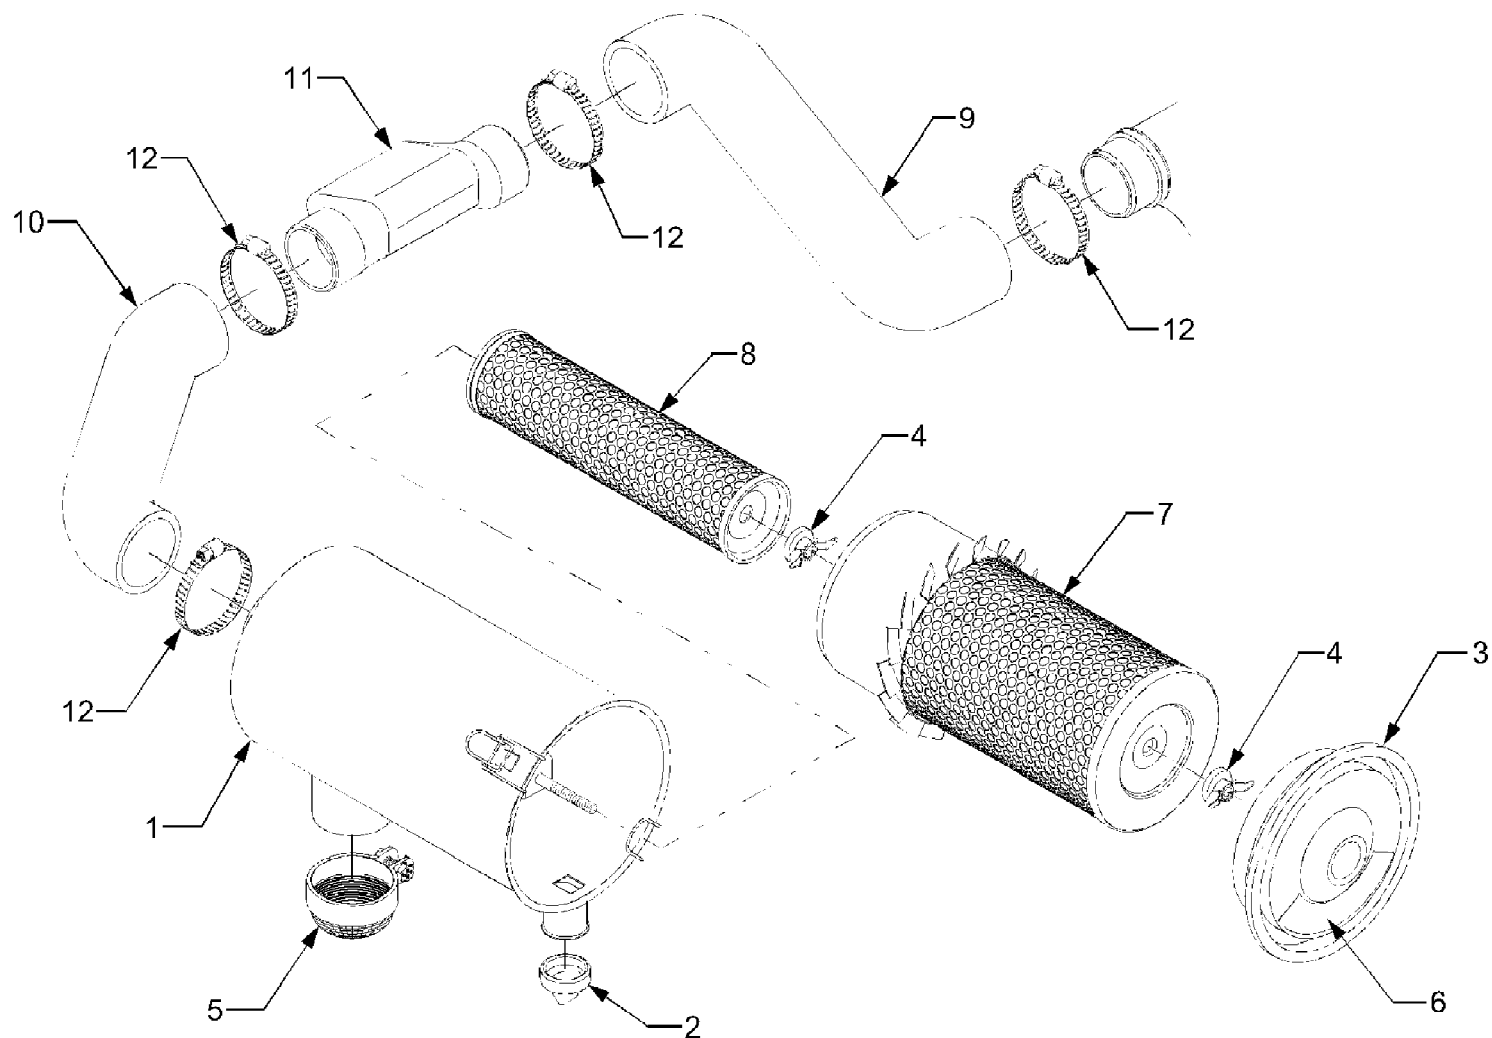

8404 Tractor
Air Cleaner

Page 4 of 200

Ref #	Part Number	Qty	S/P/F	Description
	DD-E5800-11113	1		Aircleaner Body Ass'y Includes Ref. Nos. 1 thru 8
1	DD-E5800-11152	1		Body, Aircleaner
2	DD-E7100-11471	1		Cap, Rubber
3	DD-E5800-11161	1		Cover, Aircleaner
4	DD-E6200-92620	2		Nut, Wing
5	DD-E5800-11171	1		Net
6	DD-E7100-87452	1		Label
7	DD-E6300-11081	1		Element 1, Aircleaner
8	DD-E6300-11091	1		Element 2, Aircleaner
9	DD-E5800-11621	1		Pipe 1, Inlet
10	DD-E5800-11632	1		Pipe 2, Inlet
11	DD-E5800-11642	1		Pipe 3, Inlet
12	DD-KX97382-S51	4		Clamp Ass'y

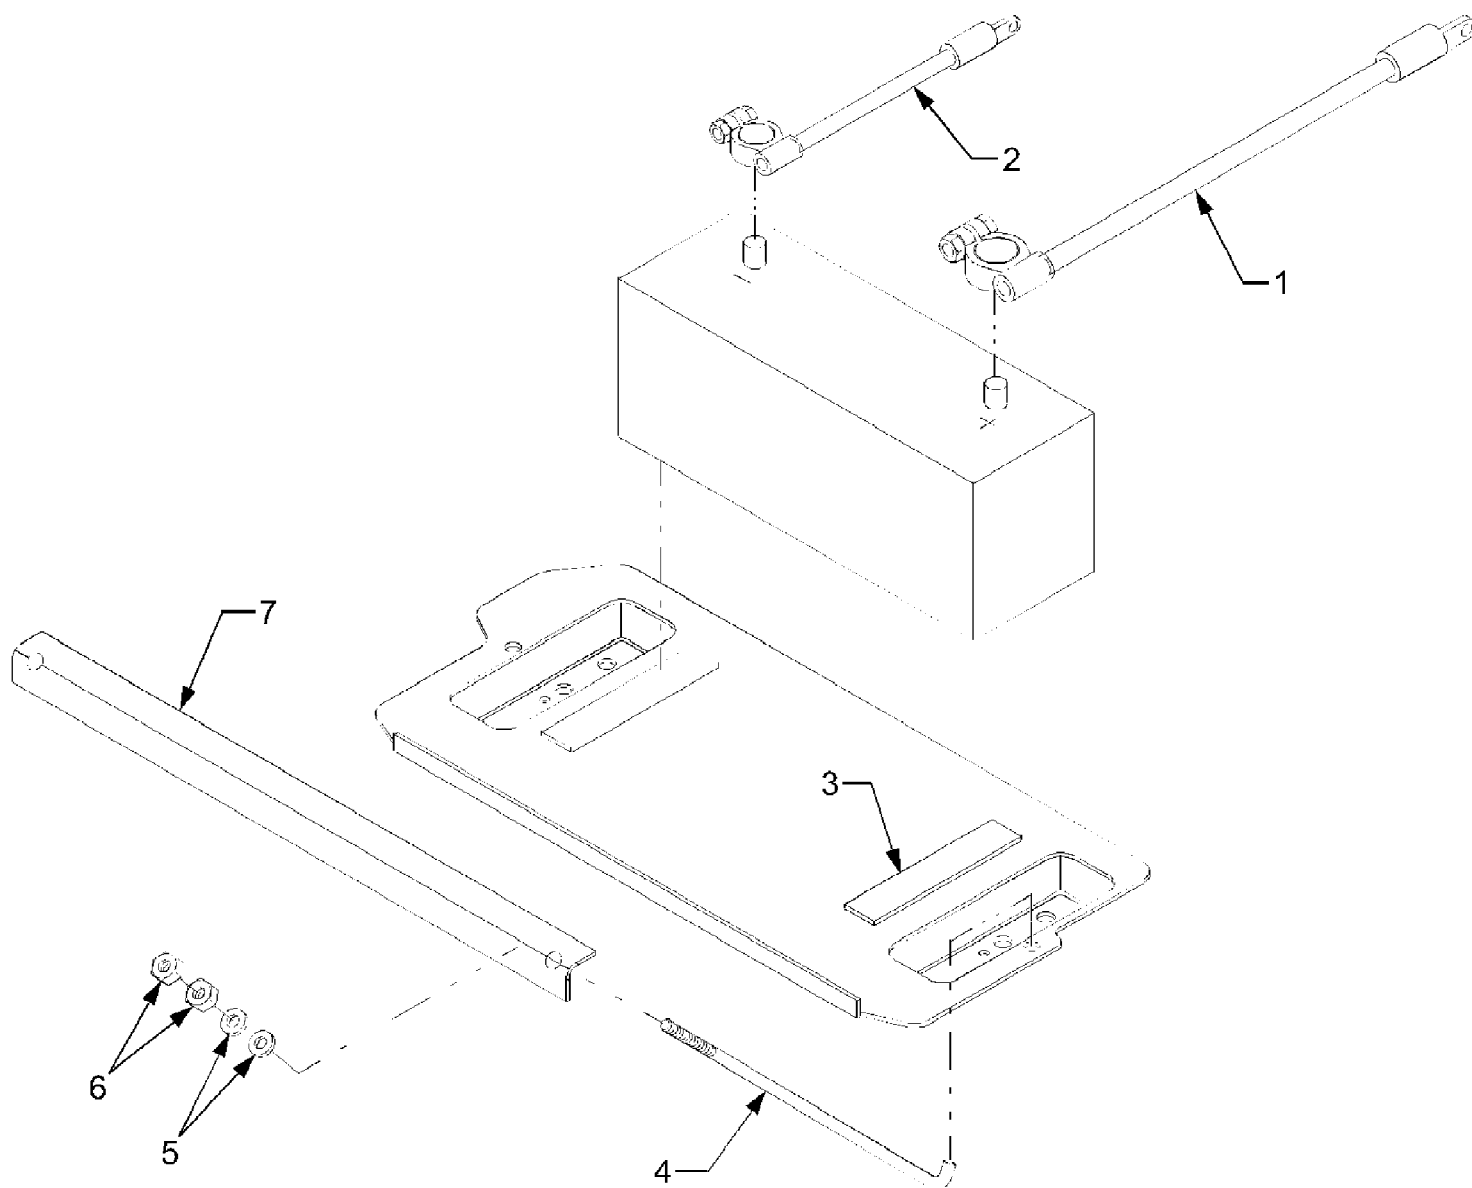 


8404 Tractor
Battery Group

Page 6 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4620-69161	1		Cable, Battery Positive
2	DD-T4620-69611	1		Cable, Battery Ground
3	DD-T2610-50271	2		Rubber, Battery
4	DD-T4620-50242	2		Bolt, Battery Hook
5	DD-04015-50060	2		Washer, Plain
6	DD-02056-50060	4		Nut
7	DD-T4620-50261	1		Plate, Battery Lock

8404 Tractor
Bevel Gear Case Group

 Page 7 of 200

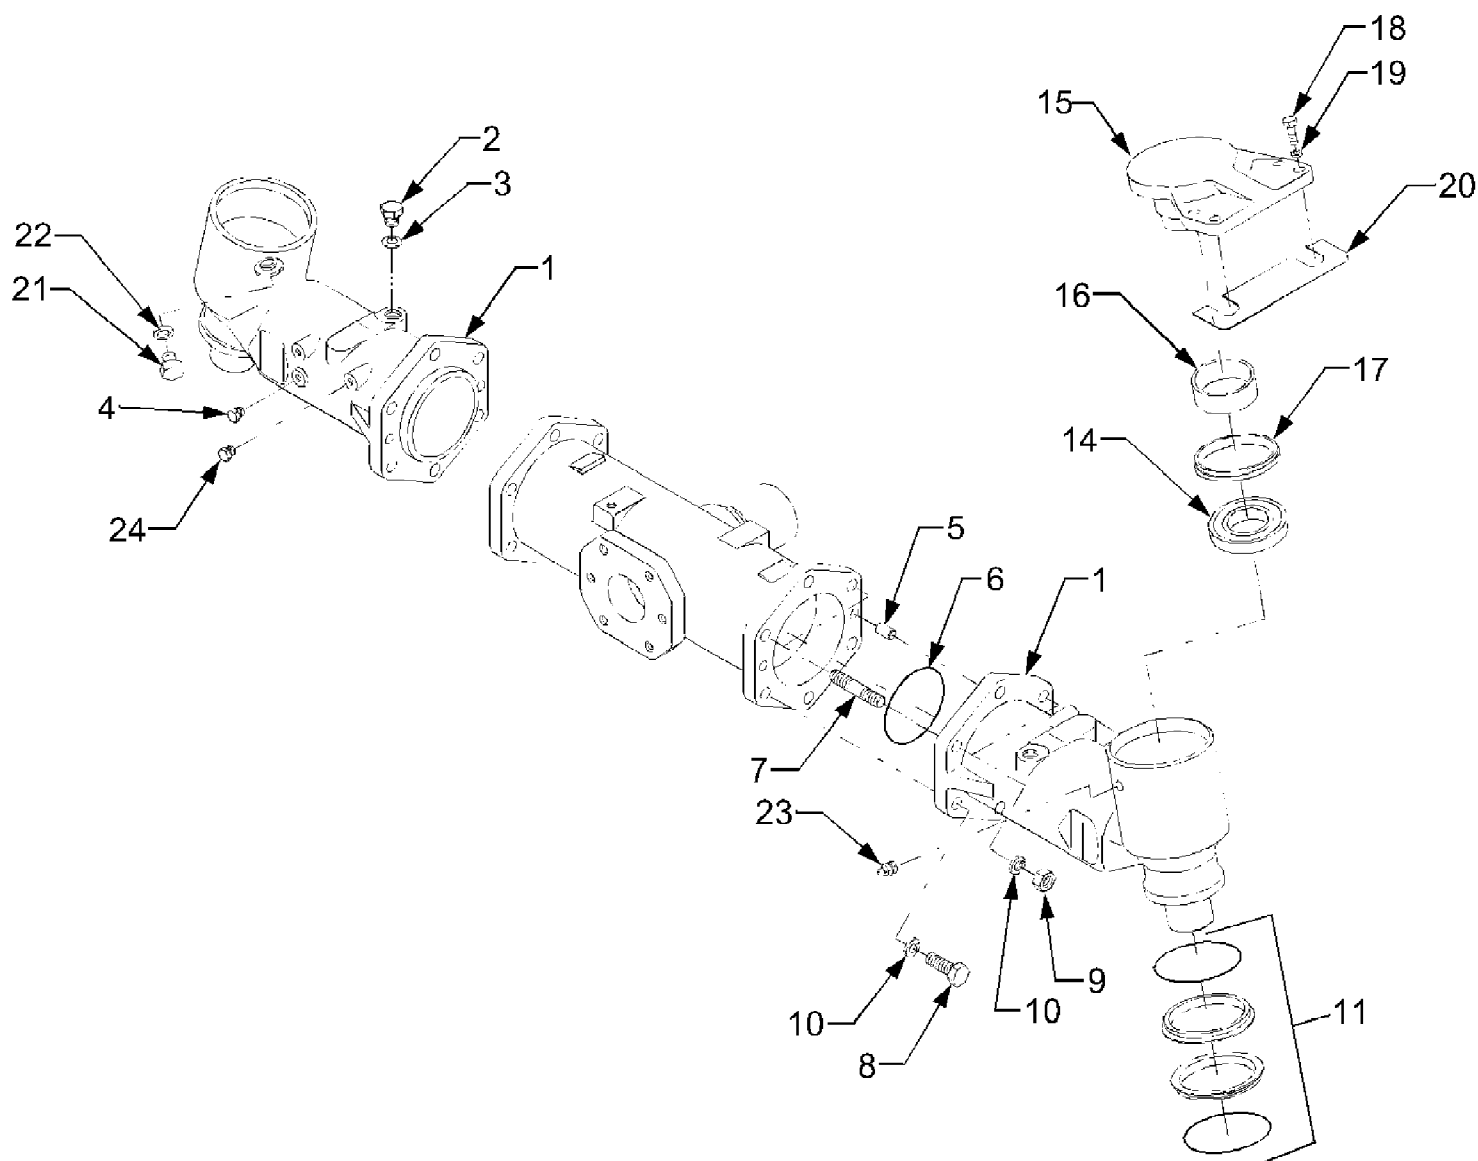


8404 Tractor
Bevel Gear Case Group

Page 8 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2630-43314	2	/P	Case, Bevel Gear
2	DD-34150-14261	2		Plug, Drain
3	DD-04717-02150	2		Wahser, Seal
4	DD-T4680-14211	2		Gauge, Oil
5	DD-37805-43501	4		Pin, Straight
6	DD-04811-51050	2		O-ring
7	DD-01517-51438	4		Stud
8	DD-01173-51445	8		Bolt
9	DD-02176-50140	4		Nut
10	DD-04512-50140	12		Washer, Spring
11	DD-T4818-43451	2	/P	Floating Seal Ass'y
14	DD-08121-06013	2		Bearing, Ball
15	DD-T2620-43341	2		Support, Axle Case
16	DD-T2630-43461	2		Ring, Inner
17	DD-T2630-43471	2		Seal, Oil
18	DD-01173-51235	8		Bolt
19	DD-04512-50120	8		Washer, Spring
20	DD-T2630-43751	2		Shim (T 0.5)
	DD-T2630-43761	2		Shim (T 0.8)
	DD-T2630-43771	2		Shim (T 1.0)
	DD-T2630-43781	2		Shim (T 1.2)
21	DD-76KP-04081	2		Plug
22	DD-04717-01800	2		Washer, Seal
23	DD-06613-10010	2		Nipple, Grease
24	DD-34150-27581	4		Plug

8404 Tractor
Bevel Gear Shaft Group

 Page 9 of 200

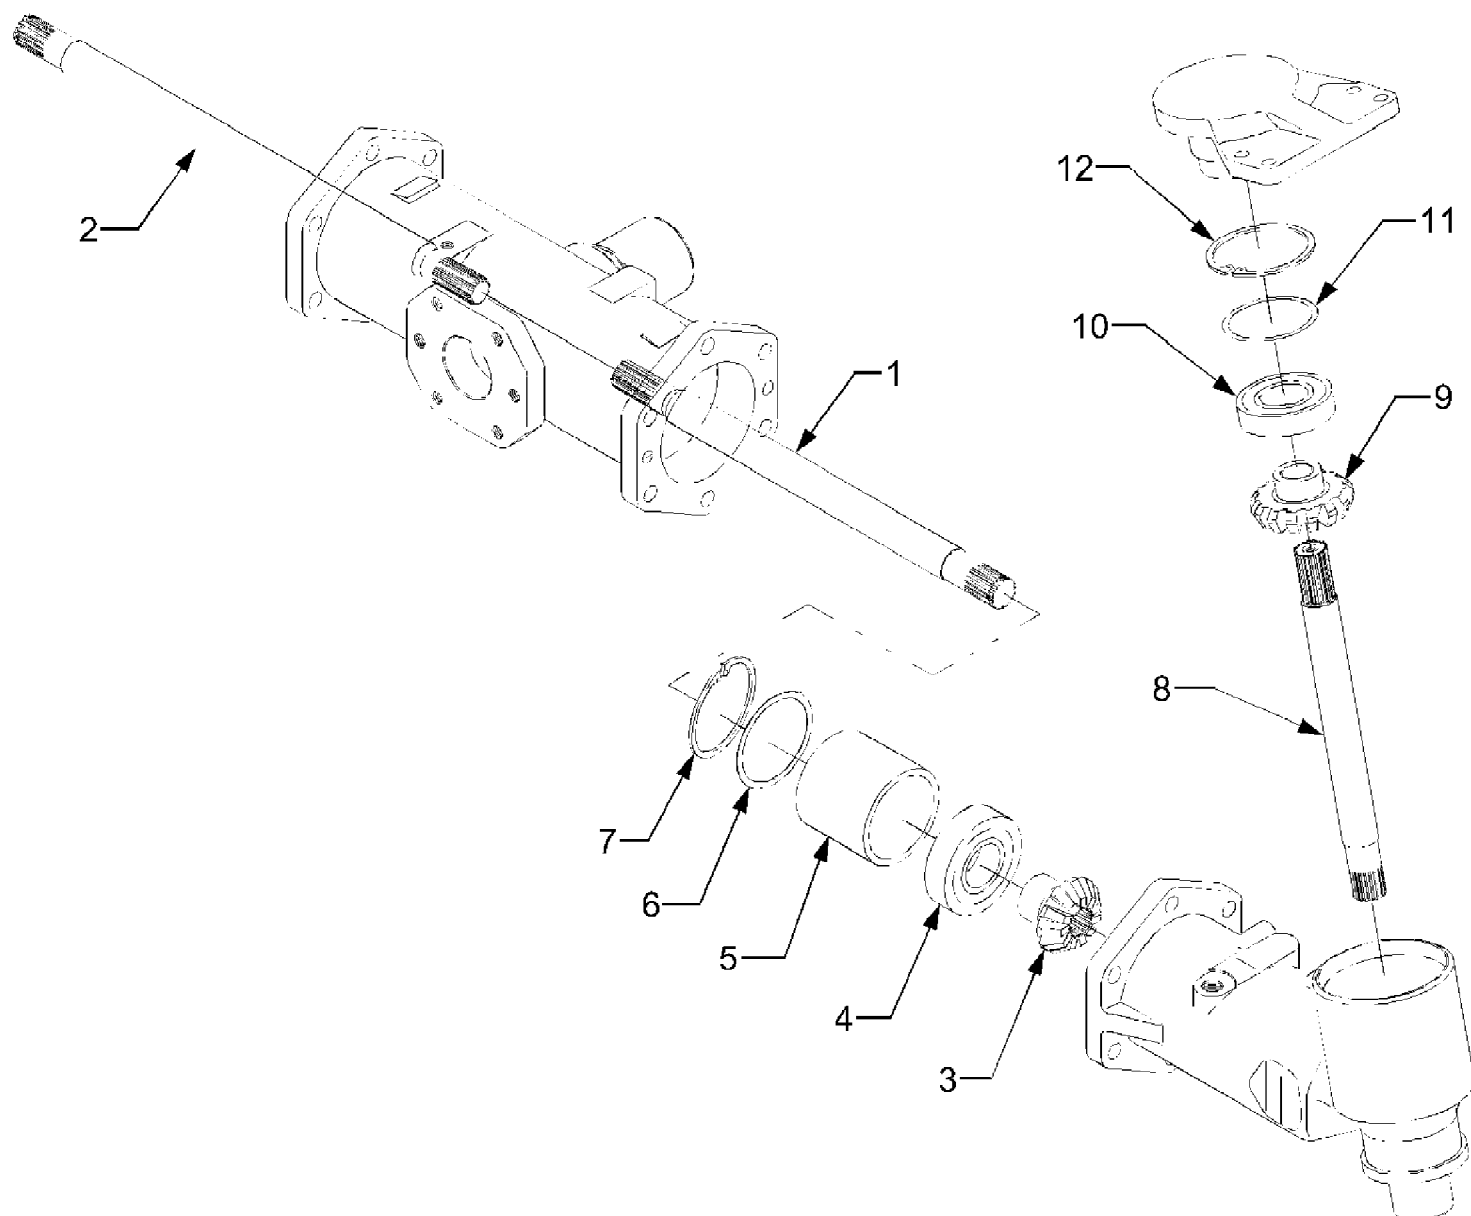


8404 Tractor
Bevel Gear Shaft Group

Page 10 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2630-43211	1		Shaft, Differential Gear (LH)
2	DD-T2630-43221	1		Shaft, Differential Gear (RH)
3	DD-T2630-43241	2		Gear, 11 Bevel
4	DD-08101-06307	2		Bearing, Ball
5	DD-T2630-43291	2		Collar
6	DD-T4520-43031	2		Shim (T 0.4)
	DD-T4520-43041	2		Shim (T 0.8)
	DD-T4520-43051	2		Shim (T 1.0)
	DD-T4520-43061	2		Shim (T 1.2)
7	DD-04611-00800	2		Cir- Clip
8	DD-T2620-43412	2		Shaft, Bevel Gear
9	DD-T2630-43441	2		Gear, 16 Bevel
10	DD-08101-06013	2		Bearing, Ball
11	DD-T4520-44041	2		Shim (T 0.4)
	DD-T4520-44051	2		Shim (T 0.8)
	DD-T4520-44061	2		Shim (T 1.0)
	DD-T4520-44071	2		Shim (T 1.2)
12	DD-04611-01000	2		Cir-Clip

8404 Tractor
Bevel Pinion Shaft Group

 
Page 11 of 200

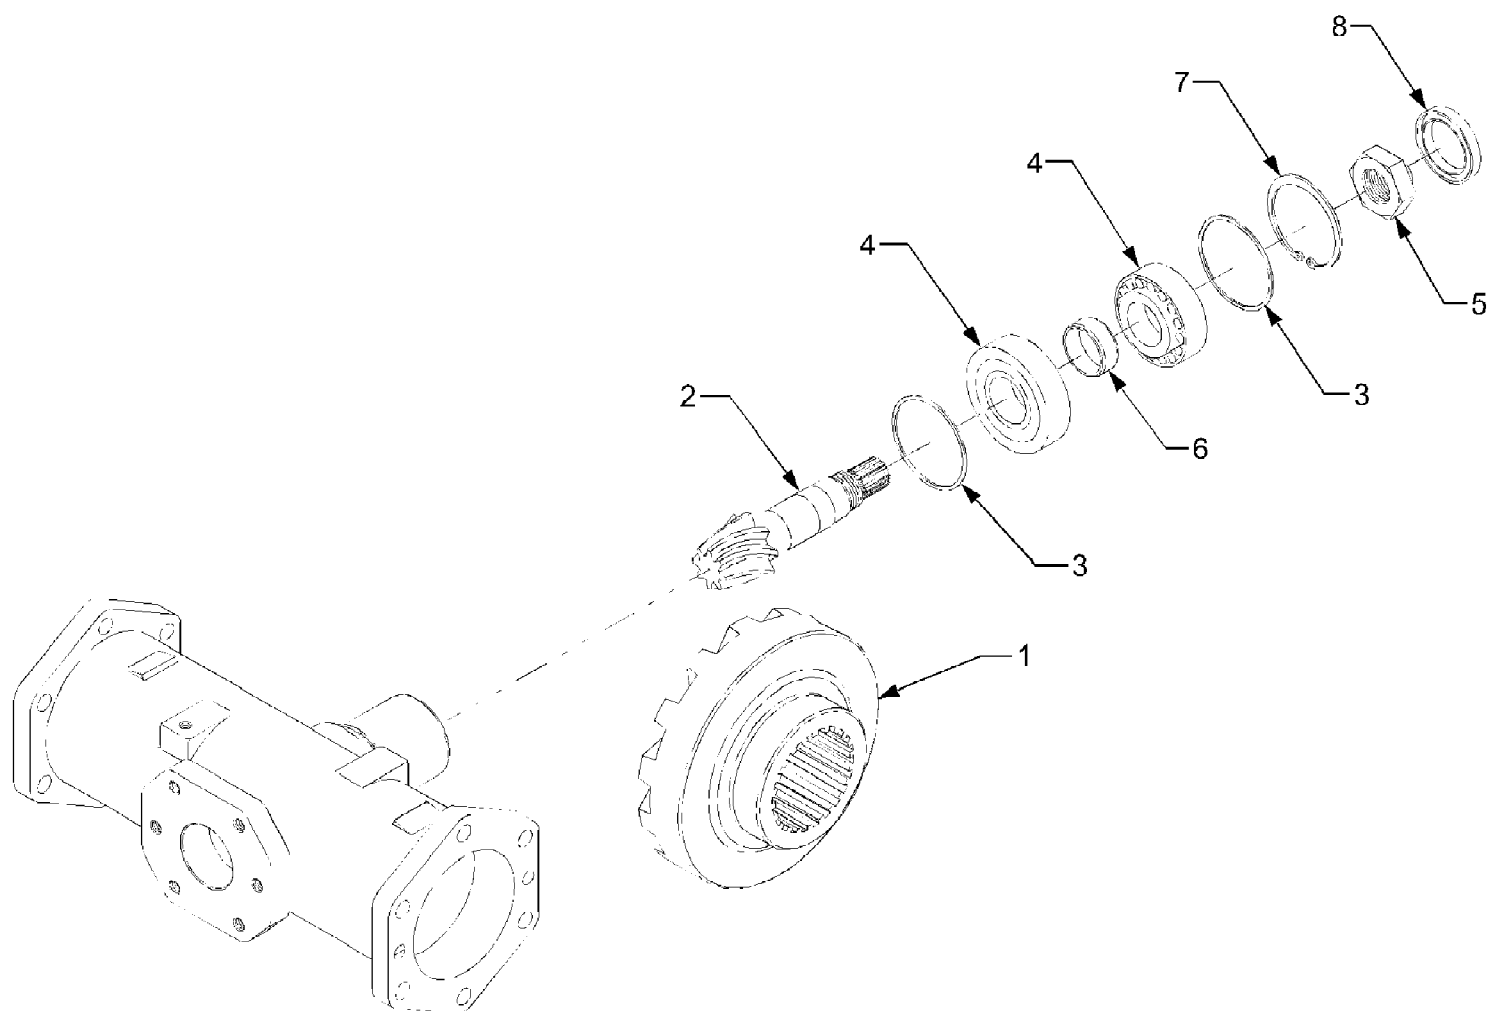

8404 Tractor
Bevel Pinion Shaft Group

Page 12 of 200


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2630-42311	1		Gear, 23 Spiral Bevel
2	DD-T2630-42261	1		Shaft, 9 Bevel Pinion
3	DD-T2630-42451	2		Collar (T 5.8)
	DD-T2630-42461	2		Collar (T 5.9)
	DD-T2630-42471	2		Collar (T 6.0)
	DD-T2630-42481	2		Collar (T 6.1)
	DD-T2630-42491	2		Collar (T 6.2)
4	DD-T2630-42271	2		Bearing, Taper Roller
5	DD-T4620-21591	1		Nut, 28
6	DD-T2630-42751	1		Collar
7	DD-04611-00580	1		Cir- Clip
8	DD-T2630-42291	1		Seal, Oil

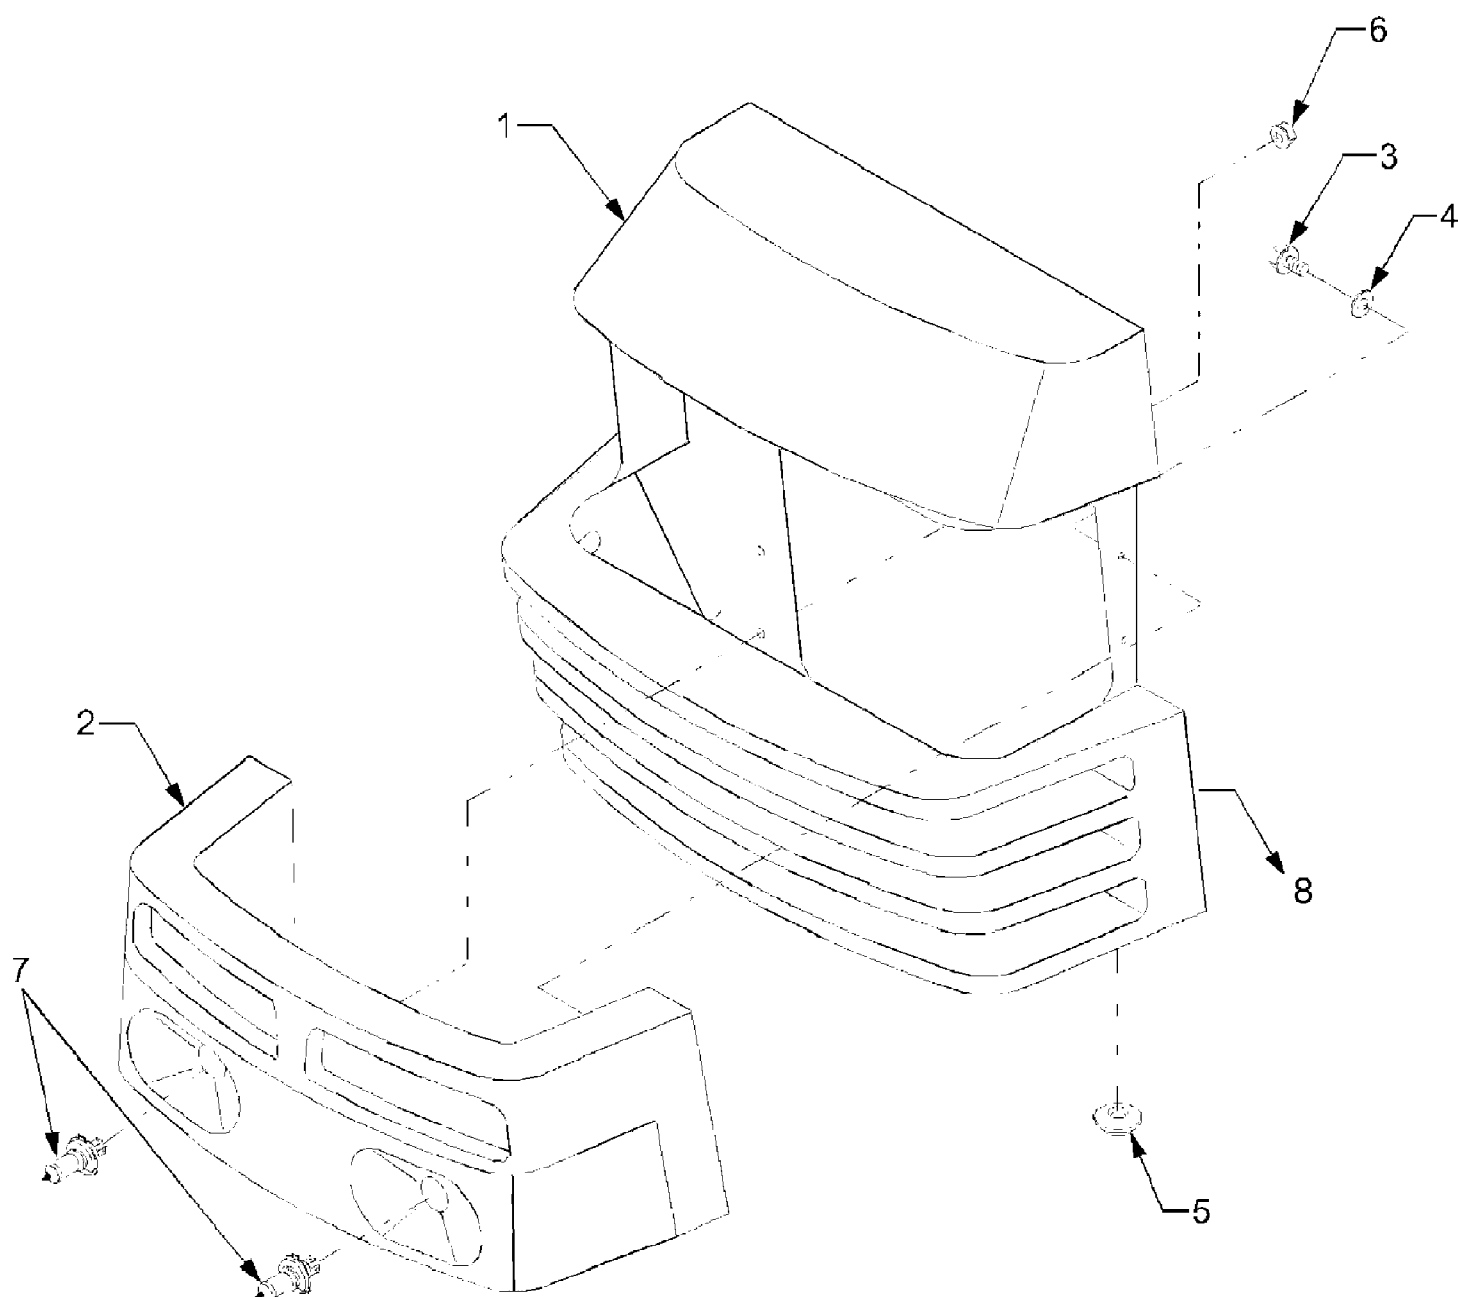 

8404 Tractor
Bonnet 1 Group

Page 14 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DDT462050505BE	1		Front Grill Ass'y Incl. Ref. No. 8
2	DDT462050533BE	1	/P	Head Lamp Ass'y Replaces DD-T4620-50532
3	DD-01023-50614	4		Bolt
4	DD-04015-50060	4		Washer, Plain
5	DD-T4620-50592	2		Rubber, Cushion
6	DD-02751-50060	2		Nut, Flange
7	DD-T4620-69241	2		Bulb
8	DD-T4620-50522	1	/P	Lower Front Grill

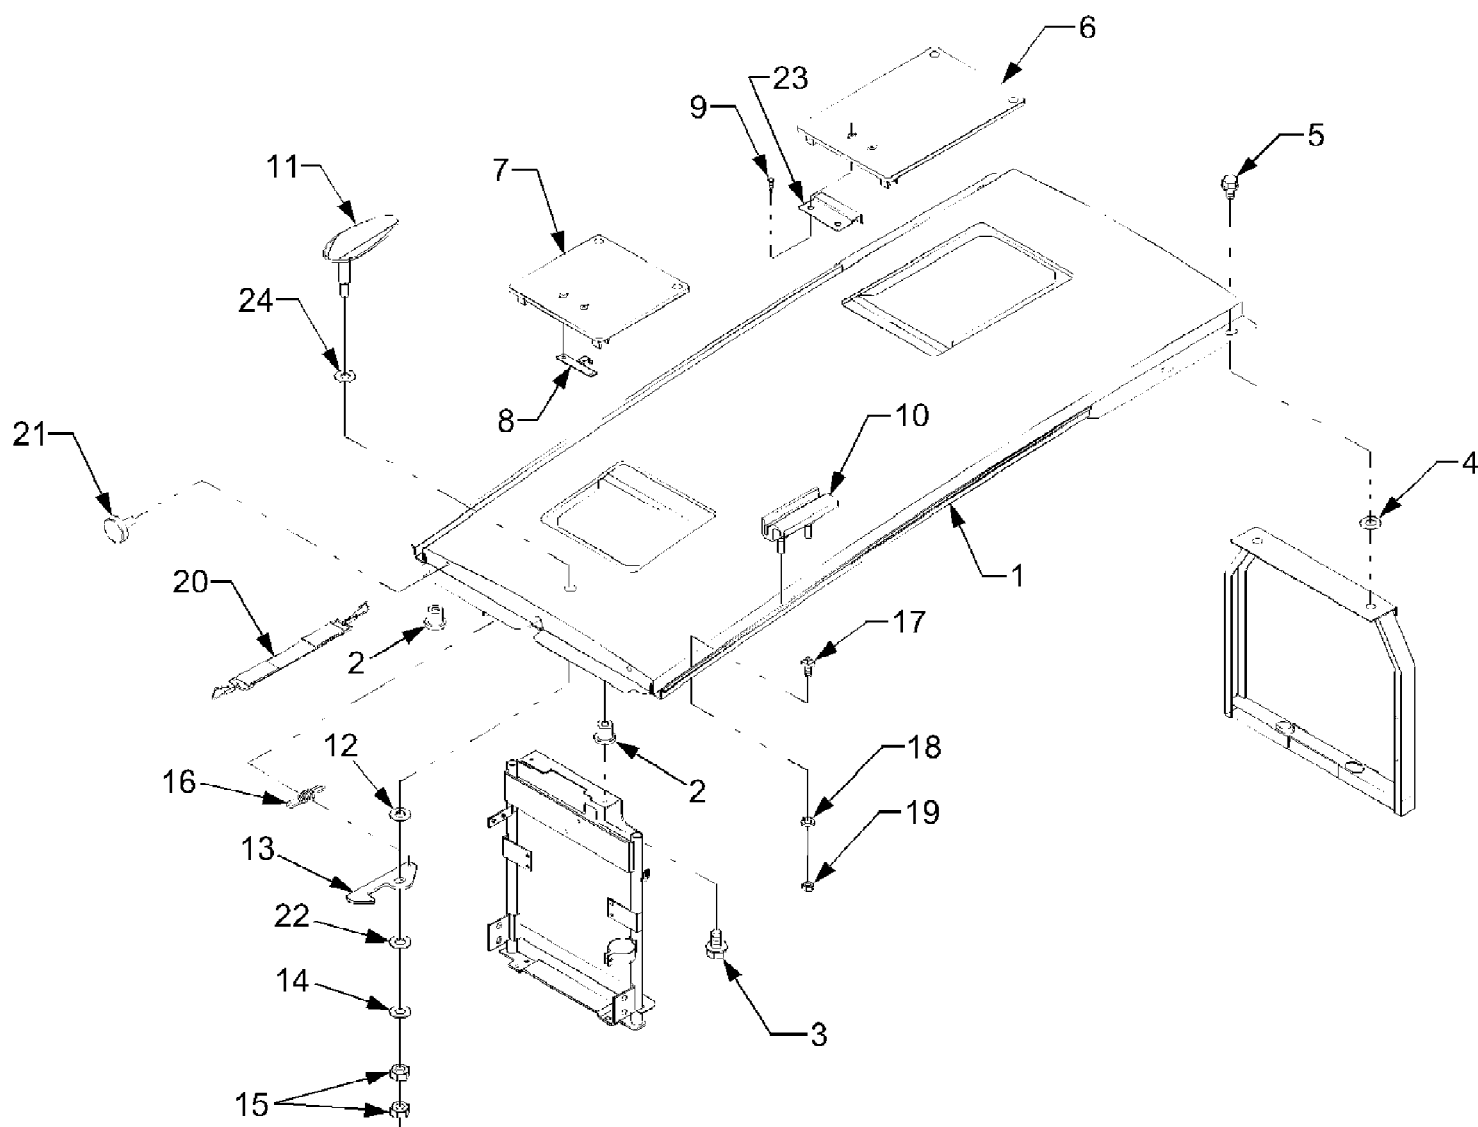 


8404 Tractor
Bonnet 2 Group

Page 16 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DDT468050603BE	1	S	Bonnet (Upper)
2	DD-T4620-50672	2		Rubber, Cushion
3	DD-01754-50820	2		Bolt, Flange
4	DD-T4620-80691	2		Packing
5	DD-01754-50820	2		Bolt, Flange
6	DDT462050713BE	1		Cover 2 Ass'y
7	DDT426018612BE	1		Cover(Aux.) Ass'y
8	DD-T4260-18632	1	/P	Spring
9	DD-38430-18271	4		Screw, Tapping
10	DD-T4260-19141	4		Cushion, Bonnet
11	DD-T4620-50634	1		Handle, Bonnet Lock
12	DD-32240-23951	1		Washer
13	DD-T4620-50612	1		Plate, Front Grill
14	DD-04015-50080	1		Washer, Plain
15	DD-02156-50080	2		Nut
16	DD-T4620-50652	1		Spring
17	DD-T4260-18031	2		Bolt, Guide
18	DD-04512-50060	2		Washer, Spring
19	DD-02056-50060	2		Nut
20	DD-T4620-50663	1	/P	Hook Ass'y
21	DD-T4810-50661	2		Cushion
22	DD-76KP-0603	1		Washer
23	DD-T4681-18631	1		Spring
24	DD-55314-37171	2		Spacer

8404 Tractor
Bonnet 3 Group

 
Page 17 of 200

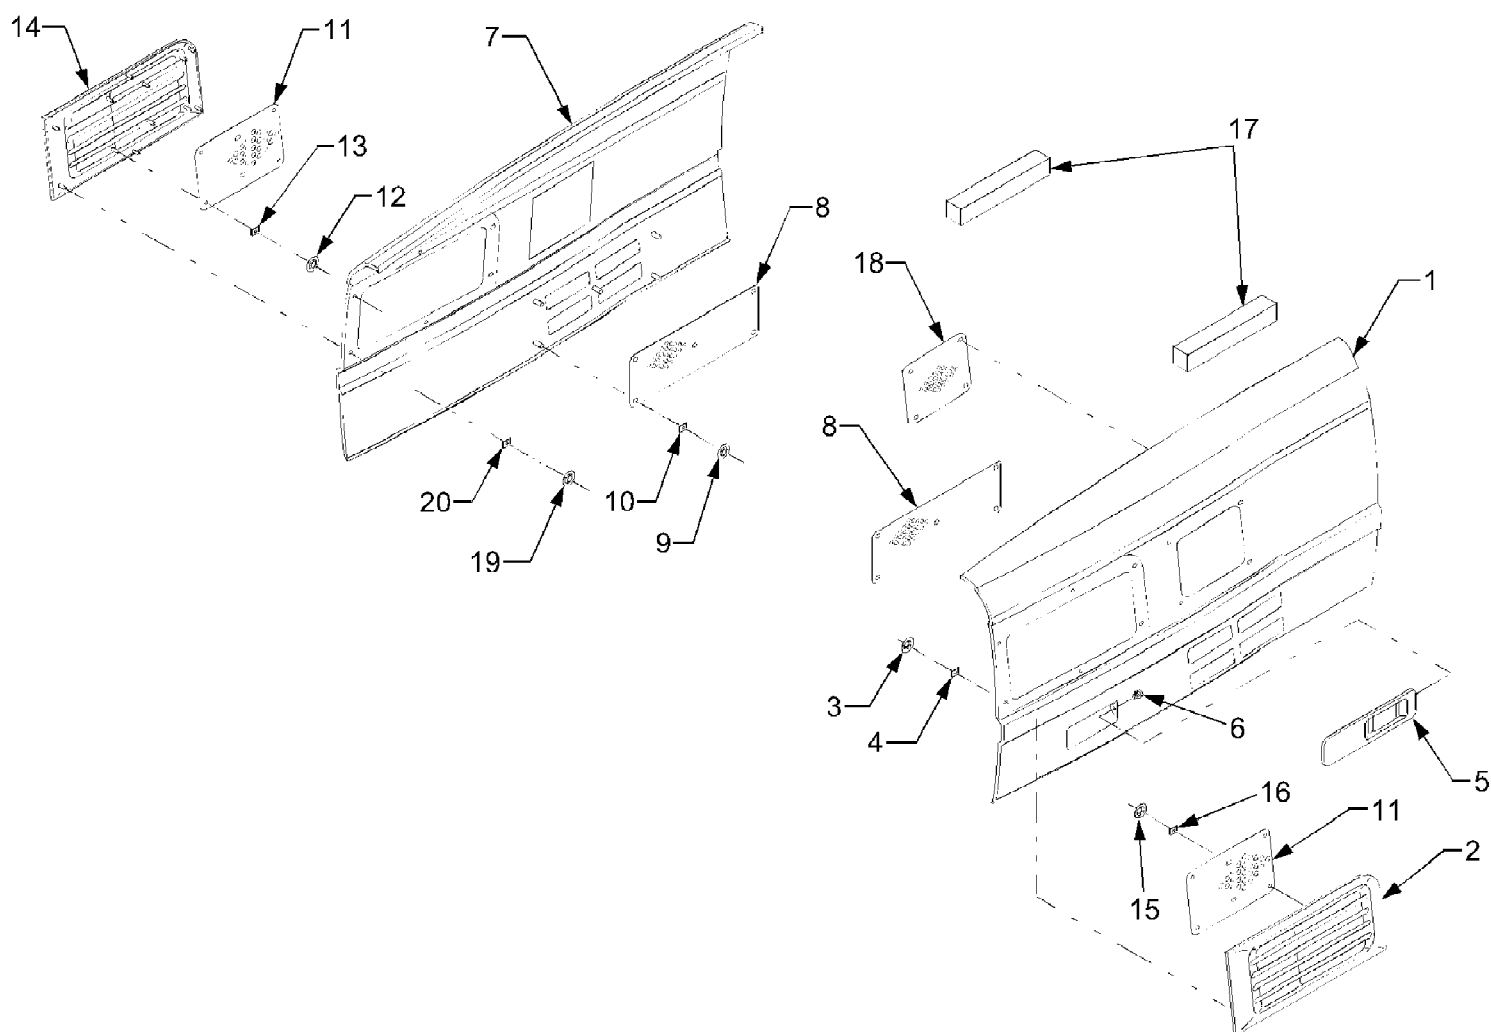

8404 Tractor
Bonnet 3 Group

Page 18 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DDT468050752BE	1		Cover, Side (LH)
2	DDT462050765BE	1	/P	Grill, Side Cover (LH)
3	DD-T4620-50701	6		Stopper
4	DD-82KC-0641	6		Rubber, Stopper
5	DD-T4680-50771	1		Cover, Muffler
6	DD-01023-50612	2		Bolt
7	DDT468050812BE	1		Cover, Side (RH)
8	DD-T2620-50782	2		Net, Side Cover
9	DD-T4620-50701	10		Stopper
10	DD-82KC-0641	10		Rubber, Stopper
11	DD-T4620-50622	2		Net (Grill)
12	DD-T4620-50701	12		Stopper
13	DD-82KC-0641	12		Rubber, Stopper
14	DDT462050825BE	1		Grill, Side Cover (RH)
15	DD-T4620-50701	6		Stopper
16	DD-82KC-0641	6		Rubber, Stopper
17	DD-T4850-50461	2		Sponge 2
18	DD-T4680-50862	2		Net, Side Cover
19	DD-T4620-50701	14		Stopper
20	DD-82KC-0641	14		Rubber, Stopper

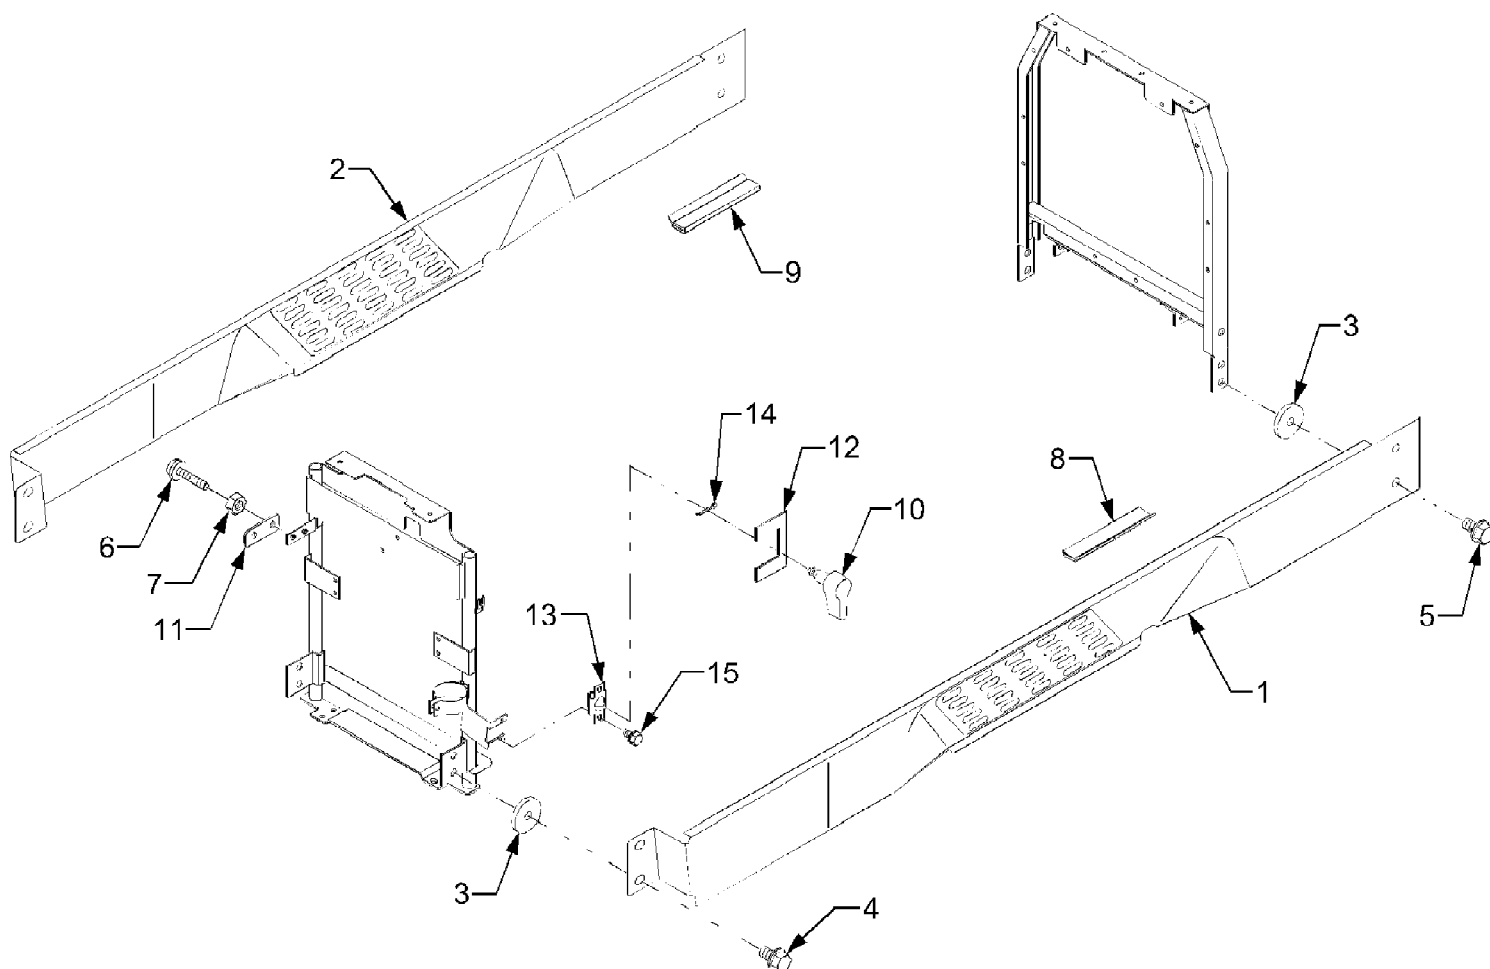 


8404 Tractor
Bonnet 4 Group

Page 20 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4680-50903	1	S	Cover, Low (LH)
2	DD-T4680-50913	1		Cover, Low (RH)
3	DD-T2610-80691	8		Cushion
4	DD-01754-50812	4		Bolt, Flange
5	DD-01754-50820	4		Bolt, Flange
6	DD-T4620-50891	2		Bolt, Cushion
7	DD-02112-50080	2		Nut
8	DD-T4681-50691	1		Rubber, Cover (LH)
9	DD-T4681-51691	1		Rubber, Cover (RH)
10	DD-T4810-50832	4		Knob, Side Cover
11	DD-T4620-50881	2		Plate, Side Cover
12	DD-T4810-50851	4		Rubber (Bonnet-LH)
13	DD-T4681-50841	4		Bracket
14	DD-05511-50325	6		Pin, Split
15	DD-01053-50610	8		Bolt

8404 Tractor
Brake Case Group

 Page 21 of 200

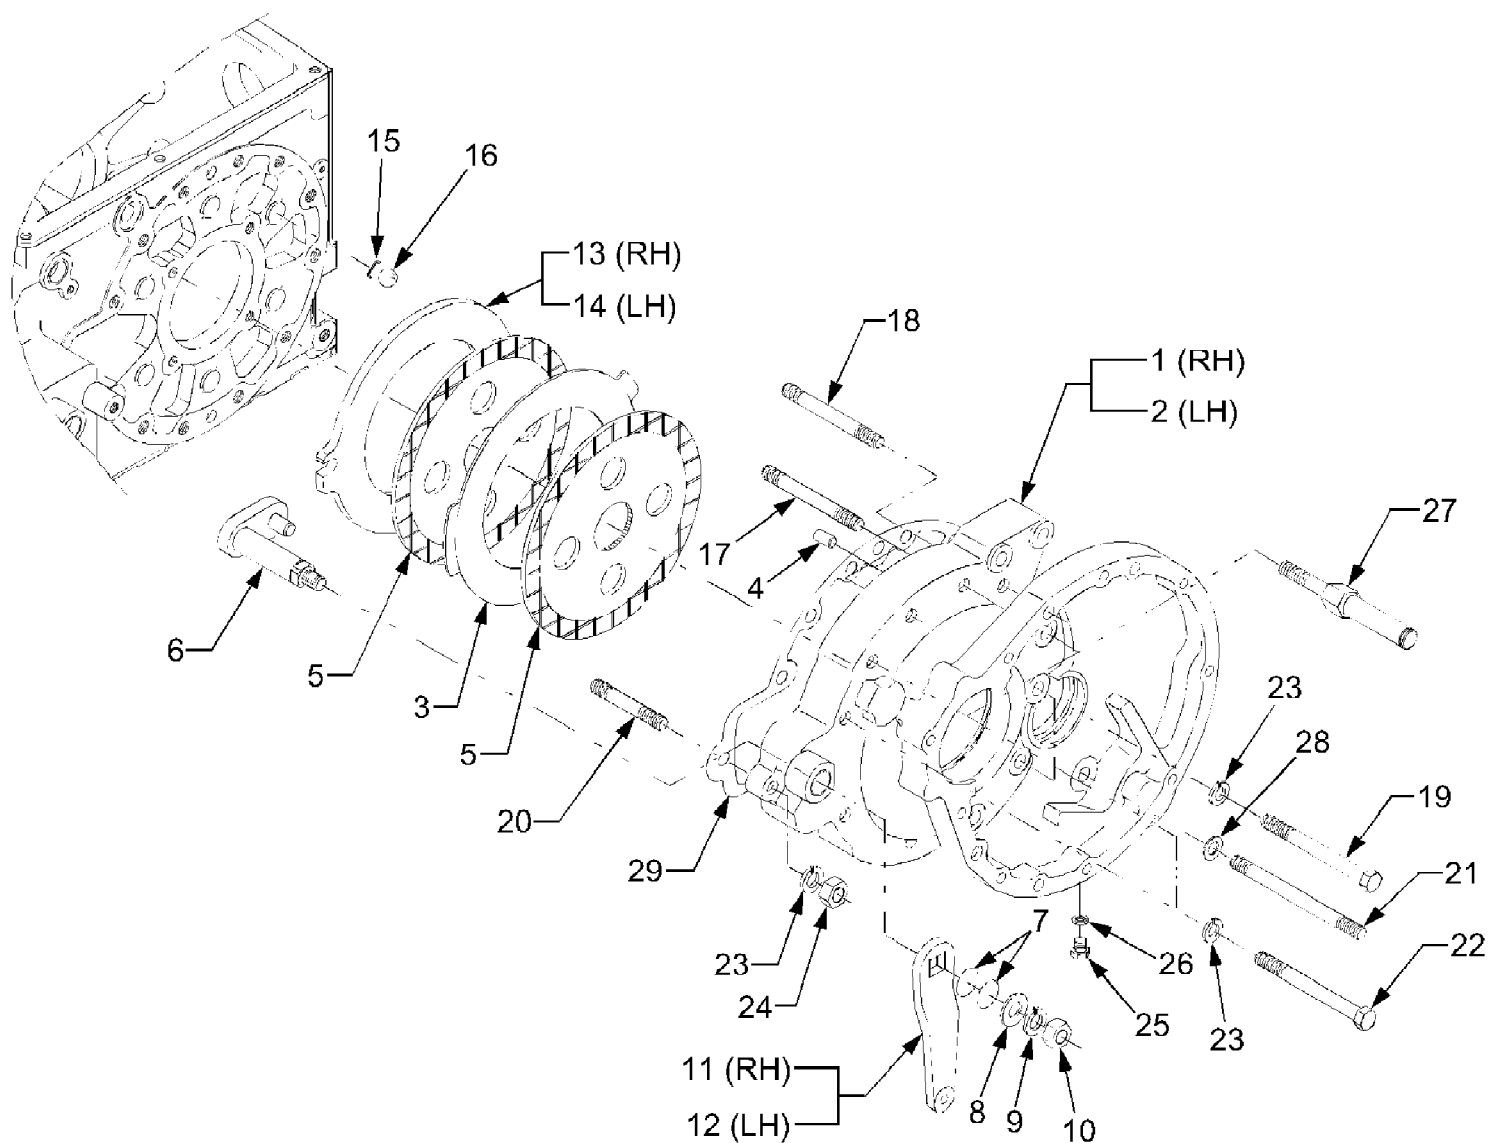


8404 Tractor
Brake Case Group

Page 22 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4240-28134	1		Case, Brake(LH)
2	DD-T4240-28154	1		Case, Brake(RH)
3	DD-T2440-28182	2		Plate
4	DD-37305-28171	4		Pin
5	DD-T2440-28202	4		Disk, Brake
6	DD-38435-28213	2		Cam, Brake
7	DD-04811-00220	4		O-ring
8	DD-04013-50140	2		Washer, Plain
9	DD-04512-50140	2		Washer, Spring
10	DD-02176-50140	2		Nut
11	DD-T2610-28223	1		Lever, Brake Cam(RH)
12	DD-T2610-28232	1		Lever, Brake Cam(LH)
13	DD-T2240-28272	1		Plate, Cam(RH)
14	DD-T2240-28242	1		Plate, Cam(LH)
15	DD-37150-28253	12		Seat, Ball
16	DD-07715-00805	12		Ball
17	DD-37150-27352	12		Stud
18	DD-32435-27362	2		Stud
19	DD-01176-51260	2		Bolt
20	DD-01574-51235	2		Stud
21	DD-01574-51285	2		Stud
22	DD-01173-51260	6		Bolt
23	DD-04512-50120	26		Washer, Spring
24	DD-02176-50120	18		Nut
25	DD-34150-14261	2		Plug, Drain
26	DD-04717-02150	2		Washer, Seal
27	DD-T2610-60562	1		Shaft, Lever (Range)
28	DD-T2440-28192	2		Packing
29	DD-37260-28162	2		Packing

8404 Tractor
Brake Pedal Group

 Page 23 of 200

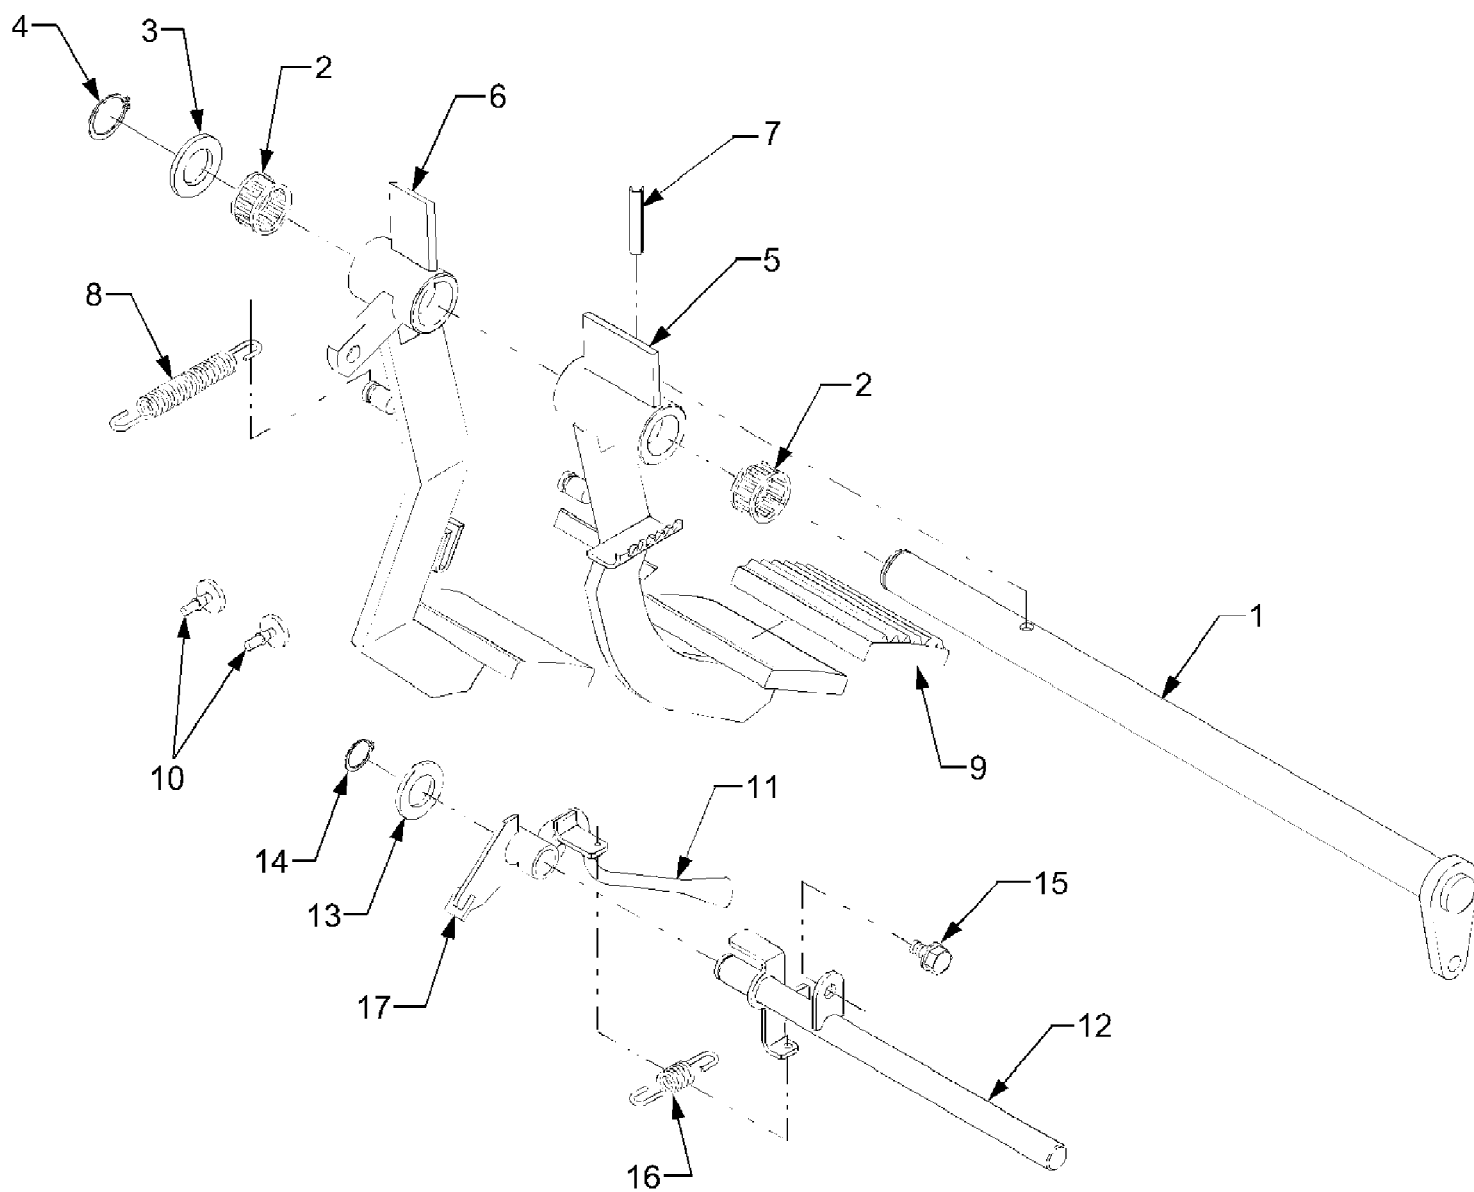


8404 Tractor
Brake Pedal Group

Page 24 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-55731	1		Shaft, Pedal
2	DD-08822-53017	2		Bearing, Needle
3	DD-84612-14450	1		Collar, Cam
4	DD-04612-00250	1		Cir-clip
5	DD-T2610-55715	1		Pedal, Brake (LH)
6	DD-T2610-55724	1		Pedal, Brake (RH)
7	DD-05411-00840	1		Pin, Spring
8	DD-T4520-26161	2		Spring, Brake
9	DD-T2670-55531	2		Cover, Pedal
10	DD-T4520-26931	2		Cushion, Pedal
11	DD-T4620-55912	1		Brake, Parking
12	DD-T4620-55922	1		Shaft, Parking Brake
13	DD-04011-50160	1		Washer, Plain
14	DD-04612-50160	1		Cir-clip
15	DD-01123-50820	1		Bolt
16	DD-57781-51211	1		Spring, Return
17	DD-31391-18561	1		Clip, Lever

8404 Tractor
Brake Rod Group

 
Page 25 of 200

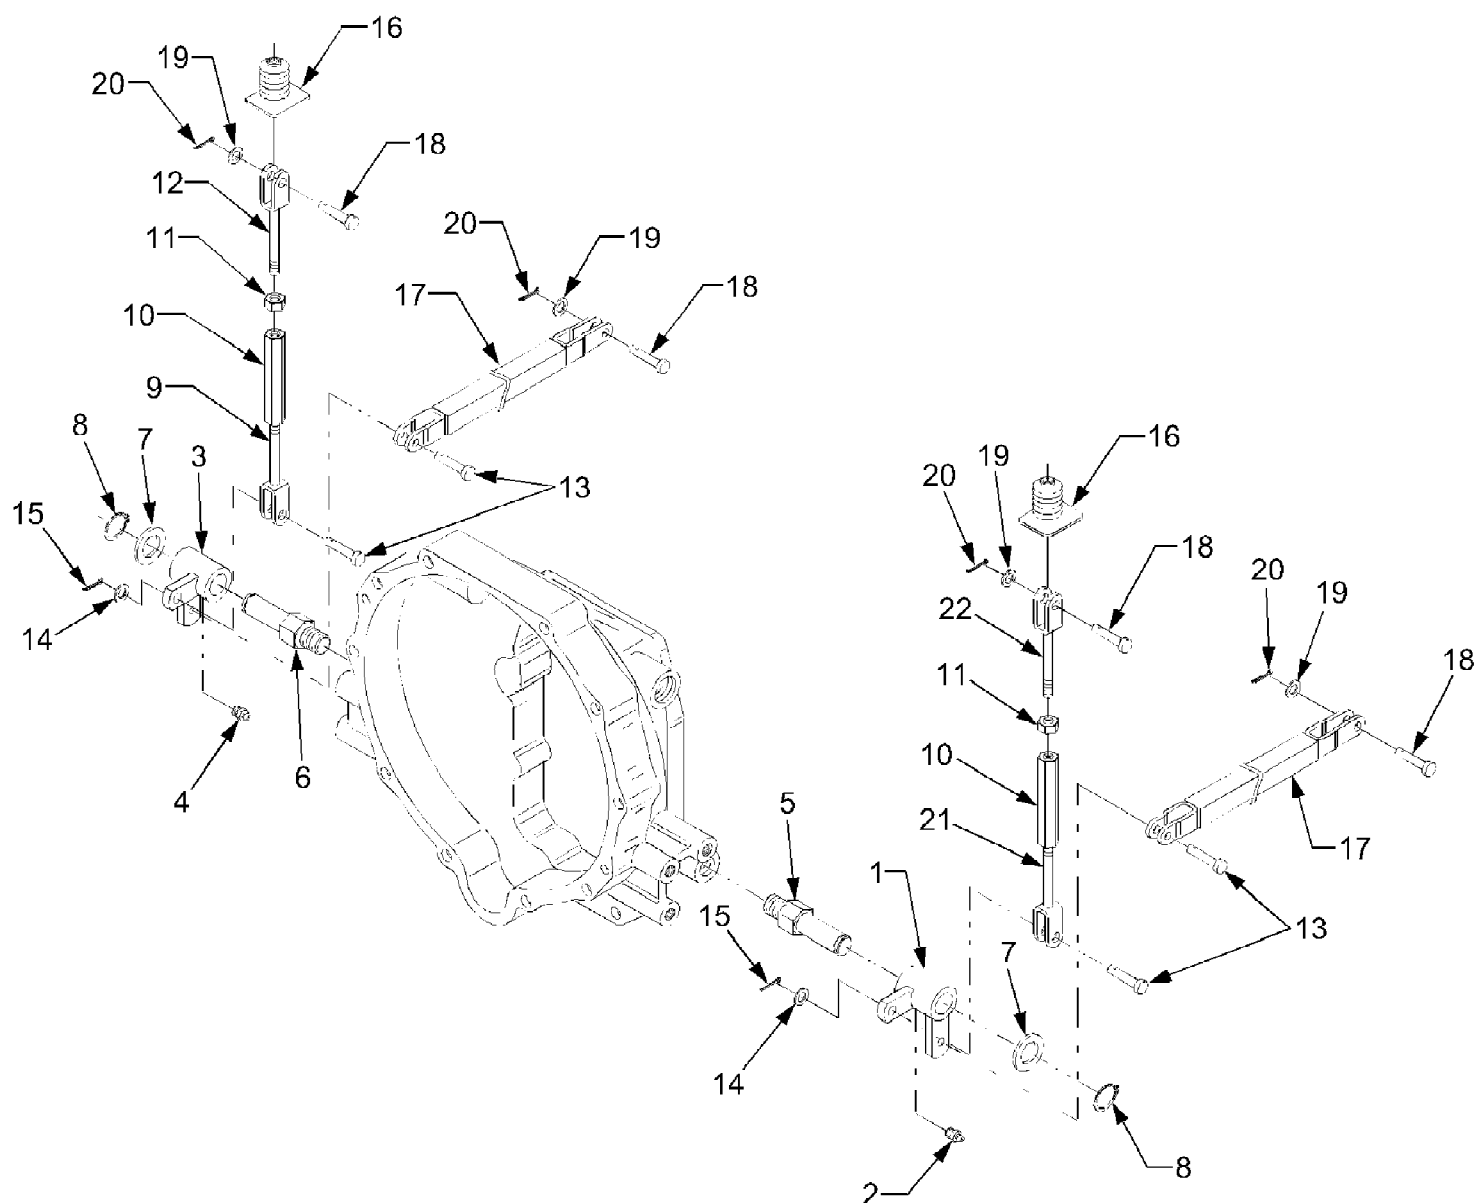

8404 Tractor
Brake Rod Group

Page 26 of 200


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-55781	1		Lever, Brake
2	DD-06611-15675	1		Nipple, Grease
3	DD-T2610-55791	1		Lever, Brake (RH)
4	DD-06611-15675	1		Nipple, Grease
5	DD-T2610-55802	1		Shaft, Brake (LH)
6	DD-T2610-55812	1		Shaft, Brake (RH)
7	DD-04011-50200	2		Washer, Plain
8	DD-04612-50200	2		Cir-clip
9	DD-T2610-55751	1		Rod 1, Brake
10	DD-32350-28984	2		Buckle, Turn
11	DD-02118-50100	2		Nut
12	DD-T4620-55762	1		Rod 2, Brake
13	DD-05122-51025	4		Pin, Joint
14	DD-04013-50100	4		Washer, Plain
15	DD-05511-50318	4		Pin, Split
16	DD-T4620-55821	2		Boot
17	DD-T2610-55772	2		Rod 3, Brake
18	DD-05122-50828	4		Pin, Joint
19	DD-04012-50080	4		Washer, Plain
20	DD-05511-50218	4		Pin, Split
21	DD-T4620-55662	1		Rod 1, Brake (LH)
22	DD-T2610-55671	1		Rod 2, Brake (LH)

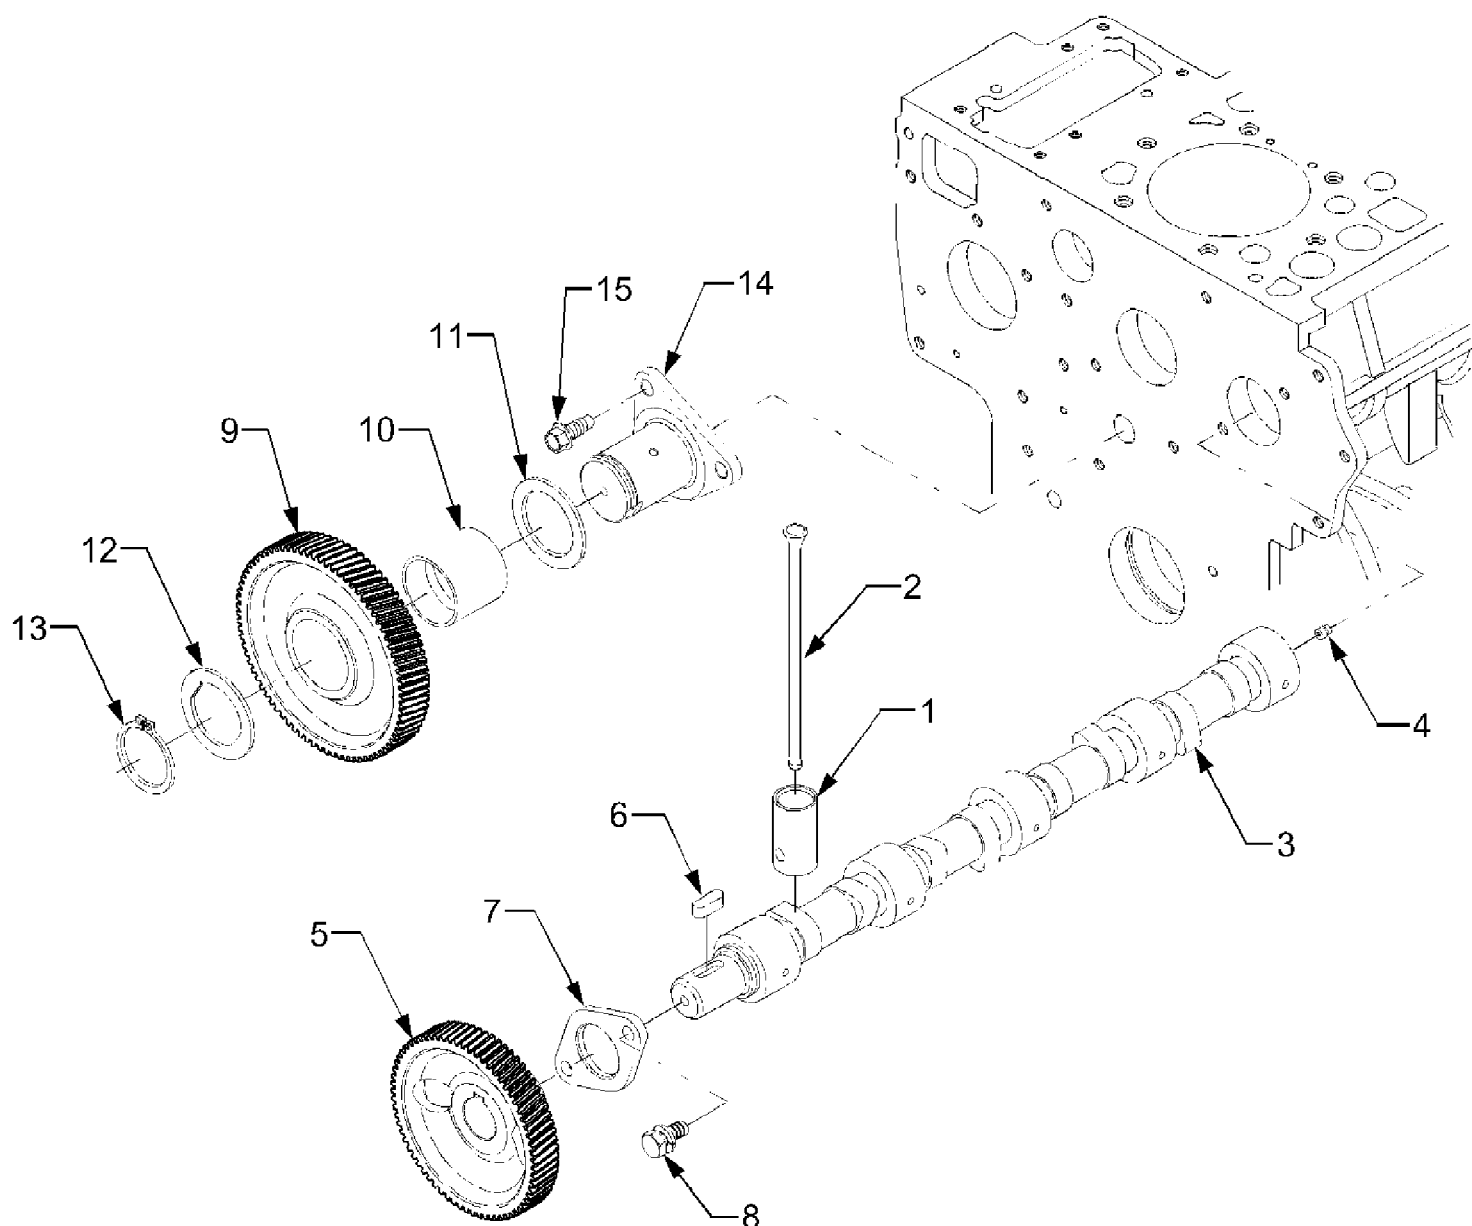 

8404 Tractor
Camshaft

Page 28 of 200


Ref #	Part Number	Qty	S/P/F	Description
1	DD-E5500-15553	8		Tappet
2	DD-E6300-15113	8		Rod, Push
3	DD-E6301-A0035	1		Camshaft Ass'y Includes Ref. No. 4
4	DD-06350-00607	2		Plug
5	DD-15521-16511	1		Gear, Camshaft
6	DD-05712-00720	1		Key
7	DD-E5500-16272	1		Stopper, Camshaft
8	DD-01123-50818	2		Bolt
9	DD-E6300-24012	1		Idle Gear Ass'y Includes Ref. No. 10
10	DD-E6300-24281	1		Bush, Idle Gear
11	DD-E6300-24361	1		Collar 1
12	DD-E6300-24371	1		Collar 2
13	DD-E6300-24321	1		Cir-clip
14	DD-E6300-24251	1		Shaft, Idle Gear
15	DD-01654-50820	3		Bolt, Flange

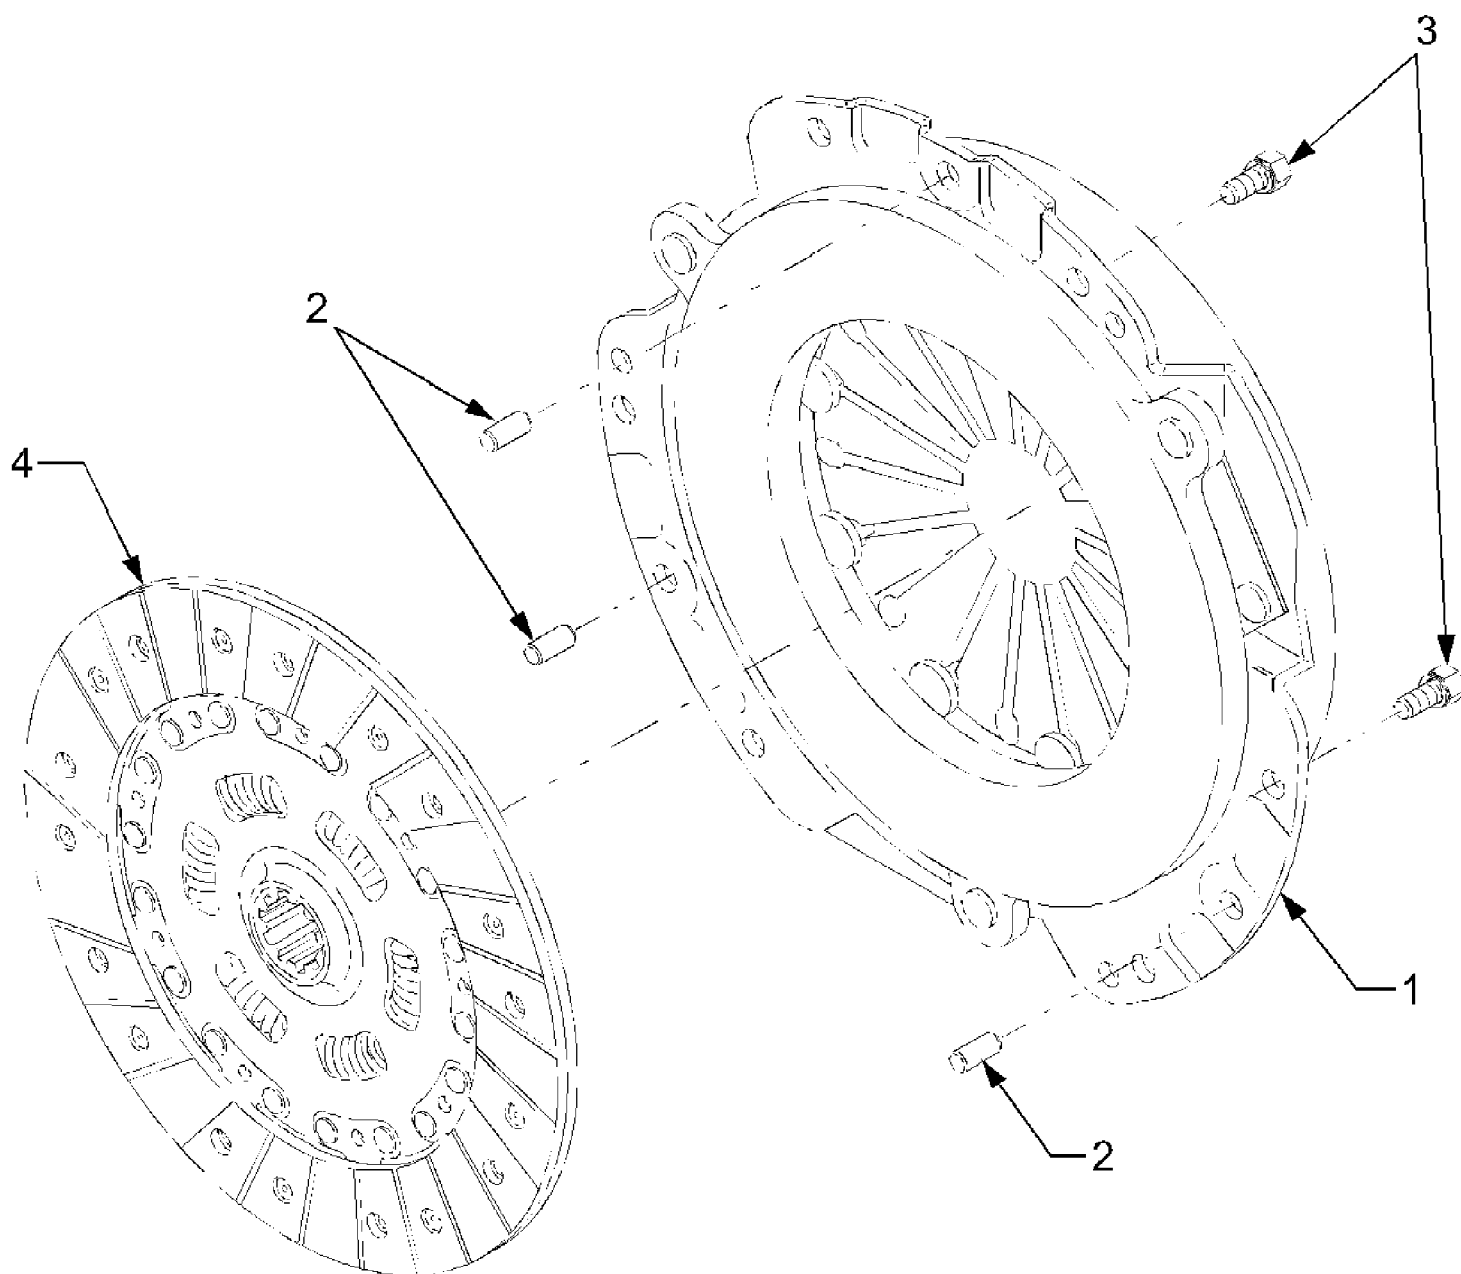 

8404 Tractor
Clutch Group

Page 30 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4620-14501	1		Clutch Cover Ass'y
2	DD-05012-00822	3		Pin, Straight
3	DD-01123-50816	9		Bolt
4	DD-T2610-14301	1		Clutch Disc Ass'y

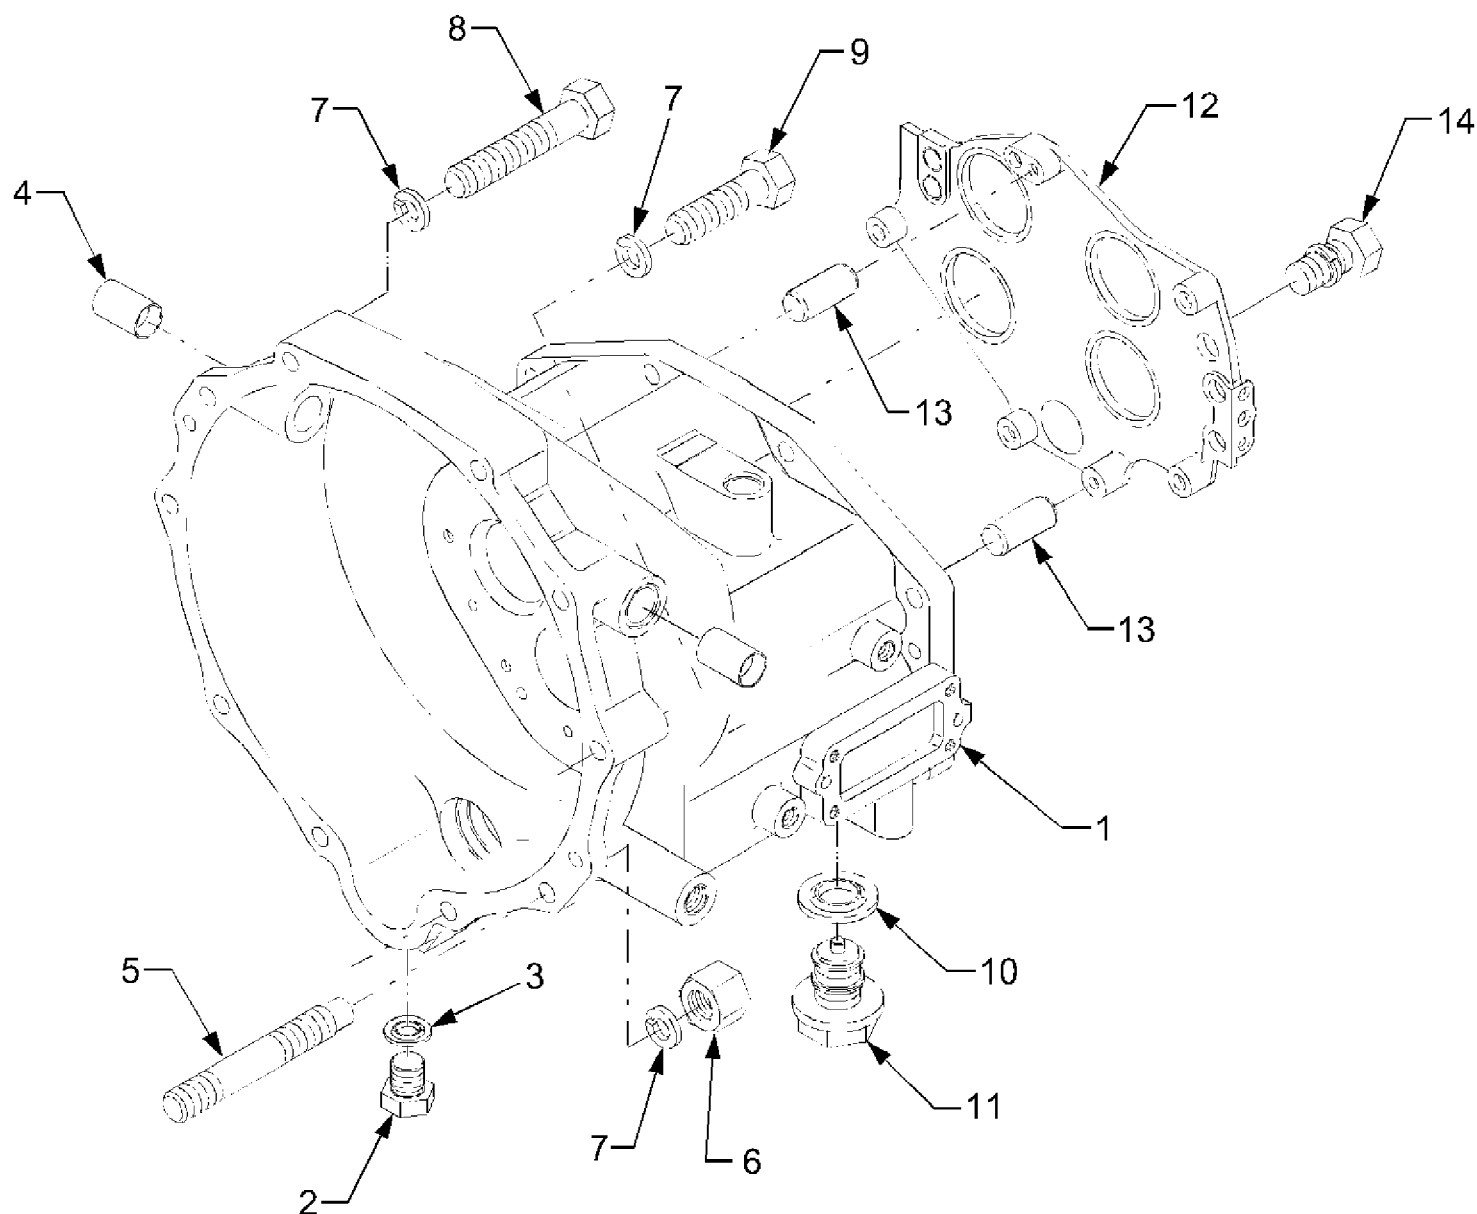 


8404 Tractor
Clutch Housing Group

Page 32 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-14114	1		Housing, Clutch
2	DD-06331-35010	1		Plug
3	DD-04717-01000	1		Washer, Seal
4	DD-T2305-14261	2		Bush
5	DD-01574-51265	4		Stud
6	DD-02176-50120	4		Nut
7	DD-04512-50120	10		Washer, Spring
8	DD-01173-51295	2		Bolt
9	DD-01176-51265	4		Bolt
10	DD-04717-02650	1		Washer, Seal
11	DD-T4260-14271	1		Plug, Drain
12	DD-T2615-21414	1		Cover, Bearing
13	DD-05012-00818	2		Pin, Straight
14	DD-01133-51035	5		Bolt

8404 Tractor
Clutch Lever

 
Page 33 of 200

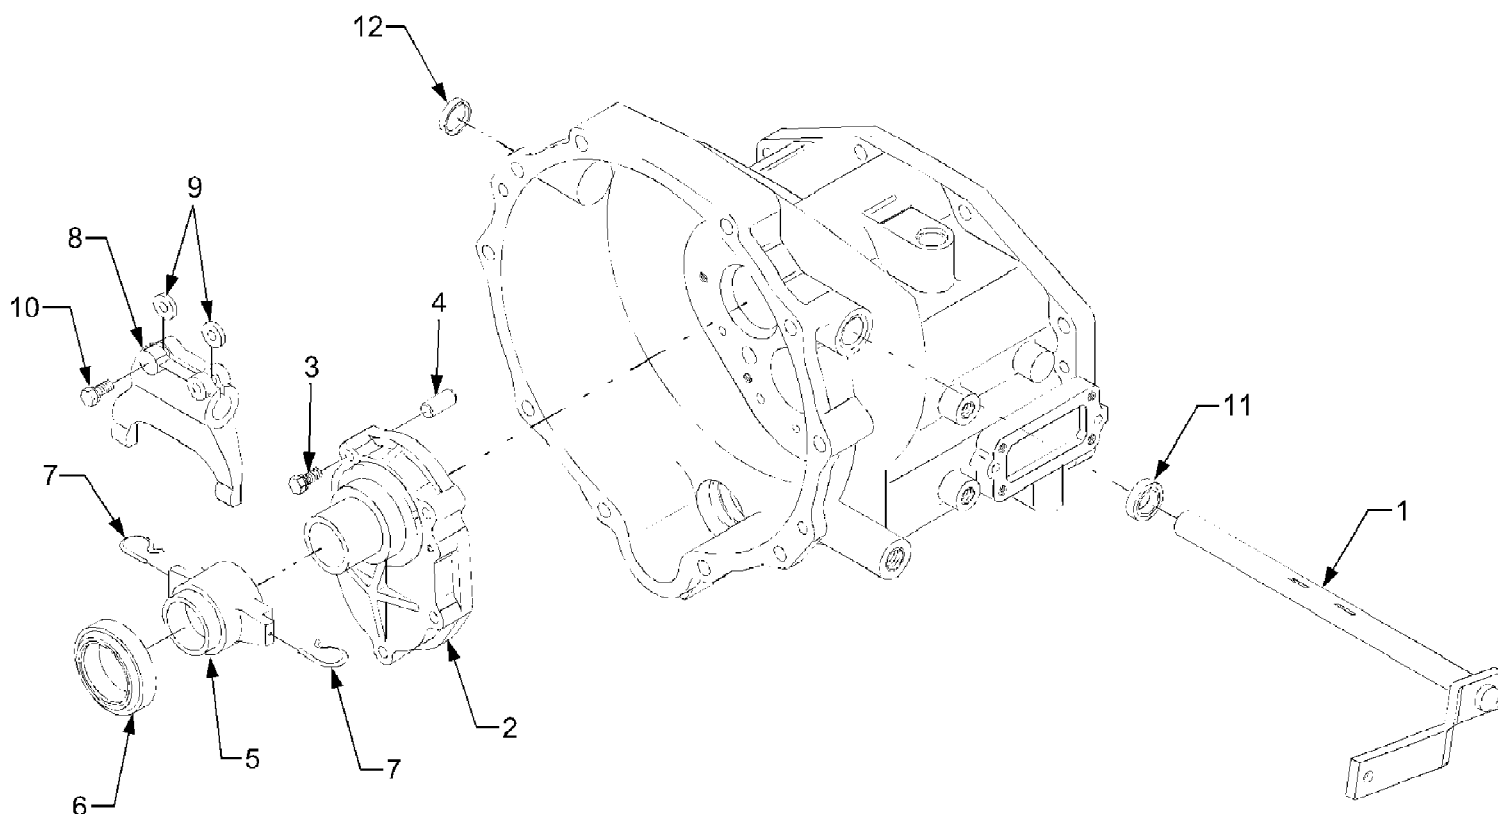

8404 Tractor
Clutch Lever

Page 34 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-14711	1		Lever, Main Clutch
2	DD-T2610-14751	1		Case, Propeller Shaft
3	DD-01123-50845	5		Bolt
4	DD-05012-00818	2		Pin, Straight
5	DD-T2610-14811	1		Hub, Clutch Release
6	DD-T2610-14831	1		Bearing, Release
7	DD-T2610-14852	2		Clamp, Fork
8	DD-T2610-14721	1		Fork, Clutch Release
9	DD-T2280-14781	2		Key, Fork
10	DD-01123-50825	2		Bolt
11	DD-09500-20328	1		Seal, Oil
12	DD-T4520-14872	1		Cap, Seal

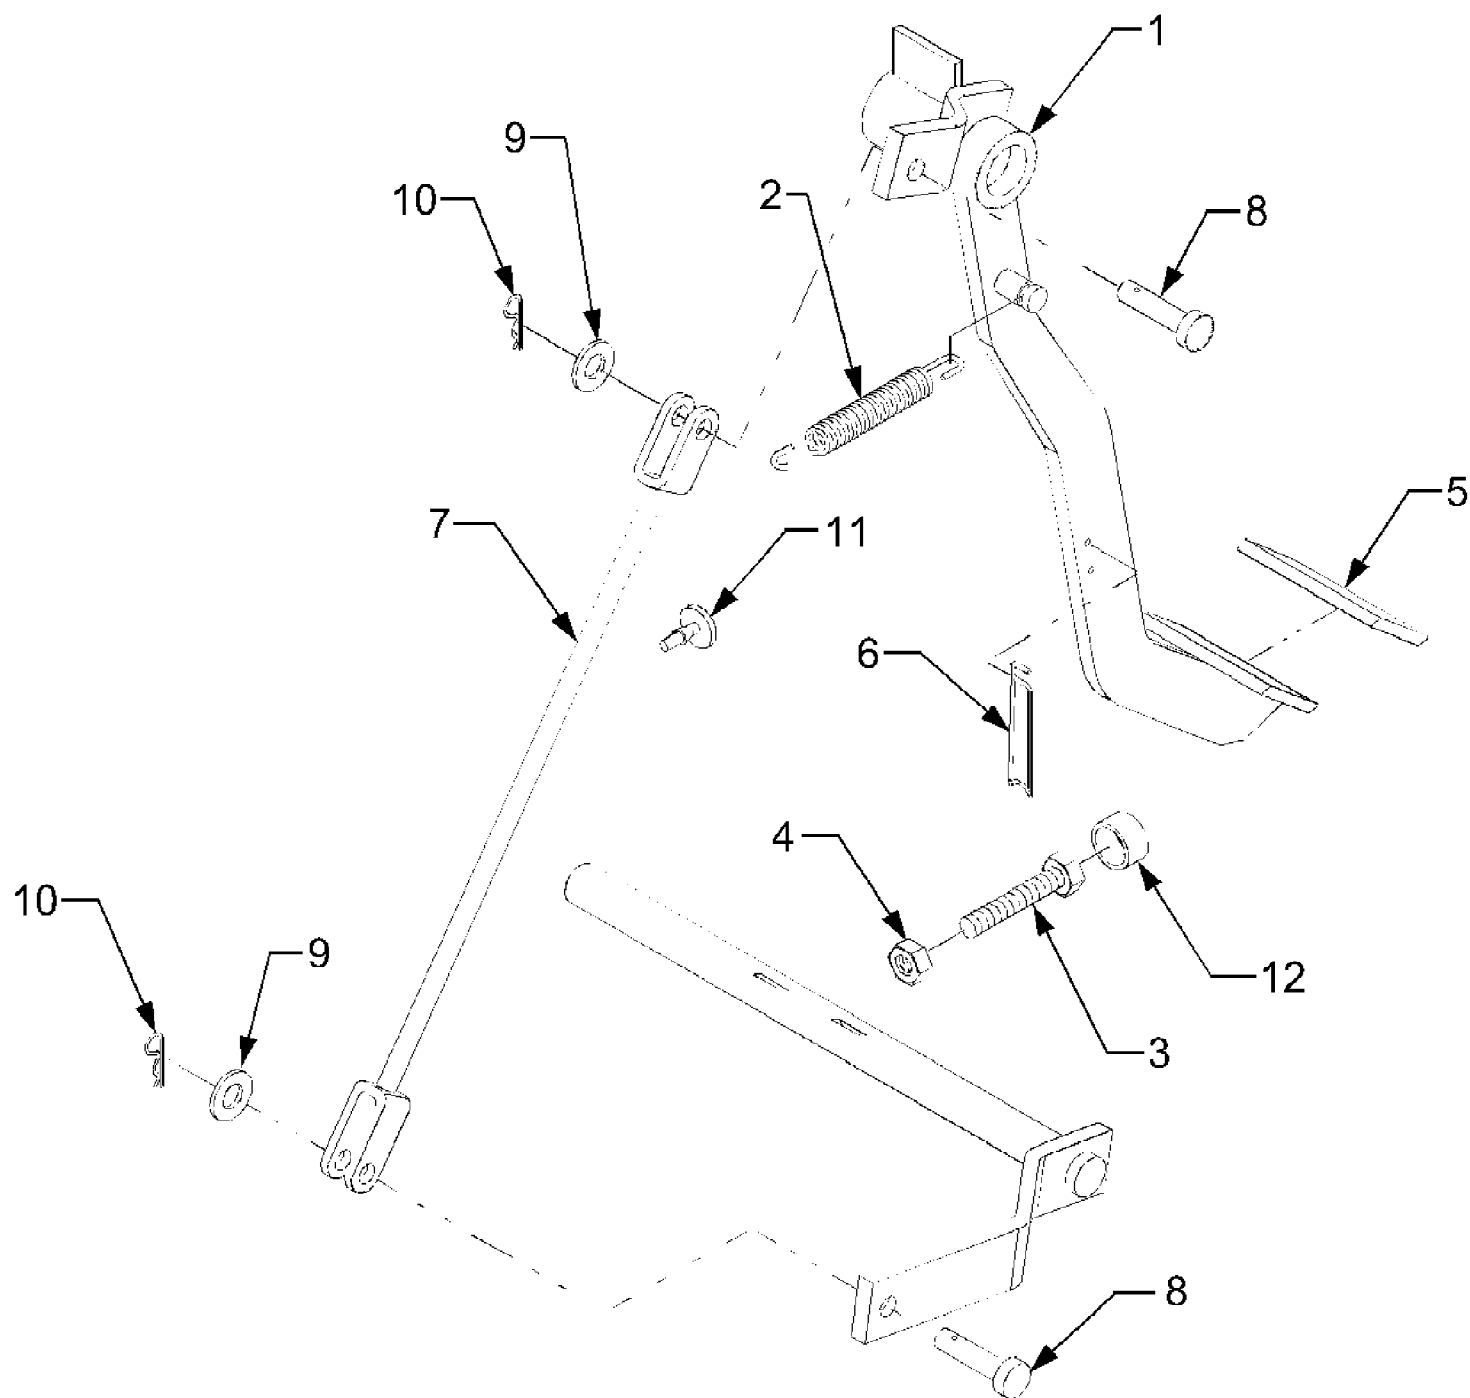 


8404 Tractor
Clutch Pedal Group

Page 36 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-55514	1		Pedal, Clutch
2	DD-T4520-26161	1		Spring, Brake
3	DD-01175-51050	1		Bolt
4	DD-02176-50100	1		Nut
5	DD-T2670-55531	1		Cover, Pedal
6	DD-T2610-55911	1		Spring
7	DD-T2610-55521	1		Rod, Clutch
8	DD-05122-51028	2		Pin, Joint
9	DD-04013-50100	2		Washer, Plain
10	DD-05515-51000	2		Pin, Snap
11	DD-T4520-26931	1		Cushion, Pedal
12	DD-T4620-55841	1		Cushion (Clutch)

8404 Tractor
Counter Shaft Group

 Page 37 of 200

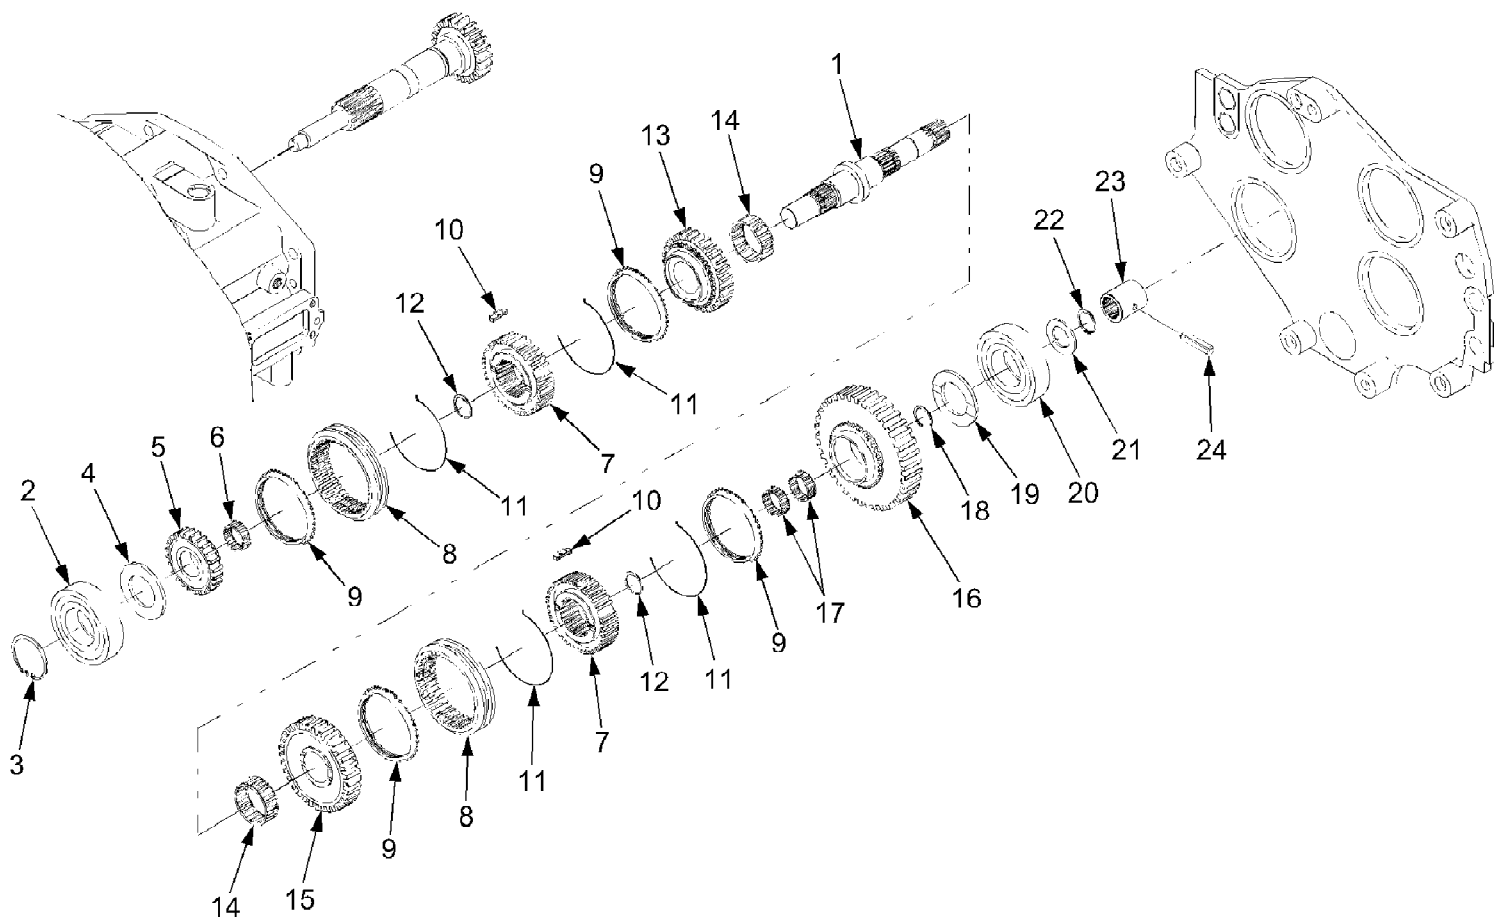


8404 Tractor
Counter Shaft Group

Page 38 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-21611	1		Shaft, Counter
2	DD-T2610-21621	1		Bearing, Ball
3	DD-04611-00250	1		Cir-clip
4	DD-T2305-21761	1		Collar, Thrust
5	DD-T2610-21713	1		Gear, 24
6	DD-08822-53020	1		Bearing, Needle
7	DD-T2610-21772	2		Hub, Synchro
8	DD-T2610-21753	2	S	Shifter
9	DD-T4240-21792	4		Ring, Synchronize
10	DD-T2610-21812	6		Key, Synchronize
11	DD-38360-21781	4		Spring
12	DD-T2610-14541	2		Cir-clip
13	DD-T2610-21722	1		Gear, 29
14	DD-08823-23727	2		Bearing, Needle
15	DD-T2610-21731	1		Gear, 33
16	DD-T2610-21742	1		Gear, 36
17	DD-08822-53013	2		Bearing, Needle
18	DD-37150-21791	1		Cir-clip
19	DD-37150-21761	1		Collar, Thrust
20	DD-08101-06305	1		Bearing, Ball
21	DD-34150-21561	1		Collar
22	DD-04612-00250	1		Cir-clip
23	DD-37805-44521	1		Coupling
24	DD-05411-00635	1		Pin, Spring

8404 Tractor
Crankshaft And Piston

 Page 39 of 200

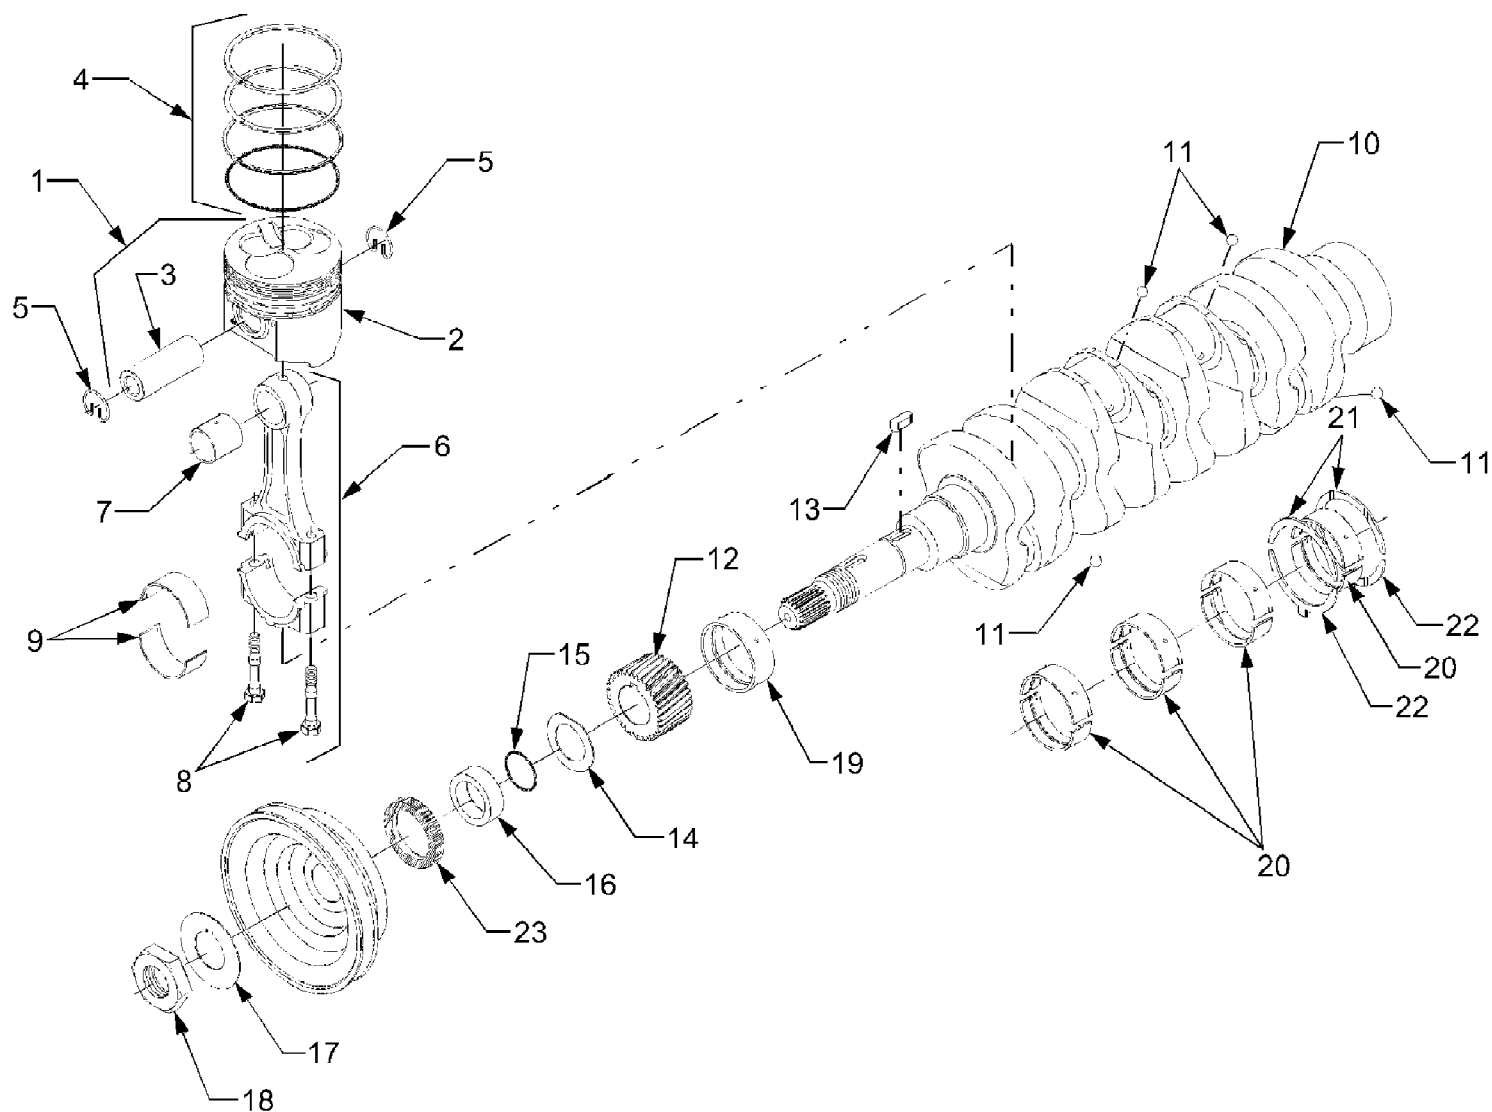


8404 Tractor
Crankshaft And Piston

Page 40 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6510-21015	4	/P	Piston Ass'y Includes Ref. Nos. 2 & 3
2	DD-E6510-21114	4		Piston
3	DD-E6300-21313	4		Pin, Piston
4	DD-E8100-21052	4		Piston Ring Ass'y
5	DD-E6300-21332	8		Cir-clip
6	DD-E6300-22025	4		Connecting Rod Ass'y Includes Ref. Nos. 7 thru 9
7	DD-E6300-21353	4		Bush, Piston Pin
8	DD-E5500-22142	8		Bolt, Connecting Rod
9	DD-E6300-22312	8		Metal, Crank Pin
10	DD-E5800-A0091	1	S	Crank Shaft Ass'y Includes Ref. No. 11
11	DD-06350-00607	4		Plug. Set
12	DD-E6200-24112	1		Gear, Crankshaft
13	DD-05712-00720	1		Key
14	DD-15471-23311	1		Slinger, Oil
15	DD-04811-10300	1		O-ring
16	DD-E6510-23251	1		Collar, Crankshaft
17	DD-15221-23381	1		Washer, Crankshaft
18	DD-15221-23361	1		Nut, Crankshaft
19	DD-E6200-23472	1		Metal, Crankshaft 1
20	DD-E6200-23482	8		Metal, Crankshaft 2
21	DD-15521-23531	2		Metal, Side 1
22	DD-19202-23541	2		Metal, Side 2
23	DD-E5500-11302	1		Seal, Oil

8404 Tractor
Cylinder Block

 
Page 41 of 200

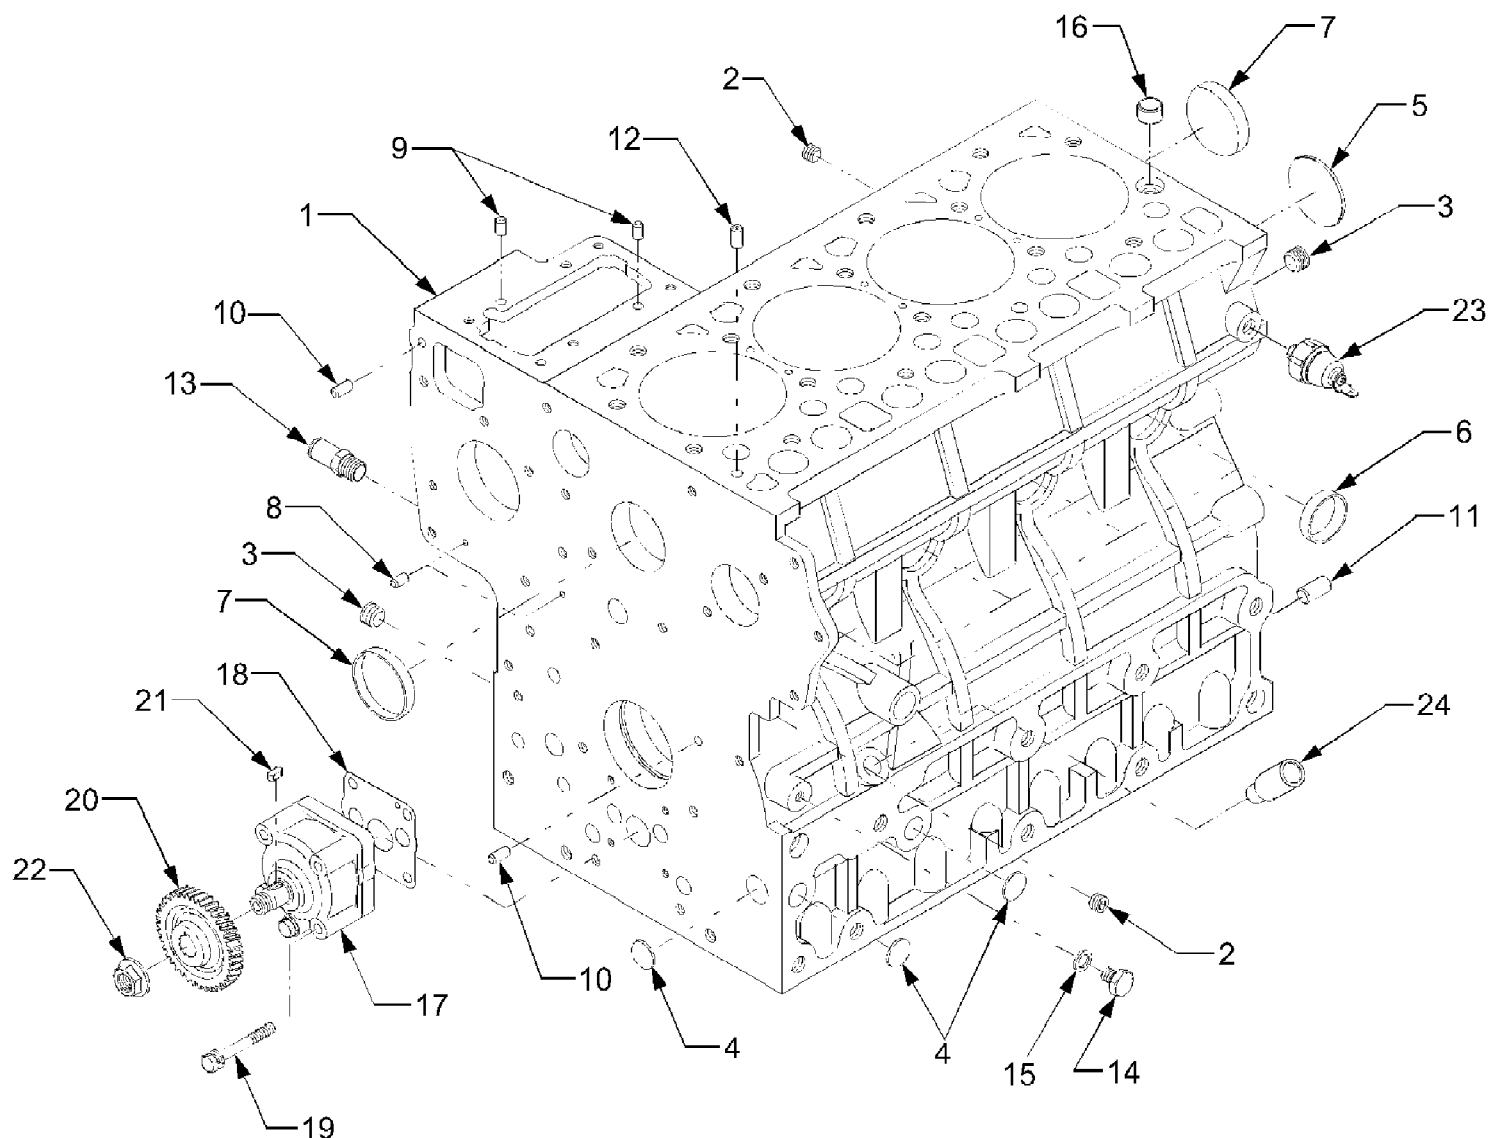

8404 Tractor
Cylinder Block

Page 42 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6510-A0014	1	S	Cylinder Block Ass'y Includes Ref Nos. 4 thru 7
2	DD-15521-96022	6		Plug
3	DD-15521-96032	2		Plug
4	DD-06311-75018	3		Plug
5	DD-06311-75045	1		Plug
6	DD-15221-03383	6		Cap, Sealing
7	DD-15221-03392	2		Cap, Sealing
8	DD-05012-00408	2		Pin, Straight
9	DD-05012-00609	2		Pin, Straight
10	DD-05012-00612	2		Pin, Straight
11	DD-05012-01018	1		Pin, Straight
12	DD-15221-33651	1		Pin, Pipe
13	DD-E5500-73342	1		Pipe, Return
14	DD-15221-33611	1		Plug
15	DD-15021-33661	1		Gasket
16	DD-E6301-33812	1		Pin, Pipe
17	DD-E6200-35012	1		Oil Pump Ass'y
18	DD-E5500-35152	1		Gasket, Oil Pump
19	DD-01023-50650	4		Bolt
20	DD-19202-35661	1		Gear, Oil Pump Drive
21	DD-05712-00410	1		Key, Feather
22	DD-E6300-35681	1		Nut, Flange
23	DD-E5500-39013	1		Switch, Oil
24	DD-E6300-35692	1		Guide, Oil Gauge

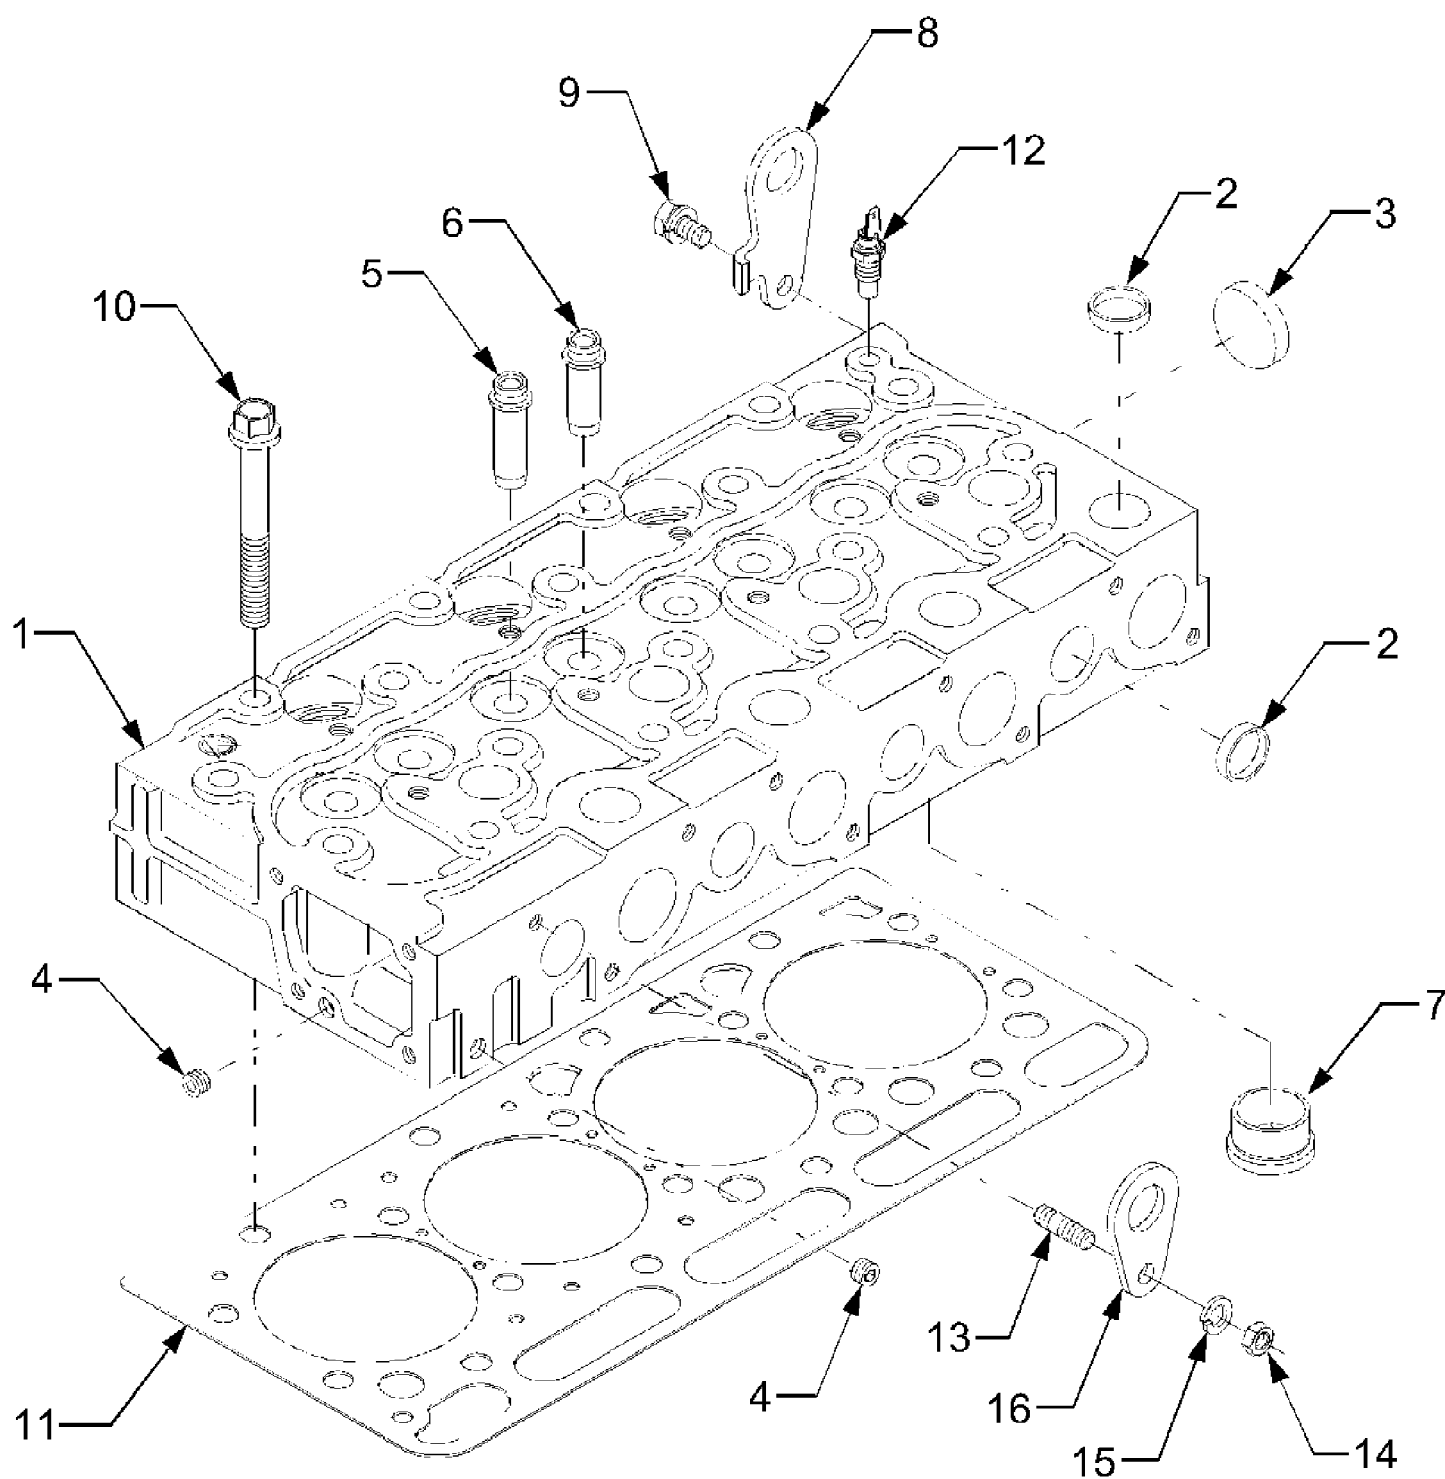 


8404 Tractor
Cylinder Head

Page 44 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6510-03045	1		Cylinder Head Ass'y Includes Ref. Nos. 2 thru 6
2	DD-15221-03373	12		Cap, Sealing
3	DD-15221-03493	1		Cap, Sealing
4	DD-15521-96022	2		Plug
5	DD-E6301-13581	4		Guide, Inlet Valve
6	DD-E6301-13561	4		Guide, Outlet Valve
7	DD-E6301-03148	4		Plug, Hot
8	DD-E6305-01751	1		Hook, Engine
9	DD-01123-50816	1		Bolt
10	DD-E6300-03453	18		Bolt, Cylinder Head
11	DD-E6500-03312	1	/P	Gasket, Cylinder Head
12	DD-E5800-32832	1		Switch, Thermostat
13	DD-01513-50822	1		Stud
14	DD-02156-50080	1		Nut
15	DD-04512-50080	1		Washer, Spring
16	DD-15221-01751	1		Hook, Engine

8404 Tractor
Cylinder Head Cover

 Page 45 of 200

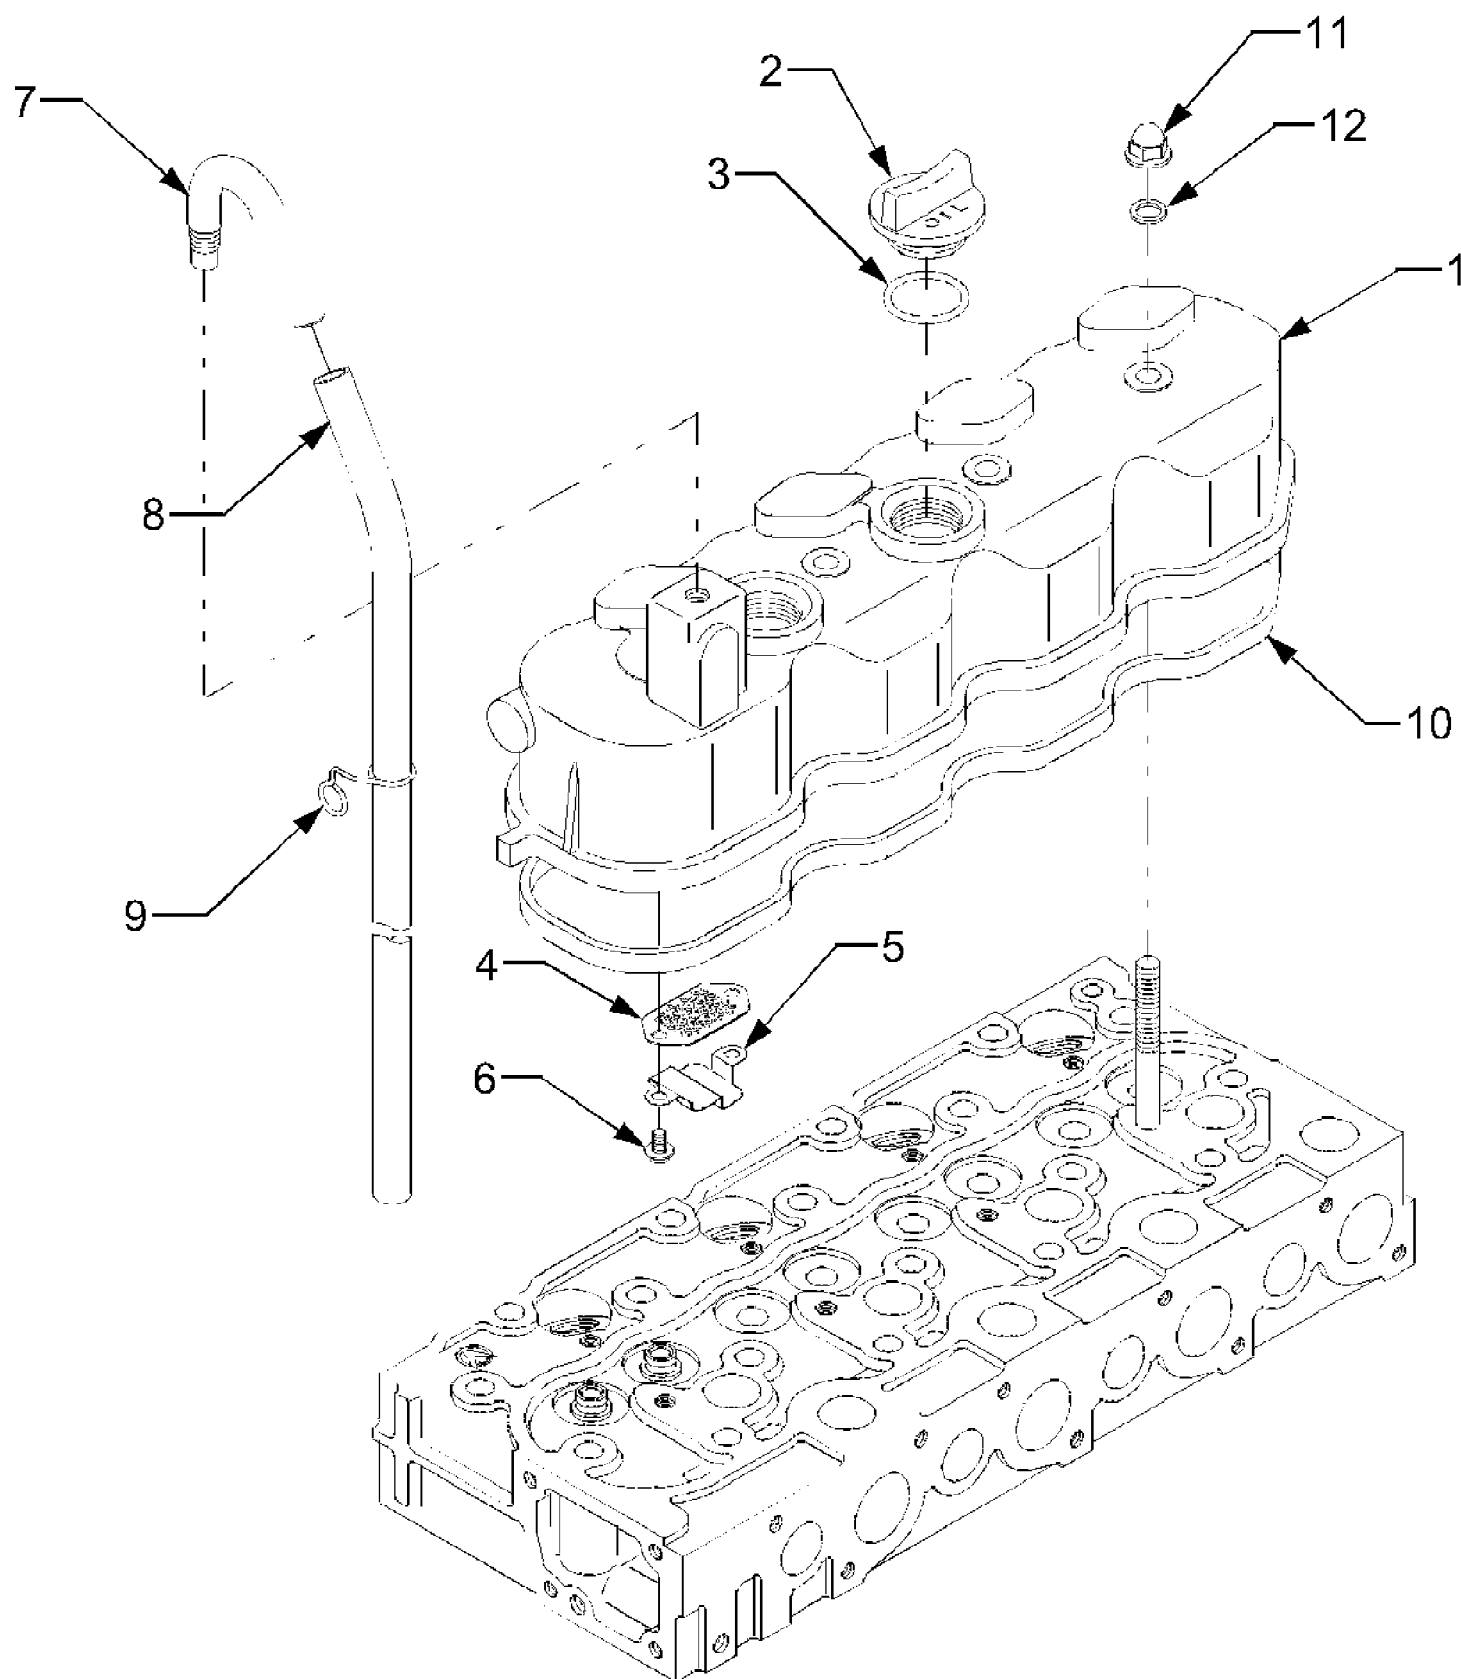


8404 Tractor
Cylinder Head Cover

Page 46 of 200

Ref #	Part Number	Qty	S/P/F	Description
	DD-E5800-A0025	1		Cover Head Ass'y Includes Ref. Nos. 1 thru 7 & 10
1	DD-E6301-14514	1		Cover, Cylinder Head
2	DD-E5500-33142	4		Plug, Oil Filler
3	DD-04811-50300	4		O-ring
4	DD-15521-05141	8		Plate, Element 1
5	DD-15521-05371	1		Shield, Breather Oil
6	DD-15521-93311	2		Screw
7	DD-E5205-05552	1		Joint, Breather Pipe
8	DD-15521-05511	1		Pipe, Breather
9	DD-15341-05591	1		Clamp, Pipe
10	DD-E6200-14523	1	/P	Gasket, Head Cover
11	DD-E6301-92332	4		Nut, Cap
12	DD-E6301-33661	4		Gasket

8404 Tractor
Differential Lock Fork Group

 Page 47 of 200

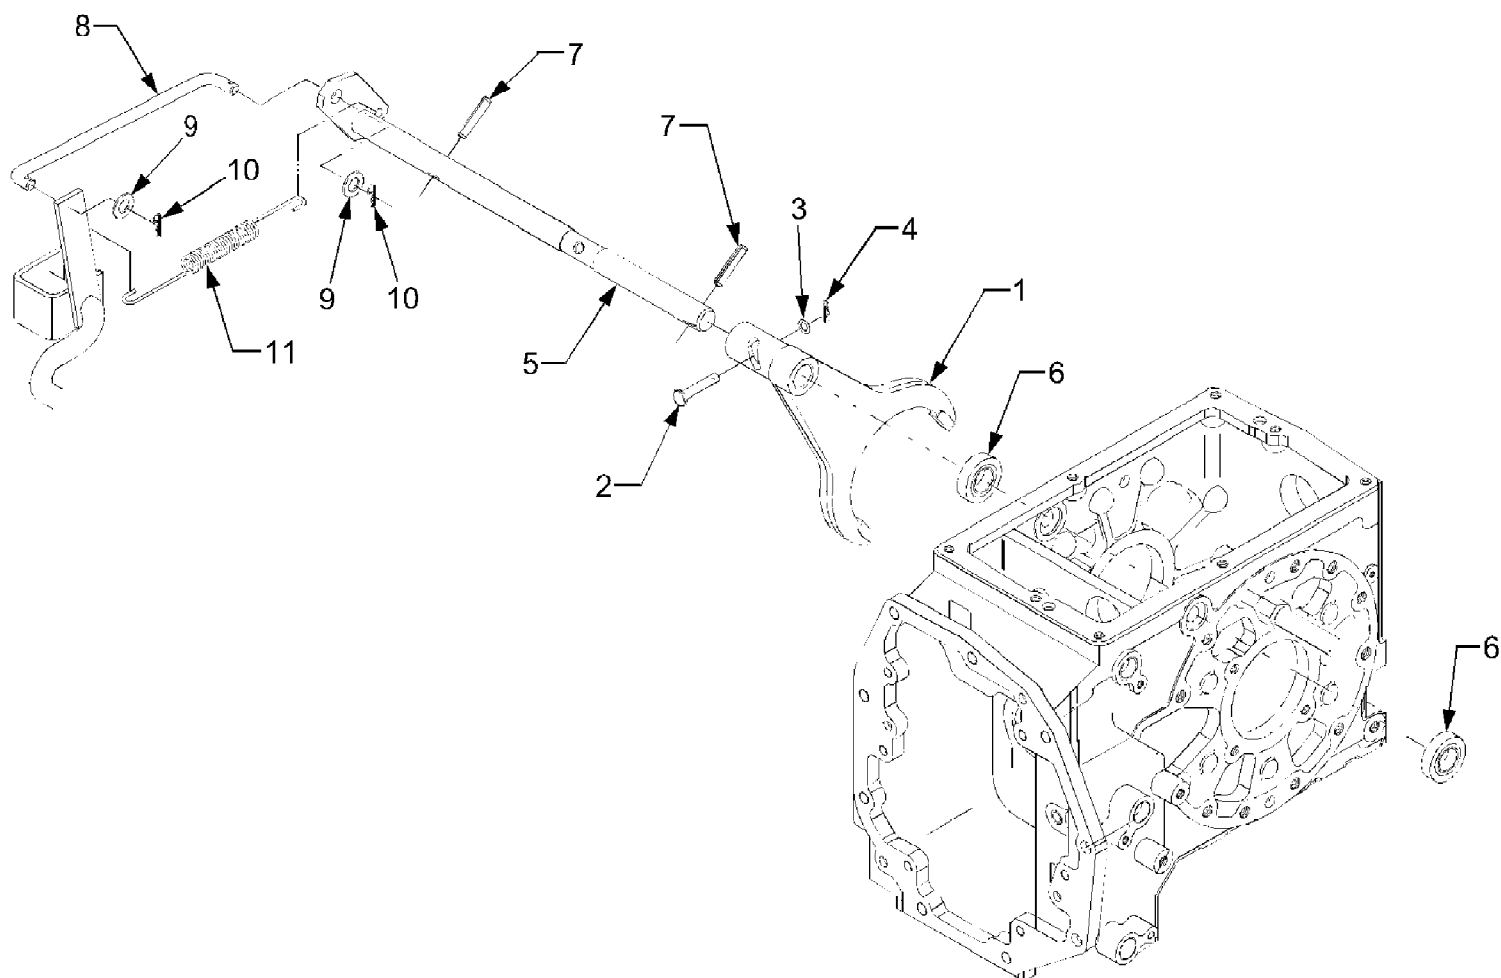


8404 Tractor
Differential Lock Fork Group

Page 48 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4240-26632	1		Fork, Differential Lock
2	DD-31355-26621	1		Pin
3	DD-04013-50060	1	/P	Washer, Plain
4	DD-52300-34111	1		Pin, Snap
5	DD-T2610-26682	1		Shaft, Differential Lock
6	DD-09500-16287	2		Seal, Oil
7	DD-05411-00635	2		Pin, Spring
8	DD-T2610-65013	1		Rod, Differential Lock
9	DD-04011-50100	2		Washer, Plain
10	DD-05525-51000	2		Pin, Snap
11	DD-T2305-26641	1		Spring

8404 Tractor
Dynamo And Cooling Fan

 
Page 49 of 200

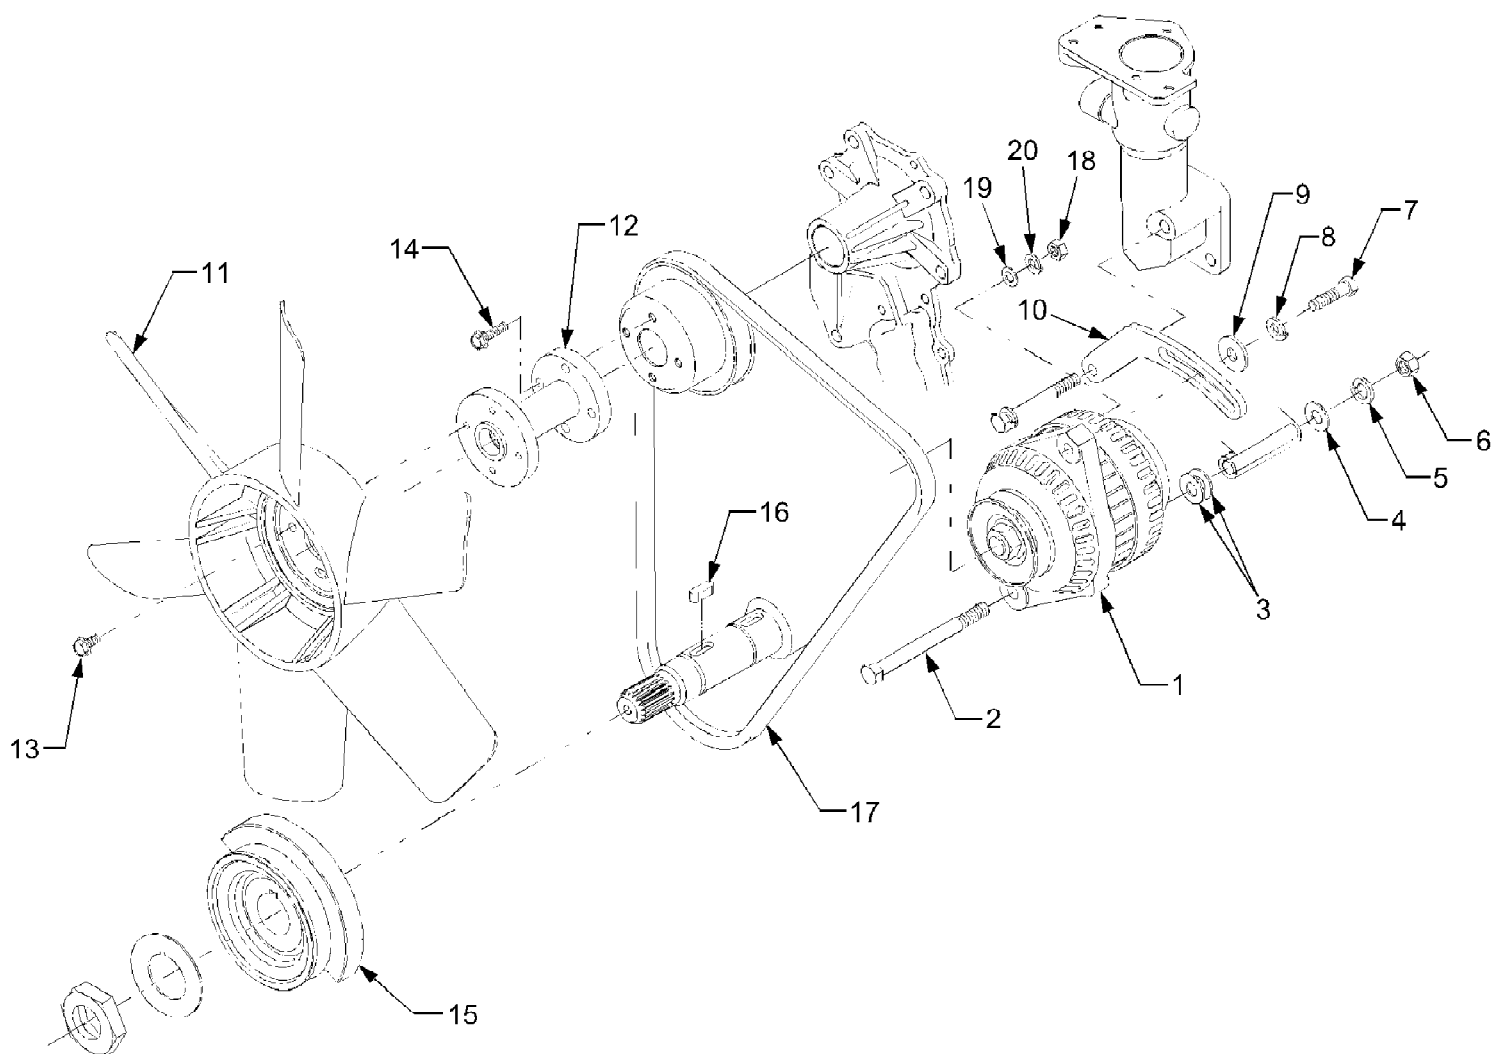

8404 Tractor
Dynamo And Cooling Fan

Page 50 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6306-64011	1		Alternator Ass'y
2	DD-01153-50803	1		Bolt
3	DD-E5620-64101	1		Washer, Plain
4	DD-04013-50080	1		Washer, Plain
5	DD-04512-50080	1		Washer, Spring
6	DD-02114-50080	1		Nut
7	DD-01123-50832	1		Bolt
8	DD-04512-50080	1		Washer, Spring
9	DD-04015-50080	1		Washer, Plain
10	DD-E5800-64422	1		Stay, Alternator
11	DD-E6500-74111	1		Fan, Cooling
12	DD-E5800-74154	1		Collar, Fan
13	DD-01754-50612	4		Bolt, Flange
14	DD-01754-50622	4		Bolt, Flange
15	DD-E6306-74282	1		Pulley, Fan Drive
16	DD-05712-00720	1		Key
17	DD-E6305-72531	1	S	Belt, Fan
18	DD-02054-50050	1		Nut
19	DD-04012-50050	1		Washer, Plain
20	DD-04512-50050	1		Washer, Spring

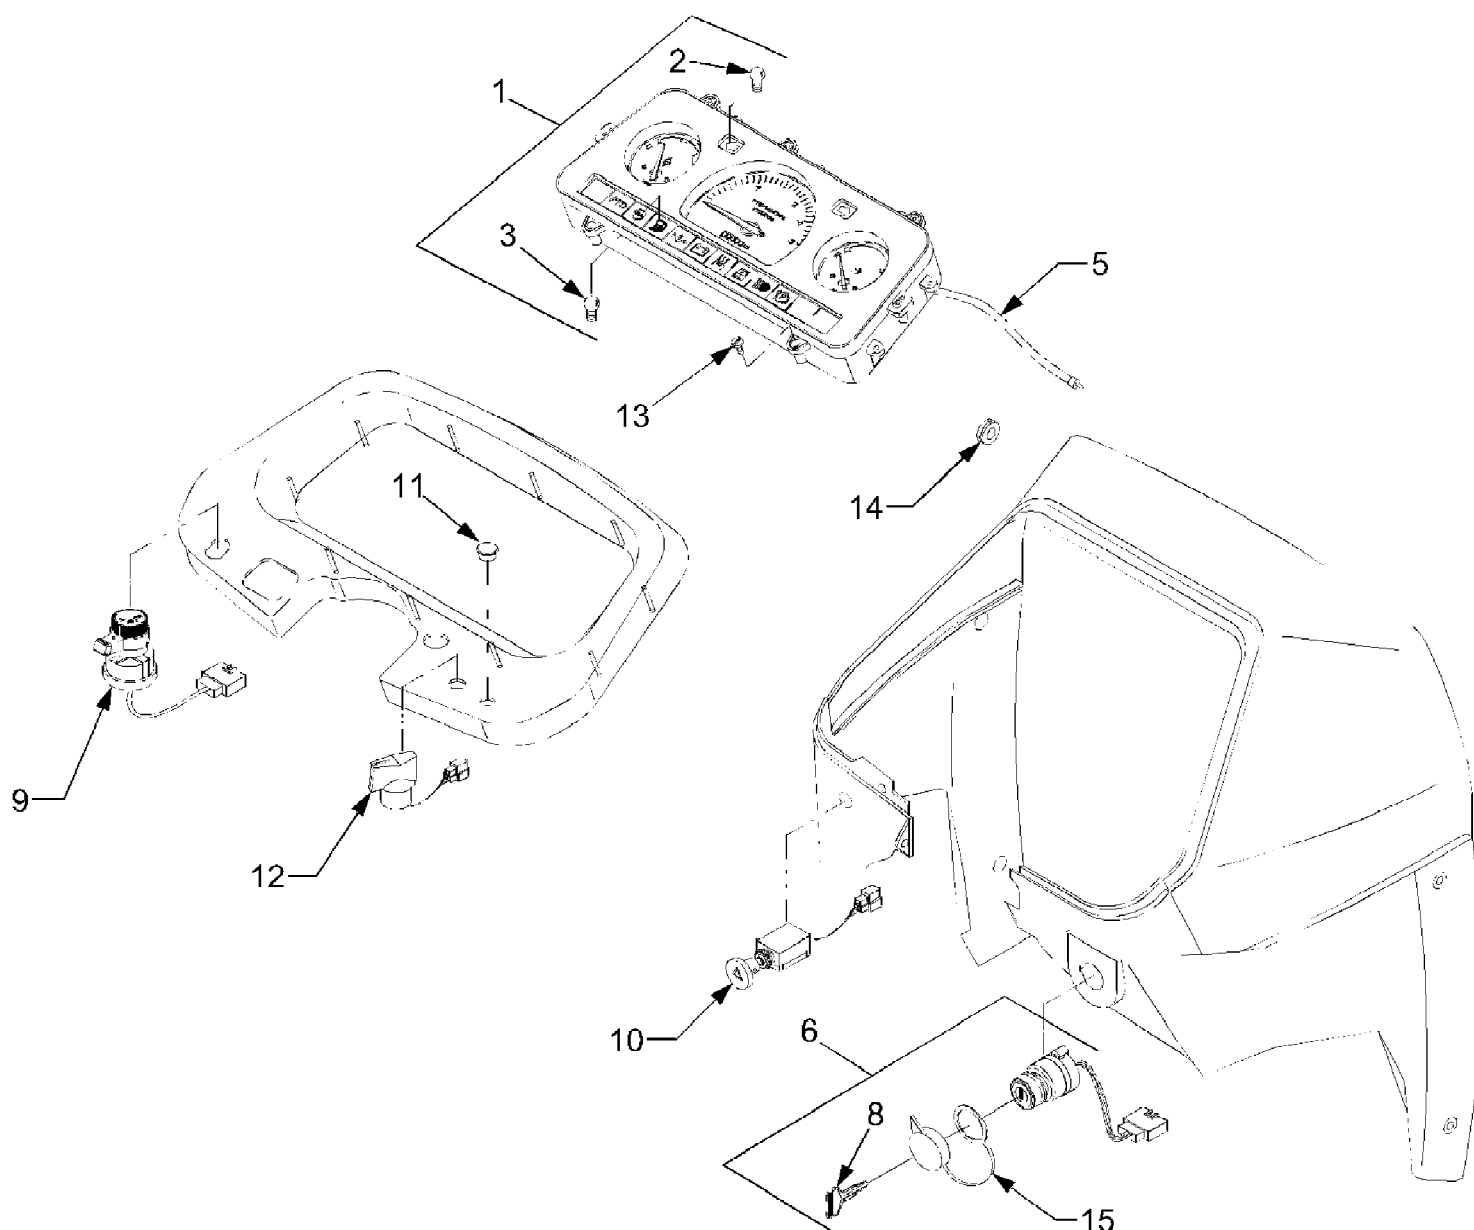 


8404 Tractor
Electrical System 1

Page 52 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4620-69014	1		Instrument Meter Ass'y Includes Ref. Nos. 2 & 3
2	DD-T4620-69301	5		Bulb
3	DD-T4620-69311	13		Bulb
5	DD-38430-34651	1		Cable, Instrument Meter
6	DD-T4520-75174	1		Starter Switch Ass'y Includes Ref. No. 7
8	DD-T2616-75191	2		Key
9	DD-T4620-69024	1		Combination Switch Ass'y
10	DD-T4520-76552	1		Hazard Switch Ass'y
11	DD-T4625-29291	1		Plug
12	DD-T4810-67721	1		Switch, PTO
13	DD-38240-18831	10		Screw
14	DD-31355-29491	1		Grommet
15	DD-T4837-77772	1		Cover, Starter Switch

8404 Tractor
Electrical System 2

 
Page 53 of 200

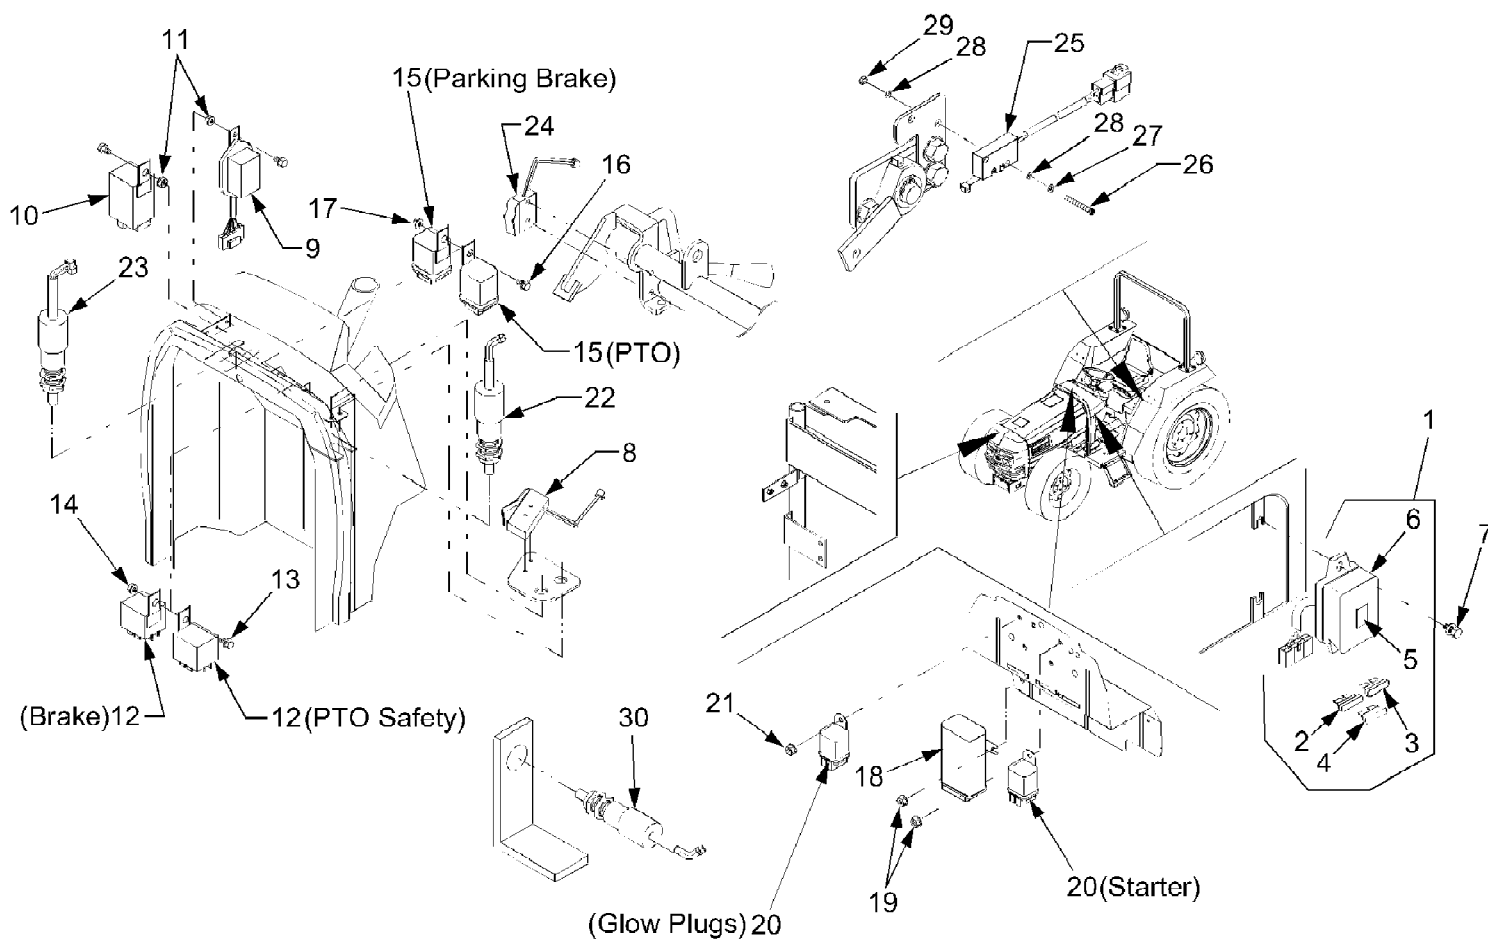

8404 Tractor
Electrical System 2

Page 54 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4625-69102	1	S	Fuse Box Ass'y Includes Ref. Nos. 2 thru 6
2	DD-36919-56661	2		Fuse (25a)
3	DD-36919-56650	3		Fuse (20a)
4	DD-T4260-33631	9		Fuse (10a)
5	DD-T4625-69281	1		Label
6	DD-52300-41664	1		Cover
7	DD-01023-50620	2		Bolt
8	DD-44512-83172	1		Switch, Micro
9	DD-T4340-60242	1		Relay, Timer
10	DD-T4240-31052	1		Unit, Flasher
11	DD-02751-50060	2		Nut, Flange
12	DD-T4620-69041	2		Relay(5p)
13	DD-01754-50616	1		Bolt, Flange
14	DD-02751-50060	1		Nut, Flange
15	DD-T4520-75031	2		Relay
16	DD-01754-50616	1		Bolt, Flange
17	DD-02751-50060	1		Nut, Flange
18	DD-T4620-69054	1	/P	Controller, Preheater
19	DD-02751-50060	3		Nut, Flange
20	DD-C5510-43101	2	/P	Relay
21	DD-02751-50060	2		Nut, Flange
22	DD-T4520-75481	1		Switch, Safety Starter
23	DD-T4520-41821	1		Stop Switch Ass'y
24	DD-44512-68813	1		Switch, Micro
25	DD-T4810-69251	1		Switch, Micro
26	DD-03054-50316	2		Screw
27	DD-04012-50030	2		Washer, Plain
28	DD-04512-50030	2		Washer, Spring
29	DD-02054-50030	2		Nut
30	DD-C7810-43211	1		Safety Starter Ass'y

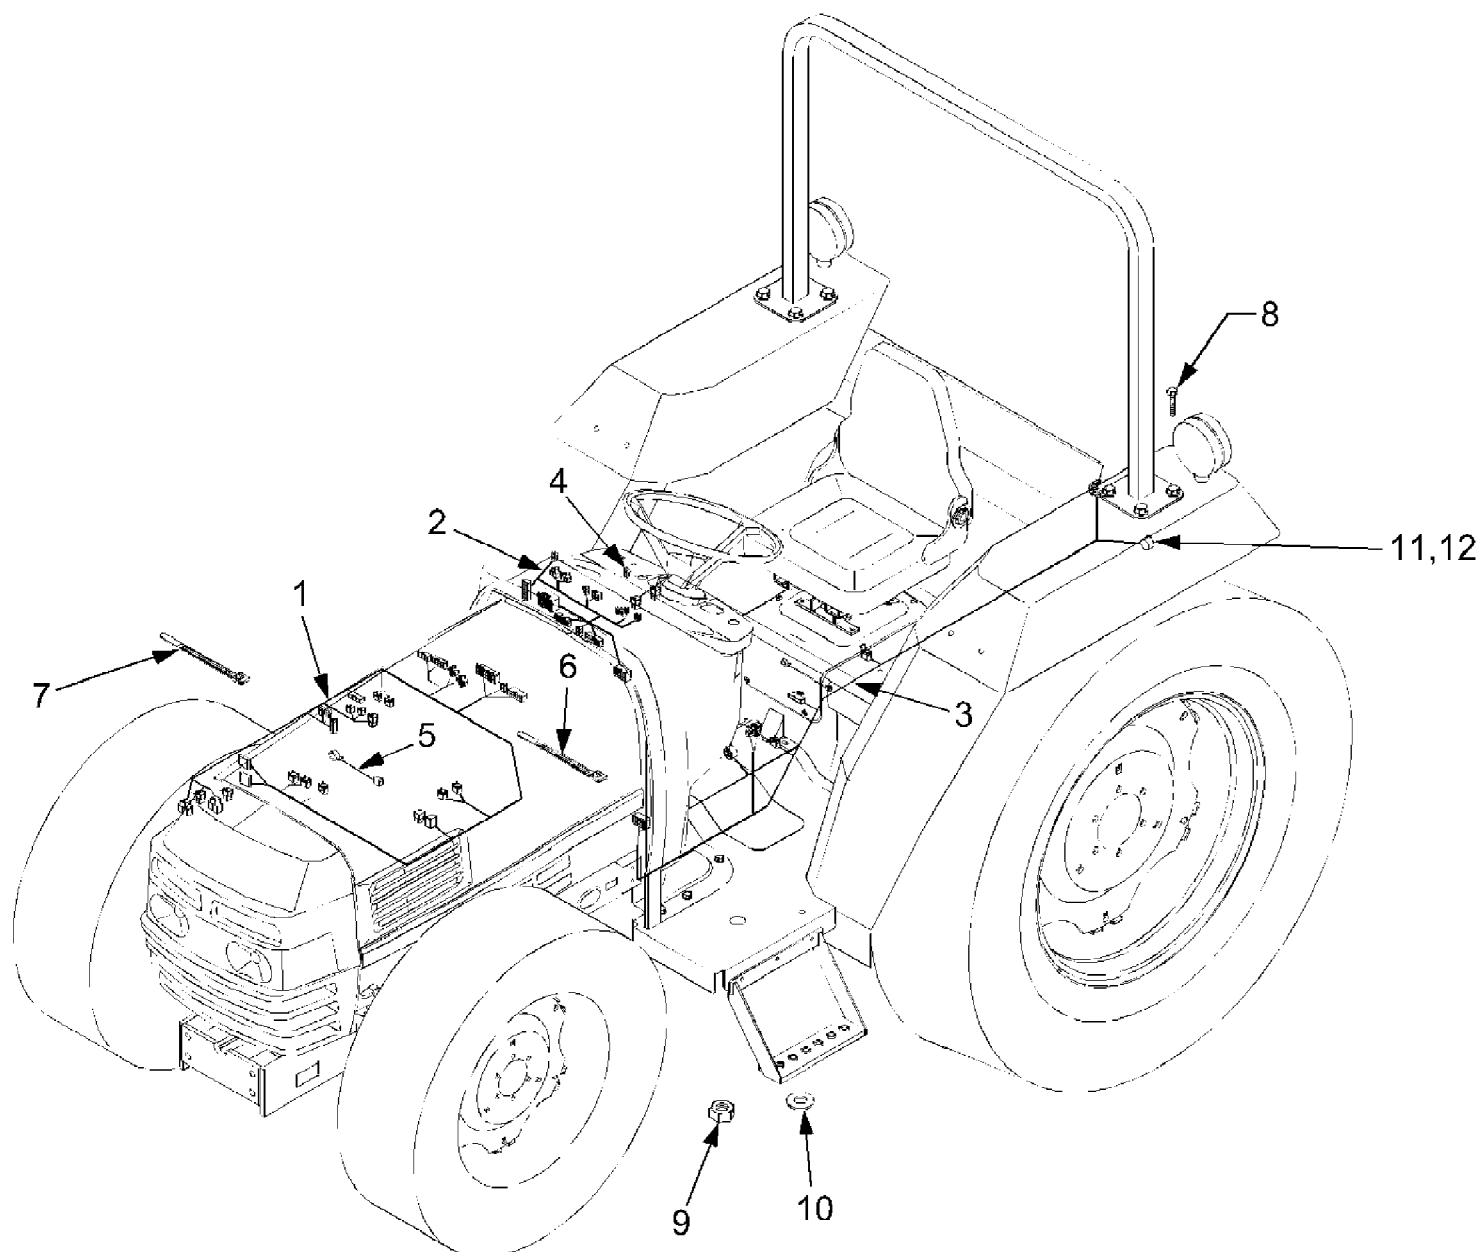 


8404 Tractor
Electrical System 3

Page 56 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-69382	1	/P	Bonnet Wire Harness Ass'y
	DD-52794-42421	1		Fuse(60a)
2	DD-T2615-69424	1	/P	Panel Wire Harness Ass'y
	DD-T4620-69491	1		Diode
3	DD-T2625-69442	1	S	Fender Wire Harness Ass'y
	DD-T4620-69331	1		Diode
4	DD-T4620-69462	2	/P	Wire Harness 2
5	DD-T4620-69471	1		Wire Harness 3
6	DD-T4520-82561	6		Band
7	DD-T4520-82551	11		Band
8	DD-03024-50510	1		Screw
9	DD-02054-50050	1		Nut
10	DD-04512-50050	1		Washer, Spring
11	DD-T4625-69462	1	/P	Wire, Connection(LH)
12	DD-T4625-69472	1	/P	Wire, Connection(RH)

8404 Tractor
Engine Stop Lever

 Page 57 of 200

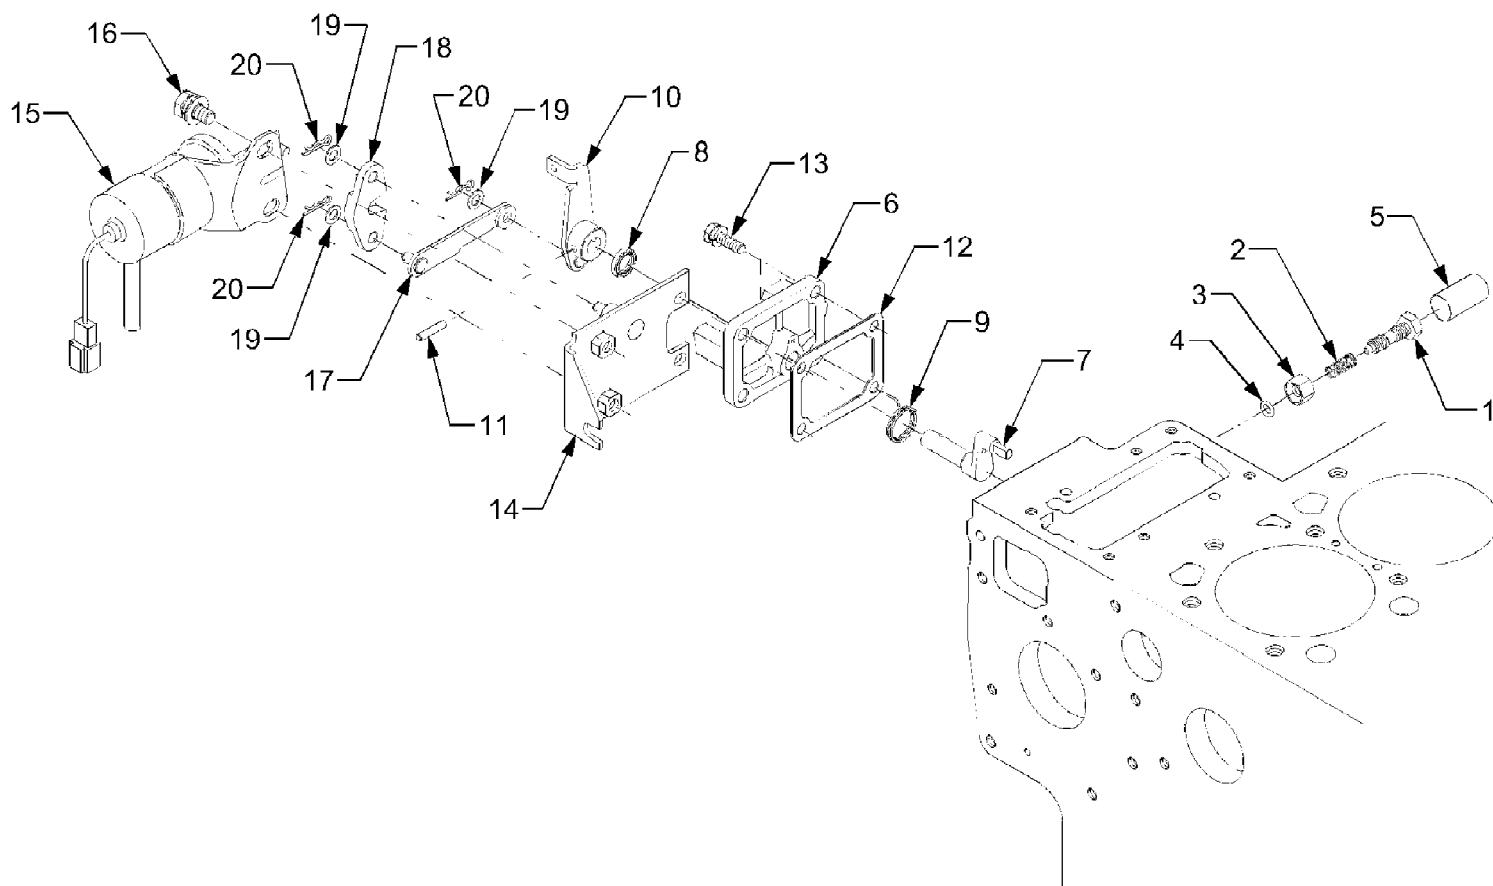


8404 Tractor
Engine Stop Lever

Page 58 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6200-54252	1		Bolt, Adjusting
2	DD-15521-54261	1		Spring
3	DD-15471-92011	1		Nut
4	DD-04811-00060	1		O-ring
5	DD-15521-54271	1		Cap
6	DD-E6200-51654	1		Cover, Injection Pump
7	DD-E6300-57743	1		Shaft, Lever
8	DD-15471-57981	1		Seal, Oil
9	DD-E6200-57922	1		Spring
10	DD-E6200-57731	1		Lever, Engine Stop
11	DD-05411-00420	1		Pin, Spring
12	DD-15221-51661	1		Gasket
13	DD-01023-50620	4		Bolt
14	DD-E5800-60111	1		Support, Solenoid
15	DD-E5753-60013	1		Solenoid, Engine Stop
16	DD-01125-50816	2		Bolt
17	DD-T4240-62642	1		Lever 1, Stop
18	DD-15471-60162	1		Lever 2, Stop
19	DD-04012-50060	3		Washer, Plain
20	DD-05525-50600	3		Pin, Snap

8404 Tractor
External Hydraulic Valve 1 Group

 Page 59 of 200

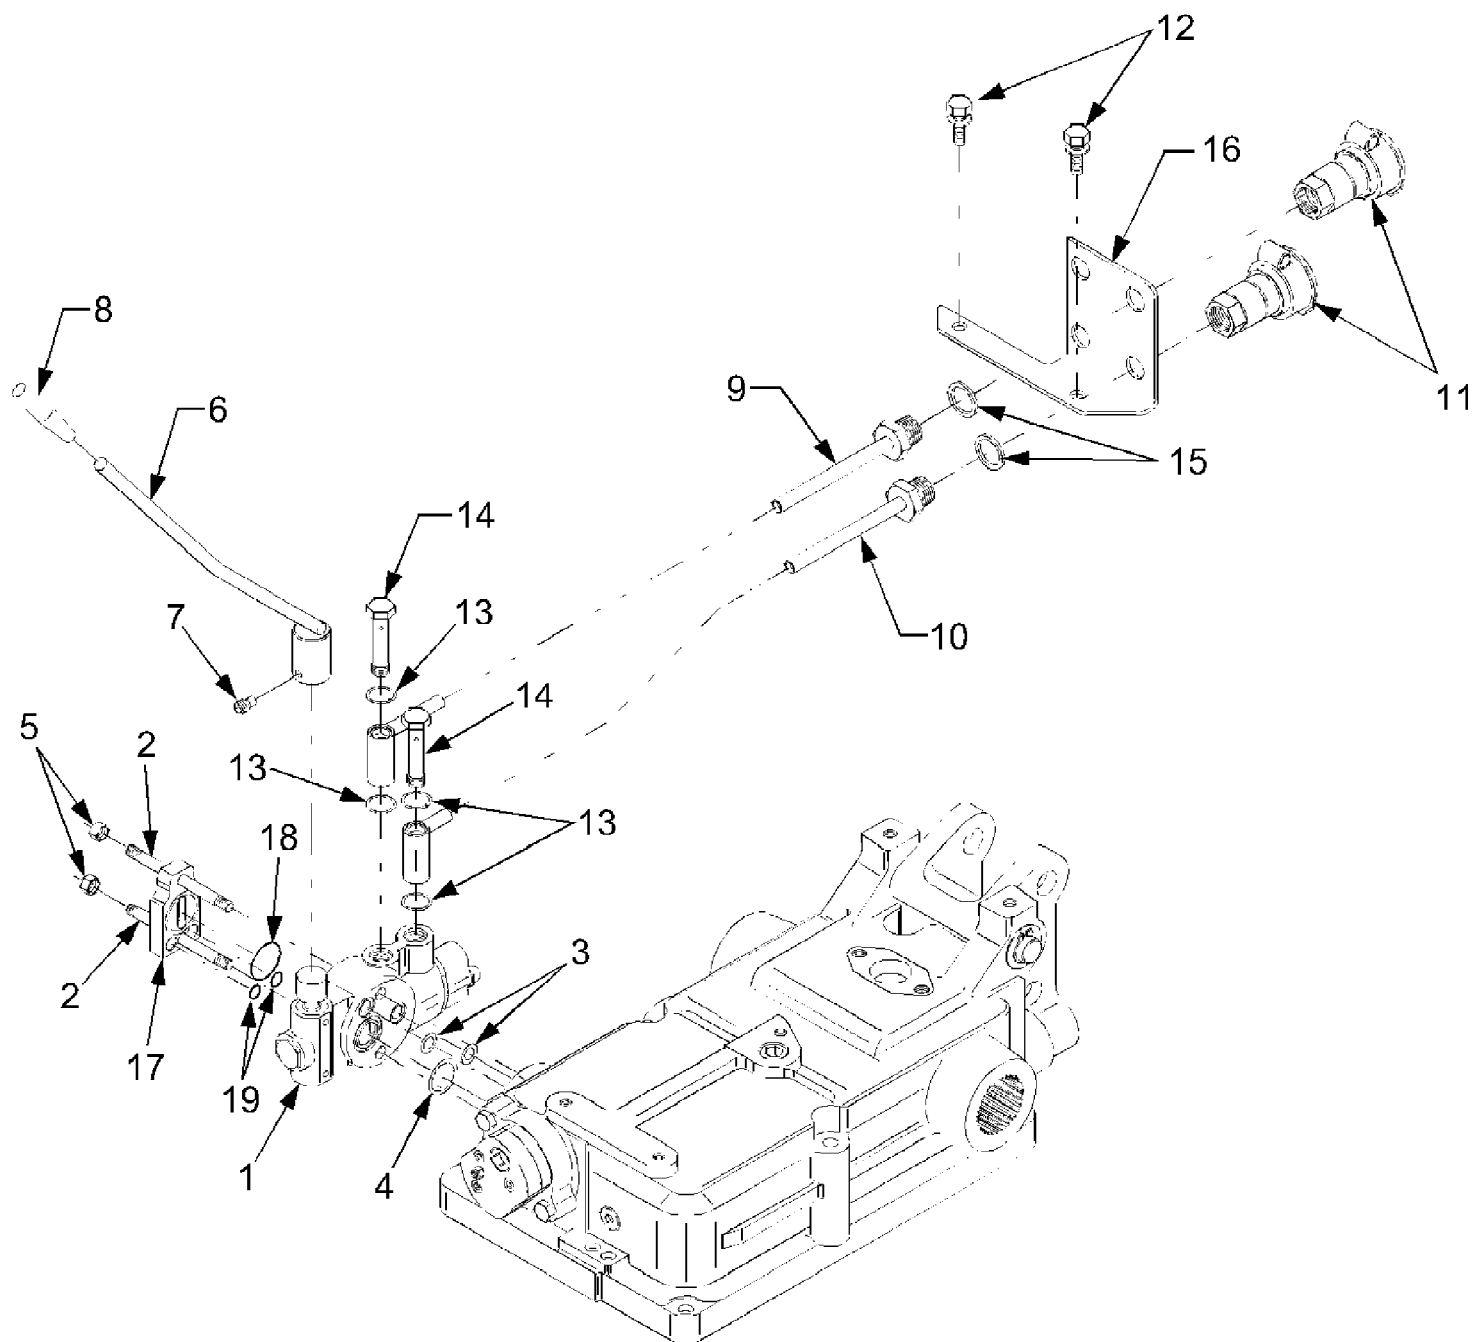


8404 Tractor
External Hydraulic Valve 1 Group

Page 60 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-39031	1		Double Acting Valve (Detent)
2	DD-T2610-37862	2		Stud
3	DD-04810-00120	2		O-ring
4	DD-04811-06250	1		O-ring
5	DD-41182-51511	2		Nut
6	DD-T2630-65254	1		Lever 3, Double Acting
7	DD-T2610-39572	1		Screw, Set
8	DD-76KP-1737-1	1		Grip, Lever
9	DD-T2615-90011	1		Pipe A, Hydraulic
10	DD-T2615-90021	1		Pipe B, Hydraulic
11	DD-T4520-90093	2		Coupler Socket Ass'y
12	DD-01133-51018	2		Bolt
13	DD-04811-00200	4		O-ring
14	DD-T4520-37372	2		Bolt 2, Joint
15	DD-04717-02150	2		Washer, Seal
16	DD-T2615-90071	1		Bracket, Sooket
17	DD-T2610-37482	1		Cover
18	DD-04811-10380	1		O-ring
19	DD-04811-00100	2		O-ring

8404 Tractor
Fender Group

 Page 61 of 200

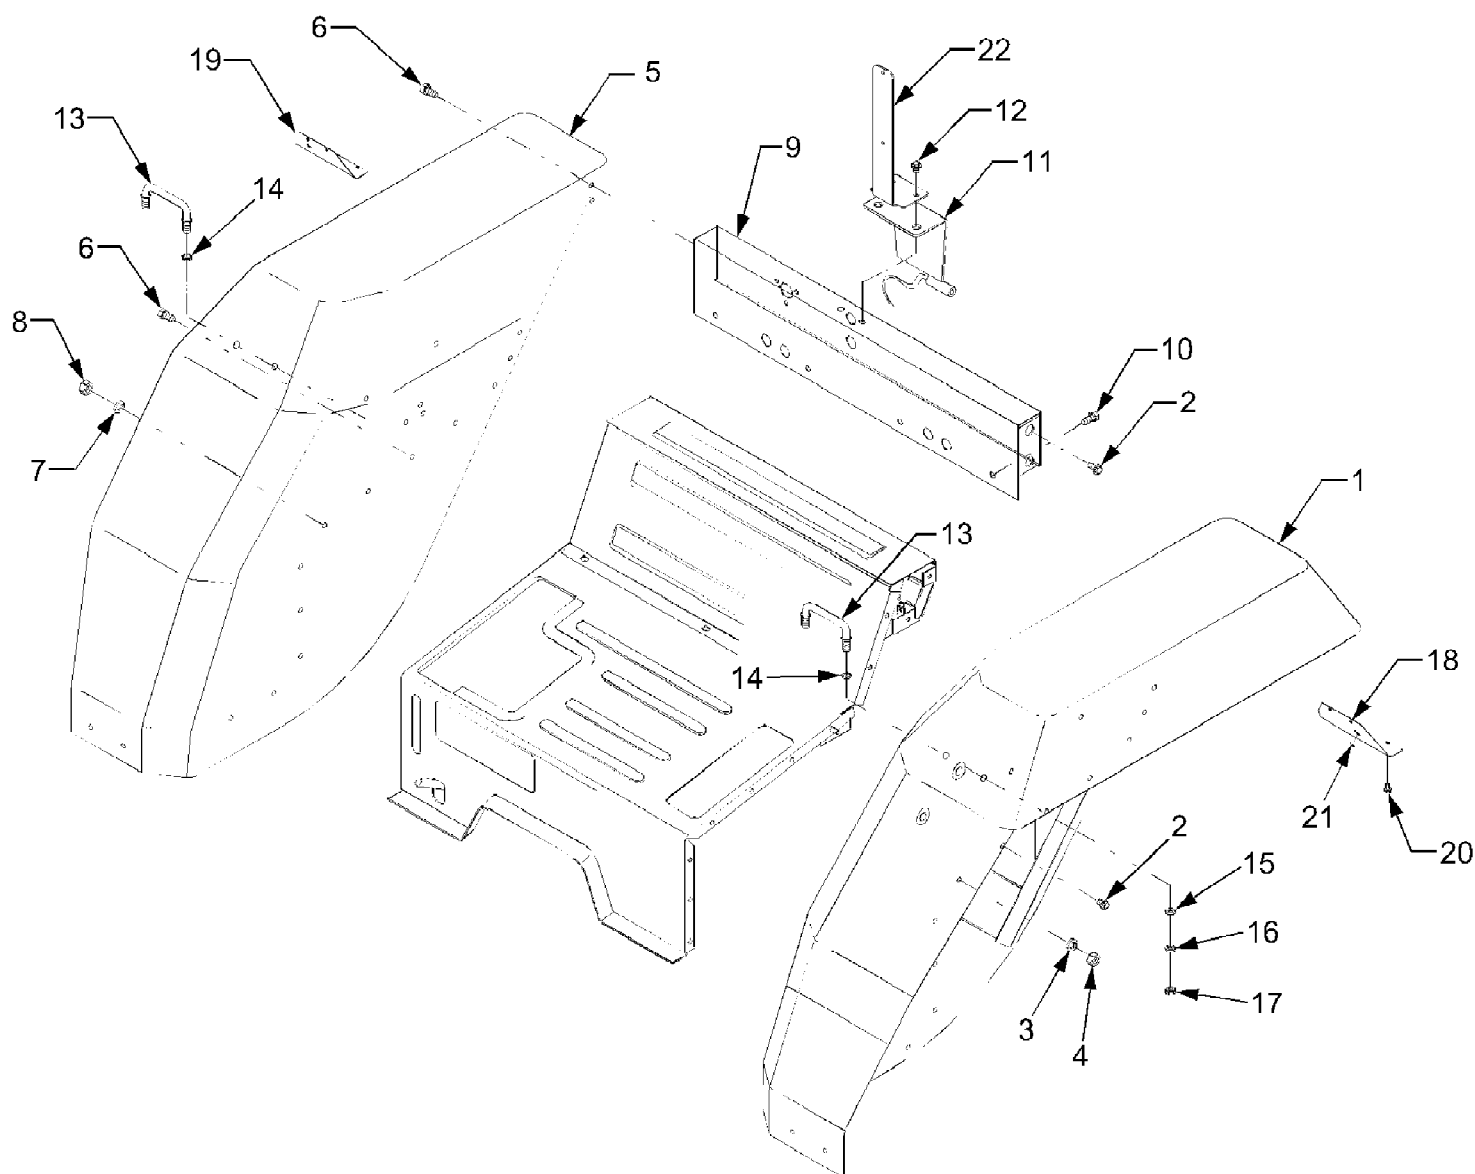


8404 Tractor
Fender Group

Page 62 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DDT261095012YW	1		Fender (LH) Ass'y
2	DD-01125-50820	19		Bolt
3	DD-04512-50080	2		Washer, Spring
4	DD-02156-50080	2		Nut
5	DDT261095024YW	1		Fender (RH) Ass'y
6	DD-01125-50820	19		Bolt
7	DD-04512-50080	2		Washer, Spring
8	DD-02156-50080	2		Nut
9	DDT261595251YW	1	/P	Support, Fender
10	DD-01754-50816	4		Bolt, Flange
11	DDT261029421YW	1		Hook, Top Link
12	DD-01754-50816	2		Bolt, Flange
13	DD-T4240-29173	2	/P	Grip
14	DD-32260-29182	4		Cushion
15	DD-04013-50140	4		Washer, Plain
16	DD-04512-50140	4		Washer, Spring
17	DD-02174-50140	4		Nut
18	DDT462075112YW	1		Cover(LH)
19	DDT462075122YW	1		Cover(RH)
20	DD-01025-50616	8		Bolt
21	DD-T4620-90251	2		Grommet
22	DD-T2615-95261	1		Bracket

8404 Tractor
Flywheel And Starter Motor

 Page 63 of 200

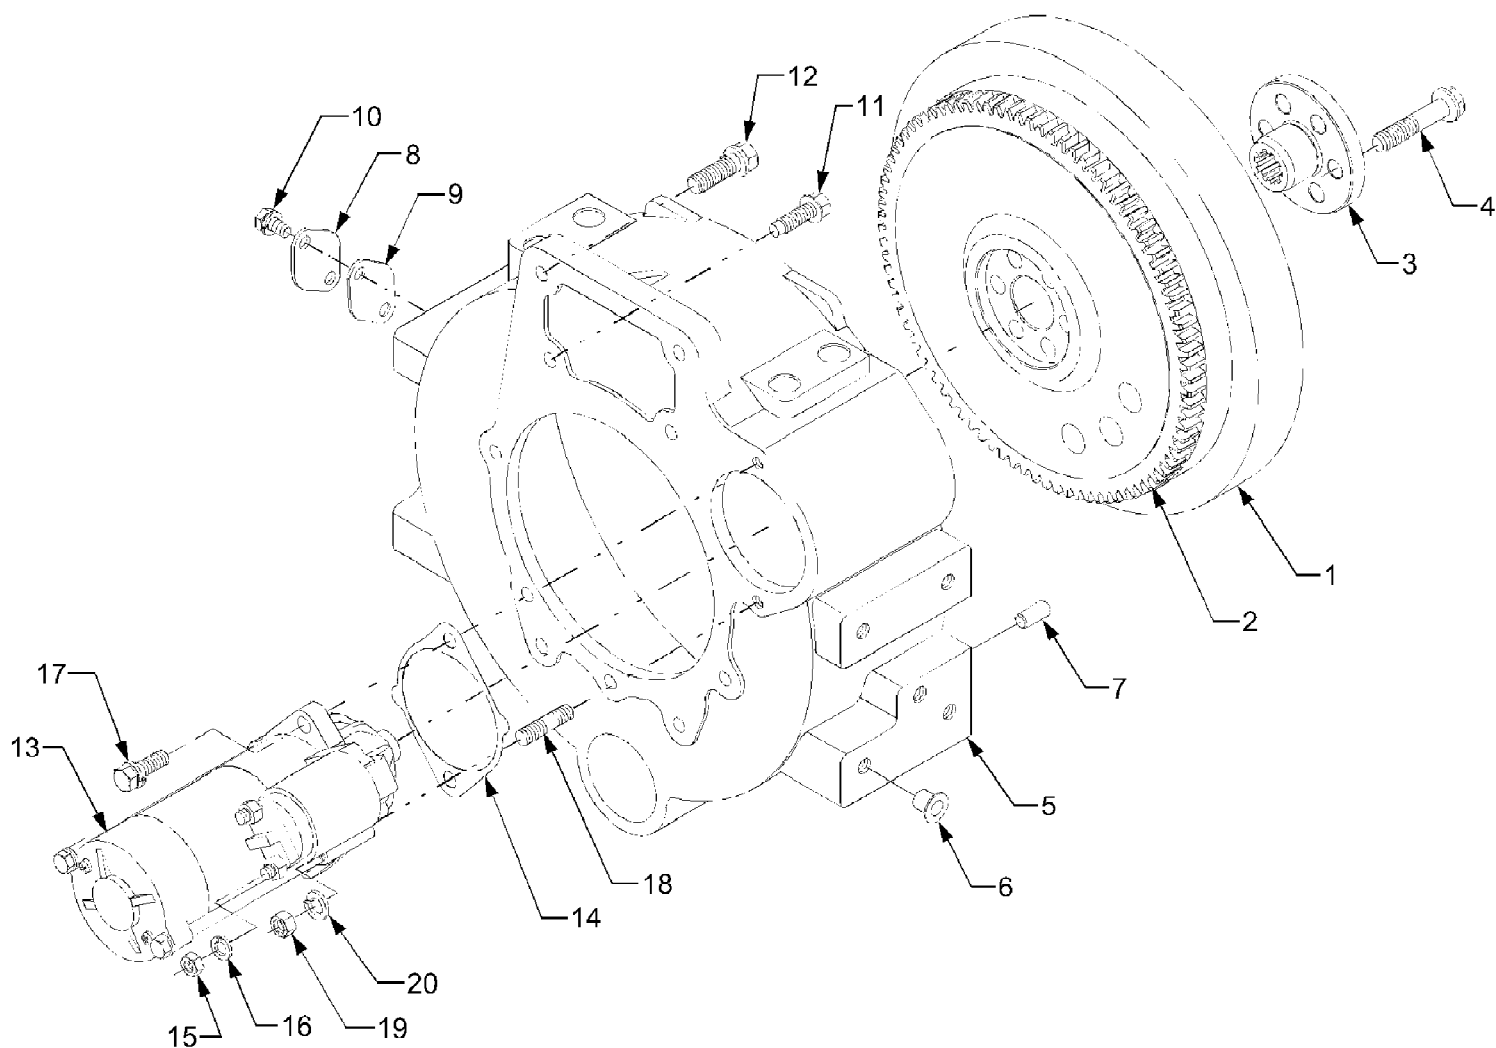


8404 Tractor
Flywheel And Starter Motor

Page 64 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6531-25012	1	S	Flywheel Ass'y Includes Ref. No. 2
2	DD-15221-63824	1		Gear, Ring
3	DD-E5800-25182	1		Hub, Spline
4	DD-E5800-25161	6		Bolt, Flywheel
5	DD-E6305-04616	1		Housing, Flywheel
6	DD-31220-14293	10		Plug
7	DD-05012-01020	2		Pin, Straight
8	DD-15521-04682	1		Cover, Timing Mark
9	DD-15521-04792	1		Gasket, Cover
10	DD-01123-50816	2		Bolt
11	DD-01674-51032	11		Bolt, Flange
12	DD-01133-51240	2		Bolt
13	DD-E6530-63012	1		Starter Motor Ass'y
14	DD-E6200-04622	1		Gasket
15	DD-02114-50080	1		Nut
16	DD-04512-50080	1		Washer, Spring
17	DD-01133-51030	1		Bolt
18	DD-01517-51028	1		Stud
19	DD-02176-50100	1		Nut
20	DD-04512-50100	1		Washer, Spring

8404 Tractor
Front Axle Bracket

 Page 65 of 200

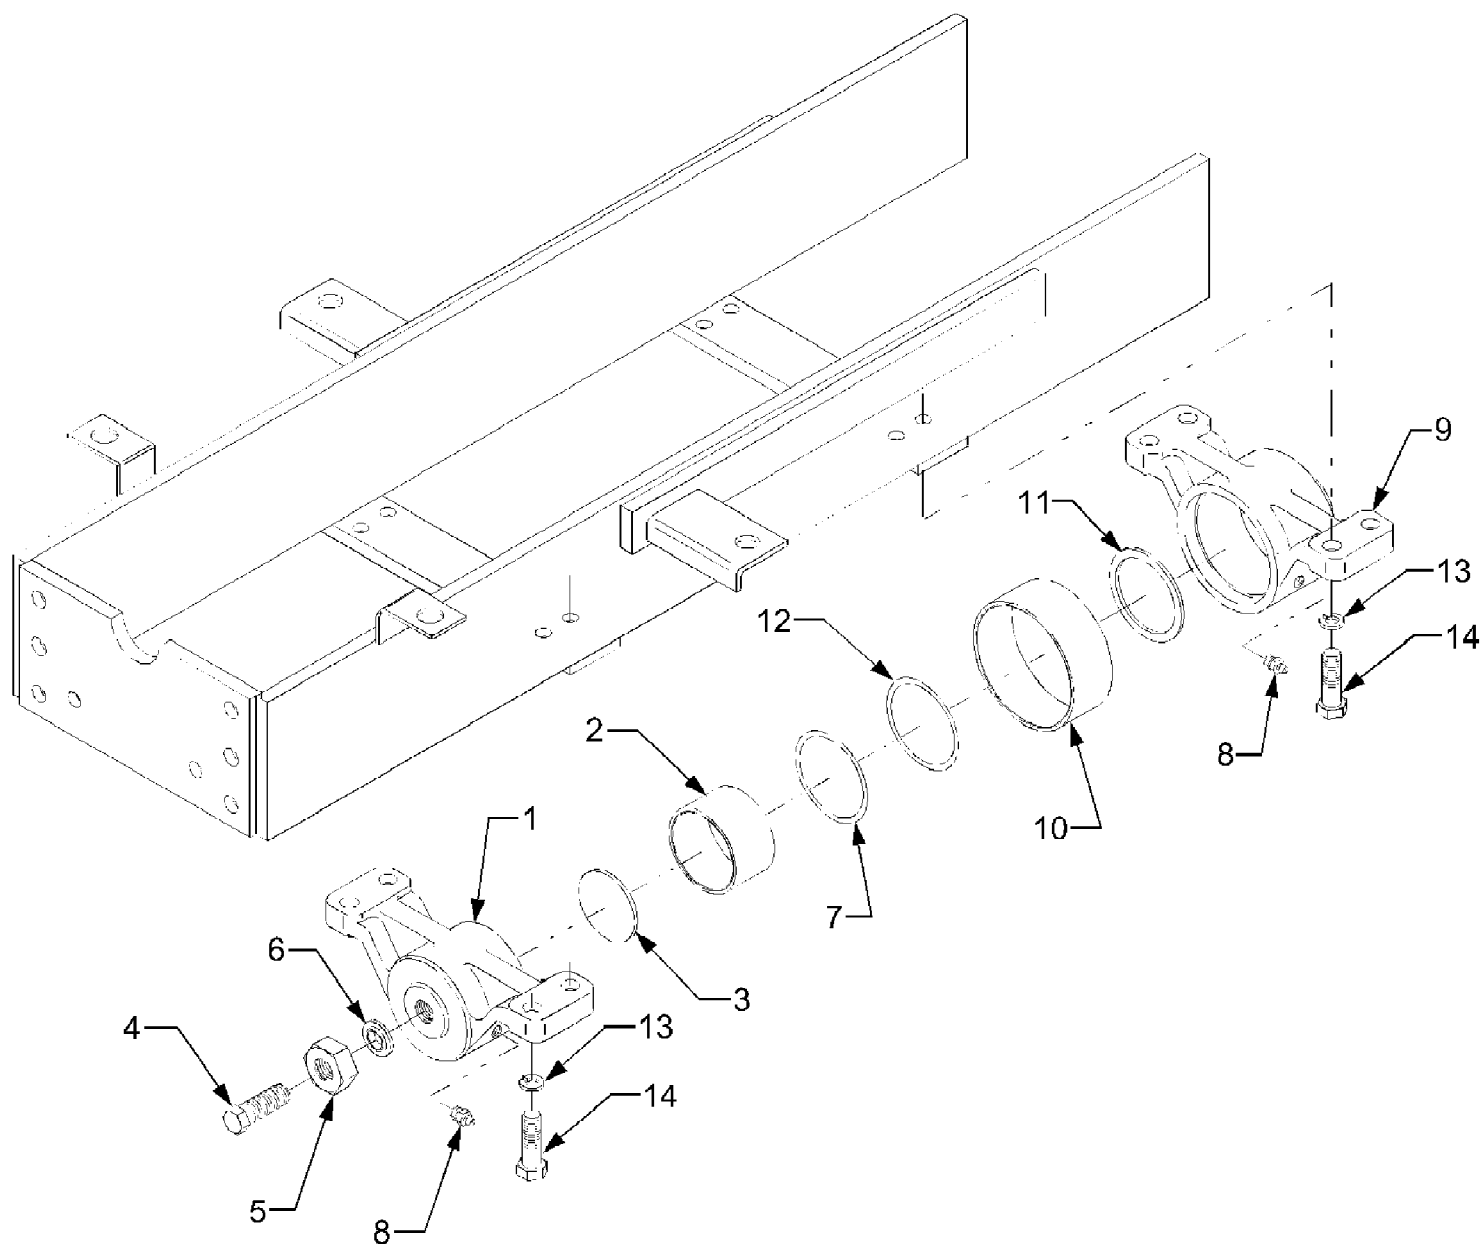


8404 Tractor
Front Axle Bracket

Page 66 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2630-41612	1		Bracket, Front
2	DD-T4520-43601	1		Dx-Bush
3	DD-38440-44673	1		Collar
4	DD-38630-44761	1		Bolt, Adjust
5	DD-02172-50160	1		Nut
6	DD-38440-44751	1		Washer, Seal
7	DD-04811-00490	1		O-ring
8	DD-06613-10010	2		Nipple, Grease
9	DD-T2630-41622	1		Bracket, Rear
10	DD-T2630-41691	1		Dx-Bush
11	DD-84612-44640	1		Collar, Thrust
12	DD-04811-50700	1		O-ring
13	DD-01176-51440	8		Bolt
14	DD-04512-50140	8		Washer, Spring

8404 Tractor
Front Axle Case Group

 Page 67 of 200

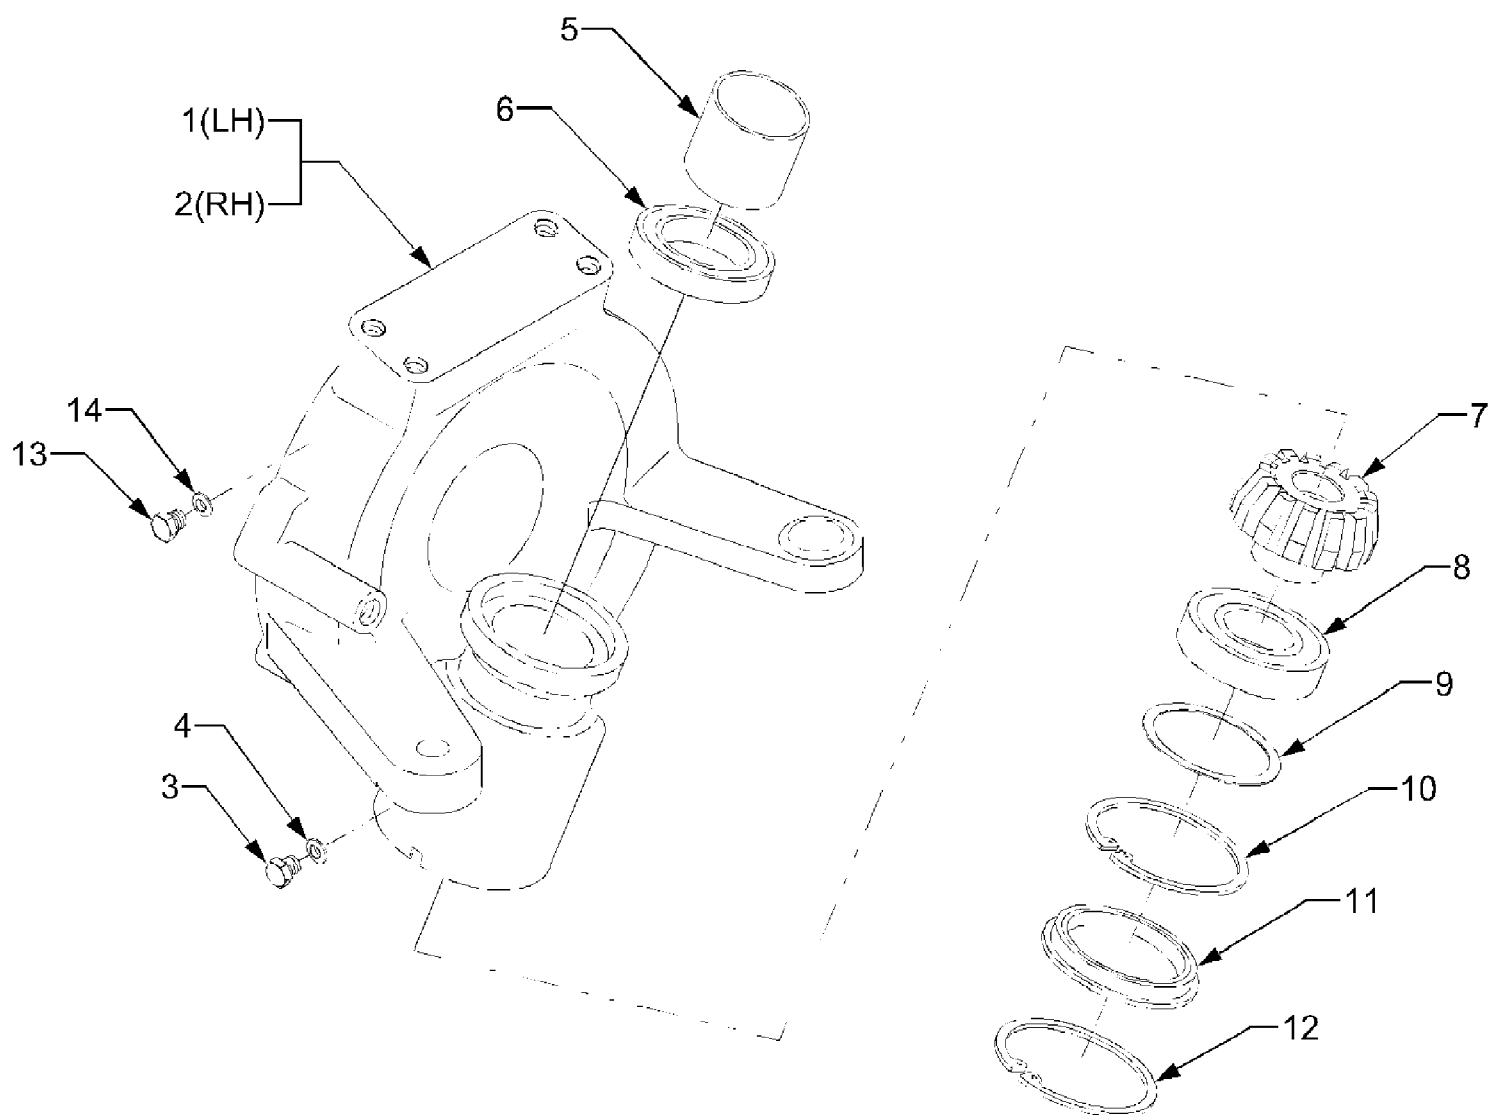


8404 Tractor
Front Axle Case Group

Page 68 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2620-43635	1	/P	Case, Front Axle (LH)
2	DD-T2620-43645	1	/P	Case, Front Axle (RH)
3	DD-06331-35010	2		Plug
4	DD-04717-01000	2		Washer, Seal
5	DD-T2630-43601	2		Dx Bush
6	DD-T4520-43381	2		Bearing, Thrust
7	DD-T2620-43521	2		Gear, 11 Bevel
8	DD-08101-06208	2		Bearing, Ball
9	DD-T4520-43011	2		Shim (T 0.1)
	DD-T4520-43021	2		Shim (T 0.2)
	DD-T4520-43031	2		Shim (T 0.4)
	DD-T4520-43041	2		Shim (T 0.8)
	DD-T4520-43051	2		Shim (T 1.0)
	DD-T4520-43061	2		Shim (T 1.2)
10	DD-04611-00800	2		Cir-clip
11	DD-T4620-43541	2		Plug
12	DD-04611-00920	2		Cir-clip
13	DD-34150-14261	2		Plug, Drain
14	DD-04717-02150	2		Washer, Seal

8404 Tractor
Front Axle Frame Group

 Page 69 of 200

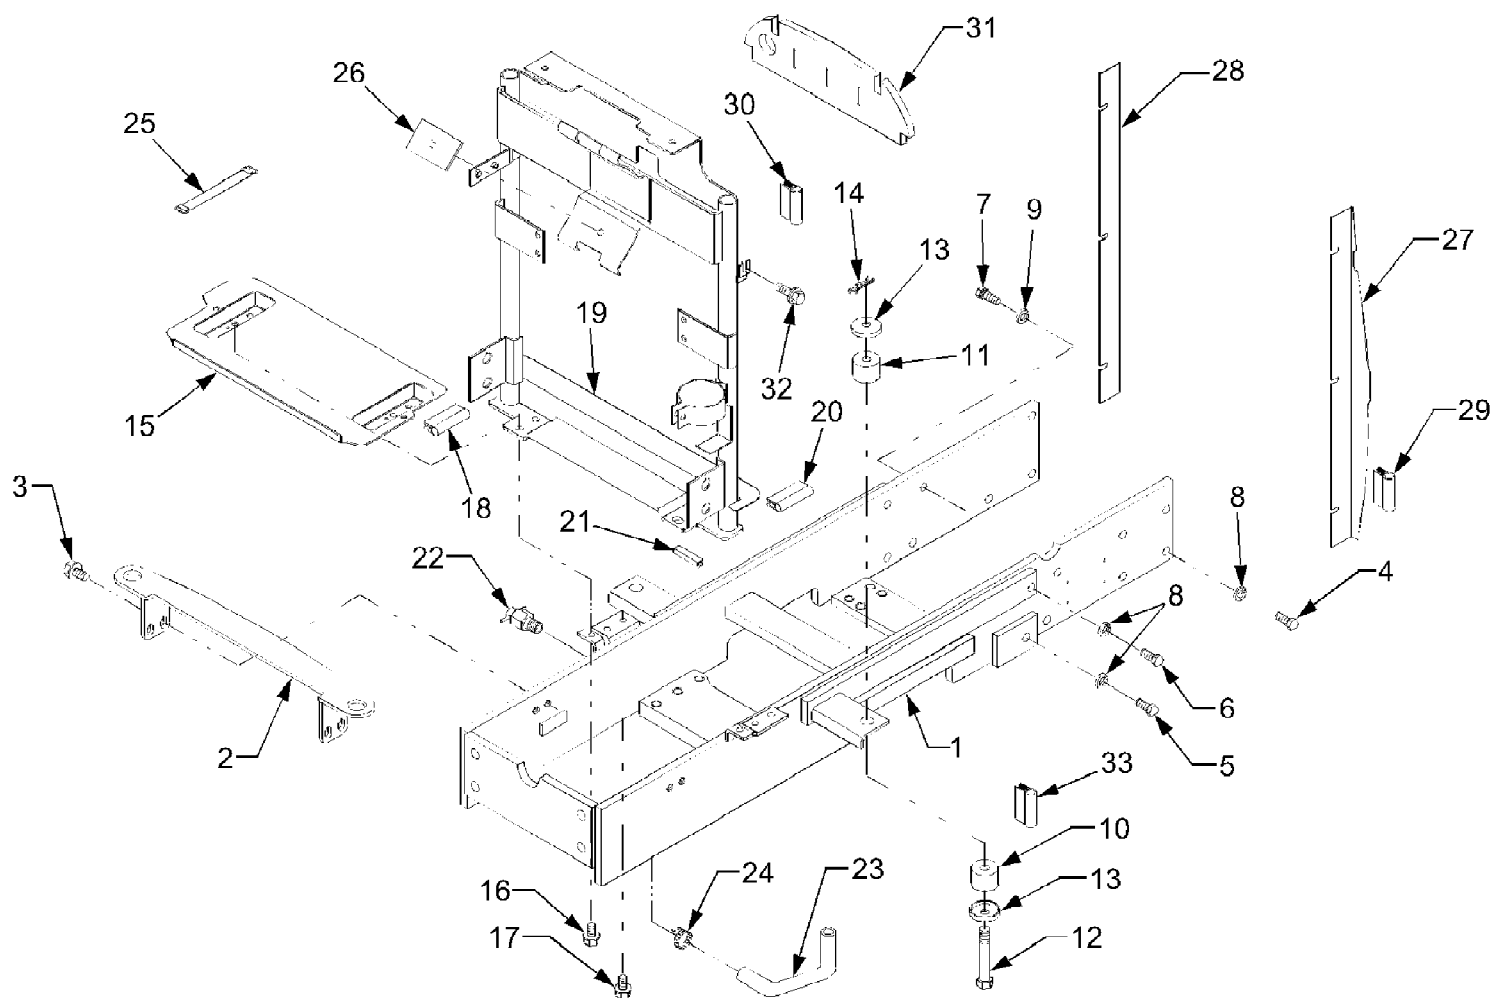


8404 Tractor
Front Axle Frame Group

Page 70 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2625-50011	1		Frame, Front Axle
2	DD-T4681-50021	1		Bracket
3	DD-01125-50825	4		Bolt
4	DD-01176-51235	10		Bolt
5	DD-01176-51250	2		Bolt
6	DD-01176-51240	2		Bolt
7	DD-01176-51030	1		Bolt
8	DD-04512-50120	14		Washer, Spring
9	DD-04512-50100	1		Washer, Spring
10	DD-15111-72181	2		Cushion
11	DD-15111-72191	2		Cushion
12	DD-15108-72382	2		Bolt
13	DD-T2240-13202	4		Washer
14	DD-05515-51000	2		Pin, Snap
15	DD-T4620-50212	1		Support, Battery
16	DD-01123-50825	4		Bolt
17	DD-01123-50820	2		Bolt
18	DD-T4620-50273	2		Rubber
19	DD-T4680-50314	1		Support, Aircleaner
20	DD-T4620-50341	1		Rubber
21	DD-T4620-50351	2		Cushion
22	DD-76KD-0121-2	1		Cock, Drain
23	DD-T4620-50281	1		Pipe, Drain
24	DD-T4340-38241	2		Band, Pipe
25	DD-38325-13981	2		Band, Aircleaner)
26	DD-T4240-13972	2		Cushion
27	DD-T4620-50363	1		Plate (LH)
28	DD-T4620-50373	1		Plate (RH)
29	DD-T4680-50383	1	/P	Rubber
30	DD-T4680-50392	1		Rubber
31	DD-T4620-50672	2		Rubber, Cushion
32	DD-01754-50820	2		Bolt, Flange
33	DD-T4680-50461	1		Rubber

8404 Tractor
Front Axle Group

 
Page 71 of 200

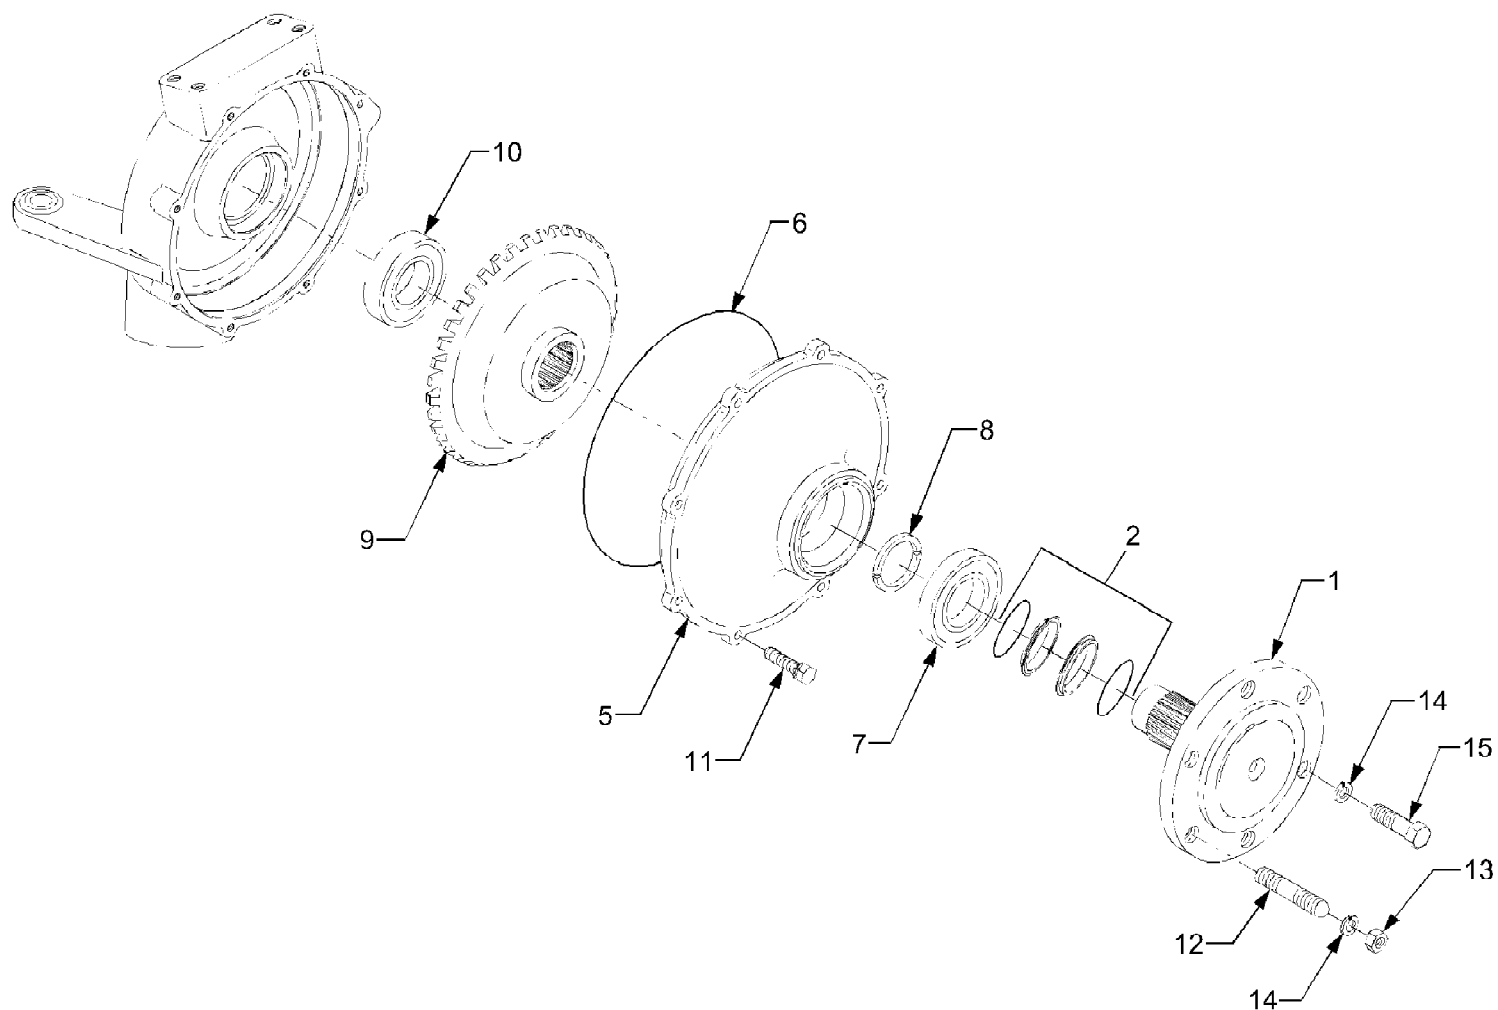

8404 Tractor
Front Axle Group

Page 72 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4620-43711	2	S	Axle, Front
2	DD-T4818-43451	2	/P	Floating Seal Ass'y
5	DD-T4682-43622	2	/P	Cover, Front Axle
6	DD-37805-43551	2		O-ring
7	DD-08101-06209	2		Bearing, Ball
8	DD-T4340-43681	4		Cir-clip
9	DD-T2620-43721	2		Gear, 39 Bevel
10	DD-08101-06208	2		Bearing, Ball
11	DD-01123-50835	16		Bolt
12	DD-T4240-27712	4		Stud
13	DD-02076-50160	4		Nut
14	DD-04512-50160	12		Washer, Spring
15	DD-01173-51630	8	S	Bolt

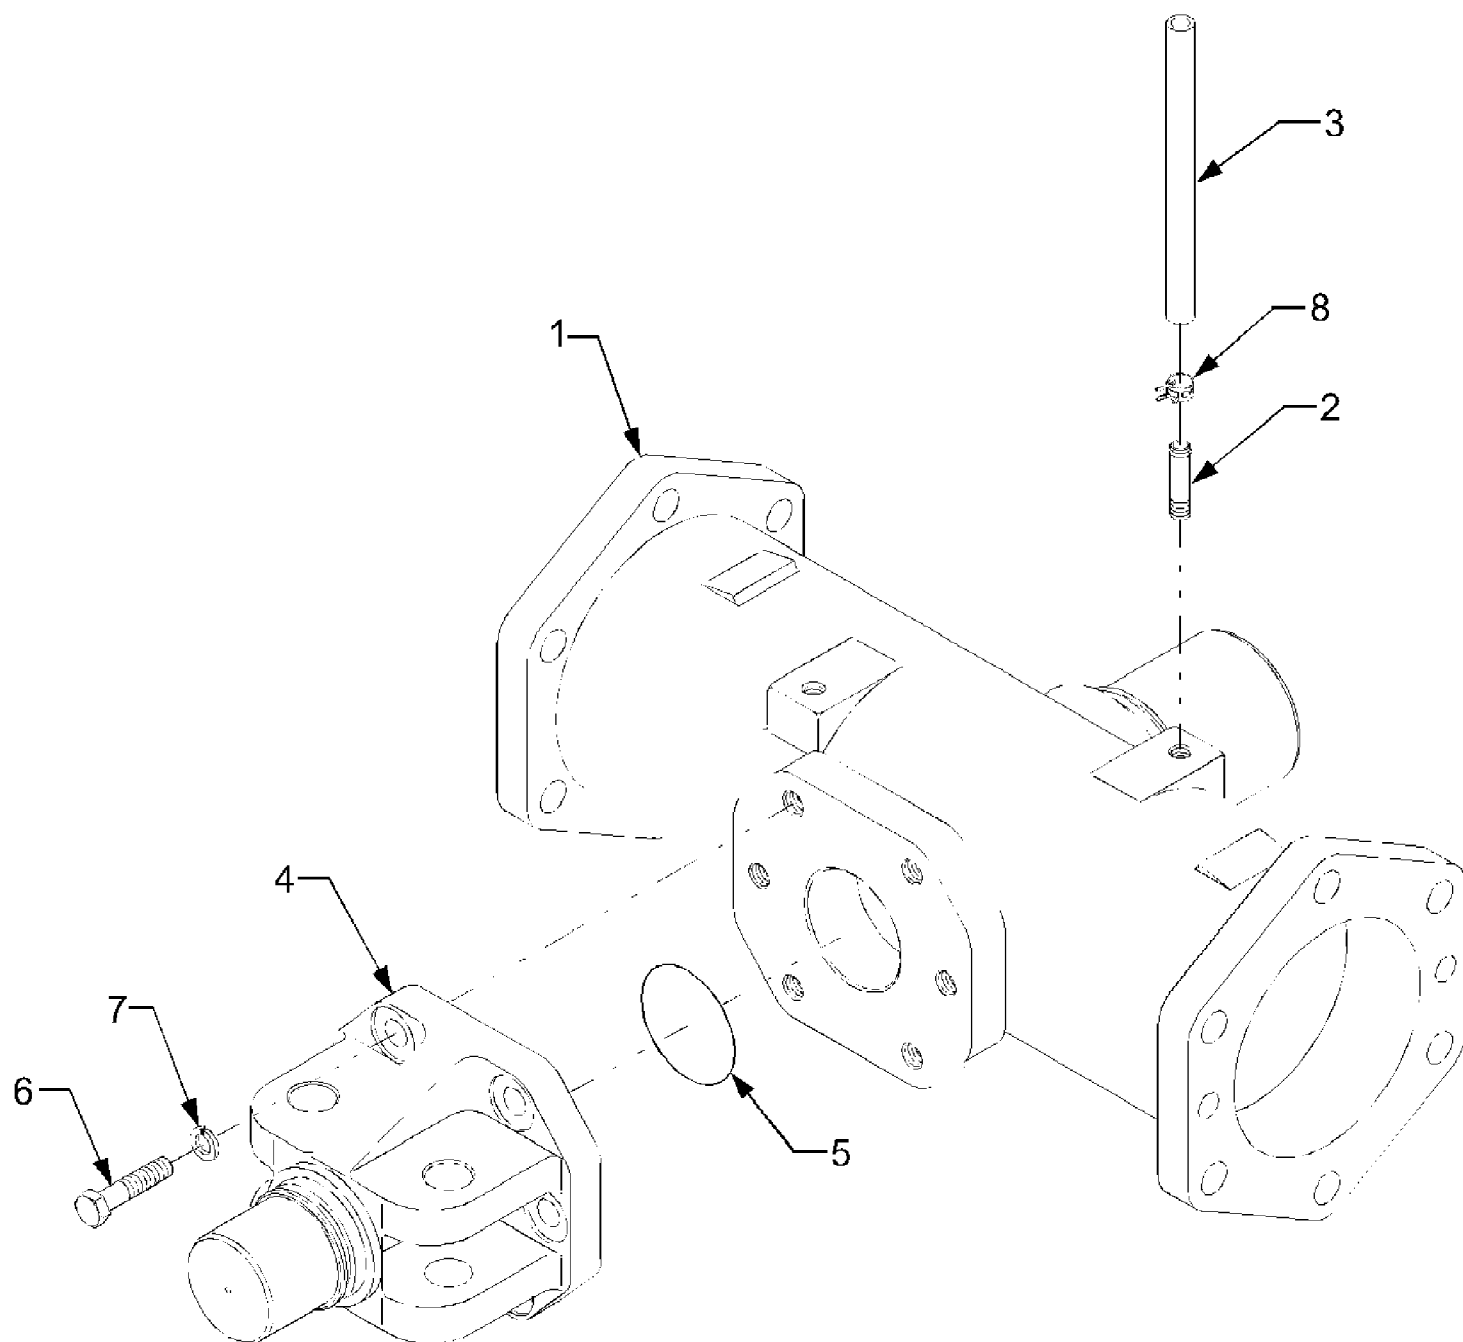 


8404 Tractor
Front Axle Support Group

Page 74 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2625-42143	1		Support, Front Axle
2	DD-T2630-42161	1		Pipe
3	DD-15301-72440	1		Pipe, Over Flow
4	DD-T2630-41653	1		Pin, Center
5	DD-04811-00490	1		O-ring
6	DD-01173-51235	6		Bolt
7	DD-04512-50120	6		Washer, Spring
8	DD-15301-72470	1		Clip, Pipe

8404 Tractor
Front Differential Group

 Page 75 of 200

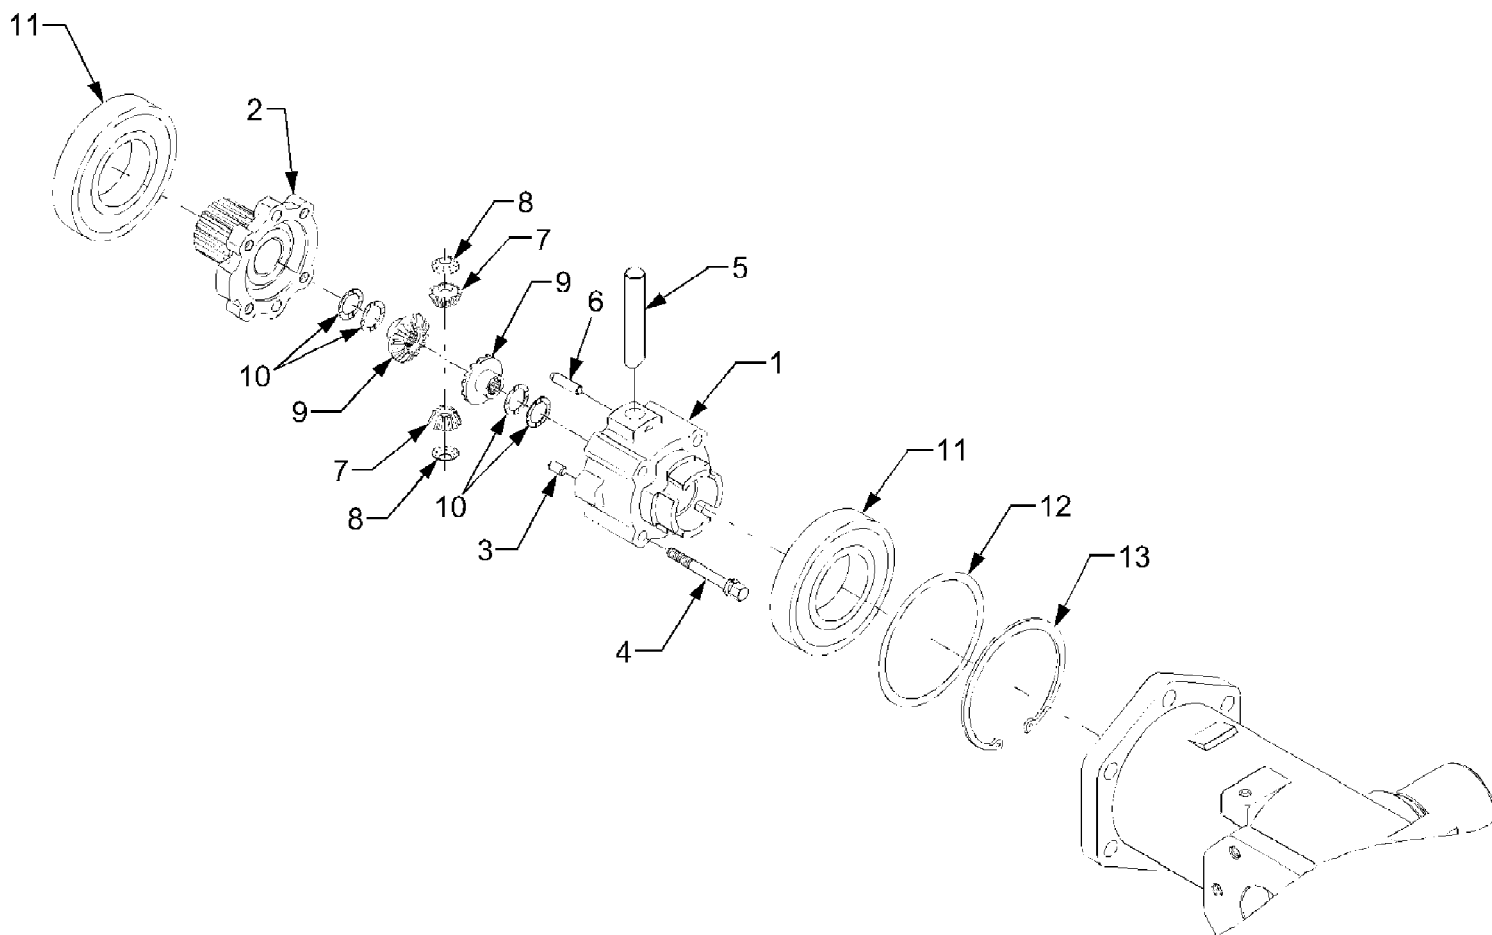


8404 Tractor
Front Differential Group

Page 76 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2630-43121	1		Case, Front Differential
2	DD-T2630-42321	1		Cover, Differential Case
3	DD-05012-01018	2		Pin, Straight
4	DD-01133-51075	4		Bolt
5	DD-T2630-43111	1		Shaft, Differential Pinion
6	DD-T4520-43171	1		Pin, Straight
7	DD-T4520-43131	2		Pinion, Differential
8	DD-T4520-43151	2		Washer, Differential Side
9	DD-T4520-43141	2		Gear, Differential Side
10	DD-T4520-43071	2		Shim (T 0.8)
	DD-T4520-43081	2		Shim (T 1.0)
	DD-T4520-43091	2		Shim (T 1.2)
11	DD-08101-06212	2		Bearing, Ball
12	DD-T2630-43011	1		Shim (T 0.8)
	DD-T2630-43021	1		Shim (T 1.0)
	DD-T2630-43031	1		Shim (T 1.2)
	DD-T2630-43041	1		Shim (T 2.0)
	DD-T2630-43051	1		Shim (T 2.3)
13	DD-T2630-42981	1		Cir-clip

8404 Tractor
Front Wheel Driving Group 1

 
Page 77 of 200

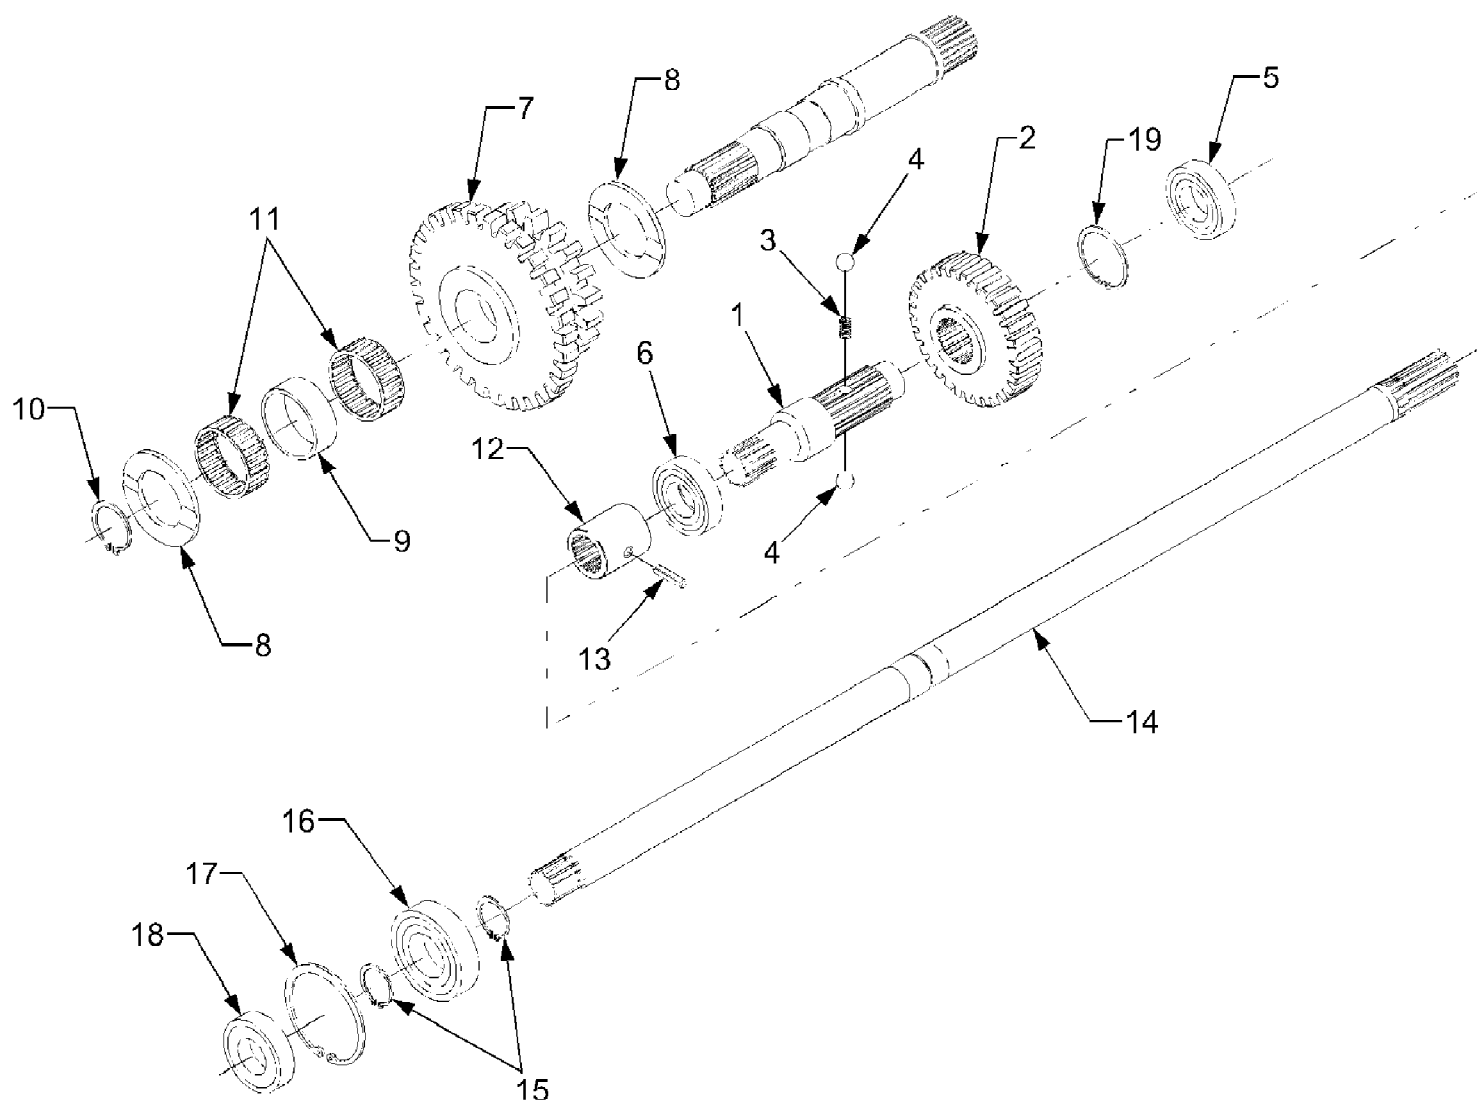

8404 Tractor
Front Wheel Driving Group 1

Page 78 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-44512	1		Shaft, Front Wheel Driving
2	DD-T2610-44612	1		Gear, 31 Spur
3	DD-T2440-44251	1		Spring
4	DD-07715-01605	2		Ball
5	DD-08101-06205	1		Bearing, Ball
6	DD-08101-06305	1		Bearing, Ball
7	DD-T2610-44522	1		Gear, 26-20
8	DD-T2610-23621	2		Collar, Thrust
9	DD-T2610-44541	1		Spacer
10	DD-04612-00320	1		Cir-clip
11	DD-08823-23717	2		Bearing, Needle
12	DD-T4620-44592	1		Coupling
13	DD-05411-00635	1		Pin, Spring
14	DD-T2610-44573	1	/P	Shaft 1, Propeller
15	DD-04612-00250	1		Cir-clip
16	DD-08101-06005	2		Bearing, Ball
17	DD-04611-00470	1		Cir-clip
18	DD-09502-55210	1		Seal, Oil
19	DD-04612-00300	1		Cir-clip

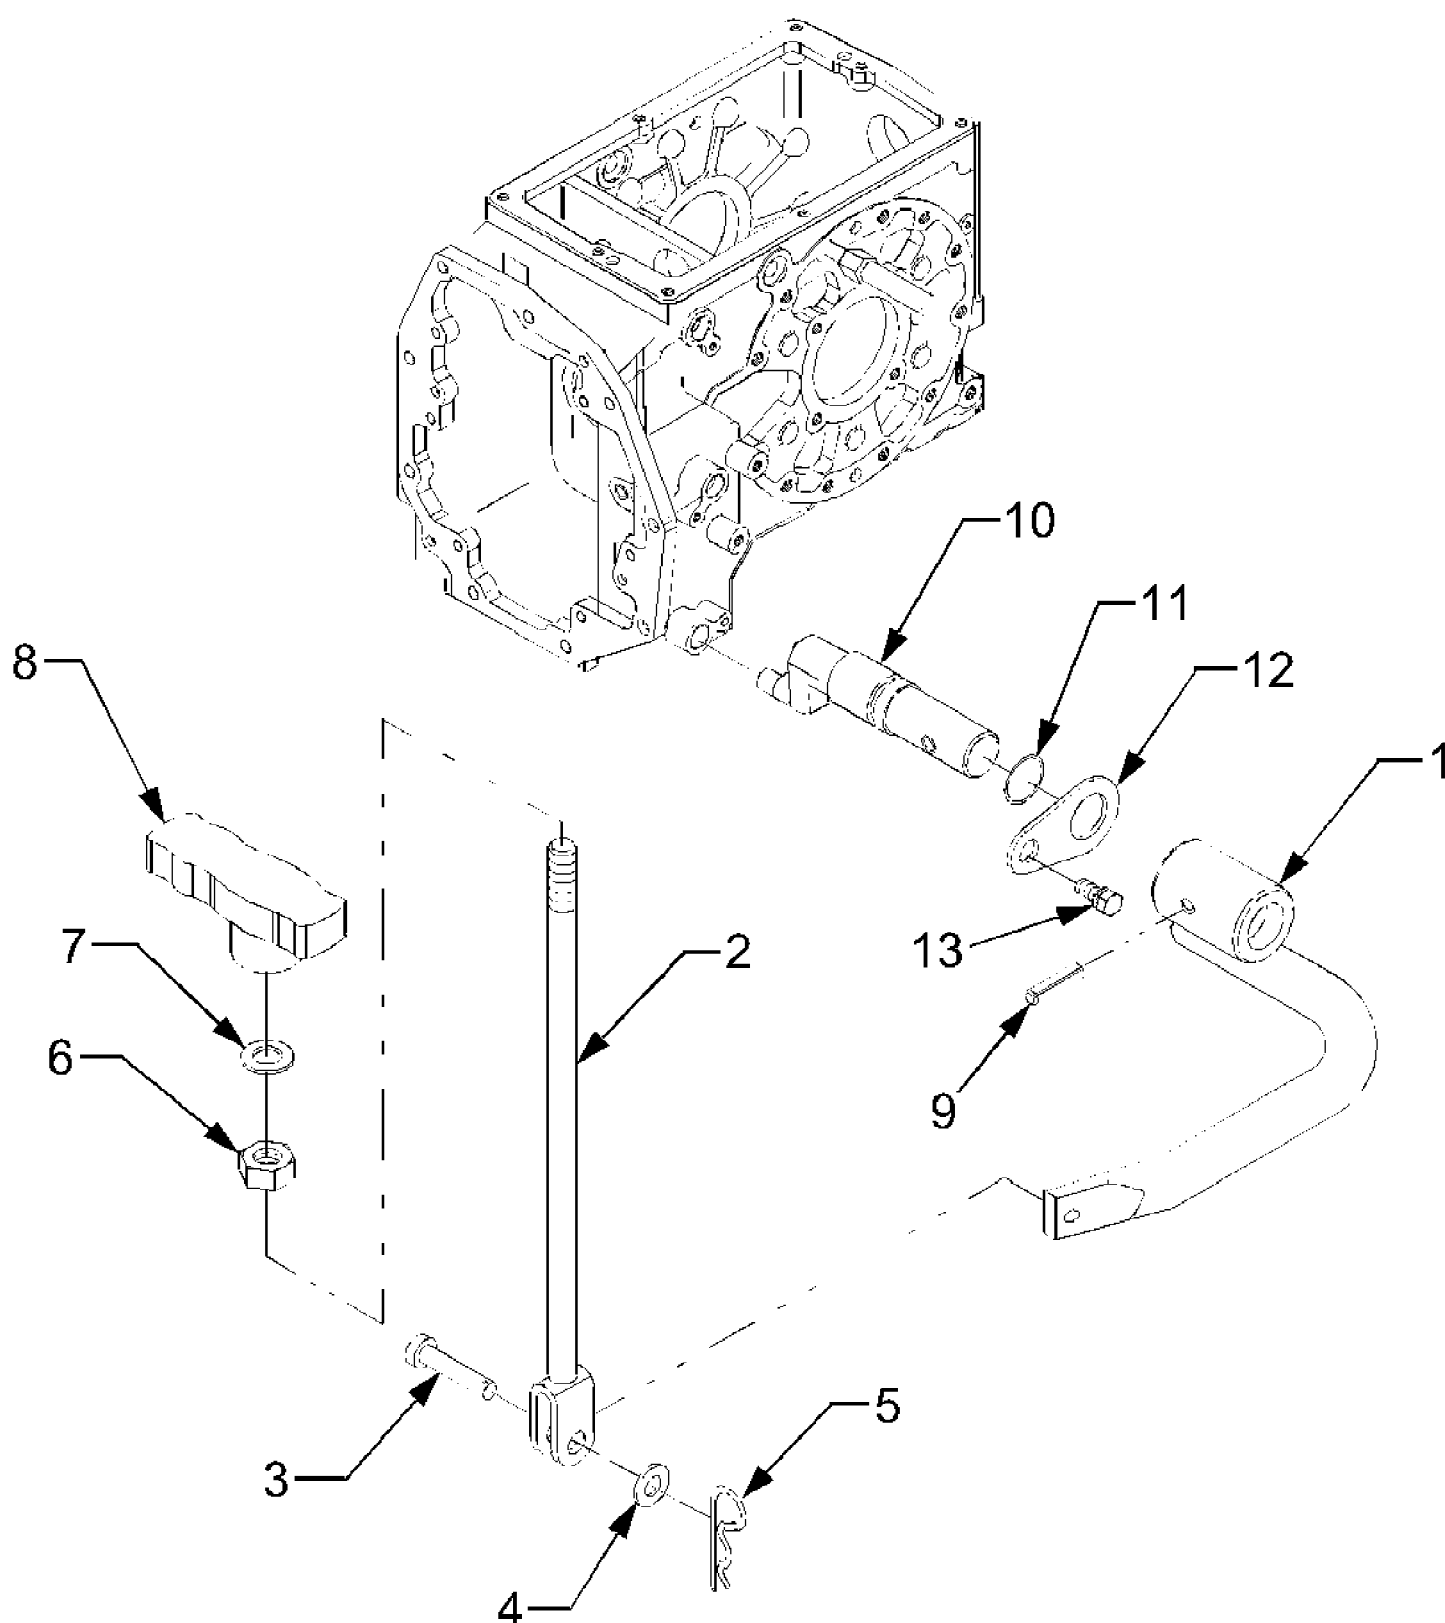 


8404 Tractor
Front Wheel Driving Group 2

Page 80 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2630-60712	1		Lever 1, Front Wheel
2	DD-T2610-60721	1		Lever 2, Front Wheel
3	DD-05122-50820	1		Pin, Joint
4	DD-04012-50080	1		Washer, Plain
5	DD-05525-50800	1		Pin, Snap
6	DD-02176-50100	1		Nut
7	DD-04013-50100	1		Washer, Plain
8	DD-T4520-41591	1	S	Grip
9	DD-05411-00630	1		Pin, Spring
10	DD-T2610-44312	1		Arm, Shift (Front Wheel Drive)
11	DD-04811-00160	1		O-ring
12	DD-T4620-44331	1		Stopper
13	DD-01123-50816	1		Bolt

8404 Tractor
Fuel Camshaft And Injection Pump

 
Page 81 of 200

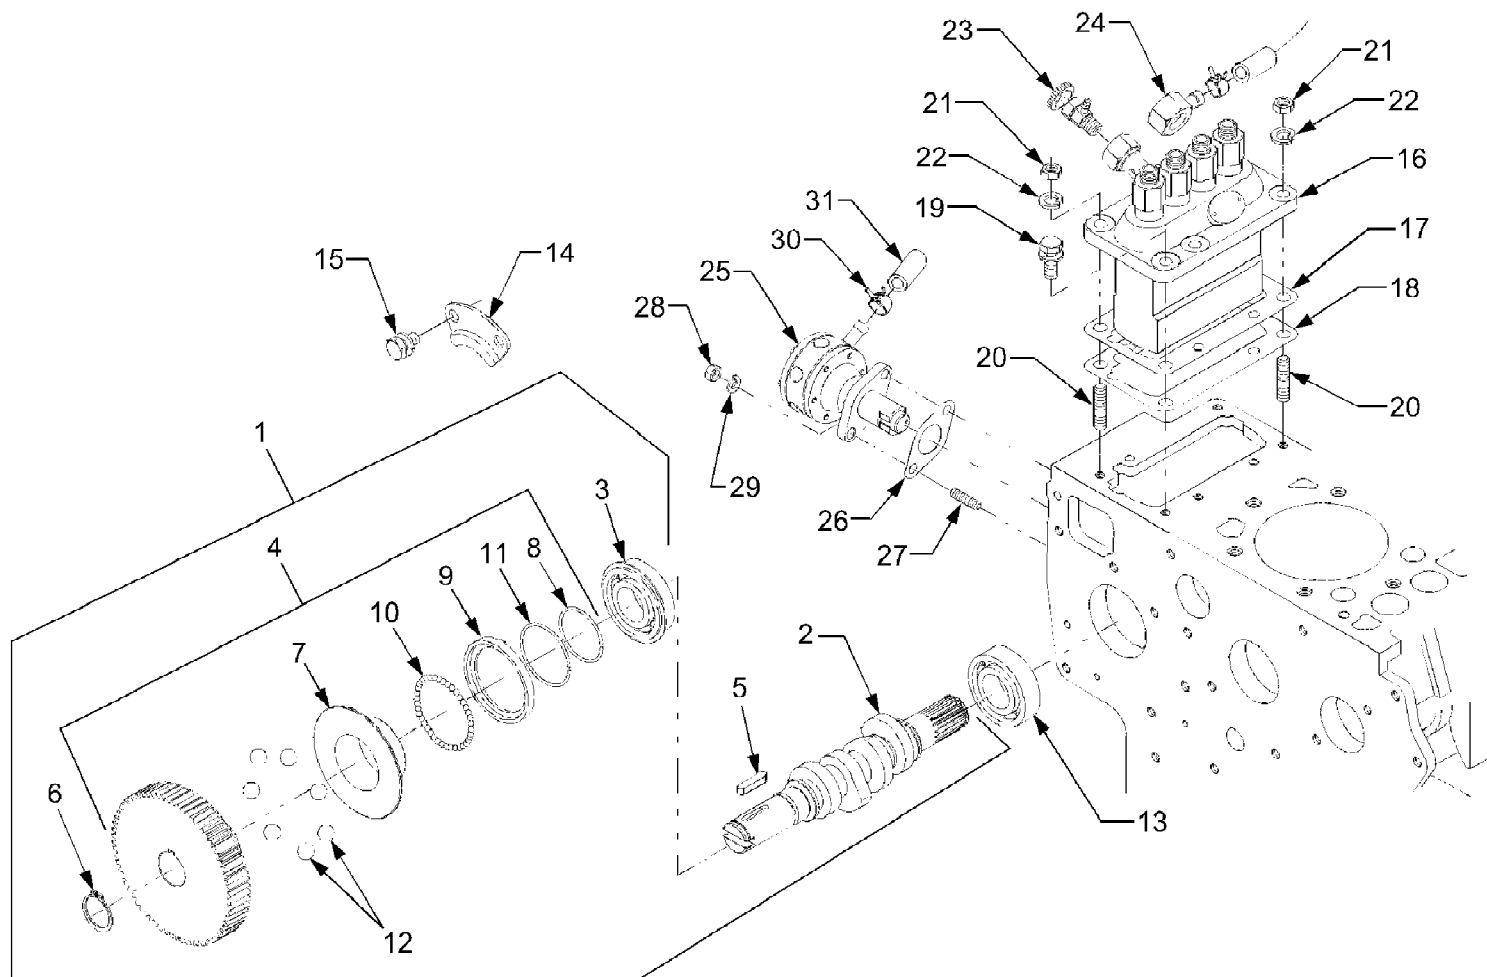

8404 Tractor
Fuel Camshaft And Injection Pump

Page 82 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6301-16028	1		Fuel Camshaft Ass'y Includes Ref. Nos. 2 thru 12
2	DD-E6301-16177	1		Camshaft, Fuel
3	DD-08153-06205	1		Bearing, Ball
4	DD-E6300-A0011	1		Governor Sleeve Ass'y
5	DD-05712-00525	1		Key
6	DD-04612-00240	1		Cir-clip
7	DD-E6300-55452	1		Sleeve, Governor
8	DD-15221-55471	1		Cir-clip, Sleeve
9	DD-15221-55692	1		Case, Governor Ball
10	DD-07715-03205	39		Ball
11	DD-15221-55741	1		Cir-clip, Ball Case
12	DD-07715-00403	7		Ball
13	DD-08240-00001	1		Bearing, Ball
14	DD-15221-16321	1		Stopper, Fuel Camshaft
15	DD-01123-50814	2		Bolt
16	DD-E6301-51012	1		Injection Pump Ass'y
17	DD-15471-52111	AR		Shim, Injection Pump
18	DD-15401-52112	AR		Shim, Injection Pump
19	DD-01123-50822	4		Bolt
20	DD-01513-50822	2		Stud
21	DD-02156-50080	2		Nut
22	DD-04512-50080	2		Washer, Spring
23	DD-84612-60500	1		Jet Start Cock Ass'y
24	DD-E5500-42412	1		Joint, Fuel Pipe
25	DD-15381-52030	1		Fuel Pump Ass'y
26	DD-15241-52141	1		Gasket, Fuel Pump
27	DD-01513-50616	2		Stud
28	DD-02056-50060	2		Nut
29	DD-04512-50060	2		Washer, Spring
30	DD-15471-42111	1		Pipe, Fuel
31	DD-14301-42753	1		Clip

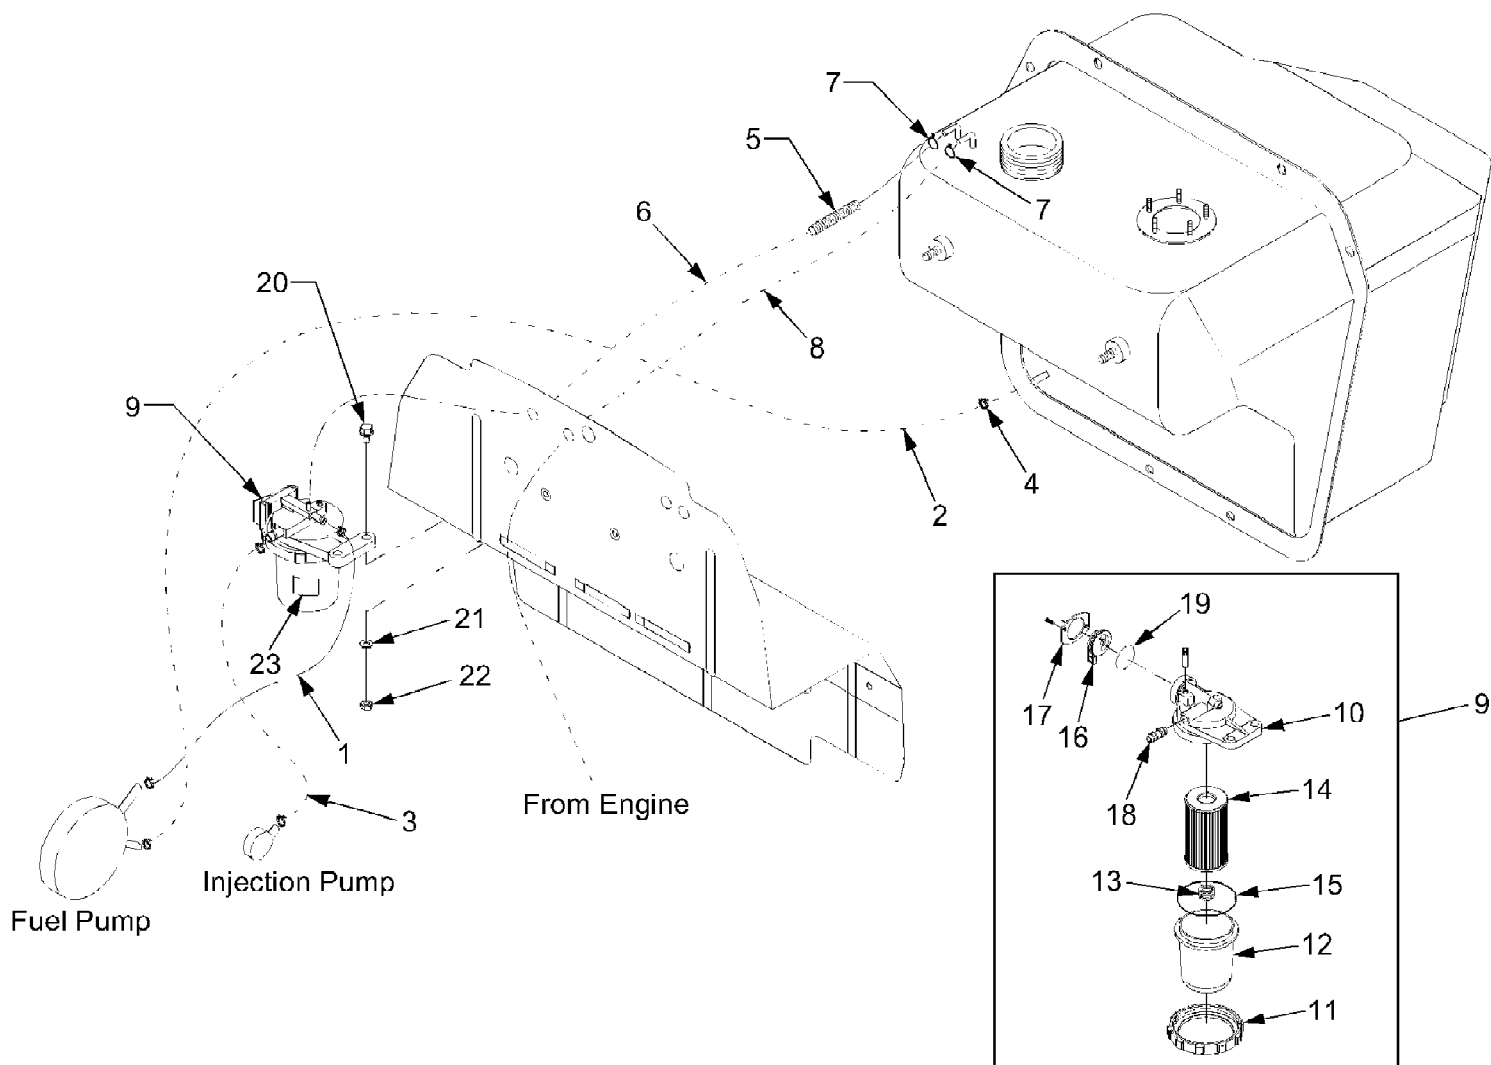 


8404 Tractor
Fuel Filter Group

Page 84 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-09661-80370	1		Hose 1, Fuel
2	DD-09661-80450	1		Hose
3	DD-09661-80450	1		Hose
4	DD-38430-45151	6		Clamp
5	DD-67111-58323	7		Spring
6	DD-38430-35561	1		Pipe 4, Fuel
7	DD-15271-42711	4		Clip
8	DD-09661-40340	1		Pipe 4, Fuel
9	DD-T4240-35014	1		Fuel Filter Ass'y
10	DD-T4240-35022	1		Body, Fuel Filter
11	DD-84612-43150	1		Nut, Stop
12	DD-T4240-43133	1		Pot, Filter
13	DD-84612-43930	1		Spring
14	DD-84612-43160	1		Element, Filter
15	DD-04811-50650	1		O-ring
16	DD-T4240-35082	1		Grip, Filter
17	DD-T4240-35092	1		Support, Handle
18	DD-84912-43170	1		Nipple
19	DD-04811-10290	1		O-ring
20	DD-01123-50830	2		Bolt
21	DD-04512-50080	2		Washer, Spring
22	DD-02156-50080	2		Nut
23	DD-T4240-35101	1		Label (Fuel Filter)

8404 Tractor Fuel Tank Group

 Page 85 of 200

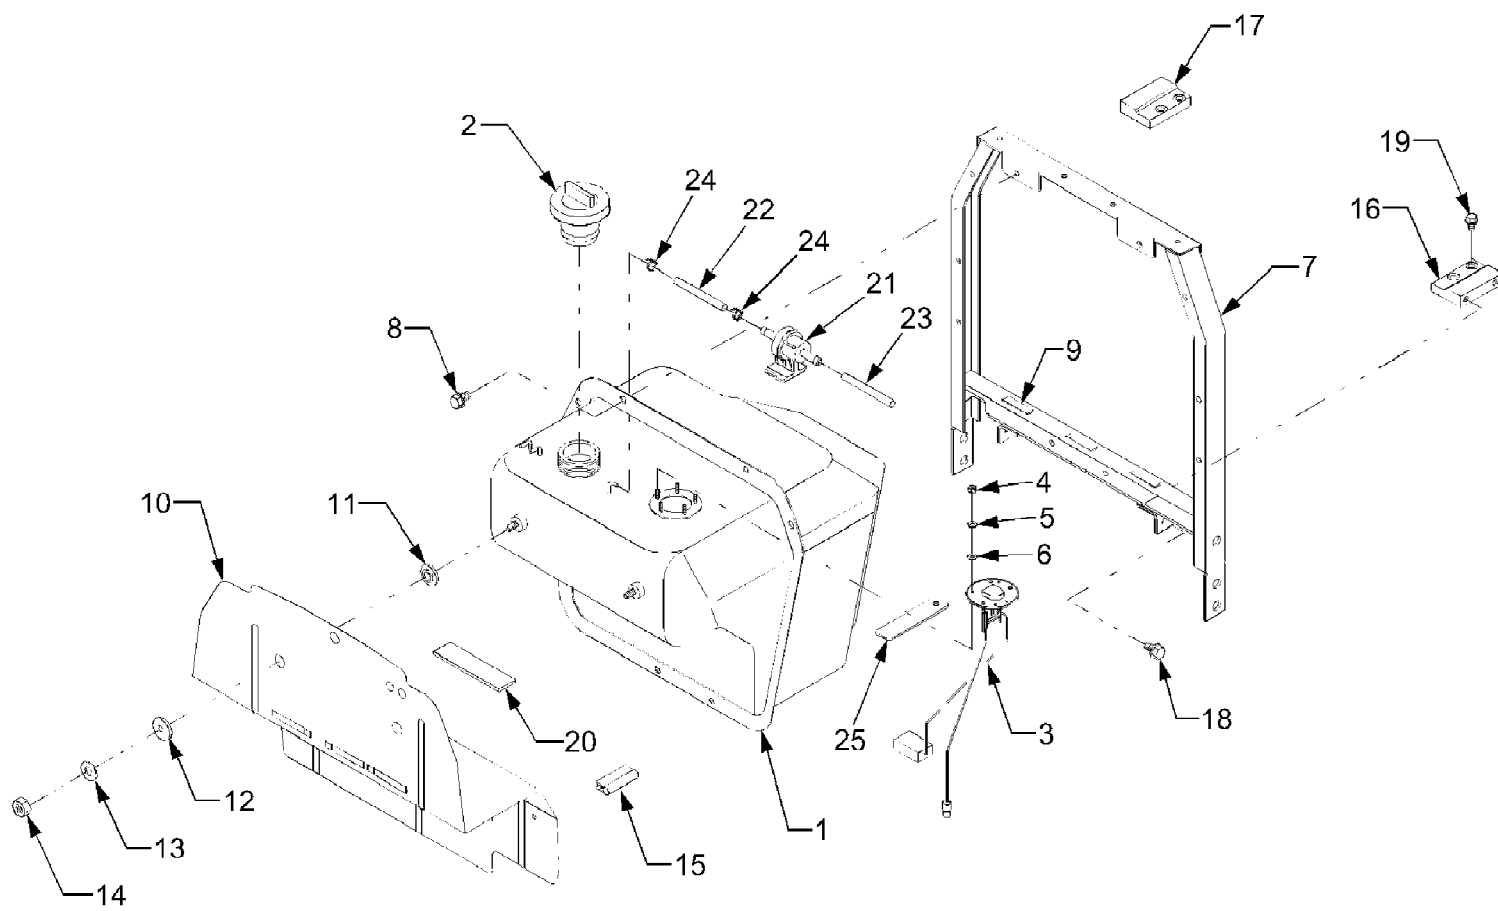


8404 Tractor
Fuel Tank Group

Page 86 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2611-55014	1		Tank, Fuel
2	DD-T2611-54821	1	/P	Fuel Cap Assy
3	DD-T4620-69213	1		Fuel Sender Ass'y
4	DD-02054-50040	5		Nut
5	DD-04512-50040	5		Washer, Spring
6	DD-04012-50040	5		Washer, Plain
7	DD-T4680-55021	1		Bracket, Bonnet
8	DD-01125-50820	8		Bolt
9	DD-T2610-50271	3		Rubber, Cushion
10	DD-T2610-55031	1		Plate, Shuttle
11	DD-T4620-55041	4		Grommet
12	DD-T2610-80691	4		Cushion
13	DD-04015-50080	4		Washer, Plain
14	DD-02156-50080	4		Nut
15	DD-T4620-55093	1		Rubber
16	DD-T4620-55113	1		Bracket(LH)
17	DD-T4620-55123	1		Bracket(RH)
18	DD-01133-51030	4		Bolt
19	DD-01133-51022	4		Bolt
20	DD-T2610-50271	1		Rubber, Cushion
21	DD-T2611-54831	1		Filter, Fuel
22	DD-09661-40100	1		Hose, Fuel
23	DD-E1400-54731	1		Hose 1, Fuel
24	DD-15271-42711	1		Clip, Pipe
25	DD-T2611-54851	1		Bracket (Fuel Filter)

8404 Tractor
Gear Case

 Page 87 of 200

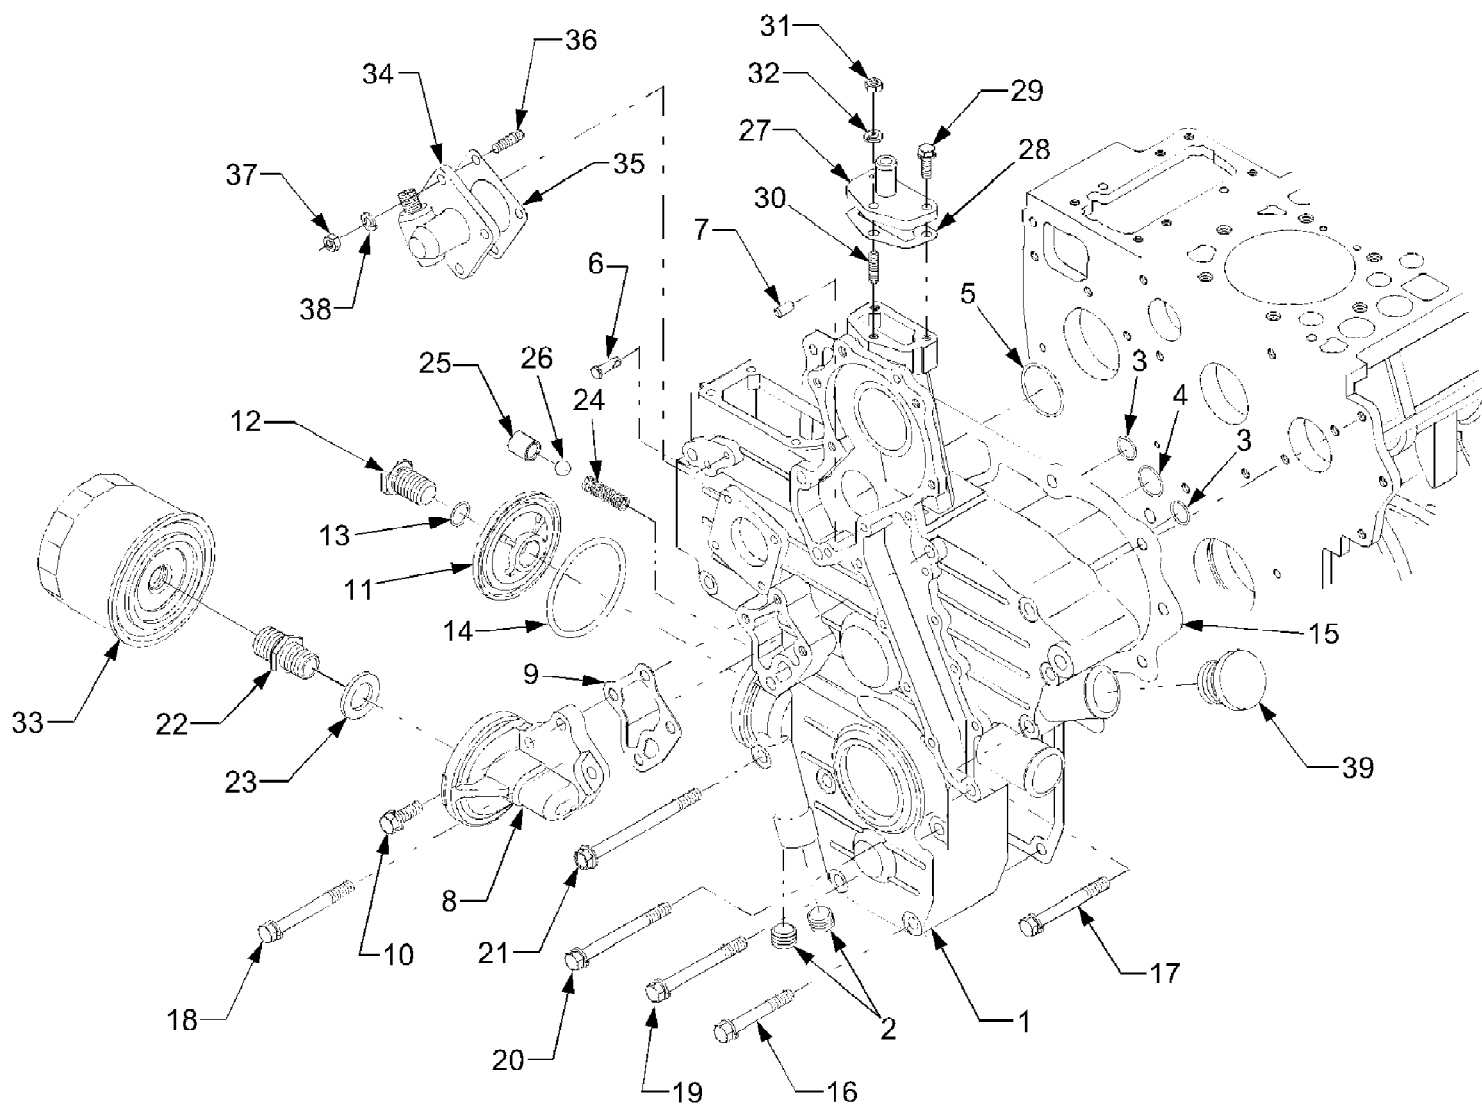


8404 Tractor
Gear Case

Page 88 of 200

Ref #	Part Number	Qty	S/P/F	Description
	DD-E5800-A0020	1		Gear Case Ass'y Includes Ref. Nos. 1 thru 14
1	DD-E5800-04118	1	S	Case, Gear
2	DD-E5800-96031	2		Plug
3	DD-04811-00150	2		O-ring
4	DD-04811-00200	1		O-ring
5	DD-04811-00360	1		O-ring
6	DD-15221-56282	1		Pin, Start Spring
7	DD-05012-00612	2		Pin, Straight
8	DD-E6500-32611	1		Support, Oil Filter
9	DD-E5800-32621	1		Gasket
10	DD-01123-50825	3		Bolt
11	DD-E5800-32881	1		Cover
12	DD-E5800-32911	1		Bolt, Cover
13	DD-04811-00150	1		O-ring
14	DD-E5800-96831	1		O-ring
15	DD-E5800-04133	1		Gasket, Gear Case
16	DD-01123-50860	3		Bolt
17	DD-01123-50870	3		Bolt
18	DD-01123-50875	1		Bolt
19	DD-01123-50880	3		Bolt
20	DD-01123-50885	3		Bolt
21	DD-01754-50801	2		Bolt, Flange
22	DD-15521-32291	1		Pipe, Joint
23	DD-04011-50180	1		Washer, Plain
24	DD-15241-36952	1		Spring
25	DD-E5500-36932	1		Valve Seat
26	DD-07715-03213	1		Ball
27	DD-15521-73321	1		Flange, Water Return
28	DD-15521-73331	1		Gasket
29	DD-01023-50620	2		Bolt
30	DD-01513-50616	1		Stud
31	DD-02056-50060	1		Nut
32	DD-04512-50060	1		Washer, Spring
33	DD-E6201-32443	1		Filter, Engine Oil
34	DD-E5205-58812	1		Hour Meter Ass'y
35	DD-15221-88131	1		Gasket
36	DD-15221-88211	4		Stud
37	DD-02056-50060	4		Nut
38	DD-04512-50060	4		Washer, Spring
39	DD-E5800-33143	1		Plug, Oil

8404 Tractor
Gear Pump Group

 
Page 89 of 200

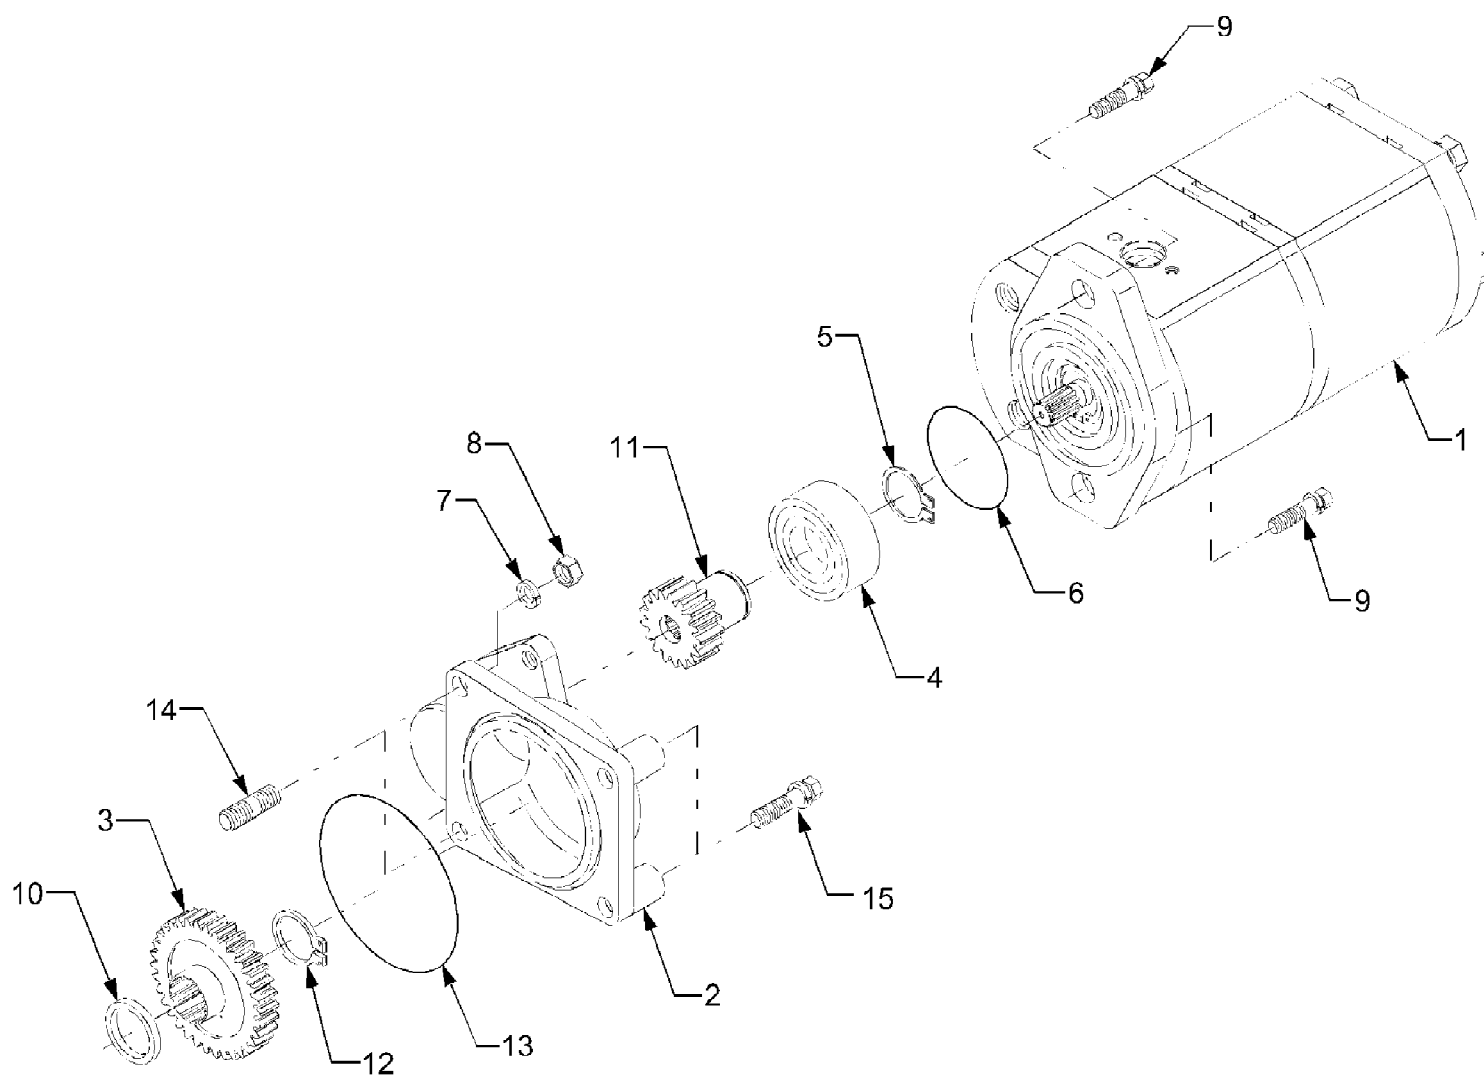

8404 Tractor
Gear Pump Group

Page 90 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4620-76042	1	S	Pump, Gear
2	DD-T4620-76001	1		Holder, Gear Pump
3	DD-T2720-76021	1		Gear, 33
4	DD-08241-05205	1		Bearing, Ball
5	DD-04612-00250	1		Cir-clip, External
6	DD-04811-10800	1		O-ring
7	DD-04512-50080	2		Washer, Spring
8	DD-02114-50080	2		Nut
9	DD-01133-51035	2		Bolt
10	DD-35370-37821	1		Spacer
11	DD-T2720-76031	1		Gear, 18
12	DD-15471-95361	1		Cir-clip
13	DD-04811-10850	1		O-ring
14	DD-01513-50822	2		Stud
15	DD-01123-50845	2		Bolt

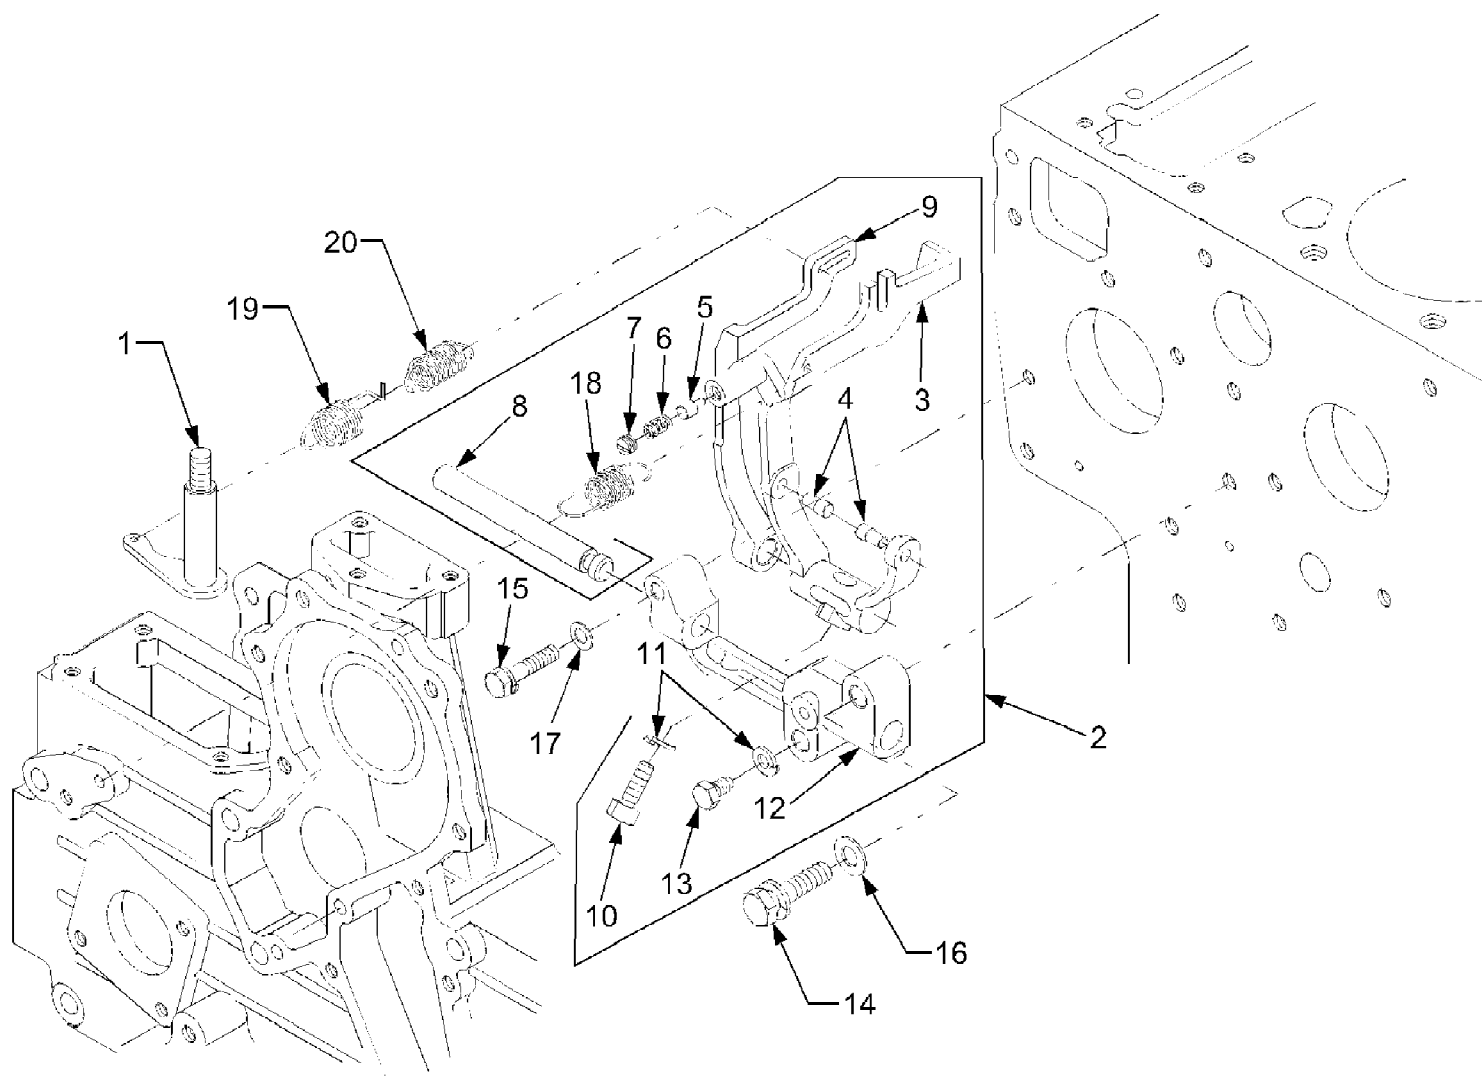 


8404 Tractor
Governor

Page 92 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-15601-56021	1		Governor Lever Ass'y
2	DD-E6300-56052	1		Fork Lever Ass'y Includes Ref Nos. 3 thru 13
3	DD-E6300-56121	1		Lever 1, Fork
4	DD-15021-56164	2		Pin, Fork Lever
5	DD-15411-54171	1		Pin
6	DD-E6300-54231	1		Spring
7	DD-15601-54431	1		Screw, Set
8	DD-15221-56151	1		Shaft, Fork Lever
9	DD-E6300-56131	1		Lever 2, Fork
10	DD-15021-56243	1		Bolt
11	DD-04512-50060	2		Washer, Spring
12	DD-15221-56235	1		Holder, Fork Lever
13	DD-15221-66411	1		Bolt
14	DD-01123-50832	2		Bolt
15	DD-01023-50628	1		Bolt
16	DD-04012-50080	2		Washer, Plain
17	DD-04012-50060	1		Washer, Plain
18	DD-E6300-56481	1		Spring, Start
19	DD-E6300-56414	1		Spring 1, Governor
20	DD-E6313-56421	1		Spring 2, Governor

8404 Tractor
Hydraulic Lift Arm Group

 Page 93 of 200

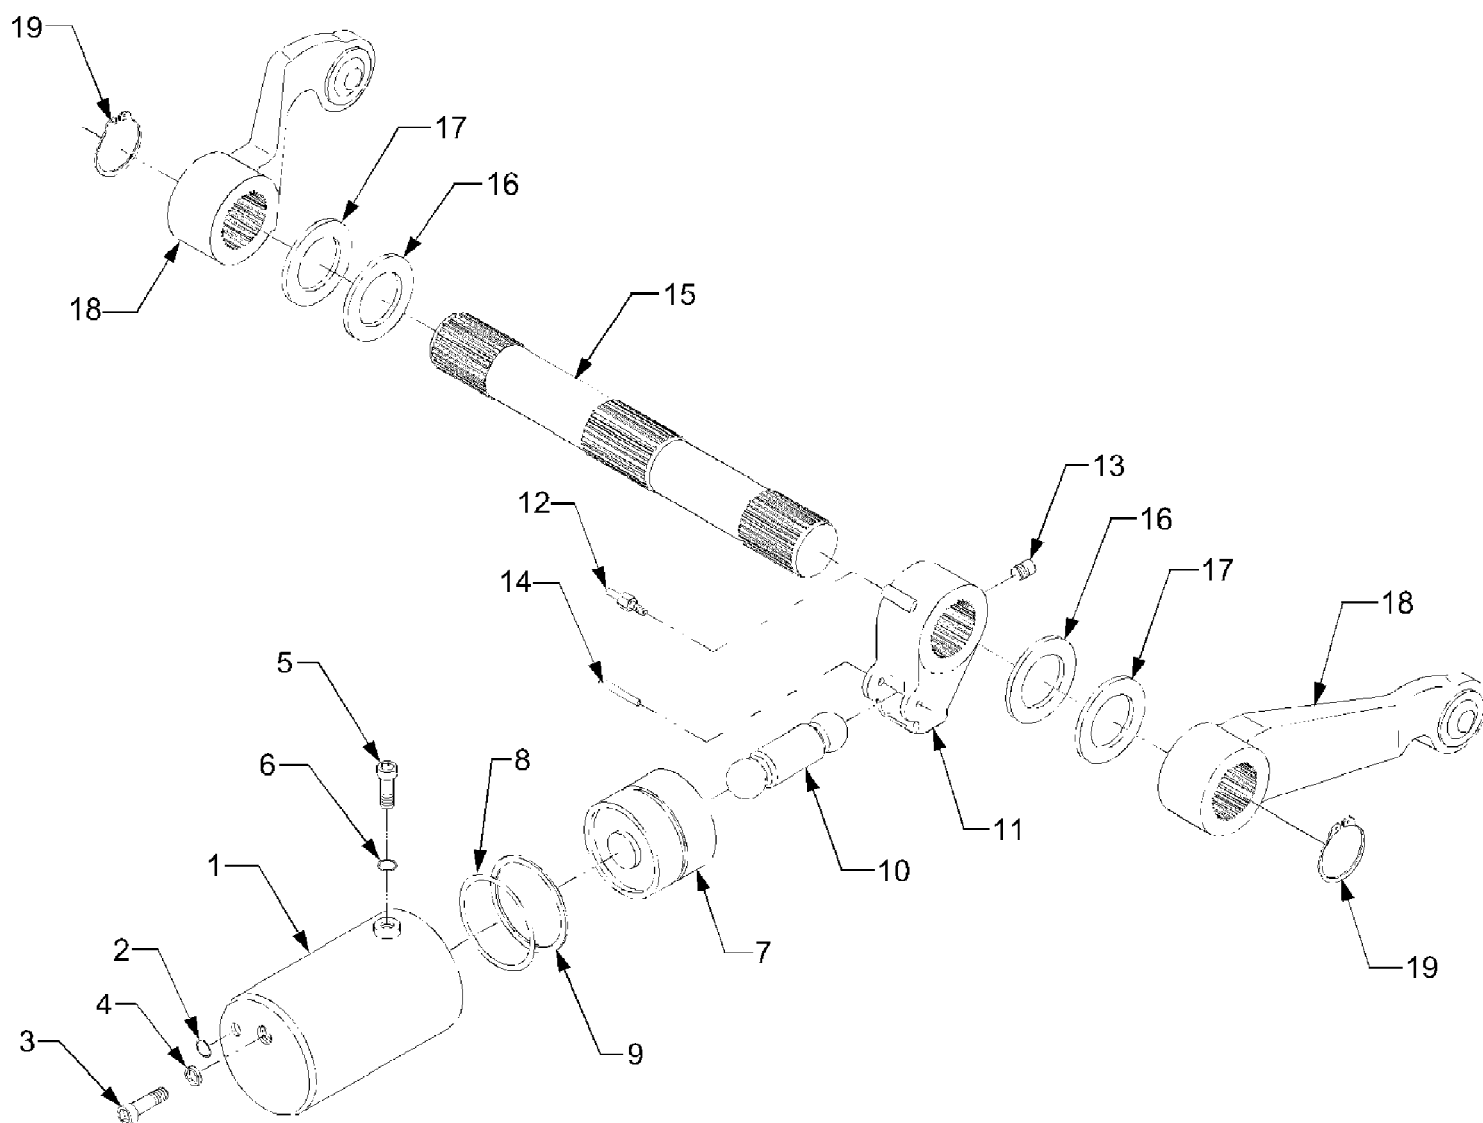


8404 Tractor
Hydraulic Lift Arm Group

Page 94 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-37303	1		Cylinder
2	DD-04810-00120	1		O-ring
3	DD-T2610-37362	2		Bolt
4	DD-04717-01200	1		Washer, Seal
5	DD-T2610-37352	1		Bolt
6	DD-04717-01400	1		Washer, Seal
7	DD-T2610-37312	1		Piston
8	DD-04810-00800	1		O-ring
9	DD-T2610-37331	1		Ring, Backup
10	DD-T2610-37322	1		Rod, Hydraulic
11	DD-T2610-37442	1		Arm, Hydraulic
12	DD-T2610-37421	1		Pin
13	DD-T2610-37453	1		Screw, Set
14	DD-05411-00850	1		Pin, Spring
15	DD-T2610-37434	1		Shaft, Hydraulic Arm
16	DD-09500-45609	2		Seal, Oil
17	DD-T2610-37461	2		Washer
18	DD-T2610-37202	2		Lift Arm Ass'y
19	DD-04612-00450	2		Cir-clip

8404 Tractor
Hydraulic Lift Control Group 1

 Page 95 of 200

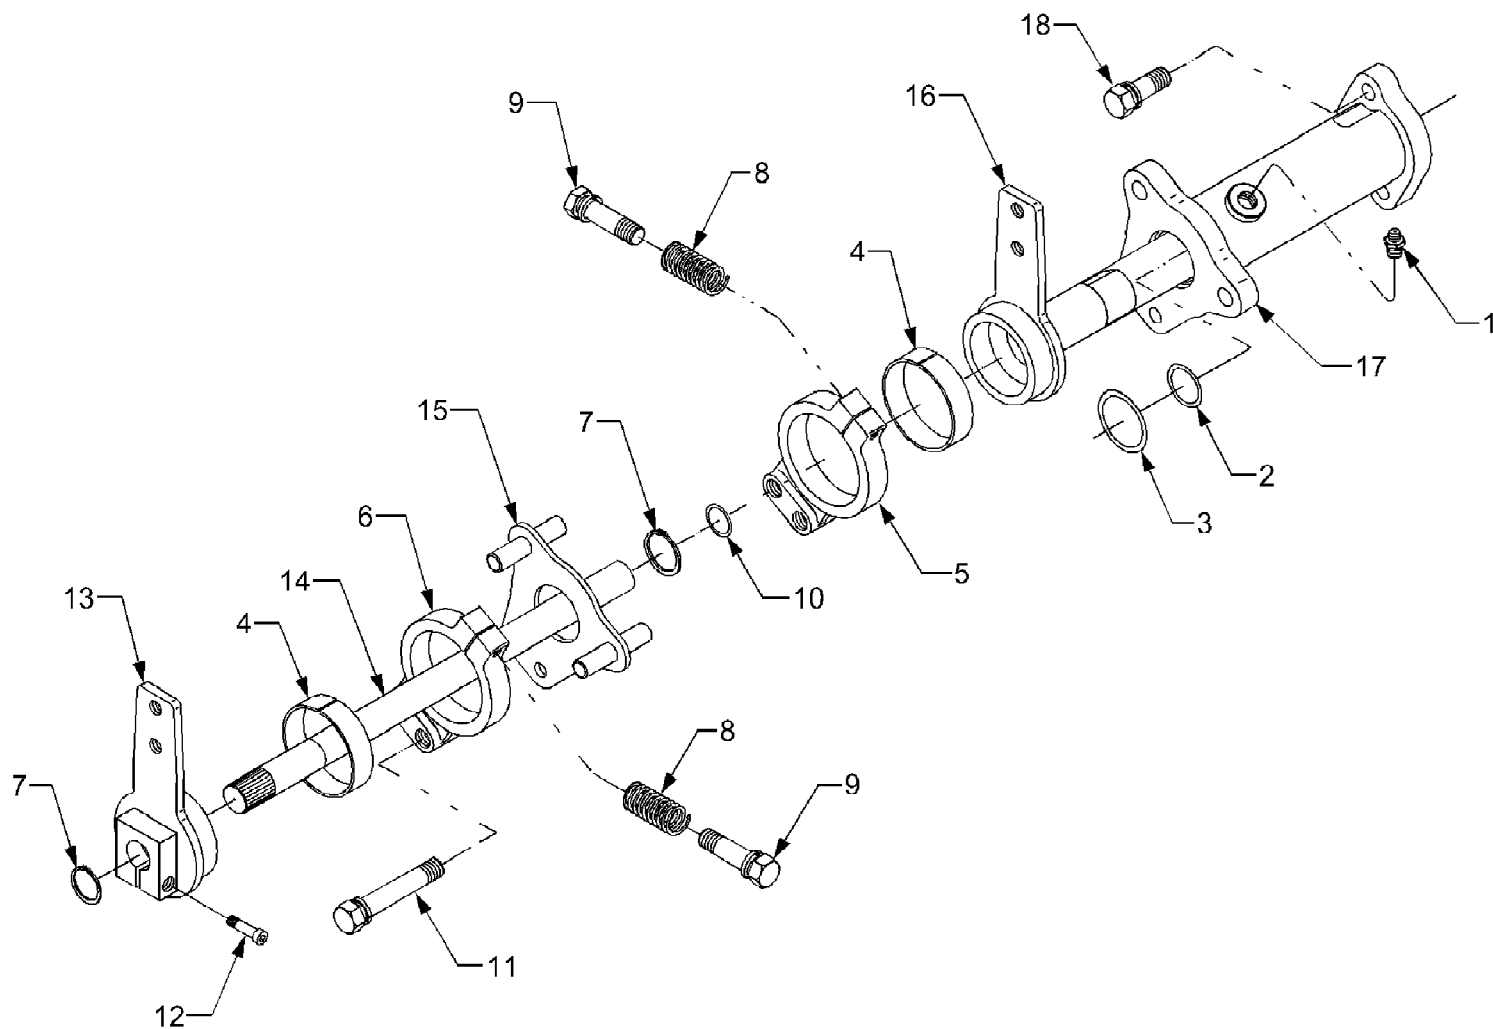


8404 Tractor
Hydraulic Lift Control Group 1

Page 96 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-06613-10010	1		Nipple, Grease
2	DD-04811-00210	1		O-ring
3	DD-04811-00250	1		O-ring
4	DD-T2610-39201	2		Clutch
5	DD-T2610-39211	1	S	Hub, 1 Clutch
6	DD-T2610-39221	1	S	Hub, 2 Clutch
7	DD-04612-00160	2		Cir-clip
8	DD-T2610-39233	2		Spring
9	DD-01053-50640	2		Bolt
10	DD-04811-00120	1		O-ring
11	DD-01123-50855	2		Bolt
12	DD-T2610-39252	1		Bolt
13	DD-T2610-39261	1		Lever, Control
14	DD-T2610-39272	1	/P	Shaft
15	DD-T2610-39281	1		Flange
16	DD-T2610-39292	1		Arm, Pitman
17	DD-T2610-39301	1		Support, Hydraulic Lever
18	DD-01123-50825	2		Bolt

8404 Tractor
Hydraulic Lift Inner Control Group 2

 Page 97 of 200

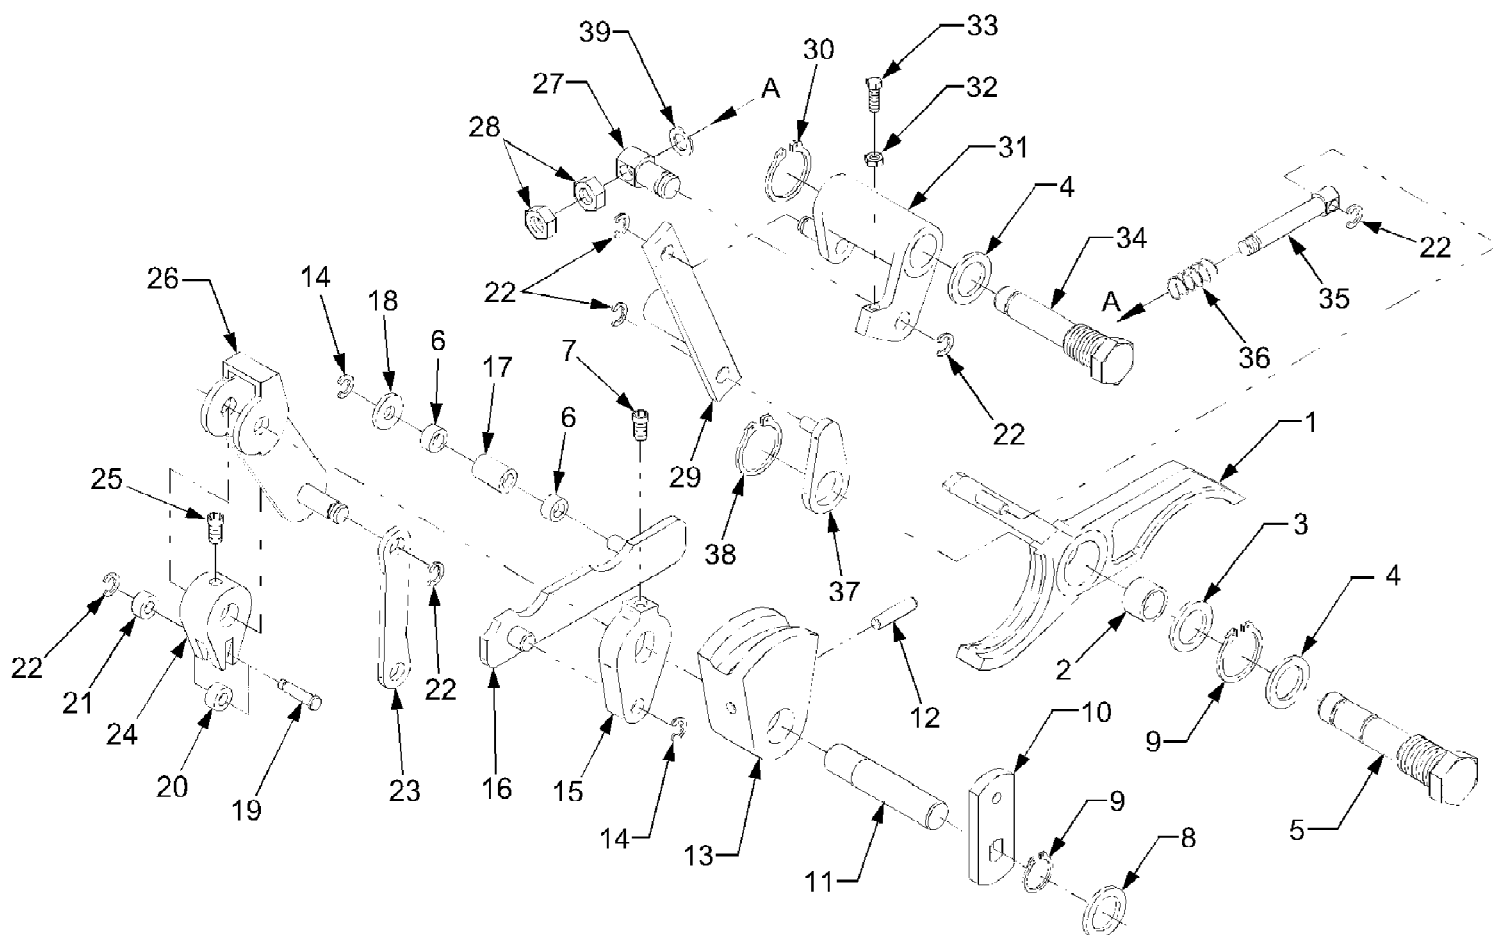


8404 Tractor
Hydraulic Lift Inner Control Group 2

Page 98 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-39351	1		Lever
2	DD-08811-62216	1		Bearing, Needle
3	DD-T2610-39371	1		Washer
4	DD-04724-00180	2		Packing
5	DD-T2610-39402	1		Pin
6	DD-T2610-39411	2		Roller 3
7	DD-T2610-39422	1		Screw, Lock
8	DD-T2610-39431	1		Seal, Oil
9	DD-04612-00160	2		Cir-clip
10	DD-T2610-39441	1		Link 4
11	DD-T2610-39451	1		Shaft
12	DD-05411-00635	1		Pin, Spring
13	DD-T2610-39462	1		Cam
14	DD-04613-50070	5		Cir-clip
15	DD-T2610-39472	1		Link 1
16	DD-T2610-39481	1		Link 2
17	DD-T2610-39491	1		Roller 4
18	DD-04011-50100	1		Washer, Plain
19	DD-T2610-39511	1		Pin
20	DD-T2610-39521	1		Roller 1
21	DD-T2610-39531	1		Roller 2
22	DD-04613-50060	4		Cir-clip
23	DD-T2610-39611	1		Link 3
24	DD-T2610-39562	1		Arm
25	DD-T2610-39572	1		Screw, Lock
26	DD-T2610-39582	1		Cam 1
27	DD-T2610-39601	1		Pin
28	DD-02014-50060	2		Nut
29	DD-T2610-39551	1		Link
30	DD-04612-00150	1		Cir-clip
31	DD-T2610-39621	1		Arm
32	DD-02114-50080	1		Nut
33	DD-T2610-39631	1		Bolt
34	DD-T2610-39652	1		Pin
35	DD-T2610-39661	1		Pin
36	DD-T2610-39672	1		Spring
37	DD-T2610-39681	1		Link
38	DD-04612-00150	1		Cir-clip
39	DD-04014-50060	1		Washer, Plain

8404 Tractor
Hydraulic Pipe Group

 
Page 99 of 200

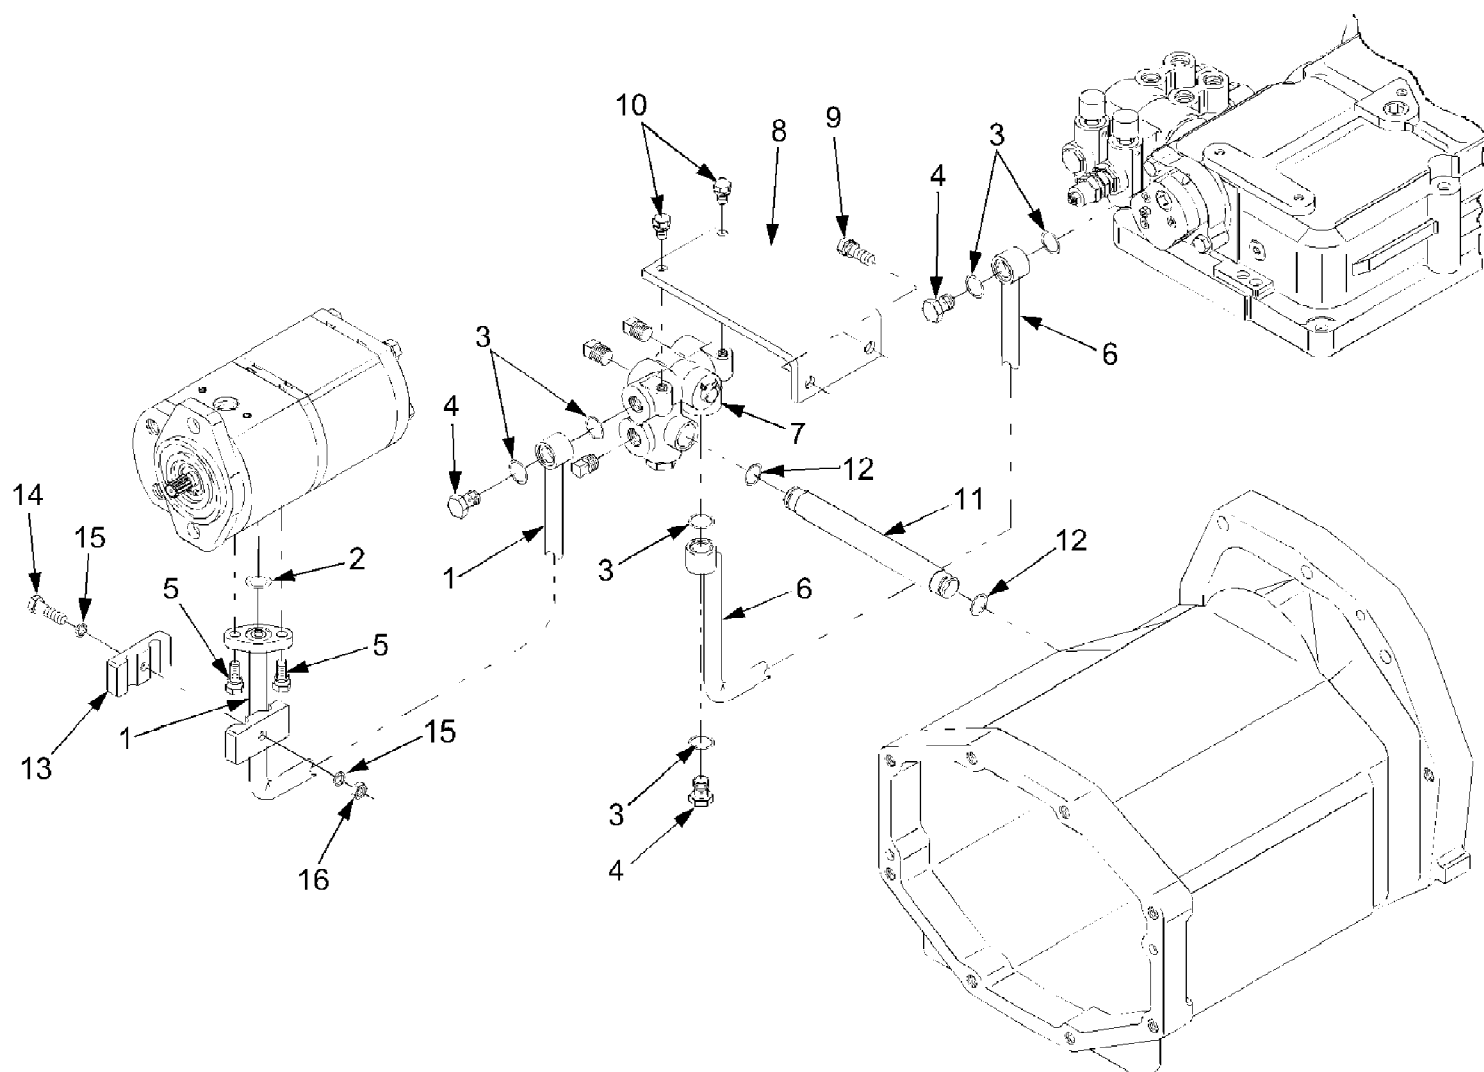

8404 Tractor
Hydraulic Pipe Group

Page 100 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-37074	1		Pipe 1, Hydraulic
2	DD-04810-00180	1		O-ring
3	DD-04810-00200	6		O-ring
4	DD-T4620-37092	3		Bolt, Joint
5	DD-01123-50820	2		Bolt
6	DD-T2615-37136	1		Pipe 2, Hydraulic
7	DD-T4625-37012	1		Hydraulic Block Ass'y
8	DD-T2610-37042	1		Support, Hydraulic Block
9	DD-01133-51025	2		Bolt
10	DD-01123-50820	2		Bolt
11	DD-T2610-37022	1		Pipe, Return
12	DD-04811-05170	2		O-ring
13	DD-T4620-37061	2		Clamp 2, Pipe
14	DD-01053-50635	1		Bolt
15	DD-04015-50060	2		Washer, Plain
16	DD-02056-50060	1		Nut

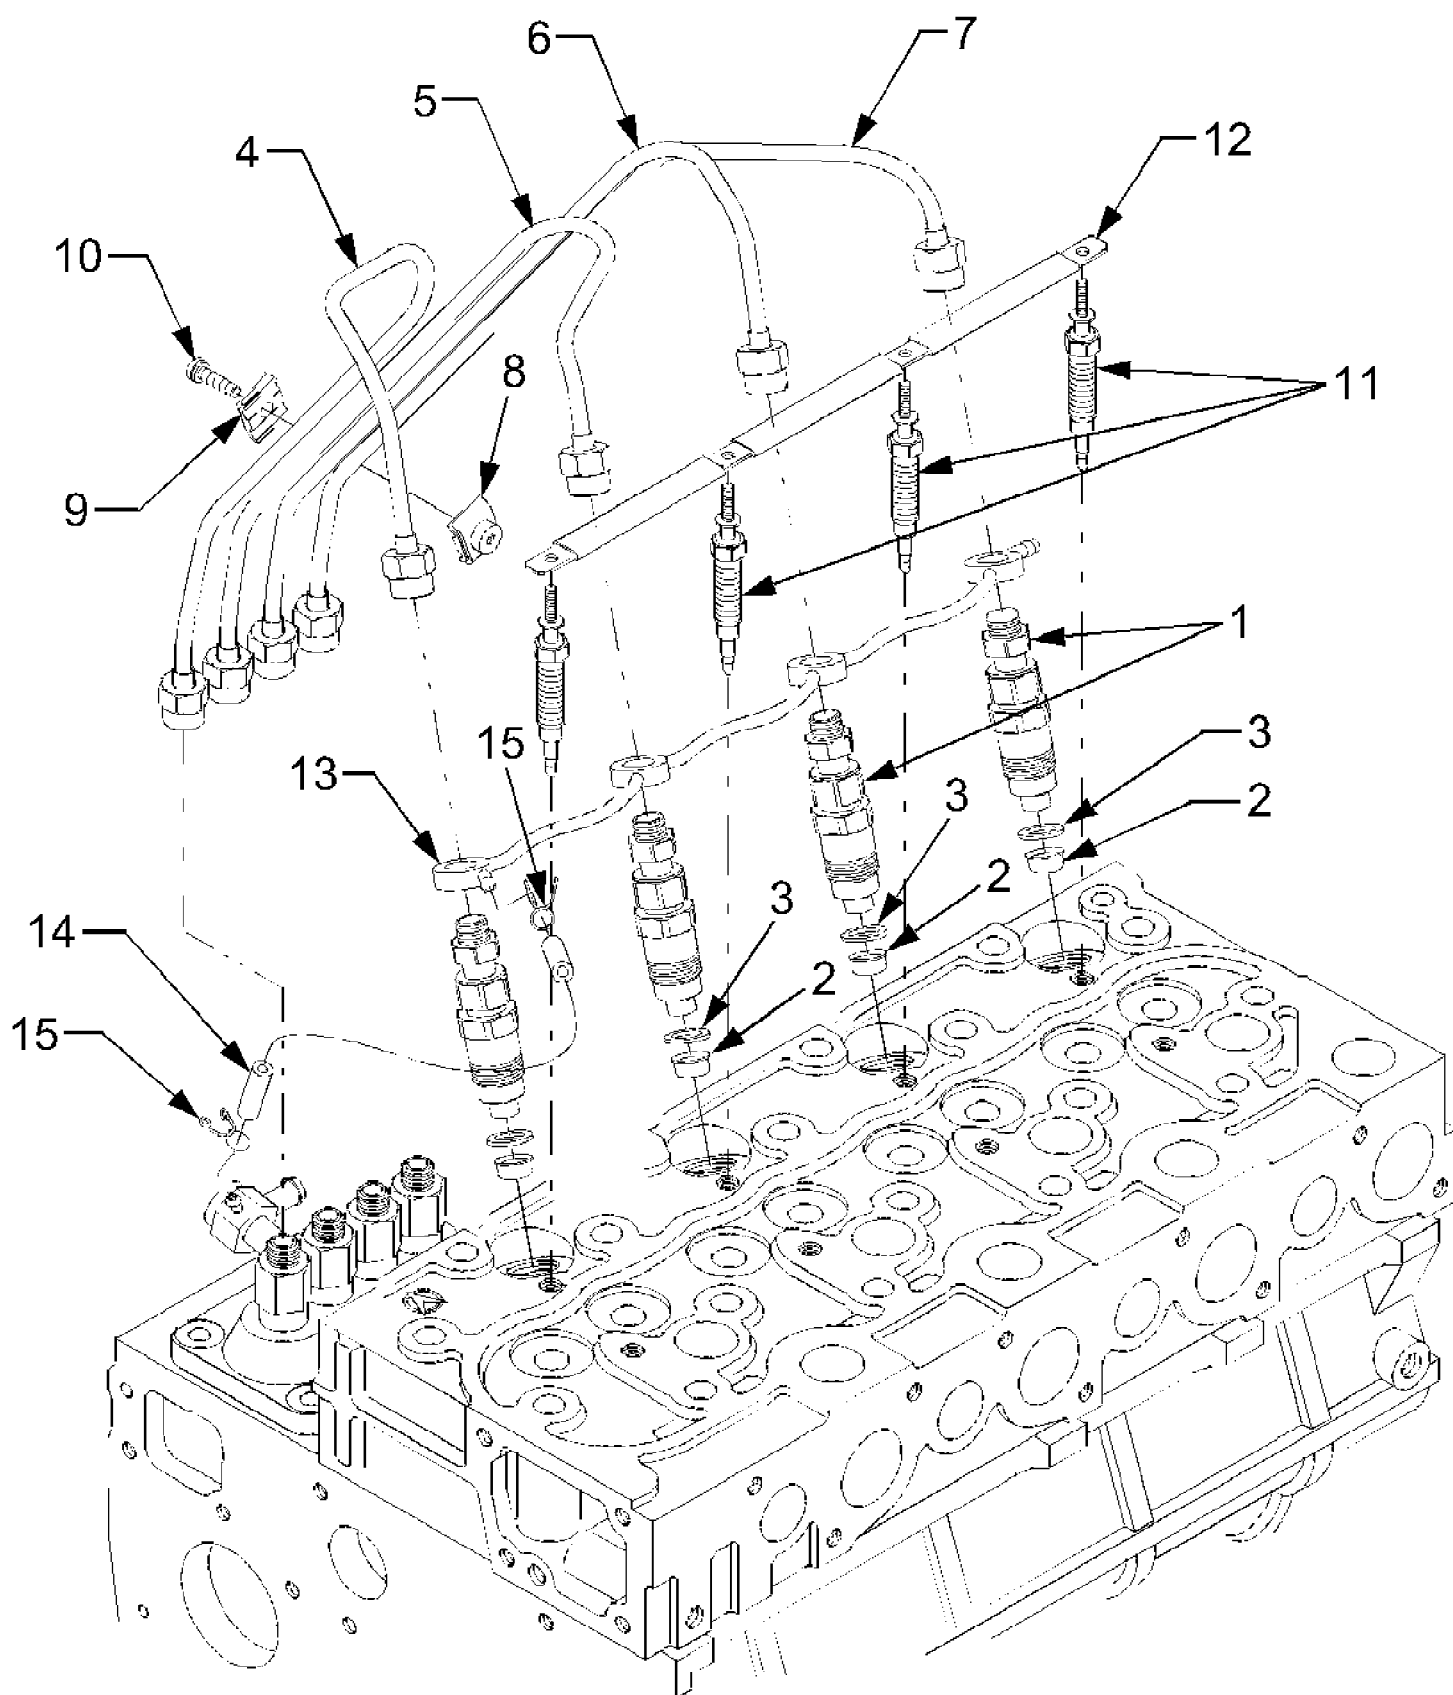 


8404 Tractor
Injection Nozzles

Page 102 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6300-53003	4	S	Nozzle Holder Ass'y
2	DD-E6300-53651	4		Seal
3	DD-E6300-53621	4		Gasket
4	DD-E6301-53713	1		Pipe 1, Injection
5	DD-E6301-53723	1		Pipe 2, Injection
6	DD-E6301-53733	1		Pipe 3, Injection
7	DD-E6301-53743	1		Pipe 4, Injection
8	DD-15121-53852	3		Clamp 1, Pipe
9	DD-T4815-67371	3		Clamp 2, Pipe
10	DD-03024-50520	3		Screw
11	DD-E6301-65512	4	/P	Plug, Glow
12	DD-E6305-65562	1		Cord, Glow Plug
13	DD-E6301-42501	1		Over Flow Pipe Ass'y
14	DD-09661-40300	1		Tube, Fuel
15	DD-14971-42751	2		Clamp, Pipe

8404 Tractor
Instrument Group

 
Page 103 of 200

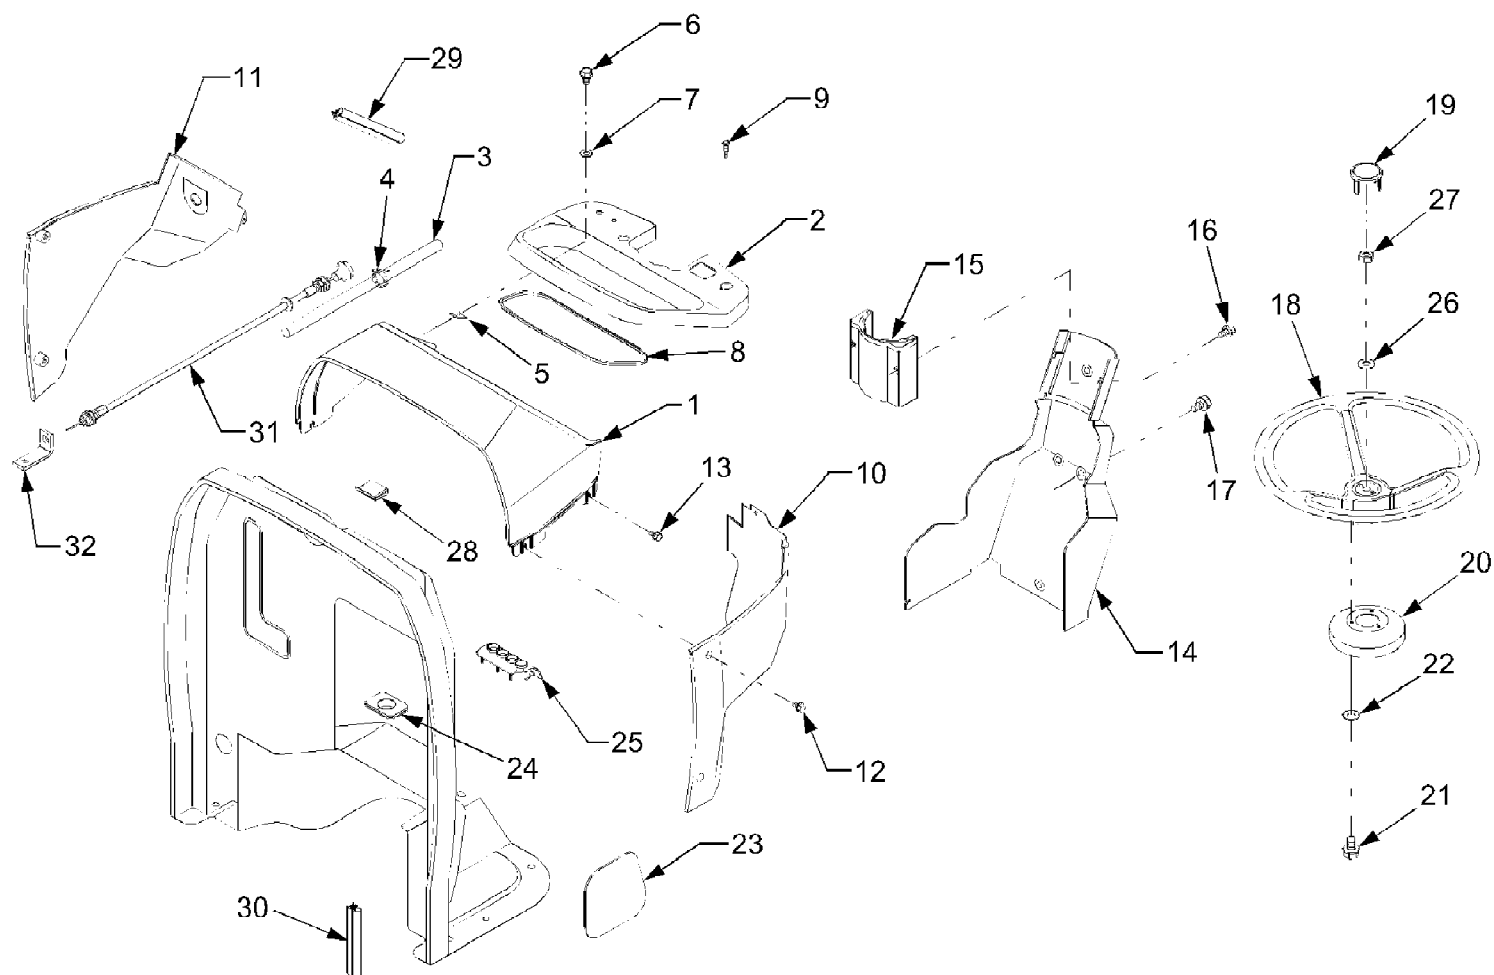

8404 Tractor
Instrument Group

Page 104 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4620-55324	1	S	Hood, Instrument
2	DD-T4680-55334	1	S	Cover, Instrument
3	DD-09661-50800	1		Hose 3, Fuel
4	DD-14971-42751	1		Clamp, Pipe
5	DD-38245-29253	4		Nut, Spring
6	DD-01202-50618	4		Bolt
7	DD-04013-50060	4	/P	Washer, Plain
8	DD-T4620-55391	1		Packing
9	DD-38240-18831	10		Screw
10	DD-T4620-55344	1	S	Cover, Instrument (LH)
11	DD-T4620-55357	1	S	Cover, Instrument (RH)
12	DD-01754-50616	4		Bolt, Flange
13	DD-01754-50620	2		Bolt, Flange
14	DD-T4620-55363	1	S	Cover 1, Steering
15	DD-T4620-55373	1	S	Cover 2, Steering
16	DD-41122-51241	2		Bolt
17	DD-01754-50820	4		Bolt, Flange
18	DD-T4620-55451	1	S	Steering Wheel
19	DDT462055461001	1		Cap, Steering Wheel
20	DD-T4620-55471	1		Cover, Steering Wheel
21	DD-03027-50512	3		Screw
22	DD-04015-50500	3		Washer, Plain
23	DD-T4620-55383	1		Cover, Frame
24	DD-T4620-55401	1		Grommet 1
25	DD-T4620-55411	1		Grommet 2
26	DD-04512-50120	1		Washer, Spring
27	DD-02176-50120	1		Nut
28	DD-T4620-50741	1		Rubber
29	DD-T2610-55333	1		Rubber
30	DD-T4620-54381	1		Rubber
31	DD-T4625-34801	1		Wire, Engine Stop
32	DD-E5205-57482	1		Holder, Wire

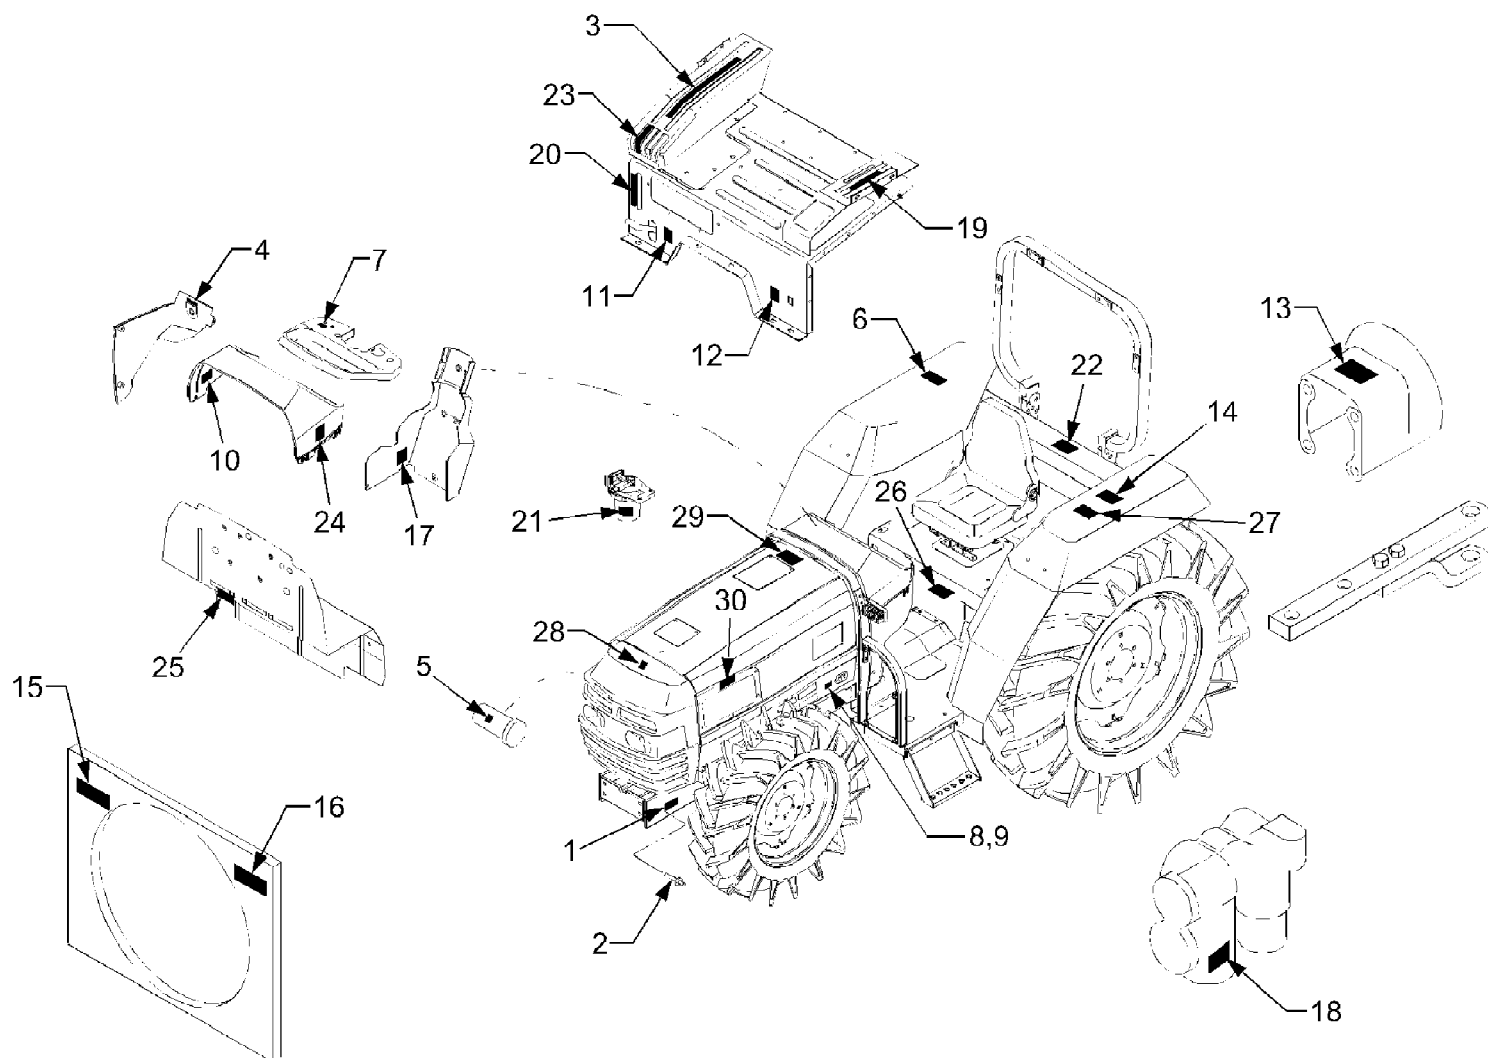 



8404 Tractor
Label Group

Page 106 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2616-52021	1		Label, Product
2	DD-05624-20408	4		Rivet
3	DD-T2615-52251	1		Label, Position
4	DD-T4625-52101	1		Label, Start S/W
5	DD-T2241-50112	1		Label, Cartridge
6	DD-T2325-50512	1		Label, Safety
7	DD-T4625-52162	1		Label, PTO Clutch
8	DD-T4625-52172	2		Label, Reminder(RH)
9	DD-T4625-52182	2		Label (LH)
10	DD-T4625-52191	1		Label, Parking Brake
11	DD-T2305-26691	1	S	Label, Diff. Lock
12	DD-94612-48171	1		Label, Front Wheel
13	DD-T2325-50743	1		Label, Pto Caution
14	DD-T2445-50724	1		Label, Rops Caution
15	DD-T4625-52351	2		Label, Caution(Fan)
16	DD-T4625-52361	1		Label, Muffler
17	DD-T2241-50702	1		Label, Caution
18	DD-T4625-52281	1		Label, Hyd. Block
19	DD-T2615-52092	1		Label, Hi-Low
20	DD-T2615-53052	1		Label, Mid PTO
21	DD-T2325-50192	1		Label, Fuel Filter
22	DD-T2615-52131	1		Label, Coupler Socket
23	DD-T2610-52051	1		Label, Adjusting Lever
24	DD-T4625-53191	1		Label, Caution
25	DD-T2541-88212	1		Label, Cooling Water
26	DD-T2610-52461	1		Label, Speed Control
27	DD-T2615-53061	1		Label, Oil
28	DD-T4685-52181	1		Label, Front Grill
29	DD-T2615-54111	1		Label, Fuel Caution
30	DD-T2615-55111	1	S	Label, Muffler Caution

8404 Tractor
Light Group

  
Page 107 of 200

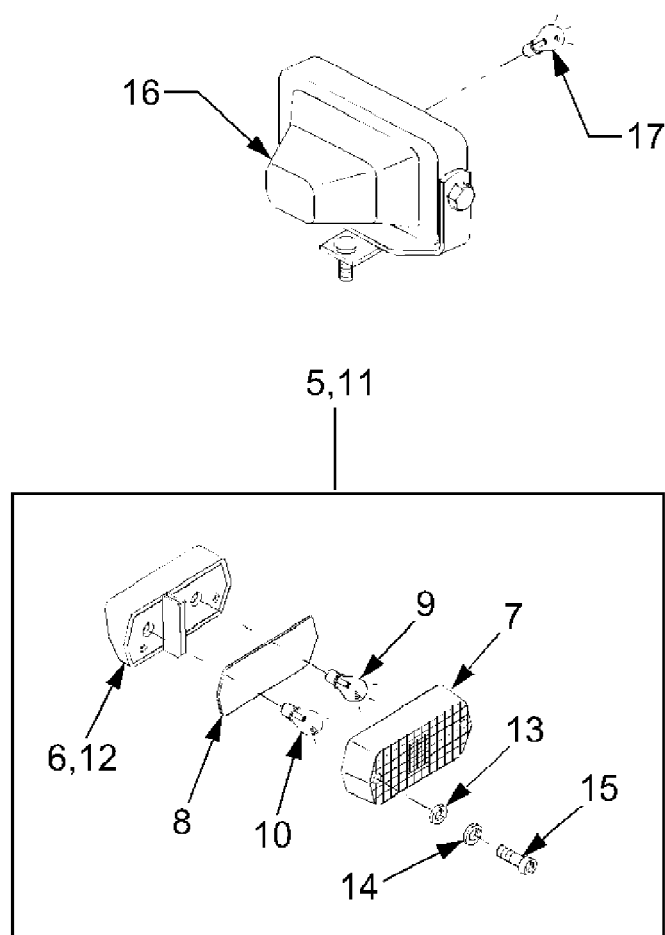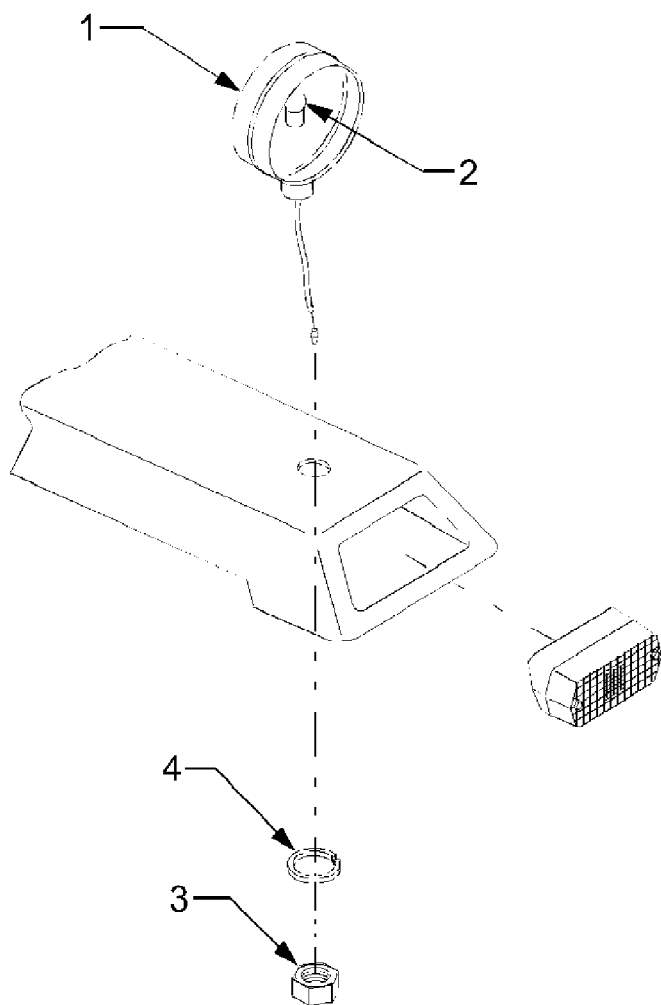

8404 Tractor
Light Group

Page 108 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-84612-34231	2		Lamp, Hazard
2	DD-84612-34281	2		Bulb, Hazard
3	DD-02014-50100	2		Nut
4	DD-04512-50100	2		Washer, Spring
5	DD-T4520-75894	1		Reflector Amp Ass'y (LH)
6	DD-T4520-75631	1		Body(Lh)
7	DD-T4340-33661	2		Lens
8	DD-T4340-33671	2		Packing
9	DD-T4340-33682	2		Bulb
10	DD-T4340-33692	2		Bulb
11	DD-T4520-75884	1		Reflector Amp Ass'y (RH)
12	DD-T4520-75621	1		Body(Rh)
13	DD-04012-50050	4		Washer, Plain
14	DD-04512-50050	4		Washer, Spring
15	DD-T4340-33712	4		Screw
16	DD-T2616-34501	1		Working Lamp Ass'y
17	DD-T4340-33682	1		Bulb

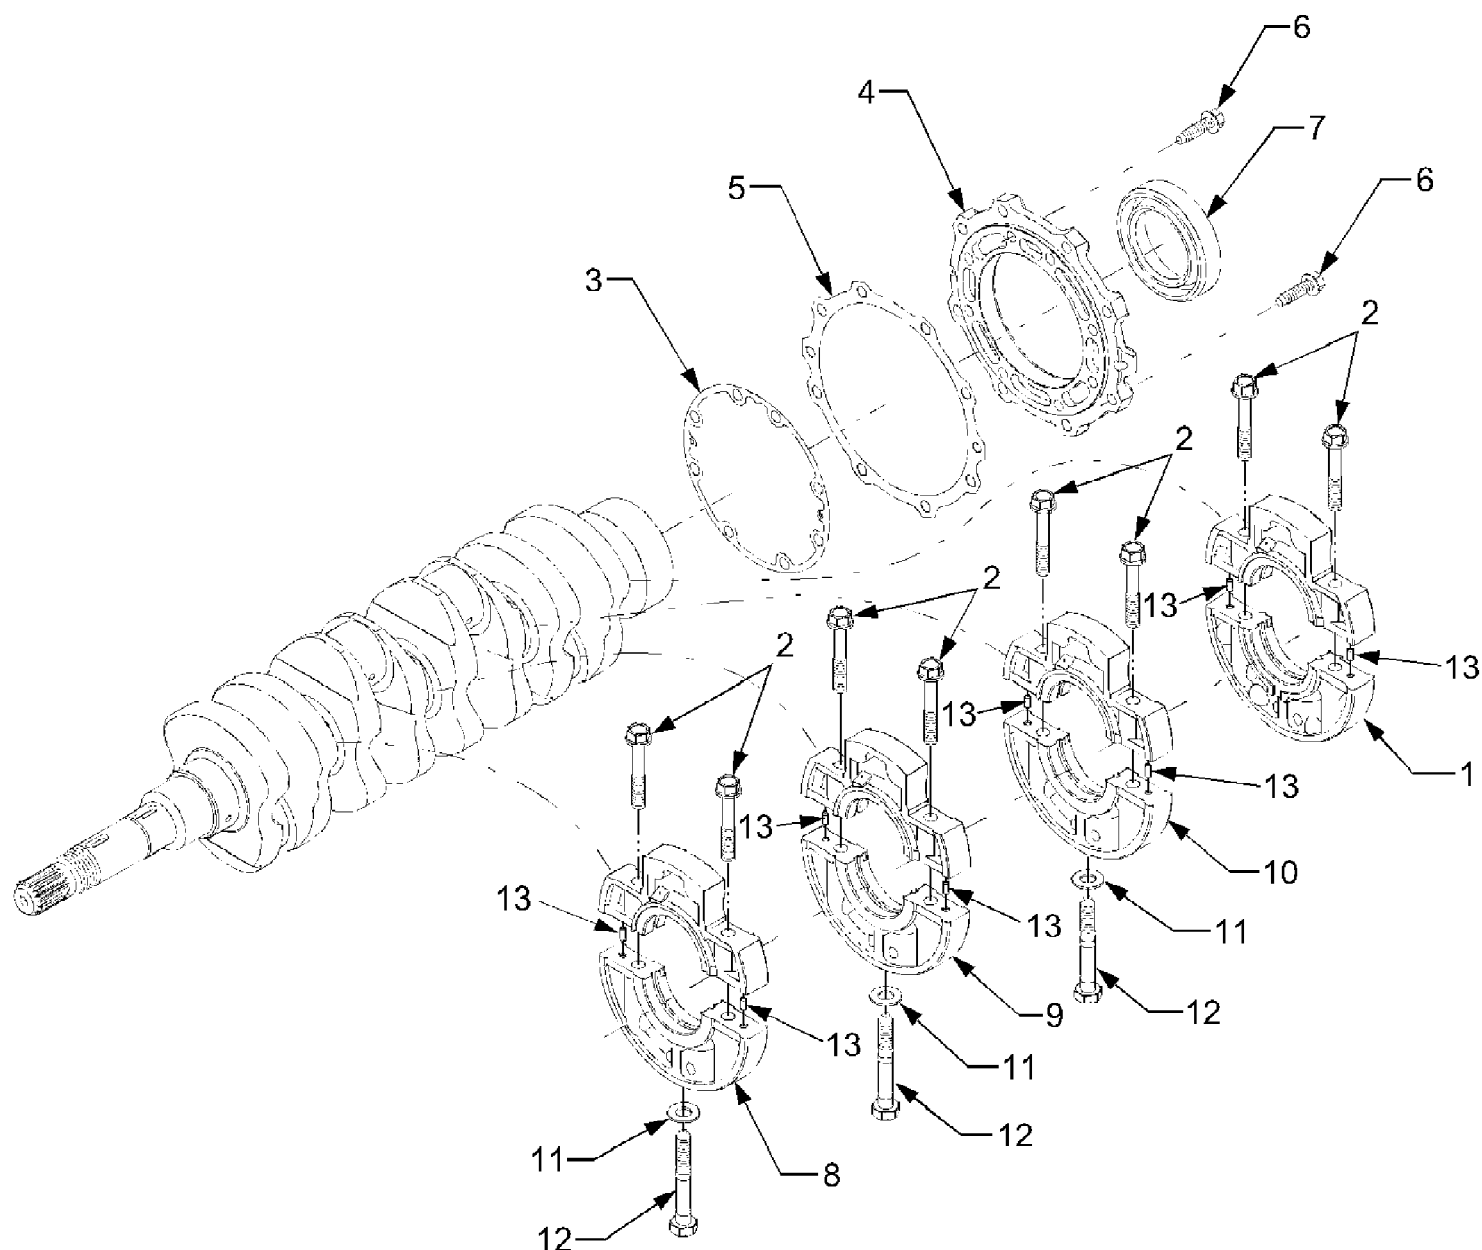 


8404 Tractor
Main Bearing Case

Page 110 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6300-A0033	1		Main Bearing Case Ass'y Includes Ref. Nos. 2 & 13
2	DD-E6300-04542	8		Bolt 1, Bearing Case
3	DD-E6300-04362	1		Gasket, Bearing Case
4	DD-E6300-04812	1		Cover, Main Bearing Case
5	DD-E6300-04821	1		Gasket, Bearing Case
6	DD-01654-50830	16		Pin, Flange Bolt
7	DD-E5500-04464	1		Seal, Oil
8	DD-E6300-A0043	1		Main Bearing Case 1 Ass'y Includes Ref. Nos. 2 & 13
9	DD-E6300-A0053	1		Main Bearing Case 2 Ass'y Includes Ref. Nos. 2 & 13
10	DD-E6300-A0063	1		Main Bearing Case 3 Ass'y Includes Ref. Nos. 2 & 13
11	DD-15521-94021	3		Washer
12	DD-15291-04562	3		Bolt 2, Bearing Case
13	DD-05012-00408	8		Pin, Straight

8404 Tractor
Main Distributor Valve Group

 Page 111 of 200

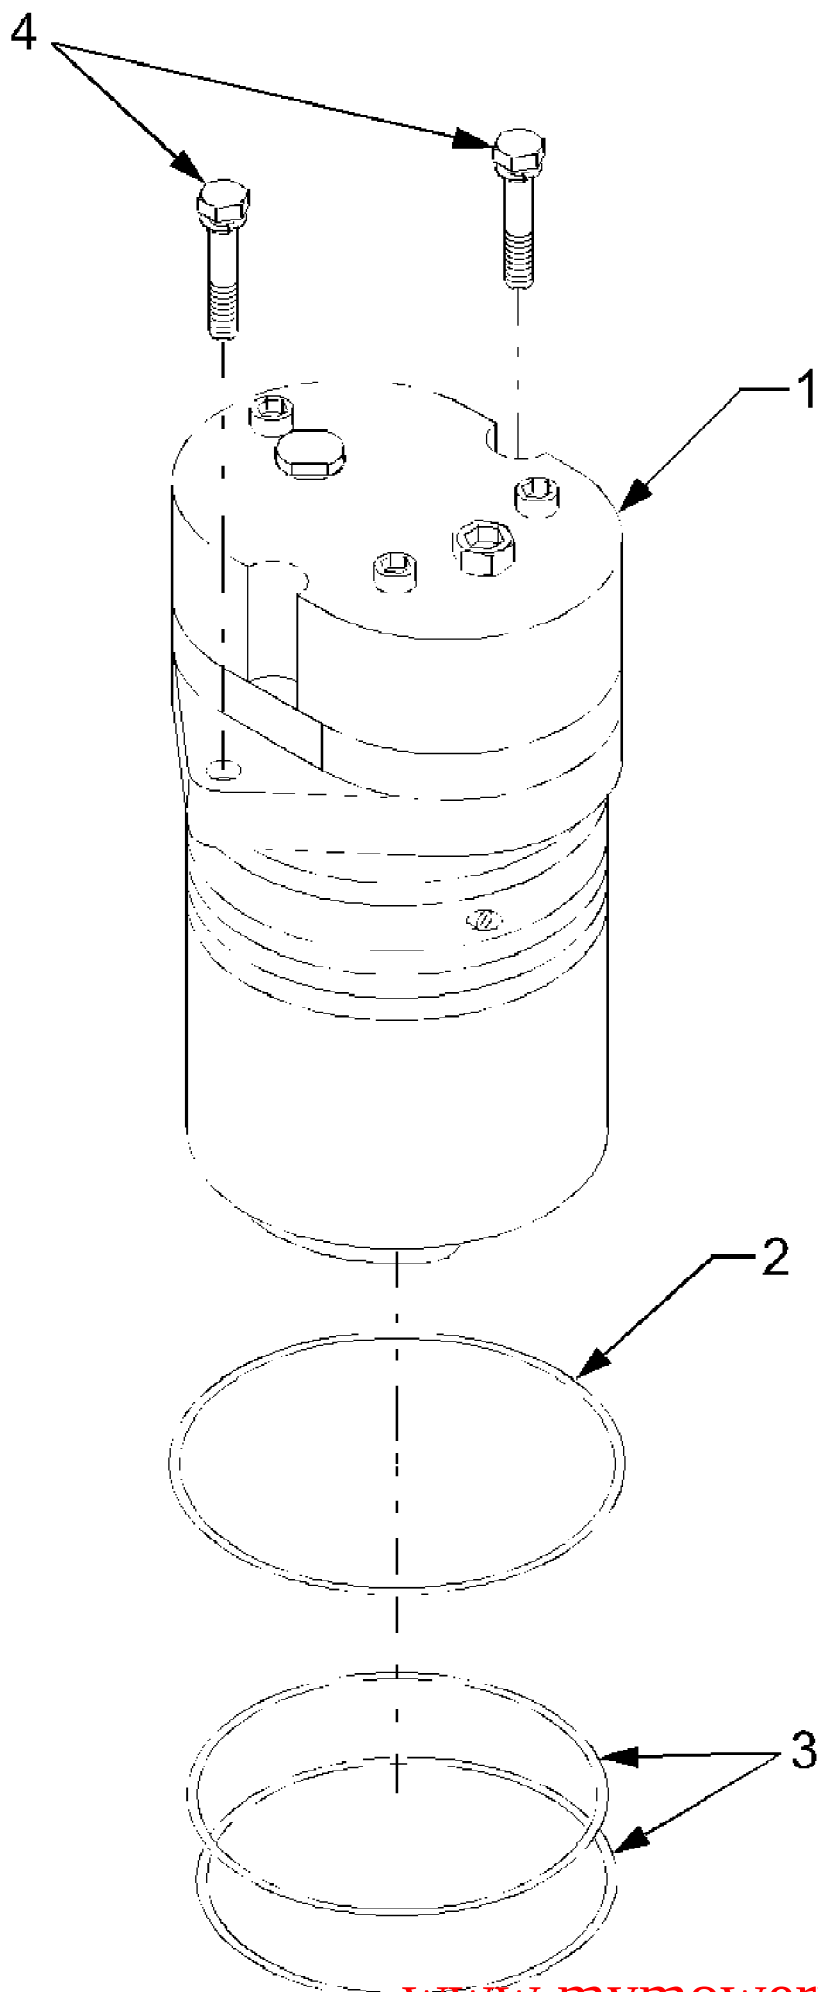


8404 Tractor
Main Distributor Valve Group

Page 112 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-110053004	1	/P	Control Valve Ass'y
2	DD-04810-00550	1		O-ring
3	DD-04810-50500	2		O-ring
4	DD-01123-50835	2		Bolt

8404 Tractor
Main Shaft

 
Page 113 of 200

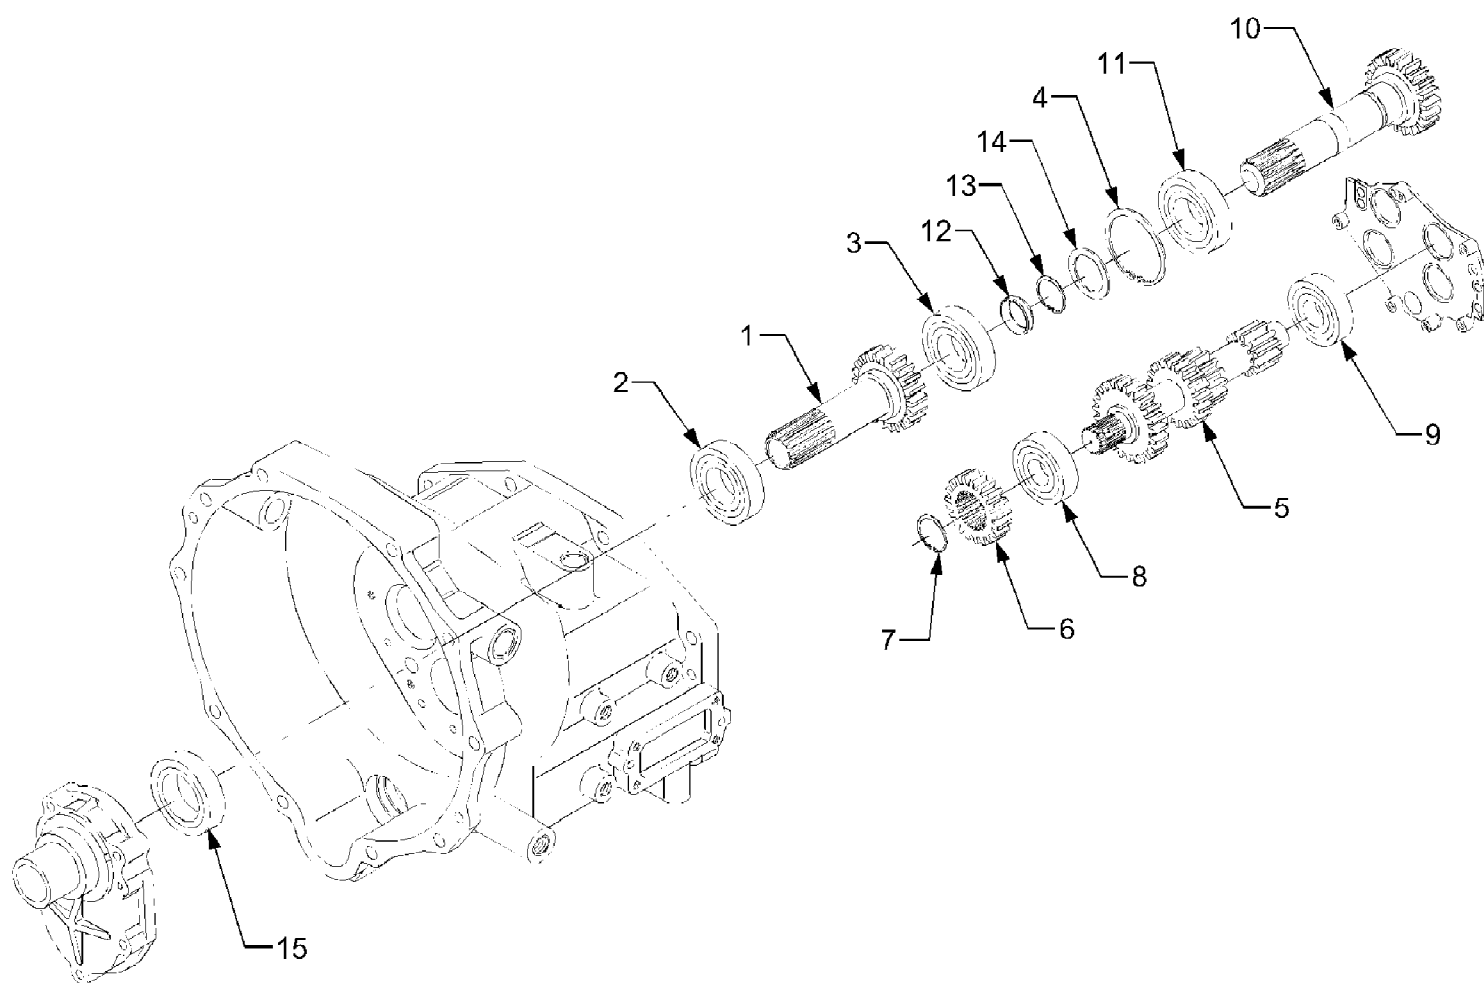

8404 Tractor
Main Shaft

Page 114 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-21511	1		Shaft, 25 Gear
2	DD-08101-06207	1		Bearing, Ball
3	DD-08101-06908	1		Bearing, Ball
4	DD-04611-00620	1		Cir-clip
5	DD-T2615-21532	1		Gear, Main Shaft
6	DD-T2615-21521	1		Gear, 26
7	DD-04611-00250	1		Cir-clip
8	DD-08101-06305	1		Bearing, Ball
9	DD-T2610-22661	1		Bearing, Ball
10	DD-T2615-25212	1		Shaft, 22 Gear (PTO)
11	DD-T2610-22661	1		Bearing, Ball
12	DD-T2440-21361	1		Seal, Oil
13	DD-37150-21551	1		Cir-clip
14	DD-34150-21561	1		Collar
15	DD-09500-35528	1		Seal, Oil

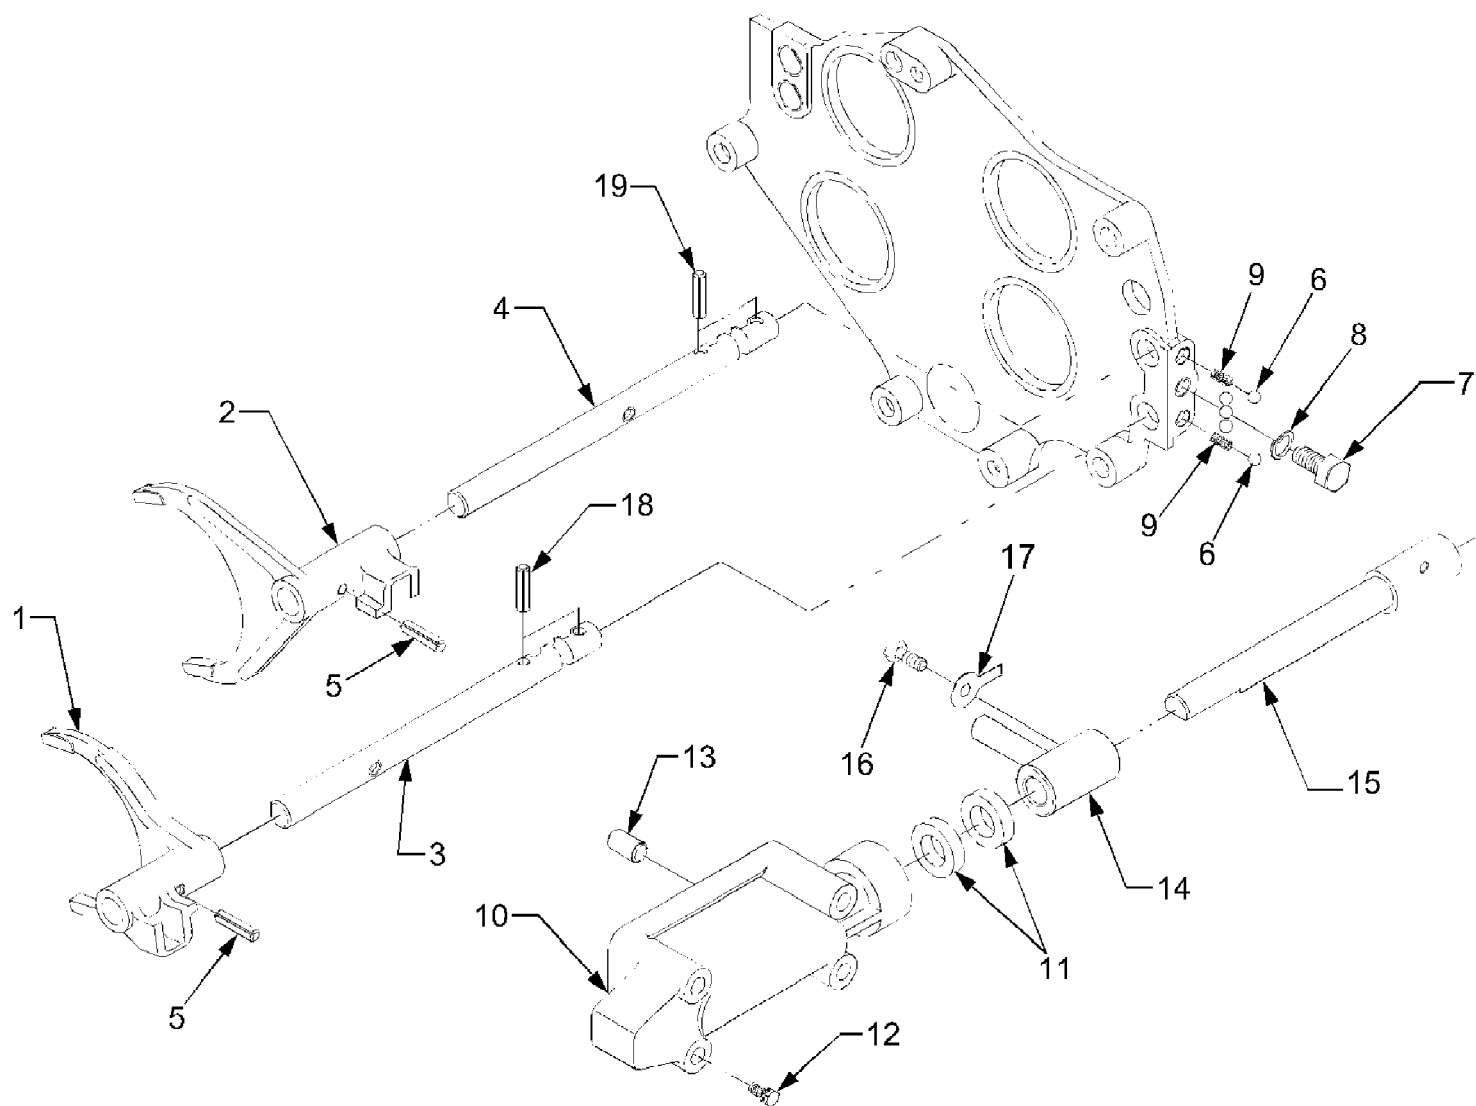 


8404 Tractor
Main Shift Fork Group

Page 116 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-21241	1		Fork, Shift (1,2)
2	DD-T2610-21251	1		Fork, Shift (3,4)
3	DD-T2610-21543	1	/P	Rod, Fork (1,2)
4	DD-T2610-21553	1	/P	Rod, Fork (3,4)
5	DD-05411-00625	2		Pin, Spring
6	DD-07715-01605	5		Ball
7	DD-T2610-21593	1		Bolt, Stopper
8	DD-04512-50100	1		Washer, Spring
9	DD-62331-18532	2		Spring
10	DD-T2610-21212	1		Cover, Shift (Main)
11	DD-09500-16287	2		Seal, Oil
12	DD-01123-50865	4		Bolt
13	DD-05012-00818	2		Pin, Straight
14	DD-T2610-21351	1		Arm, Shift
15	DD-T2610-21361	1		Rod 1, Shift
16	DD-T4620-21371	1		Bolt, Lock
17	DD-04111-50060	1		Washer
18	DD-05411-00420	2		Pin, Spring
19	DD-05411-00420	2		Pin, Spring

8404 Tractor
Main Shift Lever Group

 Page 117 of 200

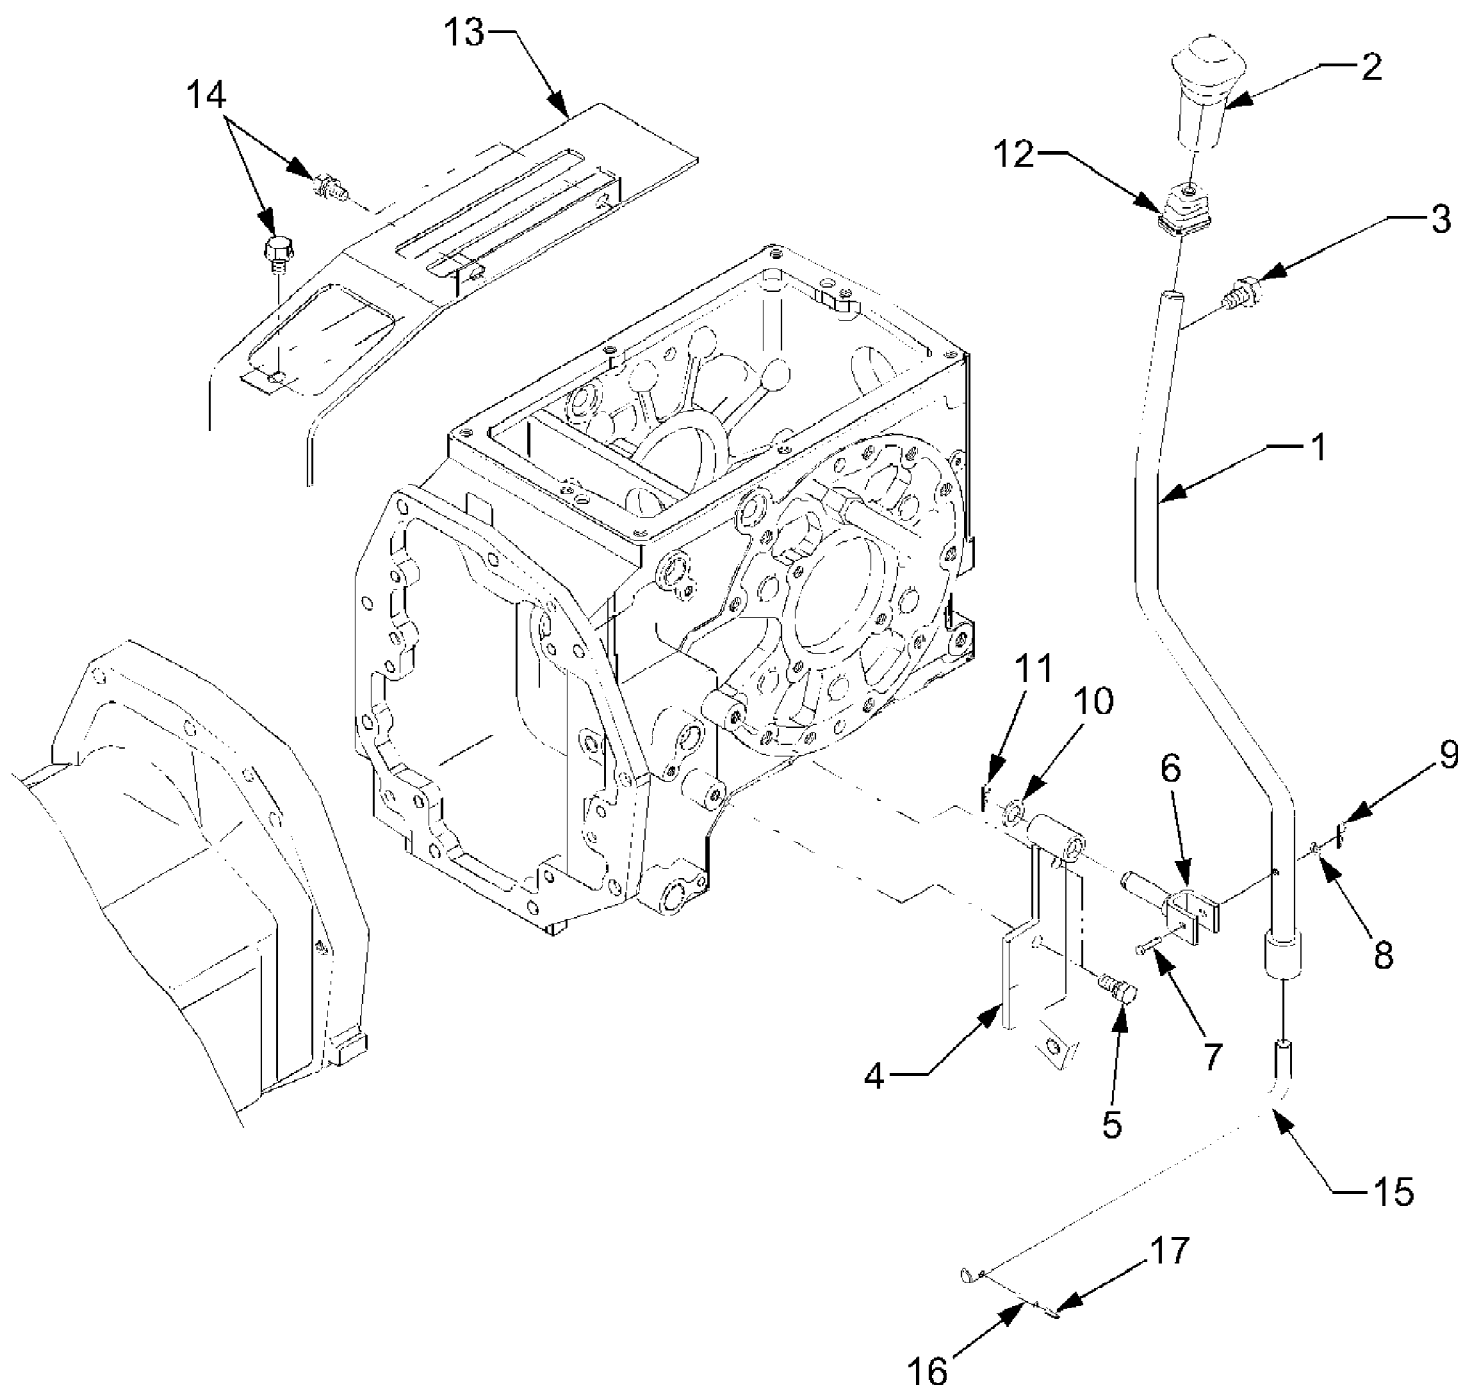


8404 Tractor
Main Shift Lever Group

Page 118 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-60324	1		Lever, Main Shift
2	DD-T4835-66443	1	S	Grip, Main Shift
3	DD-03024-50516	1		Screw
4	DD-T2610-60341	1		Bracket, Main Shift
5	DD-01133-51020	2		Bolt
6	DD-T2610-60331	1		Pin, Main Shift
7	DD-05122-50635	1		Pin, Joint
8	DD-04013-50060	1	/P	Washer, Plain
9	DD-05525-50600	1		Pin, Snap
10	DD-04011-50140	1		Washer, Plain
11	DD-05515-51600	1		Pin, Snap
12	DD-T4620-60371	1		Boot, Main Shift
13	DDT261060362YW	1		Guide, Shift Lever
14	DD-01754-50816	4		Bolt, Flange
15	DD-T2610-21372	1		Rod 1, Main Shift
16	DD-05411-00525	1		Pin, Spring
17	DD-05411-00325	1		Pin, Spring

8404 Tractor
Manifold Group

 Page 119 of 200

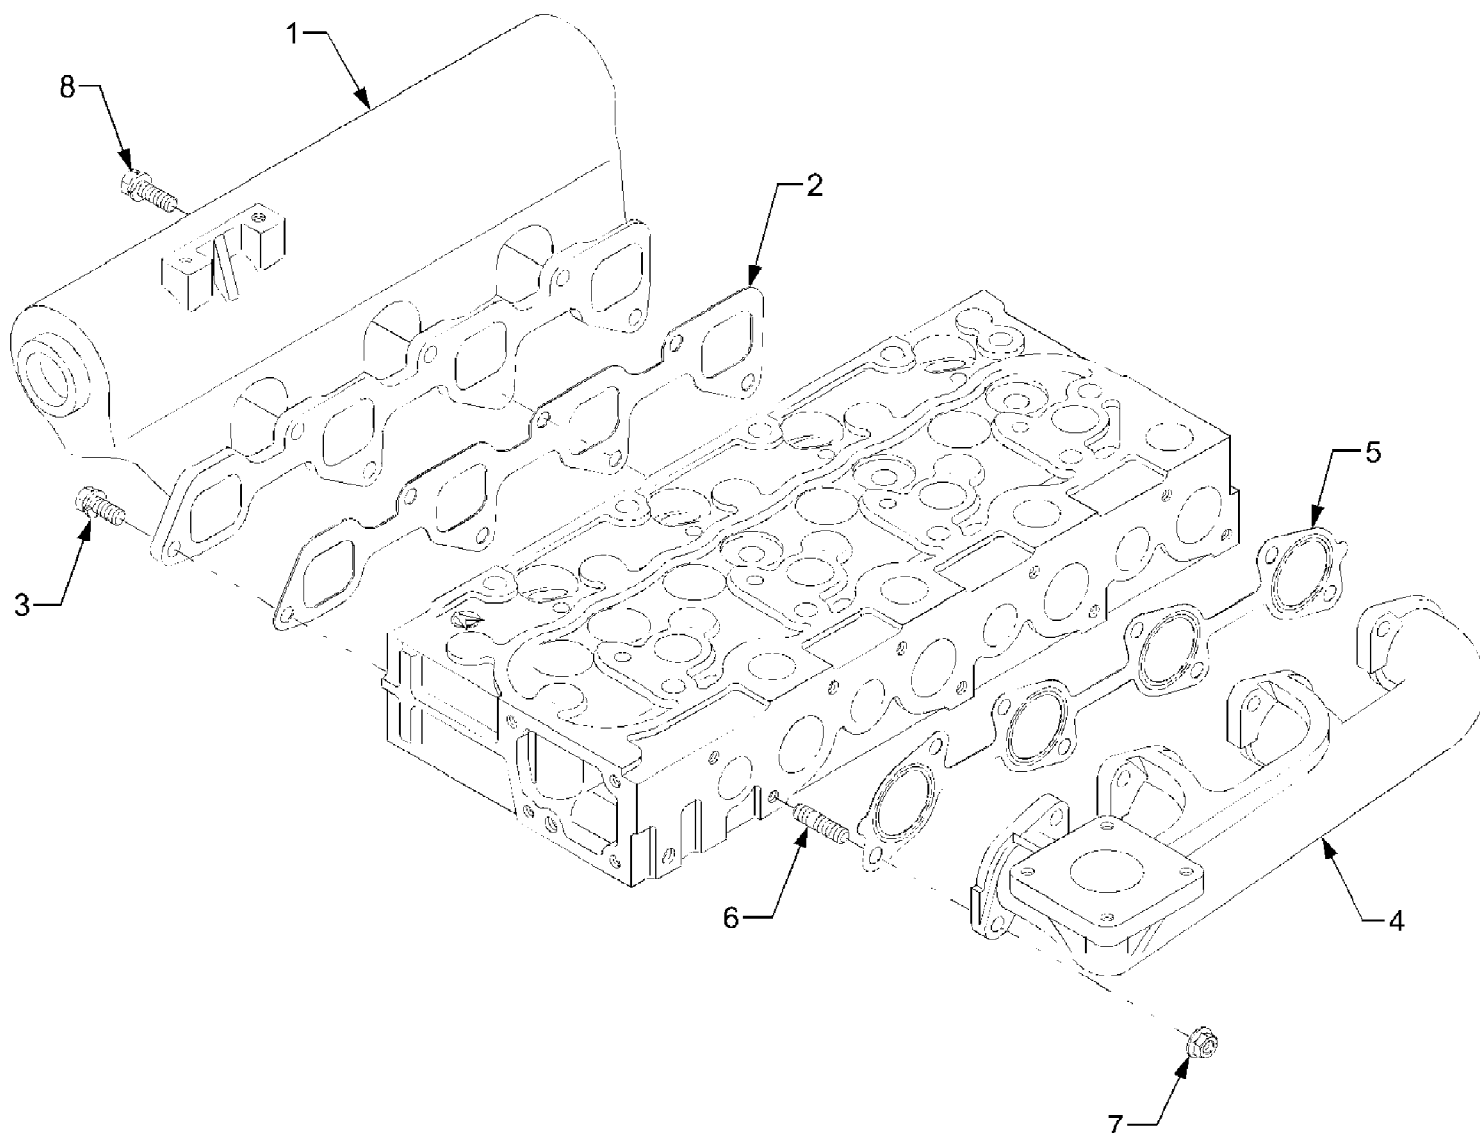


8404 Tractor
Manifold Group

Page 120 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6301-11763	1		Manifold, Inlet
2	DD-E6301-11822	1		Gasket, Inlet Manifold
3	DD-01123-50822	5		Bolt
4	DD-E6305-12313	1		Manifold, Exhaust
5	DD-E6520-12351	1	/P	Gasket,Exhaust Manifold
6	DD-01513-50822	6		Stud
7	DD-02751-50080	8		Nut, Flange
8	DD-01123-50825	2		Bolt

8404 Tractor
Mid PTO Shaft Group

 Page 121 of 200

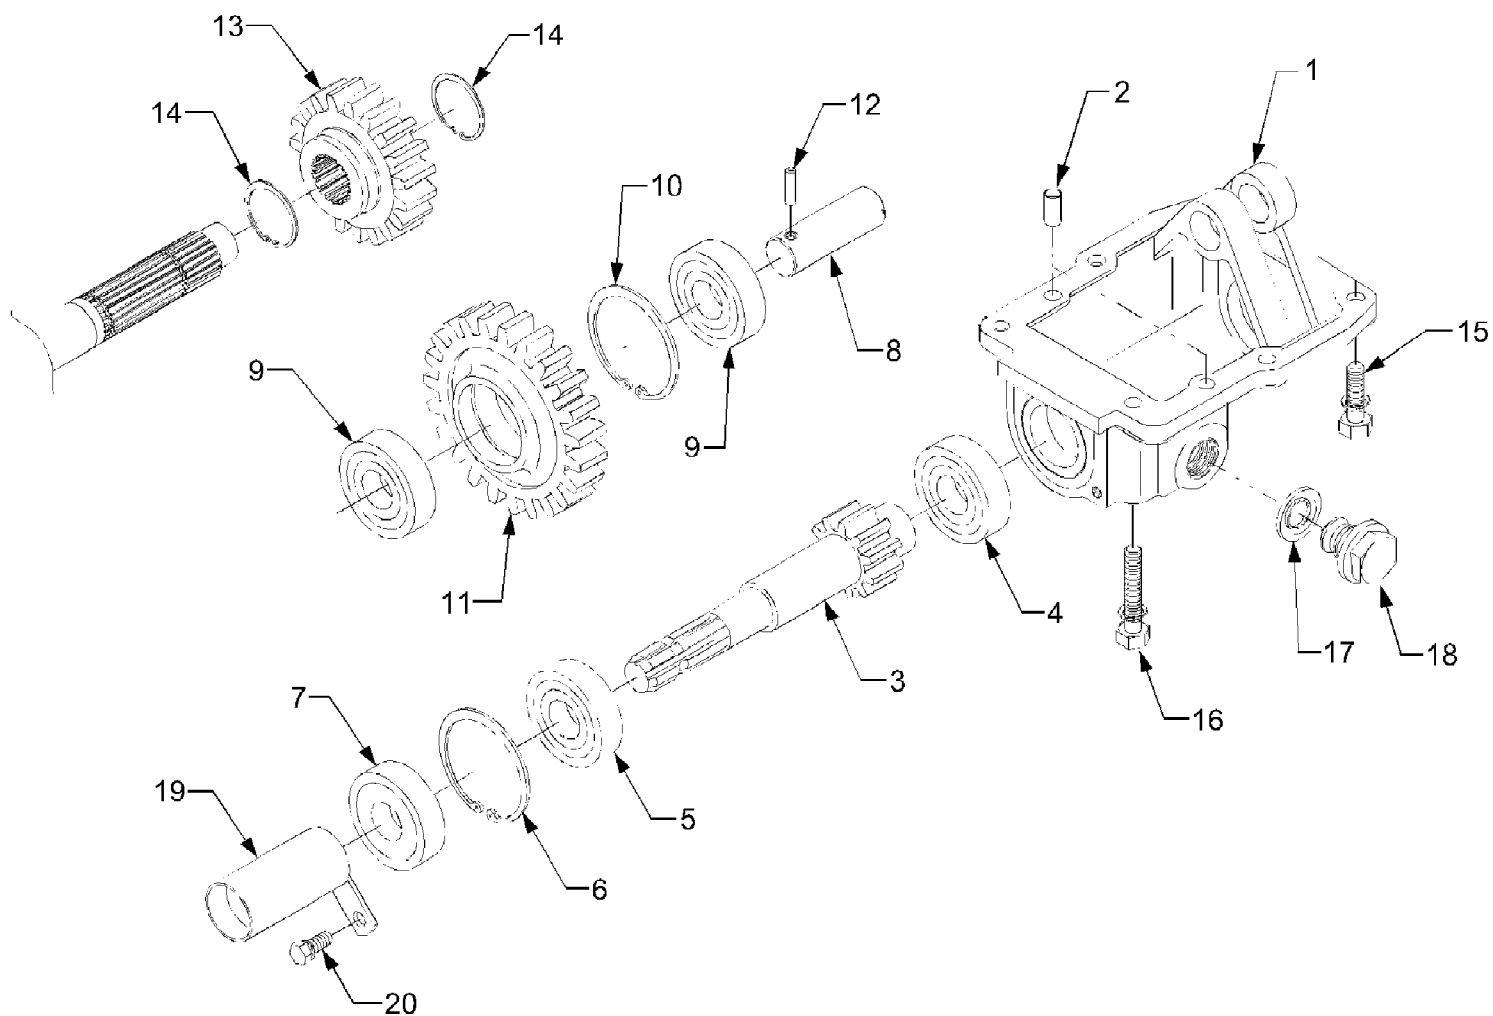


8404 Tractor
Mid PTO Shaft Group

Page 122 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-24112	1		Case, Mid PTO
2	DD-05012-01018	2		Pin, Straight
3	DD-T2615-24121	1		Shaft, 14 Gear (M. PTO)
4	DD-T2610-24131	1		Bearing, Ball
5	DD-08101-06205	1		Bearing, Ball
6	DD-04611-00520	1		Cir-clip
7	DD-09502-55210	1		Seal, Oil
8	DD-T2615-24141	1		Shaft, Counter (M. PTO)
9	DD-08101-06205	2		Bearing, Ball
10	DD-04611-00520	1		Cir-clip
11	DD-T2615-24151	1		Gear, 41 Spur
12	DD-05411-00640	1		Pin, Spring
13	DD-T2615-24161	1		Gear, 20 Spur
14	DD-04612-00300	2		Cir-clip
15	DD-01133-51030	5		Bolt
16	DD-01133-51080	1		Bolt
17	DD-04717-02650	1		Washer, Seal
18	DD-T4260-14271	1		Plug, Drain
19	DD-T2615-24171	1		Cover, Protect
20	DD-01123-50816	1		Bolt

8404 Tractor
Mid PTO Shift Lever Group

 
Page 123 of 200

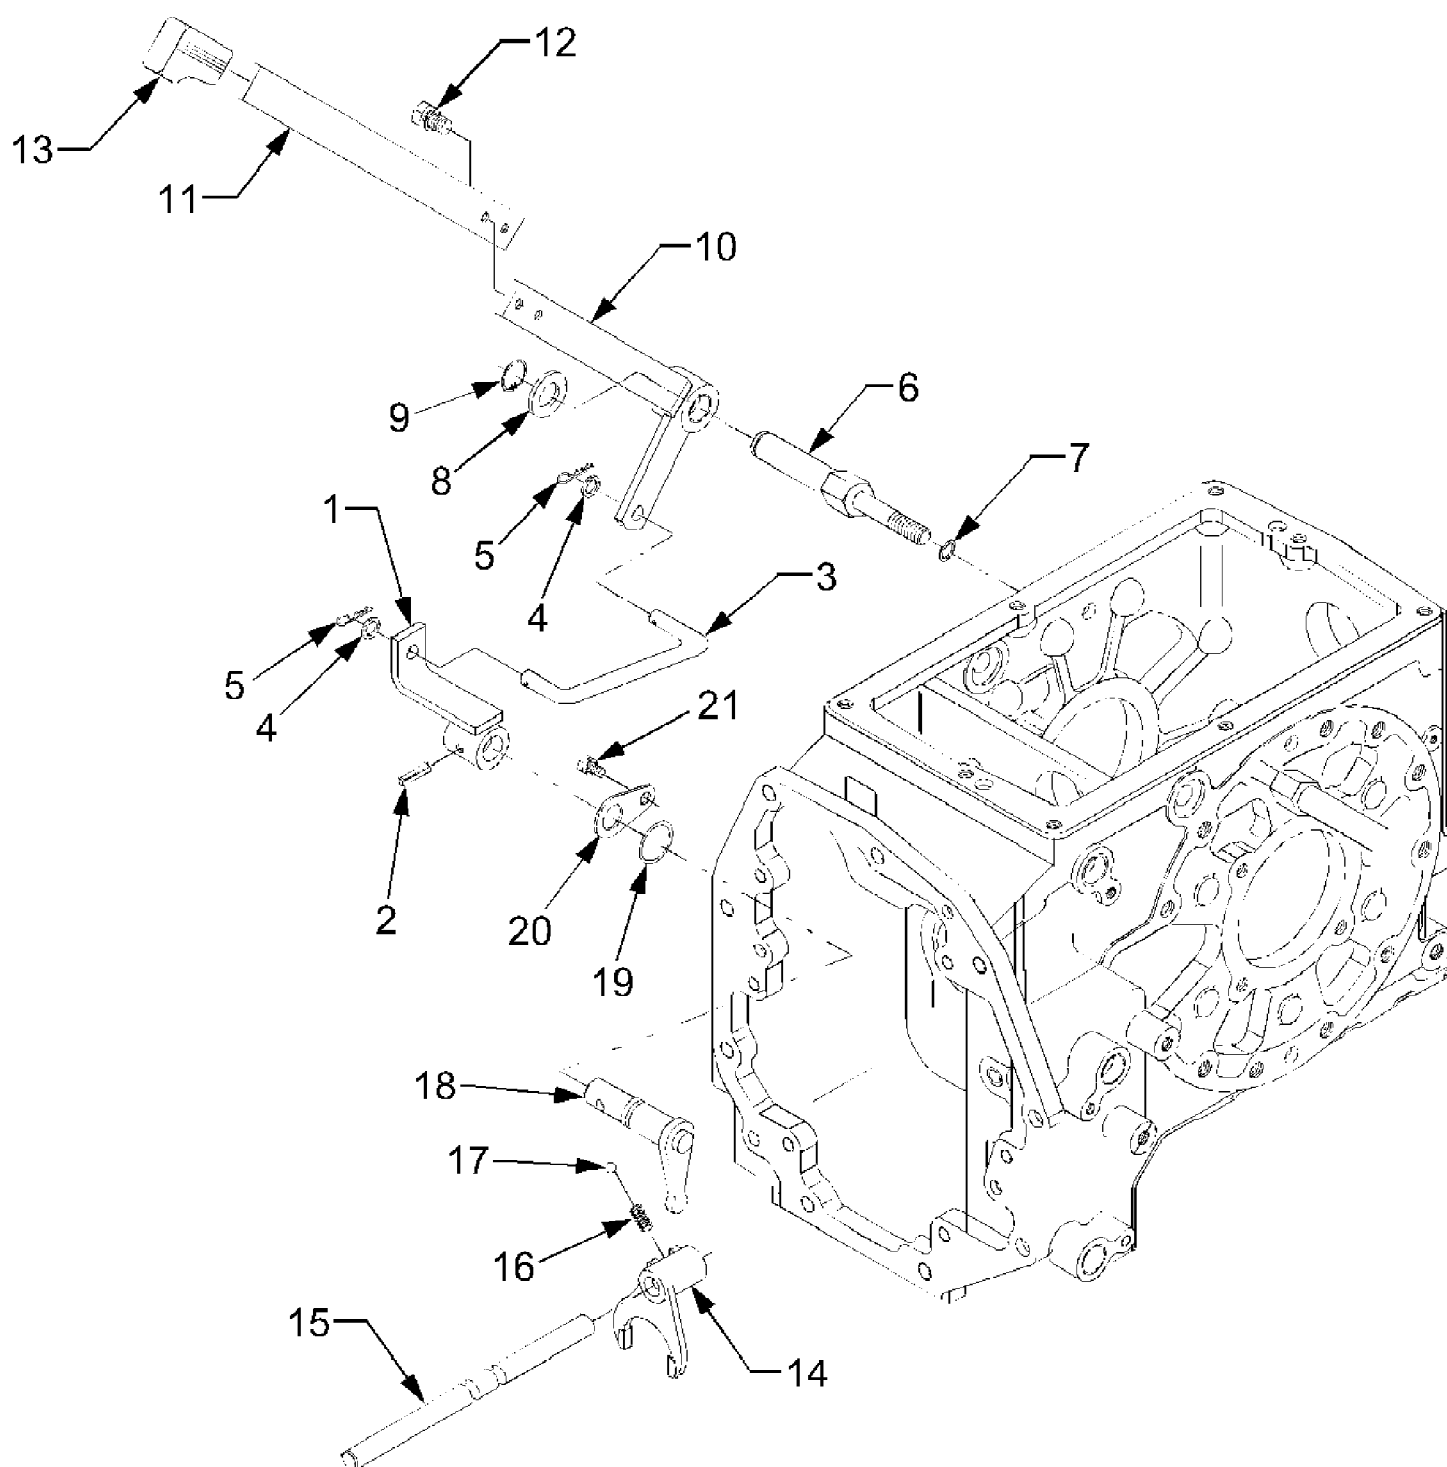

8404 Tractor
Mid PTO Shift Lever Group

Page 124 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-24242	1		Lever 1, Mid PTO
2	DD-05411-00630	1		Pin, Spring
3	DD-T2615-24422	1		Rod (Mid PTO)
4	DD-04011-50100	2		Washer, Plain
5	DD-05525-51000	2		Pin, Snap
6	DD-T2615-24432	1		Shaft, Lever (Mid PTO)
7	DD-04512-50120	1		Washer, Spring
8	DD-04011-50180	1		Washer, Plain
9	DD-04612-00180	1		Cir-clip
10	DD-T2615-24442	1		Mid PTO Lever Ass'y
11	DD-T2615-24412	1		Lever, Mid PTO
12	DD-01123-50816	2		Bolt
13	DD-T4260-24461	1		Grip
14	DD-T2615-24221	1		Fork, Shift (Mid)
15	DD-T2615-24231	1		Rod, Fork (Mid)
16	DD-62331-18532	1		Spring
17	DD-07715-01605	1		Ball
18	DD-T2610-23271	1		Arm, Shift
19	DD-04811-00200	1		O-ring
20	DD-T4620-44331	1		Stopper
21	DD-01123-50816	1		Bolt

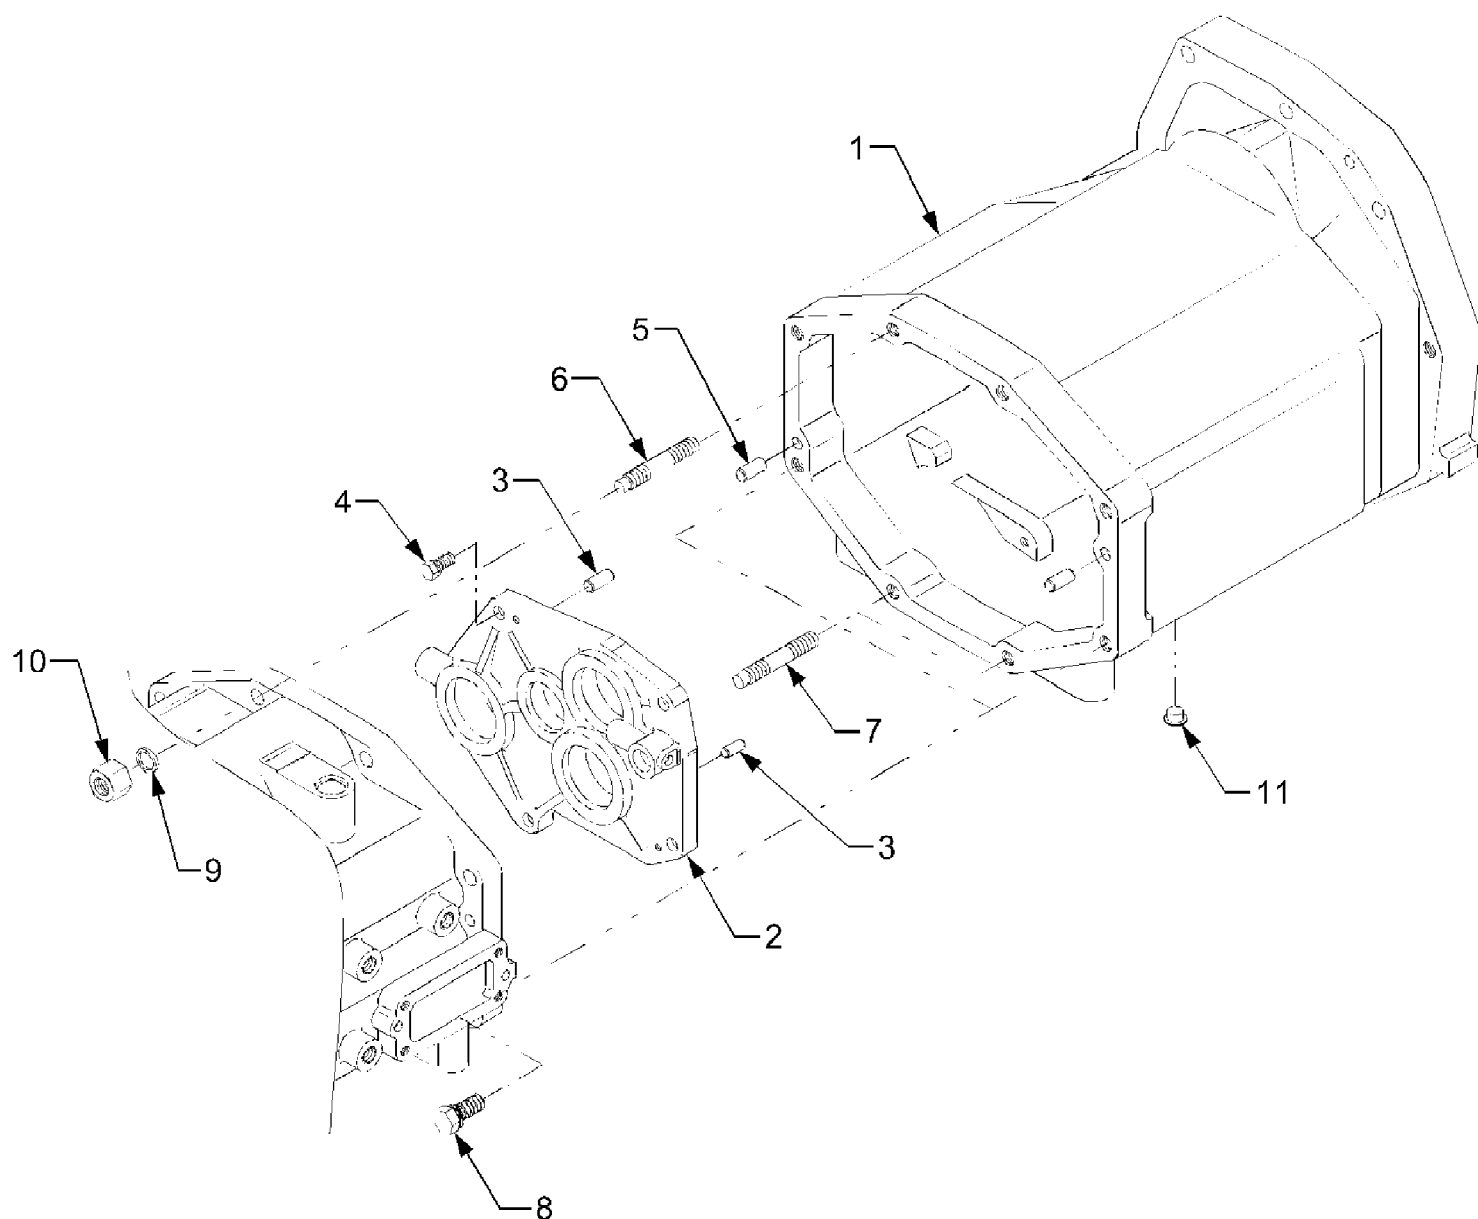 


8404 Tractor
Middle Case Group

Page 126 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-21154	1		Case, Middle
2	DD-T2610-22703	1		Cover, Bearing
3	DD-05012-00816	2		Pin, Straight
4	DD-01133-51035	4		Bolt
5	DD-05012-01018	2		Pin, Straight
6	DD-T4620-21481	4		Stud
7	DD-01574-21250	2		Stud
8	DD-01133-51240	2		Bolt
9	DD-04512-50120	6		Washer, Spring
10	DD-T4240-14081	6		Nut
11	DD-32210-27581	2		Plug

8404 Tractor
Muffler

 
Page 127 of 200

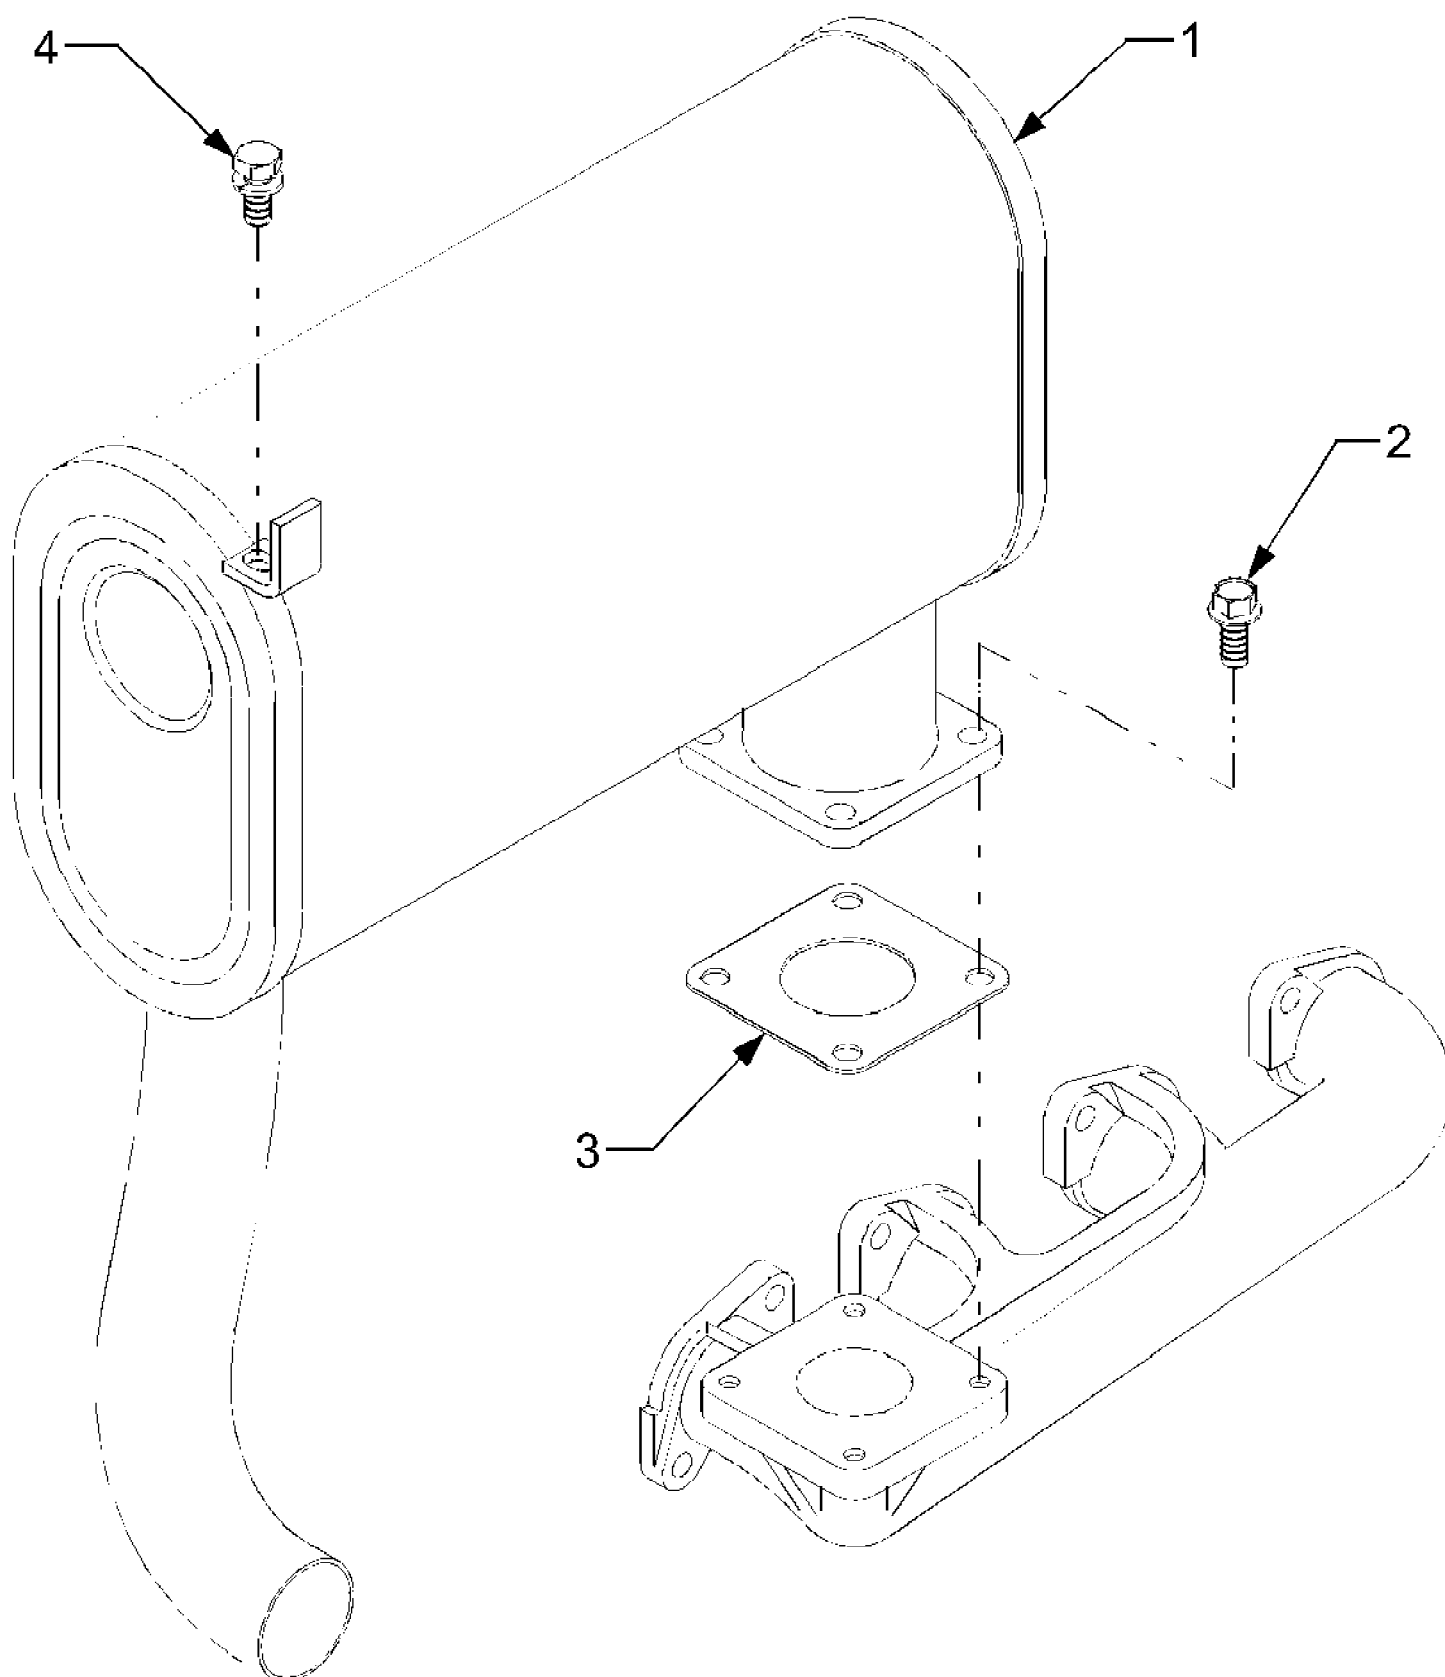

8404 Tractor
Muffler

Page 128 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E5800-12122	1	/P	Muffler
2	DD-01754-50822	4		Bolt, Flange
3	DD-E5800-12371	1		Gasket, Muffler
4	DD-01123-50820	1		Bolt

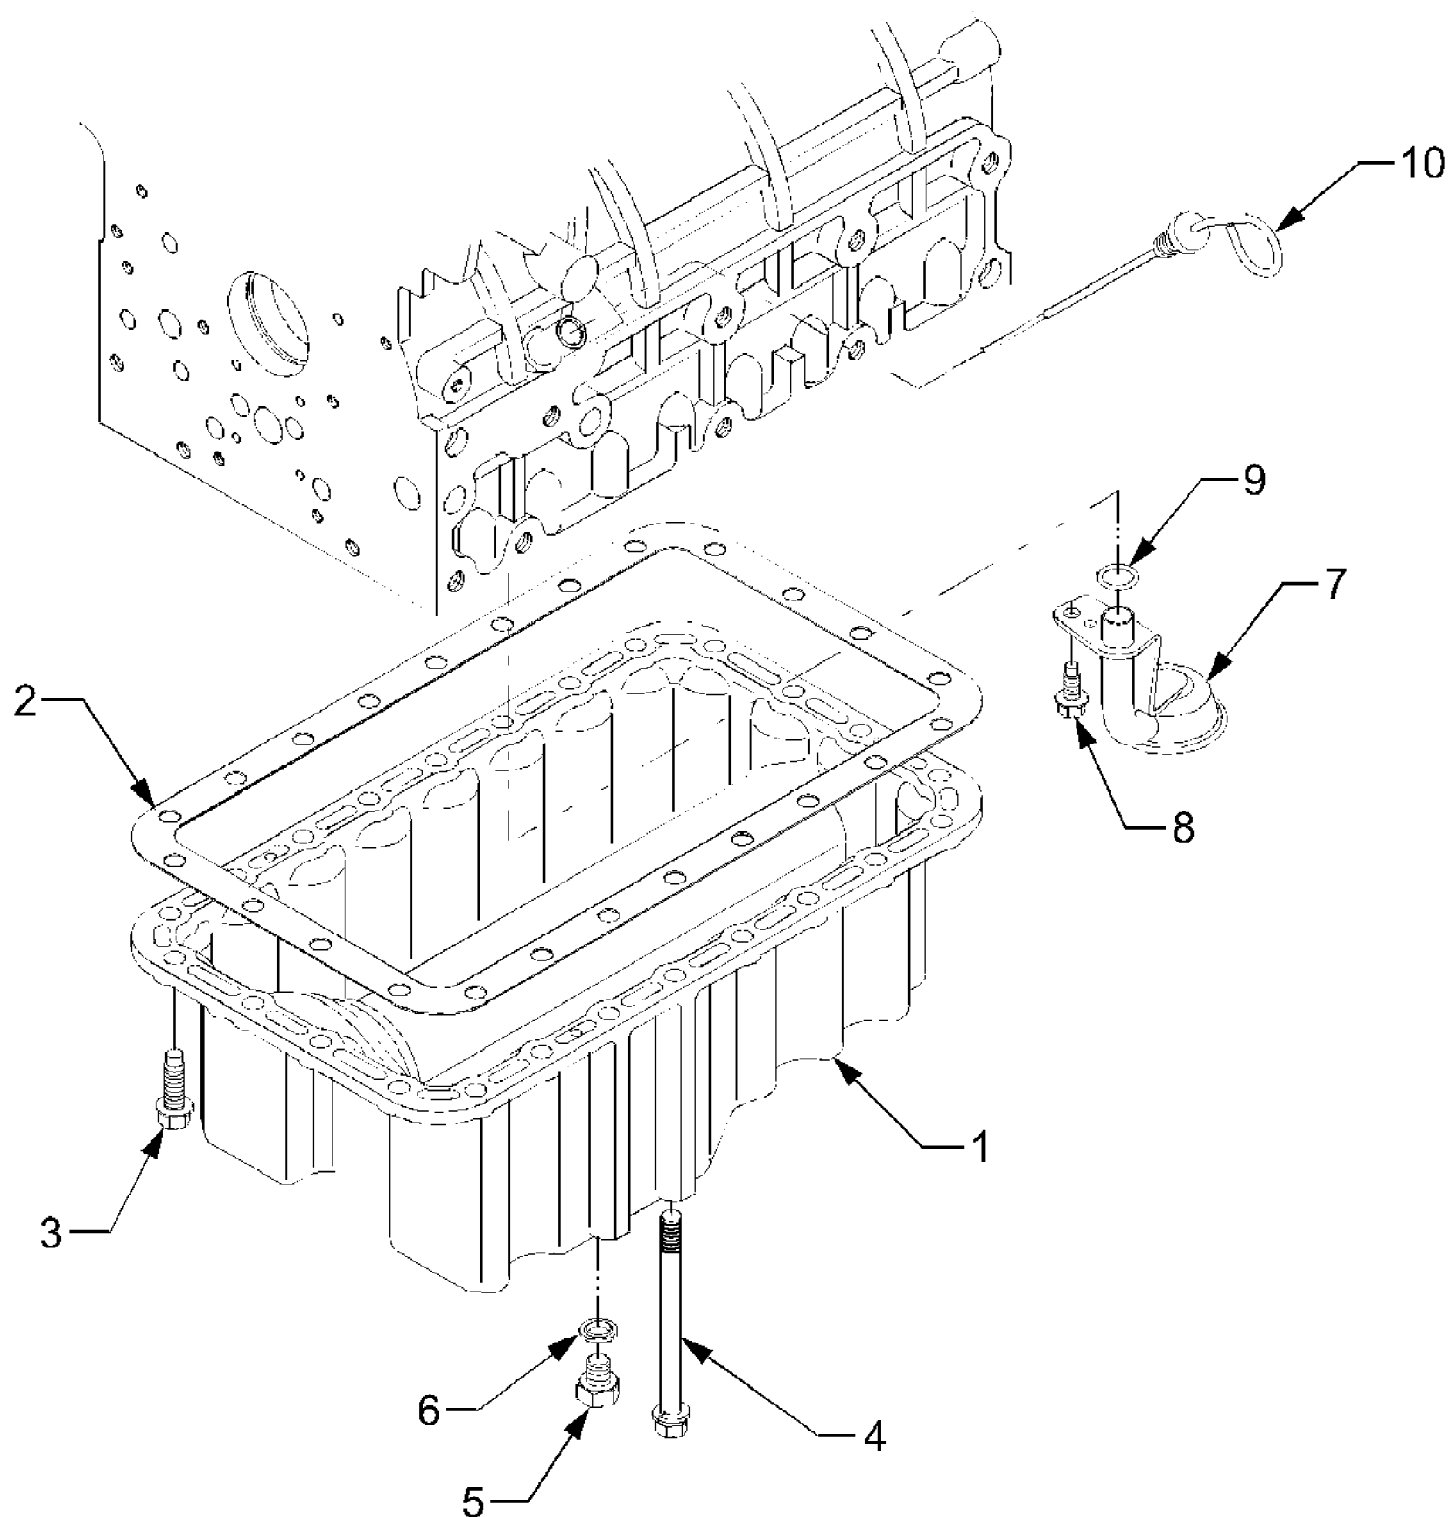 


8404 Tractor
Oil Pan

Page 130 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6200-A0071	1		Oil Pan Ass'y Include Ref. Nos. 5 & 6
2	DD-E6200-01623	1		Gasket, Oil Pan
3	DD-01674-51032	22		Bolt, Flange
4	DD-E6200-91092	2		Bolt
5	DD-15221-33752	2		Plug, Drain
6	DD-04717-01200	2		Washer, Seal
7	DD-E6200-32112	1		Filter 1, Oil
8	DD-01654-50820	1		Bolt, Flange
9	DD-04811-00160	1		O-ring
10	DD-E6305-36411	1	/P	Gauge, Oil

8404 Tractor
Panel Frame Group

 Page 131 of 200

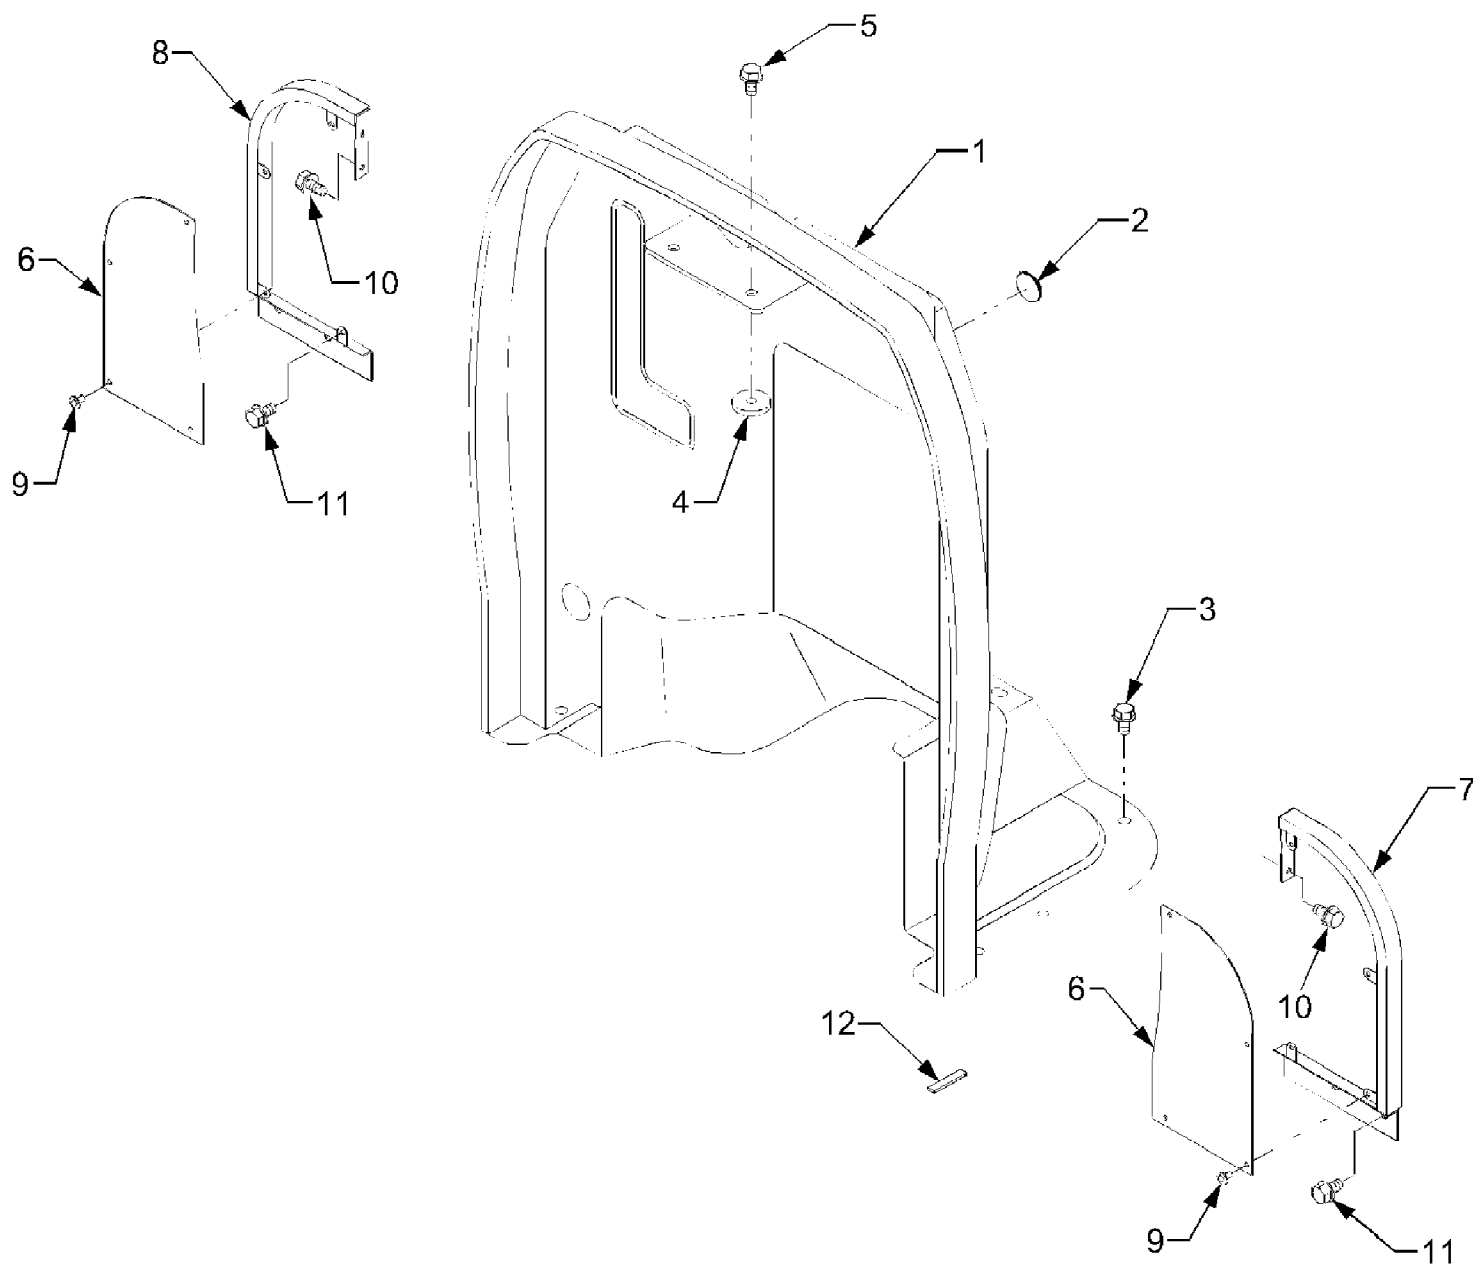


8404 Tractor
Panel Frame Group

Page 132 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-55006	1		Frame Ass'y
2	DD-T4680-54631	1		Cover
3	DD-01754-50820	8		Bolt, Flange
4	DD-T2610-80691	2		Cushion
5	DD-01125-50825	2		Bolt
6	DD-T2616-56111	2	/P	Mudguard
7	DDT261056102YW	1		Mudguard Ass'y (LH)
8	DDT261056122YW	1		Mudguard Ass'y (RH)
9	DD-53650-61271	8		Bolt, Rivet
10	DD-01754-50820	4		Bolt, Flange
11	DD-01133-51225	4		Bolt
12	DD-T2610-50271	2		Rubber, Cushion

8404 Tractor
Position (Draft) Control Lever

 
Page 133 of 200

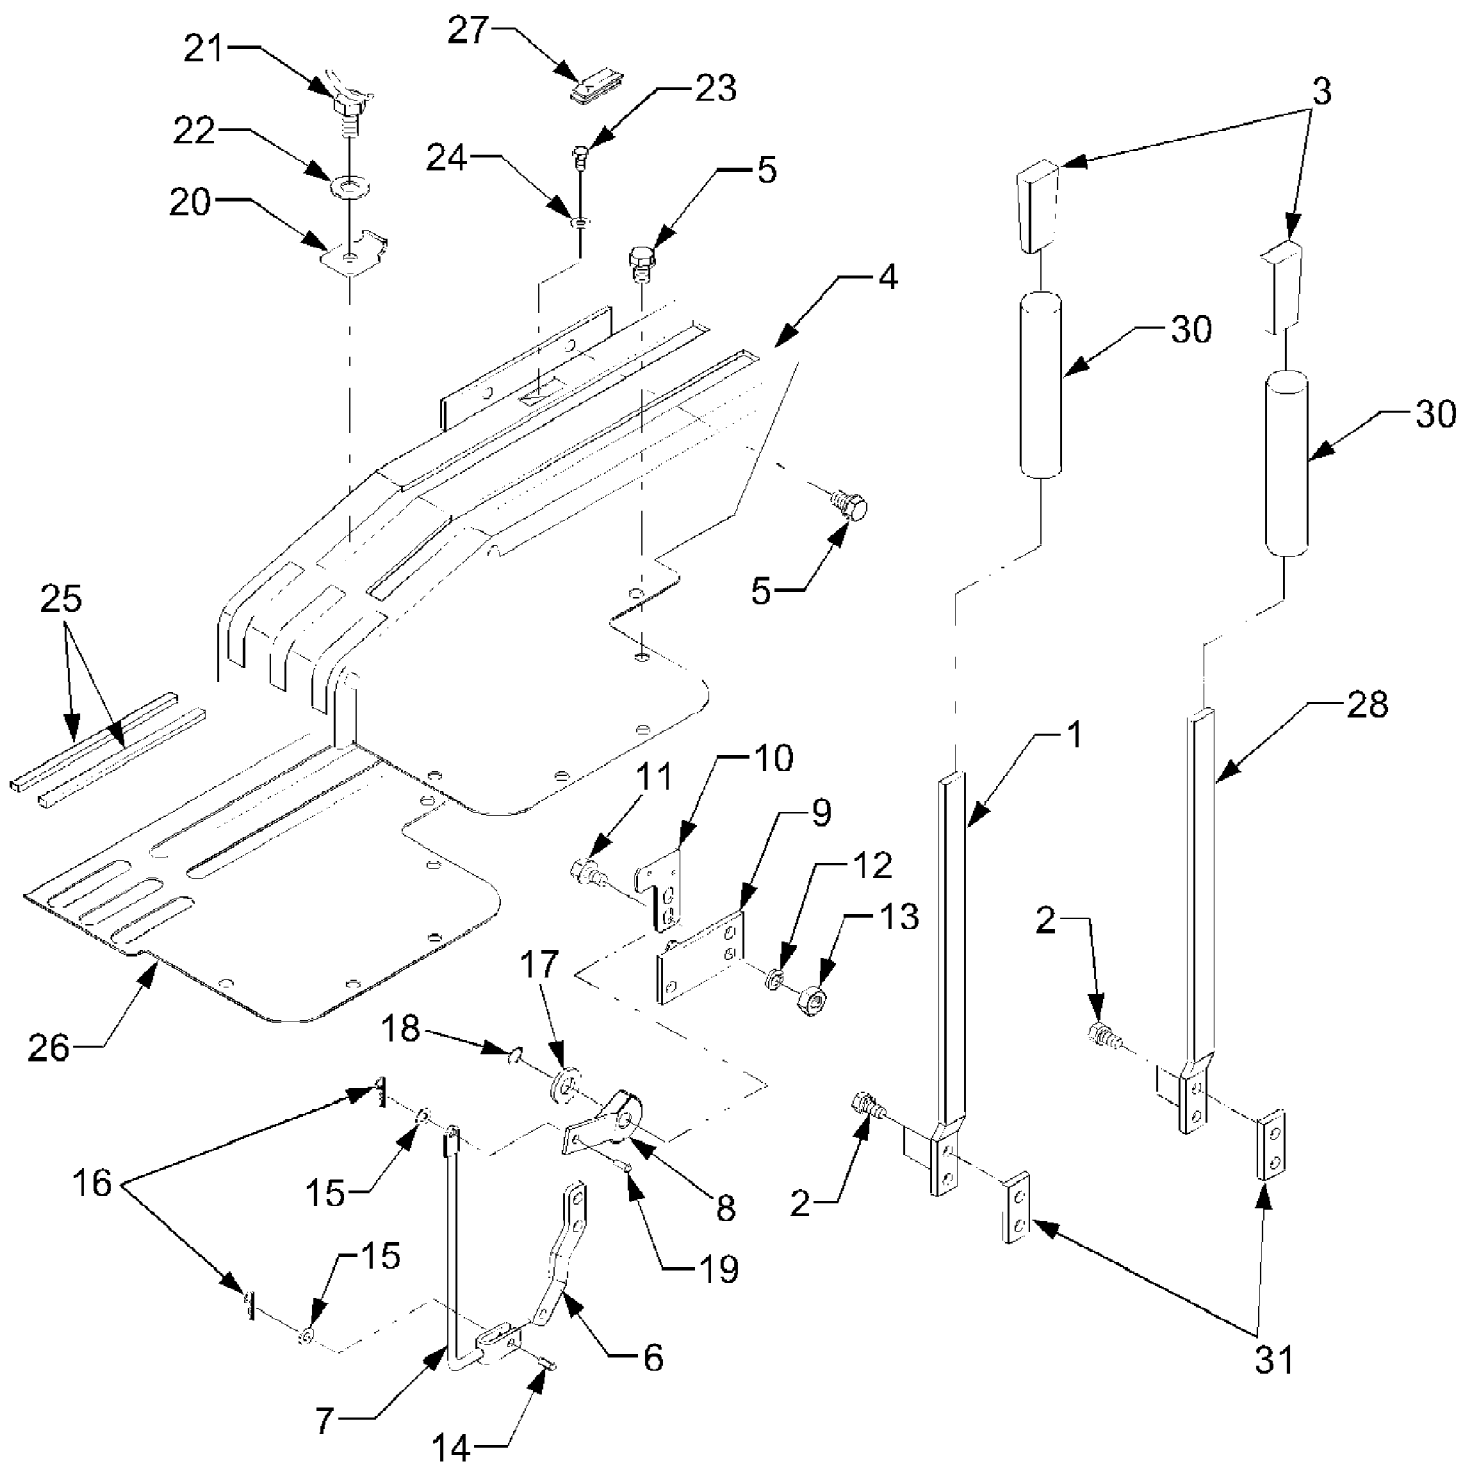

8404 Tractor
Position (Draft) Control Lever

Page 134 of 200


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-65414	1		Lever, Draft
2	DD-01123-50816	4		Bolt
3	DD-T4260-24461	2		Grip
4	DDT261065454YW	1		Guide, Hydraulic Lever
5	DD-01754-50816	7		Bolt, Flange
6	DD-T4680-65351	1		Lever 1(Switch)
7	DD-T2630-65371	1		Rod
8	DD-T4681-65361	1		Lever 2
9	DD-T4681-65511	1		Plate
10	DD-T4681-65382	1		Bracket 2
11	DD-01754-50820	3		Bolt, Flange
12	DD-04512-50080	3		Washer, Spring
13	DD-02114-50080	3		Nut
14	DD-05122-50618	1		Pin, Joint
15	DD-04013-50060	2	/P	Washer, Plain
16	DD-05525-50600	2		Pin, Snap
17	DD-04013-50100	2		Washer, Plain
18	DD-04612-00100	1		Ring, Snap
19	DD-05122-50610	1		Pin Joint
20	DD-T4520-36911	2		Stopper 2
21	DD-01811-50815	2		Bolt, Wing
22	DD-04015-50080	2		Washer, Plain
23	DD-03024-50512	2		Screw
24	DD-04013-50050	2		Washer, Plain
25	DD-T2610-65471	2		Rubber
26	DDT261065482YW	1		Plate
27	DD-T2610-65461	1		Cap 1
28	DD-T2610-65421	1		Lever, Position Control
30	DD-T4340-24921	2		Tube
31	DD-T2630-65381	2		Cushion

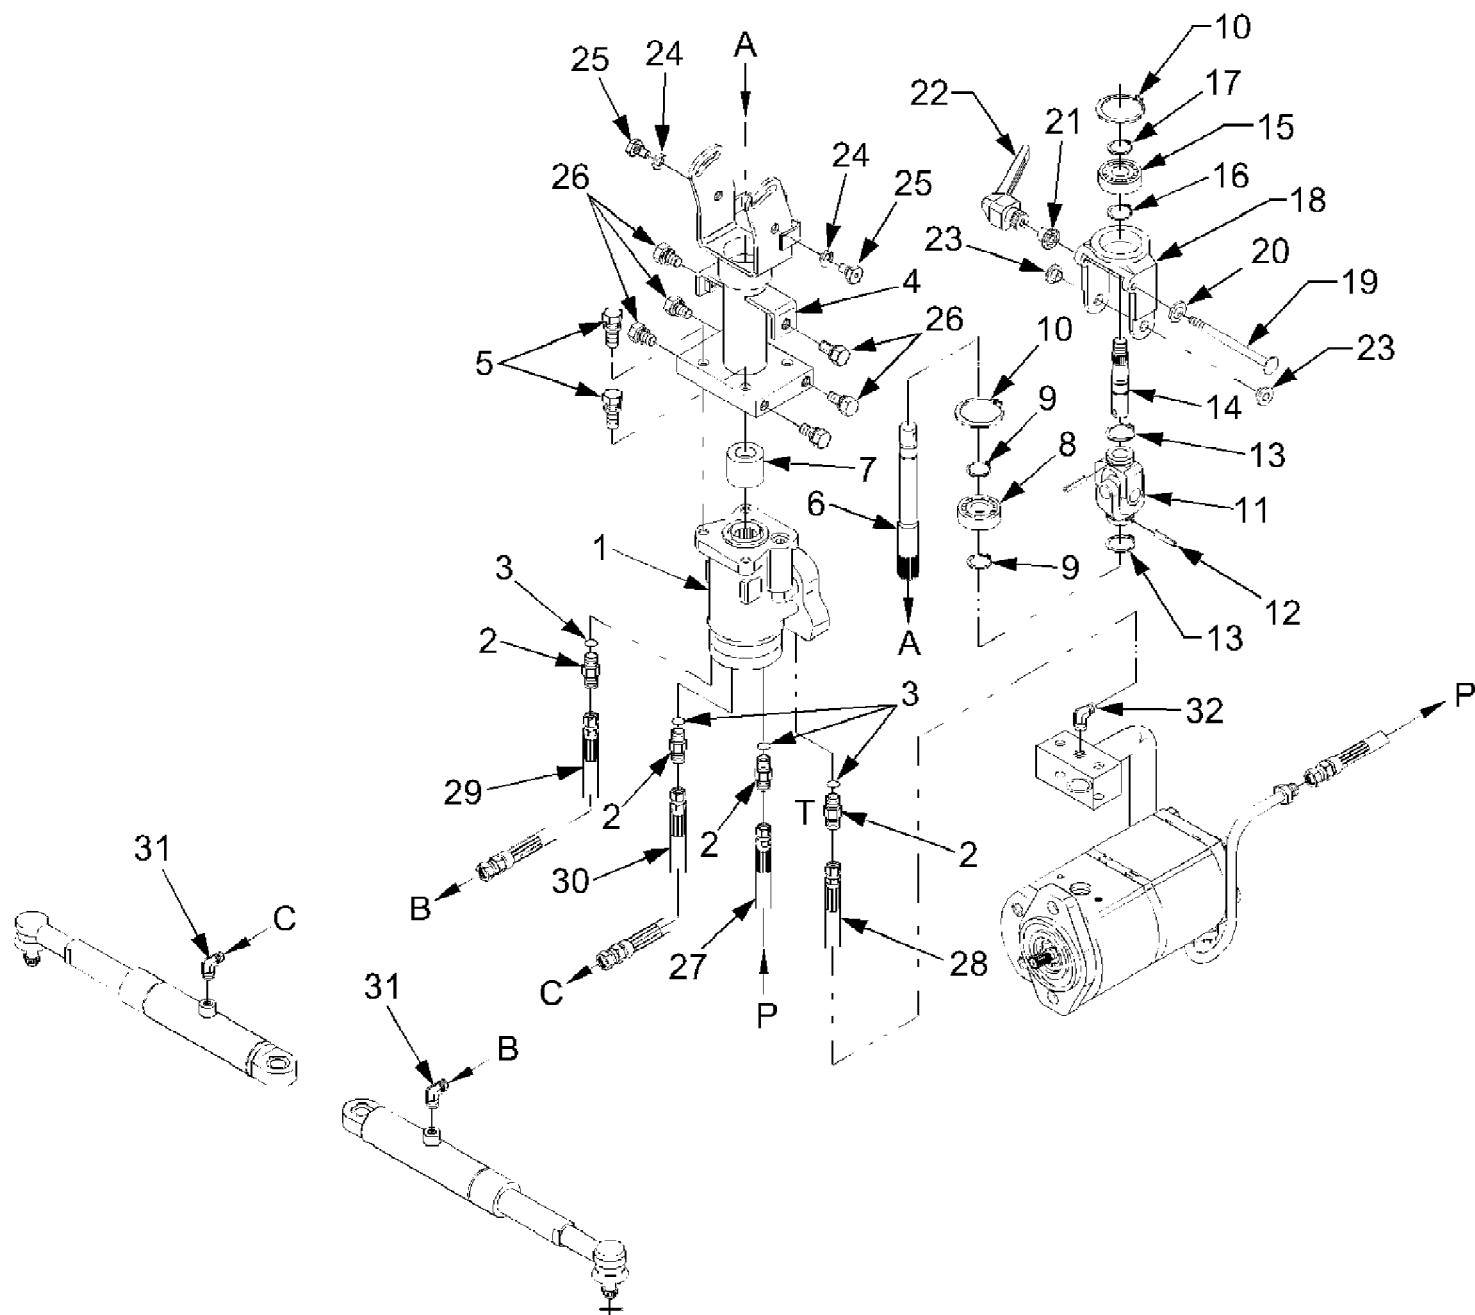 

8404 Tractor
Power Steering Unit Group

Page 136 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4625-66001	1		Unit, Power Steering
2	DD-T4620-66161	4		Connector
3	DD-04811-00110	4		O-ring
4	DD-T4620-66012	1		Column Ass'y
5	DD-01133-51035	3		Bolt
6	DD-T4620-66101	1		Shaft, Steering
7	DD-T4620-66111	1		Bush
8	DD-08141-06203	1		Bearing, Ball
9	DD-04612-00170	2		Ring, Snap
10	DD-04611-00400	1		Ring, Snap
11	DD-T4520-62251	1		Joint, Universal
12	DD-05411-00622	2		Pin, Spring
13	DD-04612-00250	2		Ring, Snap
14	DD-T4620-66092	1	/P	Shaft, Connector
15	DD-08141-06203	1		Bearing, Ball
16	DD-04612-00170	2		Ring, Snap
17	DD-04611-00400	1		Ring, Snap
18	DD-T4620-66023	1		Yoke
19	DD-T4620-66041	1		Bolt, Lock
20	DD-T4620-66061	1		Washer 1, Holding
21	DD-T4620-66071	1		Washer 2, Holding
22	DD-T4620-66031	1		Lever Ass'y
23	DD-T4620-66051	2		Bush
24	DD-04512-50080	2		Washer, Spring
25	DD-T4620-66081	2		Bolt
26	DD-01133-51020	6		Bolt
27	DD-T4620-45004	1		Steering Hose (P) Ass'y
28	DD-T4620-45014	1		Steering Hose (T) Ass'y
29	DD-T2610-45021	1		Steering Hose (L) Ass'y
30	DD-T2610-45031	1		Steering Hose (R) Ass'y
31	DD-T4520-63381	2		Elbow, 45°.
32	DD-56713-28131	1		Adapter 1,cylinder

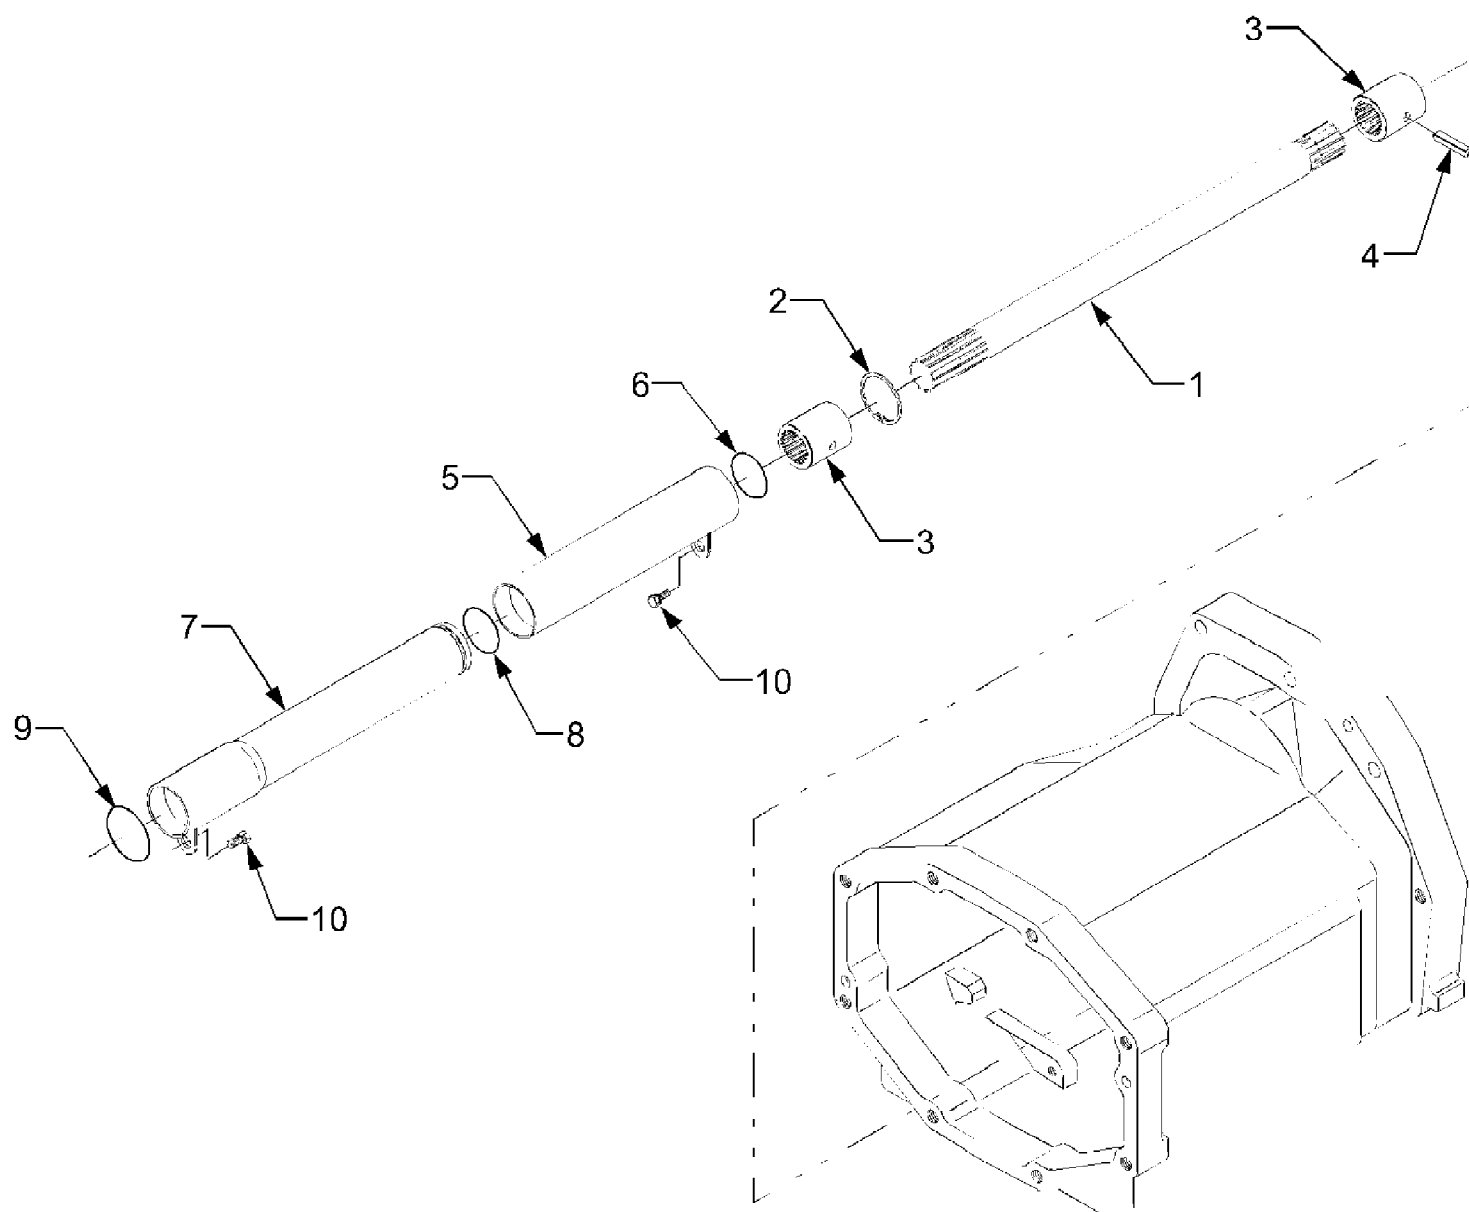 


8404 Tractor
Propeller Shaft Group

Page 138 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2630-44581	1		Shaft 2, Propeller
2	DD-04612-00250	1		Ring, Snap
3	DD-T4620-44592	2		Coupling
4	DD-05411-00636	1		Pin, Spring
5	DD-T2610-44591	1		Cover, Propeller
6	DD-04811-06420	1		O Ring
7	DD-T2630-44601	1		Cover 2, Propeller
8	DD-04811-06350	1		O-ring
9	DD-04811-00420	1		O-ring
10	DD-01123-50816	2		Bolt

8404 Tractor PTO Clutch

 Page 139 of 200

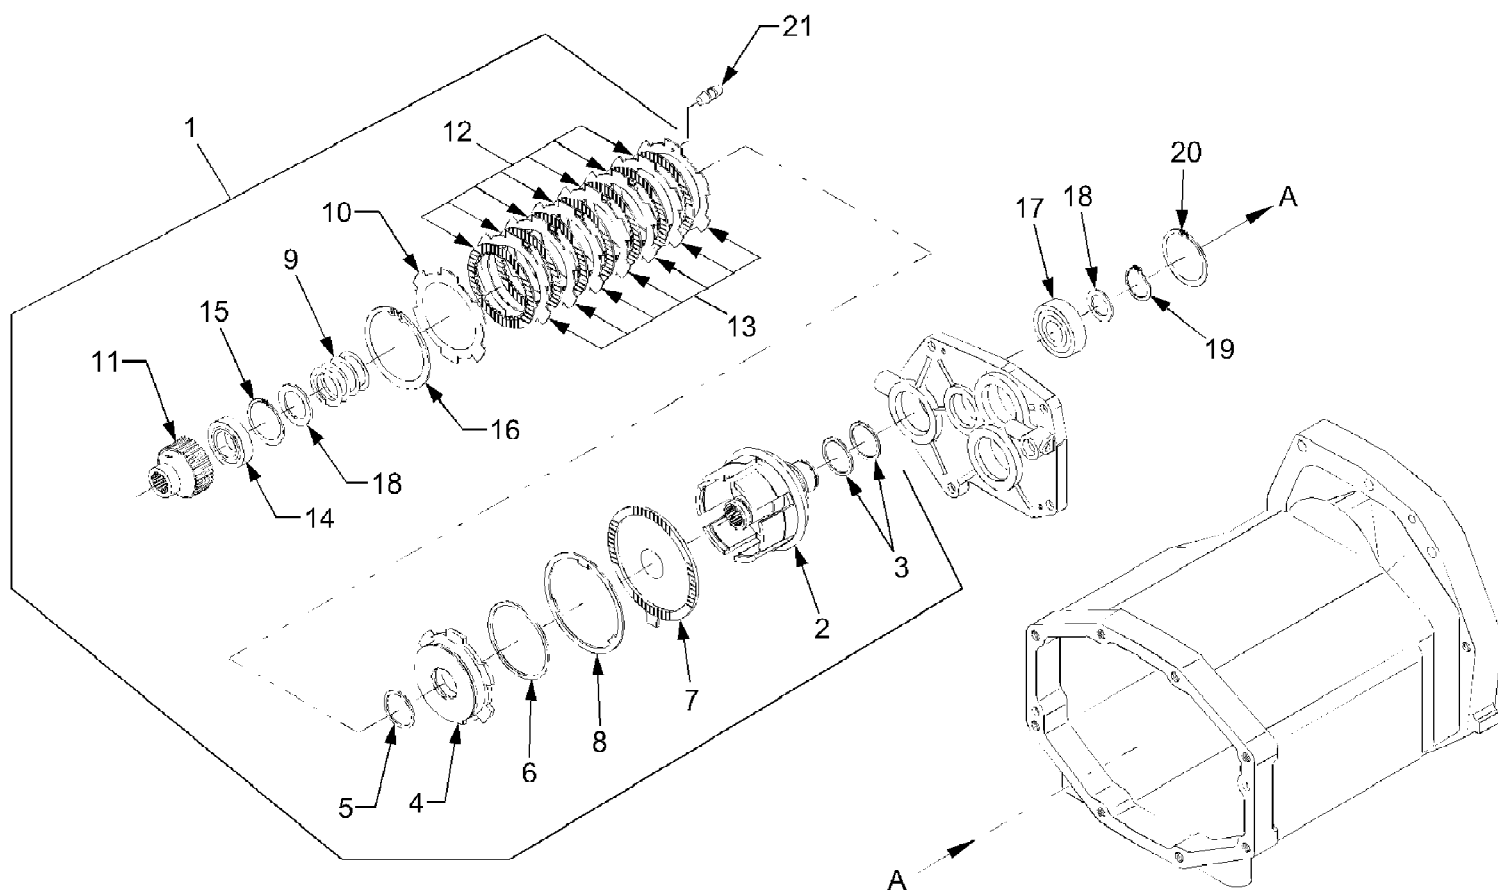


8404 Tractor
PTO Clutch

Page 140 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-25604	1		Pto Clutch Ass'y
2	DD-T2615-25614	1		Body, Clutch
3	DD-T2615-25621	2		Ring, Seal
4	DD-T2615-25651	1		Piston
5	DD-T2615-25661	1		Ring, Piston
6	DD-T2615-25671	1	S	Ring, Piston
7	DD-T2615-25711	1		Plate, Brake
8	DD-T2615-25721	1		Plate, Return
9	DD-T2615-25732	1		Spring
10	DD-T2615-25742	1		Plate, Pressure
11	DD-T2615-25761	1		Hub, Spline
12	DD-T2615-25771	7		Disc, Clutch
13	DD-T2615-25782	7		Plate, Clutch
14	DD-08101-06807	1		Bearing, Ball
15	DD-04612-00350	1		Cir-clip
16	DD-04611-00920	1		Cir-clip
17	DD-08101-06207	1		Bearing, Ball
18	DD-T2615-25681	2		Spacer
19	DD-T2615-25691	1		Cir-clip
20	DD-04611-00720	1		Cir-clip
21	DD-T2615-25791	12		Rubber

8404 Tractor
PTO Clutch Valve Group

 Page 141 of 200

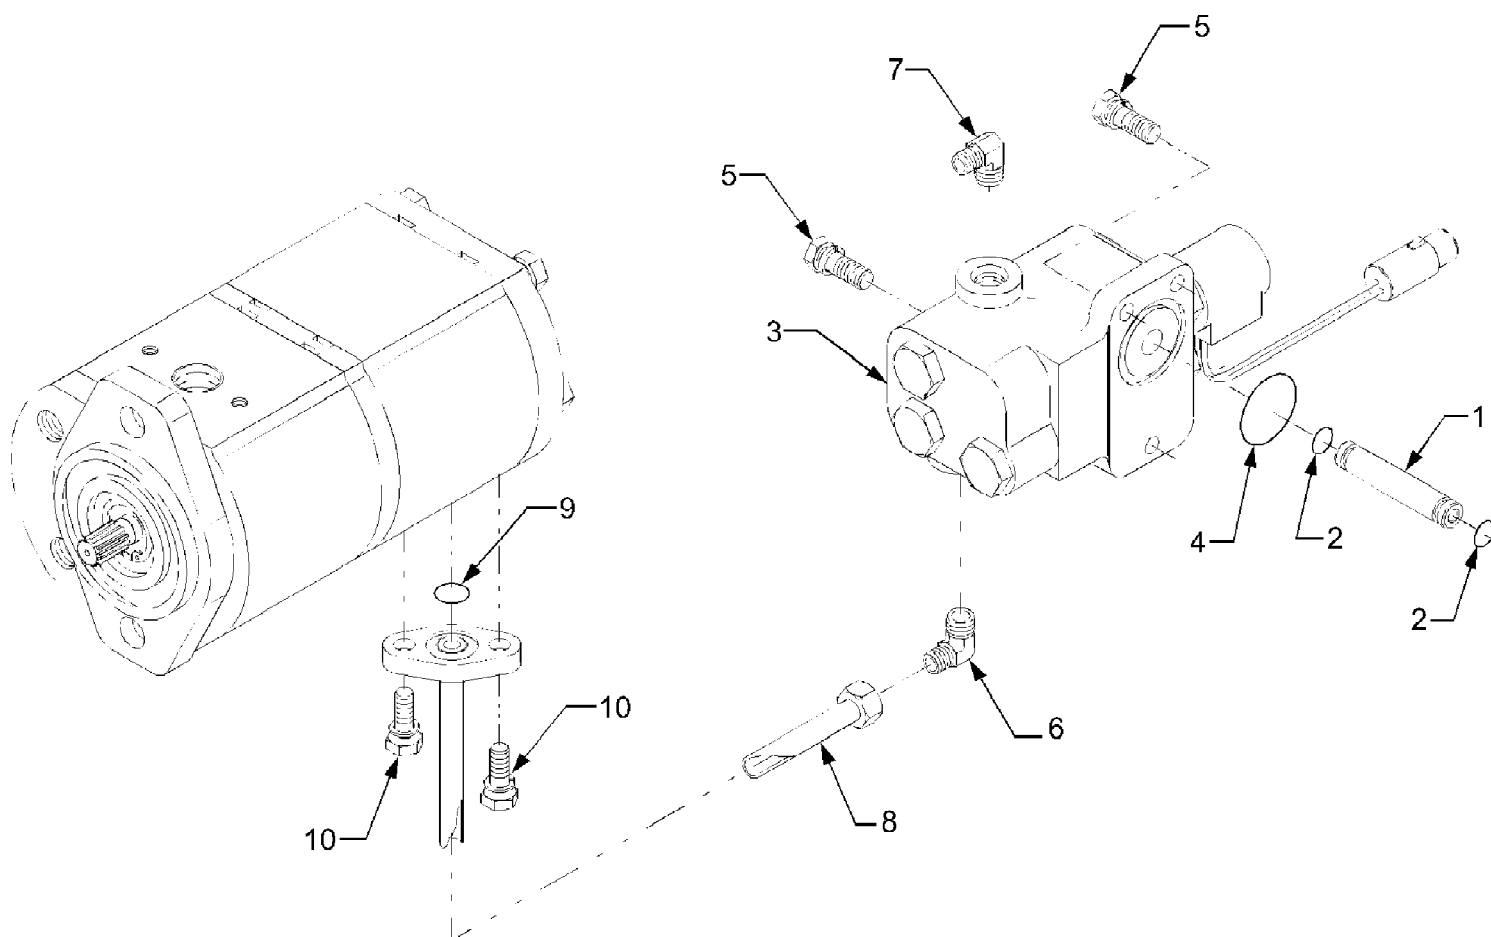


8404 Tractor
PTO Clutch Valve Group

Page 142 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-25921	1		Pipe, Connector
2	DD-04811-00090	2		O-ring
3	DD-T2615-34042	1		Modulator Valve Ass'y
4	DD-04811-50350	1		O-ring
5	DD-01123-50825	3		Bolt
6	DD-T2610-34111	1		Elbow
7	DD-T4620-34121	1		Elbow
8	DD-T2615-34052	1		Pipe, PTO Hydraulic
9	DD-04810-00180	1		O-ring
10	DD-01123-50820	2		Bolt

8404 Tractor
PTO Counter Shaft Group

 
Page 143 of 200

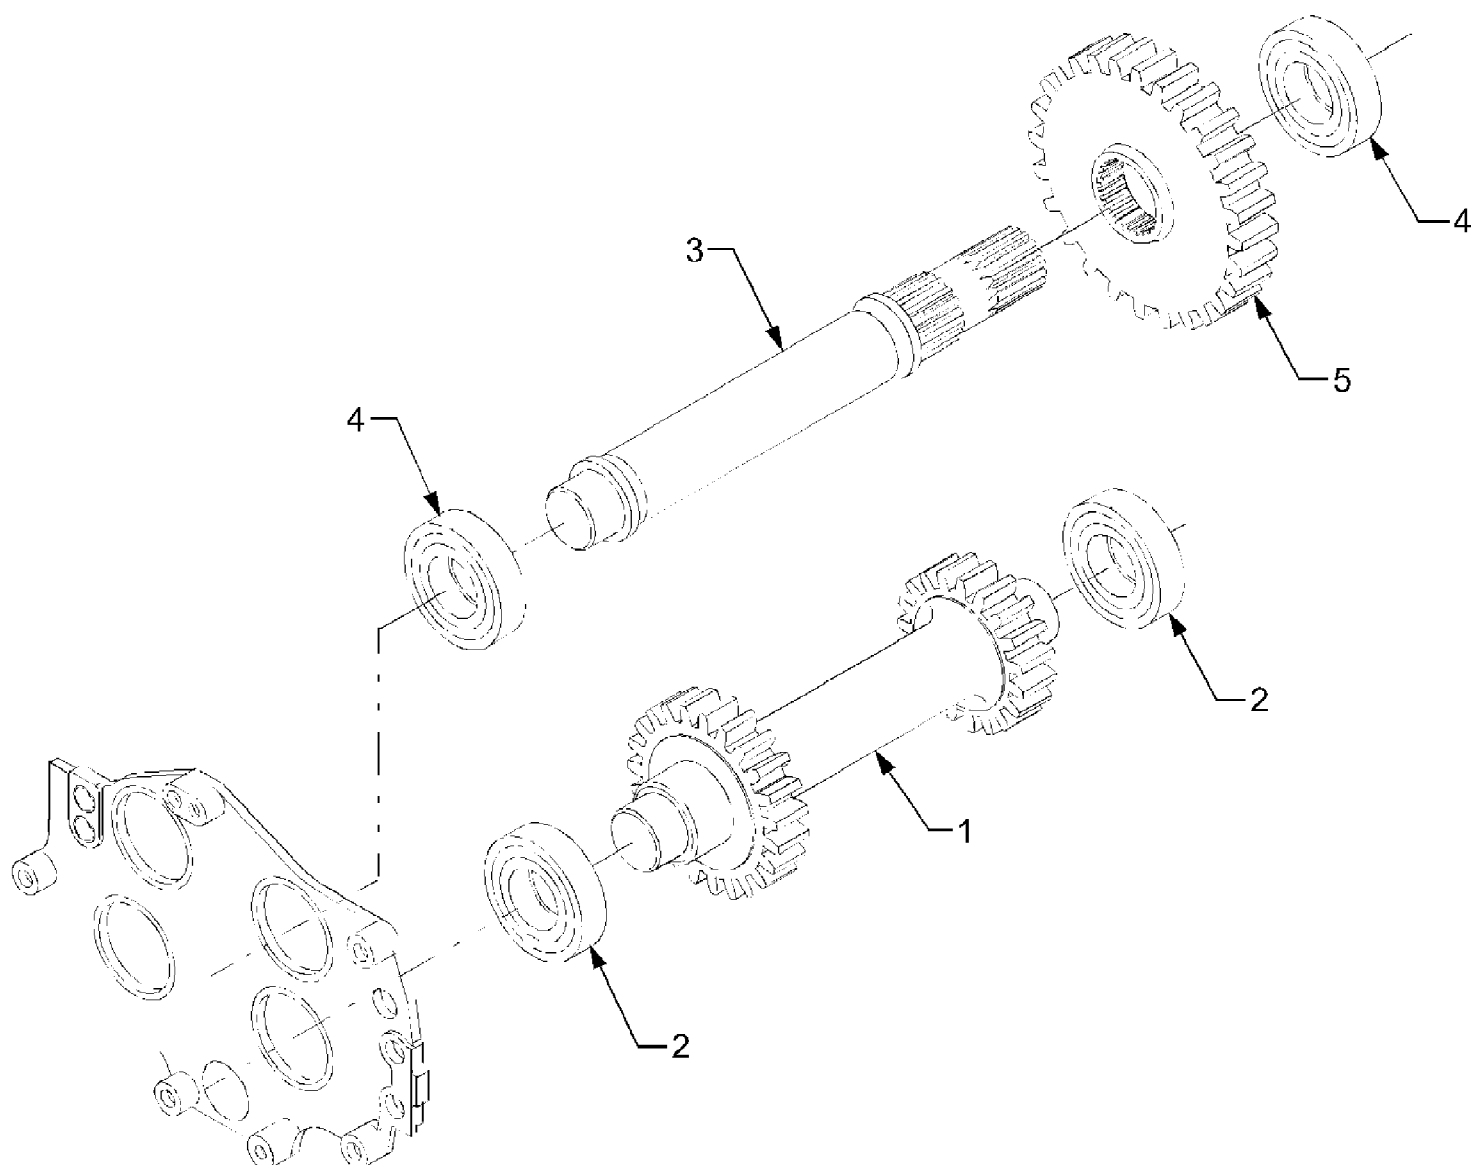

8404 Tractor
PTO Counter Shaft Group

Page 144 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-25222	1		Shaft, 23-19 Gear
2	DD-T2610-22661	2		Bearing, Ball
3	DD-T2615-25231	1		Shaft, Counter (PTO)
4	DD-08101-06305	2		Bearing, Ball
5	DD-T2615-25242	1		Gear, 33 (PTO)

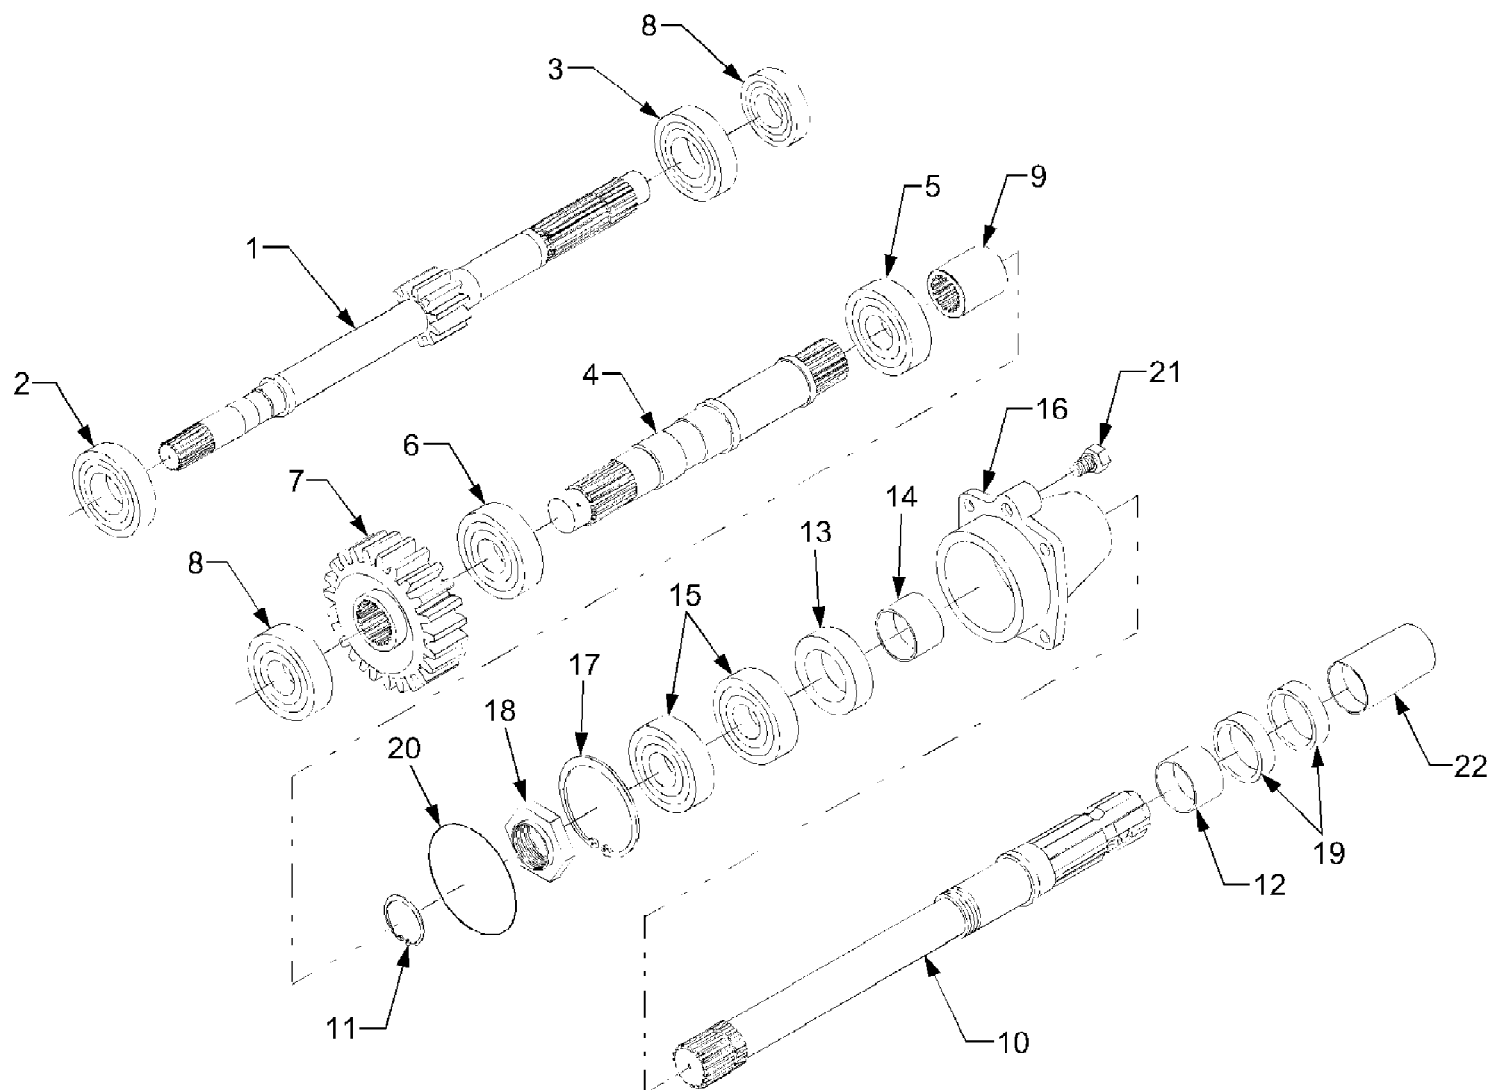 


8404 Tractor
PTO Shaft Group

Page 146 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-25251	1		Shaft, 12 Gear
2	DD-08101-06207	1		Bearing, Ball
3	DD-38260-22161	1		Bearing, Ball
4	DD-T2610-25261	1		Shaft, PTO Drive
5	DD-08101-06006	1		Bearing, Ball
6	DD-08101-06206	1		Bearing, Ball
7	DD-T2615-25271	1		Gear, 30
8	DD-08101-06305	2		Bearing, Ball
9	DD-T2610-25281	1		Coupling
10	DD-T2610-25311	1		Shaft, PTO
11	DD-04612-00300	1		Cir-clip
12	DD-T4260-25392	1		Sleeve
13	DD-T4240-25361	1	S	Seal, Oil
14	DD-T4240-25351	1	S	Collar, Oil Seal
15	DD-T4240-25331	2		Bearing, Ball
16	DD-T4260-25411	1		Case, Bearing
17	DD-04611-00650	1		Cir-clip
18	DD-35340-25321	1		Nut
19	DD-T4260-13161	2		Seal, Oil
20	DD-04811-50800	1		O-ring
21	DD-01123-50832	4		Bolt
22	DD-76706-14811	1		Cover, PTO Shaft

8404 Tractor
Radiator Group

 
Page 147 of 200

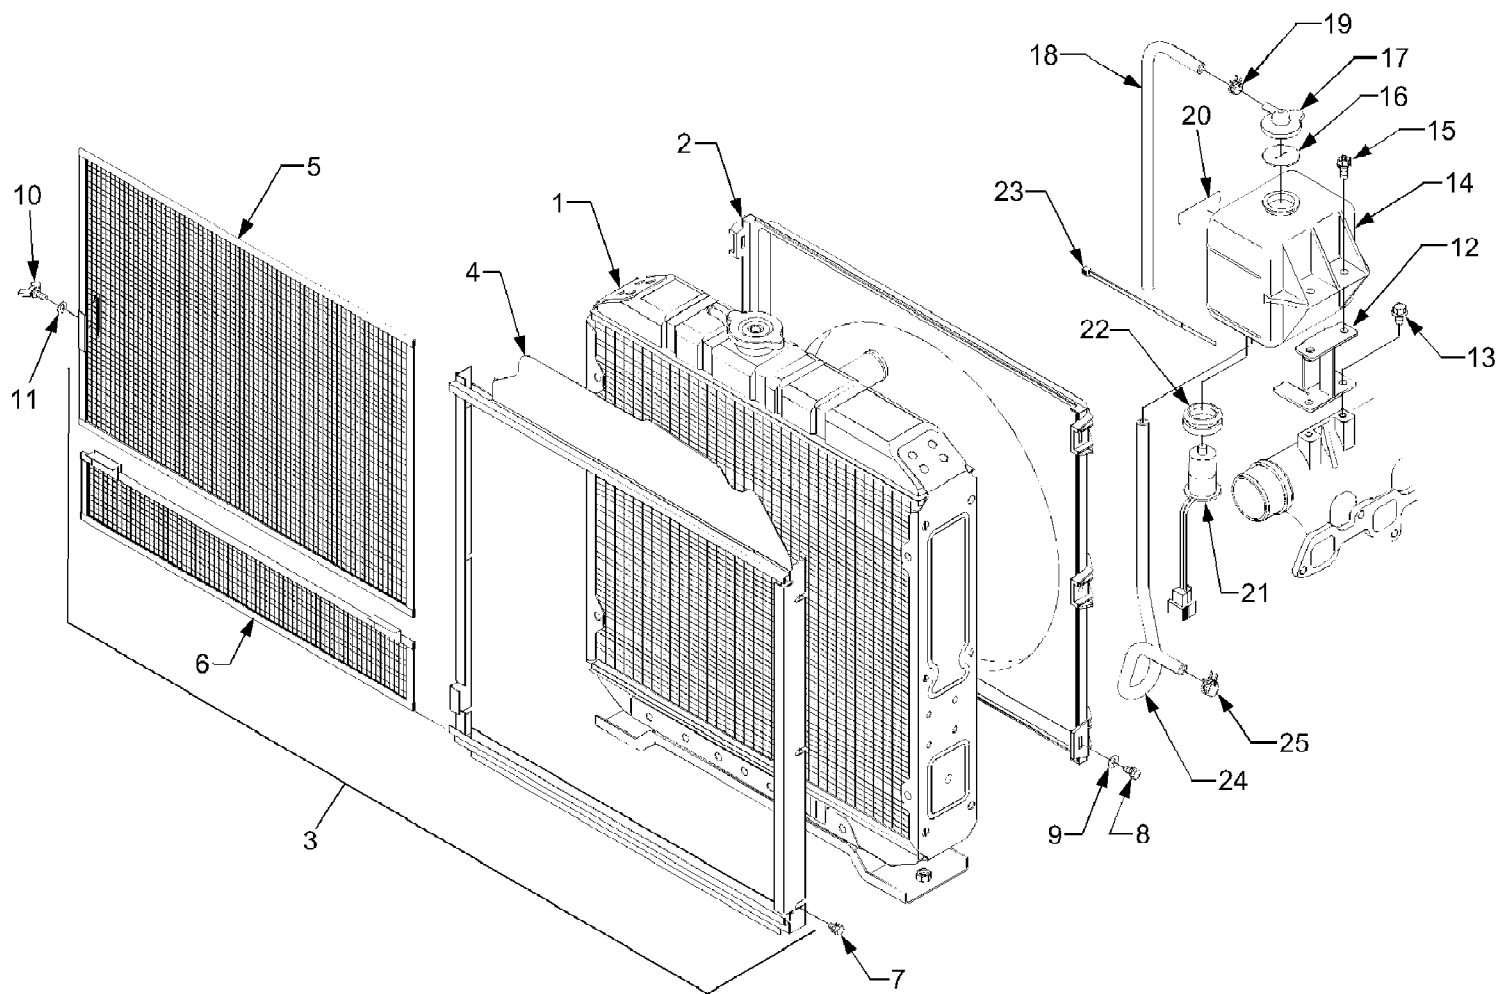

8404 Tractor
Radiator Group

Page 148 of 200


Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6500-72061	1		Radiator Ass'y
	DD-15305-72630	1		Radiator Cap
2	DD-E5800-72072	1		Shroud
3	DD-T4620-A0260	1		Screen/Guide Ass'y
4	DD-E5800-17711	1		Guide, Screen
5	DD-E7100-17723	1		Screen, Radiator
6	DD-E7100-17732	1		Screen, Radiator
7	DD-01025-50612	5		Bolt
8	DD-01023-50614	6		Bolt
9	DD-82EP-1665	6		Washer, Plain
10	DD-01811-50615	1		Bolt, Wing
11	DD-04013-50060	1	/P	Washer, Plain
12	DD-E6300-72462	1		Stay, Reserve Tank
13	DD-01754-50816	2		Bolt, Flange
14	DD-T4340-A0110	1	/P	Reserve Tank Ass'y Includes Ref. Nos. 16 & 17
15	DD-01202-50820	2		Bolt
16	DD-15301-72490	1		Plate, Rubber
17	DD-15301-72420	1		Cap
18	DD-15301-72440	1		Pipe, Water Over Flow
19	DD-15301-72470	2		Pipe, Clip
20	DD-85726-88210	1		Label
21	DD-15521-72992	1		Switch, Water Level
22	DD-15301-72450	1		Rubber, Holder
23	DD-T4520-82561	1		Band, Cord
24	DD-E5800-72711	1		Pipe, water Over Flow
25	DD-14911-42751	1		Clip, Pipe

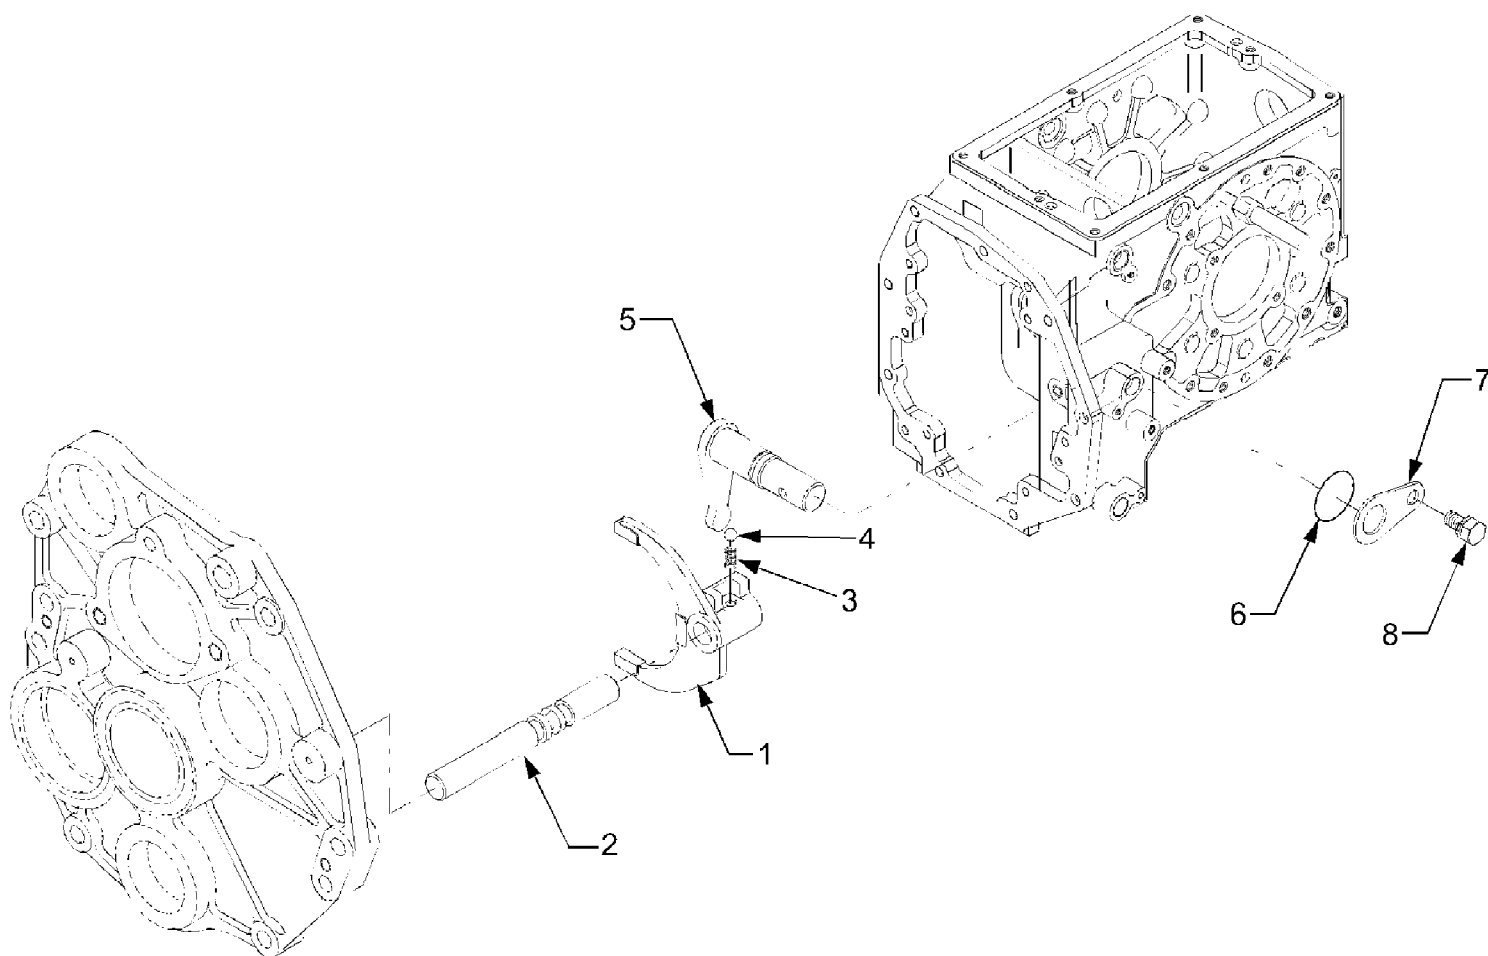 

8404 Tractor
Range Fork Group

Page 150 of 200


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-23112	1		Fork, Shift (Range)
2	DD-T2610-23121	1		Rod, Range Shift
3	DD-62331-18532	1		Spring, Stopper
4	DD-07715-01605	1		Ball, Steel
5	DD-T2610-23261	1		Arm, Range Shift
6	DD-04811-00160	1		O-ring
7	DD-T4620-44331	1		Stopper
8	DD-01123-50816	1		Bolt

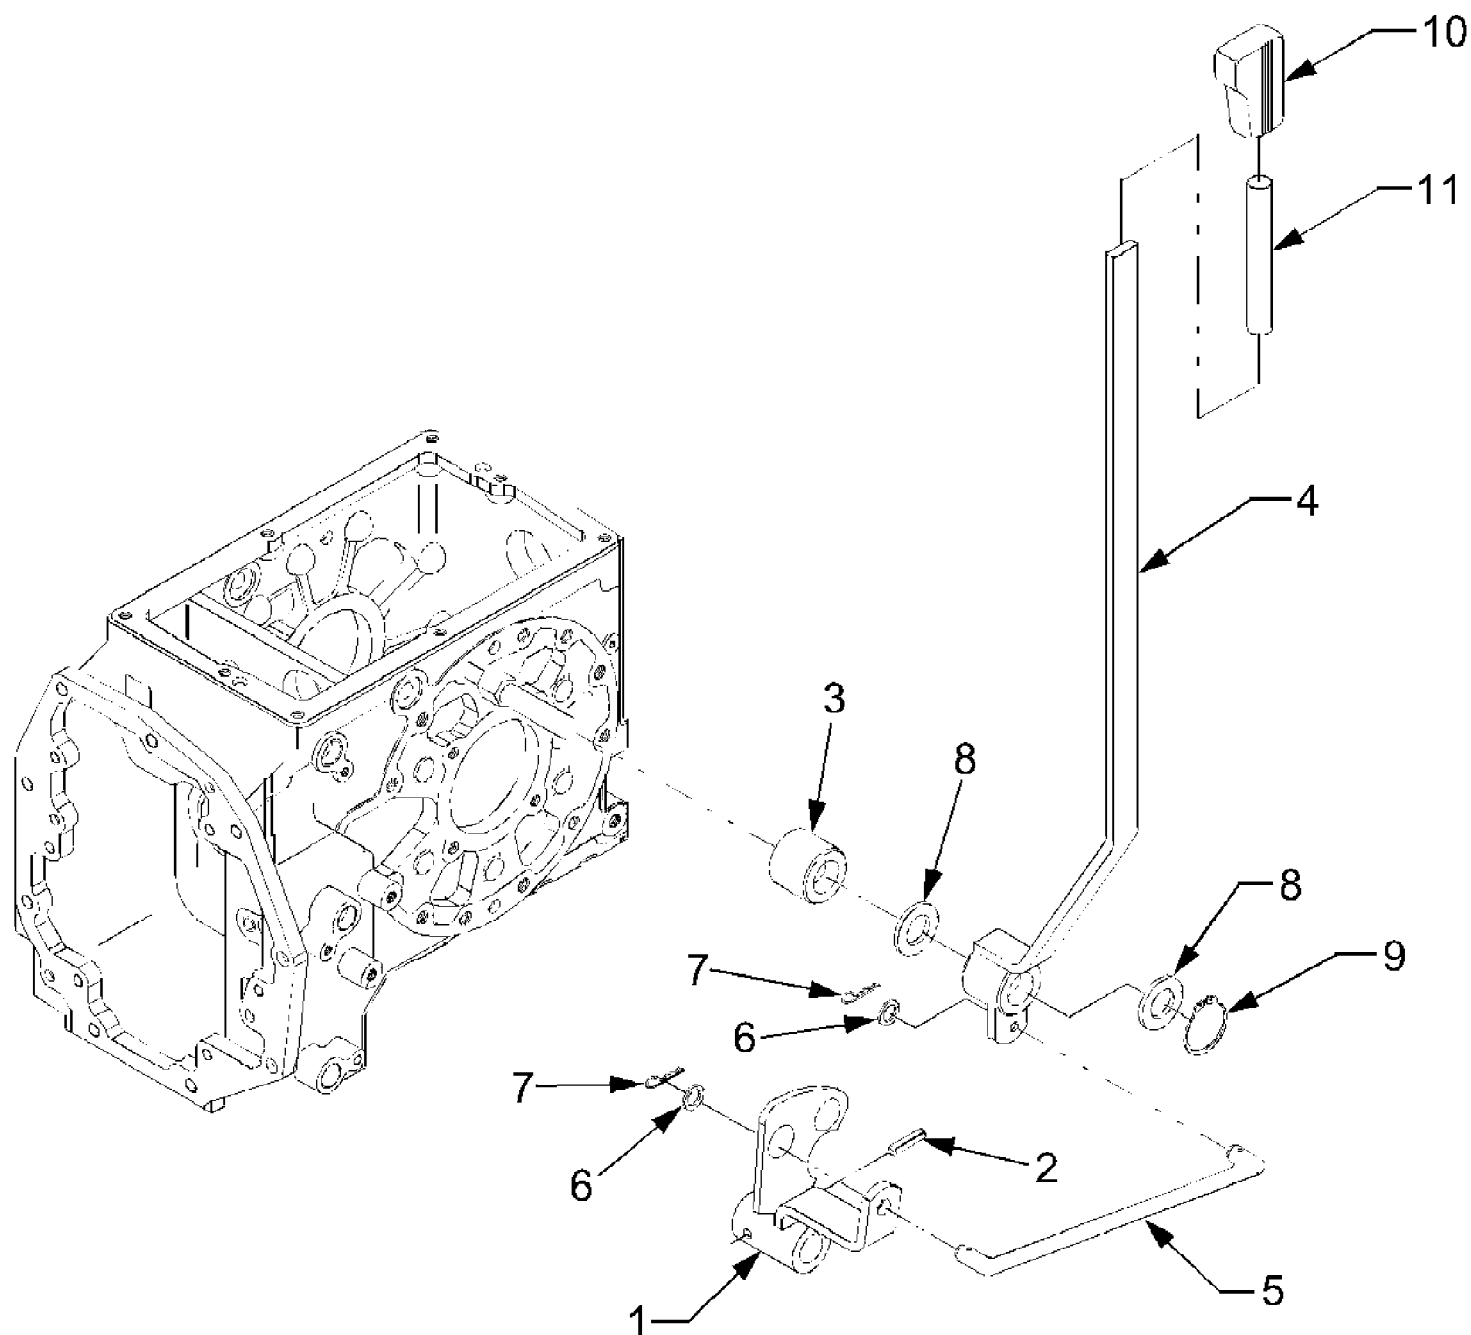 

8404 Tractor
Range Lever Group

Page 152 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2630-60513	1		Lever 1, Hi-Low
2	DD-05411-00630	1		Pin, Spring
3	DD-T2615-60652	1		Spacer
4	DD-T2630-60533	1	S	Lever, Hi-Low Shift
5	DD-T2615-24422	1		Rod(Mid PTO)
6	DD-04011-50100	2		Washer, Plain
7	DD-05525-51000	2		Pin, Snap
8	DD-04011-50180	2		Washer, Plain
9	DD-04612-00180	1		Cir-clip
10	DD-T4260-24461	1		Grip
11	DD-T4340-24921	1		Tube

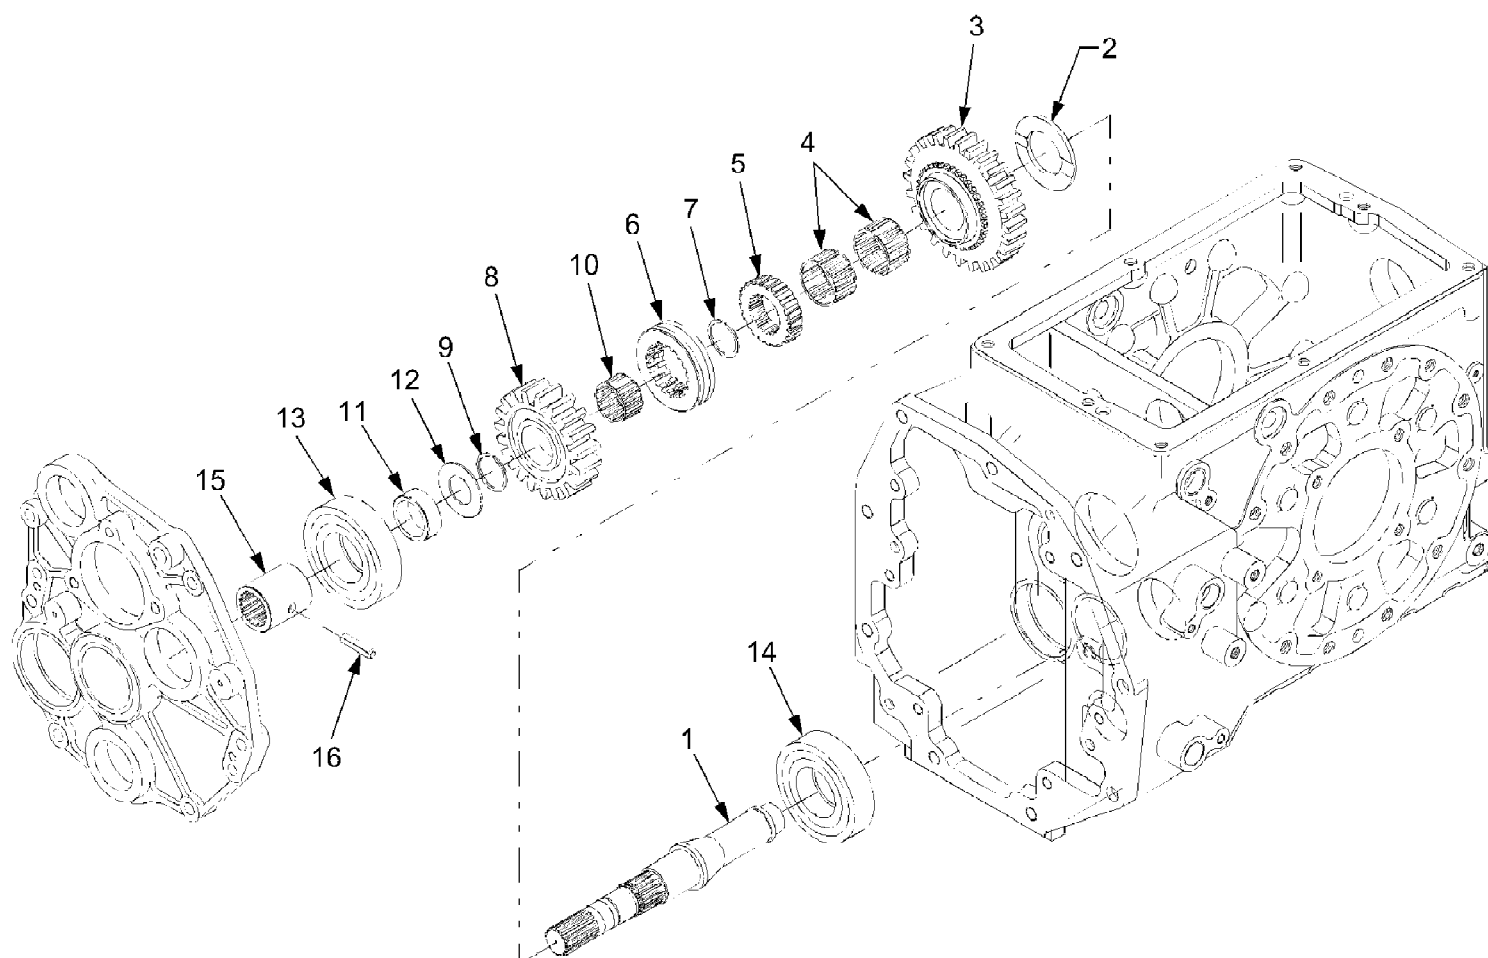 


8404 Tractor
Range Shaft Group

Page 154 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-23611	1		Shaft, Range
2	DD-T2610-23621	1		Collar, Thrust
3	DD-T2610-23632	1		Gear, 32 Spur
4	DD-08823-23717	2		Bearing, Needle
5	DD-T2610-23761	1		Boss, Spline
6	DD-T2610-23751	1		Shifter
7	DD-T2610-14541	1		Cir-clip
8	DD-T2610-23652	1		Gear, 18 Spur
9	DD-37150-21791	1		Cir-clip
10	DD-08822-53020	1		Bearing, Needle
11	DD-T2610-23781	1		Spacer
12	DD-37150-21761	1		Collar, Thrust
13	DD-08101-06305	1		Bearing, Ball
14	DD-08101-06205	1		Bearing, Ball
15	DD-37805-44521	1		Coupling
16	DD-05411-00635	1		Pin, Spring

8404 Tractor
Rear Axle Group

 Page 155 of 200

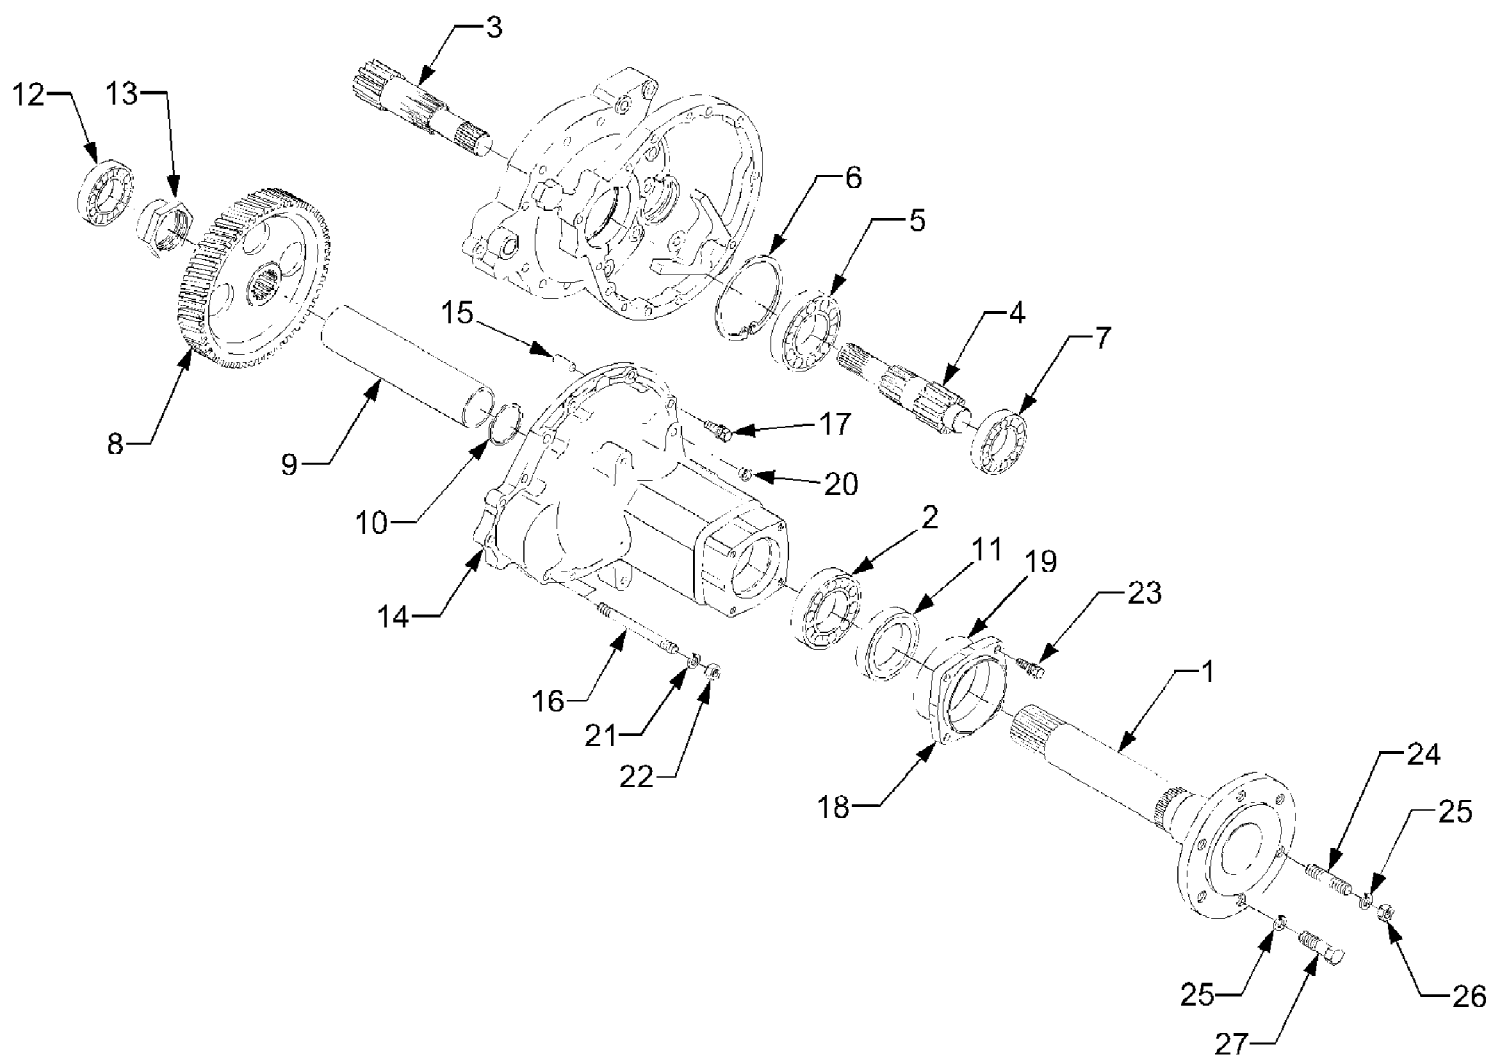


8404 Tractor
Rear Axle Group

Page 156 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4340-27113	2		Rear, Axle
2	DD-08101-06210	2		Bearing, Ball
3	DD-T2610-26712	1		Shaft, 11 Gear(RH)
4	DD-T2610-26722	1		Shaft, 11 Gear(LH)
5	DD-08101-06309	2		Bearing, Ball
6	DD-04611-01000	2		Ring, Snap
7	DD-08100-00026	2		Bearing, Ball
8	DD-31355-26834	2		Gear 60
9	DD-T2610-27141	2		Spacer
10	DD-32155-26481	2		Washer
11	DD-36205-48252	2		Seal, Oil
12	DD-T2610-27211	2		Bearing, Roller
13	DD-T4340-27201	2		Nut
14	DD-T2610-27311	2	S	Case, Rear Axle
15	DD-37305-28171	4		Pin, Straight
16	DD-T2440-14201	8		Stud
17	DD-01133-51038	10		Bolt
18	DD-38435-27161	2		Cover, Rear Axle Case
19	DD-04811-51000	2		O Ring
20	DD-32210-27581	6		Plug
21	DD-04512-50100	8		Spring Washer
22	DD-02176-50100	8		Nut
23	DD-01133-51035	8		Bolt
24	DD-T4340-27122	4		Stud
25	DD-04512-50160	12		Washer, Spring
26	DD-T4340-27131	4		Nut
27	DD-01173-51635	8		Bolt

8404 Tractor
Rear Differential System

 Page 157 of 200

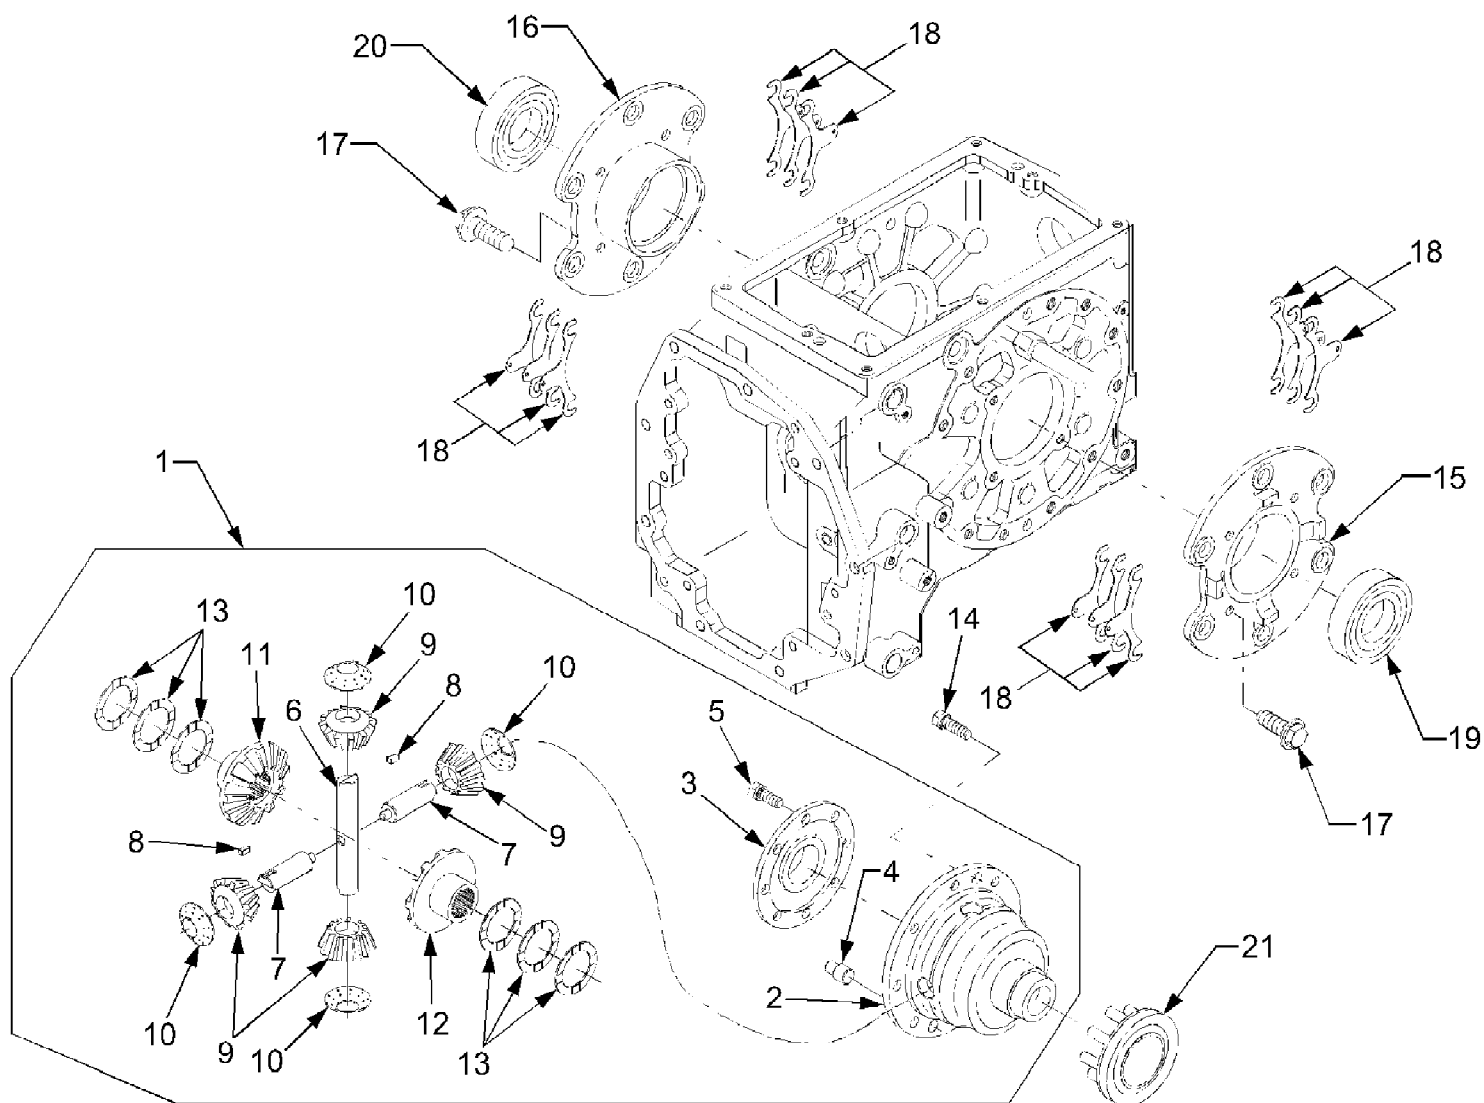

8404 Tractor
Rear Differential System

Page 158 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4620-26102	1		Differential System
2	DD-38240-26515	1		Case, Differential System
3	DD-38240-26523	1		Cap
4	DD-37300-28172	2		Pin, Straight
5	DD-01133-51025	8		Bolt
6	DD-38430-26343	1		Shaft, 1 Differential Pinion
7	DD-38430-26333	2		Shaft, 2 Differential Pinion
8	DD-31220-26281	2		Key
9	DD-T2240-26353	4		Pinion, Differential
10	DD-31220-26392	4		Washer, Differential Pinion
11	DD-37300-26432	1		Gear, Differential Side (RH)
12	DD-37300-26442	1		Gear, Differential Side (LH)
13	DD-38240-26472	2		Washer, Differential (1.7)
13	DD-37300-26481	2		Washer, Differential (1.5)
13	DD-37300-26491	2		Washer, Differential (1.6)
14	DD-37800-43871	8		Bolt
15	DD-T4620-26561	1		Case, Differential Bearing (LH)
16	DD-T4620-26551	1		Case, Differential Bearing (RH)
17	DD-01133-51030	8		Bolt
18	DD-37150-26161	8		Shim (T 0.2)
	DD-37150-26171	4		Shim (T 0.1)
	DD-37150-26181	4		Shim (T 0.5)
19	DD-08711-30209	1		Bearing, Taper Roller
20	DD-08711-32011	1		Bearing, Taper Roller
21	DD-37300-26614	1		Shift, Differential Lock

No
Diagram
Available

Parts List
Only


8404 Tractor
ROPS

Page 160 of 200

Ref #	Part Number	Qty	S/P/F	Description
	603-04102	1		SERVICE ASSEMBLY COMPLETE
	FV-001-7283-018	1		SAFETY DECAL
	FV-001-7283-019	1		SAFETY DECAL
	FV-001-7283-024	2		FOLDING WARNING DECAL
	FV-172-110-002	2		BLOCK-LATCH
	FV-172-115-001	2		KNOB ASSEMBLY
	FV-218-022-003	2		WASHER
	FV-273-007-002	2		LYNCH PIN
	FV-368-006-002	1		ROPS DECAL

8404 Tractor Seat Floor Group

 
Page 161 of 200

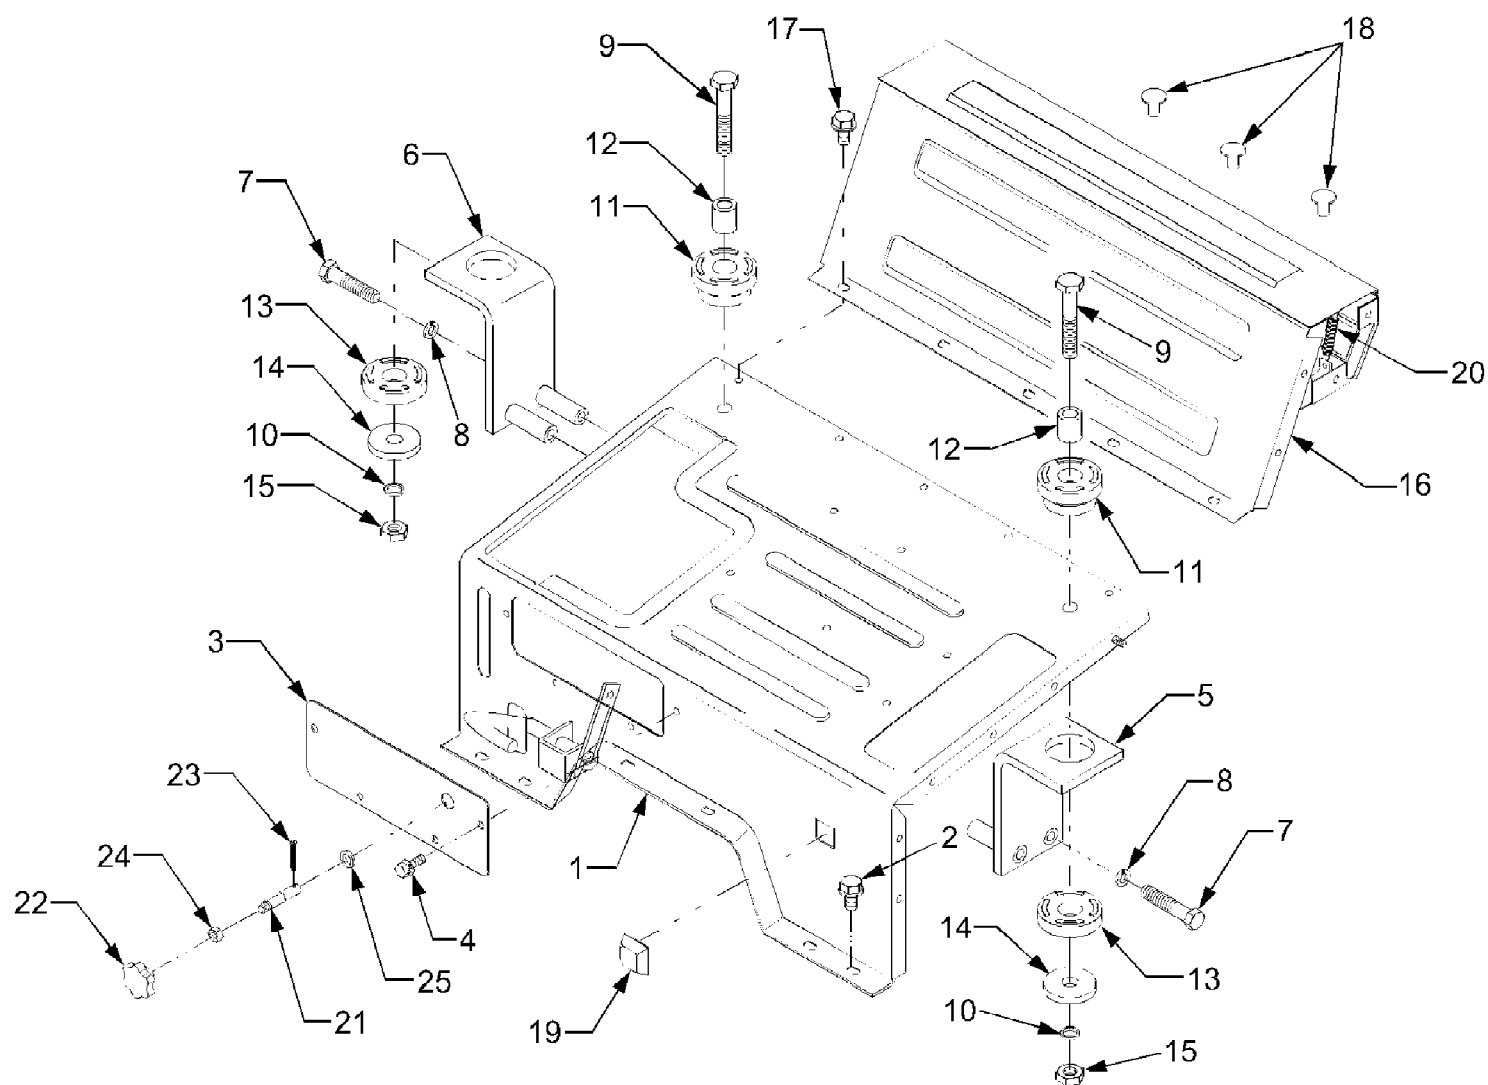

8404 Tractor
Seat Floor Group

Page 162 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DDT261570411YW	1		Seat Floor Ass'y
2	DD-01754-50816	6		Bolt, Flange
3	DD-T2610-65332	1		Cover
4	DD-01754-50816	4		Bolt, Flange
5	DD-T2610-74412	1		Support, Seat Floor (LH)
6	DD-T2610-74422	1		Support, Seat Floor (RH)
7	DD-01173-51295	4		Bolt
8	DD-04512-50120	4		Washer, Spring
9	DD-01173-51690	2		Bolt
10	DD-04512-50160	2		Washer, Spring
11	DD-T2610-70211	2		Rubber, Cabin Cushion (A)
12	DD-T4620-70042	2		Collar, Cabin Cushion (A)
13	DD-T4620-70032	2		Rubber, Cabin Cushion (B)
14	DD-T4520-87171	2		Collar
15	DD-02176-50160	2		Nut
16	DDT261092183YW	1		Seat Rear Plate Ass'y
17	DD-01754-50816	5		Bolt, Flange
18	DD-T4810-50661	3		Cushion
19	DD-T2615-70051	1		Cap, Bi-Speed
20	DD-T2305-26641	2		Spring
21	DD-T2610-39871	1		Rod, Hydraulic Control
22	DD-T2610-39881	1		Grip
23	DD-05511-50420	1		Pin, Split
24	DD-02176-50100	1		Nut
25	DD-31355-29491	1		Grommet

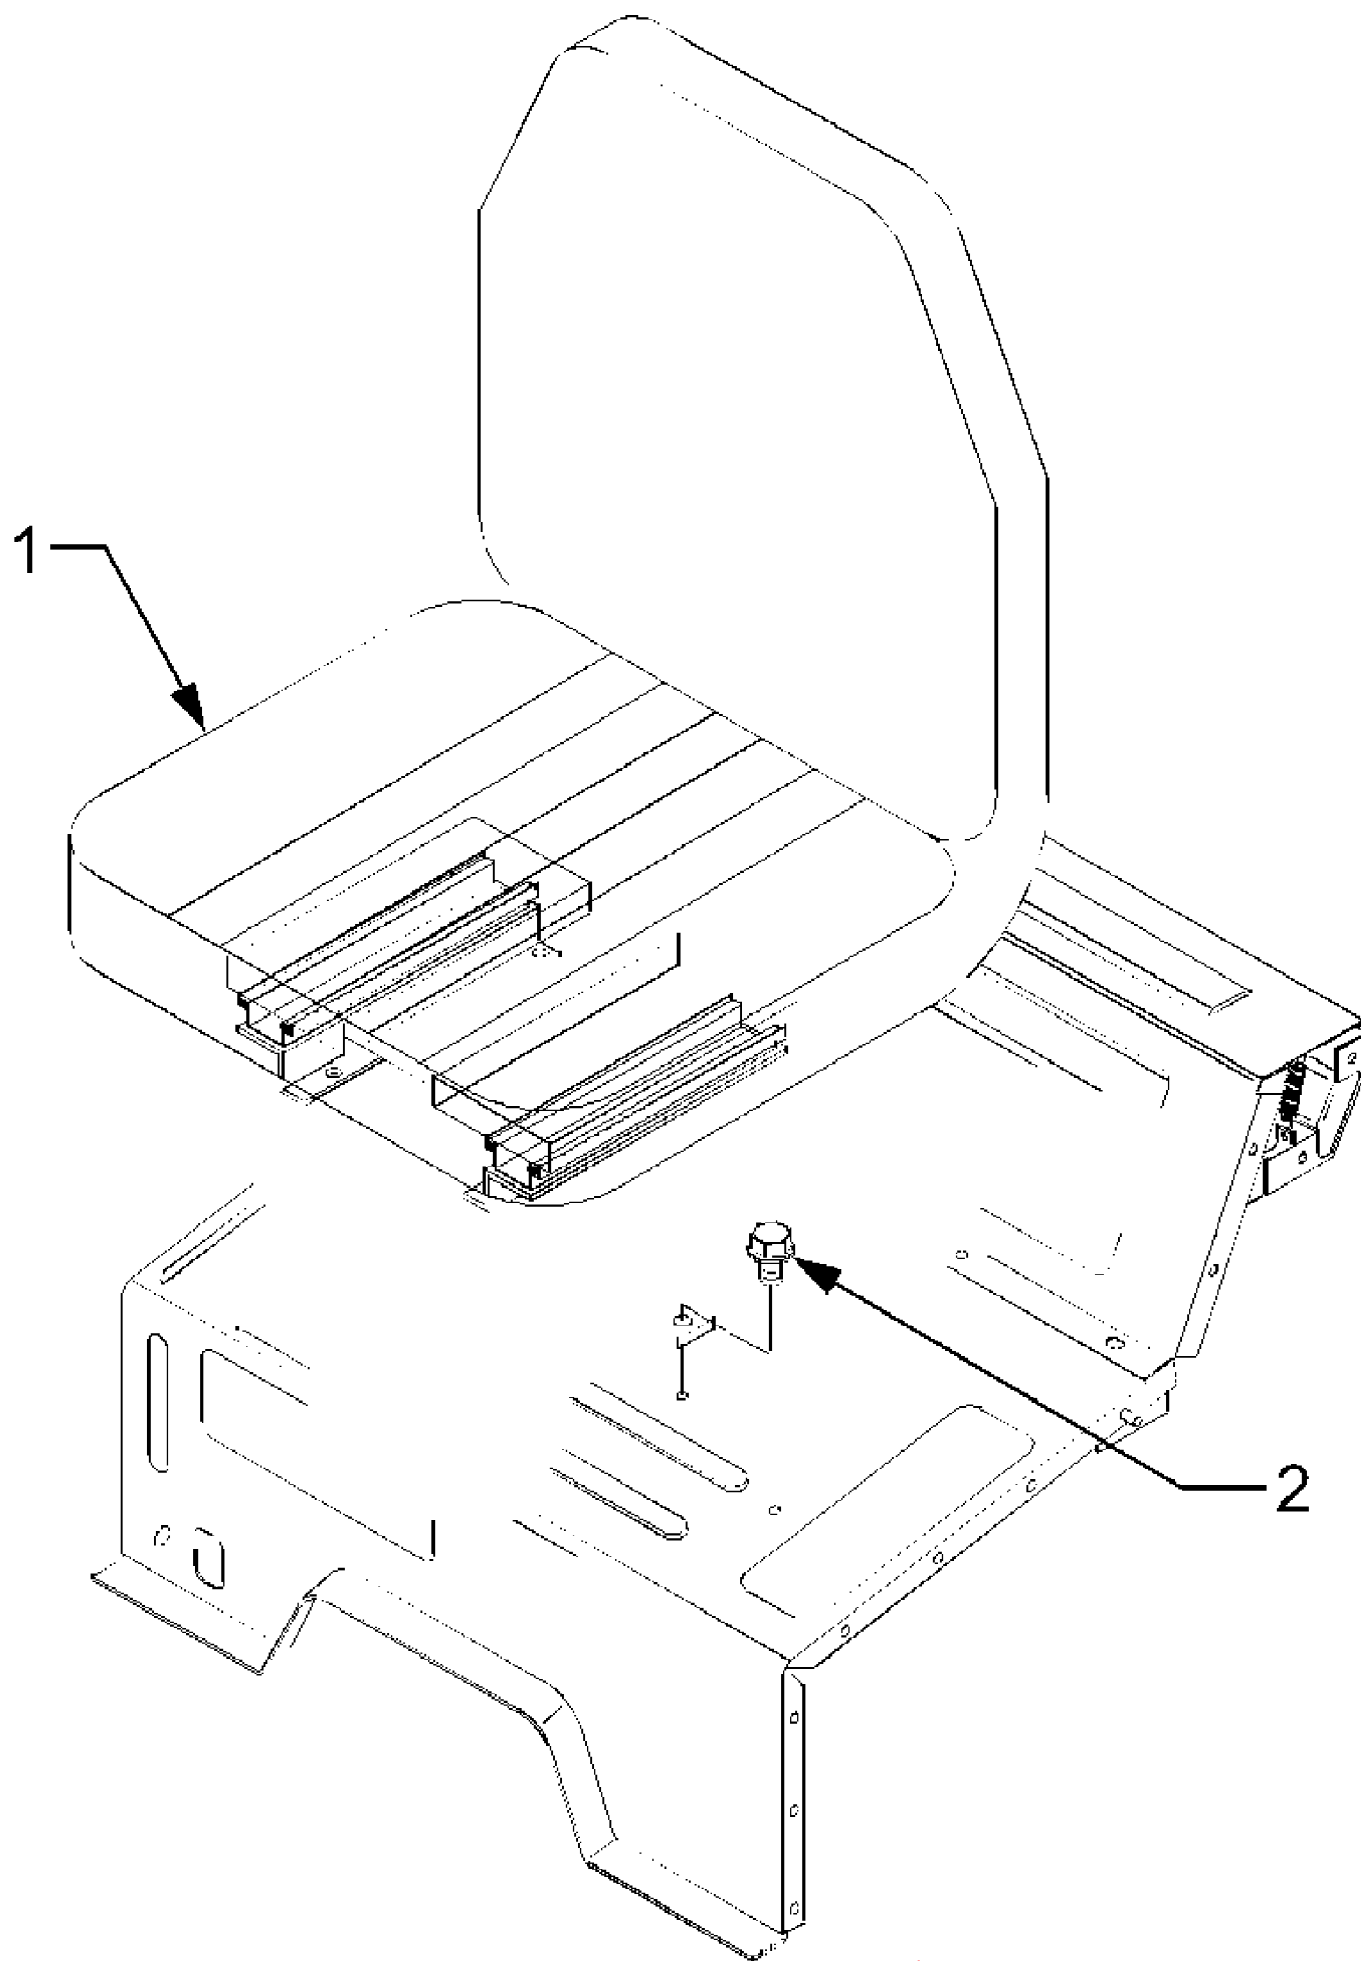 


8404 Tractor
Seat Group

Page 164 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-18501	1		Seat Ass'y
2	DD-01123-50820	4		Bolt

8404 Tractor Shuttle Shaft Group

 Page 165 of 200

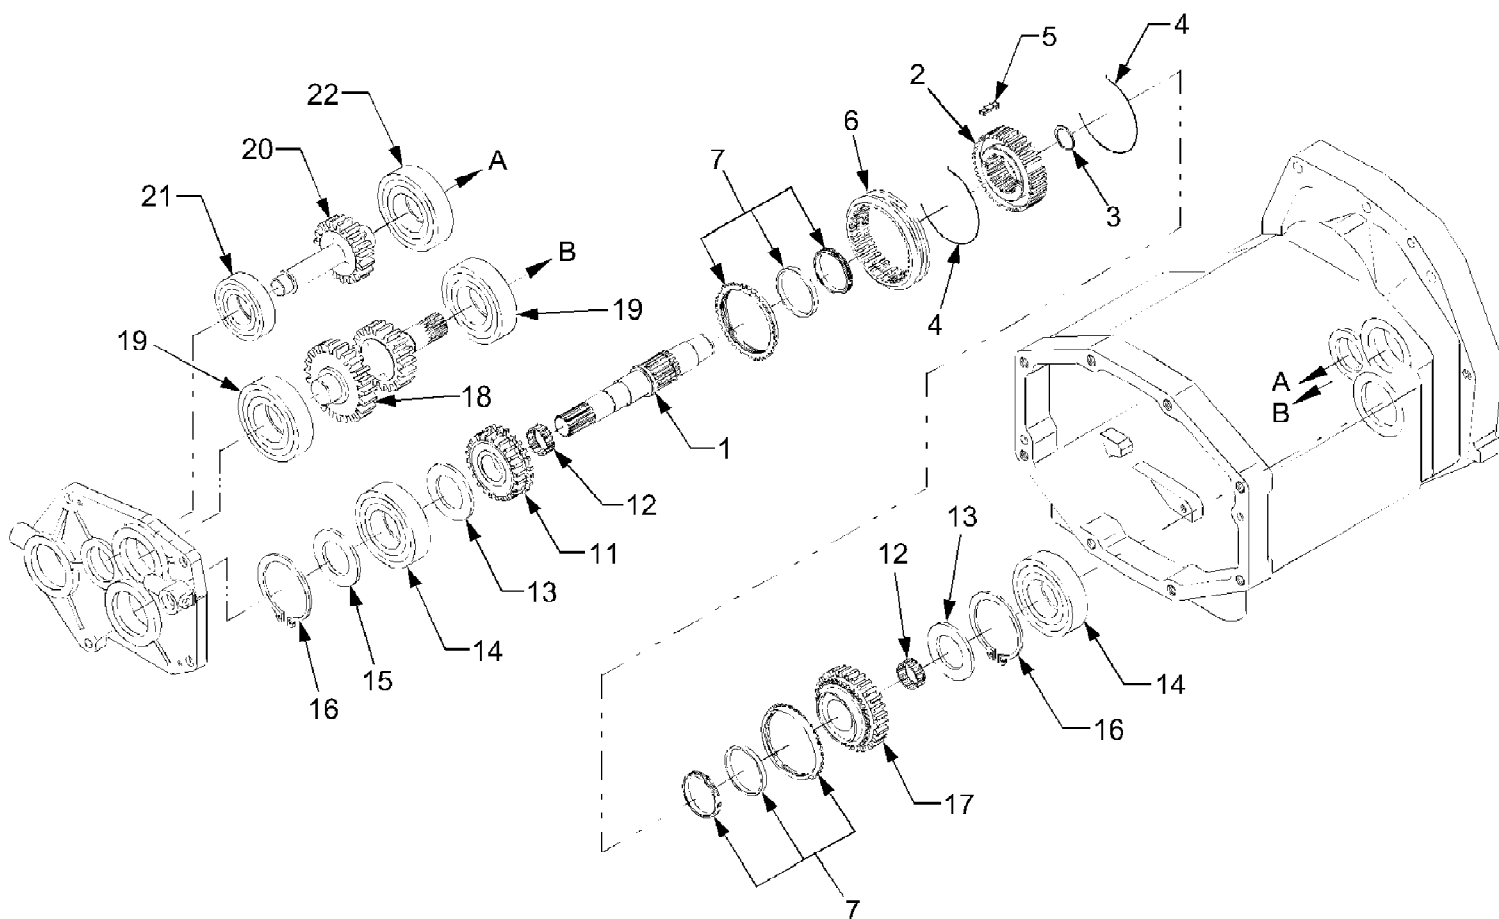


8404 Tractor
Shuttle Shaft Group

Page 166 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-22631	1		Shaft, Shuttle
2	DD-T2610-22812	1		Hub, Spline
3	DD-T2610-22821	1		Cir-clip
4	DD-38360-21781	2		Spring
5	DD-T2610-21812	3		Key, Synchronize
6	DD-T2610-22832	1		Shifter
7	DD-T2610-22851	2		Synchronize Ass'y
11	DD-T2610-22612	1		Gear, 19
12	DD-08822-83327	2		Bearing, Needle
13	DD-38430-21762	2		Collar, Thrust
14	DD-T2610-22661	2		Bearing, Ball
15	DD-34150-21561	2		Collar
16	DD-37150-21551	2		Cir-clip
17	DD-T2610-22622	1		Gear, 16
18	DD-T2610-22643	1		Shaft, 23-21 Gear
19	DD-T2610-22661	2		Bearing, Ball
20	DD-T2610-22722	1		Shaft, 18 Gear
21	DD-08101-06204	1		Bearing, Ball
22	DD-66415-39341	1		Bearing, Ball

8404 Tractor
Shuttle Shift Fork Group

 
Page 167 of 200

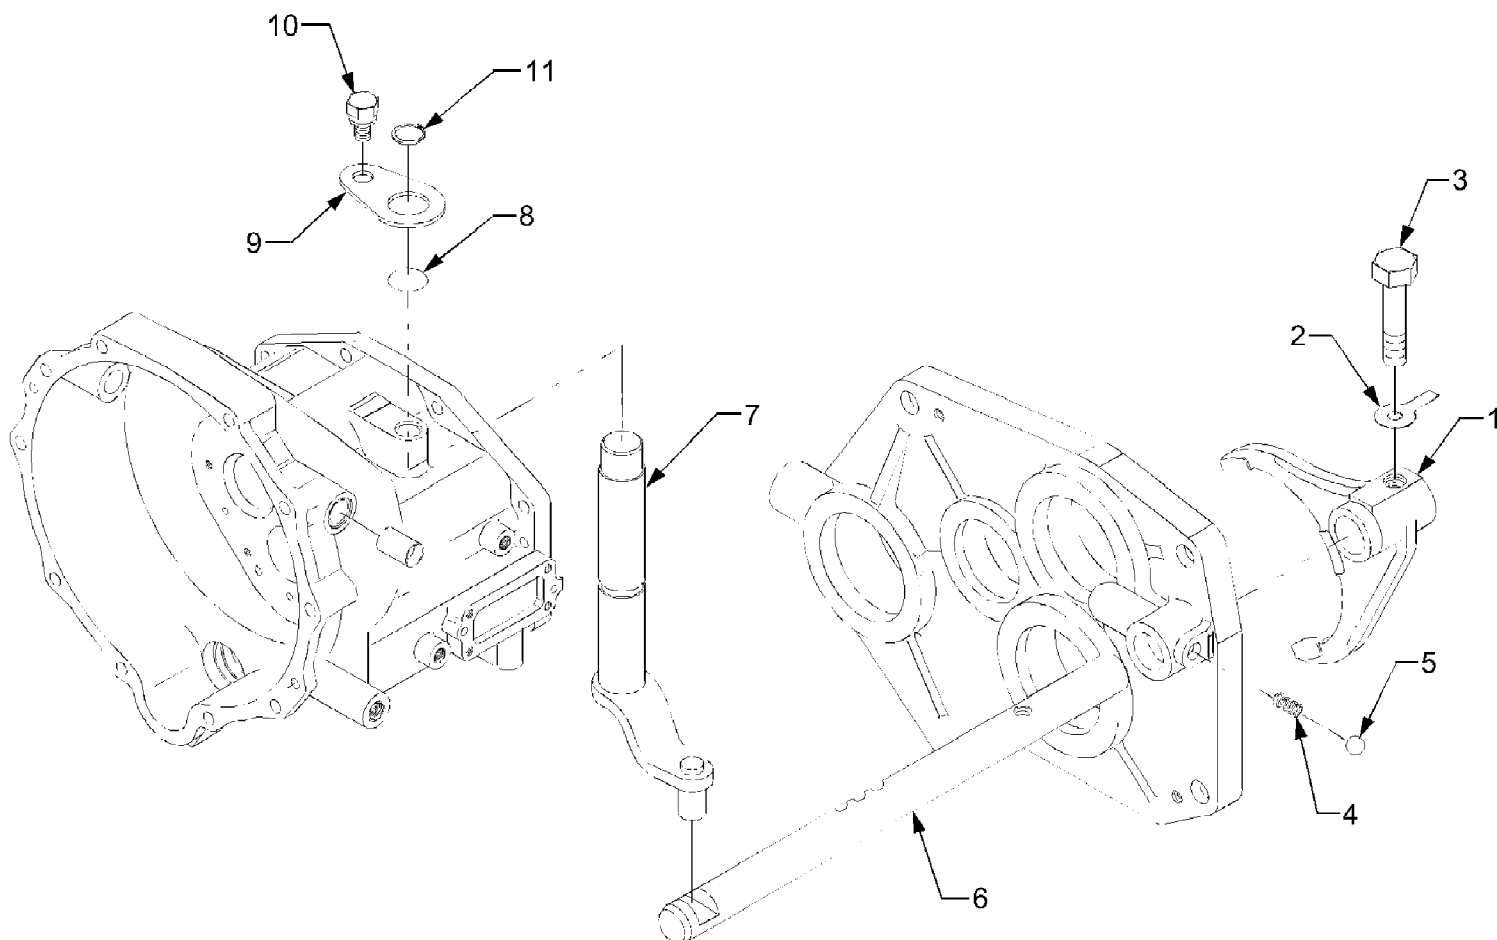

8404 Tractor
Shuttle Shift Fork Group

Page 168 of 200


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-22152	1		Fork, Shift (Shuttle)
2	DD-04111-50060	1		Washer
3	DD-T2610-22171	1		Bolt, Stopper
4	DD-62331-18532	1		Spring
5	DD-07715-01605	1		Ball
6	DD-T2610-22162	1		Rod, Fork (Shuttle)
7	DD-T2610-22122	1		Arm, Shift (Shuttle)
8	DD-04811-00200	1		O-ring
9	DD-T2610-22131	1		Plate
10	DD-01754-50812	1		Bolt, Flange
11	DD-04612-50180	1		Cir-clip

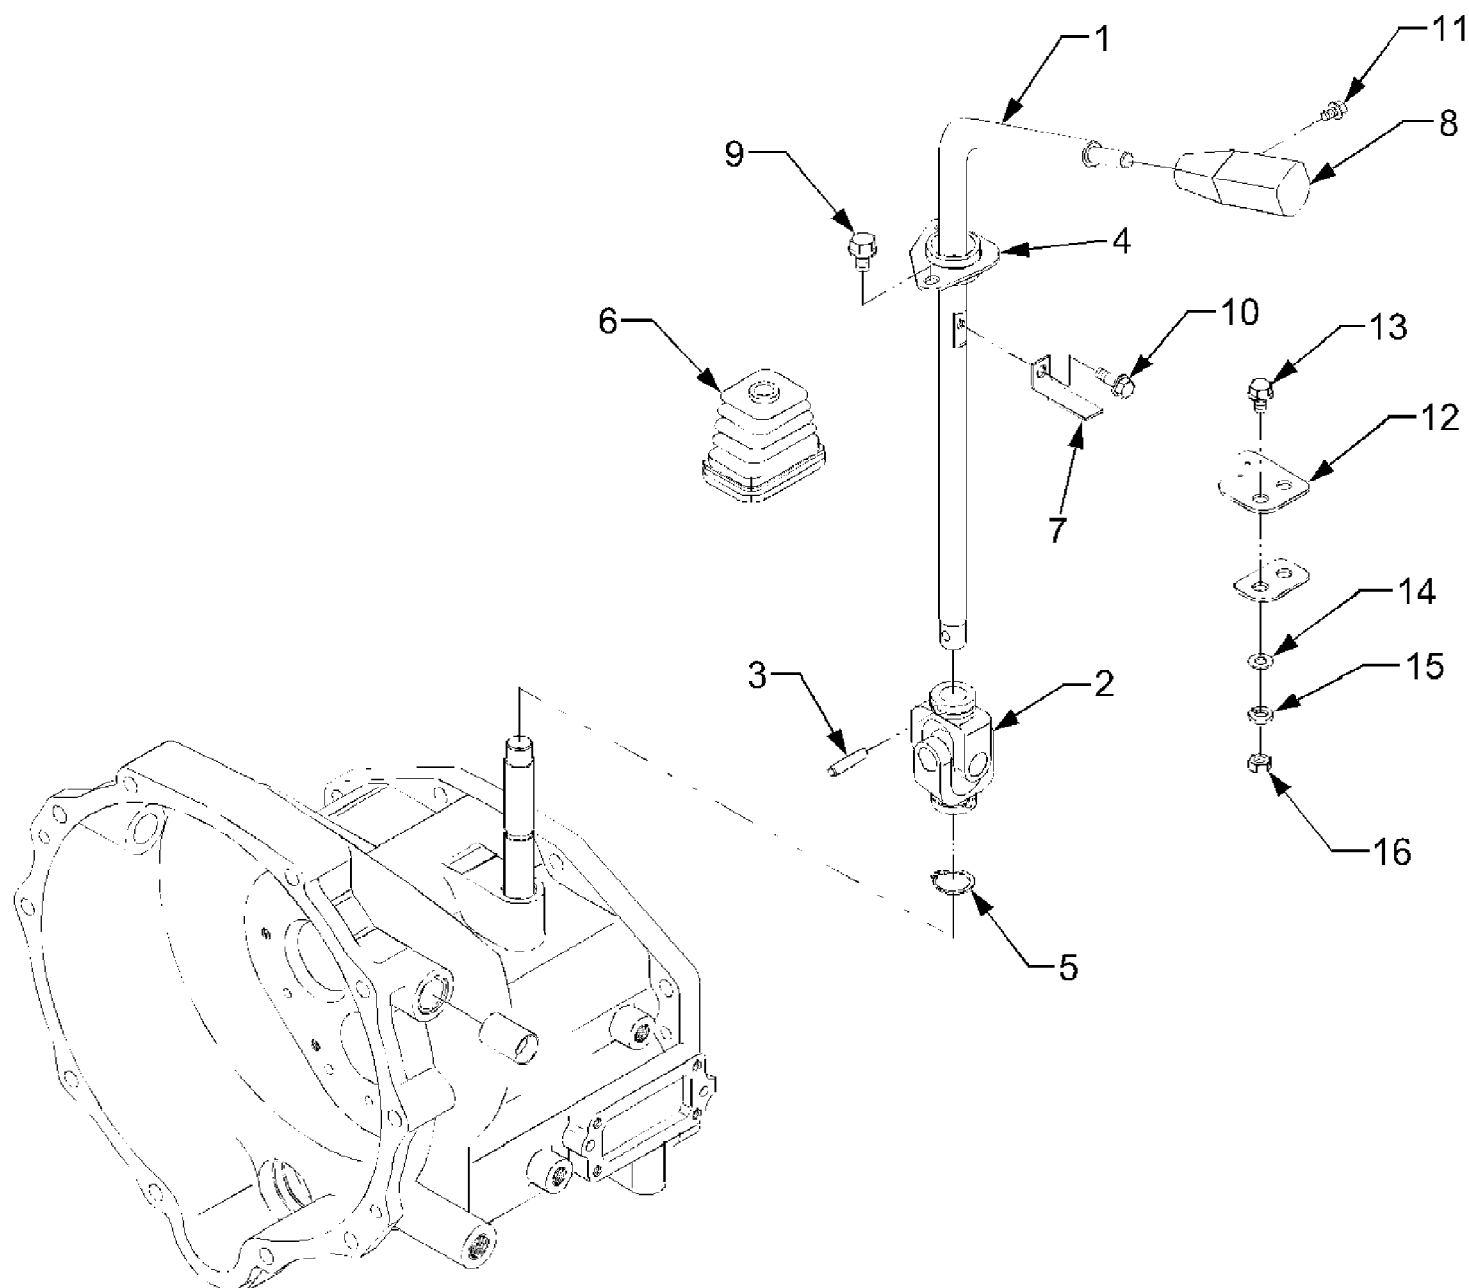 

8404 Tractor
Shuttle Shift Lever Group

Page 170 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4681-65611	1		Lever, Shuttle
2	DD-P4510-41311	1		Joint, Universal
3	DD-66116-41353	2		Pin, Straight
4	DD-T4620-65641	1		Flange, Bearing
5	DD-04612-00280	2		Cir-clip
6	DD-T4810-65571	2		Boot 1 (Shuttle Lever)
7	DD-T4680-65721	1		Bracket, Switch
8	DD-T4625-65712	1		Grip (Shuttle Lever)
9	DD-01023-50620	2		Bolt
10	DD-01023-50612	1		Bolt
11	DD-03024-50514	1		Screw
12	DD-T4620-65741	1		Plate
13	DD-01023-50620	2		Bolt
14	DD-04013-50060	2	/P	Washer, Plain
15	DD-04512-50060	2		Washer, Spring
16	DD-02056-50060	2		Nut

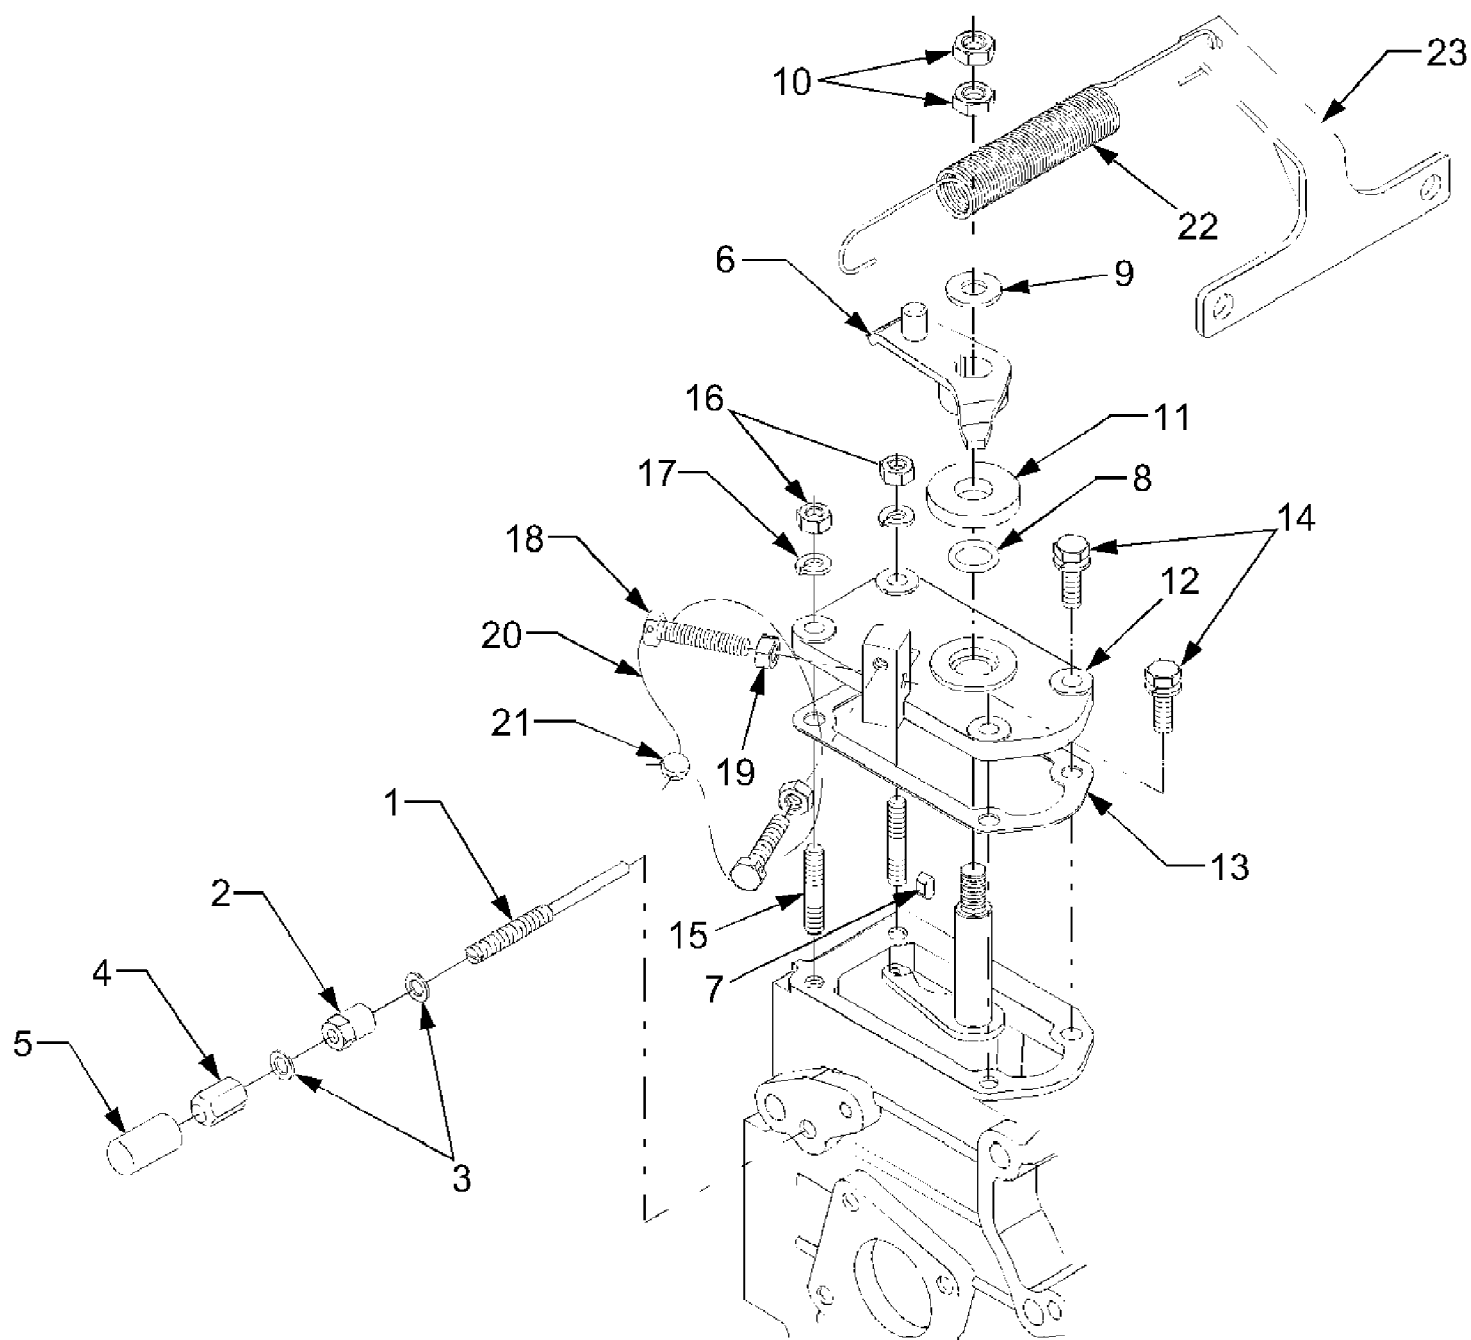 


8404 Tractor
Speed Control Plate

Page 172 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-15601-54121	1		Bolt, Adjusting
2	DD-15601-92011	1		Nut
3	DD-15601-96651	2		Gasket
4	DD-15601-54221	1		Nut, Cap
5	DD-15601-54422	1		Cap
6	DD-E6313-57153	1		Lever, Speed Control
7	DD-05712-00408	1		Key
8	DD-04811-00120	1		O-ring
9	DD-04013-50080	1		Washer, Plain
10	DD-02112-50080	2		Nut
11	DD-17011-57383	1		Plate, Friction
12	DD-E5800-57111	1		Plate, Speed Control
13	DD-E5800-57211	1		Gasket, Control Plate
14	DD-01023-50620	2		Bolt
15	DD-01518-50622	2		Stud
16	DD-02056-50060	2		Nut
17	DD-04512-50060	2		Washer, Spring
18	DD-15108-57284	2		Stopper
19	DD-02056-50060	2		Nut
20	DD-07811-11210	1		Wire
21	DD-07918-00001	1		Lead, Sealing
22	DD-52200-41921	1		Spring
23	DD-E6305-41291	1		Support, Spring

8404 Tractor
Spiral Bevel Gear Group

 Page 173 of 200

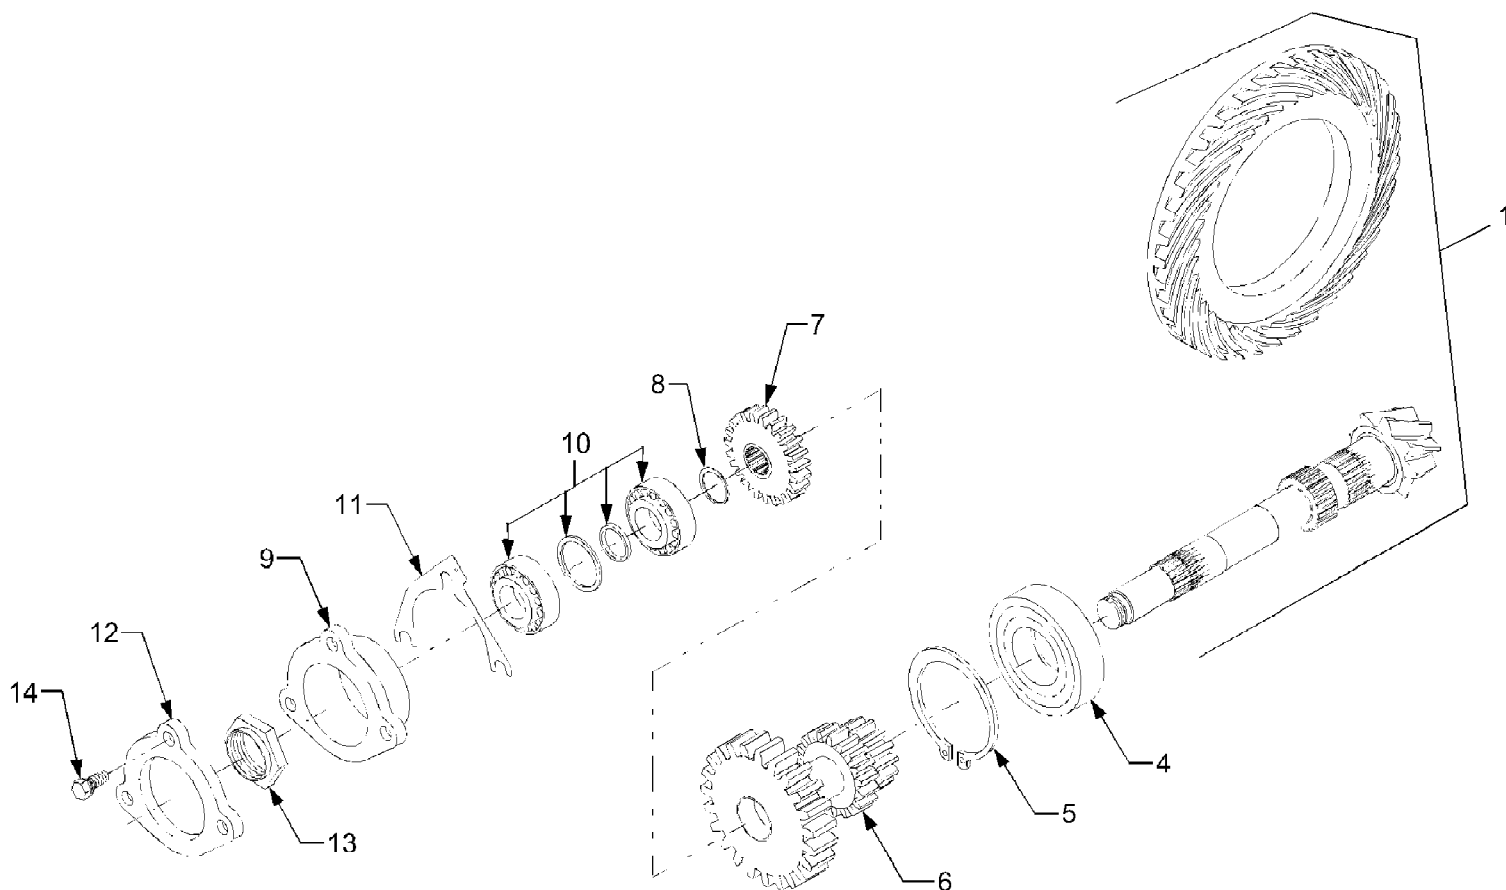


8404 Tractor
Spiral Bevel Gear Group

Page 174 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-26111	1		Spiral Bevel Gear Ass'y
4	DD-T2610-23811	1		Bearing, Roller
5	DD-04612-00350	1		Ring, Snap
6	DD-T2615-23671	1		Gear, 42-17
7	DD-T2615-44532	1		Gear, 25 Spur
8	DD-K2400-19371	1		Spacer
9	DD-T2610-23821	1		Case, Bearing
10	DD-38240-22141	1		Bearing, Taper Roller
11	DD-T2610-23831	2		Shim (T 0.1)
11	DD-T2610-23841	2		Shim (T 0.2)
11	DD-T2610-23851	2		Shim (T 0.5)
12	DD-T2610-23881	1		Cover, Bearing
13	DD-31220-22342	1		Nut
14	DD-01133-51040	3		Bolt

8404 Tractor
Steering Cylinder Group

 
Page 175 of 200

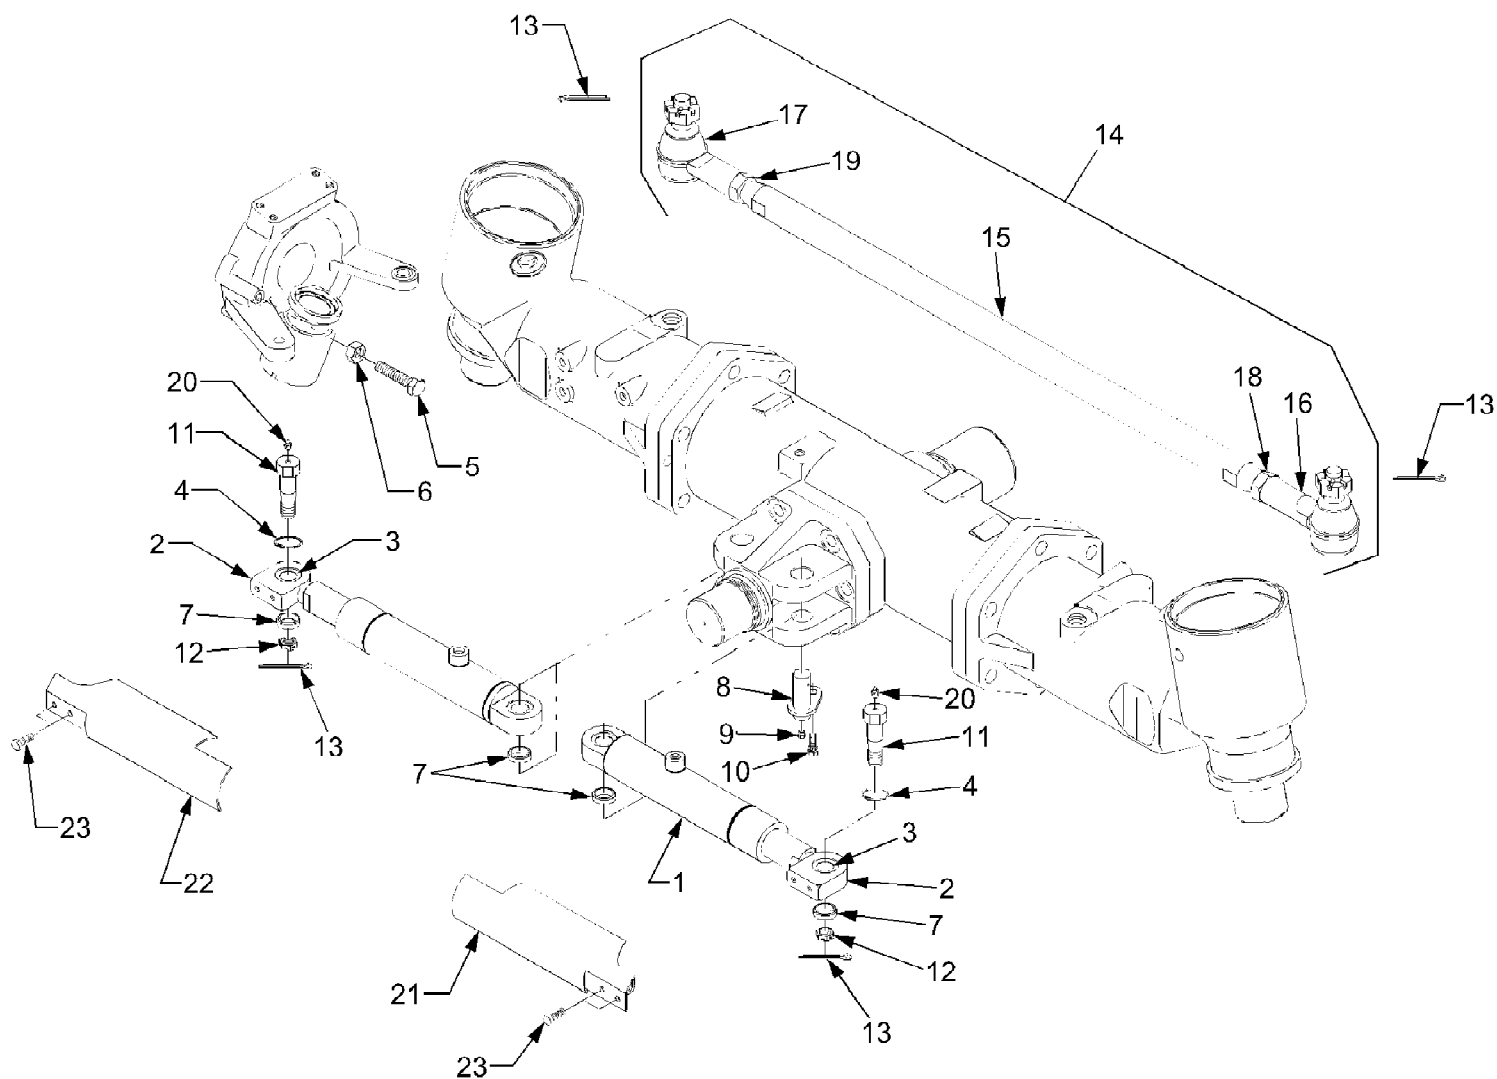

8404 Tractor
Steering Cylinder Group

Page 176 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2630-31202	2		Steering Cylinder Ass'y
2	DD-T2630-31322	2		Housing
3	DD-T4625-31301	2		Ball Ass'y
4	DD-T4625-31311	2		Cir-clip
5	DD-T4520-43941	2		Bolt, Set
6	DD-02076-50140	2		Nut
7	DD-T4625-31151	4		Collar
8	DD-T4625-31162	2		Pin, Cylinder Support
9	DD-06613-20010	2		Nipple
10	DD-01120-50814	2		Bolt
11	DD-T2620-31181	2		Pin, Support
12	DD-T2610-31311	2		Nut
13	DD-05511-50335	4		Pin, Split
14	DD-T2630-31131	1		Tie Rod Ass'y
15		1		Rod, Tie Order Ref. No. 14
16	DD-T4625-31191	1		Tie Rod End Ass'y (LH)
17	DD-T4625-31051	1		Tie Rod End Ass'y 2 (RH)
18	DD-T4625-63701	1		Nut (LH)
19	DD-T4520-63701	1		Nut (RH)
20	DD-06611-15675	2		Nipple
21	DD-T2630-31331	1		Cover, Cylinder (LH)
22	DD-T2630-31341	1		Cover, Cylinder (RH)
23	DD-01023-50610	4		Bolt

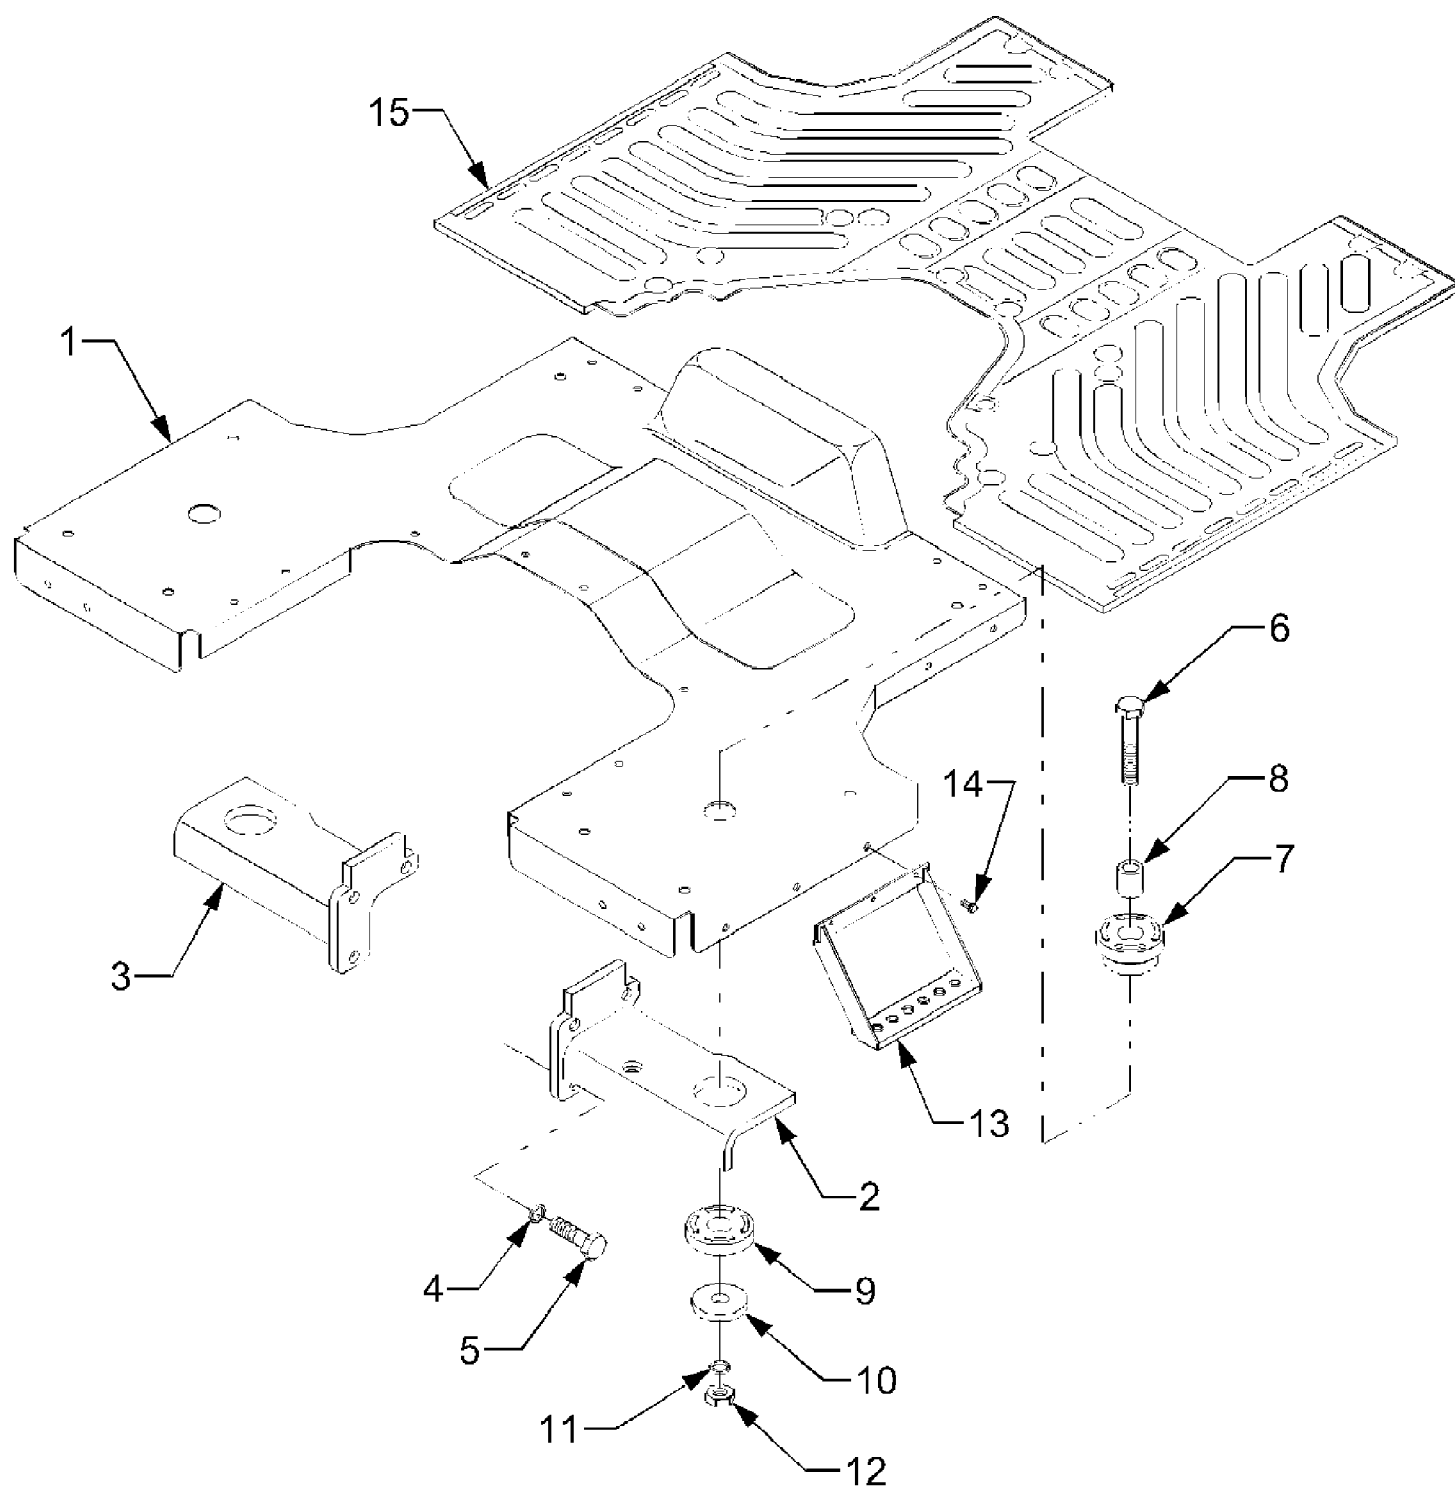 


8404 Tractor
Step Group

Page 178 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DDT261090217YW	1		Step Ass'y
2	DD-T2610-70015	1		Support, Step (LH)
3	DD-T2610-70025	1		Support, Step (RH)
4	DD-04512-50140	4		Washer, Spring
5	DD-01173-51435	4		Bolt
6	DD-01173-51690	2		Bolt
7	DD-T2610-70211	2		Rubber, Cabin Cushion (A)
8	DD-T4620-70042	2		Collar, Cabin Cushion (A)
9	DD-T4620-70032	2		Rubber, Cabin Cushion (B)
10	DD-T4520-87171	2		Collar
11	DD-04512-50160	2		Washer, Spring
12	DD-02176-50160	2		Nut
13	DDT462070221YW	2		Step
14	DD-01125-50820	6		Bolt
15	DD-T2610-70242	1		Mat

8404 Tractor
Suction Pipe Group

 
Page 179 of 200

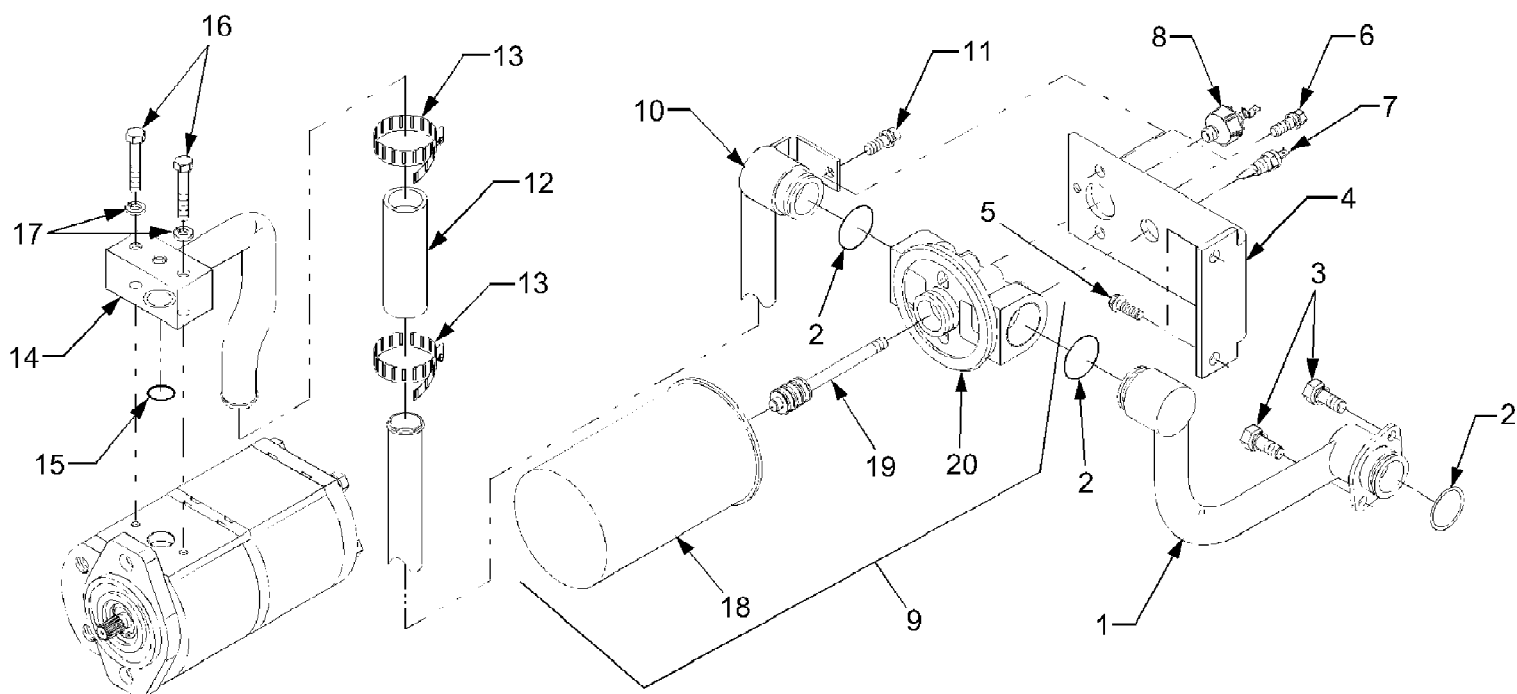

8404 Tractor
Suction Pipe Group

Page 180 of 200



Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-38002	1		Pipe 1, Suction
2	DD-04810-00320	3		O-ring
3	DD-01123-50820	2		Bolt
4	DD-T2610-38051	1		Support, Filter
5	DD-01133-51020	2		Bolt
6	DD-01133-51030	2		Bolt
7	DD-T4340-38751	1		Sensor, Thermostat
8	DD-T4340-38762	1		Sensor, Vacuum
9	DD-T4620-38021	1		Hydraulic Filter Ass'y Includes Ref. Nos. 18 thru 20
10	DD-T2610-38011	1		Pipe 2, Suction
11	DD-01125-50814	1		Bolt
12	DD-84612-37770	1		Pipe, Rubber
13	DD-31355-38191	2		Band, Pipe
14	DD-T2610-38071	1		Pipe 3, Suction
15	DD-04810-00220	1		O-ring
16	DD-01153-50850	2		Bolt
17	DD-04512-50080	2		Washer, Spring
18	DD-T4620-38031	1	S	Filter, Hydraulic
19	DD-T4260-38841	1		Magnetic Ass'y
20	DD-T4620-38041	1		Braket, Filter

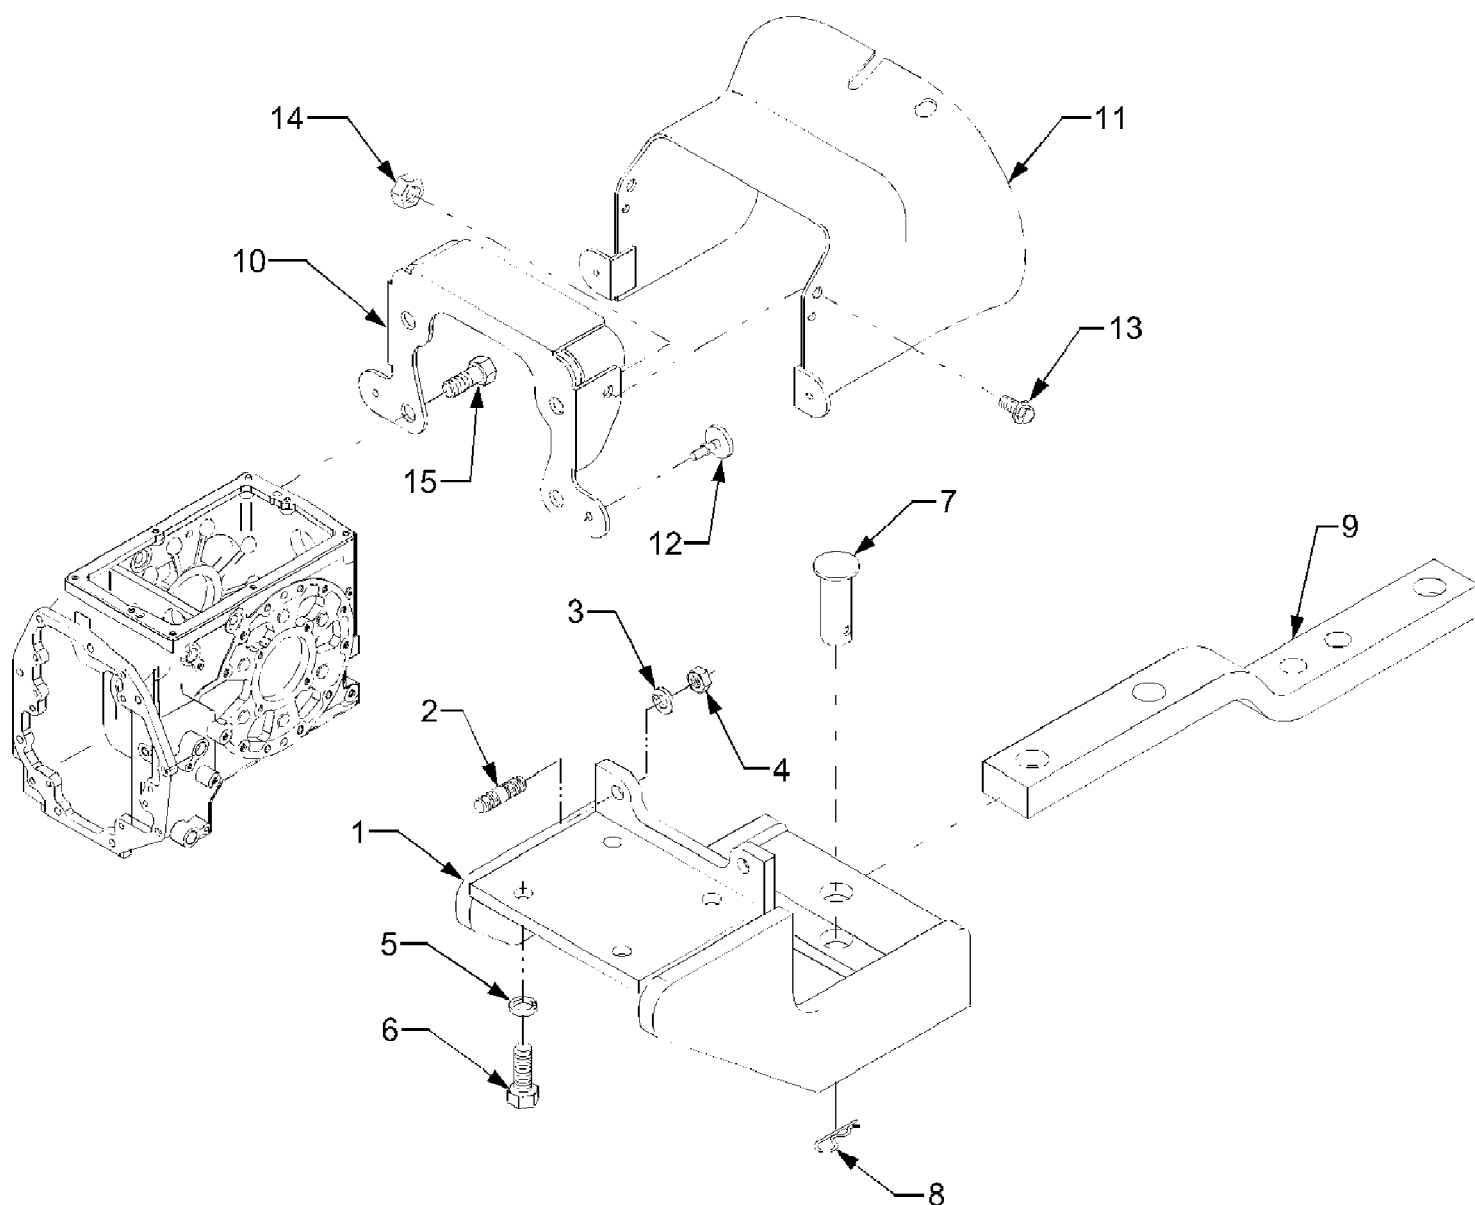 

8404 Tractor
Swing Drawbar Group

Page 182 of 200


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2615-29811	1		Frame, Swing Drawbar
2	DD-01574-51230	2		Stud
3	DD-04512-50120	2		Washer, Spring
4	DD-02176-50120	2		Nut
5	DD-04512-50140	4		Spring Washer
6	DD-01173-51435	4		Bolt
7	DD-T2445-29781	2		Pin, Joint
8	DD-70515-16334	2		Pin, Snap
9	DD-T2615-29831	1	S	Drawbar
10	DD-T2615-57051	1		Bracket(Pto Shield)
11	DD-T4686-74051	1		Cover, PTO
12	DD-K9100-50241	2		Cushion
13	DD-01754-50816	2		Bolt, Flange
14	DD-41011-51514	2		Nut
15	DD-01133-51230	2		Bolt

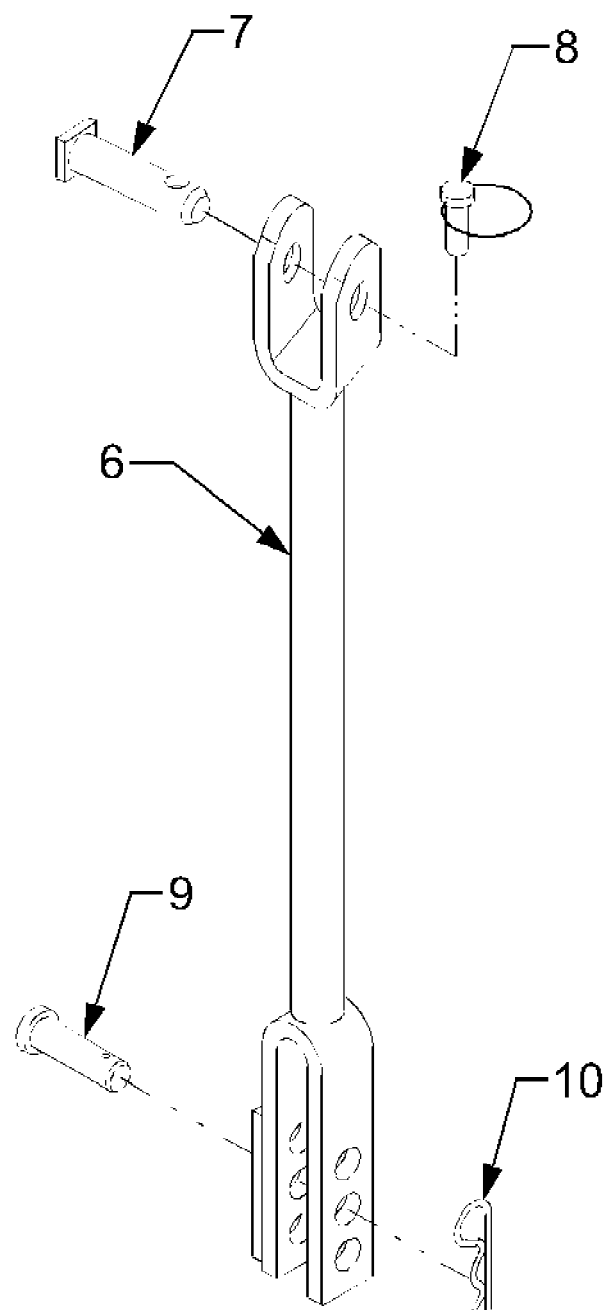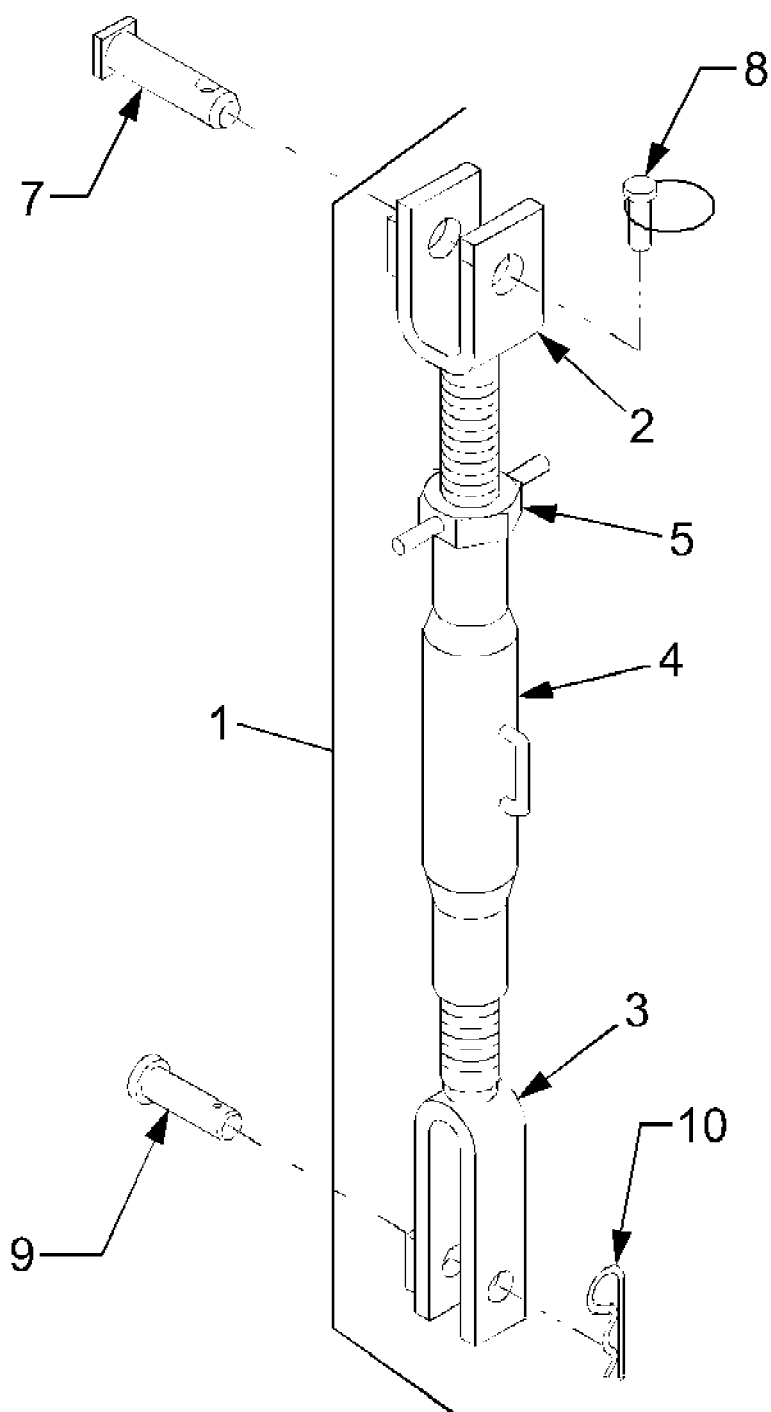  

8404 Tractor
Three Point Connection System

Page 184 of 200


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4620-85412	1		Lift Rod Ass'y (RH)
2	DD-T4620-85422	1		Rod, Lift (Upper)
3	DD-T4620-85432	1		Rod, Lift (Down)
4	DD-T4620-85442	1		Body, Lift Rod
5	DD-T4620-85451	1		Nut
6	DD-T2610-85482	1		Lift Rod Ass'y (LH)
7	DD-T4620-85471	2		Pin, Lift Rod (Upper)
8	DD-34150-37644	2		Pin, Set
9	DD-34354-71583	2		Pin
10	DD-05515-51600	2		Pin, Snap

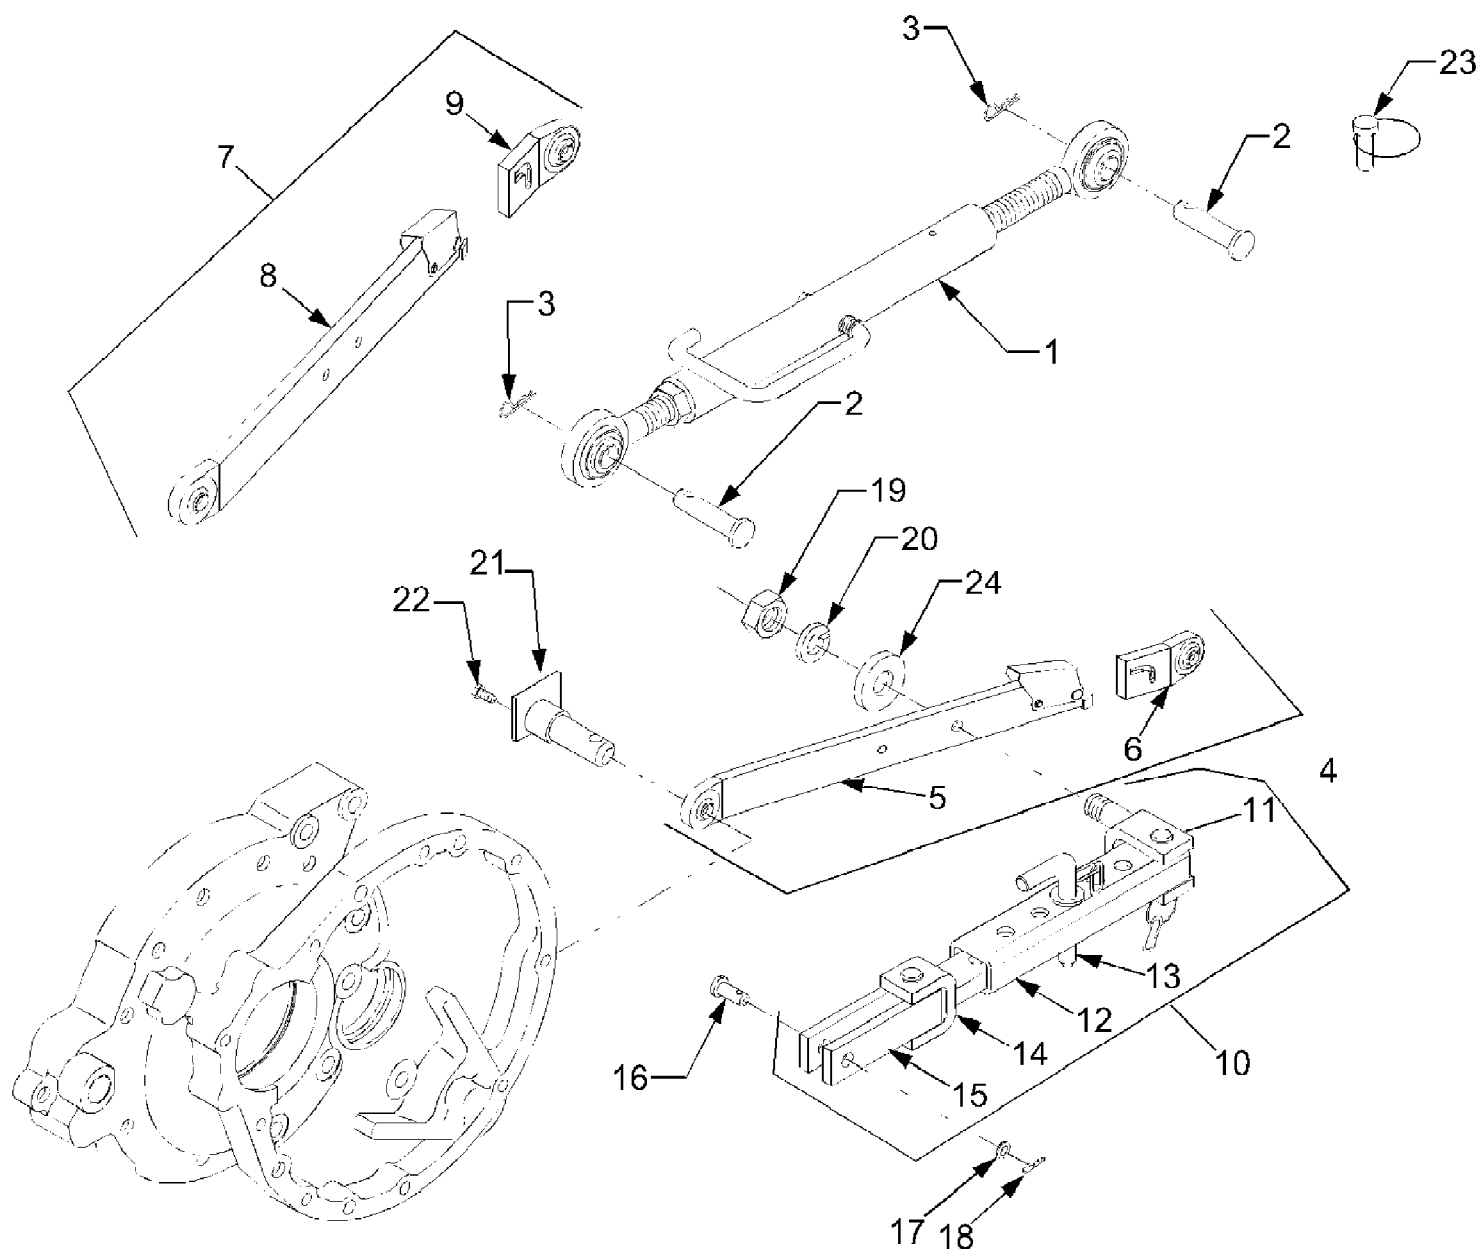 

8404 Tractor
Three Point Connectors

Page 186 of 200


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4681-85351	1		Top Link Ass'y
2	DD-T4620-85392	1		Pin, Top Link
3	DD-05515-51600	1		Pin, Snap
4	DD-T2615-94011	1	/P	Lower Link Ass'y (LH) Includes Ref. Nos. 5 & 6
5	DD-T2615-93021	1		Body, Lower Link (LH)
6	DD-T2615-93031	1		Housing, Lower Link (LH)
7	DD-T2615-94111	1	/P	Lower Link Ass'y (RH) Includes Ref. Nos. 8 & 9
8	DD-T2615-93121	1		Body, Lower Link (RH)
9	DD-T2615-93131	1		Housing, Lower Link (RH)
10	DD-T2615-91113	2	/P	Check Link Ass'y Includes Ref. Nos. 11 thru 15
11	DD-T2615-91152	2	S	Bracket 3
12	DD-T2615-91142	2	/P	Housing
13	DD-T2615-91161	2		Hook
14	DD-T2615-91132	2	/P	Bracket 2
15	DD-T2615-91122	2		Bracket 1
16	DD-32353-71893	2		Pin
17	DD-04013-50120	2		Washer, Plain
18	DD-05515-51200	2		Pin, Snap
19	DD-02174-50180	2		Nut
20	DD-04512-50180	2		Washer, Spring
21	DD-T4240-28533	2		Pin, Lower Link
22	DD-01774-51016	2		Bolt
23	DD-34150-37644	2		Pin, Set
24	DD-04014-50180	2		Washer, Plain

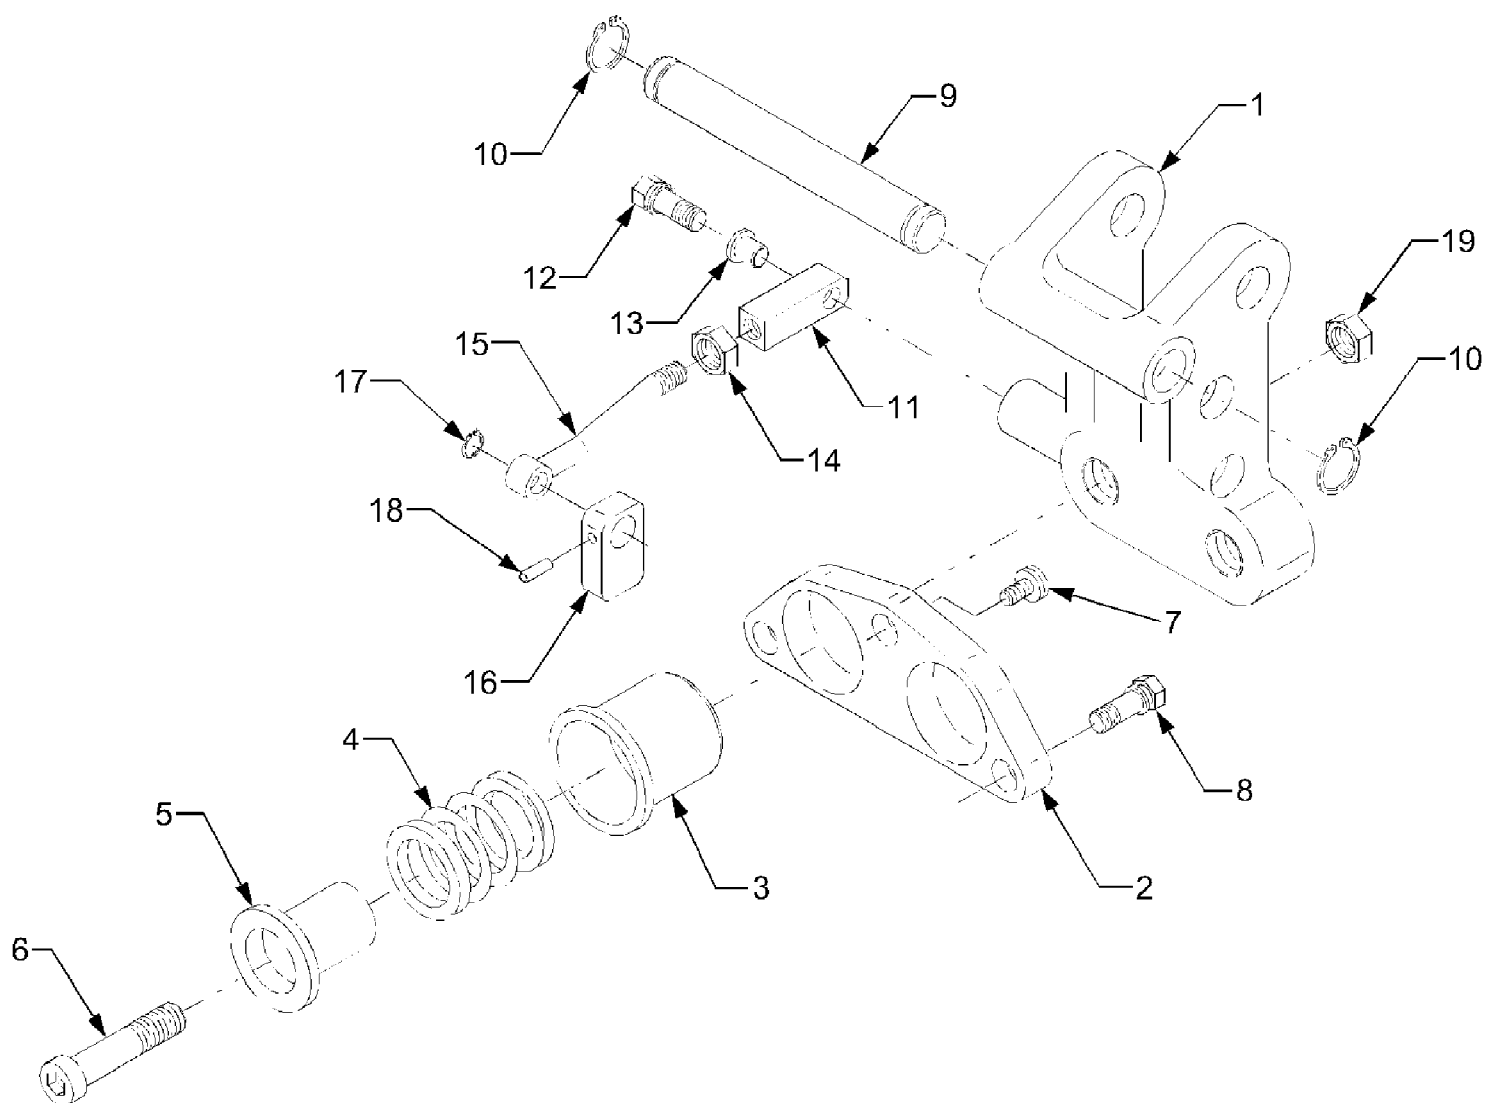 

8404 Tractor
Top Link Bracket Group

Page 188 of 200


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-39802	1		Holder, Top Link
2	DD-T2610-39811	1		Flange
3	DD-T2610-39821	1		Cover
4	DD-T2610-39832	2		Spring
5	DD-T2610-39842	2		Roller
6	DD-T2610-39852	2		Bolt
7	DD-T2610-39862	1		Bolt
8	DD-01123-51035	2		Bolt
9	DD-T2610-39901	1		Pin 4
10	DD-04612-00200	2		Cir-clip
11	DD-T2610-39911	1		Plate
12	DD-01123-50835	1		Bolt
13	DD-T2610-39921	1		Roller
14	DD-02118-50100	1		Nut
15	DD-T2610-39931	1		Rod, Tie
16	DD-T2610-39951	1		Crank
17	DD-04613-50070	1		Cir-clip
18	DD-05411-00625	1		Pin, Spring
19	DD-T2610-39961	2		Nut, Lock

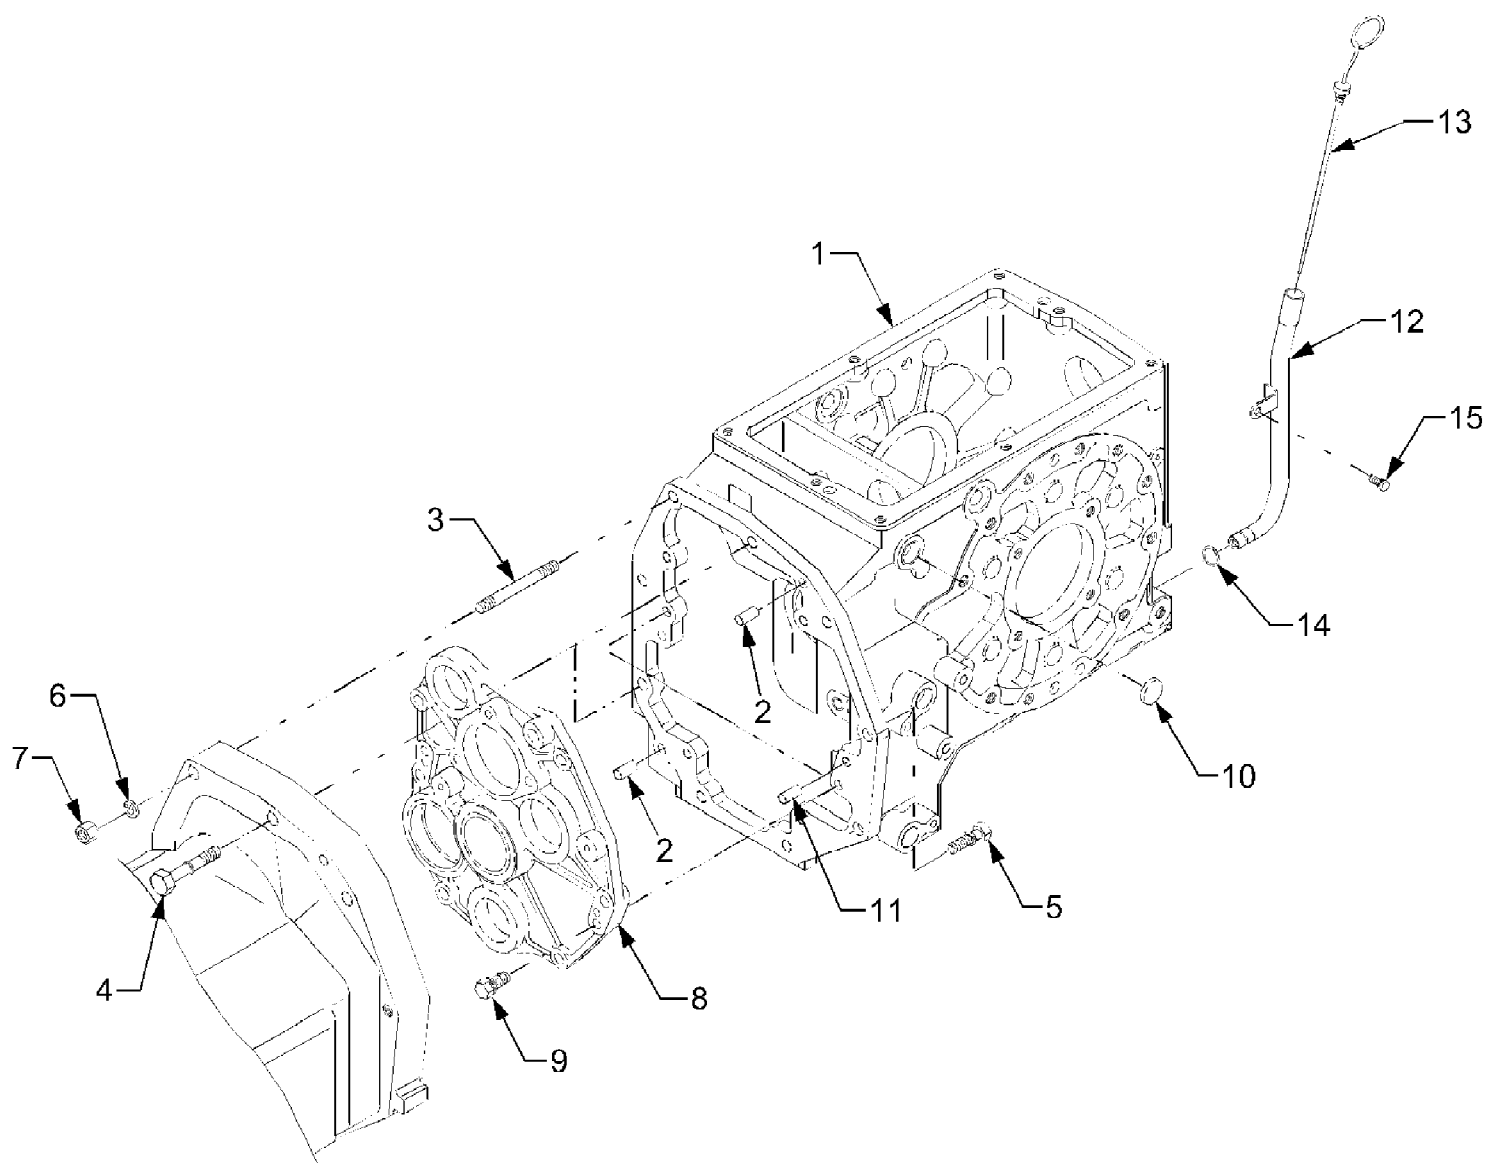 

8404 Tractor
Transmission Case

Page 190 of 200


Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-21118	1		Case, Transmission
2	DD-05012-01018	2		Pin, Straight
3	DD-01574-51260	5		Stud
4	DD-01133-51260	2		Bolt
5	DD-01133-51235	2		Bolt
6	DD-04512-50120	5		Washer, Spring
7	DD-02176-50120	5		Nut
8	DD-T2610-21123	1		Cover, Bearing
9	DD-01133-51038	6		Bolt
10	DD-T2610-21911	1		Plug, Expansion
11	DD-05012-01018	2		Pin, Straight
12	DD-T2630-25451	1		Guide, Oil Gage
13	DD-T4810-25904	1		Gauge, Oil
14	DD-04811-10110	1		O-ring
15	DD-01023-50612	1		Bolt

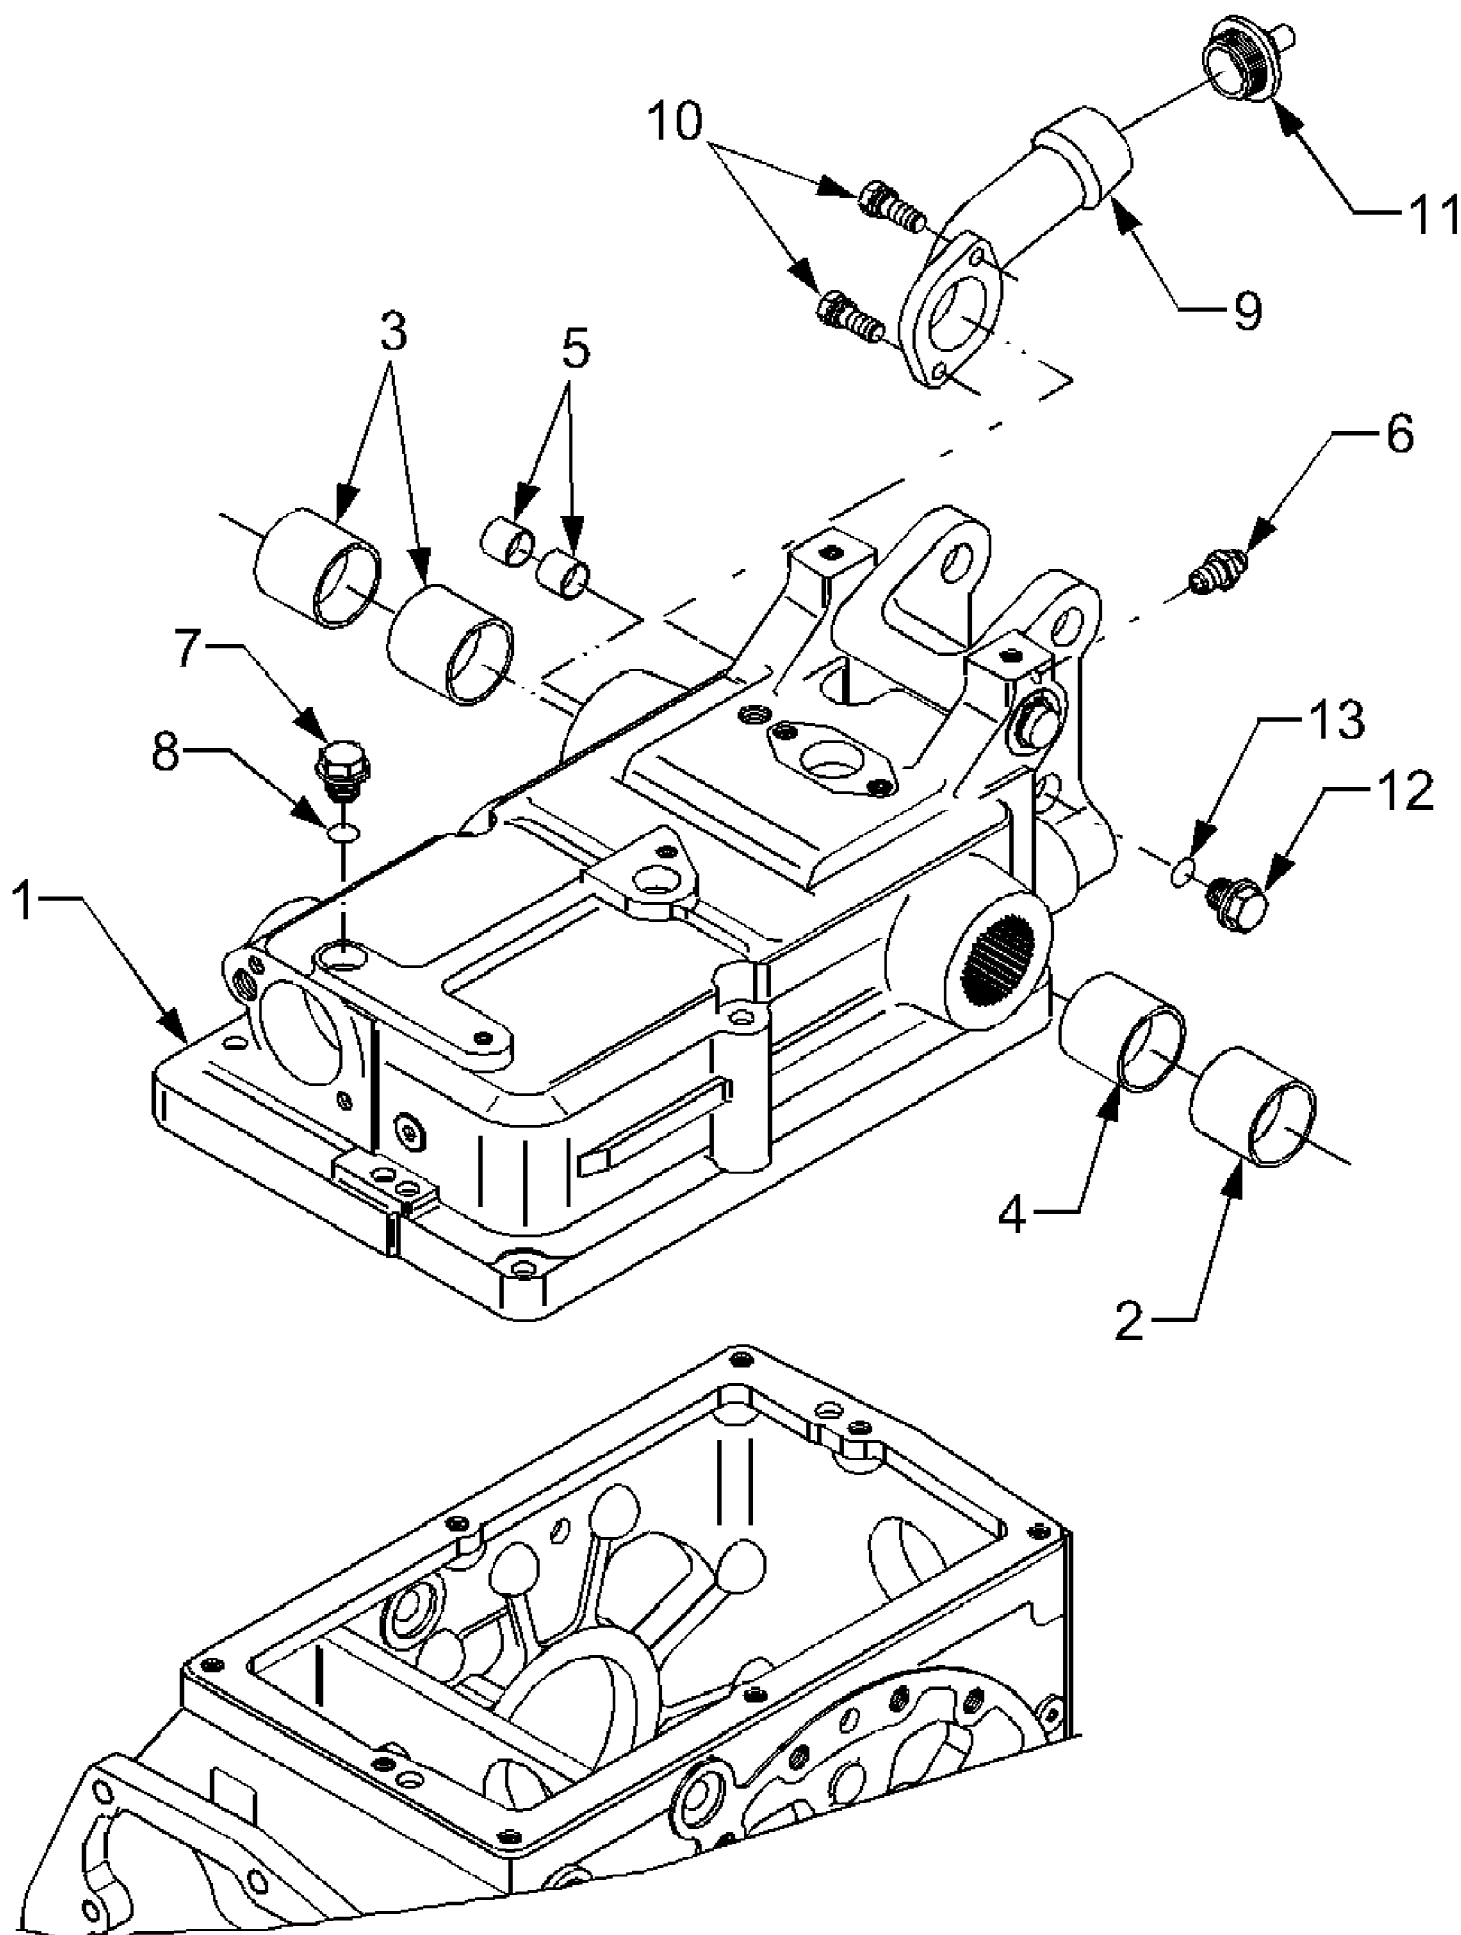 

8404 Tractor
Transmission Cover Plate

Page 192 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T2610-37115	1	S	Transmission Cover Plate
2	DD-08511-04530	1		Bush
3	DD-08511-05040	2		Bush
4	DD-08511-04540	1		Bush
5	DD-08511-01615	2		Bush
6	DD-06613-10010	2		Nipple, Grease
7	DD-06311-55010	1		Plug
8	DD-04810-00800	1		O-ring
9	DD-T2610-35001	1		Inlet, Oil
10	DD-01123-50820	2		Bolt
11	DD-T4680-36002	1		Breather, Air
12	DD-06331-45010	1		Plug
13	DD-04717-01000	1		Washer, Seal

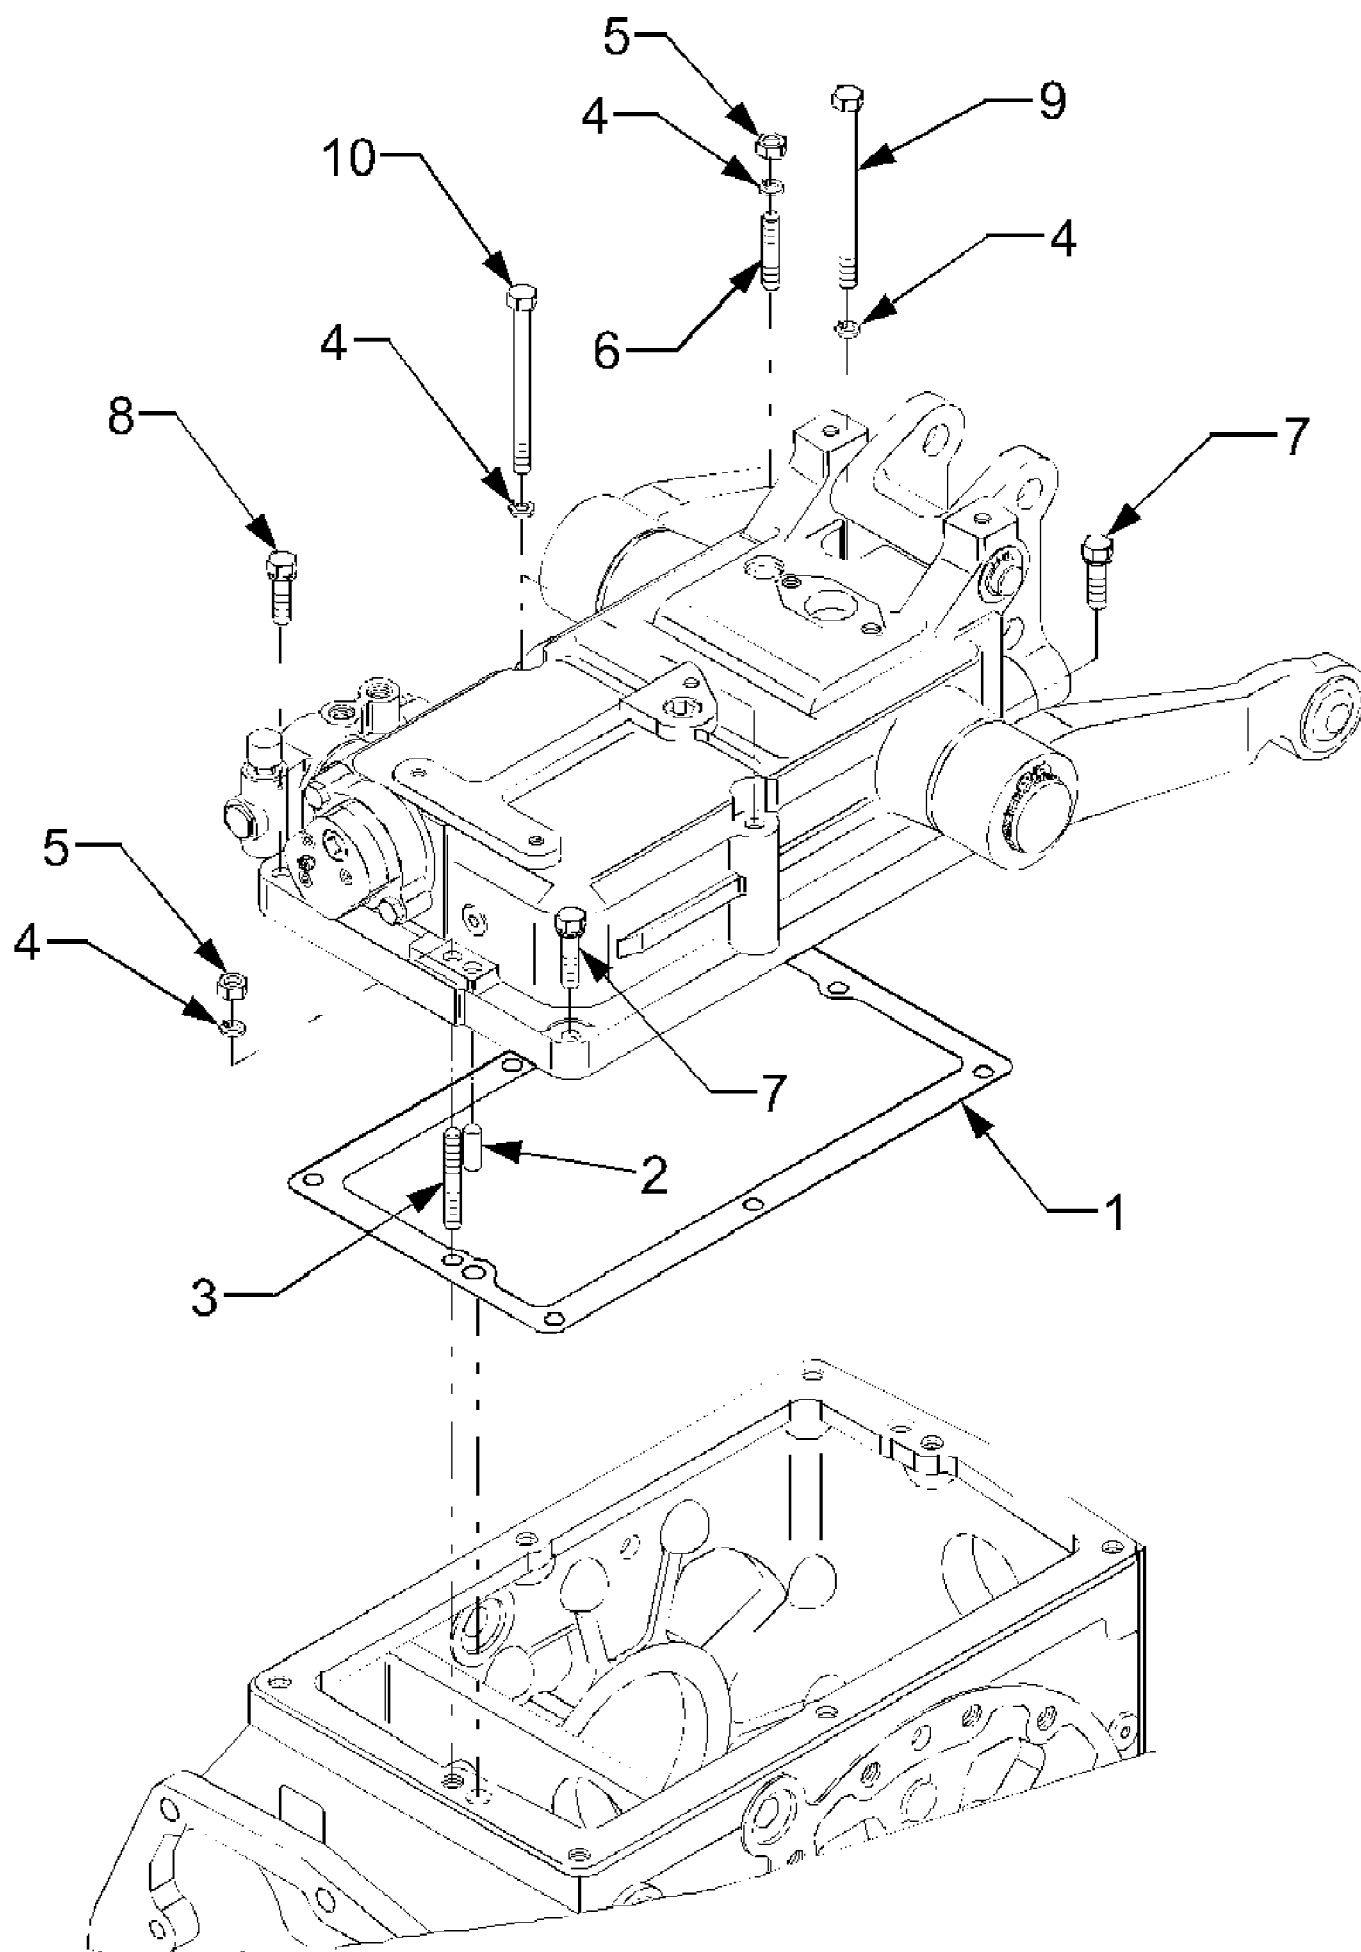 


8404 Tractor
Transmission Cover Plate Fasteners

Page 194 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-T4620-37121	1		Packing
2	DD-37805-43501	1		Pin, Straight
3	DD-01517-51050	1		Stud
4	DD-04512-50100	5		Washer, Spring
5	DD-02176-50100	2		Nut
6	DD-01517-51035	1		Stud
7	DD-01133-51040	2		Bolt
8	DD-01133-51035	1		Bolt
9	DD-T2305-14151	1		Bolt
10	DD-01173-51003	2		Bolt

8404 Tractor
Valves And Rocker Arm

 
Page 195 of 200

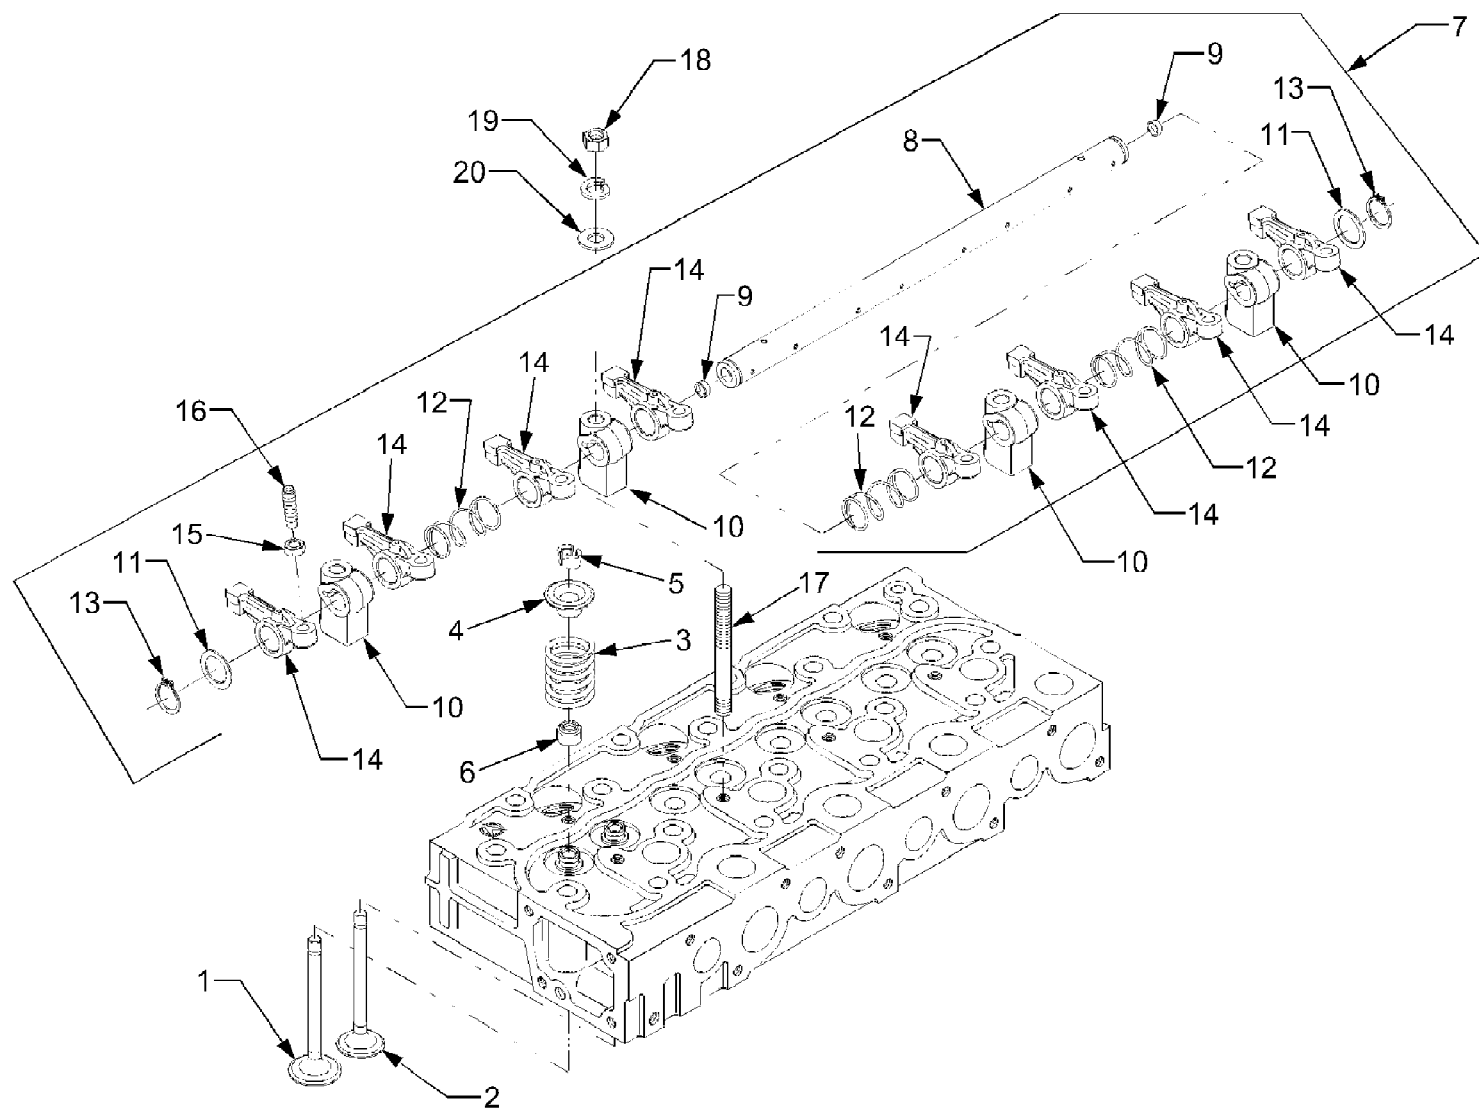

8404 Tractor
Valves And Rocker Arm

Page 196 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E6301-13111	4		Valve, Inlet
2	DD-E6301-13121	4		Valve, Outlet
3	DD-15221-13242	8		Spring, Valve
4	DD-E5500-13332	8		Retainer, Valve Spring
5	DD-E5500-13362	16		Collet, Valve Spring
6	DD-E6301-13151	8		Seal, Valve Stem
7	DD-E6301-14001	1		Rocker Arm Shaft Ass'y Includes Ref. Nos. 8 thru 16
8	DD-E6301-14261	1		Shaft, Rocker Arm
9	DD-E6301-14331	2		Cap, Sealing
10	DD-E6301-14351	4		Bracket, Rocker Arm
11	DD-E6301-14431	2		Washer, Plain
12	DD-E6301-14311	3		Spring, Rocker Arm
13	DD-04612-00190	2		Cir-clip
14	DD-E6301-14111	8		Arm, Rocker
15	DD-15021-14241	8		Nut, Adjusting
16	DD-E5500-14232	8		Screw, Adjusting
17	DD-E6301-91501	4		Stud, Rocker Arm
18	DD-02176-50100	4		Nut
19	DD-04512-50100	4		Washer, Spring
20	DD-04012-50100	4		Washer, Plain

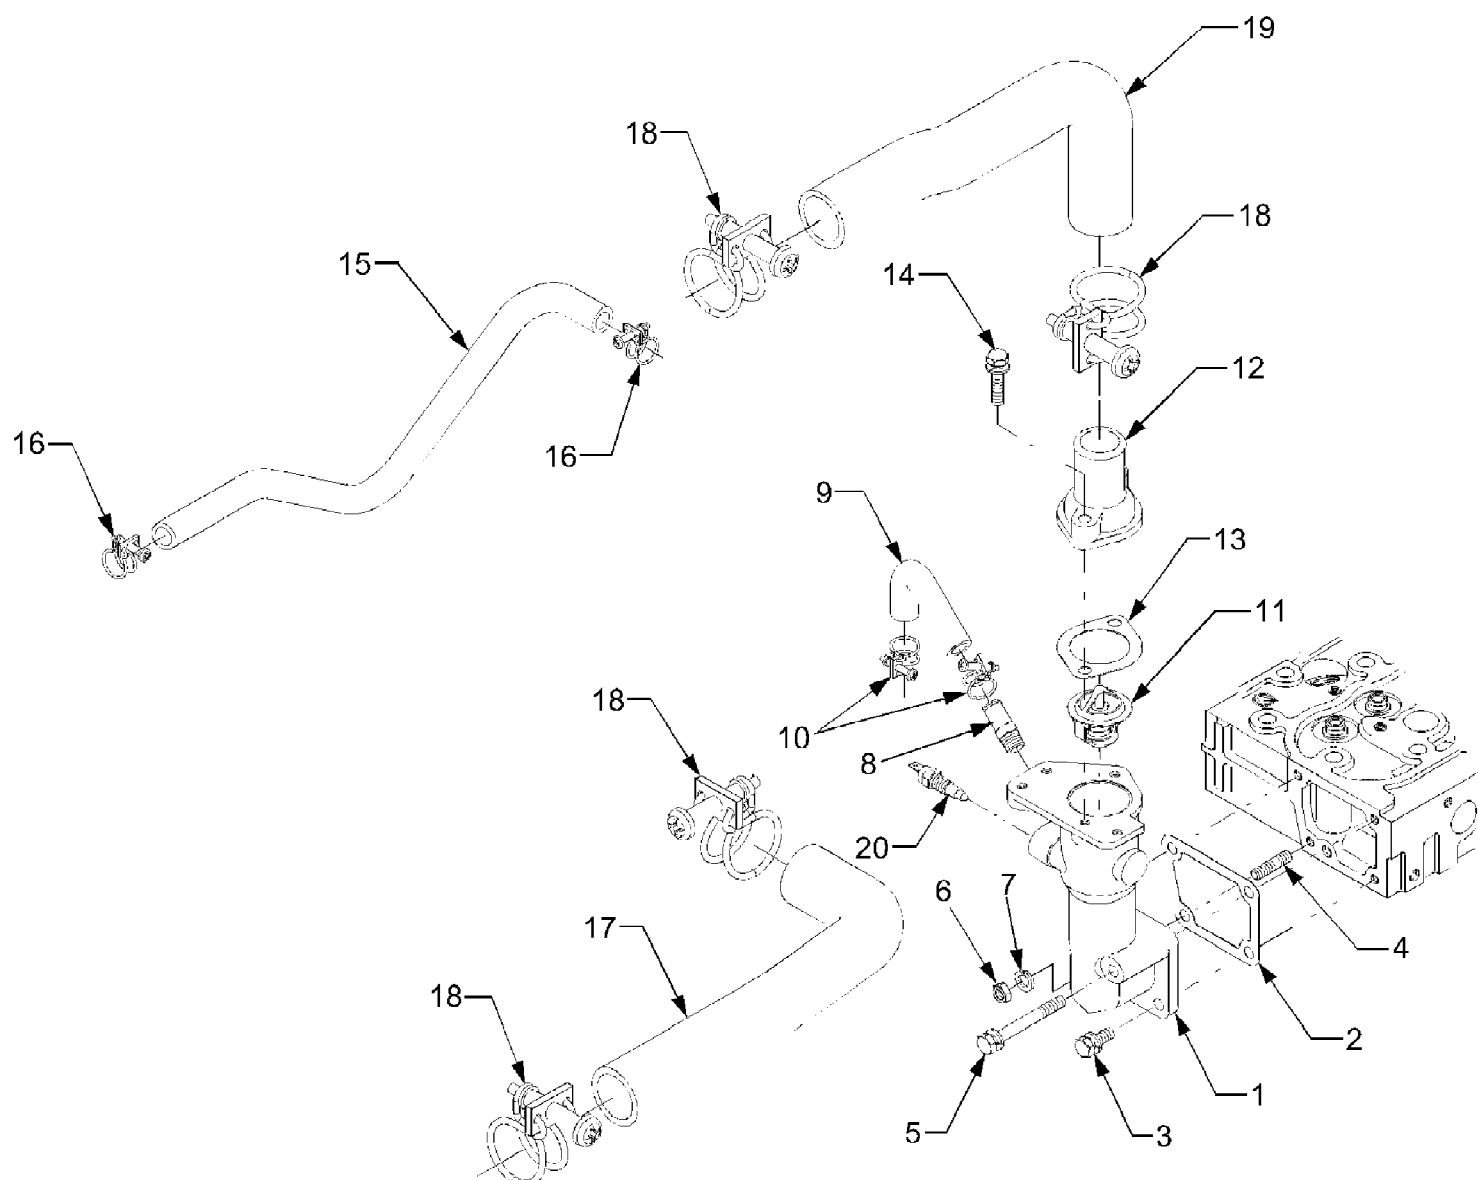 


8404 Tractor
Water Pipes

Page 198 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E5800-72914	1		Flange, Water
2	DD-15521-72921	1	S	Gasket, Flange
3	DD-01123-50822	2		Bolt
4	DD-01513-50822	1		Stud
5	DD-01123-50870	1		Bolt
6	DD-02156-50080	1		Nut
7	DD-04512-50080	1		Washer, Spring
8	DD-E5500-73342	1		Pipe, Water Return
9	DD-15521-73341	1		Pipe
10	DD-15109-73364	2		Band, Pipe
11	DD-E5800-73011	1		Thermostat Ass'y
12	DD-E5500-73263	1		Cover, Thermostat
13	DD-15321-73271	1		Gasket
14	DD-01123-50835	2		Bolt
15	DD-E5800-73341	1		Pipe, Water Return
16	DD-E5700-73361	2		Band, Pipe
17	DD-E5800-72851	1		Pipe, Water Lower
18	DD-15108-72873	4		Band
19	DD-E6500-72941	1		Pipe, Water Upper
20	DD-T4340-38751	1		Switch, Thermo Water

8404 Tractor
Water Pump

 Page 199 of 200

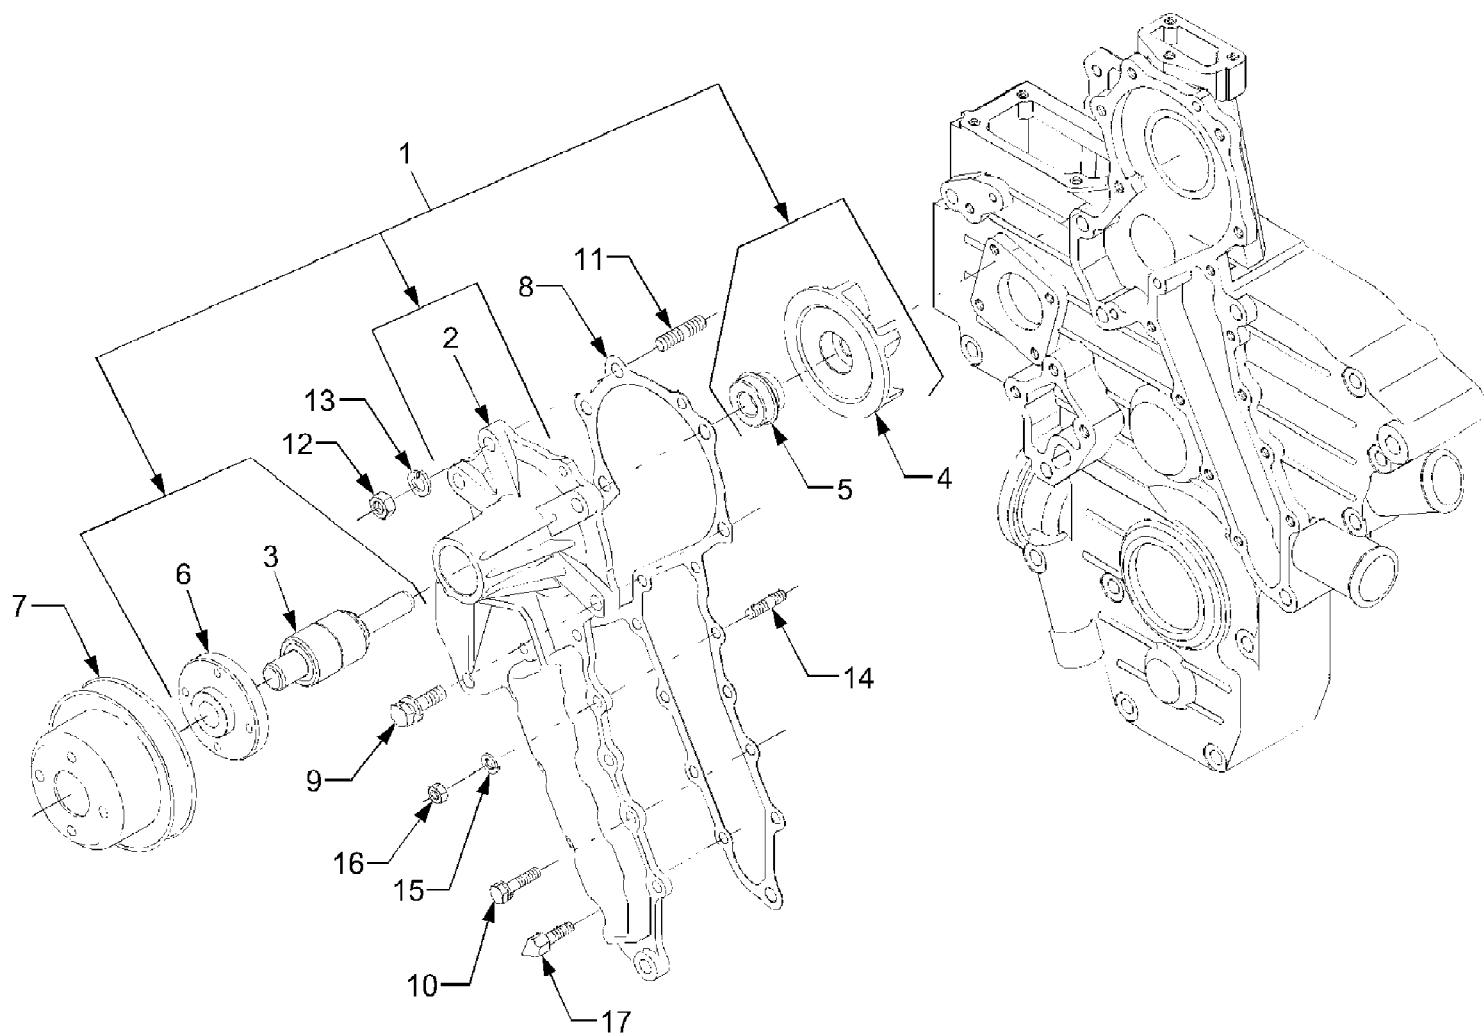

8404 Tractor
Water Pump

Page 200 of 200

Ref #	Part Number	Qty	S/P/F	Description
1	DD-E5800-73036	1		Water Pump Ass'y Include Ref. Nos. 2 thru 6
2	DD-E5800-73415	1		Body, Water Pump
3	DD-E5800-73551	1		Bearing, Water Pump
4	DD-E5800-73513	1		Impeller, Water Pump
5	DD-E5800-73052	1	/P	Seal, Set
6	DD-E5800-73521	1		Flange
7	DD-E5616-74252	1		Pulley, Fan
8	DD-E5800-73431	1		Gasket, Pump
9	DD-01123-50828	4		Bolt
10	DD-01023-50618	7		Bolt
11	DD-01518-50822	1		Stud
12	DD-02156-50080	1		Nut
13	DD-04512-50080	1		Washer, Spring
14	DD-15221-88211	1		Stud
15	DD-04512-50060	1		Washer, Spring
16	DD-02056-50060	1		Nut
17	DD-E6201-50619	1		Bolt