



For Husqvarna Parts Call 606-678-9623 or 606-561-4983

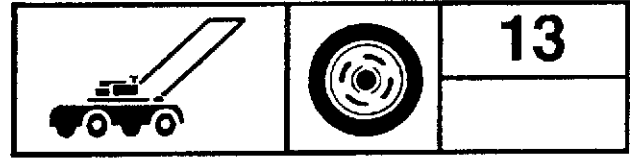

4140H

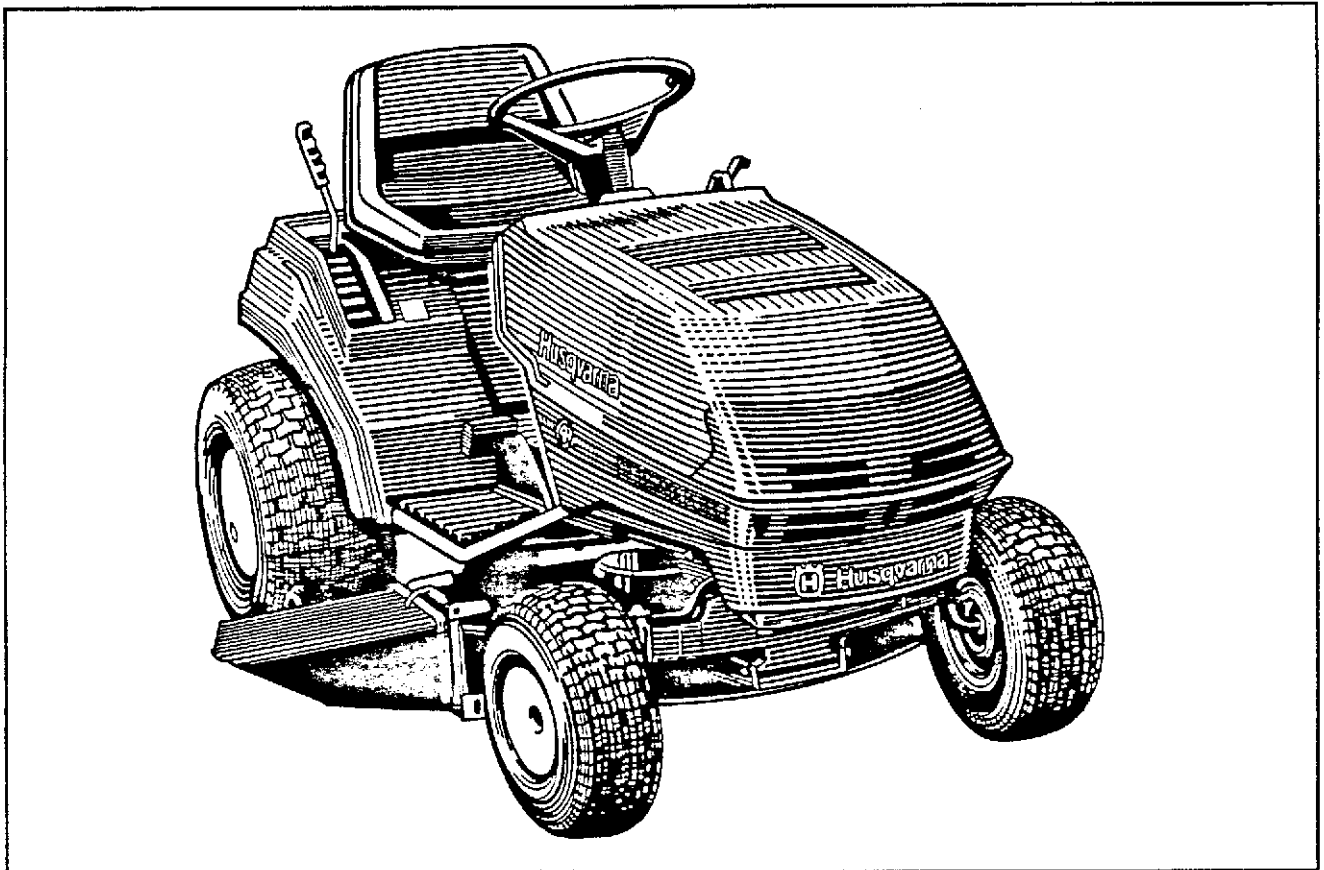


1.1991

Spare parts

Pièces détachées

TRACTOR REPAIR PARTS

46" TRACTOR MODEL 4140H

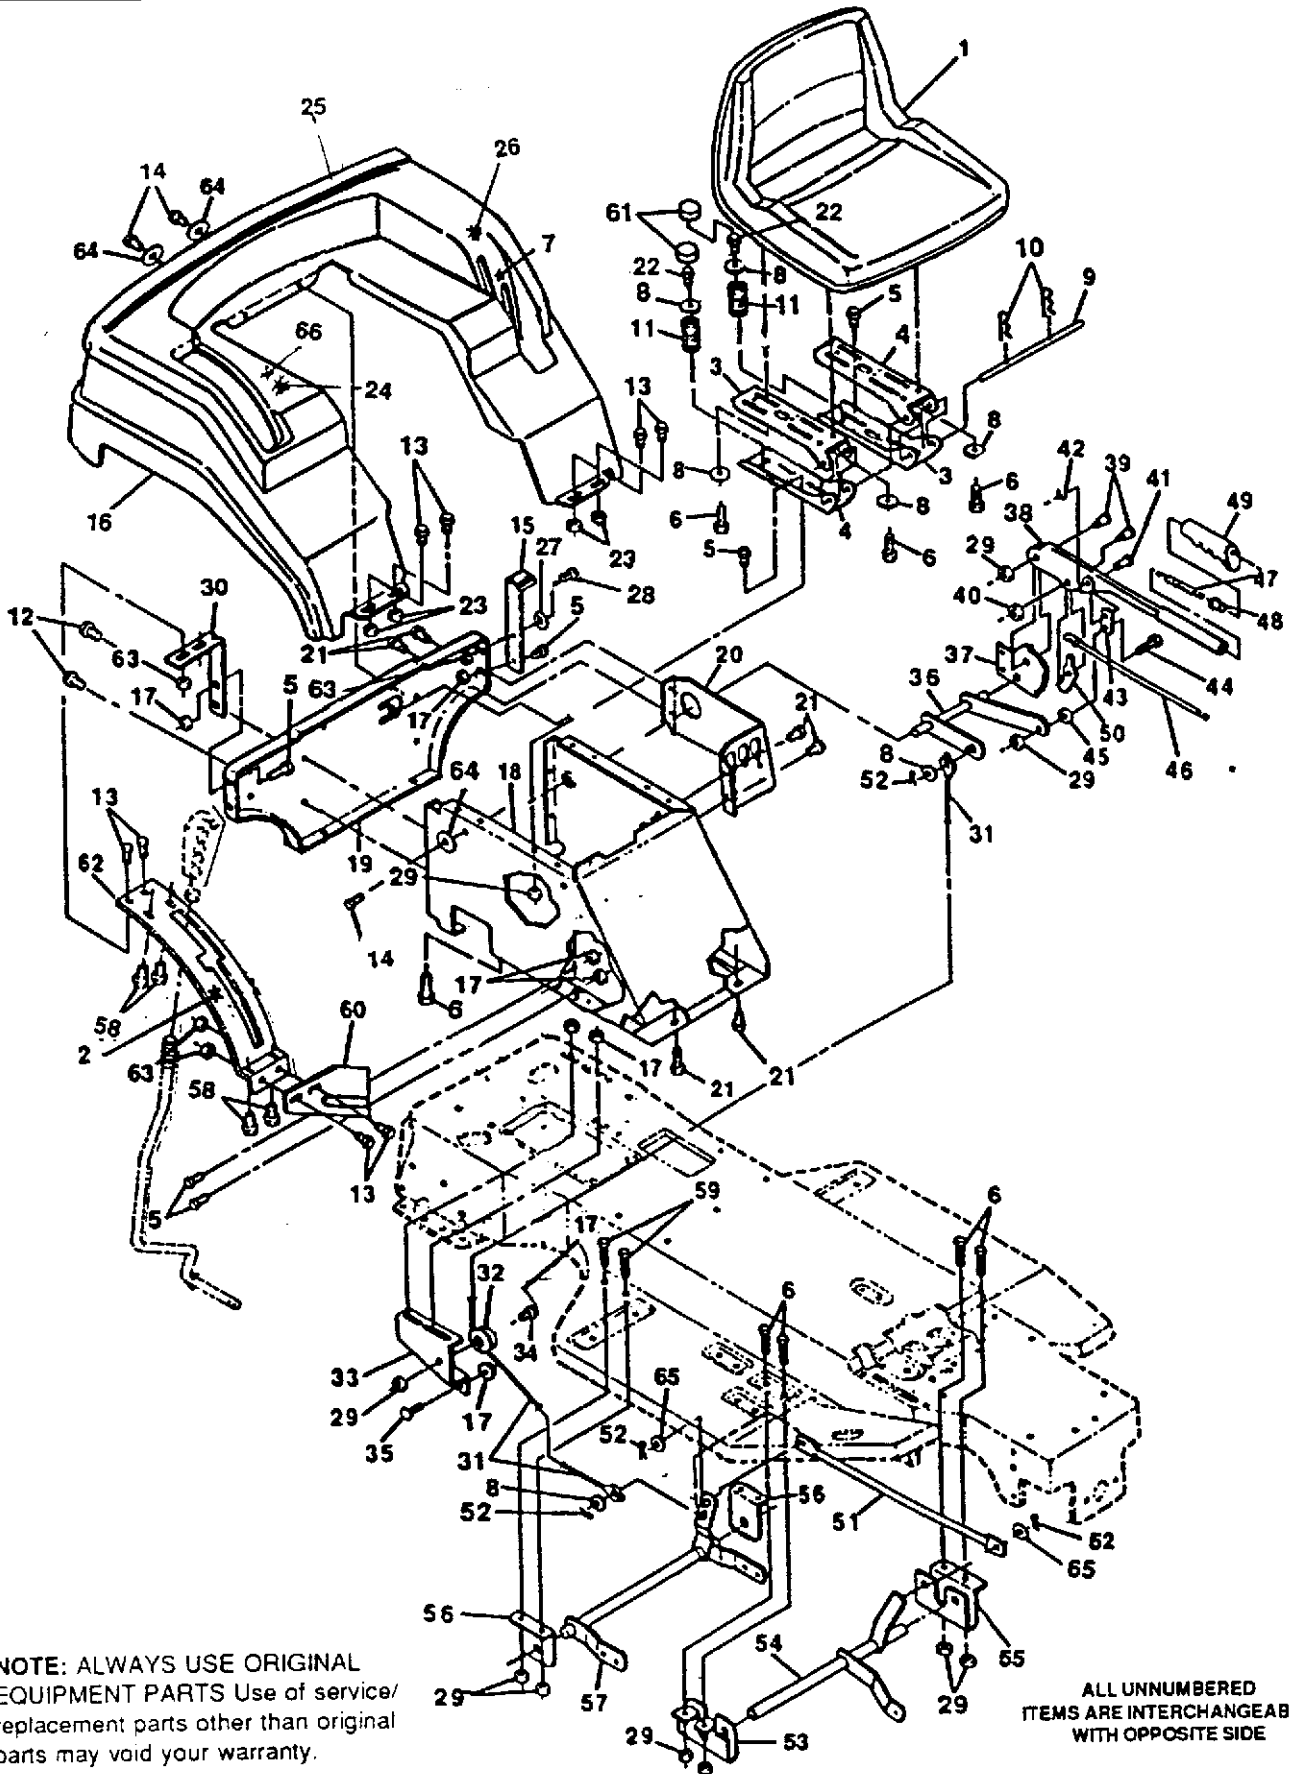


TRACTOR REPAIR PARTS

46" TRACTOR MODEL 4140H

Key No.	Part No.	Description	Key No.	Part No.	Description
1	310384	Seat	44	36149	Shoulder Bolt, 5/16-18 Thd.
2	310609	Decal, Hydro	45	45602	Washer
3	305991	Channel, Seat	46	58330	Actuator Rod
4	304480	Channel, Seat	47	58326	Spring, Height Adjust
5	56030	Screw, Hx Hd, Wd Fl 5/16-18 x 3/4 In.	48	58325	Knob, Height Adjust
6	122007	Screw, Hx Hd, 5/16-18 x 3/4 In.	49	304730	Handle, Lift
7	311591	Decal, Deck Height	50	301239	Pawl, Height Adjust
8	120393	Washer, Flat, 11/32 In.	51	302380	Tie Rod
9	304481	Rod, Seat Support	52	121222	Cotter Pin
10	36368	Hair Pin, .073 Dia. x 1.13 In.	53	308339	Bracket, L. H. Front Hanger
11	305520	Seat Spring	54	308345	Assembly, Front Lift Shaft
12	50634	Screw, Tap, 5/16-18 x 7/8 In.	55	308340	Bracket, R. H. Front Hanger
13	180018	Screw, Hx Hd, 1/4-20 x 5/8 In.	56	308343	Bracket, Hanger
14	995338	Screw, Hx, Wshd Hd, Tap 1/4-20 x 5/8 In.	57	308955	Assembly, Rear Lift Shaft
15	306397	Fender Support, L. H.	58	300302	Screw, Hx Hd, Tap # 10 x 1/2 In.
16	316329	Fender	59	120228	Screw, Hx Hd, 5/16-18 x 5/8 In.
17	55273	Nut, Hx, Wd Fl, Lk 5/16-18 Thd.	60	306401	Support, Shift Plate
18	304475	Seat Support	61	56907	Cover, Seat Spring
19	304476	Support, Fender & Seat	62	315849	Quadrant
20	302208	Bracket, Support Engage	63	51335	Nut, Hx, Wd Fl Lk, 1/4-20 Thd.
21	35497	Screw, Hx Wshr Hd Tap, 5/16-18 x 1/2 In.	64	1084	Washer, Flat, .281 x 1.00 x .063
22	451815	Screw, 5/16-18 x .63	65	274517	Washer, Flat, 13/32 In.
23	1502	Nut, Lock, 1/4-20 Thd.	66	316700	Decal, Husqvarna U. S. A 4140H
24	313039	Decal, Patent Pending 4WS	67	316938	Operator's Manual (Not Illustrated) English
25	316628	Decal, Hydrostatic	68	316939	Operator's Manual (Not Illustrated) French
26	313538	Decal, Relief Valve Operation	69	316834	Part's Manual (Not Illustrated) English
27	120385	Washer, Flat			
28	180020	Screw, 1/4-20 x .75			
29	1498	Nut, Hx Ctrik, 5/16-18 Thd.			
30	306399	Fender Support, R. H.			
31	303227	Cable, Deck Lift			
32	48306	Pulley			
33	303230	Assembly, Pulley Bracket			
34	305522	Shoulder Bolt, 5/16-18 Thd.			
35	126211	Bolt, Carriage, 5/16-18 x 5/8 In.			
36	302205	Assembly, Upper Shaft			
37	302383	Quadrant			
38	9143	Lift Lever			
39	300171	Shoulder Bolt, 5/16-18 Thd.			
40	44108	Nut, Hx Wd Fl Lk 5/16-18 Thd.			
41	300310	Clevis Pin			
42	300311	E-Ring			
43	302357	Link			

TRACTOR REPAIR PARTS

46" TRACTOR MODEL 4140H

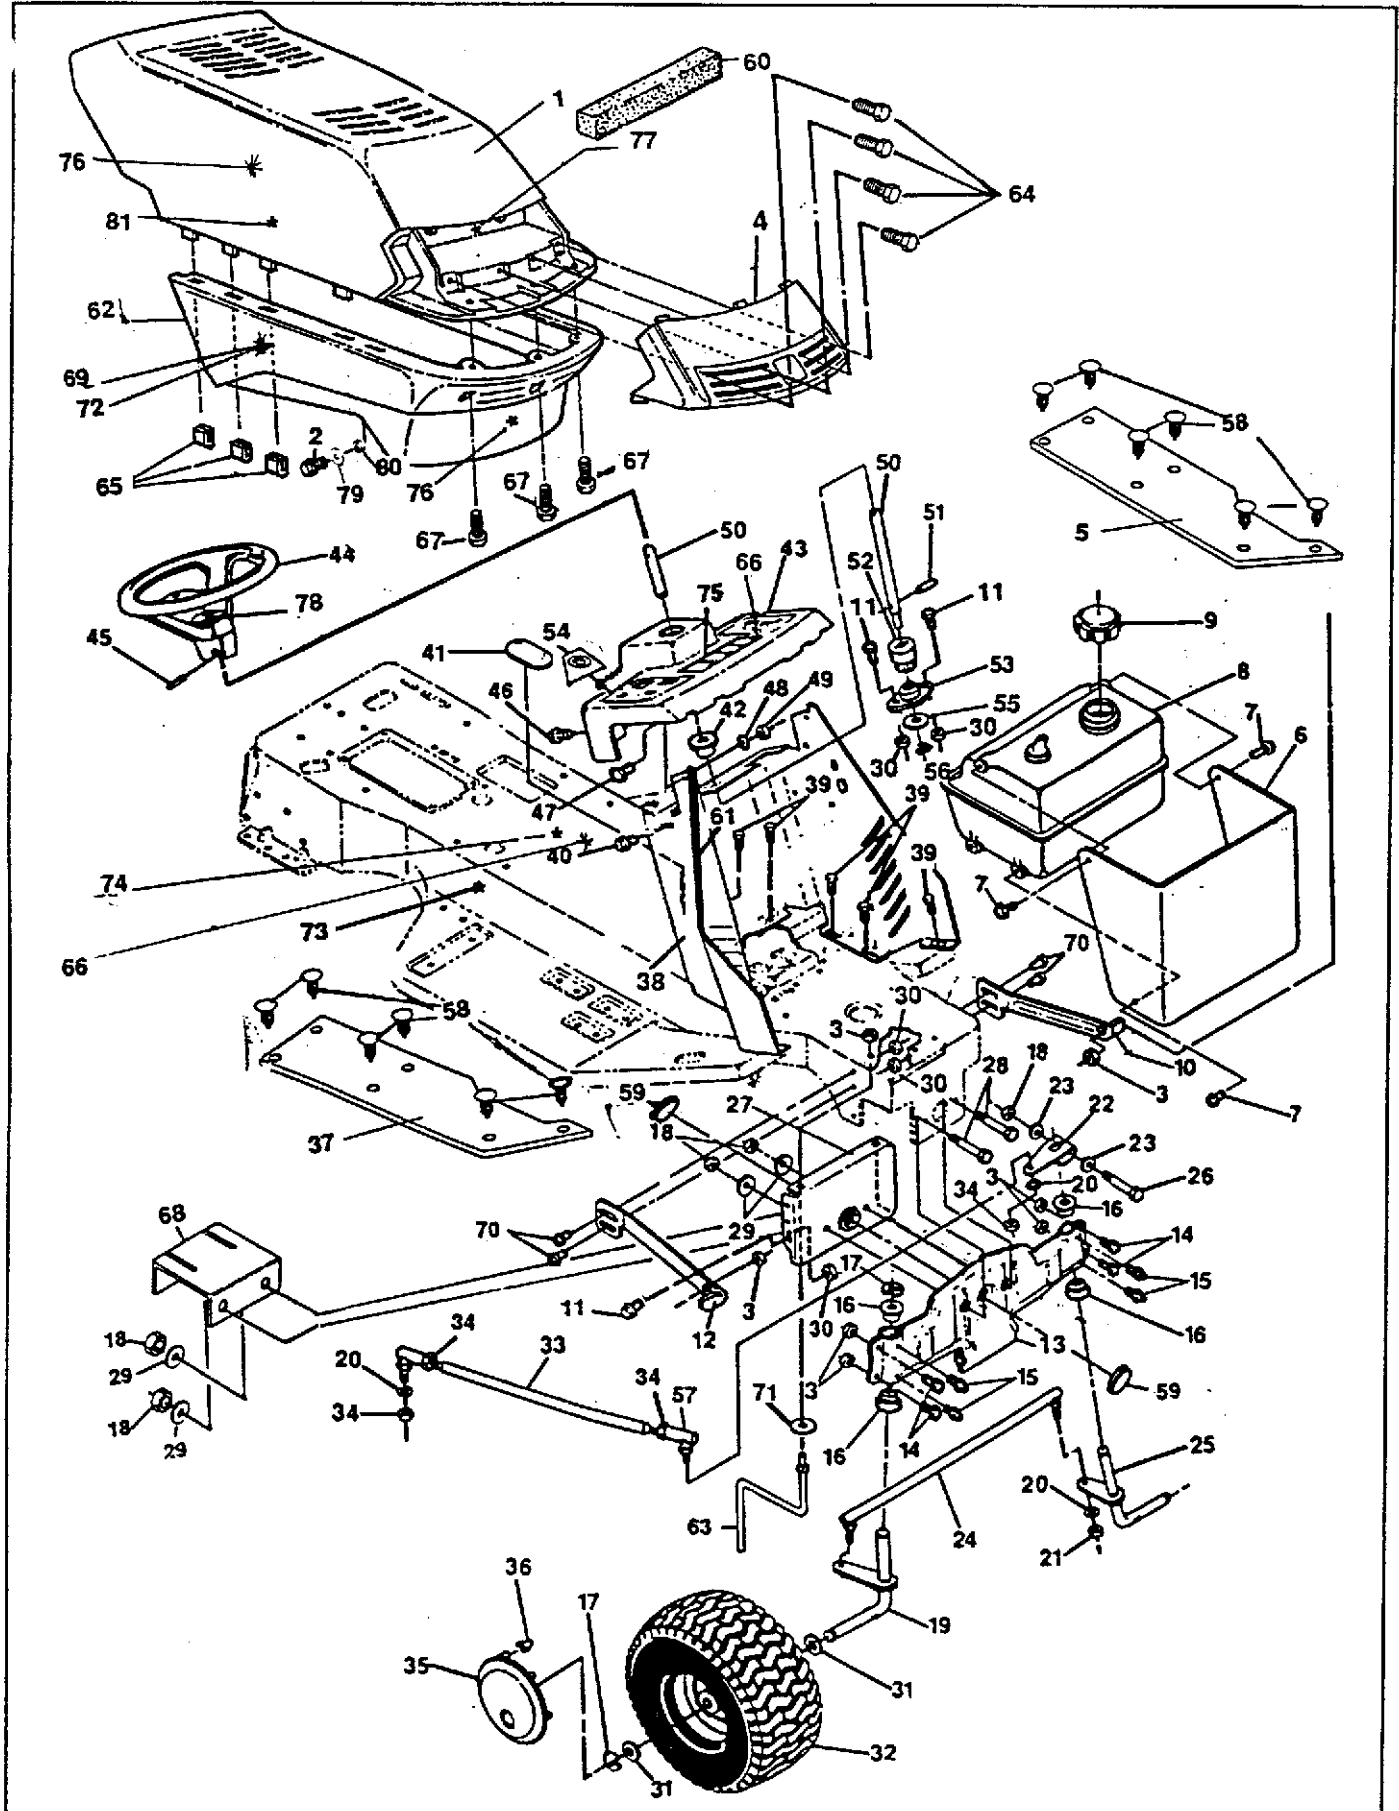

TRACTOR REPAIR PARTS


46" TRACTOR MODEL 4140H

Key No.	Part No.	Description	Key No.	Part No.	Description
1	310577	Hood	40	995346	Screw, Self-Tap, 1/4-20 x 1/2 In.
2	25086	Shoulder Bolt, 5/16-18 Thd.	41	305280	Cover
3	1498	Nut, Hx, Ctrlk, 5/16-18 Thd.	42	303228	Bushing, Upper Steering
4	306858	Lens, Headlight	43	309199	Dash, Upper
5	314885	Assembly, Foot Pad L. H.	44	303132	Steering Wheel
6	307437	Heat Shield	45	456378	Pin, Spring, 1/4 x 2 In.
7	300303	Screw, Hx Hd, Plastite 1/4 x 3/4	46	305850	Screw, Tap, 1/4-20 x 1/2 In.
8	305820	Tank, Gas 1.5 W/ Sensor	47	120854	Screw, Hx Hd, 1/4-20 x 5/8 In.
	305804	Low Fuel Sensor	48	120392	Washer, Flat, 9/32 In.
9	12501	Cap, Fuel	49	1502	Nut, Hx, Ctrlk, 1/4-20 Thd.
10	309461	Bracket, Hood L. H.	50	302307	Shaft, Steering
11	56030	Screw, Hx Hd, Wd Fl 5/16-18 x 3/4 In.	51	302524	Pin, Dowel
12	309460	Bracket, Hood R. H.	52	302314	Pinion, Steering
13	310670	Front Axle W/Bearings & Spindles	53	302498	Bearing, Flange
14	120228	Screw, Hx Hd, 5/16-18 x 5/8 In.	54	309195	Plate, Electric Clutch
15	706	Grease Fitting	55	2968	Washer, Flat, 1/2 In.
16	302303	Bearing, Spindle	56	20864	E-Ring
17	36625	E-Ring	57	57158	Ball, Joint, 3/8 Thd.
18	1499	Nut, Hx, Ctrlk, 3/8-16 Thd.	58	311087	Ratchet Fastener
19	305340	Spindle, R. H.	59	307112	Plug, Front Axle
20	120382	Washer, Split, Lock 3/8 In.	60	308115	Foam, Hood Baffle
21	120369	Nut, Hx, 3/8-24 Thd.	61	47453	Wide Trim 18"
22	302306	Steering Arm, Upper	62	306856	Grille
23	996416	Washer, Flat, 25/64 In.	63	300440	Belt Guide
24	300328	Assembly, Tie Rod	64	312085	Screw, #4-24 x 1/2 In.
25	305339	Spindle, L.H.	65	306857	Clip, Tinnerman
26	180134	Screw, Hx Hd, 3/8-16 x 2-1/2 In.	66	313539	Decal, Depress Clutch Brake
27	306103	Support Bracket, Front Axle	67	300302	Screw, # 10 x 1/2 In.
28	122207	Screw, Hx Hd, 3/8-16 x 3 In.	68	312904	Bracket, Stop
29	2483	Washer, Spring	69	316634	Decal, Pin Stripe R. H.
30	55273	Nut, Hx, Wd Fl Lk 5/16-18 Thd.	70	53652	Screw, Hex Wd Fl, 5/16-18 x 3/4 In.
31	642	Washer, Flat, 3/4 In.	71	138538	Washer, Internal Tooth
32	^	Wheel & Tire Assembly, Front	72	316635	Decal, Pin Stripe L. H.
	301140	Tire	73	311730	Decal, Wheel 4 Steer Husq.
	312739	Wheel	74	307772	Decal Oper Instr ERO Top Frame
	24167	Valve Stem	75	307280	Decal, Dash, Chg, Oil, Fuel All Systems
	314416	Bearing	76	311724	Decal, Fender Rear, Hood Husq.
33	302907	Drag Link	77	310534	Decal, Reflector Ver II Hood
34	124925	Nut, Hx, Jam, 3/8-24 Thd.	78	311728	Decal, Gunsight Cent. Steer Whl.
35	306569	Hubcap, Front	79	120396	Flat washer
36	306669	Clip, Hubcap	80	55273	Nut, 5/16-18
37	314888	Assembly, Foot Pad R. H.	81	316631	Decal, Model #4140H
38	304702	Dash, Lower			
39	45263	Screw, Tap, 5/16-18 x 3/8 In.			

(^) Order Parts Individually

TRACTOR REPAIR PARTS

46" TRACTOR MODEL 4140H

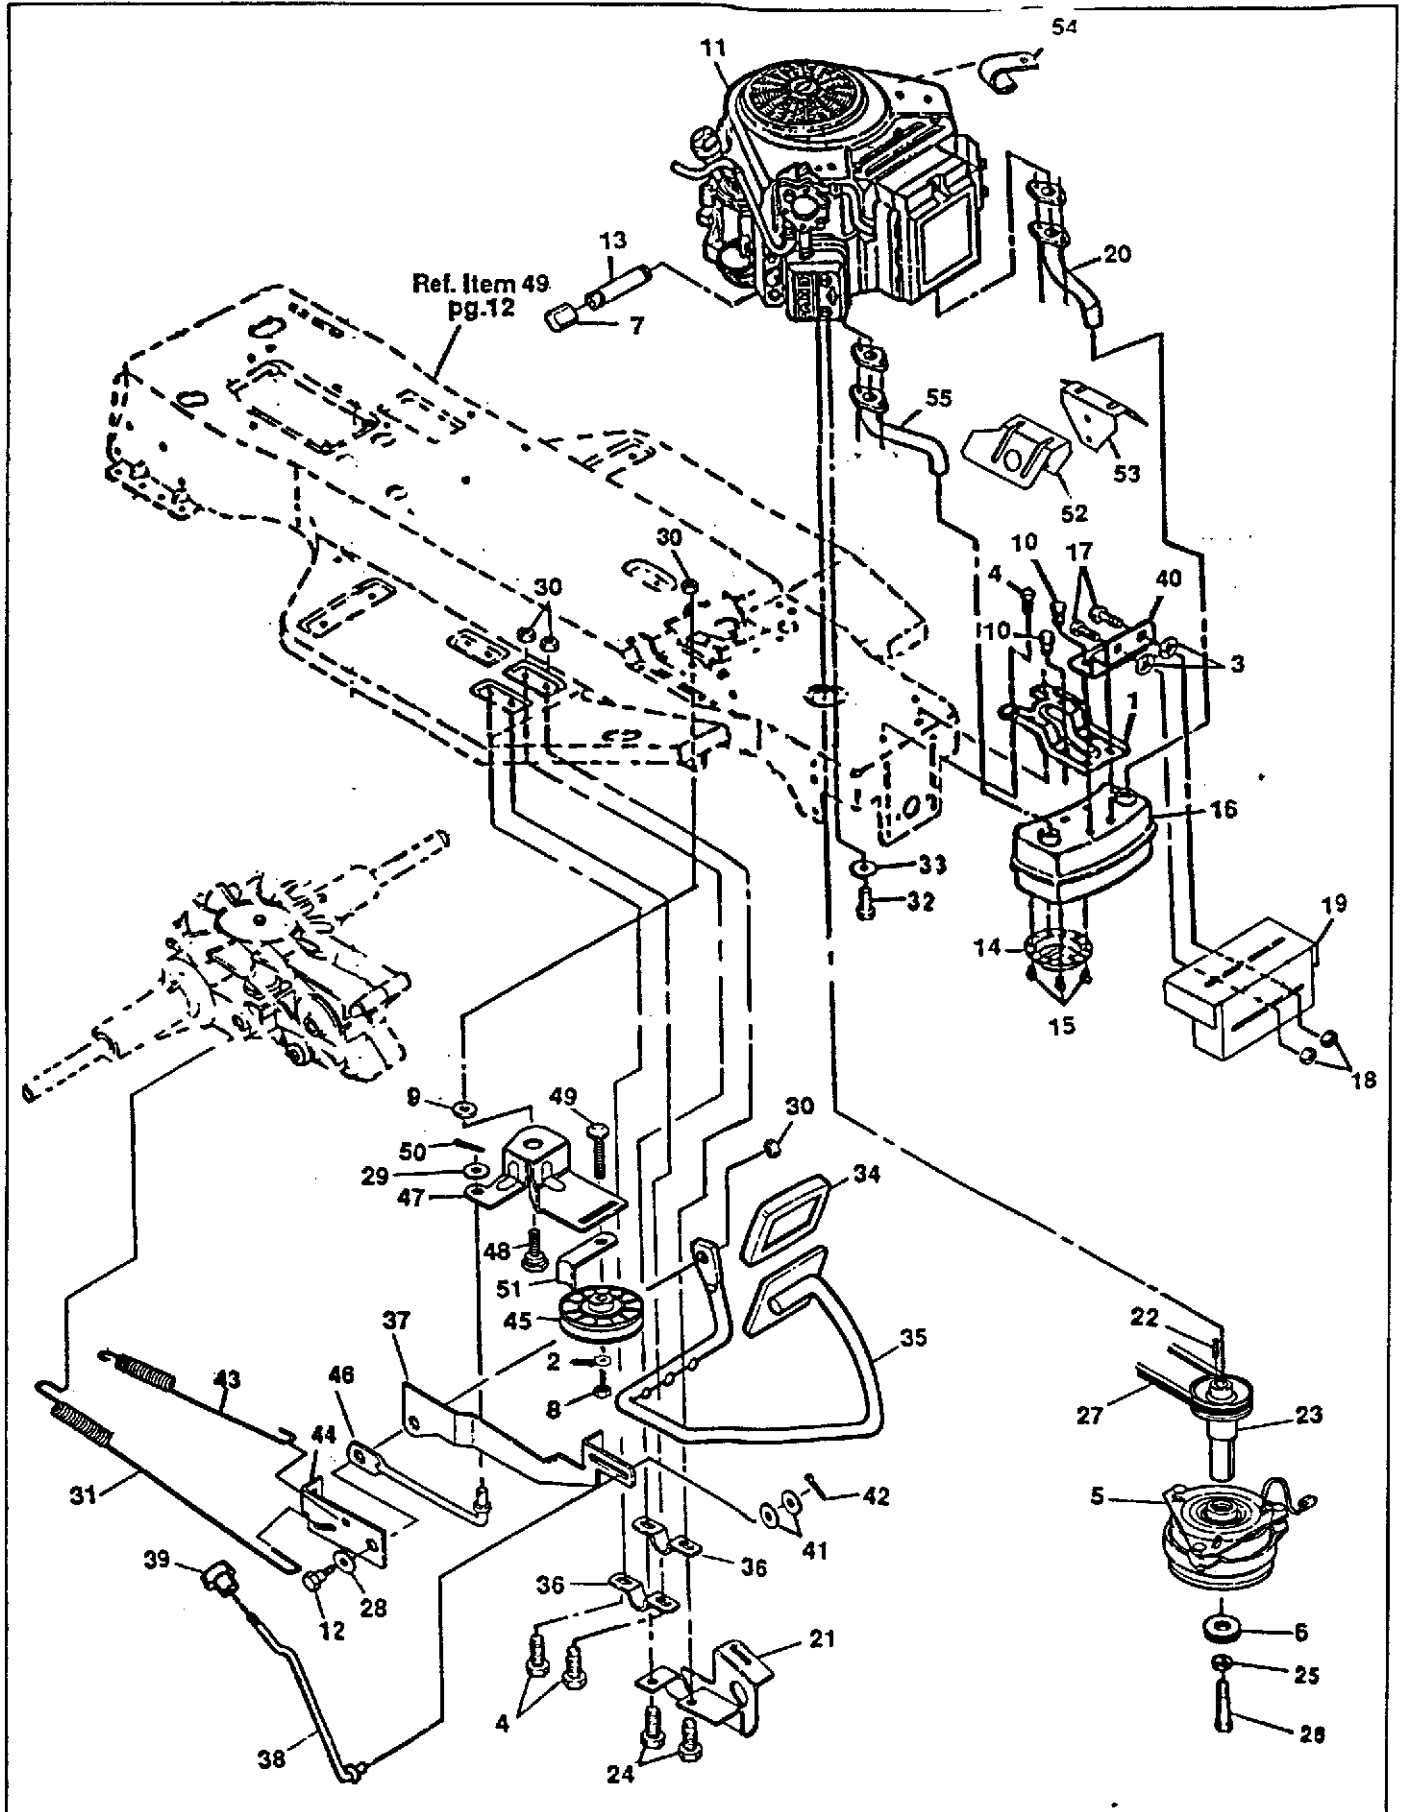

TRACTOR REPAIR PARTS


46" TRACTOR MODEL 4140H

Key No.	Part No.	Description	Key No.	Part No.	Description
1	306577	Muffler Bracket	39	304367	Knob, Parking Brake
2	120382	Washer, Reg. Split Lock	40	9796	Transaxle Brkt.
3	309436	Pushnut, 5/16 Bolt Retainer	41	120385	Flatwasher, .250 x .56 x .04
4	35497	Screw, 5/16-18 x 1/2	42	121223	Cotter Pin
5	308950	Electric Clutch	43	313660	Electric Clutch Spring
6	302879	Bearing, Sleeve Sector Gear	44	310259	Bracket-Brake, Neutral
7	47828	Pipe Cap	45	303031	Idler Pulley
8	120377	Nut, 3/8-16 Thd.	46	314738	Clutch Rod
9	45602	Flatwasher, .333 x .87 x .119	47	314786	Idler Arm
10	995338	Screw, 1/4-20 x 5/9 In.	48	310269	Bolt, Shoulder, 5/16-18
11	ENGINE		49	45892	Screw, 3/8-16 x 1-1/2 In.
12	310087	Bolt, Shoulder 5/16-18	50	36368	Cotter Pin
13	307174	Nipple, 3/8-18	51	39659	Retainer Belt
14	56472	Deflector Side Out	52	313044	Air Deflector
15	35287	Screw, #8-32 x .3/8	53	313043	Air Deflector
16	305553	Muffler	54	57569	Wire Retainer
17	126211	Bolt, 5/16-18x5/8	55	305554	Tube, Muffler Exhaust R.H.
18	55273	Nut, 5/16-18			
19	308144	Heat Shield			
20	305555	Tube, Muffler Exhaust, L.H.			
21	308340	Bracket, Front Hanger			
22	305562	Key, Square			
23	309388	Engine Pulley Assembly			
24	122007	Screw, 5/16-18 x 3/4 In.			
25	120383	Lockwasher, .459 x .78x.12			
26	215649	Screw, 7/16-20 x 5/2 In.			
27	310275	Hydro Traction Belt			
28	30289	Wave Washer			
29	120394	Flatwasher, .406 x .81x.06			
30	1498	Nut, 5/16-18			
31	309935	Spring, Hydro Brake			
32	50947	Screw, 7/16-20 x 5/2 In.			
33	138489	External Lockwasher			
34	304490	Clutch Brake Pad			
35	310258	Clutch Brake Weld Assy.			
36	313271	Clutch Brake Arm Bracket			
37	310260	Park Brake Lever			
38	304217	Parking Brake Rod			

TRACTOR REPAIR PARTS

46" TRACTOR MODEL 4140H

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS Use of service/ replacement parts other than original parts may void your warranty.

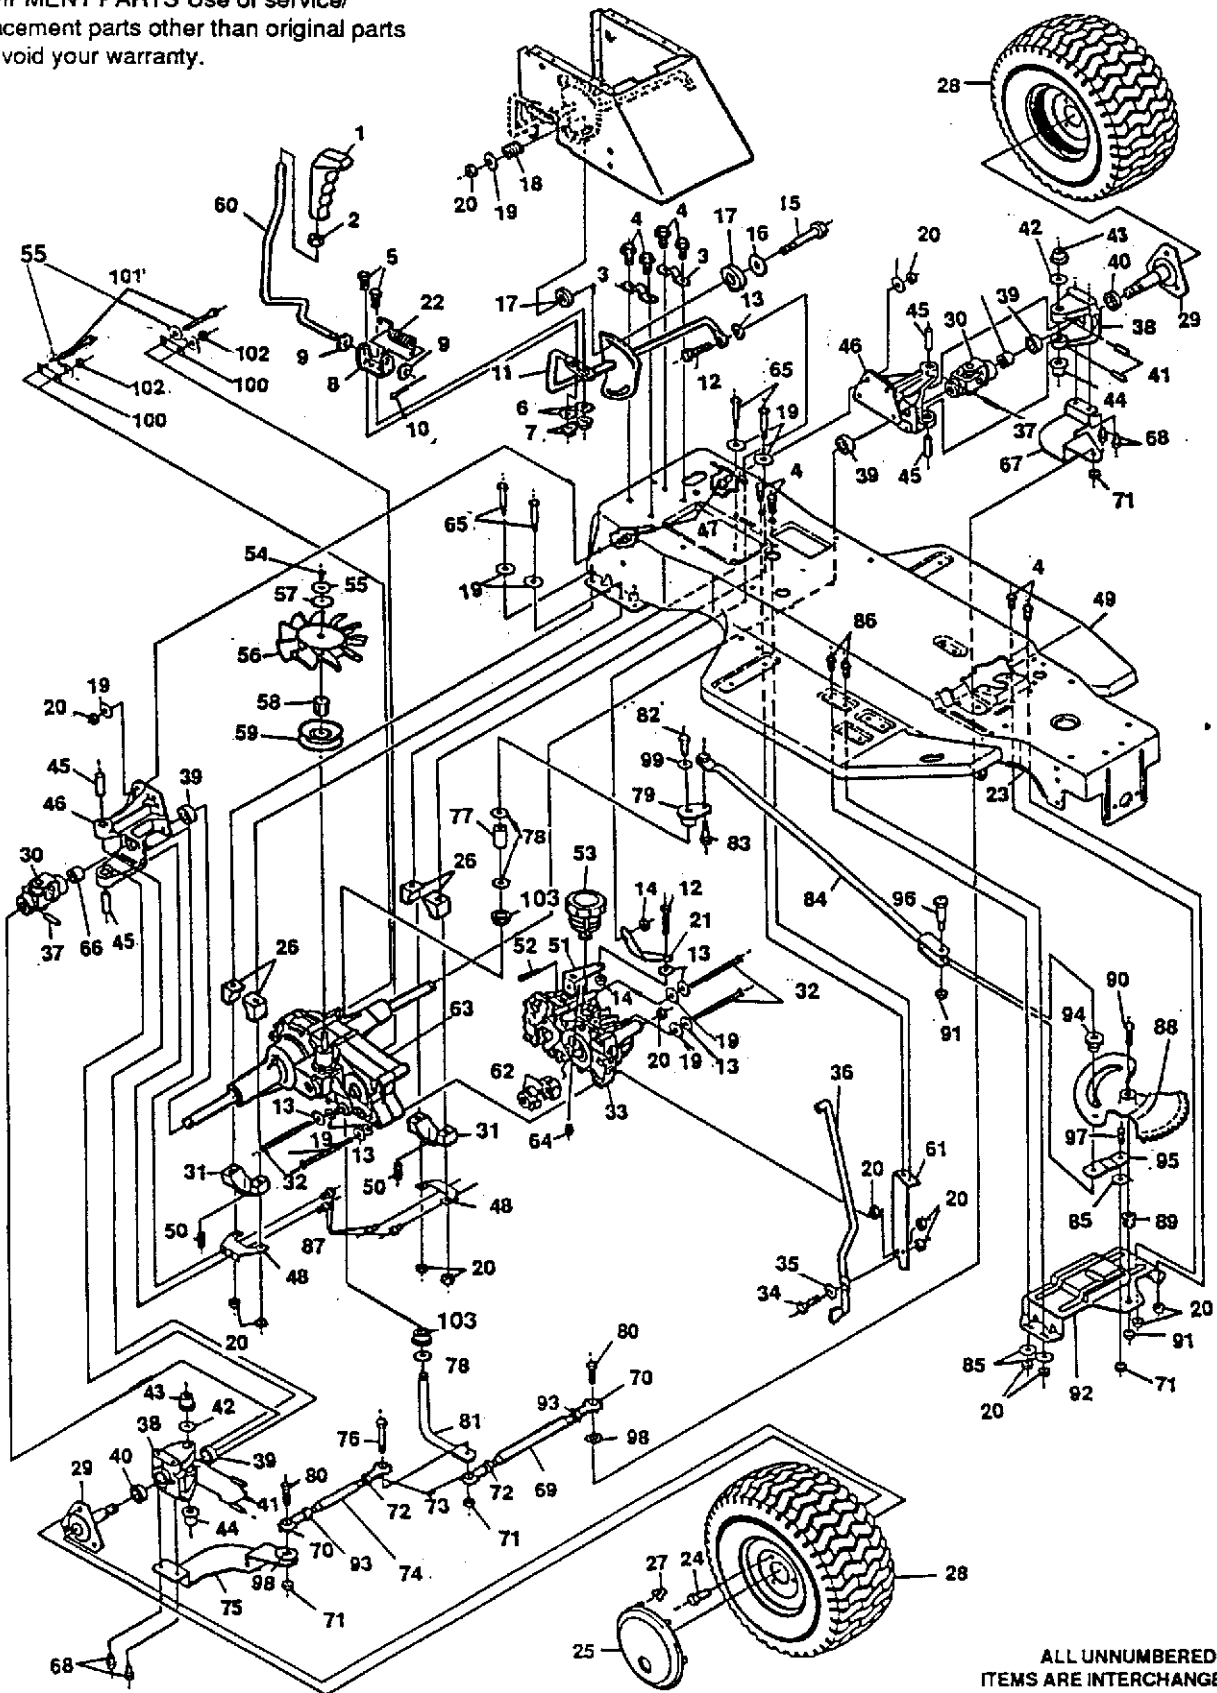

ALL UNNUMBERED ITEMS ARE INTERCHANGEABLE WITH OPPOSITE SIDE

TRACTOR REPAIR PARTS


46" TRACTOR MODEL 4140H

Key No.	Part No.	Description	Key No.	Part No.	Description
1	304729	Handle, Deck Engage Lever	52	456652	Pin, Spring
2	1500	Nut, 1/4-13	53	310786	Reservoir, Hydro
3	313271	Bracket, Clutch/Brake Arm	54	180016	Screw, 1/4-20 x 1/2 In.
4	35497	Screw, 5/16-18 x 1/2 In.	55	120380	Washer, Split Lock
5	180018	Screw, 1/4-20 x .62 In.	56	308523	Fan
6	120392	Flatwasher	57	57626	Washer, Flat
7	51335	Nut, 1/4-20	58	310094	Nut, Pulley 1/2-20 and 1/4-20
8	310356	Bracket, Shift	59	310098	Pulley, Assy. Hydro
9	71073	Washer, Flat	60	310264	Shift Rod
10	121222	Pin, Cotter	61	310179	Stabilizer Bracket
11	310806	Shift Rod Assembly	62	313447	Coupling
12	122145	Screw, 3/8-16 x 1-1/4 In.	63		Transaxle
13	120638	Washer	64	102570	Set Screw
14	1499	Nut, 3/8-16 Thd.	65	180112	Screw, 5/16-18 x 2.75 In.
15	122065	Screw, 5/16-18 x 2 In.	66	304123	Spacer
16	845	Washer, Flat	67	306218	Arm, Rear Wheel Steer, L. H.
17	49922	Washer, Friction	68	39728	Screw, Self-Tap 3/8-16 x 3/4 In.
18	29170	Spring	69	313642	Tie Rod, L.H.
19	120393	Washer, Flat	70	308384	Tie Rod End, L. H.
20	1498	Nut, 5/16-18 Thd.	71	412349	Nut, Hex, Ctrk, 3/8-24
21	310204	Shift Link	72	124925	Nut, Hex Jam, 3/8-24
22	310336	Spring, Torsion	73	304260	Rod End
23	47453	Trim	74	313643	Tie Rod End, R. H.
24	123418	Screw, Hx Hd, 1/2-20 x 1/2 In.	75	306217	Arm, Rear Wheel Steer, R. H.
25	306570	Hubcap, 8 In.	76	181646	Screw, 3/8-24 x 1 3/4 In.
26	310813	Mounting Block	77	313641	Spacer
27	306669	Clip, Hubcap	78	25177	Washer, Lat 49/64 In.
28	^	Tire and Wheel Assembly	79	308719	Steering Pivot
	58276	Tire	80	181639	Screw, 3/8-24 x 1 1/4 In.
	12467	Wheel	81	313649	Shaft, Steering Pivot
	24167	Valve System	82	421051	Screw 5/16-24 x 1 In.
29	315264	Hub Assembly	83	12319	Bolt, Shoulder 3/8-24
30	12290	U-Joint Assembly	84	313639	Rod Assembly, Rear Wheel Steer
31	310187	Mounting Block	85	446363	Washer, Flat 3/8 In.
32	189299	Screw, 5/16-18 x 4-1/2 In.	86	35498	Screw, Self-Tap 5/16-18 x 3/8 In.
33	310227	Hydrostatic Pump	87	451814	Screw, Self-Tap 5/16-18 x 5/8 In.
34	310088	Shoulder Bolt	88	302877	Assembly Sector Gear
35	2483	Washer	89	302878	Bushing, Sector Gear
36	310261	Rod- Relief Valve	90	304296	Screw, 1/2-20 x 2 3/8 In.
37	36311	Pin, Grooved, 1/4 x 1 1/2 In.	91	274654	Nut, Hx, Ctrk 1/2-20
38	315267	Bracket, Steering Pivot, Outer	92	308341	Plate, 4-Wheel Steer Pivot
39	12325	Bearing	93	308399	Nut, Jam 3/8-24
40	315268	Bearing	94	304116	Cam Yoke Roller
41	456722	Pin, Spring 1/4 x 1 1/2 In.	95	302594	Arm, Roller Swing
42	21682	Washer, Flat	96	304122	Shoulder Bolt, Cam Roller
43	12288	Bushing, Shouldered	97	302588	Shoulder Bolt, Cam Follower Arm Pivot
44	12321	Bushing, Shouldered			
45	12289	Pin, Steering Hinge	98	120382	Washer, Split Lock
46	12485	Bracket, Steering Pivot, Inner	99	45602	Washer Flat
47	122017	Screw, Hx Hd, 5/16-18 x 1 In.	100	314511	Bracket, Rear Pivot
48	313644	Bracket, Transaxle Mounting	101	180020	Screw 1/4-20 x .75 In
49	315823	Main Frame	102	120375	Nut 1/4-20
50	140880	Screw, #10-32 x 1/4 In.	103	302303	Bearing Spindle
51	310180	Armspeed Control			

(^) Order Parts Individually

TRACTOR REPAIR PARTS

46" TRACTOR MODEL 4140H

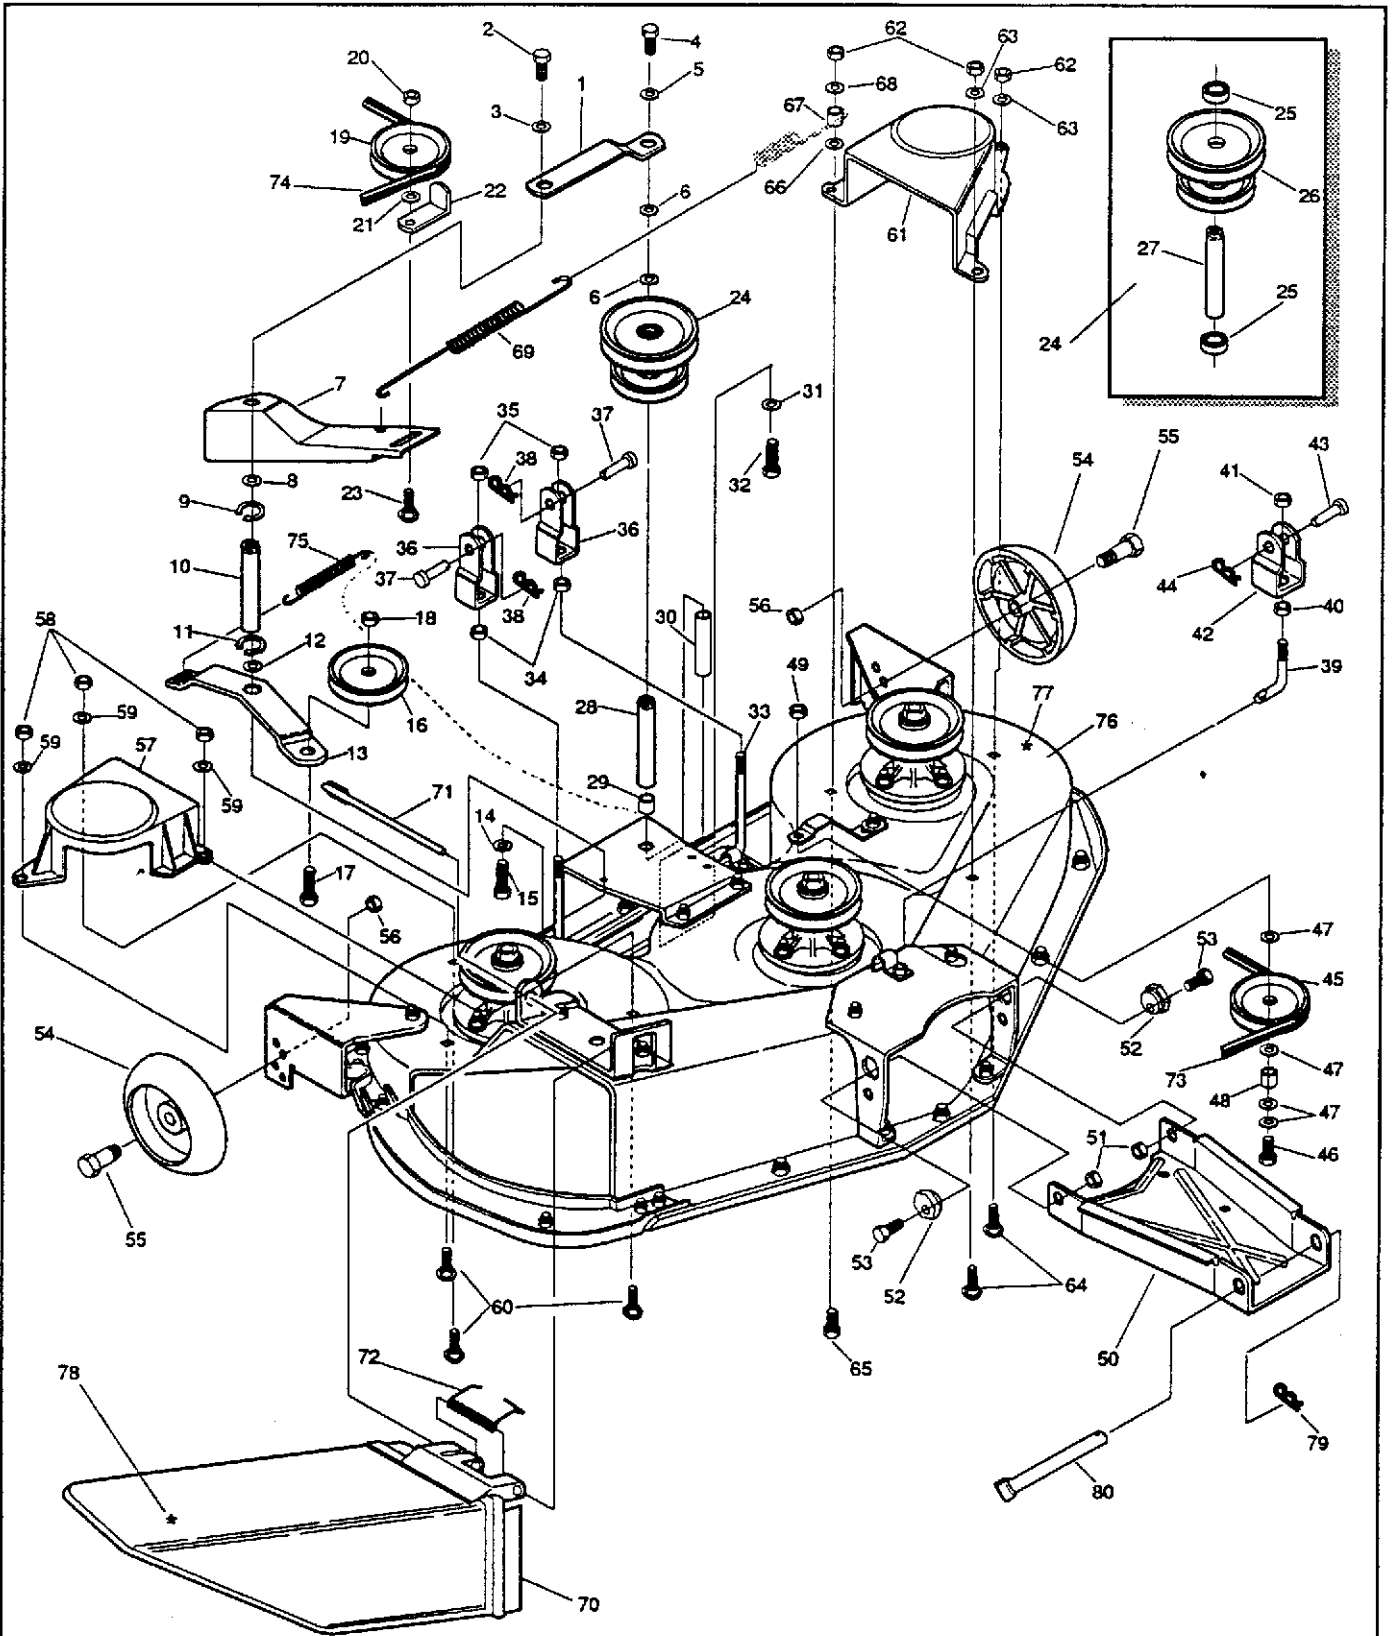

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS Use of service/replacement parts other than original parts may void your warranty.

ALL UNNUMBERED ITEMS ARE INTERCHANGEABLE WITH OPPOSITE SIDE


TRACTOR REPAIR PARTS

46" TRACTOR MODEL 4140H

Key No.	Part No.	Description	Key No.	Part No.	Description
1	306845	Bracket, Jackshaft	44	56180	Pin, Hair .091 DIA X 1.62 LG
2	181596	Screw, 5/16-24X .88 HHC GR5	45	303030	Pulley, Idler BFF 4.00 DIA
3	120638	Washer, HVSP TLK .328X.60X.11	46	122194	Screw, 3/8-16X2.50 HHC GR2
4	39573	Screw, 3/8-24X1.00 NYLHHC	47	996416	Washer, Flat .391X1.00X.125
5	120382	Washer, REGSPTLK.393X.68X.10	48	305309	Spacer .31X.687X.390
6	2483	Washer,.391DX1.25DX.07	49	1499	Nut, 3/8-16 REGHXCTRLK
7	309230	Bracket, Idler	50	311941	Channel Drawbar
8	40677	Washer, Flat.640X1.25X.06	51	1498	Nut, 5/16-18 REGHEXCTRLK
9	302270	Ring, Retex .58X.05	52	58247	Nut, Adjust
10	302272	Idler Shaft	53	122017	Screw, 5/16-18 X 1.00 HHC
11	302270	Ring, Retex .58X.05	54	302611	Wheel
12	40677	Washer, Flat .640X1.25X.06	55	23763	Bolt, 500 X 1.390 HSSH 3/8-16
13	306847	Bracket, Idler	56	1499	Nut, 3/8-16 REGHXCTRLK
14	120638	Washer, HVSP TLK .328X.60X.11	57	304817	Guard, Belt R.H.
15	181596	Screw, 5/16-24X .88 HHC GR5	58	1502	Nut, 1/4-20 REGHEXCTRLK
16	303030	Pulley, Idler BFF 4.00 DIA	59	120392	Washer, Flat .281X .63X.065
17	122168	Screw, 3/8-16X1.75 HHC GR2	60	36602	Bolt, 1/4-20X .63 CARR
18	1499	Nut, 3/8-16 REGHXCTRLK	61	304792	Cover, Belt LH
19	310326	Pulley, Idler	62	1502	Nut, 1/4-20 REGHEXCTRLK
20	120377	Nut, 3/8-16 REGHXCTRLK	63	120392	Washer, Flat .281X .63X.065
21	996416	Washer, Flat .391X1.00X.125	64	36602	Bolt, 1/4-20X .63 CARR
22	1346	Belt Retainer	65	180024	Screw, 1/4-20X1.25 HHC GR5
23	57325	Bolt, 3/8-16X2.00 CARR	66	120392	Washer, Flat .281X .63X.065
24	309107	Shaft, Assy. Jack	67	50520	Spacer
25	49562	Bearing, Ball	68	54569	Washer, Flat .281X .75X.090
26	302142	Pulley Assy.	69	309253	Spring
27	302147	Spacer Tube	70	304733	Chute
28	302242	Jackshaft	71	305251	Rod, Pivot
29	302278	Spacer Tubing 46" Deck	72	314975	Spring, Torsion
30	302279	Spacer Tube 46" Deck	73	302290	Belt, V 4L
31	120382	Washer, REGSPTLK.393X.68X.10	74	302291	Belt, V 5L 63.70
32	71015	Screw, 3/8-24X1 in.	75	301464	Spring, Tension
33	302644	Rod, Lift 46" Deck Long	76	315806	Deck, Mower Assy.
34	120238	Nut, 1/2-13 HEXJAM	77	68249	Decal, No Step
35	109527	Nut, 1/2-13 .458 SQ	78	68547	Decal, Cut Hand
36	304443	Clevis	79	56180	Pin, Hair .09/ DIA X 1.62 LG
37	300317	Clevis Pin 3/8 DIA. X 1.0 LG	80	302963	Rod, Draw Bar
38	56180	Pin, Hair .091 DIA X 1.62 LG			
39	302899	Rod, Lift Front Short			
40	120238	Nut, 1/2-13 HEXJAM			
41	109527	Nut, 1/2-13 .458 SQ			
42	304443	Clevis			
43	300317	Clevis Pin 3/8 DIA. X 1.0 LG			

TRACTOR REPAIR PARTS

46" TRACTOR MODEL 4140H

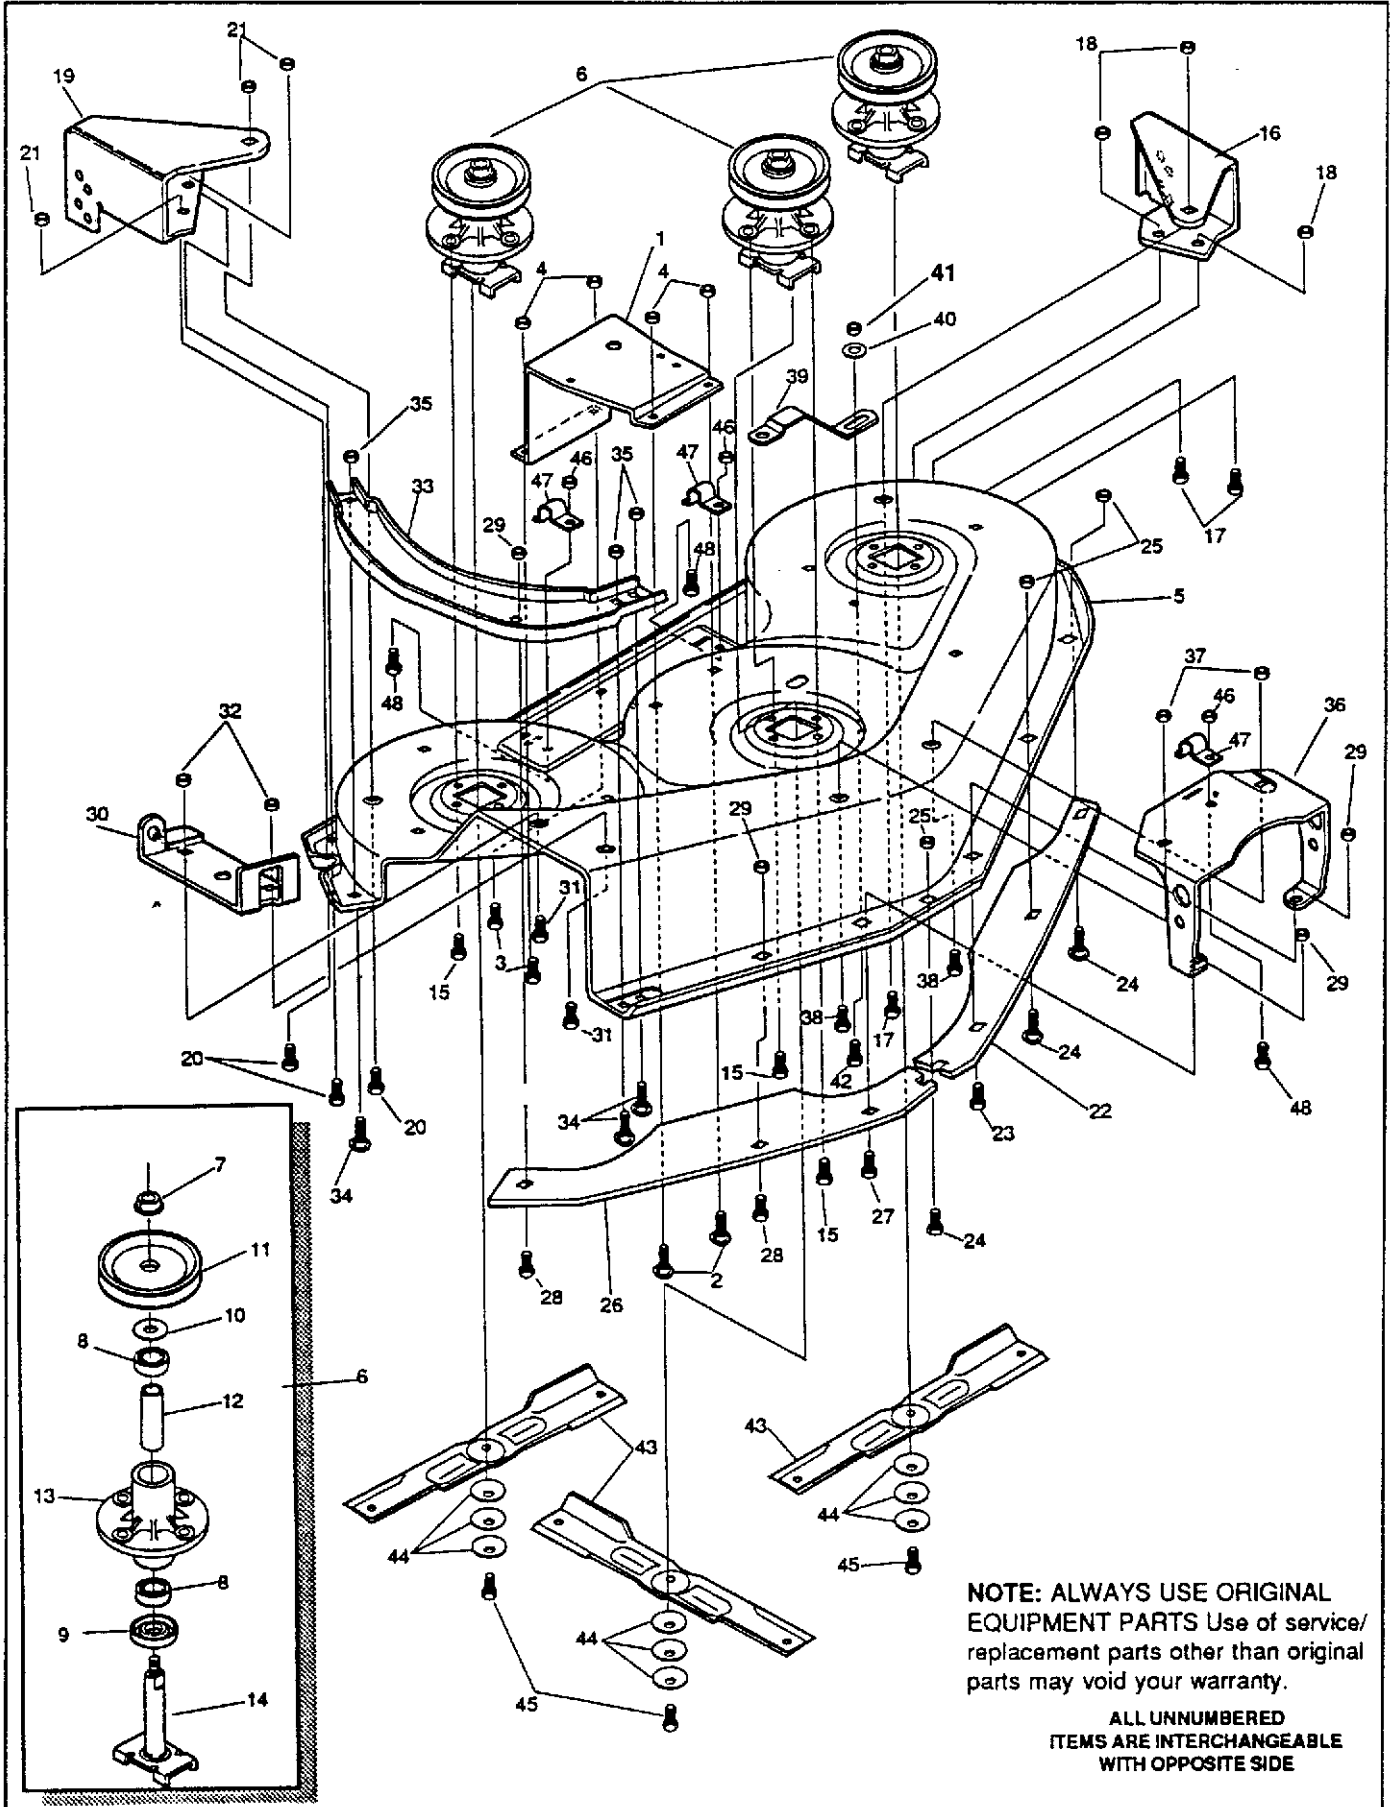

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS Use of service/replacement parts other than original parts may void your warranty.

ALL UNNUMBERED ITEMS ARE INTERCHANGEABLE WITH OPPOSITE SIDE


TRACTOR REPAIR PARTS

46" TRACTOR MODEL 4140H

Key No.	Part No.	Description	Key No.	Part No.	Description
1	312699	Support Bracket 46"	27	120228	Screw, 5/16-18 x 5/8 In.
2	126211	Bolt, 5/16-18X .63 CARR	28	126211	Bolt, 5/16-18X .63 CARR
3	120228	Screw, 5/16-18X .63 HHC	29	1498	Nut, 5/16-18 REGHEXCTRLK
4	1498	Nut, 5/16-18 REGHEXCTRLK	30	312703	Bracket Chute Mount
5	313229	Mower Deck 46" Sus. SD	31	120228	Screw, 5/16-18X .63 HHC
6	302297	Quill, Assy 46" Deck	32	1498	Nut, 5/16-18 REGHEXCTRLK
7	1282	Nut, 7/16-20 WDFLLK	33	312702	Brace, Skid
8	49562	Bearing, Ball	34	126211	Carriage Bolt, 5/16-18 x 5/8 In.
9	50616	Dust Shield	35	1498	Nut, 5/16-18 REGHEXCTRLK
10	56280	Spacer	36	312705	Lift Support Bracket
11	56391	Quill Pulley BRZ 960	37	1498	Nut, 5/16-18 REGHEXCTRLK
12	58128	Spacer, L&RH Quill	38	120228	Screw, 5/16-18X .63 HHC
13	58162	Casting LH	39	314020	Support Bracket
14	302295	Saddle & Shaft Assy.	40	120393	Washer, Flat .344X .69X.065
15	50634	Screw, 5/16-18X .87 HX WA TAP	41	1498	Nut, 5/16-18 REGHEXCTRLK
16	312708	Bracket Gauge Wheel L.H.	42	120228	Screw, 5/16-18X .63 HHC
17	120228	Screw, 5/16-18X .63 HHC	43	317071	Blade, 16.13 High-Lift
18	1498	Nut, 5/16-18 REGHEXCTRLK	44	2483	Washer, .39IDX1.25DX.07 BELLVIL
19	312700	Bracket Gauge Wheel R.H.	45	39573	Screw, 3/8-24X1.00 NYLHHCGR5
20	120228	Screw, 5/16-18X3/4 HHC	46	1498	Nut 5/16-18 REG HEX CTRLK
21	1498	Nut, 5/16-18 REGHEXCTRLK	47	312701	Clip
22	312710	Baffle 46" Deck	48	120228	Screw, 5/16-18 X .63 HHC
23	120228	Screw, 5/16-18 x .63			
24	126211	Bolt, 5/16-18X .63 CARR			
25	1498	Nut, 5/16-18 REGHEXCTRLK			
26	312706	Baffle RH 46" Deck			

TRACTOR REPAIR PARTS

46" TRACTOR MODEL 4140H

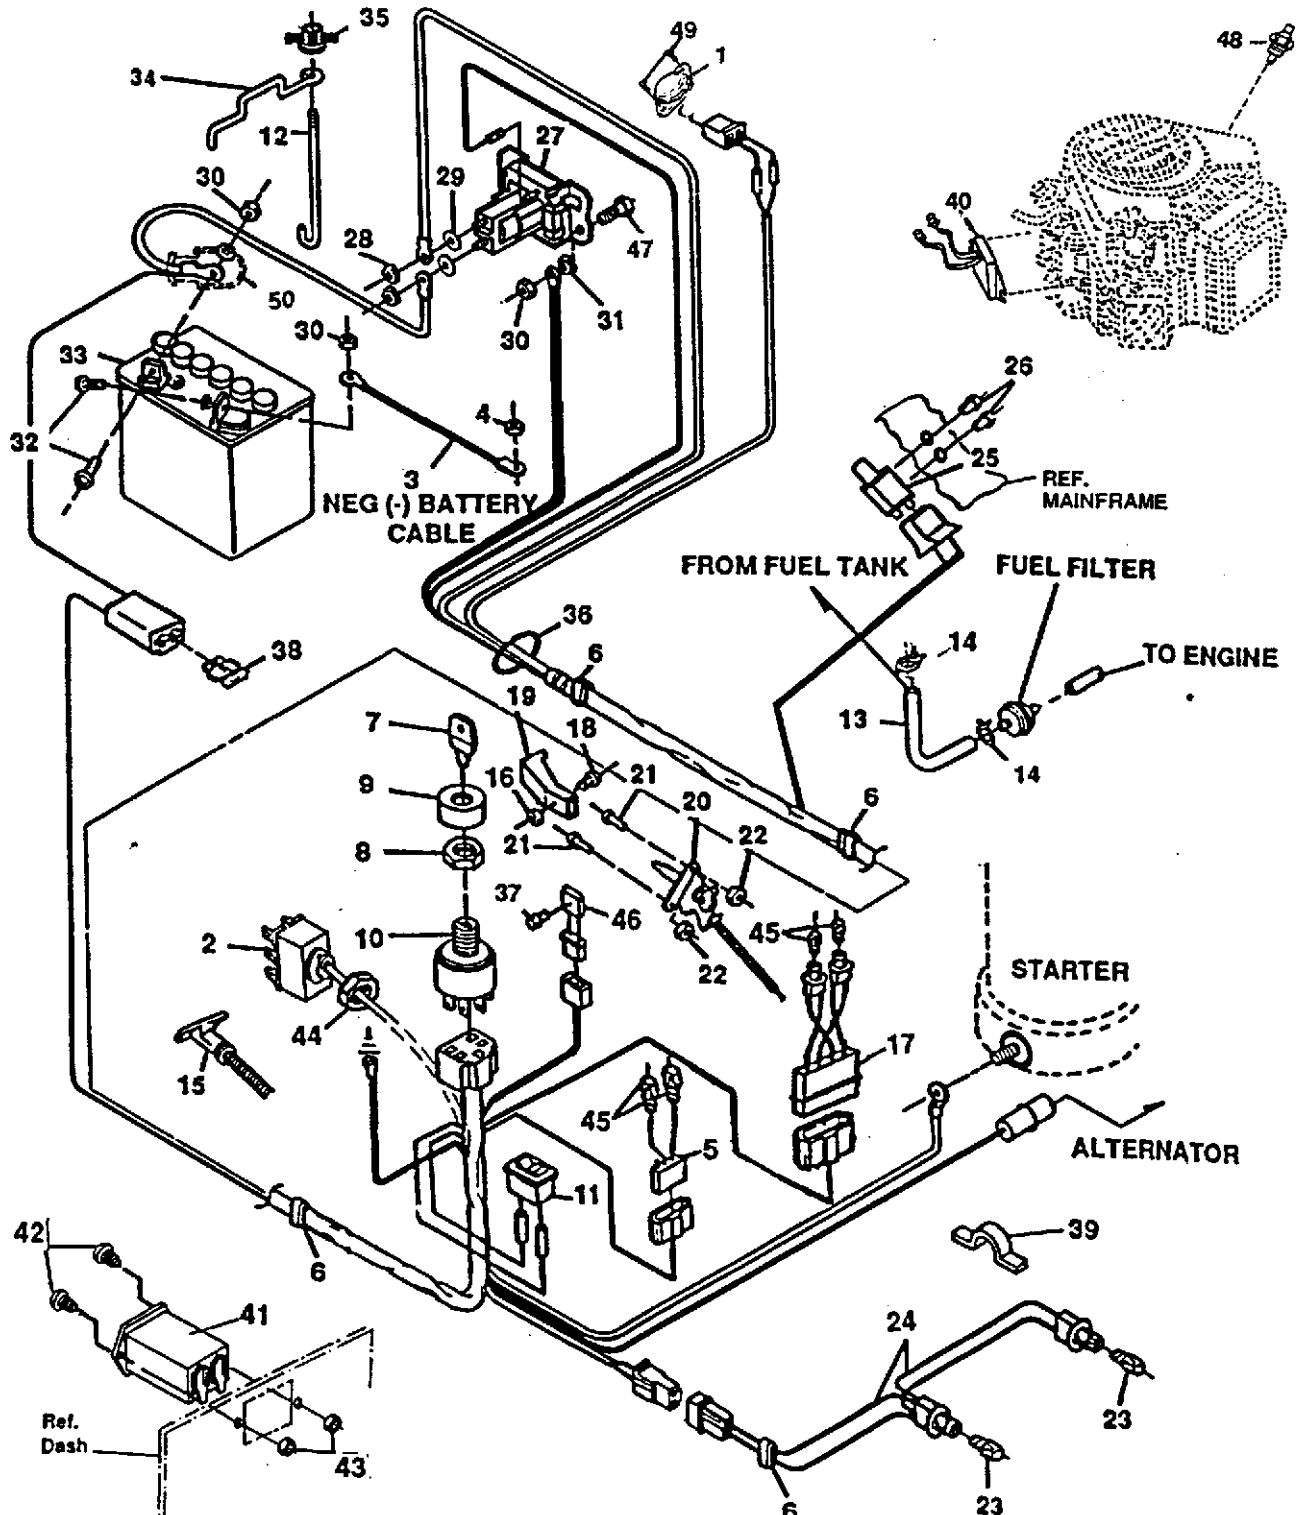

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS Use of service/ replacement parts other than original parts may void your warranty.

ALL UNNUMBERED ITEMS ARE INTERCHANGEABLE WITH OPPOSITE SIDE


TRACTOR REPAIR PARTS

46" TRACTOR MODEL 4140H

Key No.	Part No.	Description	Key No.	Part No.	Description
1	57547	Seat Switch	27	310966	Solenoid
2	309285	Switch, Elec/Clutch Actuator	28	120368	Nut, Hx 5/16-24 Thd.
3	55511	Cable, Battery, Negative	29	138485	Washer, Lock 5/16 In.
4	271184	Nut, Hx, Keps, 5/16-18 Thd.	30	271172	Nut, Hx, Keps, 1/4-20 Thd.
5	305702	4-Pin Lampholder	31	1502	Nut, Hx, Ctrlk, 1/4-20 Thd.
6	57444	Tie Cable	32	120854	Screw , 1/4-20 x .63
7	300626	Key, Ignition Switch	33	306694	Battery
8	300193	Nut, Switch	34	302912	Bracket, Battery Hold-Down
9	300194	Boot, Switch	35	310067	Wingnut, 1/4-20 Thd.
10	305720	Switch, Ignition	36	315695	Wiring Harness
11	300334	Switch, Light	37	300302	Plastite Screw
12	57551	Rod, Battery Hold-Down	38	302031	Fuse, 15A-32V
13	47452	Gas Line, 10" (cut to length)	39	41482	Press Clip
14	48672	Clamp, Gas Line	40	315602	Regulator, Sen Volt B & S With Sensor
15	307113	Choke Control	41	304739	Miniature Hour Meter
16	120622	Nut, Hex, #8-32 Thd.	42	308347	Screw, #6-32 x 1/2 In.
17	305701	3-Pin Lampholder	43	271482	Nut, #6-32
18	159585	Screw, Ph Pn, #8-32 x 3/8 In.	44	313430	Nut
19	304439	Knob, Throttle Control	45	57769	Indicator Bulb
20	307362	Throttle Control	46	307056	Voltage Sensor
21	159943	Screw, #10-24 X 5/8 In.	47	187745	Screw, 1/4-20 x .75
22	308459	Nut, Hx, Nylon Lock, #10-24 Thd.	48	314797	Oil Sensor, B & S Twin Cylce
23	52572	Bulb Headlamp	49	160505	Screw, 1/4-20 x .38
24	303064	Assembly, Light Wire	50	308201	Boot, Rubber (battery cable)
25	57211	Switch			
26	57220	Screw, Pn Hd, Tap #12 x 1/2 In.			

FOR MODELS 4140H & 4140G

For Husvarna Parts Call 606-678-9623 or 606-561-4983

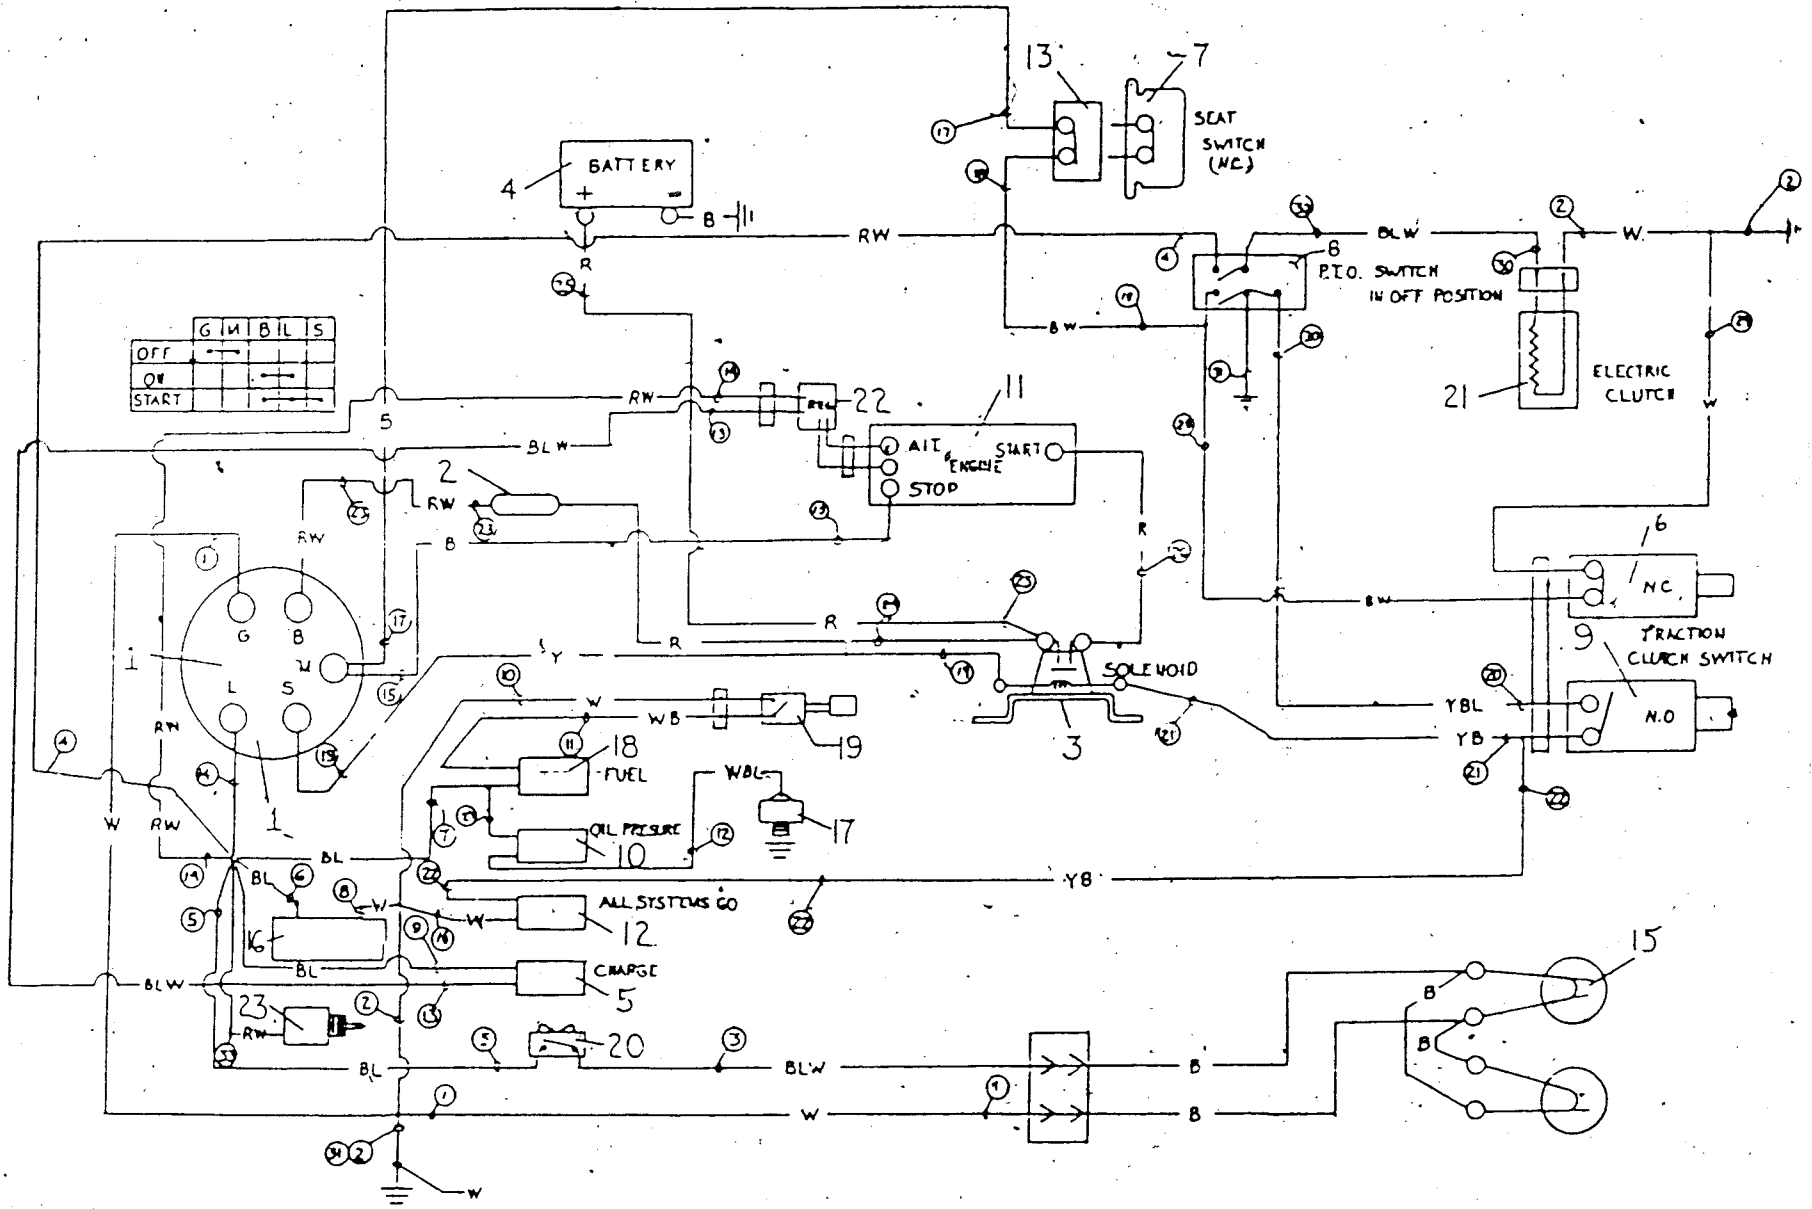

MODELS 4140H & 4140G CONT.

W= WHITE
R= RED
B= BLACK
Y= YELLOW
BL= BLUE
BW= BLACK/WHITE
RW= RED/WHITE
WB= WHITE/BLACK
YB= YELLOW/BLACK
WBL= WHITE/BLUE
YBL= YELLOW/BLUE
BLW= BLUE/WHITE

1 IGNITION SWITCH
2 FUSE-25 AMP B
3 SOLENOID
4 BATTERY
5 ALTERNATOR LIGHT
6 **CLUTCH SWITCH (SAFETY CIRC. HYDRO)
7 SEAT SWITCH (SAFETY CIRCUIT)
8 SWITCH, ELECTRIC P.T.O.
9 CLUTCH SWITCH (START CIRCUIT)
10 WARNING LIGHT, CLUTCH & MOWER
11 ENGINE
12 WARNING LIGHT, CLUTCH & MOWER
13 *PLUG, SEAT SWITCH
14
15 HEADLIGHTS
16 **HOUR METER
17 OIL PRESSURE SWITCH
18 WARNING LIGHT-LOW FUEL
19 LOW FUEL SWITCH
20 HEAD LIGHT SWITCH
21 ELECTRIC CLUTCH
22 REGULATOR
23 AFTER FIRE SOLENOID

*SWITCH PLUG CLOSES CIRCUIT

**IF SO EQUIPPED