




Illustrated Parts
List

1993-01
I9302003

LT 140

(HU14H42A), 954000512

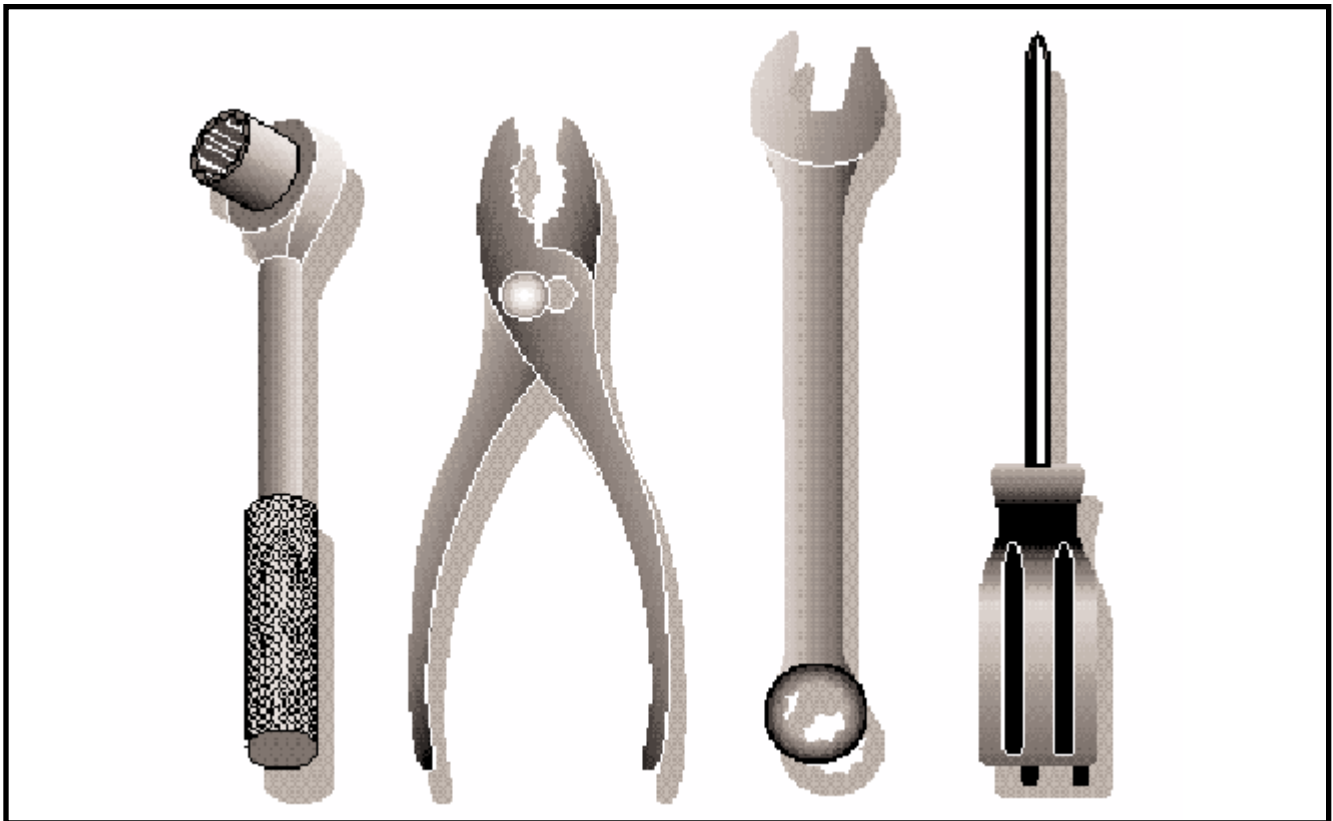


Repair Parts Manual

Ride Mower

14 HP 42" TRACTOR MODEL NO. LT1040 (H42A), PRODUCTION NO. 495300 05-12

SCHEMATIC

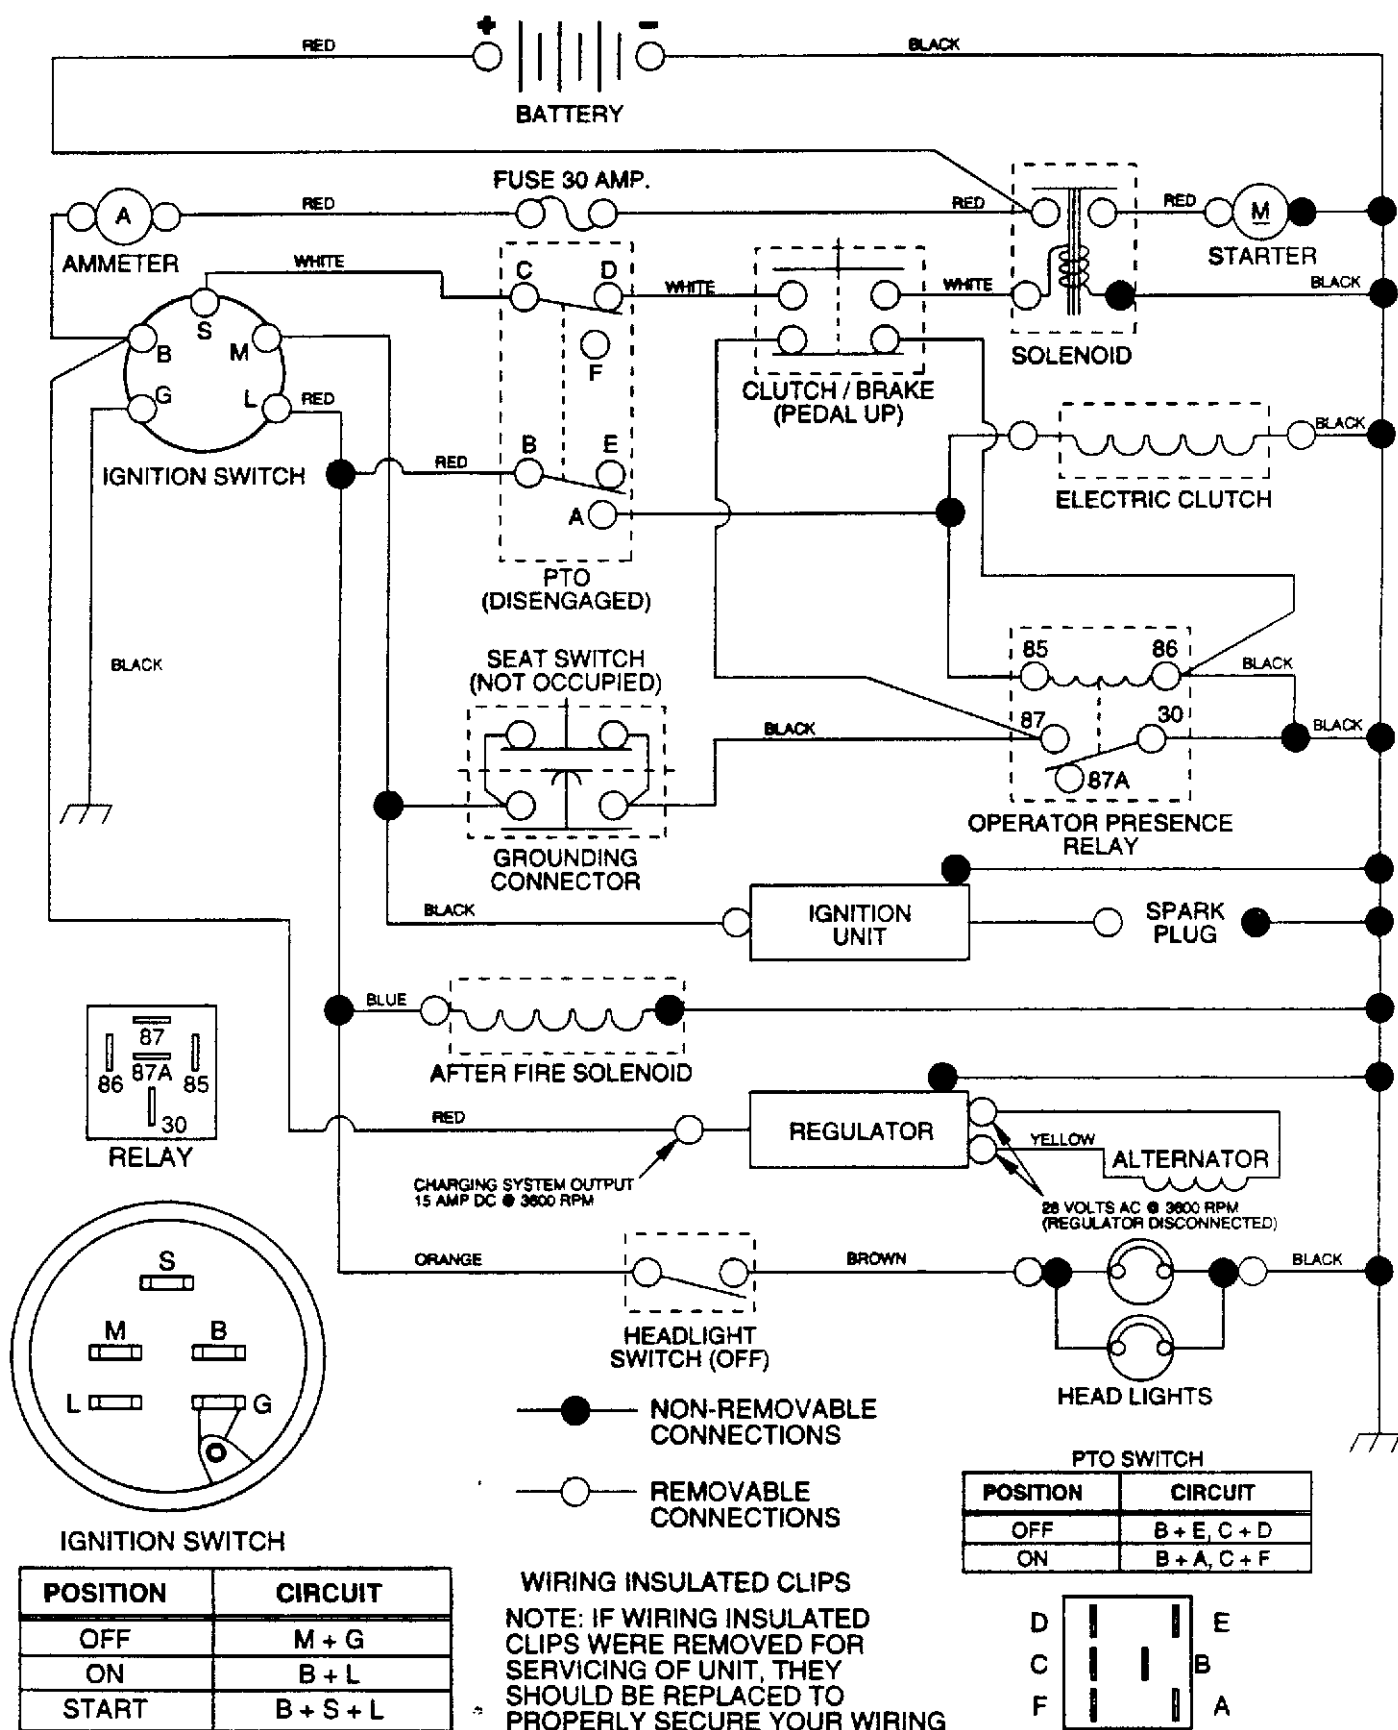


For Husqvarna Parts Call 606-678-9623 or 606-561-4983

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LT140 (HU14H42A), PRODUCT NO. 954 00 05-12

ELECTRICAL

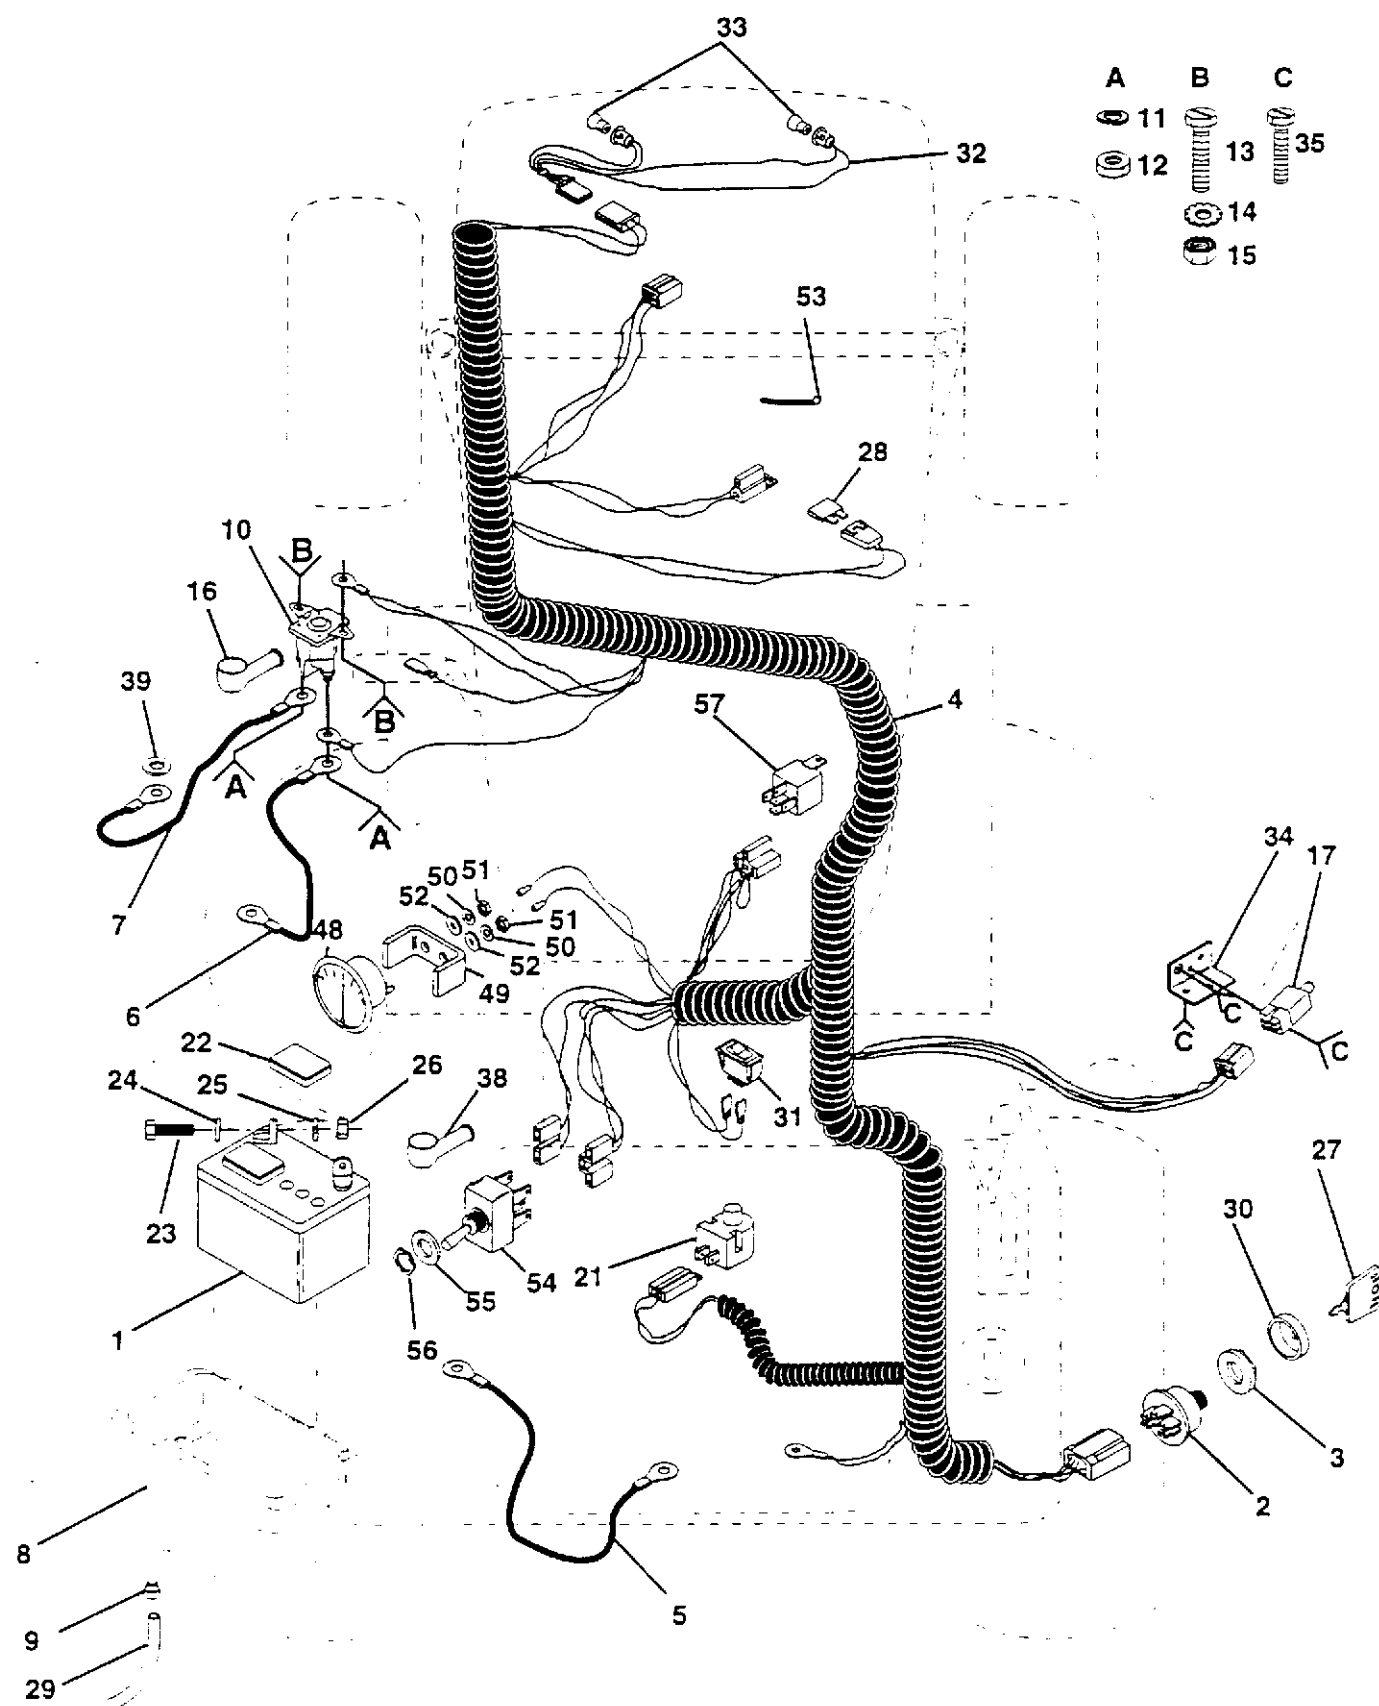

REPAIR PARTS

Parts Call 606-678-9623 or 606-561-4983

14 HP 42" TRACTOR - MODEL NO. LT140 (HU14H42A), PRODUCT NO. 954 00 05-12

ELECTRICAL

KEY NO.	PART NO.	DESCRIPTION
1	532121537	Battery 12 Volt 30 Amp
2	532102972	Switch Ign 5 Term Wo/wash/nut
3	532124211	Nut Ignition
4	532138982	Harness Ign Kohl Fend HI Amm
5	532124773	Cable Ground 6ga 12"black
6	532124964	Cable Battery 6ga 39" Red
7	532124770	Cable Battery 6ga 22" red
8	532133753	Case Battery w/o Lid
9	532109596	Clamp Hose Olive
10	532138406	Solenoid
11	810090400	Washer Lock 1/4
12	873350400	Nut Jam Hex 1/4-20 Unc
13	874780408	Bolt Fin Hex 1/4-20uncx1/2 Gr5
14	811050400	Washer Lock Ext Tooth 1/4
15	873510400	Nut Keps Hex 1/4-20 Unc
16	532131563	Cover Terminal Red
17	532109553	Switch Interlock Clutch
21	532121305	Switch Plunger Nc Gray
22	532121264	Caps Battery 20/25/30 Amp
23	874760412	Bolt Hex Hd 1/4-20unc X 3/4
24	819091016	Washer 9/32 X 5/8 X 16 Ga
25	810040400	Washer Lock Hvy Helical 1/4
26	873220400	Nut Fin Hex 1/4-20 Unc
27	532122147	Key Ign Molded Generic
28	532108824	Fuse 30 Amp Auto Green
29	532109238	Tube Plastic 12"
30	532123620	Cover Sw Key Blk 1 25 Text Slit
31	532110712	Switch Light Blk Blk Red
32	532136850	Harness Socket Light
33	532124893	Bulb, Light # 1141
34	532108236	Bracket Switch Clutch
35	817021008	Screw Hex Tapping # 10-24 X 1/2
38	532124783	Cover, Terminal
39	811150400	Washer, Lock Int. Tooth 1/4
48	532124900	Ammeter Round 15 Amp
49	532131708	Bracket Ammeter 2 242 X 1 180
50	810101000	Washer Lock
51	873911000	Nut
52	819070818	Washer 7/32 X 1/2 X 18 Ga
53	532124756	Tie Cable
54	532126016	Switich PTO
55	819171216	Washer 17/32 x 3/4 x 16 Ga.
56	532124932	Nut Hex 1/2-28 Unf
57	532109748	Relay Assembly


NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

For Husqvarna Parts Call 606-678-9623 or 606-561-4983

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LT140 (HU14H42A), PRODUCT NO. 954 00 05-12

CHASSIS AND ENCLOSURES

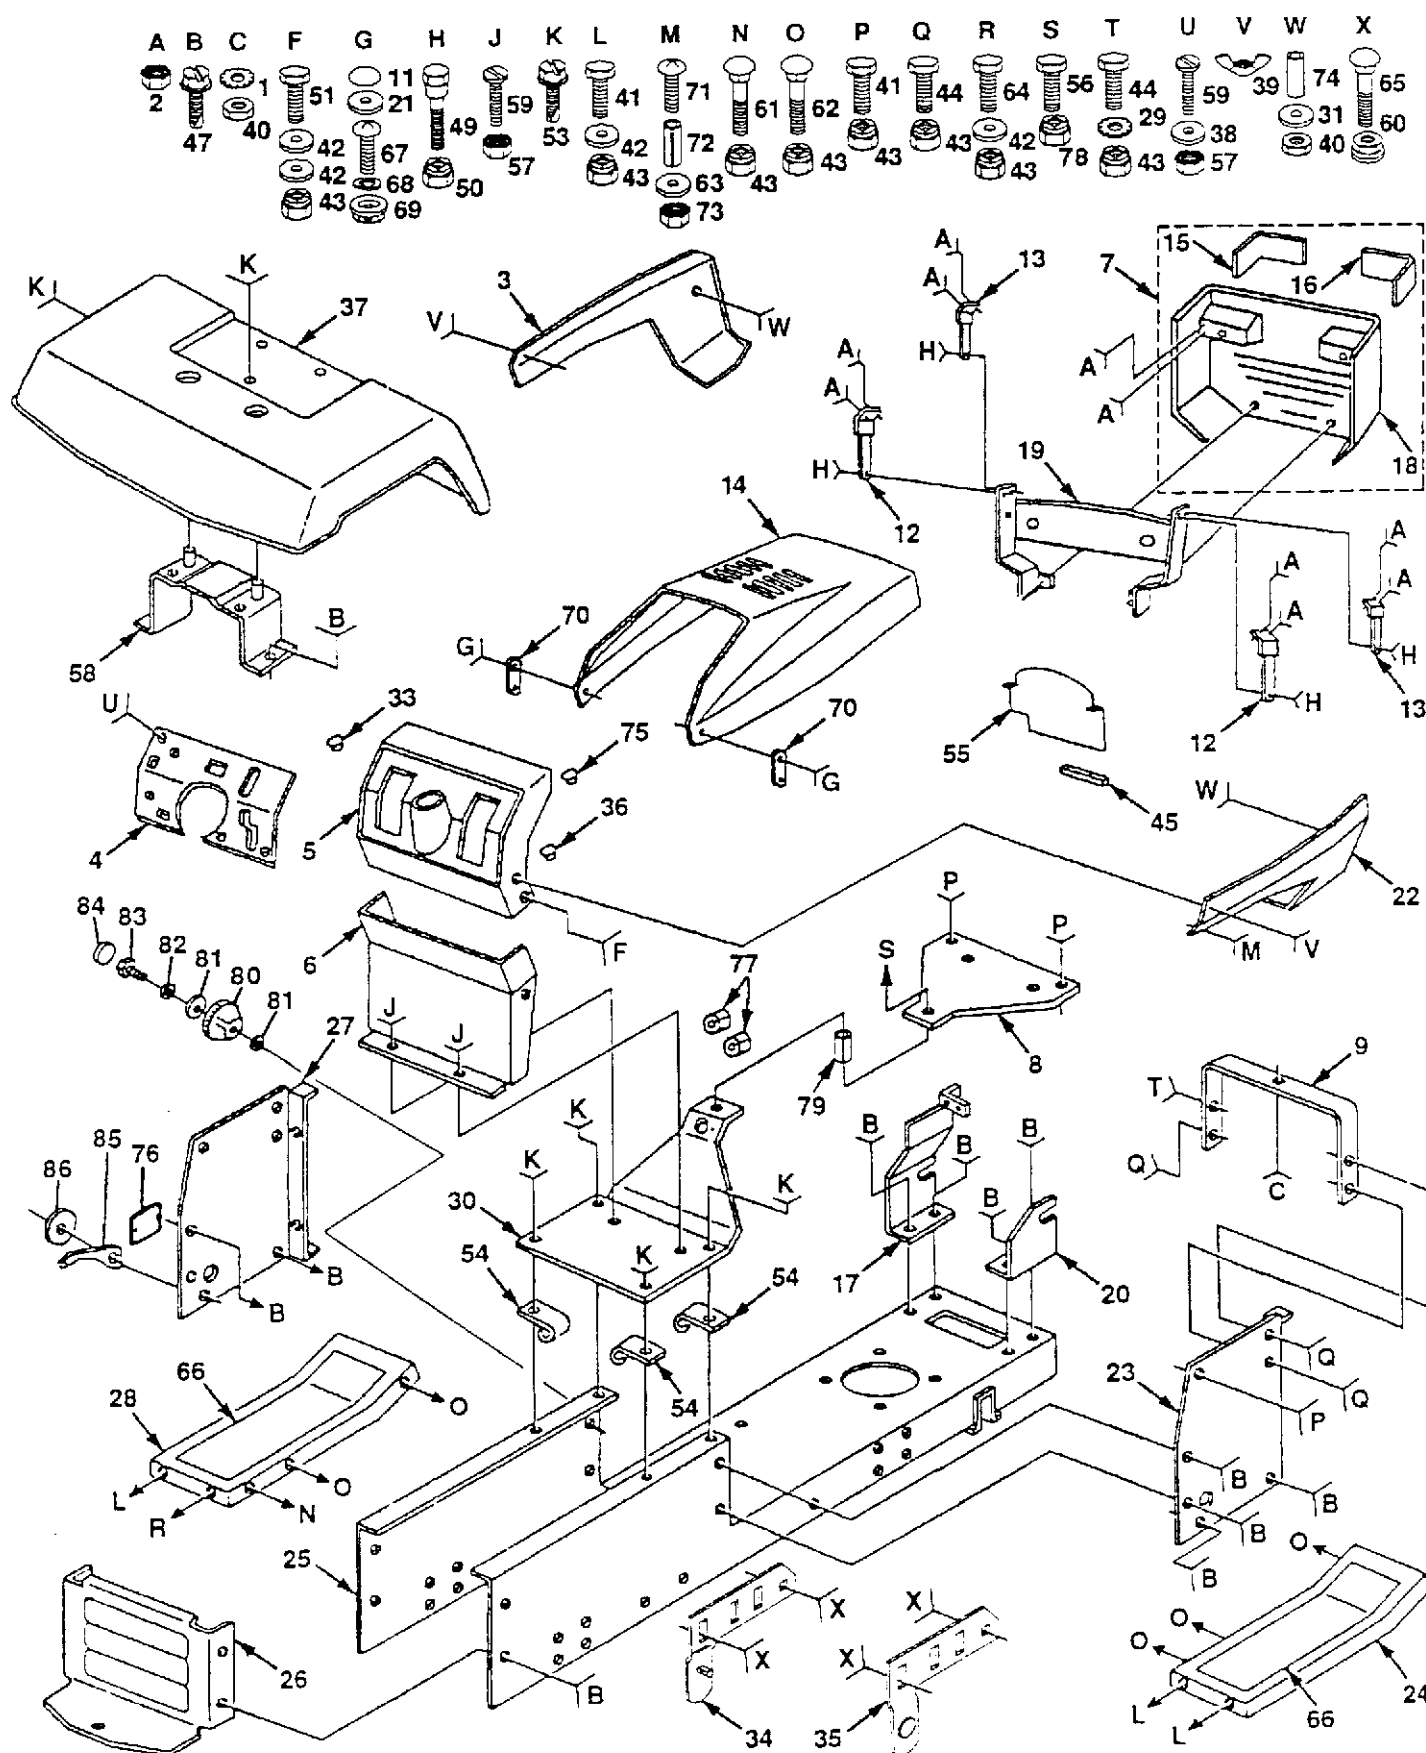


14 HP 42" TRACTOR - MODEL NO. LT140 (HU14H42A), PRODUCT NO. 954 00 05-12

CHASSIS AND ENCLOSURES

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 811050400	Washer, Lock, External Tooth 1/4	47 817490612	Screw, Thd., Roll. 3/8-16 x 3/4
2 873510400	Nut, Hex, Keps 1/4-20 UNC	49 532123481	Bolt, Shoulder 1/4-20 UNC
3 532125393	Side Panel, LH	50 873680400	Nut, Crownlock 1/4-20 UNC
4 532138889	Plate, Dash	51 874760616	Bolt, Hex, Fin. 3/8-16 UNC x 1
5 532124182	Dashboard	53 817490608	Screw, Thd., Roll. 3/8-16 x 1/2
6 532104783	Dash, Lower	54 532124996	Clip, Fuel Line
7 532127321	Grill Assembly	55 532126423	Baffle, Vertical
8 532137654	Plate, Battery Support	56 874760532	Bolt, Hex, Fin. 5/16-18 UNC x 2
9 532124130	Support, Dash	57 873510500	Nut, Hex, Keps 5/16-18 UNC
11 532110356	Cap, Black	58 532136619	Bracket Fender
12 532106784	Strap Assembly, Hinge, Rear	59 874180512	Screw, Machine 5/16-18 UNC x 3/4
13 532104618	Strap Assembly, Hinge, Front	60 873800600	Locknut, Hex, with Washer Insert 3/8-16 UNC
14 532125454	Hood	61 872140608	Bolt, Carriage 3/8-16 UNC x 1
15 532124250	Lens, Headlight, LH, Smoked	62 872110606	Bolt, Carriage 3/8-16 x 3/4
16 532124251	Lens, Headlight, RH, Smoked	63 819070818	Washer 7/32 x 1/2 x 18 Gauge
17 532110853	Pivot Bracket Assembly, LH	64 874760614	Bolt, Hex, Fin. 3/8-16 UNC x 7/8
18 532127325	Grille	65 872140608	Bolt, Carriage 3/8-16 UNC x 1
19 532126025	Support Assembly, Grille	66 532108256	Pad, Footrest
20 532110852	Pivot Bracket Assembly, RH	67 874191008	Screw, Machine, Cross Pan Head #10-24 x 1/2
21 532110357	Washer, Cap	68 810071000	Washer, Lock #10
22 532138886	Side Panel, RH	69 532125004	Nut, Weld
23 532136970	Dash Panel, RH	70 532109808	Latch, Chute
24 532124914	Footrest, RH	71 874981020	Screw, Machine, Cross Pan Head #10-24 x 1-1/4
25 532135033	Chassis 11 ga	72 532007206	Spacer, Split #10 x 3/4
26 532137275	Drawbar	73 873731000	Nut, Hex, Keps #10-24 UNC
27 532136967	Dash Panel, LH	74 532001260	Spacer 17/64 x 1/2 x 3/8
28 532124899	Footrest, LH	75 532125085	Plug Dash
29 811050600	Washer, Lock, External Tooth 3/8	76 532121794	Cover Access
30 532125453	Saddle	77 532110436	Bushing Snap Split
31 819091216	Washer 9/32 x 3/4 x 16 Gauge	78 873680600	Nut Crownlock 5/16-18
33 532005479	Plug, Button	79 532121236	Spacer Split
34 532134774	Pivot Bracket Assembly, Rear, LH	80 532123934	Scale Ind Height
35 532134775	Pivot Bracket Assembly, Rear, RH	81 819112410	Washer 11/32 x 1-1/2 x 10 Ga.
36 532134014	Plug, Dome, Black	82 810040500	Washer Lock Hvy Hlcl Spr. 5/16
37 532125456	Fender	83 874780516	Bolt Hex 5/16-18 x 1
38 819111116	Washer 11/32 x 11/16 x 16 Gauge	84 532123935	Plug Hole
39 532123198	Wing Nut, Plastic 1/4-20	85 532138346	Pointer Height Indicator
40 873220400	Nut, Hex, Fin. 1/4-20 UNC	86 532120529	Washer Nylon
41 874760612	Bolt, Hex, Fin. 3/8-16 UNC x 3/4		
42 819131312	Washer 13/32 x 13/16 x 12 Gauge		
43 873680600	Nut, Crownlock 3/8-16 UNC		
44 874760616	Bolt, Hex, Fin. 3/8-16 UNC x 1		
45 532105037	Strip, Foam		

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm


DRIVE

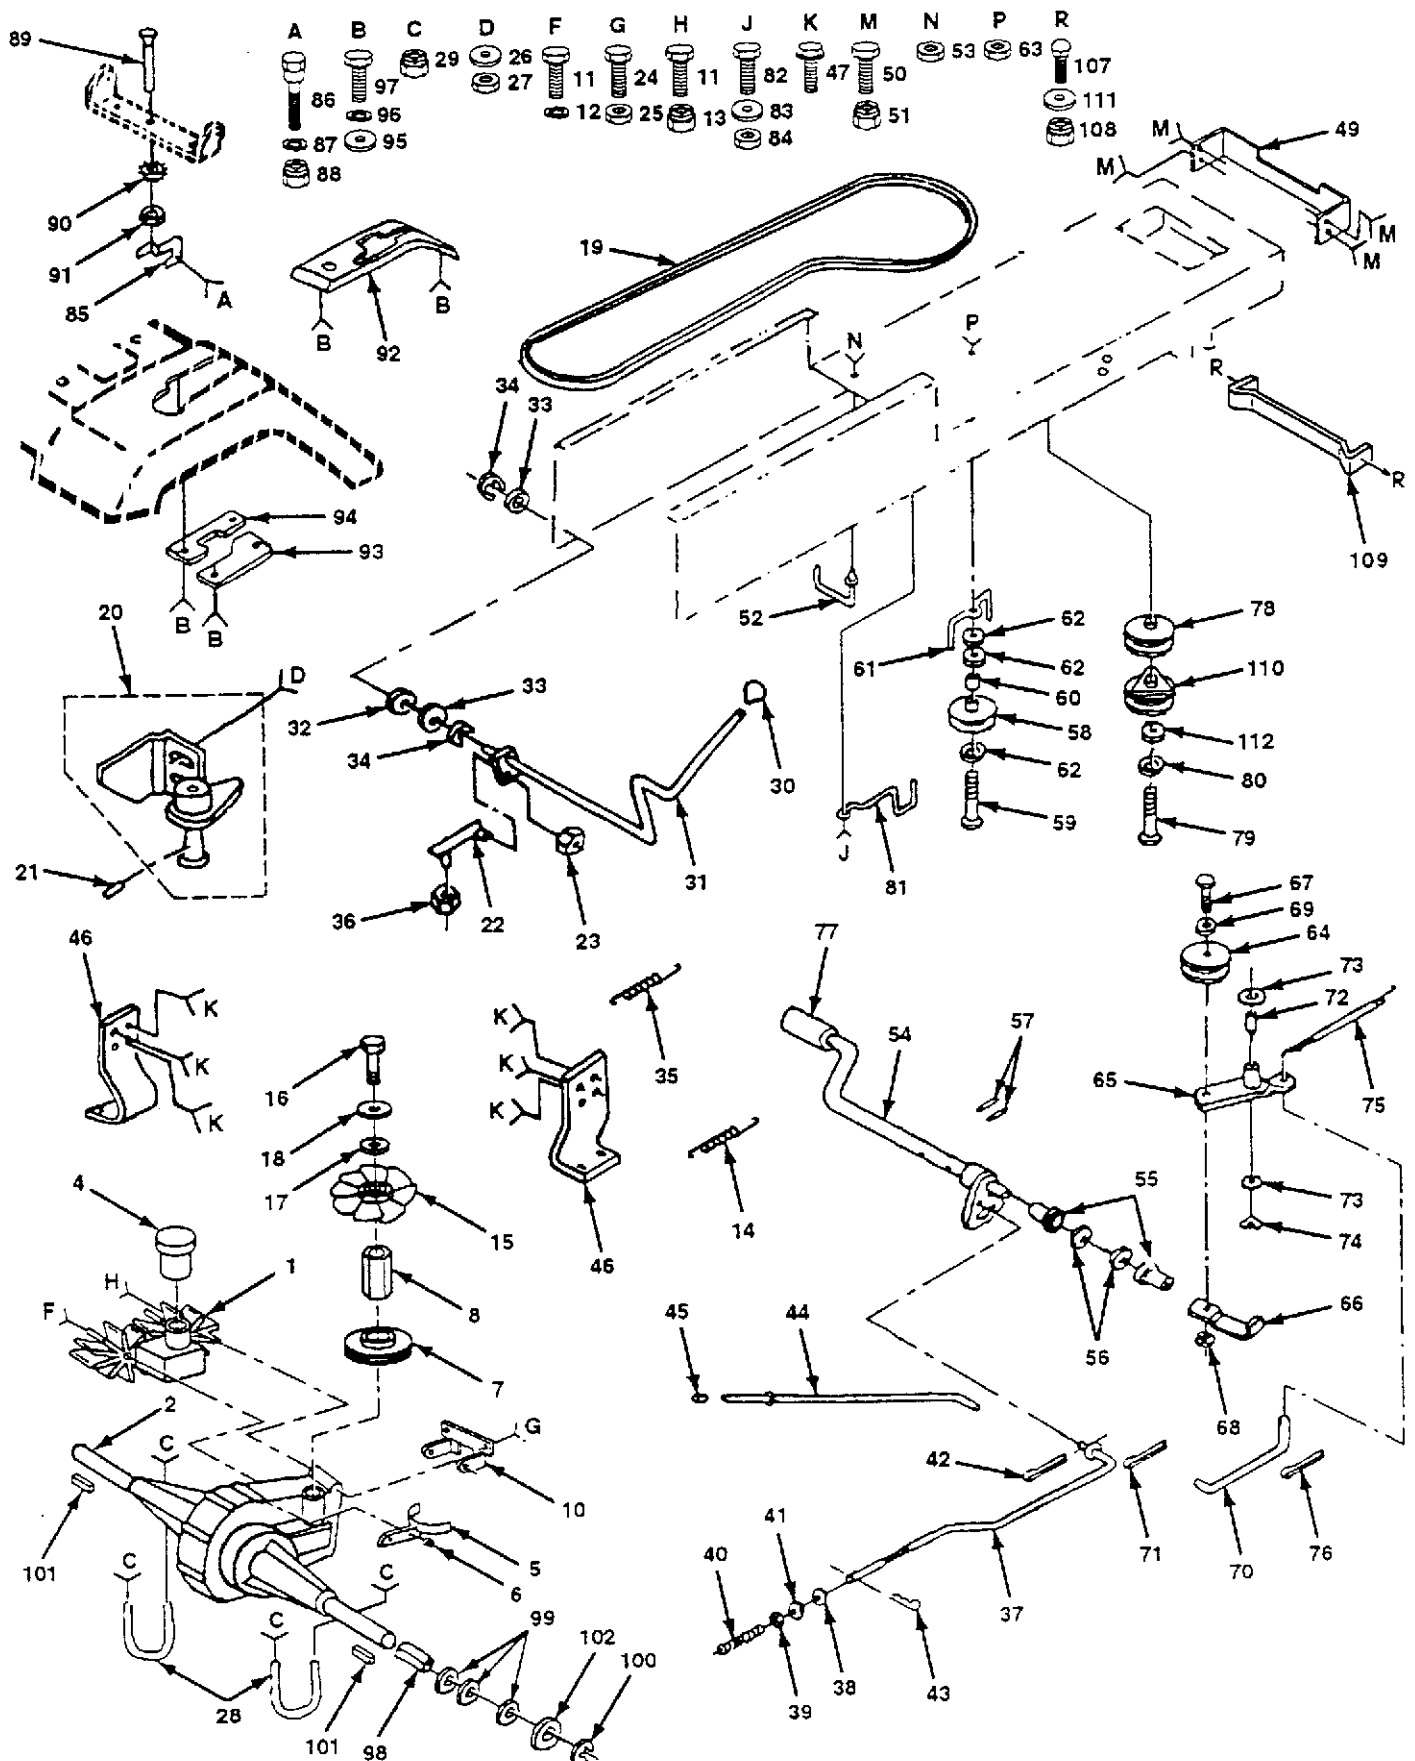



For Husqvarna Parts Call 606-678-9623 or 606-561-4983
REPAIR PARTS
14 HP 42" TRACTOR - MODEL NO. LT140 (HU14H42A), PRODUCT NO. 954 00 05 12
DRIVE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532121430	Sunstrand Pump, Hydro	58	532123674	Pulley, Idler, Flat
2	532121431	Transaxle Assembly.	59	874760644	Bolt, Hex 3/8-16unc X 2-3/4
4	532121323	Reservoir, Transaxle Pump	60	532124965	Spacer, Split
5	532126581	Belt Keeper, Transaxle	61	532109070	Keeper, Belt Retainer
6	873680400	Nut, Crownlock 1/4-20 Unc	62	819131312	Washer 13/32 X 13/16 X 12 Ga
7	532126579	Transaxle Pulley	63	873680600	Nut, Crownlock 3/8-16 Unc
8	532121211	Spacer, Stand-off, Transaxle Fan	64	532127783	Pulley, Idler, V-Groove
10	532121188	Bracket, Differential Mounting	65	532123789	Bellcrank Assembly
11	874780572	Bolt, Hex 5/16-18unc x 5 Gr. 5	66	532123205	Retainer Belt
12	810040500	Washer, Lock 5/16	67	874760624	Bolt, Hex 3/8-16unc X 1-1/2
13	873680500	Nut, Crownlock 5/16-18	68	873680600	Nut, Crownlock 3/8-16 Unc
14	532110422	Spring Return Brake	69	819131316	Washer 13/32 X 13/16 X 16 Ga
15	532126578	Fan, Transaxle Hydro 7"	70	532105710	Link, Clutch
16	874780412	Bolt, Hex 1/4-20unc X 75	71	876020412	Cotter Pin 1/8 X 3/4
17	819092016	Washer 9/32 X 1-1/4 X 16 Ga	72	532105706	Nylon Bearing
18	810040400	Washer, Lock, Hlcl 1/4	73	532110812	Washer, Hardened
19	532137589	V-Belt, Ground Drive	74	812000039	Ring, Klip #t5304-50
20	532126912	Friction Pack Assembly	75	532105709	Spring, Return, Clutch
21	532126655	Pin, Roll 198 X 866	76	876020412	Cotter Pin 1/8 X 3/4
22	532137328	Rod, Tie Hydro Stretch	77	532123533	Cover Pedal
23	873040400	Nut, Hex, Flange 1/4-28 Unf	78	532136905	Pulley, Engine
24	874760612	Bolt, Hex 3/8-16unc X 3/4	79	532125120	Bolt, Hex M10-1.5 x 110
25	873680600	Nut, Crownlock 3/8-16 Unc	80	810040700	Washer, Lock, Hlcl 7/16
26	819131216	Washer 13/32 X 3/4 X 16 Ja	81	532129921	Keeper, Belt, Engine, LH
27	873680600	Nut, Crownlock 3/8-16 Unc	82	874760616	Bolt, Hex 3/8-16unc X 1
28	532121189	U-Bolt 3/8-16 X 2 83	83	819131312	Washer 13/32 X 13/16 X 12 Ga
29	873680600	Nut, Crownlock 3/8-16 Unc	84	873680600	Nut, Crownlock 3/8-16 Un
30	532121274	Knob 1/2-13	85	532126575	Arm, Control
31	532126592	Control Lever Assembly	86	532124815	Bolt, Shoulder 1/4 X 20 Unc
32	532126590	Bushing, Transaxle	87	532110739	Washer, Spring, Oiled
33	532126591	Washer, Shim .53 X 1 25 X .0598	88	873680400	Nut, Crownlock 1/4-20 Unc
34	812000003	E-Ring	89	532133836	Control, Bypass
35	532126910	Spring Extension	90	811050600	Washer, Lock, Ext. Teeth 3/8
36	873040400	Nut, Hex, Flange 1/4-28 Unf	91	873610600	Nut, Hex, Fin. 3/8-24 Unf
37	532137630	Rod, Brake	92	532126600	Console, Shift
38	873800600	Locknut 3/8-16unc	93	532126597	Plate, Neutral Adjust, RH
39	873350600	Nut, Hex Jam 3/8-16 Unc	94	532126598	Plate, Neutral Adjust, LH
40	532106888	Spring, Brake Rod	95	819091216	Washer 9/32 X 3/4 X 16 Ga
41	819131316	Washer 13/32 X 13/16 X 16 Ga	96	810040400	Washer, Lock, Hlcl 1/4
42	532124961	Retainer Spring	97	874760408	Bolt, Hex 1/4-20unc X 1/2
43	532124788	Retainer Spring	98	532121199	Spacer, Split
44	532133261	Rod, Parking Brake	99	532121749	Washer 25/32 X 1 1/4 X 16 Ga
45	532071673	Cap, Parking Brake	100	812000001	E-Ring #5133-75
46	532136922	Bracket, Transaxle	101	532123583	Key, Square
47	817490616	Screw, Thd., Roll. 3/8-16 X 1 Ty-tt	102	532121748	Washer 25/32 X 1-5/8 X 16 Ga.
49	532138307	Bracket, Mounting	107	872140506	Bolt Carriage 5/16-18 x 3/4
50	872110606	Bolt, Carriage 3/8-16 x 3/4	108	873680500	Nut, Crownlock 5/16-18
51	873680600	Nut, Crownlock 3/8-16 Unc	109	532137141	Bracket, Asm. Clutch
52	532126577	Keeper, Center Span	110	532137140	Clutch Electric
53	873680600	Nut, Crownlock 3/8-16 Unc	111	819111012	Washer 11/32 x 5/8 x 12 Ga.
54	532122424	Shaft, Foot Pedal	112	532126197	Washer 1-1/2 OD x 15/32 ID x .250
55	532120183	Bearing, Nylon			
56	819211616	Washer 21/32 X 1 X 16 Ga			
57	532124963	Pin Roll 3/16 X 1			

NOTE All component dimensions given in U. S. inches.
1 inch = 25.4 mm

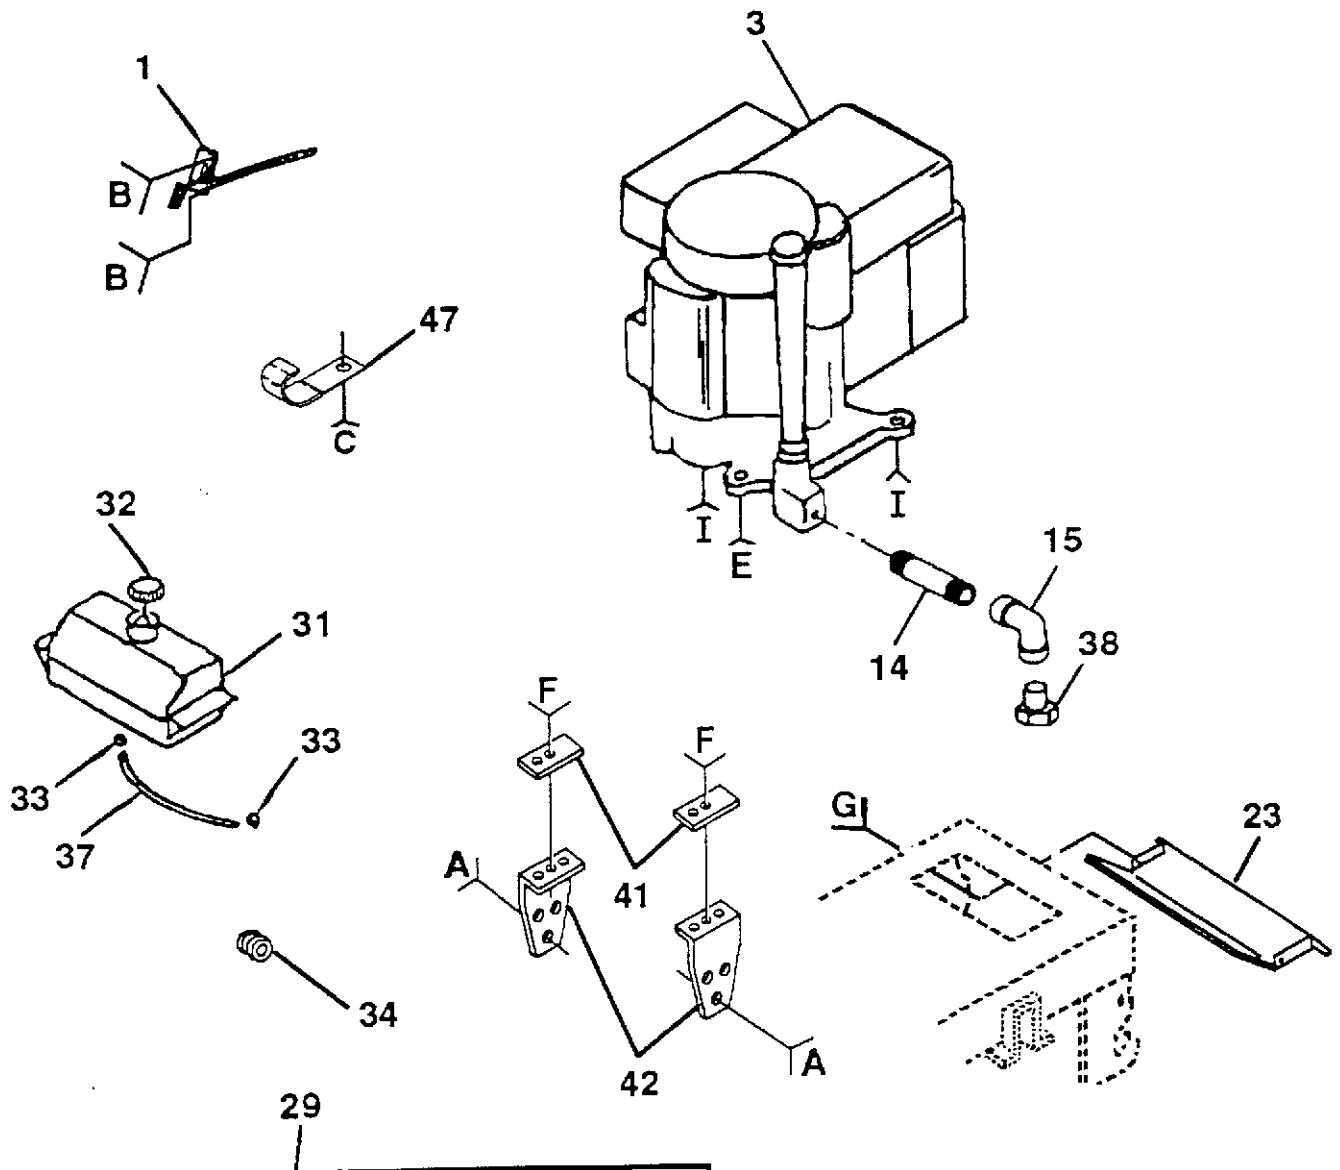

OPTIONAL EQUIPMENT
 Spark Arrester

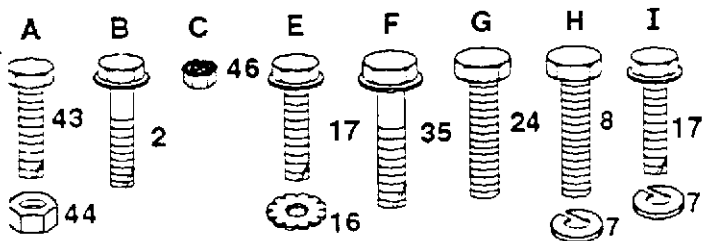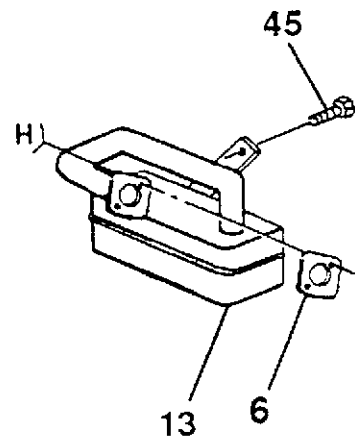


For Husqvarna Parts Call 606-678-9623 or 606-561-4983
REPAIR PARTS
14 HP 42" TRACTOR - MODEL NO. LT140 (HU14H42A), PRODUCT NO. 954 00 05-12
ENGINE

KEY PART NO.	NO.	DESCRIPTION
1	532132753	Control Th/ch
2	817720410	Screw Hex Thd Cut 1/4-20x5/8 T
3	-----	Engine Kohl 14 HP Model No. PS1454
6	-----	Gasket, Eng (Order from Engine Mfg.)
7	810040500	Washer Lock Hvy Hlcl Spr 5/16
8	874760508	Bolt, Fin Hex 5/16-18 X 5/8
13	532137350	Muffler LT Kohler
14	813280328	Nipple Pipe 3/8 Npt X 3-1/2"
15	813200300	Elbow Std 90° 3/8-18 Npt
16	811050500	Washer Lock Ext Tooth 5/16
17	532125398	Bolt Hex
23	532128953	Shield Heat Browning
24	817021008	Screw Hex Thd Cut #10-24unc X 1/2
29	532137179	Kit Spark Arrestor
31	532109202	Fuel Tank Front 1 25
32	532123549	Cap Asm Fuel W/sym Vented
33	532123487	Hose Clamp
34	532124028	Bushing Snap Nyl Fuel Line
35	817490612	Screw Hexwash Thdrol 3/8-16x3/4 Ty-tt
37	532124953	Fuel Line
38	-----	Plug Oil Drain (Order from Engine Mfg.)
41	532128230	Strap Support Fuel Tank
42	532128229	Bracket Support Tank Fuel
43	874760616	Bolt, Hex 3/8-16unc X 1
44	873680600	Nut, Crownlock 3/8-16 Unc
45	-----	Bolt, Hex (Order from Engine Mfg.)
46	873510600	Nut, Hex Keps 3/8-16
47	532124996	Clip Fuel Line

NOTE: All component dimensions given in U. S. inches.
1 inch = 25.4 mm

REPAIR PARTS

STEERING ASSEMBLY

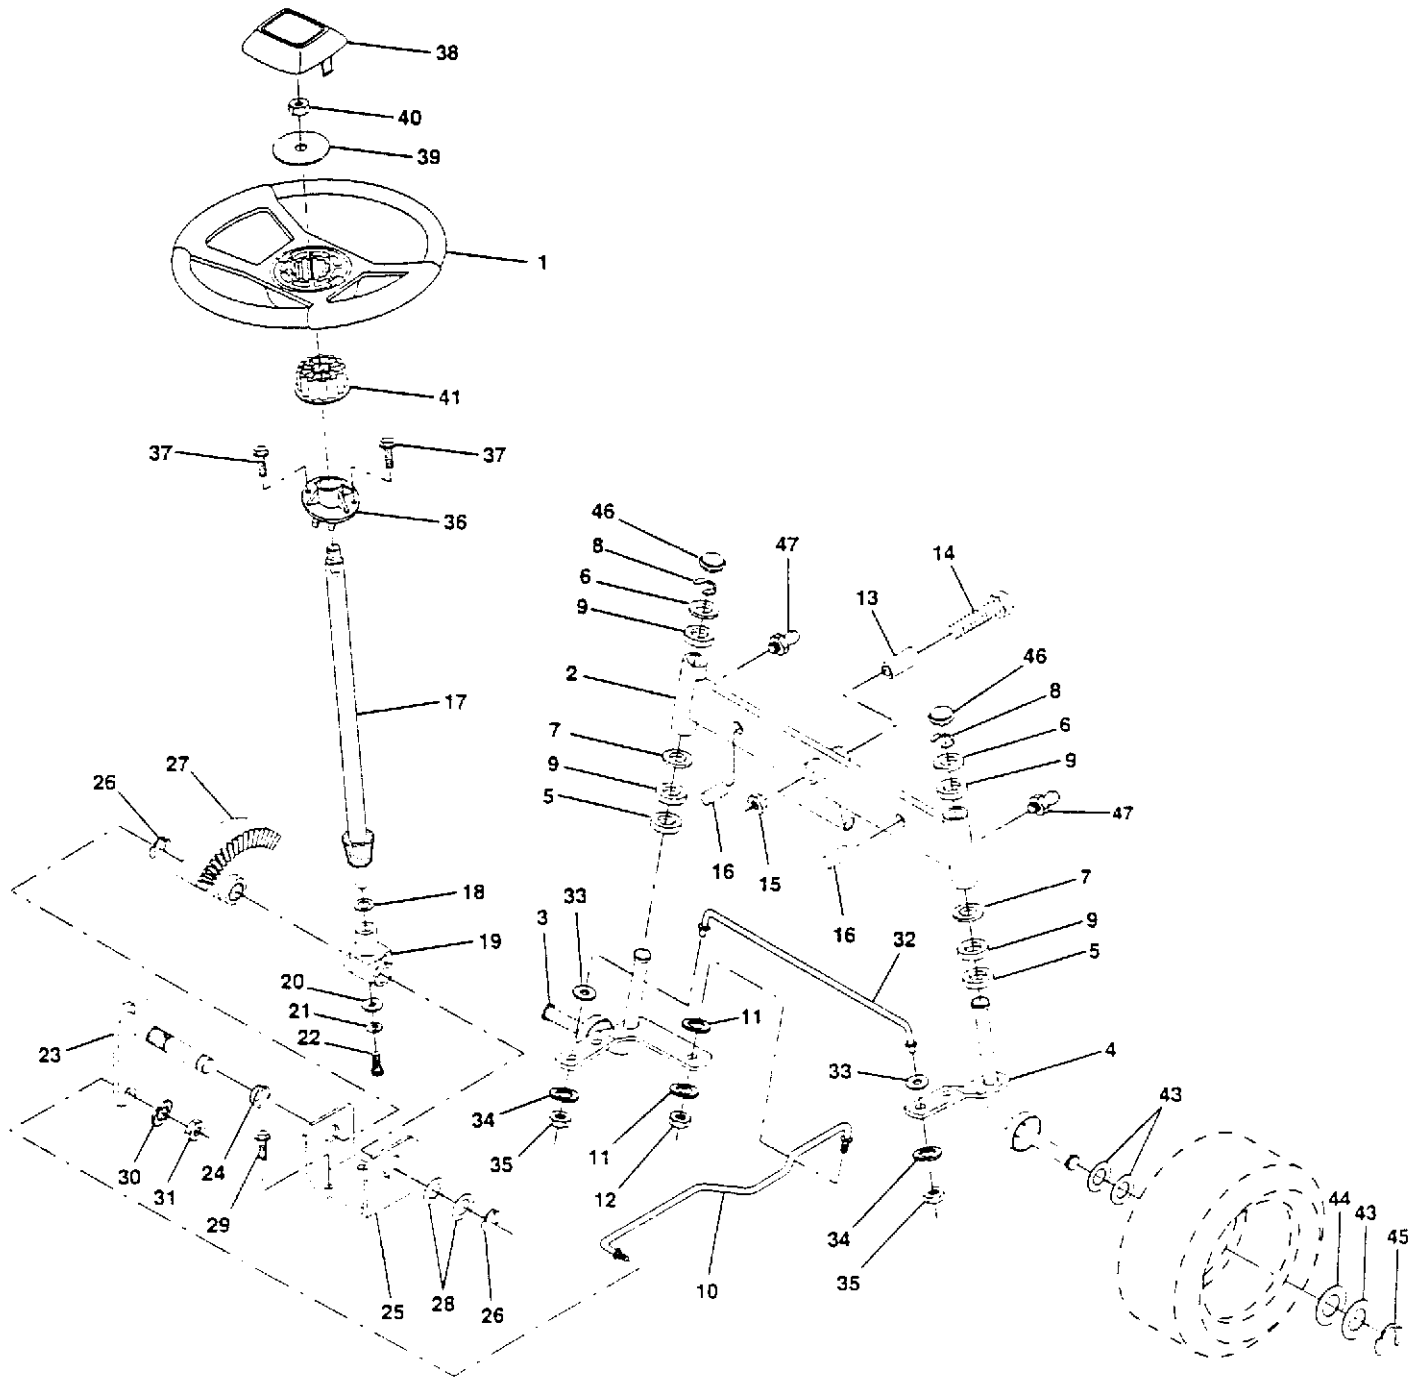


For Husqvarna Parts Call 606-678-9623 or 606-561-4983
REPAIR PARTS
14 HP 42" TRACTOR - MODEL NO. LT140 (HU14H42A), PRODUCT NO. 954 00 05-12
STEERING ASSEMBLY

KEY PART NO. NO.	DESCRIPTION
1 532124415	Wheel Steering
2 532133988	Axle Asm Fr LT W/gzks 38/42
3 532135227	Spindle Asm LH
4 532135228	Spingle Asm RH
5 532124931	Bearing Race Thrust Harden
6 532121748	Washer 25/32 X 1-5/8 X 16 Ga
7 819272016	Washer 27/32 X 1-1/4 X 16 Ga
8 812000029	Ring Klip #t5304-75
9 532124937	Bearing Col Strg
10 532130468	Link Drag Sol Ball Jt
11 810040600	Washer Lock Hvy Hlcl Spr 3/8
12 873610600	Nut Fin 3/8-24 Unf
13 532110438	Spacer Bearing Axle Front
14 874011056	Bolt Hex 5/8-11 Unc X 3-1/2
15 873901000	Nut Lock Flange 5/8-11 Unc
16 532132624	Pin Axle 5/8 X 1 55/1 54 Lg
17 532128758	Shaft Asm Strg 18 31x3/4
18 532057079	Washer Thrust 515x 750x 033
19 532124035	Suport Shaft
20 532126684	Washer Shim 1/4 X 5/8 X 062
21 810040400	Washer Lock Hvy Helical 1/4
22 871070410	Screw Hex Socket 1/4-20 X 5/8
23 532127501	Shaft Asm Pittman
24 532109816	Nyliner Snap In
25 532124036	Bracket Steering
26 812000029	Ring Klip #t5304-75
27 532136874	Gear Sector
28 532124931	Bearing Race Thrust Harden
29 817490612	Screw Thdrol 3/8-16x3/4 Ty-tt
30 810040600	Washer Lock Hvy Hlcl 3/8
31 873610600	Nut Fin Hex 3/8-24 Unf
32 532130467	Rod Tie Wire Form
33 819111216	Washer 11/32 x 12/16 x 16 Ga.
34 810040500	Washer, Lock, Hvy Hlcl Spr 5/16
35 873810500	Locknut 5/16-24 Unf
36 532124720	Bushing Link Drag
37 817431008	Screw Siftp #10-16 X 1/2 Ty-b
38 532124416	Insert Cap Strg Wh Aut
39 532100712	Washer 53 X 2 25 X 160
40 873940800	Nut Hex Jam Taplock 1/2-20 Unf
41 532100711	Adapter Wheel Strg
43 532121749	Washer 25/32 X 1 1/4 X 16 Ja
44 532121748	Washer 25/32 X 1-5/8 X 16 Ja
45 812000029	Ring Klip #t5304-75
46 532121232	Cap Spindle Fr Top
47 532124836	Fitting Grease

NOTE: All component dimensions given in U. s. inches.
1 inch = 25.4 mm

For Husqvarna Parts Call 606-678-9623 or 606-561-4983
REPAIR PARTS
 14 HP 42" TRACTOR - MODEL NO. LT140 (HU14H42A), PRODUCT NO. 954 00 05-12
SEAT ASSEMBLY

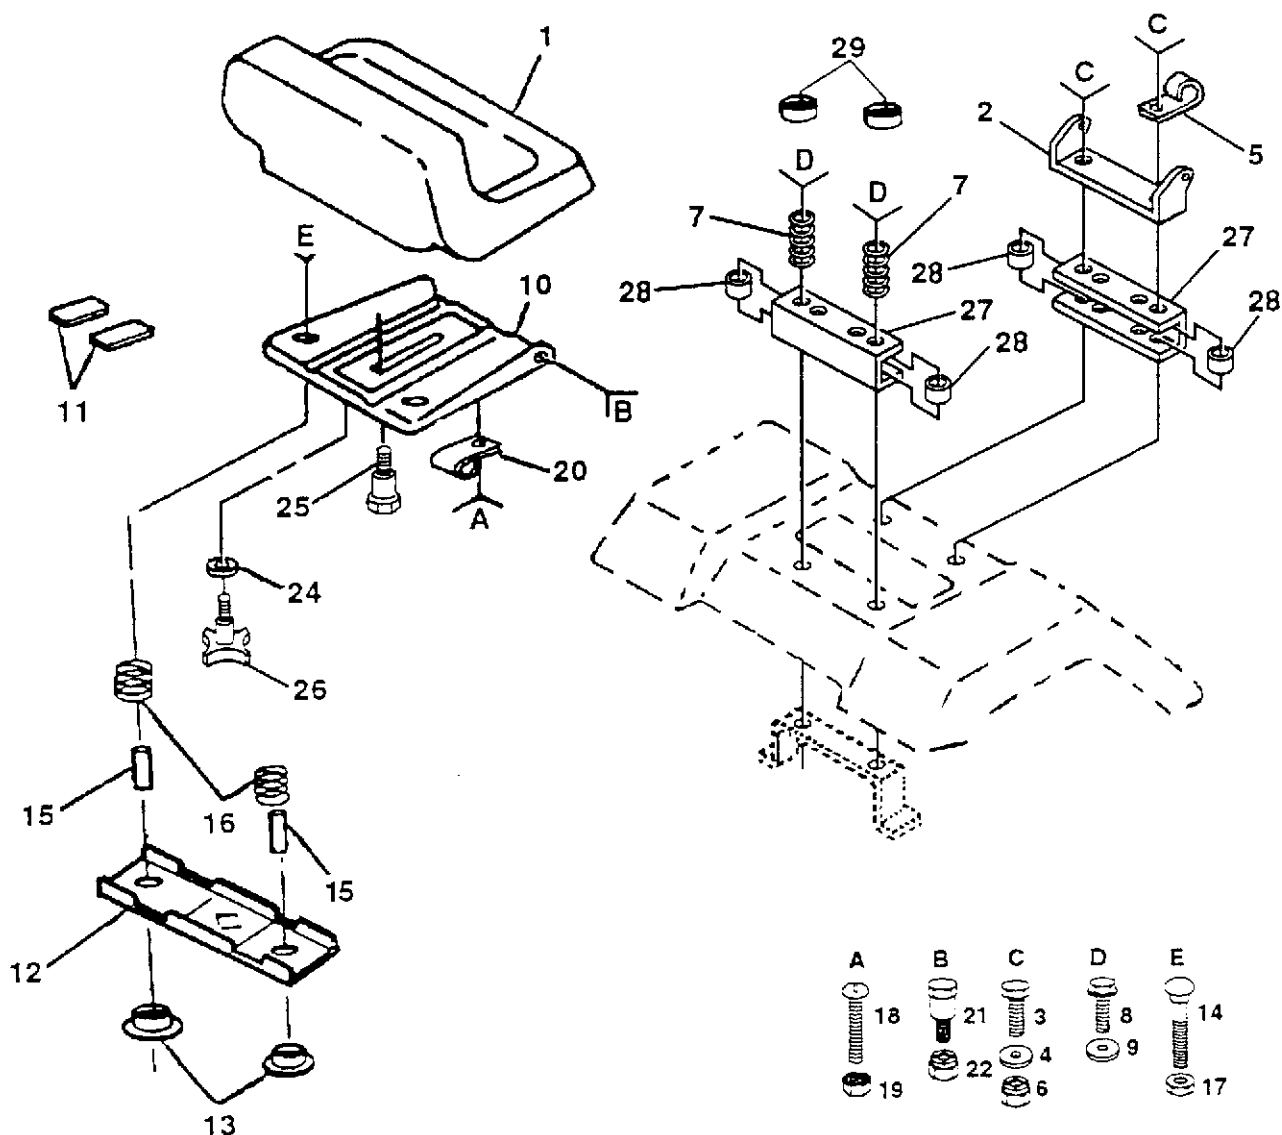


KEY NO.	PART NO.	DESCRIPTION
1	532124185	Seat
2	532126656	Bracket Pivot Seat
3	874760640	Bolt, Hex 3/8-16unc X 2-1/2
4	819131610	Washer 13/32 X 1 X 10 Ga
5	532124996	Clip Fuel Line
6	873680600	Nut, Crownlock 3/8-16 Unc
7	532124181	Spring Seat Cprsn
8	817490640	Screw Hwsh Thdrol 3/8-16x2-1/2
9	819131614	Washer 13/32 X 1 X 14 Ga
10	532131451	Pan Seat
11	532121251	Strip Foam
12	532121246	Bracket Mounting Switch
13	532121248	Bushing Snap
14	872050411	Bolt 1/4-20x1-3/8

KEY NO.	PART NO.	DESCRIPTION
15	532134300	Spacer Split
16	532121250	Spring Cprsn
17	532123976	Locknut 1/4 Gr. 5
18	874641008	Screw SLTD Pan Hd #10-32 X 1/2
19	873951000	Nut, Keps #10-32 Unf
20	532124967	Clip Insulated
21	532105529	Bolt, Shoulder 5/16-18 Unc
22	873680500	Nut, Crownlock 5/16-18
24	819171912	Washer 17/32 X 1-3/16 X 12 Ga
25	532127018	Bolt, Shoulder 5/16-18 X 62
26	532120068	Knob Seat 1/2-13unc
27	532131772	Spacer, Seat
28	532131771	Spacer Split
29	532124238	Cap Spring Seat

NOTE All component dimensions given in U.S. inches.
 1 inch = 25.4 mm

DECALS

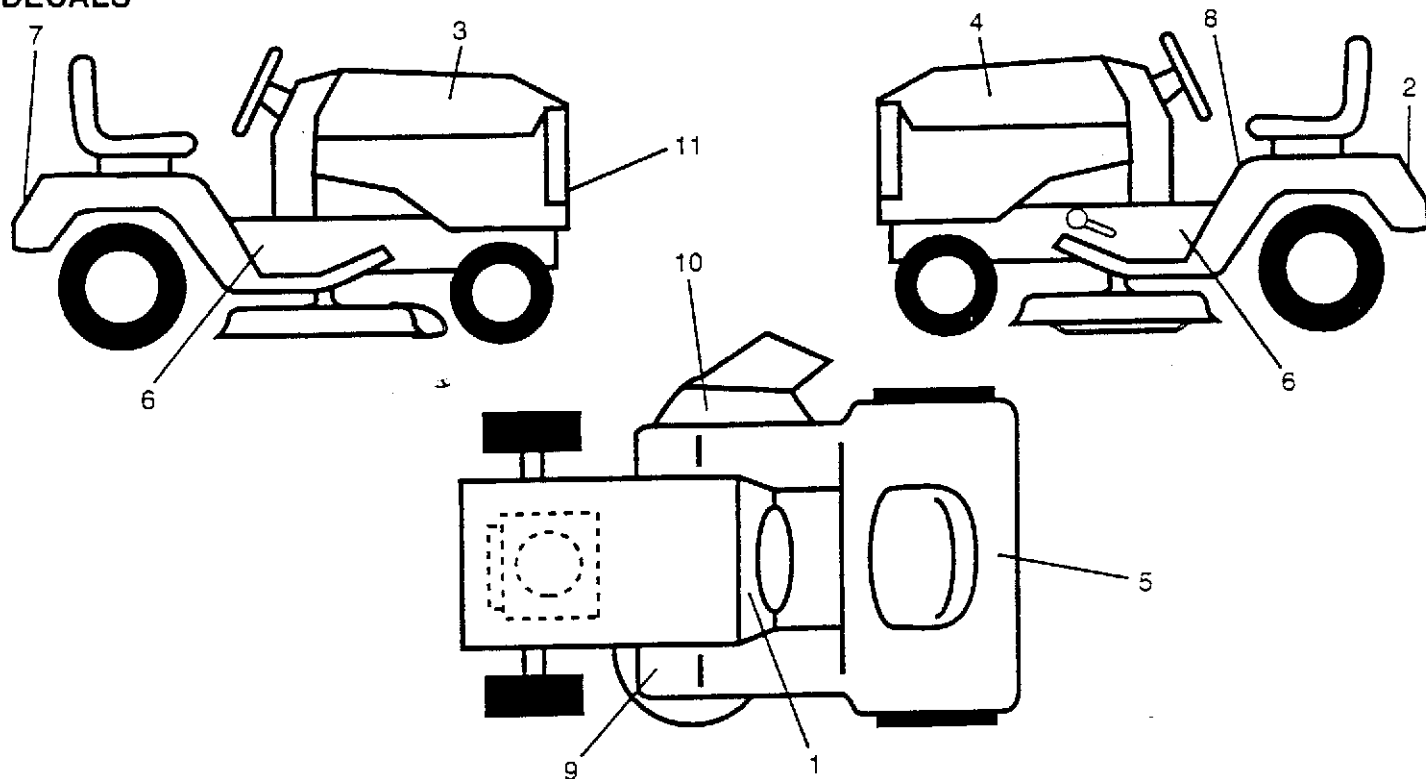


KEY NO.	PART NO.	DESCRIPTION
1	532136795	Decal Instruction Dash Eng/fr
2	532127520	Decal USA White
3	532137712	Decal Hood RH Husq
4	532137711	Decal Hood LH Husq
5	532121549	Decal Caution Battery Fr/ger
6	532125946	Decal Chassis Lawn Tractor
7	532131582	Decal Fender Husqvarna
8	532133795	Decal Caution Fender Eng/fr
9	532101892	Decal Clutch/brake Eng/fr
10	532137259	Decal Warning MULT-LANGUAGE
11	532125989	Decal Grille Husqvarna "h" logo

KEY NO.	PART NO.	DESCRIPTION
-	532138311	Decal Lift Handle (Lift Handle)
-	532138663	Manual Owner's English
-	532138664	Manual Owner's French

Available accessories not included with tractor:

-	BD20	42" Snow blade
-	CE42	42" Bagger
-	LCO6	Tire Chains (20 x 10 x 8)
-	LC05	33 lb. Weights (pairs)
-	SB20	40" Snow Thrower


WHEELS & TIRES

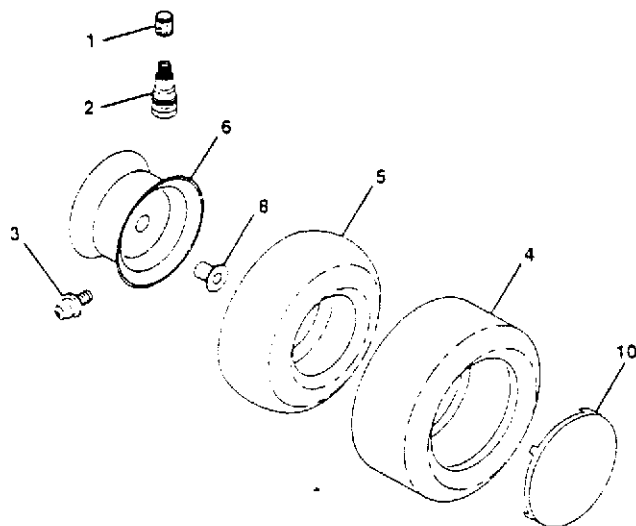

KEY NO.	PART NO.	DESCRIPTION
1	532059192	Cap Valve Tire
2	532065139	Stem Valve
3	532124957	Fitting Grease (Front Wheel Only)
4	532106222	Tire F Ts 15 X 6 0 - 6 Service
	532106268	Tire R Ts 18x9 5-8 C Service
5	532059904	Tube Front (Service Item Only)
	532124926	Tube Rear (Service Item Only)
6	532124999	Rim Asm 8" rear White Service
	532125102	Rim Asm Front 6"
8	532124959	Bearing Flange (Front Wheel Only)
10	532124577	Cover Wheel 6" white
	532124578	Cover Wheel 8" white

NOTE: All component dimensions given in U.S. inches
 1 inch = 25.4 mm

REPAIR PARTS
 For Husqvarna Parts Call 606-678-9623 or 606-561-4983
 14 HP 42" TRACTOR - MODEL NO. LT140 (HU14H42A), PRODUCT NO. 954 00 05-12
 42" MOWER

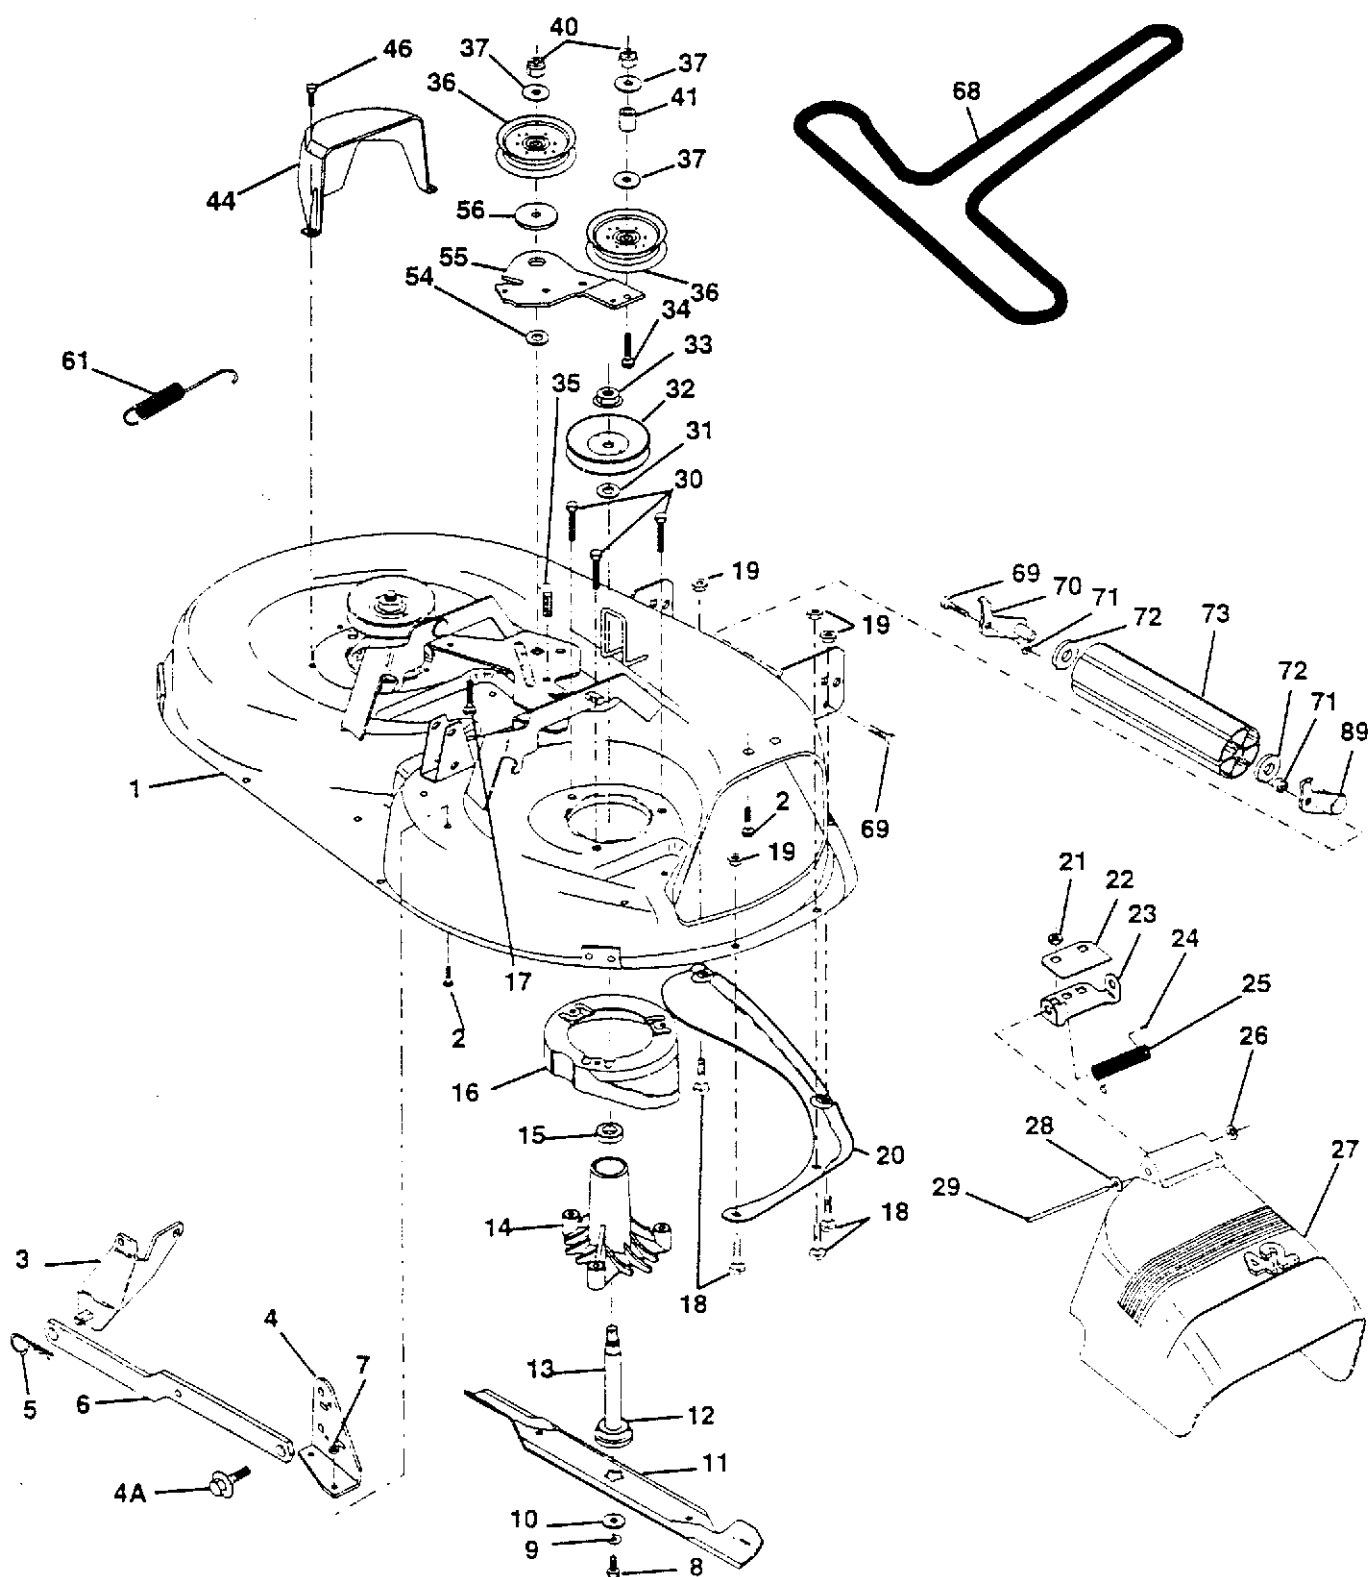


REPAIR PARTS Parts Call 606-678-9623 or 606-561-4983
14 HP 42" TRACTOR - MODEL NO. LT140 (HU14H42A), PRODUCT NO. 954 00 05-12
42" MOWER

KEY PART NO.	NO.	DESCRIPTION
1	532138024	Deck Asm MWR 42"weldment
2	872140506	Bolt Rdhd Sqnk 5/16-18unc X3/4
3	532138017	Bracket Asm Fr Sway Bar 38/42
4	532138440	Bracket Asm Deck 42"sway Bar
4A	532132827	Bolt Shoulder
5	532124670	Retainer Spring
6	532130832	Arm Suspension Rear
7	873800500	Locknut-hex W/ins 5/16-18unc P
8	532850857	Bolt 3/8-24x1 25 Gr8 Patched
9	810030600	Washer Lock Hvy 3/8 Unplated
10	532129962	Washer Hard Blade Mower Vented
11	532138498	Blade Mower High Perf 42"
12	532129895	Bearing Ball #6204 (Mandrel)
13	532137645	Shaft Asm W/lower Bearing
14	532128774	Housing Mandrel Vented(machd)
15	532110485	Bearing Ball Mandrel
16	532136929	Stripper Mower Vented
17	872110616	Bolt Rdhd Sqnk 3/8-16 X 2
18	872140505	Bolt Carr 5/16-18 X 5/8 Short
19	873800500	Locknut-hex W/ins 5/16-18unc P
20	532136888	Baffle Vortex 42
21	873680500	Nut Crown Lock 5/16-18
22	532134753	Stiffener Bracket 42"deck
23	532131267	Bracket Deflector Mower 42"
24	532105304	Cap Sleeve 80x 112 Blk Mower
25	532123713	Spring Torsion Deflector 2 52
26	532110452	Nut Push Phos & Oil
27	532130968	Shield Deflector Mower 42" Blk
28	819111016	Washer 11/32 X 5/8 X 16 Ga
29	532131491	Rod Hinge 42"6 75 Wlg
30	532078158	Bolt 5/16-18 X 1 25 T/t
31	532129963	Washer Spacer Mower Vented
32	532129861	Pulley Mandrel 42"
33	532137266	Nut 9/16top Lock Fing Oil Dip
34	872110622	Bolt Rdhd 3/8-16uncx2-3/4 Gr5
35	532133835	Fastner Christmas Tree
36	532131494	Pulley Idler Flat 3 060
37	819131316	Washer 13/32 X 1 X 12 Ga
40	873680600	Nut Crownlock 3/8-16 Unc
41	532132823	Spacer Spring Stop Idler
44	532134236	Guard Mandrel LH Black
46	532137729	Screw Thdrol 1/4-20 x 5/8
54	532133943	Washer Hardened
55	532133844	Arm Idler 42"mower LT/YT
56	532122052	Spacer Retainer Pm Mower
61	532131870	Spring Return
68	532130969	V-Belt Mower 42" 92 40
69	874760616	Bolt Fin Hex 3/8-16unc X 1
70	532132274	Bracket Asm Noseroller LH
71	873680600	Nut Crownlock 3/8-16 Unc
72	819171416	Washer 17/32 X 7/8 X 16 Ga
73	532132264	Roller Nose 38 & 42
89	532132273	Bracket Asm Noseroller RH
--	532138506	Deck Serv 42" Mech Vent Europe
--	532130794	Mandrel Assembly (Includes Key Numbers 8-10, 12-15, 31 and 33)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

For Husqvarna Parts Call 606-678-9623 or 606-561-4983
REPAIR PARTS
 14 HP 42" TRACTOR - MODEL NO. LT140 (HU14H42A), PRODUCT NO. 954 00 05-12
 MOWER LIFT ASSEMBLY

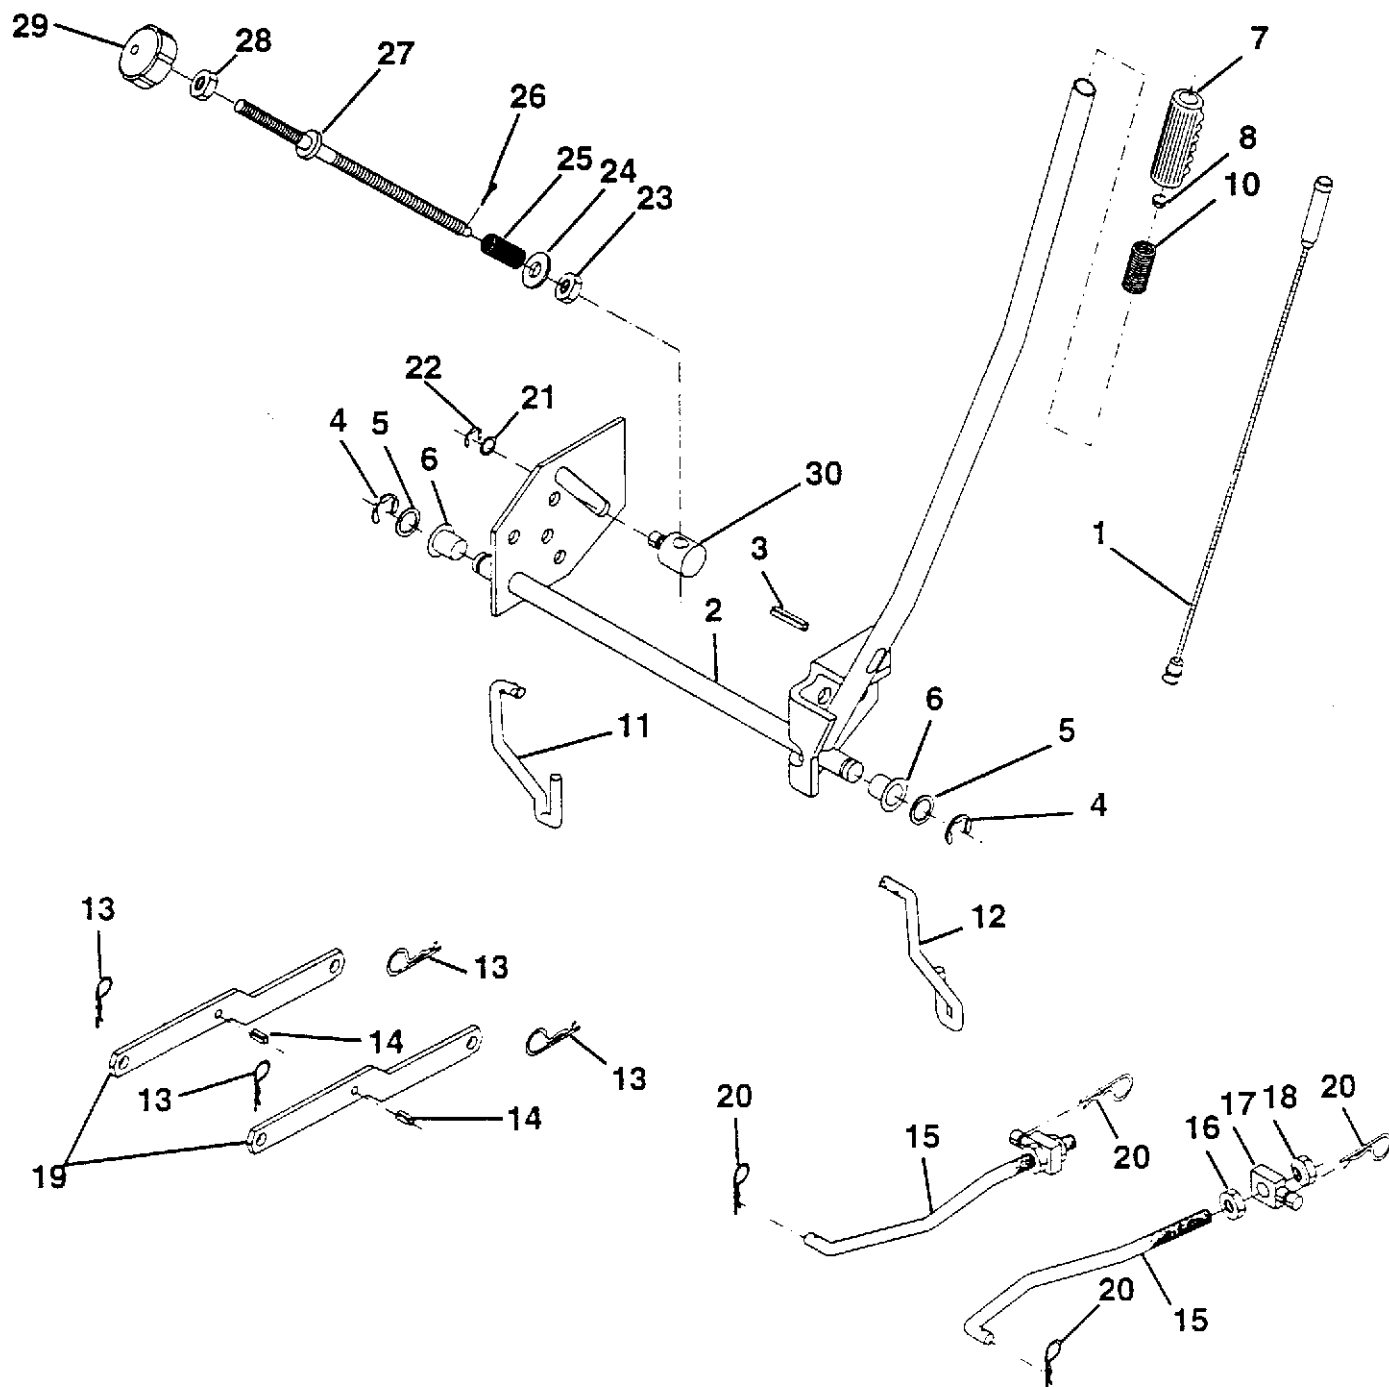


For Husqvarna Parts Call 606-678-9623 or 606-561-4983
REPAIR PARTS
14 HP 42" TRACTOR - MODEL NO. LT140 (HU14H42A), PRODUCT NO. 954 00 05-12
MOWER LIFT ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
1	532136971	Wire Asm Inner W/plunger 17 32
2	532136968	Shaft Asm Lift 93 RH
3	532138284	Pin Groove 1 500 Zinc
4	812000002	E Ring #5133-62
5	819211416	Washer 21/32 X 7/8 X 16 Ga
6	532120183	Bearing Nylon Blk 629 Id
7	532125631	Grip Handle Fluted Blk
8	532124526	Button Plunger Black
10	532122512	Spring Cprsn 3 750 Oiled
11	532134619	Link Lift LH Fixed Length
12	532135388	Link Lift RH Fixed Length
13	532124670	Retainer Spring
14	532135563	Pin Roll SLT 5/16 X 1 25 Blk O
15	532127218	Link Front
16	873350800	Nut Jam Hex 1/2-13 Unc
17	532130171	Trunnion Blk Zinc
18	873800800	Nut Lock W/wsh 1/2-13unc
19	532130832	Arm Suspension Rear
20	532124660	Retainer Spring
21	819151216	Washer 15/32 X 3/4 X 16 Ga
22	812000037	Ring Klip #t5304-37
23	532110807	Nut Special
24	819131016	Washer 13/32 X 5/8 X 16 Ga
25	532124874	Spring 2-1/8"
26	876020308	Pin Cotter 3/32 X 1/2
27	532110729	Rod Adj Lift Zinc 9 00 Wrk Lg
28	873350600	Nut Hex Jam 3/8-16 Unc
29	532138057	Knob Inf 3/8-16 Unc Blk W/sym
30	532110810	Trunnion Dp Stop Dbl Thds PLT

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LT140 (HU14H42A), PRODUCT NO. 954 00 05-12
SUNSTRAND PUMP ASSEMBLY - MODEL NUMBER BDU-10S

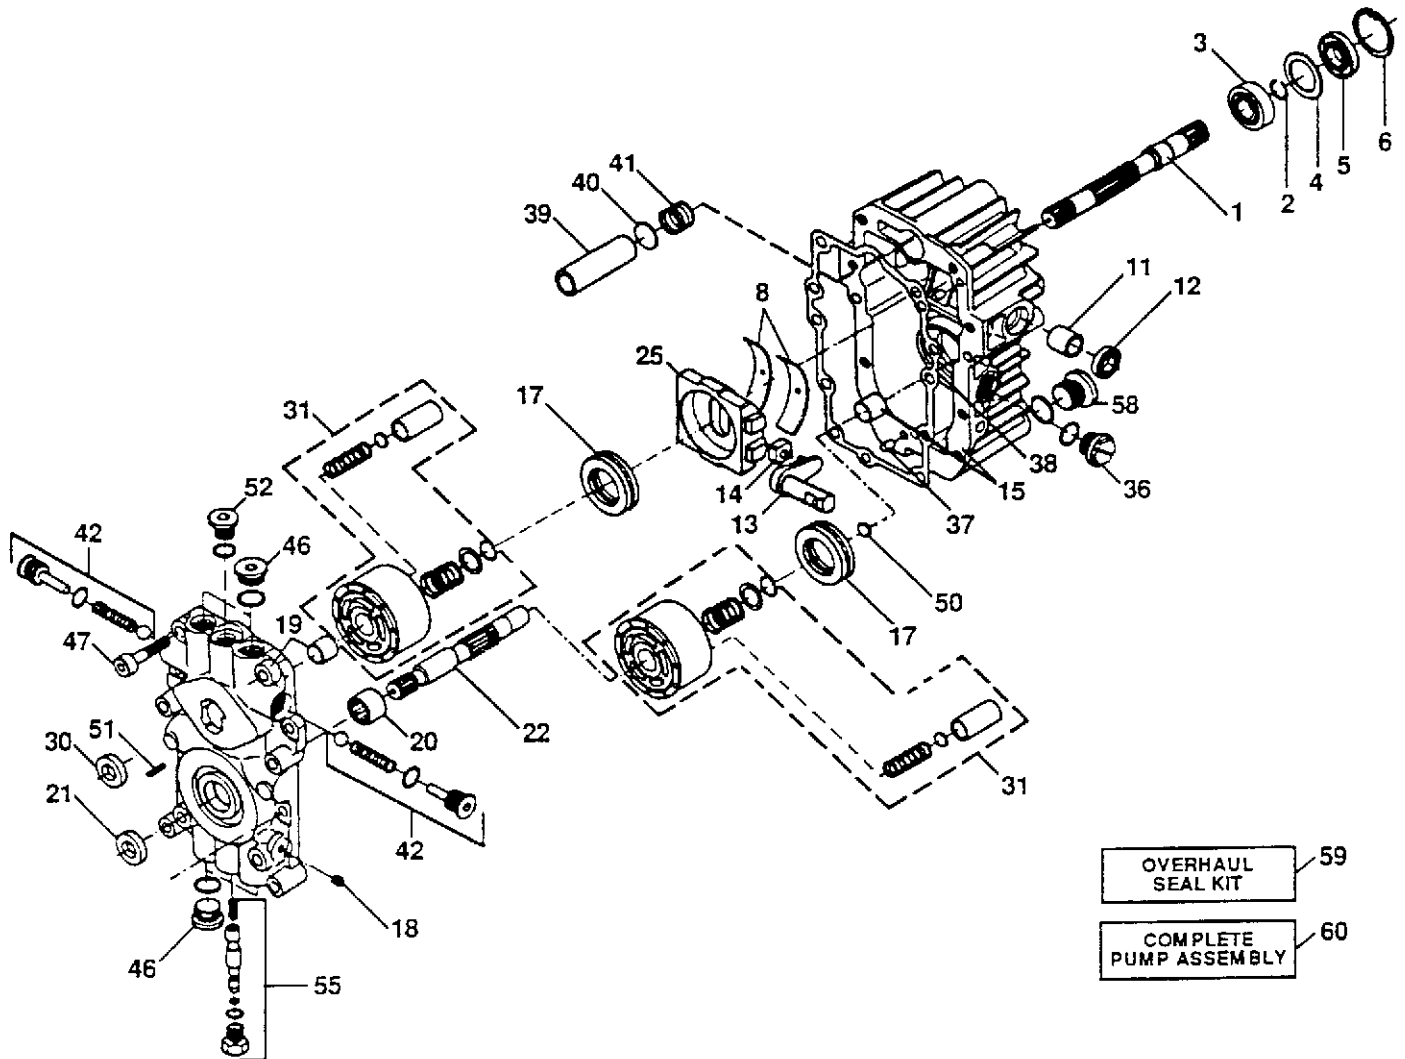


OVERHAUL SEAL KIT 59
COMPLETE PUMP ASSEMBLY 60

KEY PART NO.	NO.	DESCRIPTION
1	532122756	Shaft, Pump
2	532122716	* Ring, Retaining
3	532122745	Bearing, Ball
4	532122715	* Spacer
5	532122700	* Seal, Lip
6	532122699	* Ring, Retaining
8	532122767	Bearing, Cradle
11	532122747	Bearing, Journal
12	532122717	* Seal, Lip
13	532122748	Arm, Trunnion
14	532122749	Guide, Slot
15	532127146	Housing Kit, Transmission
17	532122770	Bearing, Thrust, Ball
18	532122771	Plug, Pipe
19	532127147	Center Section Kit
20	532122773	Bearing, Needle
21	532122722	* Seal, Lip
22	532122750	Shaft, Motor
25	532127148	Swashplate, Variable
30	532122723	* Seal, Lip
31	532127149	Block Kit, Cylinder
36	532127151	Plug, Plastic

KEY PART NO.	NO.	DESCRIPTION
37	532122786	Pin, Stainless, Headless
38	532122718	* Gasket, Center Section
39	532122731	Filter
40	532122730	Washer, Thrust
41	532122728	Spring, Helical, Compression
42	532127152	Check Valve Kit
46	532122787	Plug, Stainless, Threaded
47	532122752	Screw, Socket Head, Cap
50	532122788	Washer, Thrust
51	532122789	Pin, Spiral
52	532122754	Plug, Stainless, Threaded
55	532127153	Bypass Valve Kit
58	532122790	Plug, Stainless, Threaded
59	532127154	Overhaul Seal Kit, BDU-10
		Includes: Items marked with an asterisk (*); O-Rings for Check Valves and Bypass Valve
60	532121430	Pump Assembly, Complete

NOTE: All component dimensions given in U. S. inches.
1 inch = 25.4 mm

REPAIR PARTS Durina Parts Call 606-678-9623 or 606-561-4983
14 HP 42" TRACTOR - MODEL NO. LT140 (HU14H42A), PRODUCT NO. 954 00 05-12
AGRI-FAB TRANSAXLE - MODEL NO. 121431X

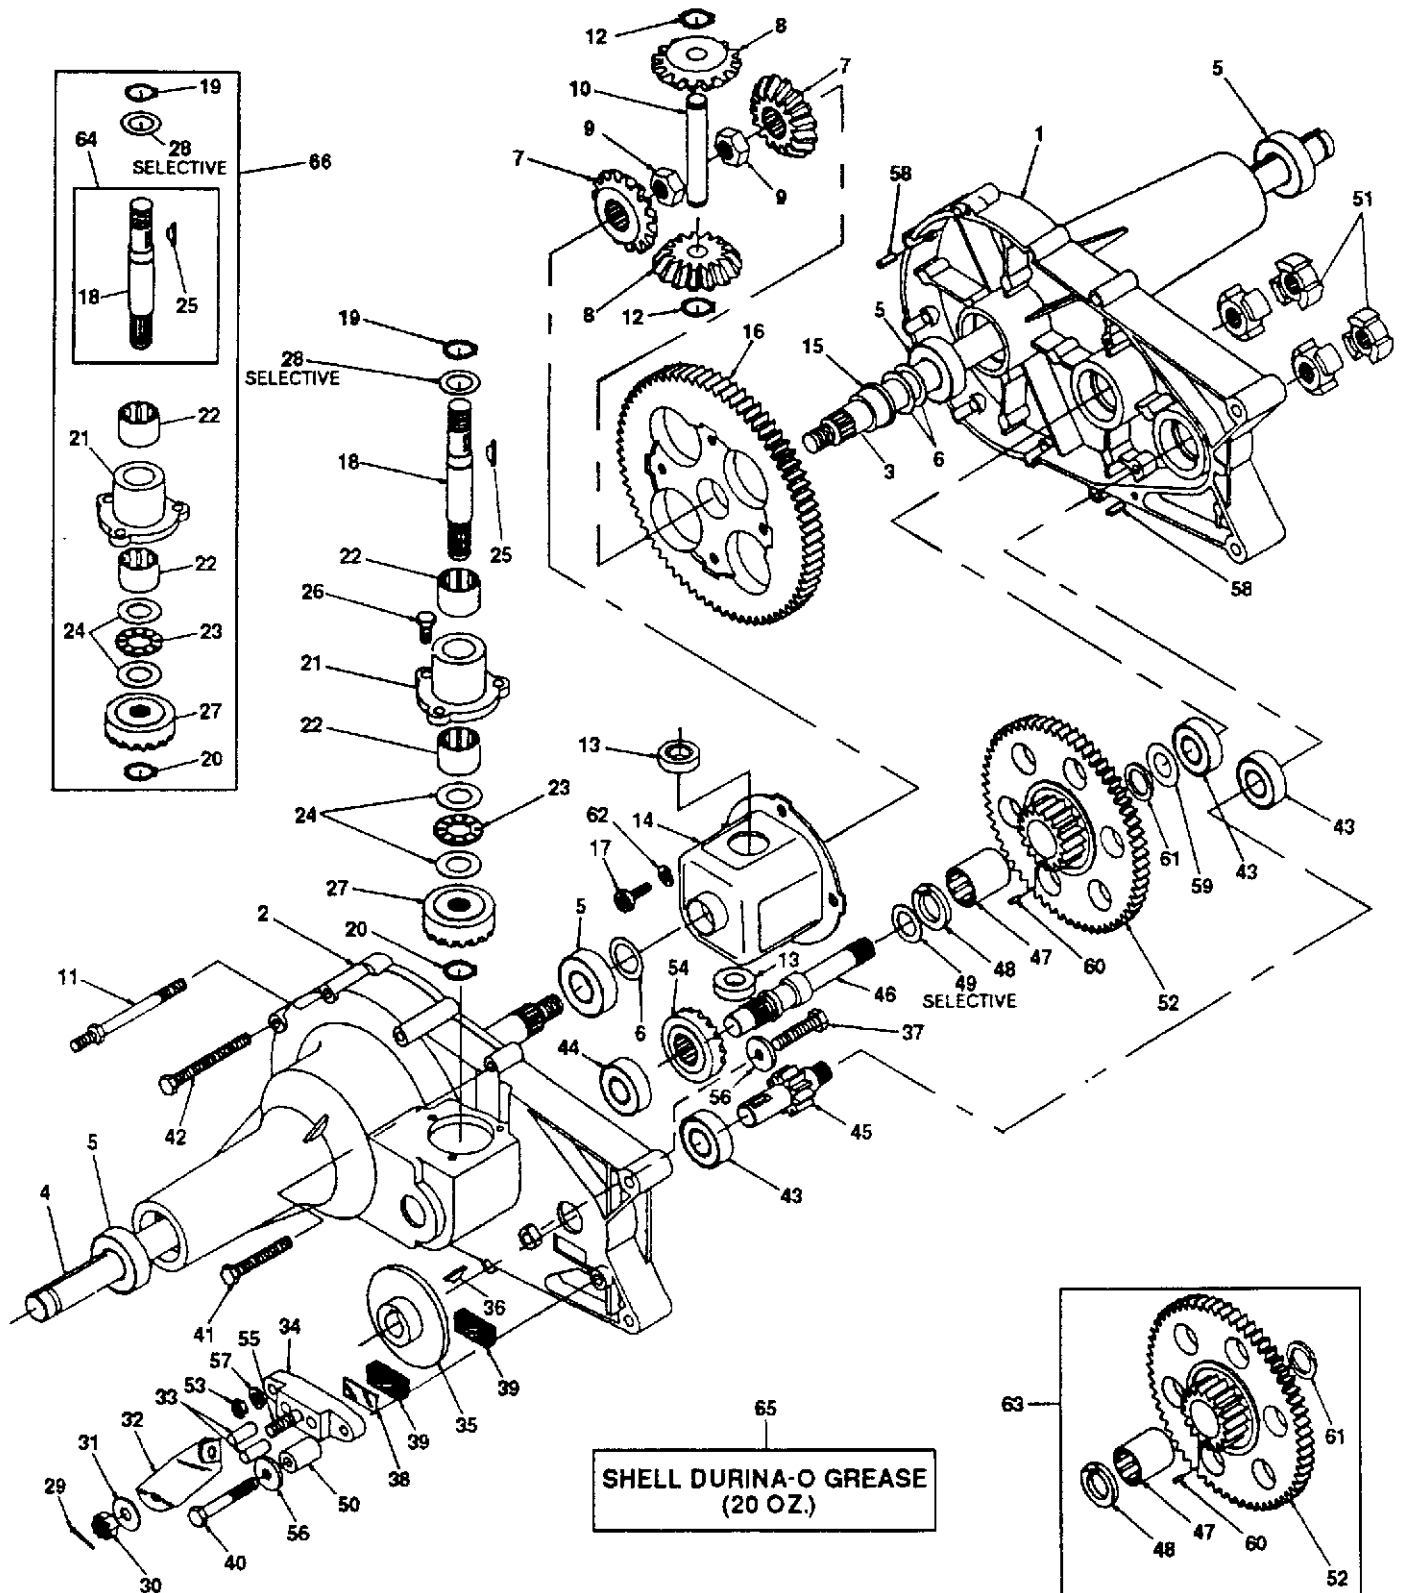

14 HP 42" TRACTOR - MODEL NO. LT140 (HU14H42A), PRODUCT NO. 954 00 05-12
AGRI-FAB TRANSAXLE - MODEL NO. 121431X

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 532122614	Housing, Half L.H.	36 532123065	Key, Hi-Pro 3/16 x 5/8"
2 532122615	Housing, Half R.H.	37 532122666	Screw, Hex 1/4-20 x 1.50
3 532122616	Axle L.H.	38 532122667	Plate, Puck
4 532122620	Axle R.H.	39 532122668	Puck, Brake
5 532122621	Bearing, Ball	40 532123066	Screw, Hex w/Patch 1/4-20 x 2.00
6 532122622	Washer, Flat 3/4 x 1-1/8 x .030	41 532122670	Screw, Hex Self-Tap 1/4-20 x 2.00
7 532122623	Gear, Miter	42 532122671	Screw, Hex Self-Tap 1/4-20 x 3.00
8 532122624	Gear, Miter	43 532126982	Bearing, Ball
9 532122625	Nut, Hex Jam w/Patch 1/2-20	44 532122673	Bearing, Ball
10 532122626	Shaft, Cross	45 532122674	Shaft, Pinion W/11 Tooth Gear
11 532122688	Screw, Stud	46 532122675	Shaft, Drive
12 532122629	Snap, Ring	47 532123059	Bearing, Needle
13 532122631	Bearing, Thrust	48 532123060	Bronze Thrust Brg. 5/8 x 1-1/4 x 7/64
14 532122633	Housing Assembly, Differential	49 532123061	Washer, Flat .62 x 1.0 x .050
15 532122634	Bearing, Flange	-- 532122654	Washer, Flat .62 x 1.0 x .040
16 532122640	Gear, Differential 72 Tooth	50 532122689	Spacer
17 532122641	Bolt, Torx Head 1/4-28 x 5/8"	51 532121839	Coupling
18 532122642	Shaft, Input	52 532126975	Gear, 60 and 17 Tooth
19 532122643	Snap, Ring	53 532122682	Nut, Hex 1/4-20
20 532122644	Retaining Ring 7/16"	54 532122683	Gear, Drive Pinion 17 Tooth
21 532122645	Housing, Input Bearing	55 532122684	Bolt, Square Head
22 532122646	Bearing, Needle	56 532122685	Washer 15/16 x .265 x .125
23 532122647	Bearing, Thrust	57 532122686	Washer, Spring Lock 1/4"
24 532122648	Washer, Flat 5/8 x 1-1/8 x .030	58 532122687	Pin, Roll 3/16" x 1/2"
25 532122649	Key, Hi-Pro 3/32 x 5/8	59 532122652	Washer, Flat .62 x 1.0 x .030
26 532122650	Screw, Hex W/Patch 1/4-20 x 3/4	60 532123062	Pin, Dowel 3/32 x 1/4
27 532122651	Gear, Input Pinion 17 Tooth	61 532123063	Seal, Grease
28 532123061	Washer, Flat .62 x 1 x .05	62 532126977	Washer, Head Spring Lock 1/4"
-- 532122678	Washer, Flat .62 x 1.125 x .060	63 532126980	Assembly, Gear, Reduction
-- 532122654	Washer, Flat .62 x 1 x .040	64 532126981	Assembly, Shaft, Input
29 532122656	Pin, Cotter	65 532126976	Shell Durina-O Grease (20 oz.)
30 532122653	Nut, Castle 5/16-24	66 532137195	Kit, Input Shaft
31 532122659	Washer, Flat .343 x .88 x .062	-- 532121431	Transaxle Assembly Complete
32 532122660	Arm, Brake Actuator		
33 532122662	Pin, Brake Actuating		
34 532122663	Brake, Yoke		
35 532122664	Disc, Brake		

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm