


For Husqvarna Parts Call 606-678-9623 or 606-561-4983

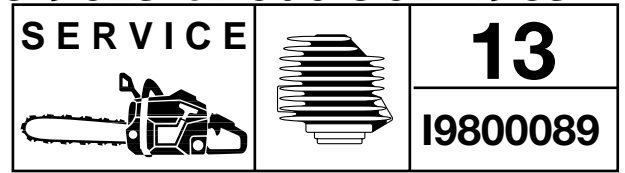


IPL, I32R, I998-10, I06 25 46-61

I32R


Spare parts
Ersatzteile
Pièces détachées
Reserve onderdelen
Repuestos
Reservdelar

A

*compl 502 18 06-01

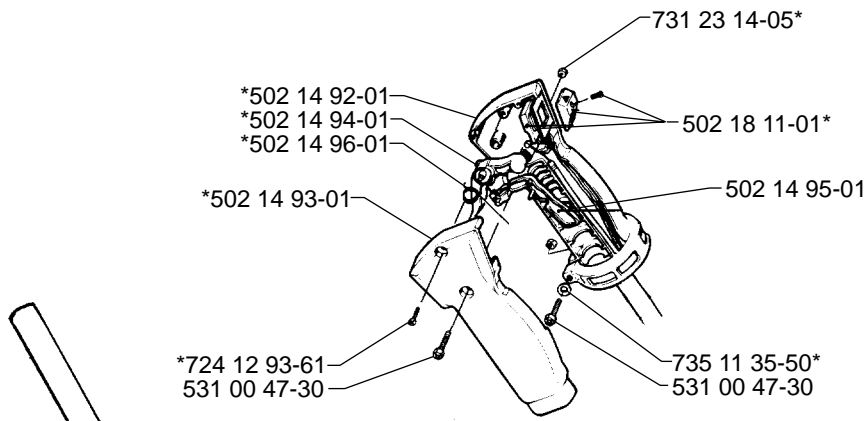


**compl 502 18 12-01

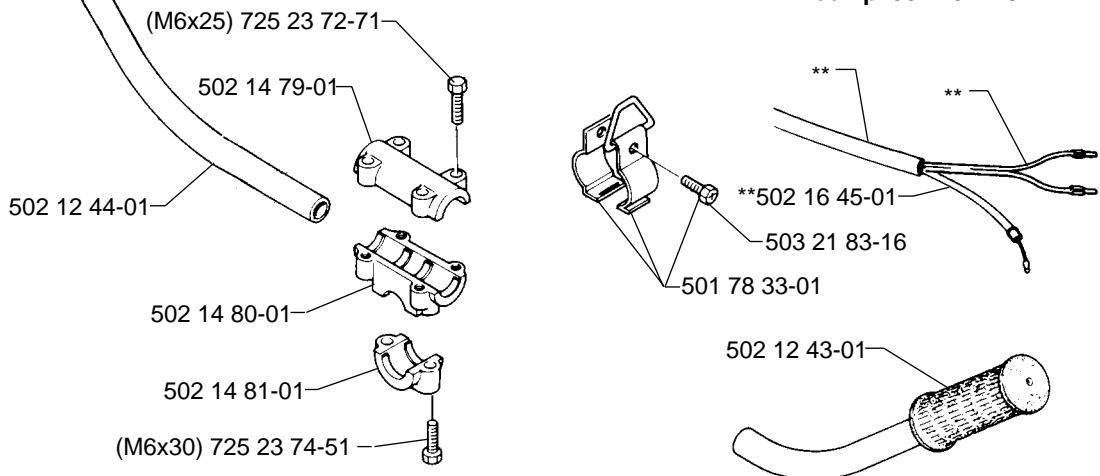


H

*compl 531 00 47-34
**compl 502 19 11-01

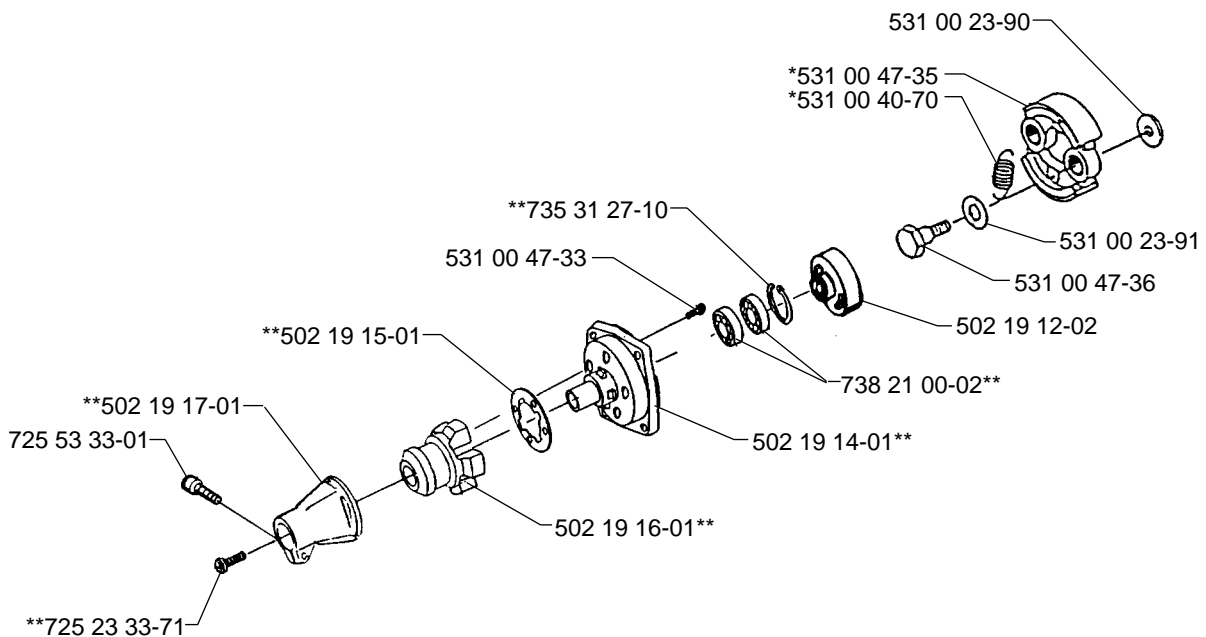


B

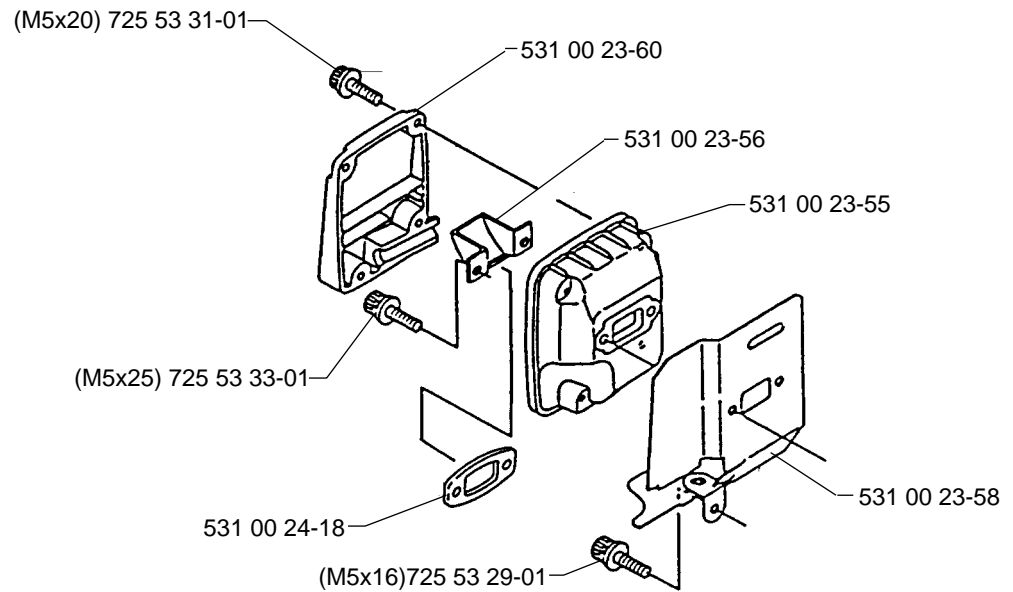


E

*compl 531 00 23-96

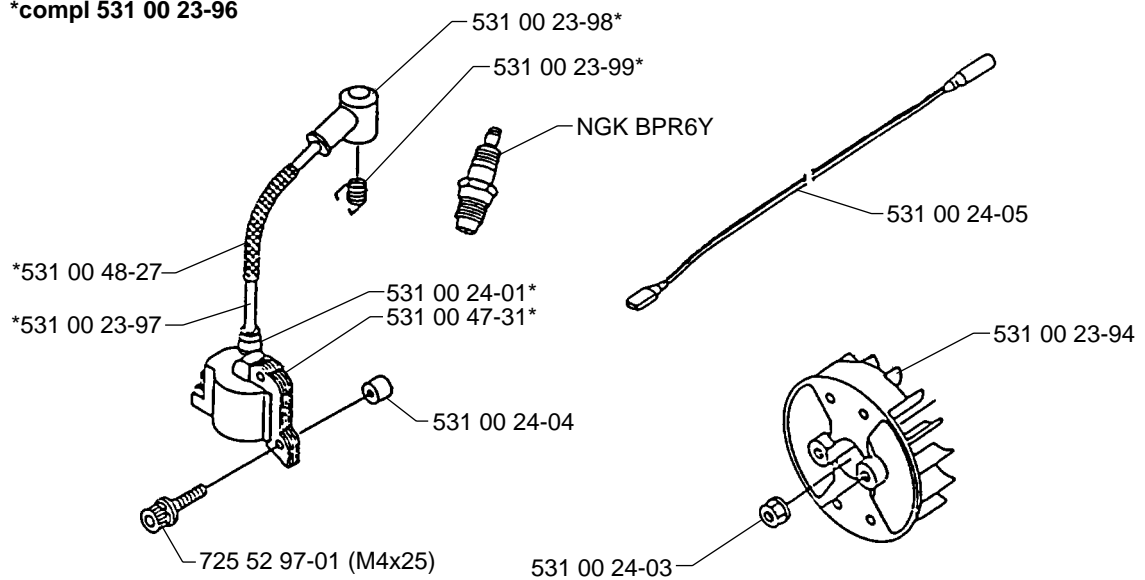


J


*compl 531 00 24-09

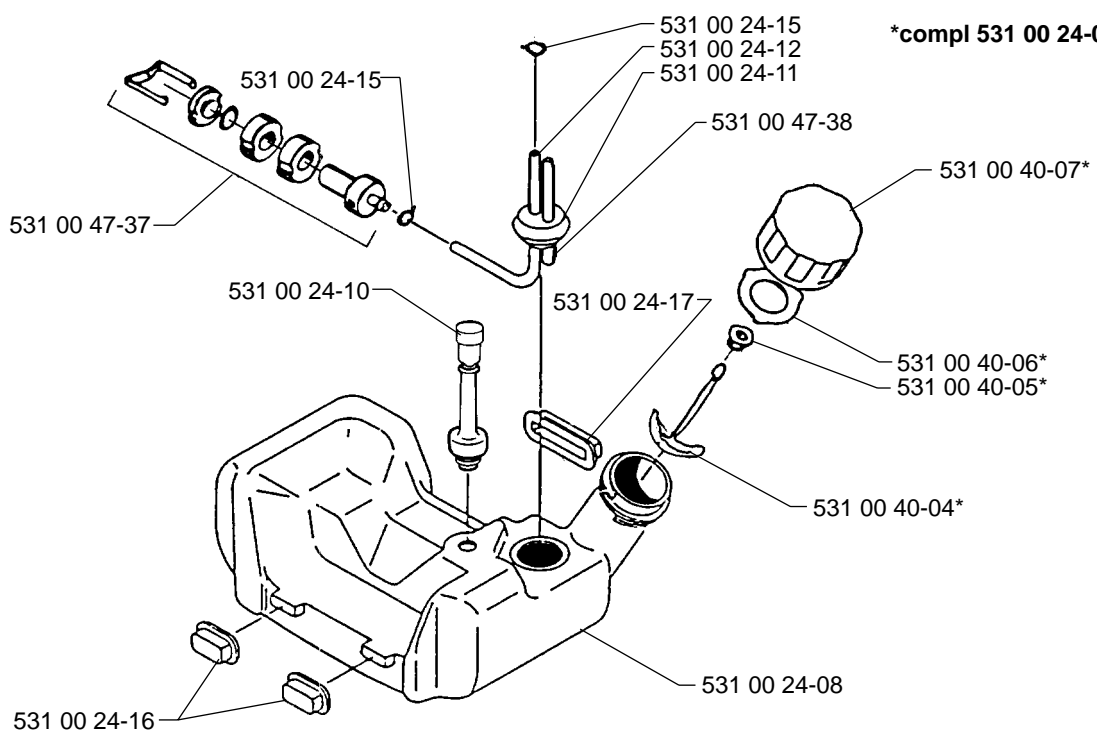


C

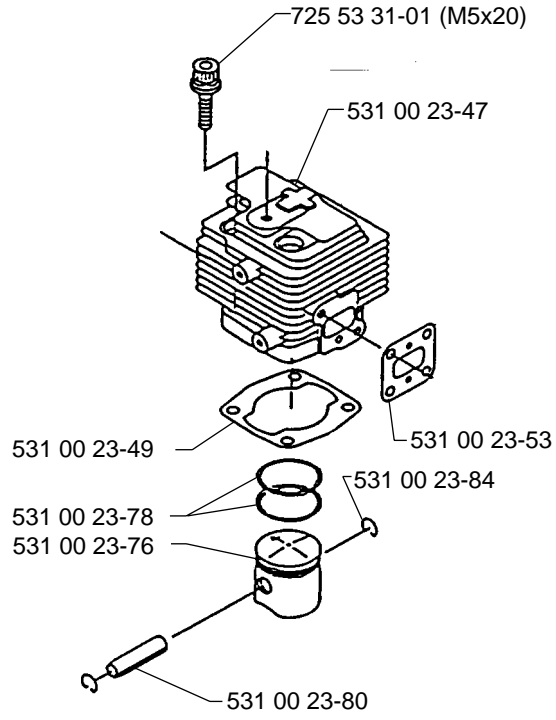

D

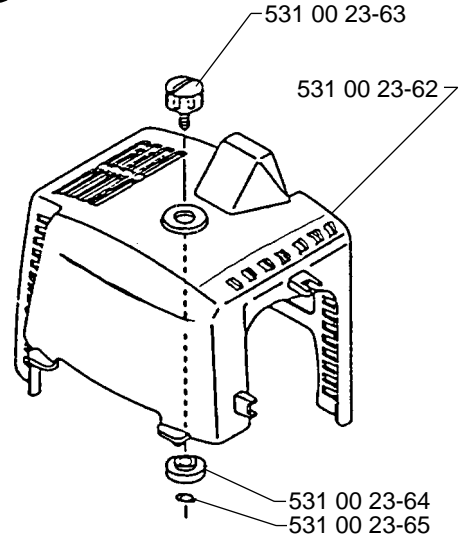


F

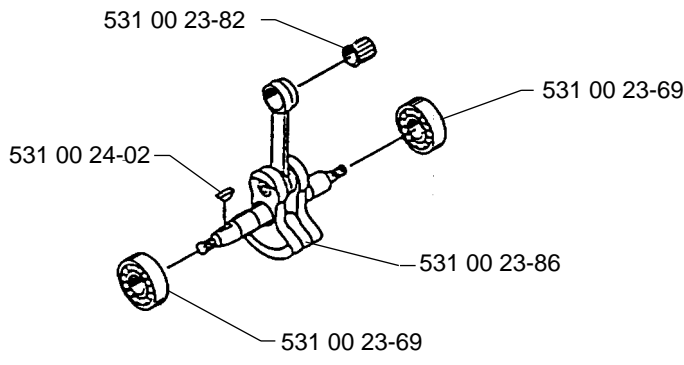


K


*compl 531 00 23-67

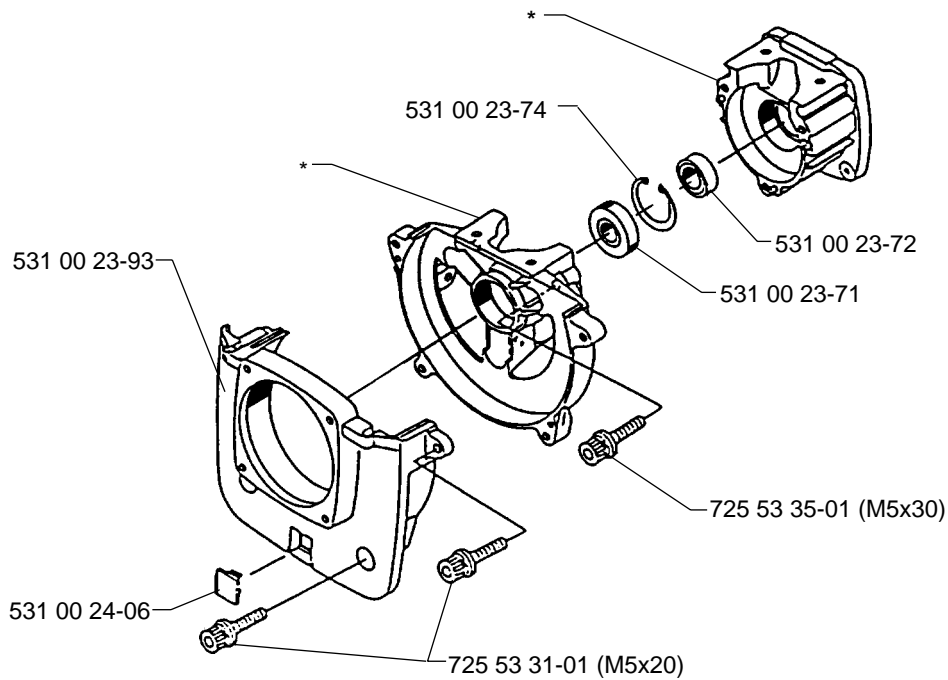


G

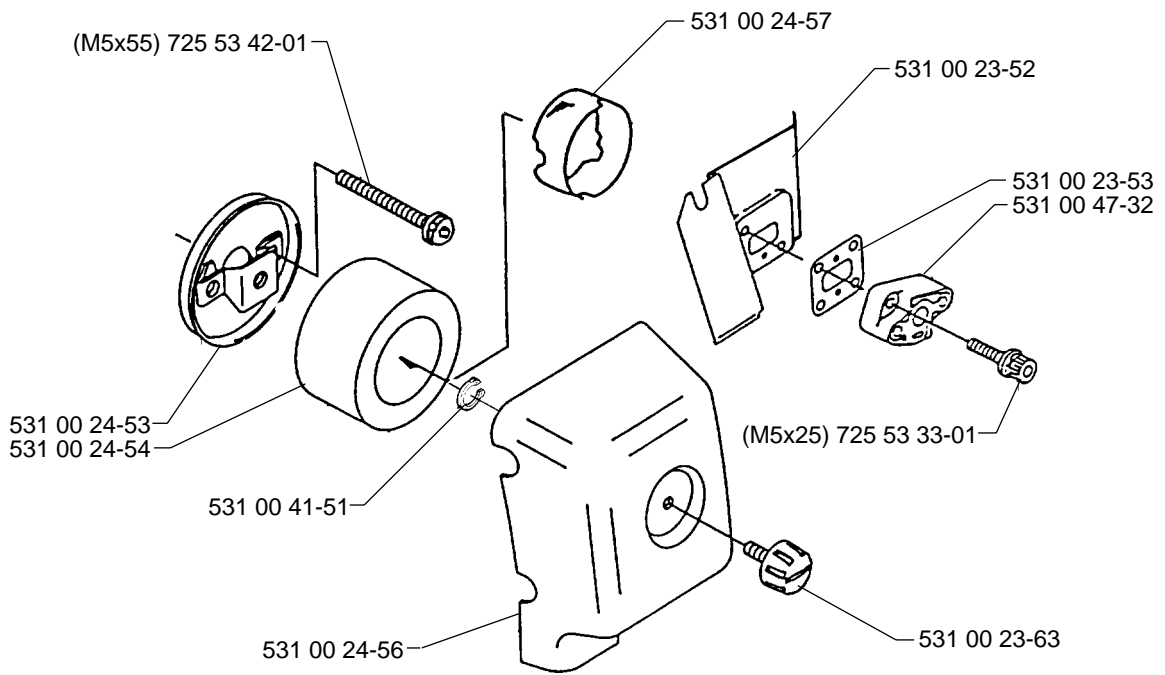

L

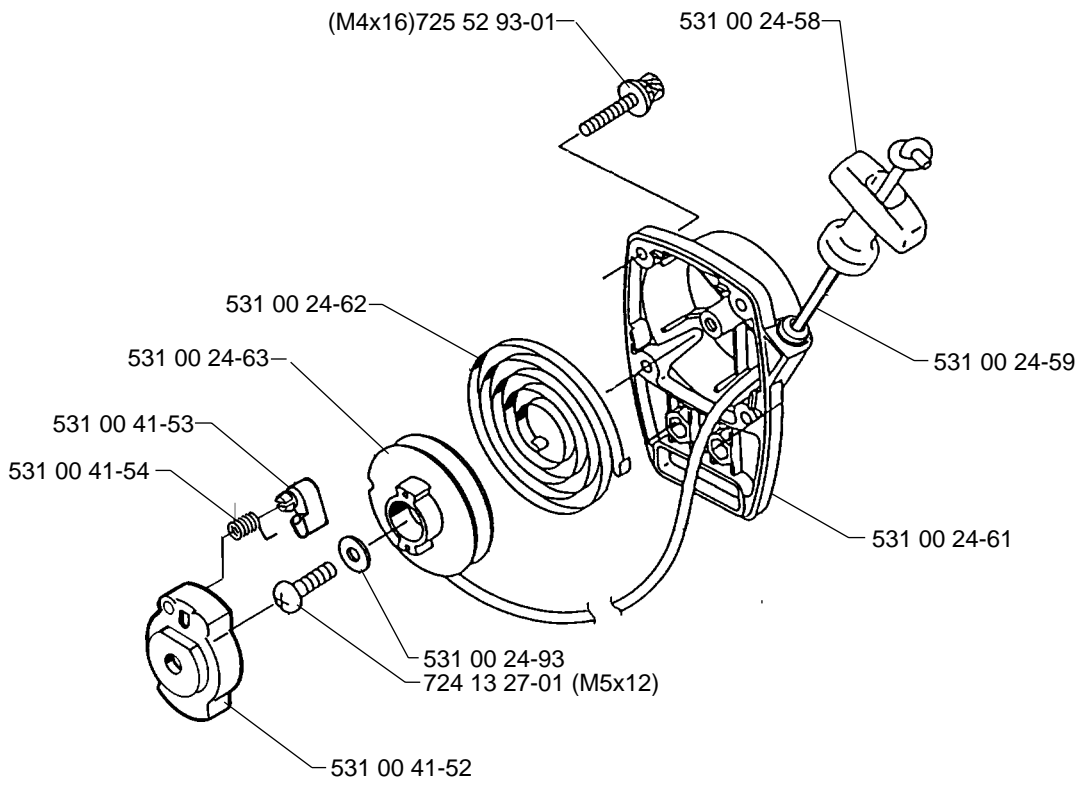


M

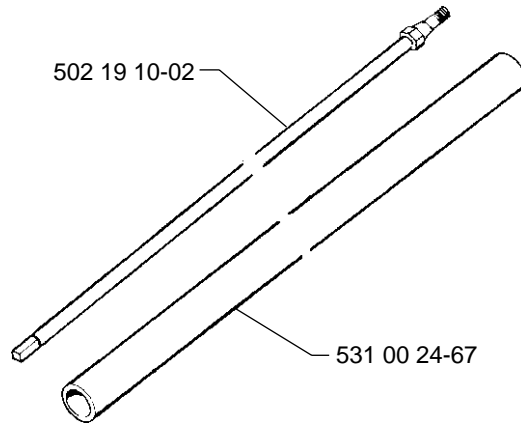


S

*compl 531 00 40-26

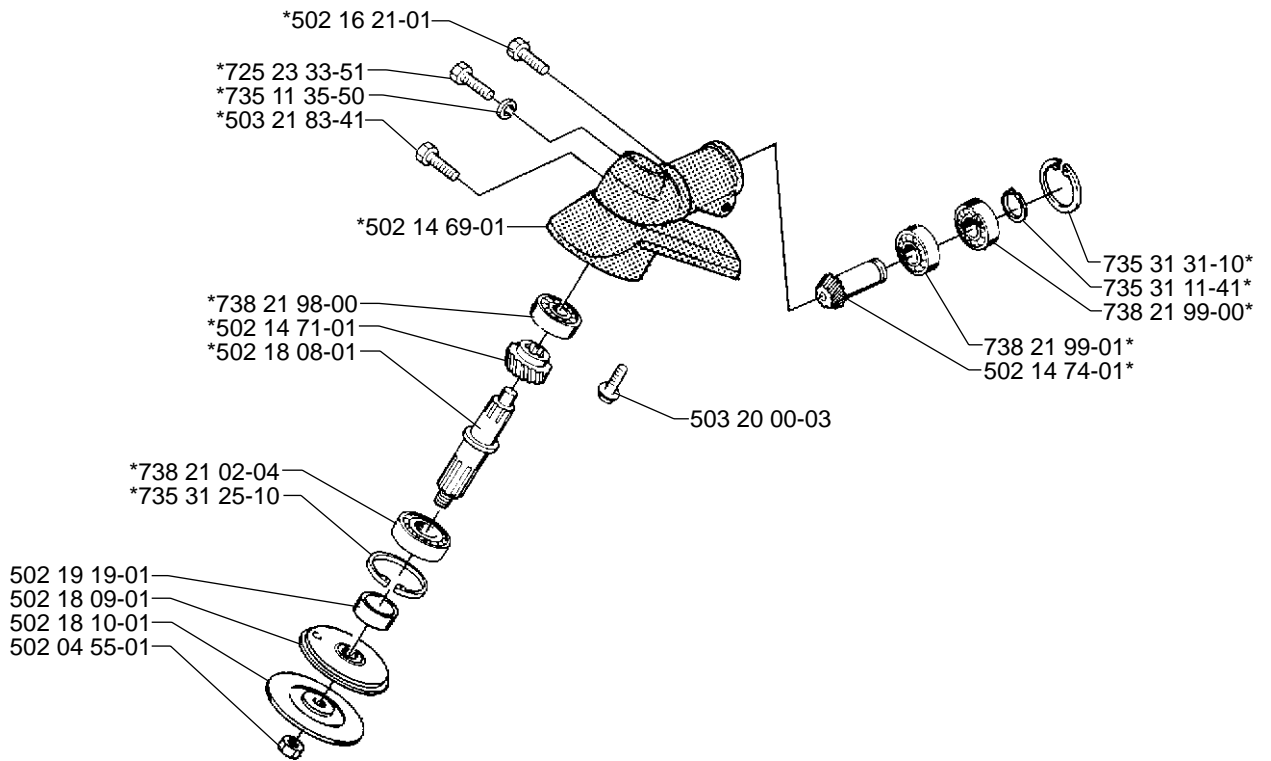


R

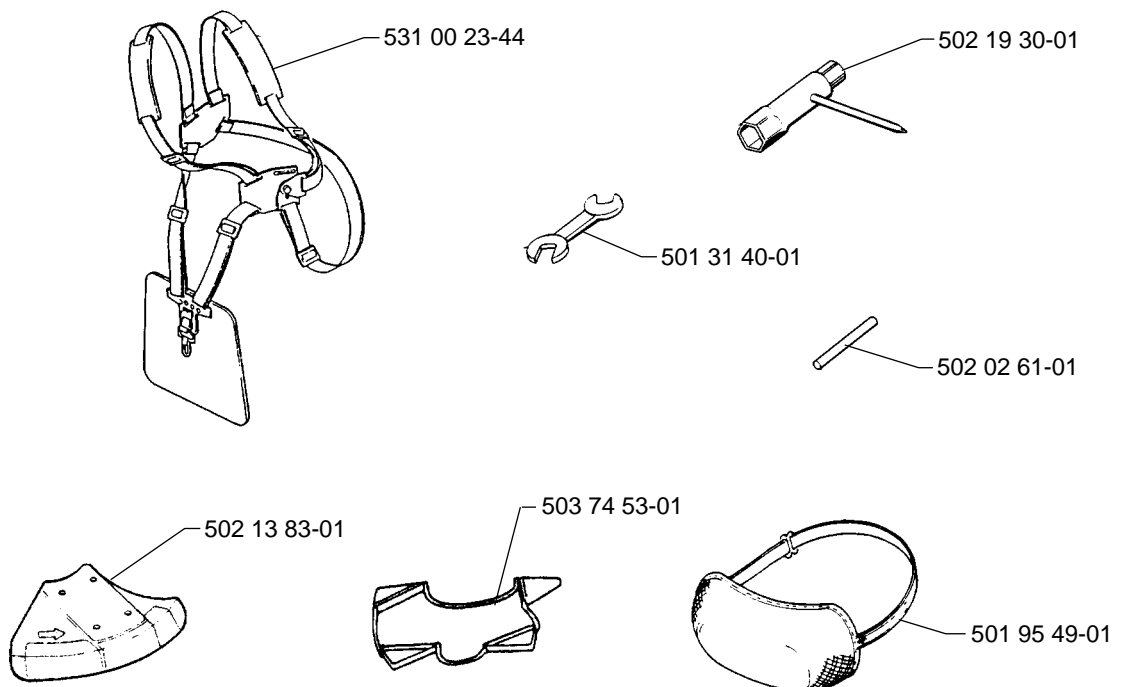

P

*compl 531 00 24-20

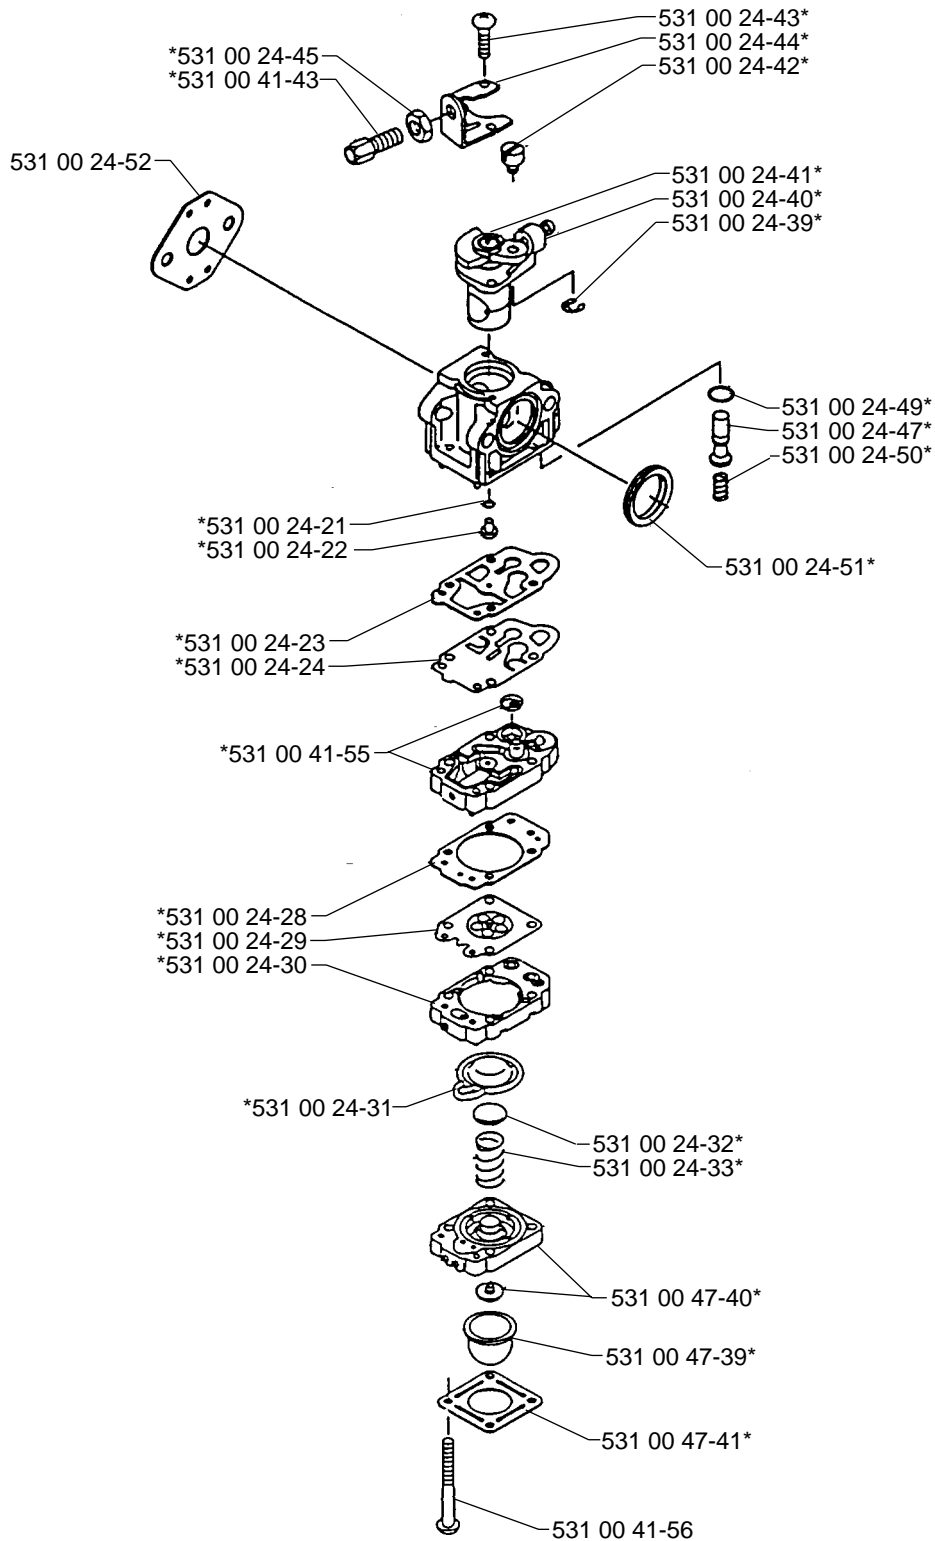

For Husqvarna Parts Call 606-678-9623 or 606-561-4983

| PART NUMBER | SQUARE | NOTE | PART NUMBER | SQUARE | NOTE | PART NUMBER | SQUARE | NOTE | PART NUMBER | SQUARE | NOTE |
|--------------|--------|------|--------------|--------|------|--------------|--------|------|-------------|--------|------|
| 501 31 40-01 | R | | 531 00 23-99 | E | | 531 00 47-37 | J | N | | | |
| 501 78 33-01 | AO | | 531 00 24-01 | E | | 531 00 47-38 | J | N | | | |
| 501 95 49-01 | R | | 531 00 24-02 | F | | 531 00 47-39 | P | N | | | |
| 502 02 61-01 | R | | 531 00 24-03 | E | | 531 00 47-40 | P | N | | | |
| 502 04 55-01 | S | | 531 00 24-04 | E | | 531 00 47-41 | P | N | | | |
| 502 12 43-01 | A | | 531 00 24-05 | E | | 531 00 48-27 | E | N | | | |
| 502 12 44-01 | A | | 531 00 24-06 | K | | 724 12 93-61 | A | | | | |
| 502 13 83-01 | R | N | 531 00 24-08 | J | | 724 13 27-01 | L | | | | |
| 502 14 69-01 | S | | 531 00 24-09 | J | | 725 23 33-51 | S | | | | |
| 502 14 71-01 | S | | 531 00 24-10 | J | | 725 23 33-71 | H | | | | |
| 502 14 74-01 | S | | 531 00 24-11 | J | | 725 23 72-71 | A | N | | | |
| 502 14 79-01 | A | | 531 00 24-12 | J | | 725 23 74-51 | A | N | | | |
| 502 14 80-01 | A | | 531 00 24-15 | J | | 725 52 93-01 | L | | | | |
| 502 14 81-01 | A | | 531 00 24-16 | J | | 725 52 97-01 | E | | | | |
| 502 14 92-01 | A | | 531 00 24-17 | J | | 725 53 29-01 | B | | | | |
| 502 14 93-01 | A | | 531 00 24-18 | B | | 725 53 31-01 | BCK | | | | |
| 502 14 94-01 | A | | 531 00 24-20 | P | | 725 53 33-01 | BGH | | | | |
| 502 14 95-01 | A | | 531 00 24-21 | P | | 725 53 35-01 | K | | | | |
| 502 14 96-01 | A | | 531 00 24-22 | P | | 725 53 42-01 | G | N | | | |
| 502 16 21-01 | S | | 531 00 24-23 | P | | 731 23 14-05 | A | | | | |
| 502 16 45-01 | A | | 531 00 24-24 | P | | 735 11 35-50 | AS | | | | |
| 502 18 06-01 | A | | 531 00 24-28 | P | | 735 31 11-41 | S | | | | |
| 502 18 08-01 | S | | 531 00 24-29 | P | | 735 31 25-10 | S | | | | |
| 502 18 09-01 | S | | 531 00 24-30 | P | | 735 31 27-10 | H | | | | |
| 502 18 10-01 | S | | 531 00 24-31 | P | | 735 31 31-10 | S | | | | |
| 502 18 12-01 | A | | 531 00 24-32 | P | | 738 21 00-02 | H | | | | |
| 502 19 10-02 | M | | 531 00 24-33 | P | | 738 21 02-04 | S | | | | |
| 502 19 11-01 | H | | 531 00 24-39 | P | | 738 21 98-00 | S | | | | |
| 502 19 12-02 | H | | 531 00 24-40 | P | | 738 21 99-00 | S | | | | |
| 502 19 14-01 | H | | 531 00 24-41 | P | | 738 21 99-01 | S | | | | |
| 502 19 15-01 | H | | 531 00 24-42 | P | | | | | | | |
| 502 19 16-01 | H | | 531 00 24-43 | P | | | | | | | |
| 502 19 17-01 | H | | 531 00 24-44 | P | | | | | | | |
| 502 19 19-01 | S | | 531 00 24-45 | P | | | | | | | |
| 502 19 30-01 | R | | 531 00 24-47 | P | | | | | | | |
| 503 20 00-03 | S | | 531 00 24-49 | P | | | | | | | |
| 503 21 83-16 | AO | | 531 00 24-50 | P | | | | | | | |
| 503 21 83-41 | S | | 531 00 24-51 | P | | | | | | | |
| 503 74 53-01 | R | N | 531 00 24-52 | P | | | | | | | |
| 531 00 23-44 | R | | 531 00 24-53 | G | | | | | | | |
| 531 00 23-47 | C | | 531 00 24-54 | G | | | | | | | |
| 531 00 23-49 | C | | 531 00 24-56 | G | | | | | | | |
| 531 00 23-52 | G | | 531 00 24-57 | G | | | | | | | |
| 531 00 23-53 | CG | | 531 00 24-58 | L | | | | | | | |
| 531 00 23-55 | B | | 531 00 24-59 | L | | | | | | | |
| 531 00 23-56 | B | | 531 00 24-61 | L | | | | | | | |
| 531 00 23-58 | B | | 531 00 24-62 | L | | | | | | | |
| 531 00 23-60 | B | | 531 00 24-63 | L | | | | | | | |
| 531 00 23-62 | D | | 531 00 24-67 | M | | | | | | | |
| 531 00 23-63 | DG | | 531 00 24-93 | L | | | | | | | |
| 531 00 23-64 | D | | 531 00 40-04 | J | | | | | | | |
| 531 00 23-65 | D | | 531 00 40-05 | J | | | | | | | |
| 531 00 23-67 | K | | 531 00 40-06 | J | | | | | | | |
| 531 00 23-69 | F | | 531 00 40-07 | J | | | | | | | |
| 531 00 23-71 | K | | 531 00 40-26 | S | | | | | | | |
| 531 00 23-72 | K | | 531 00 40-70 | H | N | | | | | | |
| 531 00 23-74 | K | | 531 00 41-43 | P | N | | | | | | |
| 531 00 23-76 | C | | 531 00 41-51 | G | | | | | | | |
| 531 00 23-78 | C | | 531 00 41-52 | L | | | | | | | |
| 531 00 23-80 | C | | 531 00 41-53 | L | | | | | | | |
| 531 00 23-82 | F | | 531 00 41-54 | L | | | | | | | |
| 531 00 23-84 | C | | 531 00 41-55 | P | | | | | | | |
| 531 00 23-86 | F | | 531 00 41-56 | P | | | | | | | |
| 531 00 23-90 | H | | 531 00 47-30 | A | N | | | | | | |
| 531 00 23-91 | H | | 531 00 47-31 | E | N | | | | | | |
| 531 00 23-93 | K | | 531 00 47-32 | G | N | | | | | | |
| 531 00 23-94 | E | | 531 00 47-33 | H | N | | | | | | |
| 531 00 23-96 | E | | 531 00 47-34 | H | N | | | | | | |
| 531 00 23-97 | E | | 531 00 47-35 | H | N | | | | | | |
| 531 00 23-98 | E | | 531 00 47-36 | H | N | | | | | | |