


SERVICE 		4
		X 85.104-26

MODEL 40


SERVICE HINTS FOR DISASSEMBLY/ASSEMBLY OF THE CARBURETTOR

Disassembly


1. Disassemble the cylinder cover, air filter and chain brake. Loosen the screw, which holds the AV-element to the cylinder (use the allen key 502 50 18-01 4 mm). Push the hand guard sideways.

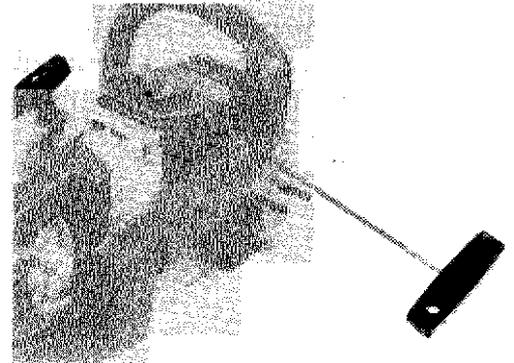


2. Loosen the air ventilation hose from the tank attachment, remove the switch and loosen the screw, which retains the air filter holder to the tank.

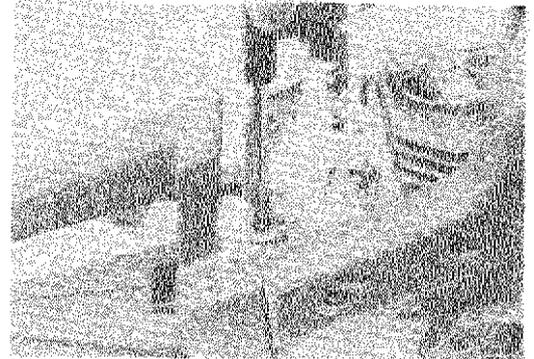

3. Cut off the sleeve near the air filter holder. Unscrew the idling screw and remove the sleeve.


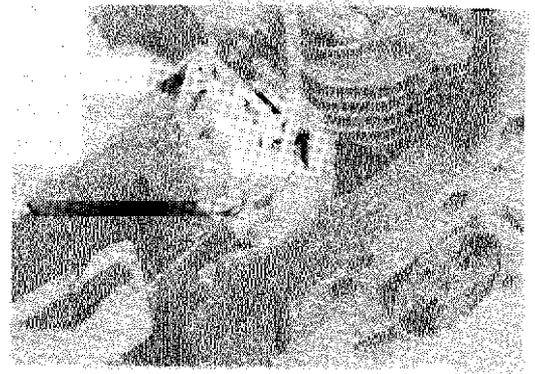


4. Disassemble the screw, which retains the carburettor to the intermediate wall and lift away the filter holder. Loosen the fuel hose from the carburettor and loosen the throttle cable from its position in the intermediate wall. Lift up the carburettor and unhook the throttle cable.

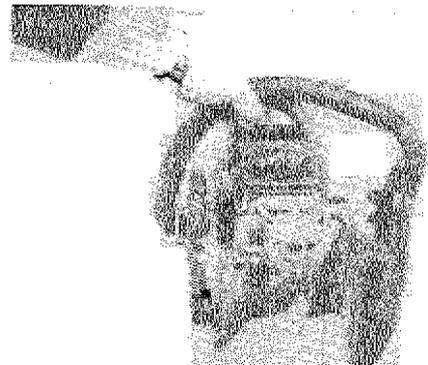


Assembly

5. Hook the throttle cable in its position in the gas lever. Assemble the throttle cable in position to the intermediate wall and assemble the fuel hose. Place the two carburetor screws through the filter holder, carburetor and gasket. Place the carburetor in position to the intermediate wall and the choke control. Fasten the screws slightly.

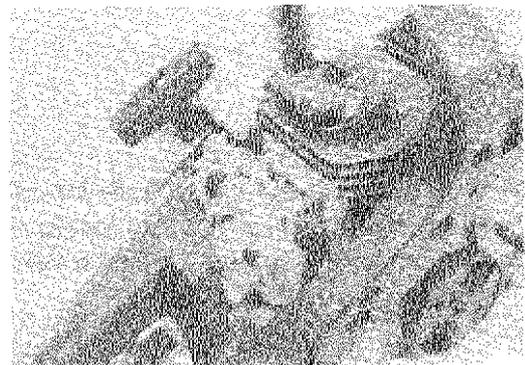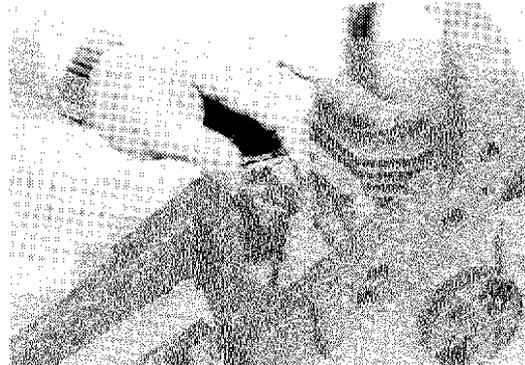

6. Lead down the air ventilation hose to the drainage hole and assemble the sleeve. Assemble the screw, which holds the filter holder to the tank and tighten the carburetor screws. Loosen the idling screw 2.5 turns. Assemble the switch. Assemble the air ventilation hose to the tank attachment and in the sleeve on the filter holder.

NOTE! The cables to the switch must be placed over the spark plug cable and below the air ventilation hose.

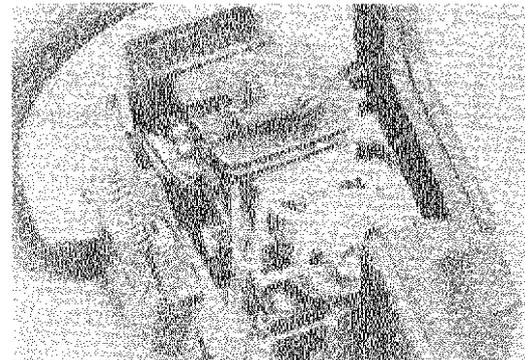

Then assemble No. 1 in reverse order.