


TACHOMETER

Tachometer 502 51 46-02 is excluded and replaced by 502 71 14-01.

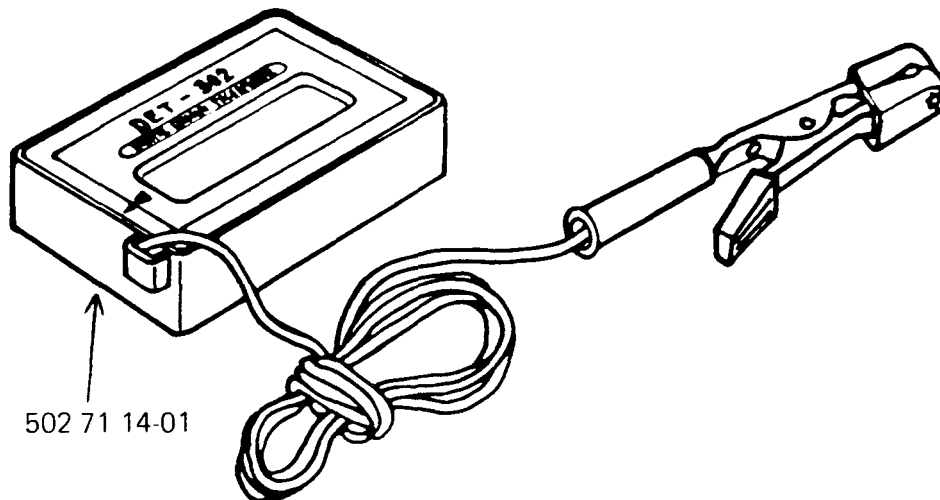

The tachometer, which is in "pocket size" (40 x 60 x 15 mm) is used in the following way:

- Start the chain saw and hold the tachometer with the arrow towards the spark plug lead, (measure from a distance of 1–10 cm).
- Measurements can also be made by using an antenna lead, which can be connected against the spark plug lead.
- The tachometer starts automatically and the rpm can be read with an accuracy of + 100 rpm.
- One minute after completed measurement, the tachometer is switched off automatically.

The tachometer 502 71 14-01 is delivered with antenna lead, clamp and instructions.