

**MODEL 154**

### STARTER DEVICE

In order to receive a better function, we have introduced an improved starter device.

The following changes are made:

Sleeve 501 79 46-01 is cast in to the starter housing and a more rigid recoil spring is introduced. The starter pulley is reinforced and the inner diameter is enlarged, which means that a shorter starter cord is mounted. All parts are fully interchangeable.

<u>New Ref. No.</u>	<u>Denomination</u>	<u>Excluded Ref. No.</u>	<u>Remarks</u>
501 86 75-03	Starter device compl.	501 86 75-02	
501 86 76-03	Starter housing	501 86 76-02	
503 17 89-01	Starter pulley	501 86 80-01	
501 63 02-02	Recoil spring	501 63 02-01	Note! Version -01 remains on the other models.
	Sleeve	501 79 46-01	Remains as a spare part for previous models.
505 30 51-25	Starter cord	501 46 09-04	
501 81 99-02	Starter pawl screw	503 20 00-21	

**NOTE!** If the starter device 501 86 75-03 is mounted on the saw or if the starter cord 505 30 51-25 (with knot) is used, the lower starter pawl screws (501 81 99-02) must be mounted. Otherwise the starter cord is destroyed at the first pull in the starter.

### Service hint

The knot on the starter cord 505 30 51-35 can be warmed up and "flattened". This measure prevents the starter pawl screws from destroying the starter cord.

